
For Discount Tecumseh Engine Parts Call 606-678-9623 or 606-561-4983 H70-130005 Engine Parts List #1

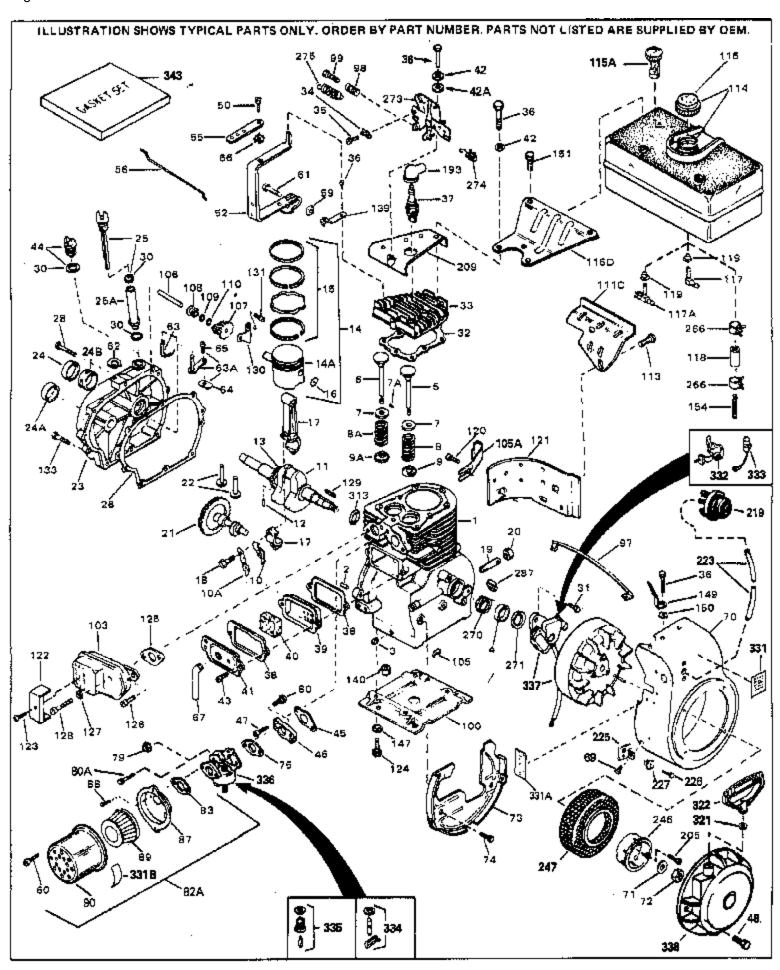

www.mymowerparts.com

	Part Number	Otv	Description
	32586C	Qly	Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore)
	27652		Pin, Dowel
	27642		•
			Plug, Oil drain
	32630		Seal, Oil
	32783		Intake Valve (Std.) (Incl. 9)
	32784		Intake Valve (1/32" OS) (Incl. 9)
	27878A		Exhaust Valve (Std.) (Incl. 9)
6	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
7A	20810		Pin, Valve spring retainer (Use as re quired)
7	27882		Cap, Upper valve spring
8A	27881		Spring, Valve
	27881		Spring, Valve
	32581		Cap, Lower valve spring
	32581		Cap, Lower valve spring
	34242		Dipper, Oil
	32590		Plate, Lock & Oil dipper (This plate may be replaced by
	02000		34242 oil dipper but 650662C screw must be used.)
	32680A		Crankshaft (Incl. 12 & 13)
	29783		Crankshaft Gear Pin (Early production )
13	27884		Gear, Crankshaft (Used in early production) This gear is
			servicable onlywhen it is pinned to the crankshaft.
	32592B		Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
14A	32593B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
14A	32594B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
14	34517		Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
14	34518		Piston, Pin & Ring Set (.010" OS)
14	34519		Piston, Pin & Ring Set (.020" OS)
15	32595		Ring Set (Std.) (2-3/4" Bore)
15	32596		Ring Set (.010" OS)
15	32597		Ring Set (.020" OS)
	27888		Ring, Piston pin retaining
	32591C		Rod Assy., Connecting (Incl. 10 & 18)
	650662C		Screw, Connecting rod (2 each)
	30968		Nipple, Oil drain
	30969		Cap, Oil drain
	32115		Camshaft (MCR)
	34034		Lifter, Valve
	31303B		Cover, Cylinder (Incl. 24, 106 & 279)
	31546		Bushing, Crankshaft (Use as required)
	28427		Seal, Oil
	29668		Dipstick, Oil (Incl. 30)
	30684		* Gasket, Cylinder cover
	650488		Screw, 1/4-20 x 1-1/4"
	29673		* Gasket, Oil filler
	650489		Screw, 1/4-20 x 5/8"
	32631A		* Gasket, Cylinder head
33	30938A		Head, Cylinder
34	27793		Clip, Conduit (Use as required)
35	28942		Screw, 10-32 x 3/8" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	33636		Resistor Spark Plug (RJ-8C)
	34251		Resistor Spark Plug
	27896A		* Gasket, Breather cover
	28423		Body, Breather
	28424		Element, Breather
40		<b>XX</b> 7.	

\_

	Dort Number Ot	/ Departmention
	Part Number Qt 28425	y Description Cover, Valve spring
	26073	
		Washer (Use as required)
	650691	Washer, Flat (Use as required)
	650690	Washer, Belleville (Use as required)
	650128	Screw, 10-24 x 1/2"
	27915A	* Gasket, Intake
46	30195A	Flange, Carburetor (Incl. 79 & 80)
47	30196	Screw, 5/16-18 x 3/4"
48	29716	Screw, 1/4-28 x 7/16"
50	650548	Screw, 8-32 x 5/16"
52	32326A	Lever, Governor (New lever does not need 1 of
		51,66,132,164,165,207)
55	30205	Bracket, Adjusting
	30824	
		Link, Throttle
	29216	Nut, Lock, 10-32
	29826	Screw, 10-32 x 3/4"
	29642	Ring, Retaining
	30699C	Rod Assy., Governor (Incl. 64 & 65)
63	30699B	Governor Rod Ass'y. (This one-piece governor rodis no longer
		used. It is replaced by 30699C ass'y.,Ref. no. 63A)
64	30700	Yoke, Governor
	650494	Screw, 6-40 x 5/16"
	29918	Lockwasher, #8 E.T.
	35350	Tube, Breather
	29747B	Screw, 5/16-24 x 21/32"
	32158E	•
		Blower Housing (For elec.star.)(Incl. 134,135)
	650815	Washer, Belleville
	8116	Nut, Hex
73	29536	Blower Housing Baffle (without electric starter knock-out)
		(Use as required)
73	35256A	Blower Housing Baffle (with electric starter knock-out) (Use
		as required) (Point Ignition)
74	650561	Screw, 1/4-20 x 5/8"
	31688A	* Gasket, Carburetor
	29752	Nut & Lockwasher Assy., 1/4-28
	650572	Screw, 1/4-28 x 1-1/8"
	730164	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B)
024	750104	
		(Use as required)
83	27272A	* Gasket, Air cleaner
87	31691	Bracket, Air cleaner NOTE: 130010 thru 10C & 11 used in
		early production only.
97	35349	Ground Wire
	29538	Base, Engine mounting
	32401	
		Muffler
	31845	Shaft, Mechanical governor
	30591	Gear Assy., Governor (Incl. 109)
	30588A	Spool, Governor
	30590A	Washer, Flat
110	29193	Ring, Retaining
113	650561	Screw, 1/4-20 x 5/8"
	31301	Fuel Tank (Incl. 115)
	410144B	Fuel Cap (White Plastic)(Std)(As requ ired)
	33032	Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile)
		(Use as required)


Ref #	Part Number Qty	Description
115	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
		required)
115	35355	Fuel Cap (Leo as required)
	29683	Fuel Cap (Use as required) Valve, Fuel shut-off
	29774	Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705	Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962	Fuel Line (Braided 32") (81 cm) (Use as req.)
	650128	Screw, 10-24 x 1/2" (Use as required)
	30622A	Extension, Blower housing
	650542	Screw, 5/16-18 x 3/4"
	27930A	Gasket, Exhaust
	30196	Screw, 5/16-18 x 3/4"
	26073	Washer (Use as required)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	32589	Key, Flywheel
	31843A	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	650493	Screw, 1/4-20 x 1-3/4"
	30747	Clip, Shorting
	610118	Cover, Spark plug (Use as required)
	650561	Screw, 1/4-20 x 5/8" (Use as required )
	30939A	Cover, Cylinder head
	32125	Cup, Starter
	590417	Screen, Starter cup
266	26460	Clamp, Fuel line
270	31461	Bushing, Crankshaft (Use as required)
274	610973	Terminal Ass'y. (As req. on late prod uction)
287	27275	Clip, Hi-tension wire (Use as require d)
287	34246	Clip, Ground wire (Use as required)
331A	34346	Decal, Instruction
332	30547A	Contact Assy., Breaker
333	30548B	Condenser
334	631021	Inlet Needle, Seat & Clip Assy.
336	631440	Carburetor (Incl. 75) (Refer to Division 5, Section A, page 78
		for breakdown)
337	610694A	Magneto (w/ring gear for 110 volt sta rter) NOTE: The
001	01000-1/1	complete magneto is not available as an assembly. The
		magneto number is shown for reference purposes only.
		Order component parts individually, as show in parts list.
		(Refer to Division 5, Section B, page 24 for breakdown)
338	590420	Rewind Starter (Refer to Division 5, Section C, page 25 for
		breakdown)
343	33239A	Gasket Set (Incl. items marked*)
		· · · /

For Discount Tecumseh Engine Parts Call 606-678-9623 or 606-561-4983 H70-130005 Engine Parts List #2



Ref #	Part Number	Qty	Description
31	650489	1	Screw, 1/4-20 x 5/8"
34	27793		Clip, Conduit (Use as required)
35	28942		Screw, 10-32 x 3/8" (Use as required)
	650128		Screw, 10-24 x 1/2"
	29716		Screw, 1/4-28 x 7/16"
	30824		Link, Throttle
	650815		Washer, Belleville
	8116		Nut, Hex
	610118		Cover, Spark plug (Use as required)
	33108A		Control Bracket (Incl. 224 & 274)
	30826		Spring, Extension
	650257		Screw, 8-32 x 5/16"
	32395		Cover, Carburetor
	32398		Bracket, Choke
	28820		Screw, 10-32 x 1/2"
	650760		Screw, 8-32 x 3/8"
	650765		Screw, 10-32 x 1/2"
	31291		Plug, Cover
	650764		Nut, "U" Type (Use as required)
	610973		Terminal Ass'y. (As req. on late prod uction)
	32397		Plate Assy., Choke
	32399		Spring, Choke stop
	32400		Knob, Choke
	31680		Guard, Starter
	32576		Seal, Snow guard
	31682		Decal, Instruction
	31718		Decal, Choke
	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for
500	350420		breakdown)
			Dieardowij
340	33328D		Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#342). Refer to service
			number stamped on end cap of motor, or on decal, for identifica
342	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter kits listed above)
342	611042		Flywheel (Used on Type letters H and above) (Std. Point ignition) (Ring gear flywheel required on engines using 110-120 volt starter kits listed above)
342	611085		Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter kits listed above) (Use withSolid State ignition)

For Discount Tecumseh Engine Parts Call 606-678-9623 or 606-561-4983 H70-130005 Engine Parts List #3

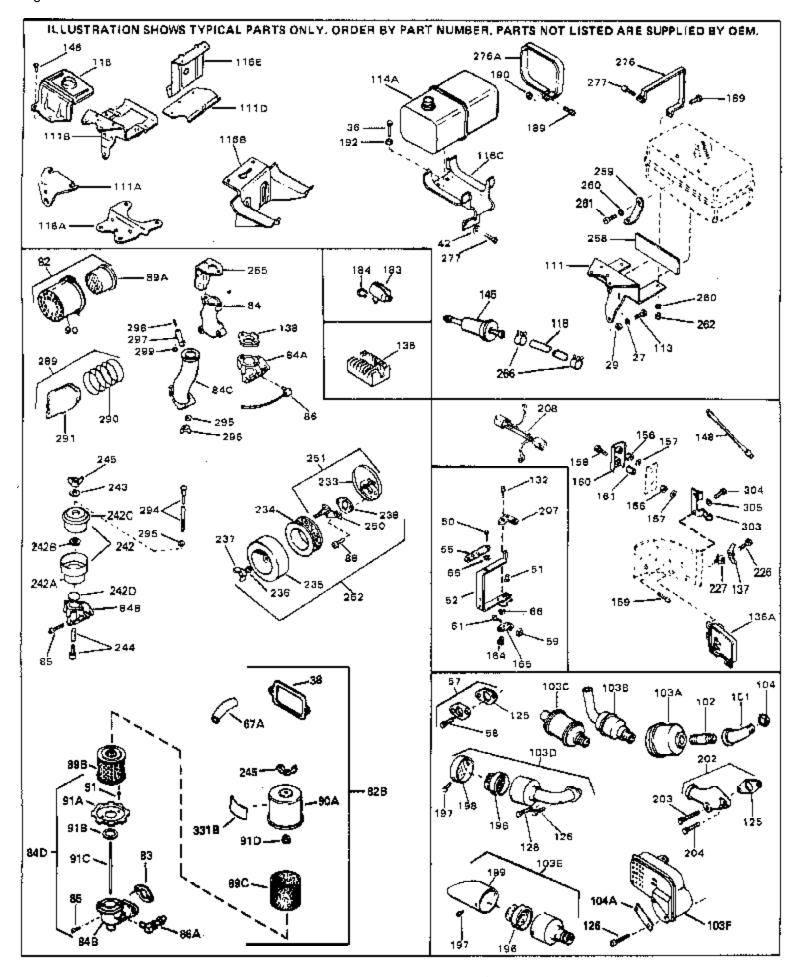

Ref #	Part Number	Qty Description
27 36 36 36 38 42 42 50 51	27513 650697A 650695A 650694A 27896A 26073 650691 650548 30319 32326A	Lockwasher, 1/4" (Use as required) Screw, 5/16-18 x 2-1/2" (Use as required) Screw, 5/16-18 x 2-1/4" (Use as required) Screw, 5/16-18 x 2" (Use as required) * Gasket, Breather cover Washer (Use as required) Washer, Flat (Use as required) Screw, 8-32 x 5/16" Rivet, Split (Used in early productio n) Lever, Governor (New lever does not need 1 of 51,66,132,164,165,207)
57 58 59 61 66	30205 730130 30196 29216 29826 29918 730561	Bracket, Adjusting Exh.Adap.Kit (Incl. 58 & 125) (Use as req.) Screw, 5/16-18 x 3/4" (Use as require d) Nut, Lock, 10-32 Screw, 10-32 x 3/4" Lockwasher, #8 E.T. Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91, 91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with an externally vented fully adjustable carburetor)
82	730127	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 & 331B) (Use as required)
	27272A 34819	* Gasket, Air cleaner Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use in 730561 assembly only)
111 113 118 118 118 125 126 128 132 148 132 148 148 148 148 202 203 204 262 266 276	391026 31694 650561 29774 30705 30962 27930A 30196 650694A 650548 34067 34069 6201 31288 650697A 6021A 29752 26460 31697 29212	Opt. Spark Arrest Muffler (Incl.196,1 97,199) Bracket, Fuel tank Screw, 1/4-20 x 5/8" Fuel Line (Braided 8-1/4" 21 cm)(Use as req.) Fuel Line (Braided 16") (41 cm) (Use as req.) Fuel Line (Braided 32") (81 cm) (Use as req.) Gasket, Exhaust Screw, 5/16-18 x 3/4" Screw, 5/16-18 x 2" (Use as required) Screw, 8-32 x 5/16" (Early production ) Wire Assy., Alternator adapter (4-1/4 ") Wire Assy., Alternator adapter (6-3/4 ") Screw, 1/4-28 x 7/8" Exh. Adaptor Kit (Incl.125,203,204) ( As req.) Screw, 5/16-18 x 2-1/2" (Use as required) Screw, 5/16-18 x 1-1/2" (Use as required) Nut, Lock Clamp, Fuel line Strap, Fuel tank Screw, Hex hd. Sems, 1/4-28 x 7/16