
For Discount Tecumseh Engine Parts Call 606-678-9623 or 606-561-4983 H70-130149A Engine Parts List #1

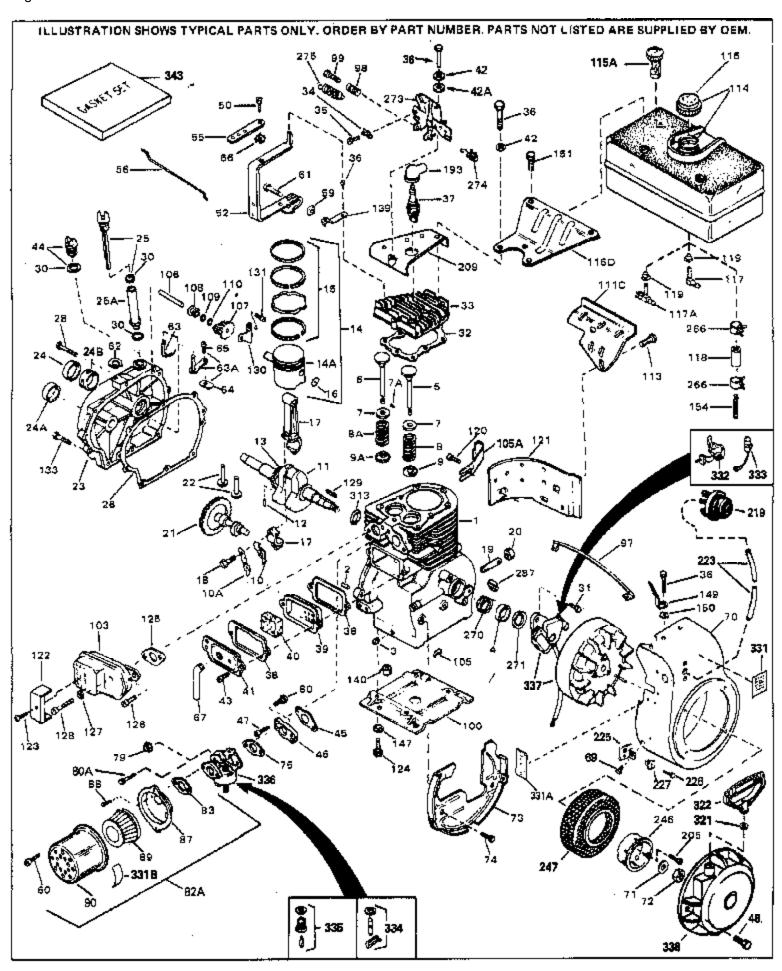

www.mymowerparts.com

Ref # Pa	art Number C	ty Description
	2586C	Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore)
2 27		Pin, Dowel
3 27		Plug, Oil drain
4 32		Seal, Oil
5 32		Intake Valve (Std.) (Incl. 9)
5 32		Intake Valve (1/32" OS) (Incl. 9)
	7878A	
		Exhaust Valve (Std.) (Incl. 9)
	7880A	Exhaust Valve (1/32" OS) (Incl. 9)
7 27		Cap, Upper valve spring
7A 20		Pin, Valve spring retainer (Use as re quired)
8 27		Spring, Valve
8A 27		Spring, Valve
9 32		Cap, Lower valve spring
9A 32		Cap, Lower valve spring
10A 32	2590	Plate, Lock & Oil dipper (This plate may be replaced by
		34242 oil dipper but 650662C screw must be used.)
10 34	4242	Dipper, Oil
11 32		Crankshaft (Incl. 12 & 13)
12 29		Crankshaft Gear Pin (Early production)
13 27		Gear, Crankshaft (Used in early production) This gear is
		servicable onlywhen it is pinned to the crankshaft.
444 00		
14A 32		Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
14A 32		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
14A 32		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
14 34		Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
14 34		Piston, Pin & Ring Set (.010" OS)
14 34		Piston, Pin & Ring Set (.020" OS)
15 32		Ring Set (Std.) (2-3/4" Bore)
15 32		Ring Set (.010" OS)
15 32		Ring Set (.020" OS)
16 27		Ring, Piston pin retaining
17 32		Rod Assy., Connecting (Incl. 10 & 18)
	50662C	Screw, Connecting rod (2 each)
21 32		Camshaft (MCR)
22 34		Lifter, Valve
23 31		Cover, Cylinder (Incl. 24, 106 & 279)
24B 31		Bushing, Crankshaft (Use as required)
24 28	3427	Seal, Oil
25 30	0924A	Dipstick (Incl. 30)
26 30		* Gasket, Cylinder cover
28 65	50488	Screw, 1/4-20 x 1-1/4"
30 29	9673	* Gasket, Oil filler
31 65	50489	Screw, 1/4-20 x 5/8"
32 32	2631A	* Gasket, Cylinder head
33 30	0938A	Head, Cylinder
34 27	7793	Clip, Conduit (Use as required)
35 28	3942	Screw, 10-32 x 3/8" (Use as required)
	50697A	Screw, 5/16-18 x 2-1/2" (Use as required)
	50695A	Screw, 5/16-18 x 2-1/4" (Use as required)
	50694A	Screw, 5/16-18 x 2" (Use as required)
37 33		Resistor Spark Plug (RJ-8C)
37 34		Resistor Spark Plug
38 27		* Gasket, Breather cover
39 28		Body, Breather
40 28		Element, Breather
41 28		Cover, Valve spring
42 26		Washer (Use as required)
12 20		

	Part Number	Qty Description
	650691	Washer, Flat (Use as required)
	650690	Washer, Belleville (Use as required)
	650128	Screw, 10-24 x 1/2"
45	27915A	* Gasket, Intake
46	30195A	Flange, Carburetor (Incl. 79 & 80)
47	30196	Screw, 5/16-18 x 3/4"
48	29716	Screw, 1/4-28 x 7/16"
50	650548	Screw, 8-32 x 5/16"
52	32326A	Lever, Governor (New lever does not need 1 of
		51,66,132,164,165,207)
55	30205	Bracket, Adjusting
	31710	Link, Throttle
	29216	Nut, Lock, 10-32
	650152	Screw, 8-32 x 3/8"
	29826	Screw, 10-32 x 3/8"
	29642	Ring, Retaining
	29042 30699B	• •
05	200990	Governor Rod Ass'y. (This one-piece governor rodis no longer used. It is replaced by 30699C ass'y.,Ref. no. 63A)
		useu. Il is replaceu by 500990 assy., Rei. 110. 05A)
63A	30699C	Rod Assy., Governor (Incl. 64 & 65)
64	30700	Yoke, Governor
65	650494	Screw, 6-40 x 5/16"
66	29918	Lockwasher, #8 E.T.
67	35350	Tube, Breather
69	29747B	Screw, 5/16-24 x 21/32"
70	32158E	Blower Housing (For elec.star.)(Incl. 134,135)
71	650815	Washer, Belleville
72	8116	Nut, Hex
73	29536	Blower Housing Baffle (without electric starter knock-out)
		(Use as required)
70	35256A	Player Hausing Poffle (with alactric starter knack out) (I lea
15	33230A	Blower Housing Baffle (with electric starter knock-out) (Use
		as required) (Point Ignition)
74	650561	Screw, 1/4-20 x 5/8"
75	31688A	* Gasket, Carburetor
79	29752	Nut & Lockwasher Assy., 1/4-28
80	650572	Screw, 1/4-28 x 1-1/8"
82A	730164	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B)
		(Use as required)
83	27272A	* Gasket, Air cleaner
	31691	Bracket, Air cleaner NOTE: 130010 thru 10C & 11 used in
07	31031	early production only.
	28820	Screw, 10-32 x 1/2"
	30727	Element, Air cleaner
	31715	Body, Air cleaner
	35349	Ground Wire
	28569	Spring, Compression
	29500	Screw, 8-32 x 3/4"
	29538	Base, Engine mounting
	31845	Shaft, Mechanical governor
	30591	Gear Assy., Governor (Incl. 109)
	30588A	Spool, Governor
109	30590A	Washer, Flat
110	29193	Ring, Retaining
113	650561	Screw, 1/4-20 x 5/8"
	31301	Fuel Tank (Incl. 115)
115	410144B	Fuel Cap (White Plastic)(Std)(As requ ired)
	www.mvmo	werparts.com


Ref #	Part Number Qty	Description
	33032	Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile)
		(Use as required)
115	34210	Fuel Cap (Pad Plactic) (Spurt registrant, High profile) (Leo as
	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
		required)
	35355	Fuel Cap (Use as required)
	28584	Fitting, Fuel strainer & elbow
	29774	Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705	Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962	Fuel Line (Braided 32") (81 cm) (Use as req.)
	650128	Screw, 10-24 x 1/2" (Use as required)
	30622A	Extension, Blower housing
	650542	Screw, 5/16-18 x 3/4"
	26073	Washer (Use as required)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	32589	Key, Flywheel
	31843A	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	650493 30747	Screw, 1/4-20 x 1-3/4"
	650890	Clip, Shorting Lockwasher
	610118	Cover, Spark plug (Use as required)
	27276	Cover, Spark plug
	650561	Screw, 1/4-20 x 5/8" (Use as required)
	30939A	Cover, Cylinder head
	32125	Cup, Starter
	590417	Screen, Starter cup
	26460	Clamp, Fuel line
	31461	Bushing, Crankshaft (Use as required)
	31726B	Control Bracket (Incl. 98, 99, 214 & 274)
274	610973	Terminal Ass'y. (As req. on late prod uction)
275	34043	Spring, Control lever
287	27275	Clip, Hi-tension wire (Use as require d)
287	34246	Clip, Ground wire (Use as required)
331A	34346	Decal, Instruction
331	550223	Decal, Name
	31752	Decal, Air cleaner
	30547A	Contact Assy., Breaker
	30548B	Condenser
	631021	Inlet Needle, Seat & Clip Assy.
336	631453	Carburetor (Incl. 75) (Refer to Division 5, Section A, page 100
		for breakdown)
337	610689A	Magneto NOTE: The complete magneto is not available as
		an assembly. The magneto number is shown for reference
		purposes only. Order component parts individually, as show
		in parts list. (Refer to Division 5, Section B, page 24 for
		breakdown)
228	590420	Rewind Starter (Refer to Division 5, Section C, page 25 for
500		breakdown)
		,
343	33239A	Gasket Set (Incl. items marked*)

For Discount Tecumseh Engine Parts Call 606-678-9623 or 606-561-4983 H70-130149A Page 5 of 8 Engine Parts List #2



Ref #	Part Number	Qtv	Description
	650489		Screw, 1/4-20 x 5/8"
	27793		Clip, Conduit (Use as required)
35	28942		Screw, 10-32 x 3/8" (Use as required)
43A	650128		Screw, 10-24 x 1/2"
48	29716		Screw, 1/4-28 x 7/16"
56	31710		Link, Throttle
71	650815		Washer, Belleville
72	8116		Nut, Hex
98	28569		Spring, Compression
99	29500		Screw, 8-32 x 3/4"
	610118		Cover, Spark plug (Use as required)
	27276		Cover, Spark plug
	650764		Nut, "U" Type (Use as required)
	610973		Terminal Ass'y. (As req. on late prod uction)
	550223		Decal, Name
338	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
340	33328D		Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#342). Refer to service number stamped on end cap of motor, or on decal, for identifica
342	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter kits listed above)
342	611042		Flywheel (Used on Type letters H and above) (Std. Point ignition) (Ring gear flywheel required on engines using 110-120 volt starter kits listed above)
342	611085		Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter kits listed above) (Use withSolid State ignition)

For Discount Tecumseh Engine Parts Call 606-678-9623 or 606-561-4983 H70-130149A Engine Parts List #3

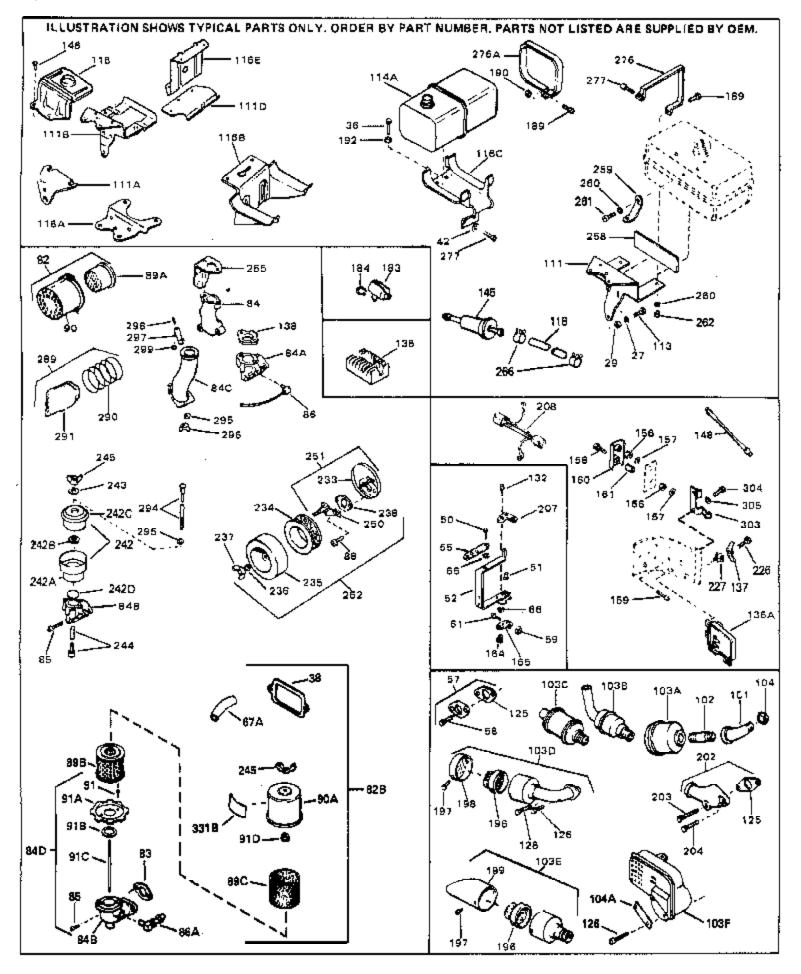

_

		ty Description
	27513	Lockwasher, 1/4" (Use as required)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	27896A	* Gasket, Breather cover
	26073	Washer (Use as required)
	650691	Washer, Flat (Use as required)
	650548	Screw, 8-32 x 5/16"
	30319	Rivet, Split (Used in early productio n)
52	32326A	Lever, Governor (New lever does not need 1 of
		51,66,132,164,165,207)
55	30205	Bracket, Adjusting
	730130	Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
	30196	Screw, $5/16-18 \times 3/4$ " (Use as require d)
	29216	Nut, Lock, 10-32
	29826	Screw, 10-32 x 3/4"
	29918	Lockwasher, #8 E.T.
	730561	Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91,
020	100001	91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with
		an externally vented fully adjustable carburetor)
82	730127	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 &
		331B) (Use as required)
83	27272A	* Gasket, Air cleaner
	34819	Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use
		in 730561 assembly only)
00	28820	
	28820	Screw, 10-32 x 1/2"
	31715	Body, Air cleaner
	30209	Elbow, Exhaust (45 degree)
	31287	Muffler
	391026	Opt. Spark Arrest Muffler (Incl.196,1 97,199)
	28443	Conduit Nut
	32862	Conduit Nut
	31694	Bracket, Fuel tank
	650561	Screw, 1/4-20 x 5/8"
	29774	Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705	Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962	Fuel Line (Braided 32") (81 cm) (Use as req.)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	650548	Screw, 8-32 x 5/16" (Early production)
	34067	Wire Assy., Alternator adapter (4-1/4 ")
	34069	Wire Assy., Alternator adapter (6-3/4 ")
	6201	Screw, 1/4-28 x 7/8"
	31288	Exh. Adaptor Kit (Incl.125,203,204) (As req.)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
	6021A	Screw, 5/16-18 x 1-1/2" (Use as required)
	29752	Nut, Lock
	26460	Clamp, Fuel line
	31697	Strap, Fuel tank
	29212	Screw, Hex hd. Sems, 1/4-28 x 7/16
331B	31752	Decal, Air cleaner