
For Discount Tecumseh Engine Parts Call 606-678-9623 or 606-561-4983 H70-130194E

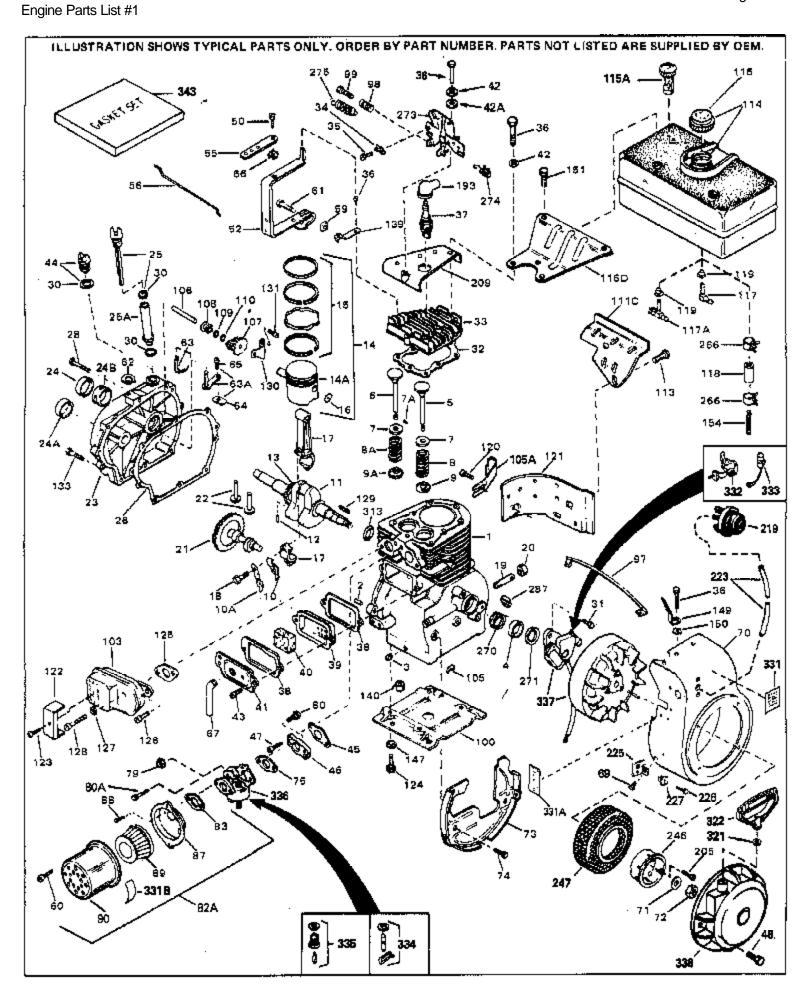

www.mymowerparts.com

		<u> </u>	
	Part Number	Qty	Description
1			Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore)
	27652		Pin, Dowel
	27642		Plug, Oil drain
	32630		Seal, Oil
	32783		Intake Valve (Std.) (Incl. 9)
5	32784		Intake Valve (1/32" OS) (Incl. 9)
6	27878A		Exhaust Valve (Std.) (Incl. 9)
6	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
7	27882		Cap, Upper valve spring
7A	20810		Pin, Valve spring retainer (Use as re quired)
8	27881		Spring, Valve
	27881		Spring, Valve
	32581		Cap, Lower valve spring
	32581		Cap, Lower valve spring
	32590		Plate, Lock & Oil dipper (This plate may be replaced by
107 (02000		34242 oil dipper but 650662C screw must be used.)
			,
	34242		Dipper, Oil
	34898		Crankshaft (Incl. 12 & 13)
	29783		Crankshaft Gear Pin (Early production)
13	27884		Gear, Crankshaft (Used in early production) This gear is
			servicable onlywhen it is pinned to the crankshaft.
14	34517		Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
	34518		Piston, Pin & Ring Set (J.010" OS)
	34519		Piston, Pin & Ring Set (.020" OS)
	32592B		Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
	32593B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32594B		
			Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	32595		Ring Set (Std.) (2-3/4" Bore)
	32596		Ring Set (.010" OS)
	32597		Ring Set (.020" OS)
	27888		Ring, Piston pin retaining
	32591C		Rod Assy., Connecting (Incl. 10 & 18)
	650662C		Screw, Connecting rod (2 each)
	32115		Camshaft (MCR)
	34034		Lifter, Valve
	31451A		Cylinder Cover (Incl.24, 106, 309, 31 0 & 311)
	28460		Seal, Oil
	31546		Bushing, Crankshaft (Use as required)
	33893A		Tube, Oil filler
	34011A		Dipstick, Oil (Incl. 30)
26	30684		* Gasket, Cylinder cover
28	650488		Screw, 1/4-20 x 1-1/4"
30	33590		"O" Ring
31	650489		Screw, 1/4-20 x 5/8"
32	32631A		* Gasket, Cylinder head
33	30938A		Head, Cylinder
	27793		Clip, Conduit (Use as required)
	28942		Screw, 10-32 x 3/8" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	33636		Resistor Spark Plug (RJ-8C)
	34251		Resistor Spark Plug
	27896A		* Gasket, Breather cover
	28423		Body, Breather
	28424		
			Element, Breather
41	28425	TT 7.	Cover, Valve spring

Cover, Valve spring WWW.mymowerparts.com


42A 42 42 43 45 46 47 48 50	Part Number Q 650690 26073 650691 650128 27915A 34712 30196 29716 650548 32326A	ty Description Washer, Belleville (Use as required) Washer (Use as required) Washer, Flat (Use as required) Screw, 10-24 x 1/2" * Gasket, Intake Flange Carburetor Screw, 5/16-18 x 3/4" Screw, 1/4-28 x 7/16" Screw, 8-32 x 5/16" Lever, Governor (New lever does not need 1 of 51,66,132,164,165,207)
56 59 60 61 62 63A	30205 32327 29216 650152 29826 29642 30699C 30699B	Bracket, Adjusting Link, Throttle Nut, Lock, 10-32 Screw, 8-32 x 3/8" Screw, 10-32 x 3/4" Ring, Retaining Rod Assy., Governor (Incl. 64 & 65) Governor Rod Ass'y. (This one-piece governor rodis no longer used. It is replaced by 30699C ass'y.,Ref. no. 63A)
65 66 67 69 70 71 72	30700 650494 29918 35350 29747B 32158E 650815 8116 29536	Yoke, Governor Screw, 6-40 x 5/16" Lockwasher, #8 E.T. Tube, Breather Screw, 5/16-24 x 21/32" Blower Housing (For elec.star.)(Incl. 134,135) Washer, Belleville Nut, Hex Blower Housing Baffle (without electric starter knock-out) (Use as required)
73	35256A	Blower Housing Baffle (with electric starter knock-out) (Use as required) (Point Ignition)
75 80A	650561 31688A 650517 730164	Screw, 1/4-20 x 5/8" * Gasket, Carburetor Screw, 1/4-20 x 27/32" Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B) (Use as required)
	27272A 31691	* Gasket, Air cleaner Bracket, Air cleaner NOTE: 130010 thru 10C & 11 used in early production only.
89 90 100 106 107 108 109 110	28820 30727 31715 29538 31845 30591 30588A 30590A 29193 34158 650561	Screw, 10-32 x 1/2" Element, Air cleaner Body, Air cleaner Base, Engine mounting Shaft, Mechanical governor Gear Assy., Governor (Incl. 109) Spool, Governor Washer, Flat Ring, Retaining Bracket, Fuel tank Screw, 1/4-20 x 5/8"

Ref #	Part Number Qt	y Description
114	34186A	Fuel Tank (Incl. 115 & 266) NOTE: These tanks were built with different size fuel inlet openings. Tanks with the 1-3/16" I.D. opening use fuel cap 33032 or 34210. Tanks with the 1-1/2" I.D. opening use fuel cap 35355 or 35650.
	410144B 33032	Fuel Cap (White Plastic)(Std)(As requ ired) Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile) (Use as required)
115	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
116D 117A 118 118 118 120 121 124 127 128 129 130 131 133 149 150 151 193 205 209 246 247 266 270 271 274 287 287 331A 332 333	32961 29774 30705 30962 650128 30622A 650542 26073 650694A 32589 31843A 650836 650493 30747 650890 650665 610118 650561 30939A 32125 35009 26460 31461 33876 610973 27275 34246 34346 30547A 30548B 631021	Fuel Cap (Use as required) Plate, Fuel tank mounting Valve, Shut-off Fuel Line (Braided 8-1/4" 21 cm)(Use as req.) Fuel Line (Braided 16") (41 cm) (Use as req.) Fuel Line (Braided 32") (81 cm) (Use as req.) Screw, 10-24 x 1/2" (Use as required) Extension, Blower housing Screw, 5/16-18 x 3/4" Washer (Use as required) Screw, 5/16-18 x 2" (Use as required) Key, Flywheel Bracket, Governor gear Screw, 10-24 x 1/2" Screw, 1/4-20 x 1-3/4" Clip, Shorting Lockwasher Screw, 1/4-15 x 7/8" Cover, Spark plug (Use as required) Screw, 1/4-20 x 5/8" (Use as required) Cup, Starter Screen, Starter cup Clamp, Fuel line Bushing, Crankshaft (Use as required) Gasket, Stator Terminal Ass'y. (As req. on late prod uction) Clip, Hi-tension wire (Use as required) Decal, Instruction Contact Assy., Breaker Condenser Inlet Needle, Seat & Clip Assy.
	631453 611038	Carburetor (Incl. 75) (Refer to Division 5, Section A, page 100 for breakdown) Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as show in parts list. (Refer to Division 5, Section B, page 39 for
338	590420	breakdown) Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
343	33239A	Gasket Set (Incl. items marked*)

www.mymowerparts.com

For Discount Tecumseh Engine Parts Call 606-678-9623 or 606-561-4983

Page 5 of 8

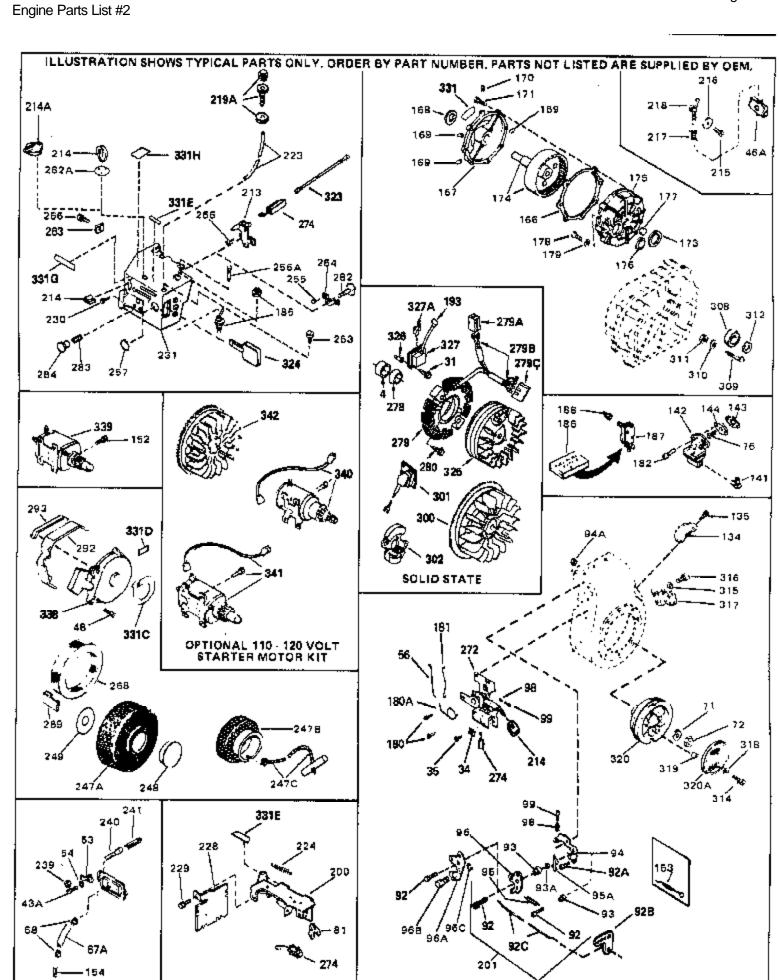

www.mymowerparts.com


For Discount Tecumseh Engine Parts Call 606-678-9623 or 606-561-4983 $_{\rm Page~6~of~8}$ Engine Parts List #2

Ref #	Part Number	Qty	Description
31	650489		Screw, 1/4-20 x 5/8"
34	27793		Clip, Conduit (Use as required)
35	28942		Screw, 10-32 x 3/8" (Use as required)
43A	650128		Screw, 10-24 x 1/2"
48	29716		Screw, 1/4-28 x 7/16"
56	32327		Link, Throttle
	650815		Washer, Belleville
	8116		Nut, Hex
	9556		Plug, Pipe, 1/8-27
	610118		Cover, Spark plug (Use as required)
	33450		Nut, Lock
	30845A		Bolt, Governor adjusting
	30886A		Spring, Governor bolt
	650764		Nut, "U" Type (Use as required)
	610973		Terminal Ass'y. (As req. on late prod uction)
	31793		Bearing, Ball
	31855		Retainer, Bearing
	650778		Washer, Lock
	650580		Nut, Lock
	31792		Washer, Thrust
338	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
340	33328D		Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#342). Refer to service number stamped on end cap of motor, or on decal, for identifica
342	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter kits listed above)
342	611042		Flywheel (Used on Type letters H and above) (Std. Point ignition) (Ring gear flywheel required on engines using 110-120 volt starter kits listed above)
342	611085		Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter kits listed above) (Use with Solid State ignition)

For Discount Tecumseh Engine Parts Call 606-678-9623 or 606-561-4983

Page 7 of 8

Engine Parts List #3

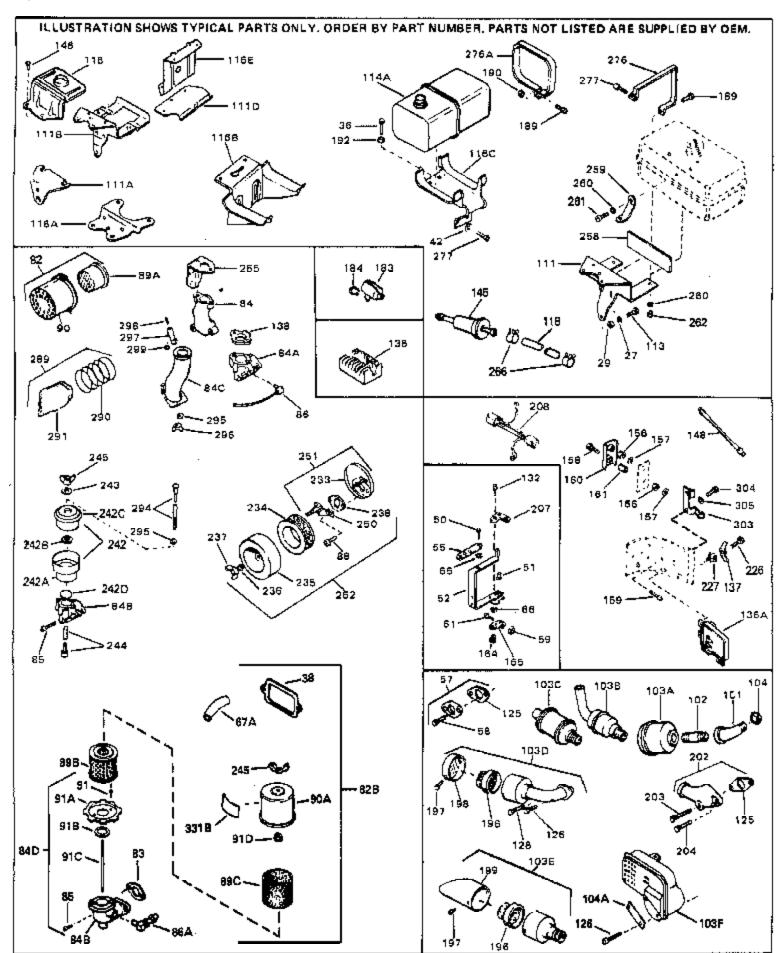

www.mymowerparts.com

Ref #	Part Number	Qty	Description
	27513		Lockwasher, 1/4" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	27896A		* Gasket, Breather cover
	26073		Washer (Use as required)
	650691		Washer, Flat (Use as required)
	650548		Screw, 8-32 x 5/16"
	30319		Rivet, Split (Used in early productio n)
52	32326A		Lever, Governor (New lever does not need 1 of
			51,66,132,164,165,207)
55	30205		Bracket, Adjusting
	730130		Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
	29216		Nut, Lock, 10-32
61	29826		Screw, 10-32 x 3/4"
66	29918		Lockwasher, #8 E.T.
82	730127		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 &
			331B) (Use as required)
82B	730561		Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91,
			91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with
			an externally vented fully adjustable carburetor)
83	27272A		* Gasket, Air cleaner
	34819		Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use
0.2			in 730561 assembly only)
00	20020		• • • • • • • • • • • • • • • • • • • •
	28820 24745		Screw, 10-32 x 1/2"
	31715		Body, Air cleaner
	30209 30244		Elbow, Exhaust (45 degree)
	29633		Muffler Nipple Muffler
	391026		Opt. Spark Arrest Muffler (Incl.196,1 97,199)
	32862		Conduit Nut
	650561		Screw, 1/4-20 x 5/8"
	29774		Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705		Fuel Line (Braided 3-1/4 21 cm) (Use as req.)
	30962		Fuel Line (Braided 32") (81 cm) (Use as req.)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650548		Screw, 8-32 x 5/16" (Early production)
	34067		Wire Assy., Alternator adapter (4-1/4 ")
202 203 204	34069 31288 650697A 6021A 26460		Wire Assy., Alternator adapter (6-3/4 ") Exh. Adaptor Kit (Incl.125,203,204) (As req.) Screw, 5/16-18 x 2-1/2" (Use as requi red) Screw, 5/16-18 x 1-1/2" (Use as requi red) Clamp, Fuel line