


ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

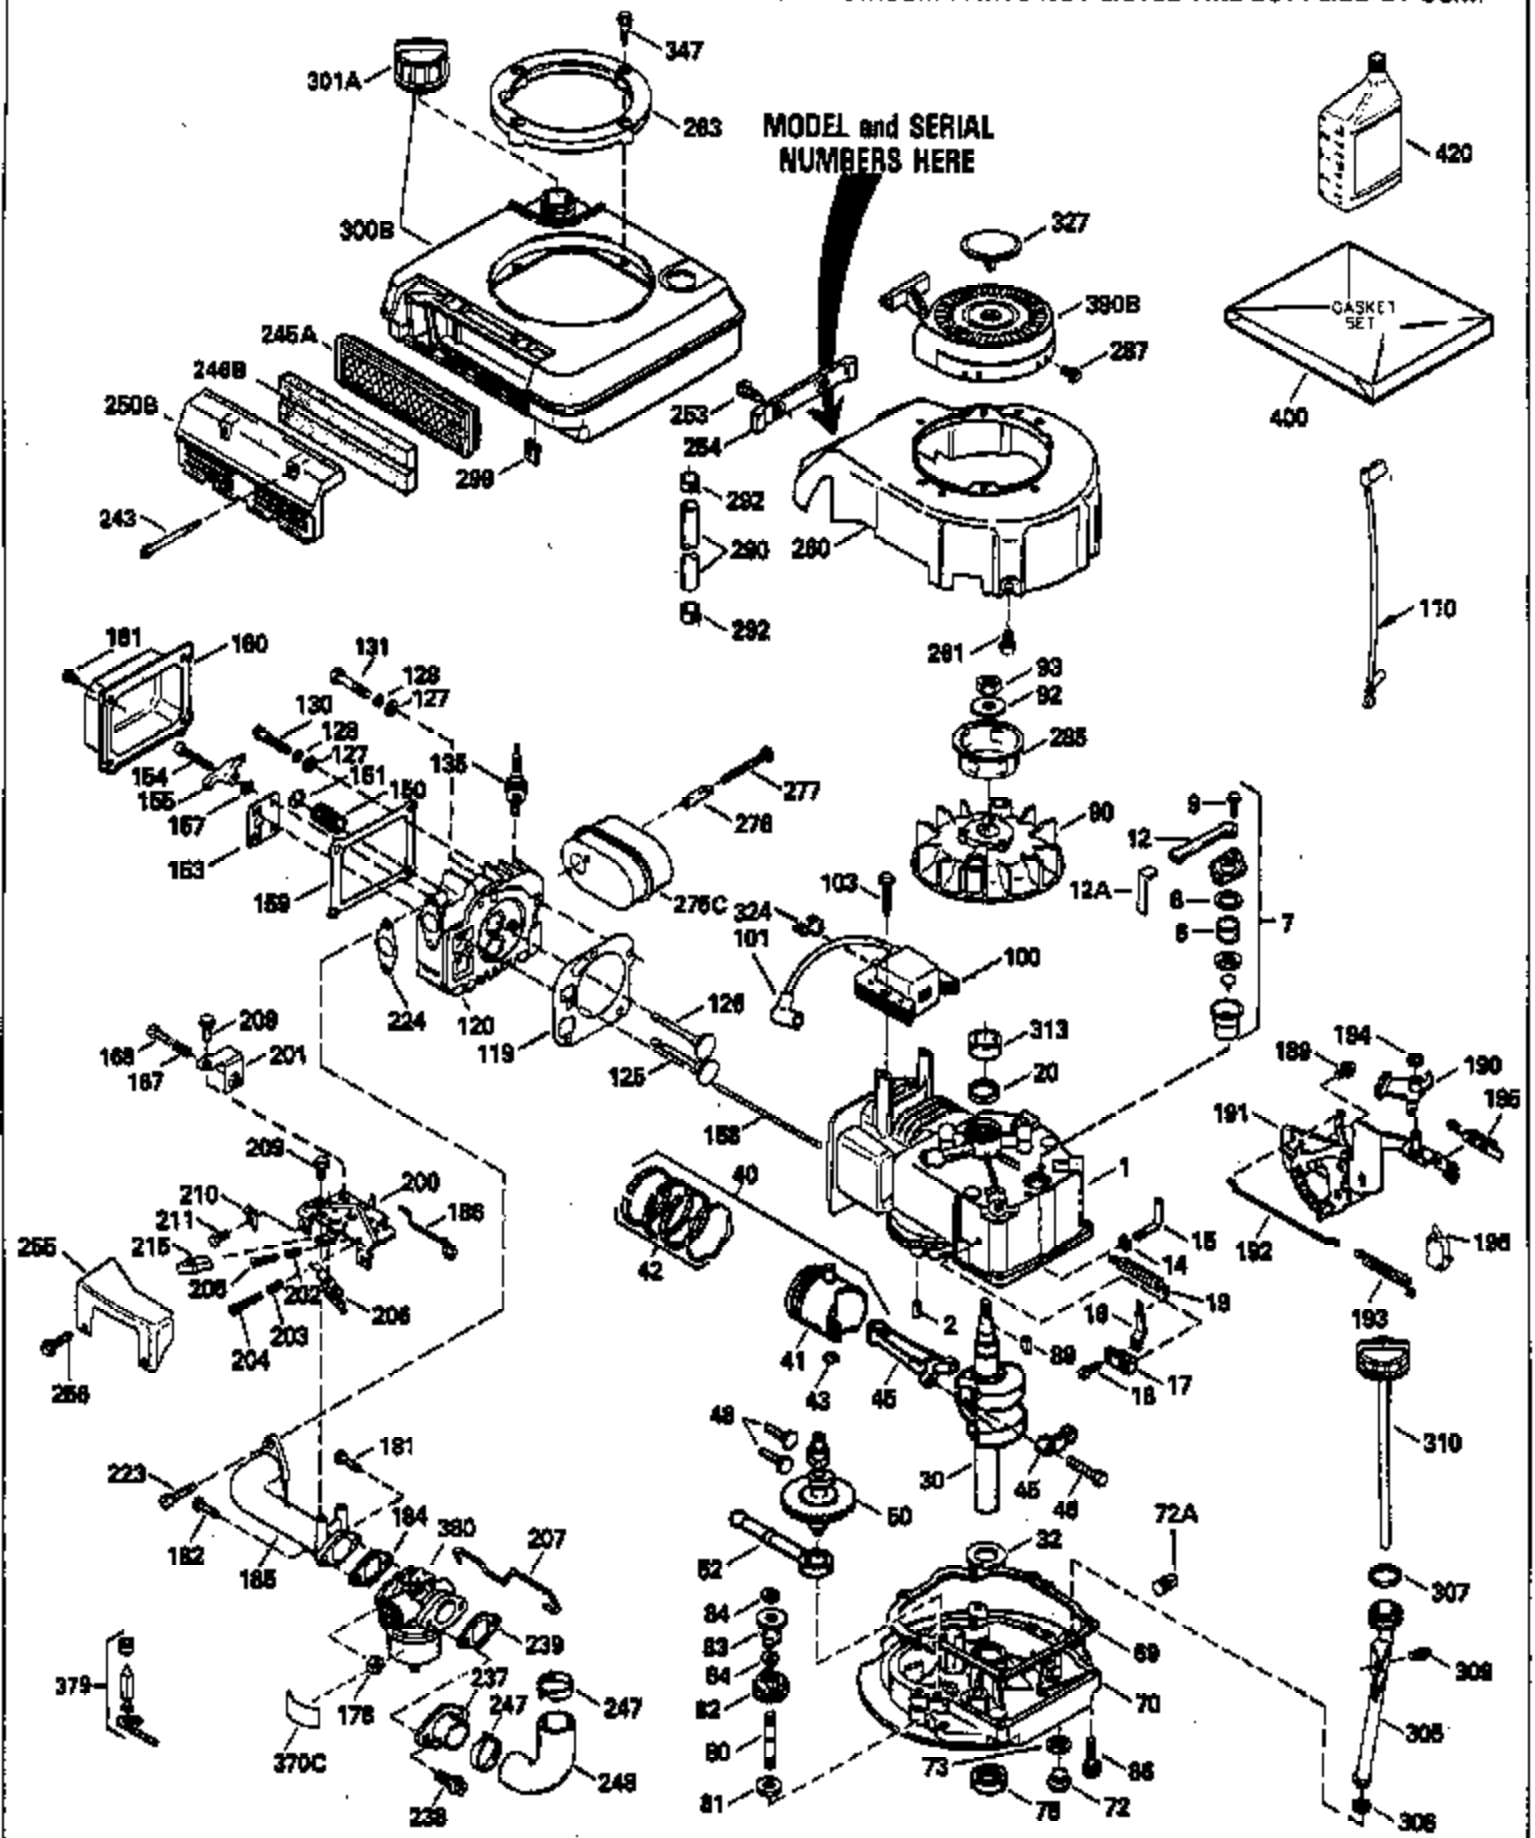

Engine Parts List #1



Ref #	Part Number	Qty	Description
1	35805		Cylinder (Incl. 2 & 20) (2-5/8" Bore)
2	26727		Pin, Dowel
6	33734		Element, Breather
7	34214A		Breather Assy. (Incl. 6, 8, 9, 12 & 12 A)
8	33735		* Gasket, Breather
9	30200		Screw, 10-24 x 9/16"
12	35496		Tube, Breather
14	28277		Washer, Flat
15	30589		Rod, Governor (Incl. 14)
16	31383A		Lever, Governor
17	31335		Clamp, Governor lever
18	650548		Screw, 8-32 x 5/16"
19	33578		Spring, Governor
20	32600		Seal, Oil
30	35845		Crankshaft
40	35544		Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
40	35545		Piston, Pin & Ring Set (.010" OS)
40	35546		Piston, Pin & Ring Set (.020" OS)
41	35541		Piston & Pin Ass'y.(Std.)(Incl. 43)(2 -5/8")
41	35542		Piston & Pin Ass'y. (.010" OS) (Incl. 43)
41	35543		Piston & Pin Ass'y. (.020" OS) (Incl. 43)
42	35547		Ring Set, Piston (Std.)
42	35548		Ring Set, Piston (.010" OS)
42	35549		Ring Set, Piston (.020" OS)
43	20381		Ring, Piston pin retaining
45	32875		Rod Assy., Connecting (Incl. 46)
46	32610A		Bolt, Connecting rod
48	35616		Valve, Lifter
50	33553		Camshaft (MCR)
52	29914		Pump Assy., Oil
69	35261		* Gasket, Mounting flange
70	35717		Mounting Flange (Incl. 72, 75 & 80)
72	30572		Plug, Oil drain (Incl. 73)
73	28833		* Drain Plug Gasket (Do not use w/plastic plug)
75	27897		Seal, Oil
80	30574		Shaft, Governor
81	30590A		Washer, Flat
82	30591		Gear Assy., Governor (Incl. 81)
83	30588A		Spool, Governor
84	29193		Ring, Retaining
86	650488		Screw, 1/4-20 x 1-1/4"
89	611004		Key, Flywheel
90	611044		Flywheel
92	650815		Washer, Belleville
93	650816		Nut, Flywheel
100	34443A		Solid State Assy.
101	610118		Cover, Spark Plug
103	650814		Screw, Torx T-15, 10-24 x 1"
110	34961		Ground Wire
119	35806		* Gasket, Cylinder head
120	35630		Head Cylinder
125	35621		Exhaust Valve (Std.) (Incl. 151)
125	35622		Exhaust Valve (1/32" OS) (Incl. 151)
126	35619		Intake Valve (Std.) (Incl. 151)
126	35620		Intake Valve (1/32" OS) (Incl. 151)
127	650691		Washer, Flat
128	650690		Washer, Belleville
130	650912		Screw, 5/16-18 x 1-1/2"

Engine Parts List #1

Ref #	Part Number	Qty	Description
131	650818		Screw, 5/16-18 x 1-1/2"
135	34645		Resistor Spark Plug (RN-4C)
150	31672		Spring, Valve
151	31673		Cap, Valve spring keeper
153	35623		Guide, Push rod
154	650913		Stud, Rocker arm
155	35624		Arm, Rocker
157	650914		Nut, Hex jam, 1/4-28
158	35625		Rod, Push
159	35626		* Gasket, Rocker arm cover
160	35718		Cover, Rocker arm
161	30063		Screw, Torx-T30, 1/4-20 x 1/2"
167	32924		Spring, Speed adj. screw
168	650688		Screw, Speed adjusting
178	29752		Nut & Lockwasher, 1/4-28
181	6201		Screw, 1/4-28 x 7/8"
182	6201		Screw, 1/4-28 x 7/8"
184	26756		* Gasket, Carburetor
185	35628		Pipe, Intake
186	34337		Link, Governor spring
191	35015B		Bracket, S.E. Brake (Incl. 195)
196	35035		Switch Assy.
200	33155A		Control Bracket
201	33150		Bracket, Over-ride
207	34336		Link, Throttle
209	30200		Screw, 10-24 x 9/16"
210	27793		Clip, Conduit
211	28942		Screw, 10-32 x 3/8"
223	650451		Screw, 1/4-20 x 1"
224	35629A		* Gasket, Intake pipe
237	32971		Adapter, Air cleaner
238	650709		Screw, 10-32 x 7/16"
239	35815		* Gasket, Air cleaner
243	650899		Screw, 10-32 x 2-3/32"
245A	35500		Air Cleaner Filter
246B	35705		Filter, Pre-air
247	35505		Clamp, Air cleaner
248	35504		Tube, Air cleaner
250B	35503		Cover, Air cleaner
253	650821		Screw, 10-32 x 1/2"
254	35721		Cover, Blower housing
260	35719		Housing, Blower
261	650831		Screw, 1/4-20 x 15/32"
263	35502		Ring, Shroud
275C	391027A		Muffler
276	31588		Plate, Lock
277	650697A		Screw, 5/16-18 x 2-1/2"
285	35000		Hub, Starter
287	650884		Screw, 8-32 x 1/2"
290	30705		Line, Fuel (Braided 16")(40 cm)
292	26460		Clamp, Fuel line
299	650900		Clip, "U" Type nut, 10-32
300B	35501A		Shroud & Tank Assy. (Incl. 299 & 301)
301A	35355		Cap, Fuel
305	35498		Tube, Oil fill
306	34265		* Gasket, Fill tube
307	35499		"O" Ring
309	650562		Screw, 10-32 x 1/2"








Ref #	Part Number	Qty	Description
310	35507		Dipstick, Oil fill
313	34080		Spacer, Flywheel
324	33177		Terminal (Lamination)
327	35392		Plug, Starter
347	650898		Screw, 10-32 x 27/32"
379	631021		Inlet, Needle, Seat & Clip Assy.
380	632528		Carburetor (Incl. 184) (Refer to Division 5, Section A, page A1-14 or Fiche 11, Grid F-1 for breakdown)
390B	590621		Rewind Starter (Refer to Division 5, Section C, page 34 or Fiche 11, Grid G-3 for breakdown)
400	35633A		Gasket Set (Incl. items marked*)
420	730225		SAE 30, 4-Cycle Engine Oil (Quart)

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

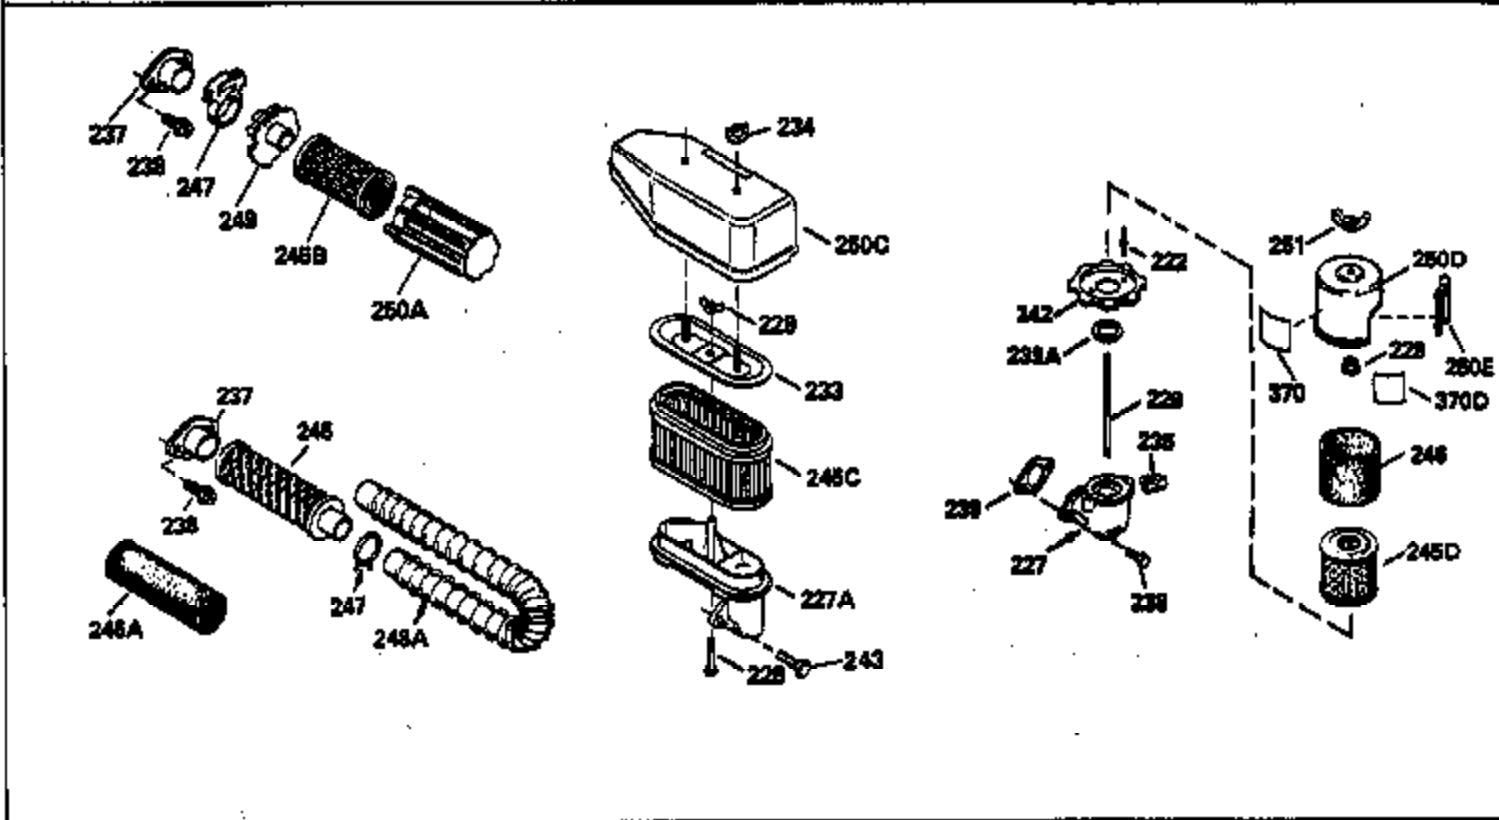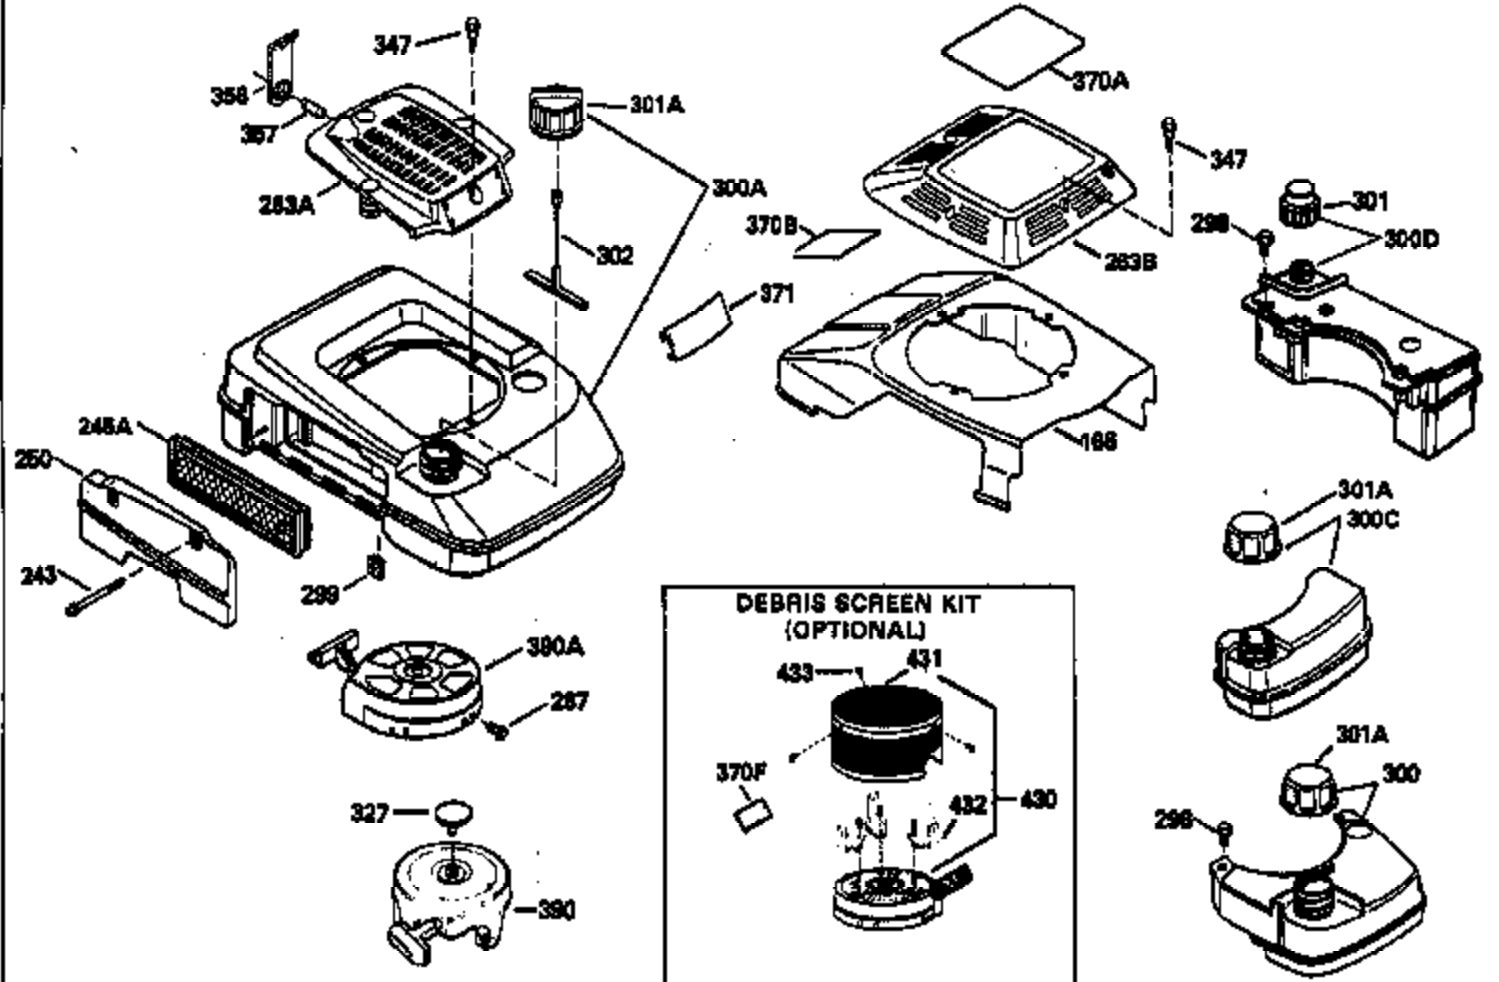

Ref #	Part Number	Qty	Description
153	35623		Guide, Push rod
237	32971		Adapter, Air cleaner
238	650709		Screw, 10-32 x 7/16"
239	35815		* Gasket, Air cleaner
243	650899		Screw, 10-32 x 2-3/32"
245A	35500		Air Cleaner Filter
247	35505		Clamp, Air cleaner
275C	391027A		Muffler
287	650884		Screw, 8-32 x 1/2"
299	650900		Clip, "U" Type nut, 10-32
301A	35355		Cap, Fuel
327	35392		Plug, Starter
347	650898		Screw, 10-32 x 27/32"
357	34985		Retainer, Starter rope
370F	34387		Decal, Instruction (optional)
430	730574		Optional Screen Kit (Incl.370F,431,43 2,433)
431	35596		Debris Screen (Optional)
432	35597		Debris Screen Bracket (Optional)
433	650910		Screw, 8-32 x 1/4" (Optional)

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

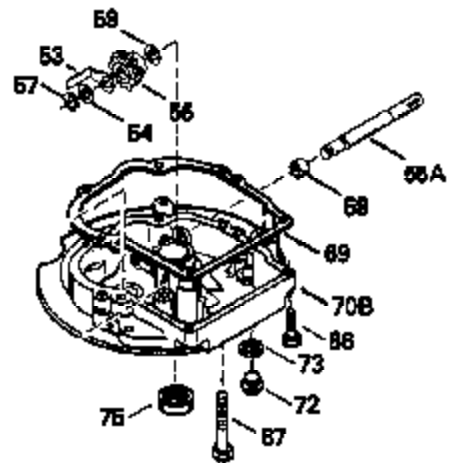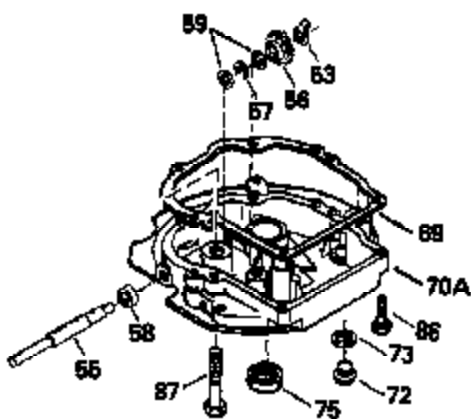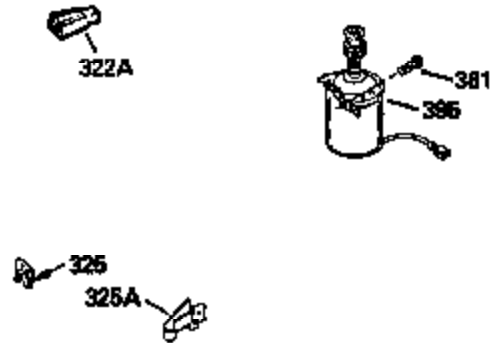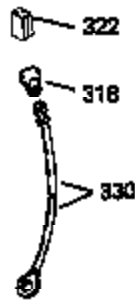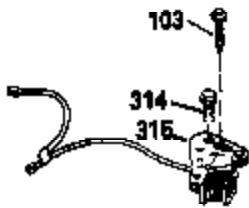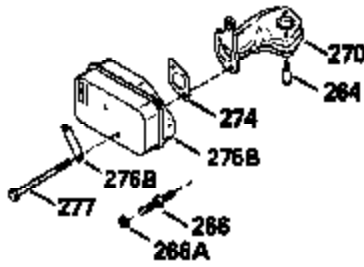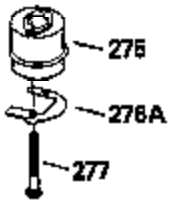

Ref #	Part Number	Qty	Description
69	35261		* Gasket, Mounting flange
72	30572		Plug, Oil drain (Incl. 73)
73	28833		* Drain Plug Gasket (Do not use w/plastic plug)
75	27897		Seal, Oil
86	650488		Screw, 1/4-20 x 1-1/4"
103	650814		Screw, Torx T-15, 10-24 x 1"
153	35623		Guide, Push rod
264	650918		Screw, Torx T30, 1/4-20 x 1-7/32"
266	650917		Stud, Manifold
266A	29752		Nut & Lockwasher, 1/4-28
270	35720		Manifold Assy., Exhaust
275C	391027A		Muffler
277	650697A		Screw, 5/16-18 x 2-1/2"
314	650767		Screw, 8-36 x 5/8"
315	34990		Coil Assy., Alternator
322	35013		Connector, Body
325	29443		Clip, Fuel line
325A	35249		Clip, Wire
330	34978		Wire, Ground
330	34970		Wire, Ground
330	35020		Wire, Ground
361	650831		Screw, 1/4-20 x 15/32"
395	35709		Starter Motor (12 Volt) (Refer to Division 5, Section D, page 18 or Fiche 11, Grid G-11 for breakdown)