


ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

VIEW 1 OF 3

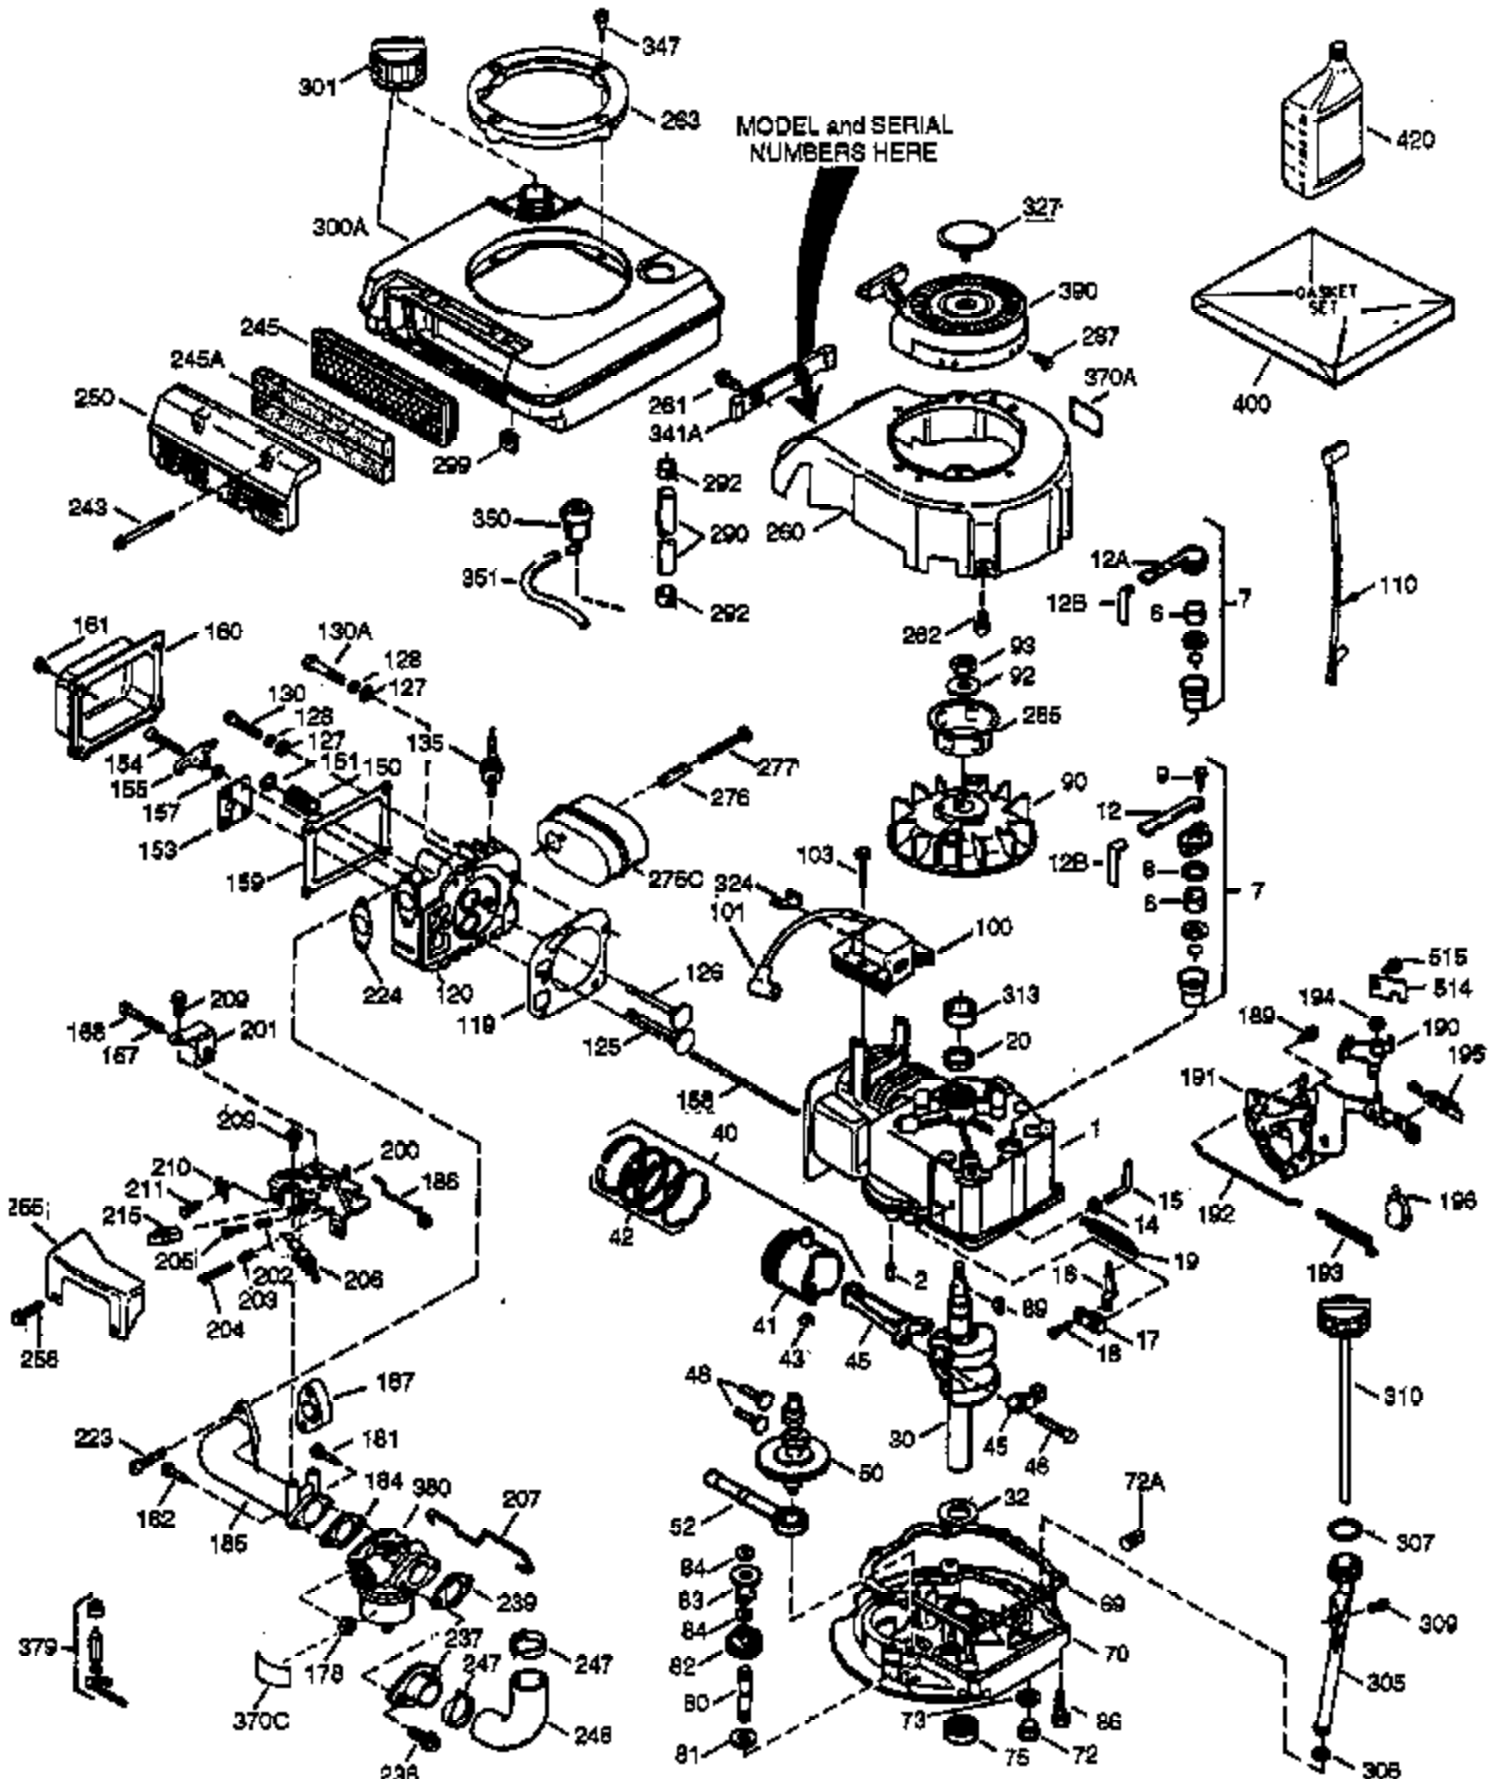



Engine Parts List #1

Ref #	Part Number	Qty	Description
	1 37129	1	Cylinder (Incl. 2 & 20)
	2 26727	2	Dowel Pin
	6 33734	1	Breather Element
	7 36557	1	Breather Ass'y. (Incl. 6 & 12A)
12A	36558	1	Breather Cover & Tube
	14 28277	1	Washer
	15 30589	1	Governor Rod (Incl. 14)
	16 34839A	1	Governor Lever
	17 31335	1	Governor Lever Clamp
	18 651018	1	Screw, Torx T-15, 8-32 x 19/64"
	19 36796	1	Extension Spring
	20 32600	1	Oil Seal
	30 36696	1	Crankshaft
	40 40004	1	Piston, Pin & Ring Set (Std.)
	40 40005	1	Piston, Pin & Ring Set (.010" OS)
	41 36070	1	Piston & Pin Ass'y. (Std.)
	41 36071	1	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
	42 40006	1	Ring Set (Std.)
	42 40007	1	Ring Set (.010" OS)
	43 20381	2	Piston Pin Retaining Ring
	45 32875A	1	Connecting Rod Ass'y. (Incl. 46)
	46 32610A	2	Connecting Rod Bolt
	48 35616	2	Valve Lifter
	50 37011	1	Camshaft (MCR)
	52 29914	1	Oil Pump Ass'y.
	60 37133	1	Blower Housing Extension
	65 650735	2	Screw, 10-24 x 3/8"
	69 37797	1	Mounting Flange Gasket
	70 37131	1	Mounting Flange (Incl. 72 thru 83)
	72 36083	1	Oil Drain Plug
	75 27897	1	Oil Seal
	80 30574A	1	Governor Shaft
	81 30590A	1	Washer
	82 30591	1	Governor Gear Ass'y. (Incl. 81)
	83 30588A	1	Governor Spool
86A	650488	1	Screw, 1/4-20 x 1/1/4"
	86 651054	5	Screw, 1/4-20 x 1-7/32"
	89 611004	1	Flywheel Key
	90 611112	1	Flywheel
	92 650815	1	Belleville Washer
	93 650816	1	Flywheel Nut
100	34443B	1	Solid State Ignition
101	610118	1	Spark Plug Cover
103	651007	2	Screw, Torx T-15, 10-24 x 15/16"
110	37047	1	Ground Wire
119	36719	1	* Cylinder Head Gasket
120	36728	1	Cylinder Head
125	36471	1	Exhaust Valve (Std.) (Incl. 151)
125	36472	1	Exhaust Valve (1/32" OS) (Incl. 151)
126	37711	1	Intake Valve (Std.) (Incl. 151)
126	29315C	1	Intake Valve (1/32" OS) (Incl. 151)
130A	650999	1	Screw, 5/16-18 x 2-41/64"
130	650912	4	Screw, 5/16-18 x 1-1/2"
135	34645	1	Resistor Spark Plug (RN4C)
150	31672	2	Valve Spring
151	31673	2	Valve Spring Cap
153	36649	1	Push Rod Guide
154	650913	1	Rocker Arm Stud

Ref #	Part Number	Qty	Description
155	35624A	1	Rocker Arm
157	650914	1	Lock Nut
158	36629	2	Push Rod
159	35626	1	* Rocker Arm Cover Gasket
160	35627	1	Rocker Arm Housing
161	30063	4	Screw, Torx T-30, 1/4-20 x 1/2"
178	29752	2	Nut & Lock Washer, 1/4-28
182	30088A	2	Screw, 1/4-28 x 1"
184	26756	1	* Carburetor Gasket
185	36579	1	Intake Pipe
186	36255	1	Governor Link
187	36580	1	Spacer
189A	650356	1	Screw, Torx T-30, 1/4-20 x 3/8"
189	650839	2	Screw, 1/4-20 x 3/8"
191	36734	1	S.E. Brake Ass'y. (Incl. 195)
195	610973	1	Terminal
200	35999	1	Control Bracket
207	36200	1	Throttle Link
209	30200	2	Screw, 10-24 x 9/16"
223	651044	1	Screw, 1/4-20 x 2-25/32"
224	36581	2	* Intake Pipe Gasket
238	650937	2	Screw, 10-32 x 43/64"
239	35848	1	* Air Cleaner Gasket
240	37015	1	Air Cleaner Body (Incl. 239 & 243B)
243B	650967	2	Square Nut, M-5 x 0.8-6H
243	650966	2	Screw, M-5 x 0.8-6g x 2-7/16"
245	35500	1	Air Cleaner Filter
250	37016	1	Air Cleaner Cover
260	37012	1	Blower Housing
261	30063	2	Screw, Torx T-30, 1/4-20 x 1/2"
262	650831	2	Screw, 1/4-20 x 1/2"
276	36949	1	Locking Plate
277	651039	2	Screw, 1/4-20 x 2-47/64"
279A	27513	1	Lock Washer
285	35000A	1	Starter Cup
287	650926	2	Screw, 8-32 x 21/64"
290	29774	1	Fuel Line
292	26460	2	Fuel Line Clamp
300B	37018	1	Cover
301	36246	1	Fuel Cap
305	37014	1	Oil Fill Tube
306	36996	1	* "O" Ring
307	35499	1	"O"-Ring
309	650562	1	Screw, 10-32 x 1/2"
310	35507	1	Dipstick
313	34080	1	Spacer
341A	36578	1	Blower Housing Support Bracket
359	36955	1	Starter Guard
370A	36261	2	Lubrication Decal
380	640120	1	Carburetor (Incl. 184)
390	590702	1	Rewind Starter (NOTE: This engine could hav been built with 590739 starter).
400	37825	1	* Gasket Set (Incl. items marked PK i n notes)
420	730225	1	SAE 30 4-Cycle Engine Oil (Quart)

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

VIEW 2 OF 3






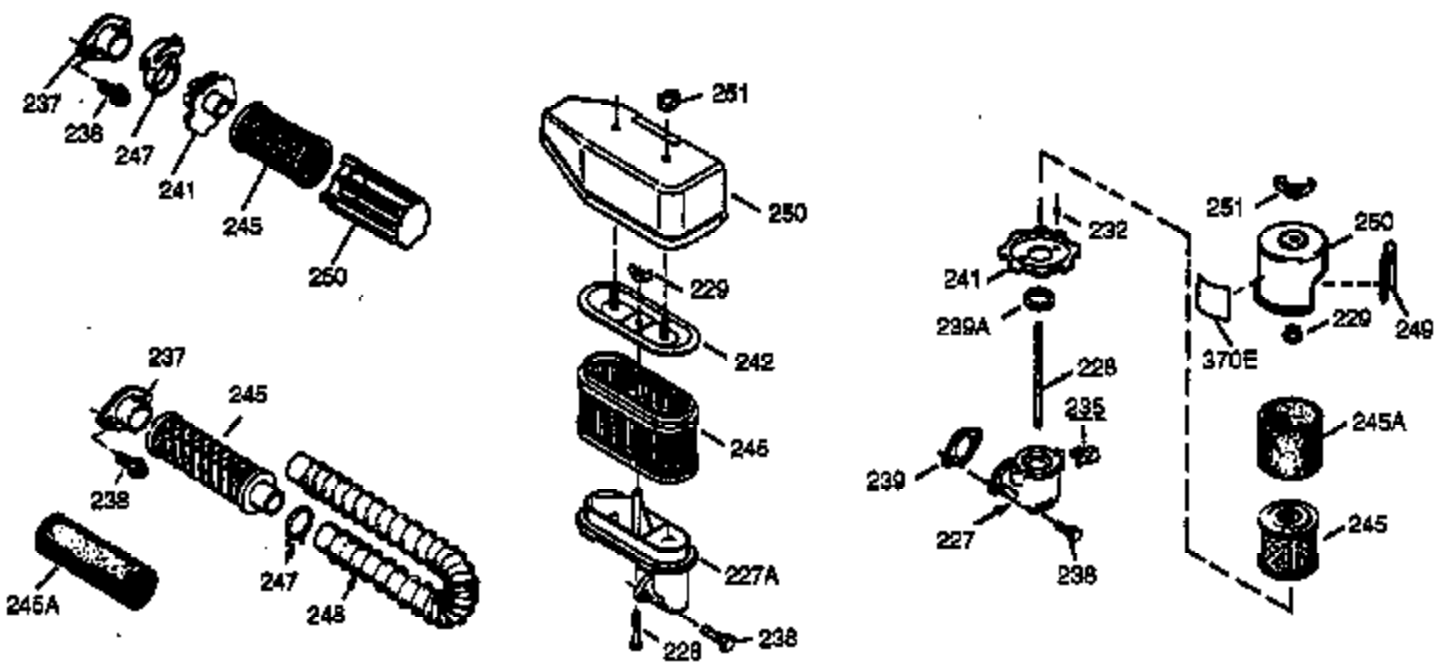
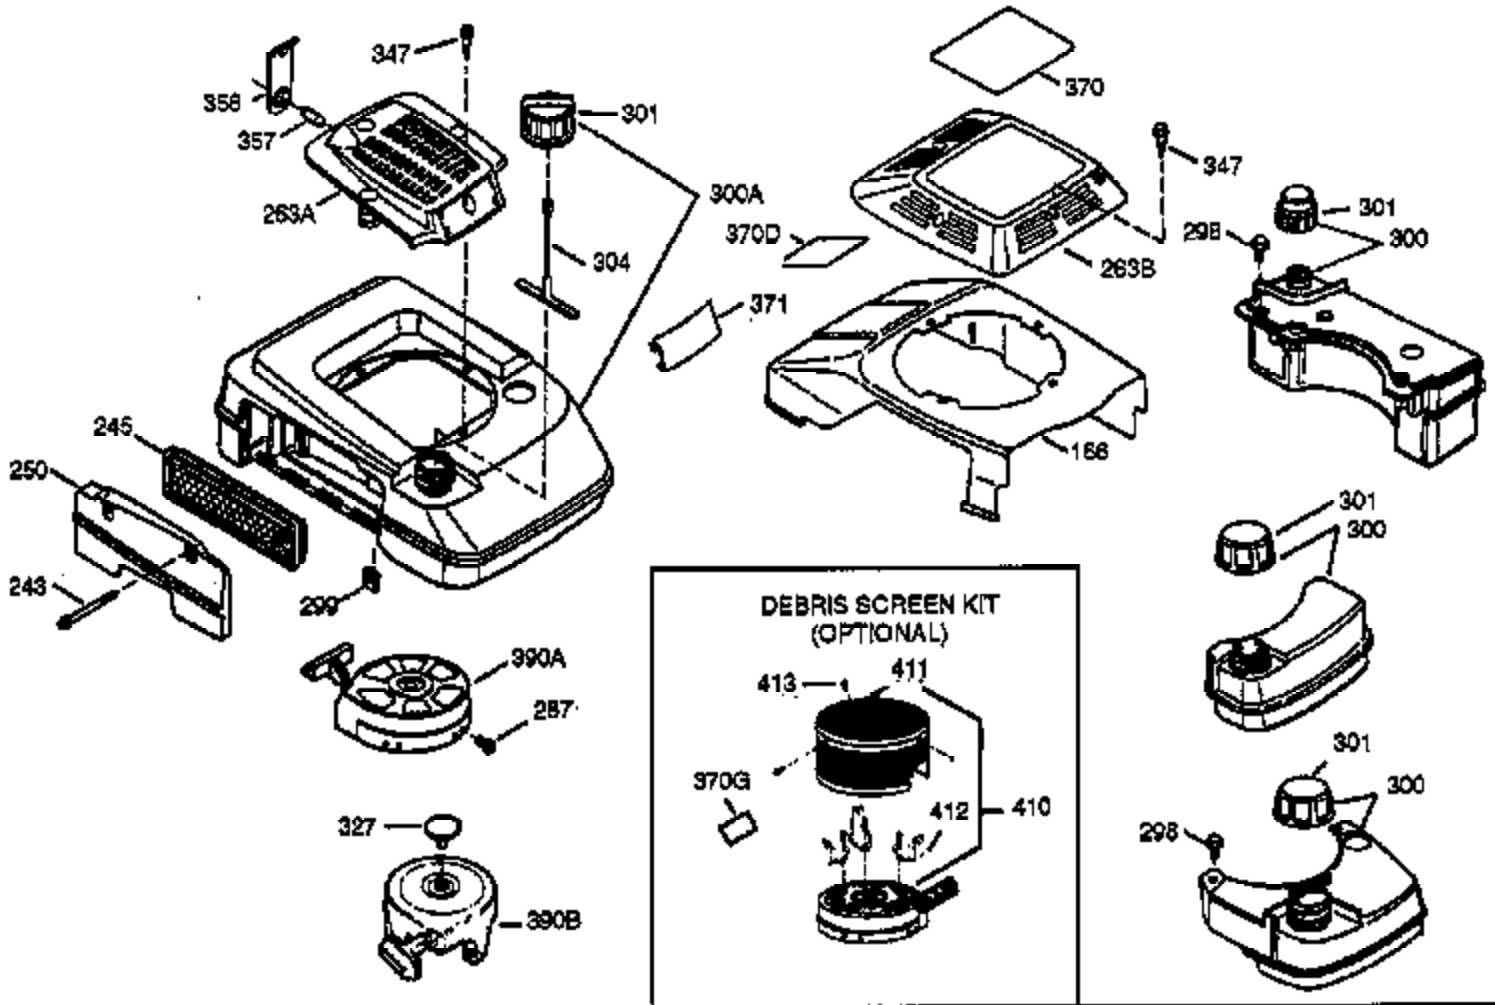


Engine Parts List #2

Ref #	Part Number	Qty	Description
60	37133	1	Blower Housing Extension
65	650735	2	Screw, 10-24 x 3/8"
86A	650488	1	Screw, 1/4-20 x 1/1/4"
189A	650356	1	Screw, Torx T-30, 1/4-20 x 3/8"
238	650937	2	Screw, 10-32 x 43/64"
239	35848	1	* Air Cleaner Gasket
240	37015	1	Air Cleaner Body (Incl. 239 & 243B)
243	650966	2	Screw, M-5 x 0.8-6g x 2-7/16"
243B	650967	2	Square Nut, M-5 x 0.8-6H
245	35500	1	Air Cleaner Filter
250	37016	1	Air Cleaner Cover
263A	37013	1	Starter Grill
279A	27513	1	Lock Washer
287	650926	2	Screw, 8-32 x 21/64"
298	28763	3	Screw, 10-32 x 35/64"
300	37020	1	Fuel Tank (Incl. 292 & 301)
300B	37018	1	Cover
301	36246	1	Fuel Cap
359	36955	1	Starter Guard

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

VIEW 3 OF 3

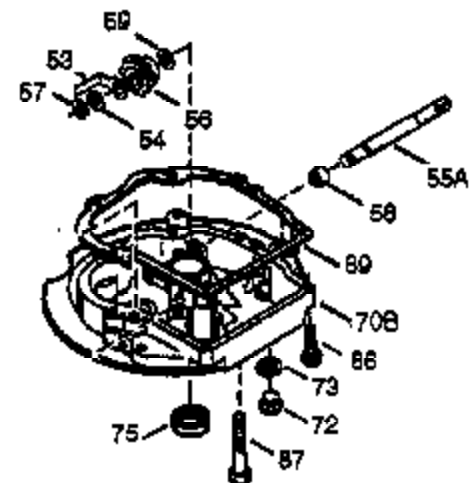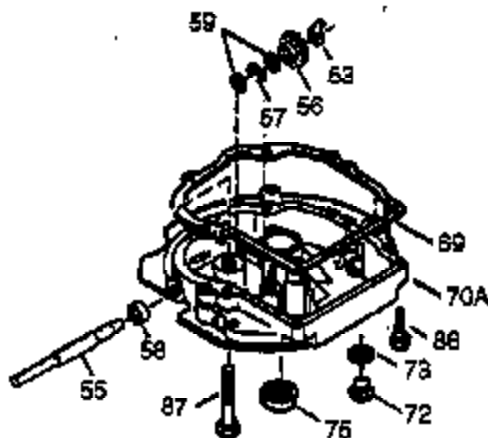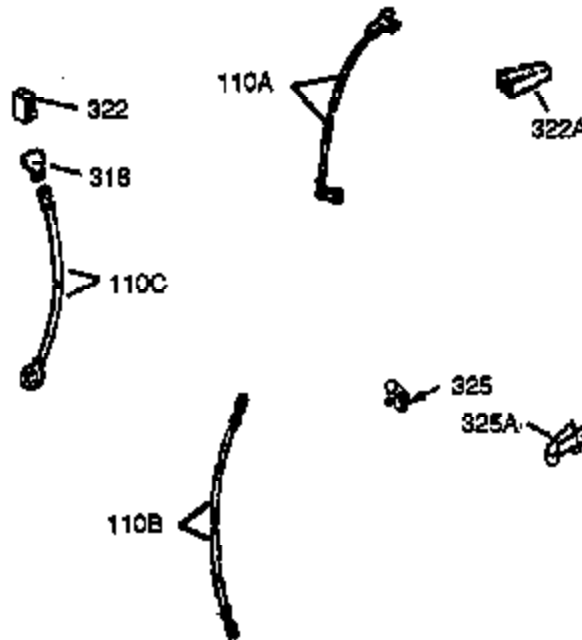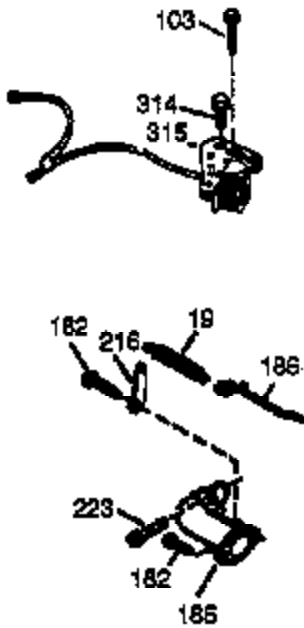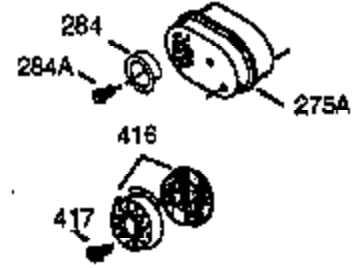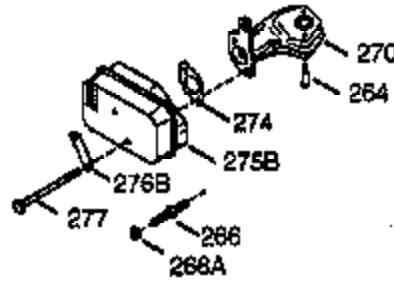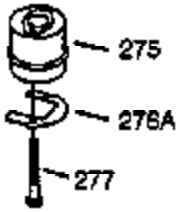

Ref #	Part Number	Qty	Description
19	36796	1	Extension Spring
60	37133	1	Blower Housing Extension
65	650735	2	Screw, 10-24 x 3/8"
69	37797	1	Mounting Flange Gasket
72	36083	1	Oil Drain Plug
75	27897	1	Oil Seal
86A	650488	1	Screw, 1/4-20 x 1/1/4"
86	651054	5	Screw, 1/4-20 x 1-7/32"
103	651007	2	Screw, Torx T-15, 10-24 x 15/16"
182	30088A	2	Screw, 1/4-28 x 1"
185	36579	1	Intake Pipe
186	36255	1	Governor Link
189A	650356	1	Screw, Torx T-30, 1/4-20 x 3/8"
223	651044	1	Screw, 1/4-20 x 2-25/32"
240	37015	1	Air Cleaner Body (Incl. 239 & 243B)
243B	650967	2	Square Nut, M-5 x 0.8-6H
266	651040	1	Stud
266A	650864	1	Nut, 1/4-20
275	37088	1	Muffler
277	651039	2	Screw, 1/4-20 x 2-47/64"
279A	27513	1	Lock Washer
300B	37018	1	Cover
359	36955	1	Starter Guard