


ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

VIEW 1 OF 2

MODEL and SERIAL  
NUMBERS HERE







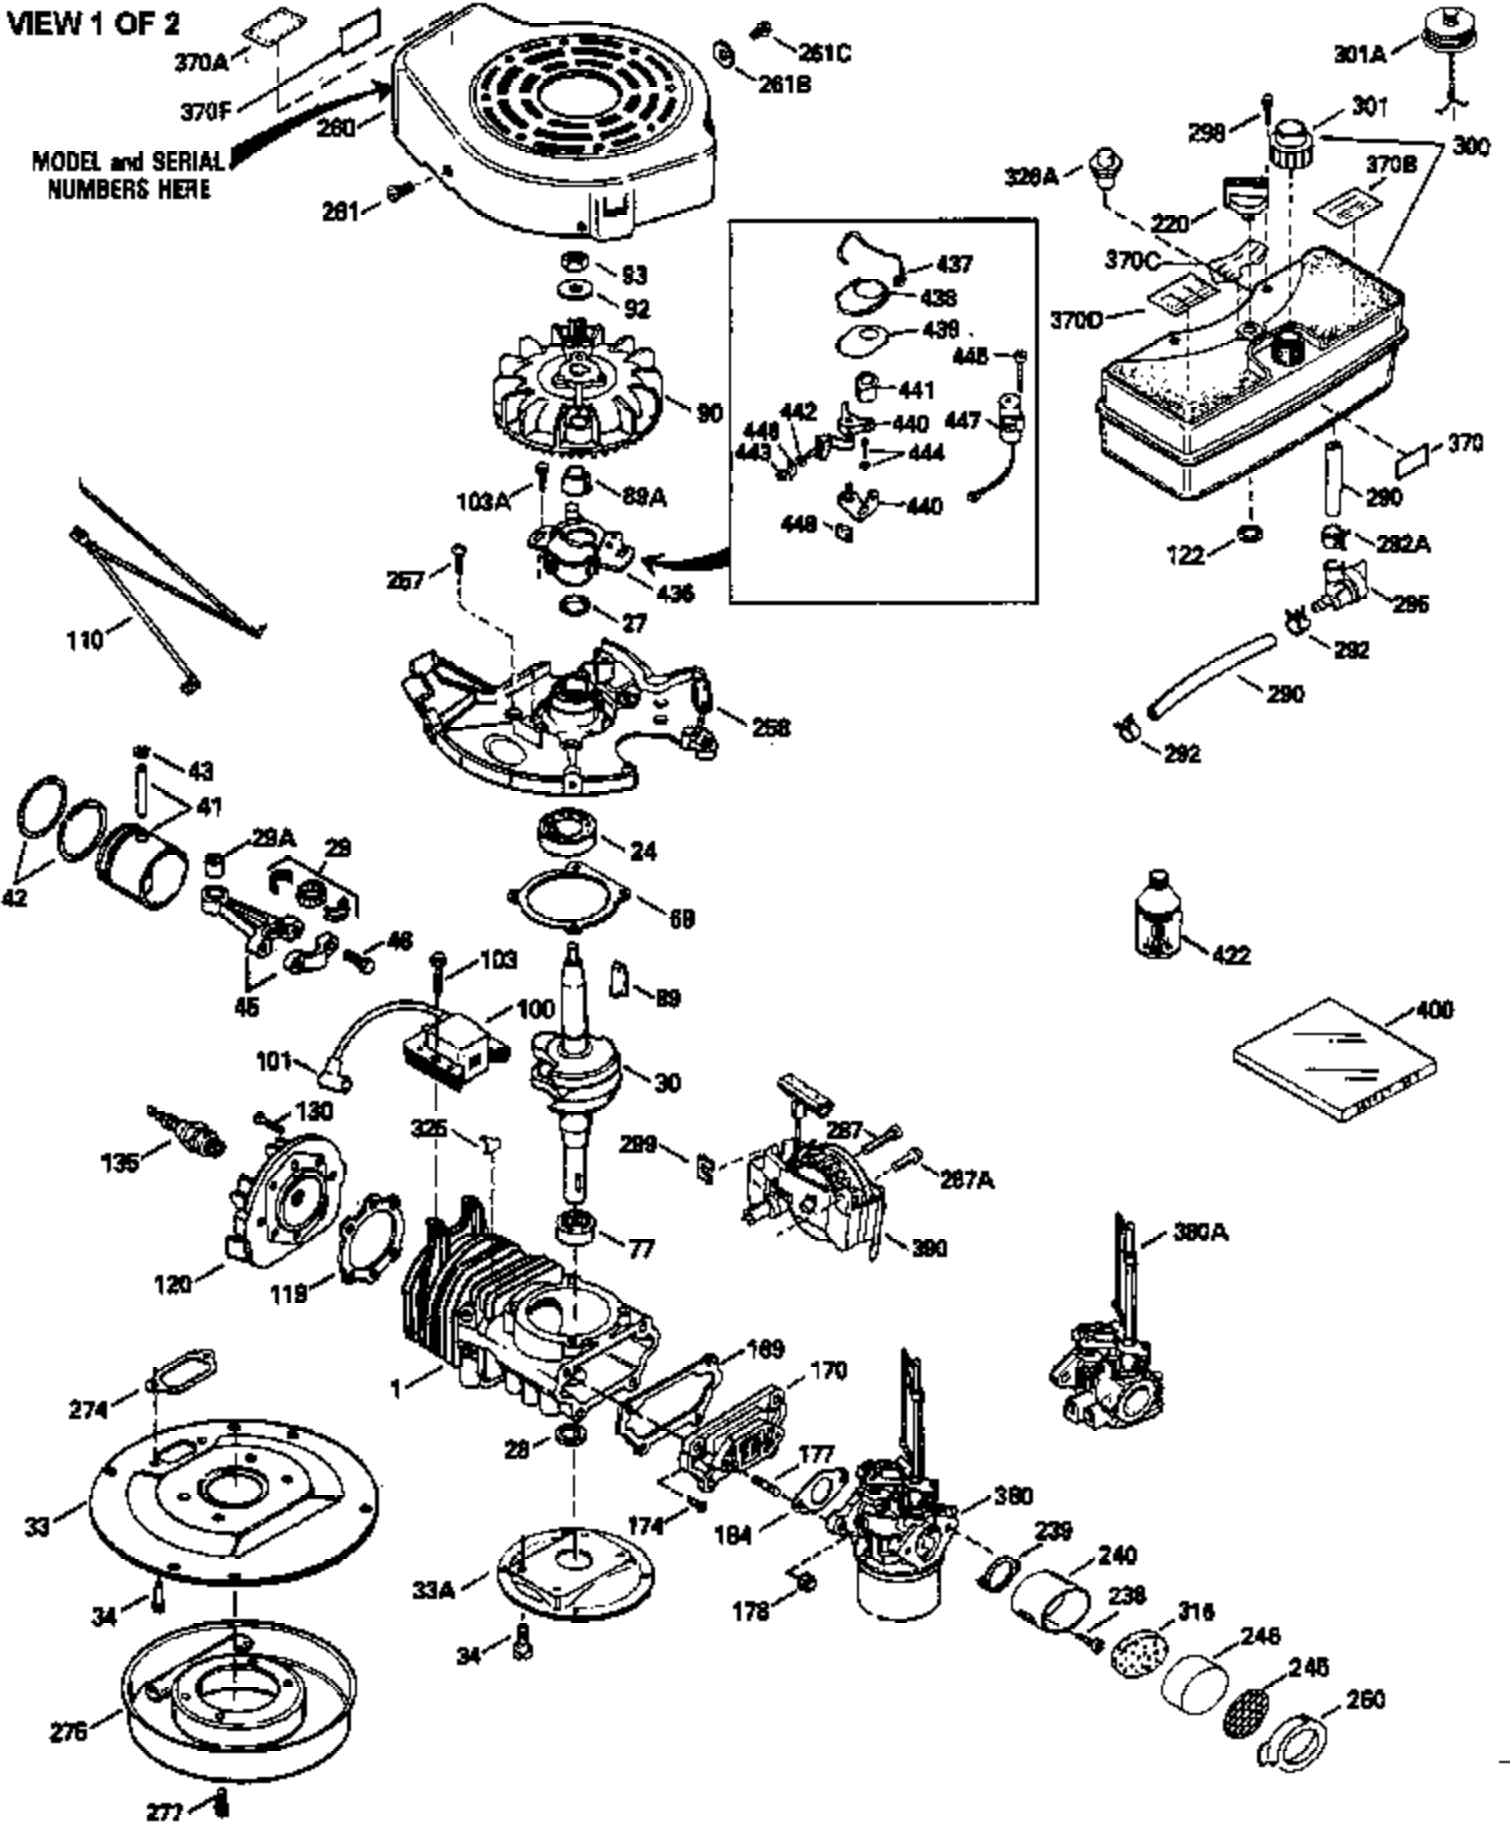


Ref #	Part Number	Qty	Description
	1		Cylinder (Order s/b if replacement is req.)
	24 530110		Ball Bearing
	27 510319		Oil Seal
	28 28427		Oil Seal
	29 530150		Needle Bearing & Liner Set (37 Needle s)
	29A 530104A		Cartridge Bearing
	30 290555		Crankshaft
	30 330177		Adapter Plate (8" B.C.)
	34 650797		Screw, 5/16-18 x 1/2"
	41 310272A		Piston & Pin Ass'y. (.010" OS)
	41 310283A		Piston & Pin Ass'y. (Std.)(Incl. 43)
	42 310190		Ring Set (Std.)
	42 310273		Ring Set (.010" OS)
	43 310167		Piston Pin Retaining Ring
	45 310235B		Connecting Rod Ass'y. (Incl. 29, 29A & 46)
	46 650633		Connecting Rod Bolt
	69 510292A		* Cylinder Cover Gasket
	77 780097		Cartridge Bearing
	89A 611032		Adapter Sleeve
	90 611112		Flywheel
	92 650815		Belleville Washer
	93 650390		Flywheel Nut
	100 34443A		Solid State Ignition (Incl. 101)
	100 730207		Magneto to Solid State Conversion Kit (Includes solid state module, solid state flywheel key, and instructions.)(Use as required on external ignition engines only.)
	101 610118		Spark Plug Cover
	103 650814		Screw, Torx T-15, 10-24 x 1"
	110 611061		Ground Wire
	119 510274A		* Cylinder Head Gasket
	120 250240B		Cylinder Head
	130 650477		Screw, Torx T-30, 1/4-20 x 3/4"
	135 33636		Resistor Spark Plug
	169 510323A		* Cover Plate Gasket
	170 470152A		Reed & Cover Plate (Incl. 178)
	174 650579		Screw, Torx T-25, 10-24 x 1/2"
	178 29752		Nut & Lock Washer, 1/4-28
	184 510110A		* Carburetor Gasket
	192 34966		Brake Control Link
	257 650911		Screw, Torx T-30, 1/4-20 x 5/8"
	258 350427		Blower Housing Base (Incl. 27)
	260 350418		Blower Housing
	261 650958		Screw, 114-20 x 7/16"
	261B 650854		Washer
	261C 650773		Screw, 1/4-20 x 1/2"
	274 510314		Exhaust Gasket
	275 390300		Muffler
	277 650911		Screw, Torx T-30, 1/4-20 x 5/8"
	290 29774		Fuel Line
	292 26460		Fuel Line Clamp
	295 35857		Fuel Shut-Off Valve
	298 650803		Screw, 10-32 x 7/8"
	300 410241		Fuel Tank (Incl. 301)
	301A 410224		Fuel Cap
	326A 570663		Fuel Tank Plug
	370A 550223		Name Decal
	370F 35977		Caution Decal

Ref #	Part Number	Qty	Description
370D	550212		Fuel Mix Decal
370B	550213		Warning Decal
380	632342		Carburetor (Incl. 184) (Refer to Division 5, Section A, page A1-42 or Fiche 23B, Grid F-13 for breakdown)
400	510295A		* Gasket Set (Incl. items marked *)
422	730227A		2-Cycle Oil (8 oz.)

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

VIEW 2 OF 2

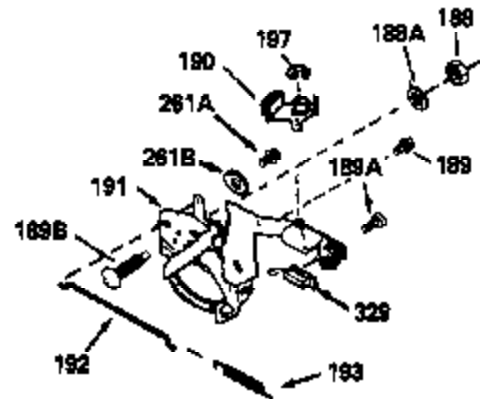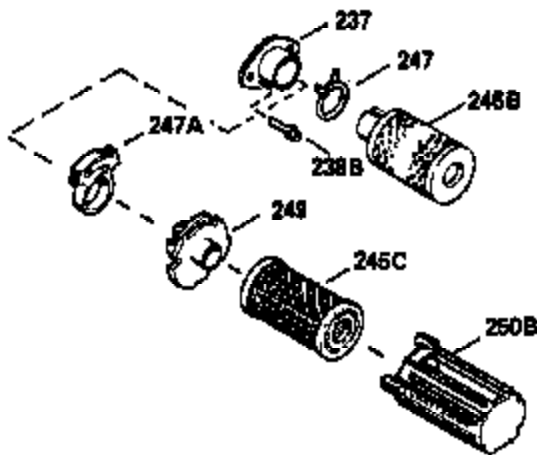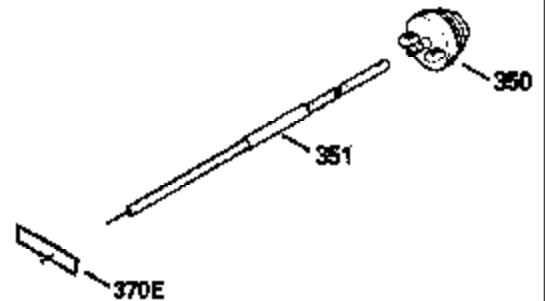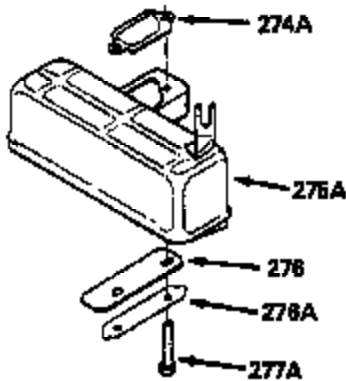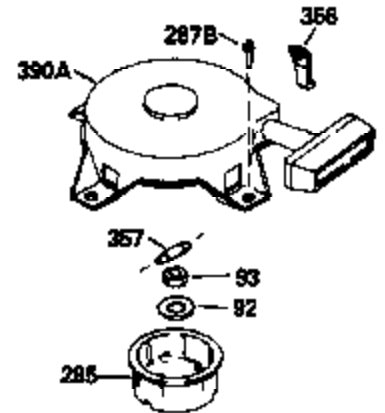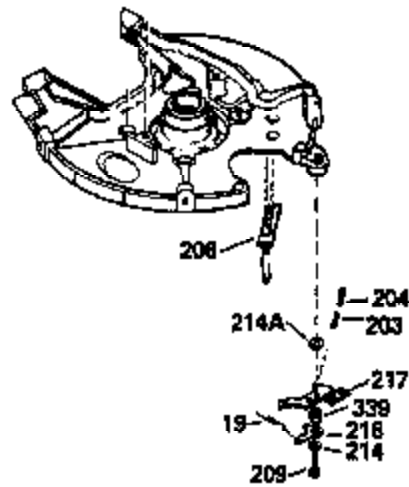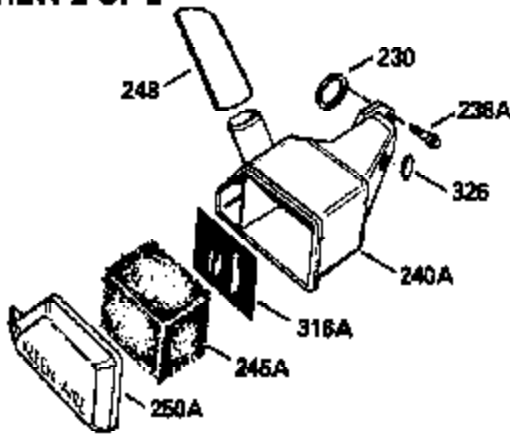

Ref #	Part Number	Qty	Description
	92 650815		Belleville Washer
	93 650390		Flywheel Nut
	189A 650911		Screw, Torx T-30, 1/4-20 x 5/8" (As r eq.)
	189 650773		Screw, 1/4-20 x 1/2"
	190 35831		Brake Lever
	191 570671		S.E. Brake Bracket
	192 34966		Brake Control Link
	193 34965		Brake Spring
	197 32309		Retaining Ring
	230 34338		Air Cleaner Gasket
	238A 650806		Screw, 10-32 x 5/8"
	240A 450234		Air Cleaner Body
	245A 450236		Air Cleaner Element
	248 33008		Air Cleaner Tube
	250A 33007		Air Cleaner Cover
	261A 650853		Screw, Torx T-30, 1/4-20 x 1/2"
	261B 650854		Washer
	285 590551		Starter Cup
	287B		Rivet (Can be purchased locally)
	316A 450235		Mesh Screen
	326 450237		Button Plug
	329 610973		Terminal
	350 570682		Primer Bulb
	351 570656		Primer Line
	370E 36260		Primer Decal
	390A 590537		Rewind Starter (Refer to Division 5,SectionC, page 25 or Fiche 23B, Grid G-11 for breakdown)