


ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

VIEW 1 OF 2







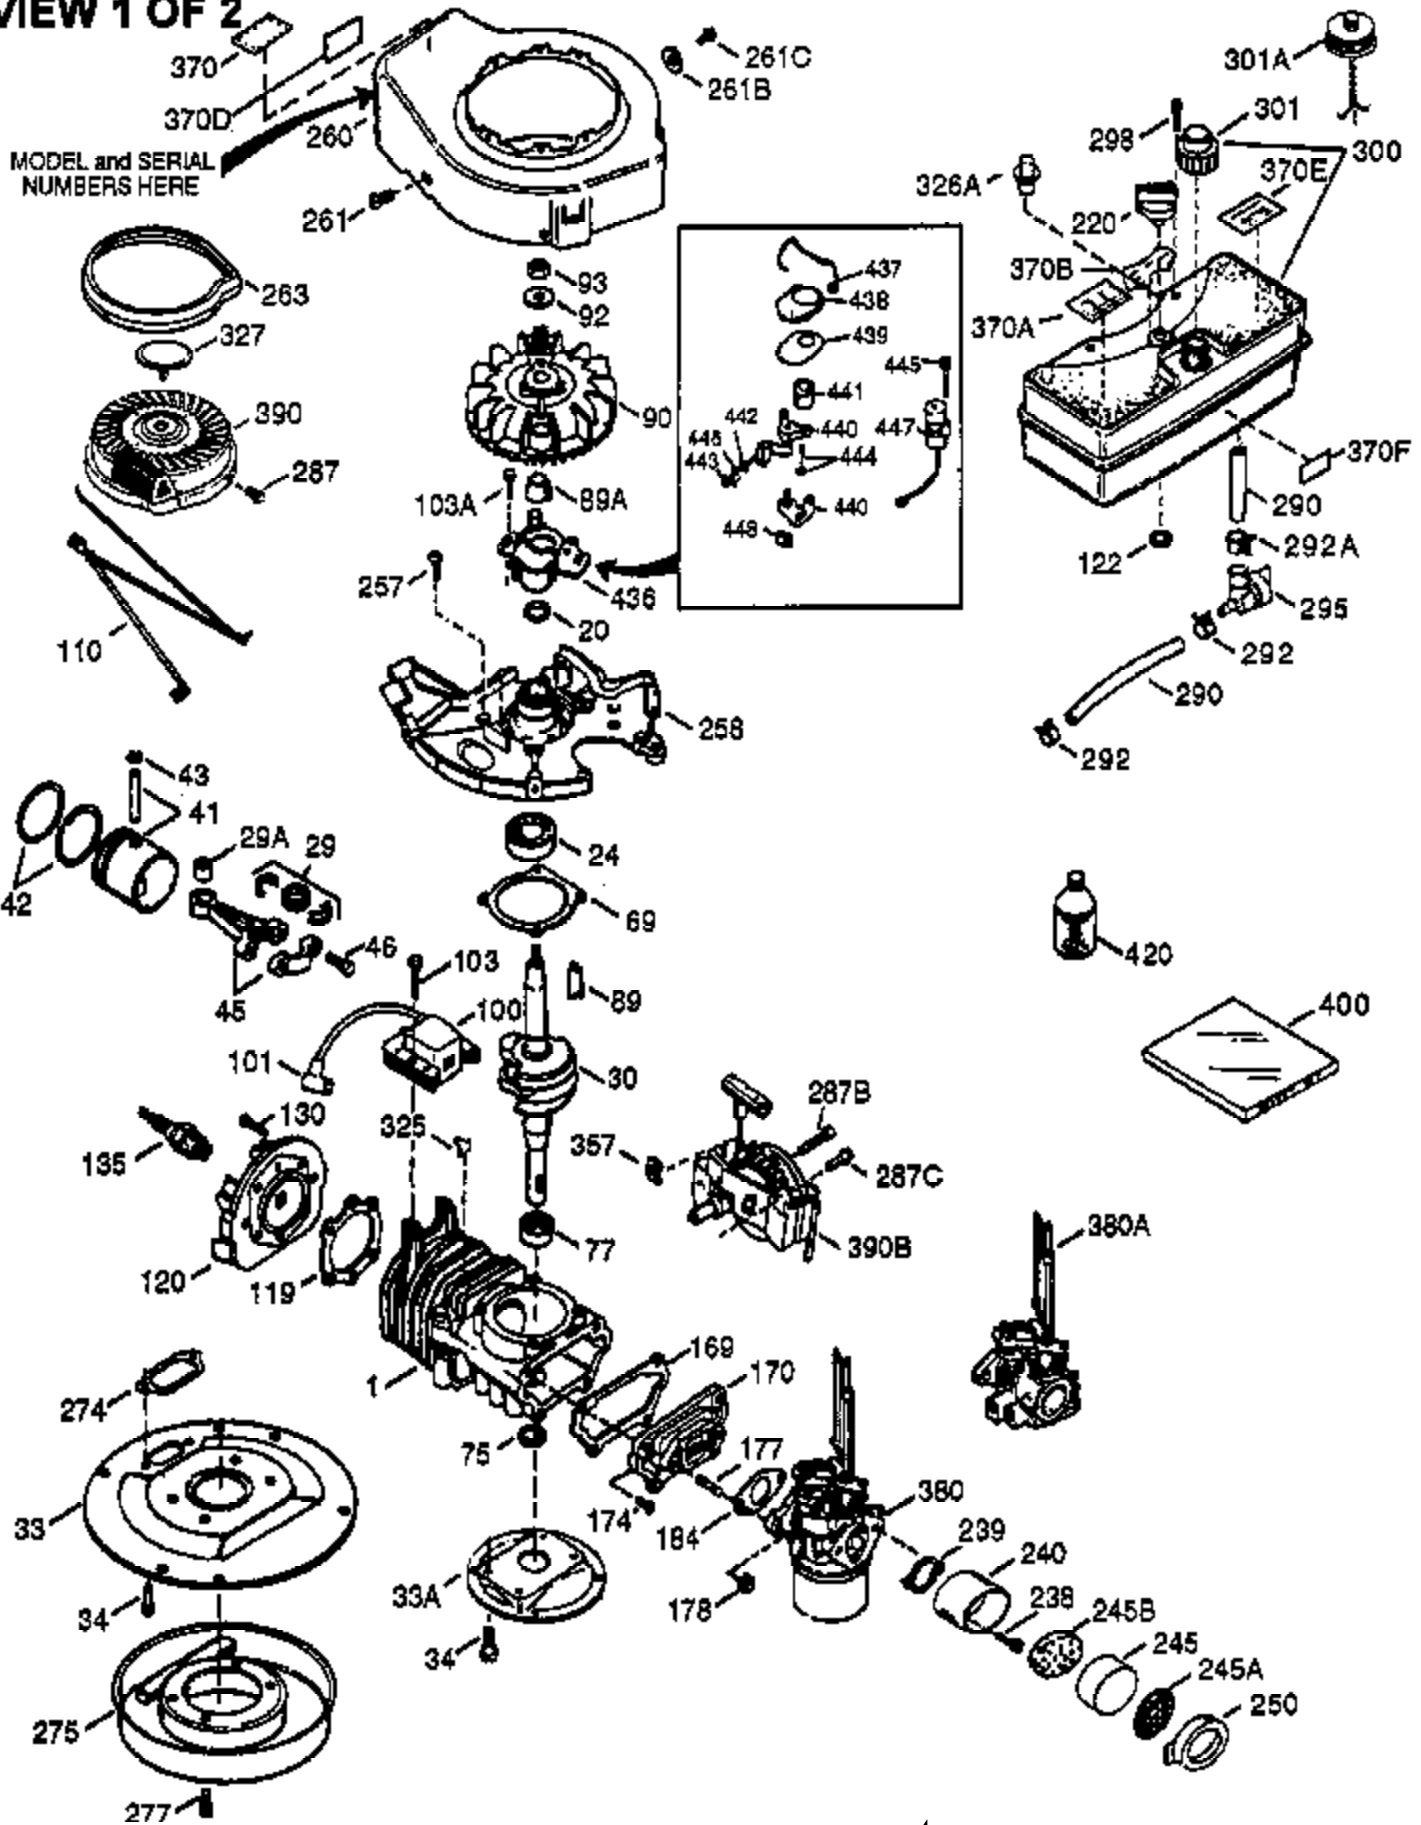


Ref #	Part Number	Qty	Description
	1 0	1	Cylinder (Order S/B if replacement is needed)
	20 510319	1	Oil Seal
	24 530110	1	Ball Bearing
	29 530150	1	Needle Bearing & Liner Set (37 Needle s)
	29A 530104A	1	Cartridge Bearing
	30 290555	1	Crankshaft
	33 330177	1	Adapter Plate
	34 650797	4	Screw, 5/16-18 x 1/2"
	41 310283A	1	Piston & Pin Ass'y. (Incl. 43)
	42 310190	2	Ring Set
	43 310167	2	Piston Pin Retaining Ring
	45 310235B	1	Connecting Rod Ass'y. (Incl. 29, 29A & 46)
	46 650633	4	Connecting Rod Bolt
	69 510292A	1	* Cylinder Cover Gasket
	75 28427	1	Oil Seal
	77 780097	1	Cartridge Bearing
	89A 611032	1	Adapter Sleeve
	90 611112	1	Flywheel
	92 650815	1	Belleville Washer
	93 650390	1	Flywheel Nut
	100 34443A	1	Solid State Ignition
	101 610118	1	Spark Plug Cover
	103 650814	2	Screw, Torx T-15, 10-24 x 1"
	110 611061	1	Ground Wire
	119 510274A	1	* Cylinder Head Gasket
	120 250240B	1	Cylinder Head
	130 650477	6	Screw, Torx T-30, 1/4-20 x 3/4"
	135 33636	1	Resistor Spark Plug (RJ17LM)
	169 510323A	1	* Cover Plate Gasket
	170 470152A	1	Reed & Cover Plate (Incl. 178)
	174 650579	4	Screw, Torx T-25, 10-24 x 1/2"
	178 29752	2	Nut & Lock Washer, 1/4-28
	184 510110A	1	* Carburetor Gasket
	238 650806	2	Screw, 10-32 x 5/8"
	240 450234	1	Air Cleaner Body
	245B 450235	1	Air Cleaner Filter
	245 450236	1	Air Cleaner Filter
	250 33007	1	Air Cleaner Cover
	257 650911	4	Screw, Torx T-30, 1/4-20 x 5/8"
	258 350427	1	Blower Housing Base (Incl. 20)
	260 350458	1	Blower Housing
	261 650958	3	Screw, 1/4-20 x 7/16"
	261B 650854	1	Washer
	261C 650773	1	Screw, 1/4-20 x 1/2"
	274 510314A	1	Exhaust Gasket
	275 390300	1	Muffler
	277 650911	2	Screw, Torx T-30, 1/4-20 x 5/8"
	287 650926	4	Screw, 8-32 x 21/64"
	290 29774	2	Fuel Line
	292 26460	4	Fuel Line Clamp
	295 35857	1	Fuel Shut-Off Valve
	298 650803	2	Screw, 10-32 x 7/8"
	300 410241	1	Fuel Tank (Incl. 301)
	301 410224	1	Fuel Cap
	326A 570663	1	Fuel Tank Plug
	327 35392	1	Starter Plug
	370D 550213	1	Warning Decal
	370E 34387	1	Instruction Decal

Ref #	Part Number	Qty	Description
370	550223	1	Name Decal
370B	550212	1	Fuel Mix Decal
370A	36260	1	Primer Decal
380	632342	1	Carburetor (Incl. 184)
390	590688	1	Rewind Starter
400	510295A	1	* Gasket Set (Incl. items marked PK i n notes) (Incl. one each of part #'s: 510110A, 510217A, 510227A, 510268A, 510270A, 510274A, 510292A, 510323A)
420	730227A	1	2-Cycle Oil (8 oz.)

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

VIEW 2 OF 2

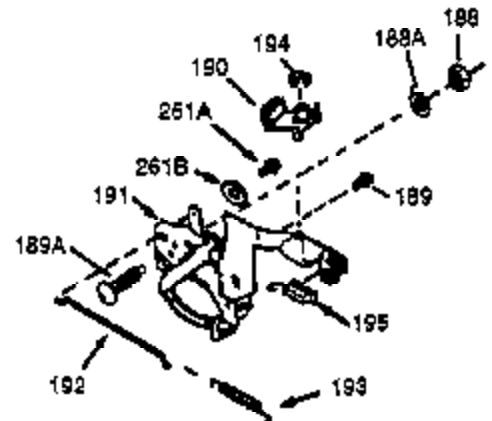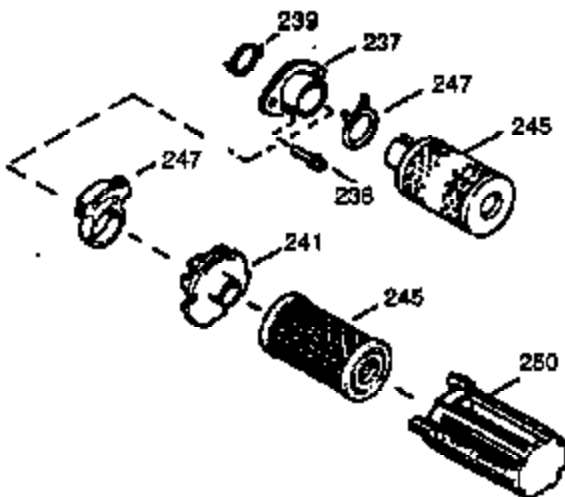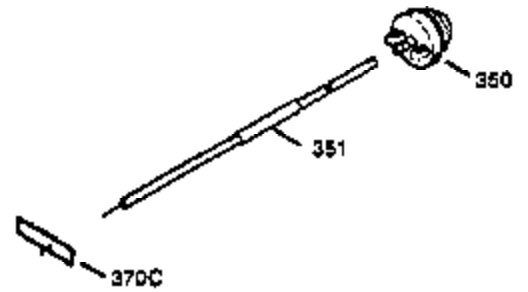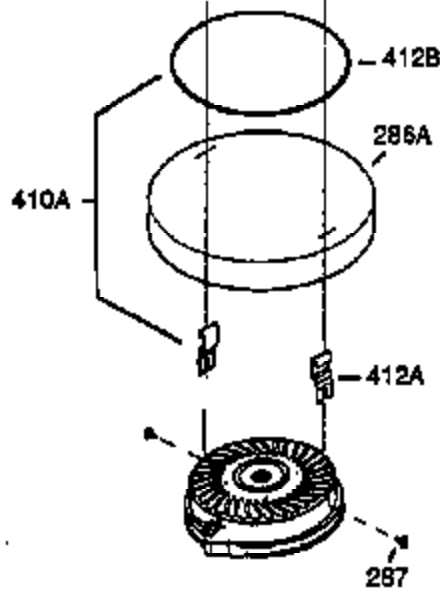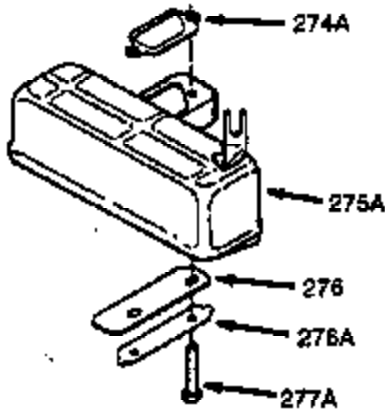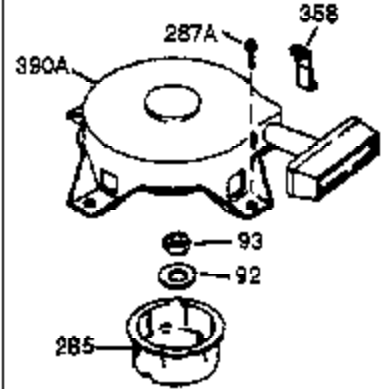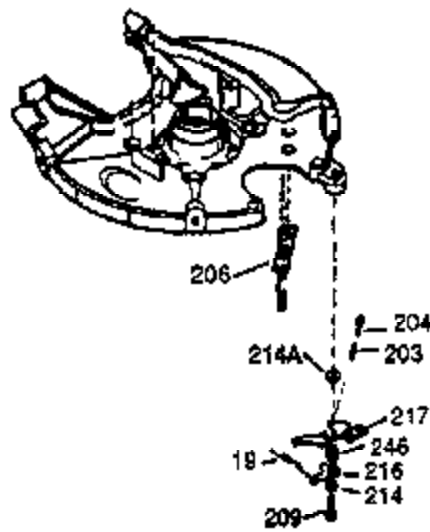

Ref #	Part Number	Qty	Description
92	650815	1	Belleville Washer
93	650390	1	Flywheel Nut
189	650773	1	Screw, 1/4-20 x 1/2"
190	35831	1	Brake Lever
191	570671	1	S.E. Brake Bracket (Incl. 195)
192	34966	1	Brake Control Link
193	34965	1	Brake Spring
194	32309	1	Retaining Ring
195	610973	1	Terminal
230	34338	1	Air Cleaner Gasket
238	650806	2	Screw, 10-32 x 5/8"
240	450234	1	Air Cleaner Body
245	450236	1	Air Cleaner Filter
245B	450235	1	Air Cleaner Filter
248	33008	1	Air Cleaner Tube
250	33007	1	Air Cleaner Cover
261A	650853	1	Screw, 1/4-20 x 1/2"
261B	650854	1	Washer
285	590551	1	Starter Cup
286A	36403	1	Starter Air Cleaner
326	450237	1	Plug
350	570682	1	Primer Ass'y.
351	570656	1	Primer Line
370C	35977	1	Instruction Decal
412B	36404	1	Starter Air Cleaner Mounting Ring
412A	36405	1	Starter Air Cleaner Mounting Bracket