


ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

VIEW 1 OF 2

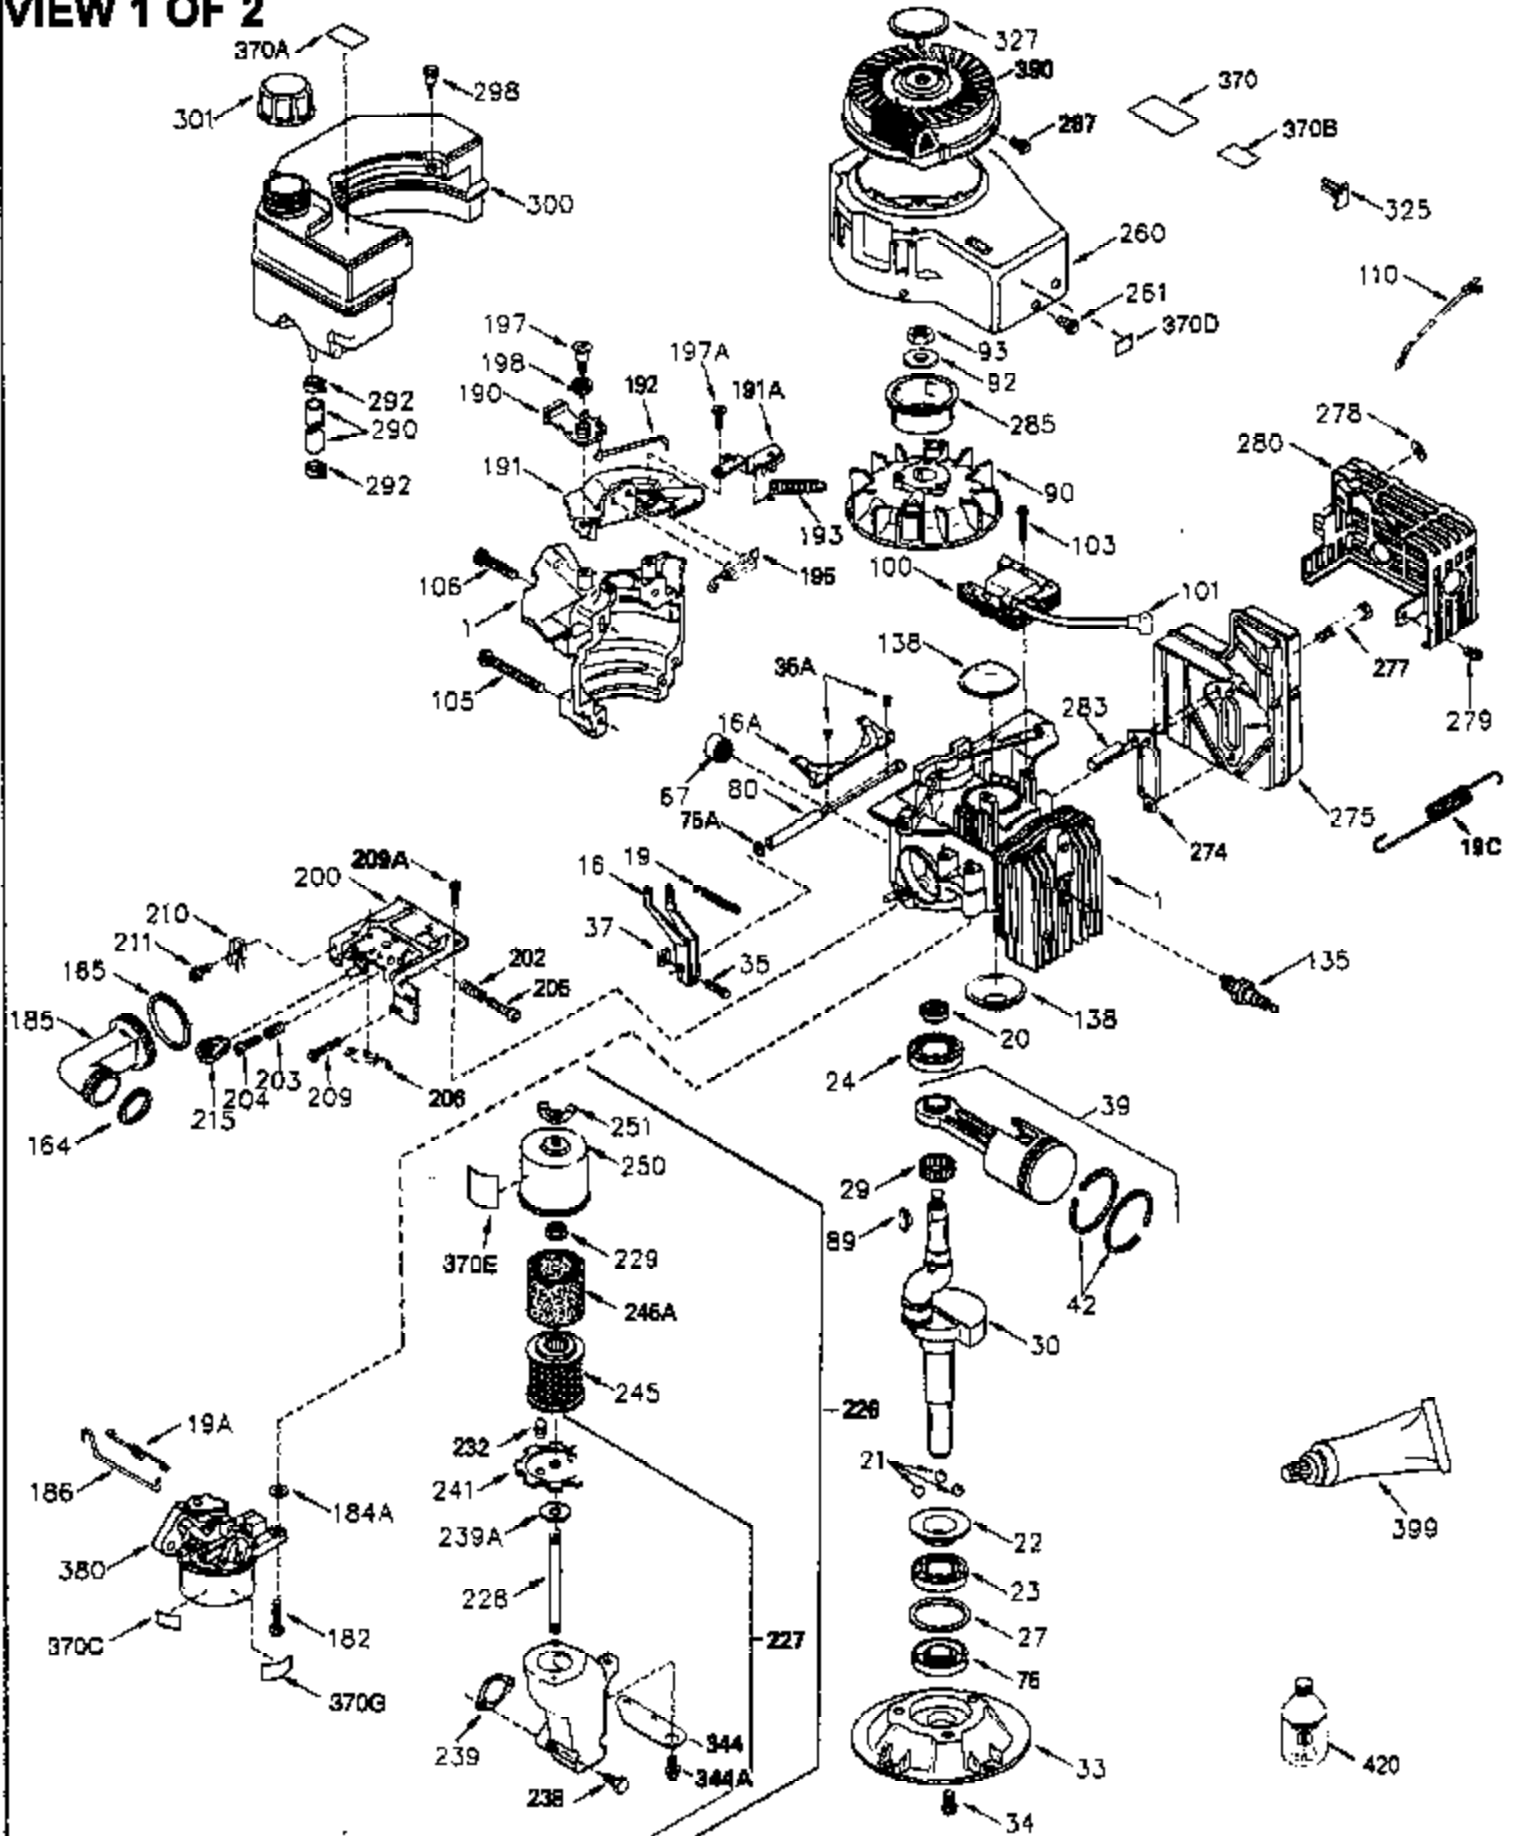

Ref #	Part Number	Qty	Description
	1 250288		Cylinder (Incl. 67A, 75, 105, 106 & 1 38)
16A	490304		Governor Lever
16	490306		Governor Lever
19	490308		Extension Spring
19A	490307		Throttle Link Spring
20	510340		Oil Seal
21	570673		Ball Bearing
22	510338		Slide Ring
23	530158		Ball Bearing
24	530161		Ball Bearing
27	530159		Bearing Retainer
29	530164		Bearing Strip (31 needles) (.495" lon g)
30	290573B		Crankshaft (Incl. 29)
33	330179		Adapter Plate
34	792067		Screw, 5/16-18 x 1"
35A	650506		Screw, 4-40 x 3/16"
35	29826		Screw, 10-32 x 3/4"
37	29216		Lock Nut, 10-32
39	310279B		Piston & Rod Ass'y. (Incl. 29 & 42)
42	310239		Ring Set
67A	430234		Fuel Filter (Screen) (Optional)
67	430233		Fuel Filter (Screen w/brass collar)
75A	510337		Oil Seal
75	510339		Oil Seal (P.T.O. end)
80	490305		Governor Shaft
89	611107		Flywheel Key
90	611109		Flywheel (Counterbalance)
92	650815		Belleville Washer
93	650816		Flywheel Nut
100	34443A		Solid State Ignition
101	610118		Spark Plug Cover
103	650814		Screw, Torx T-15, 10-24 x 1"
105	650892		Screw, 5/16-18 x 2-3/16"
106	650891		Screw, 5/16-18 x 1-5/8"
110	611071		Ground Wire
135	35395		Spark Plug (RJ19LM)
138	570683		Port Cover
164	510341		"O" Ring
165	510342		"O" Ring
182	792067		Screw, 5/16-18 x 1"
184A	27110		Washer
185	570674		Intake Pipe & Reed Ass'y. (Incl. 164 & 165)
186	490309		Governor Link
200	570696A		Control Bracket (Incl. 202, 204, 205)
202	32924		Compression Spring
205	650606		Screw, 10-32 x 1-1/8"
209	650735		Screw, 10-24 x 3/8"
226	730575A		Air Cleaner Kit (Incl. 227, 229, 238, 239, 245, 245A, 250, 251 & 370B)
227	450249A		Air Cleaner Elbow Ass'y. (Incl. 228, 232, 238, 239A, 241, 344 & 344A)
228	650901		Stud, 1/4-20 x 4.89 (threaded both en ds)
229	650825		Nut & Lock Washer, 1/4-20
232			Pop Rivet (Can be purchased locally)
239A	34698A		Air Cleaner Gasket
239	27272A		Air Cleaner Gasket
241	34699		Air Cleaner Bracket

Ref #	Part Number	Qty	Description
245A	34783		Air Cleaner Filter
245	34782		Air Cleaner Filter (Incl. 229)
250	34781		Air Cleaner Cover
251	650513		Wing Nut, 1/4-20
260	350430		Blower Housing
261	650894		Screw, 5/16-18 x 5/8"
274	510343A		Exhaust Gasket
277	650893		Screw, 5/16-18 x 3-13/64"
283	390315		E.G.R. Tube
285	34449		Starter Cup
287	650926		Screw, 8-32 x 21/64"
290	29774		Fuel Line
292	26460		Fuel Line Clamp
298	650895		Screw, 10-32 x 5/8"
300	410258		Fuel Tank
301	410259A		Fuel Cap
327	35392		Starter Plug
370C	550234		Bowl Nut Decal
370	550230A		Fuel Mix Decal
370A	34686		Name Decal
370B	34704		Instruction Decal
380	632426		Carburetor (Incl. 164) (Refer to Division 5, Section A, page A6-2 or Fiche 25, Grid F-1 for breakdown)
390	590635		Rewind Starter (Refer to Division 5, Section C, page 34 or Fiche 25, Grid G-1 for breakdown)
399	510334		Gasket Eliminator (Loctite 515)
420	730227A		2-Cycle Oil (8 oz.)

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

VIEW 2 OF 2



Ref #	Part Number	Qty	Description
67A	430234		Fuel Filter (Screen) (Optional)
200	570696A		Control Bracket (Incl. 202, 204, 205)
202	32924		Compression Spring
204A	650926		Screw, 8-32 x 21/64"
205	650606		Screw, 10-32 x 1-1/8"
209	650735		Screw, 10-24 x 3/8"
238A	650940		Screw, 10-32 x 3/4"
245A	34783		Air Cleaner Filter
245	34782		Air Cleaner Filter (Incl. 229)
275A	390316		Muffler (Discharge toward spark plugend) (w/glass fiber packing)
286	35596		Debris Screen
287	650926		Screw, 8-32 x 21/64"
290	29774		Fuel Line
292A	430232		Fuel Line Clamp
292	26460		Fuel Line Clamp
295	430228		Fuel Shut-off Valve
296	34279B		Fuel Filter
370F	34387		Instruction Decal
390	590635		Rewind Starter (Refer to Division 5, Section C, page 34 or Fiche 25, Grid G-1 for breakdown)
410	730574		Debris Screen Kit (Incl.286,412,413 & 370F)
412	35597		Debris Screen Bracket
413	650910		Screw, 8-32 x 1/4"
416	390309		Spark Arrestor Kit (Can be used on an y model)