

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

**VIEW 1 OF 2**



## Engine Parts List #1

Ref #	Part Number	Qty	Description
	1 250288		Cylinder (Incl. 67A, 75, 105, 106 & 1 38)
16A	490304		Governor Lever
16	490306		Governor Lever
19	490308		Extension Spring
19A	490307		Throttle Link Spring
20	510340		Oil Seal
21	570673		Ball Bearing
22	510338		Slide Ring
23	530158		Ball Bearing
24	530161		Ball Bearing
27	530159		Bearing Retainer
29	530164		Bearing Strip (31 needles) (.495" lon g)
30	290574A		Crankshaft (Incl. 29)
33	330179		Adapter Plate
34	792067		Screw, 5/16-18 x 1"
35	29826		Screw, 10-32 x 3/4"
35A	650506		Screw, 4-40 x 3/16"
37	29216		Lock Nut, 10-32
39	310277B		Piston & Rod Ass'y. (Incl. 29 & 42)
42	310278		Ring Set
67	430233		Fuel Filter (Screen w/brass collar)
67A	430234		Fuel Filter (Screen) (Optional)
75	510339		Oil Seal (P.T.O. end)
75A	510337		Oil Seal
80	490305		Governor Shaft
89	611107		Flywheel Key
90	611109		Flywheel (Counterbalance)
92	650815		Belleville Washer
93	650816		Flywheel Nut
100	34443A		Solid State Ignition
101	610118		Spark Plug Cover
103	650814		Screw, Torx T-15, 10-24 x 1"
105	650892		Screw, 5/16-18 x 2-3/16"
106	650891		Screw, 5/16-18 x 1-5/8"
110	611106		Ground Wire
135	35395		Spark Plug (RJ19LM)
138	570683		Port Cover
164	510341		"O" Ring
165	510342		"O" Ring
182	792067		Screw, 5/16-18 x 1"
184A	27110		Washer
185	570674		Intake Pipe & Reed Ass'y. (Incl. 164 & 165)
186	490309		Governor Link
200	570681A		Control Bracket (Incl. 203, 205 & 206 )
202	32924		Compression Spring
203	31342		Compression Spring
204	650549		Screw, 5-40 x 7/16"
205	650606		Screw, 10-32 x 1-1/8"
206	610973		Terminal
209	650735		Screw, 10-24 x 3/8"
215	32410		Control Knob
226	730575A		Air Cleaner Kit (Incl. 227, 229, 238, 239, 245, 245A, 250, 251 & 370B)
227	450249A		Air Cleaner Elbow Ass'y. (Incl. 228, 232, 238, 239A, 241, 344 & 344A)
228	650901		Stud, 1/4-20 x 4.89 (threaded both en ds)
229	650825		Nut & Lock Washer, 1/4-20

Ref #	Part Number	Qty	Description
	232		Pop Rivet (Can be purchased locally)
239A	34698A		Air Cleaner Gasket
	239	35815	Air Cleaner Gasket
	241	34699	Air Cleaner Bracket
245A	34783		Air Cleaner Filter
	245	34782	Air Cleaner Filter (Incl. 229)
	250	34781	Air Cleaner Cover
	251	650513	Wing Nut, 1/4-20
	260	350430	Blower Housing
	261	650894	Screw, 5/16-18 x 5/8"
	274	510343A	Exhaust Gasket
	277	650893	Screw, 5/16-18 x 3-13/64"
	278	28537	Washer
	279	650837	Screw, 10-32 x 1/4"
	280	390307A	Heat Shield
	283	390315	E.G.R. Tube
	285	34449	Starter Cup
	287	650926	Screw, 8-32 x 21/64"
	290	29774	Fuel Line
	292	26460	Fuel Line Clamp
	298	650895	Screw, 10-32 x 5/8"
	300	410258	Fuel Tank
	301	410259A	Fuel Cap
	327	35392	Starter Plug
370B	34704		Instruction Decal
370A	34686		Name Decal
370C	550234		Bowl Nut Decal
	370	550230A	Fuel Mix Decal
370E	550235		Control Decal
	380	632434	Carburetor (Incl. 164) (Refer to Division 5, Section A, page A6-2 or Fiche 25, Grid F-1 for breakdown)
	390	590635	Rewind Starter (Refer to Division 5, Section C, page 34 or Fiche 25, Grid G-1 for breakdown)
	399	510334	Gasket Eliminator (Loctite 515)
	420	730227A	2-Cycle Oil (8 oz.)

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

**VIEW 2 OF 2**



Ref #	Part Number	Qty	Description
67A	430234		Fuel Filter (Screen) (Optional)
200	570681A		Control Bracket (Incl. 203, 205 & 206 )
202	32924		Compression Spring
205	650606		Screw, 10-32 x 1-1/8"
209	650735		Screw, 10-24 x 3/8"
238A	650940		Screw, 10-32 x 3/4"
245A	34783		Air Cleaner Filter
245	34782		Air Cleaner Filter (Incl. 229)
275A	390316		Muffler (Discharge toward spark plugend) (w/glass fiber packing)
287	650926		Screw, 8-32 x 21/64"
290	29774		Fuel Line
292	26460		Fuel Line Clamp
296	34279B		Fuel Filter
370E	550235		Control Decal
390	590635		Rewind Starter (Refer to Division 5, Section C, page 34 or Fiche 25, Grid G-1 for breakdown)
416	390309		Spark Arrestor Kit (Can be used on an y model)