


TB525ET 41ADT5EC966
Boom & Trimmer Assembly

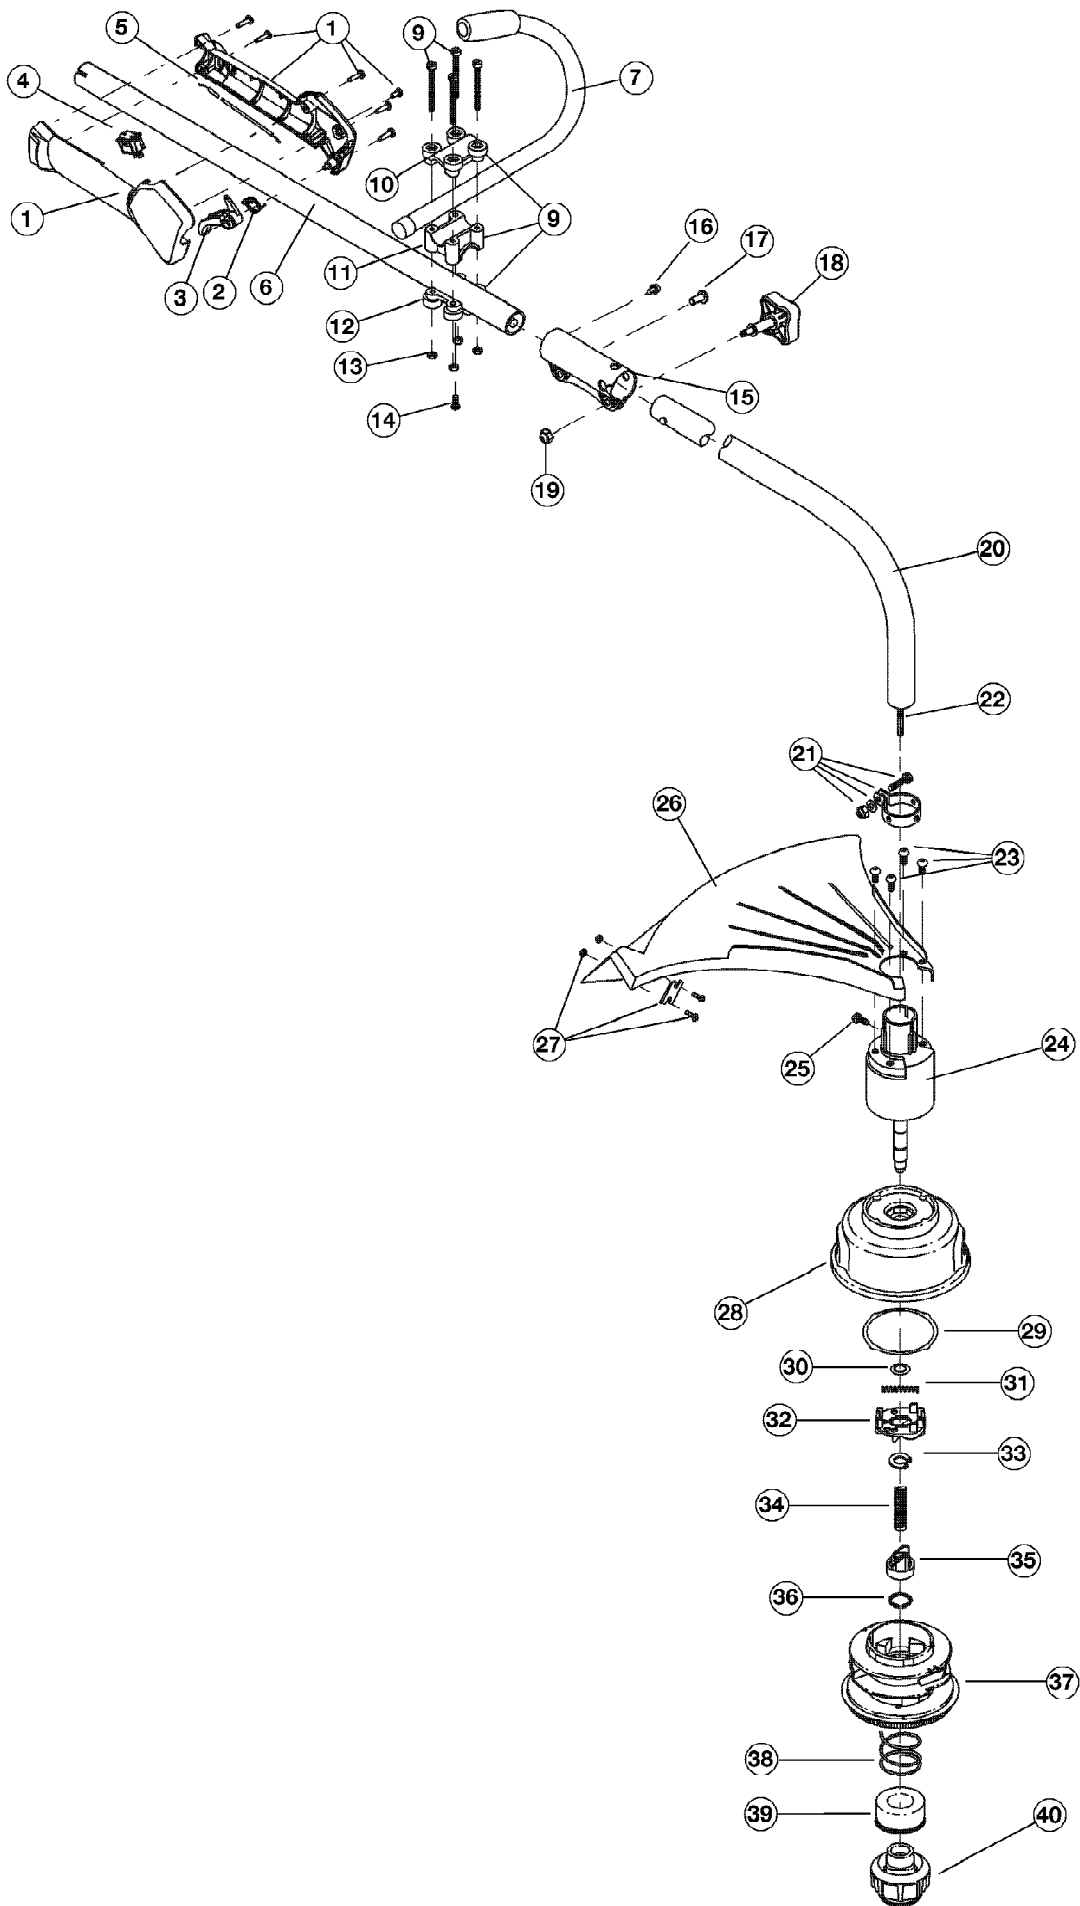


TB525ET 41ADT5EC966
Boom & Trimmer Assembly

Page 2 of 7

Ref #	Part Number	Qty	S/P/F	Description
1	753-04234	1		Throttle Housing Assembly (includes 2-4)
2	791-182690	1		Throttle Trigger Spring
3	753-04119	1	/P	Throttle Trigger
4	791-182673	1		Switch
5	753-05266	1		Throttle Cable Assembly
6	753-04236	1	/P	Upper Drive Shaft Housing Assembly
7	791-180687	1		J-Handle Assembly
8	791-683295	1		Handle Bracket Assembly (includes 9-14)
9	791-181811	1		Screw
10	791-181812	1		Upper Handle Clamp
11	791-181813	1		Middle Handle Clamp
12	791-181814	1		Lower Handle Clamp
13	791-181815	1		Nut
14	791-145569	1	/P	Anti-Rotation Screw
15	753-1190	1	/P	Split boom Coupler (includes 12-15)
16	791-182057	1		Screw
17	791-181617	1		Bolt
18	791-181981	1		Adjustment Knob (includes 15)
19	753-04386	1	S	Knob Retaining Nut
20	791-182387	1		Lower Drive Shaft Housing Assembly
21	791-153597	1		Lower Clamp Assembly (includes 21)
22	791-181852	1	/P	Lower Flexible Drive Shaft
23	791-180531	1	S	Shield Mounting Screw
24	791-181857	1		Bushing Housing Assembly
25	791-145569	1	/P	Anti-Rotation Screw
26	791-181659	1	/P	Shield Assembly (includes 23)
27	753-05212	1	S	Blade Assembly
28	791-181457	1		Outer Spool Assembly (includes 25)
29	791-181458	1		Retainer
30	791-181561	1		Thrust Washer
31	791-181459	1		Small Spring
32	753-04257	1	/P	Slider
33	791-181532	1		E-Clip
34	791-181531	1		Spring
35	791-181462	1		Plunger
36	791-181463	1		C-Clip
37	791-181464	1	S	Inner Reel
38	791-181465B	1		Large Spring
39	791-181467	1		Foam Seal
40	791-181468B	1	/P	Bump Head Knob Assembly (includes 34 & 35)
	753-04929	1		Complete Cutting Head Assembly Not shown, (includes 17, 20, 21, 24-36)


TB525ET 41ADT5EC966
Edger

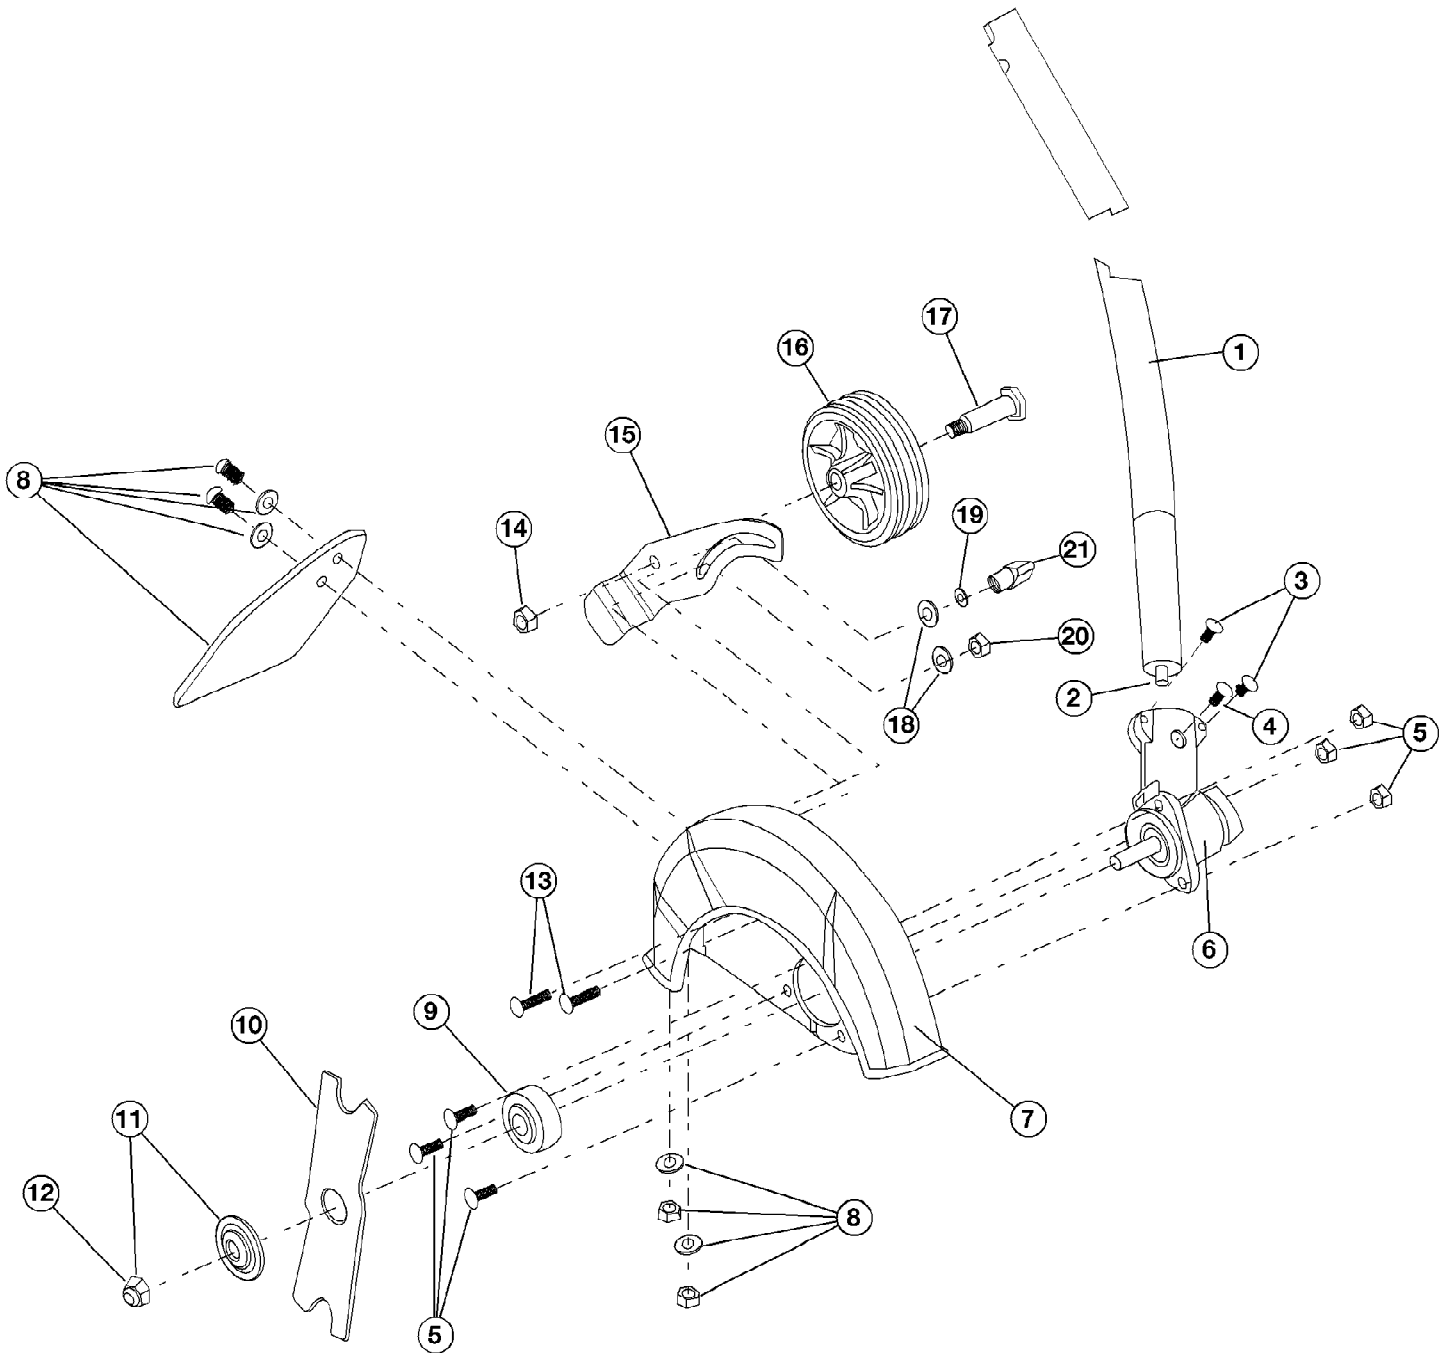

TB525ET 41ADT5EC966
Edger

Page 4 of 7

Ref #	Part Number	Qty	S/P/F	Description
1	753-04259	1		Boom Assembly
2	791-181570	1	/P	Drive Shaft
3	791-182195	1		Boom Mounting Hardware
4	791-182519	1		Anti-Rotation Screw
5	753-1217	1		Guard Mounting Hardware
6	753-04258	1		Gearbox Assembly
7	753-04260	1		Blade Guard
8	753-04262	1		Deflector w/Hardware
9	753-04261	1		Spacer
10	791-613223B	1	/P	Blade
11	791-180014B	1		Blade Clamp Washer & Nut
12	791-613221	1	S	Blade Retainer Nut
13	753-04270	1		Wheel Bracket Mounting Bolt
14	753-04264	1		Nut
15	753-04265	1		Edger Guide
16	791-181242	1		Wheel
17	791-180776	1		Shoulder Bolt
18	791-182216	1		Washer
19	791-182215	1	S	Washer
20	791-180050	1	S	Nut
21	791-182214	1		Edger Guide Knob

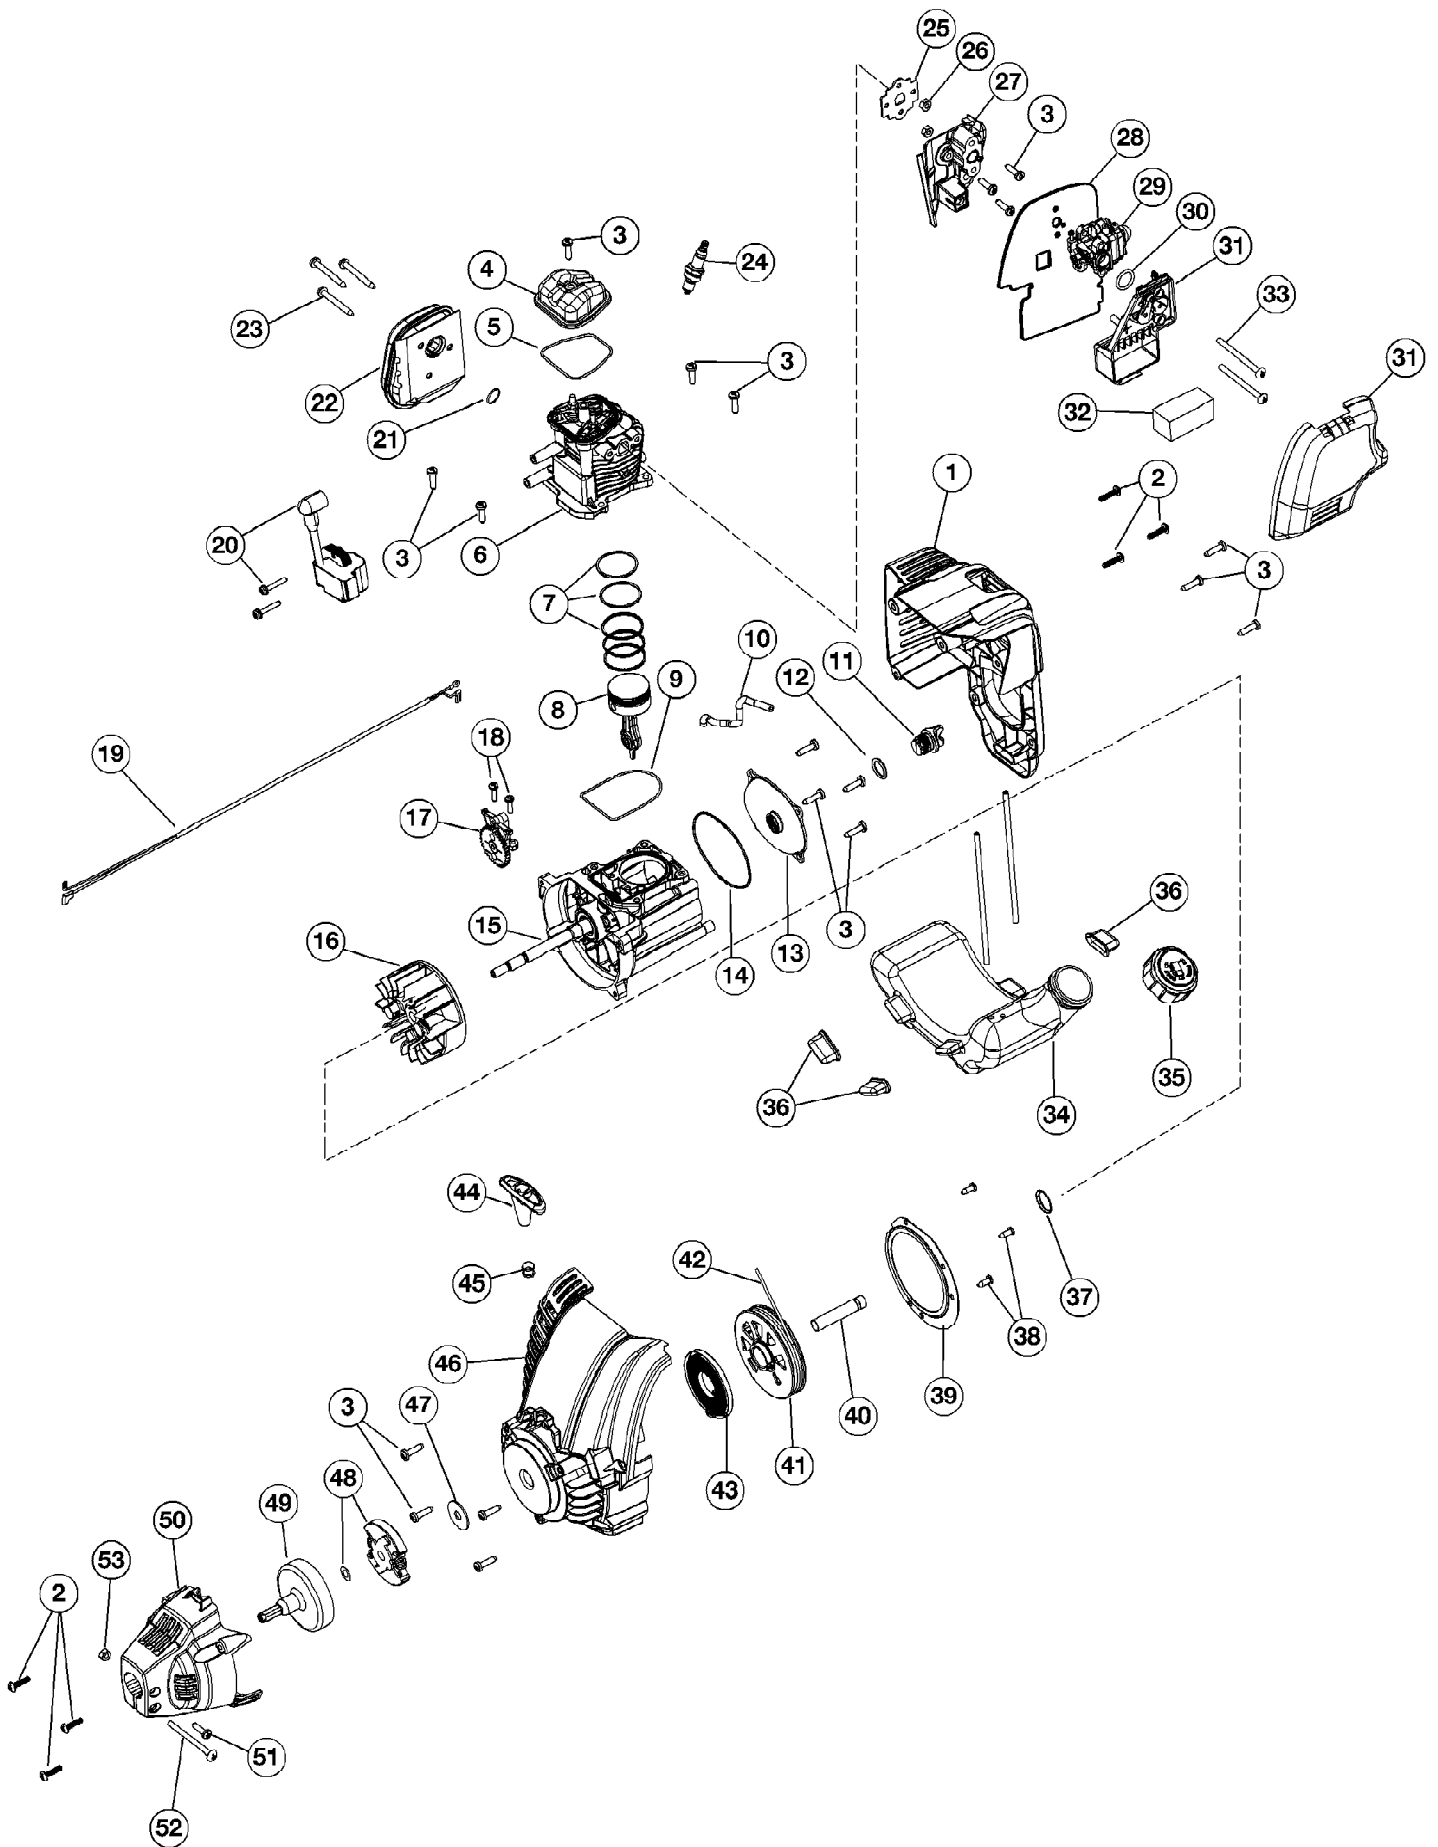

TB525ET 41ADT5EC966
Engine Assembly

Page 6 of 7

Ref #	Part Number	Qty	S/P/F	Description
1	753-05206	1		Engine Cover Assembly (includes 2 & 3)
2	753-04595	1	S	Cover Screw
3	753-05377	1	S	Screw
4	753-05209	1		Rocker Cover
5	753-05210	1	S	Rocker Cover O-Ring
6	753-05228	1		Cylinder Assembly (includes 3, 5 & 9)
7	753-05229	1		Piston Ring Assembly
8	753-05230	1		Piston Assembly (includes 7)
9	753-05232	1		Cylinder O-Ring
10	791-182379	1	/P	Breather Hose
11	753-05236	1	S	Oil Plug (includes 12)
12	791-182290	1		Oil Plug O-Ring
13	753-05237	1		Crankcase Cover
14	753-05238	1		Crankcase Cover O-ring
15	753-05239	1		Crankcase Assembly (includes 9, 10, 14 & 16)
16	753-05240	1	/P	Flywheel Assembly
16	914-04016	1	/P	Woodruff Key.125 x .375 Not shown
17	753-05241	1		Cam Bracket Assembly (includes 18)
18	753-05242	1	S	Cam Bracket Screw
19	753-05264	1		Lead Wires
20	753-05243	1	S	Module Assembly
21	753-05244	1		Muffler Gasket
22	753-05245	1		Muffler Assembly (includes 21 & 23)
23	753-05246	1	S	Muffler Screw
24	753-05255	1		Spark Plug
25	753-05247	1		Insulator Gasket
26	753-05248	1	S	Nut
27	753-05249	1		Insulator
28	753-05366	1	/P	Carburetor Gasket
29	753-05251	1		Carburetor w/Primer
30	791-181751	1		O-Ring
31	753-05252	1		Air Cleaner Cover Assembly (includes 32)
32	753-05254	1		Air Filter
33	753-05253	1	S	Screw
34	753-05256	1	/P	Fuel Tank Assembly w/Fuel Lines (includes 35)
35	753-1229	1		Fuel Cap
36	753-05259	1		Fuel Tank Pads
37	753-05260	1	S	Push Nut
38	753-1202	1		Pressure Plate Screw
39	753-05074	1		Pressure Plate (includes 38)
40	753-05078	1	S	Spacer
41	753-05435	1	/P	Starter Assembly (includes 42)
42	791-613103	1		Rope
43	753-04286	1		Recoil Spring
44	791-181079	1	S	Handle
45	791-611061	1		Rope Guide
46	753-05262	1		Starter Housing Assembly (includes 3 & 37-45)
47	791-182396	1	S	Washer
48	753-1238	1		Clutch & Clutch Washer

TB525ET 41ADT5EC966
Engine Assembly

Page 7 of 7

Ref #	Part Number	Qty	S/P/F	Description
49	791-153592	1	/P	Clutch Drum
50	753-05263	1		Clutch Cover
51	791-182519	1		Anti-Rotation Screw
52	753-04003	1		Clamp Screw
53	791-180217	1	S	Nut
	753-05297	1	/P	Spark Arrestor Assembly Not shown
	753-05265	1	/P	Shortblock Assembly (includes 3-12, 14, 15, 17 & 24) Not shown