

ASSEMBLY INSTRUCTIONS

This unit requires assembly.

UNPACKING

- Carefully remove the product and any accessories from the box.
- Inspect the product carefully to make sure no breakage or damage occurred during shipping.
- Do not discard the packing material until you have carefully inspected and satisfactorily operated the product.
- If any parts are damaged or missing, please call **1-800-828-5500** (U.S.) or **1-800-668-1238** (Canada) for assistance.

BLOWER ASSEMBLY



WARNING: Make sure the unit is disconnected from the power source and the variable-speed switch is in the OFF position before assembling or disassembling any components.

The blower tube and nozzle extend the reach of the blower and concentrate the flow of air it delivers.

1. Slide the widest end of the blower tube over the front opening on the motor housing until the tab on the blower tube is inserted into the opening on the motor housing and locks into place (Fig. 1).
2. Slide the nozzle over the end of the blower tube until the latches on both sides of the blower tube and nozzle lock into place (Fig. 2).

NOTE: The blower tube must be used at all times during blower mode to prevent overheating the motor.

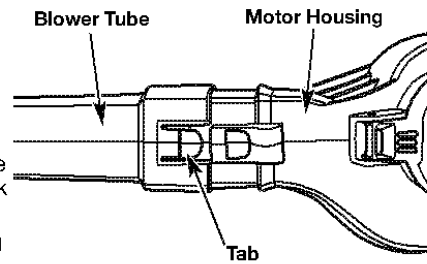


Fig. 1

VACUUM ASSEMBLY



WARNING: When used as a vacuum, the unit cannot be operated without both the lower and upper vacuum tubes attached. To avoid serious personal injury, do not attempt to use the unit with only one vacuum tube or no vacuum tubes attached.



WARNING: The vacuum bag assembly must be used at all times during vacuum mode to prevent serious personal injury from objects being discharged from the blower outlet and to prevent overheating the motor.

1. With the unit off and unplugged, open the vacuum door by pulling the vacuum door handle away from the motor housing (Fig. 3).
2. Align the arrow on the upper vacuum tube with the arrow on the motor housing. Note that the flat section on the upper vacuum tube faces the vacuum door.
3. Slide the upper vacuum tube into the motor housing (Fig. 4).
4. Turn the upper vacuum tube clockwise with both hands until the dot on the upper vacuum tube aligns with the dot on the motor housing.
5. Align the arrow on the lower vacuum tube with the arrow on the upper vacuum tube (Fig. 5).
6. Slide the lower vacuum tube into the upper vacuum tube.
7. Turn the lower vacuum tube clockwise with both hands until the dot on the lower vacuum tube aligns with the dot on the upper vacuum tube.
8. Insert the blower opening into the vacuum bag assembly until the tab on the vacuum bag assembly is inserted into the opening on the motor housing and locks into place (Fig. 6).

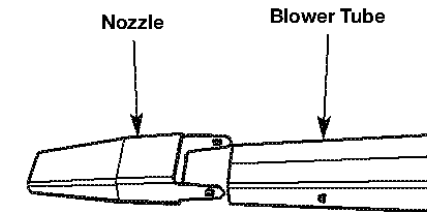


Fig. 2

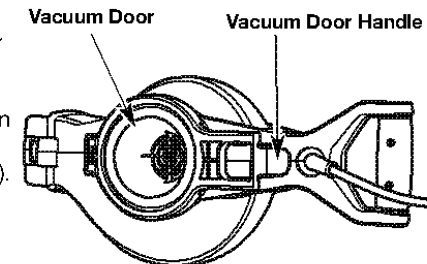


Fig. 3

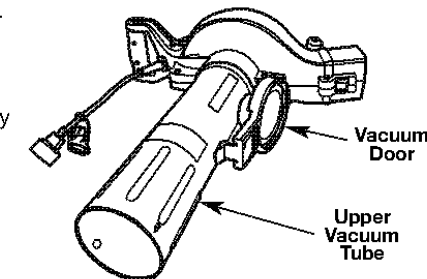


Fig. 4

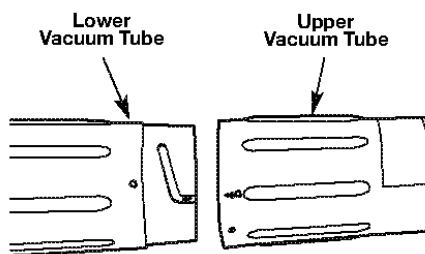


Fig. 5

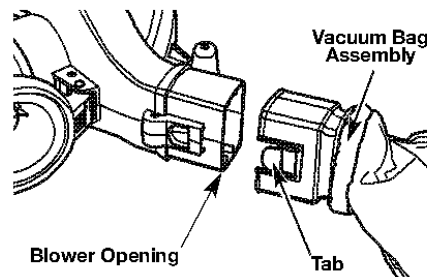


Fig. 6



Correct - Locked



Incorrect – not locked