 


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
AIR INTAKE ASSEMBLY

Page 1 of 94

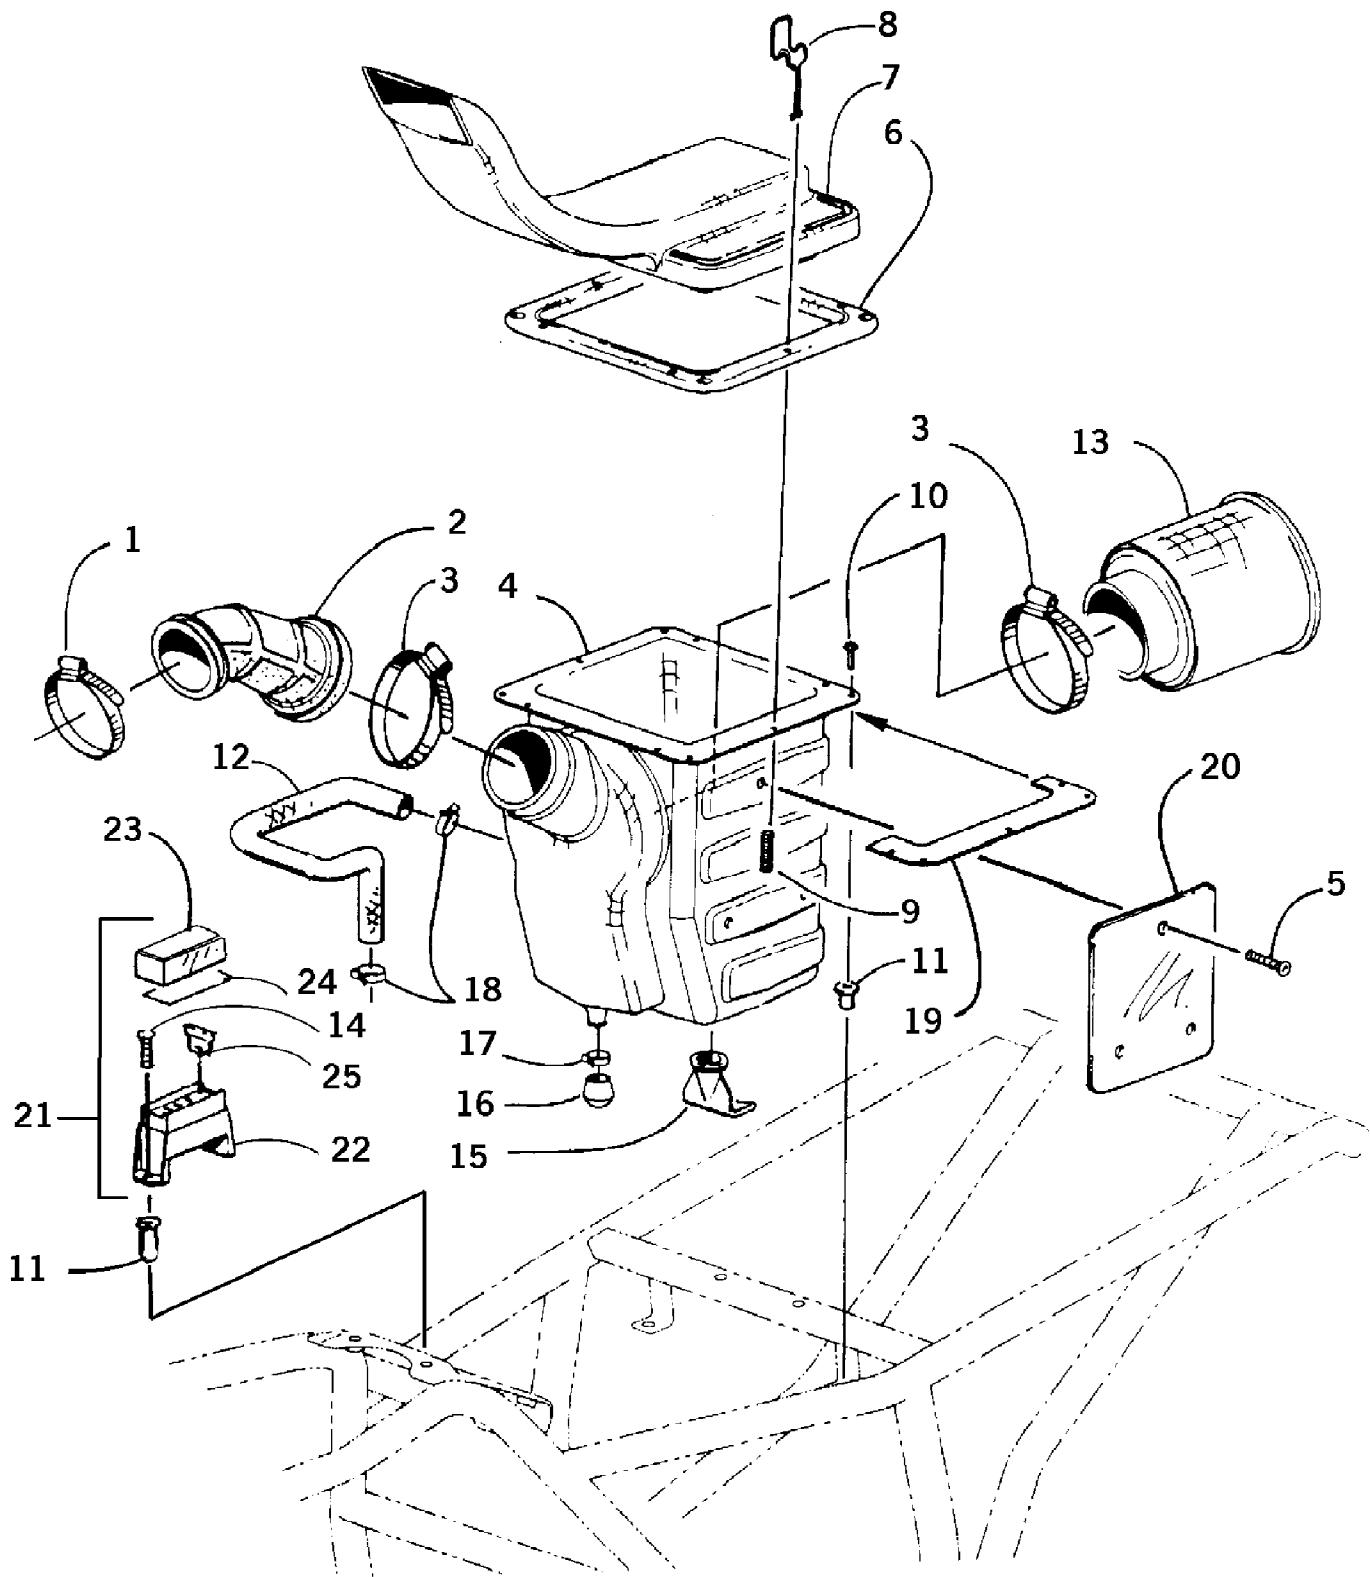


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
AIR INTAKE ASSEMBLY

Page 2 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	0423-066	1		Clamp
2	0470-305	1		Boot, Air Cleaner
3	0423-018	2		Clamp
4	0470-337	1		Housing, Air Cleaner
5	0623-301	3	/P	Screw, Self-Tapping
6	0470-343	1		Gasket, Air Cleaner
7	0470-383	1	/P	Snorkel, Air Cleaner
8	0470-307	4		Clamp, Air Cleaner
9	0423-037	4		Spring, Air Cleaner
10	0623-121	4		Screw, Machine
11	0123-010	6	/P	Nut, Expansion
12	0410-004	1		Hose, Crankcase Vent
13	0470-391	1	/P	Filter, Air Cleaner
14	0423-068	2		Screw, Machine
15	0470-309	1	S	Valve, Air Cleaner
16	1673-272	1	/P	Cap, Fitting - Air Cleaner
17	0423-047	1		Clamp, Hose
18	0423-045	2		Clamp, Hose - Spring
19	0470-351	2		Support, Air Cleaner Flange
20	0406-356	1		Plate, Heat - Air Intake
21	0530-001	1		Box, Fuse - Assembly (inc. 22-25)
22	0	1		Block, Fuse
23	0	1		Lid, Fuse Box
24	0411-271	1		Decal, Fuse Block
25	0630-057	4		Fuse - 10 Amp
25	0630-058	2		Fuse - 15 Amp

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
BODY PANEL ASSEMBLY

 Page 3 of 94

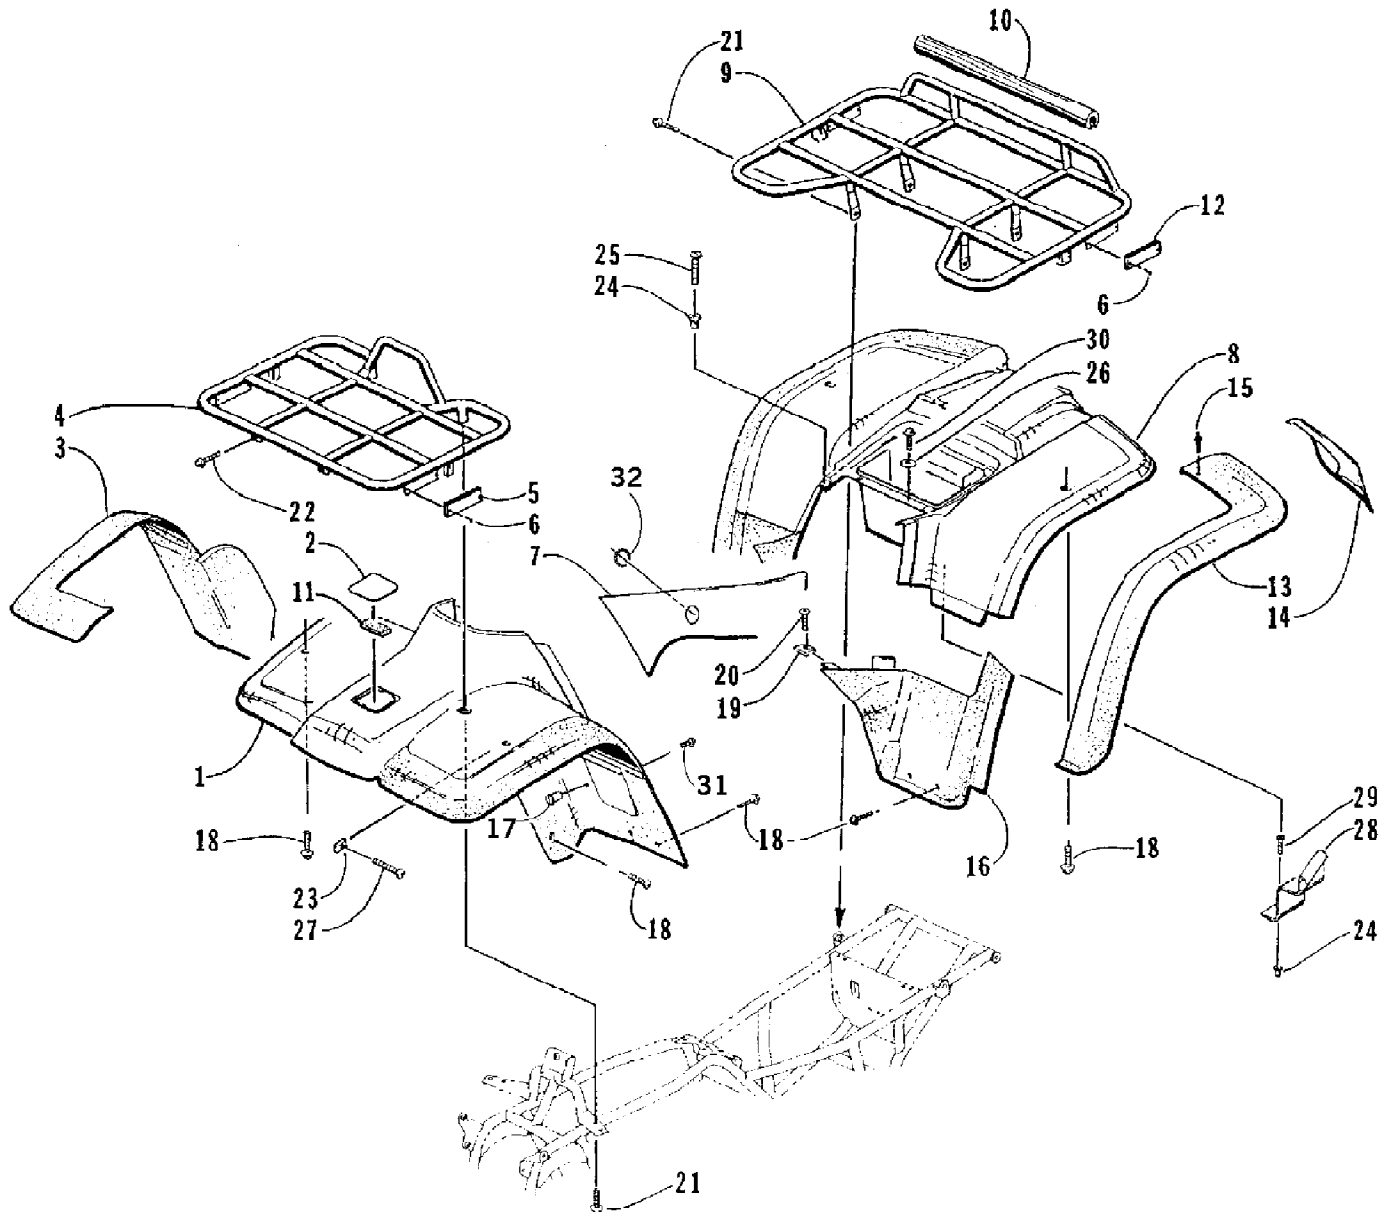


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
BODY PANEL ASSEMBLY

Page 4 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	0506-397	1	S	Panel, Fender - Front (Green) (4x4)
2	0506-145	1	S	Cover, Access (Green)
3	0406-080	1	/P	Flare - Front Right (4x4)
3	0406-081	1	/P	Flare - Front Left (4x4)
4	0506-293	1	/P	Rack - Front (500)
5	0606-526	2		Reflector, Front - Amber
6	0623-269	8		Clip, Retaining
7	0506-378	1		Panel, Side - Right (Green)
7	0506-165	1		Panel, Side - Left (Green)
8	0506-157	1		Panel, Fender - Rear (Green) (4x4)
9	0506-292	1	/P	Rack - Rear (500)
10	0406-293	1		Wrap, Tube - Rear Rack
11	0417-002	1		Foam, Access Panel
12	0606-029	2		Reflector, Rear - Red
13	0406-082	1		Flare, Rear Right (4x4)
13	0406-083	1		Flare, Rear Left (4x4)
14	0406-460	1		Mud Flap - Right (4x4)
14	0406-461	1		Mud Flap - Left (4x4)
15	0423-046	0		Rivet, Plastic
16	0506-160	1		Fender Extension - Rear Right (4x4)
16	0506-161	1		Fender Extension - Rear Left (4x4)
18	0423-101	0		Screw, Body
19	0423-060	2		Clip, Tinerman
20	0623-309	2		Screw, Self-Tapping
21	8409-020	6	/P	Screw, Cap
22	8408-812	2		Screw, Cap
23	0423-031	2		Nut, Speed
24	0123-010	3	/P	Nut, Expansion
25	0423-068	2		Screw, Machine
26	0623-184	1		Washer
27	8477-616	2		Screw, Machine
28	0406-297	1		Plate, Heat - Rear Panel
29	0123-549	1	/P	Screw, Machine
30	8476-616	1		Screw, Machine
32	0470-404	1		Grommet, Fuel Shut-Off Valve

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
CAM CHAIN ASSEMBLY

 Page 5 of 94

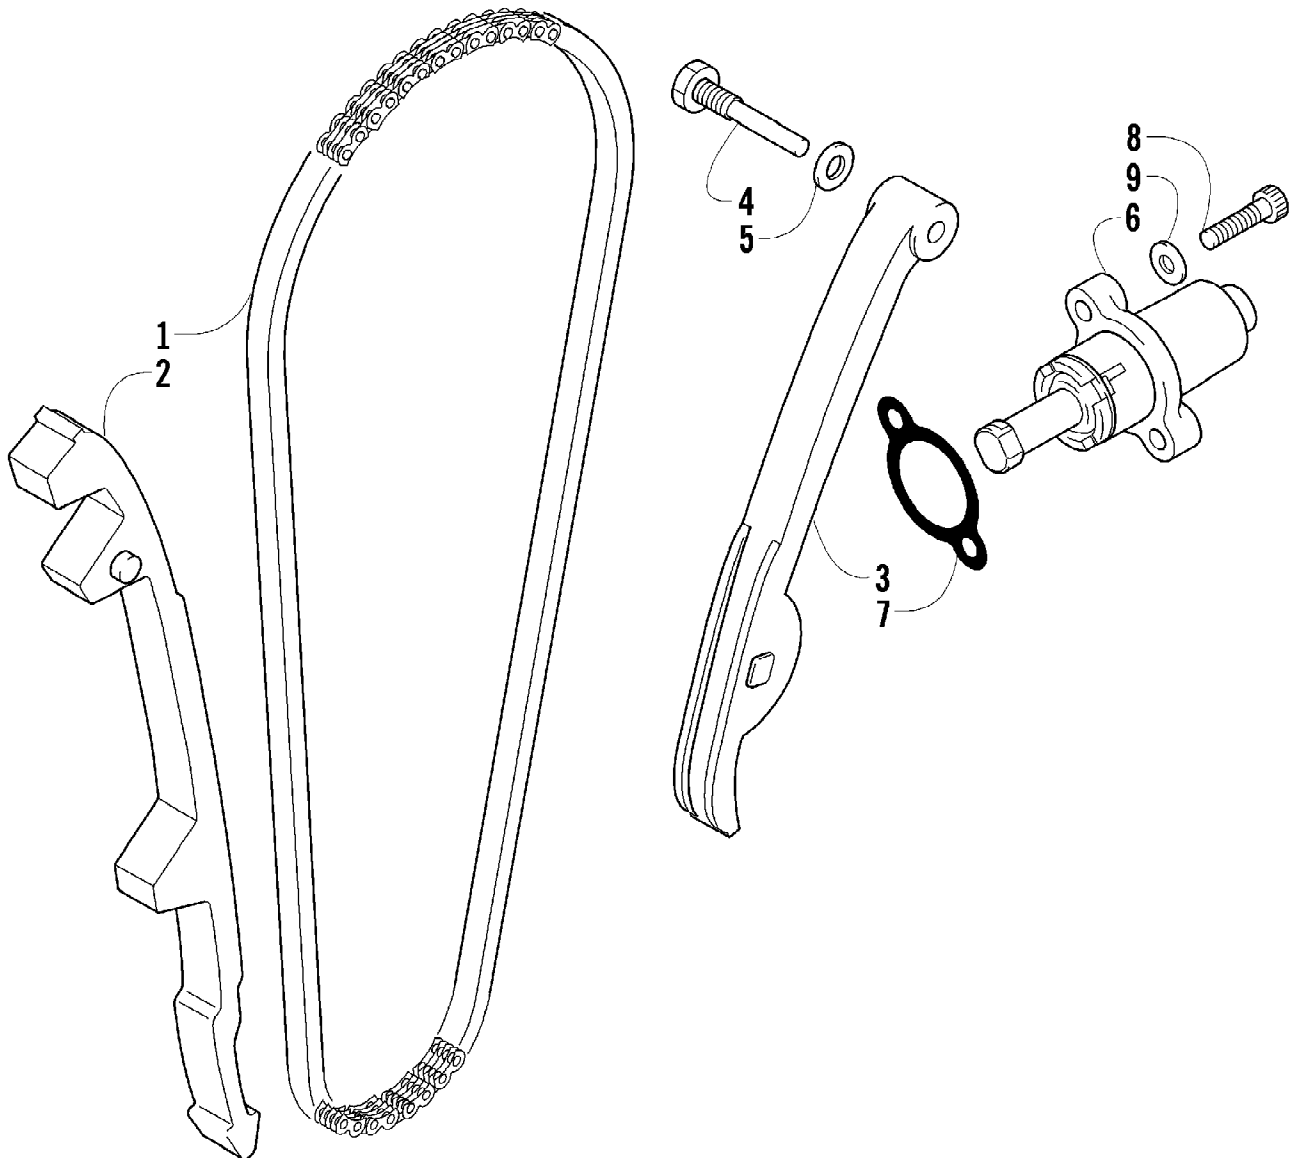


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
CAM CHAIN ASSEMBLY

Page 6 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	3402-353	1		Chain, Cam (500)
2	3402-355	1		Guide, Chain (500)
3	3402-356	1		Tensioner, Chain (500)
4	3423-074	1		Screw, Cap
5	3003-188	1	S/P	Washer
6	3402-136	1		Adjuster, Tensioner - Assembly
7	3402-137	1		Gasket
8	3004-475	2	S	Screw, Cap
9	3003-290	2	/P	Gasket

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
CAMSHAFT/VALVE ASSEMBLY

 Page 7 of 94

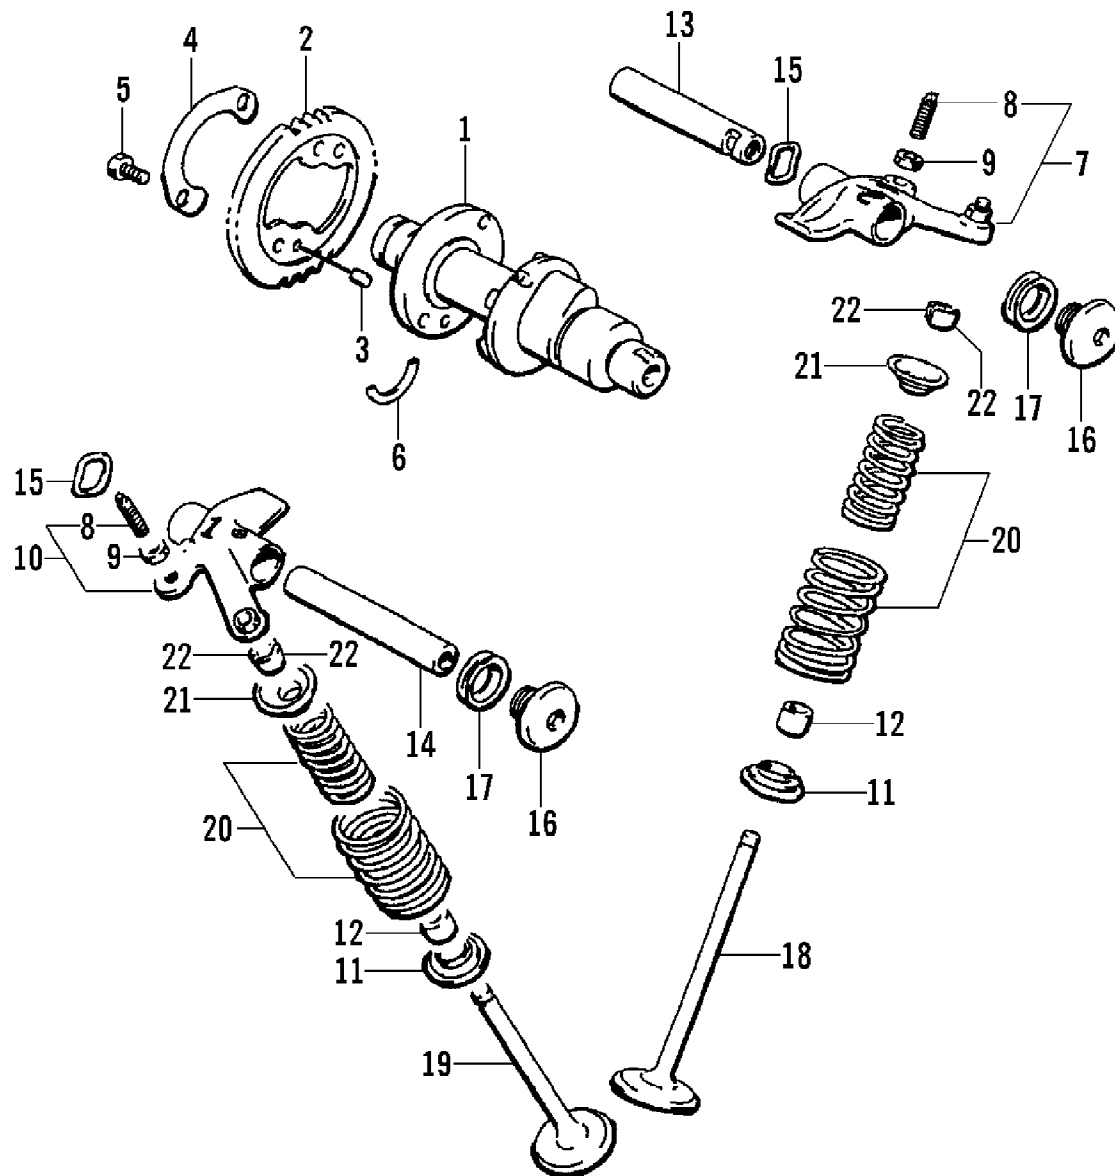


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
CAMSHAFT/VALVE ASSEMBLY

Page 8 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	3402-027	1	S	Camshaft
2	3402-352	1		Sprocket (500)
3	3423-047	1		Pin
4	3423-073	1		Washer
5	3423-013	2	S	Screw, Cap
6	3423-071	1	/P	C-Ring
7	3402-138	1	S	Arm, Valve Rocker (inc. 8-9)
8	3423-075	2		Screw, Cap
9	3423-076	2		Nut
10	3402-139	1		Arm, Valve Rocker (inc. 8-9)
11	3402-148	4		Seat, Spring
12	3402-078	4		Seal, Oil
13	3402-140	1		Shaft, Rocker Arm
14	3402-141	1		Shaft, Rocker Arm
15	3423-031	2		Washer
16	3402-040	2	/P	Plug, Shaft
17	3402-012	2		Gasket
18	3402-142	2	S	Valve, Intake
19	3402-143	2		Valve, Exhaust
20	3402-144	4		Spring, Valve - Set
21	3402-146	4	S	Retainer, Spring
22	3402-147	8		Cotter, Valve

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
CARBURETOR

 Page 9 of 94

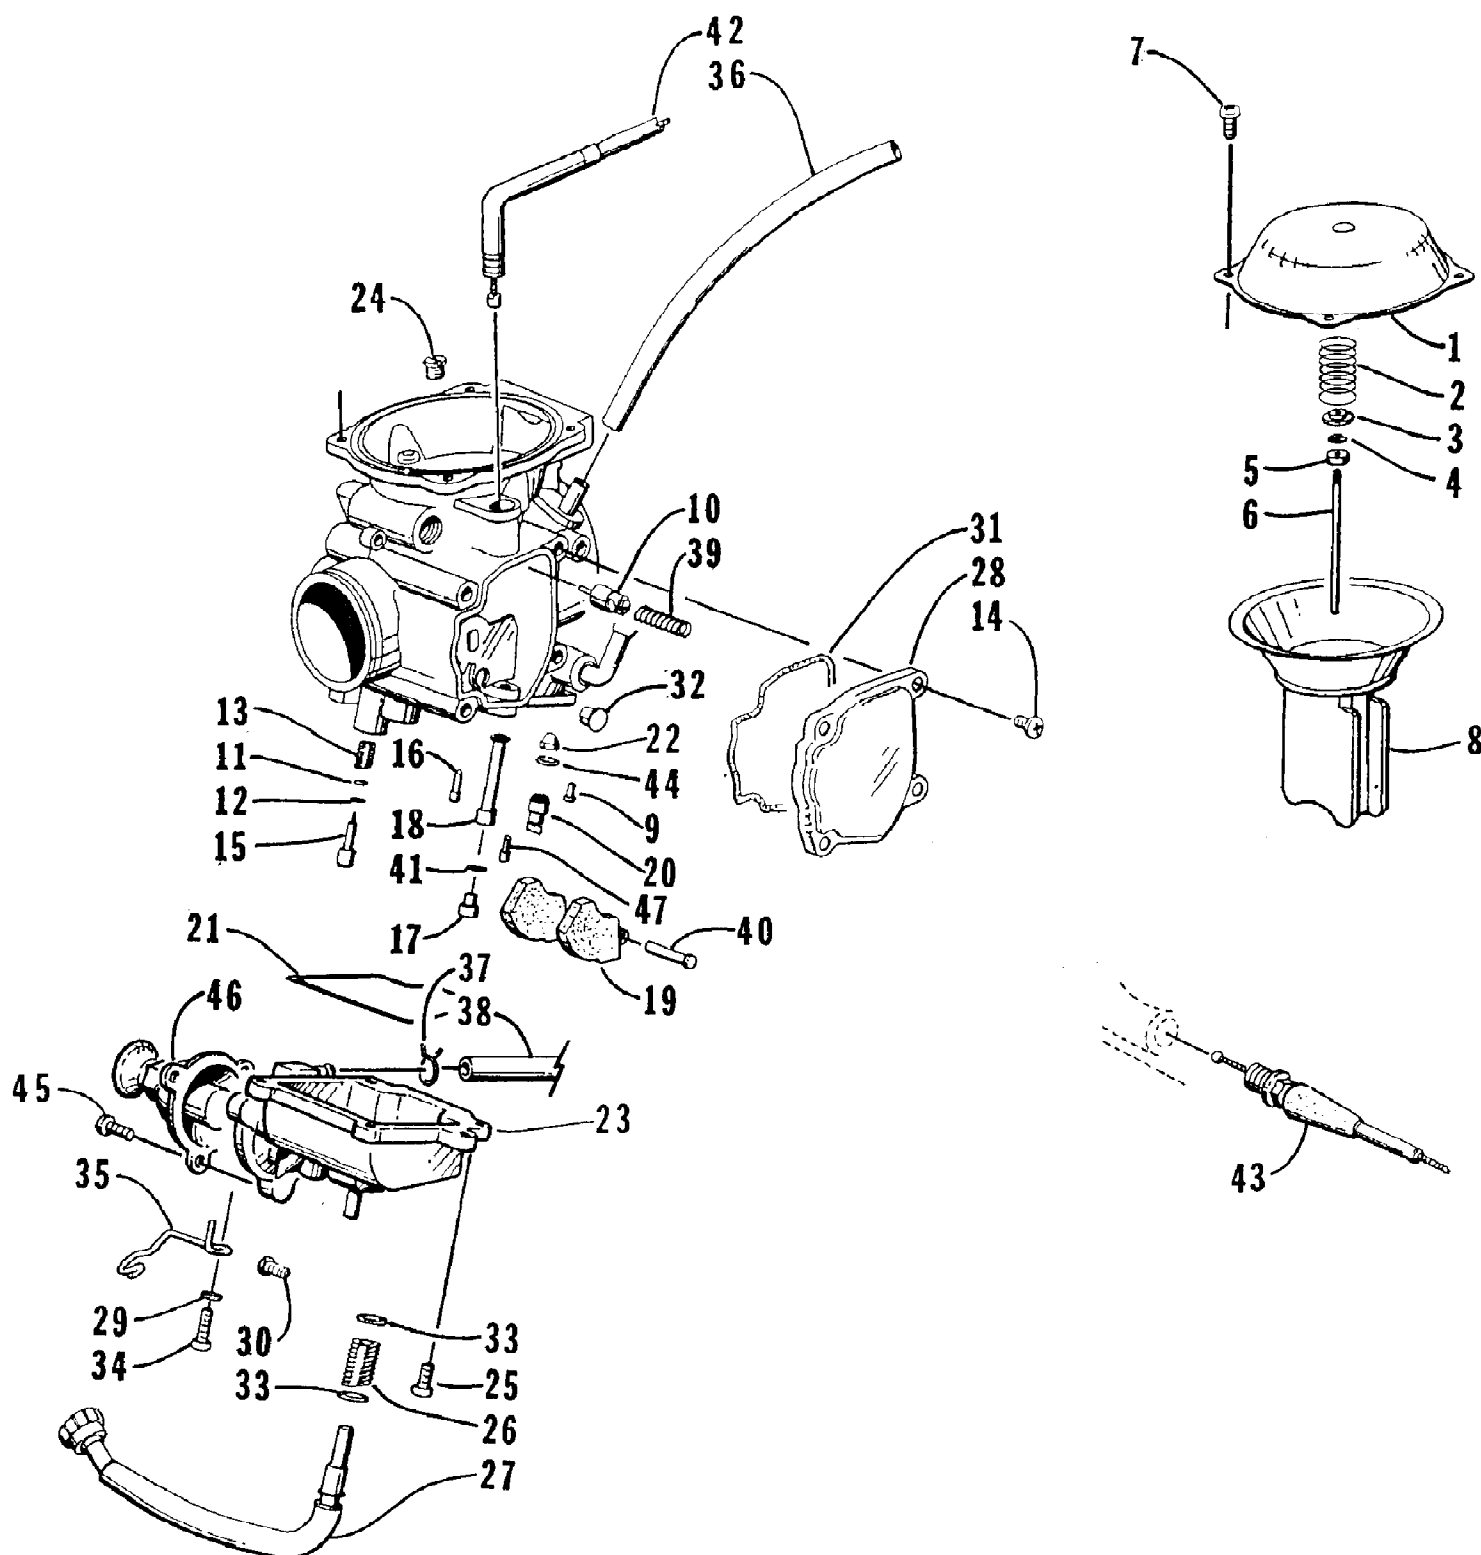


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
CARBURETOR

Page 10 of 94

Ref #	Part Number	Qty	S/P/F	Description
	0470-361	1		Complete Assembly (500)
1	4505-001	1		Cover Assembly
2	4505-106	1		Spring (500)
3	4505-003	1		Ring
4	4505-004	1	S	E-Clip
5	4505-005	1		Ring
6	4505-082	1		Jet Needle
7	4505-007	4	S	Screw
8	4505-103	1	/P	Diaphragm (500)
9	4505-009	1		Screw
10	4505-078	1		Plunger Assembly
11	4505-011	1	/P	O-Ring
12	4505-012	1		Washer
13	4505-013	1		Spring
14	4505-014	4		Screw
15	4505-016	1	/P	Screw, Pilot
16	4505-098	1		Jet, Pilot 55 (500)
17	4505-047	1		Jet, Main 145 (500)
18	4505-101	1	S	Needle Jet 0-4 (500)
19	4505-021	1		Float Assembly
20	4505-022	1		Valve, Seat - 2.0 (With Needle)
20	4505-102	1		Valve, Seat - 2.3 (With Needle)
21	4505-044	1		O-Ring, Float Chamber
22	4505-045	1		Filter
23	4505-049	1		Chamber, Float
24	4505-024	1	/P	Jet, Pilot Air (500)
25	4505-025	3		Screw
26	4505-026	1		Spring
27	4505-027	1		Cable, Adjuster - Assembly
28	4505-028	1		Cover
29	4505-029	1		Washer
30	4505-030	1		Screw
31	4505-031	1		O-Ring
32	4505-032	1		Guide, Cable
33	4505-033	2		Washer
34	4505-042	1		Screw
35	4505-034	1	/P	Clip
36	4505-035	2		Hose
37	4505-053	2		Clip
38	4505-052	1	S	Hose
39	4505-039	1	/P	Spring
40	6505-153	1		Pin
41	6505-006	1		Washer
42	0487-001	1		Cable, Throttle
43	0487-002	1		Cable, Choke
44	6505-875	1	/P	O-Ring
45	4505-051	3		Screw, Cap
46	4505-050	1		Cover Assembly, Primer
47	4505-107	1		Holder, Carburetor

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
CLUTCH ASSEMBLY

 Page 11 of 94

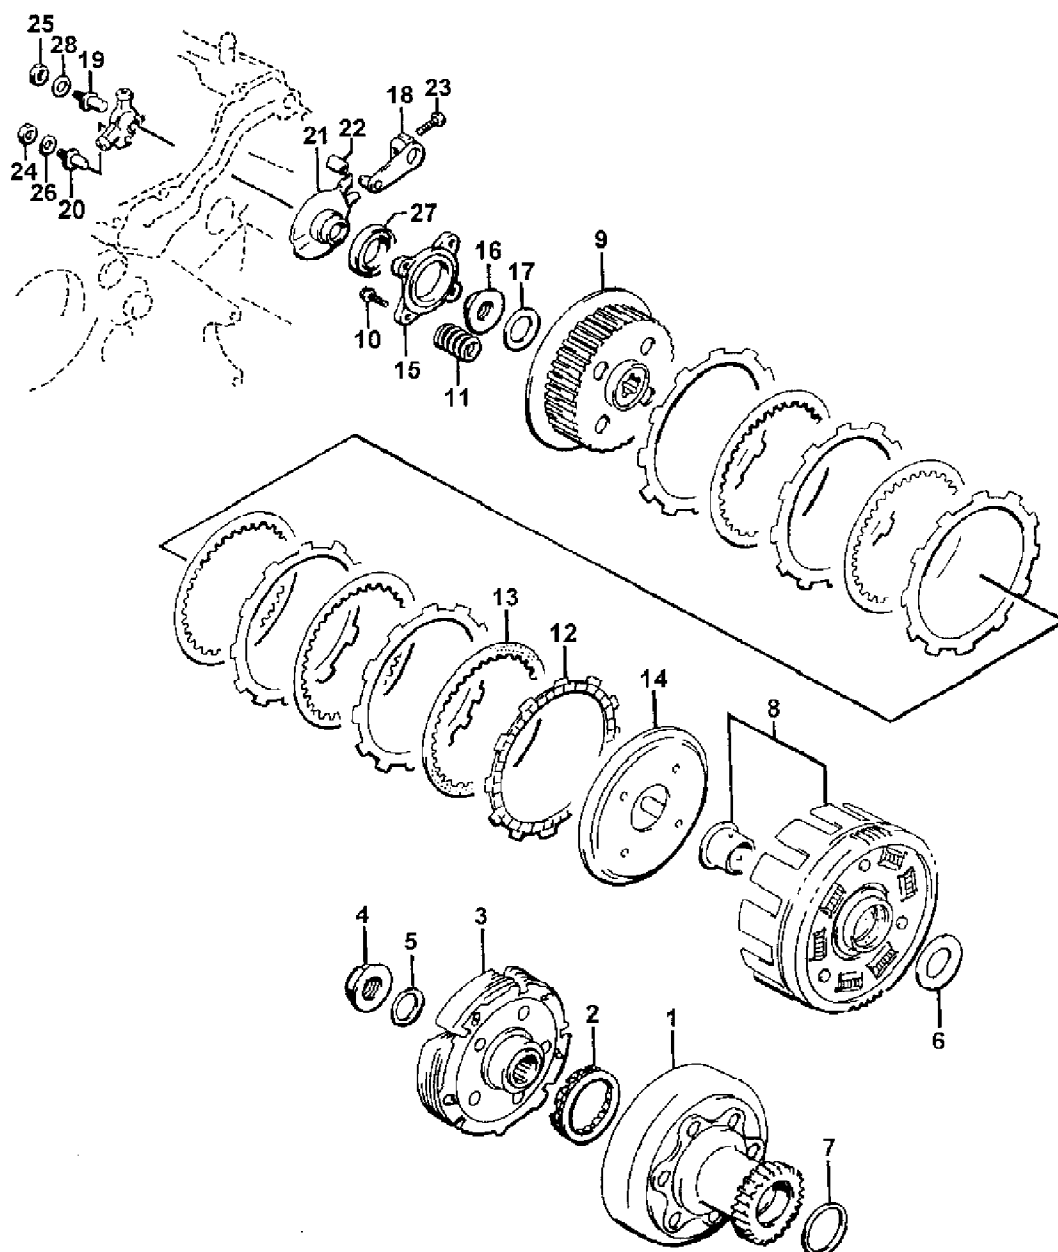


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
CLUTCH ASSEMBLY

Page 12 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	3446-232	1		Housing, Starter Clutch (500)
2	3446-003	1		Clutch, Primary Drive One Way
3	3446-233	1		Shoe, Starter Clutch (500)
4	3423-081	1		Nut, Starter Clutch Shoe
5	3423-032	1		Washer, Starter Clutch Shoe
6	3423-122	1		Washer, Primary Driven
7	3423-350	1		Washer, Primary Driven (500)
8	3446-002	1		Gear, Primary Driven - Assembly
9	3446-004	1		Hub, Clutch Sleeve (500)
10	3423-330	4		Screw, Cap - Clutch Spring
11	3446-005	4		Spring, Clutch
12	3446-006	6		Plate, Clutch Drive (500)
13	3446-007	5		Plate, Clutch Driven (500)
14	3446-008	1		Disc, Clutch Pressure
15	3446-009	1		Plate, Clutch Release
16	3423-080	1		Nut, Clutch Sleeve Hub
17	3423-032	1		Washer, Sleeve Hub
18	3446-011	1		Arm, Clutch Release
19	3423-333	1		Bolt, Clutch Release (No. 1) (500)
20	3423-083	1		Bolt, Clutch (No. 2)
21	3446-214	1		Guide, Release Roller
22	3446-013	1	S	Roller, Clutch Release - Assembly
23	3423-125	1	S	Bolt, Clutch Release Arm
24	3008-014	1		Nut, Clutch Release (No. 2)
25	3423-022	1		Nut, Clutch Release (No. 1) (500)
26	3423-027	1		Washer, Clutch (No. 2)
27	3402-186	1	/P	Bearing, Clutch
28	3423-204	1	/P	Washer, Clutch Release (No. 1) (500)

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
CONTROL SWITCH HOUSING ASSEMBLY

 Page 13 of 94

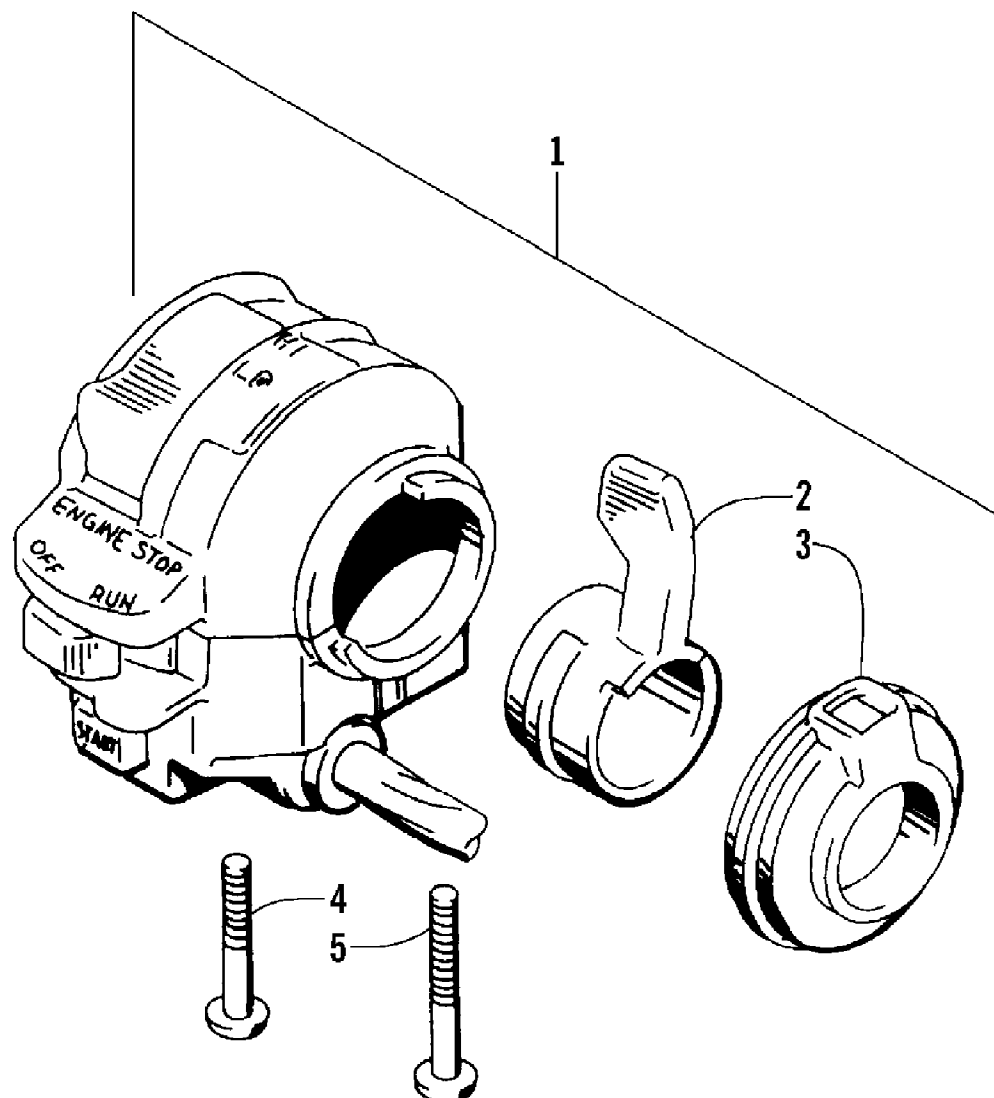


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
CONTROL SWITCH HOUSING ASSEMBLY

Page 14 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	3509-001	1	S	Switch, Handlebar - Assembly (inc. 2-5)
2	3409-009	1		Lever, Choke
3	3409-010	1		Cover, Choke
4	3423-196	1		Screw, Cap
5	3423-197	1		Screw, Cap

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
COOLING ASSEMBLY

 Page 15 of 94

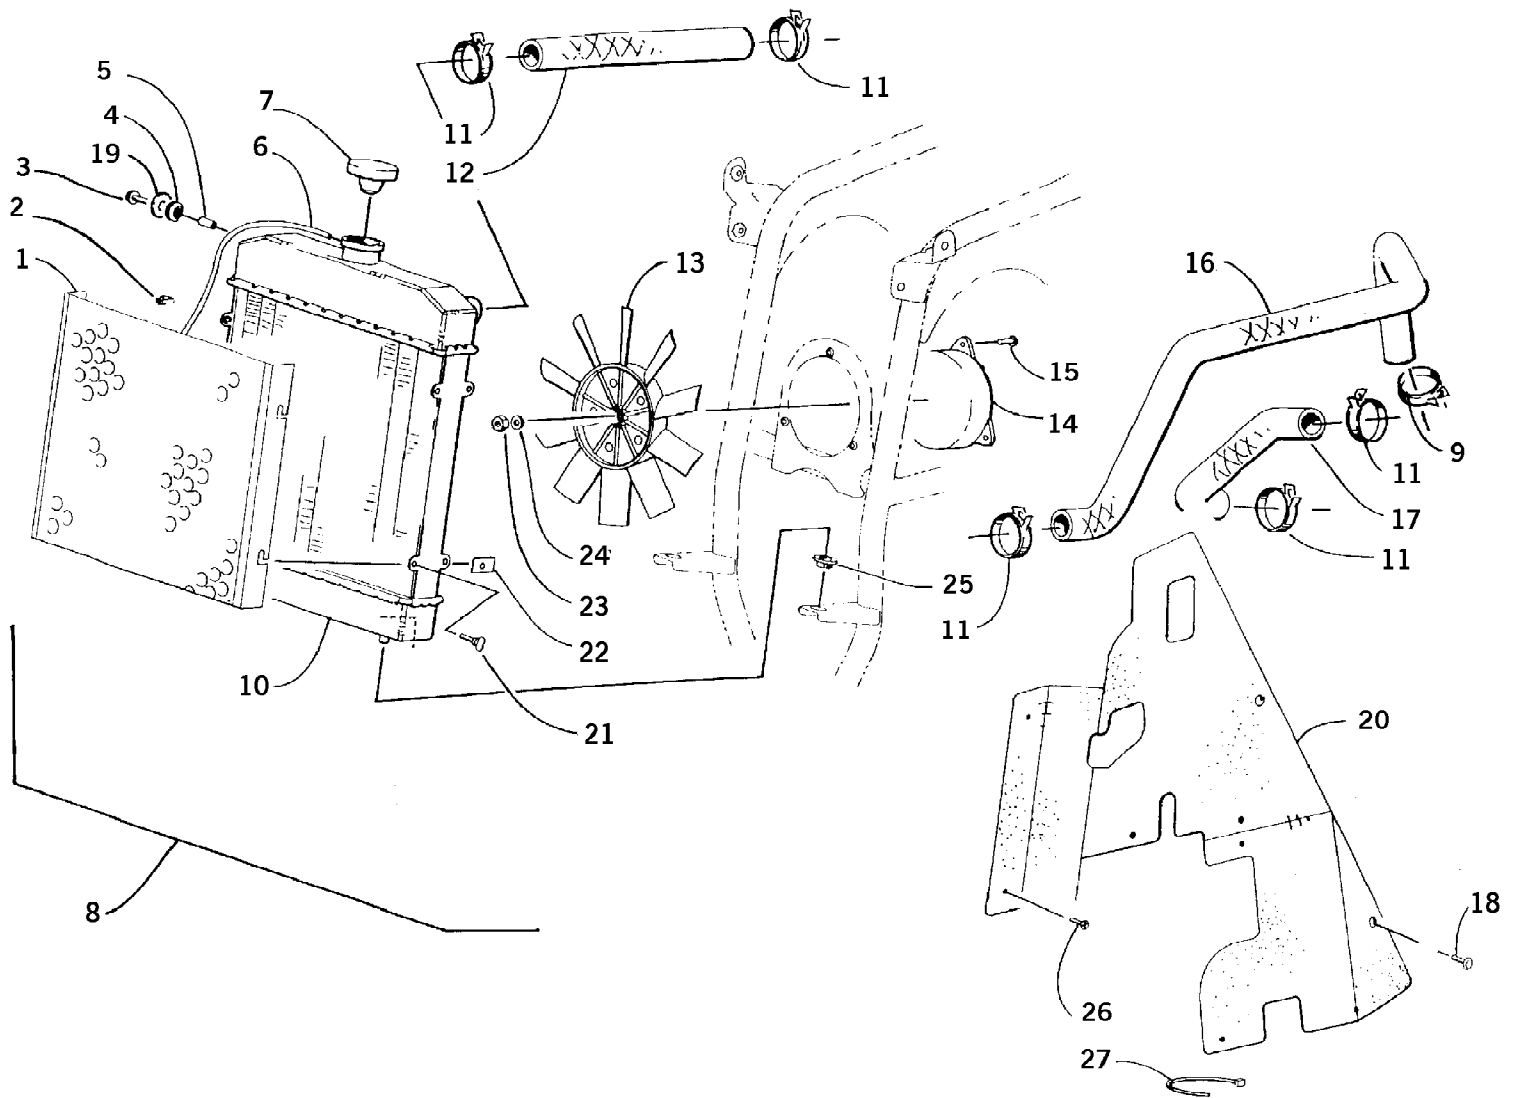


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
COOLING ASSEMBLY

Page 16 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	0413-007	1		Screen, Radiator
2	3002-964	2	/P	Clamp, Wire
3	8476-620	2		Screw, Cap
4	0423-030	2		Grommet
5	0423-036	2		Collar
6	0610-016	0	/P	Hose - 25 ft
7	0413-002	1	S	Cap, Radiator
8	0413-014	1		Radiator Assembly (inc. 1, 4, 7, 10, and 21)
9	0623-736	1		Clamp, Hose
10	0	1	F	Radiator
11	0423-070	5		Clamp, Hose
12	0410-002	1		Hose, Coolant - Upper
13	0413-006	1		Blade, Fan
14	0413-004	1		Motor, Fan
15	8474-516	3		Screw, Machine
16	0410-001	1		Hose, Coolant - Lower
17	0410-003	1		Hose, Coolant - Crossover
18	0423-101	4		Screw, Body
19	0623-184	2		Washer
20	0406-200	2		Panel, Fender - Inner
21	0413-009	4		Screw, Thumb
22	0423-031	4		Nut, Speed
23	0423-056	1		Nut - Left
24	8050-252	1		Washer
25	0423-028	2		Bushing, Stem
26	8477-616	4		Screw, Machine
27	0123-788	8	/P	Cable Tie - 7 in.

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
CRANK BALANCER ASSEMBLY

 Page 17 of 94

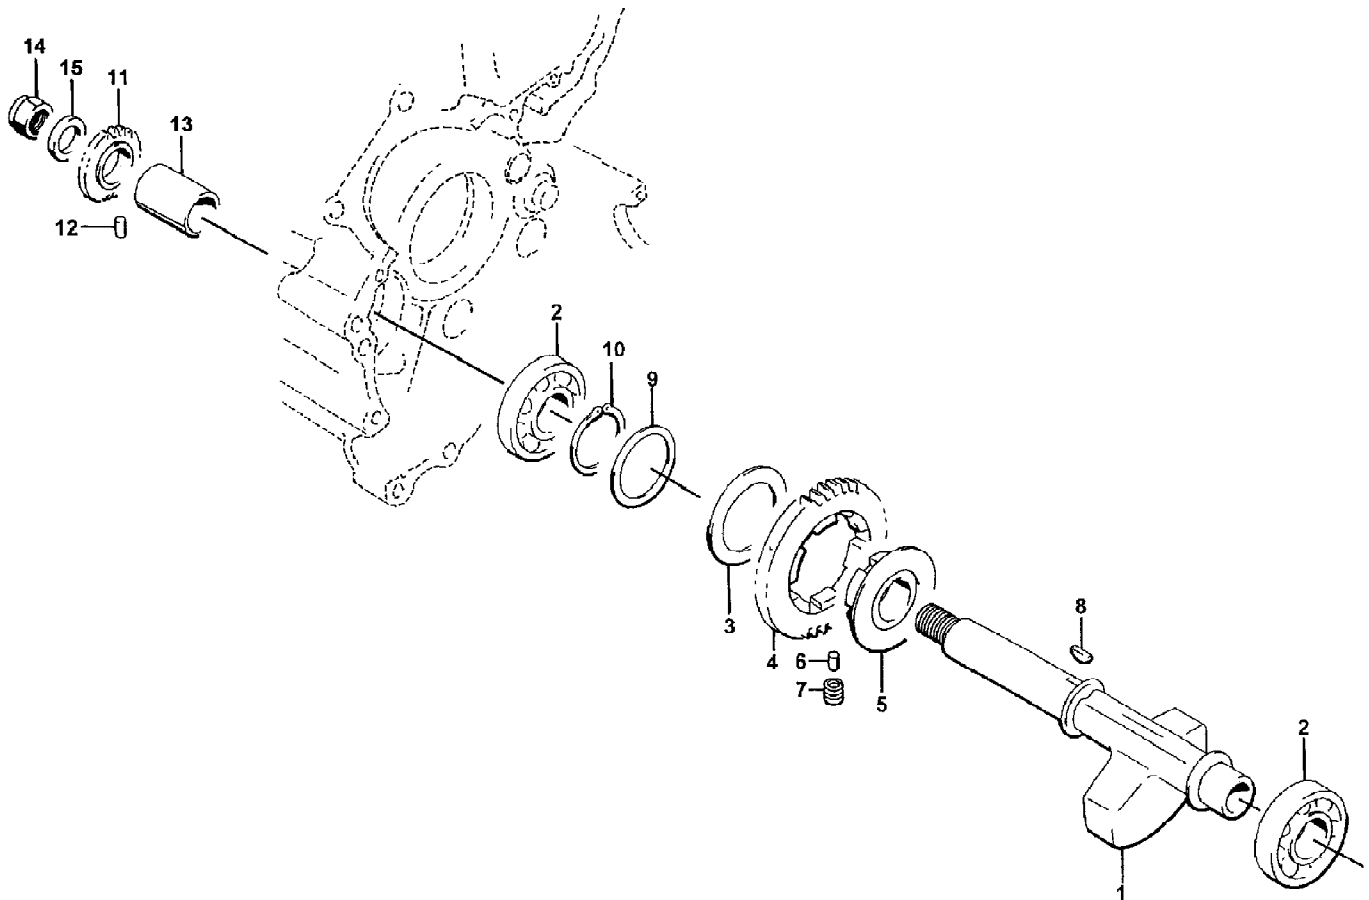


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
CRANK BALANCER ASSEMBLY

Page 18 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	3402-350	1		Balancer, Crank (500)
2	3402-050	2		Bearing
3	3423-033	1		Washer
4	3402-351	1		Gear, Driven (500)
5	3402-129	1		Race, Driven Gear - Inner
6	3423-106	3	/P	Pin
7	3402-090	6		Spring
8	3004-540	1	/P	Key
9	3423-107	1		Washer
10	3423-200	1	/P	Circlip
11	3402-150	1		Gear, Oil Pump Drive (500)
12	3423-114	1	/P	Pin
13	3402-151	1		Spacer
14	3423-025	1		Nut, Lock
15	3423-029	1		Washer

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
CRANKCASE ASSEMBLY

 
Page 19 of 94

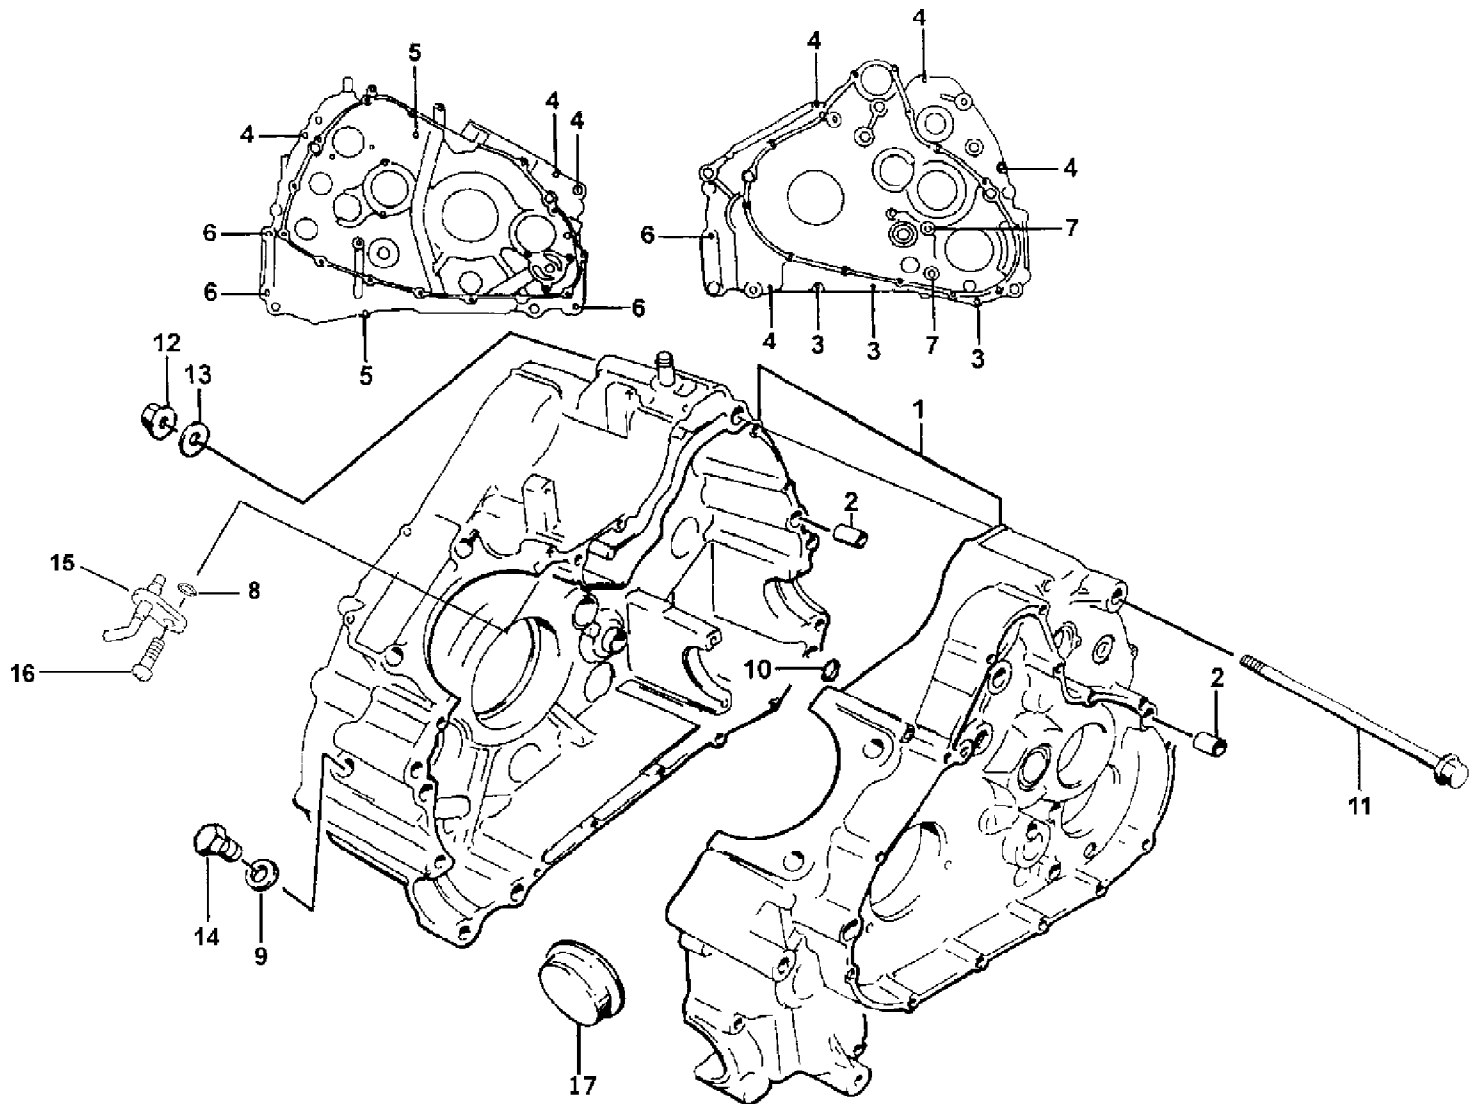

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
CRANKCASE ASSEMBLY

Page 20 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	3402-366	1	S	Crankcase Set (inc. 2-8, 10, 15, and 16) (500)
2	3423-088	4		Pin, Dowel
3	3423-091	3	S	Screw, Cap
4	3423-092	7	S	Screw, Cap
5	3423-094	2		Screw, Cap
6	0693-303	4	S	Screw, Cap
7	3423-093	2		Screw, Cap
8	3423-051	1		O-Ring (4X4) (400) (500)
9	3402-011	1		Gasket
10	3423-052	1		O-Ring (500)
11	3423-009	3	/P	Screw, Cap
12	3423-024	3		Nut
13	3004-278	3	S/P	Washer
14	3423-095	1		Plug, Oil Gallery
15	3402-369	1		Jet, Piston Cooling (500)
16	3004-552	1	S	Screw (500)

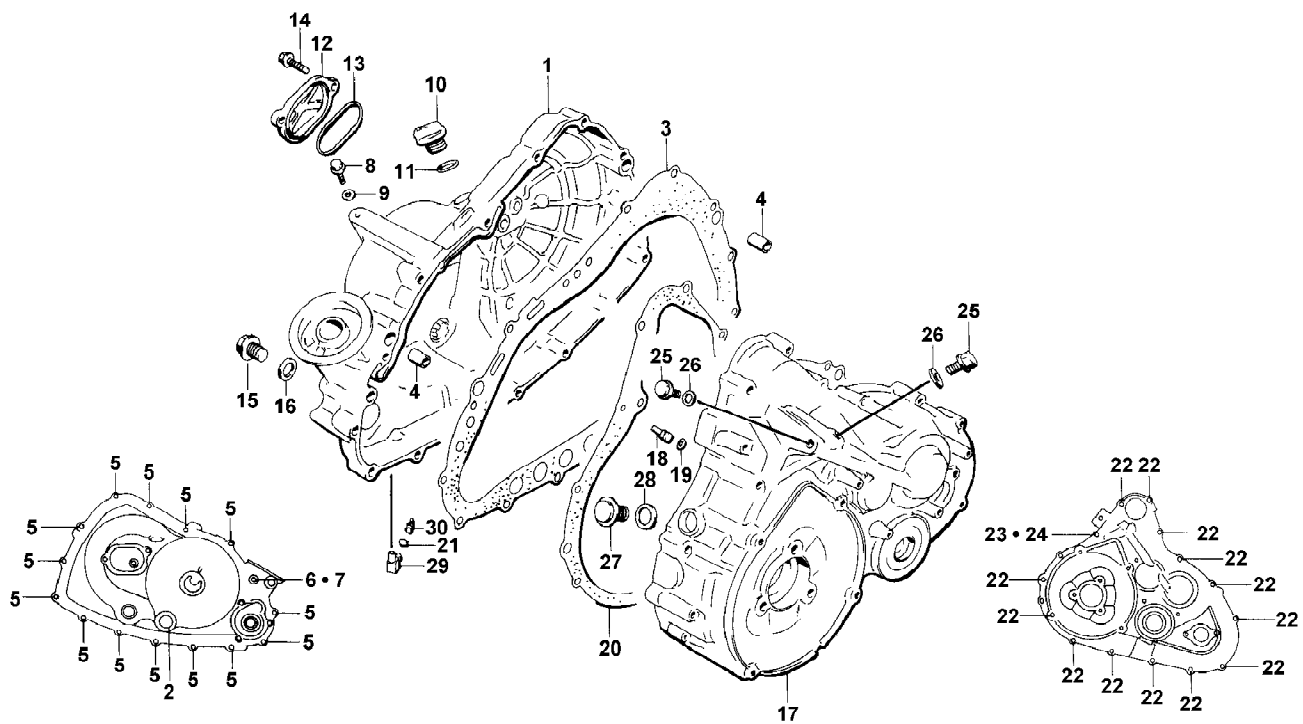 


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
CRANKCASE COVER ASSEMBLY

Page 22 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	3402-367	1		Cover, Clutch (inc. 2) (500)
2	3402-112	1	/P	Lens, Oil Inspection
3	3402-108	1		Gasket
4	3423-088	4		Pin, Dowel
5	0693-327	14	S	Screw, Cap
6	3423-097	1		Screw, Cap
7	3003-290	1	/P	Gasket
8	3004-339	1	S/P	Plug, Oil Gallery
9	3003-290	1	/P	Gasket
10	3402-042	1		Cap, Engine Oil Filler
11	3423-055	1		O-Ring
12	3402-363	1		Cap, Inspection (500)
13	3402-101	1		O-Ring
14	3423-096	2	S	Screw, Cap
15	3402-214	1		Plug, Oil Pressure (500)
16	3402-012	1		Gasket
17	3402-368	1		Cover Set, Transfer (inc. 18-19) (500)
18	3402-097	1		Jet, Oil Mission
19	3423-051	1		O-Ring
20	3402-109	1	S	Gasket
21	3423-120	1		Clip
22	3423-098	13	S	Screw, Cap
23	3423-092	1	S	Screw, Cap
24	3003-290	1	/P	Gasket
25	3423-348	2		Plug, Oil Gallery (500)
26	3005-242	2		Gasket
27	3402-041	1	S	Plug, Allen-Head
28	3402-013	1	/P	Gasket
29	3413-009	1		Union, Water Drain
30	3413-008	1		Hose

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
CRANKSHAFT ASSEMBLY

 Page 23 of 94

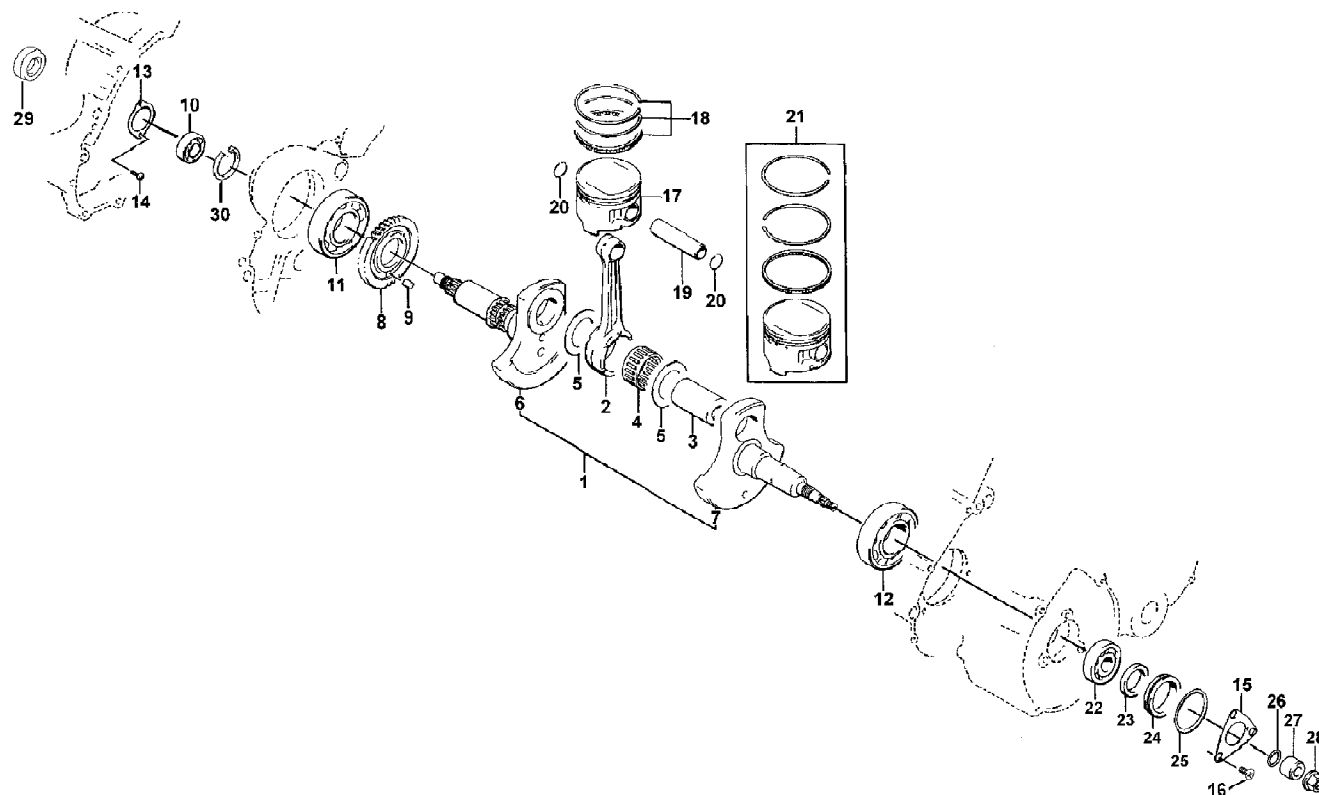


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
CRANKSHAFT ASSEMBLY

Page 24 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	3402-372	1		Crankshaft Assembly (inc. 2-9) (500)
2	3402-376	1		Rod, Connecting (500)
3	3402-377	1		Pin, Crank (500)
4	3402-386	1	S	Bearing (500)
5	3423-351	2		Washer (500)
6	3402-378	1		Crankshaft Set - Right (inc. 8-9) (500)
7	3402-379	1		Crankshaft - Left (500)
8	0	1	F	Gear, Balancer Drive
9	0	1	F	Pin
10	3402-384	1		Bearing - Right (500)
11	3402-058	1		Bearing - Center
12	3402-054	1		Bearing - Left
13	3402-120	1	F	Retainer, Bearing
15	3402-188	1	/P	Retainer, Oil Seal - Left
16	3423-018	3		Screw, Cap
17	3402-373	1		Piston (500)
18	3402-374	1		Ring Set, Piston (500)
19	3402-375	1		Pin (500)
20	3423-344	2		Circlip (500)
21	3402-431	1		Piston Assembly (inc. 17, 18, and 20) (500)
22	3402-051	1		Bearing
23	3402-070	1		Seal, Oil
24	3402-119	1	S	Spacer
25	3423-063	1		O-Ring
26	3423-053	1	/P	O-Ring
27	3402-348	1		Spacer, Bearing - Left
28	3004-491	1	S/P	Nut
29	3402-387	1		Seal, Oil

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
CYLINDER ASSEMBLY

 Page 25 of 94

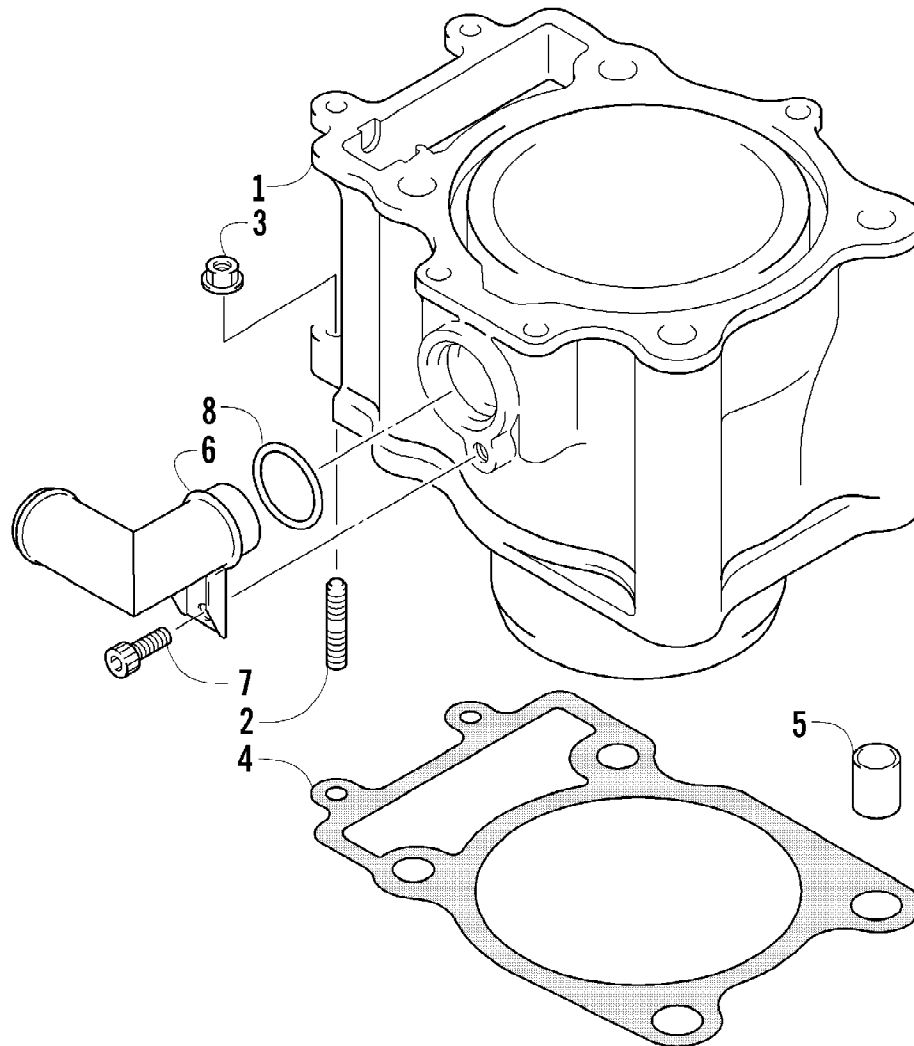


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
CYLINDER ASSEMBLY

Page 26 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	3402-364	1		Cylinder (500)
2	3423-090	2		Bolt, Stud
3	3004-488	2	S/P	Nut
4	3402-365	1	/P	Gasket, Cylinder (500)
5	3423-088	2		Pin, Dowel
6	3413-006	1		Union, Water Hose
7	3423-121	1	S	Screw, Cap
8	3423-058	1		O-Ring

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
CYLINDER HEAD ASSEMBLY

 Page 27 of 94

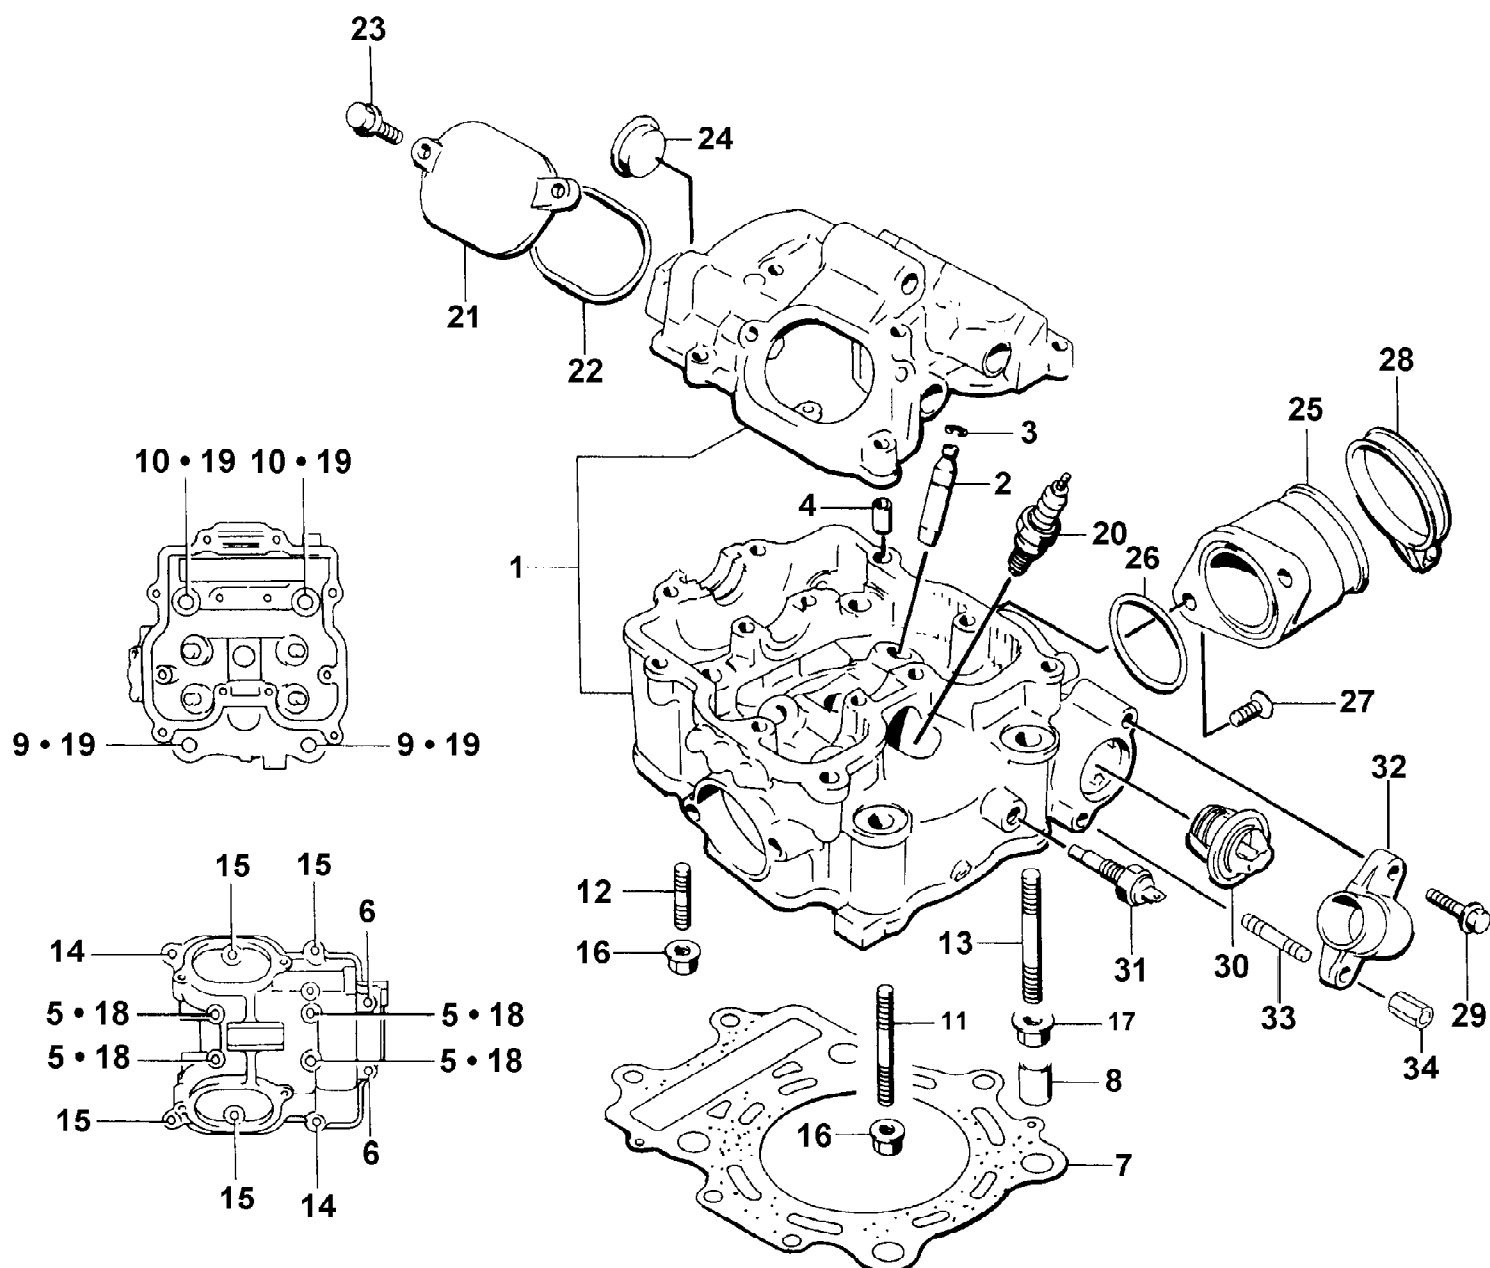


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
CYLINDER HEAD ASSEMBLY

Page 28 of 94

Ref #	Part Number	Qty	S/P/F	Description
	3402-370	1	S	Complete Gasket Set (500)
1	3402-361	1		Head, Cylinder - Assembly (inc. 2-6) (500)
2	3402-099	4		Guide, Valve
3	3423-068	4		Circlip
4	3423-043	2	/P	Pin, Dowel
5	3423-006	4		Screw, Cap
6	3008-376	2	S	Screw, Cap
7	3402-362	1		Gasket, Cylinder Head (500)
8	3423-088	2		Pin
9	3423-015	2		Screw, Cap
10	3423-016	2		Screw, Cap
11	3423-089	2	S	Screw, Cylinder Head Stud
12	3423-087	2	S	Screw, Cylinder Head Stud
13	3423-203	1	S/P	Bolt, Stud
14	3423-007	2	S	Screw, Cap
15	3004-376	4	S/P	Screw, Cap
16	3004-488	4	S/P	Nut
17	3004-326	1	S/P	Nut
18	3003-290	4	/P	Gasket
19	3402-010	4		Gasket, Head Nut
20	0217-632	1		Spark Plug (NGK CR6E)
21	3402-100	2		Cap, Inspection
22	3402-101	2		O-Ring
23	3004-341	4	S/P	Screw, Cap
24	3402-035	1		Plug, Cylinder Head
25	3402-357	1		Pipe, Intake - Assembly (500)
25	3402-358	1		Pipe, Intake - Assembly (500)
26	3423-353	1	/P	O-Ring (500)
27	3423-347	2		Screw, Cap (500)
28	3402-086	1	/P	Clamp
29	3004-341	1	S/P	Screw, Cap (500)
30	3413-012	1		Thermostat (500)
31	3530-005	1		Switch, Water Temperature - Assembly
32	3413-004	1		Cover, Thermostat
33	3423-354	1		Stud, Thermostat Cover (500)
34	3423-349	1		Nut (500)
35	3402-048	1	F	Plug, Frost

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
DECALS

 Page 29 of 94

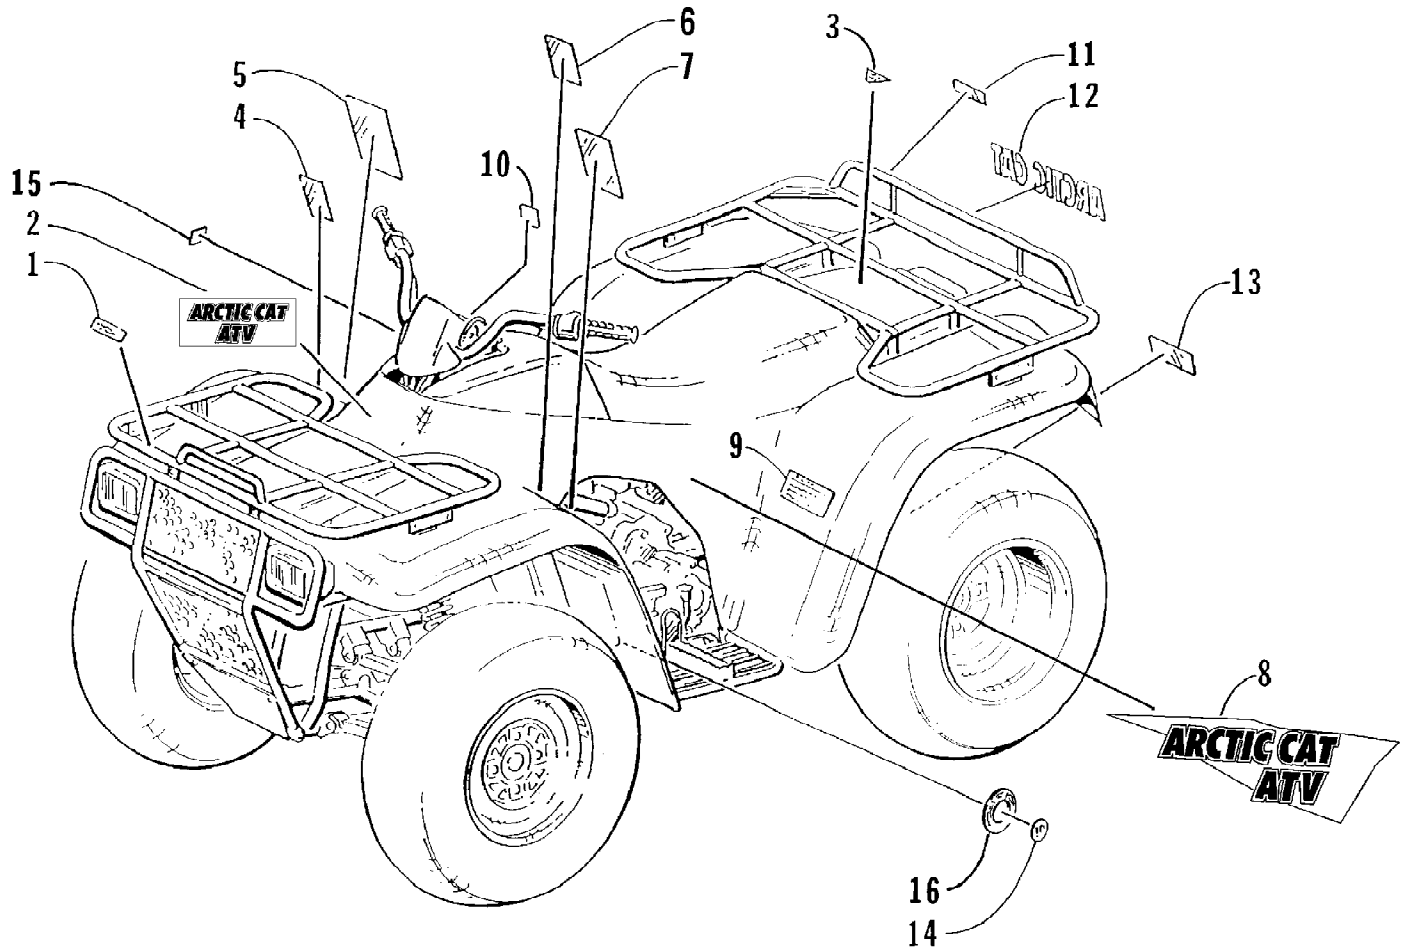


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
DECALS

Page 30 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	0411-006	1		Decal, Warning - Front Rack Load (4x4)
2	0411-211	1		Decal, Front (4x4) (Green)
3	3611-002	1		Decal, "Made In U.S.A."
4	0411-045	1		Decal, Warning - Turn
5	0411-008	1	/P	Decal, Warning Reverse/Pre-Ride
6	0411-040	1		Decal, Warning - Age
7	0411-218	1		Decal, Warning - General
8	0411-212	1		Decal, "500" - Right Side (Green)
8	0411-213	1		Decal, "500" - Left Side (Green)
9	0411-228	1		Decal, Warning - Tire Pressure (500)
10	0411-293	1		Decal, Fuel Valve (Green)
11	0411-007	1		Decal, Warning - Rear Rack Load (4x4)
12	0411-043	1	/P	Decal, "Arctic Cat"
13	0411-267	1		Decal, Warning - Towing (4x4)
14	0411-003	1		Decal, Shift Pattern
15	0411-011	1		Decal, Caution - Electrical
16	0411-009	1		Decal, Hi/Low Range

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
ENGINE AND EXHAUST

 Page 31 of 94

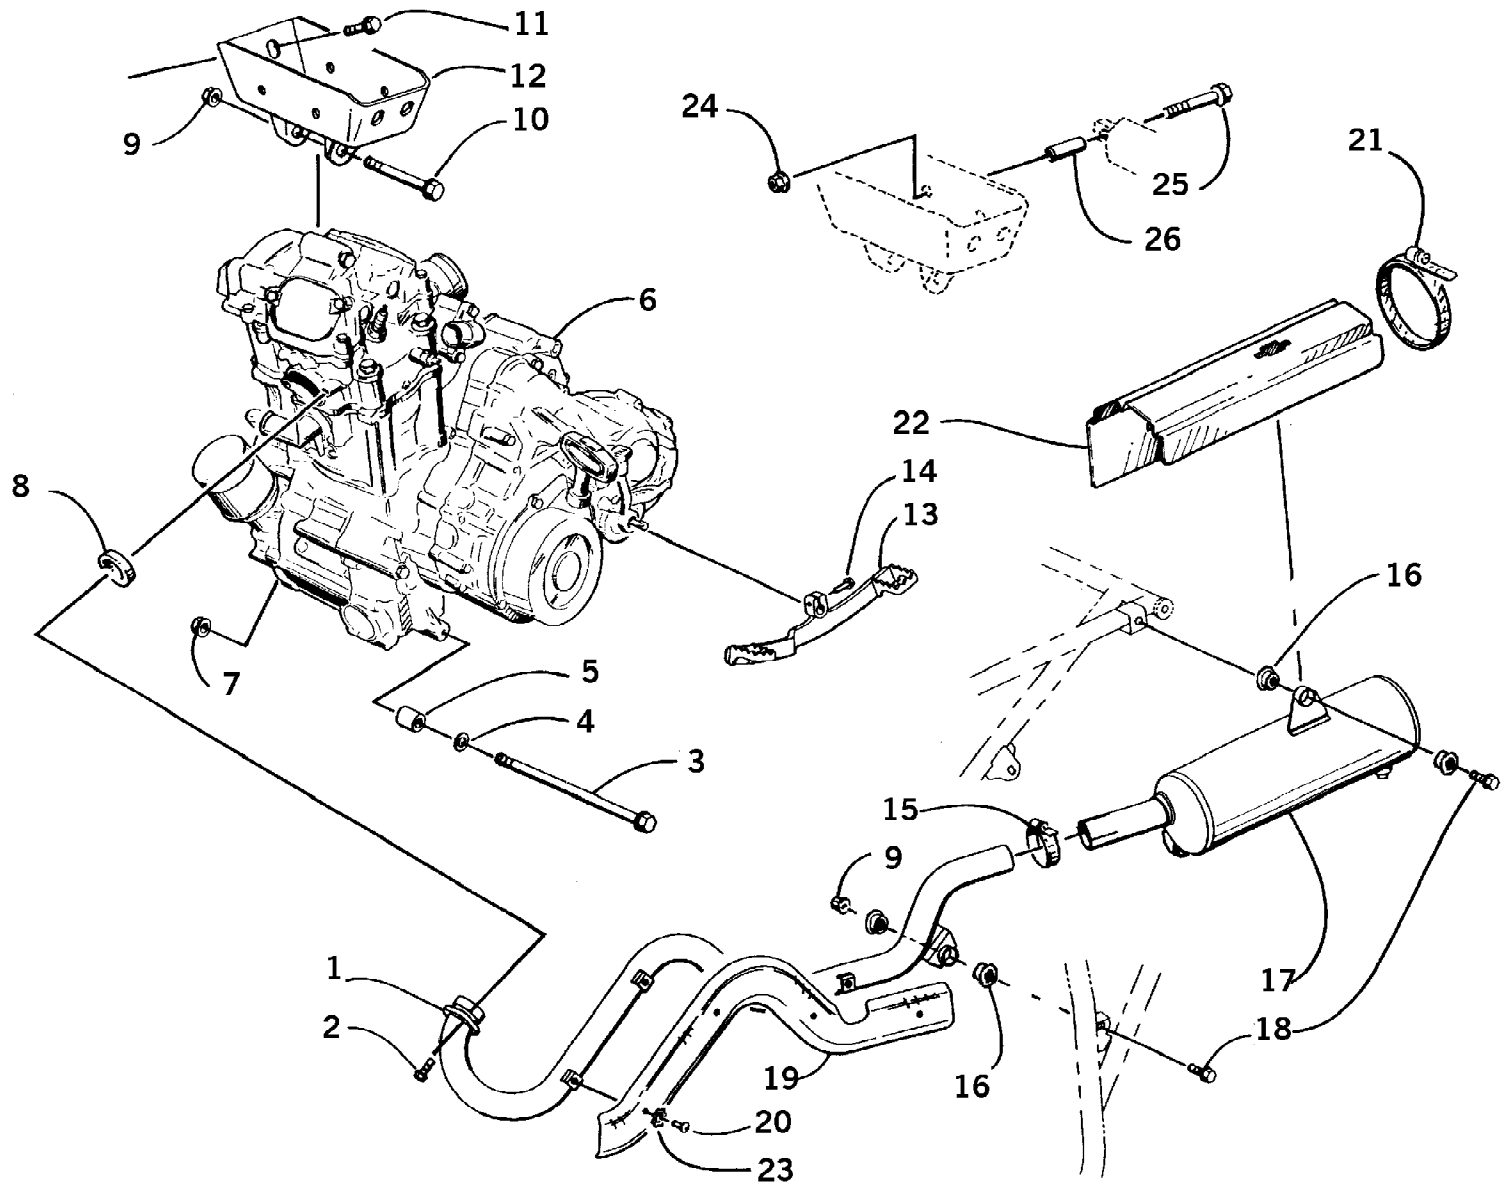


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
ENGINE AND EXHAUST

Page 32 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	0512-001	1		Pipe, Exhaust
2	8408-820	2	/P	Screw, Cap
3	3423-009	2	/P	Screw, Cap
4	0423-050	3		Washer, Engine
5	0423-042	1	S	Spacer, Engine
6	0462-011	1	S	Engine (500)
7	8428-002	3		Nut, Lock
8	0412-007	1	/P	Seal, Exhaust
9	8424-802	3		Nut
10	8408-860	1		Screw, Cap
11	8408-816	4		Screw, Cap
12	0506-083	1		Bracket, Engine - Upper
13	0502-084	1	/P	Lever, Shift
14	8476-620	1		Screw, Cap
15	0423-150	1		Clamp, Exhaust
16	0412-033	6		Bushing, Exhaust
17	0412-005	1	S	Muffler
18	0423-106	3		Screw, Machine - Shoulder
19	0406-224	1		Cover, Exhaust
20	8477-610	4		Screw, Machine
21	0423-079	2		Clamp, Hose
22	0406-298	1		Plate, Heat - Muffler
23	8053-211	4	S	Washer, Star
24	8424-602	2	/P	Nut
25	8476-640	2		Screw, Cap
26	0107-630	2		Spacer

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
FRAME AND RELATED PARTS

 Page 33 of 94

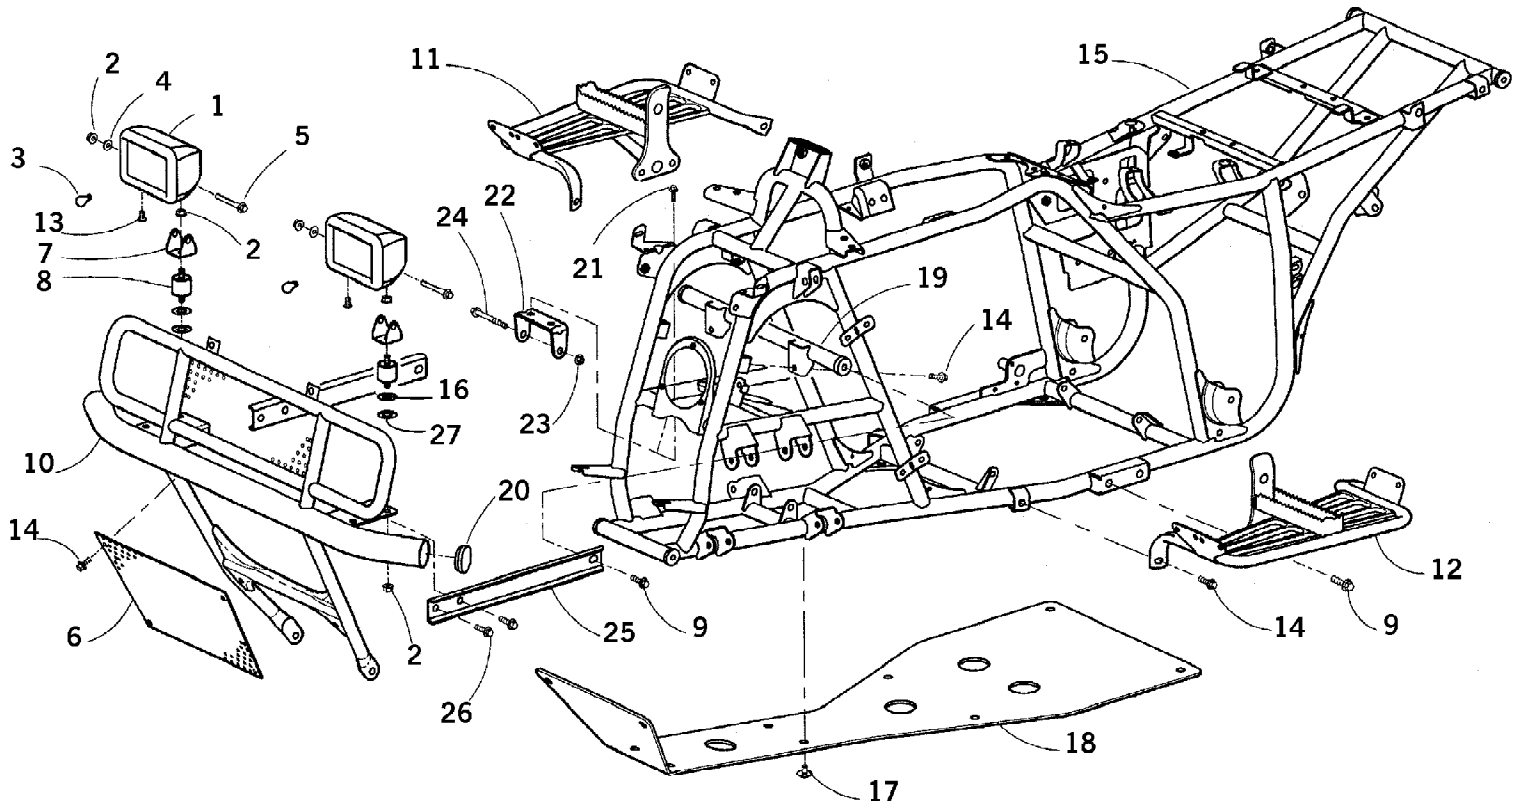


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
FRAME AND RELATED PARTS

Page 34 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	0409-001	2		Headlight Assembly (inc. 3 and 13)
2	8424-802	6		Nut
3	0409-005	2		Bulb, Headlight
4	8053-242	2	/P	Washer, Lock - External Tooth
5	8408-850	2		Screw, Cap
6	0406-175	1		Screen, Bumper - Lower (500)
7	0406-261	2		Yoke, Headlight
8	0406-262	2	S	Mount, Headlight
9	8409-020	8	/P	Screw, Cap
10	0506-294	1		Guard, Brush (500)
11	0506-176	1	S	Footrest - Right
12	0506-381	1	S	Footrest - Left
13	0123-590	2		Screw, Machine
14	8408-816	0		Screw, Cap
15	0506-349	1	S	Frame, Main
16	3423-204	2	/P	Washer
17	0423-101	0		Screw, Body
18	0406-354	1	/P	Panel, Belly
19	0506-079	1		Tube, Cross - Bumper (500)
20	0406-130	2		Cap, Bumper (500)
21	8408-820	2	/P	Screw, Cap (4x4)
22	0506-149	1		Bracket, Differential (4x4)
23	8428-002	2		Nut, Lock (4x4)
24	3423-010	2	/P	Screw, Cap (4x4)
25	0506-297	2	S	Channel, Bumper Mounting (500)
26	8408-812	0		Screw, Cap
27	0623-710	2		Washer, Lock - High Collar

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
FRONT BEVEL GEAR ASSEMBLY

 Page 35 of 94

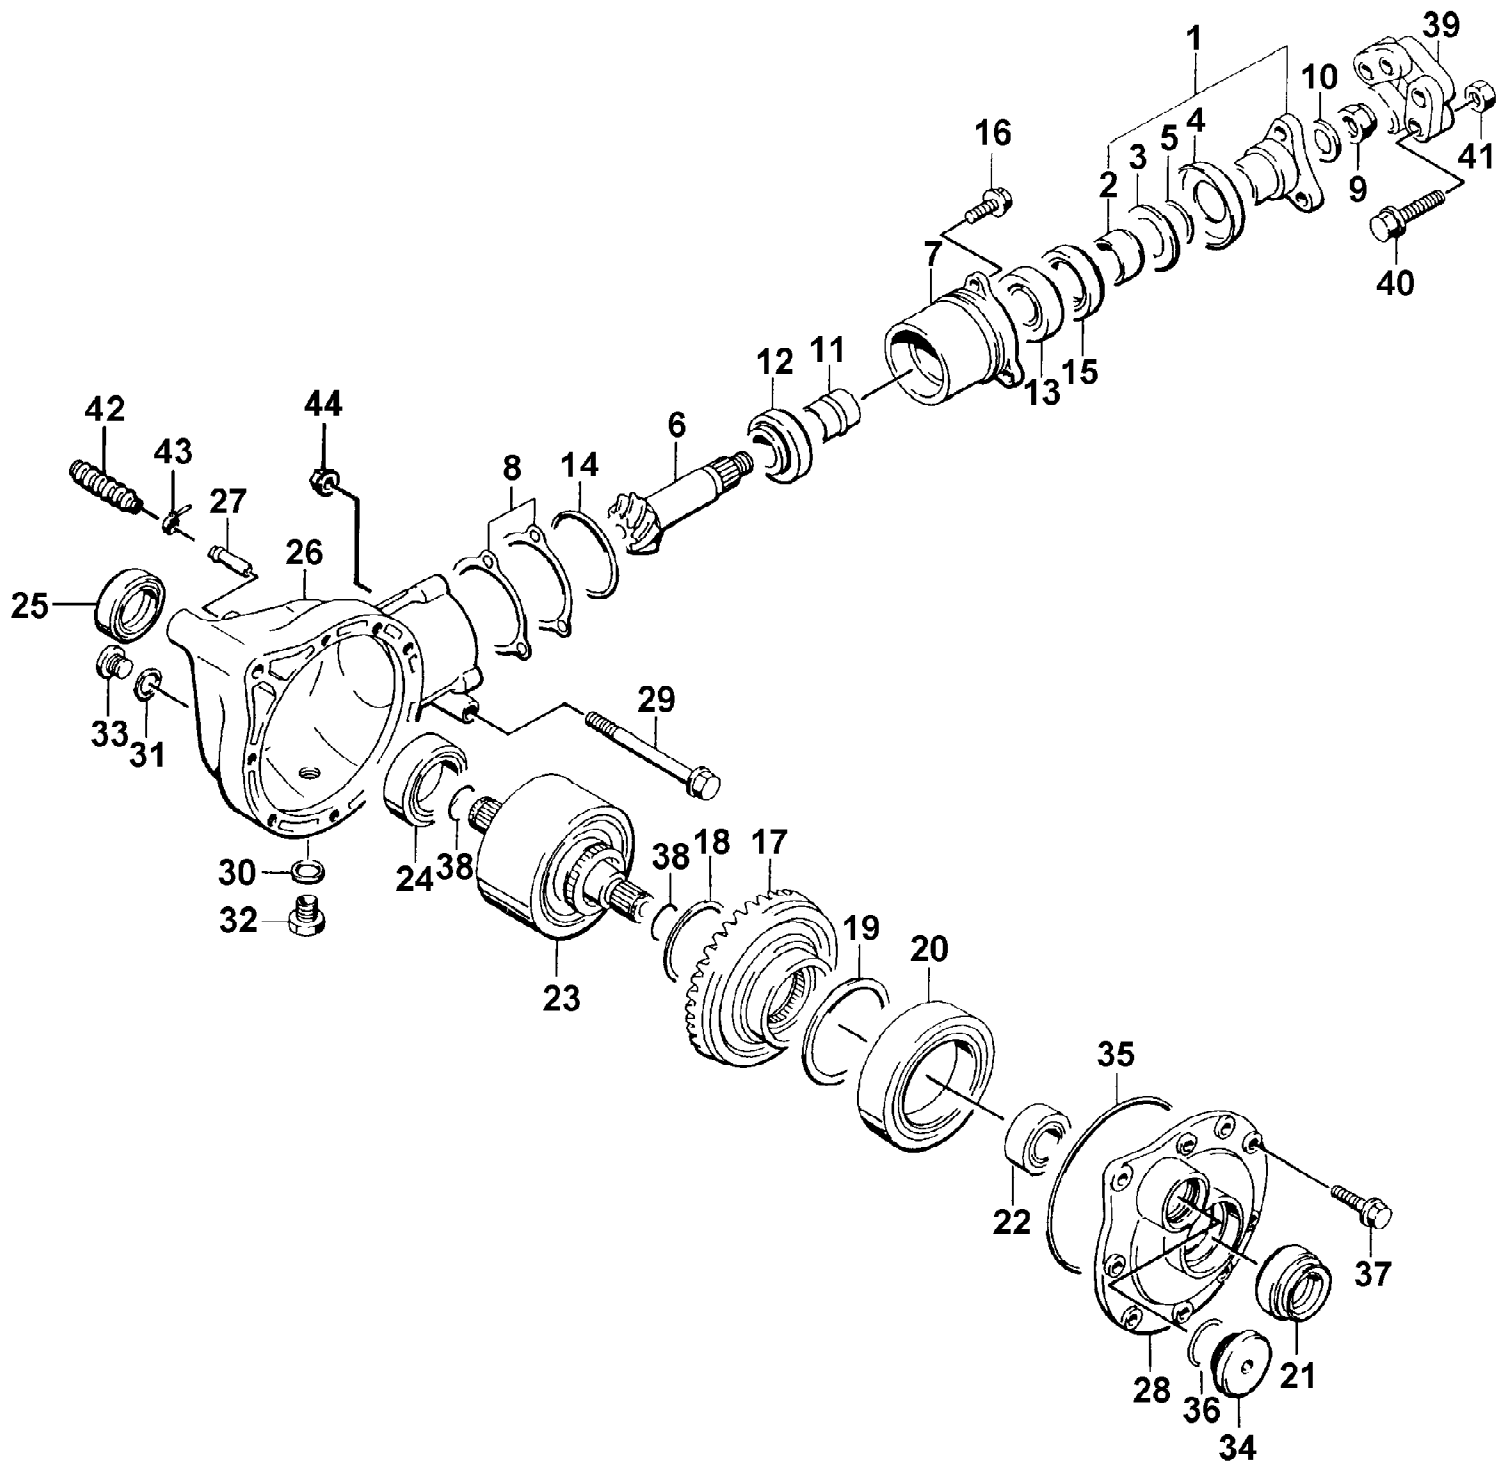


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
FRONT BEVEL GEAR ASSEMBLY

Page 36 of 94

Ref #	Part Number	Qty	S/P/F	Description
	3502-003	1	S/P	Complete Assembly
1	3435-089	1	/P/F	Flange, Gear (inc. 2-5)
2	3435-029	1	F	Collar, Gear
3	3435-030	1	F	Plate, Oil Seal
4	3423-034	1	F	Plate, Gear
5	3423-060	1	F	O-Ring, Collar
6	3435-086	1		Gear, Bevel
7	3435-021	1		Housing, Bevel Gear
8	3435-022	1		Shim Set, Housing
9	3423-178	1	/P/F	Nut, Gear
10	3423-028	1	F	Washer, Bevel Gear
11	3402-016	1		Spacer, Bevel Gear
12	3402-065	1		Bearing
13	3402-066	1	/P	Bearing
14	3423-064	1		O-Ring
15	3402-072	1		Seal, Joint
16	3423-175	3	S	Bolt, Housing
17	3435-087	1		Gear
18	3435-017	1		Shim Set
19	3435-020	1		Shim Set
20	3402-059	1		Bearing
21	3402-072	1		Seal - Left
22	3402-185	1		Bearing - Left
23	3435-085	1		Differential - Assembly (500)
24	3402-057	1		Bearing, Differential Case - Right
25	3402-072	1		Seal, Output Oil
26	3435-024	1		Housing (inc. 27)
27	3402-084	1		Union, Breather
28	3435-025	1		Case, Bearing
29	3423-010	2	/P	Bolt, Mounting
30	3402-012	1		Gasket, Oil Drain Plug
31	3402-013	1	/P	Gasket, Oil Filler Plug
32	3402-036	1	S	Plug, Oil Drain
33	3402-041	1	S	Plug, Oil Filler
34	3402-197	1		Plug
35	3423-050	1		O-Ring
36	3423-061	1		O-Ring
37	3423-175	8	S	Screw, Cap
38	3423-070	2		Ring, Driveshaft - Front
39	3435-007	1	F	Coupling, Propeller Shaft
40	3423-182	6	S/F	Screw, Cap
41	3004-491	6	S/P/F	Nut
42	0402-147	1	S/F	Bladder, Housing
43	0123-811	1	F	Tie, Cable
44	8428-002	2		Nut, Lock

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
FRONT SUSPENSION ASSEMBLY

 Page 37 of 94

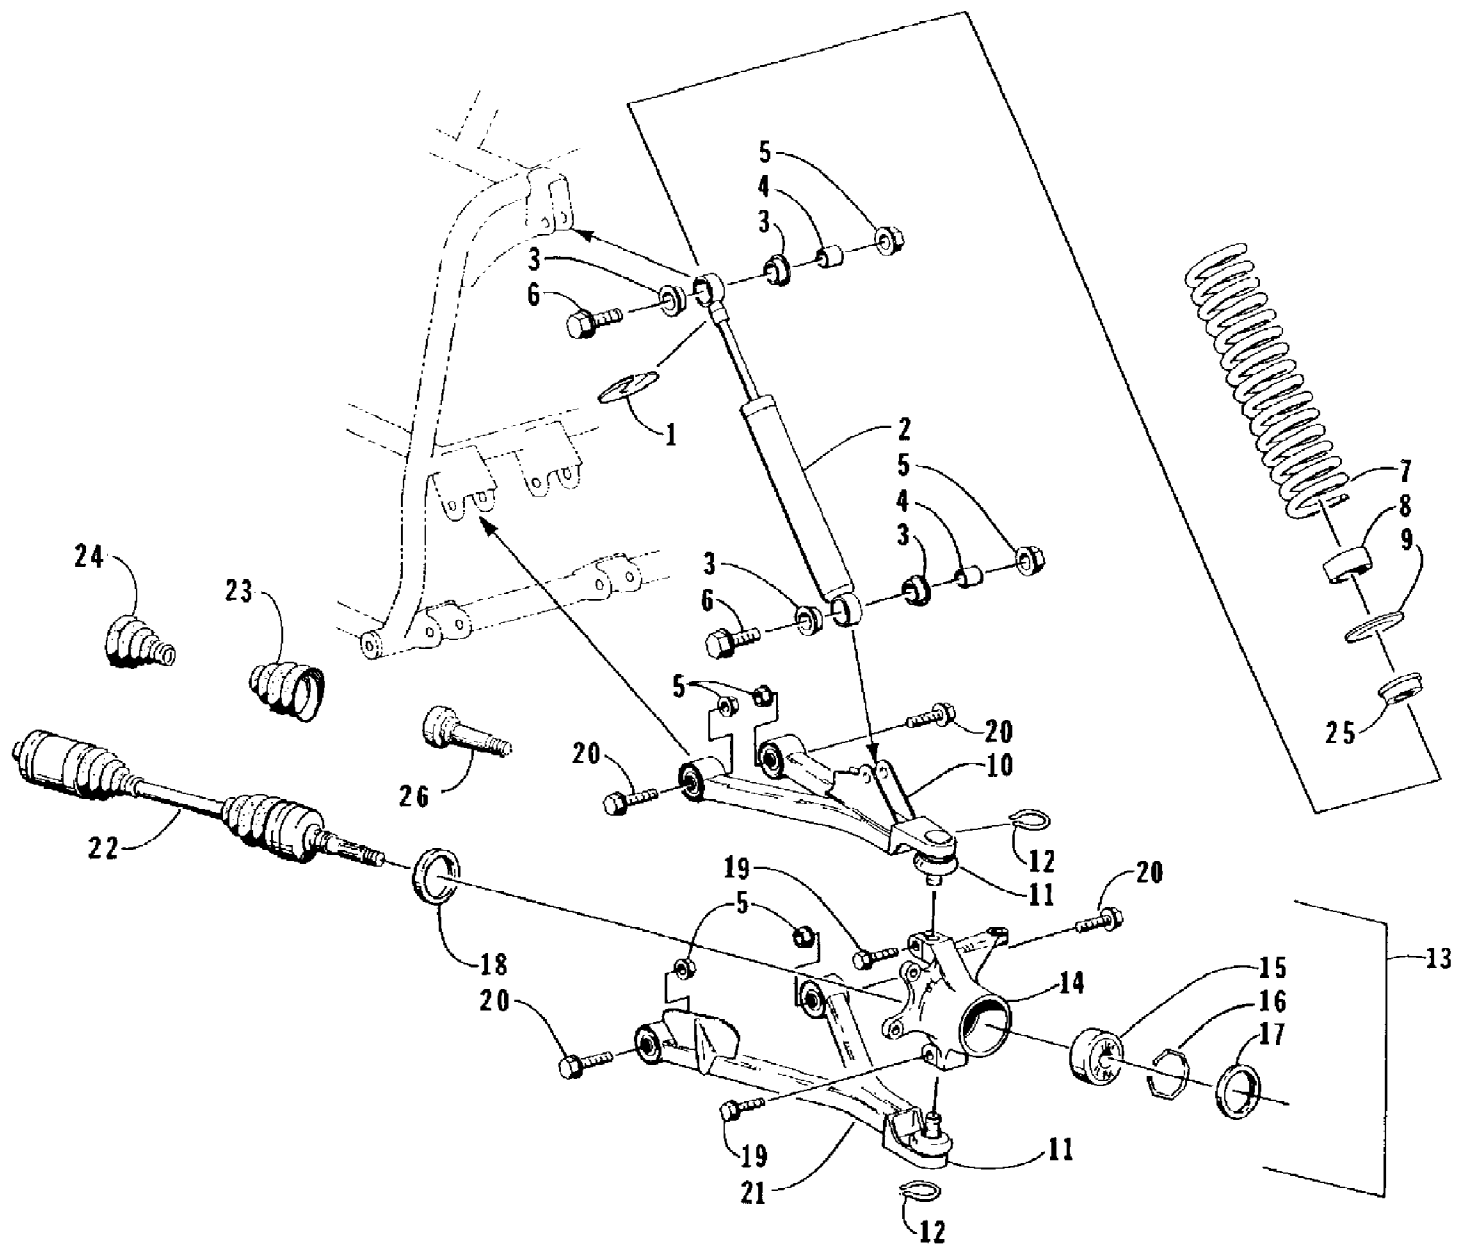


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
FRONT SUSPENSION ASSEMBLY

Page 38 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	0603-033	2	S	Retainer, Spring
2	0403-001	2		Shock Absorber - Front (inc. 3-4) (4x4)
3	0604-310	8		Bushing, Shock Absorber
4	0403-028	4		Sleeve, Shock
5	8428-002	12		Nut, Lock
6	8409-040	4		Screw, Cap
7	0403-002	2		Spring, Shock Absorber
8	0403-025	2	/P	Collar, Spring
9	0403-013	2		Washer, Spring
10	0503-026	1	S/P	A-Arm, Upper Right - Assembly (inc. 11-12)
10	0503-027	1	S/P	A-Arm, Upper Left - Assembly (inc. 11-12)
11	0405-068	4	S	Ball Joint - Front
12	0423-009	4	/P	Clip, Ball Joint
13	0505-026	1	S/P	Knuckle - Assembly - Right (inc. 14-18)
13	0505-027	1	S/P	Knuckle - Assembly - Left (inc. 14-18)
14	0505-062	1	S	Knuckle, Steering - Right
14	0505-063	1	S	Knuckle, Steering - Left
15	0402-275	2	/P	Bearing, Wheel Hub - Front
16	0423-034	2		Clip, Bearing
17	0402-089	2		Seal, Wheel Bearing - Front
18	0402-069	2		Seal, Wheel Bearing - Front
19	8409-030	4		Screw, Cap
20	8409-060	8		Screw, Cap
21	0503-082	1	S	A-Arm, Lower Right (inc. 11-12) (4x4)
21	0503-083	1	S	A-Arm, Lower Left (inc. 11-12) (4x4)
22	0402-179	2	S	Axle, Drive - Front (4x4)
23	0436-114	2	S	Repair Kit, Outer Boot - Front Axle
24	0436-113	2	S	Repair Kit, Inner Boot - Front Axle
25	0403-027	2		Retainer, Spring - Lower

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
FUEL TANK ASSEMBLY

 Page 39 of 94

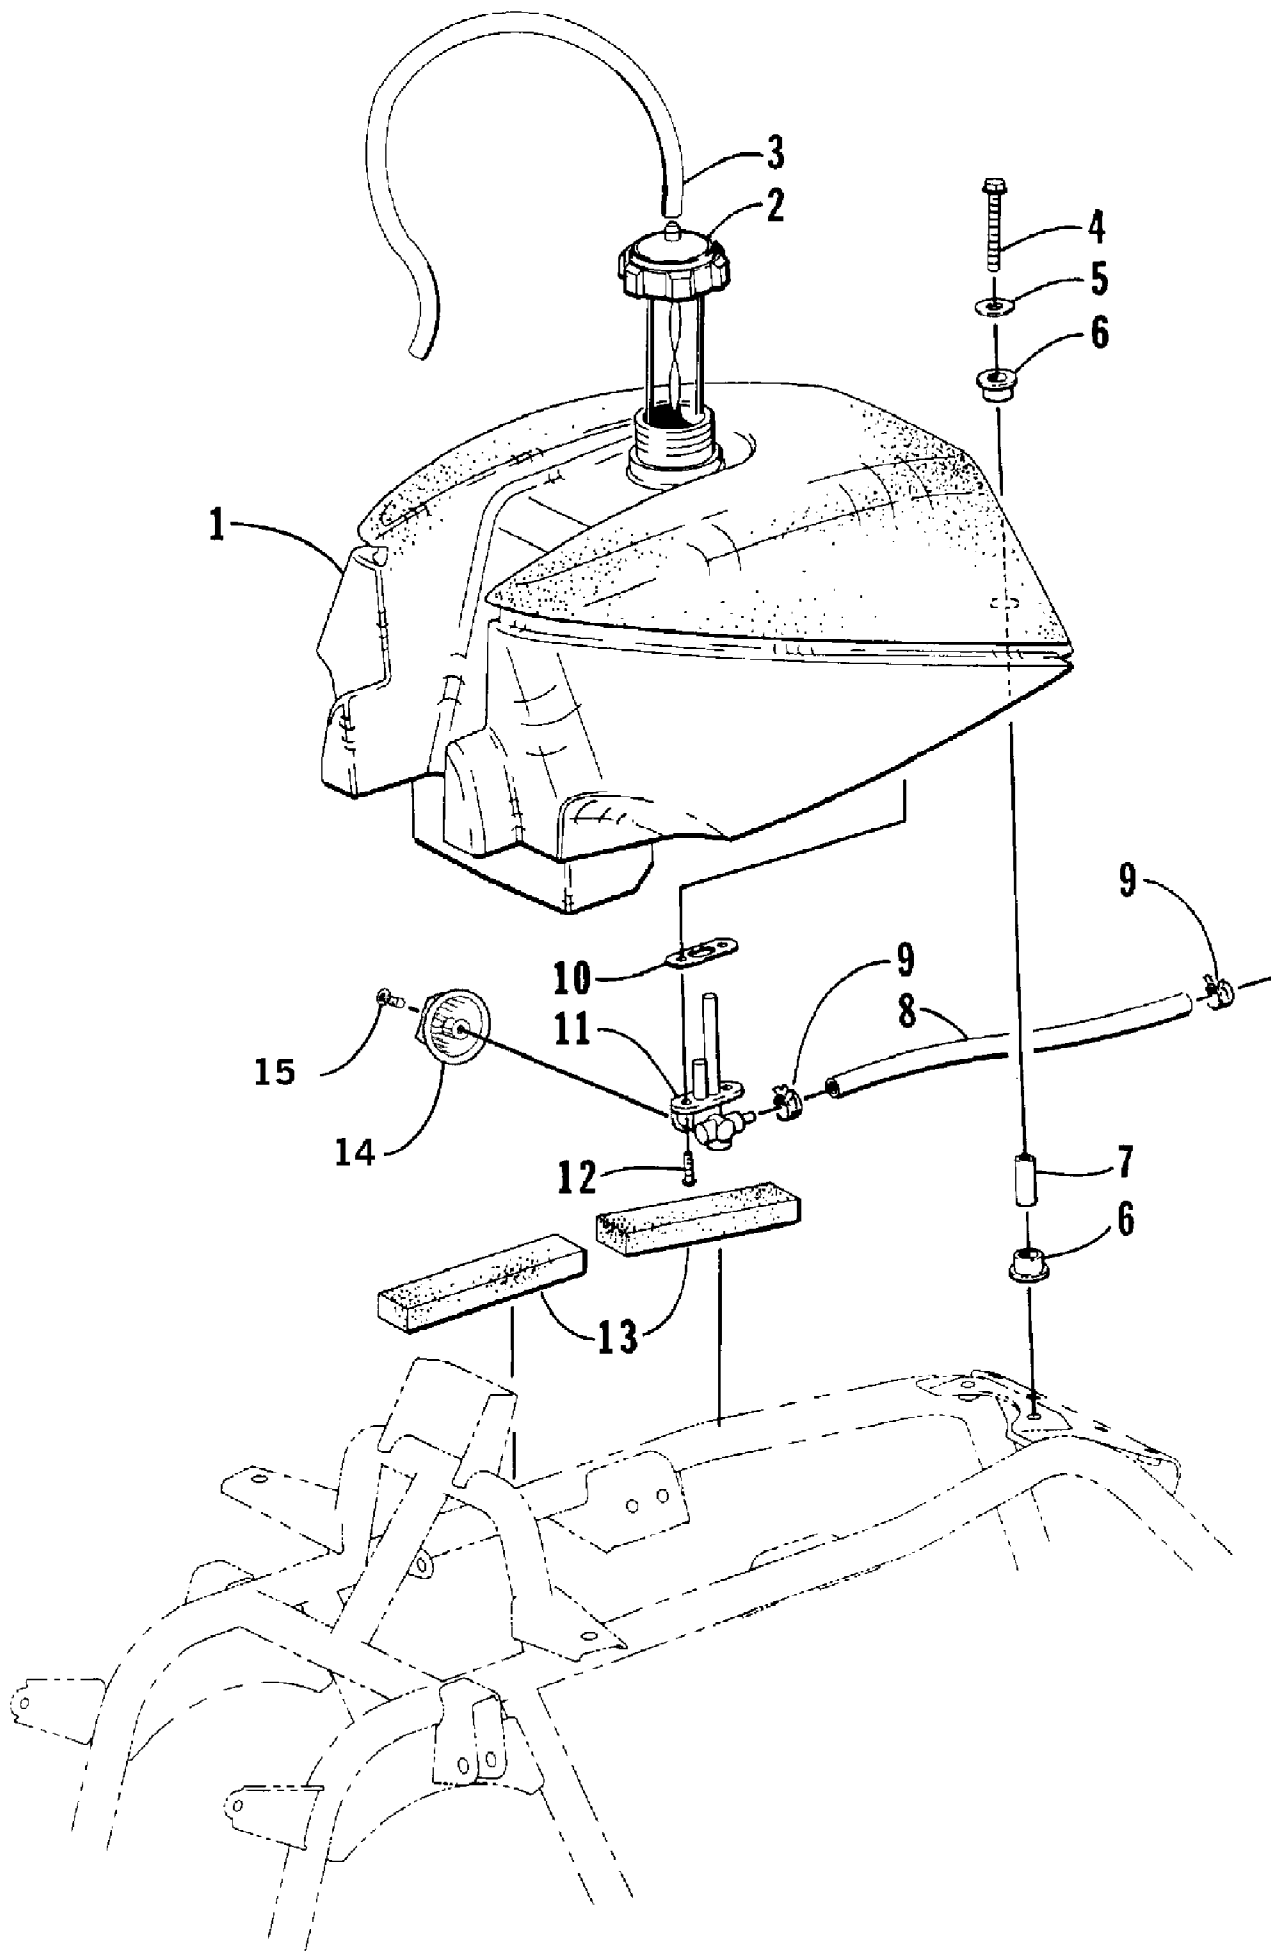


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
FUEL TANK ASSEMBLY

Page 40 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	0570-040	1	/P	Tank, Fuel - Assembly (inc. 2-3 and 8-12)
2	0470-369	1	/P	Cap, Fuel Tank (inc. 3)
3	0470-316	1		Hose, Fuel Cap Vent
4	8476-650	2		Screw, Machine
5	0623-184	2		Washer
6	0406-169	4		Bushing, Fuel Tank Mount
7	0406-170	2		Collar, Fuel Tank Mount
8	0610-007	0	/P	Hose, Gasline - 25 ft
9	0423-152	2		Clamp, Hose - Spring
10	0	1	F	Gasket, Fuel
11	0470-401	1	S	Valve, Fuel Shut-Off (inc. 10)
12	8471-616	2		Screw, Machine
13	0417-001	4		Pad, Fuel Tank
14	0470-408	1		Valve, Fuel Shut-Off
15	0423-146	1		Screw, Fuel Shut-Off Valve

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
GEAR SHIFTING ASSEMBLY

 Page 41 of 94

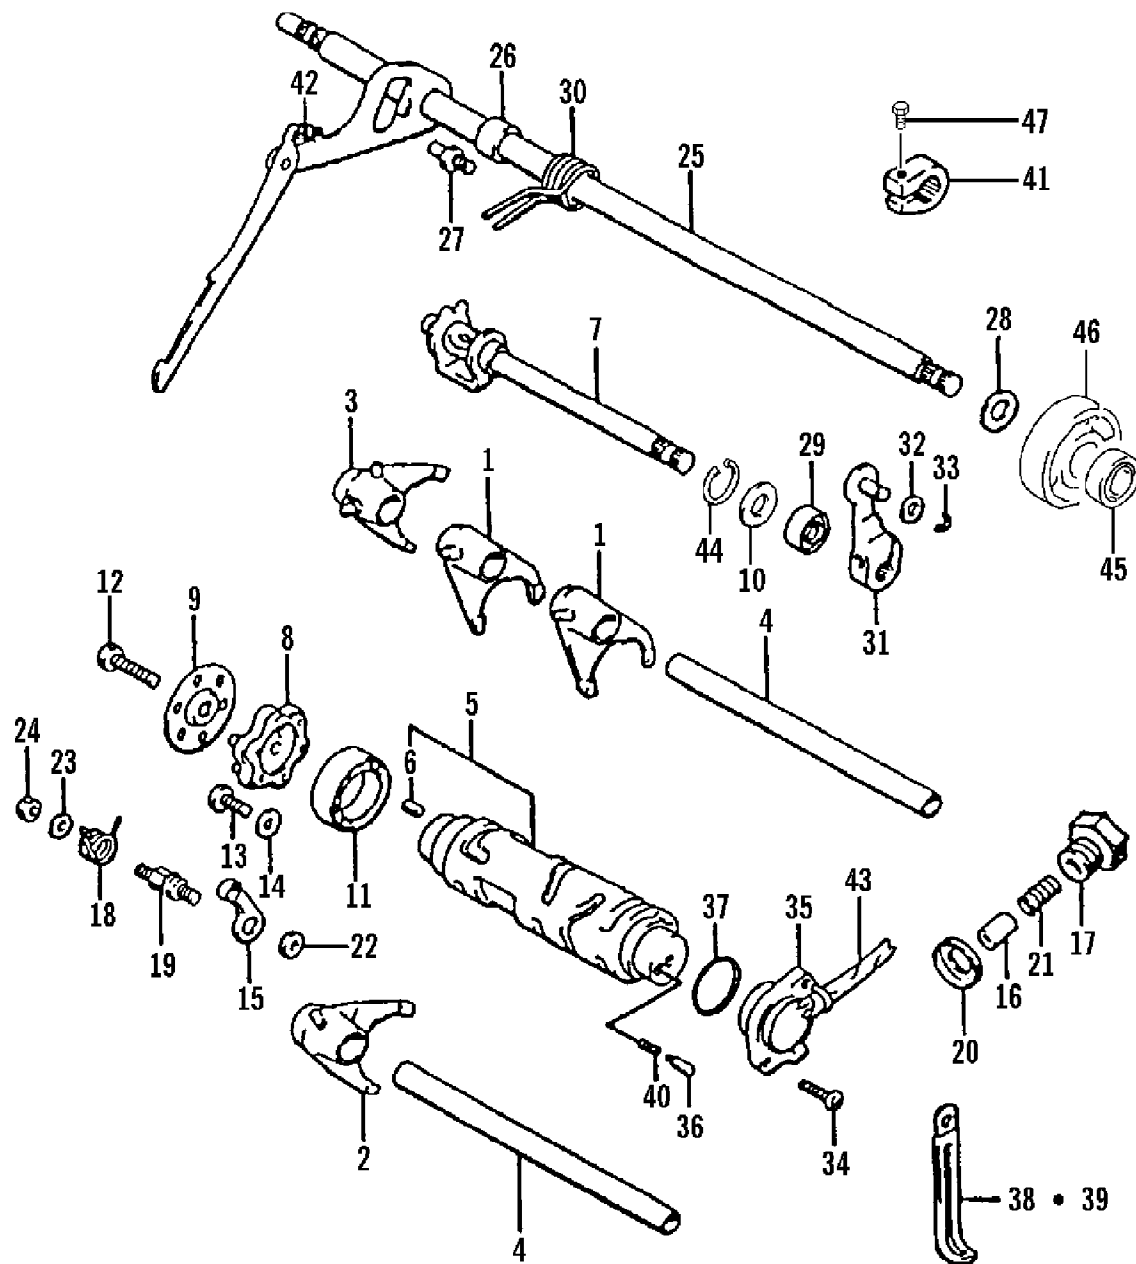


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
GEAR SHIFTING ASSEMBLY

Page 42 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	3446-038	2		Fork (No. 2)
2	3446-039	1		Fork (No. 3)
3	3446-040	1		Fork, Reverse
4	3446-052	2		Shaft, Gear Shift Fork
5	3446-041	1		Cam, Gear Shift (inc. 6)
6	3423-114	1	/P	Pin, Gear Shift
7	3446-241	1		Cam, Reverse Shift
8	3446-049	1		Plate, Gear Shift Cam
9	3446-050	1	S	Guide, Gear Shift Cam Plate
10	3423-357	1		Washer, Reverse Shift Cam
11	3402-051	1		Bearing, Gear Shift Cam
12	3423-125	1	S	Bolt, Clutch Release Arm
13	3004-552	2	S	Screw, Cam Bearing Retainer
14	3423-135	2		Retainer, Bearing
15	3446-043	1		Stopper, Gear Shift Cam
16	3446-117	1		Stopper, Reverse Shift Cam
17	3446-164	1		Housing, Reverse Cam Stopper
18	3446-047	1		Spring, Shift Cam Stopper Arm
19	3446-048	1		Support, Shift Cam Stopper
20	3402-012	1		Gasket, Cam Stopper Housing
21	3402-088	1		Spring, Reverse Cam Stopper
22	3423-141	1		Washer, Gear Shift Cam
23	3423-142	1		Washer, Cam Stopper Arm
24	3004-488	1	S/P	Nut, Cam Stopper Arm Support
25	3446-243	1	S	Shaft, Gear Shift (inc. 42)
26	3446-054	1		Spacer, Gear Shift Shaft
27	3446-056	1		Stopper, Gear Shift Arm
29	3402-076	1		Seal, Reverse Shift Oil
30	3402-094	1		Spring, Gear Shift Return
31	3446-055	1		Arm, Reverse Gear Shift
32	3423-204	1	/P	Washer, Gear Shift Cable Arm (500)
33	3423-168	1	S	E-Ring, Gear Shift Cable Arm
34	3423-166	2	S	Screw, Cap
35	3430-015	1	/P	Base Assembly
36	3423-044	1		Contact, Neutral
37	3423-059	1		O-Ring, Neutral
38	3004-787	1		Clamp
39	3002-964	1	/P	Clamp
40	3402-087	1		Spring
41	3402-008	1	/P	Hub, Gear Shift
42	3402-093	1		Spring, Gear Shift
43	0706-990	0	/P	Tape, Foil
44	3423-358	1	S	Circlip, Reverse Shift Cam
45	3402-068	1	/P	Seal, Gear Shift Shaft Oil (500)
46	3402-385	1		Bearing, Gear Shift (500)

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
HI/LO SHIFTER ASSEMBLY (4X4)

 Page 43 of 94

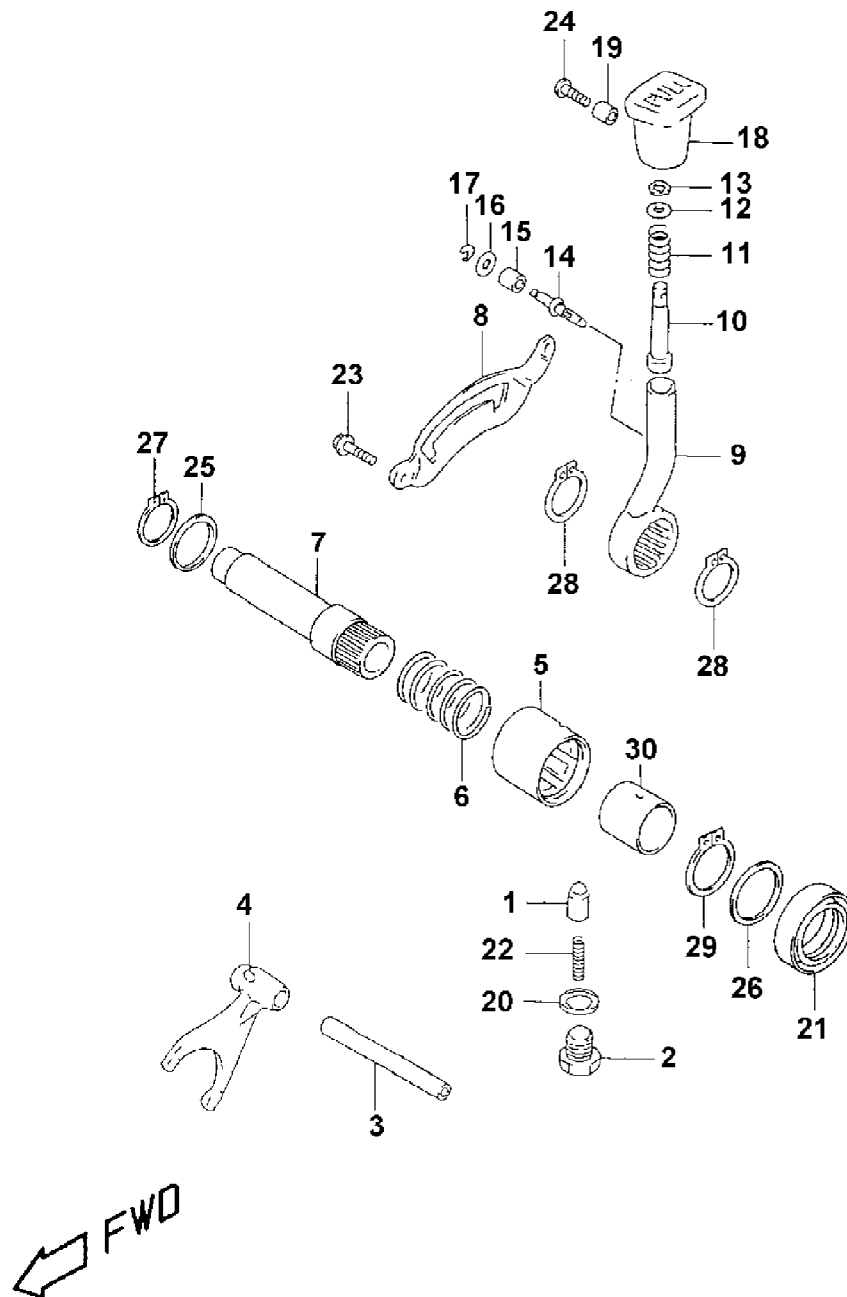


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
HI/LO SHIFTER ASSEMBLY (4X4)

Page 44 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	3446-242	1		Stopper, Shift Cam
2	3446-046	1		Housing, Shift Cam Stopper
3	3446-051	1		Shaft, Shift Fork
4	3446-073	1		Fork, Shift
5	3446-250	1		Cam, Shift (500)
6	3446-104	1		Spring
7	3446-251	1	S	Shaft, Shift
8	3446-077	1		Plate, Lever Stop
9	3446-105	1	/P	Lever, Shift - Assembly (inc. 10-17)
10	3446-252	1		Sub-Rod
11	3446-107	1		Spring
12	3423-155	1		Washer
13	3423-154	1		Circlip
14	3423-205	1		Pin
15	3446-106	1		Collar
16	3423-152	1	/P	Washer
17	3423-153	1		E-Clip
18	3446-078	1		Handle
19	3402-191	1		Spacer
20	3402-012	1		Gasket, Shift Cam Stopper
21	3402-071	1	/P	Seal, Oil
22	3446-113	1		Spring
23	3004-377	2	S/P	Bolt, Lever Stop Plate
24	3423-156	1	S	Screw, Shift Handle
25	3402-382	1		Washer, Cam Stop
26	3423-158	1	/P	Washer, Shaft - Left
27	3423-191	1	/P	Circlip, Cam Spring
28	3423-192	2	/P	Circlip, Shift Lever
29	3423-193	1	S/P	Circlip, Shaft - Left
30	3446-261	1		Spacer Set (500)

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
HYDRAULIC BRAKE ASSEMBLY

 Page 45 of 94

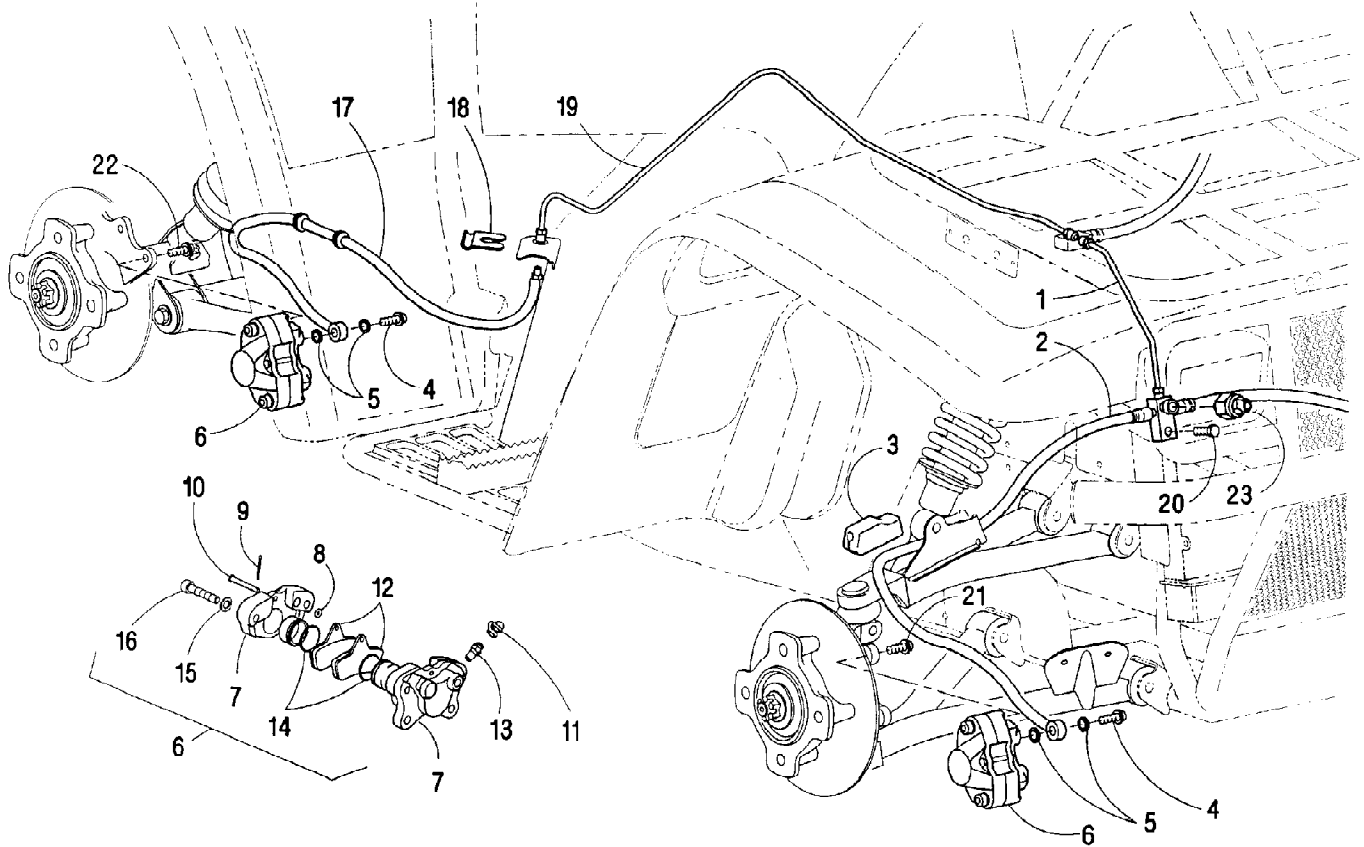


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
HYDRAULIC BRAKE ASSEMBLY

Page 46 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	0402-373	1		Tube, Brake Line - Front (4x4)
2	0402-307	1		Hose, Brake - Front (4x4)
3	0402-073	2		Block, Mounting
4	0423-038	3	S	Bolt, Oil
5	0423-039	6		Washer, Crush
6	0402-010	1	/P	Caliper, Brake - Right Front (inc. 7-16)
6	0402-011	2	/P	Caliper, Brake - Left Front & Rear (inc. 7-16)
7	0	6	F	Housing, Caliper
8	0402-164	3		O-Ring
9	0117-868	3		Pin, Cotter
10	0402-142	3		Pin, Brake Caliper
11	0402-143	3		Cap, Bleeder Valve
12	0402-096	6	S	Pad, Brake
13	0402-167	3		Valve, Bleeder
14	0402-141	6		O-Ring, Brake Caliper
15	0402-165	6		Washer
16	0402-166	6	S	Screw, Socket Head
17	0402-184	1		Hose, Brake - Rear
18	0402-115	1	S	Clip, Brake Line
19	0402-054	1		Tube, Brake Line - Rear
20	8476-625	2		Screw, Machine
21	8408-825	6		Screw, Cap
22	8408-820	1	/P	Screw, Cap
23	0402-306	1	/P	Switch, Brake Pressure (4x4)

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
HYDRAULIC BRAKE ASSEMBLY (VIN H7YT308776 & Up)

 Page 47 of 94

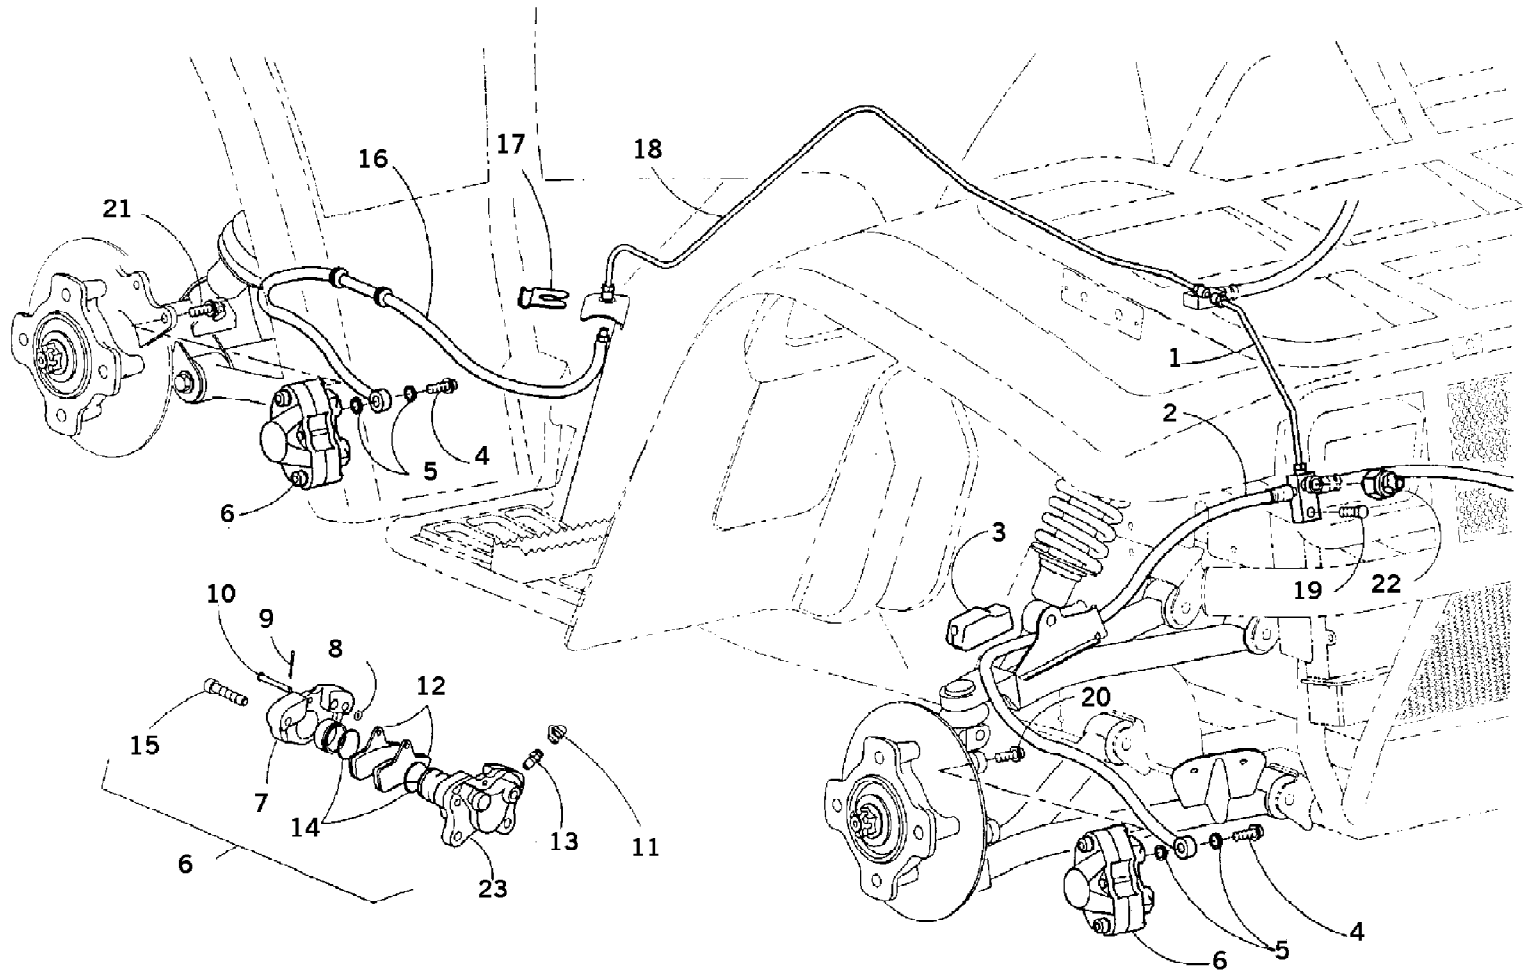

2000 500 4X4 (GREEN) (A2000ATM4AUSG)


Page 48 of 94

HYDRAULIC BRAKE ASSEMBLY (VIN H7YT308776 & Up)

Ref #	Part Number	Qty	S/P/F	Description
1	0402-373	1		Tube, Brake Line - Front
2	0402-307	1		Hose, Brake - Front
3	0402-073	2		Block, Mounting
4	0423-038	3	S	Bolt, Oil
5	0423-039	6		Washer, Crush
6	0402-488	1	S	Caliper, Brake - Right Front (inc. 7-15 and 23)
6	0402-489	2	S	Caliper, Brake - Left Front and Rear (inc. 7-15 and 23)
7	0	3	F	Housing, Caliper
8	0402-490	3		O-Ring
9	0402-496	3	S	Pin, Cotter
10	0402-495	3		Pin, Brake Caliper
11	0402-493	3		Cap, Bleed Valve
12	0402-494	6	S	Pad, Brake
13	0402-491	3	S	Valve, Bleed
14	0402-487	6		O-Ring, Brake Caliper
15	0402-492	12		Screw, Cap
16	0402-184	1		Hose, Brake - Rear
17	0402-115	1	S	Clip, Brake Line
18	0402-054	1		Tube, Brake Line - Rear
19	8476-625	1		Screw, Cap
20	8408-825	4		Screw, Cap
21	8408-820	2	/P	Screw, Cap
22	0402-306	1	/P	Switch, Brake Pressure
23	0	3	F	Housing, Caliper

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
HYDRAULIC BRAKE CONTROL ASSEMBLY

 Page 49 of 94

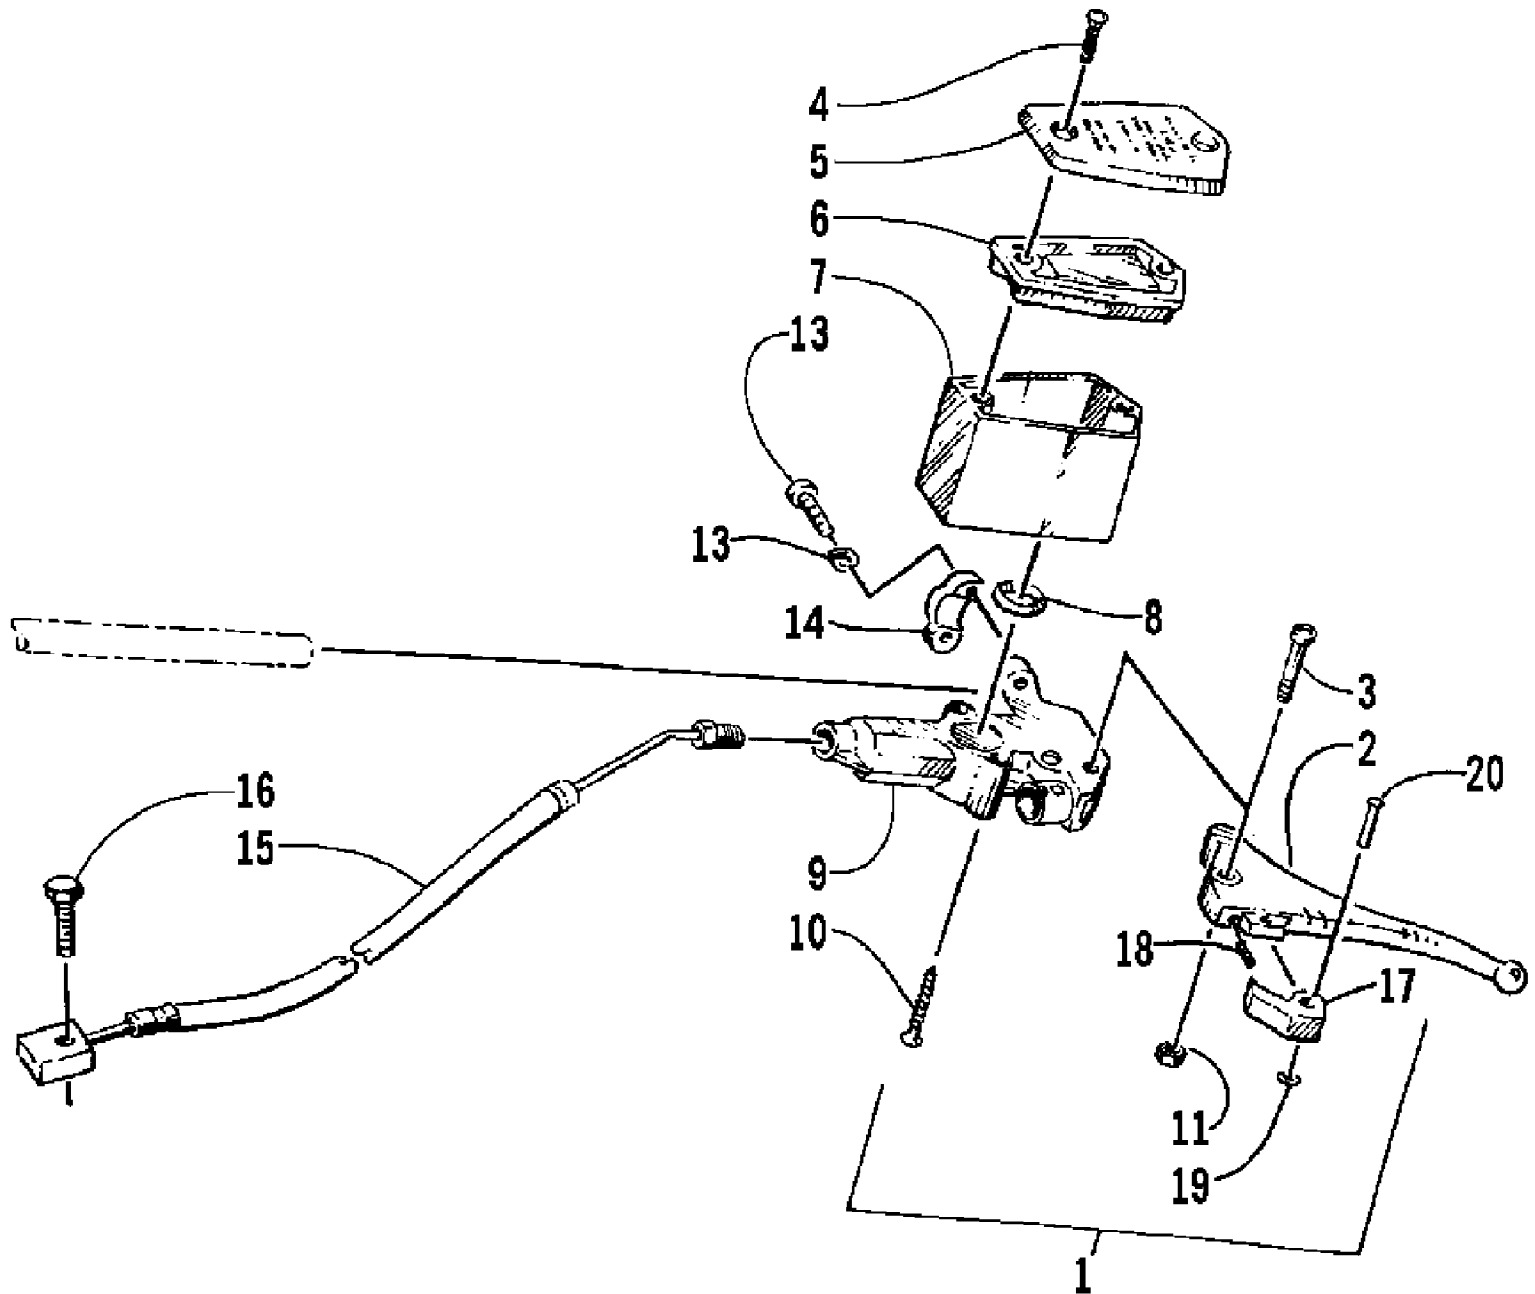


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
HYDRAULIC BRAKE CONTROL ASSEMBLY

Page 50 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	0502-132	1	S	Brake, Lever - Assembly (inc. 2-14 and 17-20)
2	0402-423	1	/P	Lever, Brake
3	0623-430	1	/P	Bolt, Lever Mounting
4	0623-506	2		Screw, Reservoir Cover
5	0602-742	1		Cover, Reservoir
6	0602-741	1		Gasket, Reservoir Cover
7	0602-740	1		Reservoir, Hydraulic Brake
8	0602-587	1		O-Ring, Reservoir/Master Cylinder
9	0	1	F	Master Cylinder
10	0623-432	2		Screw, Reservoir Mount
11	0623-056	1		Nut, Lock
12	8052-212	2		Washer, Lock - Internal Tooth
13	0623-613	2	/P	Screw, Cap
14	0602-907	1		Clamp
15	0402-050	1	S	Hose, Master Cylinder
16	8476-625	1		Screw, Cap
17	0402-240	1	S	Lever, Brake Lock
18	0402-245	1		Spring
19	0423-090	1		Nut, Press
20	0402-246	1		Pin

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
MAGNETO ASSEMBLY

 Page 51 of 94

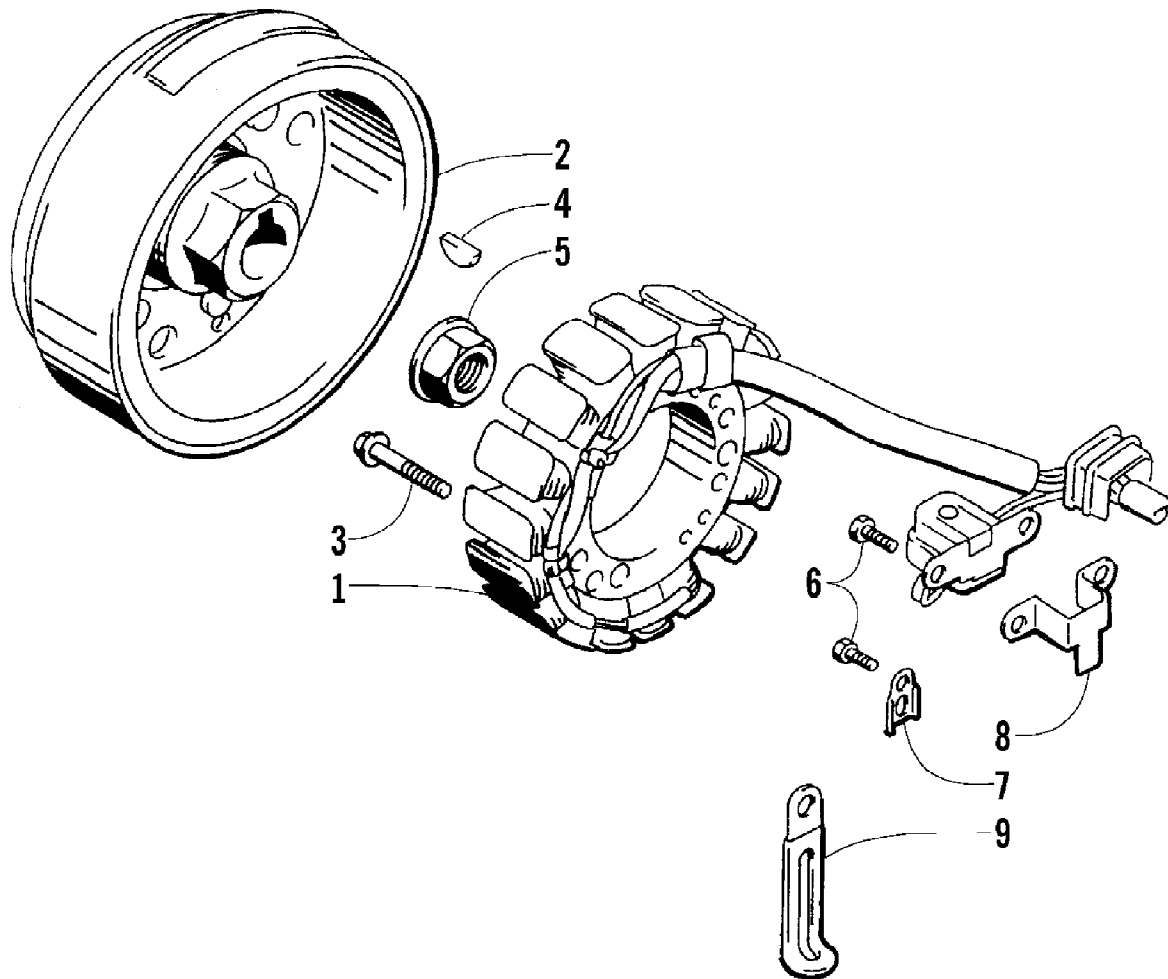


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
MAGNETO ASSEMBLY

Page 52 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	3430-011	1	/P	Stator Assembly
2	3430-012	1		Rotor/Flywheel
3	3423-162	3	S	Bolt
4	0691-785	1		Key
5	3423-086	1		Nut
6	3423-005	3	/P	Screw, Cap
7	3430-005	1		Clamp (No. 1)
8	3430-006	1		Clamp (No. 2)
9	3002-964	1	/P	Clamp (No. 3)

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
MECHANICAL BRAKE ASSEMBLY

 Page 53 of 94

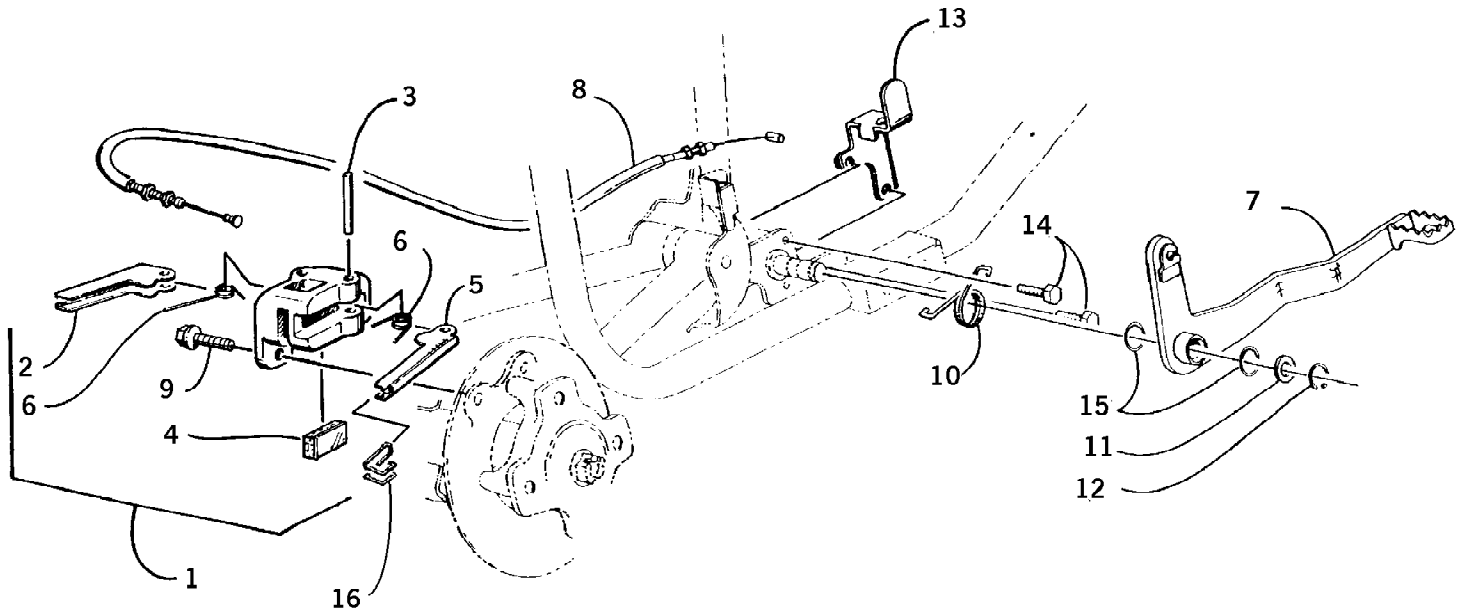


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
MECHANICAL BRAKE ASSEMBLY

Page 54 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	0502-115	1	S	Mechanical Brake Assembly (inc. 2-6)
2	0	1	F	Arm, Inner
3	0	2	F	Pin, Arm
4	0402-210	2	S	Pad, Brake
5	0	1	F	Arm, Outer
6	0	2	F	Spring, Arm
7	0502-095	1	/P	Lever, Brake
8	0487-006	1		Cable, Brake - Rear
9	8408-820	2	/P	Screw, Cap
10	0402-161	1	S/P	Spring, Brake
11	0423-027	1		Washer, Brake Lever
12	0623-237	1	/P	Ring, Snap
13	0502-056	1		Bracket, Brake Switch
14	8476-616	2		Screw, Cap
15	0670-183	2		O-Ring
16	0402-379	1		Wire Form, Cable

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
OIL FILTER/PUMP ASSEMBLY

 Page 55 of 94

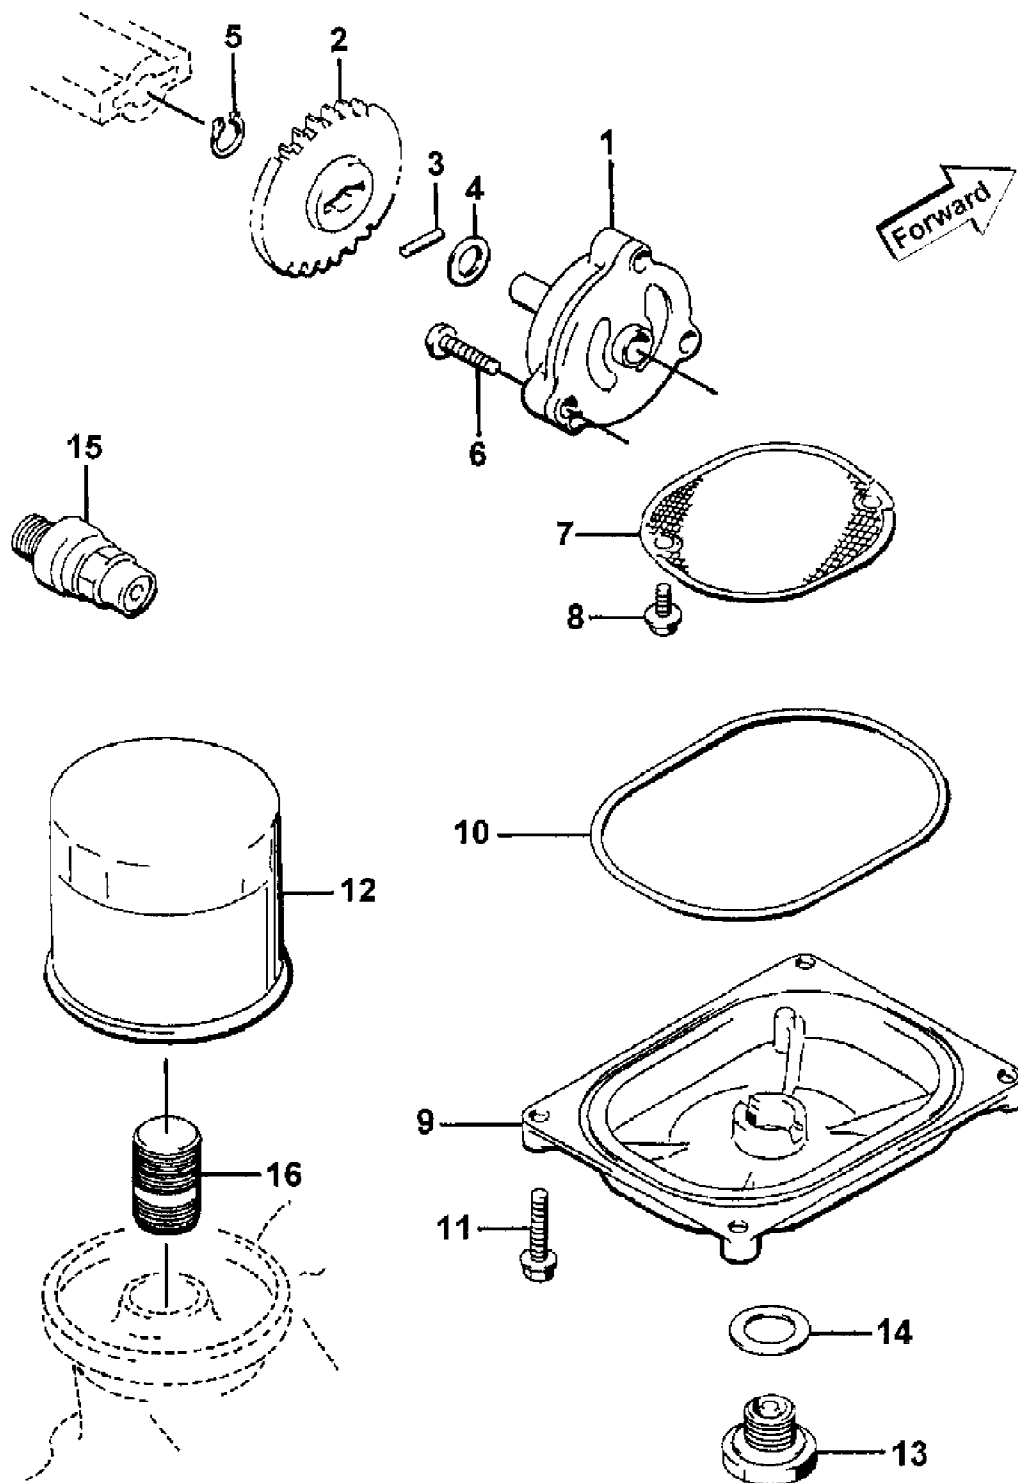

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
OIL FILTER/PUMP ASSEMBLY


Page 56 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	3402-153	1		Pump, Engine Oil
2	3402-026	1		Gear, Driven
3	3423-046	1		Pin
4	3423-115	1		Washer
5	3423-184	1	S	Circlip
6	3423-113	3	S/P	Screw, Cap
7	3402-156	1		Strainer, Engine Oil
8	0693-389	2	S	Screw, Cap
9	3402-157	1		Cap, Oil Strainer
10	3423-077	1		O-Ring
11	3004-756	4	S	Screw, Cap
12	0436-146	1	S	Filter, Engine Oil
13	3402-036	1	S	Plug, Drain
14	3402-012	1		Gasket
15	3402-359	1		Valve, Assembly - Oil Relief (500)
16	3402-158	1	S	Union, Oil Filter

2000 500 4X4 (GREEN) (A2000ATM4AUSG)

Page 57 of 94

 REAR AXLE ASSY (4X4) (VIN 4UF00AT86YT311796 & Up)

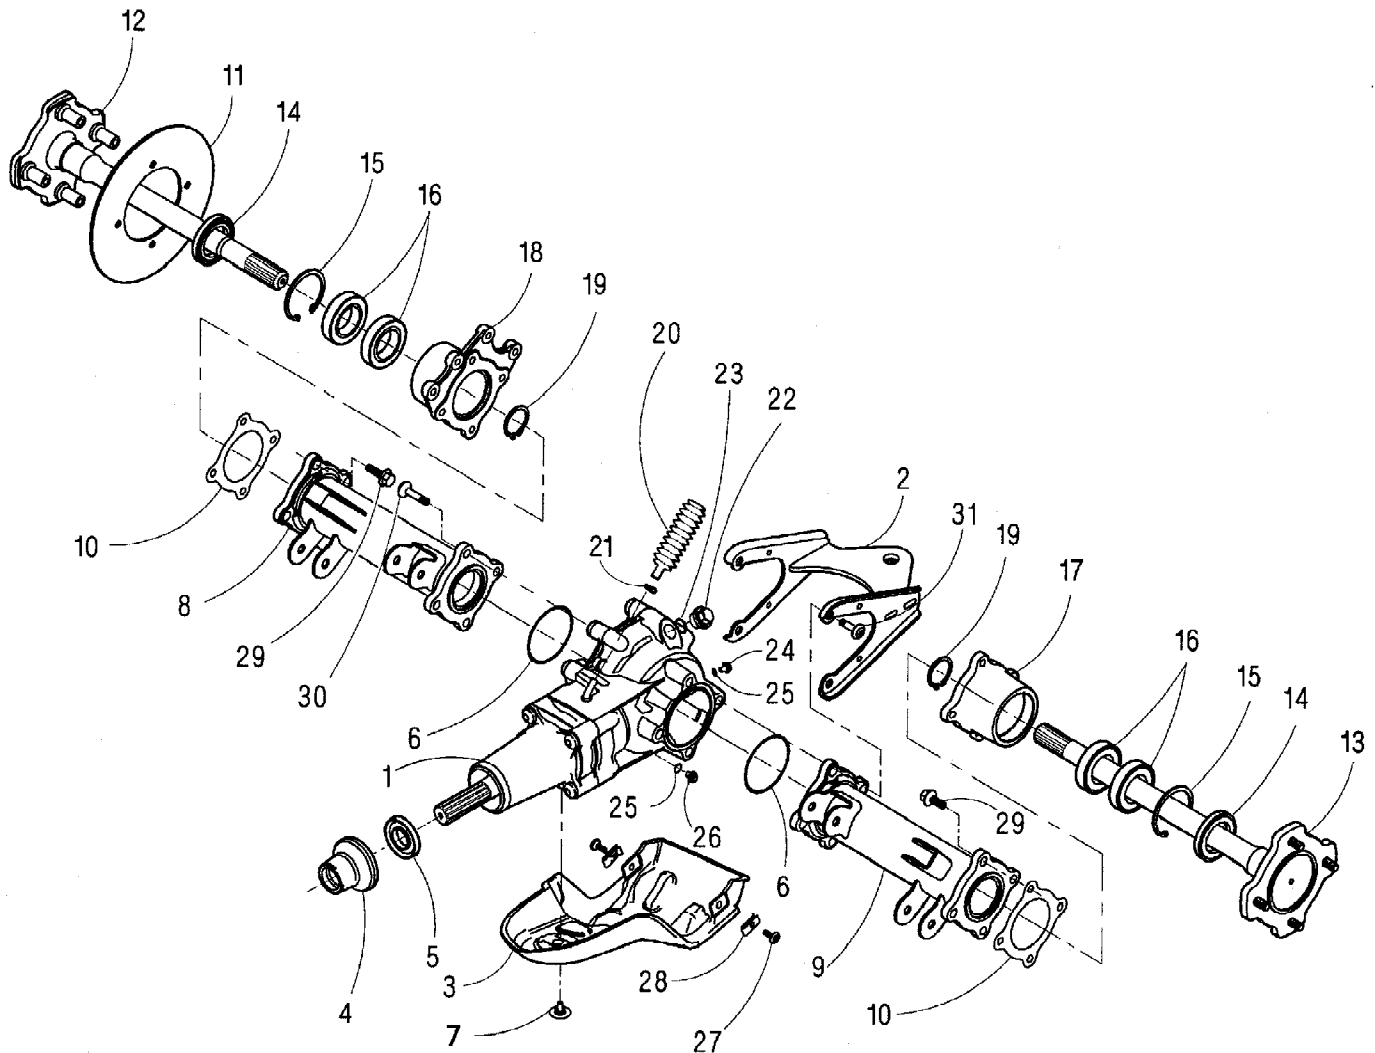

2000 500 4X4 (GREEN) (A2000ATM4AUSG)


Page 58 of 94

REAR AXLE ASSY (4X4) (VIN 4UF00AT86YT311796 & Up)

Ref #	Part Number	Qty	S/P/F	Description
1	0502-108	1		Gear Case Assembly
2	0506-300	1		Hitch, Trailer
3	0406-415	1		Panel, Gear Case - Right
4	0402-352	1		Slinger, Rear Drive - Right
5	0402-323	1		Seal, Rear Drive Slinger
6	0423-119	2		O-Ring
7	0423-101	1		Screw, Body
8	0502-090	1		Housing, Axle - Right
9	0502-091	1		Housing, Axle - Left
10	0402-374	2		Gasket, Axle
11	0402-009	1	S	Disc, Brake
12	0502-112	1	S/P	Axle Assembly - Right
13	0502-113	1	S/P	Axle Assembly - Left
14	0402-348	2		Seal
15	0402-347	2		Ring, Retaining
16	0402-339	4		Bearing
17	0502-097	1	S	Housing, Bearing - Left
18	0502-096	1	S	Housing, Bearing - Right
19	0402-351	2		Ring, Retaining
20	0402-147	1	S	Bladder, Rear Drive Case
21	0423-155	1		Clamp, Double Wire
22	0402-333	1	/P	Plug, Fill
23	0423-154	1		O-Ring, Fill Plug
24	0402-334	1		Plug, Drain
25	0423-153	2		O-Ring, Drain Plug
26	0402-450	1	S	Plug, Drain - Magnetic
27	8477-616	2		Screw, Machine
28	0423-031	2		Nut, Speed
29	8409-020	8	/P	Screw, Cap
30	0423-117	4		Screw, Self-Tapping
31	0423-116	4		Screw, Self-Tapping

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
REAR BEVEL GEAR ASSEMBLY

 Page 59 of 94

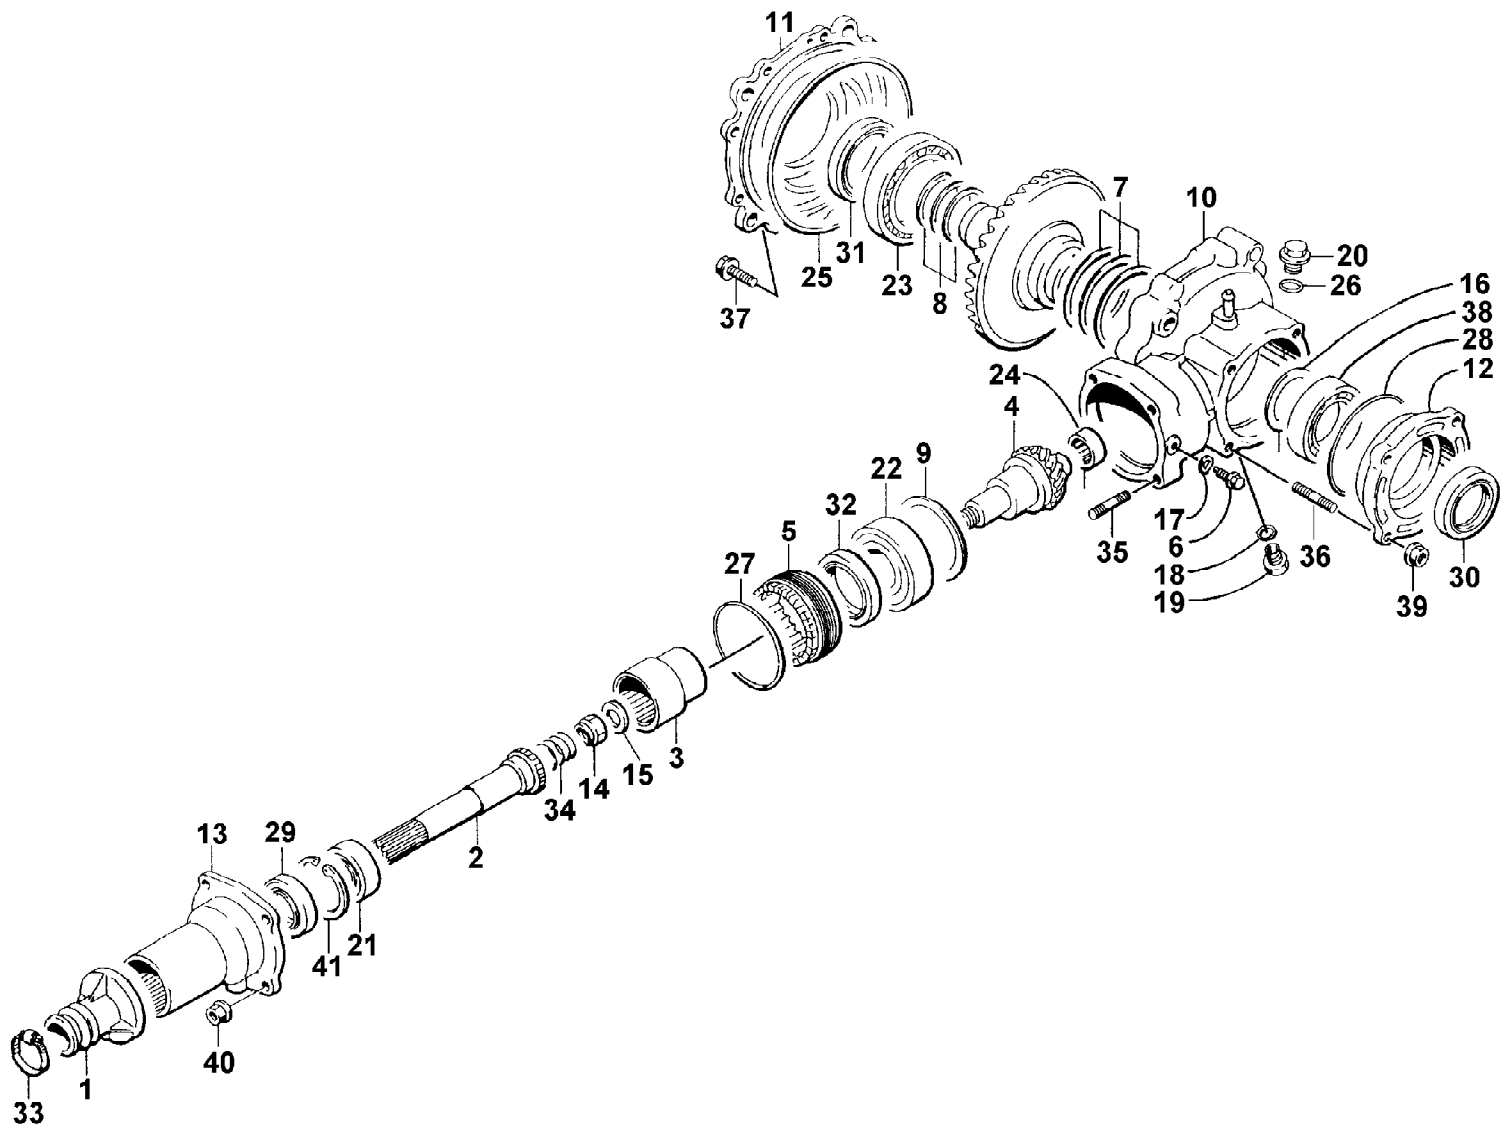


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
 REAR BEVEL GEAR ASSEMBLY

Page 60 of 94

Ref #	Part Number	Qty	S/P/F	Description
	3402-005	1		Complete Assembly
1	3435-051	1		Boot, Final Drive
2	3435-081	1	/P	Shaft, Rear Final Drive
3	3435-082	1	/P	Coupling, Rear
4	3435-083	1	/P	Gear Set
5	3435-015	1		Stopper, Rear Final Drive
6	3435-016	1		Pin, Bearing Stopper
7	3435-019	1	/P	Shim Set
8	3435-020	1		Shim Set
9	3435-065	1	/P	Shim Set
10	3435-084	1		Case
11	3435-026	1	S	Case - Right
12	3435-027	1		Case - Left
13	3435-028	1		Housing
14	3423-025	1		Nut, Rear Drive Pinion
15	3423-029	1		Washer, Drive Nut
16	3423-171	1		Washer - Left
17	3003-290	1	/P	Gasket, Bearing Stopper Pin
18	3402-012	1		Gasket, Oil Drain Plug
19	3402-036	1	S	Plug, Oil Drain
20	3402-039	1		Plug, Gear Oil Filler
21	3402-052	1		Bearing
22	3402-056	1	S	Bearing
23	3402-059	1		Bearing - Right
24	3402-061	1		Bearing, Final Drive Pilot
25	3423-173	1	/P	O-Ring, Bearing Case - Right
26	3423-057	1	/P	O-Ring, Gear Oil Filler
27	3423-065	1		O-Ring, Final Bearing Stopper
28	3003-335	1	/P	O-Ring, Bearing Case - Left
29	3435-088	1	/P	Seal, Final Driven
30	3402-073	1	/P	Seal, Oil
31	3402-074	1		Seal, Oil
32	3402-075	1		Seal, Oil
33	3004-786	1	/P	Clamp - Right
34	3402-092	1		Spring
35	3004-279	4	S/P	Bolt, Stud
36	3004-421	2	S/P	Bolt, Stud - Left
37	3423-175	9	S	Bolt, Bearing - Right
38	3402-187	1	/P	Bearing - Left
39	3004-326	2	S/P	Nut
40	3423-167	4		Nut, Rear Final Housing
41	3423-194	1	S	Circlip Set

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
 REAR SUSPENSION ASSEMBLY

 Page 61 of 94

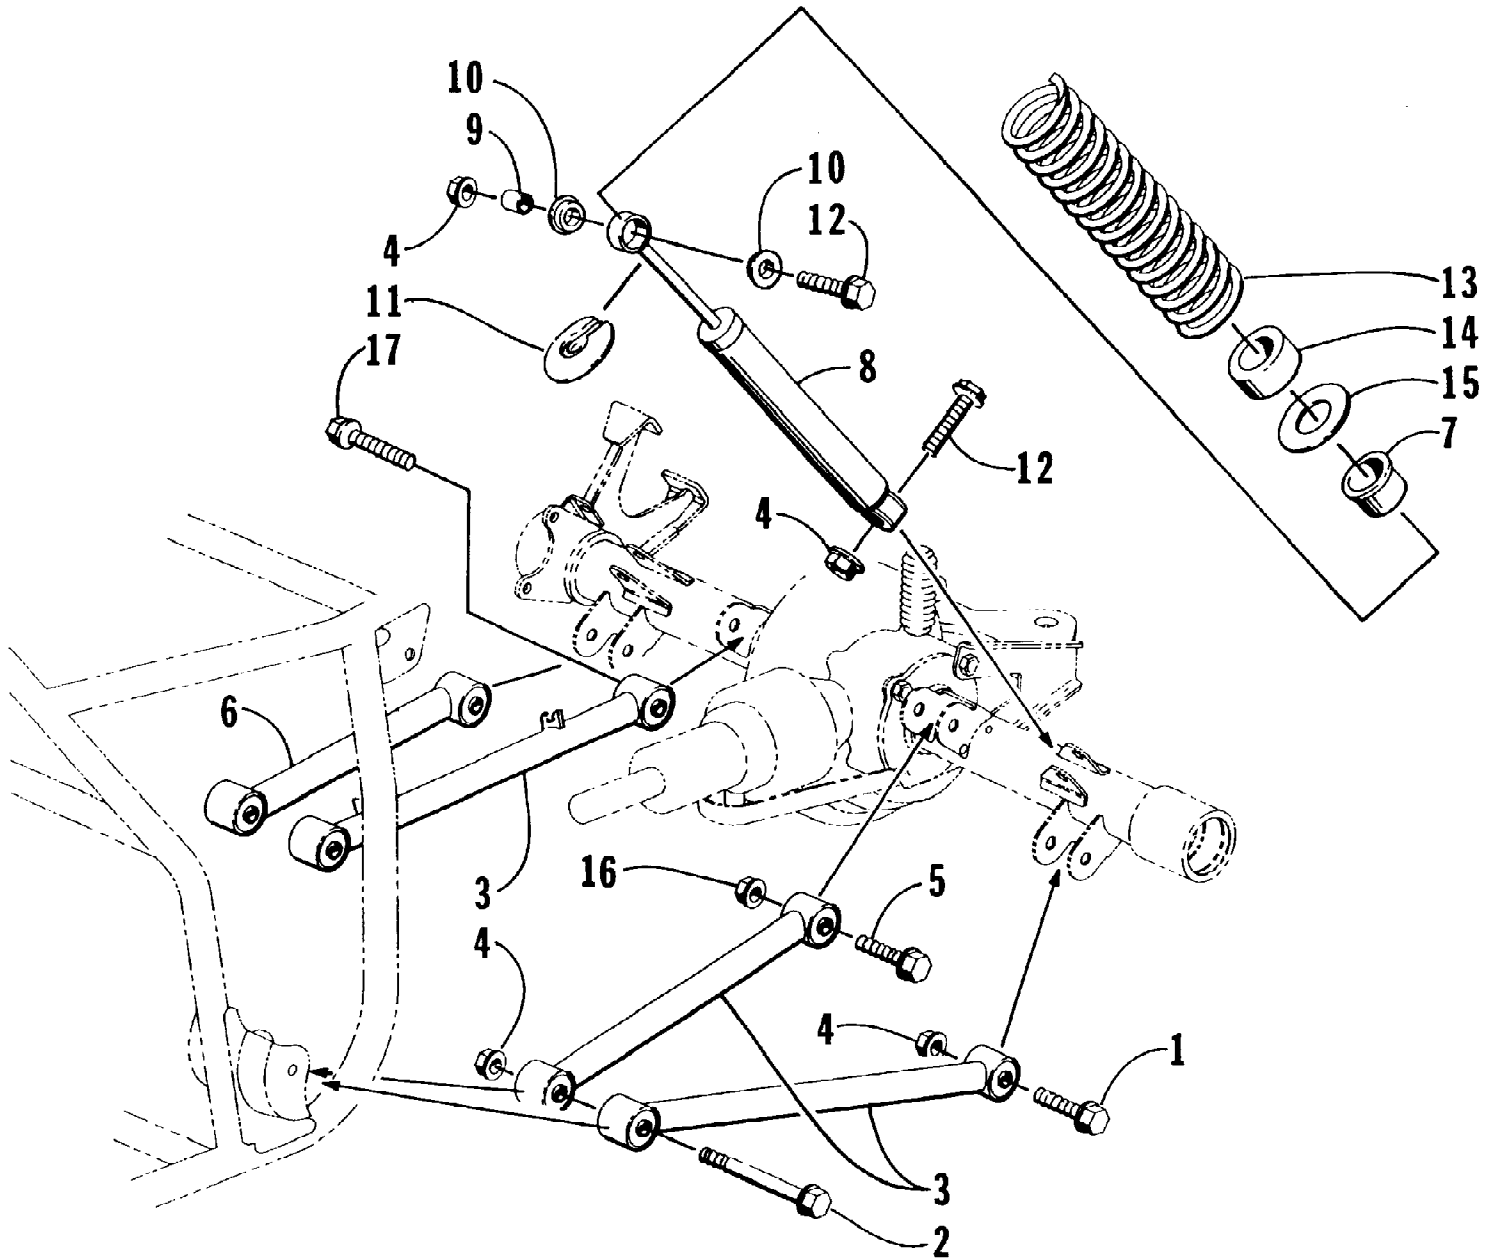


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
 REAR SUSPENSION ASSEMBLY

Page 62 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	8409-060	2		Screw, Cap
2	8409-000	2		Screw, Cap
3	0504-001	3		Arm, Swing
4	8428-002	8		Nut, Lock
5	8409-055	1		Screw, Cap
6	0504-005	1		Arm, Swing
7	0403-027	2		Retainer, Spring - Lower
8	0404-001	2		Shock Absorber - Rear (inc. 9-10)
9	0403-028	4		Sleeve, Shock Absorber
10	0604-310	8		Bushing, Shock Absorber
11	0603-033	2	S	Retainer, Spring
12	8409-040	4		Screw, Cap
13	0404-006	2	/P	Spring, Shock Absorber
14	0403-025	2	/P	Collar, Spring
15	0403-013	2		Washer, Spring Adjustment
16	8422-002	1		Nut, Lock
17	8409-065	1		Screw, Cap

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
RECOIL STARTER ASSEMBLY

 Page 63 of 94

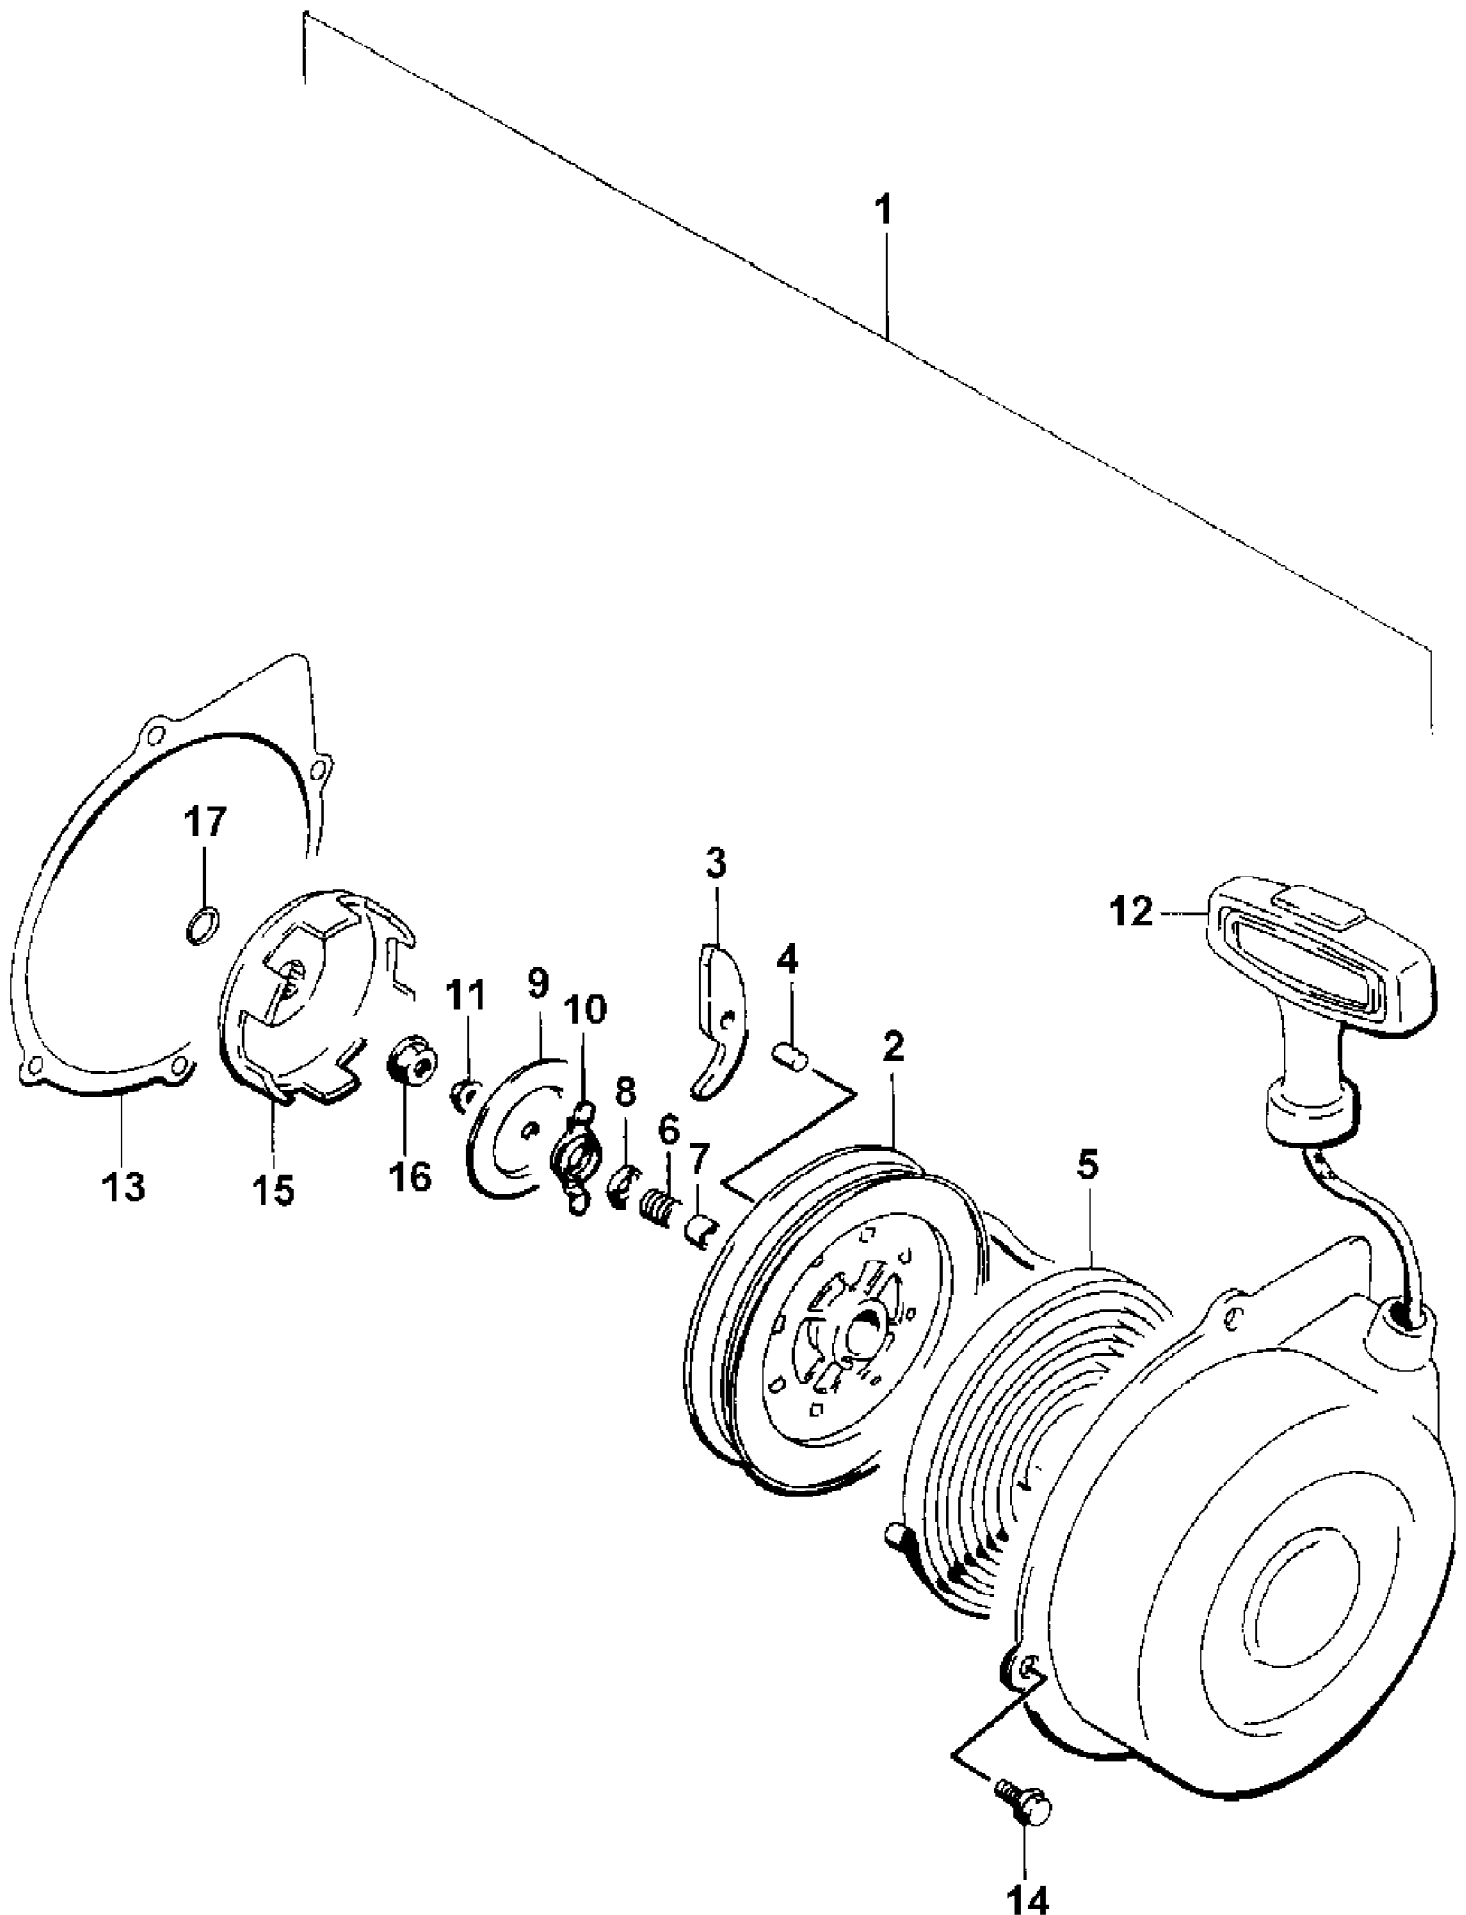


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
 RECOIL STARTER ASSEMBLY

Page 64 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	3445-003	1		Starter, Recoil - Assembly (inc. 2-12)
2	3445-004	1		Reel
3	3445-016	1		Ratchet Assembly (inc. 4 and 6-10)
4	0	1	F	Pin, Ratchet
5	3445-007	1		Spring, Spiral
6	0	1	F	Spring, Friction
7	0	1	F	Shaft
8	0	1	F	Cover, Spring
9	0	1	F	Plate, Friction
10	0	1	F	Guide, Ratchet
11	3004-488	1	S/P	Nut
12	3445-011	1		Rope Assembly
13	3445-013	1	/P	Gasket
14	3423-112	4	S	Screw, Cap
15	3445-026	1	S	Cup, Starter (500)
16	3004-491	1	S/P	Nut
17	3423-053	1	/P	O-Ring

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
REVERSE SHIFT LEVER ASSEMBLY

 Page 65 of 94

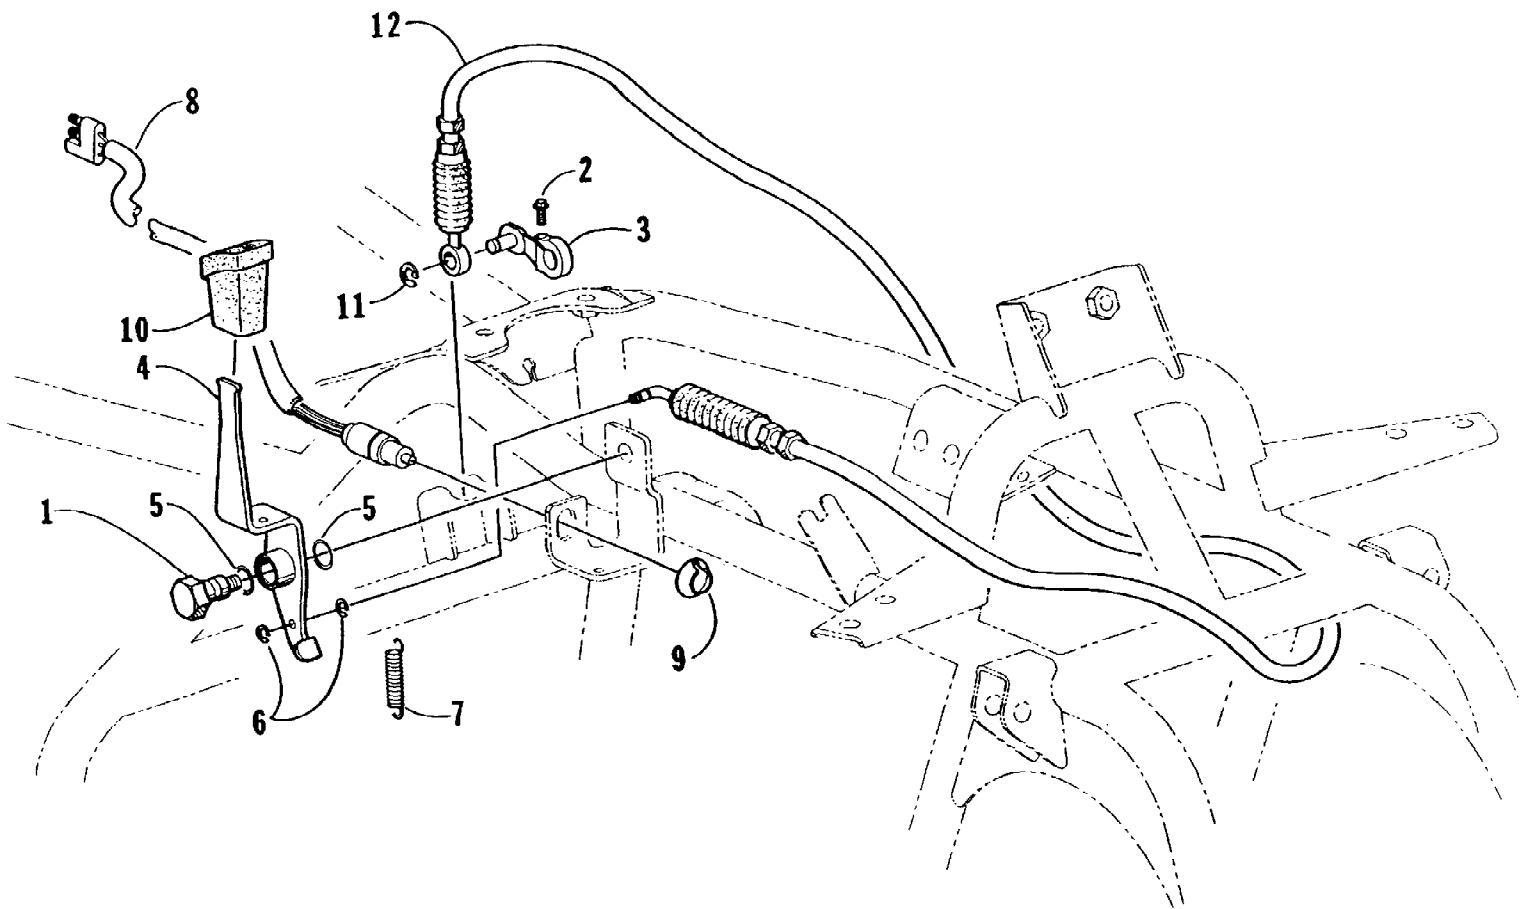


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
 REVERSE SHIFT LEVER ASSEMBLY

Page 66 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	0402-239	1		Axle, Reverse Shift
2	8476-620	1		Screw, Cap
3	3446-055	1		Arm, Reverse Shift
4	0502-059	1	S	Lever, Reverse
5	0423-096	2		O-Ring
6	0423-063	2		E-Ring
7	0402-136	1	S	Spring, Reverse Lever
8	0409-008	1		Reverse Switch
9	0402-168	1	/P	Retainer, Switch
10	0402-062	1		Handle, Reverse Shift Lever
11	3423-168	1	S	E-Ring
12	0487-003	1		Cable, Shift

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
SEAT ASSEMBLY

 Page 67 of 94

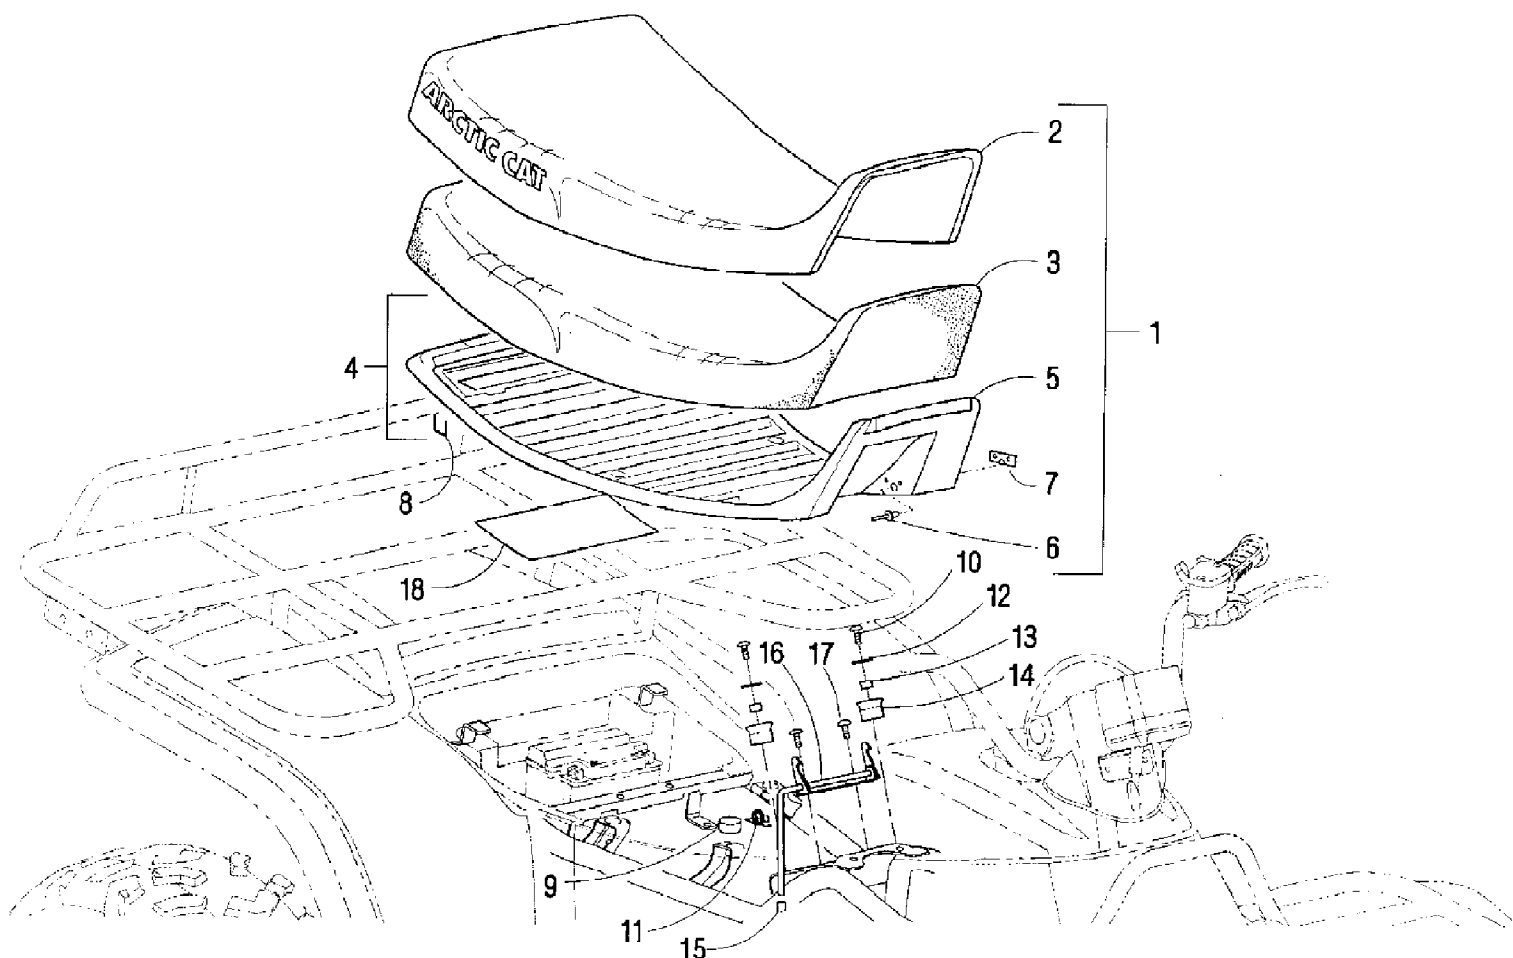


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
SEAT ASSEMBLY

Page 68 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	5990-176	1	/P	Seat Assembly (inc. 2-8)
2	0506-290	1		Cover, Seat
3	0506-291	1		Foam, Seat
4	0506-223	1	/P	Base, Seat Assembly (inc. 5-7)
5	0	1	F	Base, Seat
6	8061-628	4		Rivet
7	0506-147	2	S	Pin, Seat Base - Front
8	0624-100	0		Staple
9	0406-309	2		Grommet, Seat - Center
10	8476-620	2		Screw, Cap
11	0406-235	1		Spring, Seat Latch
12	8050-217	2	/P	Washer
13	0406-199	2		Collar, Front Seat Base
14	0406-171	2		Bumper, Seat Base - Front
15	0623-404	1		Cap, Protector
16	0406-103	1	S	Latch, Seat - Assembly
17	8476-616	2		Screw, Machine (4x4)
18	0411-182	1		Decal, Cold Start

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
SECONDARY DRIVE ASSEMBLY

 Page 69 of 94

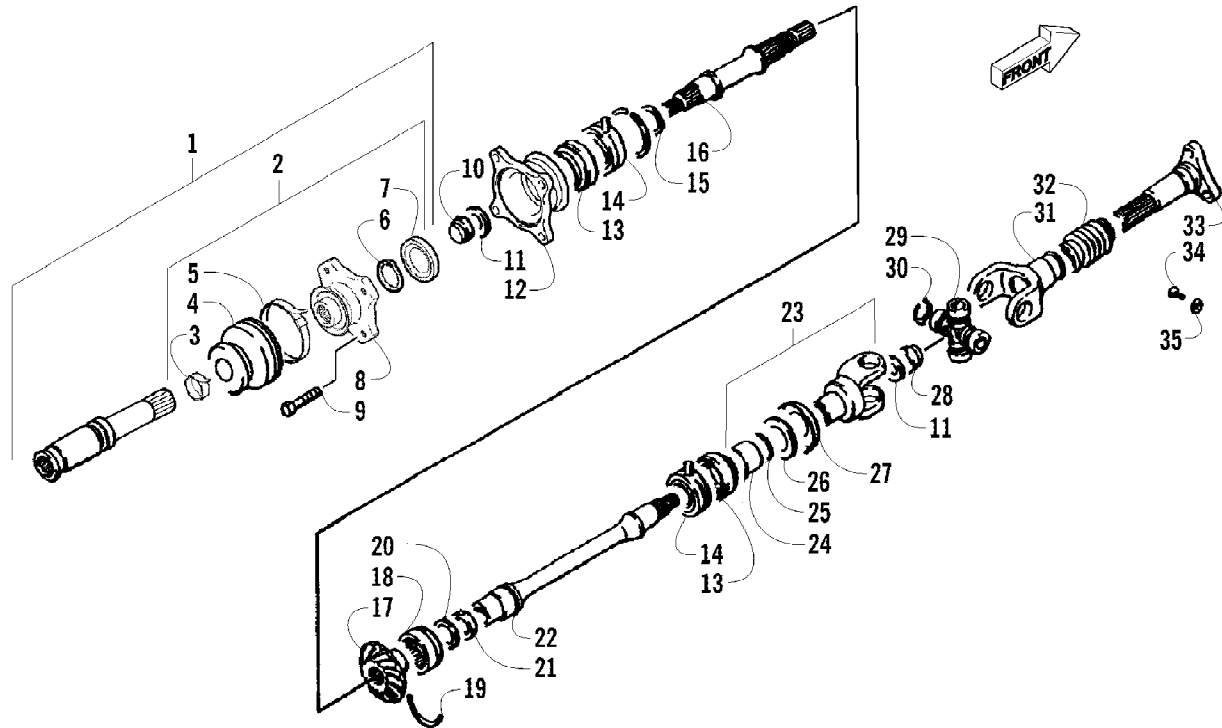


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
SECONDARY DRIVE ASSEMBLY

Page 70 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	3435-010	1		Joint Assembly, Rear Output (inc. 2-8)
2	3435-066	1		Boot, Joint - Set (inc. 3-7)
3	3423-212	1		Band
4	3435-067	1		Boot
5	3423-211	1		Band
6	3423-210	1		Ring, Snap
7	3423-356	1		Seal, Plate
8	0	1	F	Flange, Output
9	8408-820	4	/P	Screw, Cap
10	3423-025	1		Nut
11	3423-028	2		Washer
12	3435-003	1	S	Flange, Output Joint
13	3402-072	2		Seal, Oil
14	3402-067	2	S	Bearing w/ Locating Ring and Pin
15	3402-017	1		Shim - 0.60 mm
15	3402-018	1		Shim - 0.65 mm
15	3402-019	1		Shim - 0.70 mm
15	3402-020	1		Shim - 0.75 mm
15	3402-021	1	S	Shim - 0.80 mm
15	3402-022	1		Shim - 0.85 mm
15	3402-023	1		Shim - 0.90 mm
15	3402-024	1		Shim - 0.95 mm
15	3402-025	1	S	Shim - 1.00 mm
15	3402-028	1		Shim - 1.05 mm
15	3402-029	1		Shim - 1.10 mm
15	3402-030	1		Shim - 1.15 mm
15	3402-031	1		Shim - 1.20 mm
16	3446-240	1	S	Shaft - Rear
17	3446-222	1	/P	Gear
18	3402-062	1	S	Bearing w/Groove
19	3423-072	1		Ring, Bearing
20	3423-137	1		Washer
21	3423-136	1		Nut
22	3446-239	1		Shaft - Front
23	3435-001	1	S	Yoke, Drive Output (inc. 24-27)
24	3435-029	1		Collar, Yoke
25	3423-060	1		O-Ring
26	3435-030	1		Plate, Yoke Collar
27	3423-035	1		Plate, Yoke Collar
28	3423-025	1		Nut
29	3435-011	1		Joint Set, Universal (inc. 30)
30	3423-067	4		Circlip
31	3435-002	1		Yoke, Joint
32	3435-005	1	/P	Boot, Propeller Shaft
33	3435-004	1		Shaft, Propeller
34	3004-552	1	S	Screw, Cap
35	3423-135	2		Retainer

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
SECONDARY TRANSMISSION ASSEMBLY (4X4)

 Page 71 of 94

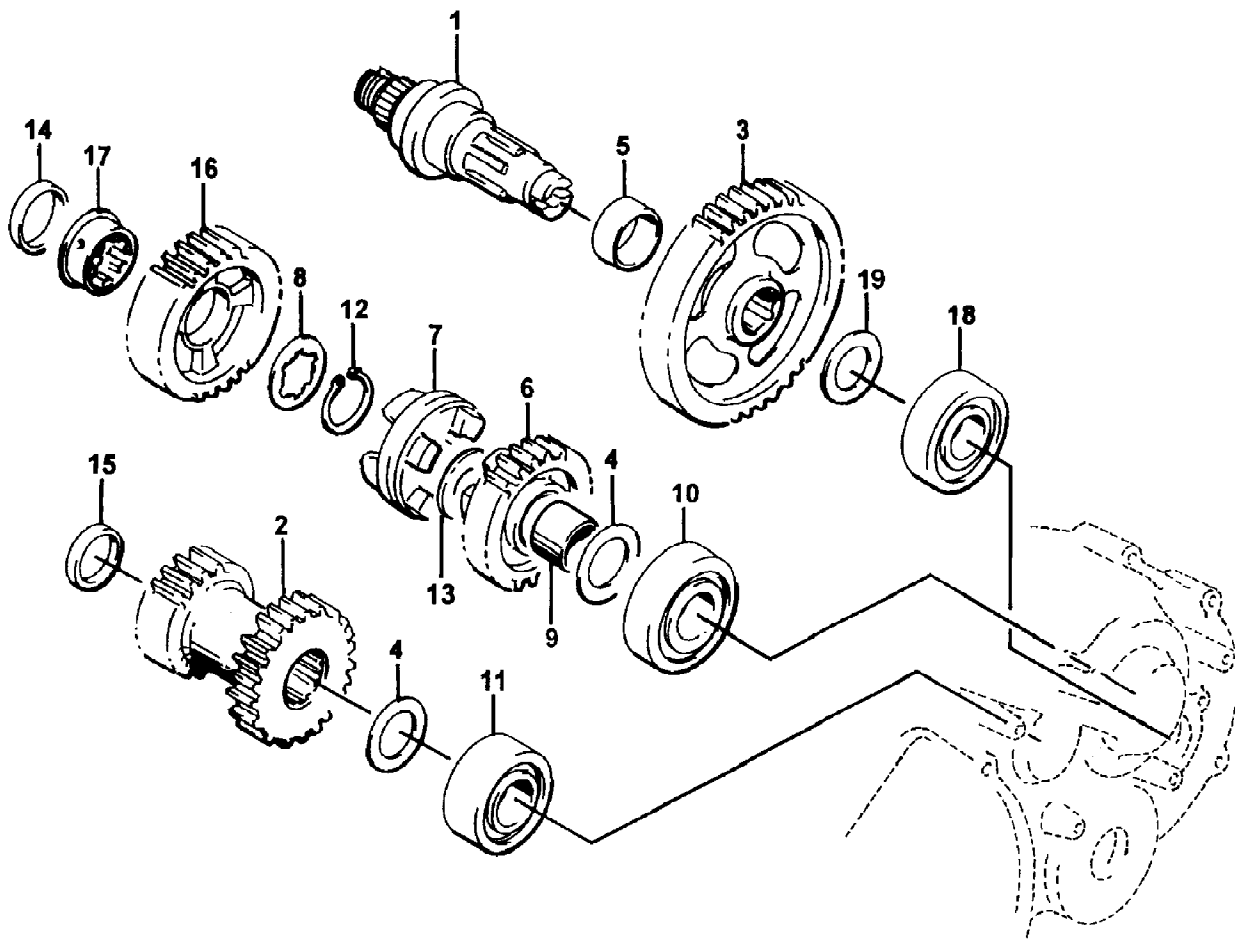


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
SECONDARY TRANSMISSION ASSEMBLY (4X4)

Page 72 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	3446-262	1	/P	Shaft, Output
2	3446-066	1		Gear, Idle
3	3446-072	1		Gear, Driven
4	3402-391	2	S	Washer (500)
5	3402-015	1		Spacer, Drive
6	3446-248	1		Gear No. 2 (500)
7	3446-249	1		Dog, Select Sliding (500)
8	3423-036	1		Washer
9	3446-103	1		Bushing
10	3402-046	1		Bearing, Driveshaft - Left
11	3402-047	1	S	Bearing, Center Shaft - Left
12	3423-066	1	/P	Circlip No. 1
13	3402-195	1		Washer, Gear No. 2 (500)
14	3446-246	1		Spacer (500)
15	3423-148	1		Spacer, Idle Gear
16	3446-245	1		Gear No. 1 (500)
17	3446-247	1		Bushing (500)
18	3402-045	1	/P	Bearing Set - Left
19	3423-150	1	/P	Washer

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
SPEEDOMETER DRIVE ASSEMBLY (4X4)

 Page 73 of 94

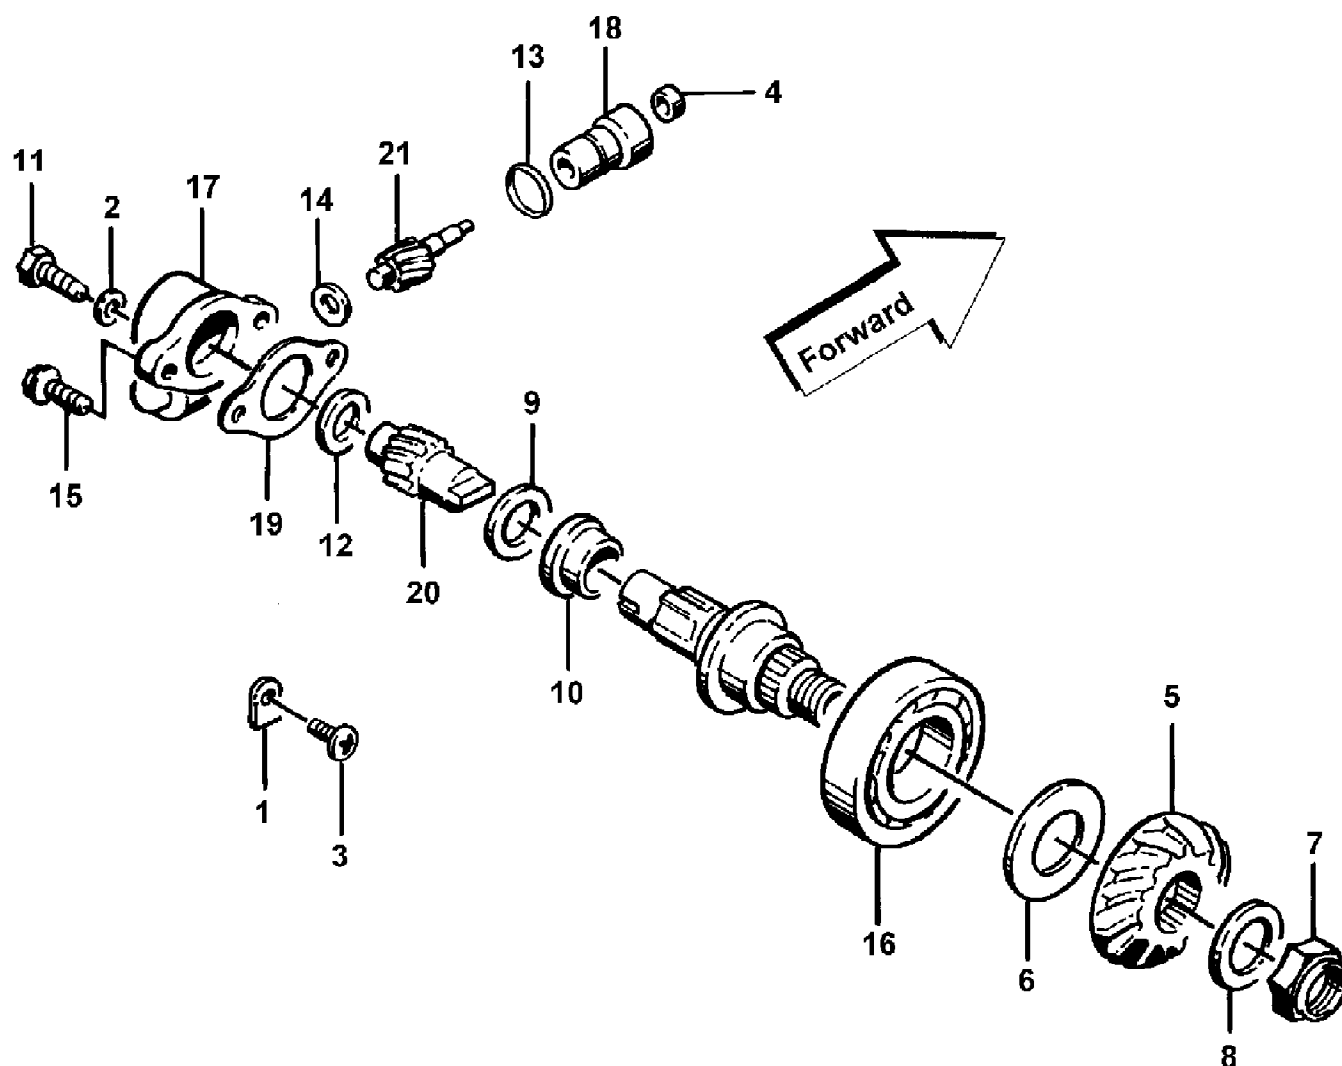


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
SPEEDOMETER DRIVE ASSEMBLY (4X4)

Page 74 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	3446-031	2	/P	Retainer, Bearing
2	3402-009	1	/P	Washer, Drive
3	3004-552	2	S	Screw, Retainer
4	3402-077	1		Seal, Driven Gear
5	3446-221	1	S	Gear
6	3446-035	1		Shim Set
7	3423-023	1		Nut
8	3423-032	1		Washer
9	3423-146	1		Washer - Right
10	3446-114	1	/P	Spacer, Drive Gear
11	3423-143	1	S	Bolt, Gear
12	3423-145	1		Washer
13	3423-056	1		O-Ring
14	3423-144	1		Washer
15	3423-346	2	S	Bolt, Housing
16	3402-180	1	S	Bearing Set - Right
17	3446-057	1		Housing, Speedometer Gear
18	3446-058	1		Sleeve
19	3446-244	1	/P	Gasket
20	3446-060	1		Gear, Drive
21	3446-061	1		Gear, Driven

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
STARTER CLUTCH ASSEMBLY

 Page 75 of 94

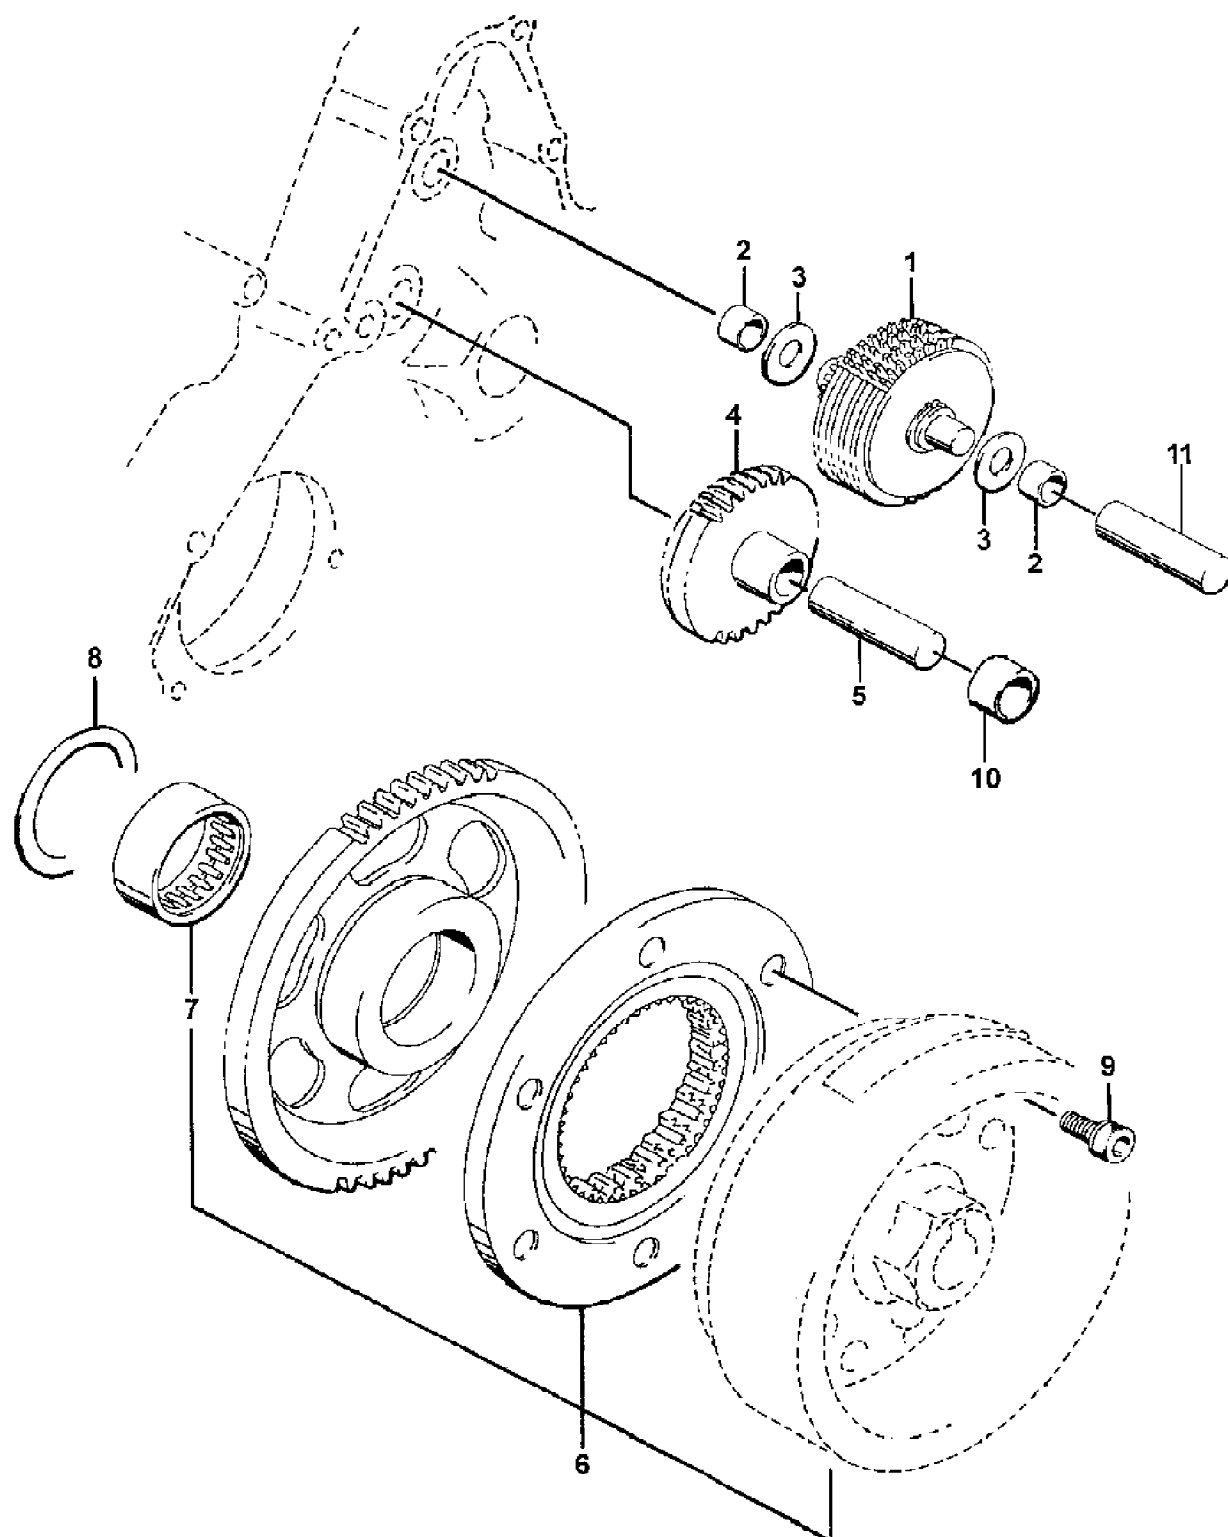


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
STARTER CLUTCH ASSEMBLY

Page 76 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	3402-123	1		Limiter, Idle Gear - Assembly (500)
2	3402-125	2		Bushing (500)
3	3423-103	2	/P	Washer (500)
4	3402-349	1		Gear, Starter Idle (500)
5	3423-042	1		Pin
6	3402-380	1	/P	Clutch, Starter - Set (inc. 7)
7	3402-063	1		Bearing
8	3423-104	1		Washer
9	3423-102	6	S	Screw, Cap
10	3423-352	1		Spacer (500)

2000 500 4X4 (GREEN) (A2000ATM4AUSG) STARTER MOTOR ASSEMBLY

 
Page 77 of 94

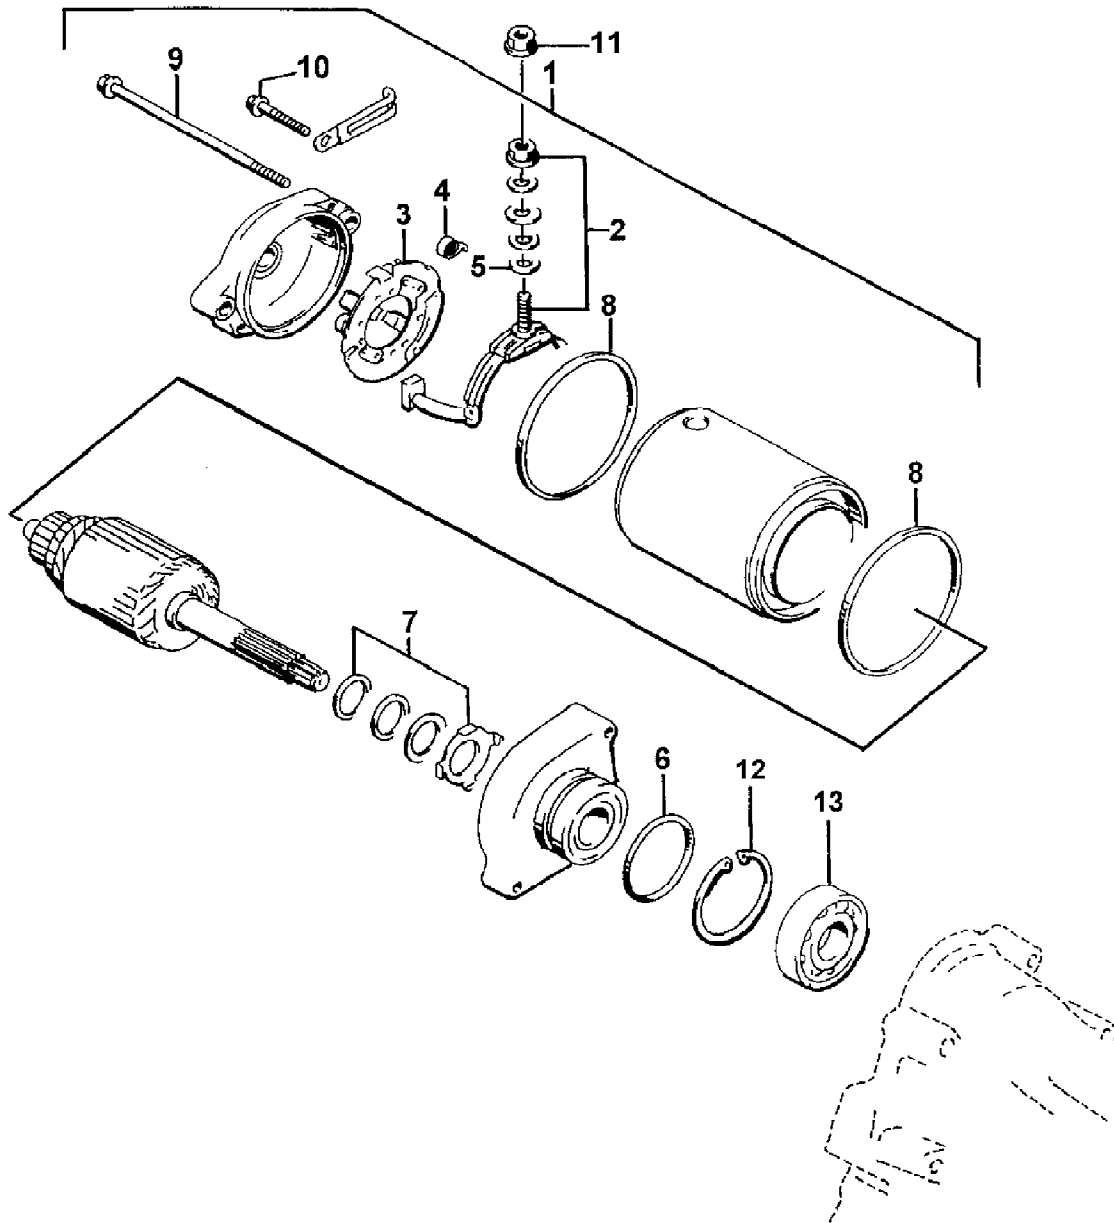

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
STARTER MOTOR ASSEMBLY

Page 78 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	3545-014	1	/P	Motor, Starter Assembly (inc. 2-9) (500)
2	3008-094	1	/P	Terminal Set, Brush
3	3008-095	1	/P	Holder Set, Brush
4	3008-096	4		Spring, Brush
5	3008-164	1		O-Ring
6	0423-119	2		O-Ring
7	3436-001	1		Washer Set
8	3008-553	2	/P	O-Ring
9	3423-085	2		Screw, Cap
10	3423-162	2	S	Screw, Cap
11	3423-195	1	/P	Nut
12	3423-201	1	/P	Circlip
13	3402-043	1	/P	Bearing, Pinion Shaft

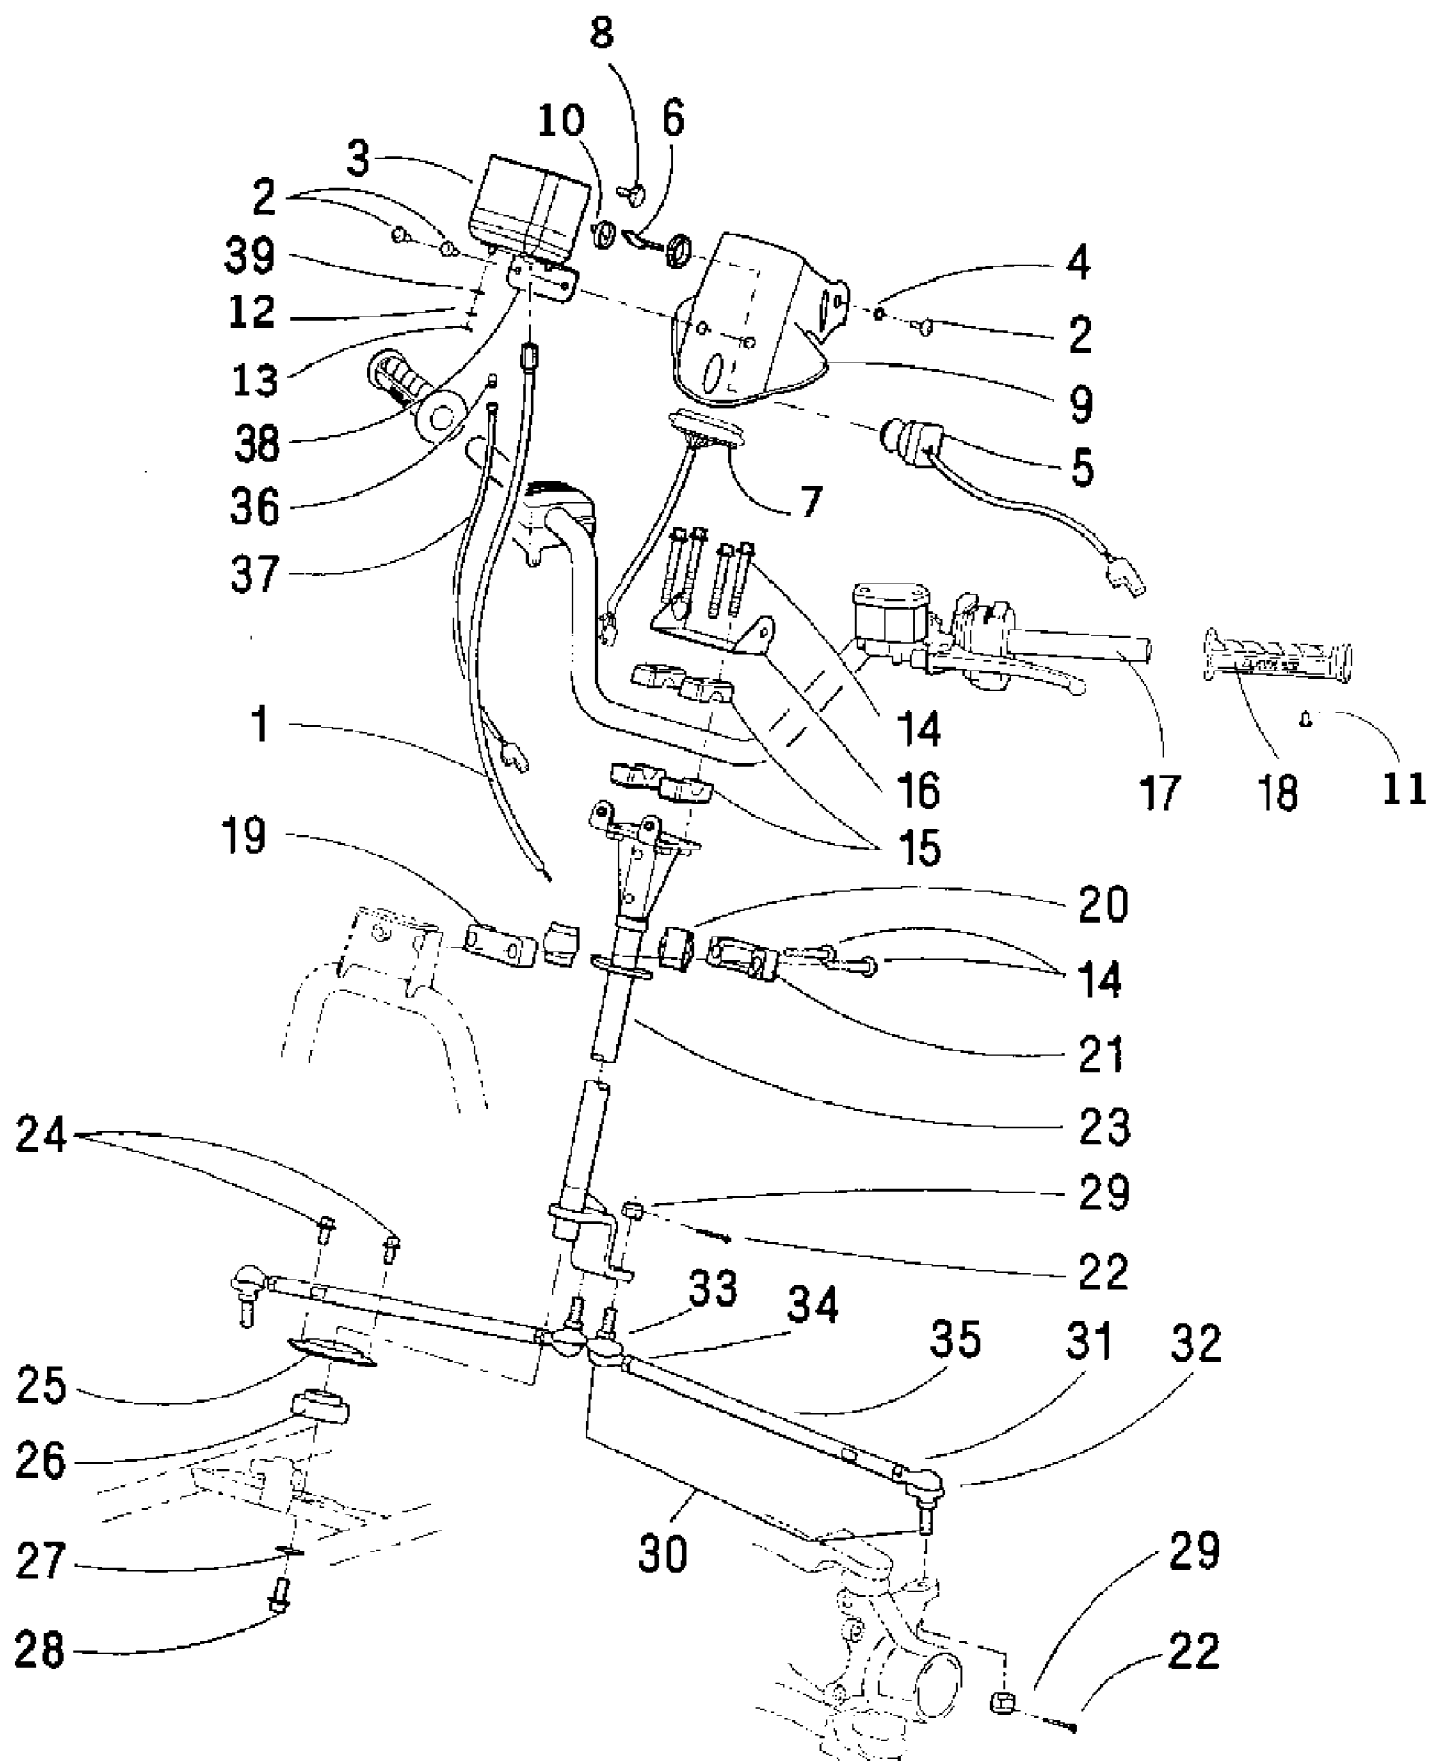 


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
STEERING ASSEMBLY

Page 80 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	0487-005	1		Cable, Speedometer (4x4)
2	8477-616	3		Screw, Machine
3	0420-003	1	S	Speedometer (inc. 36-41) (4x4)
4	0423-052	1		Collar, Body
5	3430-028	1	/P	Switch, Ignition - Assembly (inc. 6)
5	3430-040	1	F	Switch, Ignition - Assembly (inc. 6)
6	3409-007	1	/P	Key, Ignition - Blank (C Series)
6	3409-011	1		Key, Ignition - Blank (D Series)
7	0420-022	1	S	Panel, LED
8	0420-027	1		Knob, Speedometer Trip
9	0405-063	1		Instrument Pod
10	0409-013	1		Cover, Key
11	8060-428	2		Rivet
12	0420-017	2		Washer (4x4)
13	0420-015	2		Pin, Retainer (4x4)
14	8408-860	6		Screw, Cap
15	0405-035	4		Cap, Steering Adjuster
16	0506-139	1	S	Bracket, Key Switch
17	0505-028	1	S	Tube, Handlebar
18	0405-039	2	/P	Grip, Handlebar
19	0605-171	1		Housing, Bearing - Lower
20	0405-020	2		Bearing, Steering Post
21	0605-147	1	S	Housing, Bearing - Upper
22	0623-175	4		Pin, Cotter
23	0505-078	1	S	Post, Steering
24	8408-816	2		Screw, Cap
25	0602-233	1		Flange, Bearing
26	0405-052	1		Bearing w/Inverted Oil Seal
27	0423-073	1		Washer
28	8409-020	1	/P	Screw, Cap
29	0423-157	4		Nut, Top Lock
30	0505-072	2	/P	Tie Rod, Assembly (inc. 31-35)
31	8420-002	2	/P	Nut - Right
32	0405-082	2	S	Ball Joint, Tie Rod - Right
33	0405-083	2	S	Ball Joint, Tie Rod - Left
34	0423-013	2		Nut - Left
35	0405-032	2		Tie Rod
36	0420-019	1	S	Bulb, Speedometer
37	0420-014	1		Harness, Speedometer (4x4)
38	0420-018	1		Bracket, Speedometer (4x4)
39	0420-016	2		Mount, Rubber (4x4)

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
STORAGE BOX AND BATTERY ASSEMBLY

 Page 81 of 94

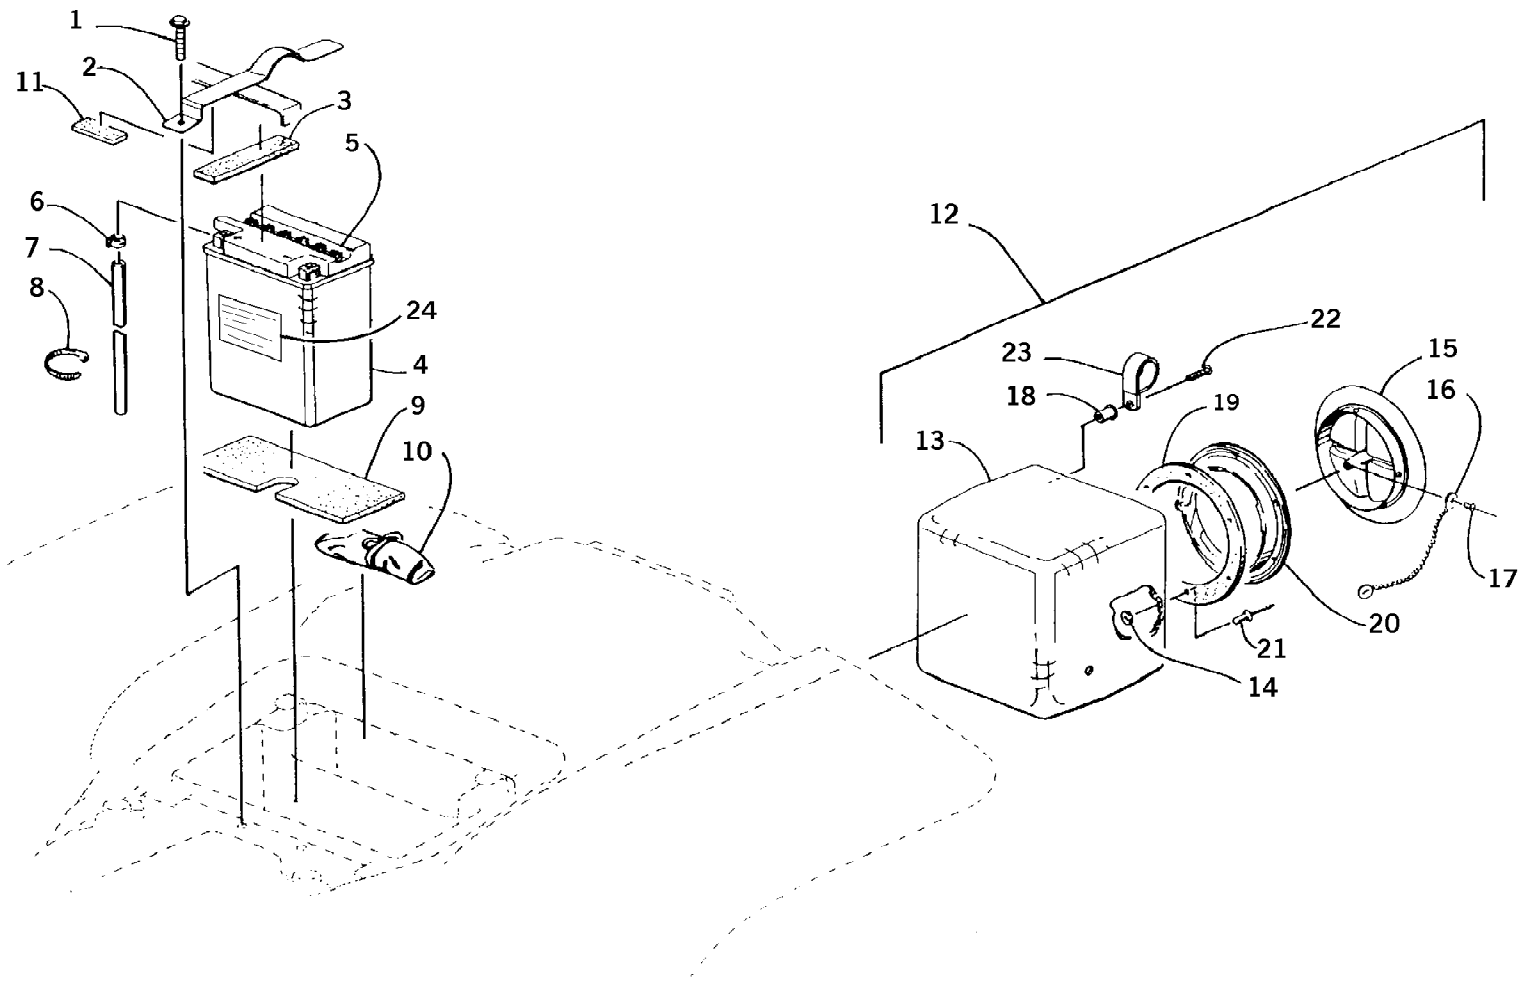


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
STORAGE BOX AND BATTERY ASSEMBLY

Page 82 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	8476-616	1		Screw, Machine
2	0506-178	1		Strap, Battery w/Pads (inc. 3 and 11)
3	0406-289	1		Pad, Battery - Upper Rear
4	0445-005	1	S	Battery Assembly (inc. 5-7)
5	0645-045	6		Cap, Battery
6	0645-152	1		Clamp, Hose
7	0645-263	1	/P	Hose, Battery Vent
8	0123-903	1		Cable Tie - 11.5 in.
9	0406-227	1		Pad, Battery - Lower
10	0444-079	1	S/P	Kit, Tool
11	0406-288	1		Pad, Battery - Upper Front
12	0506-102	1	/P	Storage Box - Assembly (inc. 13-21) (4X4)
13	0406-257	1	S	Box, Tool (4x4)
14	8050-152	6		Washer (4x4)
15	0406-208	1		Lid, Tool Box (4x4)
16	0773-401	1		Chain, Storage (4x4)
17	8061-223	2	/P	Rivet (4x4)
18	0123-010	4	/P	Nut, Expansion (4x4)
19	0673-973	1		Seal, Storage Cover (4x4)
20	0406-205	1	/P	Ring, Mounting - Storage Box Lid (4x4)
21	8060-630	6		Rivet (4x4)
22	0623-301	4	/P	Screw, Self-Tapping
23	0423-044	4		Clamp, Tube (4x4)
24	0645-151	1		Label, Warning - Battery

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
TAILLIGHT ASSEMBLY

 Page 83 of 94

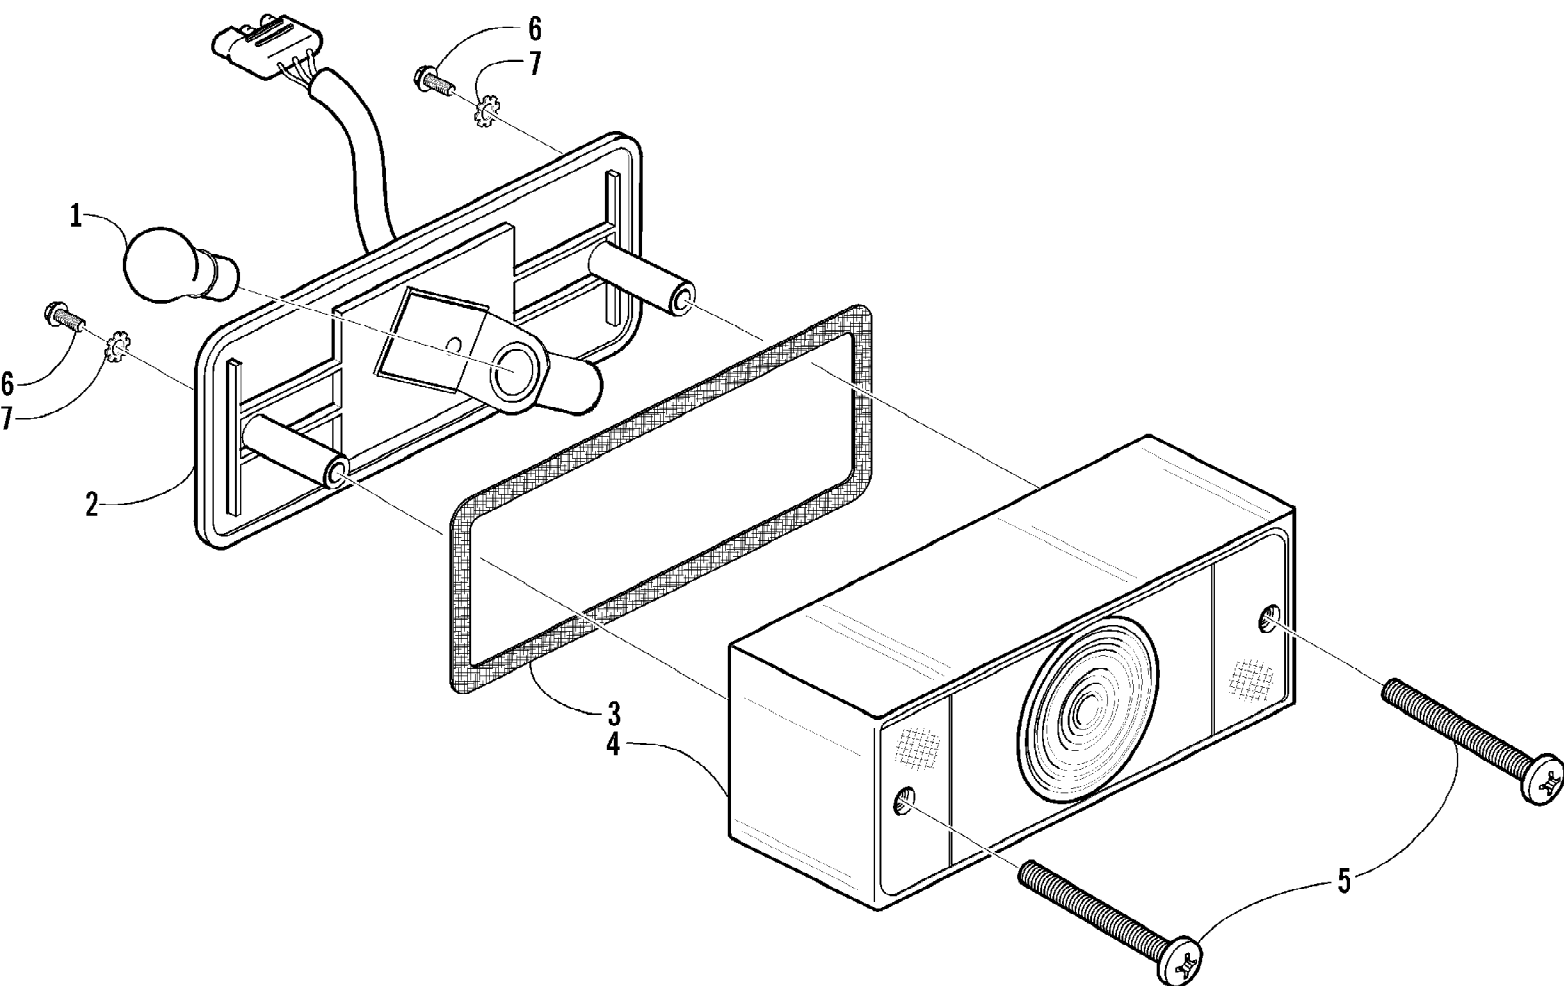


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
 TAILLIGHT ASSEMBLY

Page 84 of 94

Ref #	Part Number	Qty	S/P/F	Description
	0409-002	1		Complete Taillight Assembly
1	0109-460	1	/P	Bulb, Stop/Taillight
2	0409-011	1		Taillight w/Socket Assembly
3	0409-012	1		Gasket, Taillight Lens
4	0409-007	1		Lens, Taillight
5	0409-010	2		Screw, Machine
6	0623-301	2	/P	Screw, Self-Tapping
7	8053-212	2	/P	Washer, Lock - External Tooth

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
THROTTLE CASE ASSEMBLY

 Page 85 of 94

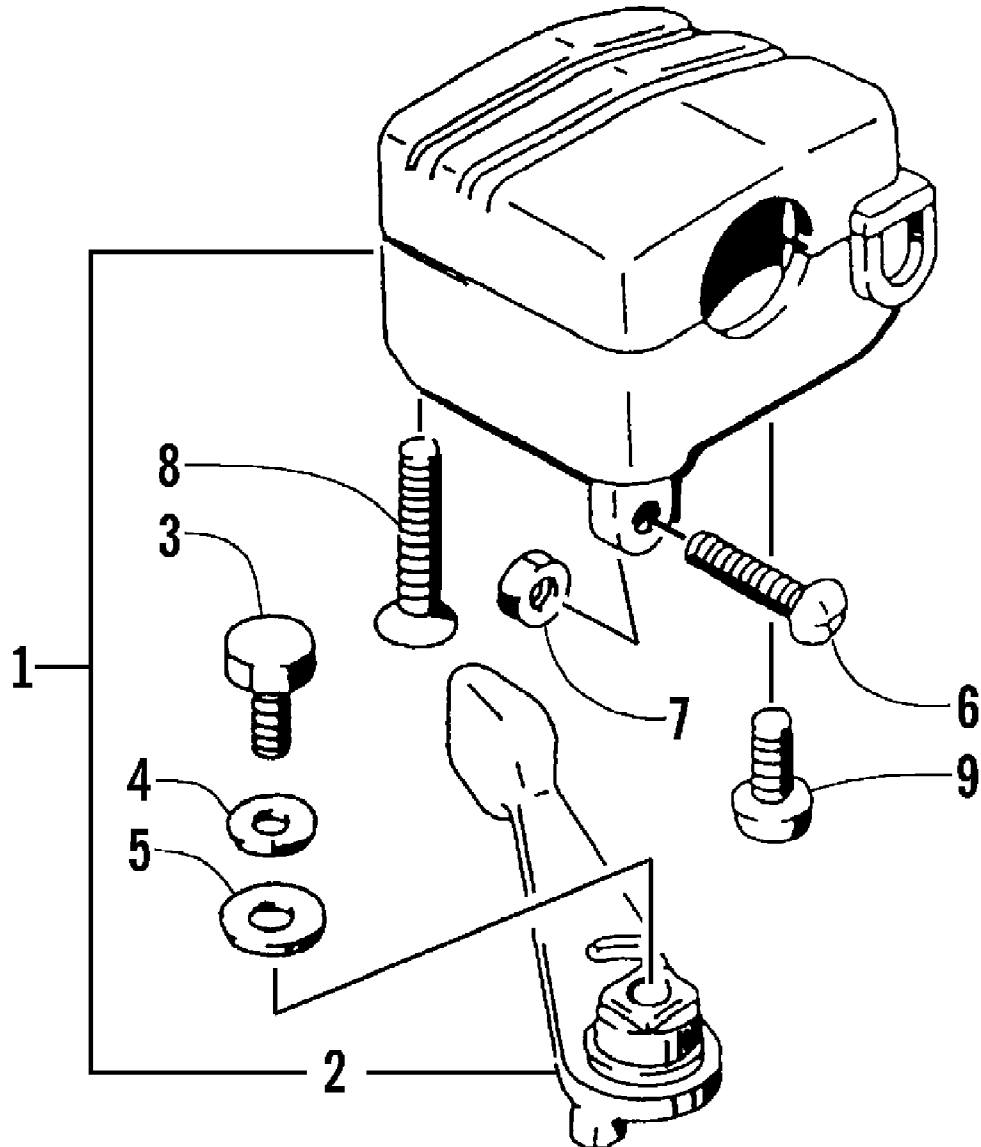


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
THROTTLE CASE ASSEMBLY

Page 86 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	3509-003	1	/P	Case, Throttle - Assembly (inc. 2-9)
2	3409-001	1		Lever
3	3004-533	1	S/P	Screw, Cap
4	3004-447	1	/P	Washer, Lock
5	3003-030	1	/P	Washer
6	3423-014	1		Screw
7	3423-327	1		Nut
8	3423-199	2		Screw
9	3004-638	1	/P	Screw

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
TRANSMISSION ASSEMBLY

 Page 87 of 94

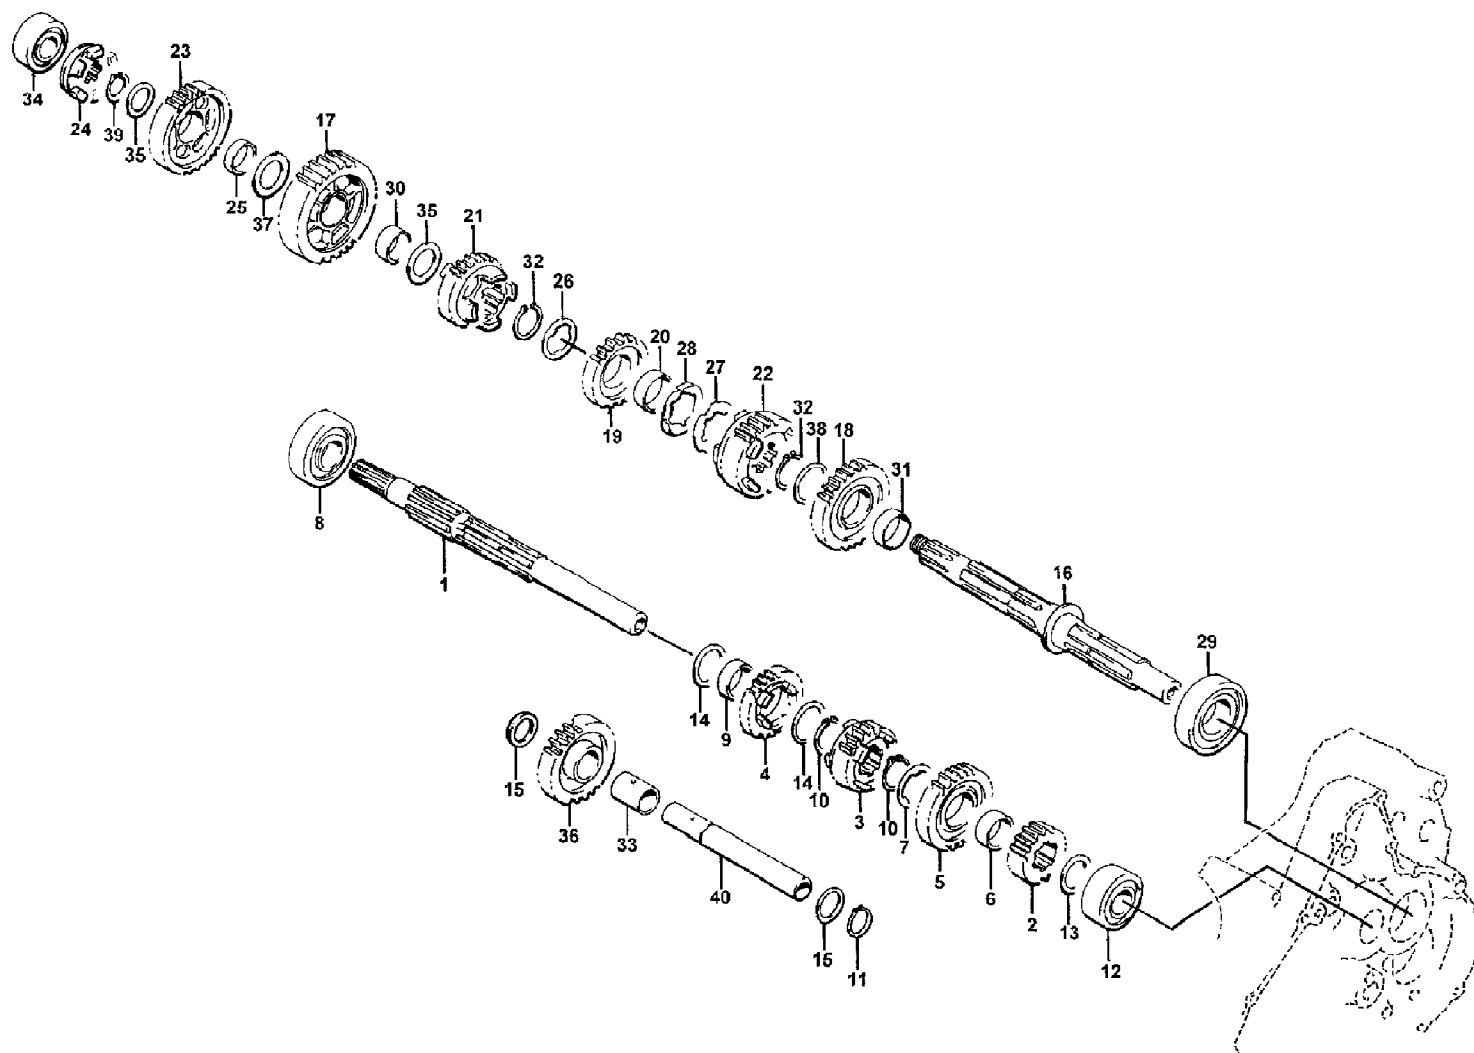


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
TRANSMISSION ASSEMBLY

Page 88 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	3446-014	1		Shaft, Counter
2	3446-016	1		Gear, 2nd Drive
3	3446-215	1		Gear, 3rd Drive
4	3446-018	1		Gear, 4th Drive
5	3446-216	1		Gear, 5th Drive
6	3446-020	1		Bushing, 5th Drive Gear
7	3423-037	1		Washer, 5th Drive Gear
8	3402-050	1		Bearing, Center Shaft - Right
9	3402-081	1		Bushing, 4th Drive Gear
10	3423-066	2	/P	Circlip, 4th Drive
11	3423-190	1	S	Circlip, Reverse Idle
12	3402-179	1		Bearing, Center Shaft
13	3402-195	1		Shim
14	3423-187	2	/P	Washer, 4th Drive
15	3423-126	2	/P	Washer, Reverse Idle
16	3446-234	1		Driveshaft (500)
17	3446-235	1	/P	Gear, 1st Driven (500)
18	3446-022	1		Gear, 2nd Driven
19	3446-218	1		Gear, 3rd Driven
20	3446-024	1		Bushing, 3rd Driven
21	3446-219	1	/P	Gear, 4th Driven
22	3446-220	1		Gear, 5th Driven
23	3446-029	1		Gear, Reverse Driven
24	3446-030	1		Dog, Reverse
25	3446-032	1		Bushing, Reverse Driven
26	3423-038	1		Washer, 3rd Driven - Right
27	3423-039	1		Washer, 3rd Driven - Left
28	3423-040	1		Washer, 3rd Driven - Left
29	3402-336	1		Bearing, Driveshaft
30	3402-080	1	S	Bushing, 1st Driven
31	3402-082	1		Bushing, 2nd Driven
32	3423-188	2	S	Circlip, 2nd Driven
33	3446-238	1		Bushing, Reverse Idle
34	3003-320	1	/P	Bearing, Driveshaft - Right
35	3402-335	2		Washer, Reverse Driven
36	3446-237	1		Gear, Reverse Idle
37	3423-131	1		Washer, 1st Driven - Right
38	3402-383	1		Washer, 2nd Driven (500)
39	3423-189	1	S	Circlip, Reverse Driven
40	3446-236	1		Shaft, Reverse Idle

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
WATER PUMP ASSEMBLY

 Page 89 of 94

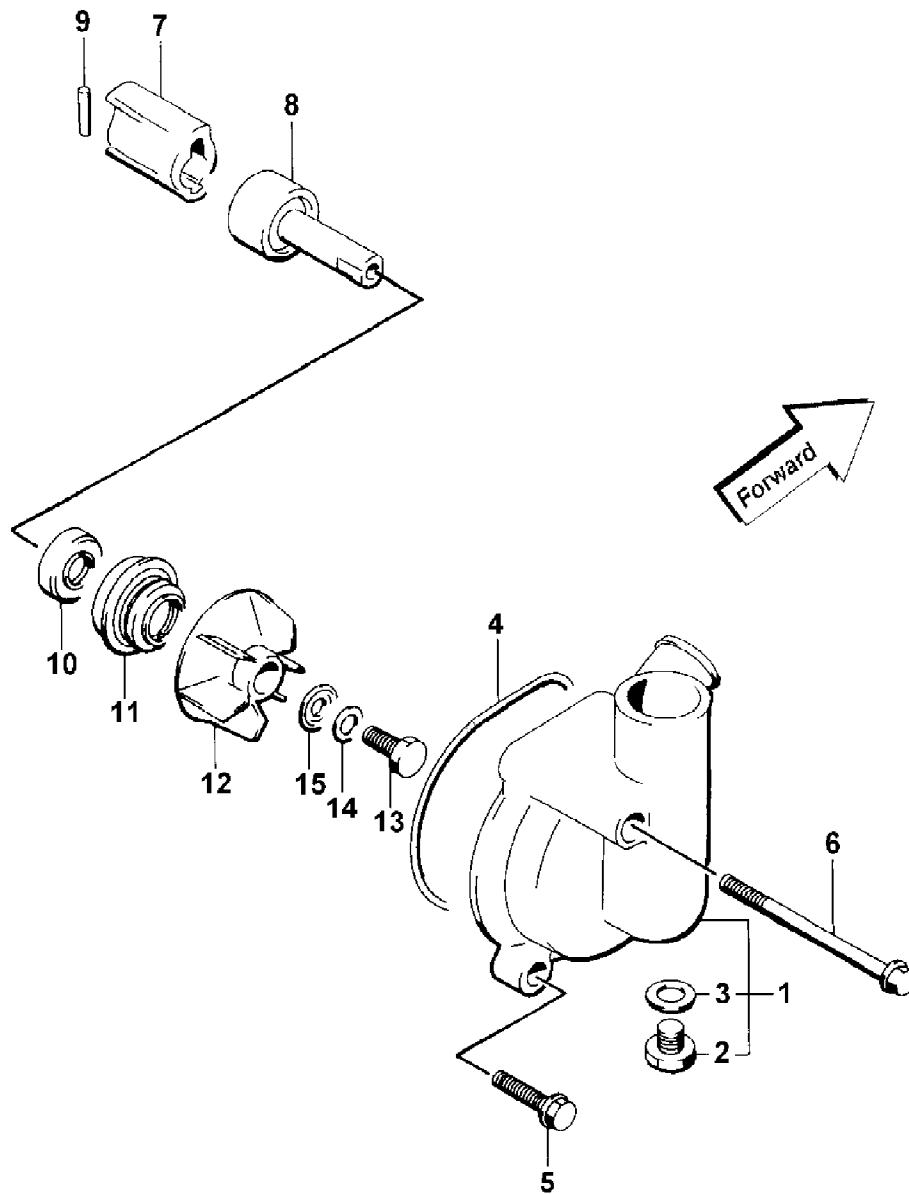


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
WATER PUMP ASSEMBLY

Page 90 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	3402-354	1	/P	Case, Water Pump (inc. 2-3) (500)
2	3423-343	1		Screw, Cap (500)
3	3003-188	1	S/P	Gasket
4	3423-078	1		O-Ring
5	3004-507	2	S	Screw, Cap
6	3423-119	1	S	Screw, Cap
7	3413-011	1	/P	Joint, Pump Drive (500)
8	3413-002	1		Shaft, Water Pump w/Bearing
9	3423-046	1		Pin
10	3003-356	1		Seal, Pump Drive
11	3402-360	1	S	Seal, Mechanical
12	3413-001	1		Impeller
13	3003-426	1		Screw, Cap
14	3003-431	1	/P	Washer
15	3003-432	1		Gasket

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
WHEEL AND TIRE ASSEMBLY

 Page 91 of 94

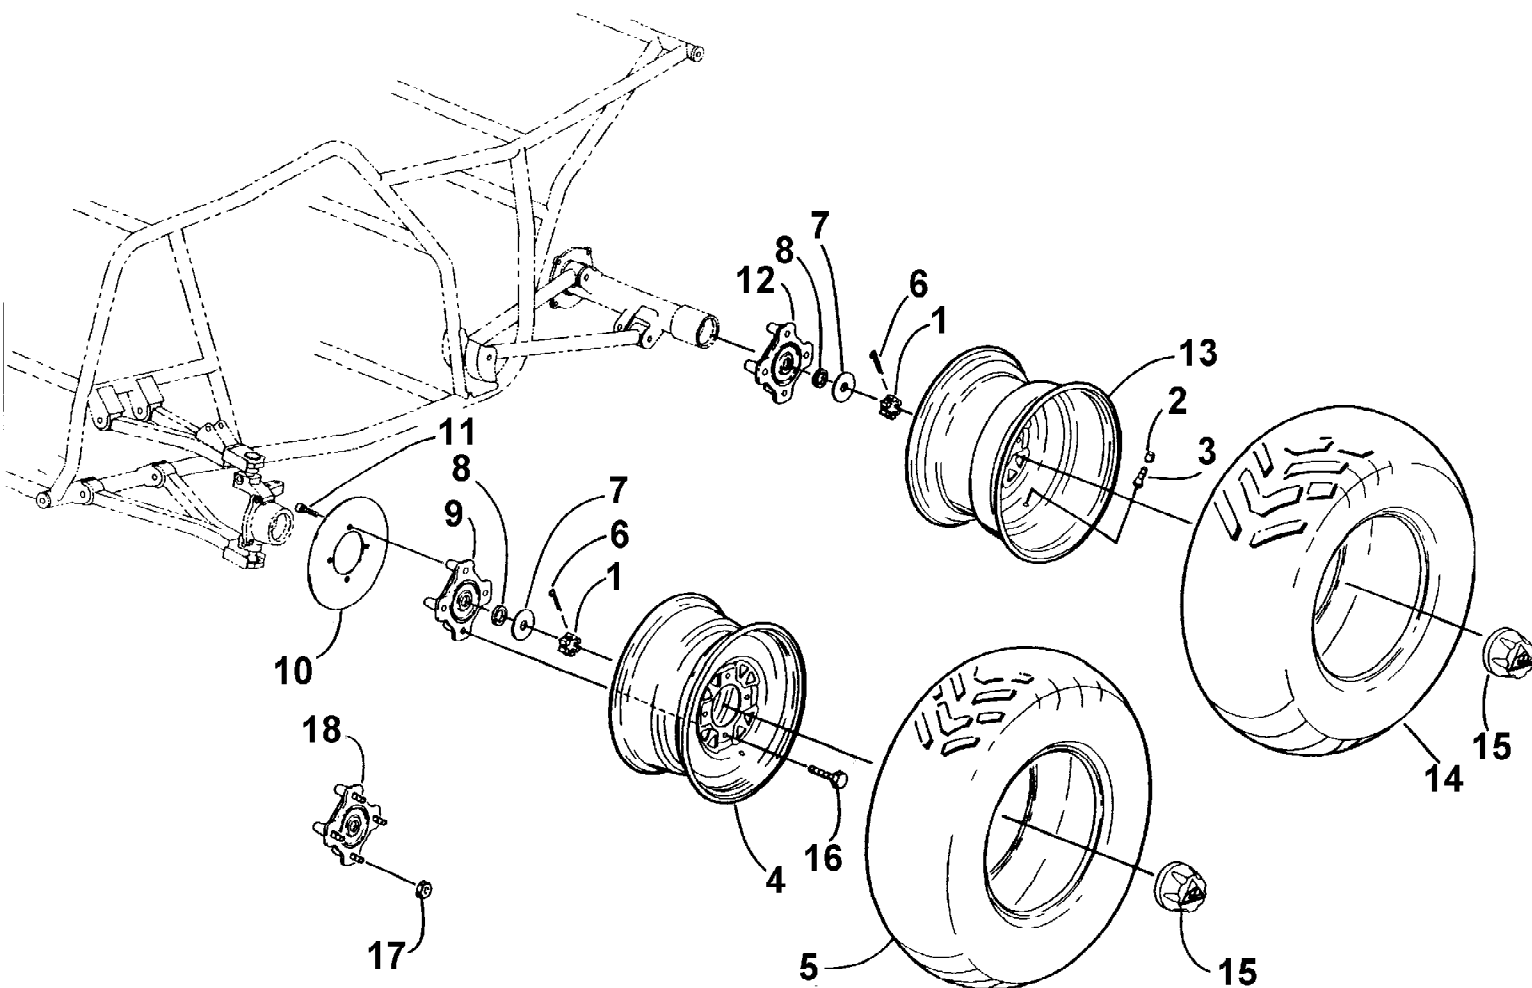


2000 500 4X4 (GREEN) (A2000ATM4AUSG)
WHEEL AND TIRE ASSEMBLY

Page 92 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	3423-213	4		Nut, Hex
2	0402-140	4		Cap, Valve Stem
3	0402-064	4		Stem, Valve
4	0402-375	2		Wheel - Front
5	0402-319	2	/P	Tire - Front (500)
6	0123-458	4	/P	Pin, Cotter
7	0423-080	4		Washer
8	0402-181	4		Seal, Hub
9	0502-041	2	S	Hub, Wheel - Front (4x4)
10	0402-009	3	S	Disc, Brake
11	0423-029	12		Screw, Machine
12	0502-042	2	S	Hub, Wheel - Rear
13	0402-311	2		Wheel - Rear
14	0402-319	2	/P	Tire - Rear
15	0403-035	4	/P	Cap, Wheel - Center
16	8409-020	16	/P	Screw, Cap
17	0423-120	16	F	Nut, Wheel Mounting
18	0502-163	4	S/F	Hub Wheel w/Studs

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
WIRING HARNESS ASSEMBLY

 Page 93 of 94

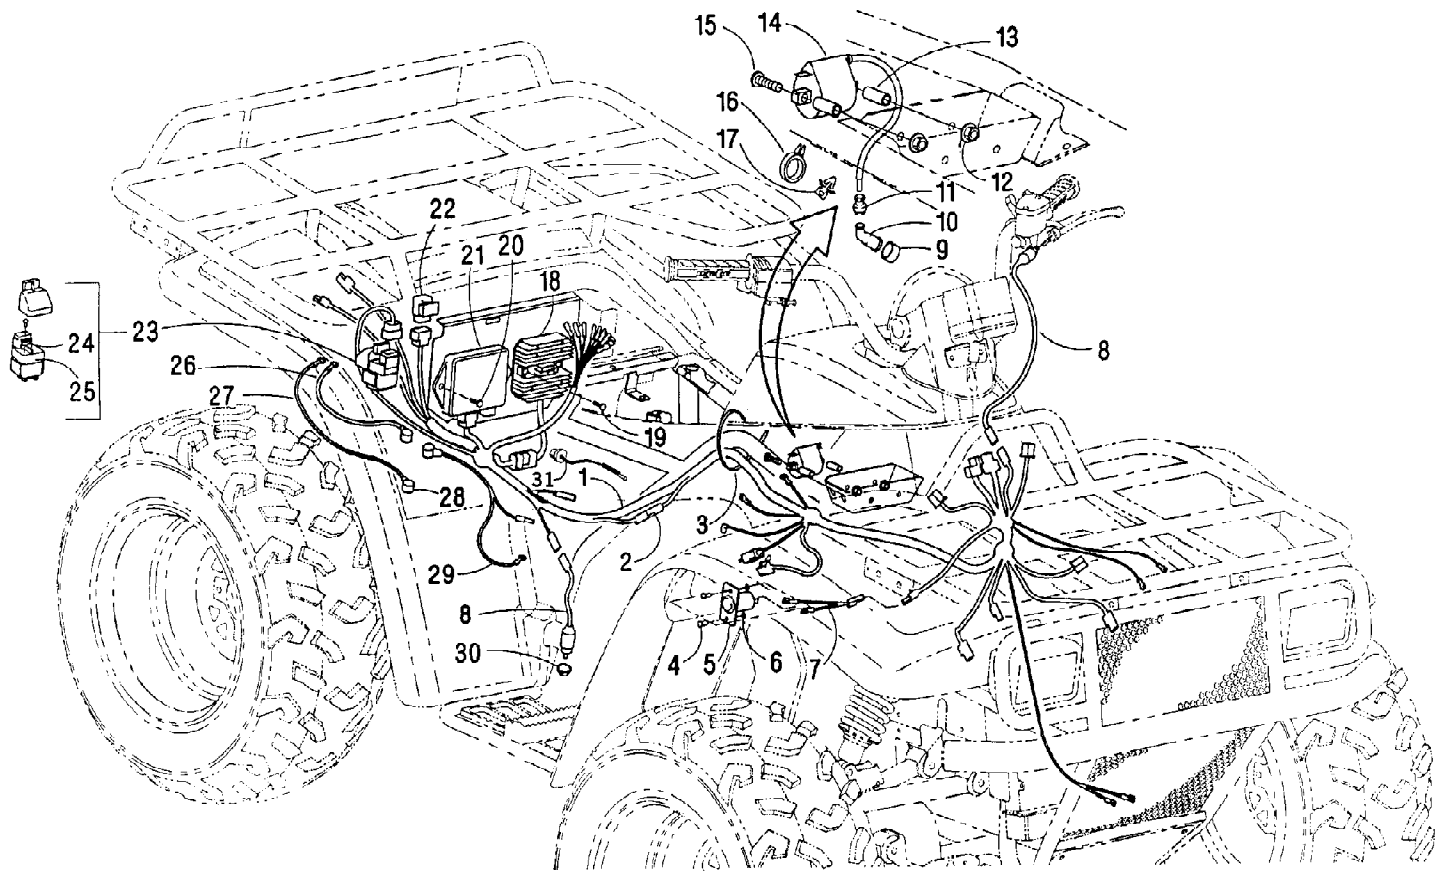

2000 500 4X4 (GREEN) (A2000ATM4AUSG)
WIRING HARNESS ASSEMBLY

Page 94 of 94

Ref #	Part Number	Qty	S/P/F	Description
1	0486-039	1		Harness, Main
1	0486-042	1	F	Harness, Main
2	0486-029	1		Diode (Start in Gear)
3	0123-903	0		Tie, Cable
4	8060-428	2		Rivet (4x4)
5	0445-001	1		Receptacle, 12V (4x4)
6	0123-149	2	/P	Washer (4x4)
7	0486-004	1		Harness, 12V Receptacle (4x4)
8	0409-009	2		Switch, Brake - Assembly
9	3430-008	1	/P	Seal, Spark Plug
10	3430-007	1	/P	Cap, Spark Plug
11	3430-009	1	/P	Seal, High Tension Wire
12	8424-602	2	/P	Nut
13	0107-630	2		Spacer
14	3530-004	1	/P	Coil, Ignition - Assembly
15	8476-640	2		Screw, Cap
16	0423-075	3		Cable Tie - Push Mount
17	0423-065	1		Base, Cable Tie
18	0530-006	1		Regulator, Voltage
19	8476-625	2		Screw, Machine
20	8476-616	2		Screw, Machine
21	3530-003	1		CDI Unit
22	3530-008	1	S	Relay, Neutral Start - Assembly
23	3530-001	1	/P	Relay, Starter Motor - Assembly (inc. 25)
24	3423-020	2	/P	Screw, Cap
25	0630-098	1		Fuse, 30 Amp
26	0445-003	1	/P	Cable, Battery/Electric Start Relay
27	0445-004	1		Cable, Battery/Electric Start
28	0645-019	3		Boot, Terminal
29	0445-002	1		Cable, Battery/Ground
30	0402-168	1	/P	Retainer, Switch
31	0586-003	1		Diode Assembly