 
 


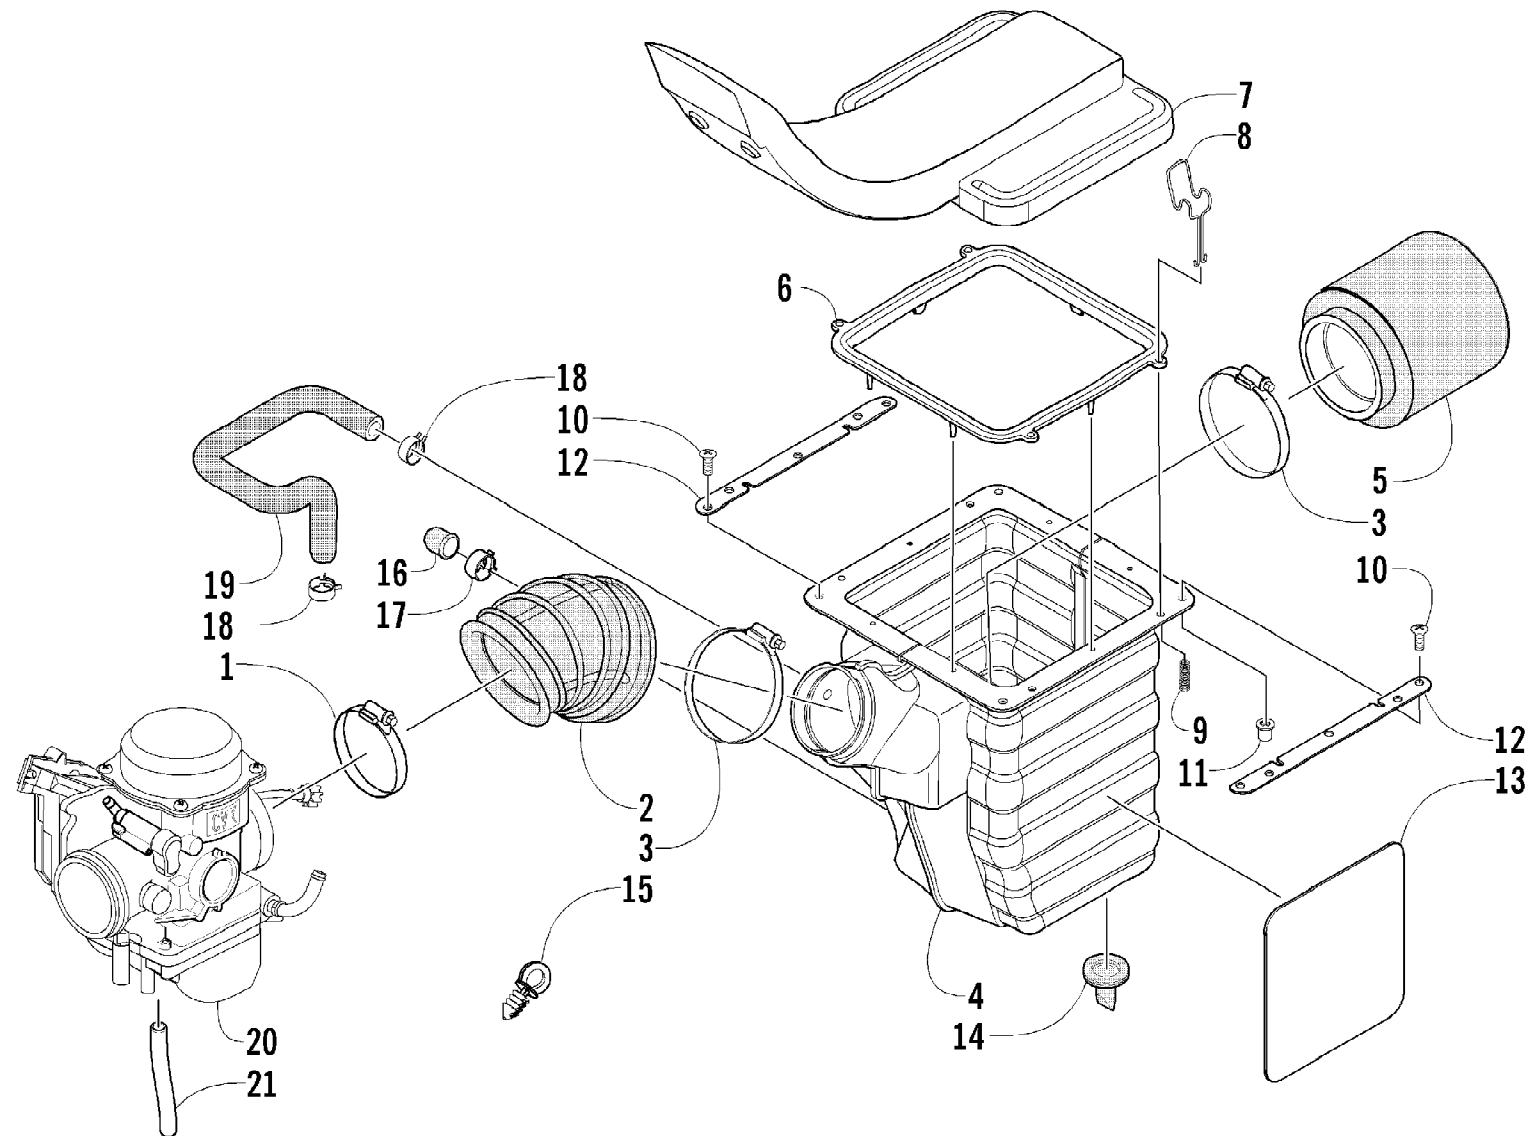

2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG) Page 2 of 94
AIR INTAKE ASSEMBLY


Ref #	Part Number	Qty	S/P/F	Description
1	0423-019	1		Clamp
2	0470-467	1		Boot, Air Intake
3	0423-018	2		Clamp
4	0470-446	1	/P	Housing, Air Intake
5	0470-391	1	/P	Filter, Air
6	0470-343	1		Gasket
7	0470-383	1	/P	Snorkel
8	0470-307	4		Clamp
9	0423-037	4		Spring
10	0623-121	4		Screw, Machine
11	0123-010	4	/P	Nut, Expansion
12	0470-351	2		Support, Air Intake Flange
13	0412-141	1		Shield, Heat
14	0470-442	1	/P	Valve, Drain
15	0623-101	1		Clip, Routing - Snap-In
16	1673-272	1	/P	Cap, Drain Tube
17	0423-047	1		Clamp, Hose
18	0423-045	2		Clamp, Hose - Spring
19	0410-045	1		Hose, Crankcase Vent
20	0470-470	1		Carburetor, CVK34-AE
21	0510-592	1		Hose, Carburetor Drain

2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG) Page 3 of 94
AUXILIARY BRAKE ASSEMBLY

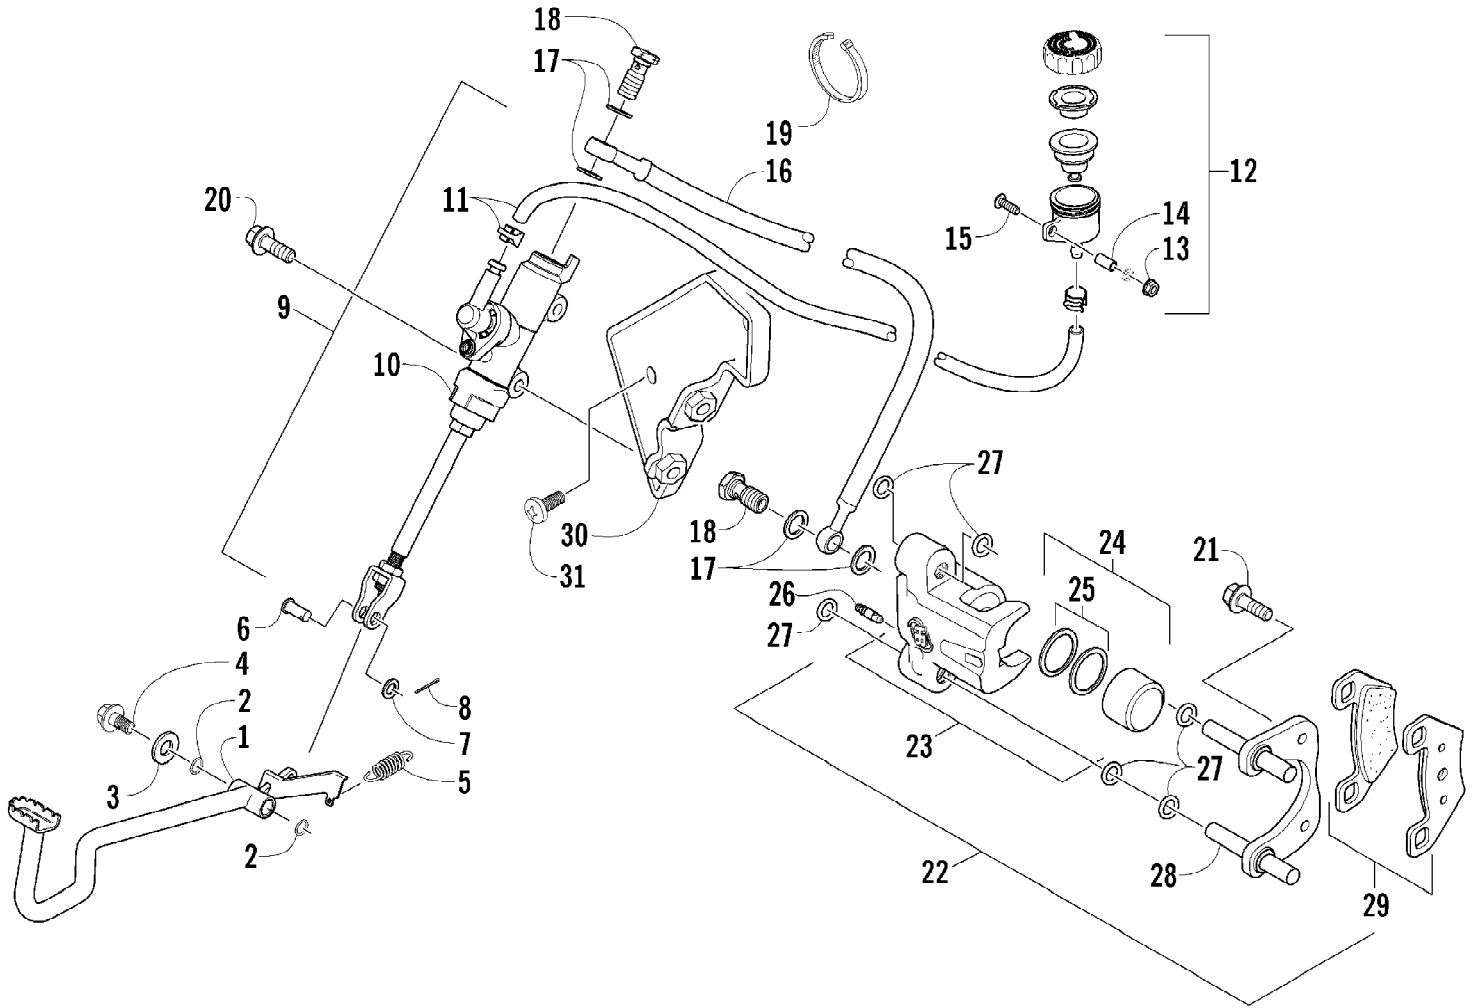


2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG) Page 4 of 94
AUXILIARY BRAKE ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
	0502-940	1		Fully Bled Master Cylinder Replacement Kit
1	0502-789	1		Lever, Brake
2	1602-213	2	/P	O-Ring
3	8050-252	1		Washer
4	8408-816	1		Screw, Cap
5	1402-407	1		Spring, Brake Lever
6	1402-377	1		Pin, Clevis
7	8050-217	1	/P	Washer
8	0402-584	1		Pin, Cotter
9	0502-941	1		Brake Assembly (inc. 10-12)
10	0	1	F	Master Cylinder
11	0502-886	1		Hose, Brake Reservoir
12	0502-877	1		Reservoir, Brake
13	8424-602	1	/P	Nut, Flanged
14	0423-608	1		Spacer
15	8476-640	1		Screw, Machine
16	1402-418	1		Hose, Brake - Rear
17	0423-178	4		Washer, Crush
18	0423-413	2		Bolt, Banjo Fitting
19	0123-788	1	/P	Cable Tie - 7.5 in.
20	8408-625	2		Screw, Cap
21	8408-820	2	/P	Screw, Cap
22	0502-602	1	S	Caliper, Brake (inc. 23-29)
23	0502-603	1	S	Housing, Caliper - Assembly - Right Front (inc. 24-26)
24	0502-606	1		Piston/Seal Set (inc. 25)
25	0502-607	1		Seal Set
26	0502-609	1	/P	Valve, Bleed
27	0502-608	1		O-Ring, Guide - Set
28	0502-605	1		Bracket Assembly
29	0502-604	1	S	Pad, Brake - Set
30	0502-873	1		Bracket, Master Cylinder
31	8471-616	2		Screw, Machine

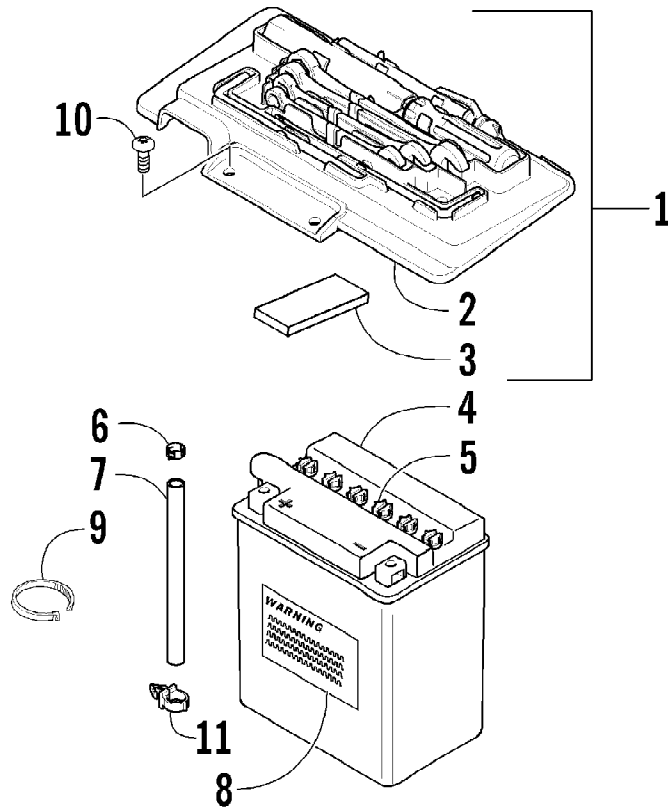 

2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG) Page 6 of 94
BATTERY ASSEMBLY


Ref #	Part Number	Qty	S/P/F	Description
1	5991-395	1	S	Battery Cover/Tool Tray Assembly (inc. 2-3)
2	2406-815	1	/P	Cover, Battery
3	0406-288	2		Pad, Battery
3	0444-122	1	S/P	Kit, Tool Not Illustrated
4	0745-045	1	/P	Battery Assembly (inc. 5-8)
5	0645-045	6		Cap, Battery
6	0645-152	1		Clamp, Hose
7	0645-263	1	/P	Hose, Vent
8	0645-151	1		Label, Warning - Battery
9	0123-903	4		Cable Tie - 11.5 in.
10	8476-616	2		Screw, Machine
11	0623-101	AR		Clip, Retaining

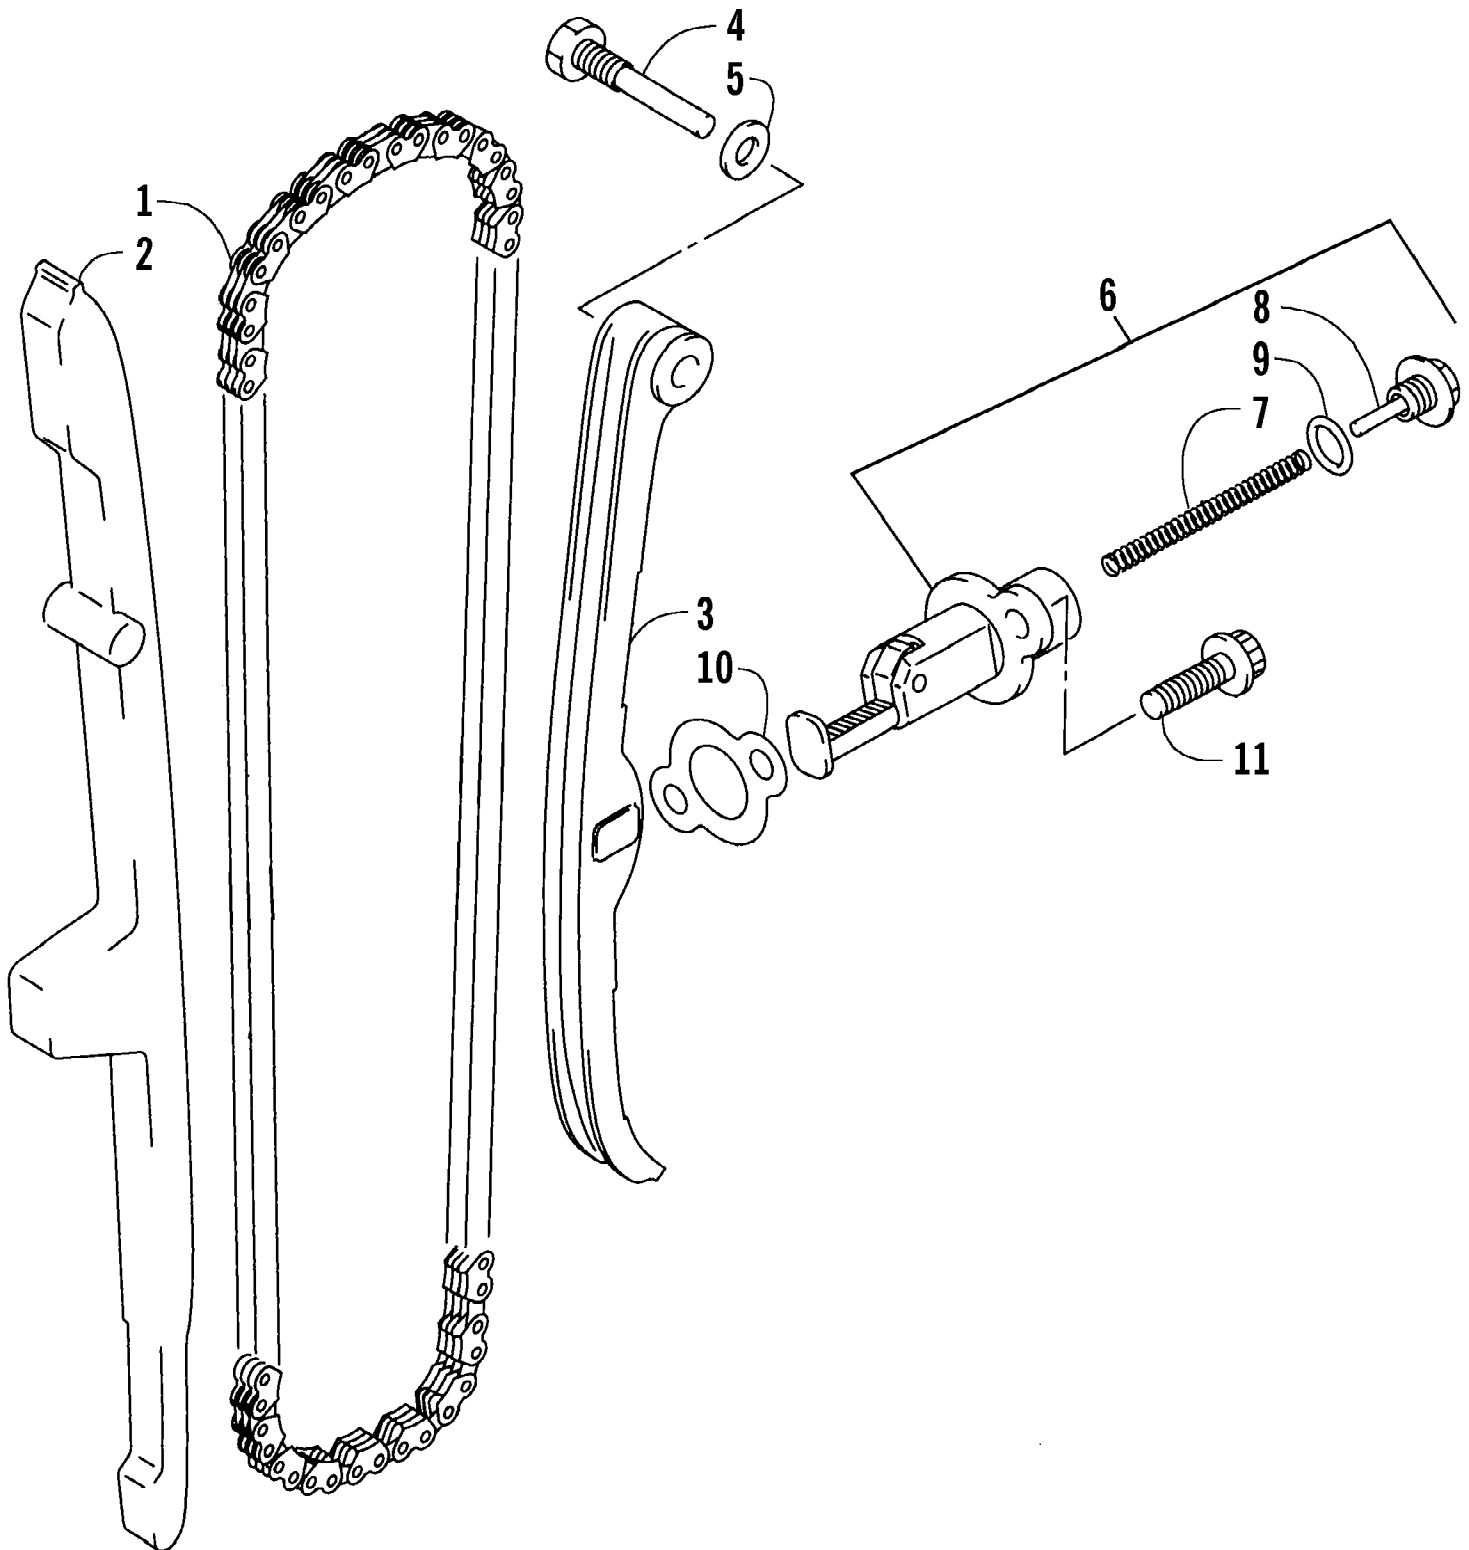 

2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG) Page 8 of 94
CAM CHAIN ASSEMBLY


Ref #	Part Number	Qty	S/P/F	Description
1	3402-281	1		Chain, Cam
2	3402-612	1		Guide, Cam Chain
3	3402-613	1		Tensioner, Cam Chain
4	3423-074	1		Bolt
5	3402-436	1	/P	Washer
6	3402-614	1		Adjuster, Tensioner - Assembly (inc. 7-9)
7	3423-484	1		Spring
8	3423-485	1		Plug
9	3423-286	1		O-Ring
10	3403-020	1		Gasket, Adjuster
11	3004-512	2	S	Bolt

 2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG) Page 9 of 94
CAMSHAFT/VALVE ASSEMBLY

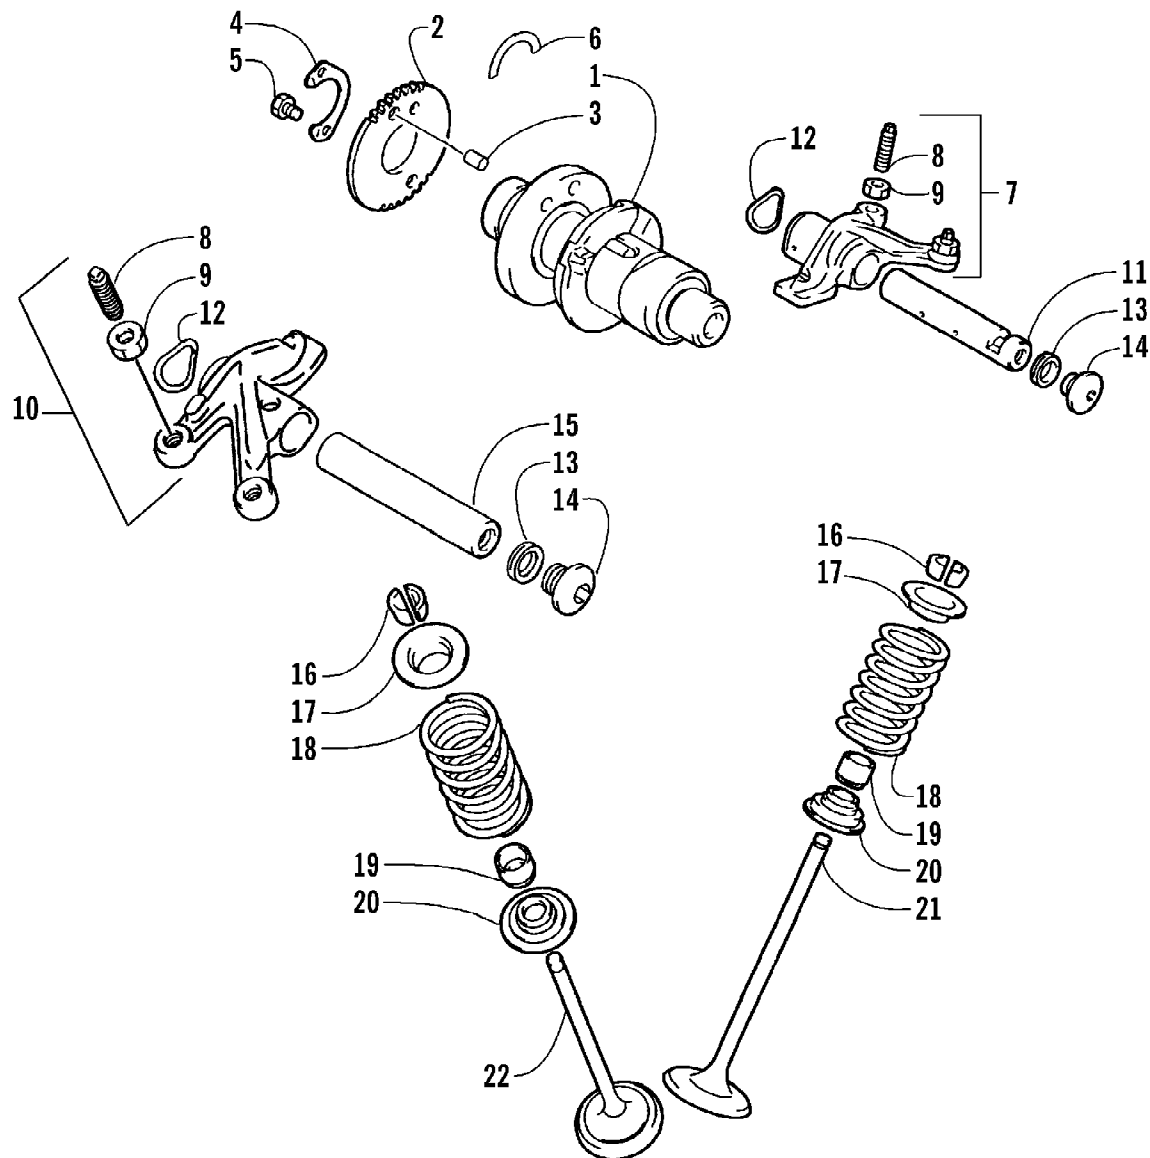

2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 10 of 94
CAMSHAFT/VALVE ASSEMBLY


Ref #	Part Number	Qty	S/P/F	Description
1	3402-989	1	S	Camshaft
2	3402-611	1		Sprocket
3	3423-047	1		Pin
4	3423-073	1		Washer
5	3423-013	2	S	Bolt
6	3423-071	1	/P	C-Ring
7	3402-805	1	/P	Arm, Valve Rocker - Intake (inc. two No. 8-9)
8	3423-075	4		Screw
9	3423-076	4		Nut
10	3402-139	1		Arm, Valve Rocker - Exhaust (inc. two No. 8-9)
11	3402-140	1		Shaft, Rocker Arm
12	3423-031	2		Washer
13	3402-012	2		Gasket
14	3402-040	2	/P	Plug, Shaft
15	3402-141	1		Shaft, Rocker Arm
16	3402-147	8		Cotter, Valve
17	3423-541	4	/P	Retainer, Spring
18	3402-726	4		Spring, Valve
19	3402-078	4		Seal, Oil
20	3402-148	4		Seat, Spring
21	3402-725	2	/P	Valve, Intake
22	3402-143	2		Valve, Exhaust

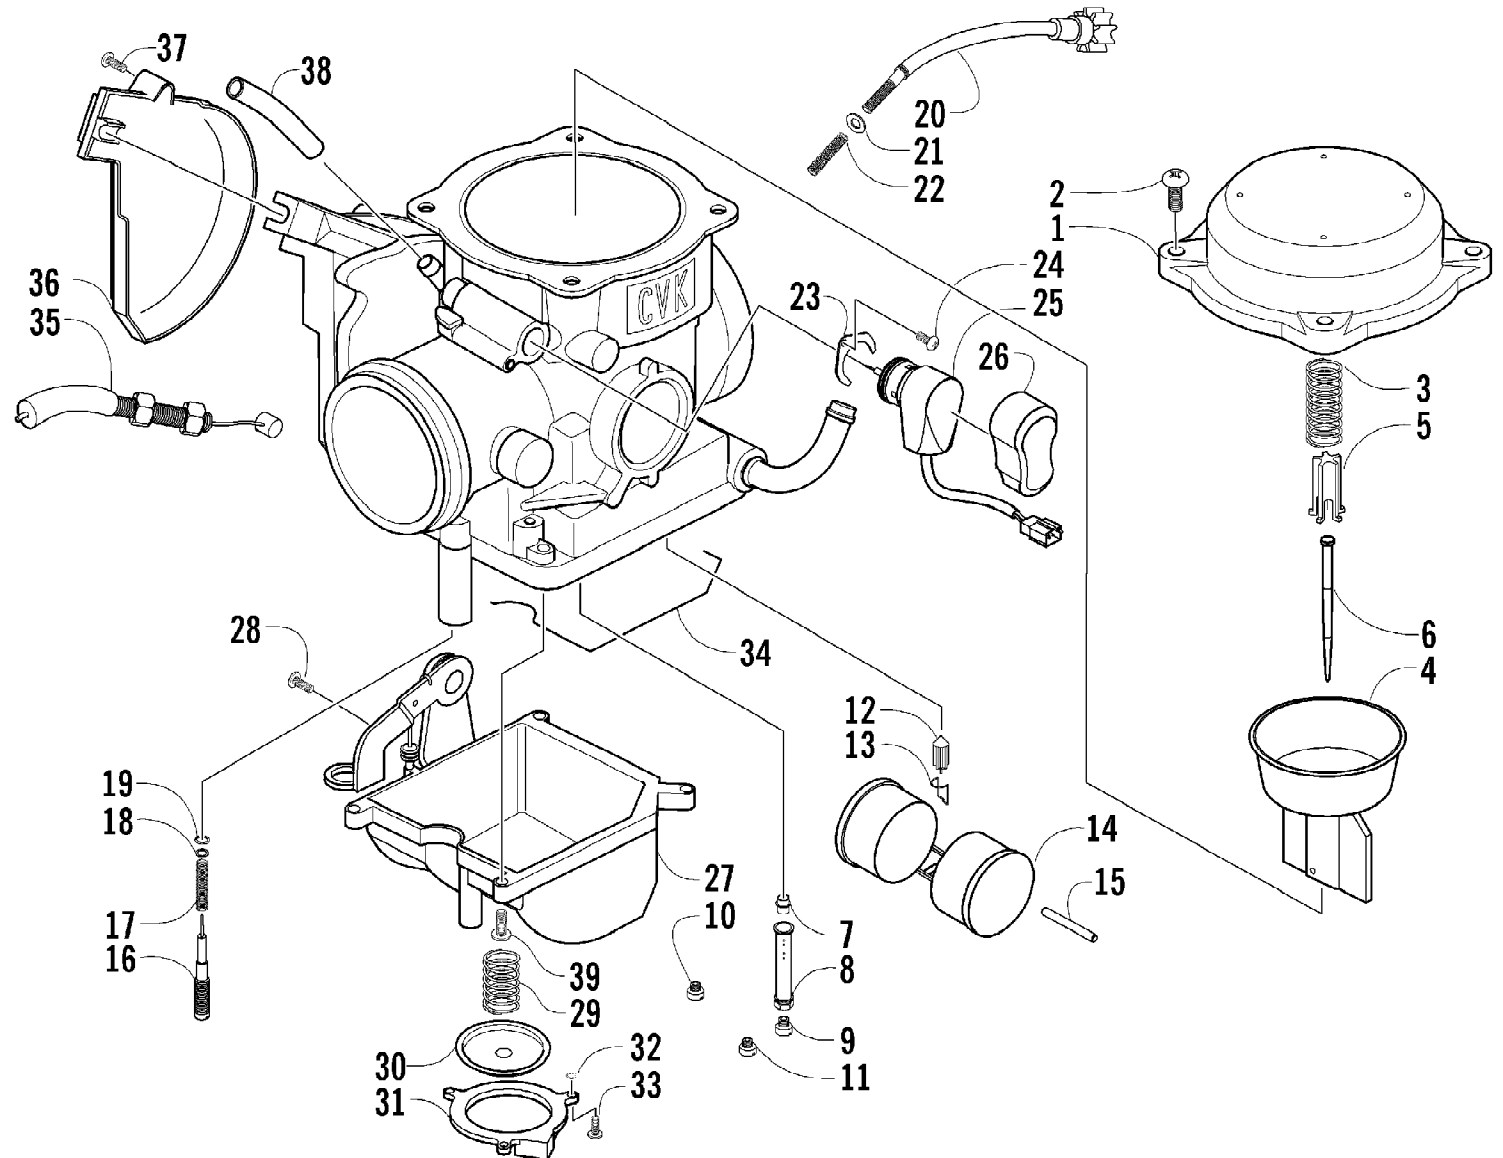 

2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 12 of 94
CARBURETOR


Ref #	Part Number	Qty	S/P/F	Description
	0470-470	1		Complete Carburetor Assembly CVK34-AE
1	5507-001	1		Cover, Top
2	5507-002	4	/P	Screw, Top Cover
3	5507-085	1	S	Spring
4	5507-109	1	S	Piston, Vacuum
5	5507-005	1		Seat, Spring
6	5507-110	1		Jet Needle
7	5507-007	1		Needle Jet
8	5507-047	1	/P	Holder, Needle Jet
9	5507-043	1		Main Jet - 142
9	5507-009	1	/P	Main Jet - 150
9	5507-041	1		Main Jet - 147
9	5507-042	1	/P	Main Jet - 145
9	5507-044	1		Main Jet - 140
10	5507-010	1	S	Slow Jet - 38
11	5507-179	1	S	Starter Jet - 75
12	5507-107	1		Valve, Float - Set (inc. 13)
13	0	1	F	Clip
14	5507-039	1		Float Set (inc. 15)
15	0	1	F	Pin, Float
16	5507-111	1		Screw, Pilot Air - Set (inc. 17-19)
17	0	1	F	Spring
18	0	1	F	Washer
19	0	1	F	O-Ring
20	5507-027	1		Screw, Idle Adjust
21	5507-028	1		Washer
22	5507-029	1		Spring
23	5507-115	1		Plate
24	5507-117	1	/P	Screw
25	5507-180	1		Choke, Electric
26	5507-114	1		Cover, Electric Choke
27	0	1	F	Chamber, Float - Assembly (inc. 28-34)
28	5507-050	1	/P	Screw, Drain
29	5507-032	1		Spring
30	5507-031	1	S	Diaphragm Assembly
31	0	1	F	Housing, Pump
32	5507-034	1		U-Ring
33	5507-035	3		Screw
34	5507-067	1	/P	O-Ring, Float Chmaber
35	0487-021	1	S	Cable, Throttle
36	5507-036	1		Cover
37	5507-037	1	/P	Screw
38	0410-056	1		Hose, Vent
39	5507-017	4	/P	Screw

 2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 13 of 94
CLUTCH ASSEMBLY

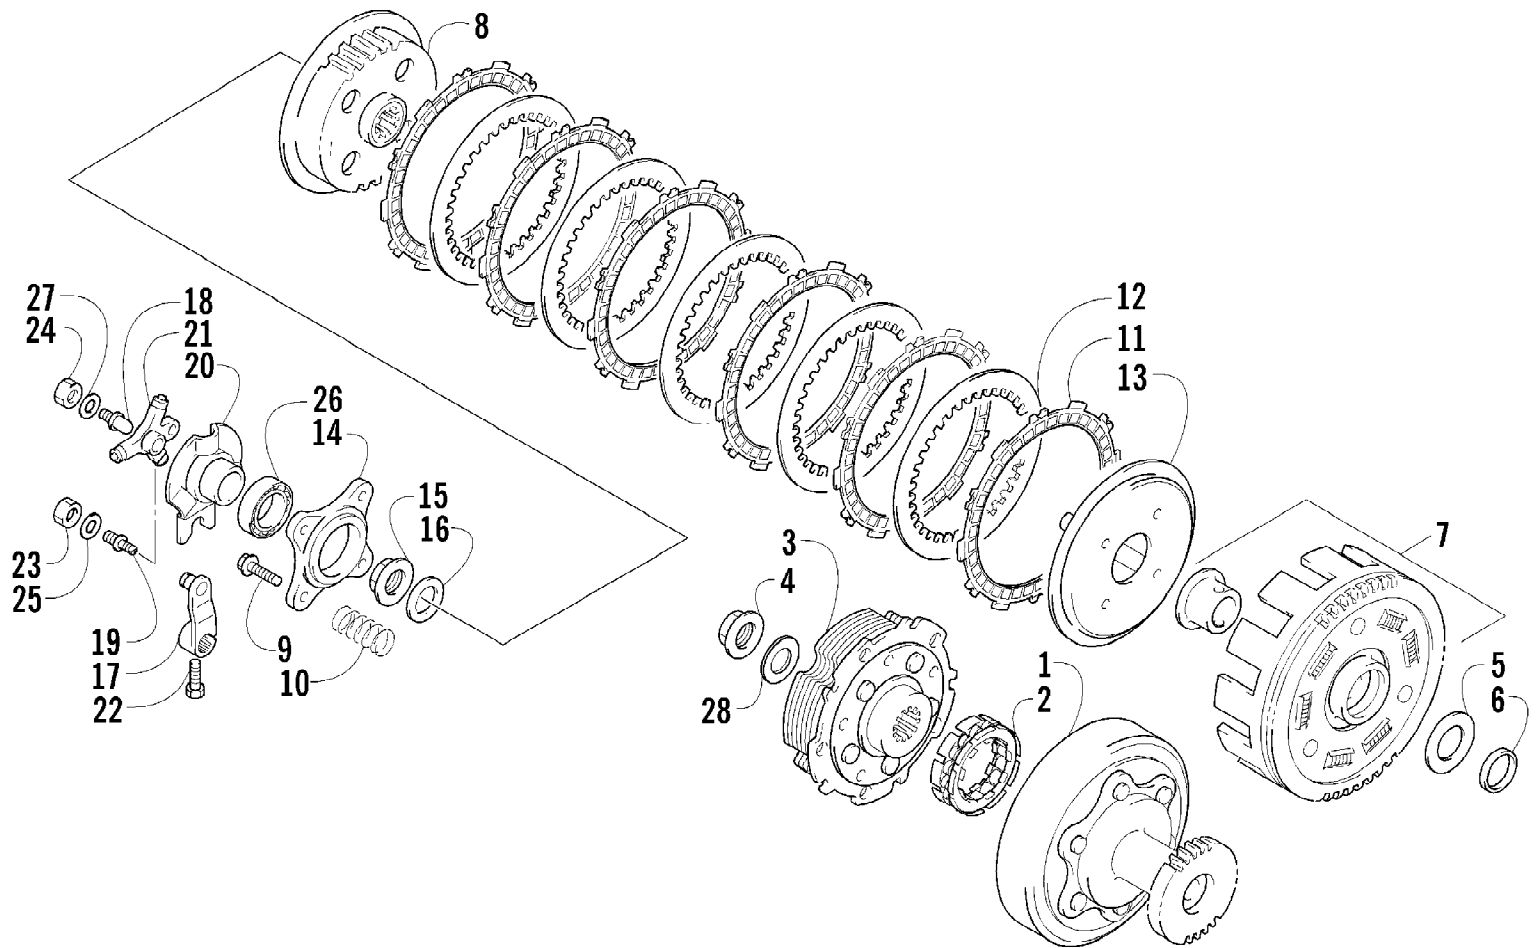


2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 14 of 94
CLUTCH ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	3446-352	1	/P	Housing, Starter Clutch
2	3446-003	1		Clutch, Primary Drive One Way
3	3446-290	1		Shoe, Starter Clutch
4	3423-409	1		Nut, Starter Clutch Shoe
5	3423-515	1		Washer, Primary Driven
6	3423-516	1		Washer
7	3446-291	1		Gear, Primary Driven - Assembly
8	3446-004	1		Hub, Clutch Sleeve
9	3423-330	4		Screw, Cap - Clutch Spring
10	3423-517	4		Spring, Clutch
11	3446-006	6		Plate, Clutch Drive
12	3446-007	5		Plate, Clutch Driven
13	3446-008	1		Disc, Clutch Pressure
14	3446-009	1		Plate, Clutch Release
15	3423-080	1		Nut, Clutch Sleeve Hub
16	3423-032	1		Washer, Sleeve Hub
17	3446-292	1		Arm, Clutch Release
18	3423-361	1		Bolt, Clutch Release - No. 1
19	3423-083	1		Bolt, Clutch Release - No. 2
20	3446-293	1		Guide, Release Roller
21	3446-294	1		Roller, Clutch Release - Assembly
22	3423-125	1	S	Bolt, Clutch Release Arm
23	3008-014	1		Nut, Clutch Release - No. 2
24	3423-359	1		Nut, Clutch Release - No. 1
25	3423-027	1		Washer, Clutch Release - No. 2
26	3402-186	1	/P	Bearing, Clutch
27	3423-360	1		Washer, Clutch Release - No. 1

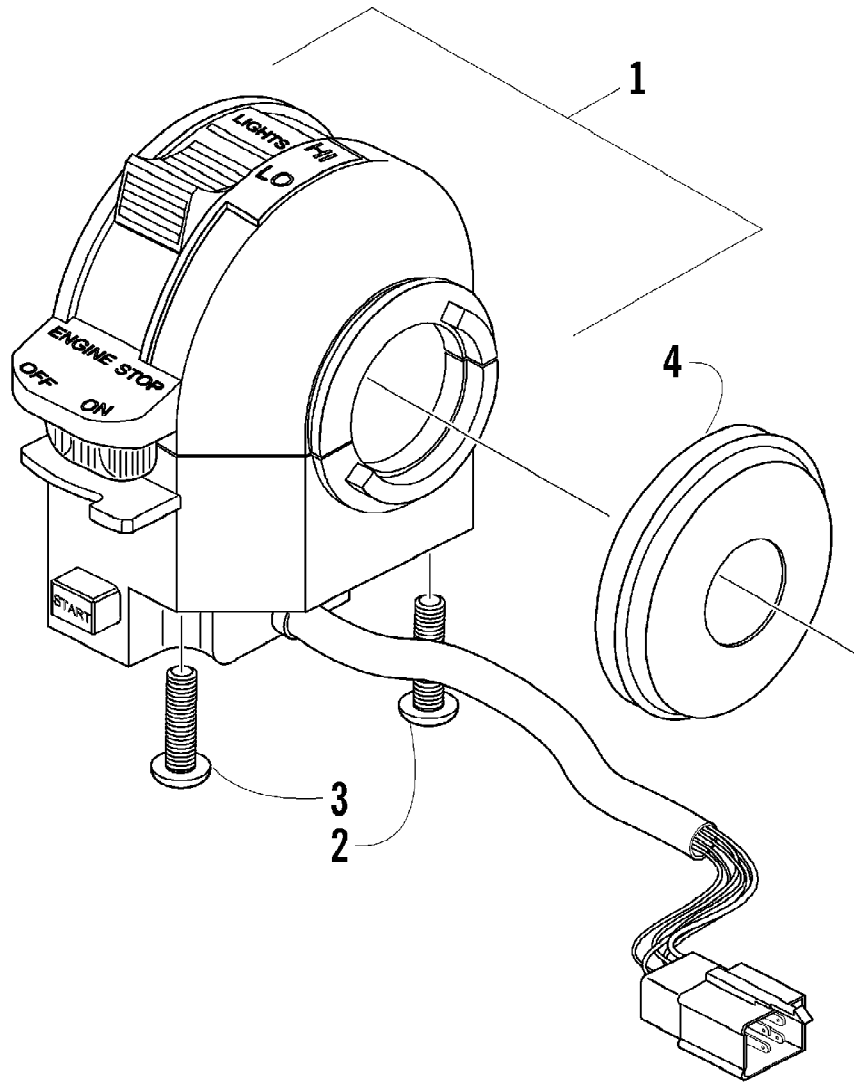 


2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 16 of 94
CONTROL SWITCH HOUSING ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0509-013	1		Switch, Control - Assembly (inc. 2-3)
2	3423-197	1		Screw, Machine
3	3423-196	1		Screw, Machine
4	3409-019	1		Cover, Switch Housing

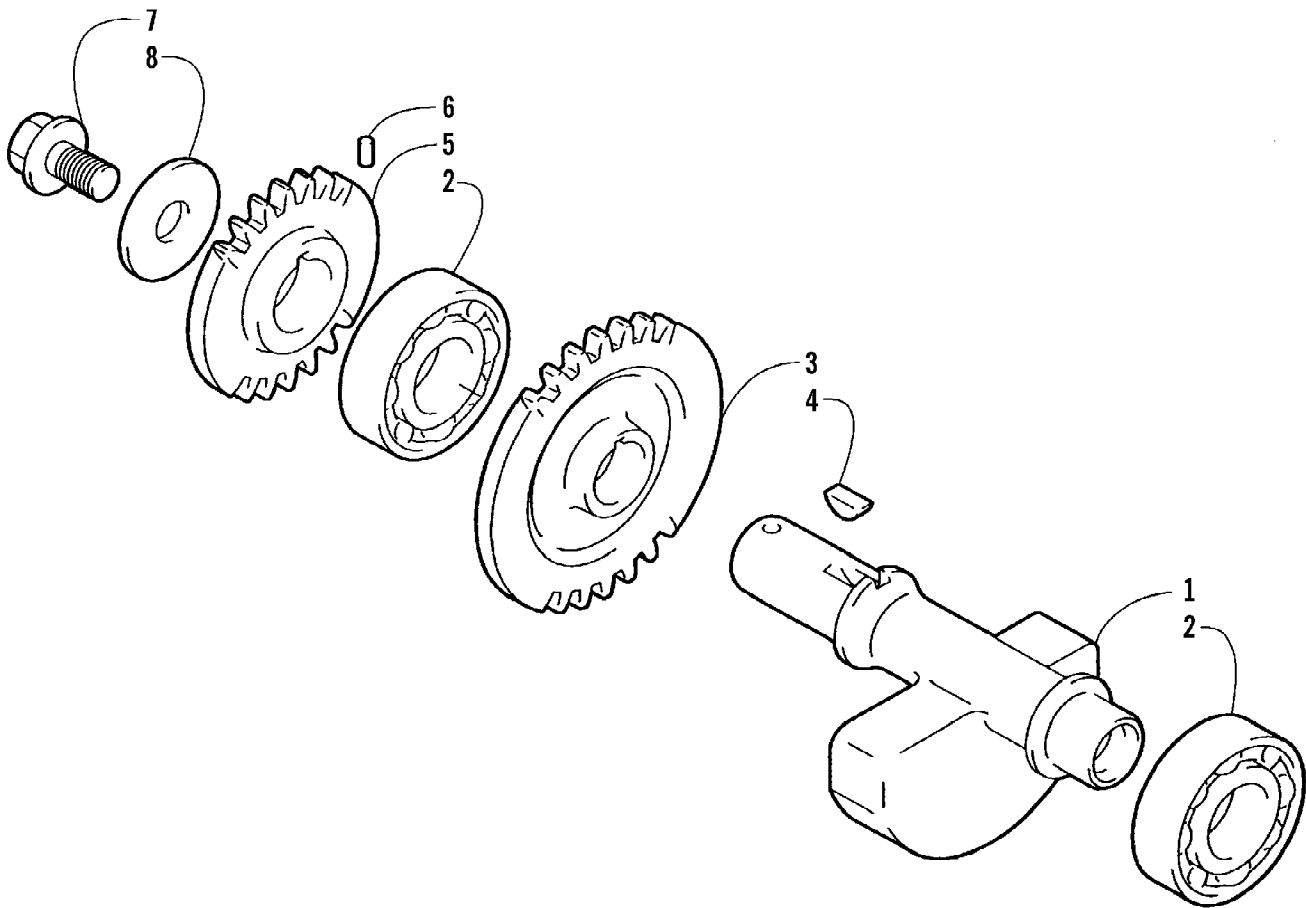 


2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 18 of 94
CRANK BALANCER ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	3402-605	1		Balancer, Crank
2	3402-553	2	/P	Bearing
3	3402-772	1		Gear, Driven - No. 1
4	3004-540	1	/P	Key
5	3402-617	1		Gear, Oil Pump Drive
6	3423-110	1		Pin, Drive Gear
7	3423-555	1		Bolt, Drive Gear
8	3423-401	1		Washer, Drive Gear

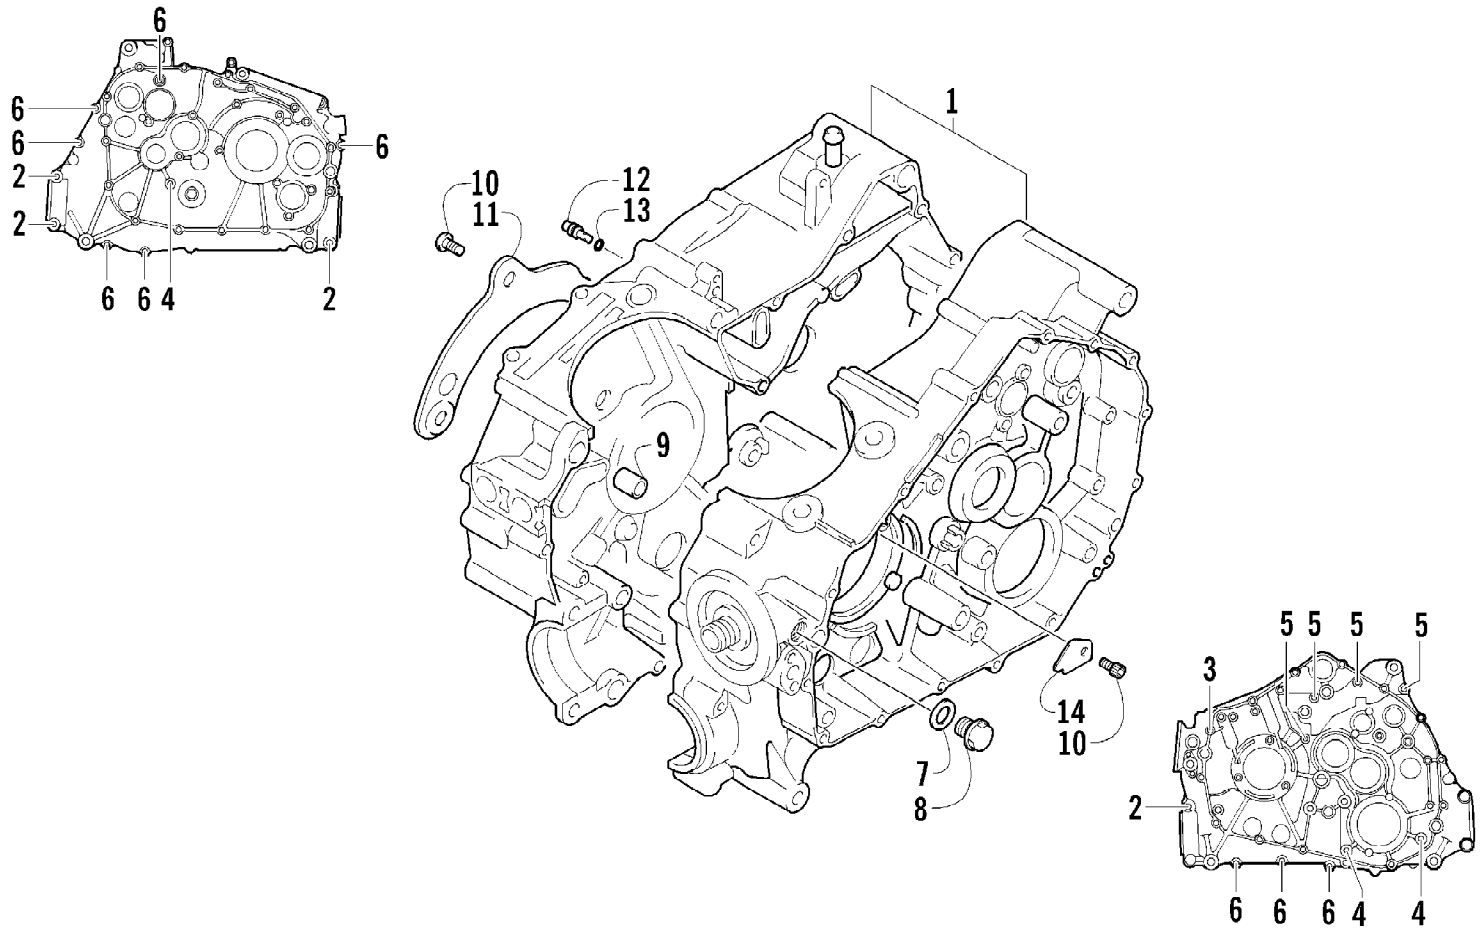 

2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 20 of 94
CRANKCASE ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	3402-763	1		Crankcase Assembly (inc. 2-9)
2	3004-880	4		Bolt
3	3005-332	1		Bolt
4	3005-410	3		Bolt
5	3423-097	4		Bolt
6	3423-091	8	S	Bolt
7	3402-012	1		Gasket, Oil Pressure Plug
8	3402-214	1		Plug, Oil Pressure
9	3423-088	2		Pin, Dowel
10	3004-552	4	S	Screw, Oil Guide Plate
11	3402-764	1		Plate, Oil Guide - Right
12	3402-691	1		Jet, Oil Gallery
13	3423-051	1		O-Ring, Oil Gallery Jet
14	3402-582	1		Plate, Oil Guide - Left

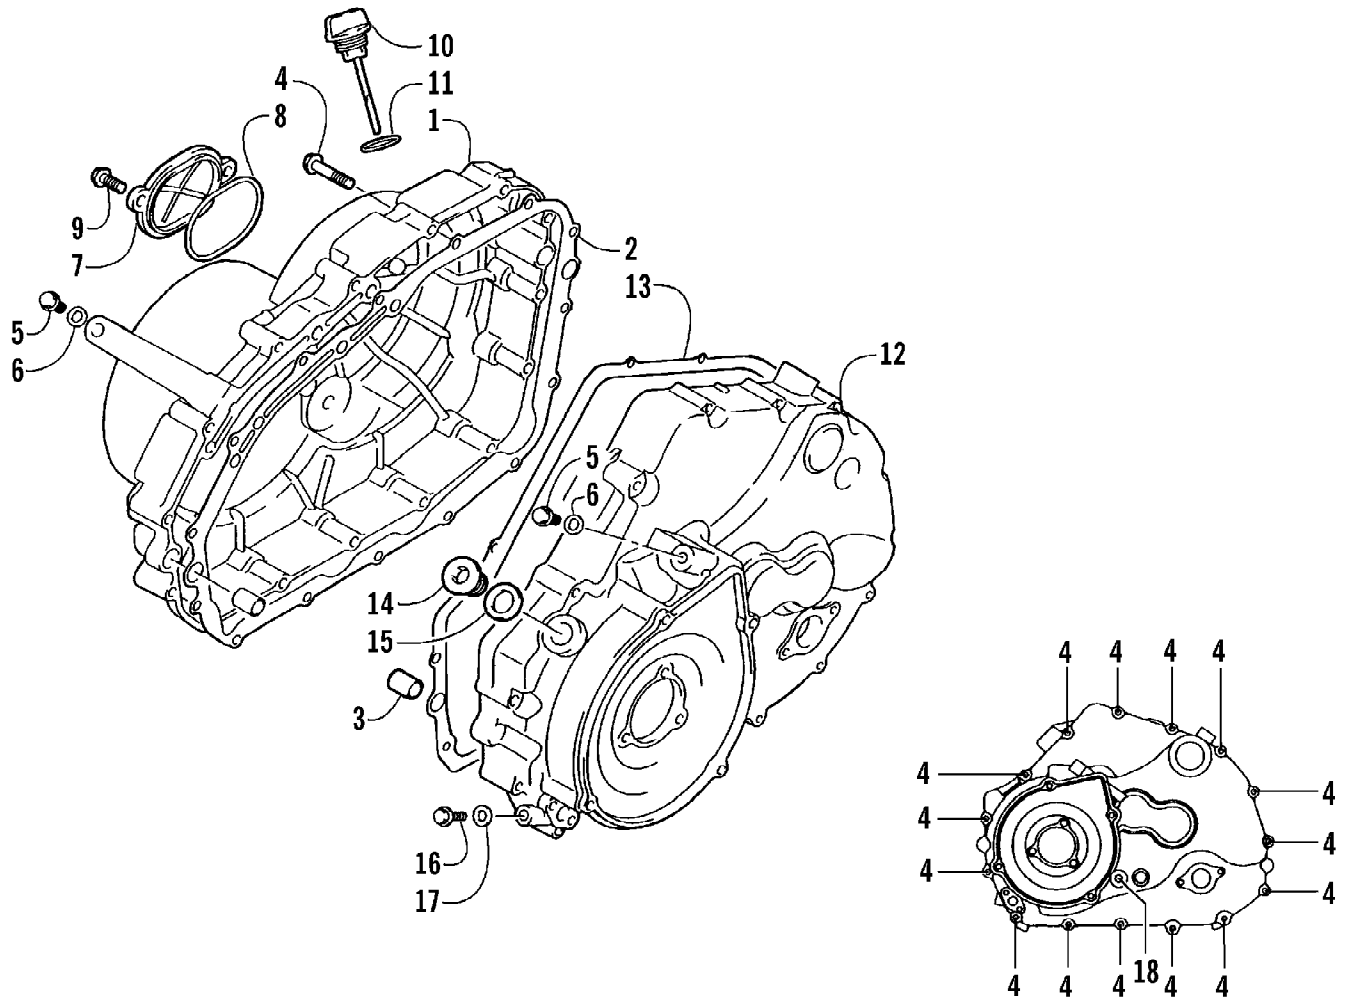 


2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 22 of 94
CRANKCASE COVER ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	3402-991	1		Cover, Clutch
2	3402-766	1		Gasket
3	3423-088	4		Pin, Dowel
4	3423-098	30	S	Bolt
5	3004-338	2	S/P	Plug, Oil Gallery
6	3003-290	2	/P	Gasket
7	3402-100	1		Cap, Inspection
8	3402-101	1		O-Ring, Inspection Cap
9	3004-341	2	S/P	Bolt, Inspection Cap
10	3402-593	1		Stick, Oil Level
11	3423-055	1		O-Ring, Oil Level Stick
12	3402-767	1		Cover, Magneto
13	3402-768	1		Gasket, Magneto Cover
14	3423-180	1	S	Plug
15	3402-013	1	/P	Gasket
16	3004-705	1	S	Plug, Drain
17	3402-444	1		Gasket, Drain Plug
18	3423-430	1		Bolt


2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 24 of 94
CRANKSHAFT ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	3402-992	1	/P	Crankshaft Assembly (inc. 2-8)
2	3402-597	1		Rod, Connecting
3	3402-769	1		Pin, Crank
4	3402-571	1		Bearing
5	3423-440	2		Washer
6	3402-993	1	/P	Crankshaft - Right
7	3403-019	1	/P	Crankshaft - Left
8	3402-698	1	/P	Gear, Crank Balancer Drive
9	3402-994	2		Bearing - Middle
10	3423-768	1		Spacer
11	3402-771	1		Circlip
12	3402-216	1		Bearing - Right
13	3402-594	1		Piston
14	3402-595	1		Ring, Piston - Set
15	3436-015	1	F	Piston Set (Oversized 0.50 mm)
16	3003-439	2	/P	Circlip
17	3402-596	1		Pin, Piston
18	3402-051	1		Bearing
19	3423-063	1		O-Ring
20	3402-119	1	S	Spacer
21	3402-070	1		Seal, Oil
22	3423-053	1	/P	O-Ring
23	3402-188	1	/P	Retainer, Crankshaft Oil Seal - Left
24	3423-018	3		Screw, Retainer

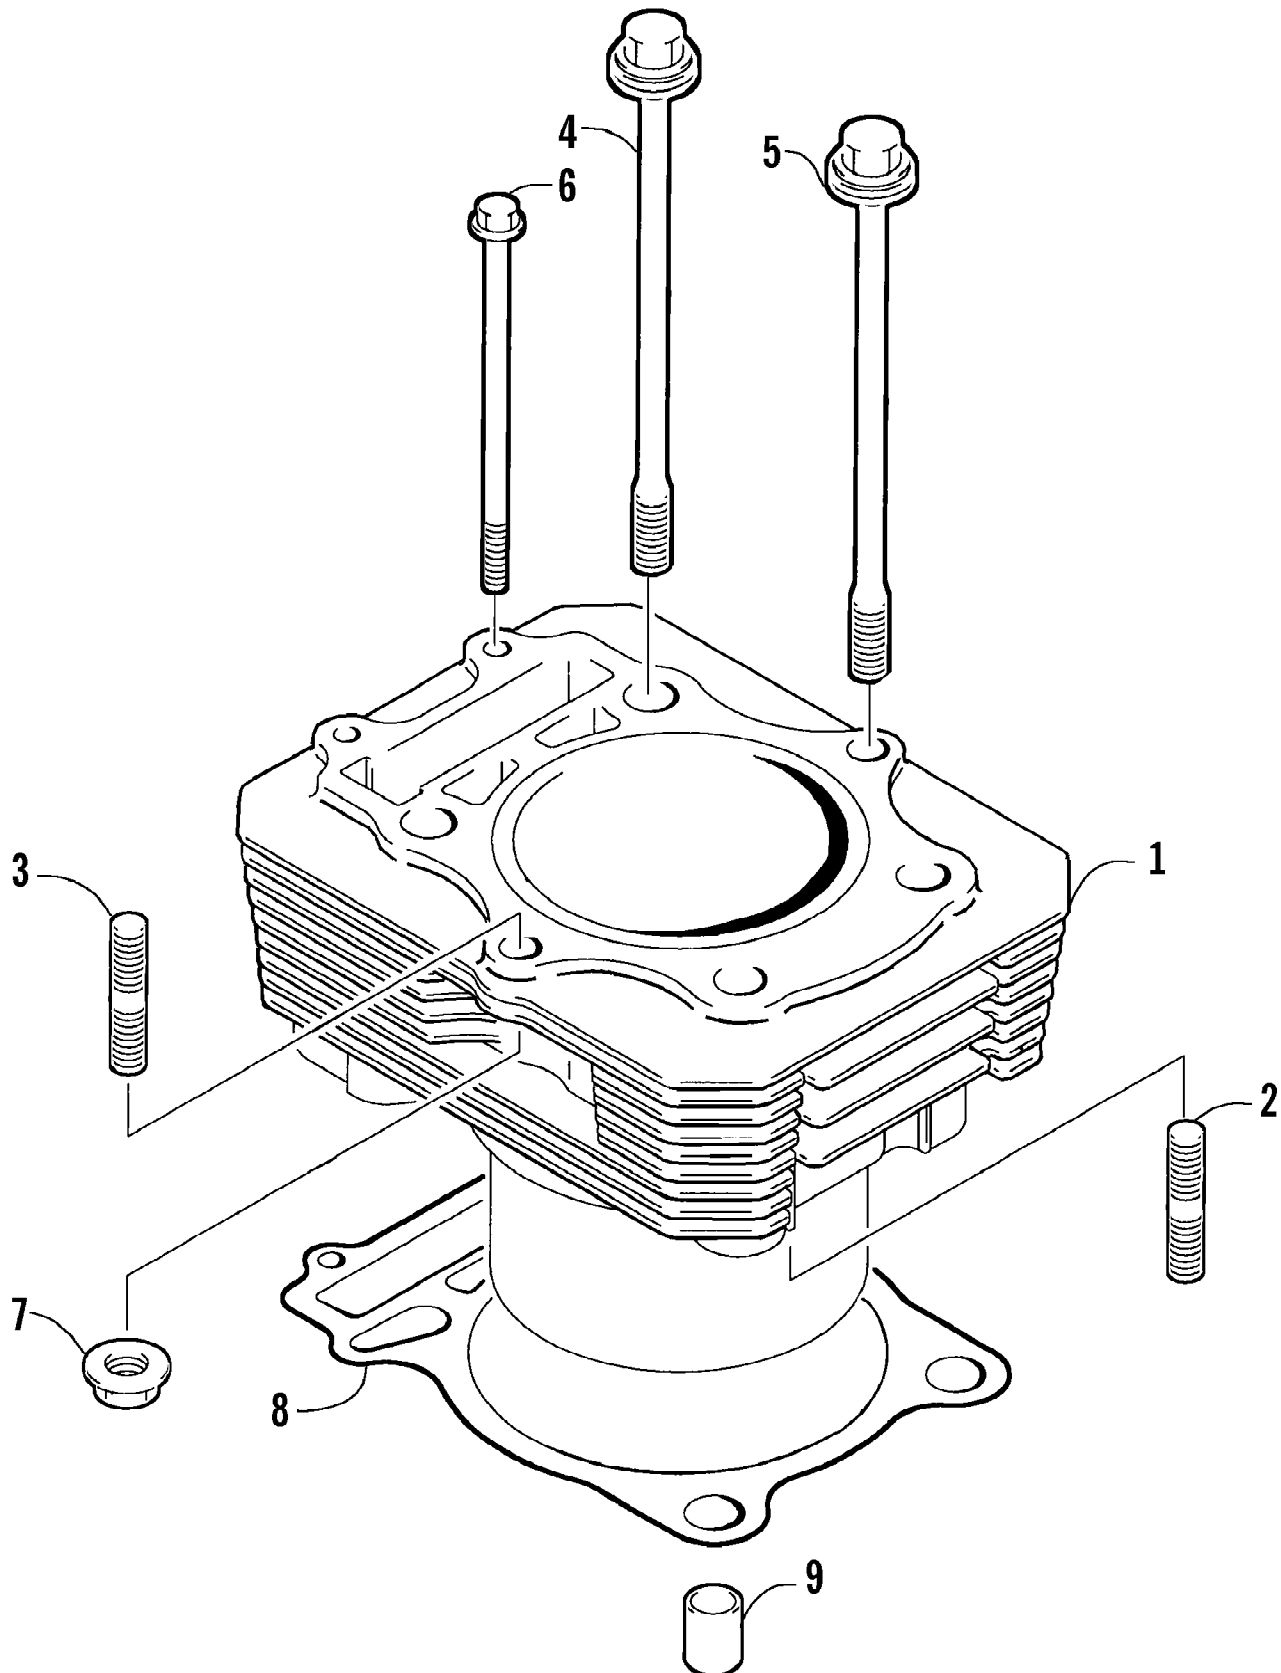 


Ref #	Part Number	Qty	S/P/F	Description
1	3402-578	1	S	Cylinder
2	3423-384	2	S	Bolt, Stud
3	3004-778	2	S	Bolt, Stud
4	3423-431	2		Bolt
5	3423-432	2		Bolt
6	3423-427	2		Bolt
7	3004-488	2	S/P	Nut
8	3402-579	1		Gasket, Cylinder
9	3423-088	2		Pin, Dowel

 2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 27 of 94
CYLINDER HEAD ASSEMBLY

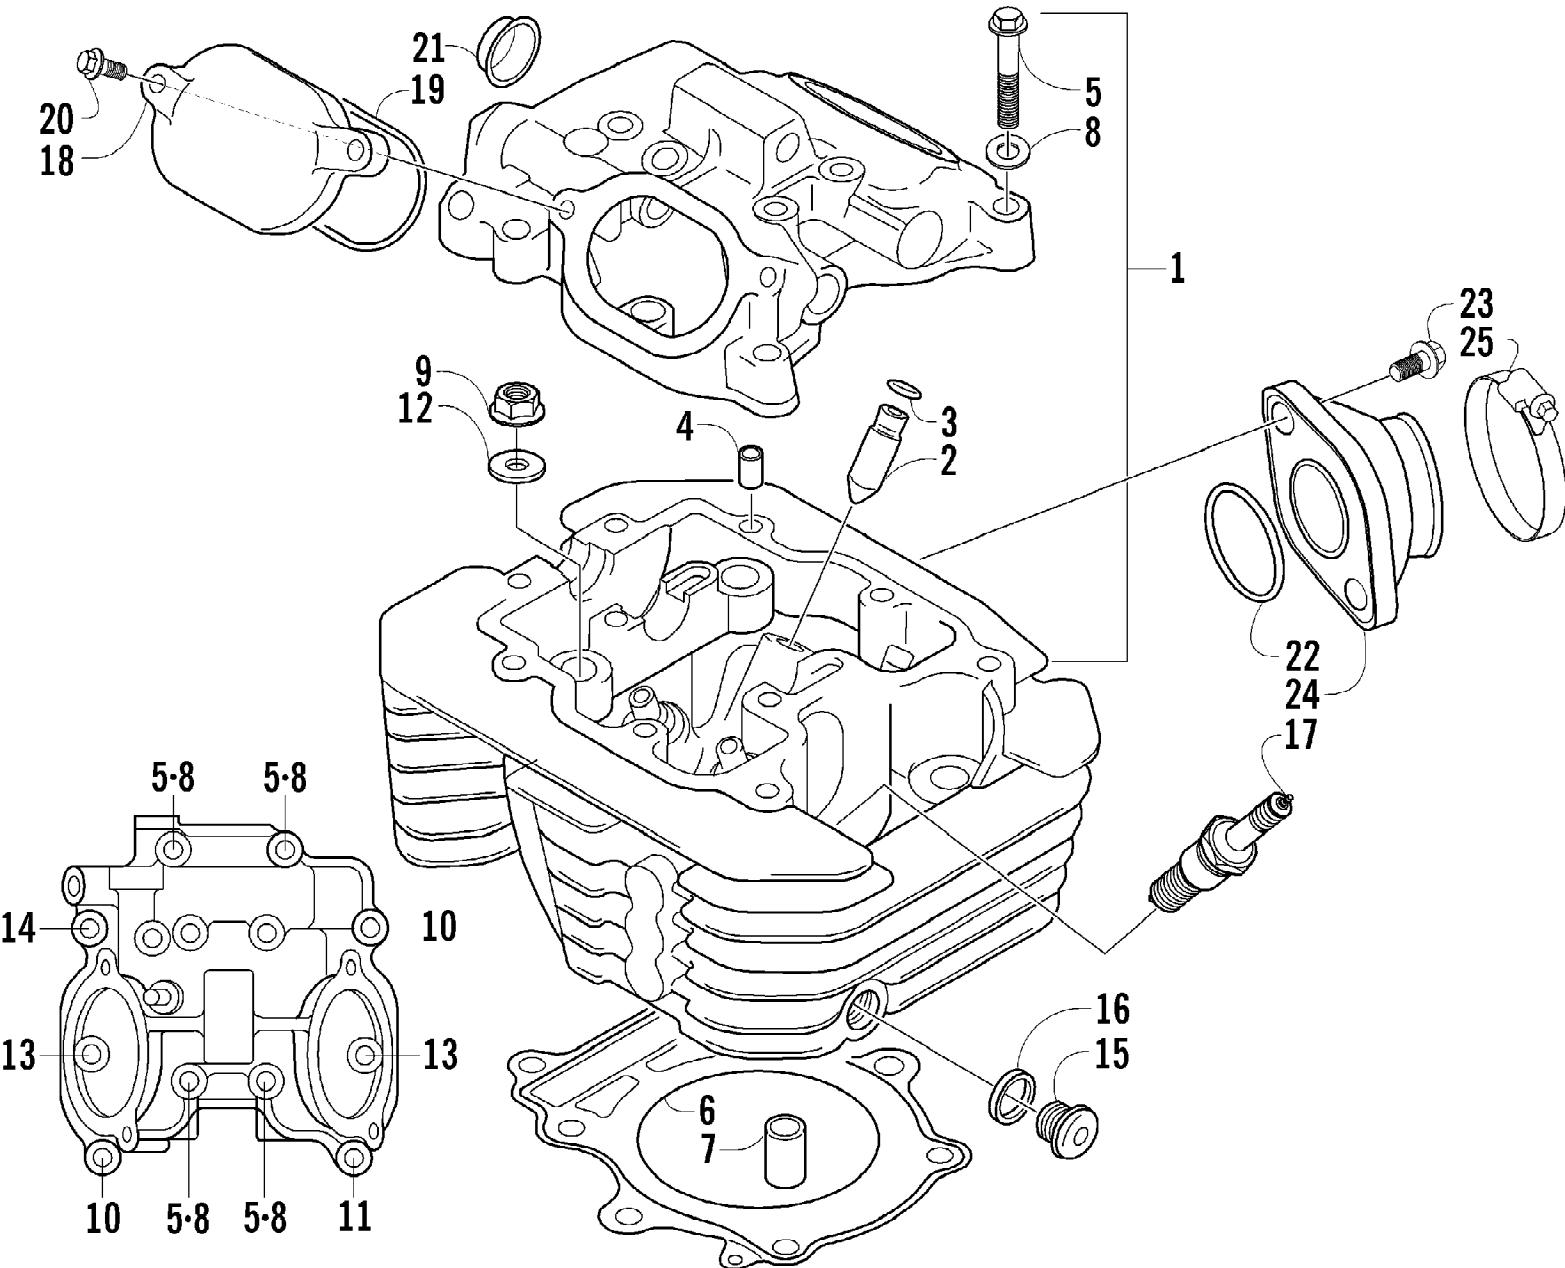


2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 28 of 94
CYLINDER HEAD ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	3402-576	1	S	Head, Cylinder - Assembly (inc. 2-5)
2	3402-099	2		Guide, Valve
3	3423-068	4		Ring, Valve Guide
4	3423-043	2	/P	Pin, Dowel
5	3423-006	4		Bolt
6	3402-577	1		Gasket, Cylinder Head
7	3423-449	2		Pin, Dowel
8	3003-290	4	/P	Gasket
9	3004-326	2	S/P	Nut, Cylinder Head
10	3423-007	2	S	Bolt, Head Cover
11	3423-429	1		Bolt, Head Cover
12	3423-439	4	S	Washer, Cylinder Head Nut
13	3004-376	2	S/P	Bolt, Head Cover
14	3008-376	1	S	Bolt, Head Cover
15	3423-453	1		Plug, Oil Gallery
16	3402-011	1		Gasket, Oil Gallery Plug
17	0217-708	1		Spark Plug (NGK CR7E)
18	3402-100	2		Cap, Inspection
19	3402-101	2		O-Ring
20	3004-341	4	S/P	Bolt, Inspection Cap
21	3402-035	1		Plug, Head
22	3423-353	1	/P	O-Ring
23	8476-620	2		Screw
24	0570-076	1		Manifold, Intake
25	0423-317	1	/P	Clamp
	3402-048	1		Plug, Frost

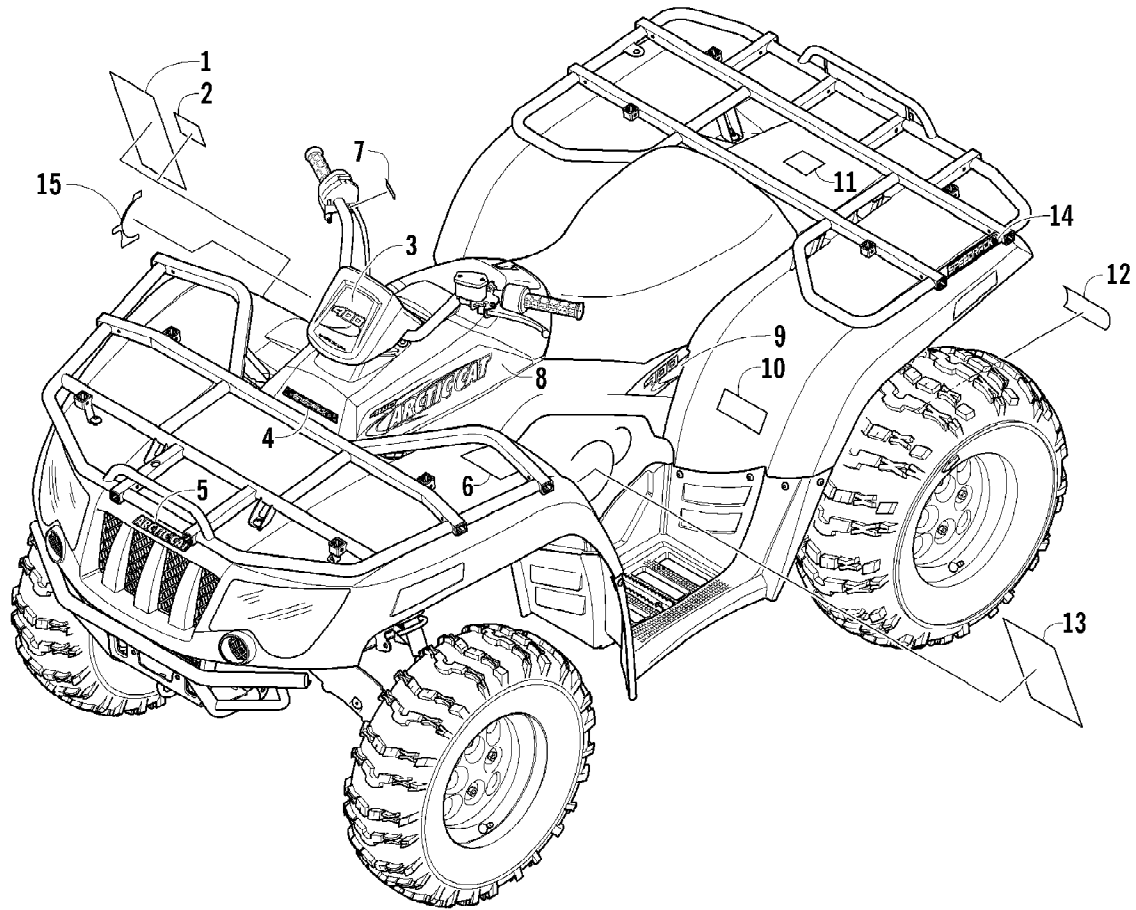 


Ref #	Part Number	Qty	S/P/F	Description
1	1411-250	1	F	Decal, Warning - Reverse/Pre-Ride
2	0411-835	1		Decal, Warning - Hill
3	1411-048	1		Decal, Instrument Pod
4	1411-052	1	S	Decal, "Speedrack"
5	0411-839	1		Decal, Front
6	0411-401	1	F	Decal, Warning - Age
7	0411-966	1		Decal, Warning - Differential Lock
8	1411-056	1		Decal, Side - Upper Right
8	1411-057	1		Decal, Side - Upper Left
9	1411-062	1		Decal, Side - Lower Right
9	1411-063	1		Decal, Side - Lower Left
10	0411-430	1		Decal, Warning - Tire Pressure
11	0411-435	1		Decal, Warning - Passenger
12	0411-267	1		Decal, Warning - Towing
13	0411-218	1	F	Decal, Warning - General
14	0411-965	2		Decal, "Speedrack"
15	0411-992	1		Decal, Fuel - On/Off/Reserve

 2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 31 of 94
ENGINE AND EXHAUST

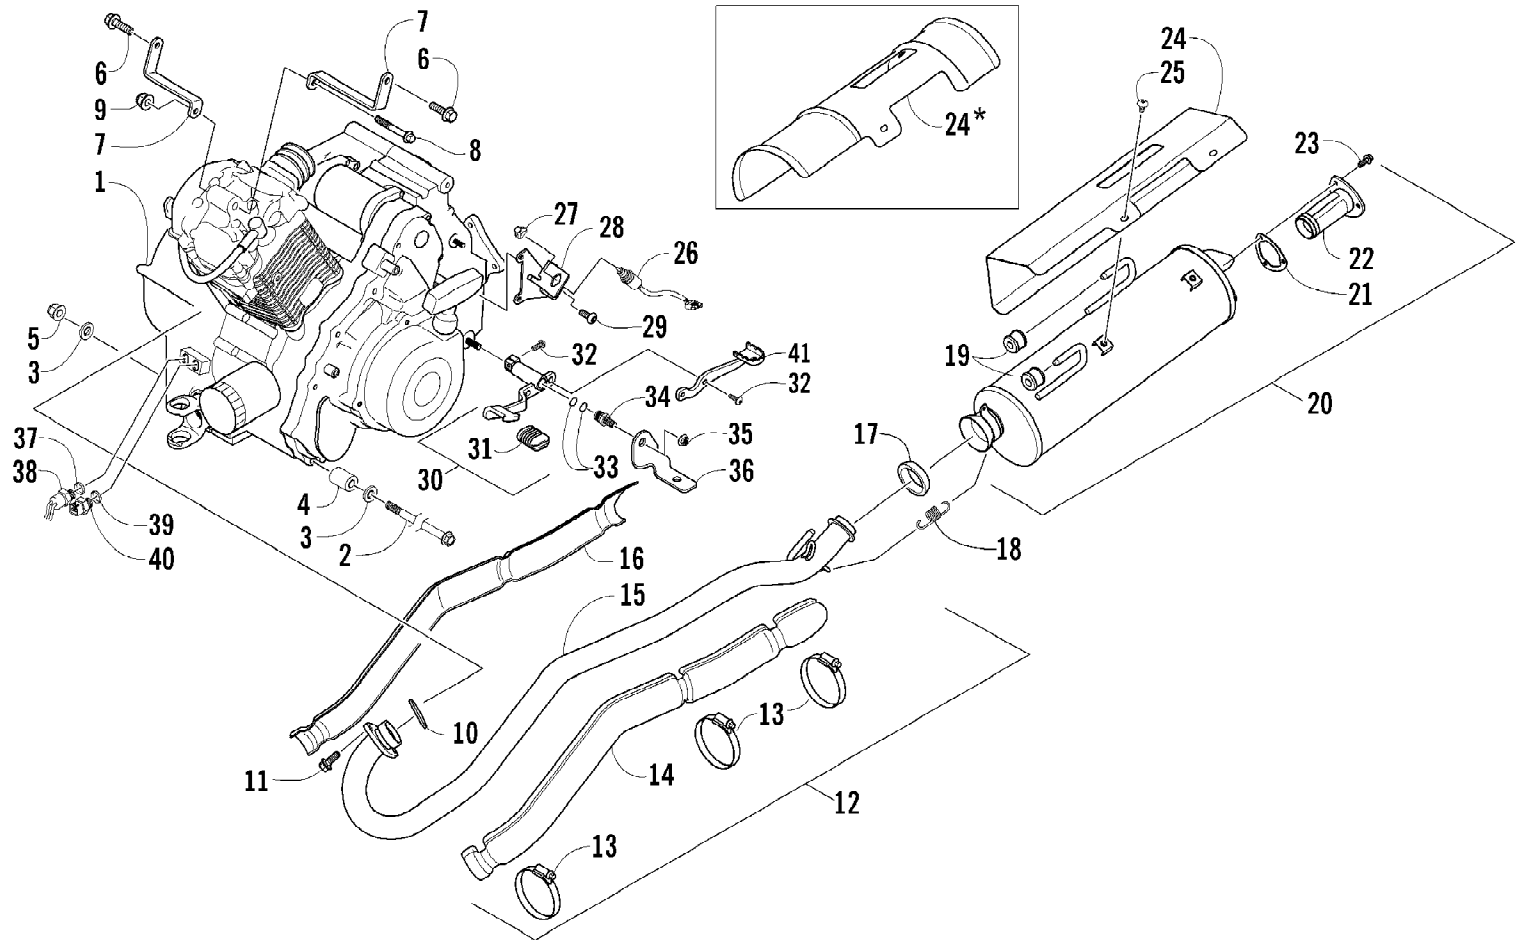

2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 32 of 94
ENGINE AND EXHAUST


Ref #	Part Number	Qty	S/P/F	Description
1	0462-037	1		Engine
2	0423-405	2		Screw, Cap
3	0423-426	4		Washer, Engine
4	0423-042	2	S	Spacer, Engine
5	8428-002	2		Nut, Lock
6	8408-816	2		Screw, Cap
7	1506-626	1		Bracket, Engine - Right
7	1506-625	1		Bracket, Engine - Left
8	8408-860	1		Screw, Cap
9	8424-802	3		Nut
10	0412-007	1	/P	Seal, Exhaust
11	8408-820	2	/P	Screw, Cap
12	0512-257	1		Pipe, Exhaust - Assembly (inc. 13-16)
13	0423-317	3	/P	Clamp, Hose
14	0412-344	1		Shield, Exhaust Pipe - Outer
15	0512-263	1		Pipe, Exhaust
16	0412-343	1		Shield, Exhaust Pipe - Inner
17	0612-188	1	/P	Gasket, Exhaust Pipe
18	0612-668	2	/P	Spring, Extension
19	0412-340	3		Bushing, Muffler
20	0512-269	1	S	Muffler - Assembly (inc. 21-23)
20	0512-358	1	/P/F	Muffler - Assembly (inc. 21-23)
21	0412-313	1		Gasket, Spark Arrester
22	0512-219	1	/P	Spark Arrester, Assembly
23	8408-616	3		Screw, Cap
24	0412-329	1	S	Cover, Muffler
24	0412-373	1	/P/F	Cover, Muffler
25	8477-610	4		Screw, Machine
25	8477-610	3	F	Screw, Machine
26	0409-008	1		Switch, Reverse
27	0402-991	1		Retainer, Reverse Switch
28	1506-449	1		Bracket, Mounting - Reverse Switch (inc. 29)
29	0423-361	1		Screw, Machine
30	0502-871	1		Shifter, Toe - Assembly (inc. 31 and one No. 32)
31	1402-284	1		Pad, Toe - Shift Lever
32	8476-620	3		Screw, Machine
33	1602-213	2	/P	O-Ring
34	0402-994	1		Pin, Shift Lever
35	8422-002	1		Nut
36	1506-693	1		Bracket, Foot Shifter
37	3402-013	1	/P	Gasket
38	3430-033	1		Switch, Cooling Fan
39	3402-556	1	/P	Gasket
40	3530-037	1	/P	Switch, Oil Light
41	0502-693	1		Lever, Heel Shift

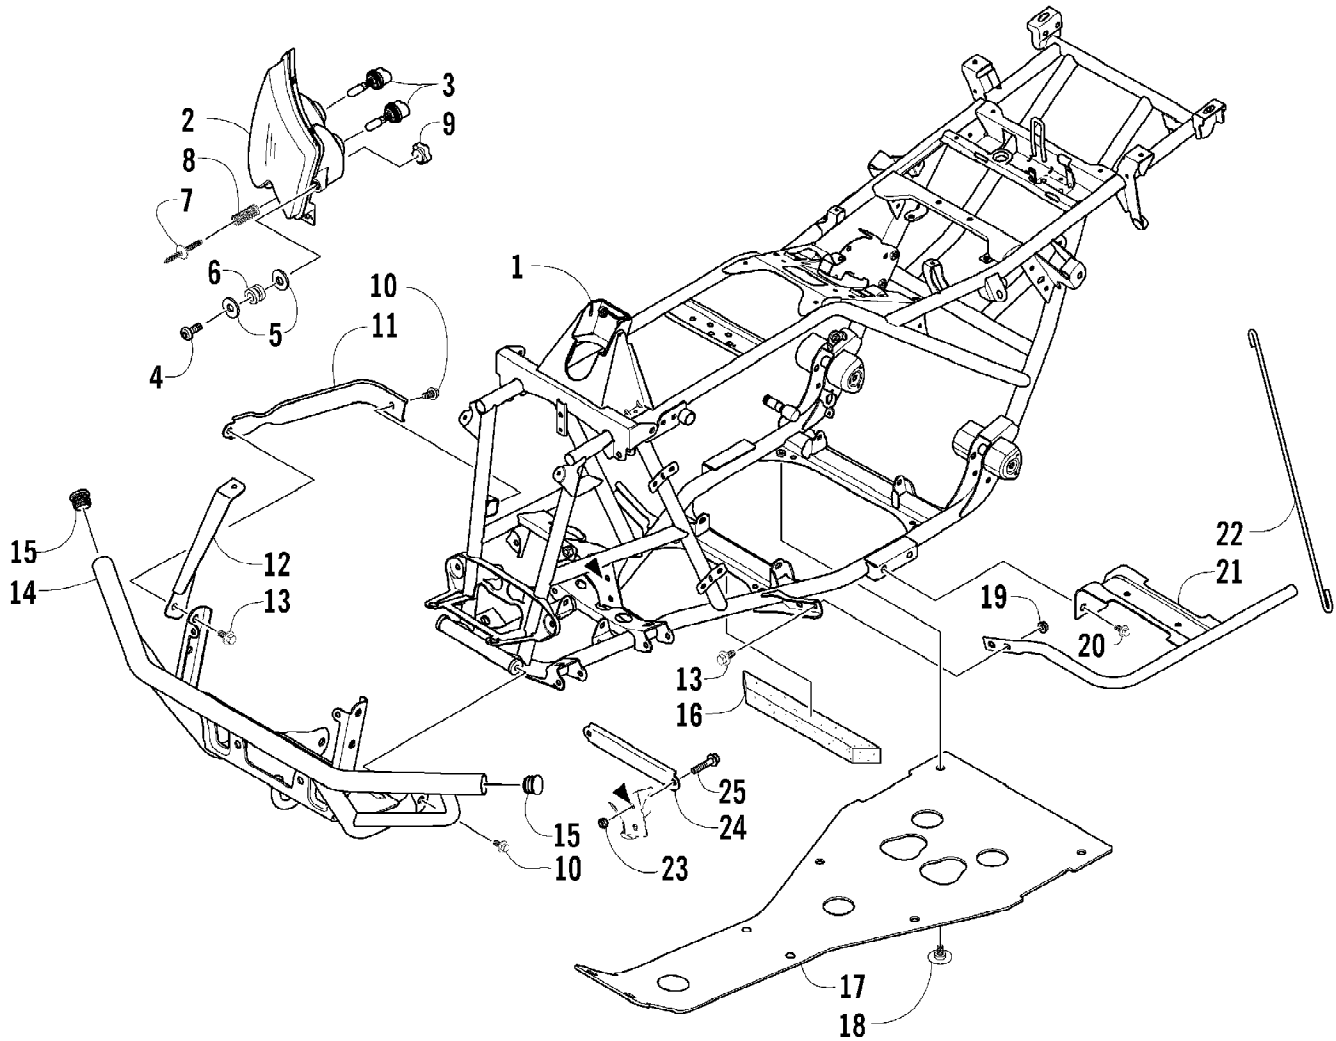 

2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 34 of 94
FRAME AND RELATED PARTS

Ref #	Part Number	Qty	S/P/F	Description
1	1506-716	1		Frame, Main
2	0509-027	1	S	Headlight Assembly - Right (inc. 3)
2	0509-028	1	S	Headlight Assembly - Left (inc. 3)
3	0409-073	4		Bulb, Headlight
4	0623-785	4		Screw, Self-Tapping
5	8050-217	8	/P	Washer
6	0423-447	4		Grommet
7	0423-514	2		Stud, Adjuster - Headlight
8	0423-522	2		Spring, Adjuster - Headlight
9	0423-513	2		Knob, Adjuster - Headlight
10	8409-020	4	/P	Screw, Cap
11	0506-653	1	S	Channel, Bumper Mounting - Right
11	1506-596	1	/P	Channel, Bumper Mounting - Left
12	1506-686	1		Bracket, Mounting - Bumper - Right
12	1506-687	1		Bracket, Mounting - Bumper - Left
13	8408-816	6		Screw, Cap
14	1506-800	1		Bumper, Front
15	2406-030	2		Cap, Tube
16	1506-067	1		Foam, Frame
17	0406-864	1		Panel, Belly
18	0423-101	6		Screw, Body
19	8424-802	4		Nut, Flange
20	8409-016	4		Screw, Cap
21	1506-659	1		Footrest - Right
21	1506-660	1		Footrest - Left
22	1406-853	2		Rod, Support
23	8428-002	2		Nut, Hex
24	1506-429	1	S	Brace, A-Arm
25	8408-025	2		Screw, Cap

 
2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 35 of 94
FRONT BODY PANEL ASSEMBLY

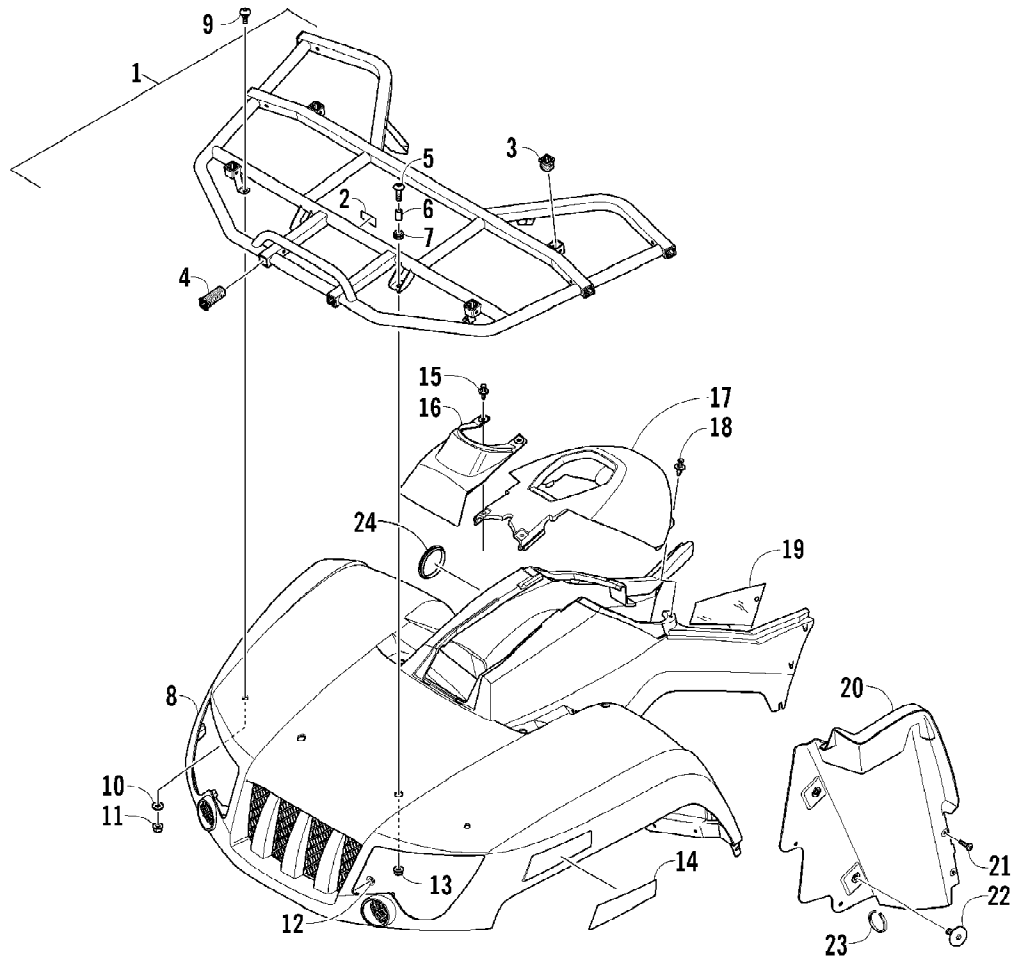

2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 36 of 94
FRONT BODY PANEL ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	1506-750	1		Rack - Front - Assembly (inc. 2-4)
2	0411-576	1		Decal, Warning - Front Rack Load
3	0441-592	4	/P	Bushing, Rack
4	2406-014	6		Bushing, Rack
5	8410-830	4		Screw, Machine
6	0423-463	4		Spacer
7	0423-465	4		Grommet
8	1506-820	1	S	Panel, Fender - Front
9	0423-355	2		Screw, Shoulder
10	8050-222	2	/P	Washer
11	8424-602	2	/P	Nut, Lock
12	0423-357	2		Nut, Stamped
13	8432-802	4		Nut, Lock
14	1411-078	1		Decal, Reflector - Front - Right
14	1411-079	1		Decal, Reflector - Front - Left
15	0623-362	2		Rivet, Plastic - Reinstallable
16	1406-970	1		Cover, Steering Post
17	1406-957	1		Cover, Gas Tank
18	0623-544	2		Plug
19	0412-356	1	S	Shield, Heat - Fender - Front
20	1406-906	1		Panel, Splash - Right
20	1406-907	1		Panel, Splash - Left
21	0423-342	4	/P	Screw, Self-Tapping
22	0423-101	3		Screw, Body
23	0123-788	AR	/P	Cable Tie - 7.5 in.
24	0470-404	1		Grommet, Fuel Shut-Off Valve Knob

 
2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 37 of 94
FRONT DRIVE GEARCASE ASSEMBLY

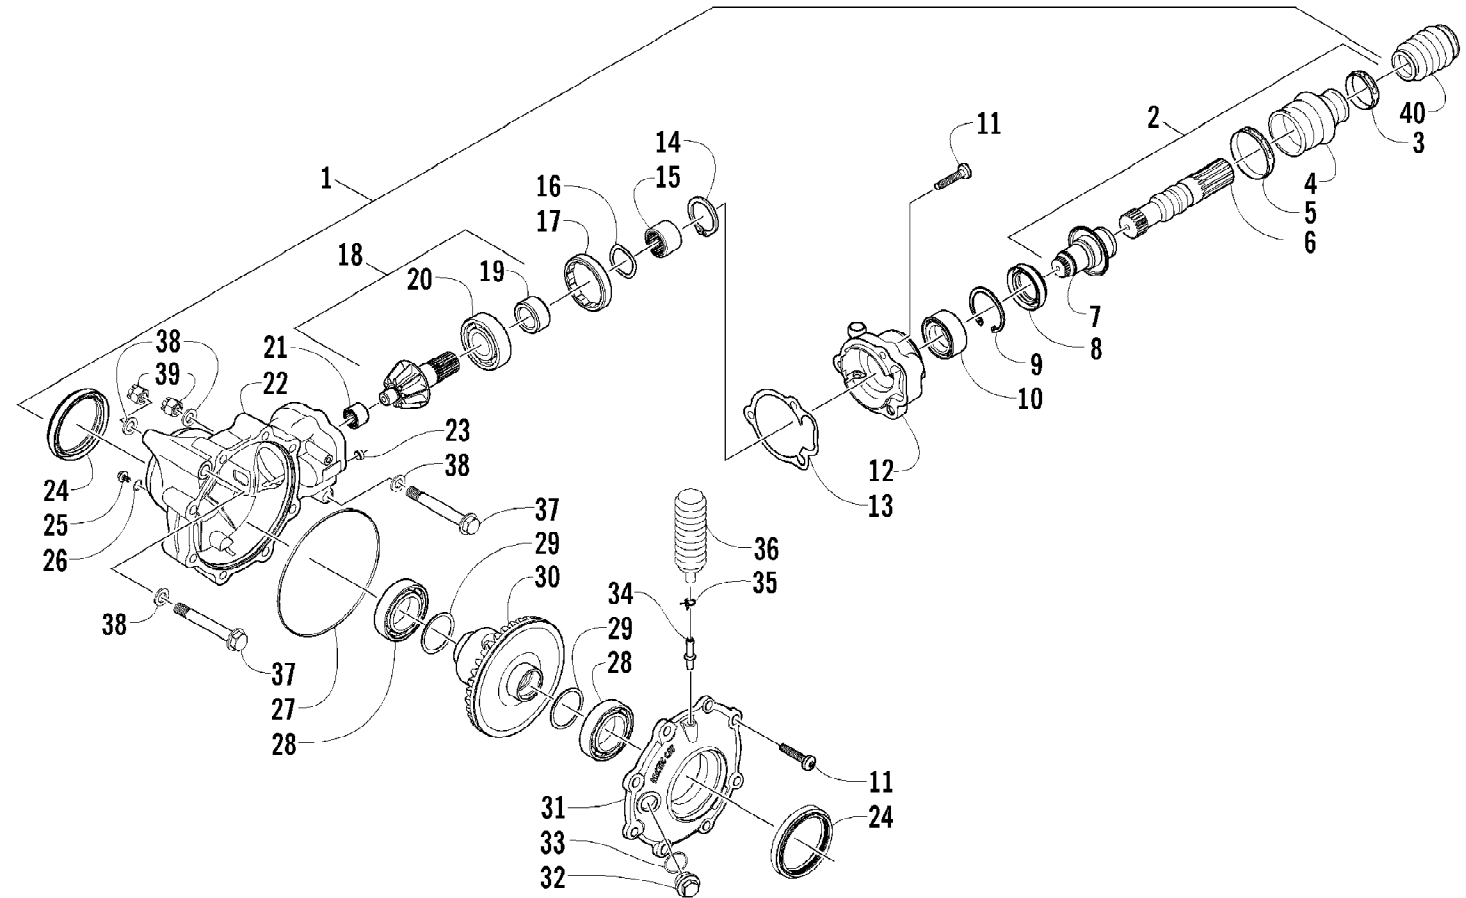

2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 38 of 94
FRONT DRIVE GEARCASE ASSEMBLY


Ref #	Part Number	Qty	S/P/F	Description
1	0502-817	1		Gearcase, Front Drive - Assembly (inc. 2-34)
2	0502-386	1		Shaft, Propeller - Assembly (inc. 3-7)
3	0423-411	1		Clamp, Boot
4	0402-985	1	/P	Boot, Propeller Shaft
5	0423-393	1		Clamp, Boot
6	1402-046	1		Shaft, Output
7	0502-407	1	S	Shaft, Input
8	1402-011	1		Seal
9	0423-423	1		Ring, Retaining
10	1402-043	1		Bearing
11	0423-118	11		Screw, Self-Tapping
12	0502-529	1		Housing, Pinion
13	0402-947	1		Gasket, Flange
14	0423-417	1		Ring, Retaining
15	0402-981	1		Collar, Shaft
16	0402-982	1		Washer, Wave Spring
17	0402-357	1		Collar, Lock
18	0502-783	1		Gear, Pinion - Assembly - 10T (inc. 19-20)
19	0402-336	1		Collar, Retaining
20	0402-327	1		Bearing
21	0402-328	1		Bearing
22	0502-120	1		Housing, Gearcase
23	0402-411	1		Pin, Dowel
24	0402-394	2	S	Seal
25	0402-450	1	S	Plug, Magnetic (inc. 26)
26	0423-153	1		O-Ring
27	0423-149	1		O-Ring
28	0402-393	2		Bearing
29	0402-405	AR		Shim
29	0402-406	AR		Shim
29	0402-407	AR		Shim
29	0402-408	AR		Shim
29	0402-409	AR		Shim
30	0502-779	1		Gear, Ring - 36T
31	0502-121	1		Cover, Gearcase
32	0402-333	1	/P	Plug, Fill (inc. 33)
33	0423-154	1		O-Ring
34	1402-104	1		Fitting
35	0423-315	1		Clamp, Fitting
36	0402-147	1	S	Bladder, Gearcase
37	0423-404	2		Screw, Cap
38	0423-426	4		Washer
39	8428-002	2		Nut, Lock
40	0402-966	1		Boot, Shaft

 2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 39 of 94
FRONT SUSPENSION ASSEMBLY

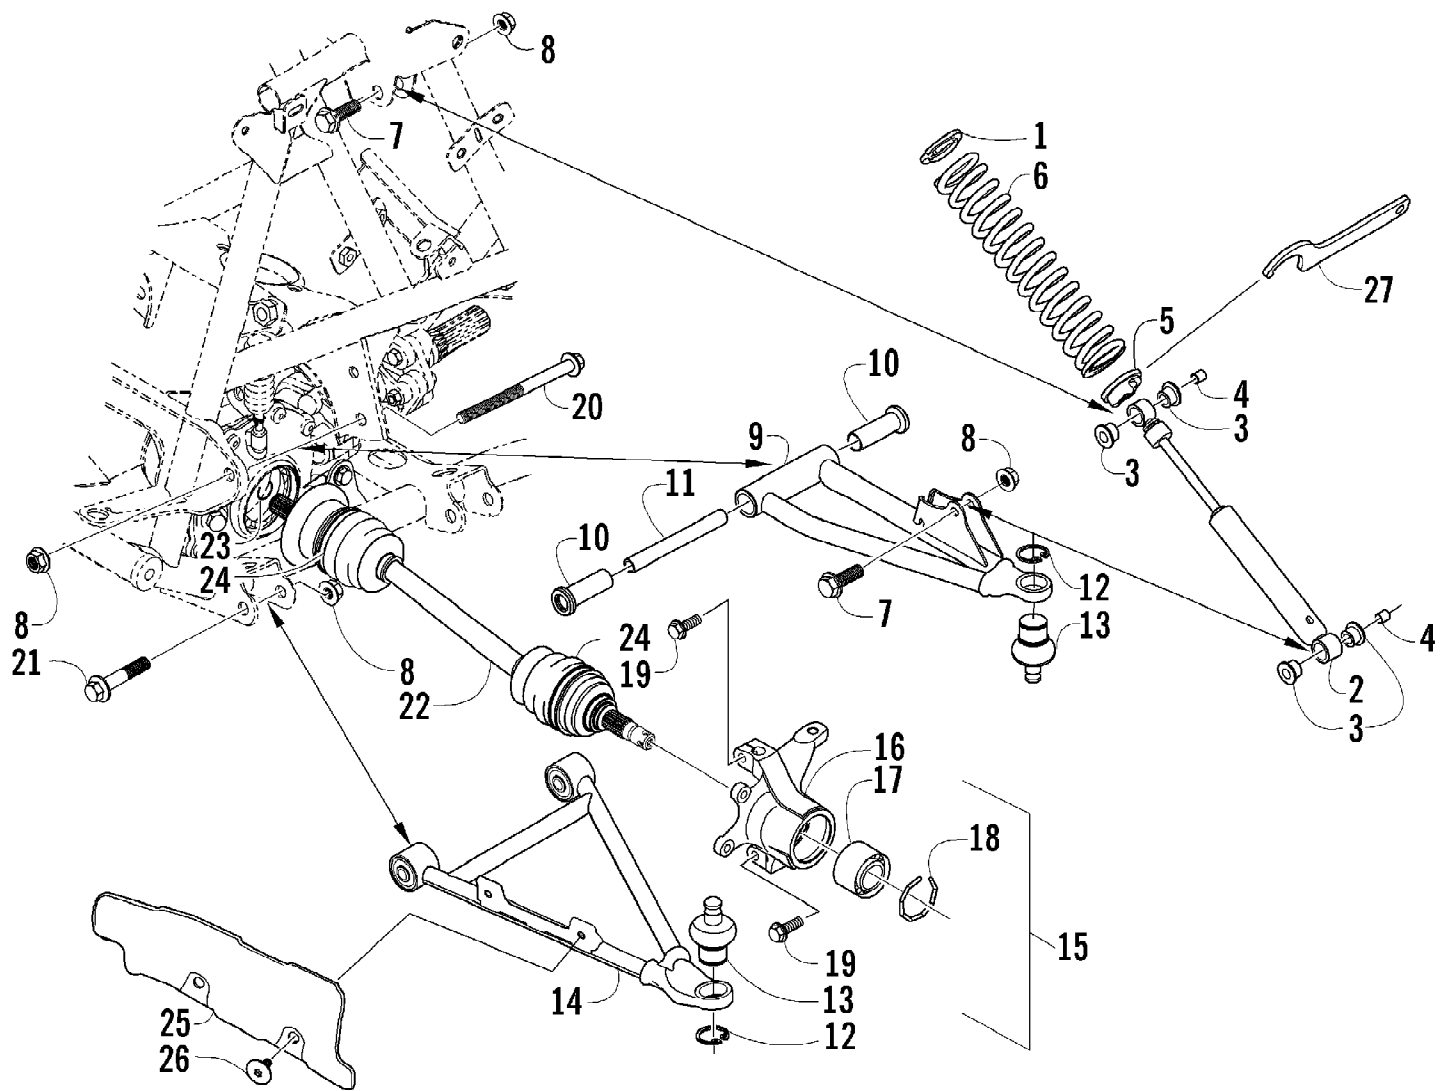


2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 40 of 94
FRONT SUSPENSION ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	1603-889	2	/P	Retainer, Spring
2	0403-144	2		Shock Absorber - Front (inc. 3-4)
3	0604-310	8		Bushing, Shock Absorber
4	0403-028	4		Sleeve, Shock
5	0403-102	2		Cam, Spring Adjuster
6	0403-103	2		Spring, Shock Absorber
7	8409-040	4		Screw, Cap
8	8428-002	10		Nut, Lock
9	0503-192	1	/P	A-Arm, Upper Right (inc. 10-11 and two No. 12-13)
9	0503-193	1	/P	A-Arm, Upper Left (inc. 10-11 and two No. 12-13)
10	0403-081	4	S	Bushing
11	0403-080	2		Collar
12	0423-009	4	/P	Clip, Ball Joint
13	0405-115	4	/P	Ball Joint - Front
14	0503-292	1		A-Arm, Lower Right (inc. two No. 12-13)
14	0503-291	1		A-Arm, Lower Left (inc. two No. 12-13)
15	0505-460	1		Knuckle - Assembly - Right (inc. 16-18)
15	0505-461	1	S	Knuckle - Assembly - Left (inc. 16-18)
16	0	1	F	Knuckle, Steering - Right
16	0	1	F	Knuckle, Steering - Left
17	1402-027	2	S/P	Bearing, Wheel Hub
18	0423-423	2		Ring, Retaining
19	8409-030	4		Screw, Cap
20	0423-334	2		Screw, Cap
21	8409-075	4		Screw, Cap
22	0502-814	2		Axle, Drive - Front (inc. 23-24)
23	1441-109	2	S	Clip, Retaining
24	0436-276	2	S	Repair Kit, Boot - Front Axle
25	0406-944	1		Guard, Boot - Axle - Right
25	0406-927	1		Guard, Boot - Axle - Left
26	0423-101	4		Screw, Body
27	0441-587	1		Wrench, Spanner

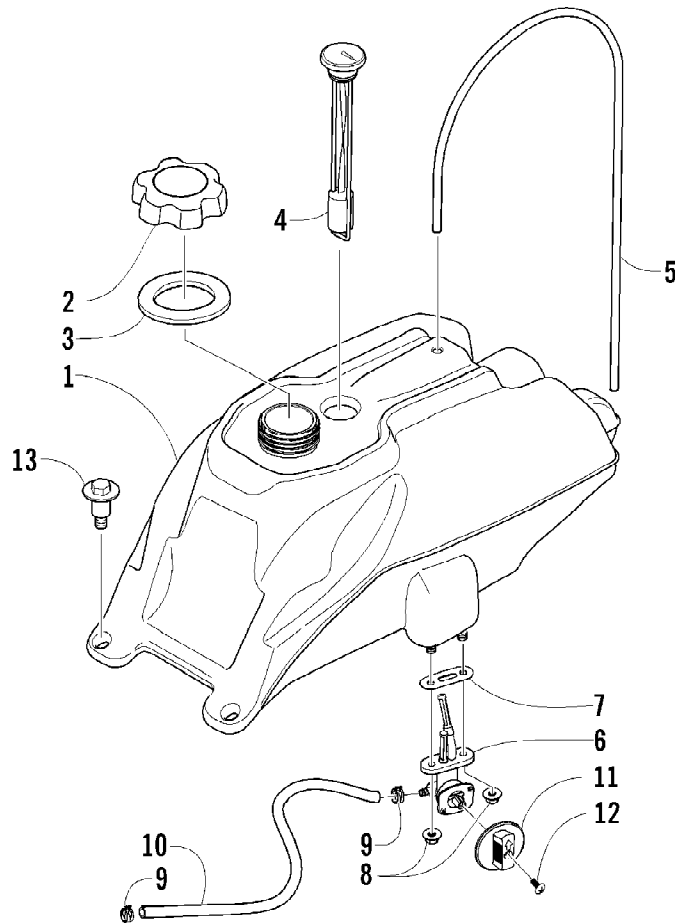 


2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 42 of 94
GAS TANK ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0570-109	1		Tank, Gas - Assembly (inc. 2-10)
2	0470-438	1	/P	Cap, Gas Tank (inc. 3)
3	0109-733	1	/P	Gasket, Tank Cap
4	0570-086	1	/P	Gauge, Fuel w/Gasket Press-Fit
5	0470-416	1	/P	Hose, Vent
6	0470-445	1	/P	Valve, Fuel Shut-Off (inc. 7)
7	0470-364	1		Gasket, Fuel Shut-Off Valve
8	0423-398	2		Nut, Lock
9	0423-152	2		Clamp, Hose - Spring
10	0610-007	AR	/P	Hose, Gasline - 25 ft
11	0470-408	1		Knob, Fuel Shut-Off Valve
12	0423-146	1		Screw, Fuel Shut-Off Valve Knob
13	0423-106	2		Screw, Gas Tank

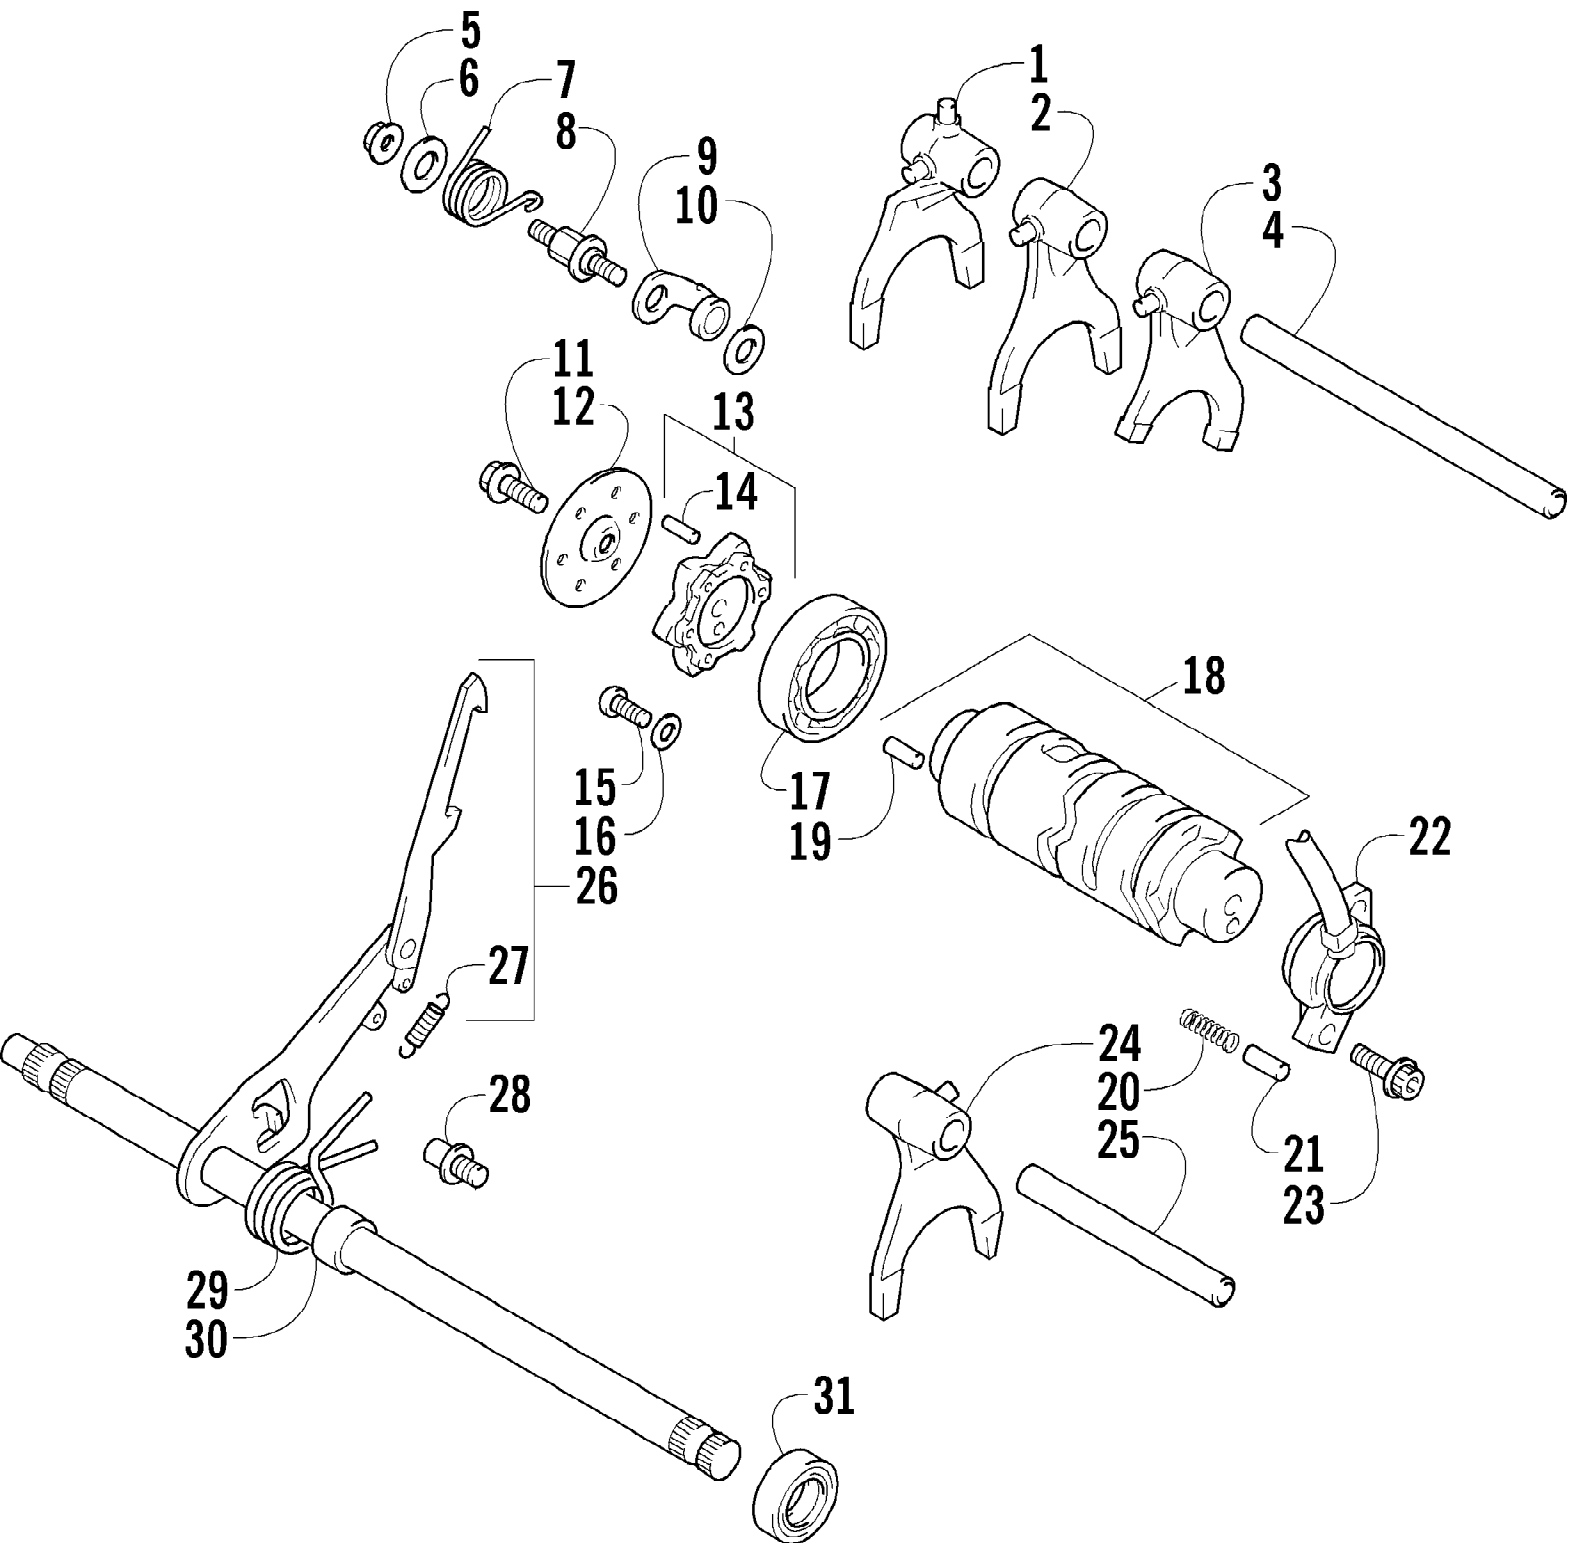 


2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 44 of 94
GEAR SHIFTING ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	3446-306	1		Fork, Gear Shift - Reverse
2	3446-155	1		Fork, Gear Shift - No. 1
3	3446-156	1		Fork, Gear Shift - No. 2
4	3402-643	1		Shaft, Gear Shift Fork - No. 2
5	3004-488	1	S/P	Nut
6	3423-142	1		Washer
7	3423-521	1	S	Spring, Gear Shift Cam Stopper
8	3446-048	1		Support, Gear Shift Cam Stopper
9	3402-746	1		Stopper, Gear Shift Cam
10	3423-141	1		Washer
11	3423-125	1	S	Bolt
12	3446-309	1	/P	Guide, Gear Shift
13	3446-049	1		Plate, Gear Shift Cam (inc. 14)
14	3423-045	5		Pin
15	3423-370	2		Screw
16	3423-135	2		Retainer
17	3402-051	1		Bearing, Gear Shift Cam
18	3446-308	1		Cam, Gear Shift (inc. 19)
19	3423-114	1	/P	Pin
20	3402-087	2		Spring
21	3423-044	2		Contact
22	3446-313	1		Base, Neutral Switch
23	3423-418	2		Bolt
24	3446-157	1		Fork, Gear Shift - No. 3
25	3446-307	1		Shaft, Gear Shift Fork - No. 1
26	3446-310	1		Shaft, Gear Shift (inc. 27)
27	3402-093	1		Spring
28	3446-056	1		Stopper, Gear Shift Shaft
29	3402-094	1		Spring, Return
30	3446-054	1		Spacer, Gear Shift Shaft
31	3402-068	1	/P	Seal, Oil

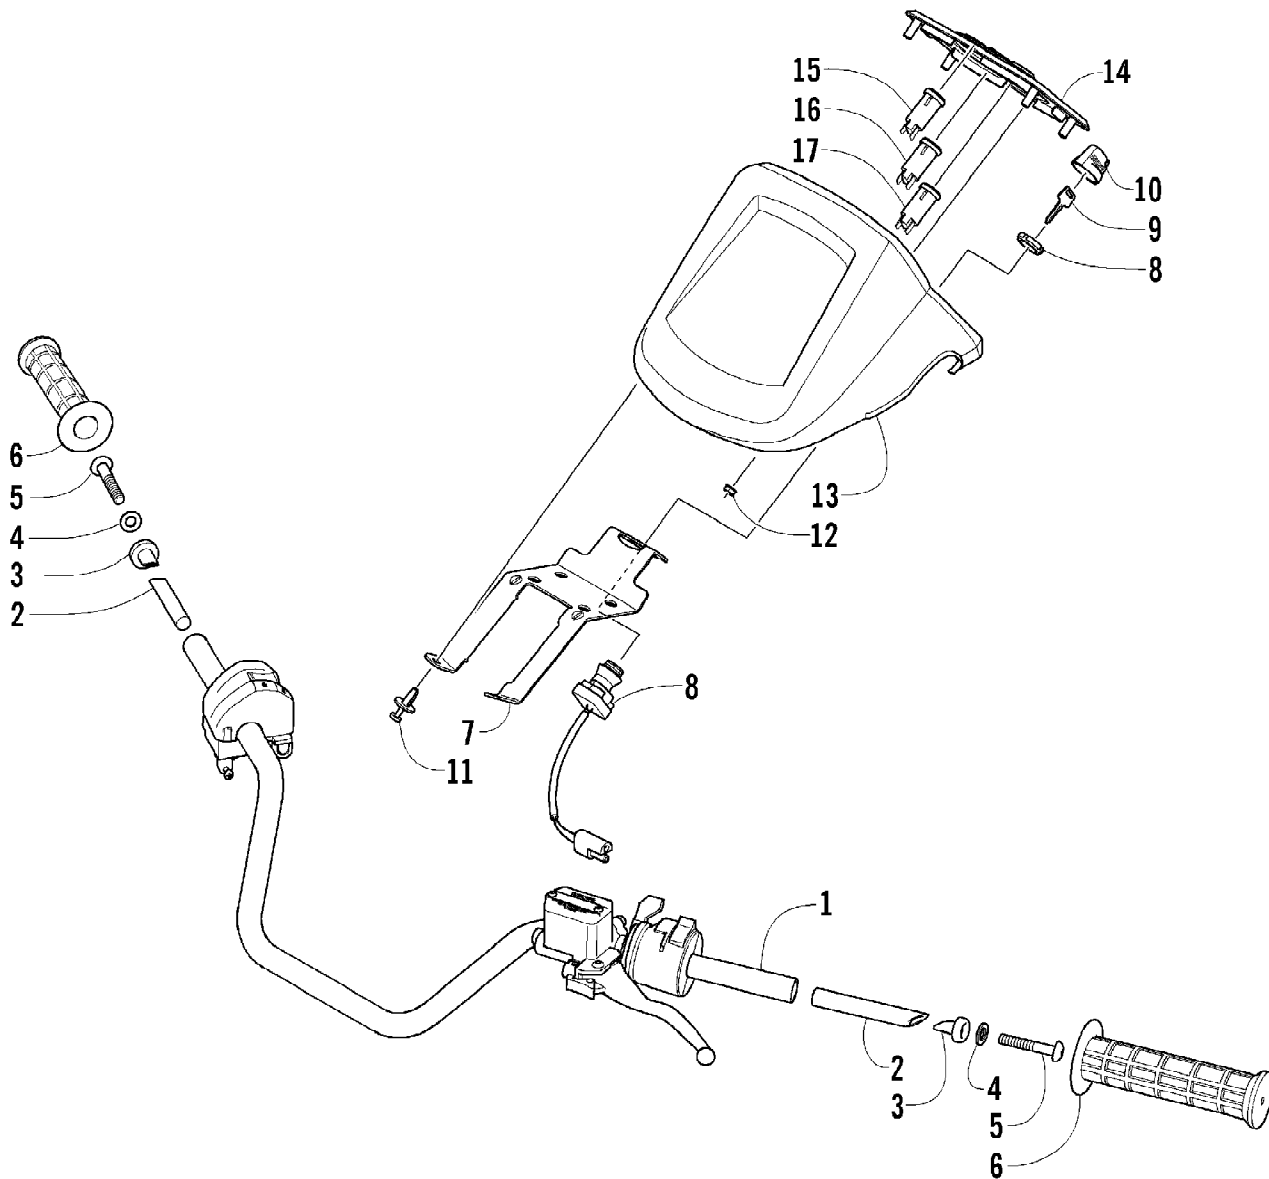 


2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 46 of 94
HANDLEBAR ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0505-418	1	/P	Tube, Handlebar
2	0405-148	2		Plug, Handlebar
3	0405-149	2		End Cap, Handlebar
4	8050-247	2	/P	Washer
5	8477-845	2		Screw, Machine
6	0405-147	2		Grip, Handlebar
7	1506-578	1		Bracket, Gauge
8	3430-040	1		Switch, Ignition - Assembly (inc. 9)
9	3409-007	1	/P	Key, Ignition - Blank C Series
9	3409-011	1		Key, Ignition - Blank D Series
9	3409-012	1		Key, Ignition - Blank E Series
9	3409-013	1		Key, Ignition - Blank F Series
10	0409-013	1		Cover, Key
11	0423-535	2		Rivet, Plastic - Reinstallable
12	0423-357	4		Nut, Stamped
13	0405-193	1		Instrument Pod
14	0405-198	1		Bezel, Lights - Instrument Pod
15	0420-068	1		Light, Indicator - "Temperature"
16	0420-066	1		Light, Indicator - "N"
17	0420-067	1		Light, Indicator - "R"

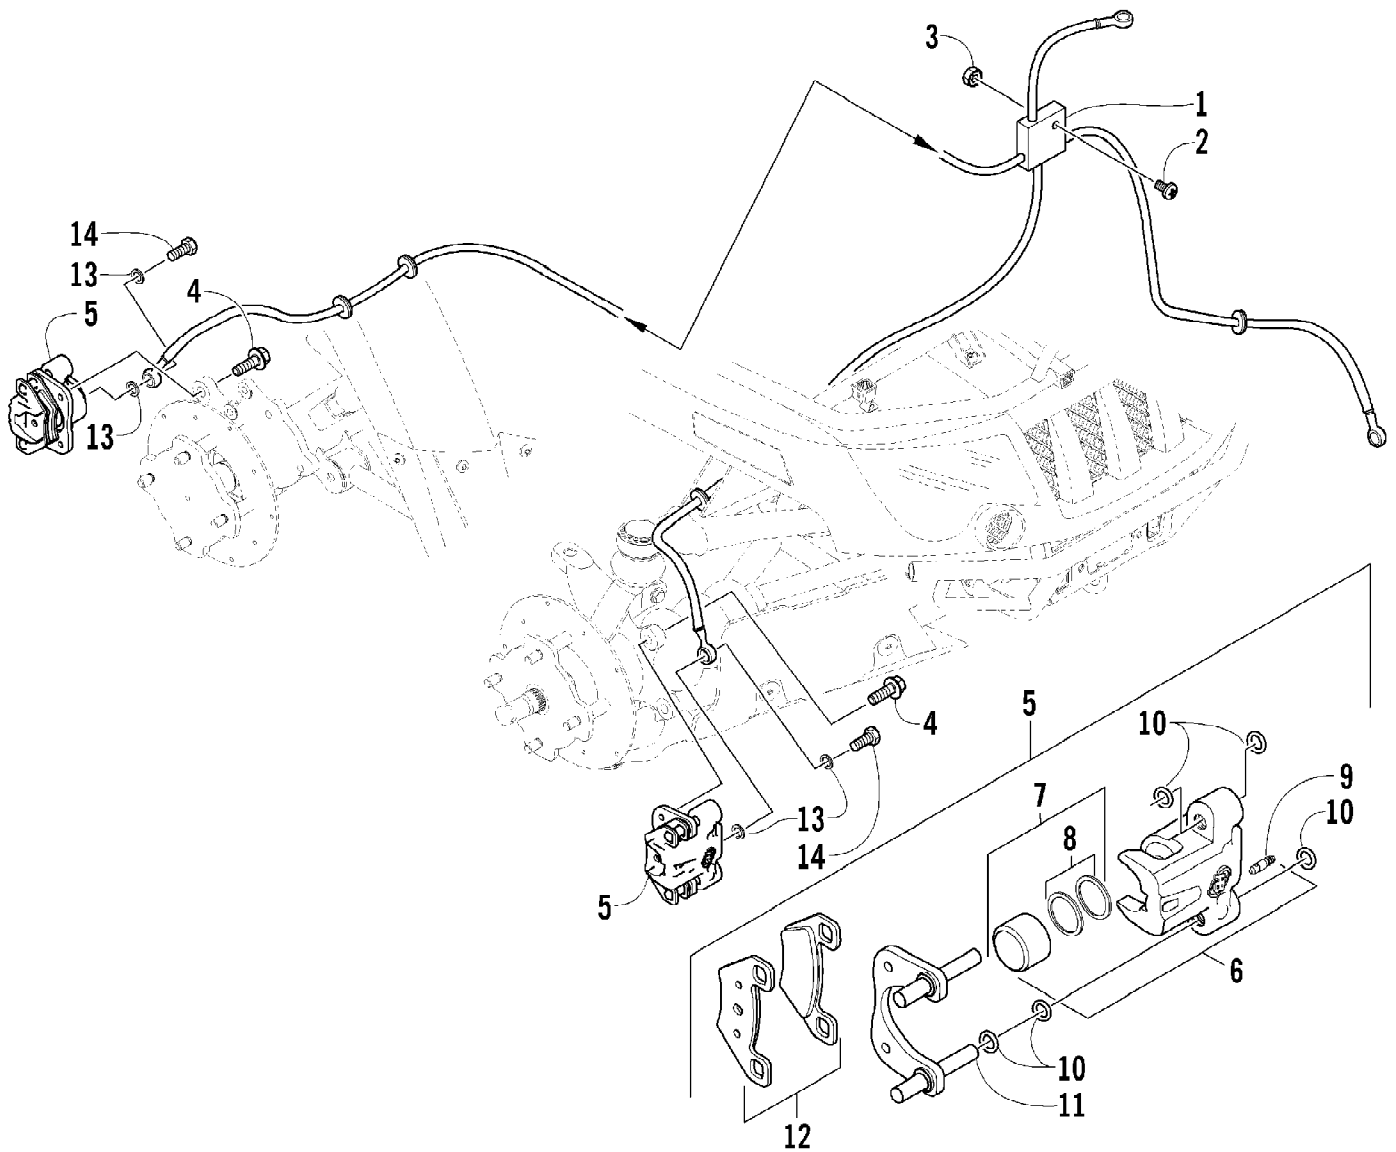 


2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 48 of 94
HYDRAULIC BRAKE ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0502-883	1		Hose, Brake - Assembly
2	8476-625	1		Screw, Cap
3	0623-038	1		Nut, Hex
4	8408-820	6	/P	Screw, Cap
5	0502-602	1	S	Caliper, Brake - Right Front (inc. 6-12)
5	0502-610	2	S	Caliper, Brake - Left Front and Right Rear (inc. 6-12)
6	0502-603	1	S	Housing, Caliper - Assembly - Right Front (inc. 7-9)
6	0502-611	2	S	Housing, Caliper - Assembly - Left Front and Right Rear (inc. 7-9)
7	0502-606	3		Piston/Seal Set (inc. 8)
8	0502-607	3		Seal Set
9	0502-609	3	/P	Valve, Bleed
10	0502-608	3		O-Ring, Guide - Set
11	0502-605	3		Bracket Assembly
12	0502-604	3	S	Pad, Brake - Set
13	0423-178	6		Washer, Crush
14	0423-413	3		Bolt, Banjo Fitting

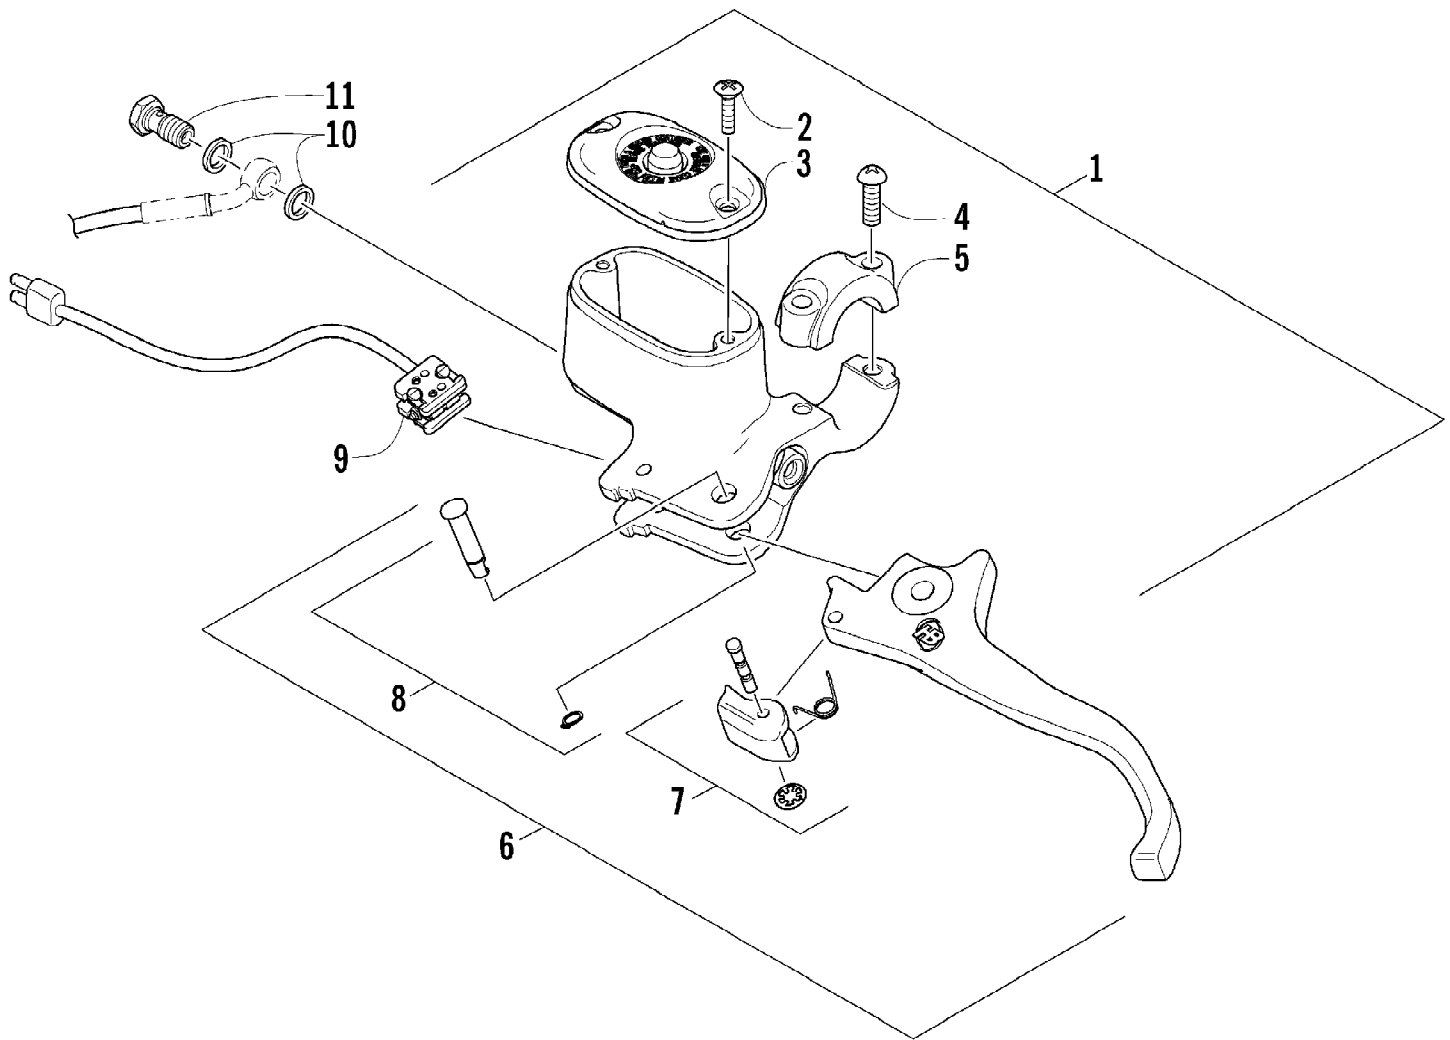 


2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 50 of 94
HYDRAULIC HAND BRAKE ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
	0502-704	1		Master Cylinder Rebuild Kit
1	0502-914	1	S	Brake Assembly (inc. 2-9)
2	0502-566	1		Screw, Reservoir Cover - Kit
3	0502-868	1	/P	Cover, Reservoir - Kit
4	0502-568	1		Screw, Master Cylinder Clamp - Kit
5	0502-869	1		Clamp, Master Cylinder - Kit
6	0502-866	1		Lever Assembly - Kit (inc. 7-8)
7	0502-867	1	/P	Lock, Brake Lever - Kit
8	0502-580	1		Lever Pin - Kit
9	0502-564	1	/P	Switch, Brake - Kit
10	0423-178	2		Washer, Crush
11	0423-413	1		Bolt, Banjo Fitting

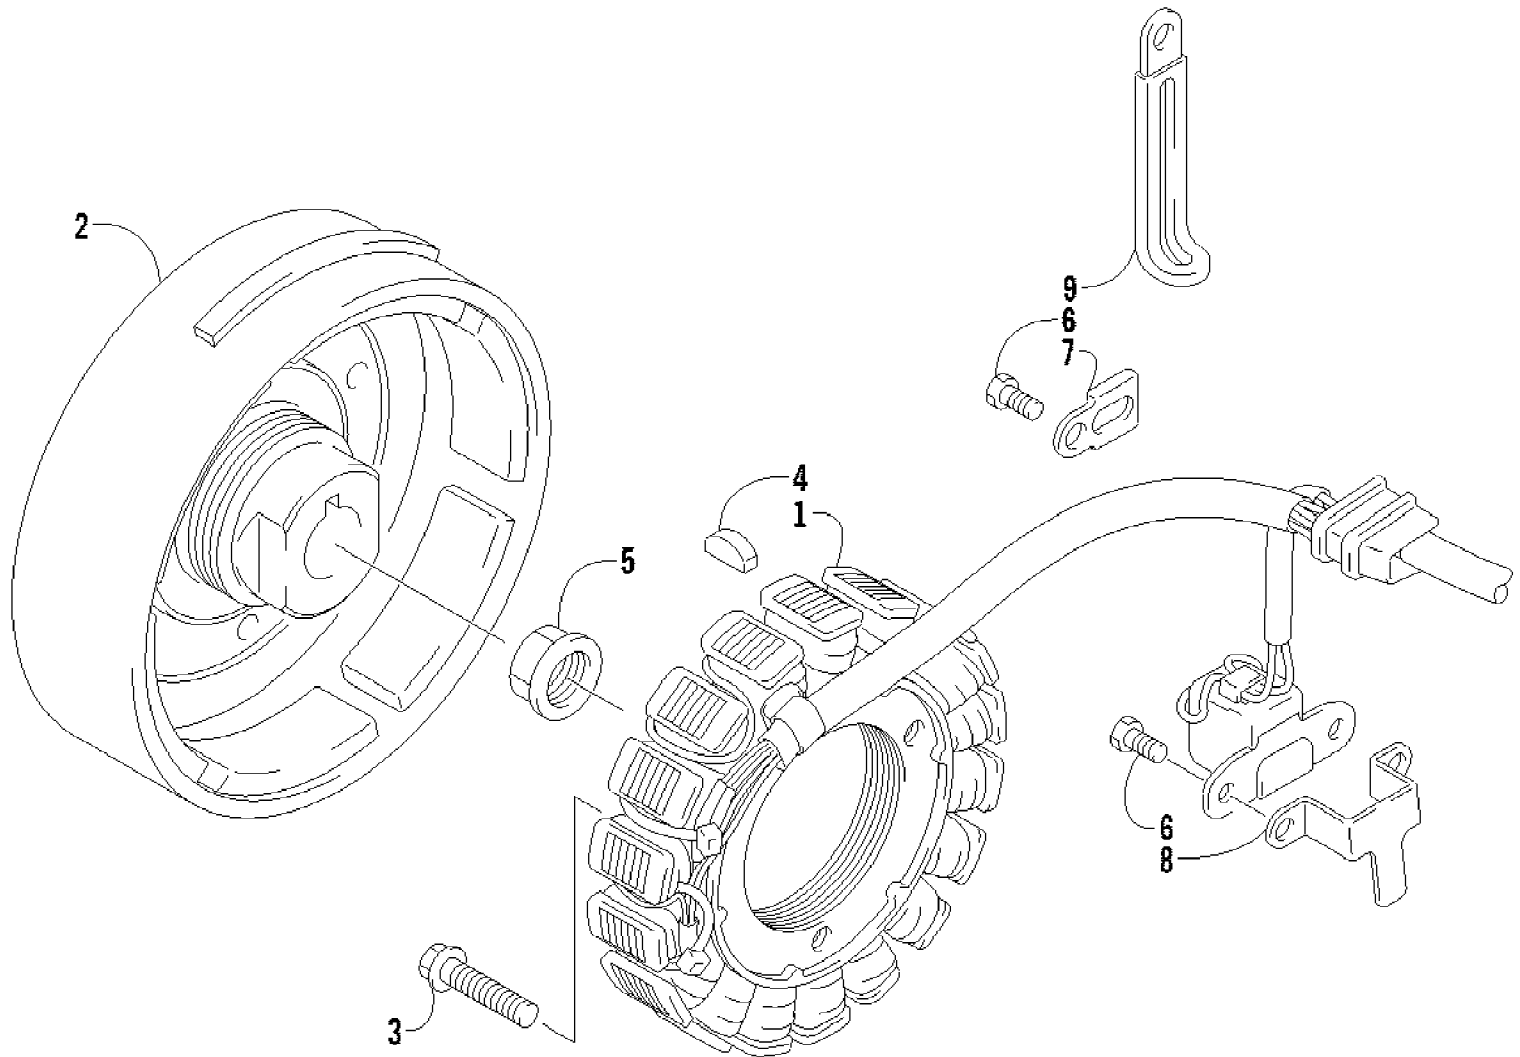 


Ref #	Part Number	Qty	S/P/F	Description
1	3430-053	1		Stator Assembly
2	3430-054	1	S	Rotor/Flywheel
3	3004-756	3	S	Bolt
4	0691-785	1		Key
5	3423-086	1		Nut
6	3423-005	3	/P	Bolt
7	3430-005	1		Clamp
8	3430-006	1		Clamp
9	3002-964	1	/P	Clamp, Wire

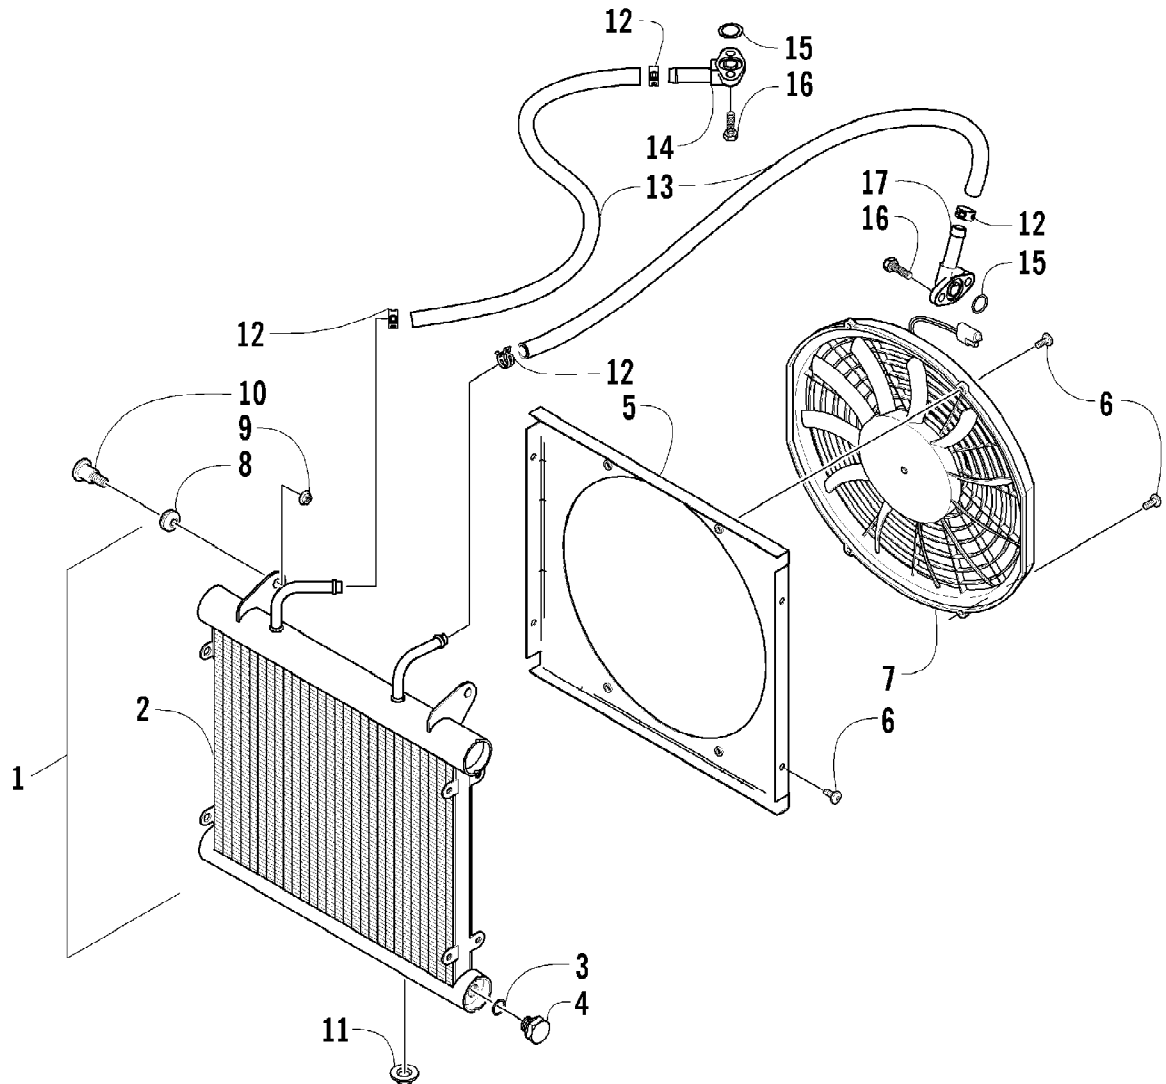 


2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 54 of 94
OIL COOLER ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0413-103	1		Cooler, Oil - Assembly (inc. 2-8)
2	0413-053	1		Cooler, Oil
3	0413-059	1		O-Ring
4	0413-058	1		Plug, Drain
5	0413-064	1		Shroud, Fan
6	8475-512	8		Screw, Machine
7	0413-044	1	S	Fan, Cooling
8	0423-030	2		Grommet
9	0623-038	2		Nut w/Washer
10	0423-484	2		Screw, Shoulder
11	0423-028	2		Bushing, Stem
12	0423-098	4	/P	Clamp, Hose
13	0410-044	2		Hose, Oil
14	0410-013	1		Fitting, Oil
15	0423-089	2		O-Ring, Oil Fitting
16	8471-616	4		Screw, Cap
17	0410-012	1		Fitting, Oil - Angled

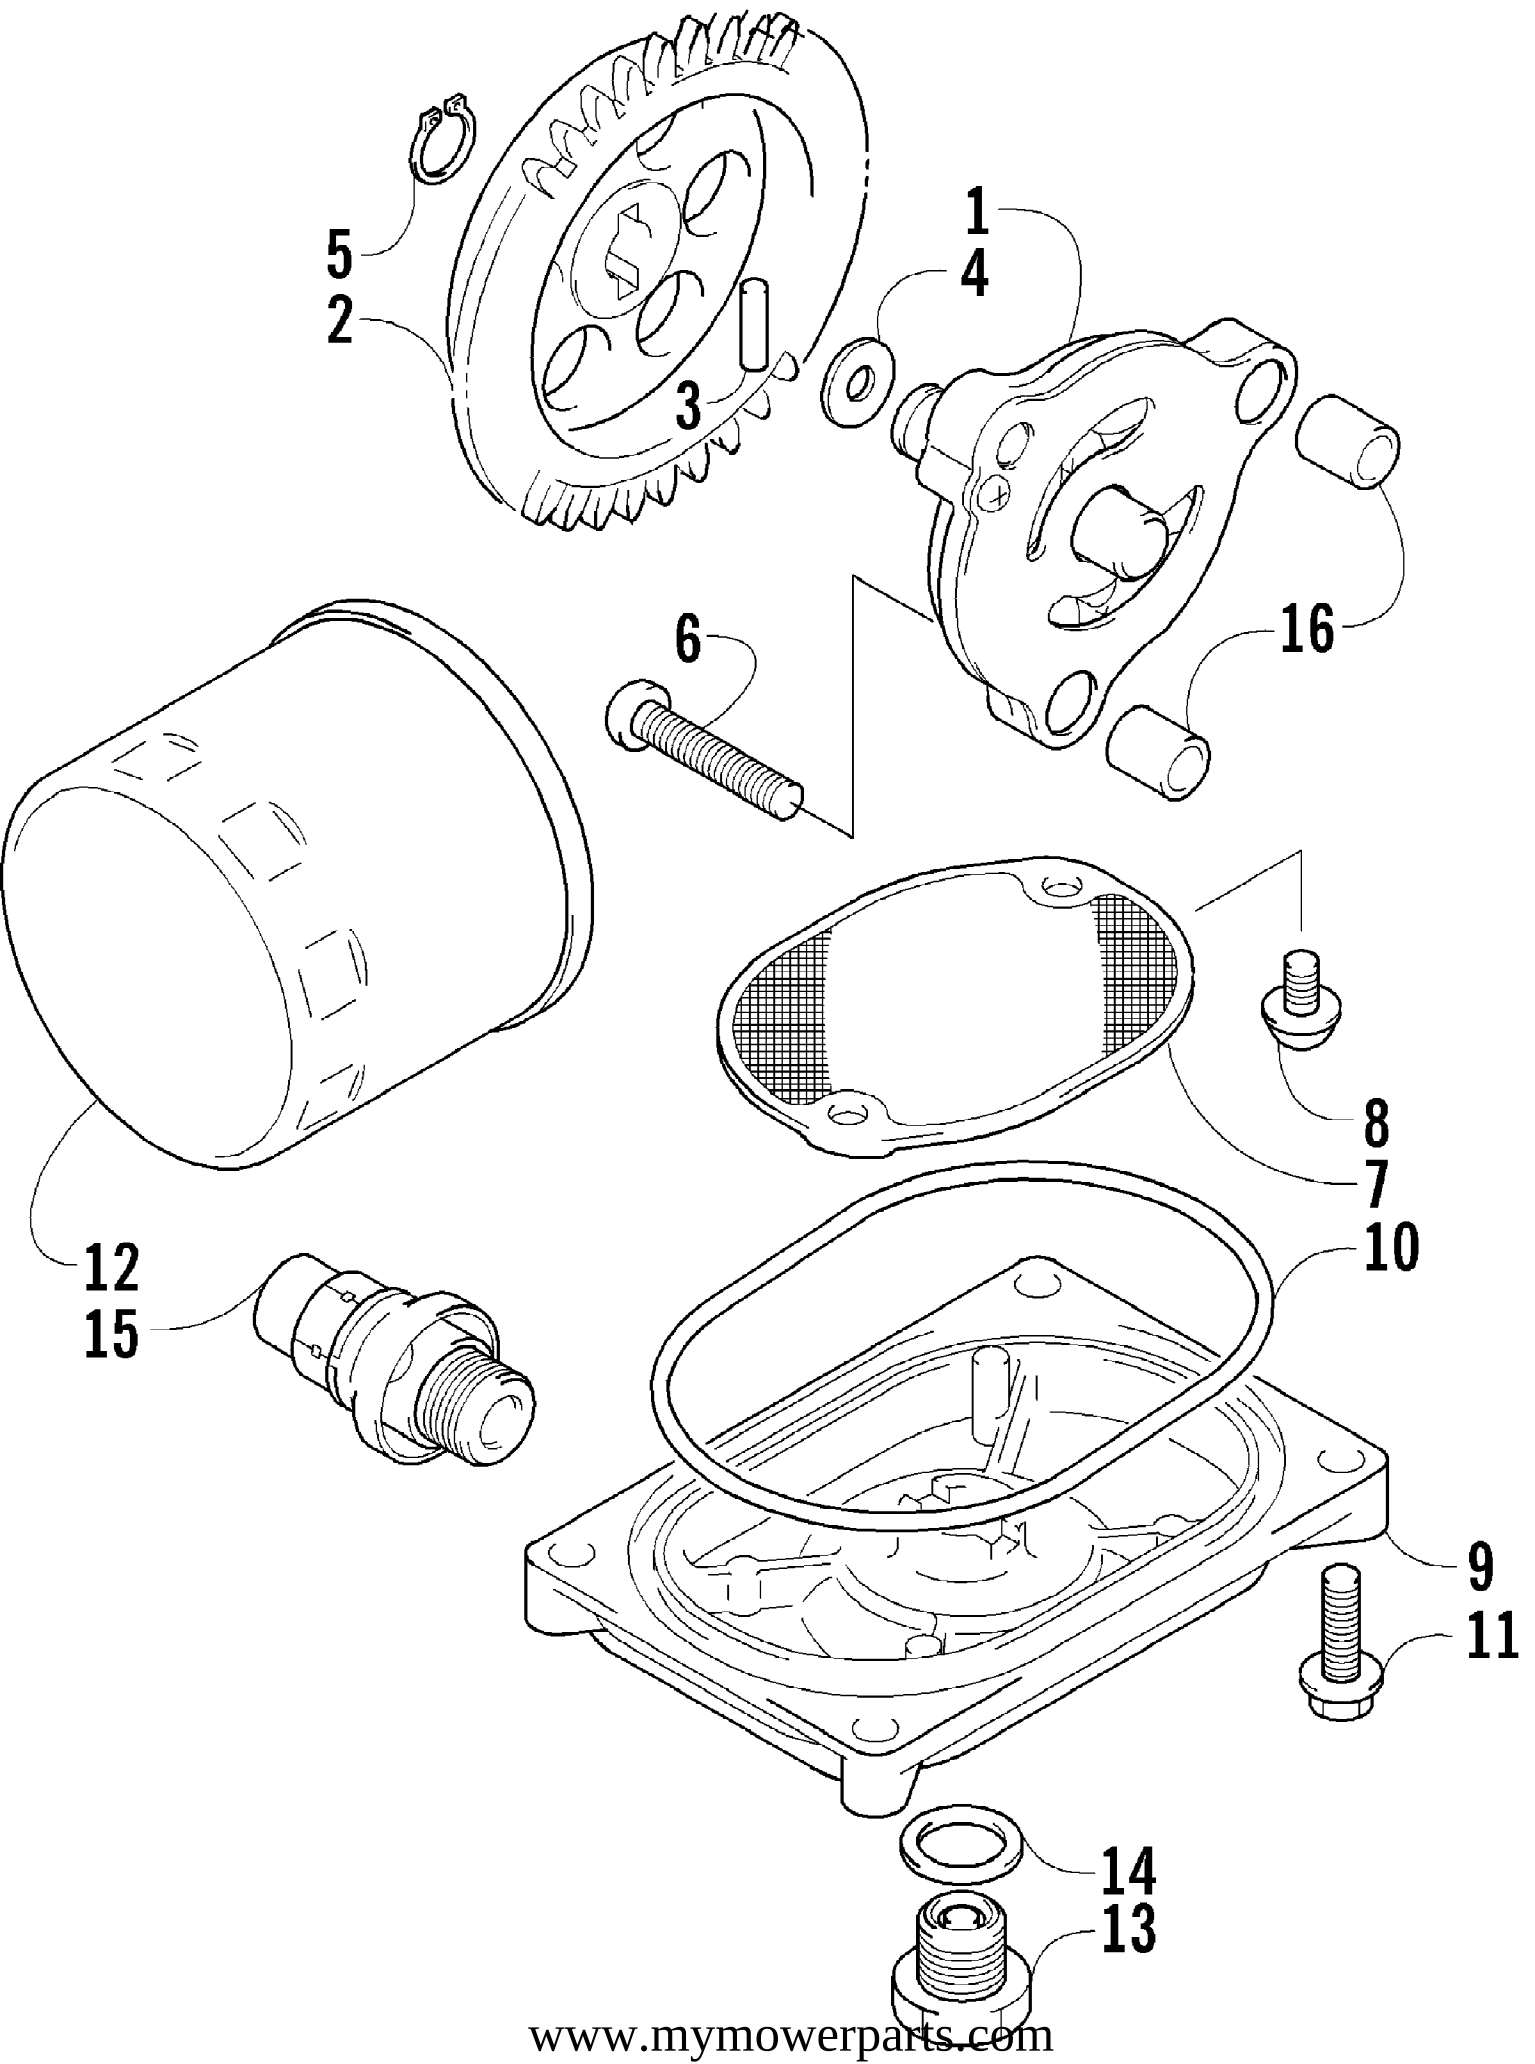 


2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 56 of 94
OIL FILTER/PUMP ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	3402-619	1		Pump, Oil
2	3402-618	1		Gear, Driven
3	3423-046	1		Pin
4	3423-443	1		Washer
5	3423-184	1	S	Circlip
6	3423-113	3	S/P	Screw
7	3402-156	1		Strainer, Oil
8	0693-389	2	S	Screw
9	3402-157	1		Cap, Oil Strainer
10	3423-077	1		O-Ring
11	3004-756	4	S	Screw, Cap
12	0812-005	1	S	Filter, Oil
13	3403-021	1	/P	Plug, Drain
14	3402-012	1		Gasket, Drain Plug
15	3402-773	1		Valve, Oil-Relief - Assembly
16	3005-206	2	/P	Pin, Oil Pump

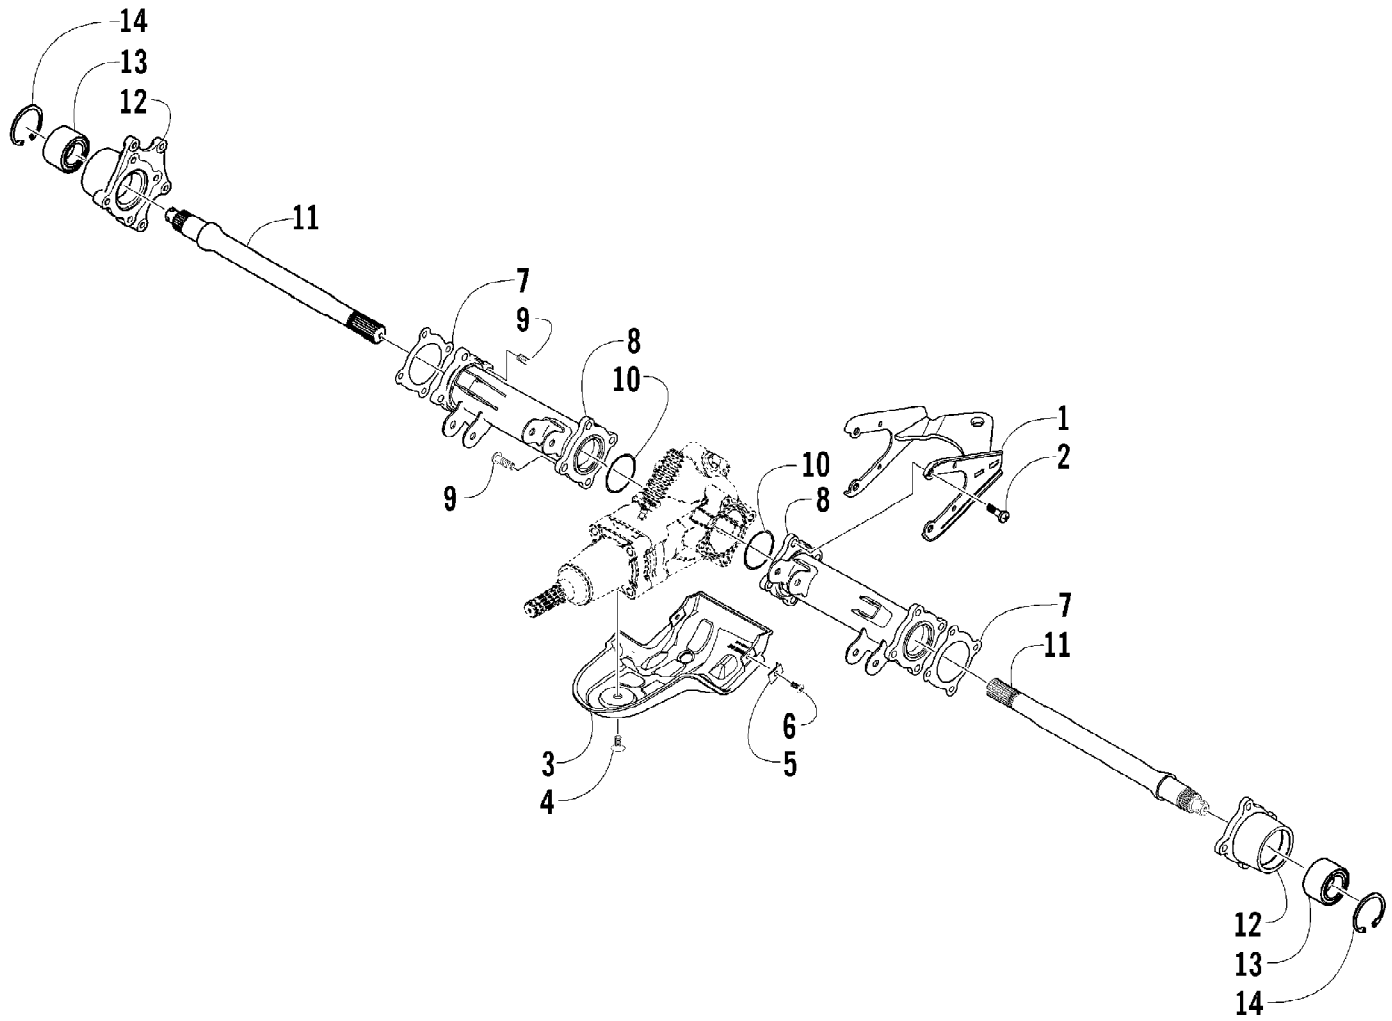 

Ref #	Part Number	Qty	S/P/F	Description
1	0506-675	1		Hitch, Trailer
2	0423-116	4		Screw, Self-Tapping
3	0406-415	1		Panel, Gearcase
4	0423-101	1		Screw, Body
5	0423-031	2		Nut, Speed
6	8477-616	2		Screw, Machine
7	0402-374	2		Gasket, Axle Housing
8	0502-090	1		Housing, Axle - Right
8	0502-091	1		Housing, Axle - Left
9	0423-117	12		Screw, Self-Tapping
10	0423-119	2		O-Ring
11	1402-400	1		Axle - Right
11	1402-401	1		Axle - Left
12	0502-859	1		Housing, Bearing - Right
12	0502-681	1		Housing, Bearing - Left
13	1402-027	2	S/P	Bearing
14	0423-423	2		Ring, Retaining

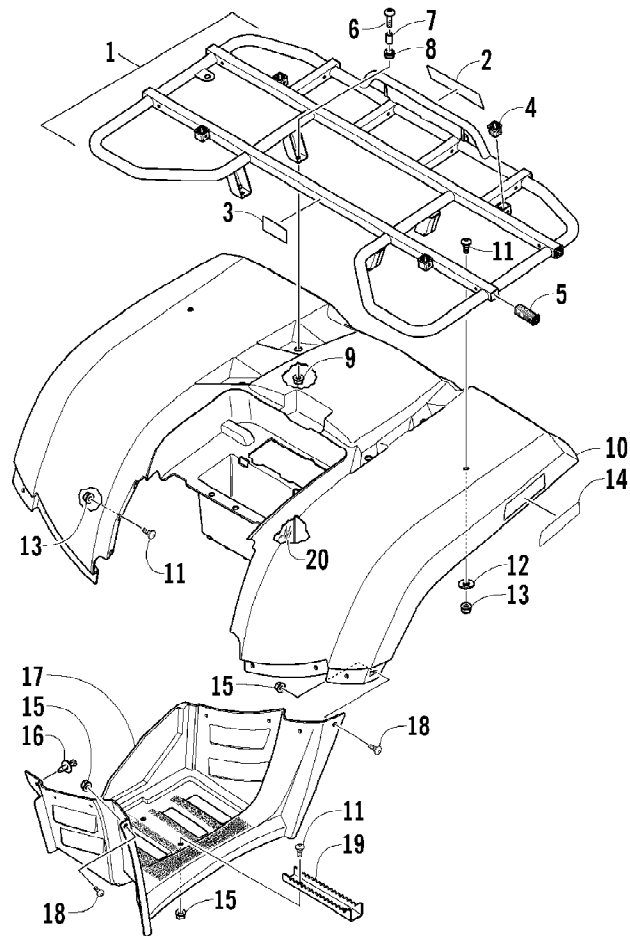 


2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 60 of 94
REAR BODY PANEL ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	1506-753	1	/P	Rack - Rear - Assembly (inc. 2-5)
2	0411-814	1	/P	Decal, "Arctic Cat"
3	0411-648	1		Decal, Warning - Rear Rack Load
4	0441-592	4	/P	Bushing, Rack
5	2406-014	8		Bushing, Rack
6	8468-830	4		Screw, Machine
7	0423-463	4		Spacer
8	0423-465	4		Grommet
9	8432-802	4		Nut, Lock
10	1406-954	1	S	Panel, Fender - Rear
11	0423-355	12		Screw, Shoulder
12	8050-222	2	/P	Washer
13	8424-602	8	/P	Nut, Lock
14	1411-080	1		Decal, Reflector - Rear - Right
14	1411-081	1		Decal, Reflector - Rear - Left
15	1406-952	1	S	Footwell - Right
15	1406-357	1	S	Footwell - Left
16	0623-362	2		Rivet, Reinstallable
17	0423-540	16		Nut, Lock
18	0423-419	12		Screw, Machine
19	1506-125	2	/P	Footpeg
20	0412-351	1		Shield, Heat


2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 62 of 94
REAR DRIVE GEARCASE ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0502-822	1		Gearcase, Rear Drive - Assembly (inc. 2-32)
2	0502-088	1		Housing, Gearcase
3	0502-239	1		Housing, Pinion
4	0502-089	1		Cover, Gearcase
5	0402-321	1		Ring, Retaining
6	0402-322	1		Bearing
7	0402-323	1		Seal
8	0402-324	2		Bearing
9	0402-325	2		Seal
10	0402-326	1		Button, Thrust
11	0402-328	1		Bearing, Needle
12	1402-103	1		Fitting
13	0402-331	1		Collar, Lock
14	0402-335	1		Collar, Shaft
15	0402-851	1		Shaft, Thrust
16	0402-338	1		Spring, Compression
17	0402-381	1		Gear, Ring - 36T
18	0402-429	AR		Shim
18	0402-430	AR		Shim
18	0402-431	AR		Shim
18	0402-432	AR		Shim
18	0402-433	AR		Shim
19	0402-434	AR		Shim
19	0402-435	AR		Shim
19	0402-436	AR		Shim
19	0402-437	AR		Shim
19	0402-438	AR		Shim
20	0423-111	1		Washer
21	0423-115	6		Screw, Self-Tapping
22	0423-118	6		Screw, Self-Tapping
23	0502-783	1		Gear, Pinion - Assembly - 10T (inc. 24-25)
24	0402-327	1		Bearing
25	0402-336	1		Collar, Retaining
26	0423-148	1		O-Ring
27	0423-149	1		O-Ring
28	0402-333	1	/P	Plug, Fill (inc. 29)
29	0423-154	1		O-Ring, Fill Plug
30	0402-334	1		Plug, Drain (inc. one No. 31)
31	0423-153	2		O-Ring, Drain Plug
32	0402-450	1	S	Plug, Drain - Magnetic (inc. one No. 31)
33	0402-147	1	S	Bladder, Gearcase
34	0423-315	1		Clamp, Fitting

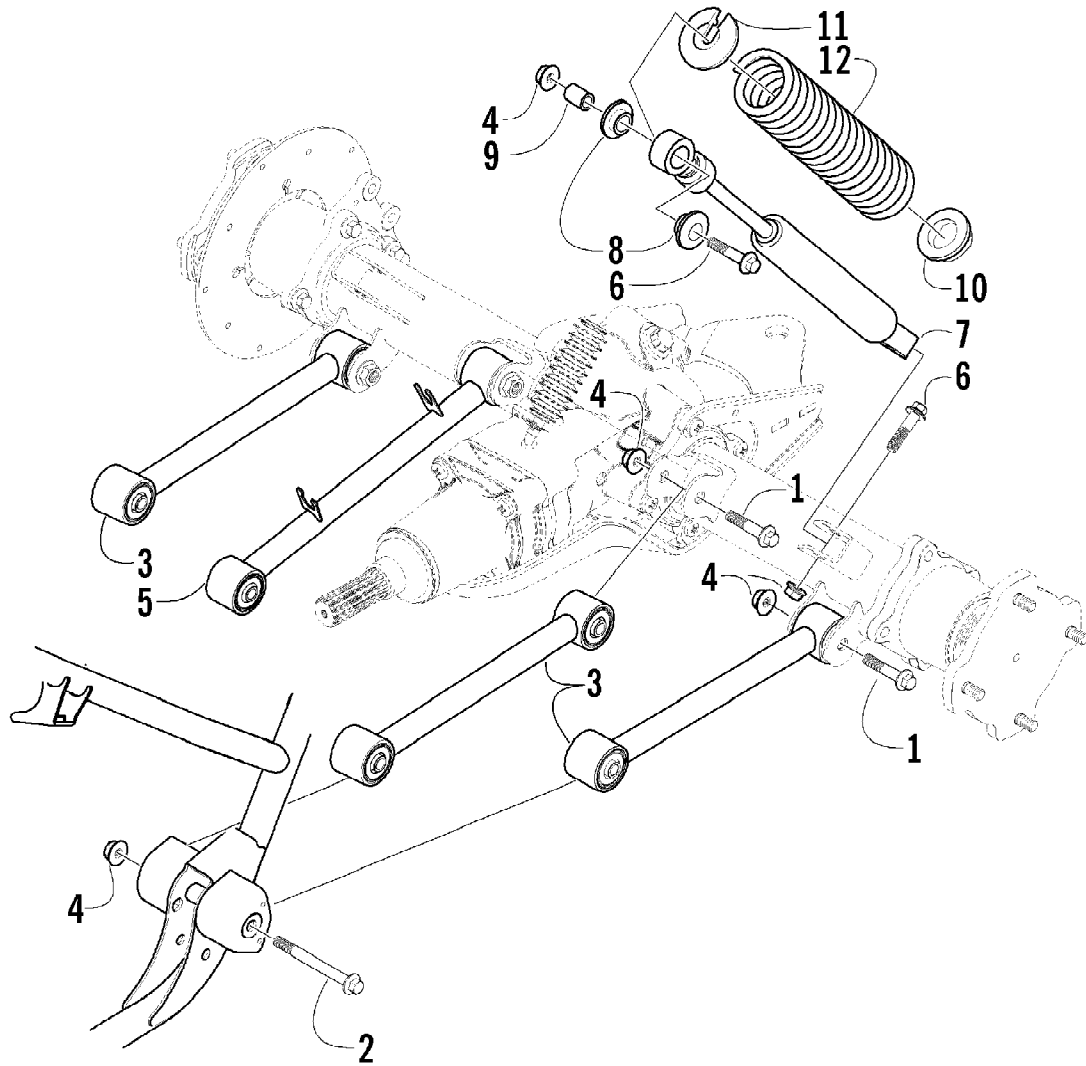 

2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 64 of 94
REAR SUSPENSION ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	8409-060	4		Screw, Cap
2	0423-335	2		Screw, Cap
3	0504-218	3		Arm, Swing
4	8428-002	10		Nut, Lock
5	0504-246	1		Arm, Swing
6	8409-040	4		Screw, Cap
7	0404-107	2		Shock Absorber - Rear (inc. 8-9)
8	0604-310	8		Bushing, Shock Absorber
9	0403-028	4		Sleeve, Shock Absorber
10	0403-102	2		Cam, Spring Adjuster
11	1603-889	2	/P	Retainer, Spring - Upper
12	0404-108	2		Spring, Shock Absorber

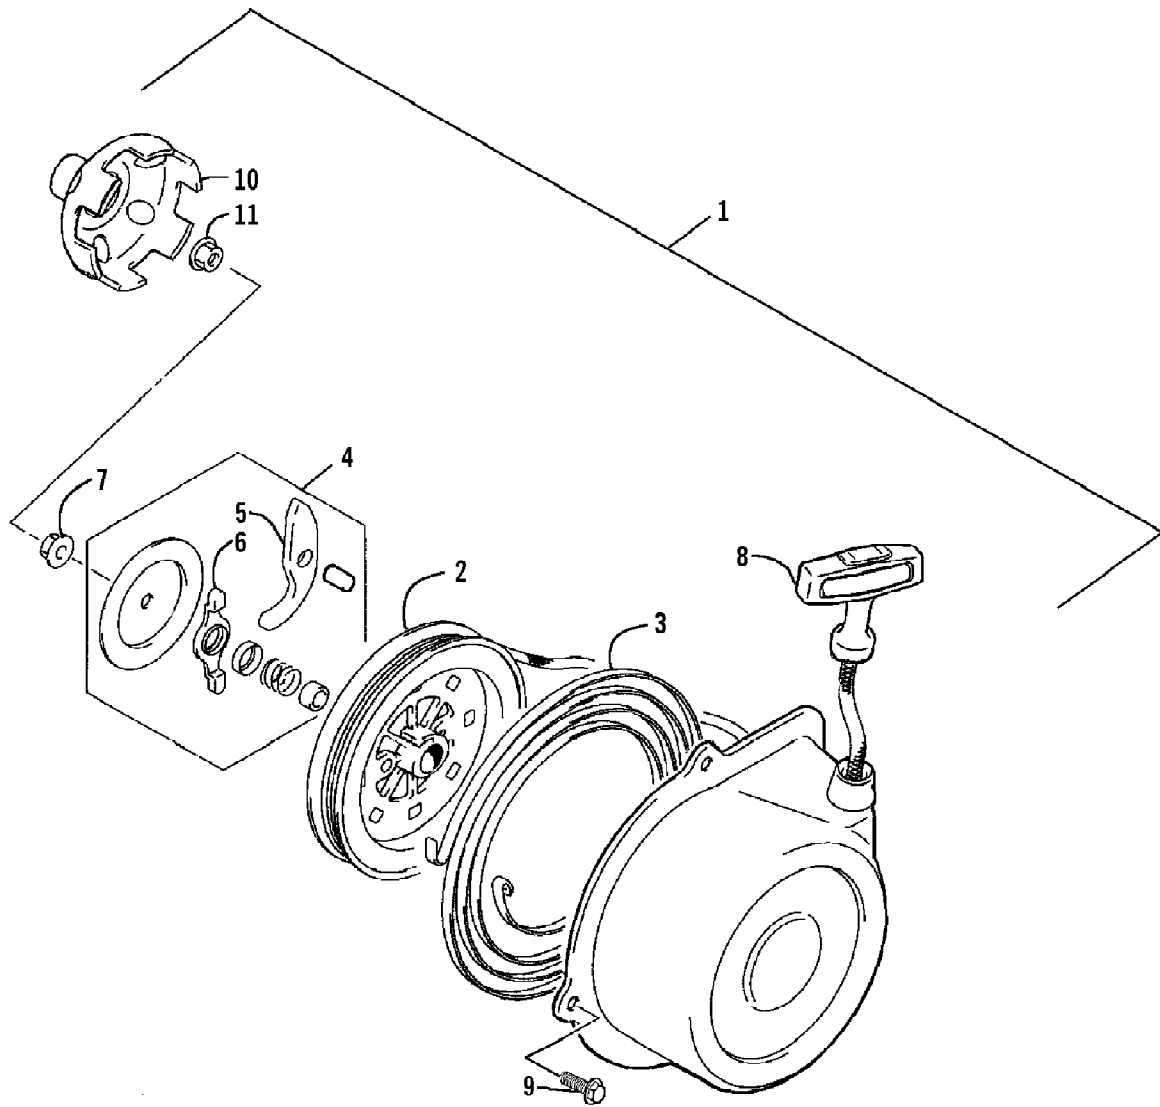 

2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 66 of 94
RECOIL STARTER ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	3445-003	1		Starter, Recoil - Assembly (inc. 2-8)
2	3445-004	1		Reel
3	3445-007	1		Spring, Sprial
4	3445-016	1		Ratchet - Assembly (inc. 5-6)
5	3445-005	1		Ratchet
6	3445-006	1		Guide, Ratchet
7	3004-488	1	S/P	Nut
8	3445-011	1		Rope Assembly
9	3423-428	4		Screw, Cap
10	3445-029	1	/P	Cup, Starter
11	3004-491	1	S/P	Nut


No
Diagram
Available

Parts List
Only

2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 68 of 94
RELATED ITEMS


Ref #	Part Number	Qty	S/P/F	Description
	0436-768	1	S	Backrest
	0436-679	1		Bag, Fender - Black
	0436-660	1	S	Bag, Rack, Front - Black
	0436-802	1		Bag, Rack, Rear - Black
	0436-811	1		Basket, Open-End - Rear
	0436-765	1		Brush Guard/Bumper, Front (4x4)
	0436-454	1		Cargo Box
	0436-625	1		Cargo Box Quick-Release Kit
	0436-777	1	S	Cover, Black and Green
	0436-668	1		Cover, Timber Camo
	0436-776	1	S	Cover, Trailerable
	0436-005	1	S	Engine Oil - 10W40
	0436-003	1	S	Engine Oil - 5W30
	0436-450	1	S	Engine Oil - Synthetic 0W40
	0436-007	1	S	Gear Lube (Diff) - 80W90
	0441-281	1		Gun Scabbard
	0436-706	1	/P	Gun Scabbard Mount
	0436-505	1		Hand Guards - Black
	0436-352	1		Hand/Thumb Warmers
	2257-454	1		Illustrated Parts Manual
	0436-787	1		License Plate Kit
	2257-313	1		Manuel d'utilisation (F)
	2257-299	1		Operator's Manual (E)
	0436-635	1		Plow Attachment Kit
	0436-228	1		Plow Blade, 50 in. - Straight
	0436-287	1		Plow Blade, 50 in. - One-Way
	0436-296	1		Plow Blade, 60 in. - Straight
	0436-360	1		Plow Blade, 60 in. - One-Way
	0436-822	1		Plow Blade, Carbon Fiber - 60 in. - Straight
	0436-823	1		Plow Blade, Carbon Fiber - 60 in. - One-Way
	0436-636	1	/P	Plow, Push Frame
	0436-626	1	S	Rack Basket (Front)
	0436-762	1		Rack Extension, 4 in. (Front)
	0436-763	1		Rack Extension, 8 in. (Rear)
	1402-028	1		Tire, Titan AT589 (25x8-12, Mud & Snow)
	0402-563	1		Tire, Titan AT589 (25x10-12 Mud & Snow)
	0436-297	1		Tool Holder - Double
	0436-263	1	/P	Tool Holder - Single
	0436-382	1		Torch Light
	0436-655	1		Winch, 2500 lb
	0436-623	1		Windshield, Clear w/Black Accent

 2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 69 of 94
REVERSE SHIFT LEVER ASSEMBLY

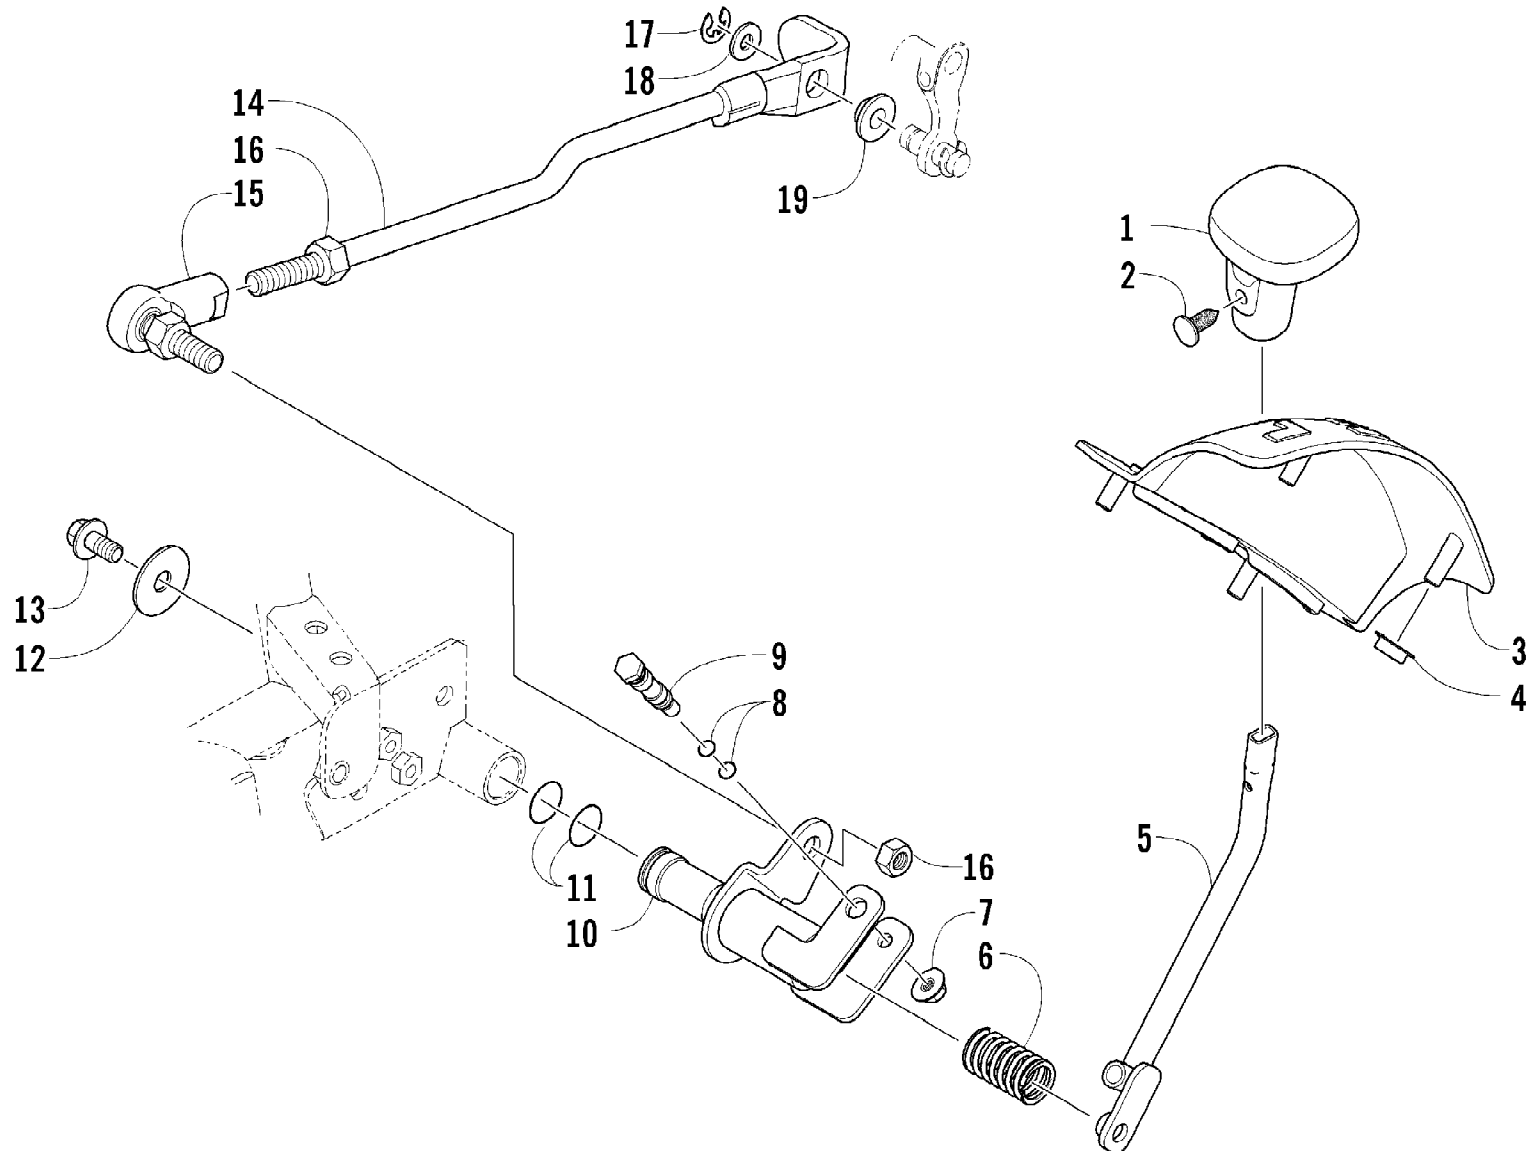

2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 70 of 94
REVERSE SHIFT LEVER ASSEMBLY


Ref #	Part Number	Qty	S/P/F	Description
1	0402-843	1	/P	Handle, Reverse Shift Lever
2	0423-345	1		Clip, Push
3	1402-335	1	S	Plate, Shift
4	0423-357	4		Nut, Stamped
5	0502-659	1		Lever, Shift
6	0502-410	1	S	Spring, Reverse Shift Lever
7	8424-602	1	/P	Nut
8	0423-182	2	/P	O-Ring
9	0402-675	1		Axle, Pivot
10	0502-760	1		Axle, Reverse Shift Lever
11	0423-299	2	/P	O-Ring
12	0423-087	1		Washer
13	8408-812	1		Screw, Cap
14	0502-589	1		Linkage, Shift
15	1402-270	1		End, Rod
16	0623-294	2		Nut
17	0423-169	1	/P	E-Ring
18	3423-204	1	/P	Washer
19	0423-091	1		Bushing, Shift Linkage

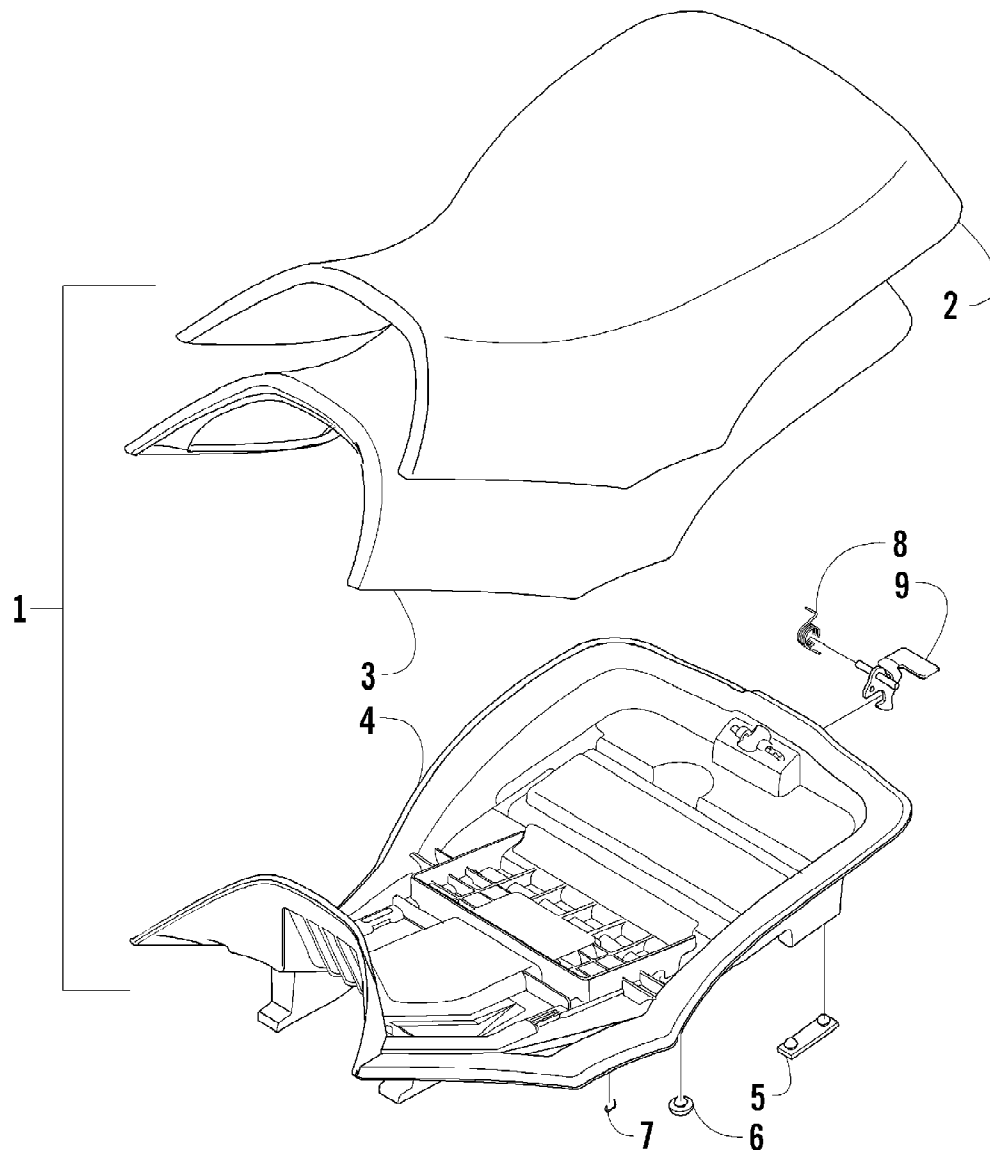 

2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 72 of 94
SEAT ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	1506-937	1	S/P	Seat Assembly (inc. 2-9)
2	1506-209	1		Cover, Seat
3	1506-208	1		Foam, Seat
4	2406-144	1	S/P	Base, Seat Assembly (inc. 5-6)
5	0406-879	2		Bumper, Seat - Rear
6	0406-877	4	/P	Bumper, Seat - Front
7	0624-528	AR	/P	Staple
8	1406-592	1	/P	Spring, Seat Latch
9	1506-156	1		Latch, Seat

 
2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 73 of 94
SECONDARY DRIVE ASSEMBLY

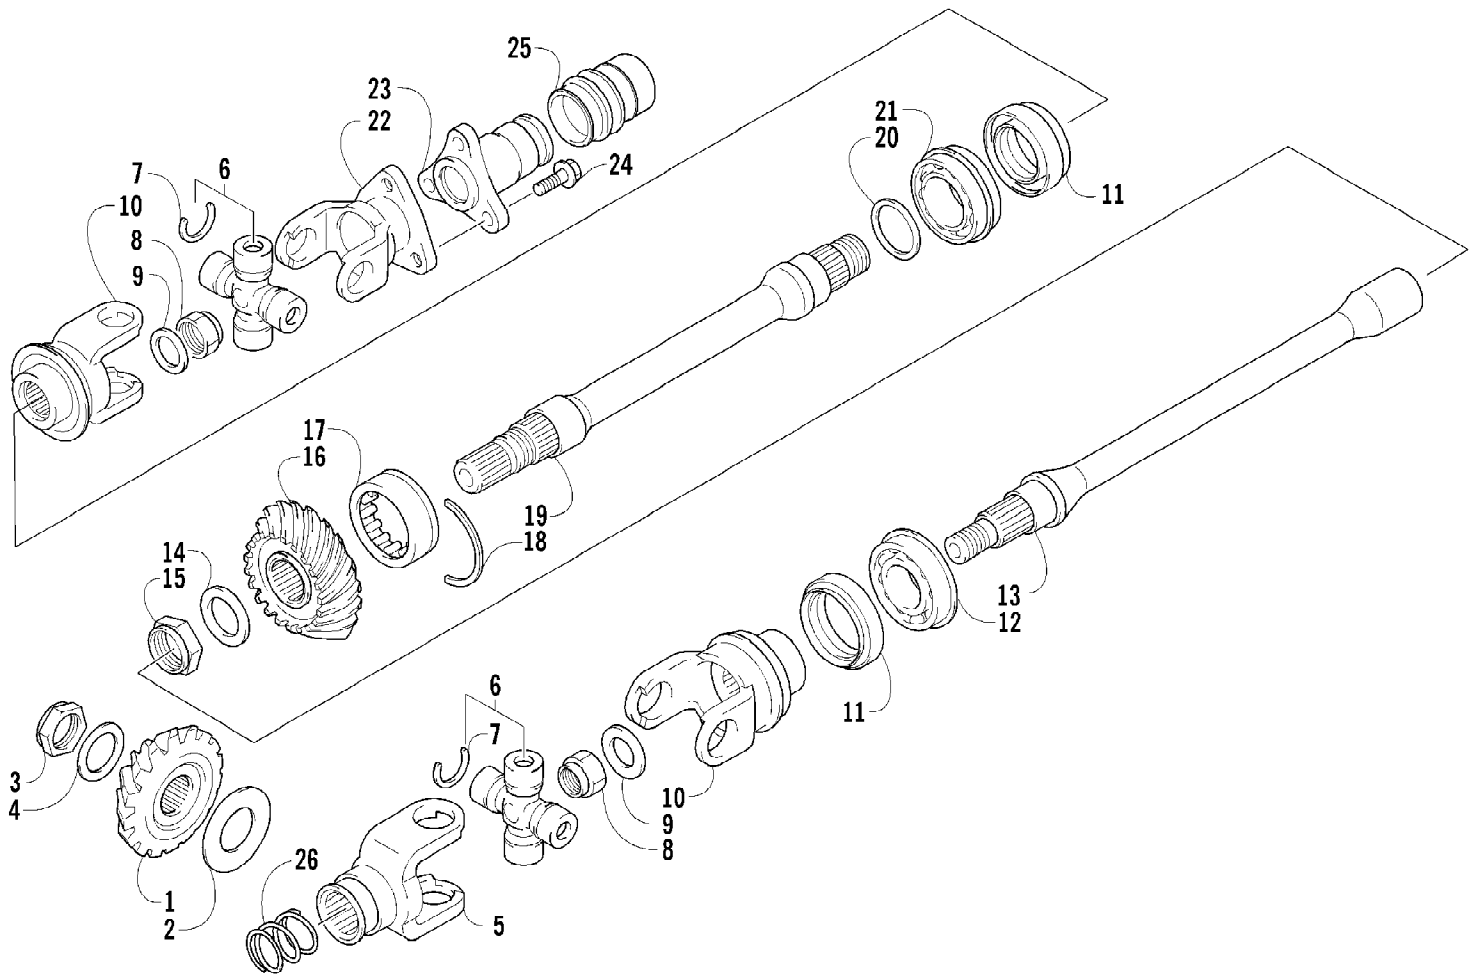

2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 74 of 94
SECONDARY DRIVE ASSEMBLY


Ref #	Part Number	Qty	S/P/F	Description
1	3446-274	1	/P	Gear, Secondary Drive
2	3446-035	1		Shim, Secondary Drive Gear - Set
3	3423-023	1		Nut
4	3005-372	1		Washer
5	3446-327	1	/P	Yoke, Propeller Shaft - Front
6	3402-562	2		Joint, Universal - Set (inc. 7)
7	3423-479	8		Circlip
8	3423-025	2		Nut
9	3423-028	2		Washer
10	3402-742	2		Yoke, Drive Output
11	3402-072	2		Seal, Oil
12	3402-558	1		Bearing, Front Secondary Driven Shaft
13	3402-559	1		Shaft, Secondary Driven - Front
14	3423-520	1		Washer, Secondary Driven Gear
15	3423-136	1		Nut, Secondary Driven Gear
16	3446-222	1	/P	Gear, Secondary Driven
17	3402-515	1	/P	Bearing, Driven Gear
18	3423-072	1		C-Ring, Driven Bearing
19	3446-305	1		Shaft, Secondary Driven - Rear
20	3402-017	AR		Shim, 25 x 34 x 0.60 mm
20	3402-018	AR		Shim, 25 x 34 x 0.65 mm
20	3402-019	AR		Shim, 25 x 34 x 0.70 mm
20	3402-020	AR		Shim, 25 x 34 x 0.75 mm
20	3402-021	AR	S	Shim, 25 x 34 x 0.80 mm
20	3402-022	AR		Shim, 25 x 34 x 0.85 mm
20	3402-023	AR		Shim, 25 x 34 x 0.90 mm
20	3402-024	AR		Shim, 25 x 34 x 0.95 mm
20	3402-025	AR	S	Shim, 25 x 34 x 1.00 mm
20	3402-028	AR		Shim, 25 x 34 x 1.05 mm
20	3402-029	AR		Shim, 25 x 34 x 1.10 mm
20	3402-030	AR		Shim, 25 x 34 x 1.15 mm
20	3402-031	AR		Shim, 25 x 34 x 1.20 mm
21	3402-067	1	S	Bearing, Rear Secondary Driven Shaft
22	3446-405	1		Yoke, Propeller Shaft
23	3403-015	1		Shaft, Propeller
24	3423-414	3	S	Bolt, Propeller Shaft
25	3435-051	1		Boot, Propeller Shaft
26	1402-026	1		Spring

 2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 75 of 94
SECONDARY SHIFTING ASSEMBLY

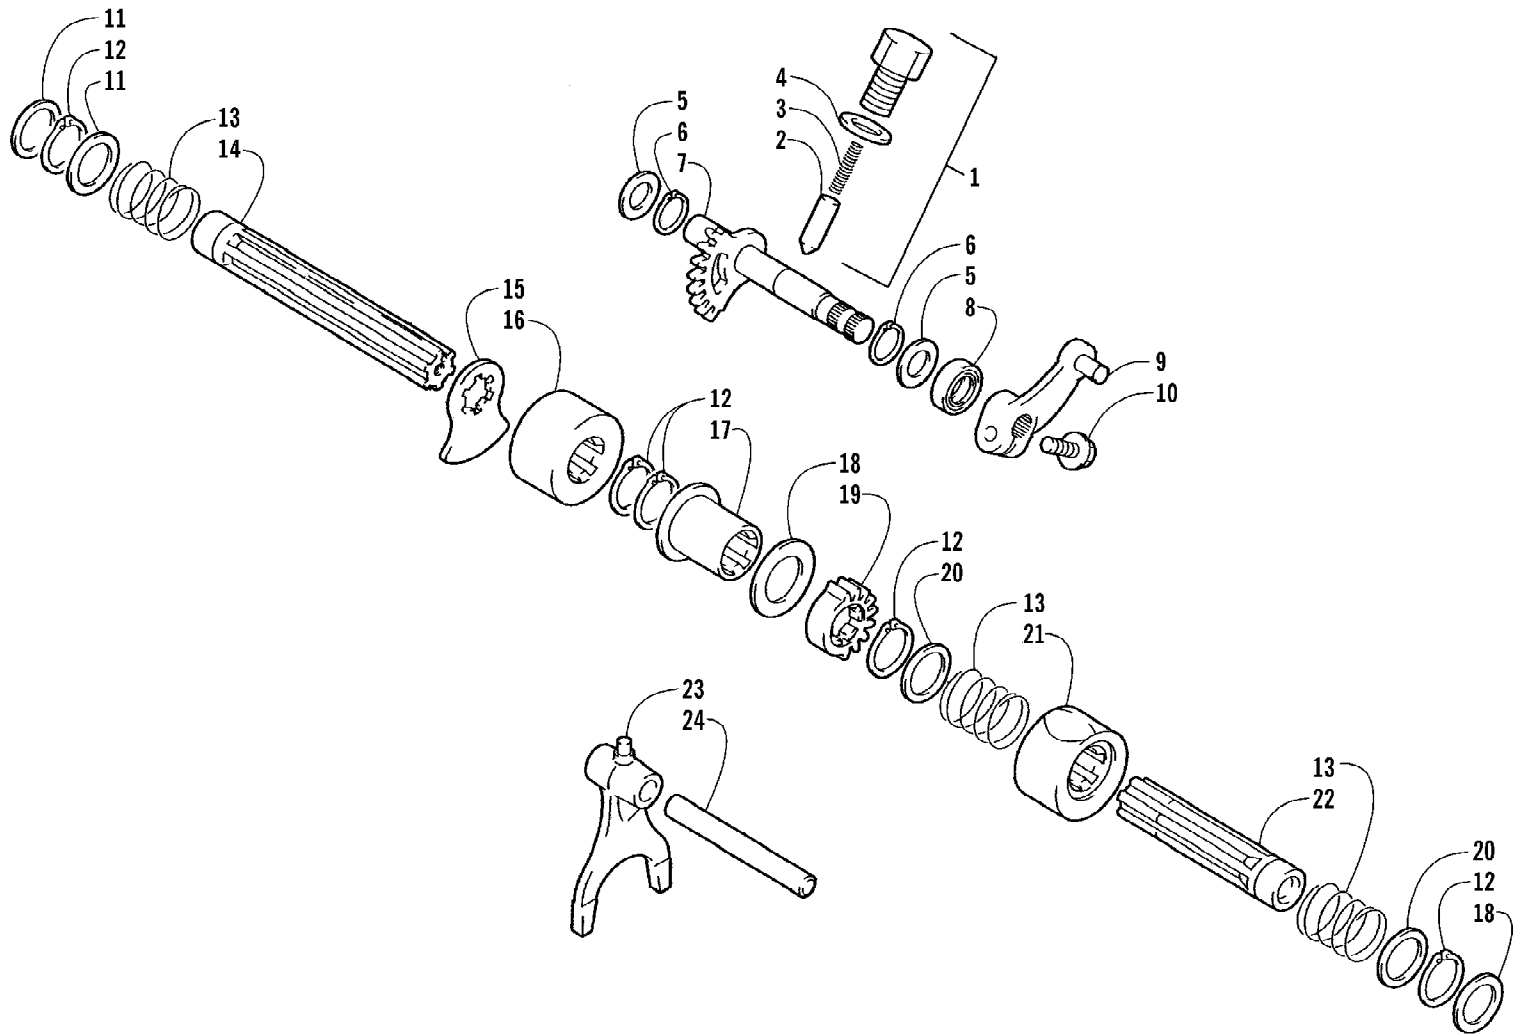


2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 76 of 94
SECONDARY SHIFTING ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	3446-314	1		Stopper, Gear Shift Cam (inc. 2-3)
2	3446-315	1		Stopper
3	3423-524	1		Spring
4	3402-012	1		Gasket
5	1691-043	2		Washer
6	3423-358	2	S	Circlip
7	3446-322	1		Shaft, Gear Shift
8	3402-076	1		Seal, Oil
9	3402-434	1	/P	Arm, Gear Shift
10	3004-341	1	S/P	Bolt, Gear Shift Arm
11	3423-527	2	/P	Washer
12	3423-190	5	S	Circlip
13	3423-526	3	/P	Spring
14	3446-325	1		Camshaft, Reverse
15	3446-324	1		Plate, Cam Lock
16	3446-323	1		Cam, Reverse
17	3446-321	1		Joint, Camshaft
18	3402-381	2	/P	Washer
19	3446-316	1		Gear, Camshaft
20	3423-533	2		Washer
21	3423-525	1		Cam
22	3446-320	1		Camshaft
23	3446-318	1		Fork, Gear Shift
24	3446-317	1		Shaft, Gear Shift Fork

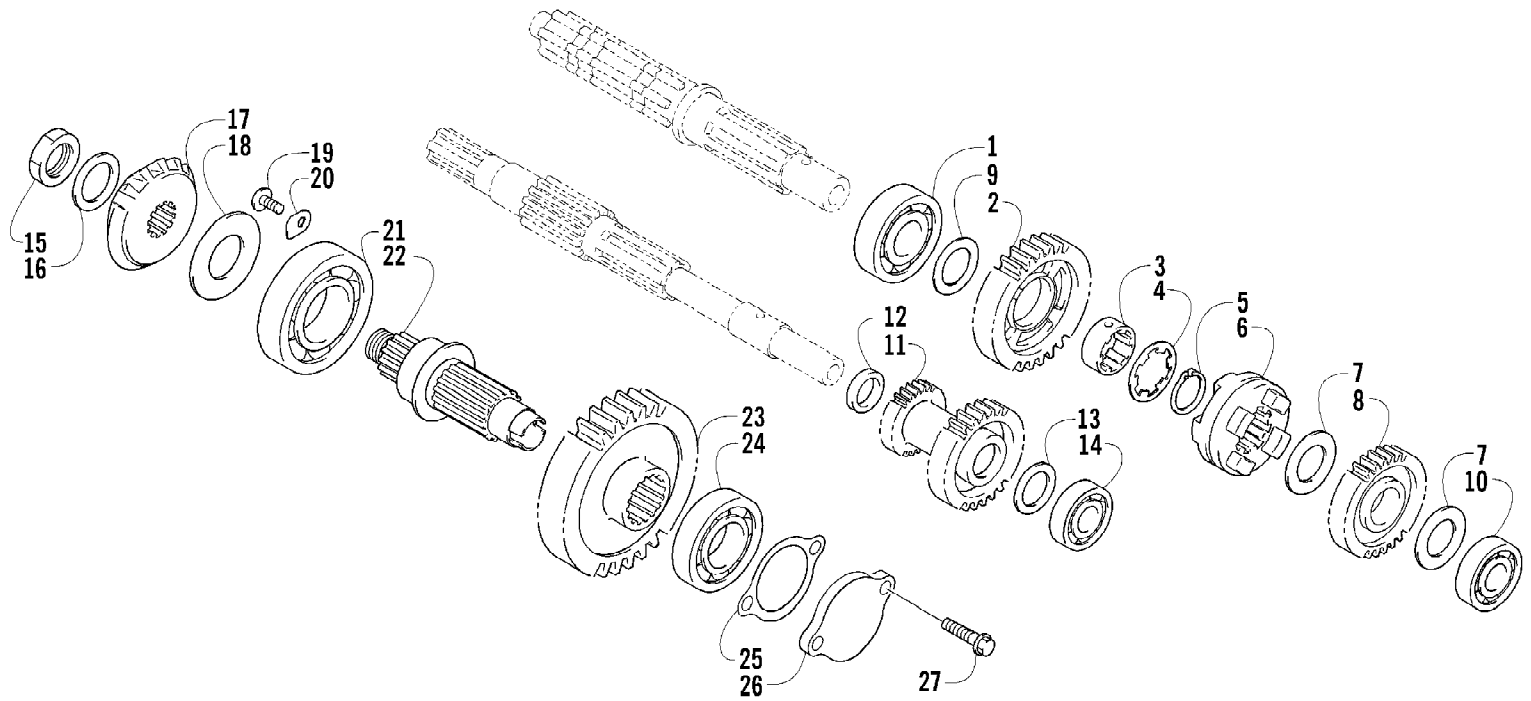 

2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 78 of 94
SECONDARY TRANSMISSION ASSEMBLY


Ref #	Part Number	Qty	S/P/F	Description
1	3402-776	1		Bearing
2	3446-300	1		Gear, Drive - No. 1
3	3446-301	1		Bushing, Drive Gear No. 1
4	3423-036	1		Washer
5	3423-066	1	/P	Circlip
6	3446-249	1		Dog, Sliding
7	3423-126	2	/P	Washer
8	3446-302	1		Gear, Drive - No. 2
9	3423-519	1		Spacer, Drive Gear
10	3402-979	1	/P	Bearing, Driveshaft
11	3446-299	1		Gear, Idle
12	3402-205	1		Spacer, Idle Gear
13	3423-319	1		Washer
14	3402-217	1		Bearing
15	3423-023	1		Nut, Secondary Drive Gear
16	3005-372	1		Washer, Secondary Drive Gear
17	3446-274	1	/P	Gear, Secondary Drive
18	3446-035	1		Shim, Secondary Drive Gear - Set
19	3423-370	2		Screw
20	3446-031	2	/P	Retainer, Output Shaft
21	3402-180	1	S	Bearing
22	3446-403	1	/P	Shaft, Output
23	3446-304	1		Gear, Driven
24	3402-045	1	/P	Bearing
25	3446-244	1	/P	Gasket, Speedometer Housing
26	3446-260	1		Retainer, Cover Plug
27	3423-363	2		Bolt, Retainer

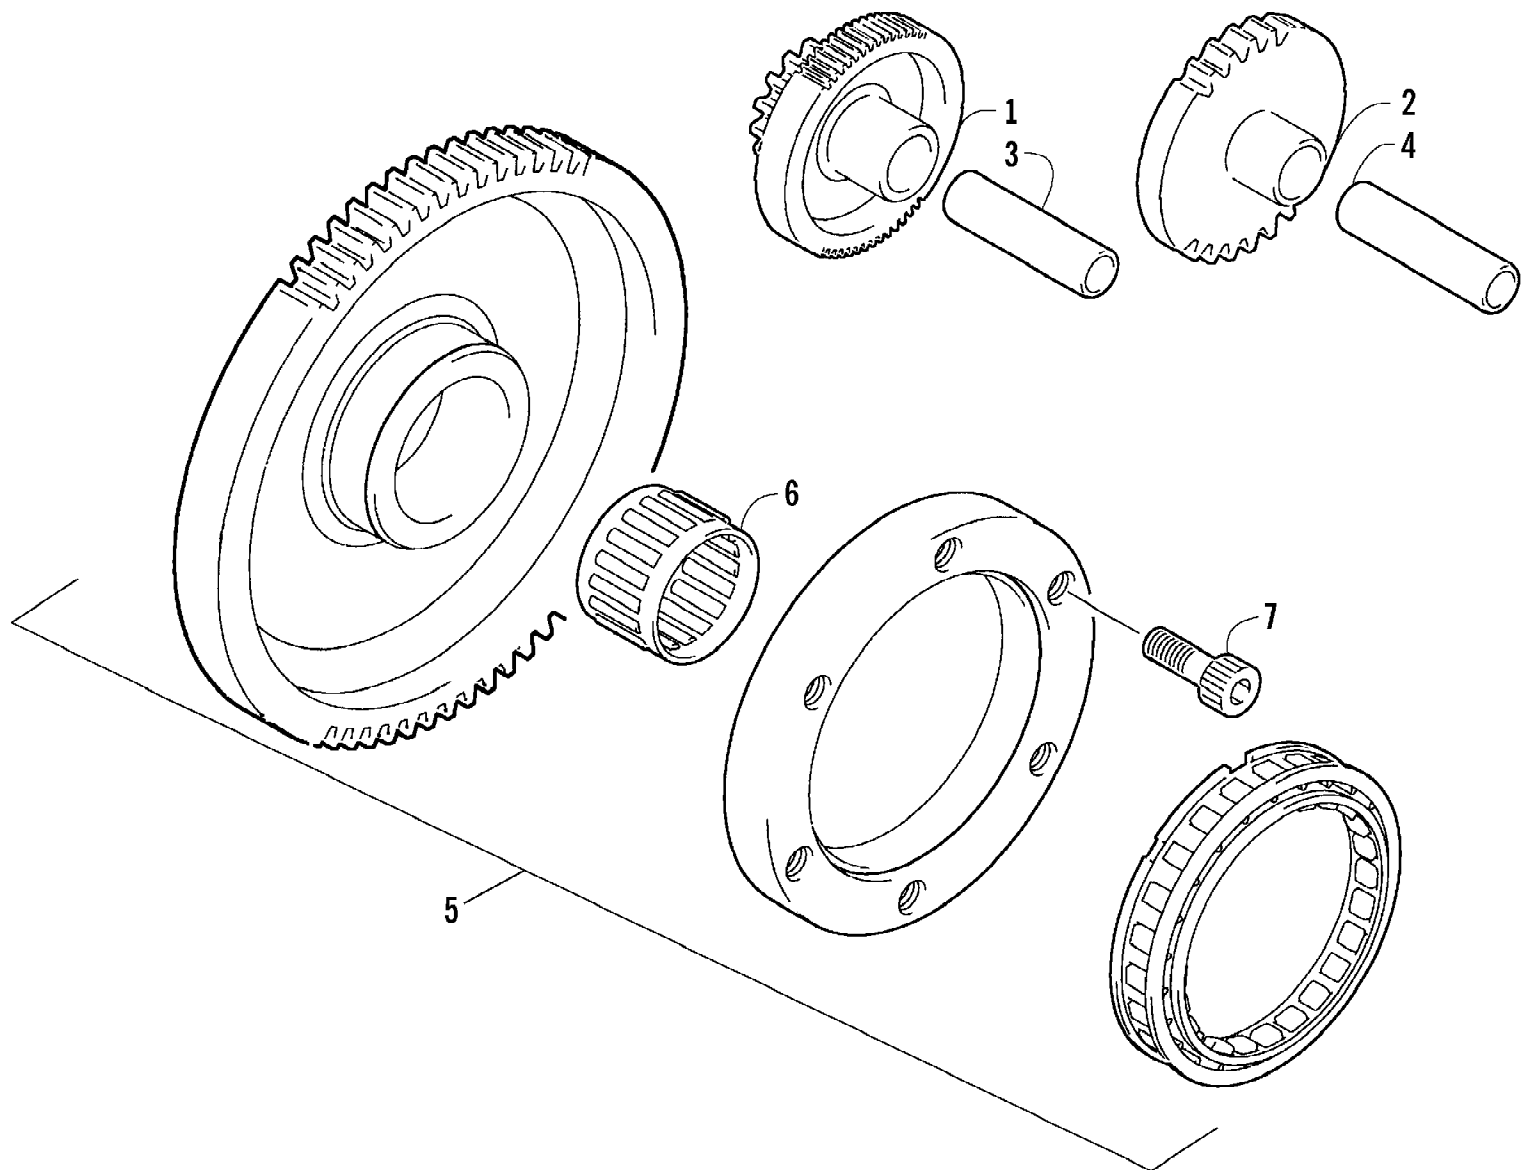 


2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 80 of 94
STARTER CLUTCH ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	3402-603	1		Gear, Starter Idler - No. 1
2	3402-124	1		Gear, Starter Idler - No. 2
3	3423-331	1		Pin, Starter Idler Gear No. 1
4	3423-397	1		Pin, Starter Idler Gear No. 2
5	3402-690	1	S	Clutch, Starter - Set (inc. 6)
6	3402-674	1		Bearing
7	3423-102	6	S	Bolt

 2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 81 of 94
STARTER MOTOR ASSEMBLY

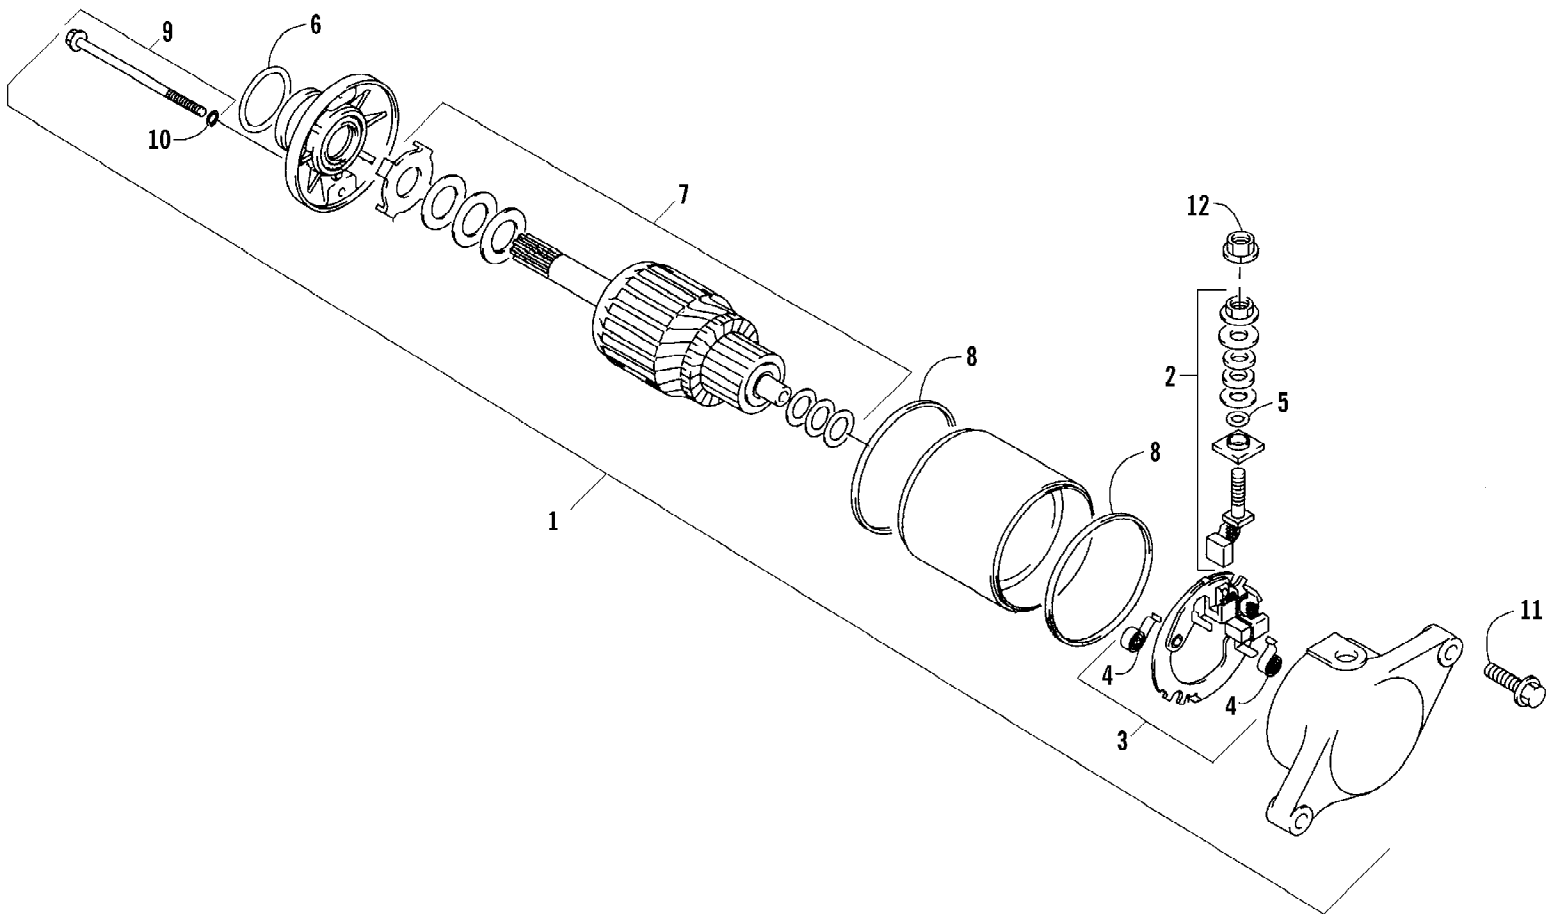


Ref #	Part Number	Qty	S/P/F	Description
1	3545-016	1		Motor, Starter Assembly (inc. 2-10)
2	3402-671	1		Terminal Set, Brush
3	3402-672	1		Holder Set, Brush
4	3008-551	4		Spring, Brush
5	3008-164	1		O-Ring
6	3423-272	1		O-Ring
7	3008-099	1		Washer Set
8	3423-497	2		O-Ring
9	3423-498	2		Through-Bolt (inc. 10)
10	3423-496	2		O-Ring
11	3004-756	2	S	Bolt
12	3423-195	1	/P	Nut

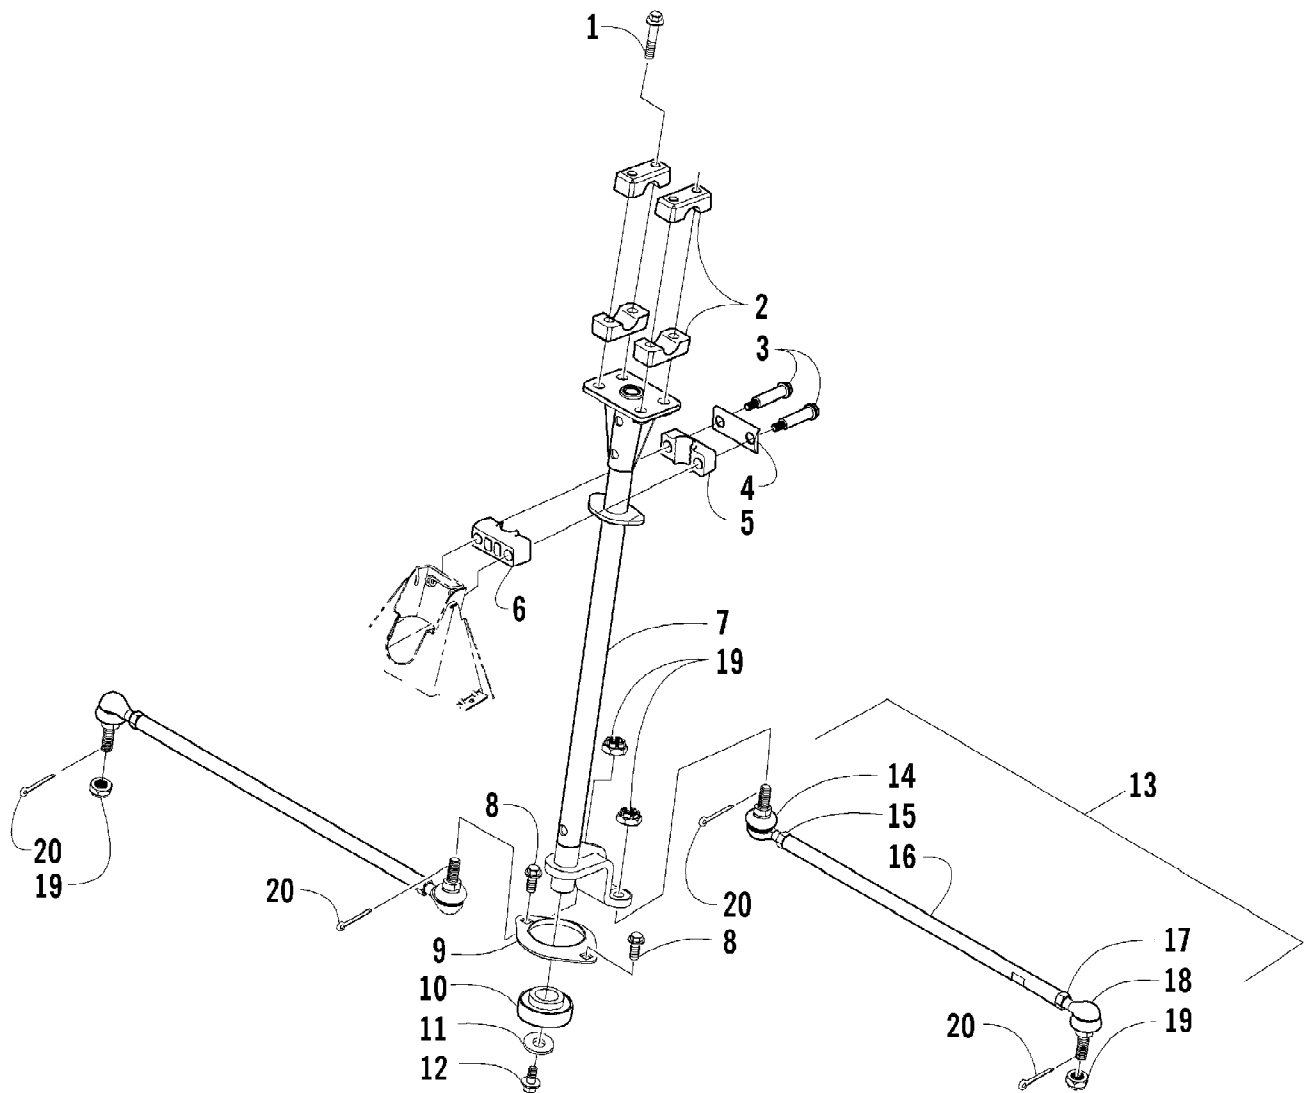 


2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 84 of 94
STEERING POST ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	8408-860	4		Screw, Cap
2	0405-035	4		Cap, Steering Adjuster
3	0423-505	2		Screw, Shoulder
4	0405-166	1		Cap, Housing
5	0405-138	1		Housing, Lower
6	0405-139	1		Housing, Upper
7	0505-451	1	S	Post, Steering
8	8408-816	2		Screw, Cap
9	0602-233	1		Flange, Bearing
10	0405-052	1		Bearing w/Inverted Oil Seal
11	0423-073	1		Washer
12	8409-020	1	/P	Screw, Cap
13	0505-408	2	S	Tie Rod - Assembly (inc. 14-18)
14	0405-083	2	S	Ball Joint, Tie Rod - Left
15	0423-013	2		Nut - Left
16	0405-107	2	S	Tie Rod
17	8420-002	2	/P	Nut - Right
18	0405-082	2	S	Ball Joint, Tie Rod - Right
19	0423-157	4		Nut, Lock
20	0623-175	4		Pin, Cotter

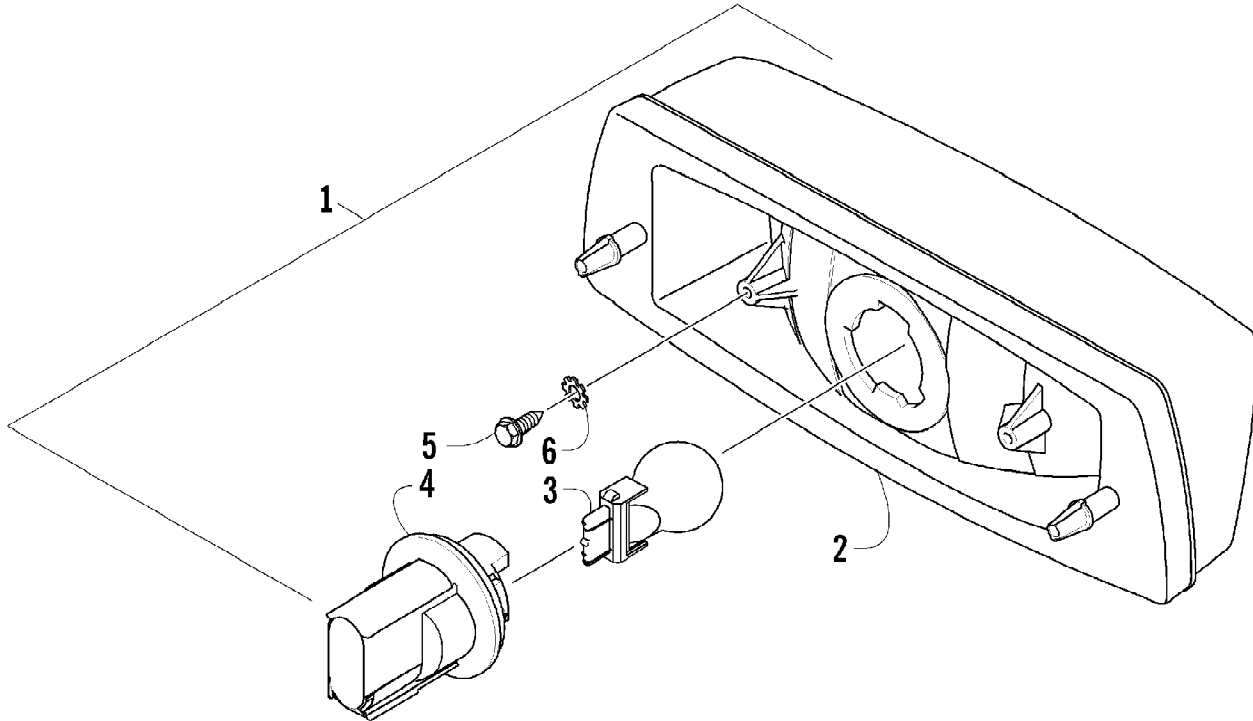 


Ref #	Part Number	Qty	S/P/F	Description
1	0509-022	1		Taillight Assembly (inc. 2-4)
2	0509-025	1		Housing, Taillight
3	0409-056	1		Bulb, Taillight
4	0409-057	1		Socket, Taillight
5	0623-301	2	/P	Screw, Self-Tapping
6	8053-212	2	/P	Washer, Lock - External Tooth

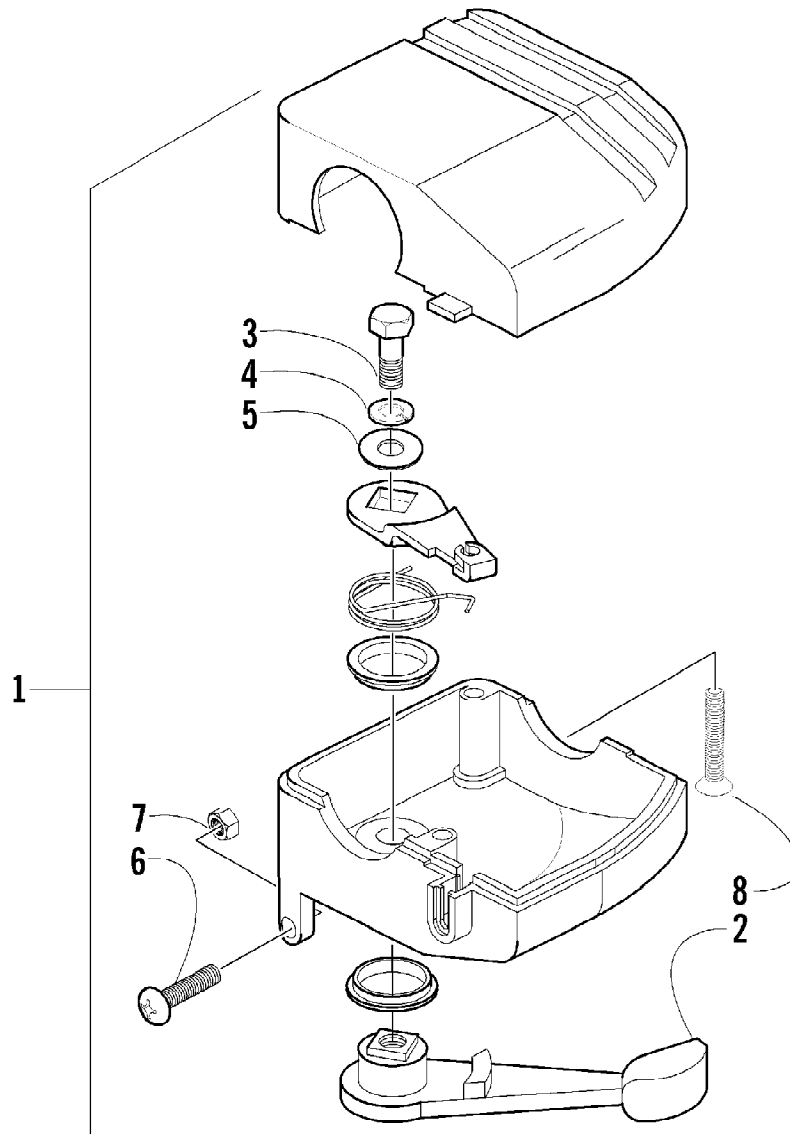 


Ref #	Part Number	Qty	S/P/F	Description
1	3509-003	1	/P	Case, Throttle - Assembly (inc. 2-8)
2	3409-001	1		Lever
3	3004-533	1	S/P	Screw, Cap
4	3004-447	1	/P	Washer, Lock
5	3003-030	1	/P	Washer
6	3423-014	1		Screw
7	3423-327	1		Nut
8	3423-199	2		Screw

 2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 89 of 94
TRANSMISSION ASSEMBLY

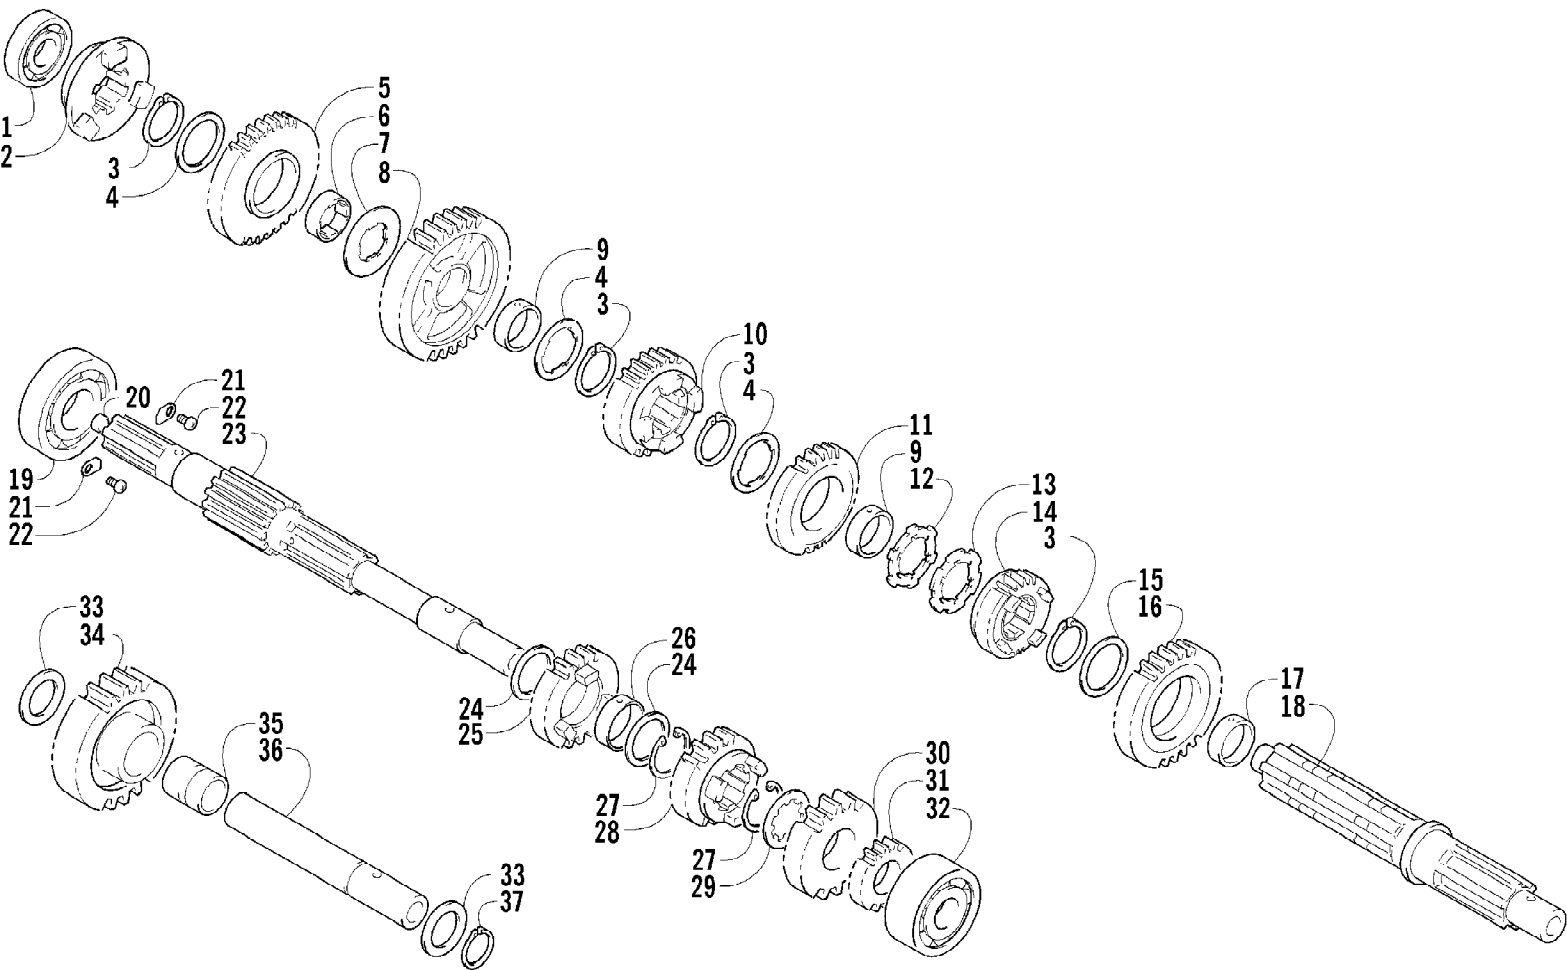

2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 90 of 94
TRANSMISSION ASSEMBLY


Ref #	Part Number	Qty	S/P/F	Description
1	3402-218	1		Bearing
2	3446-297	1		Dog, Reverse
3	3423-066	4	/P	Circlip
4	3423-036	3		Washer, Lock
5	3446-296	1		Gear, Reverse Driven
6	3446-145	1		Bushing
7	3423-263	1		Washer
8	3446-141	1		Gear, 1st Driven
9	3446-273	2	/P	Bushing
10	3446-146	1		Gear, 4th Driven
11	3446-143	1		Gear, 3rd Driven
12	3423-266	1		Washer, Lock
13	3423-262	1		Washer, Lock
14	3446-147	1		Gear, 5th Driven
15	3423-317	1		Washer
16	3446-142	1		Gear, 2nd Driven
17	3402-230	1		Bushing
18	3402-775	1		Driveshaft
19	0691-374	1		Bearing
20	3402-033	1		Plug, Countershaft
21	3446-031	2	/P	Retainer, Bearing
22	3423-370	2		Screw
23	3446-295	1	S	Countershaft
24	3402-210	2		Washer
25	3446-139	1		Gear, 4th Drive
26	3402-229	1		Bushing
27	3423-279	2		Circlip
28	3446-138	1		Gear, 3rd Drive
29	3423-261	1	S	Washer
30	3446-140	1		Gear, 5th Drive
31	3446-137	1		Gear, 2nd Drive
32	3402-224	1		Bearing
33	3402-209	2		Washer
34	3446-149	1		Gear, Reverse Idle
35	3402-228	1		Bushing
36	3446-298	1		Shaft, Reverse Idle
37	3423-518	1		Circlip

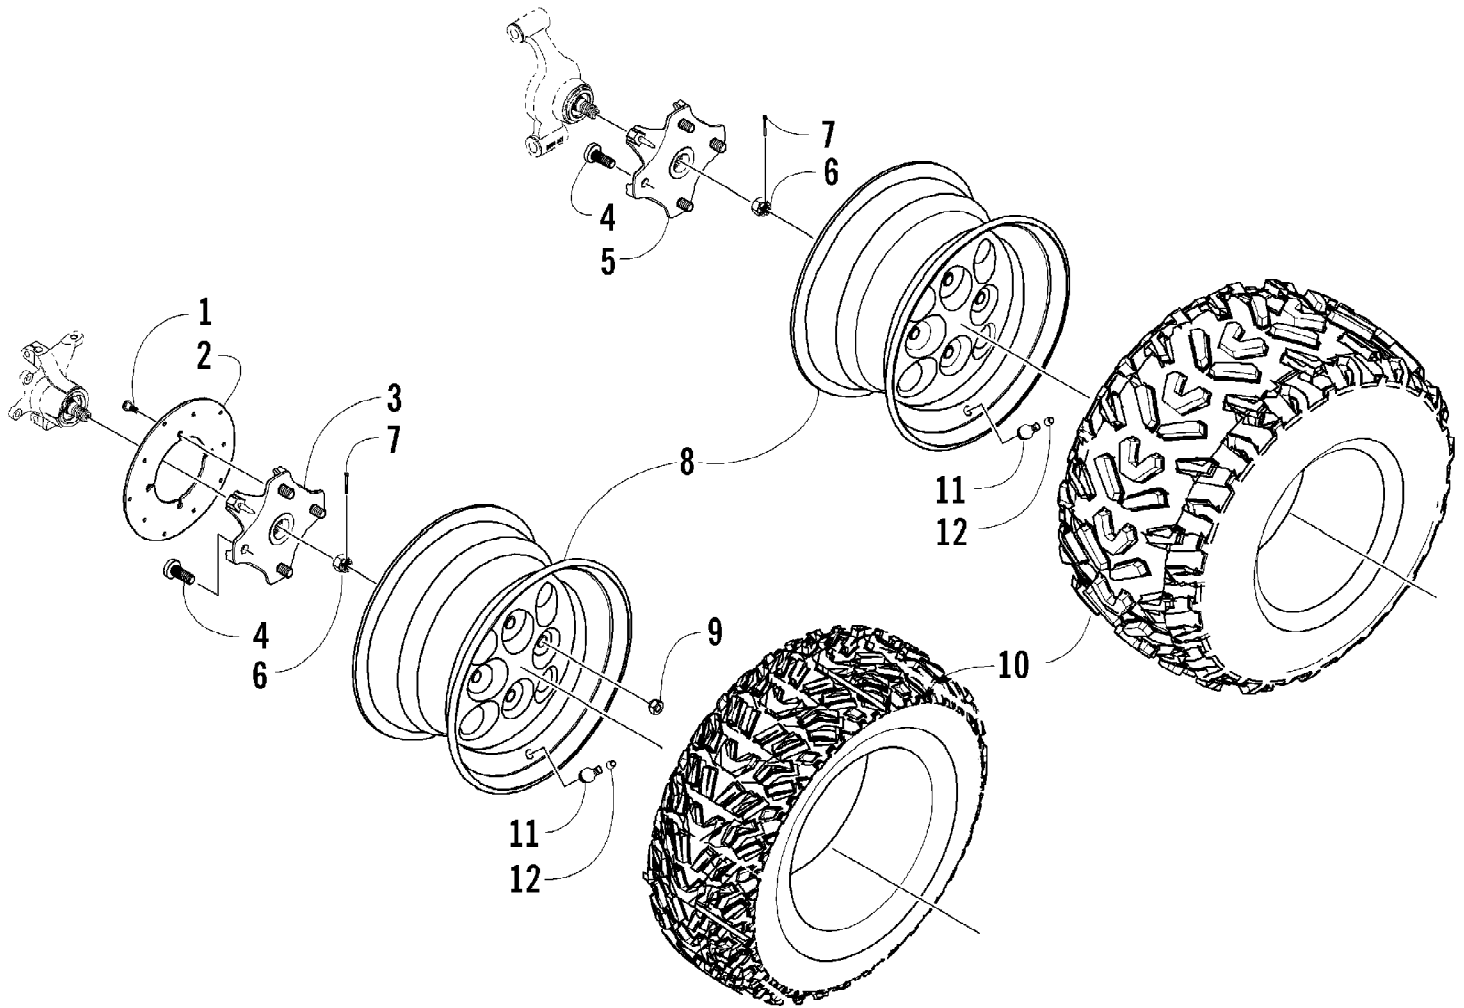 

2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 92 of 94
WHEEL AND TIRE ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0423-557	12		Screw, Shoulder w/Loctite
2	1402-225	3	S	Disc, Brake
3	0502-599	2	S	Hub, Wheel - Front (inc. 4)
4	0402-974	16	/P	Stud, Wheel Hub
5	0502-601	1	S	Hub, Wheel - Rear - Left (inc. 4)
5	0502-599	1	S	Hub, Wheel - Rear - Right (inc. 4)
6	0423-607	4		Nut, Castle
7	0423-407	4		Pin, Cotter
8	0402-856	2		Wheel - Front
8	0402-989	2		Wheel - Rear
9	0423-408	16	/P	Nut, Mounting - Wheel
10	1402-360	2		Tire - Front
10	1402-361	2		Tire - Rear
11	0402-064	4		Stem, Valve (inc. 12)
12	0402-140	4		Cap, Valve Stem

 2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 93 of 94
WIRING HARNESS ASSEMBLY

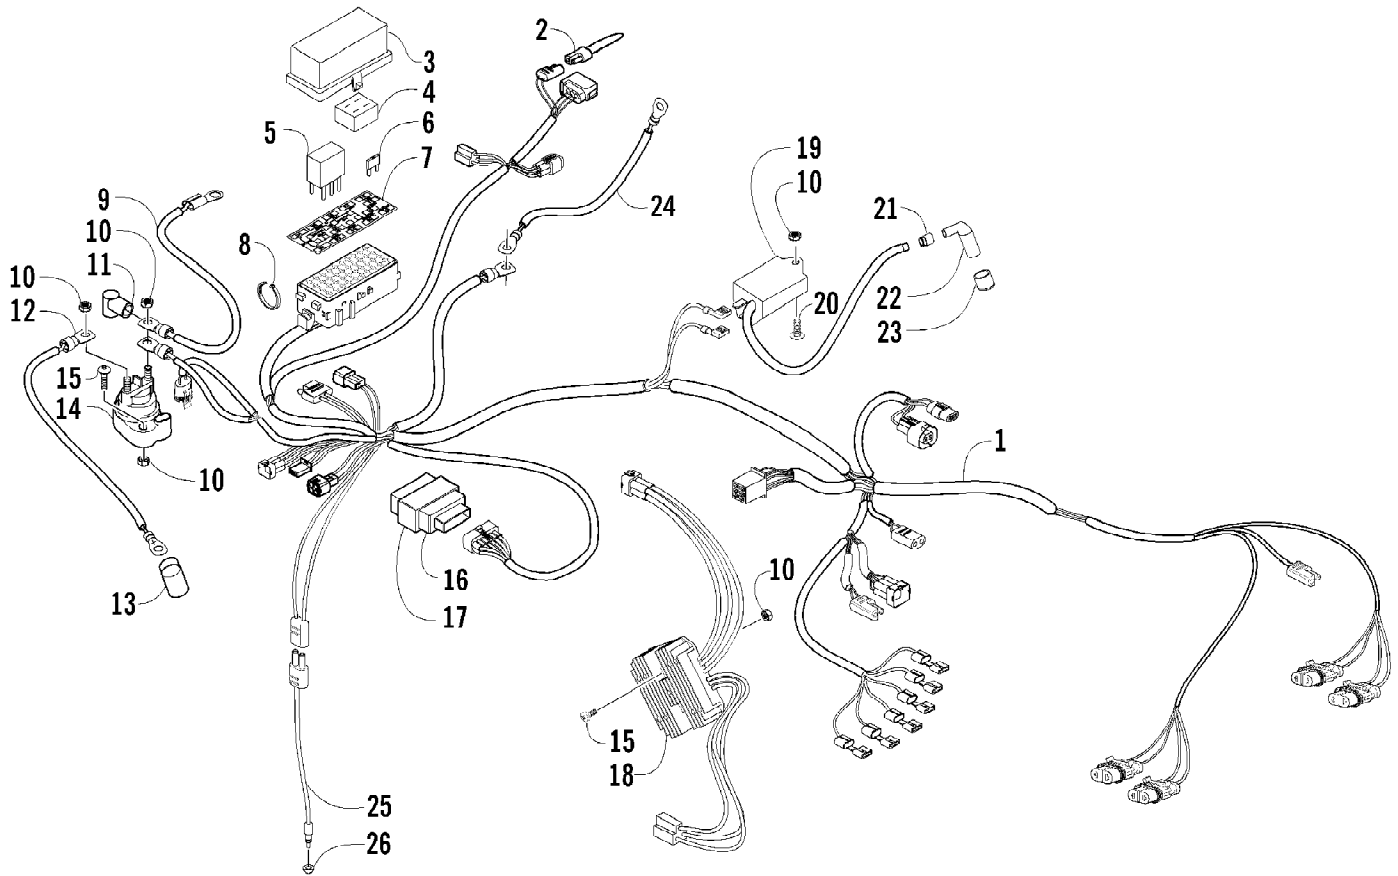

2006 ATV 400 MANUAL TRANSMISSION 4X4 VP GREEN (A2006ABH4AUSG)Page 94 of 94
WIRING HARNESS ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0486-181	1		Harness, Main (inc. 2-7 and two No. 8)
2	0486-164	1		Tether, Accessory Connector
3	0530-008	1		Cover, Fuse Block
4	0430-037	1		Holder, Fuse
5	0430-033	2		Relay
6	0430-032	4		Fuse - 10 Amp
6	0430-031	3		Fuse - 15 Amp
6	0430-030	2		Fuse - 30 Amp
7	0411-838	1		Decal, Fuse Block
8	0123-788	AR	/P	Cable Tie - 7.5 in.
9	0445-053	1	/P	Cable, Electric Start Relay/Starter
10	0623-038	7		Nut w/Washer
11	0645-327	1		Boot, Terminal
12	0445-052	1	/P	Cable, Battery/Electric Start Relay
13	0645-019	1		Boot, Terminal
14	0445-036	1	S	Solenoid
15	8476-625	4		Screw, Machine
16	3402-785	1		CDI Unit
17	3402-684	1		Cushion, CDI
18	3402-682	1		Regulator, Voltage
19	3430-055	1		Coil, Ignition - Assembly
20	8476-620	1		Screw, Machine
21	3430-009	1	/P	Seal, High Tension Wire
22	3430-007	1	/P	Cap, Spark Plug
23	3430-008	1	/P	Seal, Spark Plug
24	0445-054	1	/P	Cable, Battery/Ground
25	0409-009	1		Switch, Brake - Assembly
26	0402-991	1		Retainer, Brake Switch