 



2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4BUS) Page 1 of 93
AIR INTAKE ASSEMBLY

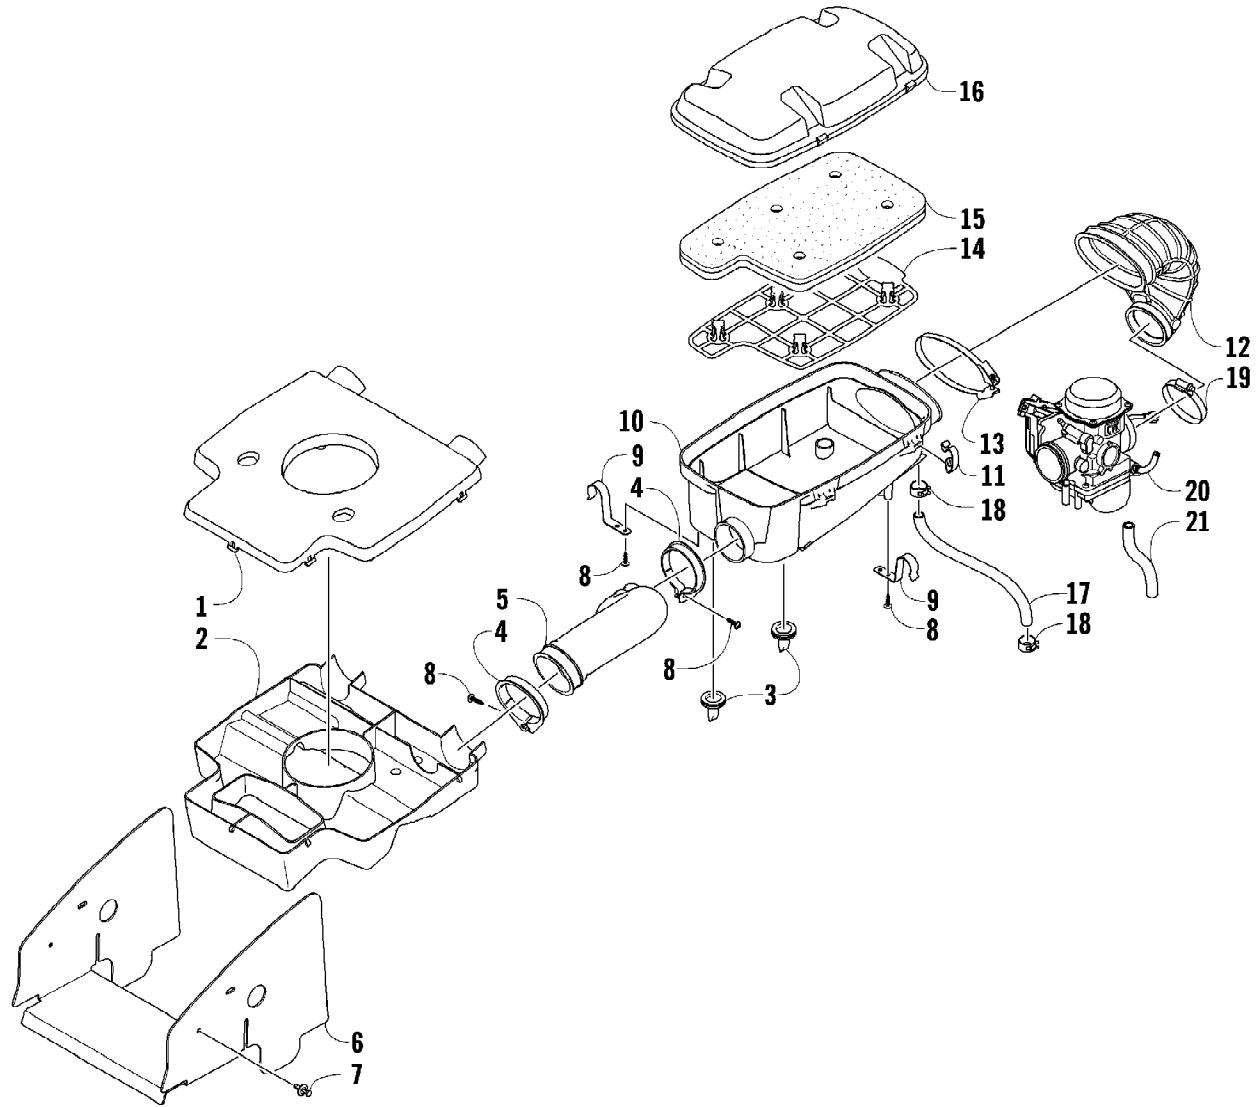

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4BUS) Page 2 of 93
 AIR INTAKE ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0413-091	1		Diverter, Air - Top
2	0413-093	1		Diverter, Air - Bottom
3	0470-442	2	/P	Valve, Drain
4	0423-551	2		Clamp
5	0470-529	1		Boot, Air Intake
6	1406-747	1		Shroud, Splash
7	0623-362	2		Rivet, Reinstallable
8	0423-342	6	/P	Screw, Self-Tapping
9	0423-454	2		Clip, Mounting - Air Intake
10	0470-515	1	S	Housing, Air Intake
11	0423-455	4		Clip, Spring
12	0470-525	1		Boot, Carburetor
13	0423-554	1		Clamp
14	0470-516	1		Screen, Air Filter
15	0470-494	1	S	Filter, Air
16	0470-554	1	S	Cover, Air Intake
17	0410-079	1	S	Hose, Vent - Crankcase
18	0423-045	2		Clamp, Hose
19	0423-019	1		Clamp
20	0470-533	1		Carburetor, CVK36-AE
21	0510-592	1		Hose, Drain


2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4BUS) Page 3 of 93
AUXILIARY BRAKE ASSEMBLY

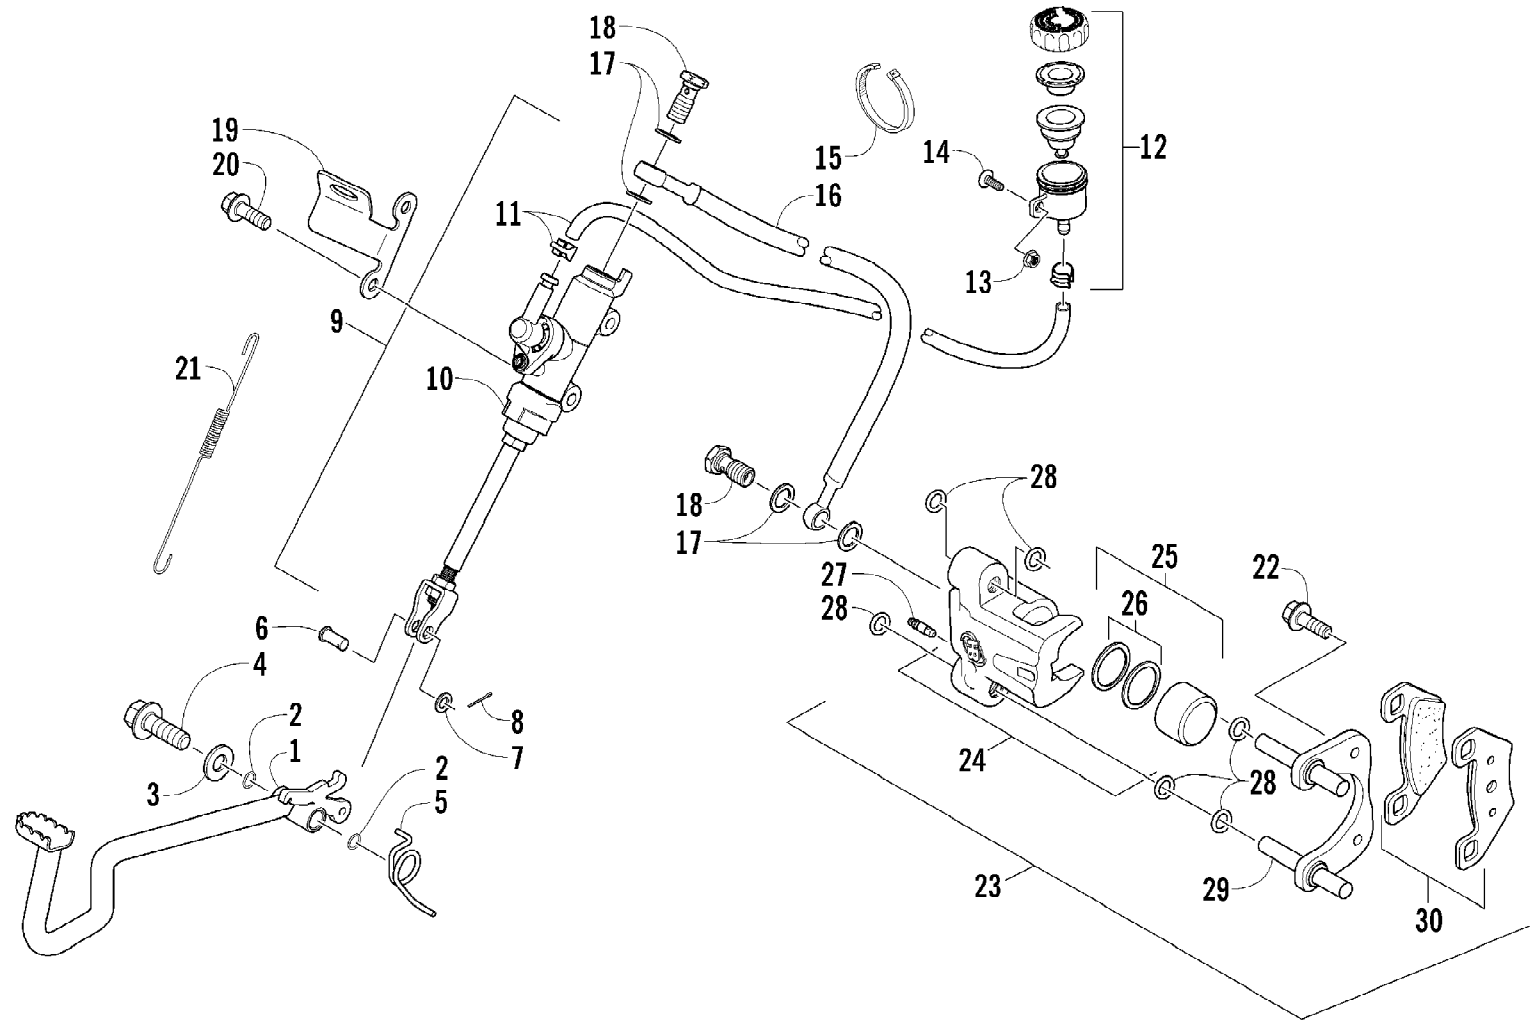

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4BUS) Page 4 of 93
 AUXILIARY BRAKE ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
	0502-939	1		Fully Bled Master Cylinder Replacement Kit
1	0502-805	1		Lever, Brake
2	1602-213	2	/P	O-Ring
3	8050-252	1		Washer
4	8408-816	1		Screw, Cap
5	0502-807	1		Spring, Brake Lever
6	1402-377	1		Pin, Clevis
7	8050-217	1	/P	Washer
8	0402-584	1		Pin, Cotter
9	0502-881	1		Brake Assembly (inc. 10-12)
10	0	1	F	Master Cylinder
11	0502-880	1		Hose, Brake Reservoir
12	0502-877	1		Reservoir, Brake
13	0623-038	1		Nut, Flanged
14	8476-616	1		Screw, Machine
15	0123-788	1	/P	Cable Tie - 7.5 in.
16	1402-417	1		Hose, Brake
17	0423-178	4		Washer, Crush
18	0423-413	2		Bolt, Banjo Fitting
19	0502-840	1		Bracket, Switch
20	8408-625	2		Screw, Cap
21	0502-785	1		Spring, Brake Switch
22	8408-820	2	/P	Screw, Cap
23	0502-602	1	S	Caliper, Brake (inc. 24-30)
24	0502-603	1	S	Housing, Caliper - Assembly - Right Front (inc. 25-27)
25	0502-606	1		Piston/Seal Set (inc. 26)
26	0502-607	1		Seal Set
27	0502-609	1	/P	Valve, Bleed
28	0502-608	1		O-Ring, Guide - Set
29	0502-605	1		Bracket Assembly
30	0502-604	1	S	Pad, Brake - Set

 
2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4BUS) Page 5 of 93
BATTERY ASSEMBLY

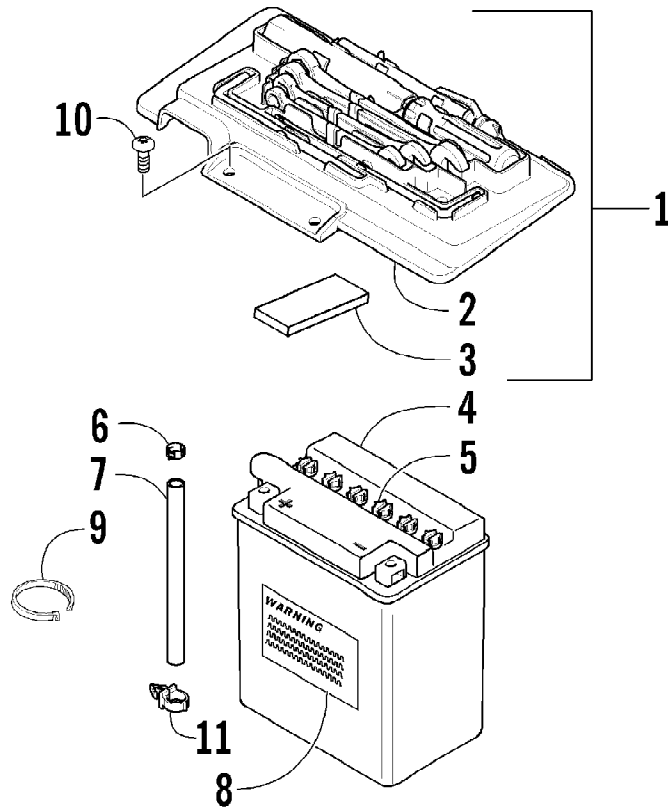

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4BUS) Page 6 of 93
BATTERY ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	5991-395	1	S	Battery Cover/Tool Tray Assembly (inc. 2-3)
2	2406-815	1	/P	Cover, Battery
3	0406-288	2		Pad, Battery
3	0444-122	1	S/P	Kit, Tool Not Illustrated
4	0745-045	1	/P	Battery Assembly (inc. 5-8)
5	0645-045	6		Cap, Battery
6	0645-152	1		Clamp, Hose
7	0645-263	1	/P	Hose, Vent
8	0645-151	1		Label, Warning - Battery
9	0123-903	4		Cable Tie - 11.5 in.
10	8476-616	2		Screw, Machine
11	0623-101	AR		Clip, Retaining

 
2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4BUS) Page 7 of 93
CAM CHAIN ASSEMBLY

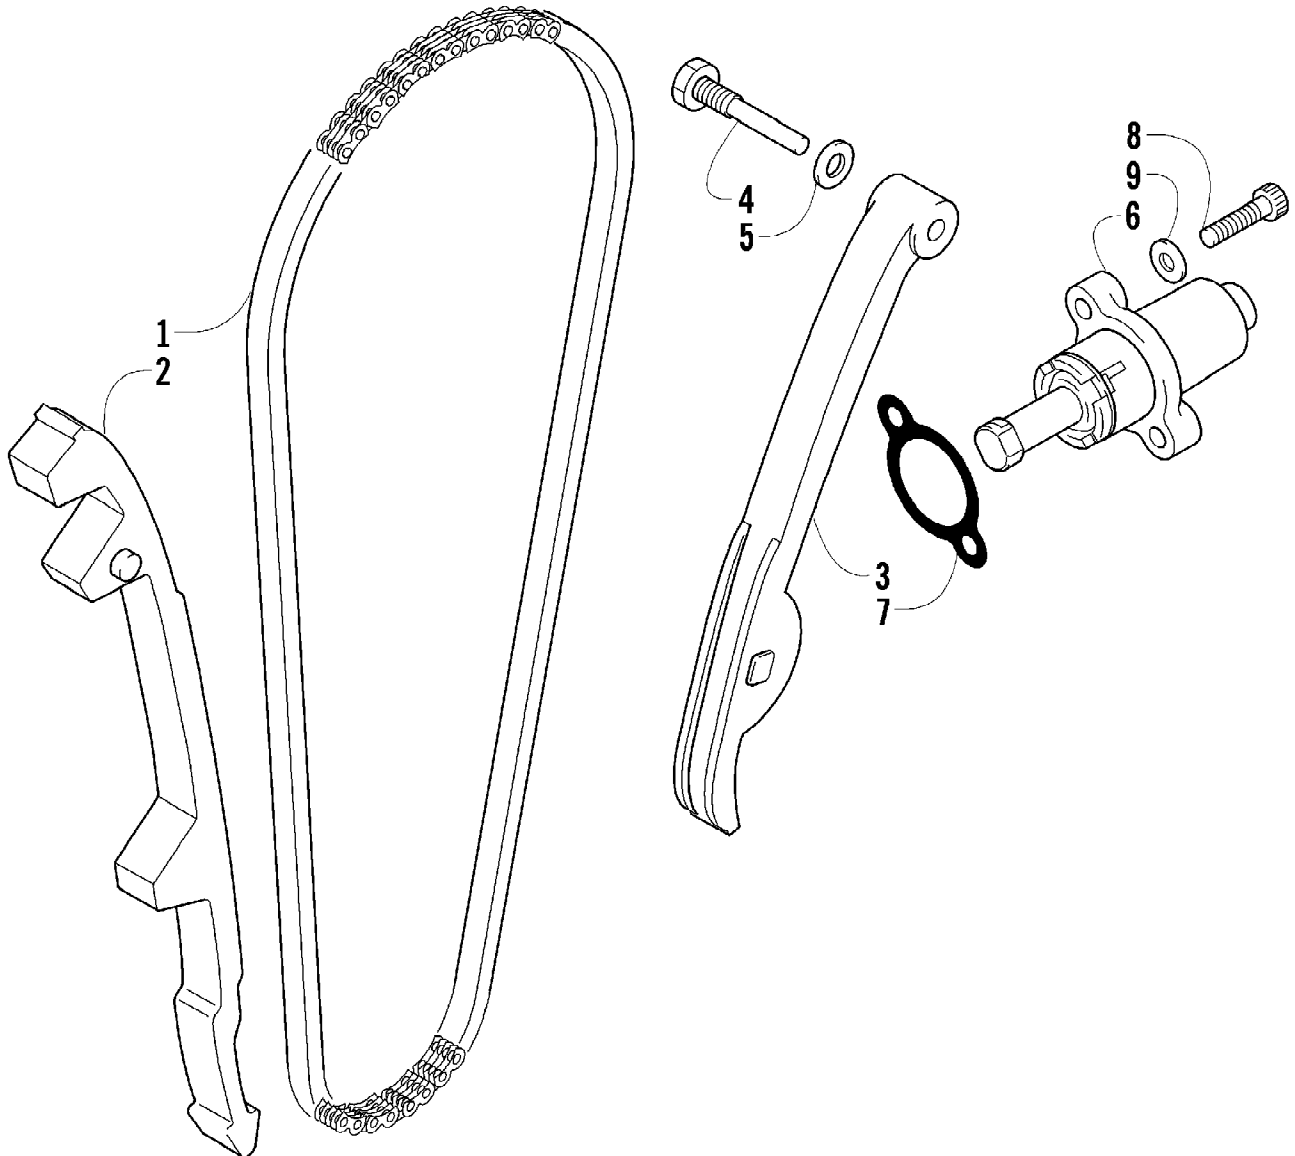

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4BUS) Page 8 of 93
CAM CHAIN ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	3402-353	1		Chain, Cam
2	3402-355	1		Guide, Chain
3	3402-356	1		Tensioner, Chain
4	3423-074	1		Bolt
5	3003-188	1	S/P	Washer
6	3402-136	1		Adjuster, Tensioner - Assembly
7	3402-137	1		Gasket
8	3004-475	2	S	Screw, Cap
9	3003-290	2	/P	Gasket

 
2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4BUS) Page 9 of 93
CAMSHAFT/VALVE ASSEMBLY

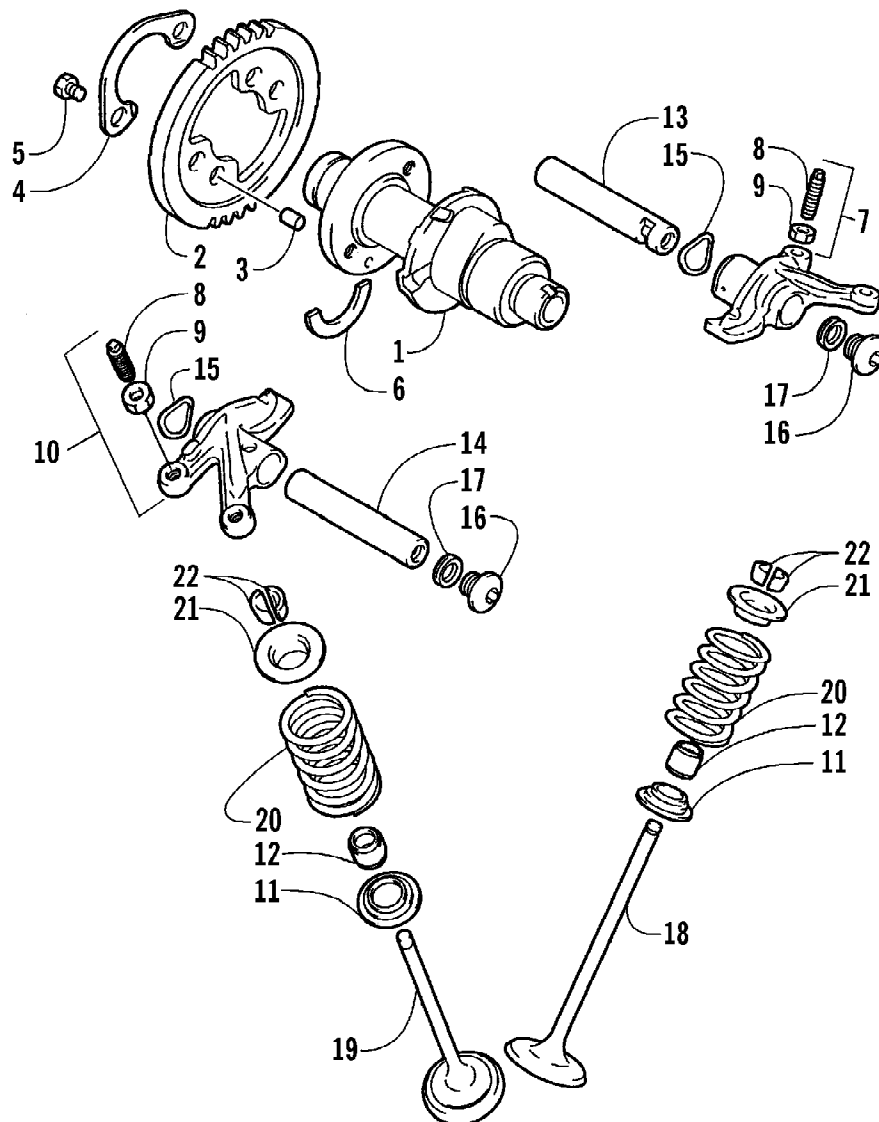

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) Page 10 of 93
 CAMSHAFT/VALVE ASSEMBLY


Ref #	Part Number	Qty	S/P/F	Description
1	3402-723	1	S	Camshaft
2	3402-352	1		Sprocket
3	3423-047	1		Pin
4	3423-073	1		Washer
5	3423-013	2	S	Bolt
6	3423-071	1	/P	C-Ring
7	3402-805	1	/P	Arm, Valve Rocker - Intake (inc. two No. 8-9)
8	3423-075	4		Screw
9	3423-076	4		Nut
10	3402-139	1		Arm, Valve Rocker - Exhaust (inc. two No. 8-9)
11	3402-148	4		Seat, Spring
12	3402-078	4		Seal, Oil
13	3402-140	1		Shaft, Rocker Arm
14	3402-141	1		Shaft, Rocker Arm
15	3423-031	2		Washer
16	3402-040	2	/P	Plug, Shaft
17	3402-012	2		Gasket
18	3402-725	2	/P	Valve, Intake
19	3402-143	2		Valve, Exhaust
20	3402-726	4		Spring, Valve
21	3423-541	4	/P	Retainer, Spring
22	3402-147	8		Cotter, Valve

 2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) 11 of 93
CARBURETOR

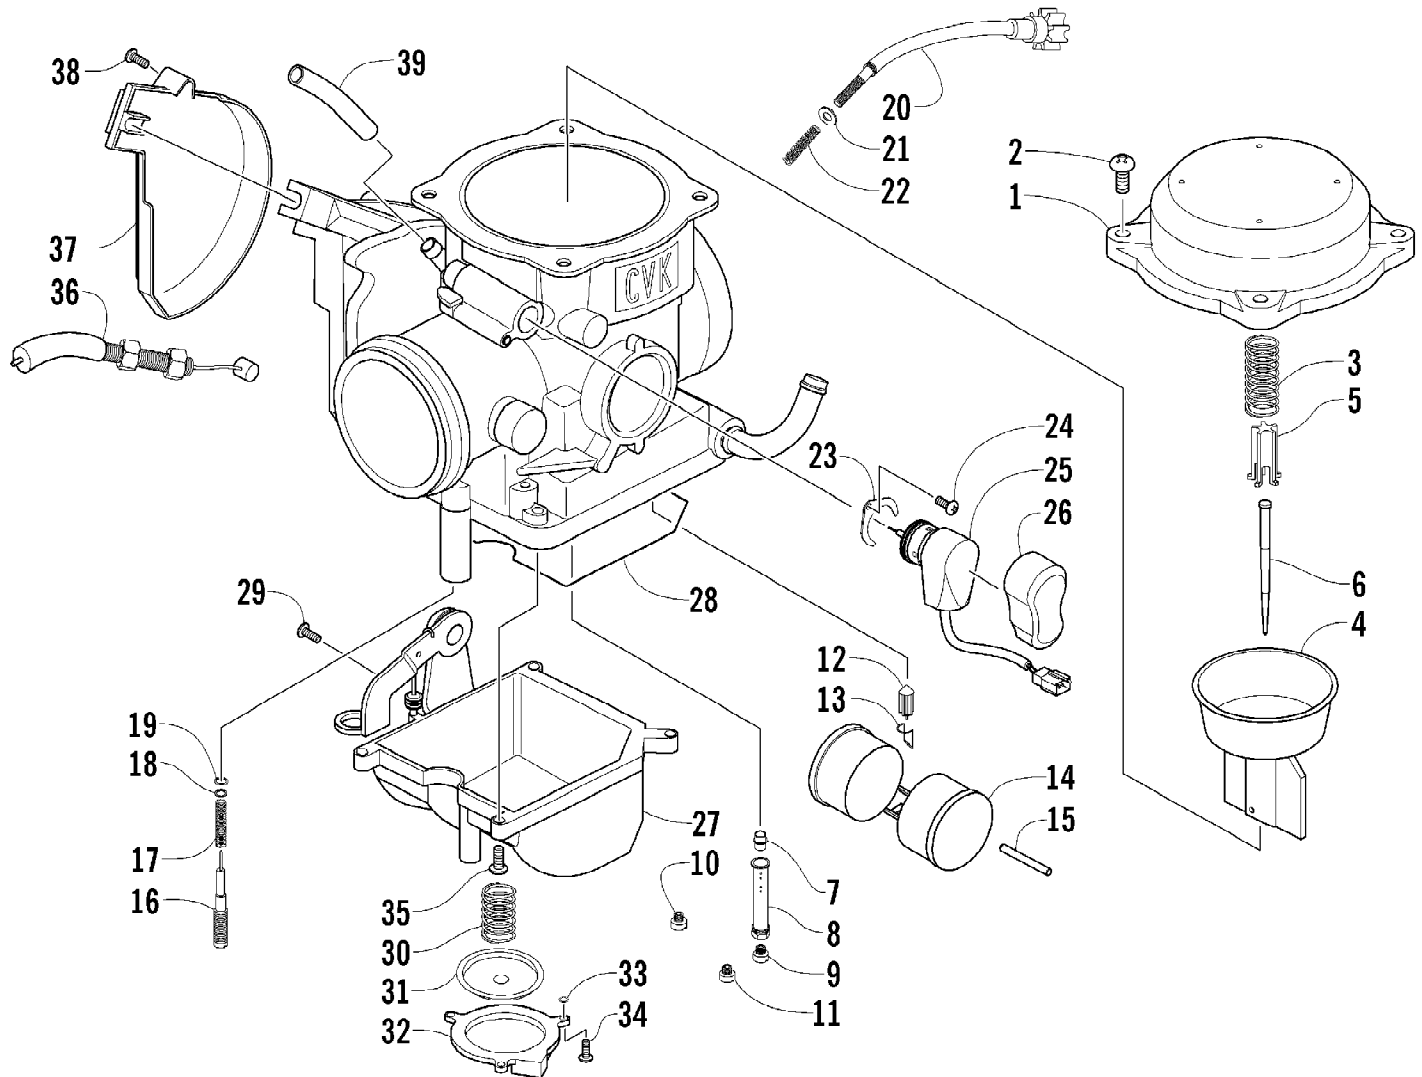

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) (Page 12 of 93)
 CARBURETOR


Ref #	Part Number	Qty	S/P/F	Description
	0470-533	1		Complete Carburetor Assembly CVK36-AE
1	5507-001	1		Cover, Top
2	5507-002	4	/P	Screw, Top Cover
3	5507-173	1	S	Spring
4	5507-099	1		Piston, Vacuum
5	5507-005	1		Seat, Spring
6	5507-184	1		Jet Needle
7	5507-007	1		Needle Jet
8	5507-174	1	S	Holder, Needle Jet
9	5507-043	1		Main Jet - 142
9	5507-044	1		Main Jet - 140
9	5507-041	1		Main Jet - 147
9	5507-086	1		Main Jet - 148
9	5507-009	1	/P	Main Jet - 150
10	5507-101	1	S	Slow Jet
11	5507-112	1		Starter Jet - 85
12	5507-183	1		Valve, Float - Set (inc. 13)
13	0	1	F	Clip
14	5507-039	1		Float Set (inc. 15)
15	0	1	F	Pin, Float
16	5507-111	1		Screw, Pilot - Set (inc. 17-19)
17	0	1	F	Spring
18	0	1	F	Washer
19	0	1	F	O-Ring
20	5507-027	1		Screw, Idle Adjust
21	5507-028	1		Washer
22	5507-029	1		Spring
23	5507-115	1		Plate
24	5507-117	1	/P	Screw
25	5507-113	1		Choke, Electric
26	5507-114	1		Cover, Electric Choke
27	5507-181	1		Chamber, Float - Assembly (inc. 28-34)
28	5507-067	1	/P	O-Ring, Float Chamber
29	5507-050	1	/P	Screw, Drain
30	5507-032	1		Spring
31	5507-031	1	S	Diaphragm Assembly
32	0	1	F	Housing, Pump
33	5507-034	1		U-Ring
34	5507-035	3		Screw
35	5507-017	4	/P	Screw
36	0487-021	1	S	Cable, Throttle
37	5507-036	1		Cover
38	5507-037	1	/P	Screw
39	0410-056	1		Hose, Vent

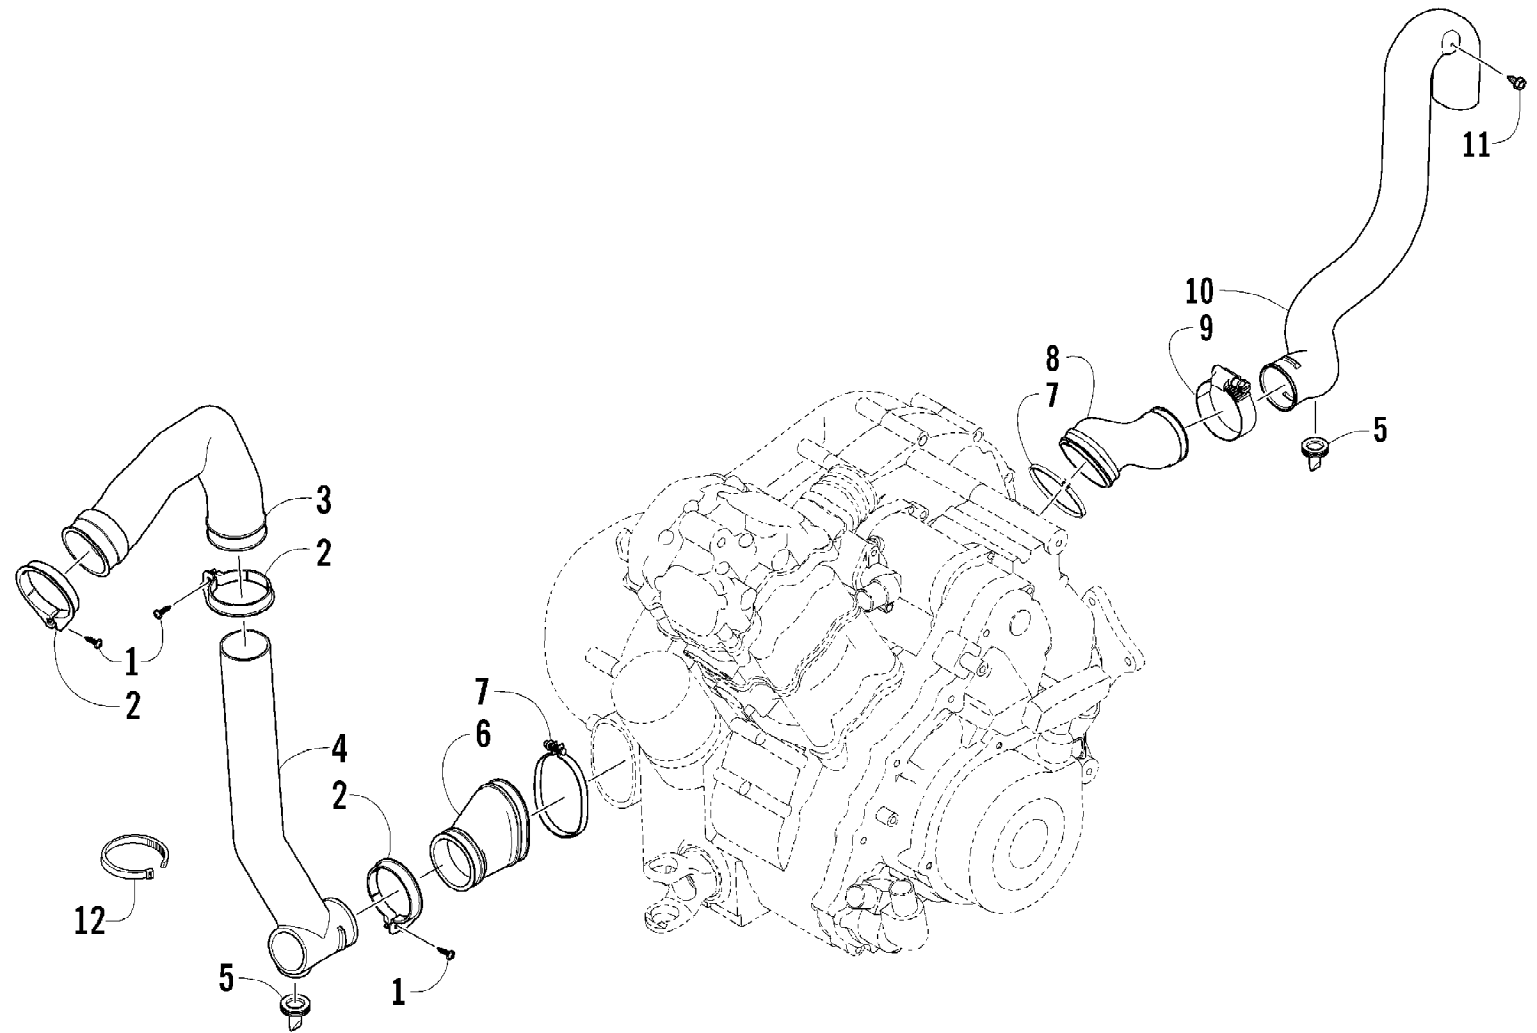 

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) 14 of 93
CASE/BELT COOLING ASSEMBLY


Ref #	Part Number	Qty	S/P/F	Description
1	0423-342	3	/P	Screw, Self-Tapping
2	0423-551	3		Clamp
3	0413-092	1		Boot, Air-In
4	0513-010	1		Duct, Belt Cooling - Front
5	0470-442	2	/P	Valve, Drain
6	0413-049	1		Boot, Duct - Front
7	3402-449	2	/P	Clamp
8	0413-055	1		Boot, Duct - Rear
9	0423-380	1	/P	Clamp
10	0413-106	1		Duct, Belt Cooling - Rear
11	0623-301	1	/P	Screw, Self-Tapping
12	0123-903	1		Cable Tie - 11.5 in.

 2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) (Page 15 of 93)
CLUTCH/V-BELT/MAGNETO COVER ASSEMBLY

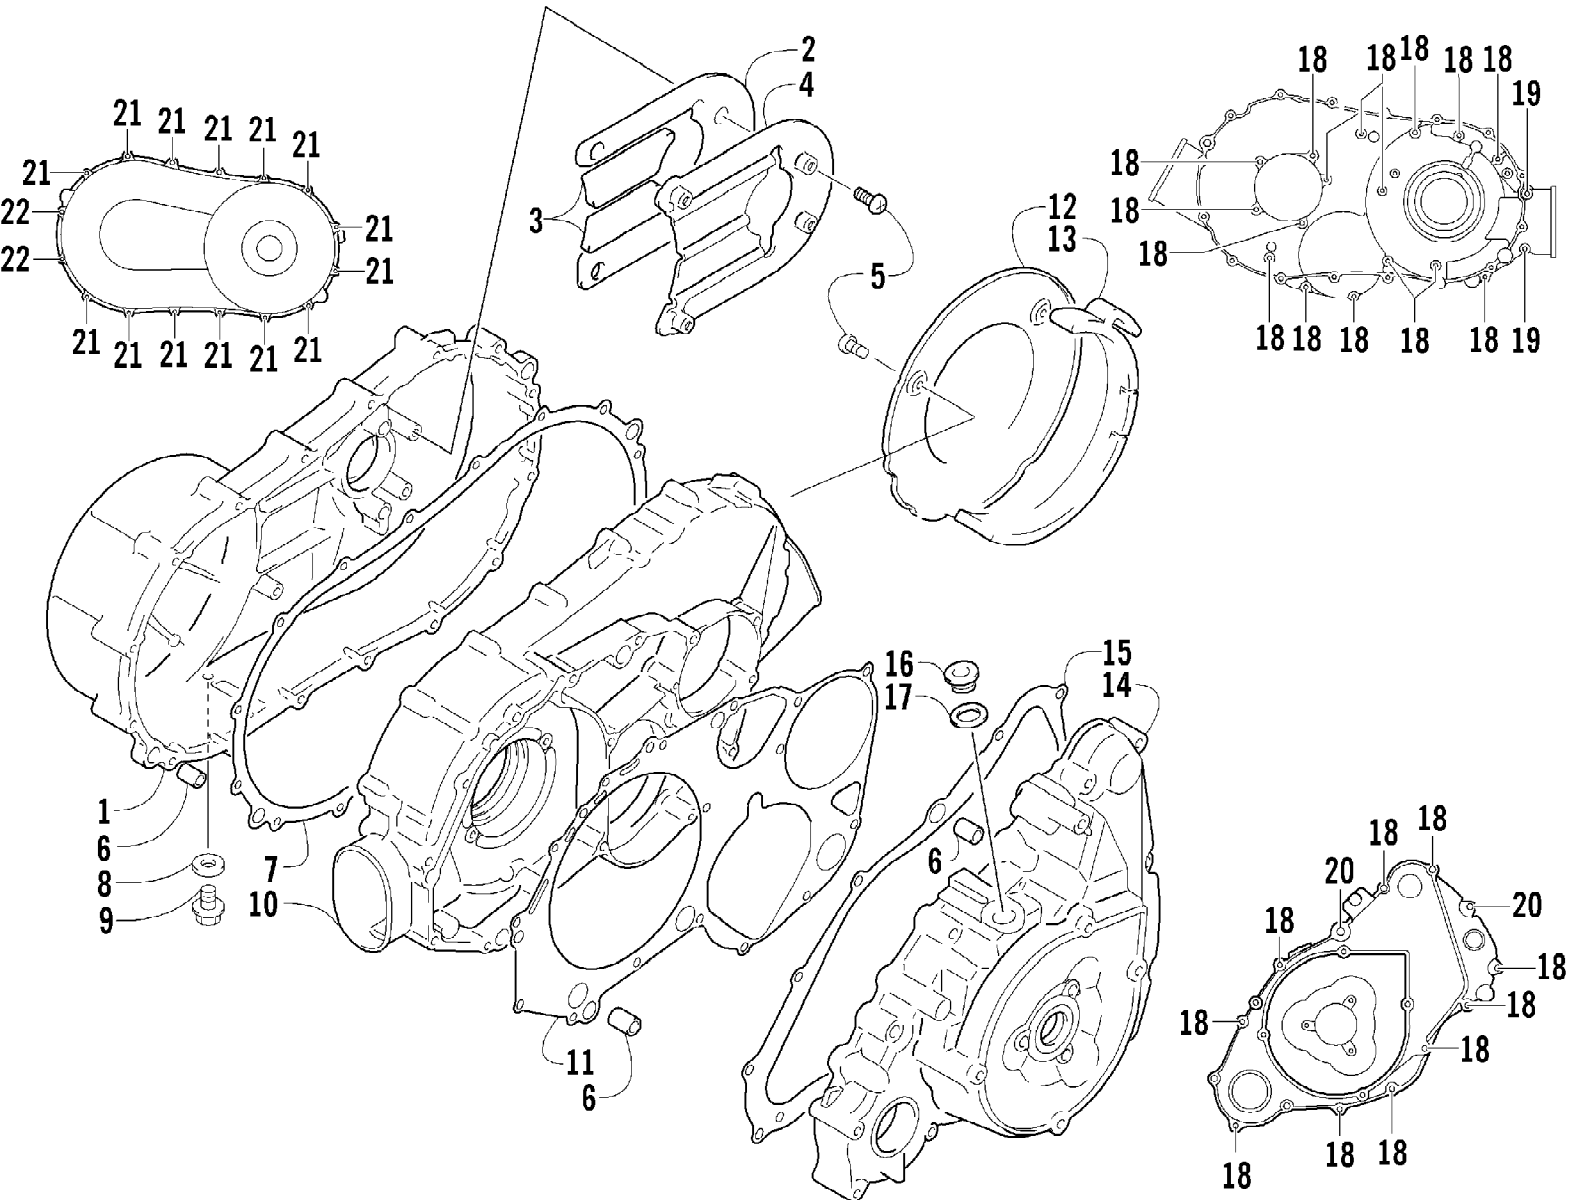

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) (Page 16 of 93)
CLUTCH/V-BELT/MAGNETO COVER ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	3402-710	1		Cover, V-Belt
2	3402-711	1		Damper, V-Belt Cover
3	3402-712	2		Damper, V-Belt Cover
4	3402-713	1		Plate, V-Belt Cover
5	3423-435	7		Screw
6	3423-088	6		Pin, Dowel
7	3402-443	1		Gasket, V-Belt Cover
8	3402-444	1		Gasket, Drain Plug
9	3004-705	1	S	Plug, Drain
10	3402-709	1	/P	Cover, Clutch
11	3402-441	1		Gasket, Clutch Cover
12	3402-445	1		Plate, Air Intake
13	3402-699	1	/P	Cushion, Air Intake Plate
14	3402-714	1		Cover, Magneto
15	3402-715	1		Gasket, Magneto Cover
16	3402-041	1	S	Plug, Oil Filler
17	3402-013	1	/P	Gasket, Oil Filler Plug
18	3423-098	26	S	Bolt
19	3423-092	2	S	Bolt
20	3004-756	2	S	Bolt
21	3423-091	14	S	Bolt
22	3423-119	2	S	Bolt

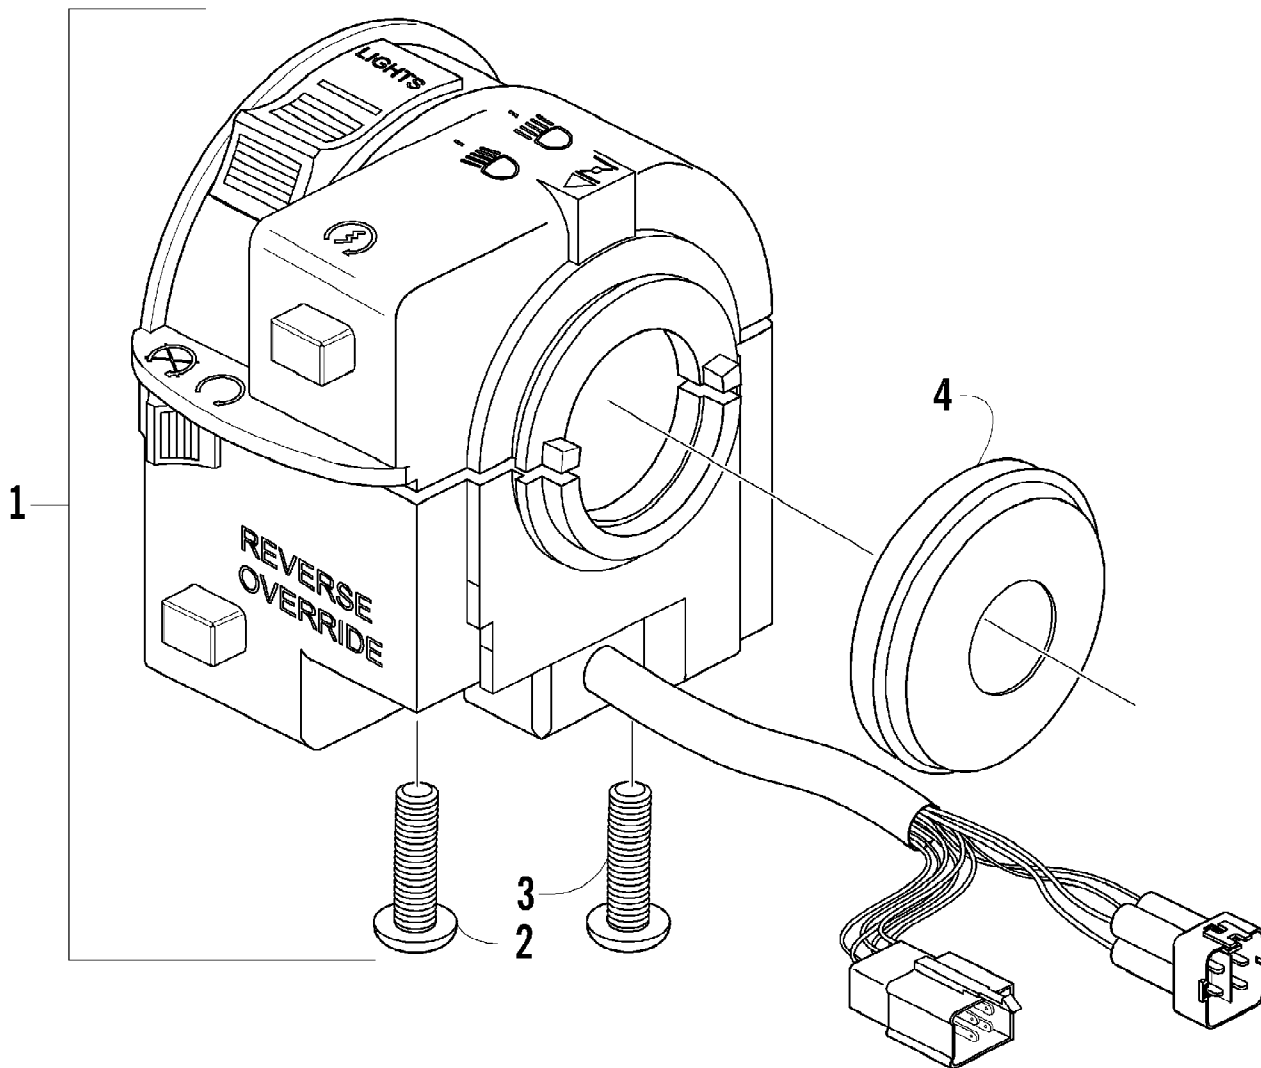 

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4BPSG)18 of 93
 CONTROL SWITCH HOUSING ASSEMBLY


Ref #	Part Number	Qty	S/P/F	Description
1	0509-014	1		Switch, Control - Assembly (inc. 2-4)
2	0409-027	1		Screw, Machine
3	0409-028	1		Screw, Machine
4	3409-019	1		Cover, Switch Housing



2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) (Page 20 of 93)
 COOLING ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0413-117	1		Radiator Assembly (inc. 2-13)
2	0413-043	1	S	Radiator
3	0413-007	1		Screen, Radiator
4	0413-002	1	S	Cap, Radiator
5	0423-030	2		Grommet
6	0610-016	AR	/P	Hose - 25 ft
7	0413-046	1		Shroud, Fan
8	0413-044	1	S	Fan, Cooling
9	8475-512	12		Screw, Machine
10	0423-351	1		Clamp, Wire
11	0123-397	1		Clamp, Cable
12	0413-045	1		Sender, Temperature - Coolant
13	0423-390	1	S	O-Ring
14	0423-484	2		Screw, Shoulder
15	0623-038	2		Nut w/Washer
16	0423-028	2		Bushing, Stem
17	0410-002	1		Hose, Coolant - Upper
18	0410-022	1		Hose, Coolant - Crossover
19	0410-041	1		Hose, Coolant - Lower
20	0423-496	6		Clamp, Hose
21	0623-751	1		Cable Tie

 
2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) (Page 21 of 93)
CRANK BALANCER ASSEMBLY

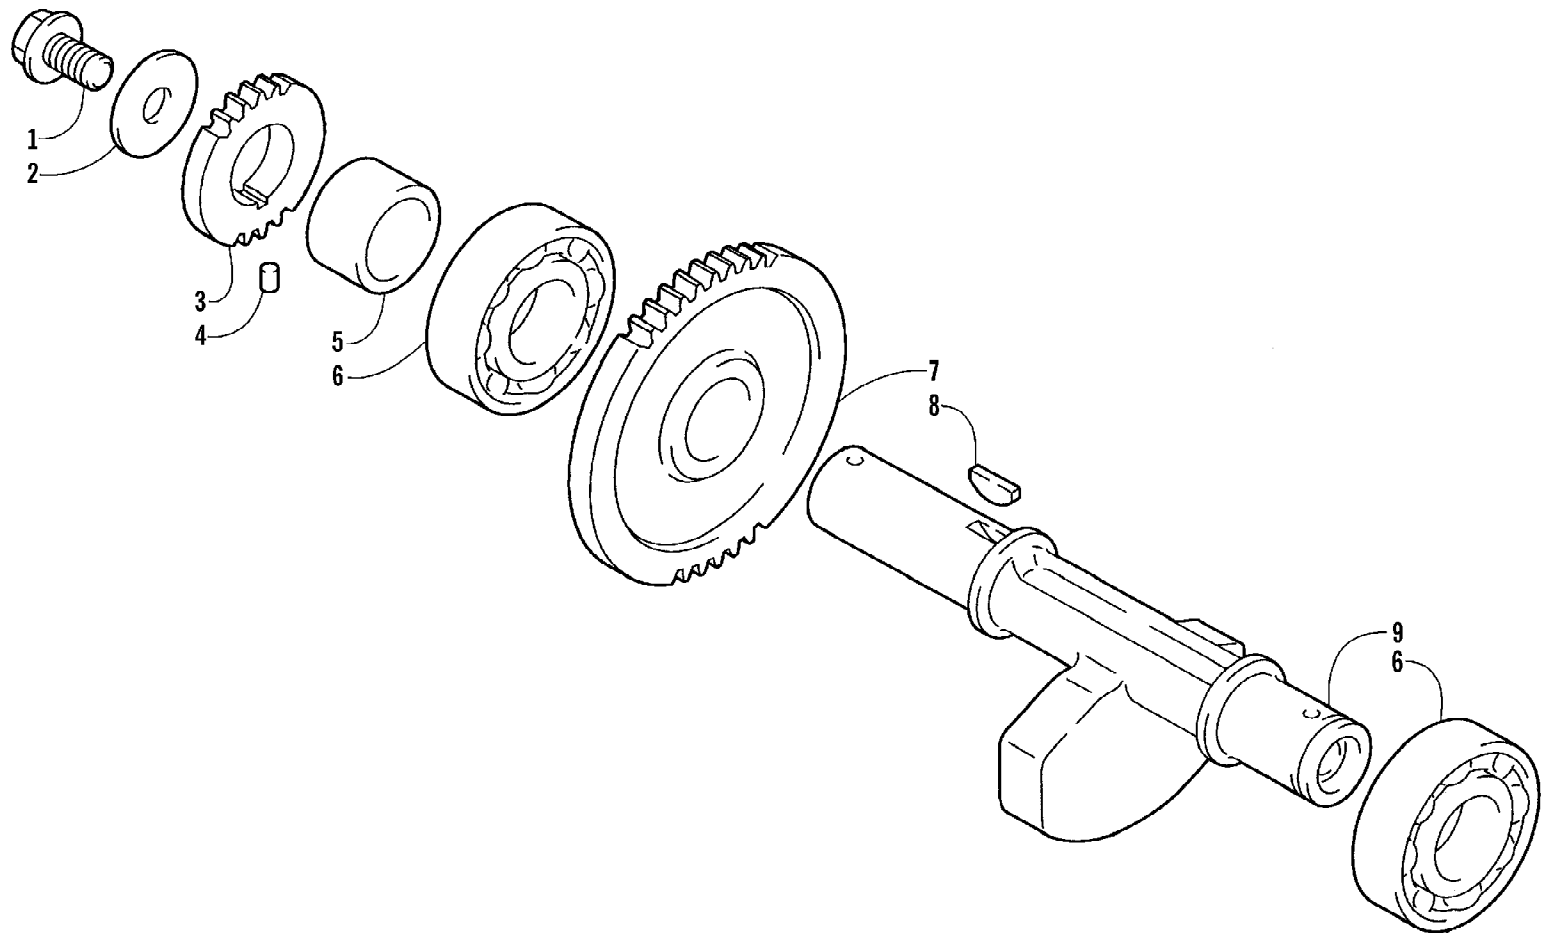

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4BPSG) 22 of 93
 CRANK BALANCER ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	3423-555	1		Bolt
2	3423-401	1		Washer
3	3402-390	1		Gear, Oil Pump Drive
4	3423-110	1		Pin
5	3402-461	1		Spacer
6	3402-050	2		Bearing
7	3402-722	1		Gear, Driven
8	3004-540	1	/P	Key
9	3402-458	1		Balancer, Crank

 
2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) (Page 23 of 93)
CRANKCASE ASSEMBLY

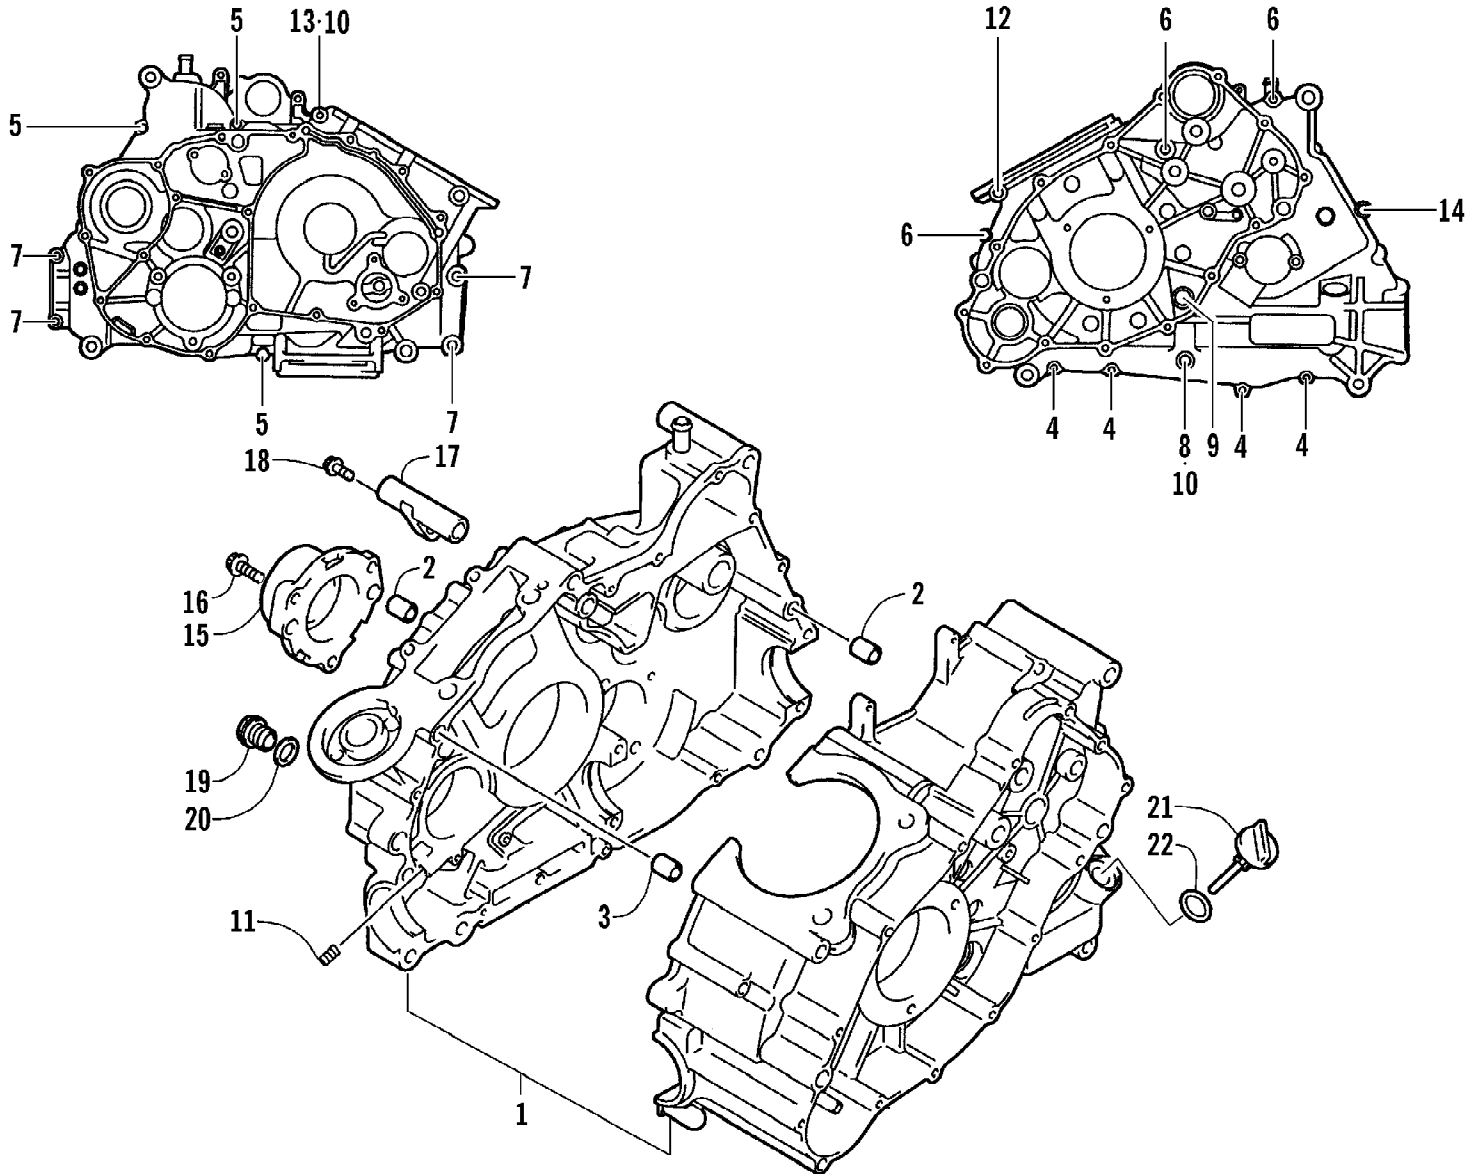

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) Page 24 of 93
CRANKCASE ASSEMBLY


Ref #	Part Number	Qty	S/P/F	Description
1	3402-708	1	/P	Crankcase Assembly (inc. two No. 2 and 3-14)
2	3423-088	4		Pin, Dowel
3	3004-822	1		Pin, Dowel
4	3423-091	4	S	Bolt
5	3423-119	3	S	Bolt
6	3423-092	3	S	Bolt
7	3004-880	4		Bolt
8	3005-332	1		Bolt
9	3423-385	1		Bolt
10	3402-436	2	/P	Gasket
11	3423-386	1		Plug
12	3423-387	1		Bolt
13	3423-388	1		Bolt
14	3423-508	1		Bolt
15	3402-439	1		Housing, Secondary Shaft Bearing
16	3423-506	3	/P	Bolt
17	3402-437	1		Pipe, Breather
18	3423-389	1		Bolt, Breather Pipe
19	3402-214	1		Plug, Oil Pressure
20	3402-012	1		Gasket, Oil Pressure Plug
21	3402-438	1		Stick, Oil Level
22	3423-055	1		O-Ring, Oil Level Stick

 2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) Page 25 of 93
CRANKSHAFT ASSEMBLY

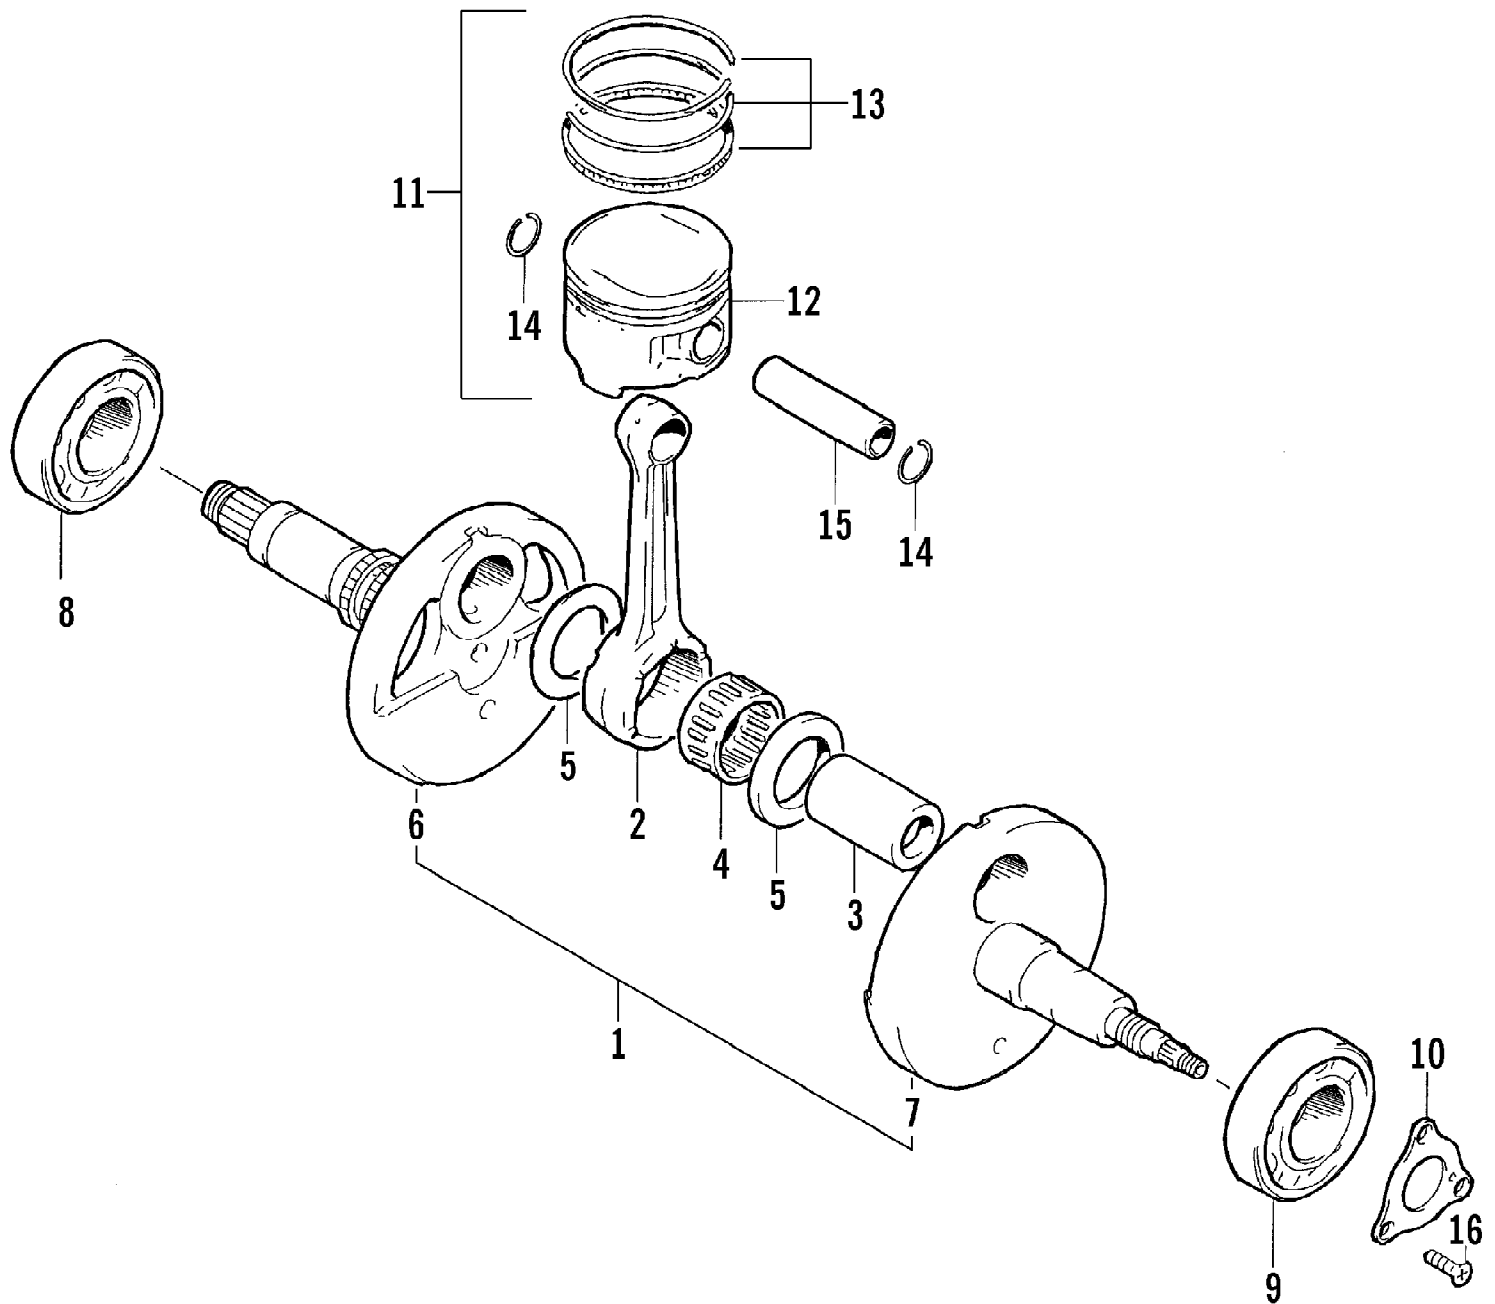

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) Page 26 of 93
 CRANKSHAFT ASSEMBLY


Ref #	Part Number	Qty	S/P/F	Description
1	3403-018	1	/P	Crankshaft Assembly (inc. 2-7)
2	3402-376	1		Rod, Connecting
3	3402-377	1		Pin, Crank
4	3402-717	1	/P	Bearing
5	3423-351	2		Washer
6	3403-025	1		Crankshaft - Right
7	3402-705	1	/P	Crankshaft - Left
8	3402-058	1		Bearing - Right
9	3402-054	1		Bearing - Left
10	3402-188	1	/P	Retainer, Oil Seal - Left
11	3402-788	1		Piston Set (inc. 12-14)
12	3402-719	1		Piston
13	3402-720	1		Ring, Piston - Set
14	3423-344	2		Circlip, Piston Pin
15	3402-375	1		Pin, Piston
16	3423-018	3		Screw

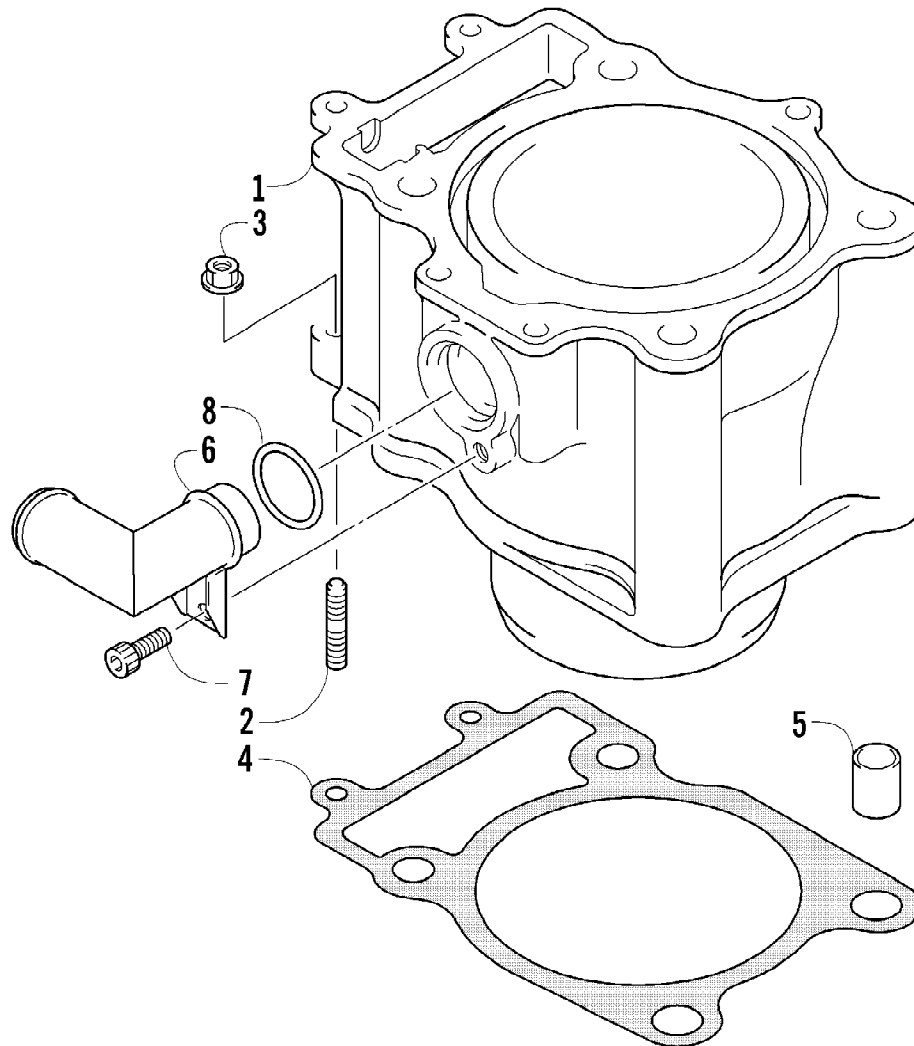 

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4BPSG)
 CYLINDER ASSEMBLY Page 28 of 93


Ref #	Part Number	Qty	S/P/F	Description
1	3402-707	1		Cylinder
2	3423-384	2	S	Bolt, Stud
3	3004-488	2	S/P	Nut
4	3402-365	1	/P	Gasket, Cylinder
5	3423-088	2		Pin, Dowel
6	3413-013	1		Union, Water Hose
7	3423-121	1	S	Screw, Cap
8	3423-058	1		O-Ring

 2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) (Page 29 of 93)
CYLINDER HEAD ASSEMBLY

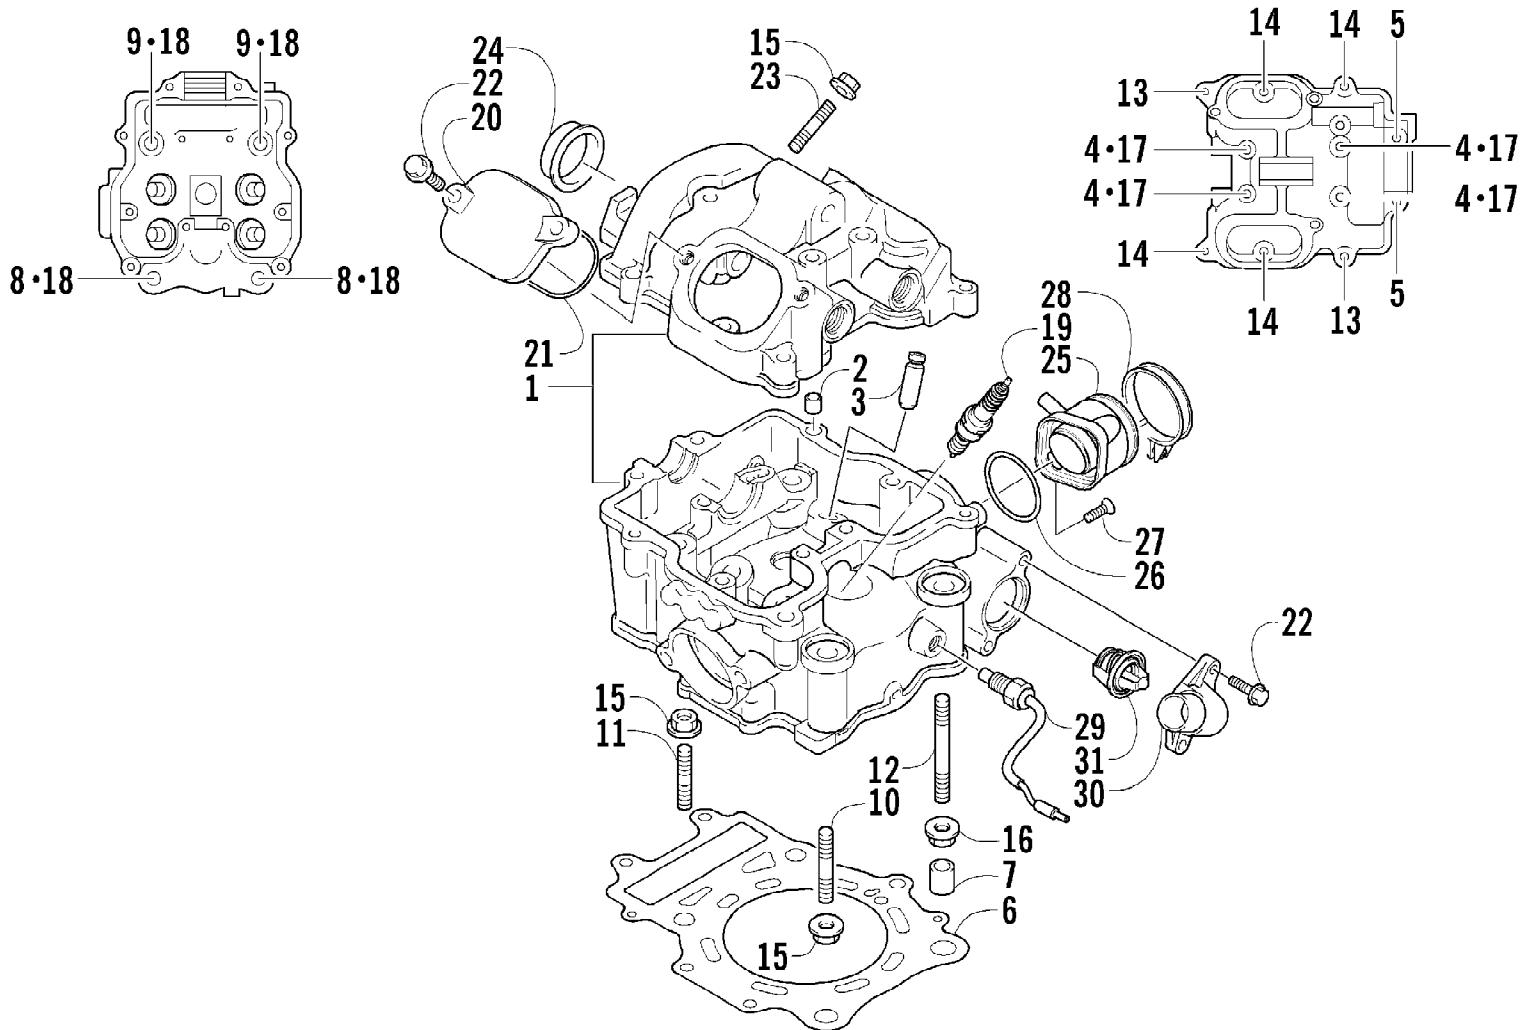

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) 30 of 93
CYLINDER HEAD ASSEMBLY


Ref #	Part Number	Qty	S/P/F	Description
1	3402-098	1		Head, Cylinder - Assembly (inc. 2-5)
2	3423-043	2	/P	Pin, Dowel
3	3402-099	4		Guide, Valve
4	3423-006	4		Screw, Cap
5	3008-376	2	S	Screw, Cap
6	3402-362	1		Gasket, Cylinder Head
7	3423-088	2		Pin, Dowel
8	3423-015	2		Screw, Cap
9	3423-016	2		Screw, Cap
10	3423-089	2	S	Bolt, Stud
11	3423-087	2	S	Bolt, Stud
12	3423-203	1	S/P	Bolt, Stud
13	3423-007	2	S	Screw, Cap
14	3004-376	4	S/P	Screw, Cap
15	3004-488	5	S/P	Nut
16	3004-326	1	S/P	Nut
17	3003-290	4	/P	Gasket
18	3402-010	4		Gasket, Head Nut
19	0217-632	1		Spark Plug (NGK CR6E)
20	3402-100	2		Cap, Inspection
21	3402-101	2		O-Ring
22	3004-341	5	S/P	Screw, Cap
23	3423-383	1		Bolt, Stud
24	3402-035	1		Plug, Cylinder Head
25	0570-092	1		Manifold, Intake
26	0470-531	1		O-Ring
27	8476-620	2		Screw, Machine
28	0423-317	1	/P	Clamp
29	3530-038	1	S	Switch, Water Temperature - Assembly
30	3413-004	1		Cover, Thermostat
31	3413-012	1		Thermostat
	3402-048	1		Plug, Frost Not Illustrated

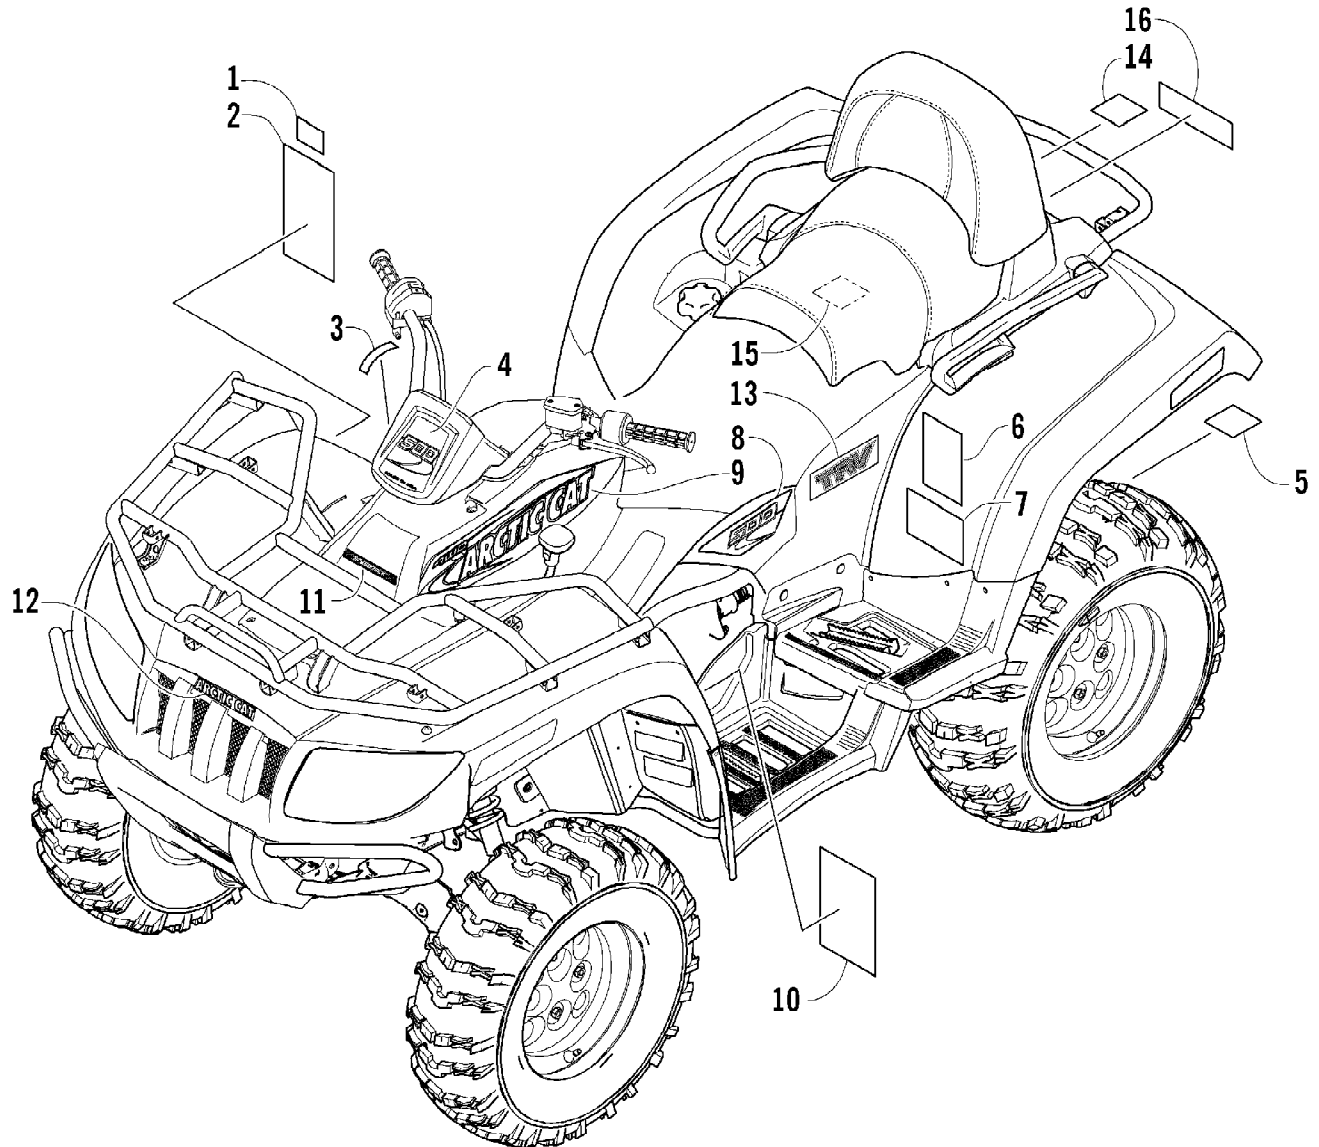 

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4BPSG) 32 of 93
 DECALS

Ref #	Part Number	Qty	S/P/F	Description
1	1411-250	1	F	Decal, Warning - Reverse/Pre-Ride
2	0411-894	1		Decal, Warning - Hill
3	0411-426	1		Decal, Warning - Clutch Cover
4	1411-075	1		Decal, Instrument Pod
5	1411-077	1		Decal, Warning - Towing
6	0411-833	1		Decal, Passenger
7	0411-832	1		Decal, Warning - Tire Pressure
8	1411-260	1		Decal, Side - Lower Right
8	1411-261	1		Decal, Side - Lower Left
9	1411-016	1		Decal, Side - Upper Right
9	1411-017	1		Decal, Side - Upper Left
10	0411-753	1	F	Decal, Warning - Age/General
11	1411-050	1	/P	Decal, "Speedrack"
12	0411-839	1		Decal, Front
13	1411-266	2		Decal, Graphic - TRV
14	1411-251	1		Decal, Warning - Seat/Passenger
15	1411-269	1		Decal, Warning - Passenger
16	0411-814	1	/P	Decal, "Arctic Cat" - White

 
2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) 33 of 93
ENGINE AND EXHAUST

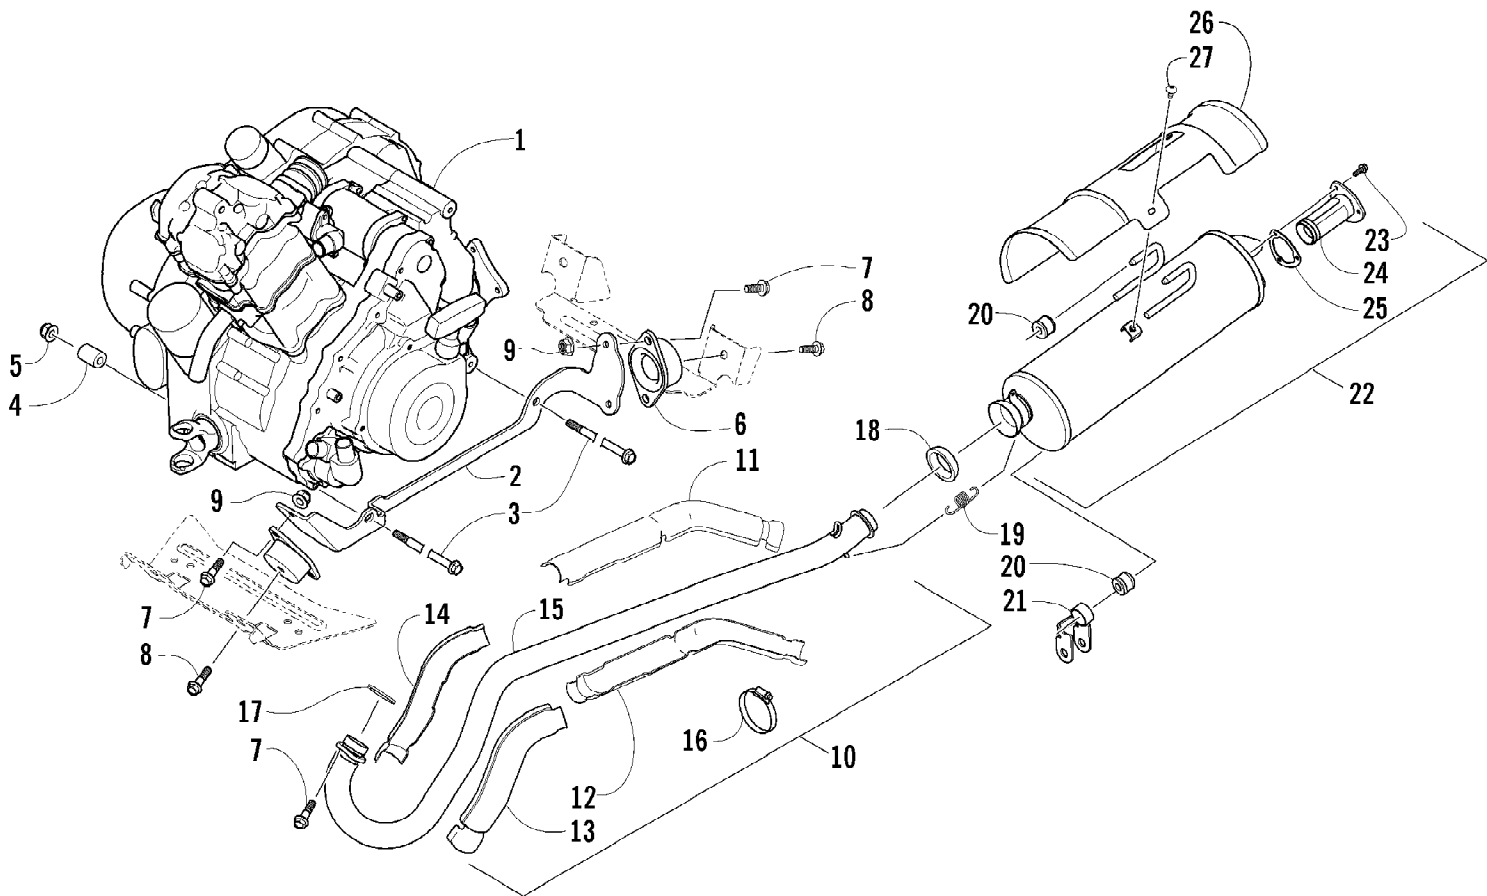

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) (Page 34 of 93)
ENGINE AND EXHAUST

Ref #	Part Number	Qty	S/P/F	Description
1	0462-029	1	/P	Engine
2	1506-740	1		Bracket, Engine Mounting - Right
2	1506-741	1		Bracket, Engine Mounting - Left
3	0423-405	2		Screw, Cap
4	0423-042	2	S	Spacer
5	8428-002	2		Nut, Lock
6	2406-065	4		Mount, Rubber - Engine
7	8408-820	10	/P	Screw, Cap
8	8408-012	4		Screw, Cap
9	8432-802	8		Nut
10	0512-276	1		Pipe, Exhaust - Assembly (inc. 11-16)
11	0412-354	1		Shield, Exhaust Pipe
12	0412-355	1		Shield, Exhaust Pipe
13	0412-349	1		Shield, Exhaust Pipe
14	0412-348	1		Shield, Exhaust Pipe
15	0512-278	1		Pipe, Exhaust
16	0423-317	4	/P	Hose Clamp
17	0412-007	1	/P	Seal, Exhaust
18	0412-256	1	S	Seal, Exhaust
19	0612-668	2	/P	Spring, Extension
20	0412-215	3	S	Bushing, Exhaust Pipe
21	1506-732	1		Channel, Muffler Support
22	0512-306	1	/P	Muffler - Assembly (inc. 23-25)
23	8408-616	3		Screw, Cap
24	0512-219	1	/P	Arrester, Spark - Assembly
25	0412-313	1		Gasket, Spark Arrester
26	0412-373	1	/P	Cover, Muffler
27	8477-610	3		Screw, Machine

 
2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) (Page 35 of 93)
FRAME AND RELATED PARTS

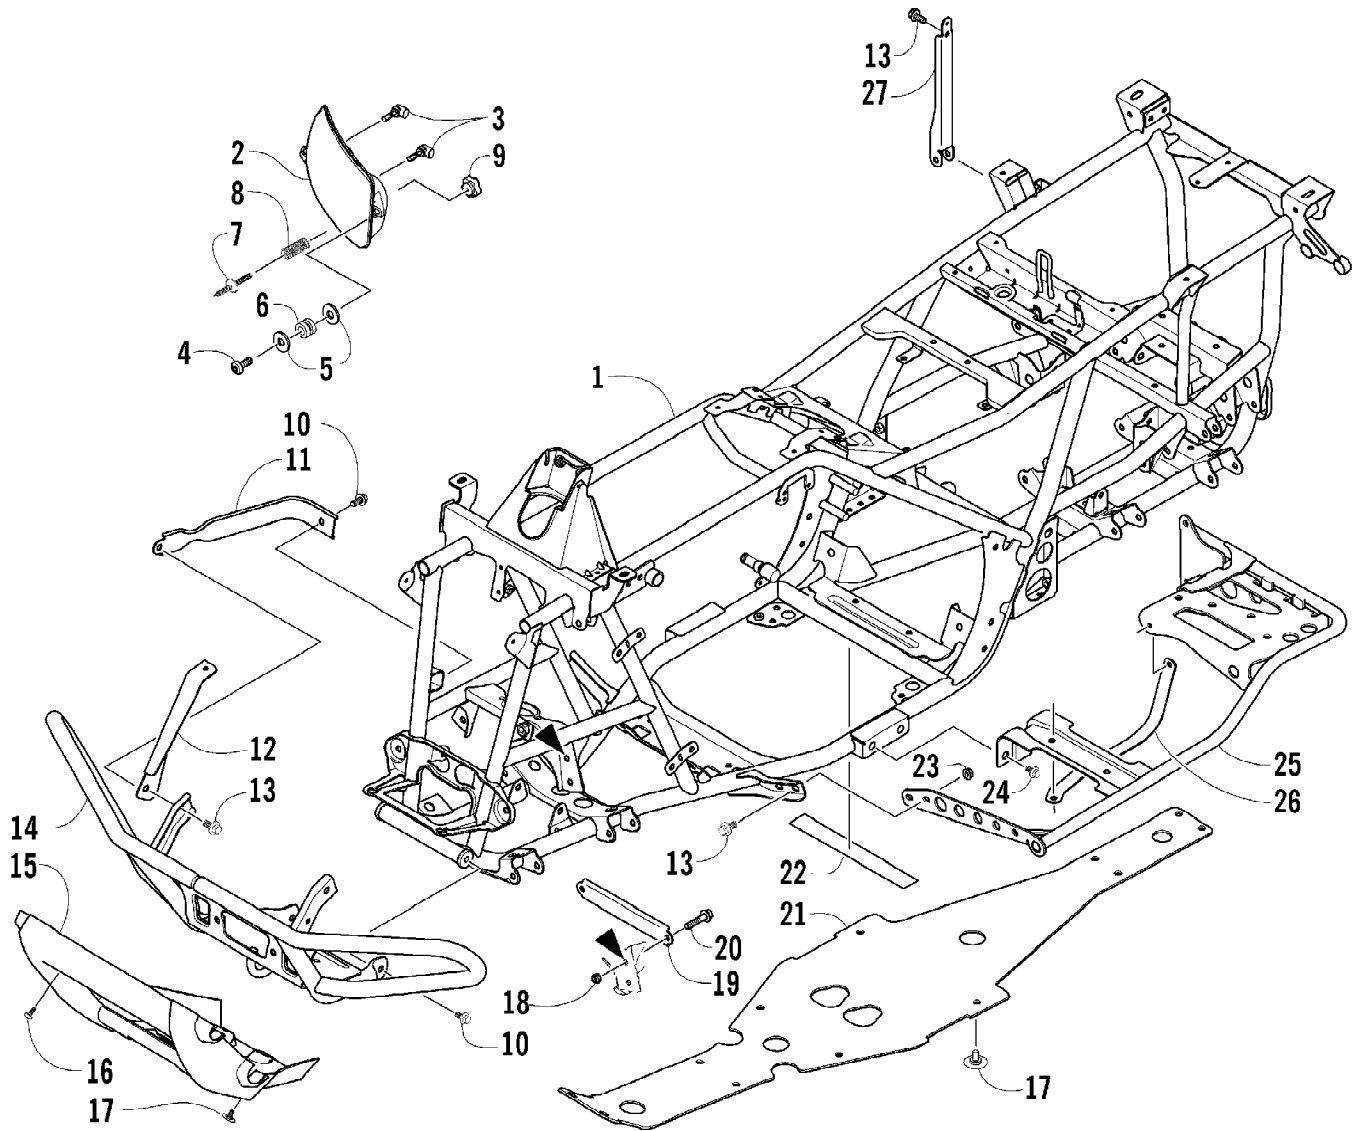

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) Page 36 of 93
 FRAME AND RELATED PARTS

Ref #	Part Number	Qty	S/P/F	Description
1	1506-864	1		Frame, Main
2	0509-034	1	S	Headlight Assembly - Right (inc. 3)
2	0509-035	1		Headlight Assembly - Left (inc. 3)
3	0409-055	4		Bulb, Headlight
4	0623-785	4		Screw, Self-Tapping
5	8050-217	8	/P	Washer
6	0423-447	4		Grommet
7	0423-514	2		Stud, Adjuster - Headlight
8	0423-522	2		Spring, Adjuster
9	0423-513	2		Knob, Adjuster
10	8409-020	4	/P	Screw, Cap
11	1506-596	1	/P	Channel, Bumper Mounting - Right
11	0506-653	1	S	Channel, Bumper Mounting - Left
12	1506-562	1		Bracket, Mounting - Bumper - Right
12	1506-563	1		Bracket, Mounting - Bumper - Left
13	8408-816	11		Screw, Cap
14	1506-855	1	/P	Bumper
15	1406-360	1		Grille, Bumper
16	0423-419	2		Screw, Machine
17	0423-101	16		Screw, Shoulder
18	8428-002	2		Nut, Lock
19	1506-429	1	S	Brace, A-Arm
20	8409-025	2		Screw, Cap
21	2406-091	1		Panel, Belly
22	0406-289	1		Pad, Foam
23	8424-802	8		Nut
24	8409-016	4		Screw, Cap
25	1506-846	1		Footrest - Right
25	1506-847	1		Footrest - Left
26	1506-994	1		Strap, Footrest - Right
26	1506-995	1		Strap, Footrest - Left
27	1506-548	1		Channel, Shock Support

 
2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) (Page 37 of 93)
FRONT BODY PANEL ASSEMBLY

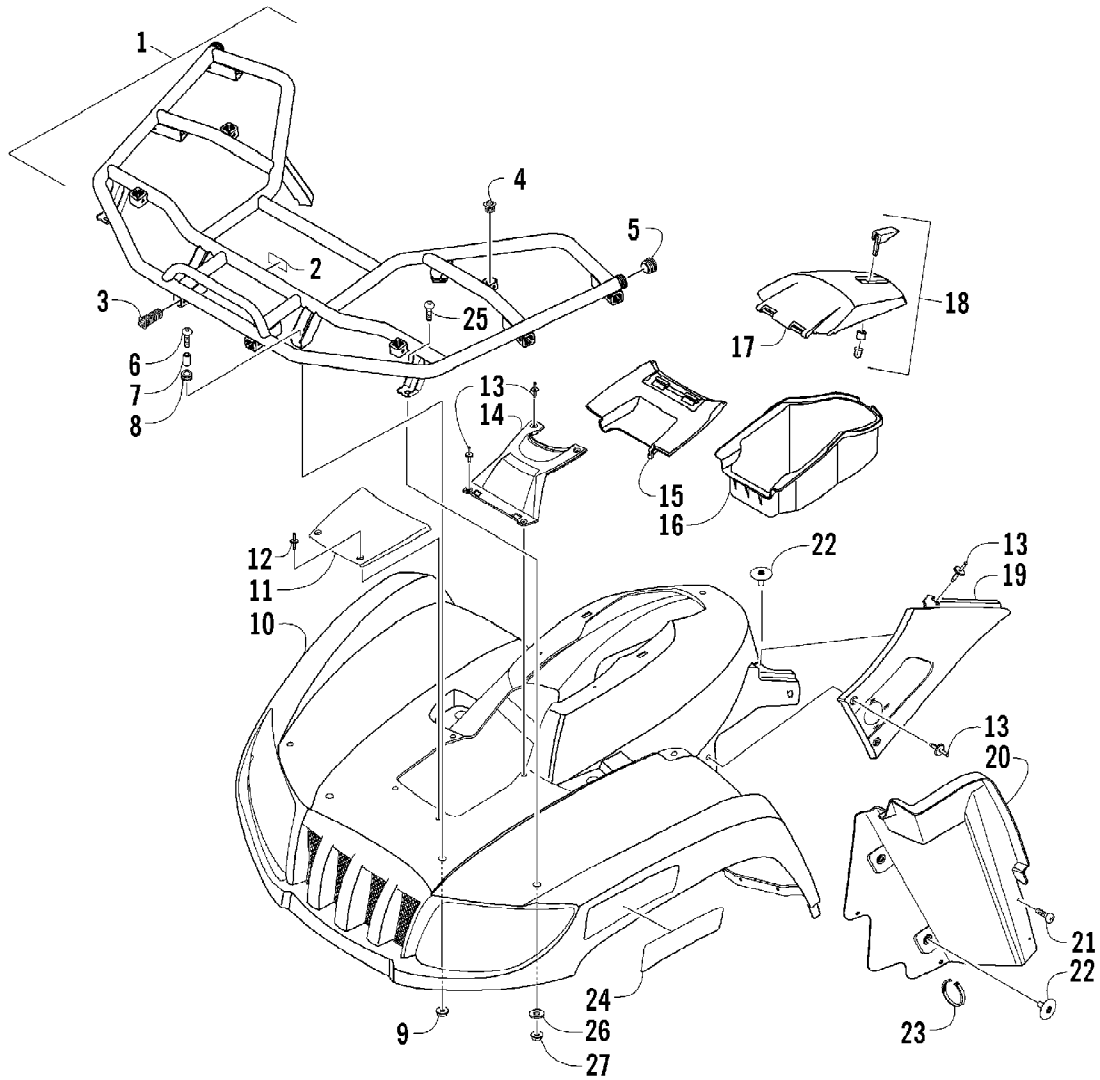

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) (Page 38 of 93)
 FRONT BODY PANEL ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0541-272	1		Rack - Front - Assembly (inc. 2-5)
2	0411-576	1		Decal, Warning - Front Rack Load
3	2406-014	6		Bushing, Rack
4	0441-592	4	/P	Bushing, Rack
5	1441-049	2		Plug, Rack
6	8410-830	4		Screw, Machine
7	0423-463	4		Spacer
8	0423-465	4		Grommet
9	8432-802	4		Nut, Lock
10	1406-613	1	S	Panel, Fender - Front
11	1406-358	1		Cover, Access
12	0423-535	2		Rivet, Reinstallable
13	0623-362	10		Rivet, Reinstallable
14	1406-484	1		Cover, Steering Post
15	0470-513	1		Cover, Storage Box
16	1406-573	1		Box, Storage
17	0470-514	1		Lid, Storage Box
18	1406-599	1		Latch, Storage Box
19	1406-313	1		Panel, Side - Right
19	1406-314	1		Panel, Side - Left
20	1406-354	1		Panel, Splash - Right
20	1406-355	1	S	Panel, Splash - Left
21	0423-342	4	/P	Screw, Self-Tapping
22	0423-101	5		Screw, Body
23	0123-788	AR	/P	Cable Tie - 7.5 in.
24	0411-818	1		Decal, Reflector - Front - Right
24	0411-819	1		Decal, Reflector - Front - Left
25	0423-355	2		Screw, Shoulder
26	8050-222	2	/P	Washer
27	8424-602	2	/P	Nut, Lock

 
2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) Page 39 of 93
FRONT DRIVE GEARCASE ASSEMBLY

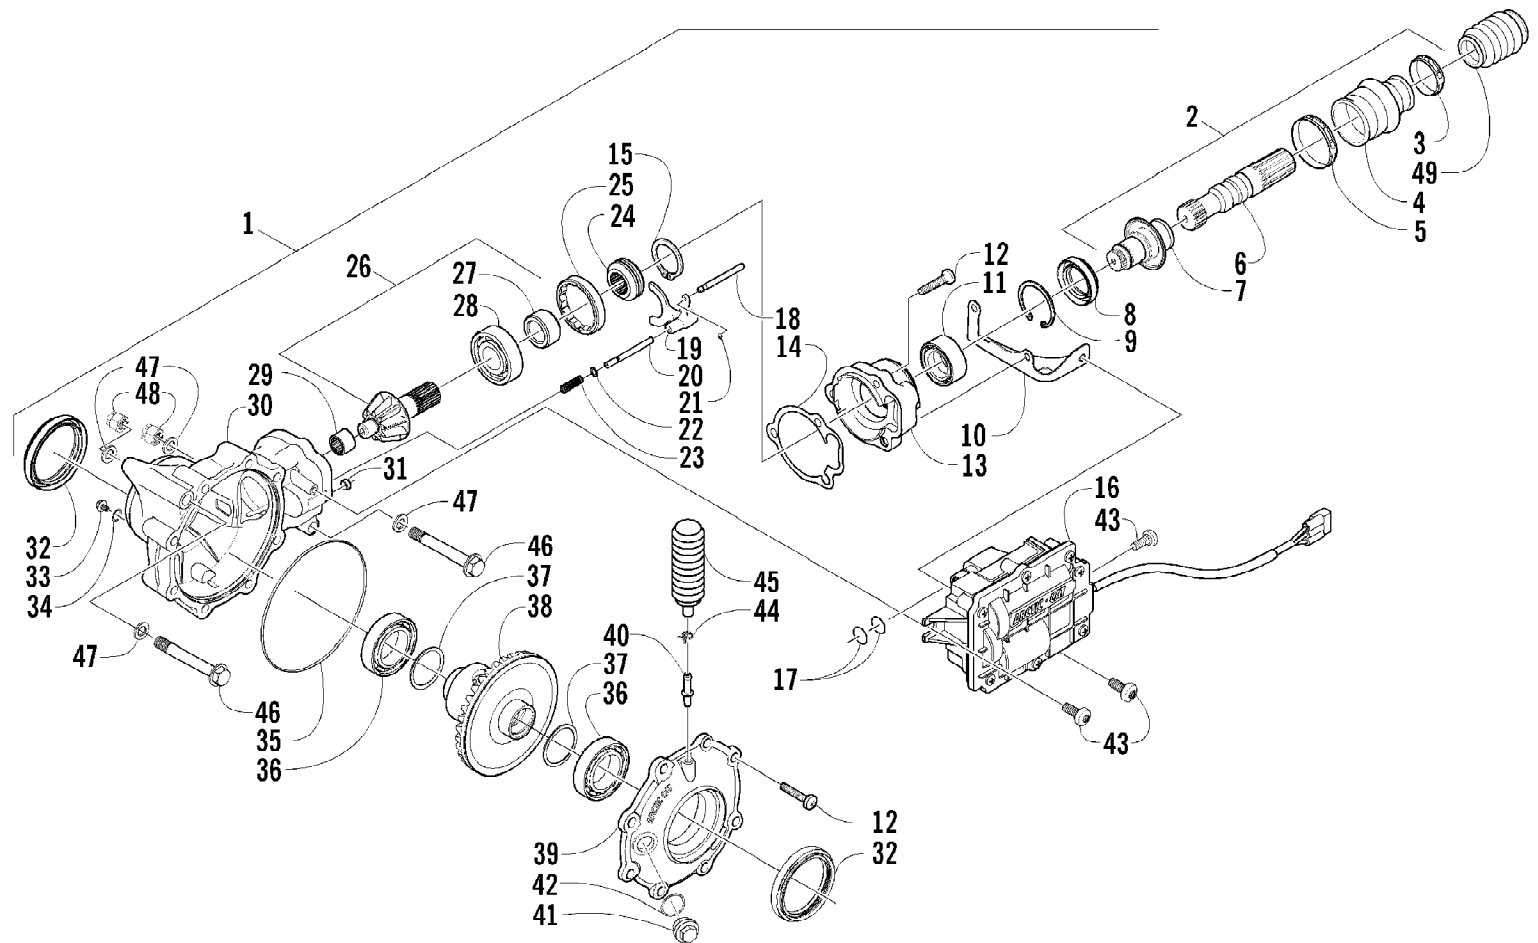

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) Page 40 of 93
FRONT DRIVE GEARCASE ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0502-816	1		Gearcase, Front Drive - Assembly (inc. 2-43)
2	0502-385	1		Shaft, Propeller - Assembly (inc. 3-7)
3	0423-411	1		Clamp, Boot
4	0402-985	1	/P	Boot, Propeller Shaft
5	0423-393	1		Clamp, Boot
6	1402-045	1		Shaft, Output
7	0502-407	1	S	Shaft, Input
8	1402-011	1		Seal
9	0423-423	1		Ring, Retaining
10	0502-347	1		Bracket, Actuator
11	1402-043	1		Bearing
12	0423-118	11		Screw, Self-Tapping
13	0502-528	1	/P	Housing, Pinion
14	0402-947	1		Gasket, Flange
15	0423-417	1		Ring, Retaining
16	0502-296	1		Actuator (inc. one No. 17)
17	0423-498	2	S	O-Ring
18	0402-997	1		Shaft, Selector
19	0402-998	1		Fork, Selector
20	0402-417	1		Shaft, Shuttle
21	0423-402	1		Ring, Retaining
22	0423-147	1		O-Ring
23	0402-999	1		Spring, Return
24	0402-413	1		Coupler, Drive
25	0402-357	1		Collar, Lock
26	0502-783	1		Gear, Pinion - Assembly - 10T (inc. 27-28)
27	0402-336	1		Collar, Retaining
28	0402-327	1		Bearing
29	0402-328	1		Bearing
30	0502-120	1		Housing, Gearcase
31	0402-411	1		Pin, Dowel
32	0402-394	2	S	Seal
33	0402-450	1	S	Plug, Magnetic (inc. 34)
34	0423-153	1		O-Ring
35	0423-149	1		O-Ring
36	0402-393	2		Bearing
37	0402-405	AR		Shim
37	0402-406	AR		Shim
37	0402-407	AR		Shim
37	0402-408	AR		Shim
37	0402-409	AR		Shim
38	0502-779	1		Gear, Ring - 36T
39	0502-121	1		Cover, Gearcase
40	1402-104	1		Fitting
41	0402-333	1	/P	Plug, Fill (inc. 42)
42	0423-154	1		O-Ring
43	0423-396	3		Screw, Self-Tapping
44	0423-315	1		Clamp, Fitting
45	0402-147	1	S	Bladder, Gearcase
46	0423-404	2		Screw, Cap
47	0423-426	4		Washer
48	8428-002	2		Nut, Lock
49	0402-966	1		Pin, Shaft

 
2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) (Page 41 of 93)
FRONT SUSPENSION ASSEMBLY

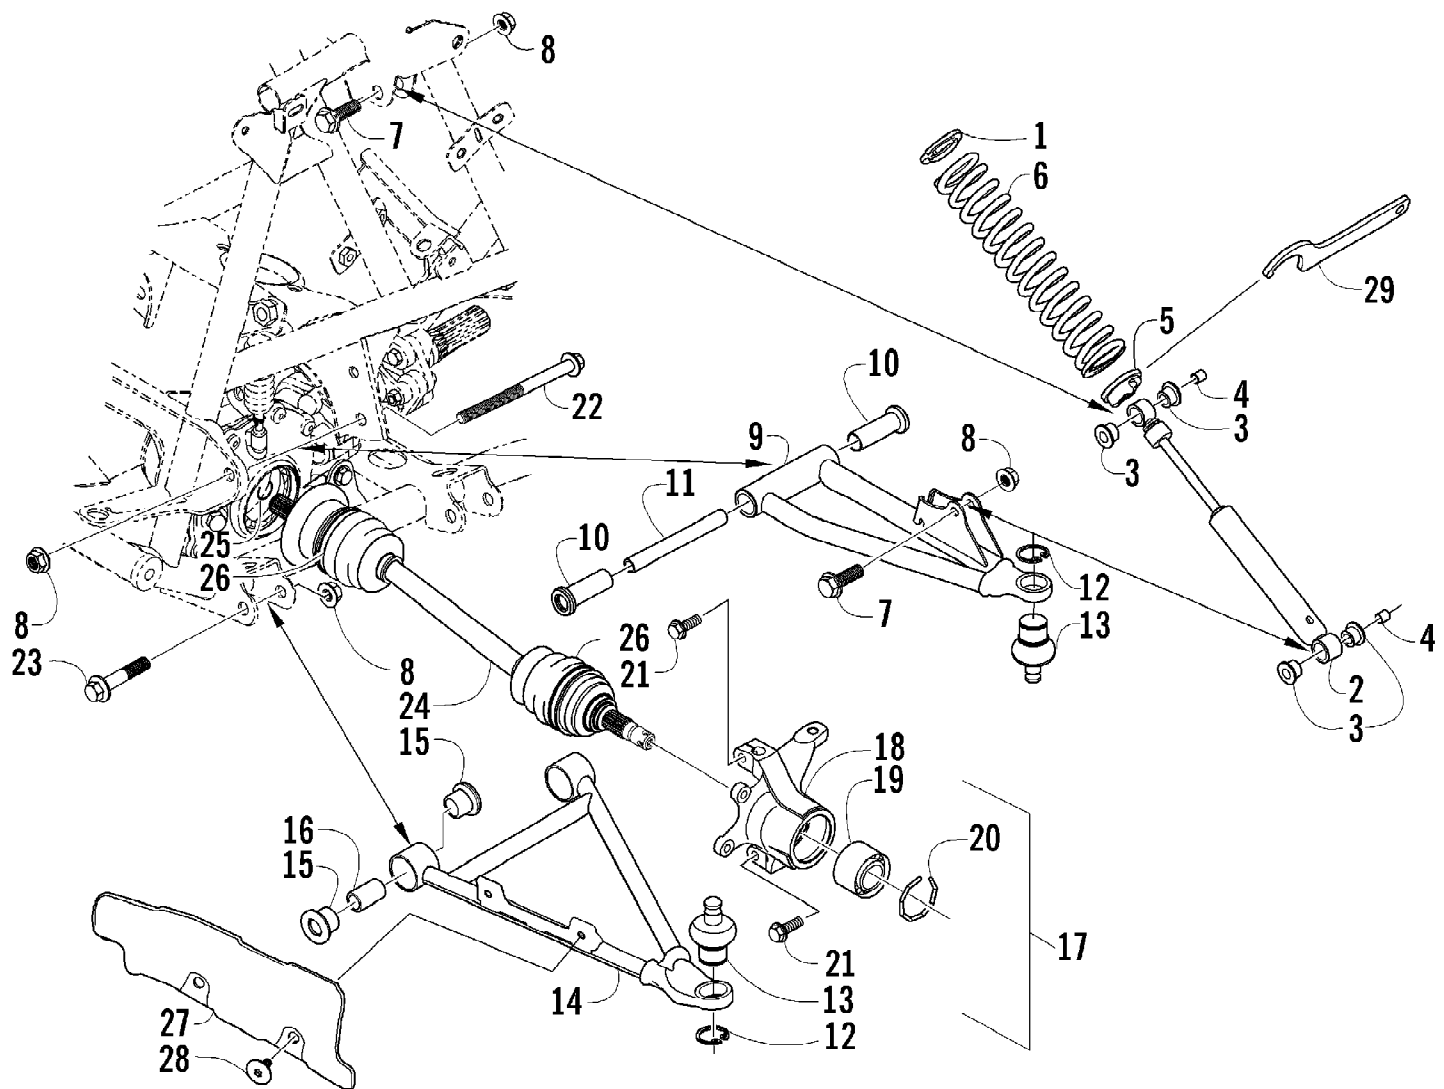

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) Page 42 of 93
 FRONT SUSPENSION ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	1603-889	2	/P	Retainer, Spring
2	0403-137	2	/P	Shock Absorber - Front (inc. 3-4)
3	0604-310	8		Bushing, Shock Absorber
4	0403-028	4		Sleeve, Shock
5	0403-102	2		Cam, Spring Adjuster
6	0503-317	2		Spring, Shock Absorber
7	8409-040	4		Screw, Cap
8	8428-002	10		Nut, Lock
9	0503-196	1	S	A-Arm, Upper Right (inc. 10-13)
9	0503-197	1		A-Arm, Upper Left (inc. 10-13)
10	0403-081	4	S	Bushing
11	0403-080	2		Collar
12	0423-009	4	/P	Clip, Ball Joint
13	0405-115	4	/P	Ball Joint - Front
14	0503-220	1		A-Arm, Lower Right (inc. 12-13 and 15-16)
14	0503-221	1		A-Arm, Lower Left (inc. 12-13 and 15-16)
15	0403-115	8	S	Bushing
16	0403-114	4	S	Collar
17	0505-460	1		Knuckle - Assembly - Right (inc. 18-20)
17	0505-461	1	S	Knuckle - Assembly - Left (inc. 18-20)
18	0	1	F	Knuckle, Steering - Right
18	0	1	F	Knuckle, Steering - Left
19	1402-027	2	S/P	Bearing, Wheel Hub
20	0423-423	2		Ring, Retaining
21	8409-030	4		Screw, Cap
22	0423-334	2		Screw, Cap
23	8409-075	4		Screw, Cap
24	0502-812	2	S	Axle, Drive - Front (inc. 25-26)
25	0441-400	2	S	Clip, Retaining
26	0436-276	2	S	Repair Kit, Boot - Front
27	1441-002	1		Guard, Boot - Right
27	1441-003	1		Guard, Boot - Left
28	0423-101	4		Screw, Body
29	0441-587	1		Wrench, Spanner

 
2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) (Page 43 of 93)
GAS TANK ASSEMBLY

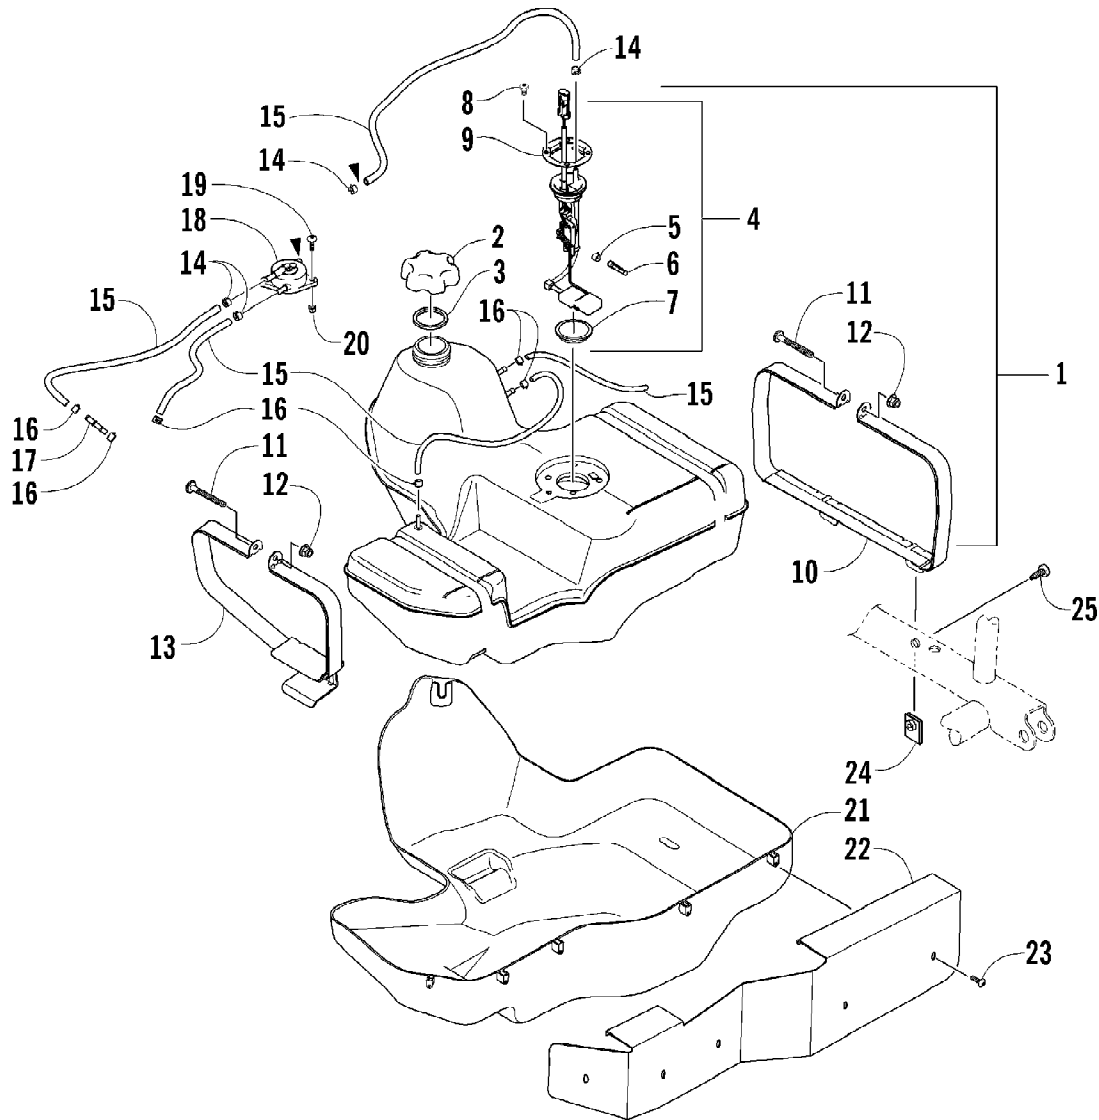

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) Page 44 of 93
 GAS TANK ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0570-111	1	S	Tank, Gas - Assembly (inc. 2-9)
2	0470-438	1	/P	Cap, Gas Tank (inc. 3)
3	0109-733	1	/P	Gasket, Gas Tank Cap
4	0570-114	1	S/P	Sensor, Fuel Level (inc. 5-7)
5	0423-603	1		Clamp, Hose
6	0470-475	1		Filter, Fuel
7	0470-521	1		Seal, Fuel Level Sensor
8	1623-158	4		Screw, Self-Tapping
9	0470-567	1	S	Plate, Mounting - Fuel Level Sensor
10	0570-131	1		Strap, Gas Tank Mounting
11	8476-650	2		Screw, Machine
12	8427-602	2		Nut, Lock
13	0570-132	1		Strap, Gas Tank Mounting
14	0423-461	4	S	Clamp, Hose
15	0410-070	AR	/P	Hose, Gasline - 25 ft
16	1623-233	6		Clamp, Hose
17	0470-527	1	S	Fitting, Straight
18	0470-519	1	S	Pump, Fuel
19	8476-620	2		Screw, Machine
20	0623-038	2		Nut w/Washer
21	0470-479	1		Shield, Heat
22	0470-474	1		Shield, Heat
23	0623-797	5		Screw, Self-Tapping
24	0470-536	2		Clip, U-Nut
25	0423-609	2		Screw, Shoulder

 
2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) Page 45 of 93
GEAR SHIFTING ASSEMBLY

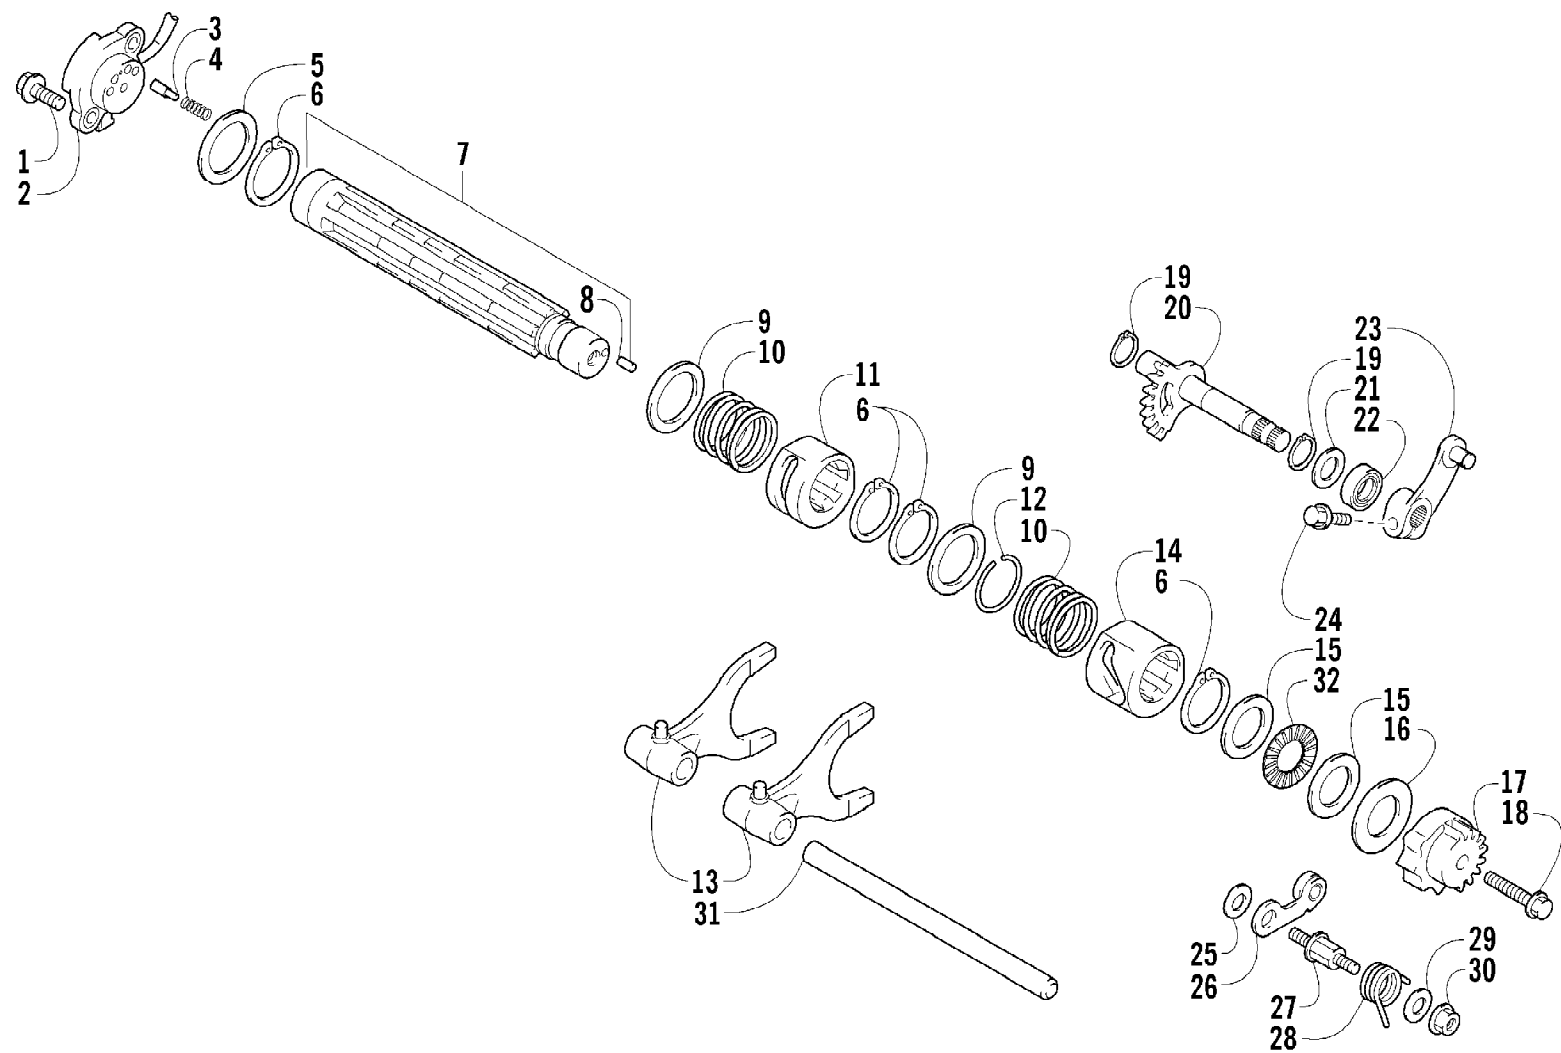

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) Page 46 of 93
 GEAR SHIFTING ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	3423-418	2		Bolt
2	3530-042	1		Base, Gear Shift - Assembly
3	3423-044	2		Contact
4	3402-087	2		Spring
5	3423-421	1	/P	Washer, Shift Shaft
6	3423-191	4	/P	Circlip, Cam Spring
7	3402-826	1		Shaft, Gear Shift (inc. 8)
8	3423-114	1	/P	Pin
9	3402-382	2		Washer, Cam Spring
10	3446-280	2		Spring, Cam
11	3402-827	1		Cam, Reverse
12	3423-116	1	S	C-Ring, Cam
13	3446-353	2		Fork, Shift
14	3402-828	1		Cam, Gear Shift
15	3402-381	2	/P	Washer, Shift Shaft
16	3423-446	1		Washer, Gear Shift Cam Plate
17	3402-642	1		Plate, Gear Shift Cam
18	3004-376	1	S/P	Bolt, Gear Shift Cam Plate
19	3423-358	2	S	Circlip, Sub-Gear Shift Shaft
20	3402-747	1		Shaft, Sub-Gear Shift
21	1691-043	2		Washer, Sub-Gear Shift Shaft
22	3402-076	1		Seal, Sub-Gear Shift Shaft
23	3402-434	1	/P	Arm, Select
24	3004-341	1	S/P	Bolt, Select Arm
25	3423-141	1		Washer, Cam Stopper
26	3402-746	2		Stopper, Cam
27	3446-048	1		Support, Cam Stopper
28	3423-511	1		Spring, Cam Stopper
29	3423-438	2		Washer, Cam Stopper Spring
30	3004-488	1	S/P	Nut, Cam Stopper Spring
31	3446-266	1		Shaft, Shift Fork
32	3402-829	1		Bearing

 
2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) Page 47 of 93
HANDLEBAR ASSEMBLY

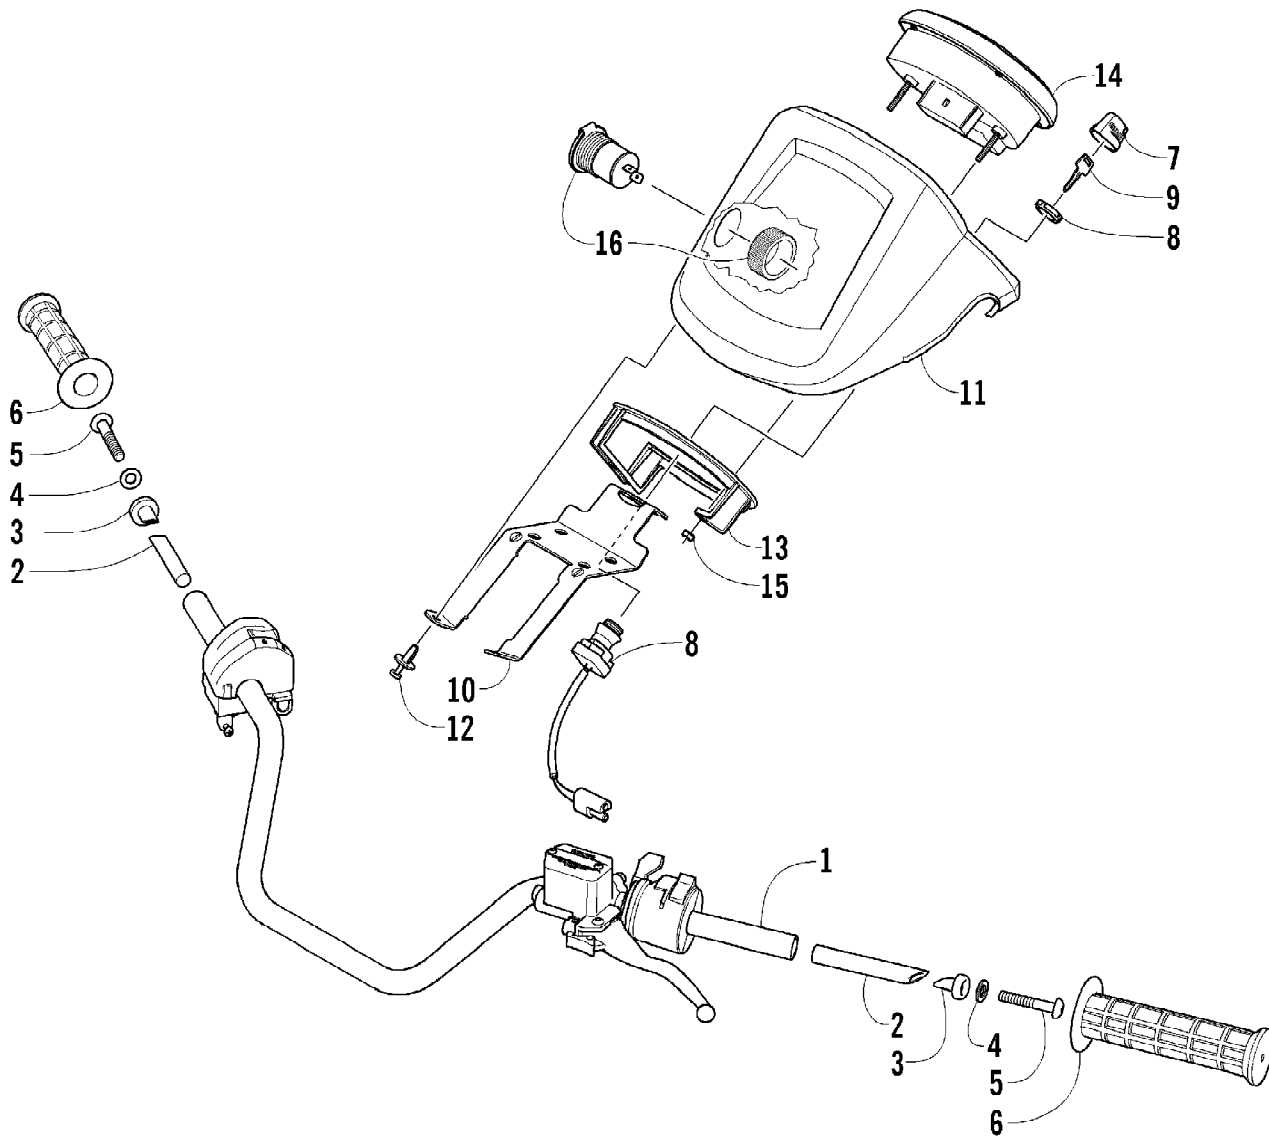

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) Page 48 of 93
HANDLEBAR ASSEMBLY


Ref #	Part Number	Qty	S/P/F	Description
1	0505-418	1	/P	Tube, Handlebar
2	0405-218	2		Plug, Handlebar
3	0405-149	2		End Cap, Handlebar
4	8050-247	2	/P	Washer
5	8477-845	2		Screw, Machine
6	0405-147	2		Grip, Handlebar
7	0409-013	1		Cover, Key
8	3430-040	1		Switch, Ignition - Assembly (inc. 9)
9	3409-007	1	/P	Key, Ignition - Blank (C Series)
9	3409-011	1		Key, Ignition - Blank (D Series)
9	3409-012	1		Key, Ignition - Blank (E Series)
9	3409-013	1		Key, Ignition - Blank (F Series)
10	1506-578	1		Bracket, Mounting - Instrument Pod
11	0405-189	1		Instrument Pod
12	0423-535	2		Rivet, Reinstallable
13	0420-065	1	/P	Clamp
14	0520-015	1		Gauge, LCD
15	0423-493	2		Nut, Hex
16	0641-897	1	/P	Outlet, Accessory - 12V

 2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) (Page 49 of 93)
HYDRAULIC BRAKE ASSEMBLY

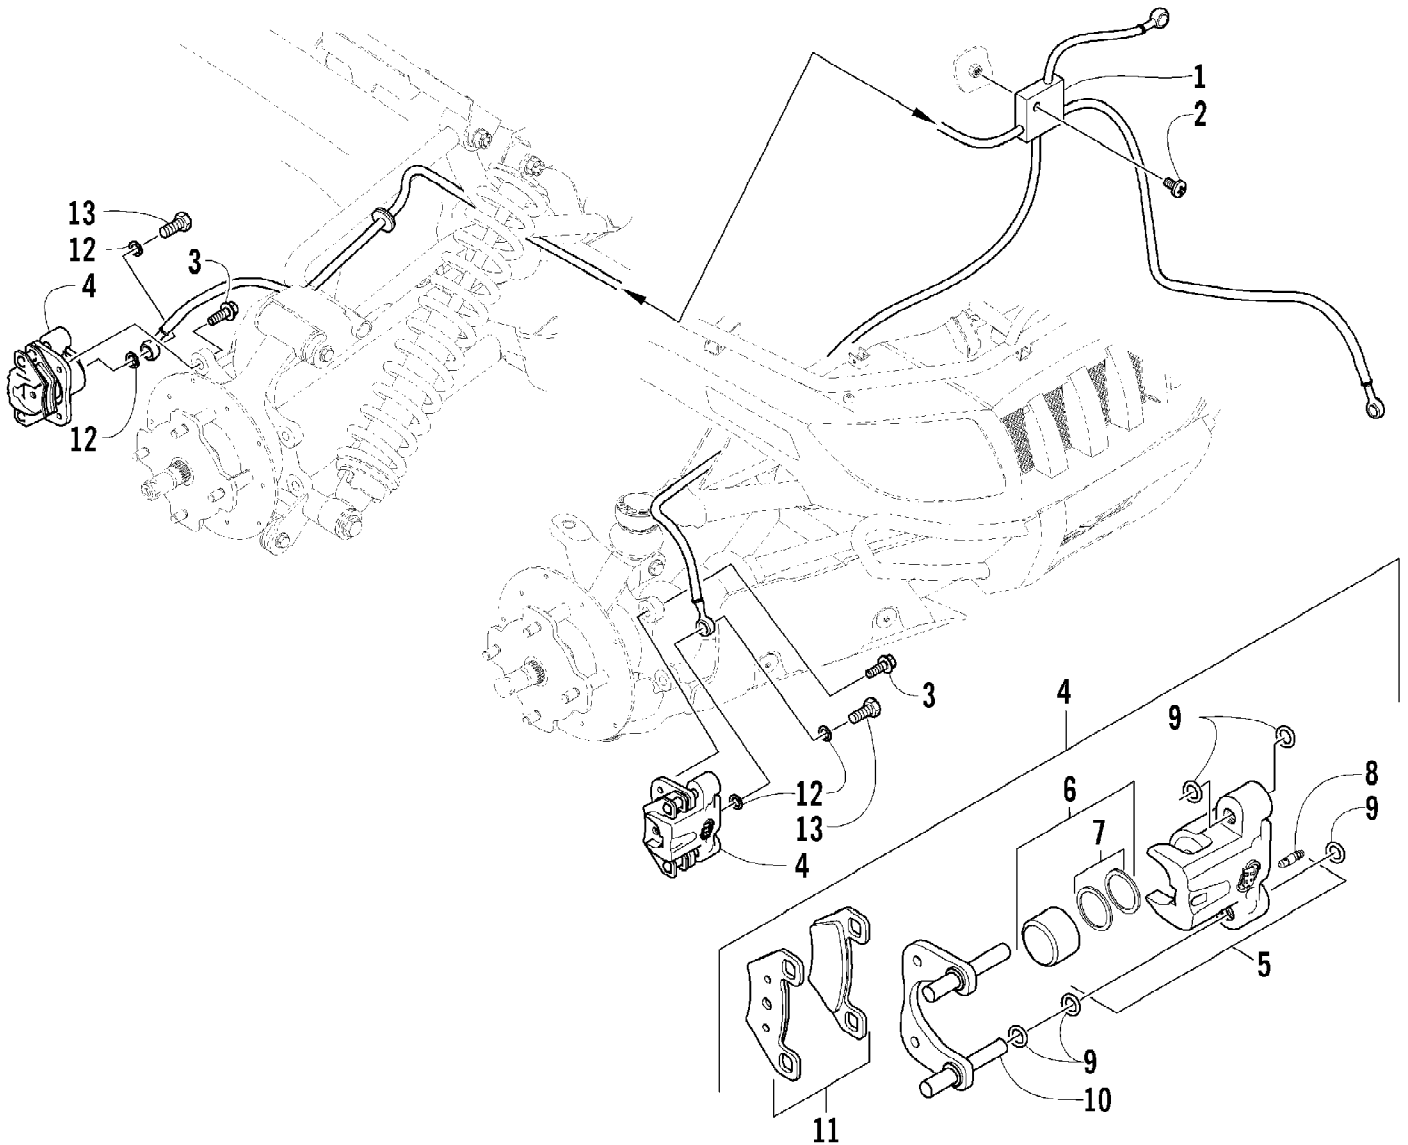


2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) Page 50 of 93
 HYDRAULIC BRAKE ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0502-628	1		Hose, Brake - Assembly
2	8476-625	1		Screw, Cap
3	8408-820	6	/P	Screw, Cap
4	0502-602	1	S	Caliper, Brake - Right Front (inc. 5-11)
4	0502-610	2	S	Caliper, Brake - Left Front and Right Rear (inc. 5-11)
5	0502-603	1	S	Housing, Caliper - Assembly - Right Front (inc. 6-8)
5	0502-611	2	S	Housing, Caliper - Assembly - Left Front and Right Rear (inc. 6-8)
6	0502-606	3		Piston/Seal Set (inc. 7)
7	0502-607	3		Seal Set
8	0502-609	3	/P	Valve, Bleed
9	0502-608	3		O-Ring, Guide - Set
10	0502-605	3		Bracket Assembly
11	0502-875	3	S	Pad, Brake - Set
12	0423-178	6		Washer, Crush
13	0423-413	3		Bolt, Banjo Fitting

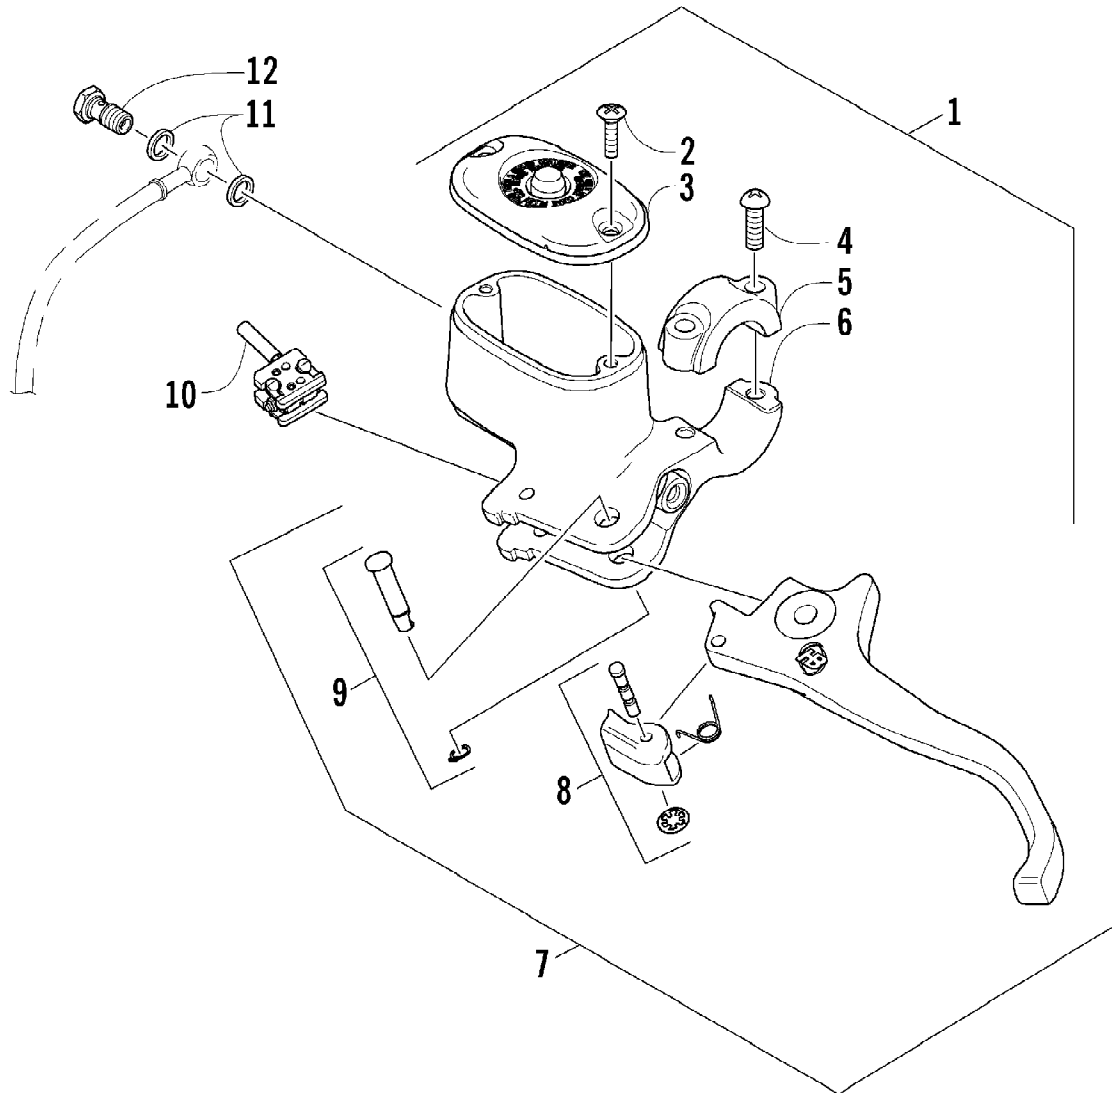 

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) Page 52 of 93
 HYDRAULIC HAND BRAKE ASSEMBLY


Ref #	Part Number	Qty	S/P/F	Description
1	0502-914	1	S	Brake Assembly (inc. 2-10)
2	0502-566	1		Screw, Reservoir Cover - Kit
3	0502-868	1	/P	Cover, Reservoir - Kit
4	0502-568	1		Screw, Master Cylinder Clamp - Kit
5	0502-869	1		Clamp, Master Cylinder - Kit
6	0502-704	1		Master Cylinder Assembly - Kit
7	0502-866	1		Lever Assembly - Kit (inc. 8-9)
8	0502-867	1	/P	Lock, Brake Lever - Kit
9	0502-580	1		Lever Pin - Kit
10	0502-564	1	/P	Switch, Brake - Kit
11	0423-178	2		Washer, Crush
12	0423-413	1		Bolt, Banjo-Fitting

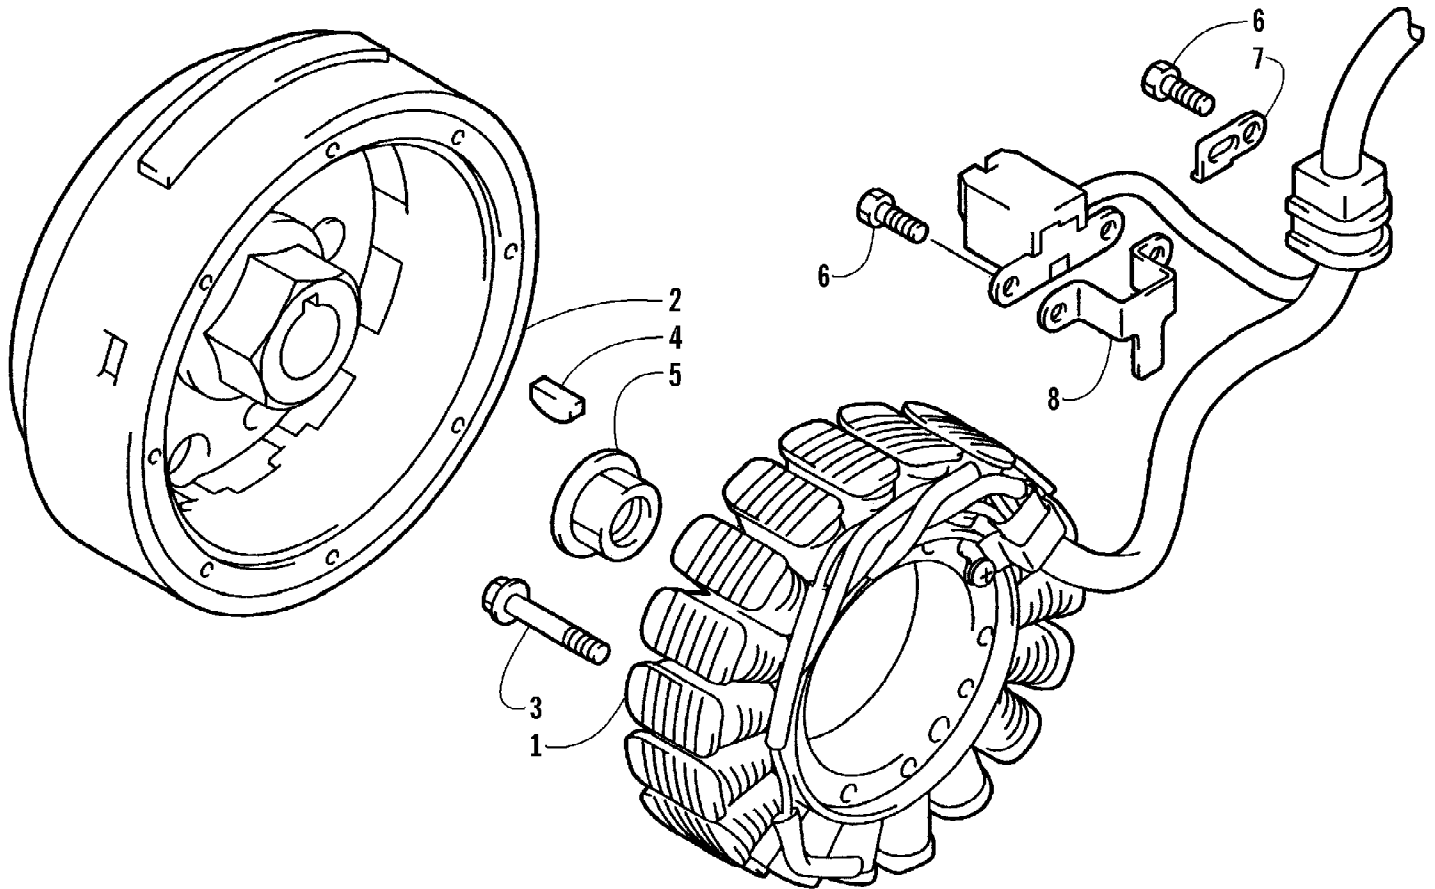 

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4BPSG) 54 of 93
 MAGNETO ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	3430-058	1		Stator Assembly
2	3430-046	1		Rotor/Flywheel
3	3423-162	3	S	Bolt
4	0691-785	1		Key
5	3423-086	1		Nut
6	3423-005	3	/P	Bolt
7	3430-005	1		Clamp (No. 1)
8	3430-006	1		Clamp (No. 2)

 
2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) (Page 55 of 93)
OIL FILTER/PUMP ASSEMBLY

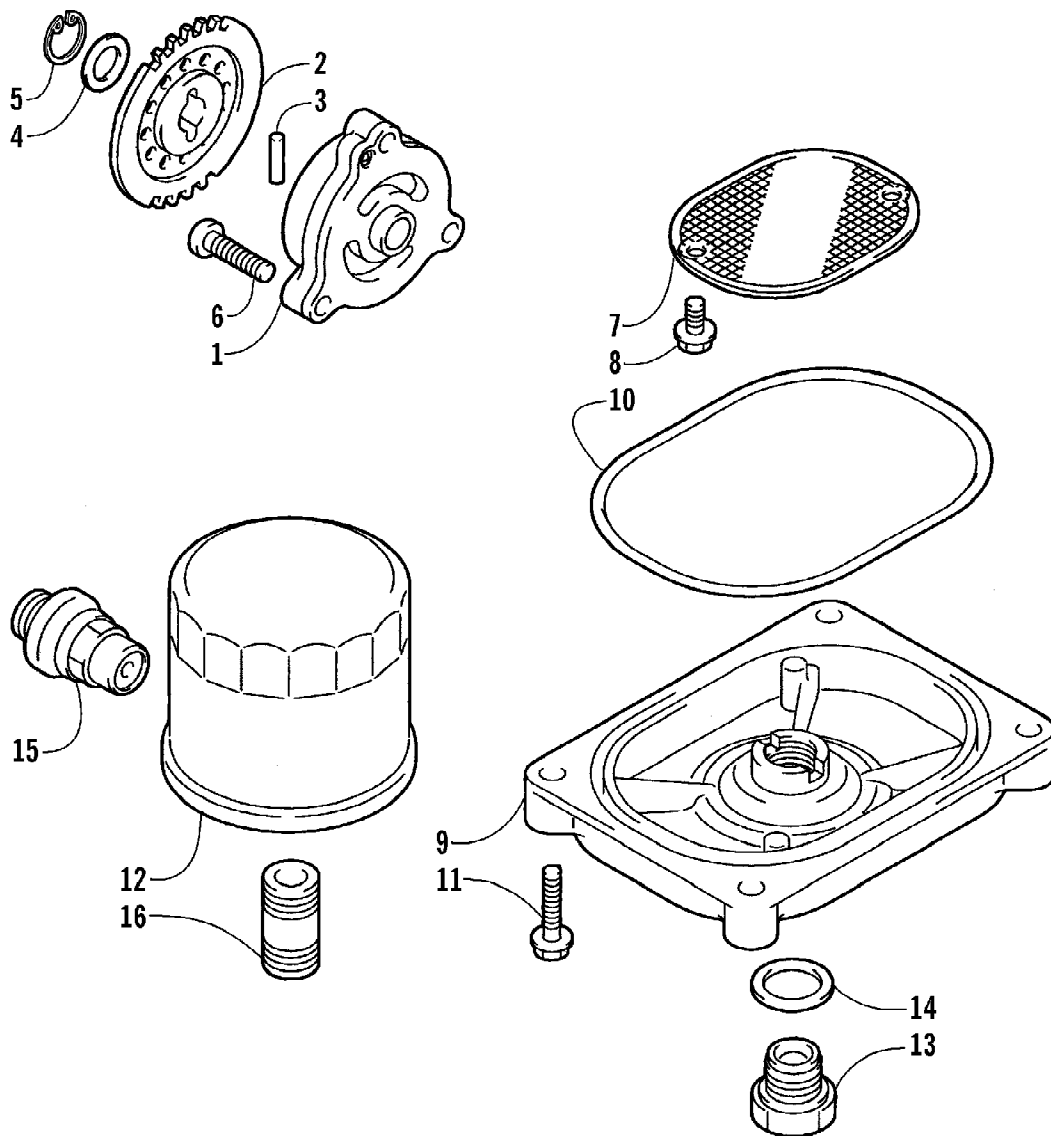

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) Page 56 of 93
 OIL FILTER/PUMP ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	3402-727	1	/P	Pump, Oil
2	3402-463	1		Gear, Driven
3	3423-046	1		Pin
4	3423-443	1		Washer
5	3423-184	1	S	Circlip
6	3423-510	3		Screw, Cap
7	3402-156	1		Strainer, Oil
8	0693-389	2	S	Screw, Cap
9	3402-157	1		Cap, Oil Strainer
10	3423-077	1		O-Ring
11	3004-756	4	S	Screw, Cap
12	0812-005	1	S	Filter, Oil
13	3402-728	1	S	Plug, Drain
14	3402-012	1		Gasket, Drain Plug
15	3402-154	1		Valve, Oil-Relief - Assembly
16	3402-158	1	S	Union, Oil Filter

 
2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) (Page 57 of 93)
REAR BODY PANEL ASSEMBLY

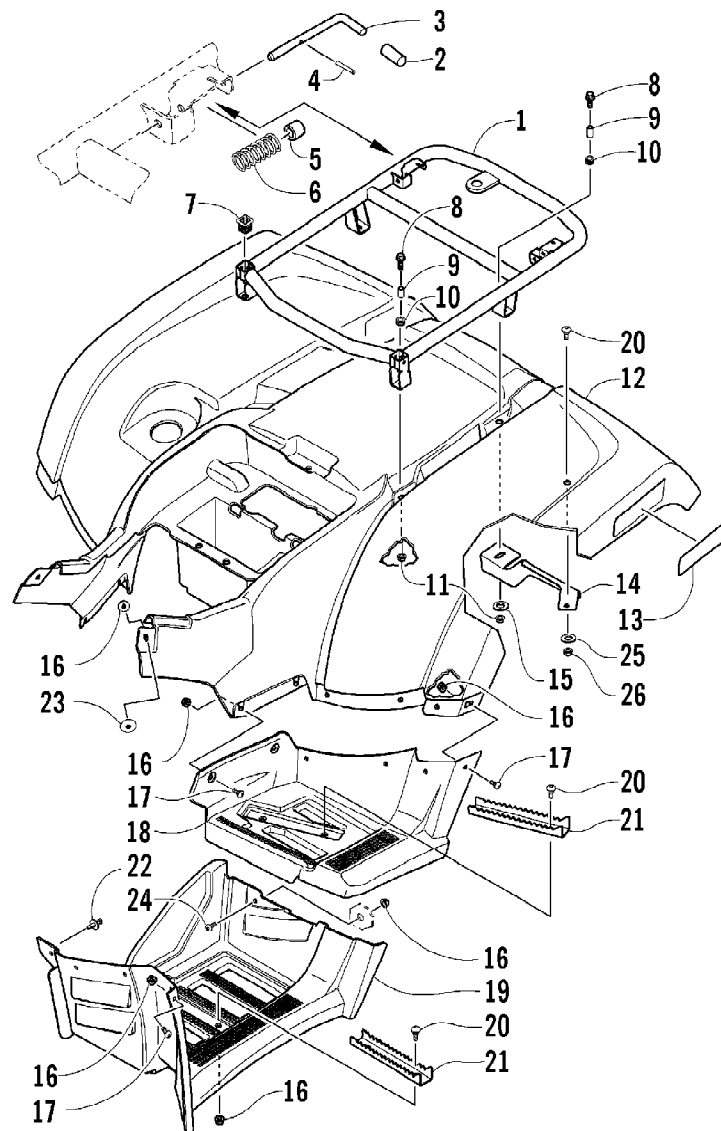

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) Page 58 of 93
 REAR BODY PANEL ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	1506-873	1	S	Rack, Rear - Assembly (inc. 2-7)
2	1441-317	2		Cap, Vinyl
3	0541-448	2		Pin - Assembly (inc. 4)
4	0423-635	2		Pin, Roll
5	0423-036	2		Collar
6	0423-636	2		Spring
7	0441-592	4	/P	Bushing, Rack
8	8410-830	4		Screw, Machine
9	0423-463	4		Spacer
10	0423-465	4		Grommet
11	8432-802	4		Nut, Lock
12	2406-039	1	S	Panel, Fender
13	0411-820	1	S	Decal, Reflector - Right
13	0411-821	1	S	Decal, Reflector - Left
14	2506-092	1		Bracket, Rear Fender - Right
14	2506-093	1		Bracket, Rear Fender - Left
15	0423-087	2		Washer
16	0423-540	34		Nut, Lock
17	0423-419	22		Screw, Machine
18	2406-042	1		Footwell, Rear - Right
18	2406-043	1		Footwell, Rear - Left
19	1506-813	1		Footwell - Right
19	1506-814	1	S	Footwell - Left
20	0423-355	8		Screw, Shoulder
21	1506-125	4	/P	Footpeg
22	0623-362	2		Rivet, Reinstallable
23	0423-101	2		Screw, Body
24	8477-620	2		Screw, Machine
25	0623-184	2		Washer
26	8424-602	2	/P	Nut, Hex

 2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) (Page 59 of 93)
REAR DRIVE GEARCASE ASSEMBLY

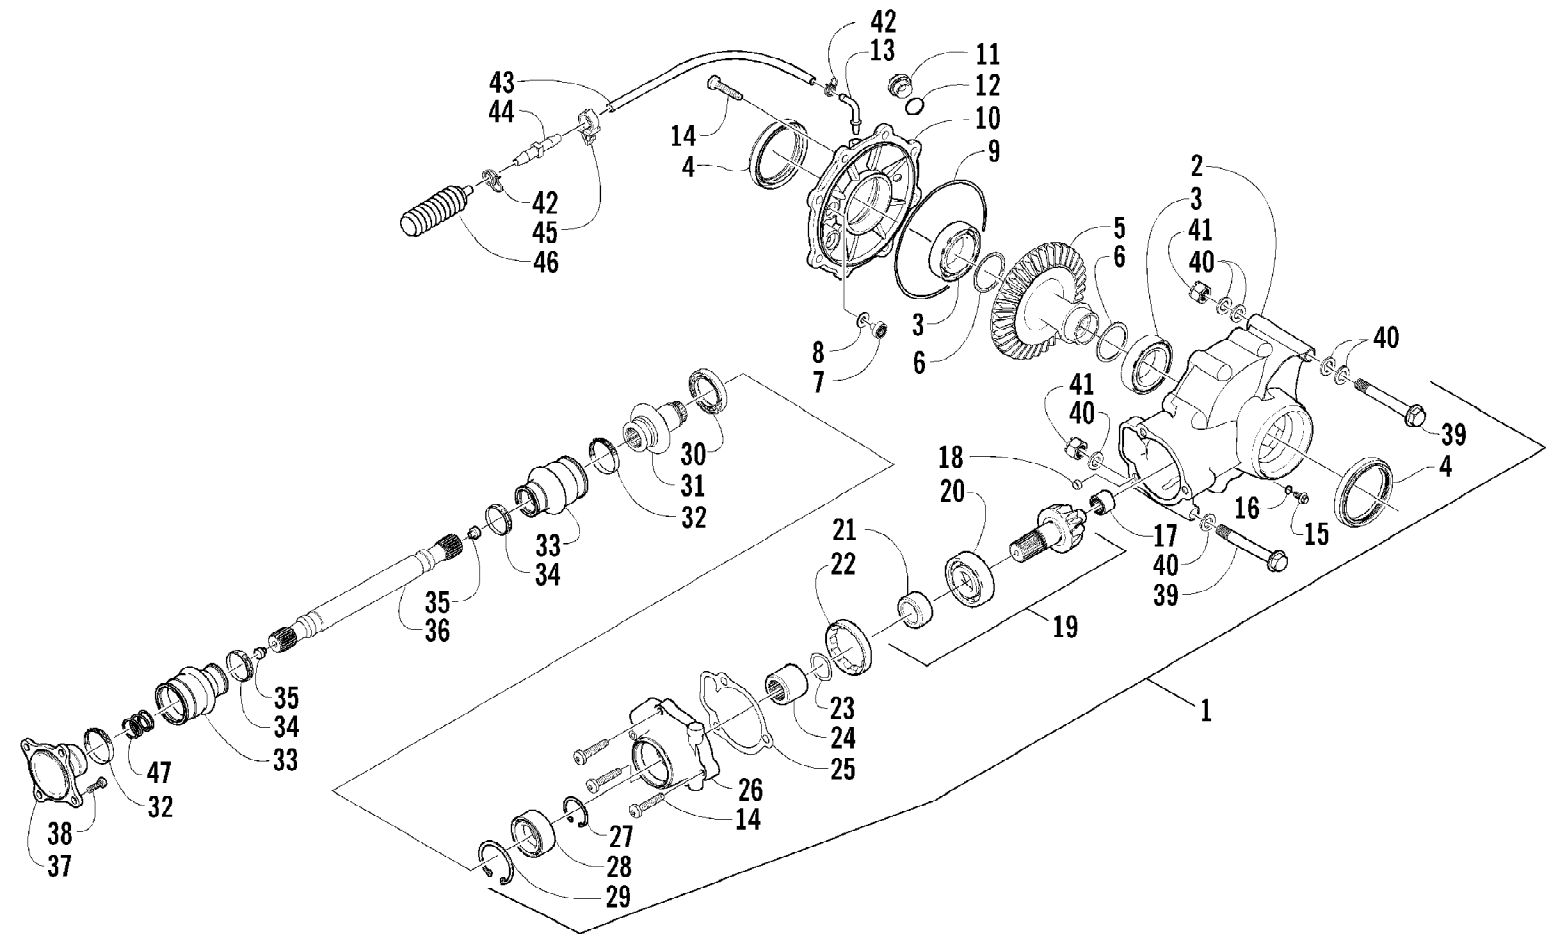


2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) (Page 60 of 93)
 REAR DRIVE GEARCASE ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0502-820	1	/P	Gearcase, Rear Drive - Assembly (inc. 2-31)
2	0502-622	1		Housing, Gearcase
3	0402-393	2		Bearing
4	0402-394	2	S	Seal
5	1402-032	1		Gear, Ring - 36T
6	0402-405	AR		Shim
6	0402-406	AR		Shim
6	0402-407	AR		Shim
6	0402-408	AR		Shim
6	0402-409	AR		Shim
7	0402-326	1		Button, Thrust
8	0402-429	AR		Shim
8	0402-430	AR		Shim
8	0402-431	AR		Shim
8	0402-432	AR		Shim
8	0402-433	AR		Shim
9	0423-149	1		O-Ring
10	0502-346	1		Cover, Gearcase
11	0402-333	1	/P	Plug, Fill (inc. 12)
12	0423-154	1		O-Ring
13	1402-102	1		Fitting
14	0423-118	11		Screw, Self-Tapping
15	0402-450	1	S	Plug, Magnetic (inc. 16)
16	0423-153	1		O-Ring
17	0402-328	1		Bearing
18	0402-411	1		Pin, Dowel
19	0502-783	1		Gear, Pinion - Assembly - 10T (inc. 20-21)
20	0402-327	1		Bearing
21	0402-336	1		Collar, Retaining
22	0402-331	1		Collar, Lock
23	0402-982	1		Washer, Wave
24	0402-981	1		Collar, Shaft
25	0402-947	1		Gasket, Flange
26	0502-529	1		Housing, Pinion
27	0423-417	1		Ring, Retaining
28	1402-043	1		Bearing
29	0423-423	1		Ring, Retaining
30	1402-011	1		Seal
31	0502-407	1	S	Shaft, Input
32	0423-393	2		Clamp, Boot
33	0402-985	2	/P	Boot
34	0423-411	2		Clamp, Boot
35	0673-618	2	/P	Bumper, Propeller Shaft
36	1402-092	1		Shaft, Propeller
37	0402-950	1		Flange, Output
38	8408-820	4	/P	Screw, Cap
39	0423-404	2		Screw, Cap
40	0423-426	6		Washer
41	8428-002	2		Nut, Lock
42	0423-315	3		Clamp, Fitting
43	0410-049	AR		Hose, Vent
44	0470-462	1		Fitting, Vent
45	0623-101	1		Clips, Retaining - Snap-In

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4BPSG) 61 of 93
REAR DRIVE GEARCASE ASSEMBLY


Ref #	Part Number	Qty	S/P/F	Description
46	0402-147	1	S	Bladder, Gearcase
47	1402-026	1		Spring

 2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) (Page 62 of 93)
REAR SUSPENSION ASSEMBLY

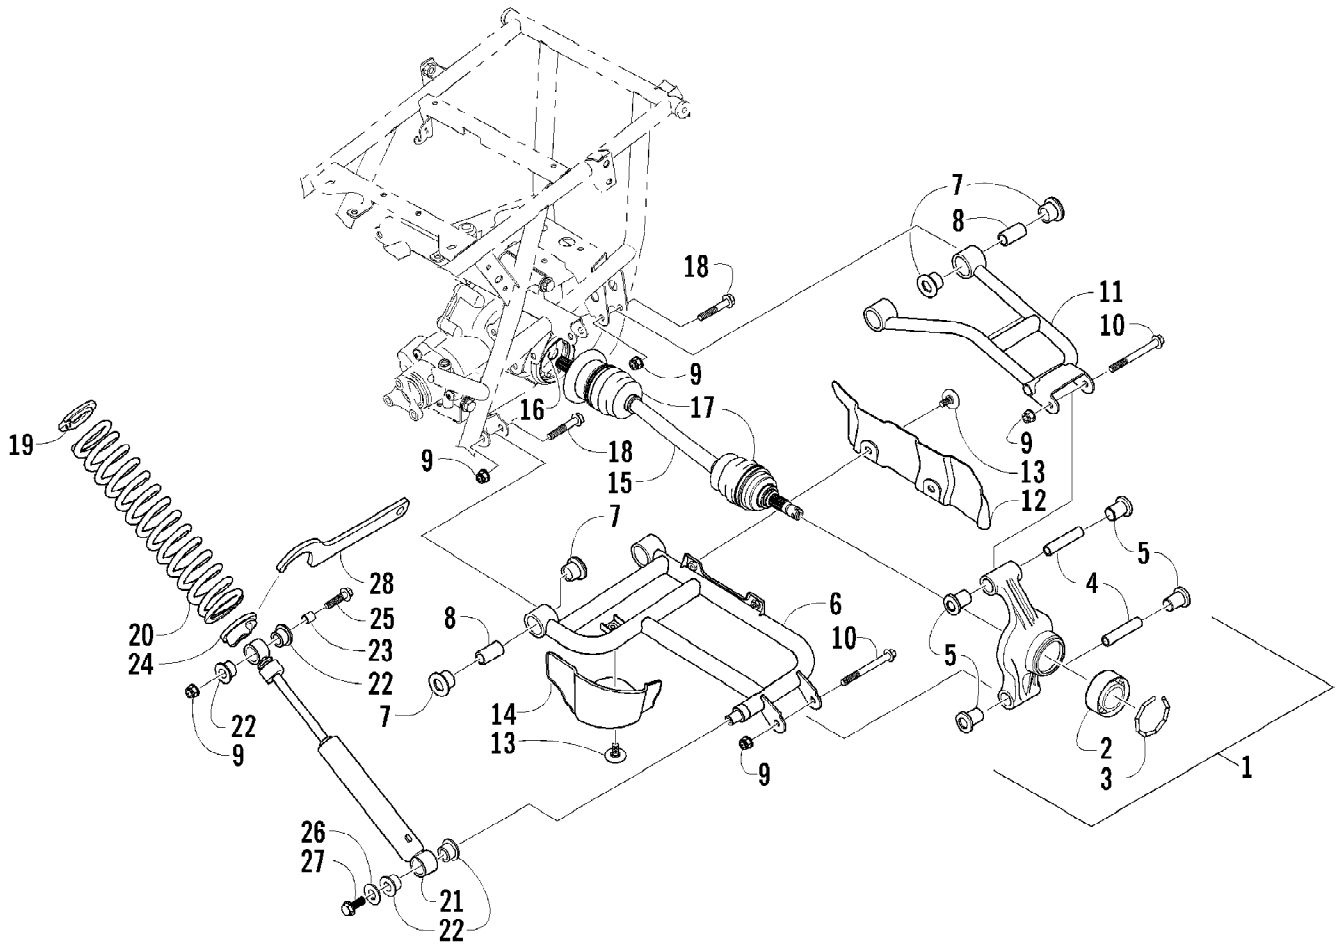

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) Page 63 of 93
 REAR SUSPENSION ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0504-372	1	S	Knuckle, Right Rear - Assembly (inc. 2-5)
1	0504-373	1	S/P	Knuckle, Left Rear - Assembly (inc. 2-5)
2	1402-027	2	S/P	Bearing, Wheel Hub
3	0423-423	2		Ring, Retaining
4	0403-038	4	S/P	Collar, Suspension Bushing
5	0403-032	8	S	Bushing, Suspension
6	0504-320	1	S	A-Arm, Rear - Lower Right (inc. 7-8)
6	0504-321	1	S	A-Arm, Rear - Lower Left (inc. 7-8)
7	0403-115	16	S	Bushing
8	0403-114	8	S	Collar
9	8428-002	14		Nut, Lock
10	8409-000	4		Screw, Cap
11	0504-318	1		A-Arm, Rear - Upper Right (inc. 7-8)
11	0504-319	1		A-Arm, Rear - Upper Left (inc. 7-8)
12	1441-004	1		Guard, Boot - Right
12	1441-005	1		Guard, Boot - Left
13	0423-101	6		Screw, Body
14	1406-071	1		Guard, Boot - Right
14	1406-072	1		Guard, Boot - Left
15	0502-811	2	S	Axle, Drive (inc. 16-17)
16	0441-400	2	S	Clip, Retaining
17	0436-276	2	S	Repair Kit, Boot - Rear
18	8409-075	8		Screw, Cap
19	1603-889	2	/P	Retainer, Spring
20	0404-126	2		Spring, Suspension
21	0404-099	2	/P	Shock Absorber - Rear (inc. 22-23)
22	0604-310	8		Bushing, Shock Absorber
23	0403-028	2		Sleeve, Shock Absorber
24	0404-057	2		Cam, Spring Adjuster
25	8409-050	2		Screw, Cap
26	0423-087	2		Washer
27	8408-820	2	/P	Screw, Cap
28	0441-587	1		Wrench, Spanner

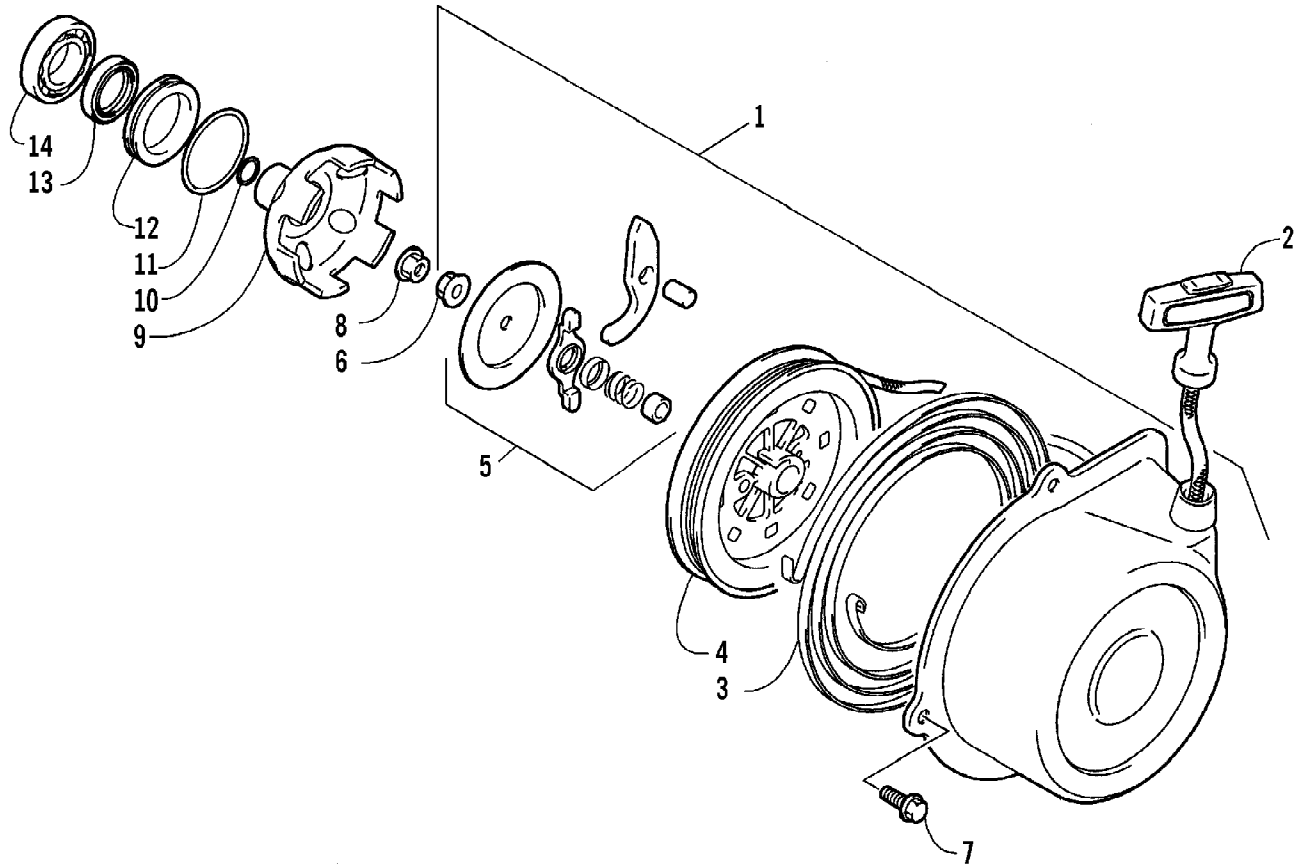 

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) (Page 65 of 93)
 RECOIL STARTER ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	3445-003	1		Starter, Recoil - Assembly (inc. 2-6)
2	3445-011	1		Rope Assembly
3	3445-007	1		Spring, Spiral
4	3445-004	1		Reel
5	3445-016	1		Ratchet Assembly
6	3004-488	1	S/P	Nut
7	3423-428	4		Screw, Cap
8	3004-491	1	S/P	Nut
9	3445-029	1	/P	Cup, Starter
10	3423-053	1	/P	O-Ring
11	3423-063	1		O-Ring
12	3402-119	1	S	Spacer
13	3402-070	1		Seal, Oil
14	3402-051	1		Bearing


No
Diagram
Available

Parts List
Only

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) Page 67 of 93
 RELATED ITEMS


Ref #	Part Number	Qty	S/P/F	Description
	0436-660	1	S	Bag, Rack, Front, Black
	0436-480	1		Bar, Utility
	0436-619	1		Brush Guard/Bumper - Deluxe
	0402-563	1		Tire, Titan AT589
	2257-300	1		Manual, Operator's (E)
	2257-314	1		Manuel d'utilisation (F)
	0652-024	1		Paint, Metal - Black
	0436-635	1		Plow Attachment Kit
	0436-228	1		Plow Blade, 50 in. - Straight
	0436-287	1		Plow Blade, 50 in. - One-Way
	0436-296	1		Plow Blade, 60 in. - Straight
	0436-360	1		Plow Blade, 60 in. - One-Way
	0436-636	1	/P	Plow, Push Frame
	0436-626	1	S	Rack Basket
	0436-798	1	/P	Rack - Rear
	0436-026	1		Tire Chains, Size B
	0436-027	1		Tire Chains, Size C
	1402-028	1		Tire, Titan AT589
	0436-656	1		Winch Accessories Kit
	0436-655	1		Winch Kit, 2500 lb
	0436-703	1		Windshield, Clear
	0436-623	1		Windshield, Clear w/Accent
	0436-470	1		Workbase (8 in.)
	0436-757	1	/P	Bumper - Rear
	0436-827	1		Cargo Box
	0436-459	1	/P	Carryall (9 x 12)
	0436-460	1		Carryall (11 x 17)
	0436-462	1		Carryall (10 D)
	0436-477	1		Cord Reel
	0436-726	1	S	Cover, Trailerable
	0436-087	1	/P	Electrical Plug
	0436-035	1	S	Engine Block Heater
	0436-466	1		Fender Box (24 in. and 25 in. Tires)
	0436-538	1		Gear Cradle
	0436-501	1	S	Grease, High-Performance (25 in. and 26 in. Tires)
	0436-464	1		Grill Cradle
	0436-828	1		Gun Holder - Pro-Grip (25x8-12, Mud & Snow)
	0436-352	1		Hand/Thumb Warmers
	0436-463	1		Light Bar (25x10-12, Mud & Snow)
	0436-516	1		Light Mount, Portable - Cargo Box
	0436-040	1	/P	Light, Portable - Spotlight
	0436-039	1	/P	Light, Portable - Work
	0436-122	1	S	Lunch Pack, Black
	2257-465	1		Manual, Illustrated Parts

 2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) (Page 68 of 93)
REVERSE SHIFT LEVER ASSEMBLY

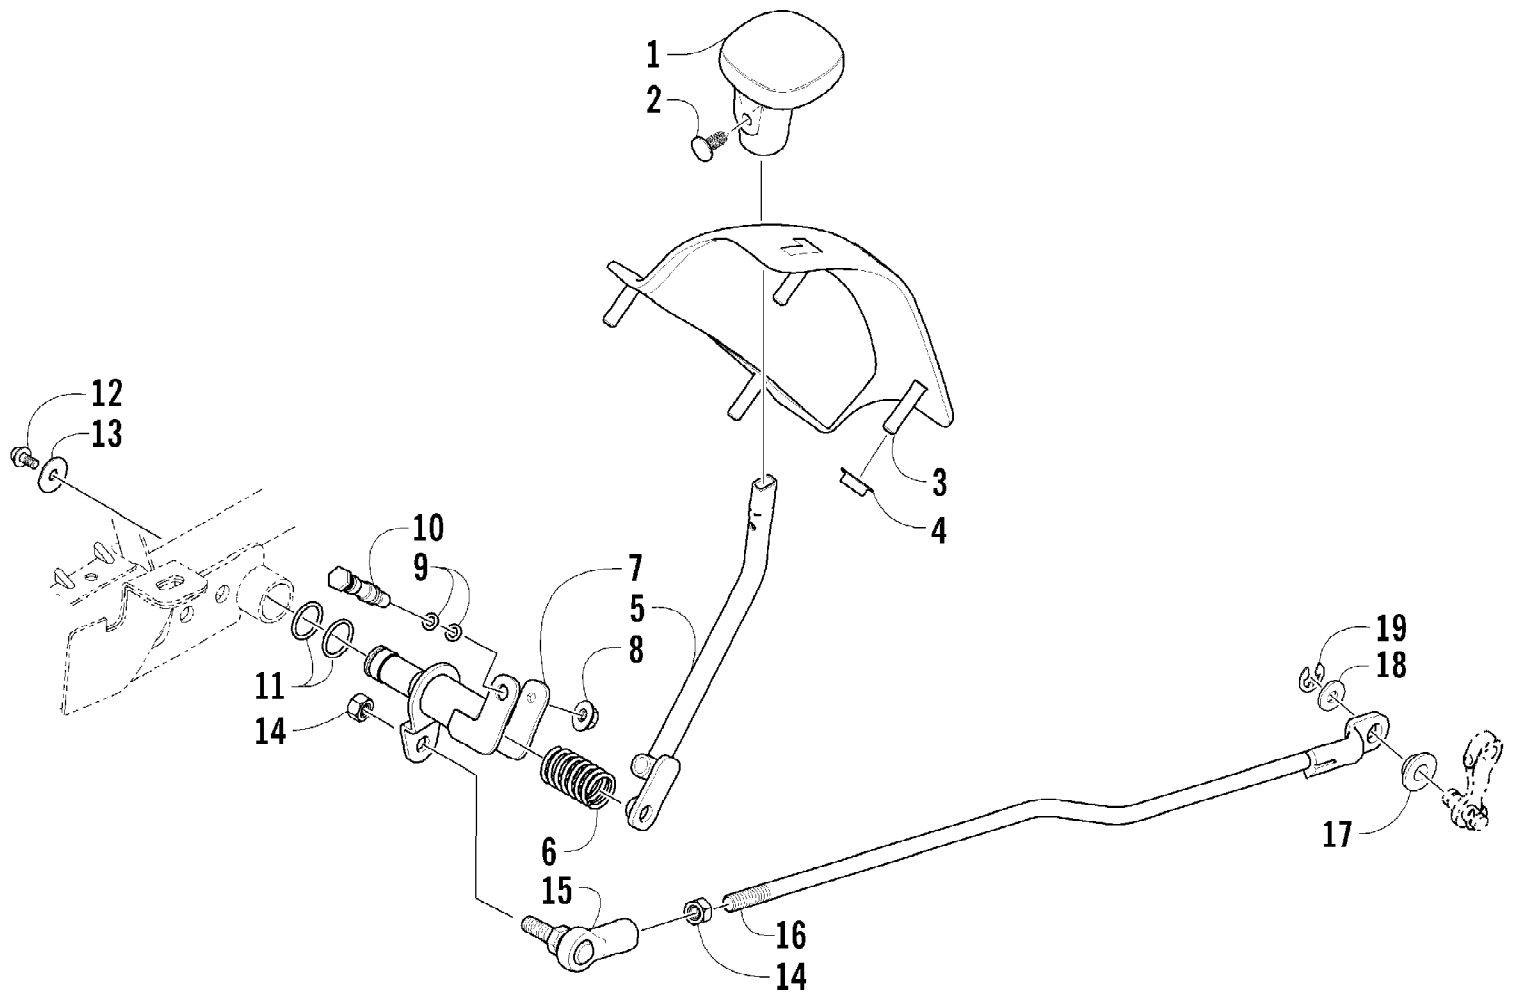

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) Page 69 of 93
 REVERSE SHIFT LEVER ASSEMBLY


Ref #	Part Number	Qty	S/P/F	Description
1	0402-843	1	/P	Handle, Reverse Shift Lever
2	0423-345	1		Clip, Push
3	1402-110	1		Plate, Shift
4	0423-357	4		Nut, Stamped
5	0502-659	1		Lever, Reverse Shift
6	0502-410	1	S	Spring
7	0502-742	1		Axle, Reverse Shift Lever
8	8424-602	1	/P	Nut
9	0423-182	2	/P	O-Ring
10	0402-675	1		Axle, Pivot
11	0423-299	2	/P	O-Ring
12	8408-812	1		Screw, Cap
13	0423-087	1		Washer
14	0623-294	2		Nut
15	1402-270	1		End, Rod
16	0502-989	1	/P	Linkage, Shift
17	0423-091	1		Bushing
18	0623-094	1		Washer
19	0423-169	1	/P	E-Ring

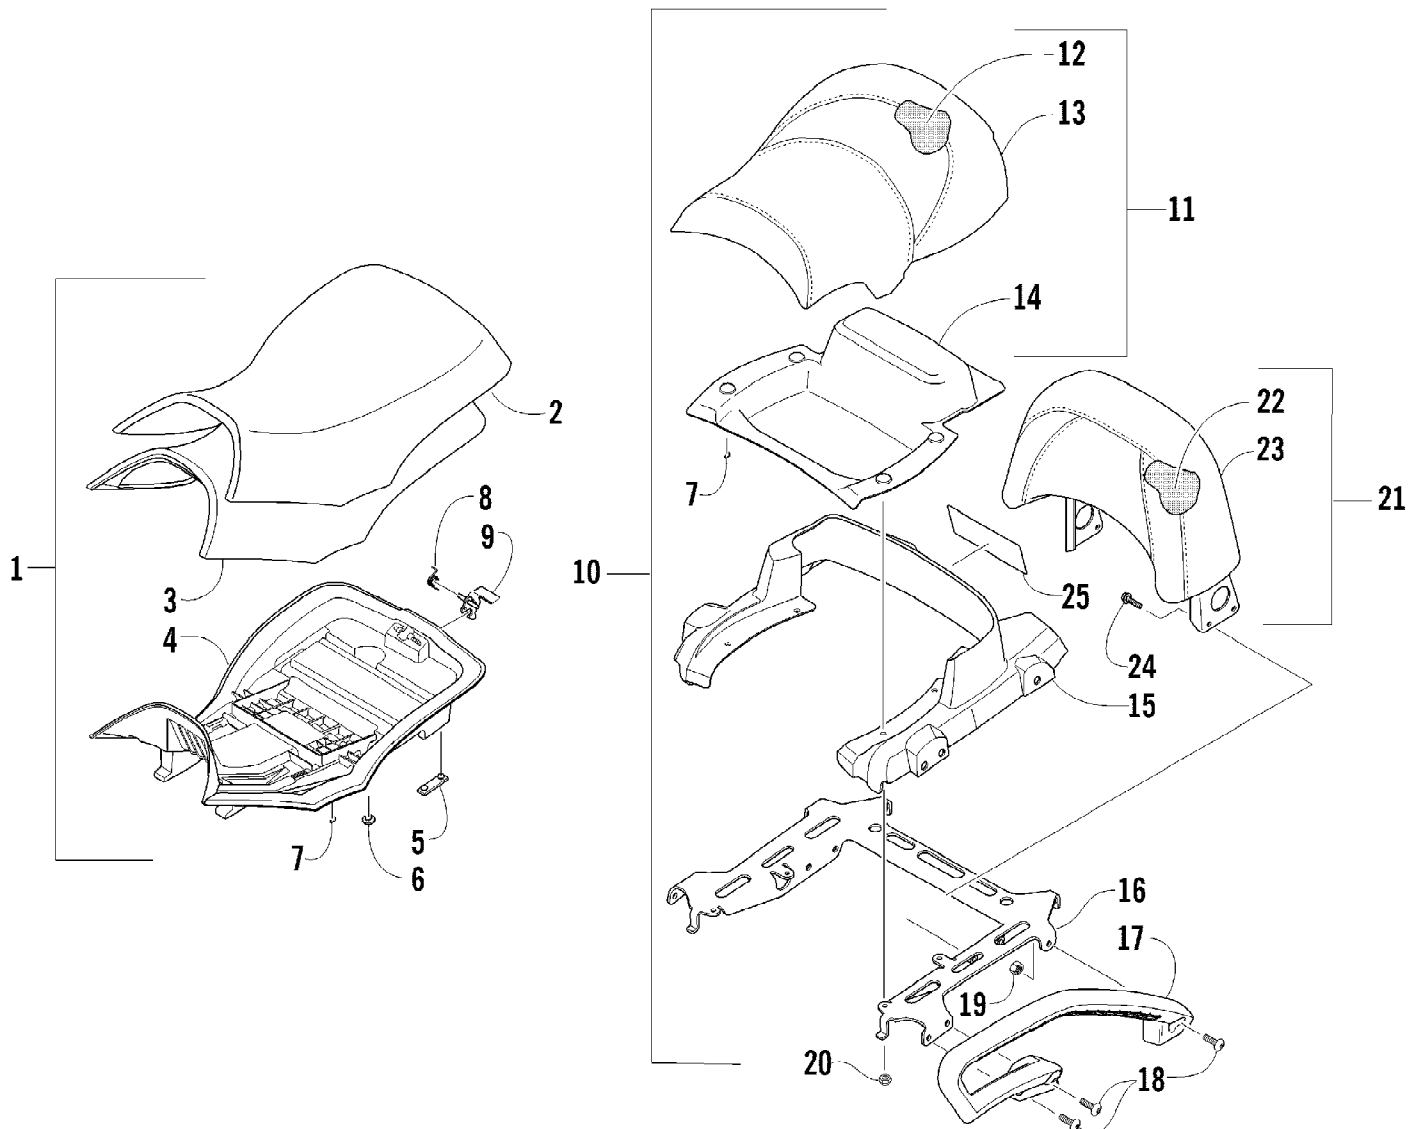 

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) Page 71 of 93
 SEAT AND BACKREST ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	1506-937	1	S/P	Seat Assembly (inc. 2-9)
2	1506-209	1		Cover, Seat
3	1506-208	1		Foam, Seat
4	2406-144	1	S/P	Base, Seat - Assembly (inc. 5-6)
5	0406-879	2		Bumper, Seat - Rear
6	0406-877	4	/P	Bumper, Seat - Front
7	0624-100	AR		Staple
8	1406-592	1	/P	Spring, Seat Latch
9	1506-156	1		Latch, Seat
10	1506-938	1		Seat, Passenger - Assembly (inc. 7, 11-20, and 25)
11	2506-064	1		Seat, Passenger - Sub-Assembly (inc. 7 and 12-14)
12	1506-816	1		Foam, Seat - Passenger
13	1506-815	1		Cover, Seat - Passenger
14	2406-110	1		Base, Seat - Inner
15	2406-044	1		Base, Seat - Passenger
16	1506-932	1		Bracket, Seat Support - Assembly
17	2406-112	1		Handhold, Passenger - Right
17	2406-113	1		Handhold, Passenger - Left
18	0423-362	6		Screw, Machine
19	8432-802	6		Nut, Lock
20	8427-602	4		Nut, Lock
21	1506-939	1		Backrest Assembly (inc. 22-23)
22	1506-818	1		Foam, Backrest
23	1506-817	1		Cover, Backrest
24	8408-816	4		Screw, Cap
25	0411-814	1	/P	Decal, "Arctic Cat"

 
2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) (Page 72 of 93)
SECONDARY DRIVE ASSEMBLY

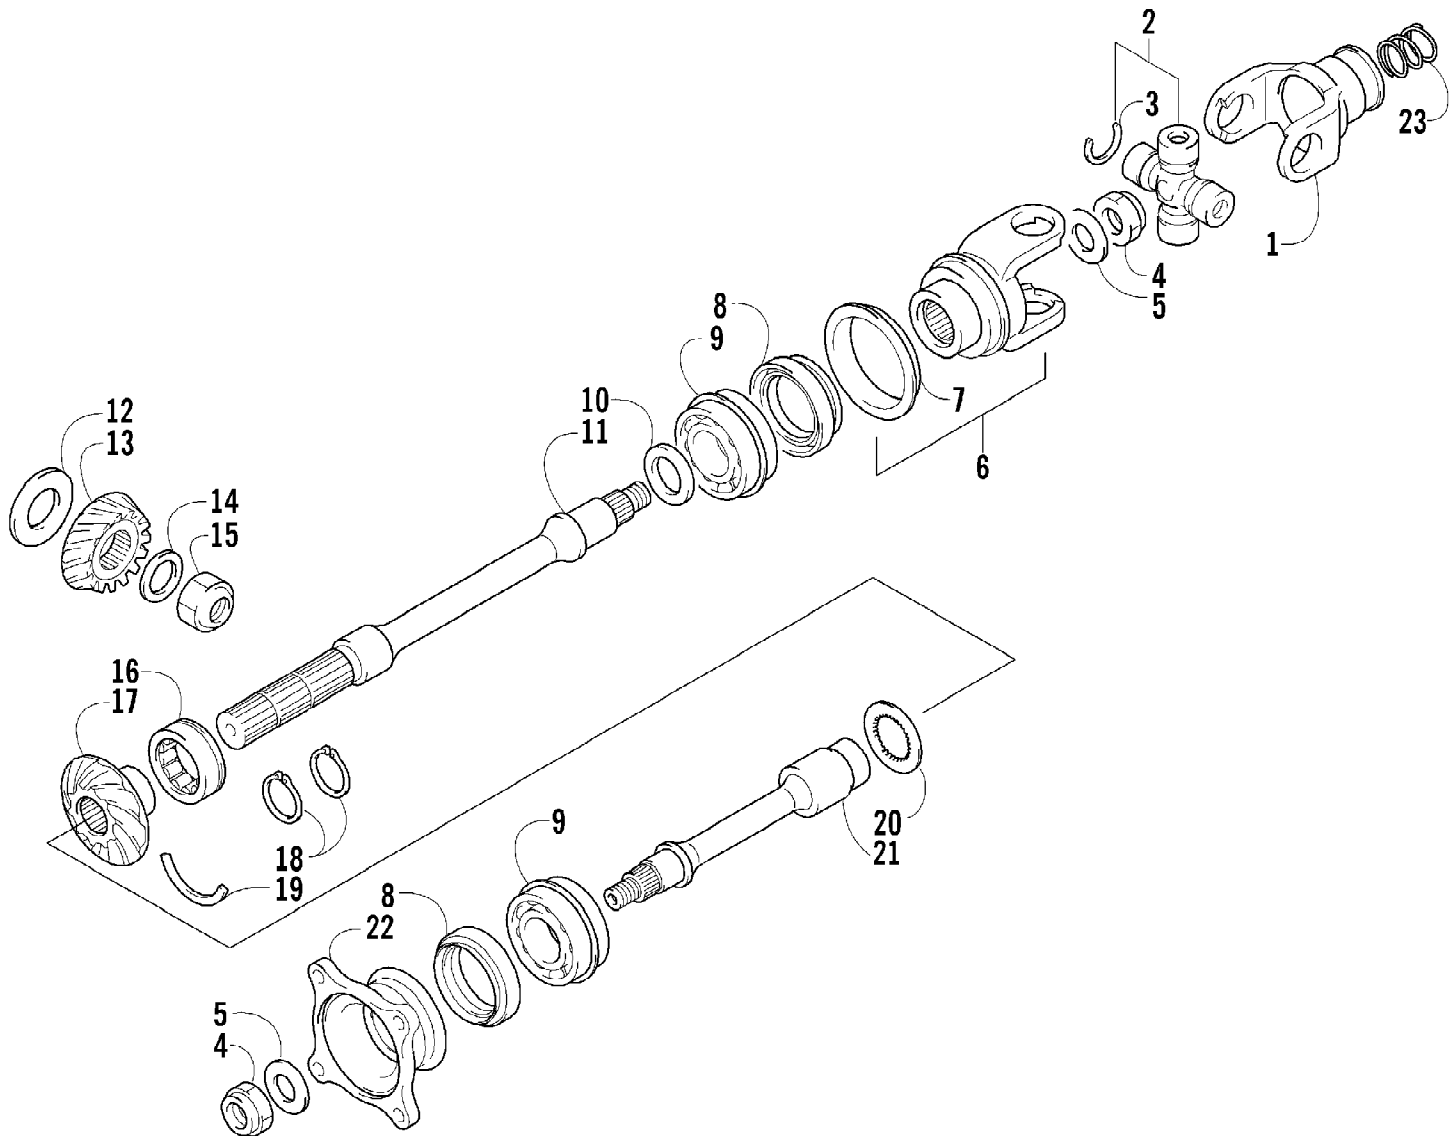

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) Page 73 of 93
 SECONDARY DRIVE ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	3446-327	1	/P	Yoke, Propeller Shaft Joint
2	3402-562	1		Joint, Universal - Set (inc. 3)
3	3423-479	4		Circlip
4	3423-025	2		Nut, Rear Output Joint
5	3423-028	2		Washer, Rear Output Flange
6	3402-742	1		Yoke, Drive Output - Front (inc. 7)
7	3402-743	1		Plate, Output Yoke
8	3402-072	2		Seal, Oil - Driven Shaft
9	3402-067	2	S	Bearing, Driven Shaft
10	3402-017	AR		Shim, 25 x 34 x 0.60 mm
10	3402-018	AR		Shim, 25 x 34 x 0.65 mm
10	3402-019	AR		Shim, 25 x 34 x 0.70 mm
10	3402-020	AR		Shim, 25 x 34 x 0.75 mm
10	3402-021	AR	S	Shim, 25 x 34 x 0.80 mm
10	3402-022	AR		Shim, 25 x 34 x 0.85 mm
10	3402-023	AR		Shim, 25 x 34 x 0.90 mm
10	3402-024	AR		Shim, 25 x 34 x 0.95 mm
10	3402-025	AR	S	Shim, 25 x 34 x 1.00 mm
10	3402-028	AR		Shim, 25 x 34 x 1.05 mm
10	3402-029	AR		Shim, 25 x 34 x 1.10 mm
10	3402-030	AR		Shim, 25 x 34 x 1.15 mm
10	3402-031	AR		Shim, 25 x 34 x 1.20 mm
11	3402-740	1		Shaft, Secondary Driven - Front
12	3446-035	1		Shim, Secondary Drive Gear - Set
13	3402-738	1		Gear, Secondary Drive
14	3005-372	1		Washer
15	3423-023	1		Nut
16	3402-515	1	/P	Bearing, Driven Gear
17	3402-739	1		Gear, Secondary Driven
18	3423-340	2	S	Circlip, Secondary Driven Gear
19	3423-072	1		Ring, Driven Bearing
20	3423-415	1		Washer, Driven Shaft
21	3402-513	1		Shaft, Secondary Driven - Rear
22	3402-514	1	/P	Flange, Output Joint - Rear
23	1402-026	1		Spring

 
2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) Page 74 of 93
SECONDARY TRANSMISSION ASSEMBLY

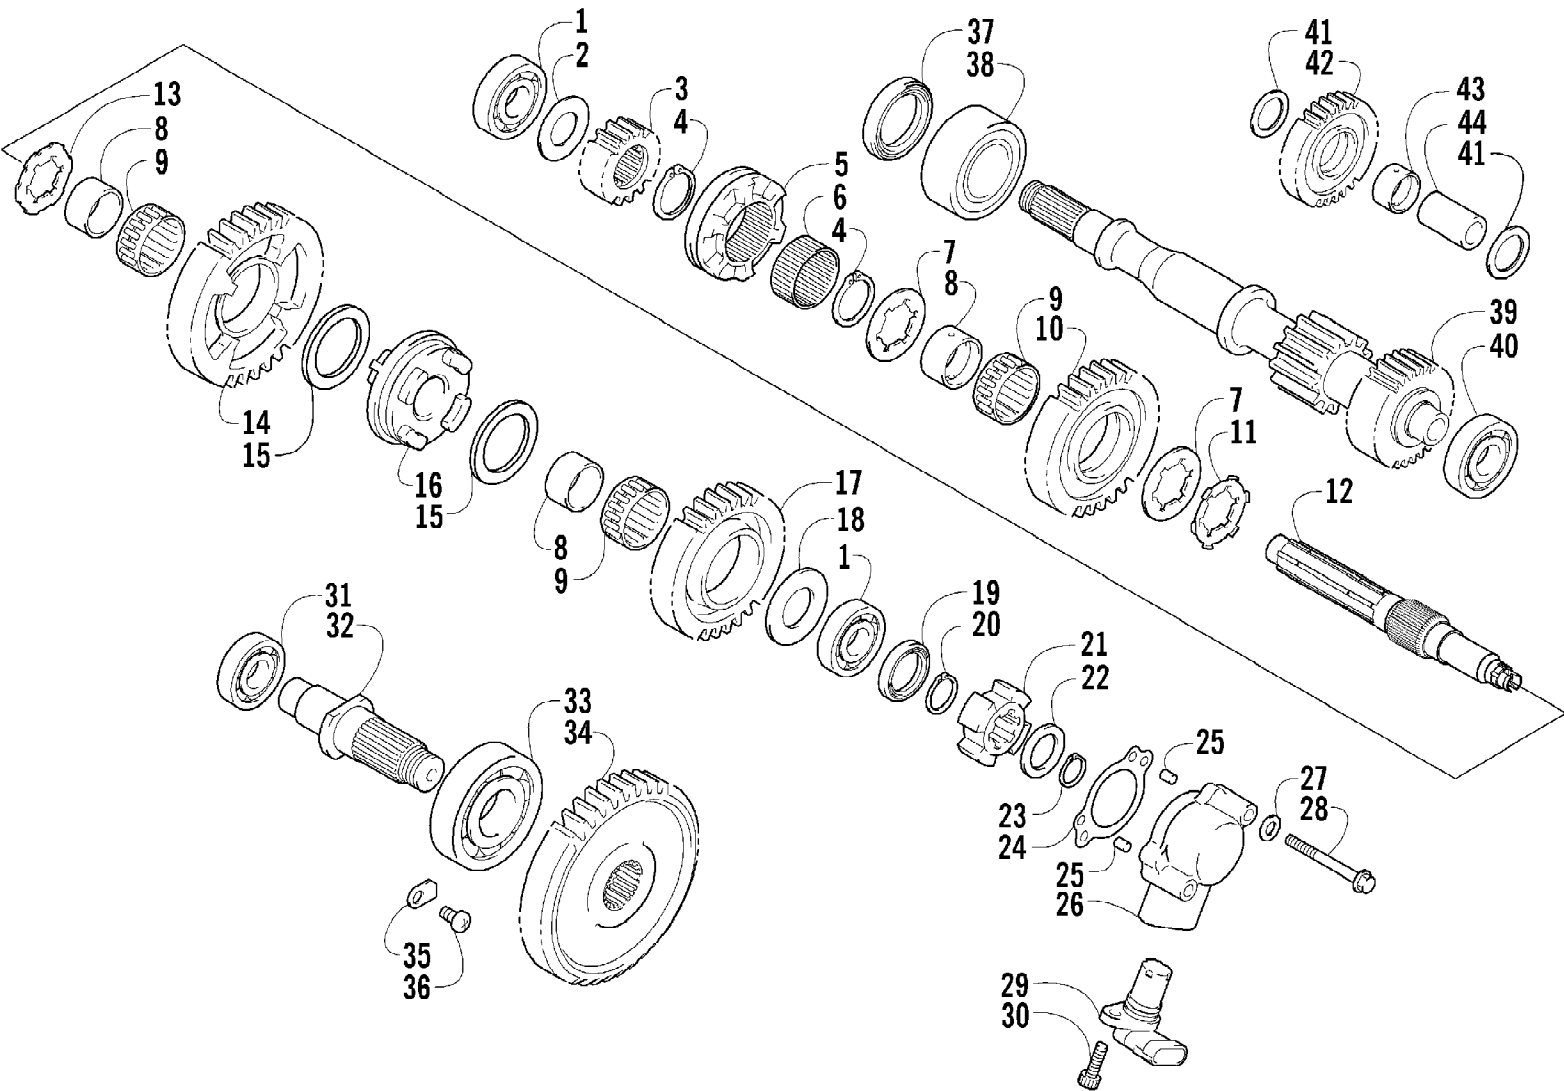

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) Page 75 of 93
 SECONDARY TRANSMISSION ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	3402-045	2	/P	Bearing, Shaft
2	3402-381	1	/P	Washer, Drive Gear No. 2 - Right
3	3402-497	1		Gear, Drive - No. 2
4	3423-066	2	/P	Circlip
5	3402-821	1		Dog, Reverse Driven Gear
6	3402-825	1		Spacer, Reverse Driven Gear
7	3423-263	2		Washer
8	3402-494	3		Bushing
9	3402-498	3		Bearing
10	3402-822	1		Gear, Reverse Driven
11	3423-266	1		Washer, Lock
12	3402-820	1		Countershaft
13	3423-262	1		Washer, Lock
14	3402-668	1	/P	Gear, Driven - Low
15	3423-554	2		Washer, Driven Gear
16	3402-824	1		Dog, Sliding
17	3402-733	1		Gear, Driven - High
18	3423-412	1		Washer, Drive Gear - Left
19	3402-836	1		Seal, Countershaft - Left
20	3423-518	1		Circlip
21	3402-837	1		Rotor
22	3423-556	1		Washer
23	3423-557	1		Circlip
24	3446-289	1		Gasket
25	3006-547	2	/P	Pin
26	3446-355	1		Housing, Speedometer Sensor
27	3003-290	2	/P	Gasket
28	3423-091	2	S	Bolt
29	3402-838	1		Sensor, Speedometer
30	3423-226	1		Bolt
31	3402-735	1		Bearing, Shaft
32	3402-835	1		Shaft, Output
33	3402-502	1		Bearing, Output Shaft
34	3402-534	1	/P	Gear, Driven - No. 2
35	3446-031	2	/P	Retainer, Bearing
36	3423-435	2		Screw, Bearing Retainer
37	3402-537	1	/P	Seal, Driveshaft - Left
38	3402-499	1		Bearing, Driveshaft - Right
39	3402-731	1		Driveshaft
40	3003-261	1	/P	Bearing, Driveshaft - Left
41	3402-195	2		Washer, Reverse Idle Gear
42	3402-503	1		Gear, Reverse Idle
43	3446-103	1		Bushing, Reverse Idle Gear
44	3402-507	1		Shaft, Reverse Idle

 
2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) (Page 76 of 93)
STARTER CLUTCH ASSEMBLY

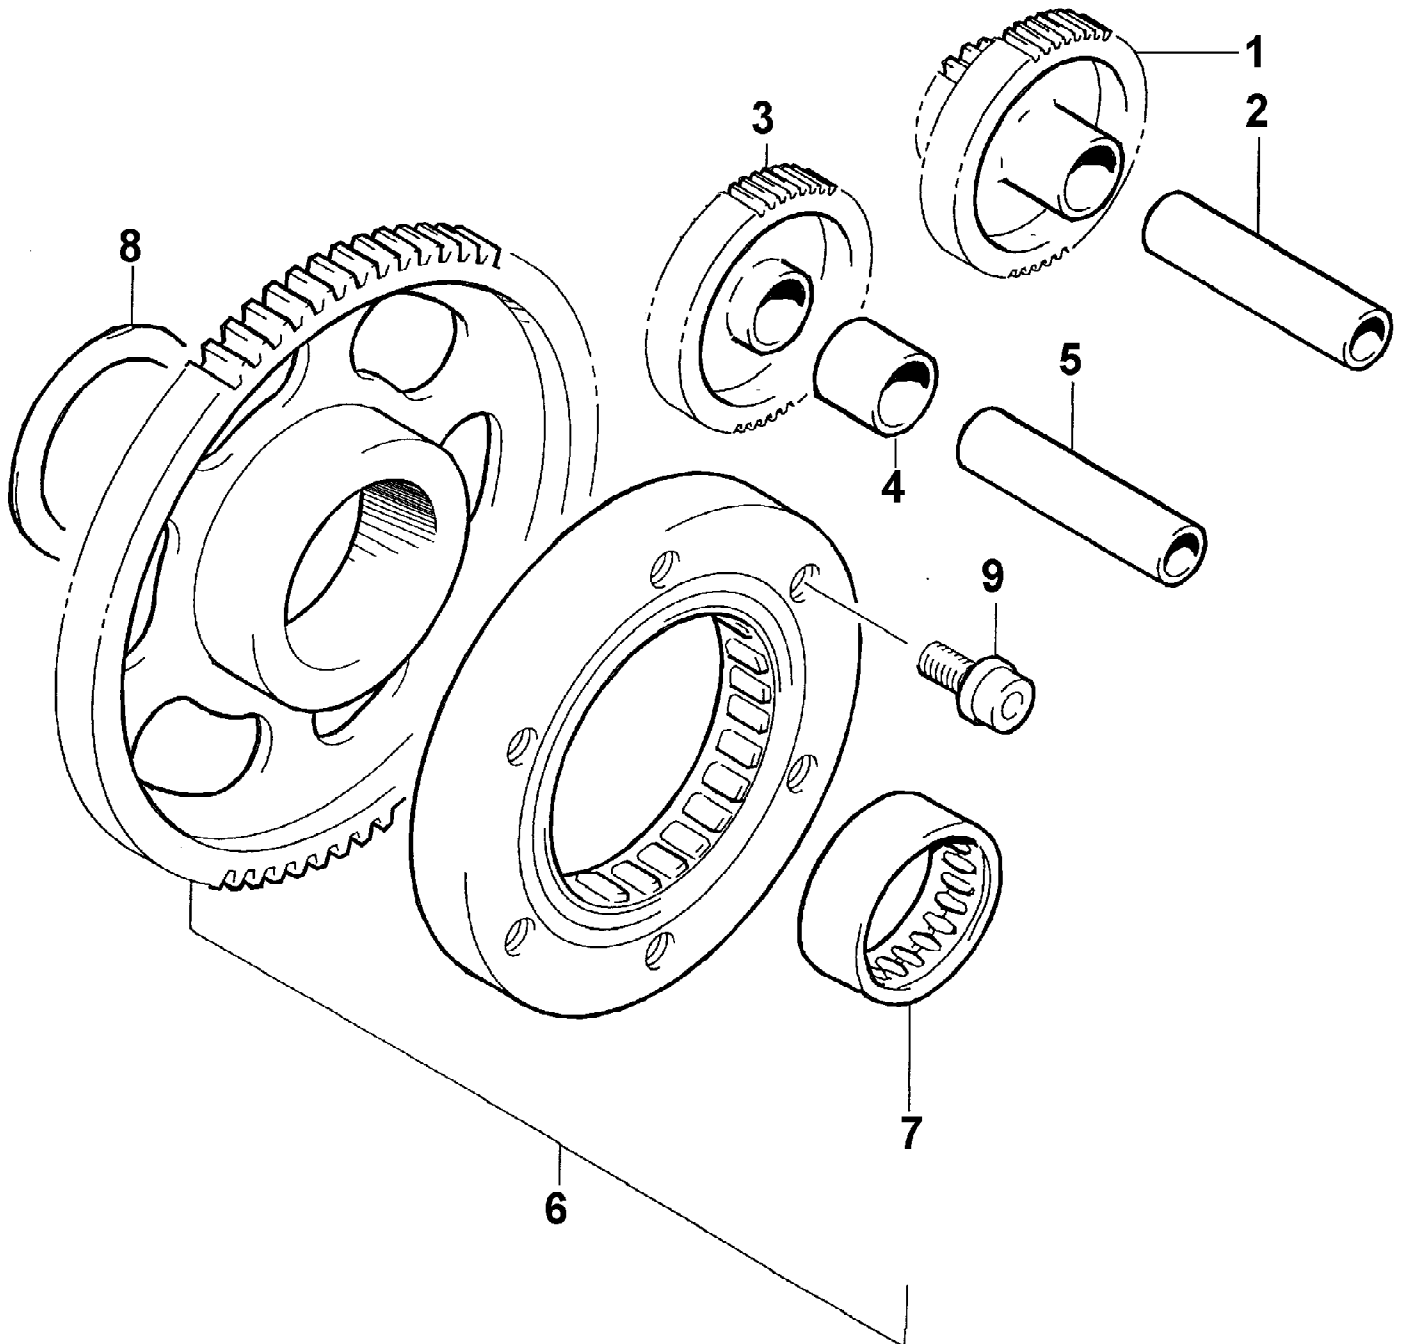

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4BPSG) 77 of 93
 STARTER CLUTCH ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	3402-813	1	/P	Gear, Starter Idler - No. 1
2	3423-331	1		Pin
3	3402-349	1		Gear, Starter Idler - No. 2
4	3423-396	1		Spacer, Starter Idler Gear No. 2
5	3423-397	1		Pin
6	3402-457	1		Clutch, Starter - Set (inc. 7)
7	3402-063	1		Bearing
8	3423-104	1		Washer
9	3402-509	6		Screw, Cap

 
2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) Page 78 of 93
STARTER MOTOR ASSEMBLY

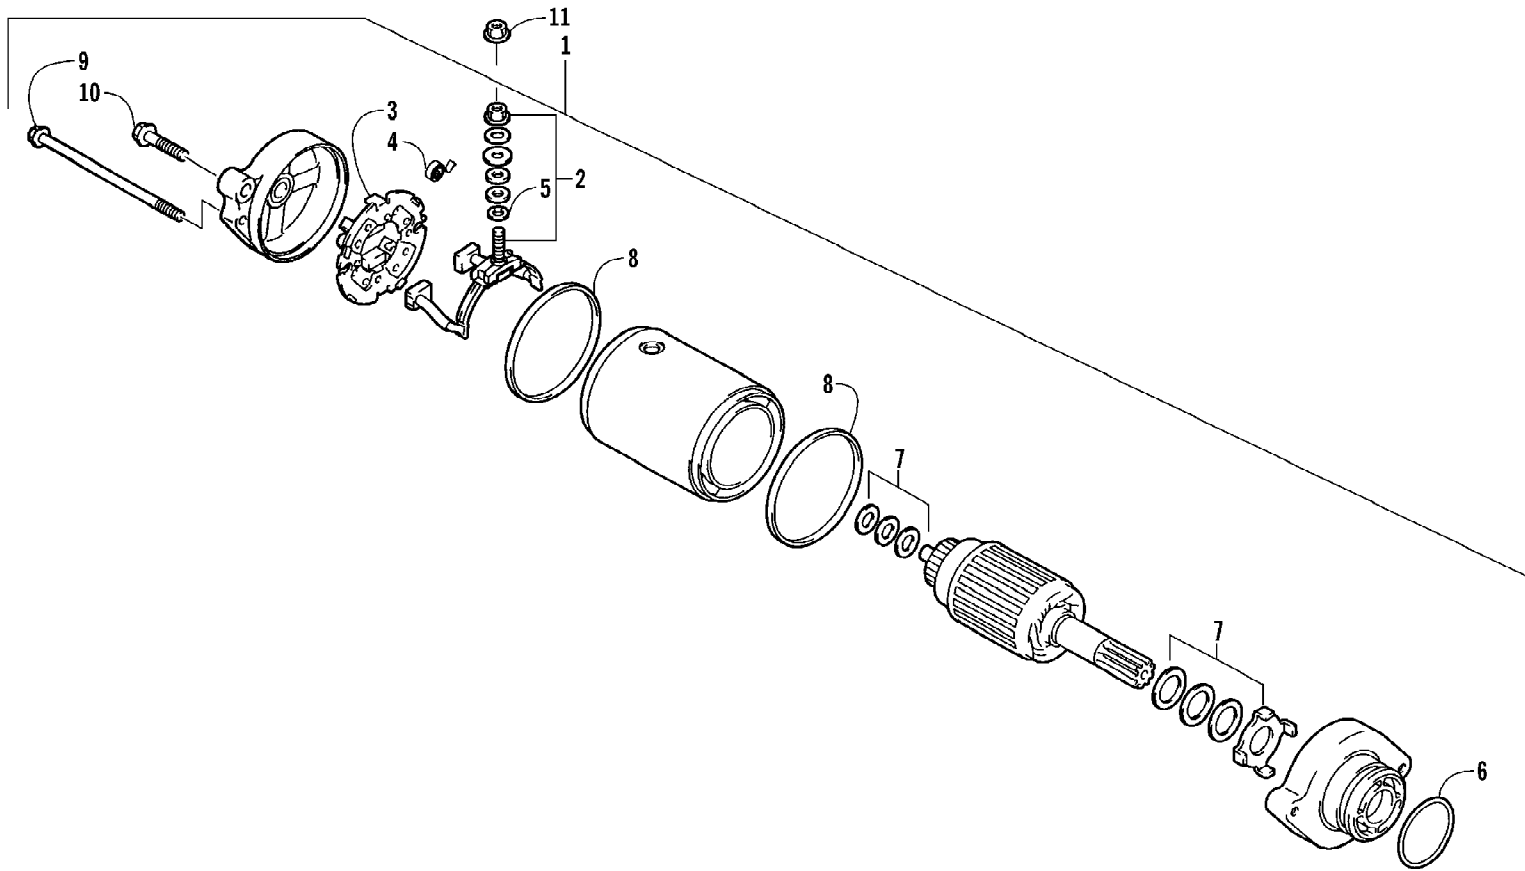

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) Page 79 of 93
 STARTER MOTOR ASSEMBLY


Ref #	Part Number	Qty	S/P/F	Description
1	3545-015	1	S	Motor, Starter Assembly (inc. 2-9)
2	3008-094	1	/P	Terminal Set, Brush
3	3008-095	1	/P	Holder Set, Brush
4	3008-096	4		Spring, Brush
5	3008-164	1		O-Ring
6	3423-084	1		O-Ring
7	3436-001	1		Washer Set
8	3008-553	2	/P	O-Ring
9	3423-085	2		Through-Bolt
10	3423-162	2	S	Screw, Cap
11	3423-195	1	/P	Nut

 2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) (Page 80 of 93)
STEERING POST ASSEMBLY

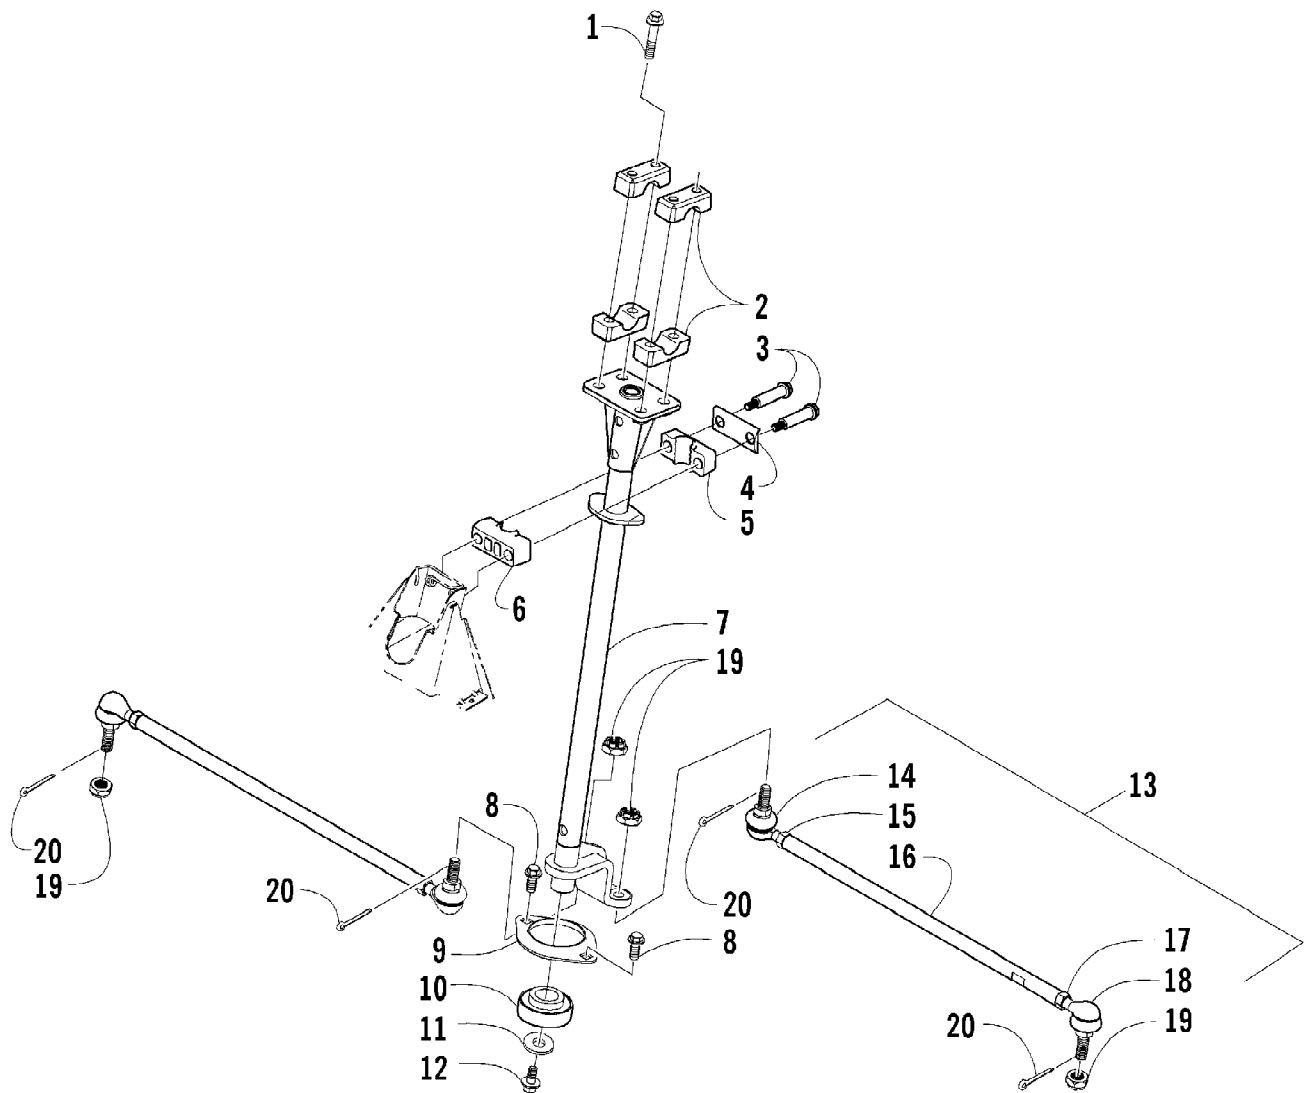


2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) Page 81 of 93
 STEERING POST ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	8408-860	4		Screw, Cap
2	0405-035	4		Cap, Steering Adjuster
3	0423-505	2		Screw, Shoulder
4	0405-166	1		Cap, Housing
5	0405-138	1		Housing, Lower
6	0405-139	1		Housing, Upper
7	0505-451	1	S	Post, Steering
8	8408-816	2		Screw, Cap
9	0602-233	1		Flange, Bearing
10	0405-052	1		Bearing w/Inverted Oil Seal
11	0423-073	1		Washer
12	8409-020	1	/P	Screw, Cap
13	0505-408	2	S	Tie Rod - Assembly (inc. 14-18)
14	0405-083	2	S	Ball Joint, Tie Rod - Left
15	0423-013	2		Nut - Left
16	0405-107	2	S	Tie Rod
17	8420-002	2	/P	Nut - Right
18	0405-082	2	S	Ball Joint, Tie Rod - Right
19	0423-157	4		Nut, Lock
20	0623-175	4		Pin, Cotter

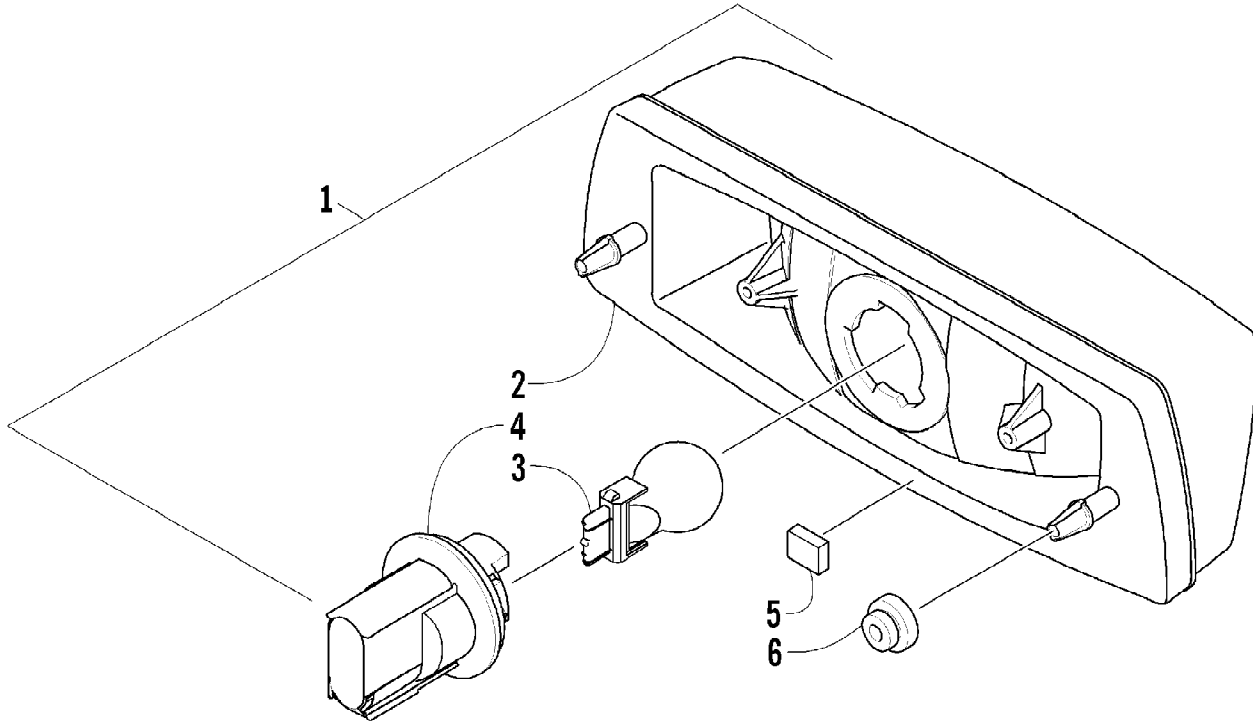 


2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) Page 83 of 93
 TAILLIGHT ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0509-022	1		Taillight Assembly (inc. 2-4)
2	0509-025	1		Housing, Taillight
3	0409-056	1		Bulb, Taillight
4	0409-057	1		Socket, Taillight
5	1406-790	4		Pad, Taillight
6	0423-534	2		Grommet

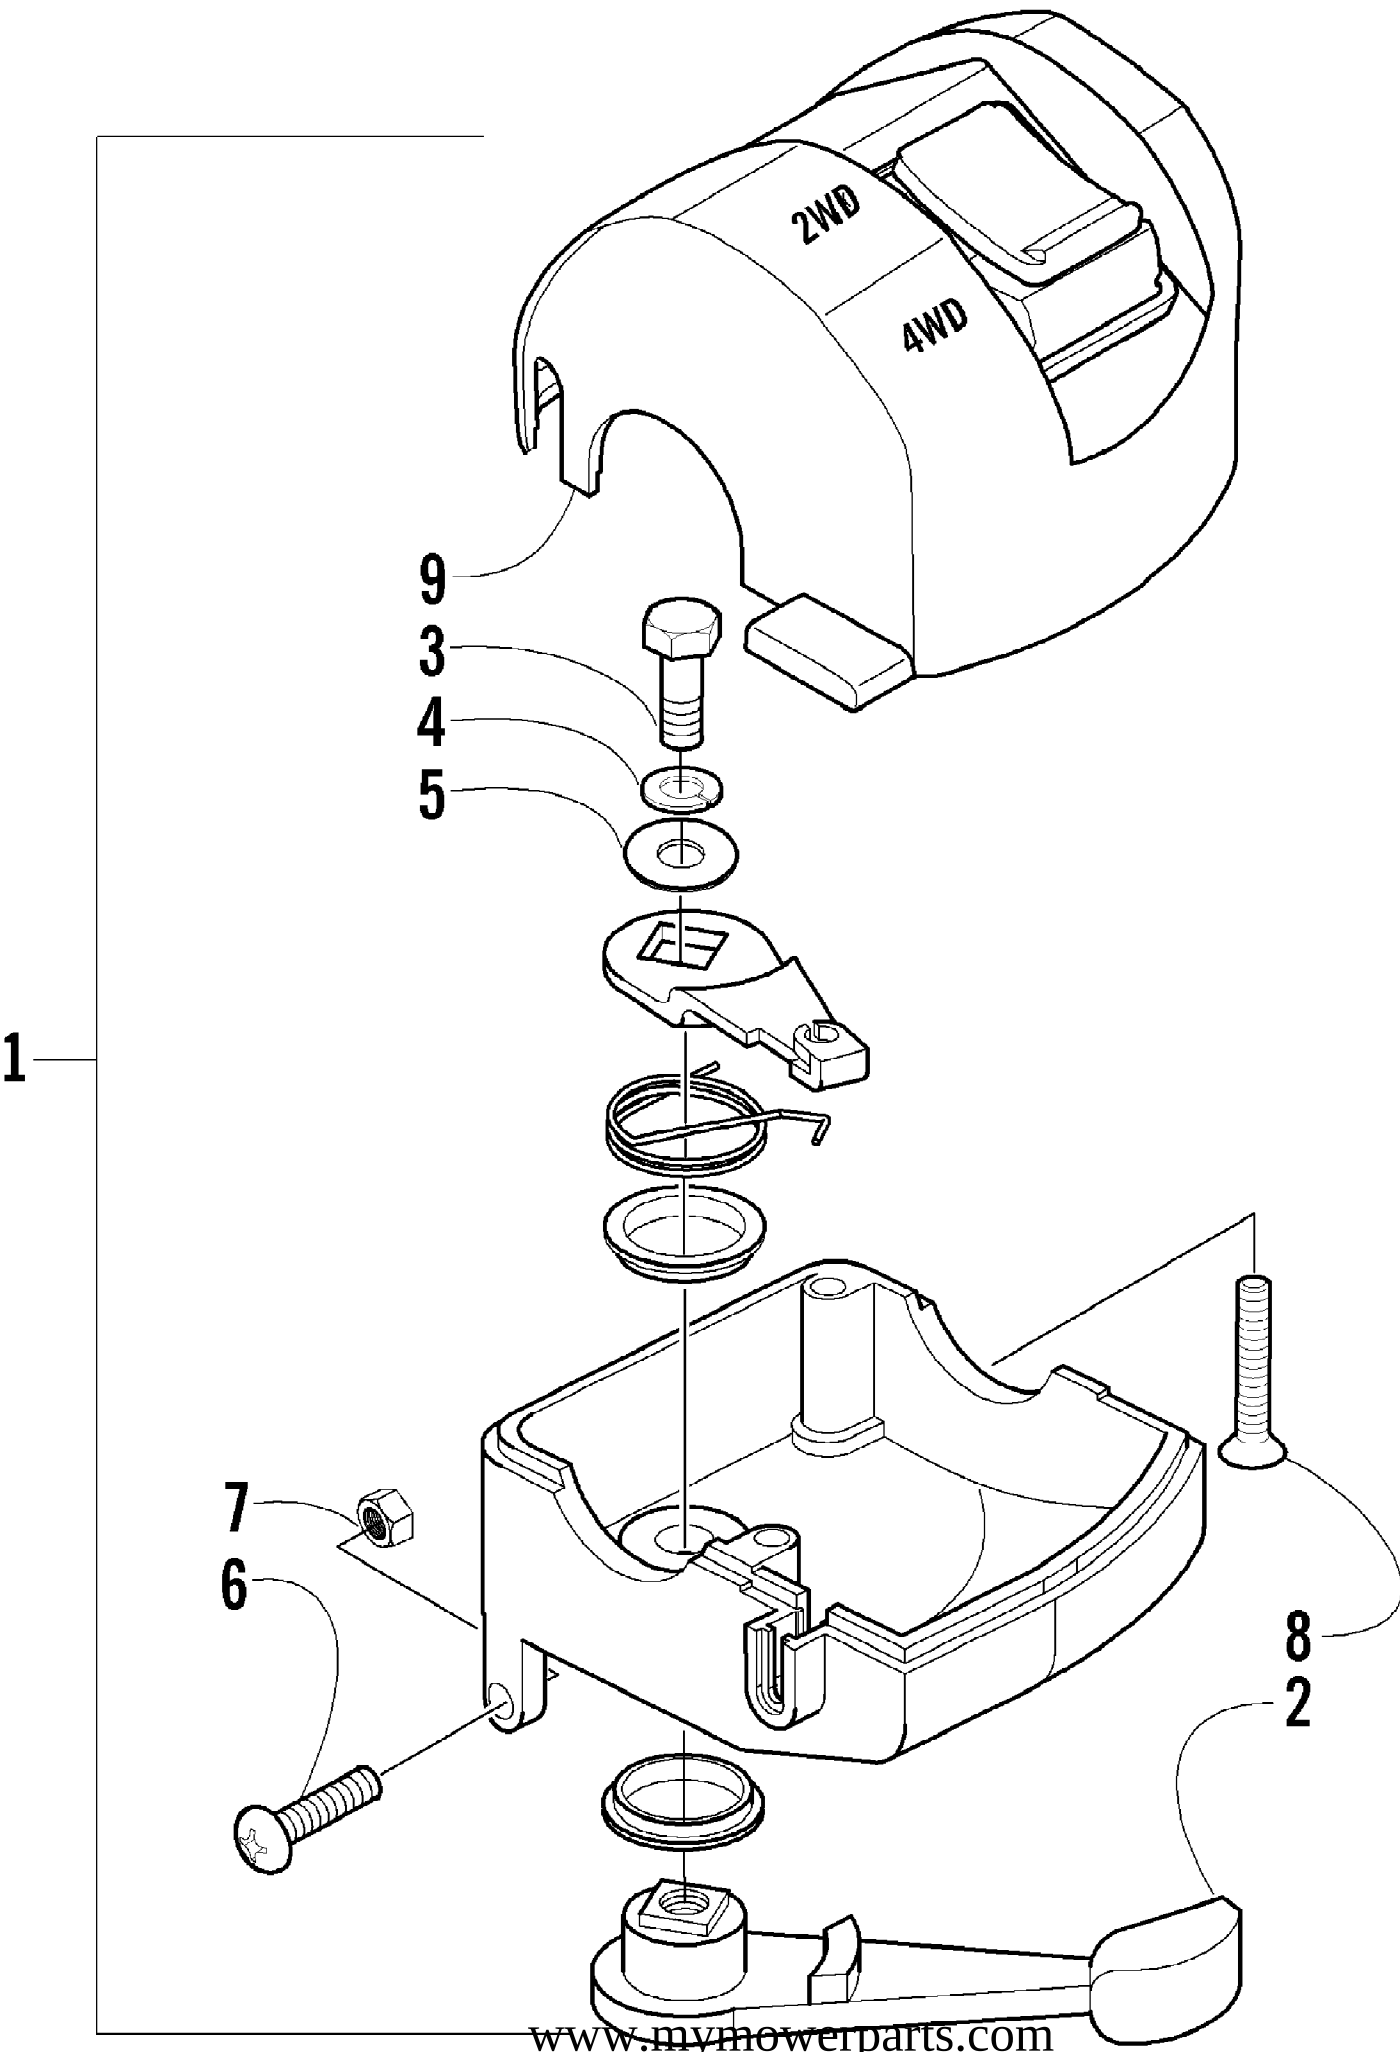 


2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4BPSG) 85 of 93
THROTTLE CASE ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0509-012	1		Case, Throttle - Assembly (inc. 2-9)
2	3409-001	1		Lever
3	3004-533	1	S/P	Screw, Cap
4	3004-447	1	/P	Washer, Lock
5	3003-030	1	/P	Washer
6	3423-014	1		Screw
7	3423-327	1		Nut
8	3423-199	2		Screw
9	0409-048	1		Cover, Throttle w/Switch

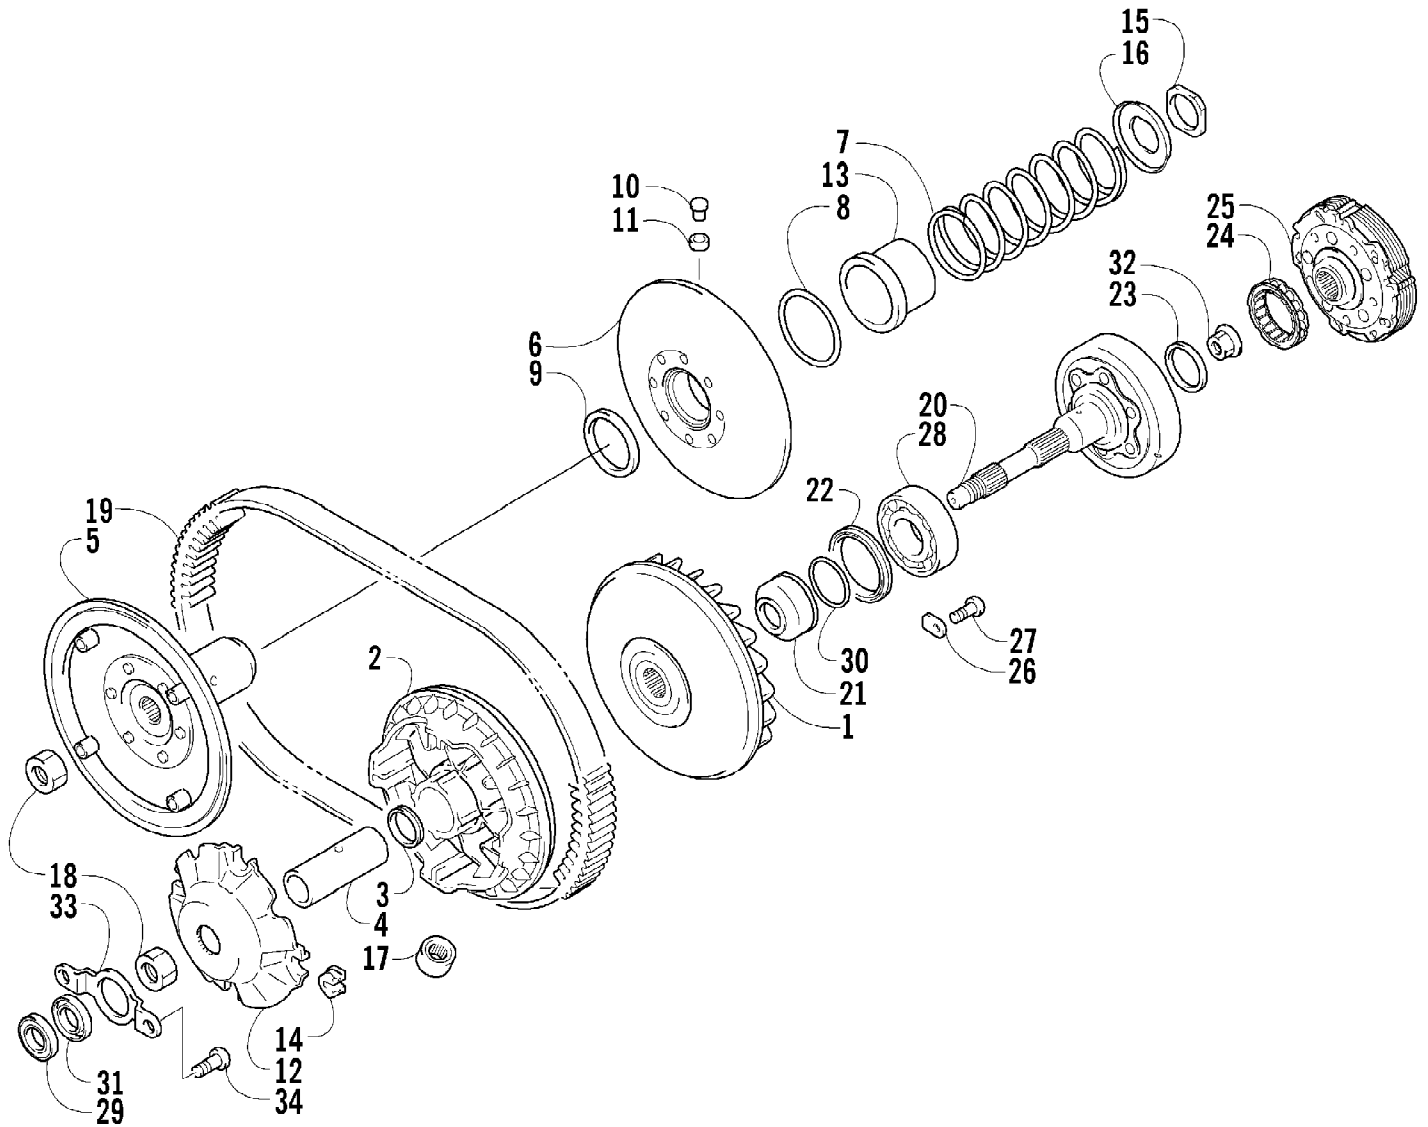 

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) (Page 87 of 93)
TRANSMISSION ASSEMBLY


Ref #	Part Number	Qty	S/P/F	Description
1	3402-750	1		Face, Fixed Drive
2	3402-751	1		Face, Movable Drive
3	3402-470	2		Seal, Movable Drive Face
4	3402-471	1		Spacer, Movable Drive Face
5	3402-752	1		Face, Fixed Driven
6	3402-753	1		Face, Movable Driven
7	3402-754	1	S	Spring, Movable Driven Face
8	3402-475	2		O-Ring, Movable Driven Face
9	3402-476	2		Seal, Movable Driven Face
10	3402-477	4		Pin, Movable Driven Face
11	3402-478	4		Spacer, Movable Driven Face
12	3402-755	1	/P	Plate, Movable Drive Face
13	3402-756	1		Sleeve, Movable Driven Face
14	3402-481	4		Damper, Movable Drive Face
15	3423-406	1		Nut, Driven Pulley
16	3402-482	1		Holder, Movable Driven Face Spring
17	3402-483	8		Roller, Movable Drive Face
18	3423-514	2		Nut
19	3402-757	1		V-Belt
20	3402-758	1	/P	Housing, Clutch
21	3402-544	1	/P	Spacer, Fixed Drive Face
22	3402-695	1	S	Seal, Clutch Housing - Center
23	3402-488	1		Seal, Clutch Housing - Left
24	3446-003	1		Clutch, One-Way
25	3402-760	1		Shoe, Clutch - Assembly
26	3446-031	2	/P	Retainer, Bearing
27	3423-435	2		Screw, Bearing Retainer
28	3402-567	1		Bearing
29	3402-759	1	S	Bearing
30	3423-353	1	/P	O-Ring
31	3402-761	2		Seal, Clutch Housing - Right
32	3423-501	1		Nut
33	3402-730	1		Retainer, Bearing
34	3423-018	2		Screw

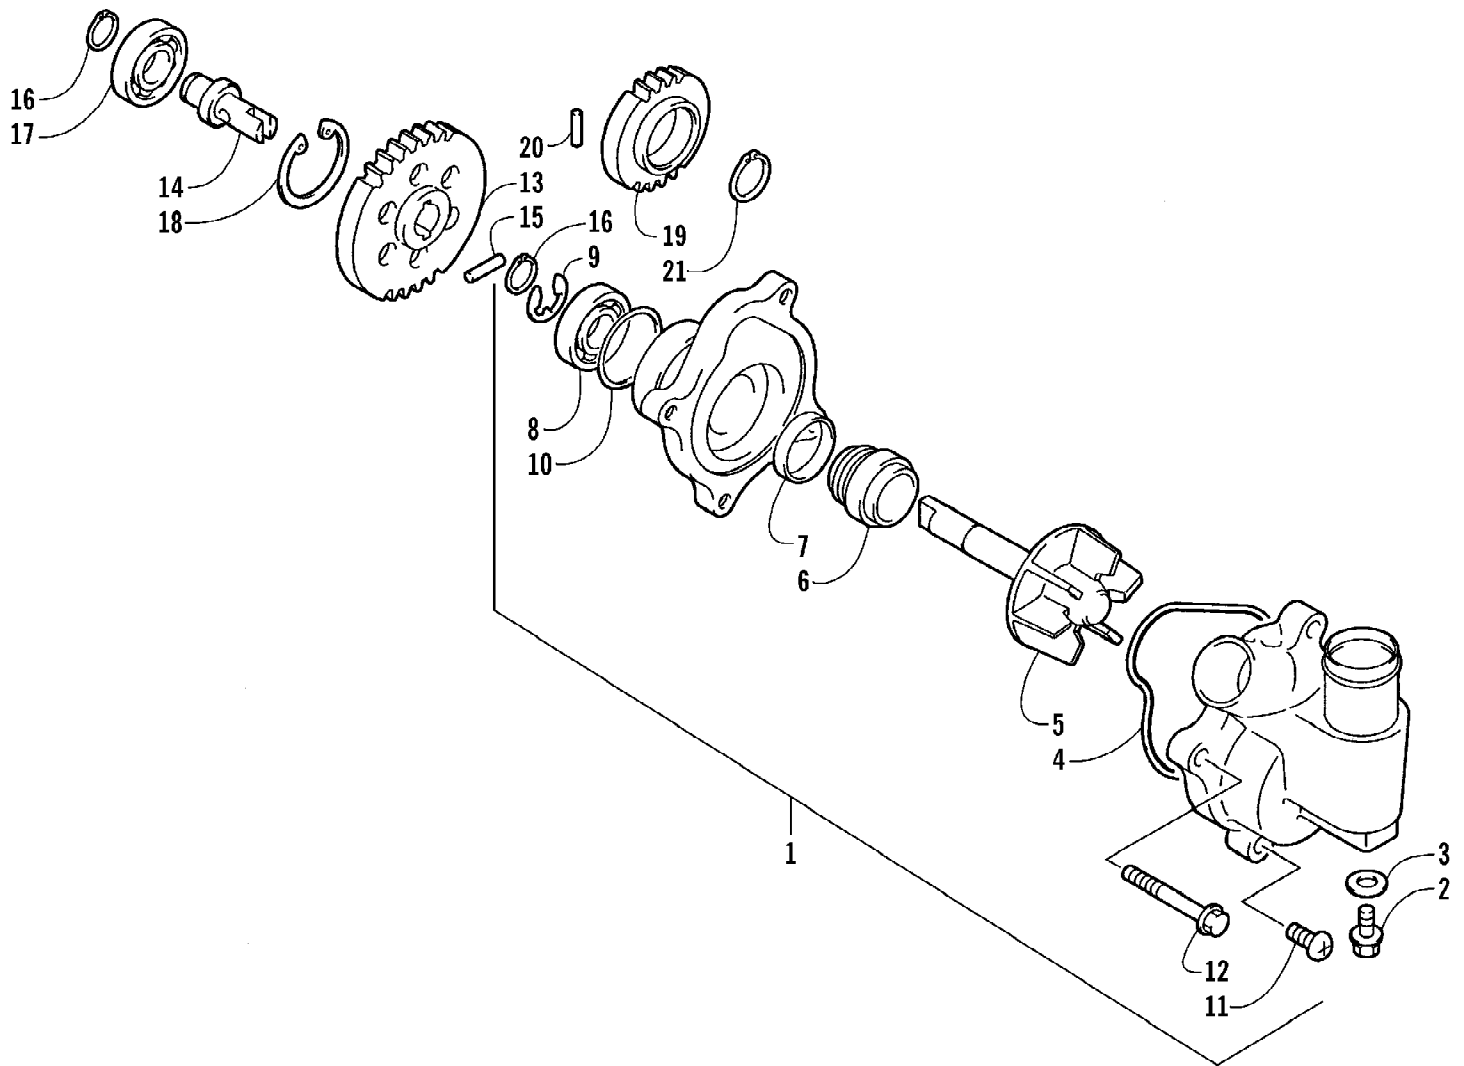 

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) Page 89 of 93
 WATER PUMP ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	3402-464	1	/P	Pump, Water - Assembly (inc. 2-11)
2	3423-343	1		Screw, Cap
3	3003-188	1	S/P	Gasket
4	3423-402	1		O-Ring
5	3413-014	1		Impeller/Shaft
6	3005-909	1	/P	Seal, Mechanical
7	3402-465	1		Seal, Oil
8	3003-615	1	/P	Bearing
9	3423-403	1	S	E-Ring
10	3423-404	1		O-Ring
11	3003-484	2	S/P	Screw
12	3423-308	2	S	Screw, Cap
13	3402-026	1		Gear, Driven
14	3402-466	1		Shaft, Driven Gear
15	3423-046	1		Pin, Driven Gear
16	3423-184	2	S	Circlip, Driven Gear
17	3402-467	1		Bearing, Shaft
18	3423-405	1		Circlip, Shaft Bearing
19	3402-390	1		Gear, Water Pump Drive
20	3423-110	1		Pin, Drive Gear
21	3423-189	1	S	Circlip, Drive Gear

 
2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) Page 90 of 93
WHEEL AND TIRE ASSEMBLY

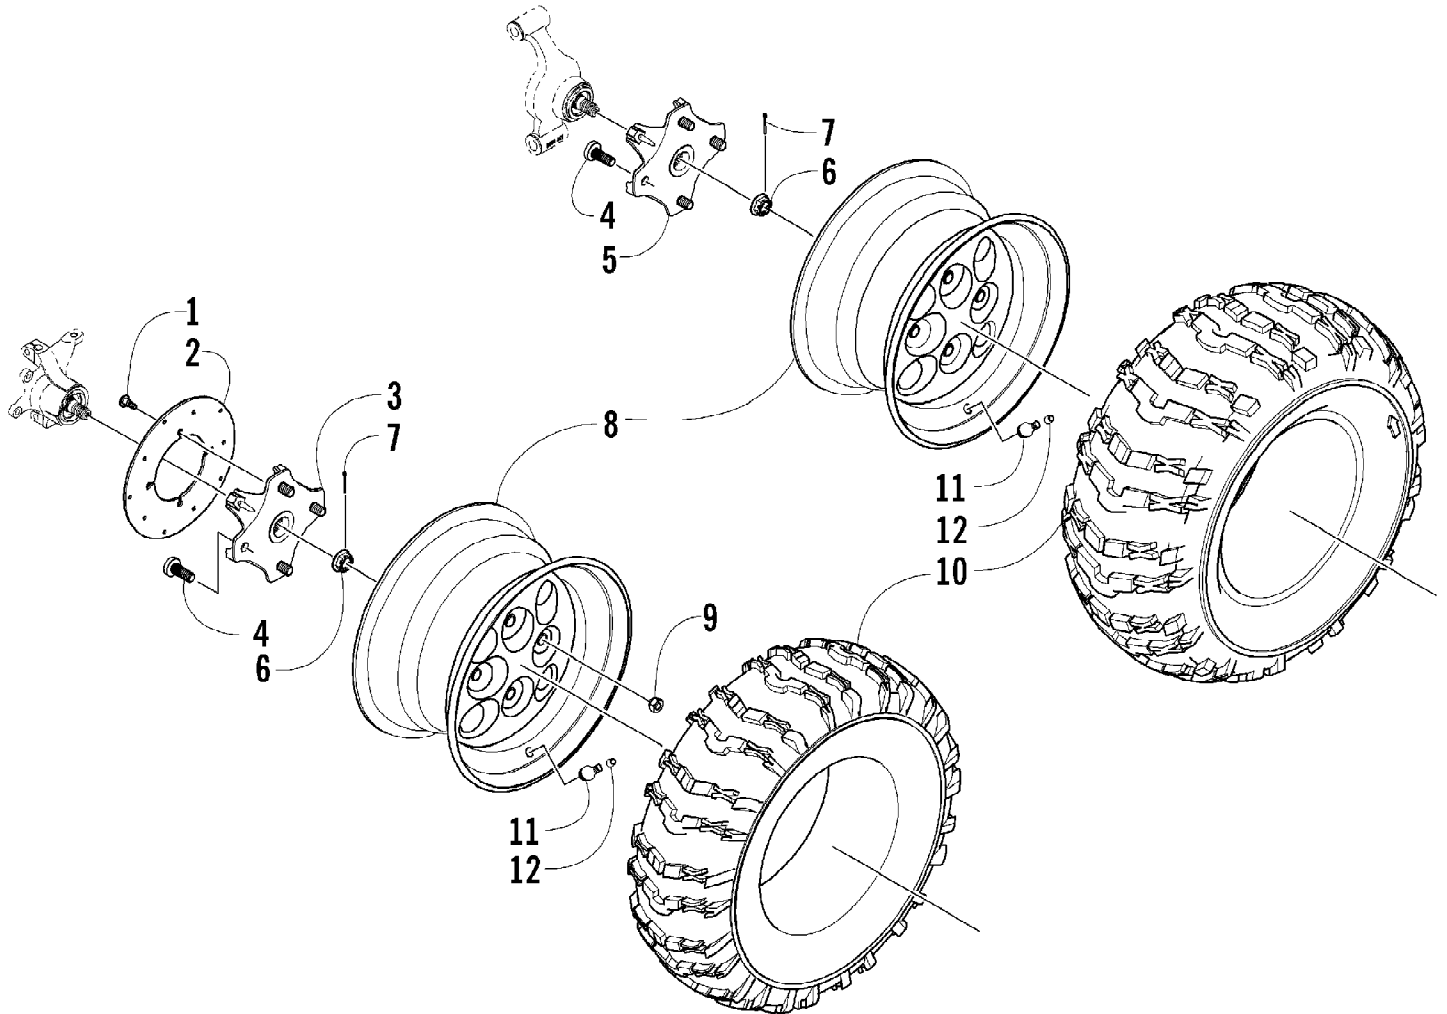

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) Page 91 of 93
 WHEEL AND TIRE ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0423-557	12		Screw, Shoulder w/Loctite
2	1402-225	3	S	Disc, Brake
3	0502-599	2	S	Hub, Wheel - Front (inc. 4)
4	0402-974	16	/P	Stud, Wheel Hub
5	0502-601	1	S	Hub, Wheel - Rear - Left (inc. 4)
5	0502-599	1	S	Hub, Wheel - Rear - Right (inc. 4)
6	0423-607	4		Nut, Castle Flange
7	0423-407	4		Pin, Cotter
8	0402-856	2		Wheel - Front
8	0402-858	2		Wheel - Rear
9	0423-408	16	/P	Nut, Mounting - Wheel
10	1402-100	2		Tire - Front
10	1402-137	2		Tire - Rear
11	0402-064	4		Stem, Valve (inc. 12)
12	0402-140	4		Cap, Valve Stem

 2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) Page 92 of 93
WIRING HARNESS ASSEMBLY

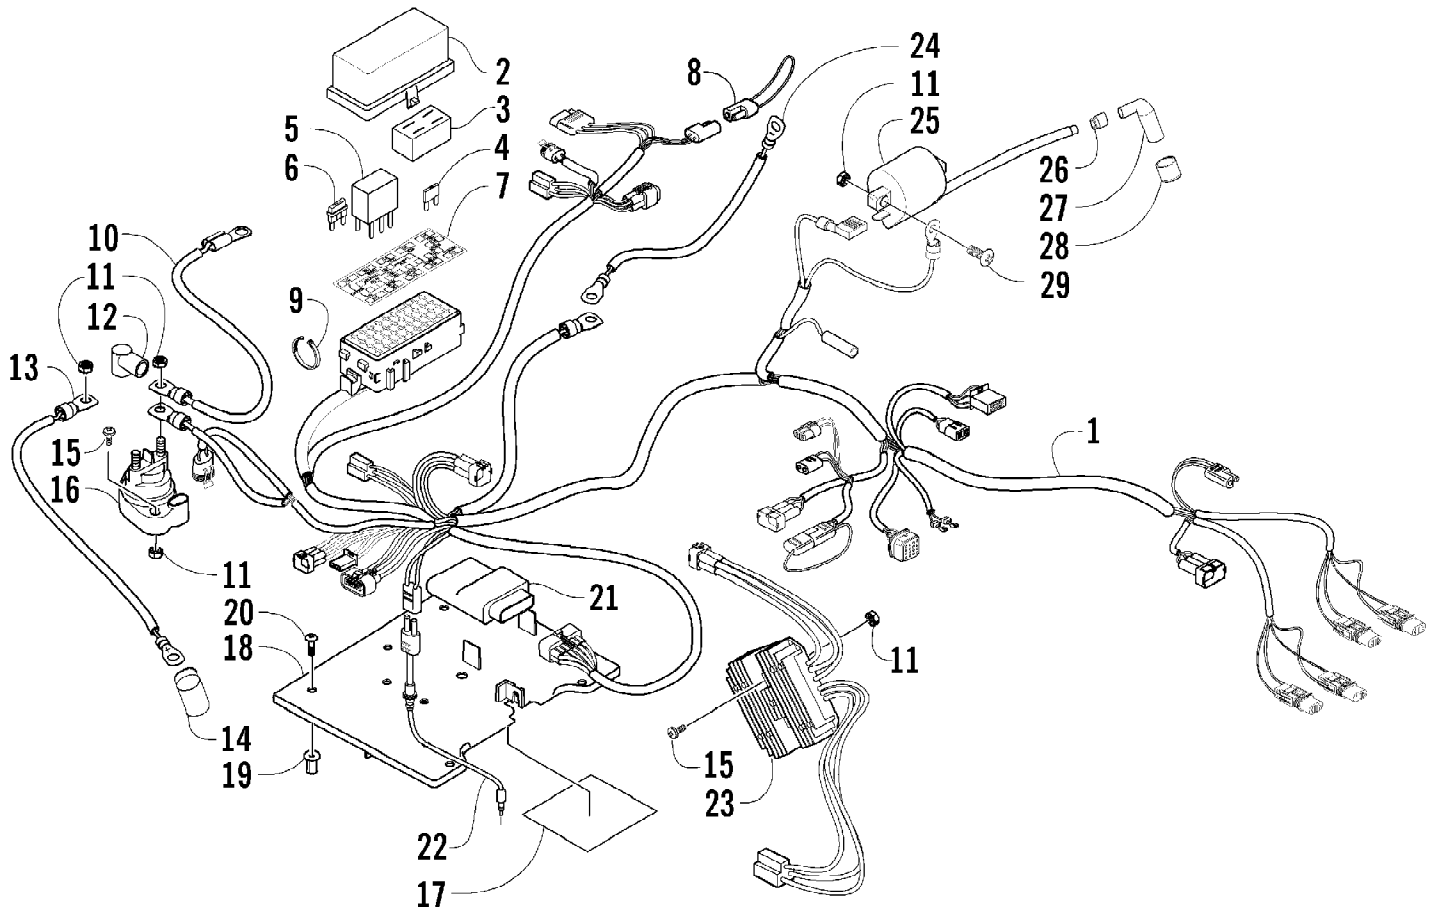

2006 ATV 500 AUTOMATIC TRANSMISSION 4X4 TRV GREEN (A2006TBM4B) Page 93 of 93
 WIRING HARNESS ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0486-192	1		Harness, Main (inc. 2-8 and two No. 9)
2	0530-008	1		Cover, Fuse Block
3	0430-037	1		Holder, Fuse
4	0430-034	3		Diode
5	0430-033	2	F	Relay
6	0430-032	4		Fuse - 10 Amp
6	0430-031	3		Fuse - 15 Amp
6	0430-030	2		Fuse - 30 Amp
7	0411-838	1		Decal, Fuse Block
8	0486-164	1		Tether, Accessory Connector
9	0123-788	AR	/P	Cable Tie - 7.5 in.
10	0445-044	1	S	Cable, Solenoid/Starter
11	0623-038	8		Nut w/Washer
12	0645-327	1		Boot, Terminal
13	0445-046	1	S	Cable, Battery/Solenoid
14	0645-019	1		Boot, Terminal
15	8476-625	4		Screw, Machine
16	0445-036	1	S	Relay Assembly - Starter
17	0412-291	1		Shield, Heat
18	1406-600	1		Tray, Electrical
19	0123-010	4	/P	Nut, Expansion
20	0623-121	4		Screw, Machine
21	3530-039	1		CDI Unit
22	0409-072	1		Switch, Brake - Assembly
23	3530-028	1	S	Regulator, Voltage
24	0445-045	1	S	Cable, Battery/Ground
25	3530-027	1		Coil, Ignition - Assembly
26	3430-009	1	/P	Seal, High Tension Wire
27	3430-007	1	/P	Cap, Spark Plug
28	3430-008	1	/P	Seal, Spark Plug
29	8476-620	2		Screw, Machine