 


2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUBZ)
AIR INTAKE ASSEMBLY

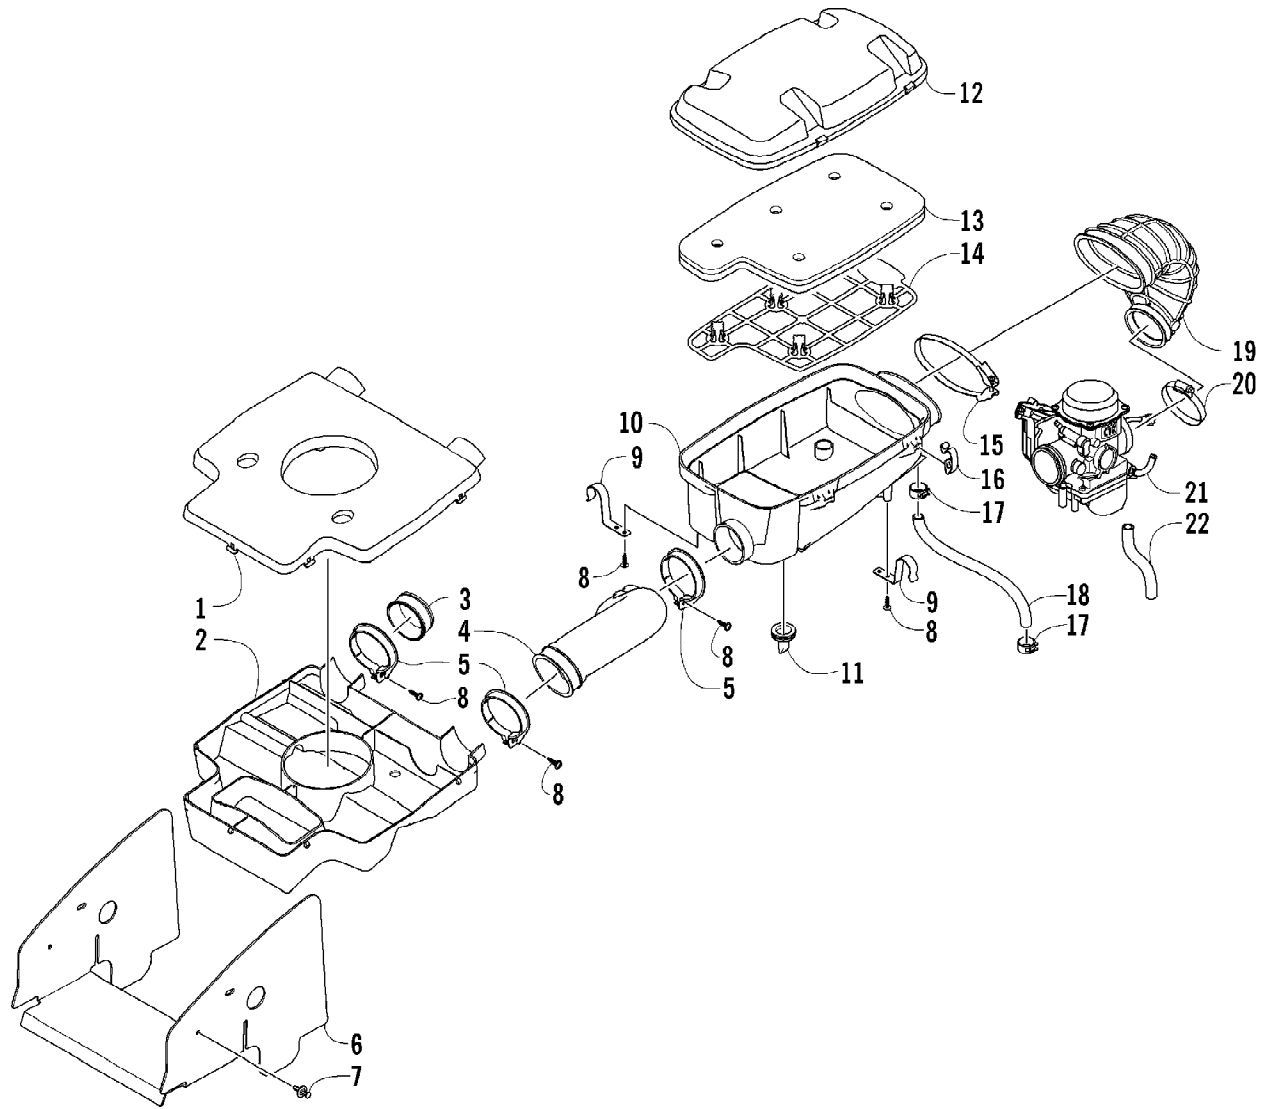


2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUBZ)
 AIR INTAKE ASSEMBLY

Page 2 of 98

Ref #	Part Number	Qty	S/P/F	Description
1	0413-091	1		Diverter, Air - Top
2	0413-093	1		Diverter, Air - Bottom
3	0413-096	1		Cap, Air Diverter
4	0470-529	1		Boot, Air Intake
5	0423-551	3		Clamp
6	1406-747	1		Shroud, Splash
7	0623-362	2		Rivet, Reinstallable
8	0423-342	7	/P	Screw, Self-Tapping
9	0423-454	2		Clip, Mounting - Air Intake
10	0470-515	1	S	Housing, Air Intake
11	0470-442	2	/P	Valve, Drain
12	0470-554	1	S	Cover, Air Intake
13	0470-494	1	S	Filter, Air
14	0470-516	1		Screen, Air Filter
15	0423-554	1		Clamp
16	0423-455	4		Clip, Spring
17	0423-045	2		Clamp, Hose
18	0410-079	1	S	Hose, Vent - Crankcase
19	0470-524	1		Boot, Carburetor
20	0423-019	1		Clamp
21	0470-533	1		Carburetor, CVK36-AE
22	0510-592	1		Hose, Drain

 
2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUBZ)
AUXILIARY BRAKE ASSEMBLY

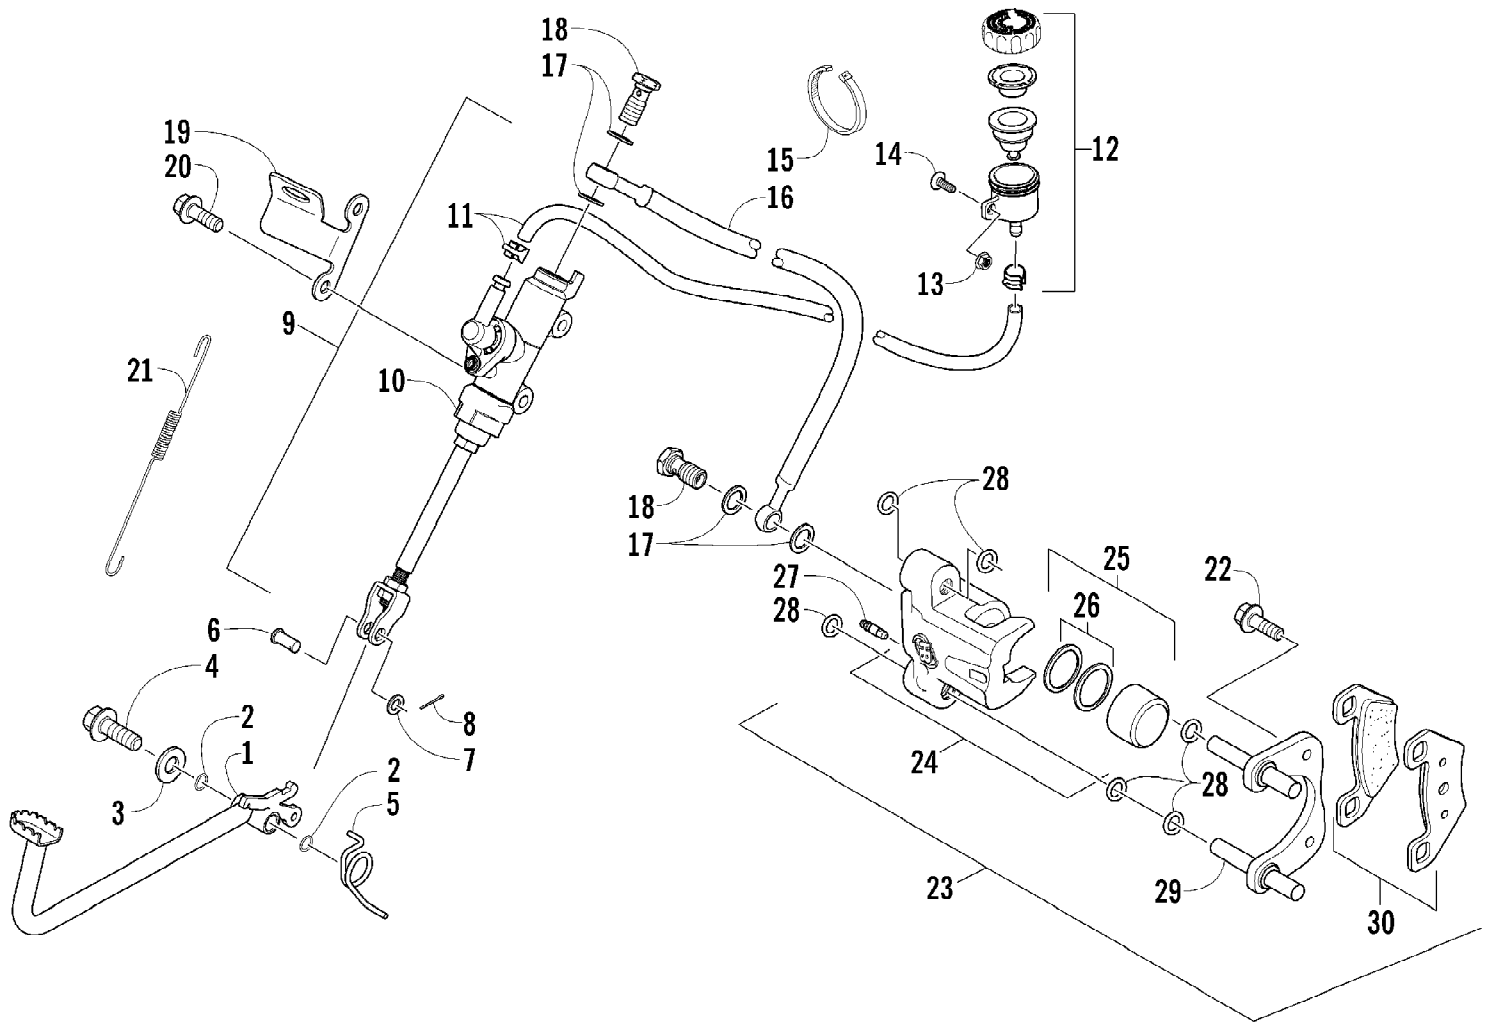

2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUBZ)
 AUXILIARY BRAKE ASSEMBLY Page 4 of 98

Ref #	Part Number	Qty	S/P/F	Description
1	0502-803	1		Lever, Brake
2	1602-213	2	/P	O-Ring
3	8050-252	1		Washer
4	8408-816	1		Screw, Cap
5	0502-807	1		Spring, Brake Lever
6	1402-377	1		Pin, Clevis
7	8050-217	1	/P	Washer
8	0402-584	1		Pin, Cotter
9	0502-881	1		Brake Assembly (inc. 10-12)
10	0	1	F	Master Cylinder
11	0502-880	1		Hose, Brake Reservoir
12	0502-877	1		Reservoir, Brake
13	0623-038	1		Nut, Flanged
14	8476-616	1		Screw, Machine
15	0123-788	1	/P	Cable Tie - 7.5 in.
16	1402-413	1		Hose, Brake
17	0423-178	4		Washer, Crush
18	0423-413	2		Bolt, Banjo-Fitting
19	0502-840	1		Bracket, Switch
20	8408-625	2		Screw, Cap
21	0502-785	1		Spring, Brake Switch
22	8408-820	2	/P	Screw, Cap
23	0502-602	1	S	Caliper, Brake (inc. 24-30)
24	0502-603	1	S	Housing, Caliper - Assembly - Right Front (inc. 25-27)
25	0502-606	1		Piston/Seal Set (inc. 26)
26	0502-607	1		Seal Set
27	0502-609	1	/P	Valve, Bleed
28	0502-608	1		O-Ring, Guide - Set
29	0502-605	1		Bracket Assembly
30	0502-604	1	S	Pad, Brake - Set

 2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUBZ)
BATTERY ASSEMBLY

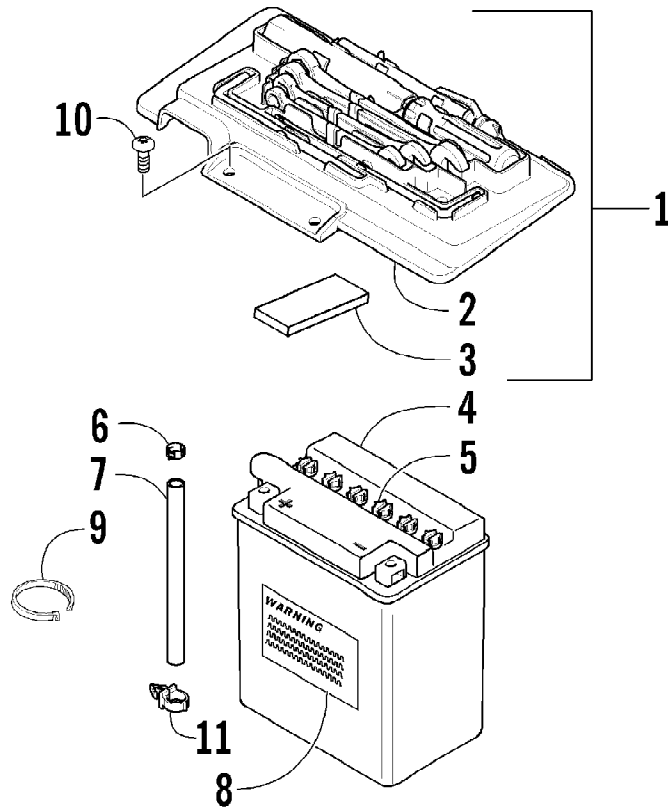


2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUBZ)
BATTERY ASSEMBLY

Page 6 of 98

Ref #	Part Number	Qty	S/P/F	Description
1	5991-395	1	S	Battery Cover/Tool Tray Assembly (inc. 2-3)
2	2406-815	1	/P	Cover, Battery
3	0406-288	2		Pad, Battery
3	0444-122	1	S/P	Kit, Tool Not Illustrated
4	0745-045	1	/P	Battery Assembly (inc. 5-8)
5	0645-045	6		Cap, Battery
6	0645-152	1		Clamp, Hose
7	0645-263	1	/P	Hose, Vent
8	0645-151	1		Label, Warning - Battery
9	0123-903	4		Cable Tie - 11.5 in.
10	8476-616	2		Screw, Machine
11	0623-101	AR		Clip, Retaining

 2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUBZ) Page 7 of 98
CAM CHAIN ASSEMBLY

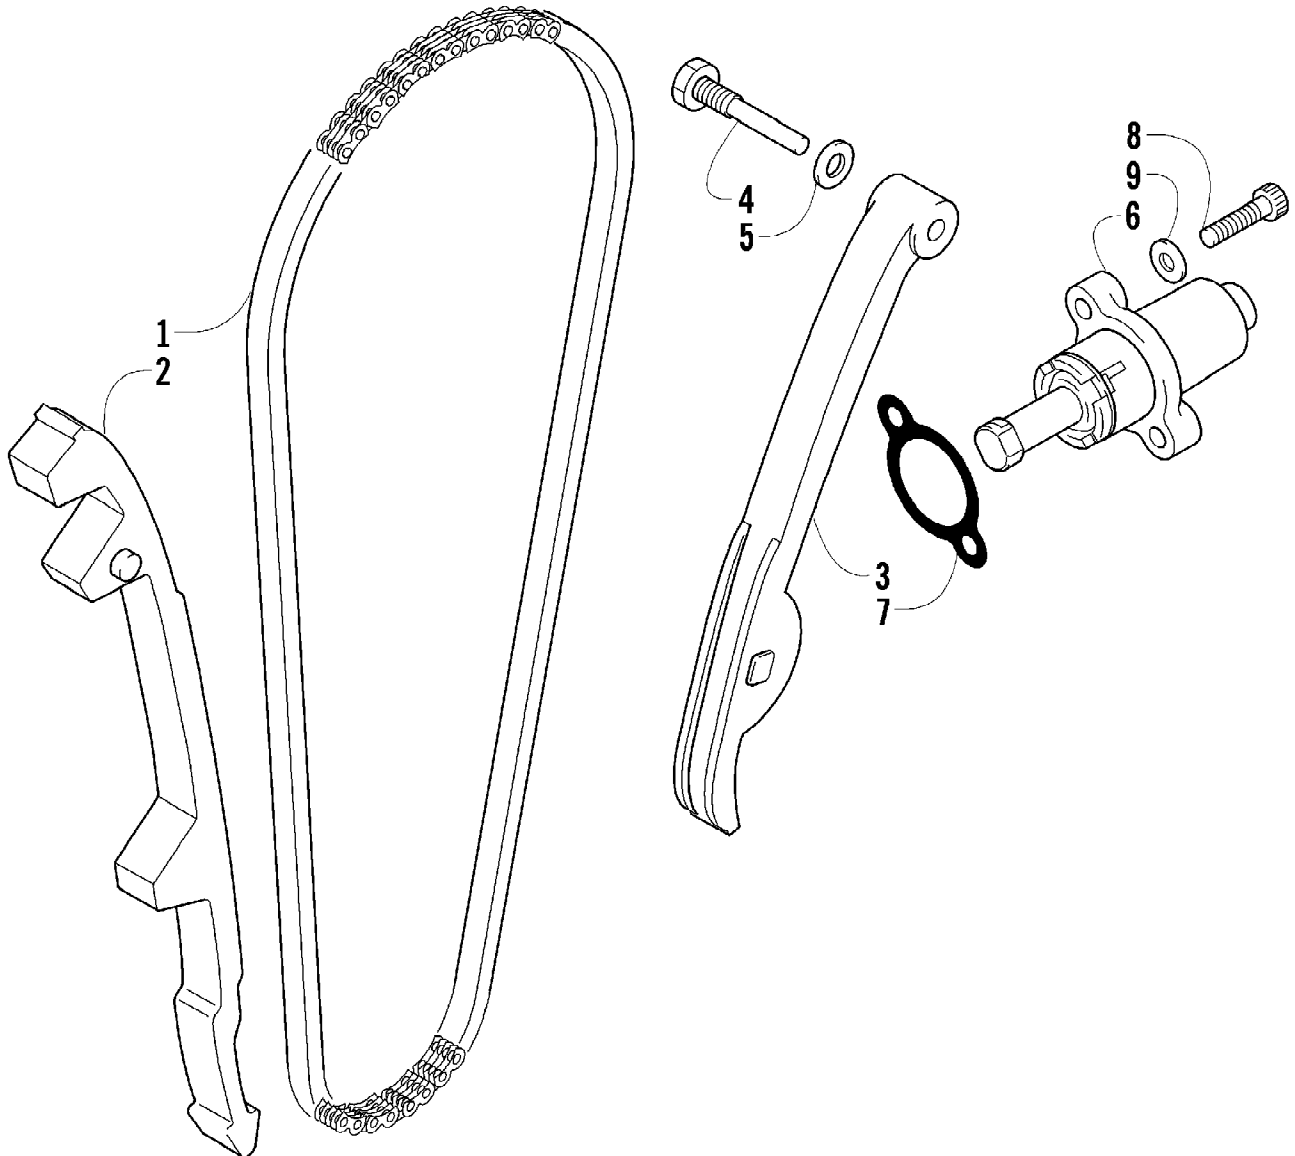


2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUBZ)
CAM CHAIN ASSEMBLY

Page 8 of 98


Ref #	Part Number	Qty	S/P/F	Description
1	3402-353	1		Chain, Cam
2	3402-355	1		Guide, Chain
3	3402-356	1		Tensioner, Chain
4	3423-074	1		Bolt
5	3402-436	1	/P	Washer
6	3402-136	1		Adjuster, Tensioner - Assembly
7	3402-137	1		Gasket
8	3004-475	2	S	Bolt
9	3003-290	2	/P	Gasket

 2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUBZ) Page 9 of 98
CAMSHAFT/VALVE ASSEMBLY

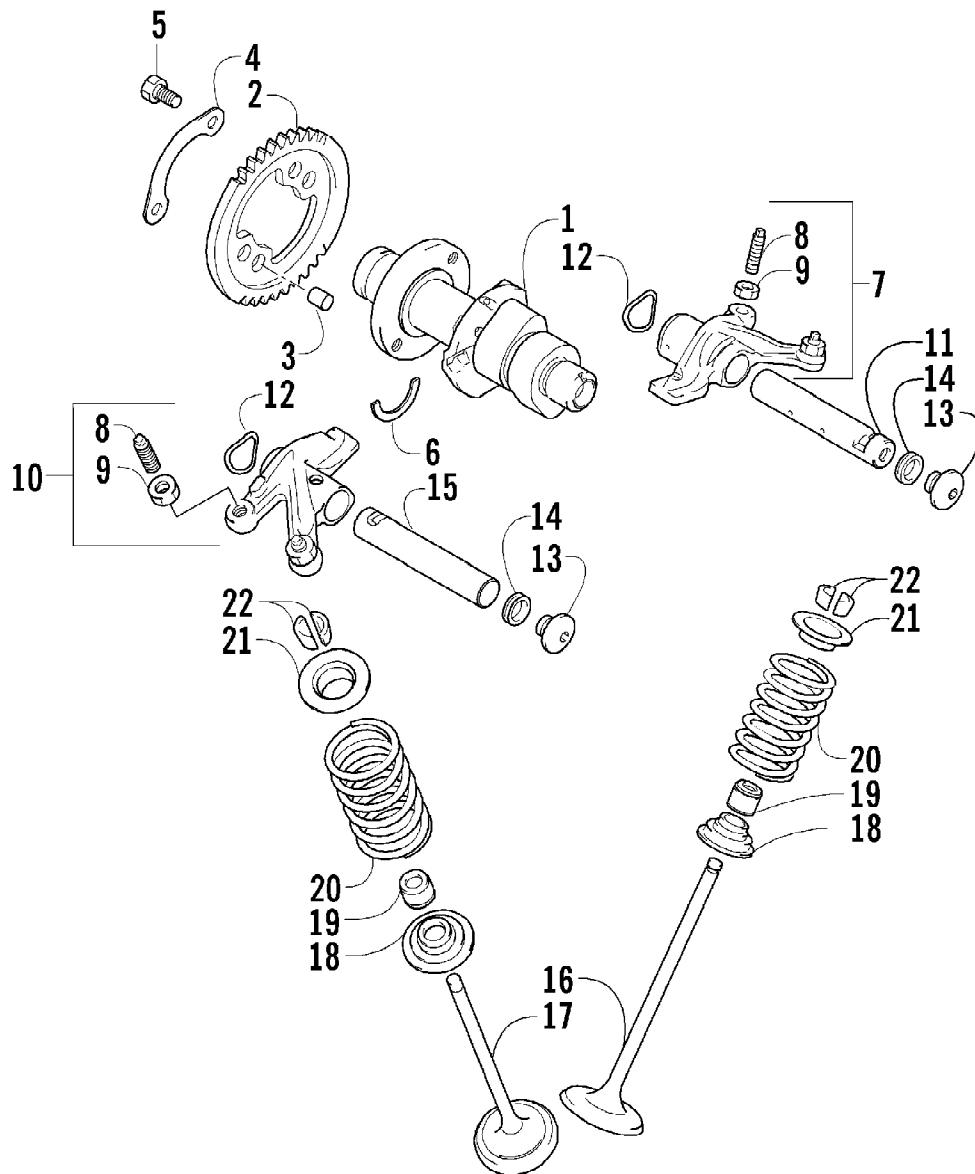

2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7)
CAMSHAFT/VALVE ASSEMBLY Page 10 of 98

Ref #	Part Number	Qty	S/P/F	Description
1	3402-982	1	/P	Camshaft
2	3402-352	1		Sprocket
3	3423-047	1		Pin
4	3423-073	1		Washer
5	3423-013	2	S	Screw, Cap
6	3423-071	1	/P	C-Ring
7	3402-805	1	/P	Arm, Valve Rocker - Intake (inc. two No. 8-9)
8	3423-075	4		Screw
9	3423-076	4		Nut
10	3402-139	1		Arm, Valve Rocker - Exhaust (inc. two No. 8-9)
11	3402-140	1		Shaft, Rocker Arm - Intake
12	3423-031	2		Washer
13	3423-111	2	S	Plug, Shaft
14	3402-012	2		Gasket
15	3402-141	1		Shaft, Rocker Arm - Exhaust
16	3402-725	2	/P	Valve, Intake
17	3402-143	2		Valve, Exhaust
18	3402-148	4		Seat, Spring
19	3402-078	4		Seal, Oil
20	3402-726	4		Spring, Valve
21	3423-541	4	/P	Retainer, Spring
22	3402-147	8		Cotter, Valve

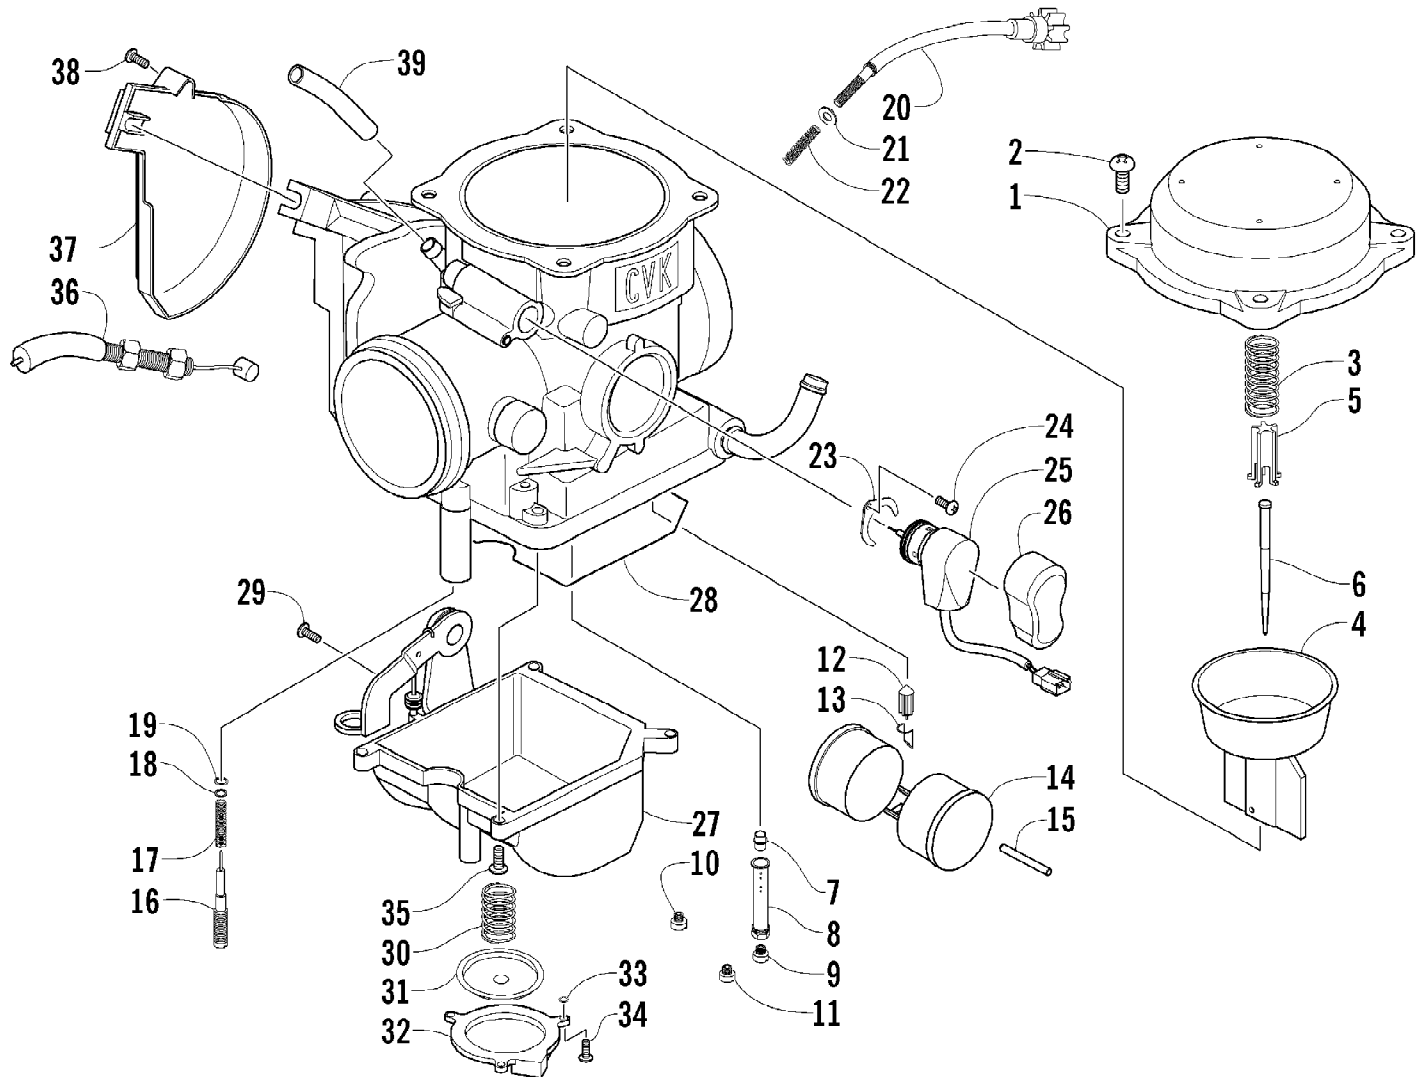 


2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7)
CARBURETOR

Page 12 of 98

Ref #	Part Number	Qty	S/P/F	Description
	0470-533	1		Complete Carburetor Assembly CVK36-AE
1	5507-001	1		Cover, Top
2	5507-002	4	/P	Screw, Top Cover
3	5507-173	1	S	Spring
4	5507-099	1		Piston, Vacuum
5	5507-005	1		Seat, Spring
6	5507-184	1		Jet Needle
7	5507-007	1		Needle Jet
8	5507-174	1	S	Holder, Needle Jet
9	5507-043	1		Main Jet - 142
9	5507-044	1		Main Jet - 140
9	5507-041	1		Main Jet - 147
9	5507-086	1		Main Jet - 148
9	5507-009	1	/P	Main Jet - 150
10	5507-101	1	S	Slow Jet
11	5507-112	1		Starter Jet - 85
12	5507-183	1		Valve, Float - Set (inc. 13)
13	0	1	F	Clip
14	5507-039	1		Float Set (inc. 15)
15	0	1	F	Pin, Float
16	5507-111	1		Screw, Pilot - Set (inc. 17-19)
17	0	1	F	Spring
18	0	1	F	Washer
19	0	1	F	O-Ring
20	5507-027	1		Screw, Idle Adjust
21	5507-028	1		Washer
22	5507-029	1		Spring
23	5507-115	1		Plate
24	5507-117	1	/P	Screw
25	5507-113	1		Choke, Electric
26	5507-114	1		Cover, Electric Choke
27	5507-181	1		Chamber, Float - Assembly (inc. 28-34)
28	5507-067	1	/P	O-Ring, Float Chamber
29	5507-050	1	/P	Screw, Drain
30	5507-032	1		Spring
31	5507-031	1	S	Diaphragm Assembly
32	0	1	F	Housing, Pump
33	5507-034	1		U-Ring
34	5507-035	3		Screw
35	5507-017	4	/P	Screw
36	0487-021	1	S	Cable, Throttle
37	5507-036	1		Cover
38	5507-037	1	/P	Screw
39	0410-056	1		Hose, Vent

 
2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7) 13 of 98
CLUTCH ASSEMBLY

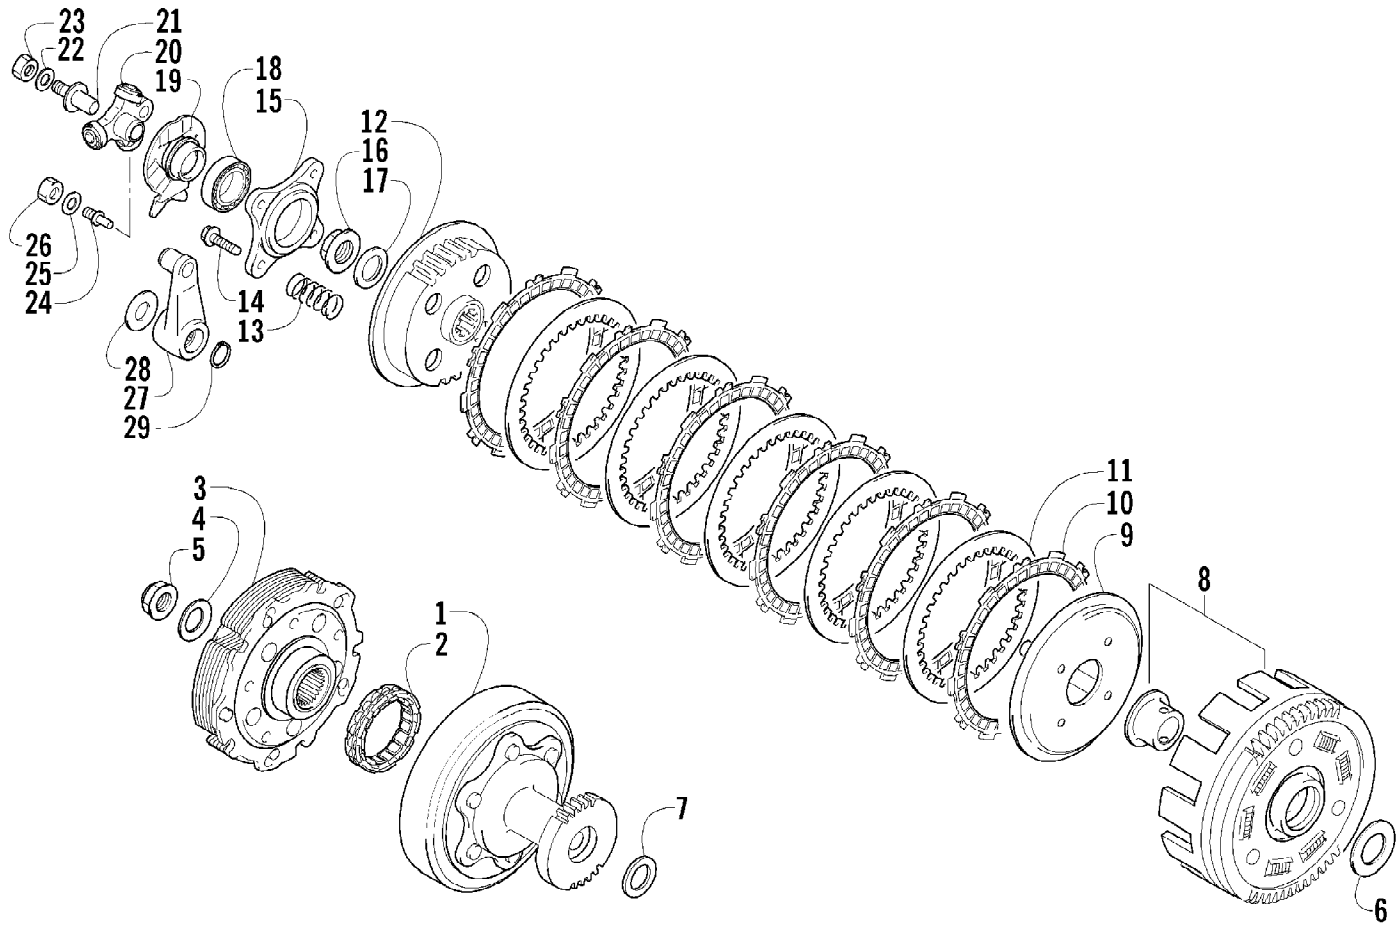

2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7)
 CLUTCH ASSEMBLY

Page 14 of 98


Ref #	Part Number	Qty	S/P/F	Description
1	3446-329	1		Housing, Starter Clutch
2	3446-003	1		Clutch, Primary Drive One Way
3	3446-330	1		Shoe, Starter Clutch
4	3423-032	1		Washer, Starter Clutch Shoe
5	3423-081	1		Nut, Starter Clutch Shoe
6	3423-122	1		Washer, Primary Driven
7	3423-350	1		Washer, Primary Driven
8	3446-331	1		Gear, Primary Driven - Assembly
9	3446-008	1		Disc, Clutch Pressure
10	3446-332	6		Plate, Clutch Drive
11	3446-007	5		Plate, Clutch Driven
12	3446-004	1		Hub, Clutch Sleeve
13	3423-544	4		Spring, Clutch
14	3423-330	4		Screw, Cap
15	3446-009	1		Plate, Clutch Release
16	3423-080	1		Nut, Clutch Sleeve Hub
17	3423-032	1		Washer, Clutch Sleeve Hub
18	3402-186	1	/P	Bearing, Clutch Release Plate
19	3446-334	1		Guide, Clutch Release Roller
20	3446-335	1		Roller Assembly, Clutch Release
21	3423-361	1		Bolt, Clutch Release - No. 1
22	3423-360	1		Washer, Clutch Release - No. 1
23	3423-359	1		Nut, Clutch Release - No. 1
24	3423-083	1		Bolt, Clutch Release - No. 2
25	3423-027	1		Washer, Clutch Release - No. 2
26	3008-014	1		Nut, Clutch Release - No. 2
27	3446-333	1		Arm, Clutch Release
28	3423-545	1		Washer, Clutch Release Arm
29	3423-546	1		Circlip, Clutch Release Arm

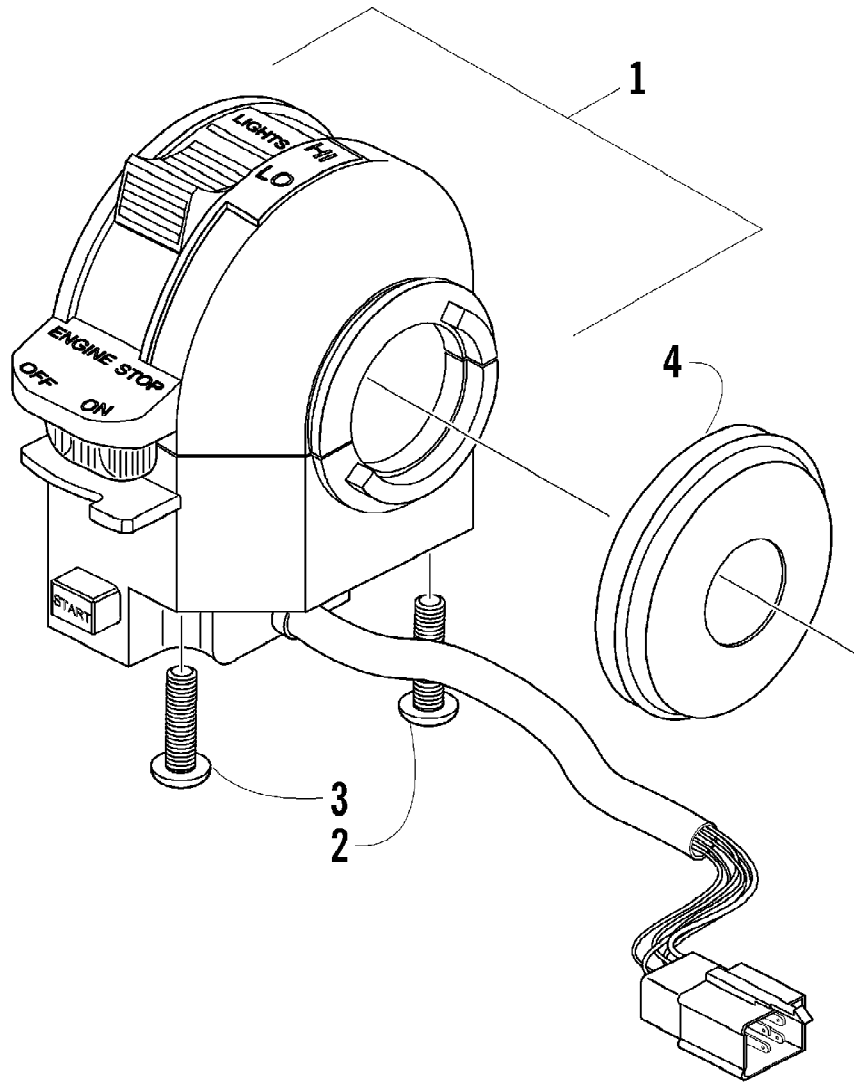 

2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7)
CONTROL SWITCH HOUSING ASSEMBLY

Page 16 of 98


Ref #	Part Number	Qty	S/P/F	Description
1	0509-013	1		Switch, Control - Assembly (inc. 2-3)
2	3423-197	1		Screw, Machine
3	3423-196	1		Screw, Machine
4	3409-019	1		Cover, Switch Housing

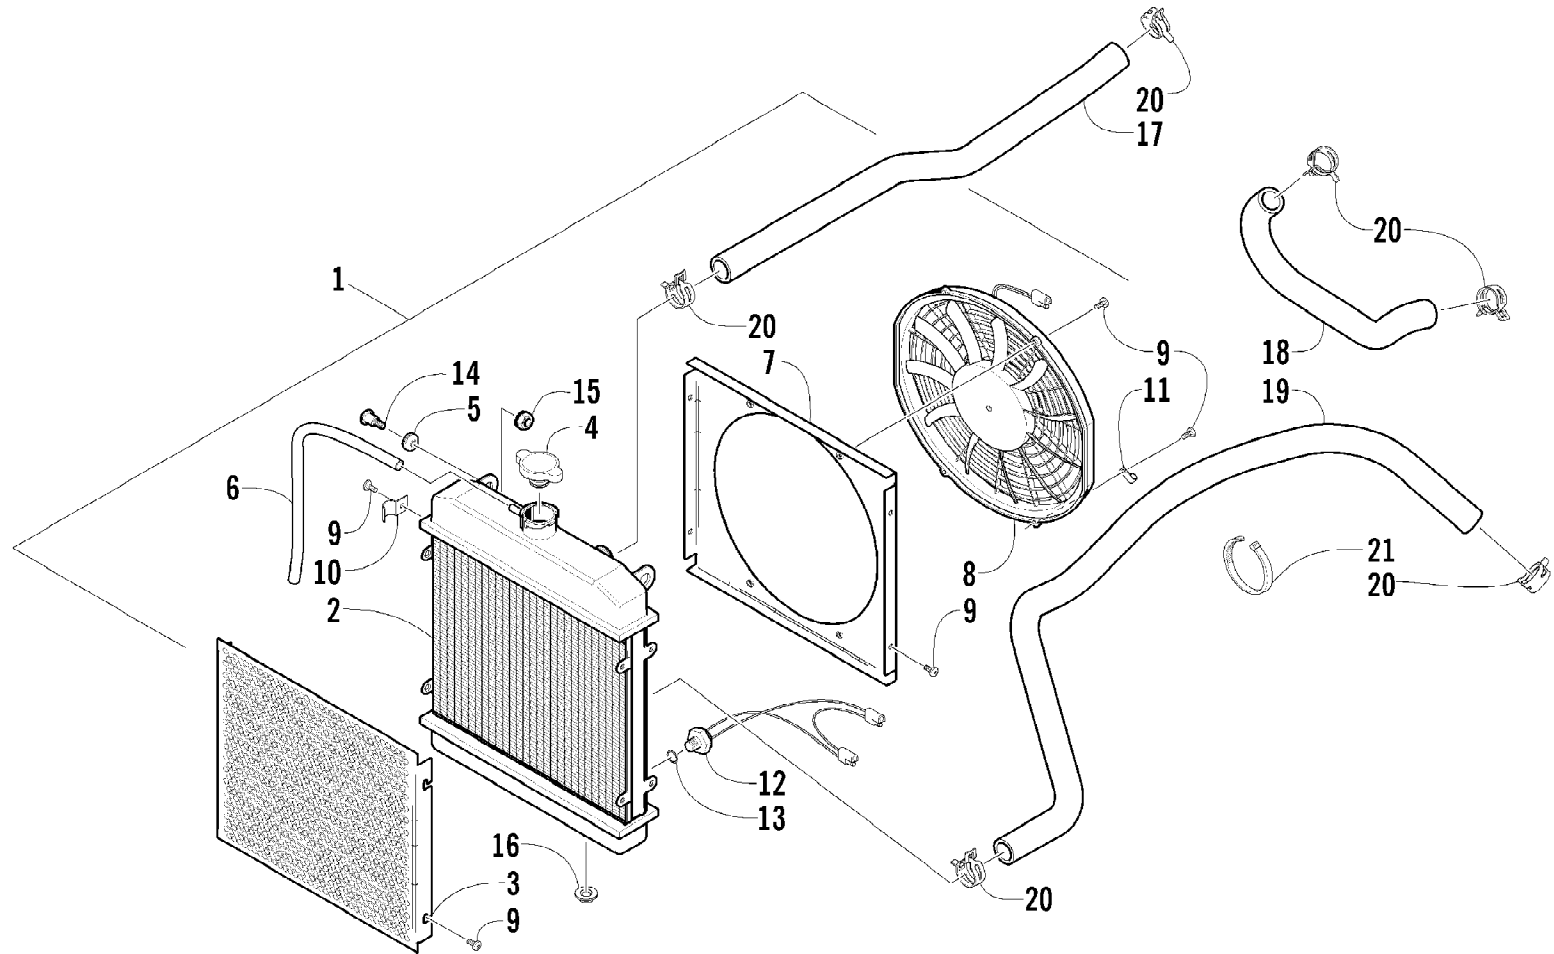 

2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7)
 COOLING ASSEMBLY Page 18 of 98

Ref #	Part Number	Qty	S/P/F	Description
1	0413-117	1		Radiator Assembly (inc. 2-13)
2	0413-043	1	S	Radiator
3	0413-007	1		Screen, Radiator
4	0413-002	1	S	Cap, Radiator
5	0423-030	2		Grommet
6	0610-016	AR	/P	Hose - 25 ft
7	0413-046	1		Shroud, Fan
8	0413-044	1	S	Fan, Cooling
9	8475-512	12		Screw, Machine
10	0423-351	1		Clamp, Wire
11	0123-397	1		Clamp, Cable
12	0413-045	1		Sender, Temperature - Coolant
13	0423-390	1	S	O-Ring
14	0423-484	2		Screw, Shoulder
15	0623-038	2		Nut w/Washer
16	0423-028	2		Bushing, Stem
17	0410-002	1		Hose, Coolant - Upper
18	0410-022	1		Hose, Coolant - Crossover
19	0410-041	1		Hose, Coolant - Lower
20	0423-496	6		Clamp, Hose
21	0623-751	1		Cable Tie

 
2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7) 19 of 98
CRANK BALANCER ASSEMBLY

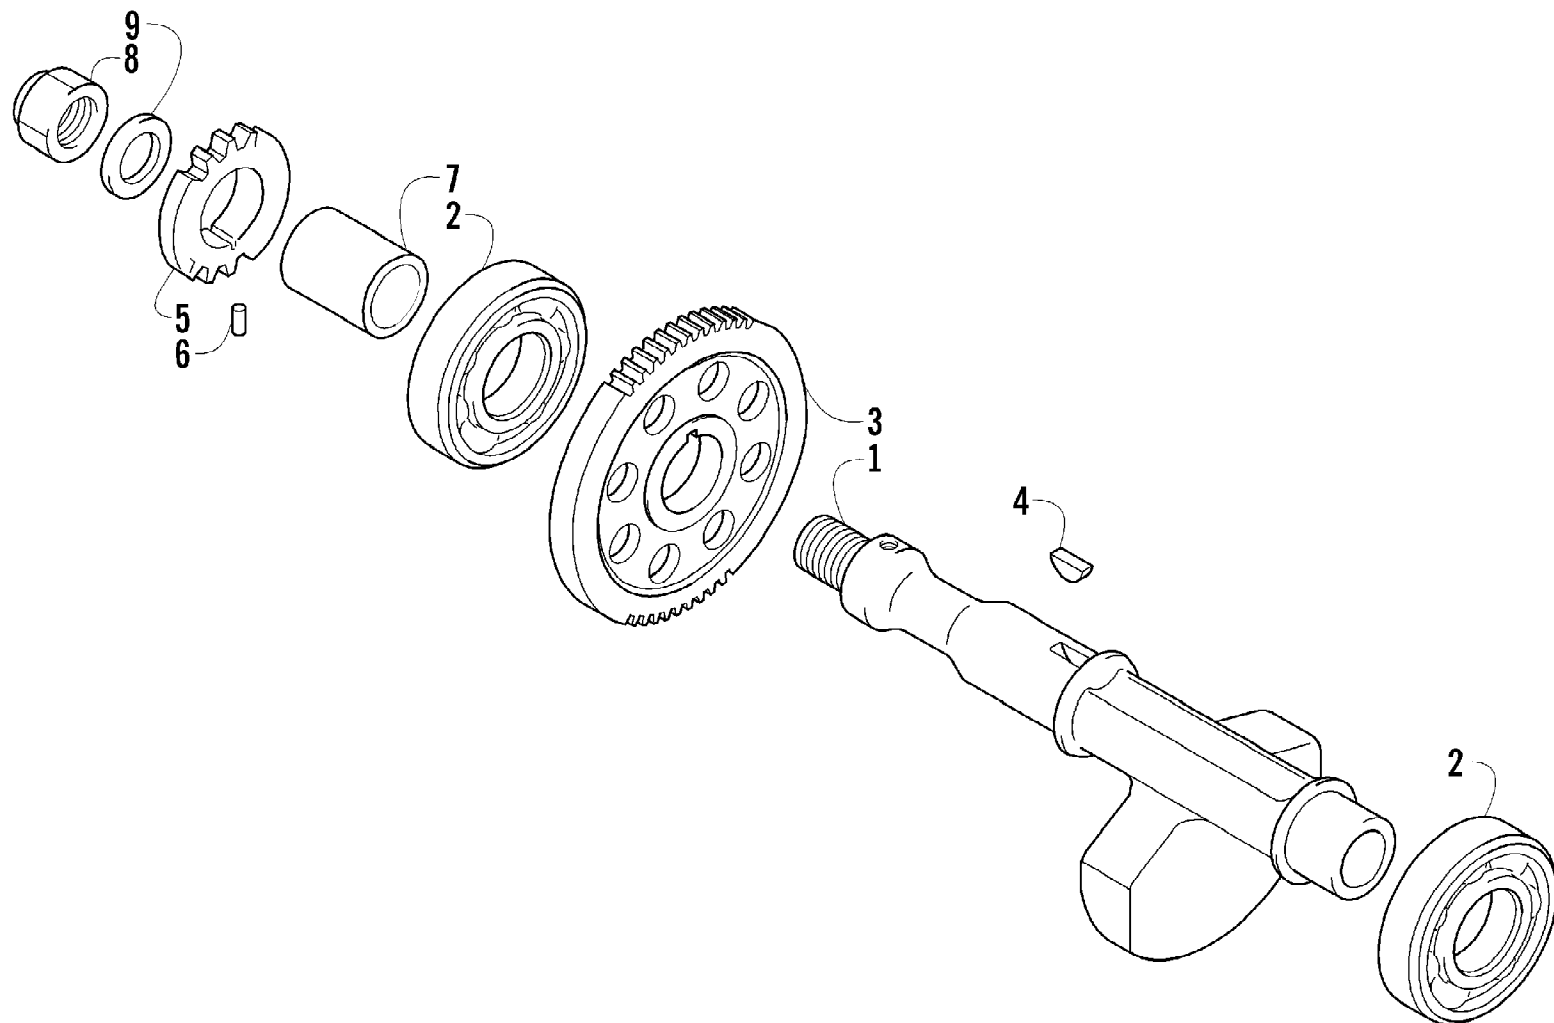

2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7)
 CRANK BALANCER ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	3402-350	1		Balancer, Crank
2	3402-050	2		Bearing
3	3402-814	1		Gear, Driven
4	3004-540	1	/P	Key
5	3402-390	1		Gear, Oil Pump Drive
6	3423-114	1	/P	Pin, Drive Gear
7	3402-151	1		Spacer, Drive Gear
8	3423-025	1		Nut, Lock
9	3423-029	1		Washer, Drive Gear

 2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7) 21 of 98
CRANKCASE ASSEMBLY

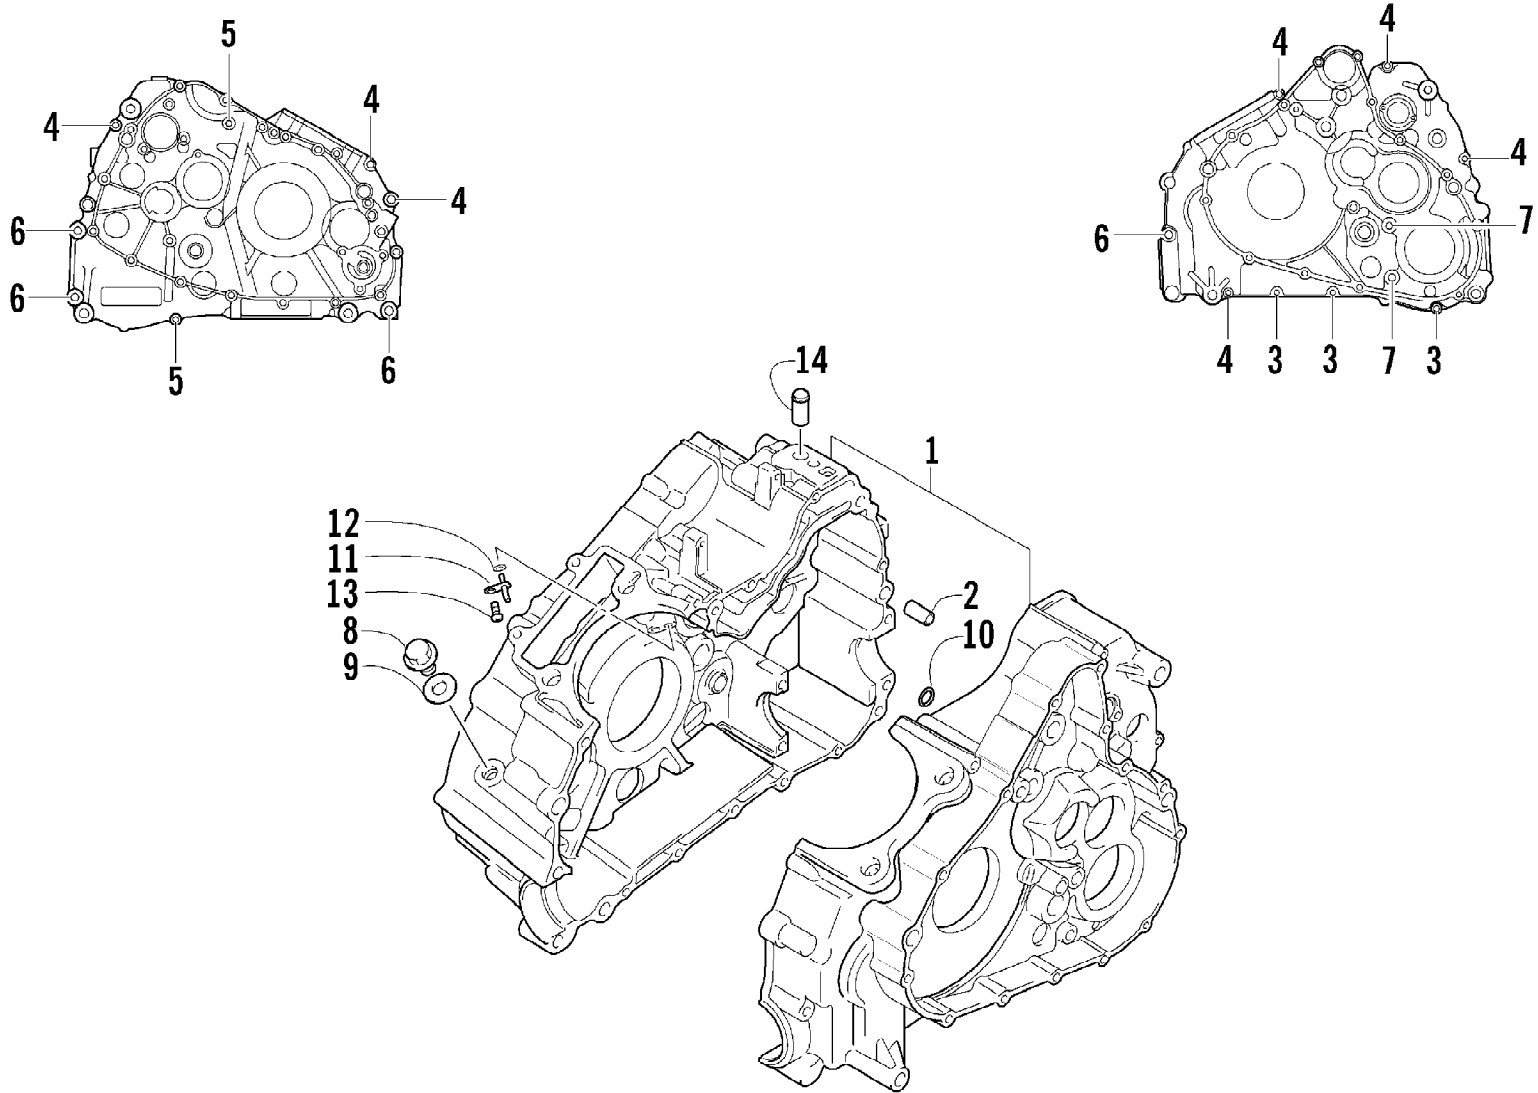


2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7)
 CRANKCASE ASSEMBLY

Page 22 of 98

Ref #	Part Number	Qty	S/P/F	Description
1	3402-809	1	S	Crankcase Assembly (inc. 2-13)
2	3423-088	2		Pin, Dowel
3	3423-091	3	S	Bolt
4	3423-092	7	S	Bolt
5	3423-094	2		Bolt
6	0693-303	4	S	Bolt
7	3423-093	2		Bolt
8	3423-095	1		Plug, Oil Gallery
9	3402-011	1		Gasket
10	3423-052	1		O-Ring
11	3402-369	1		Jet, Piston Cooling
12	3423-051	1		O-Ring
13	3423-370	1		Screw
14	3423-538	1		Union, Breather Hose

 2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7) 23 of 98
CRANKCASE COVER ASSEMBLY

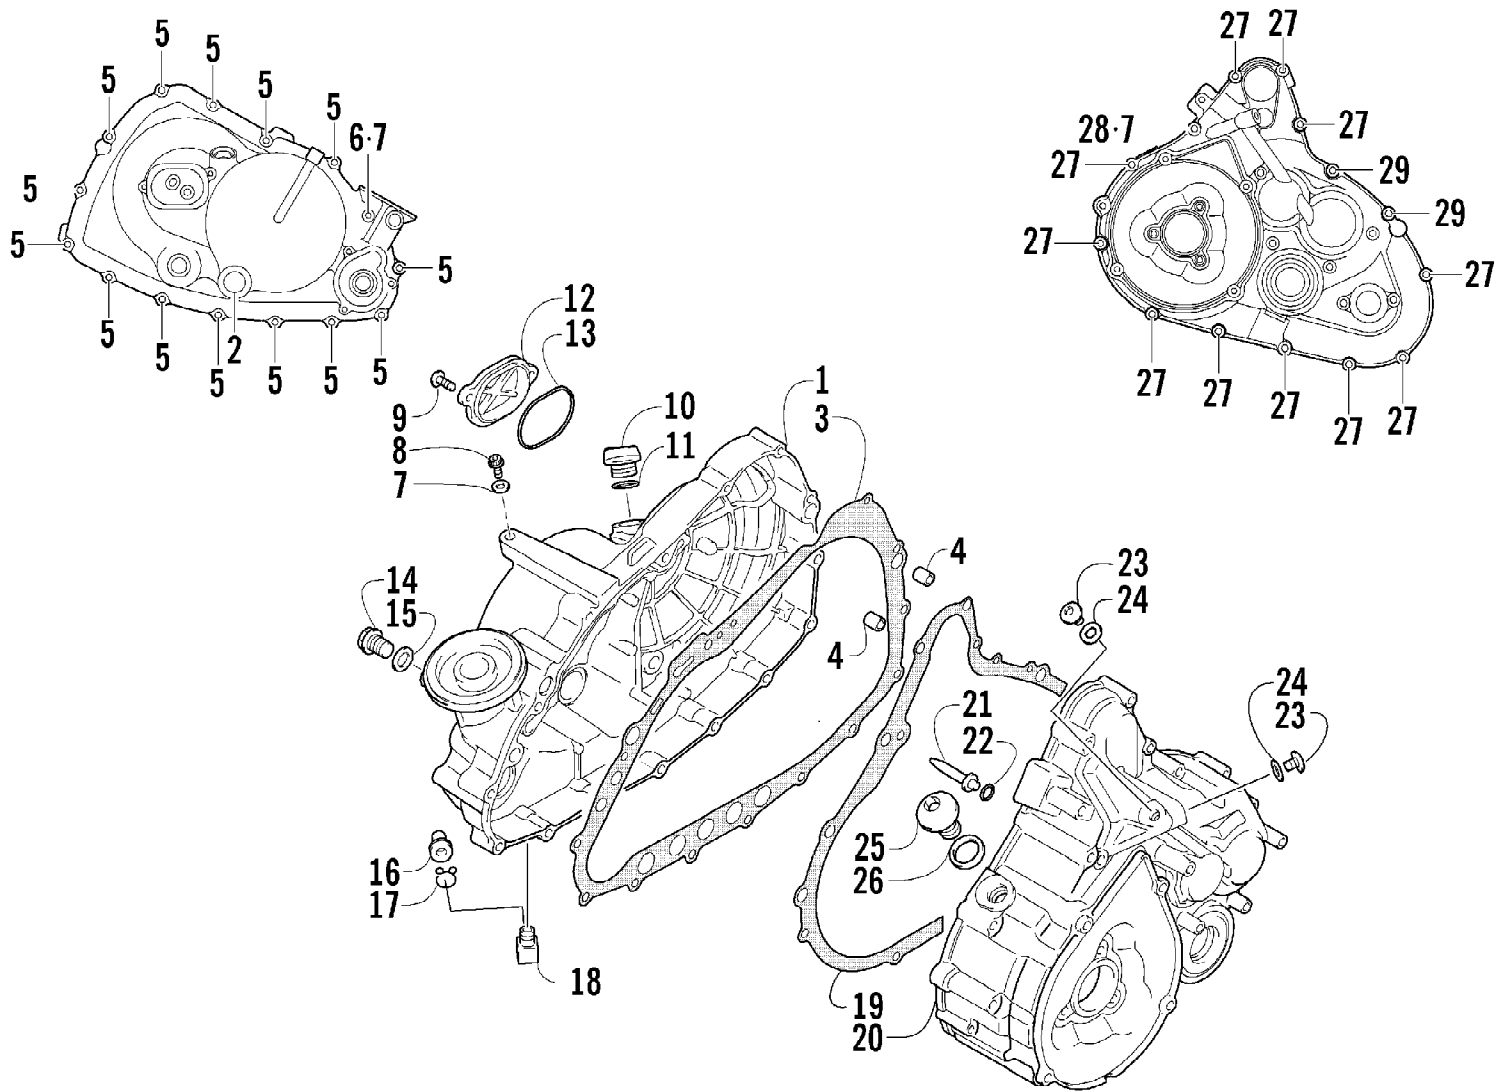


2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7)
CRANKCASE COVER ASSEMBLY

Page 24 of 98


Ref #	Part Number	Qty	S/P/F	Description
1	3402-810	1		Cover, Clutch (inc. 2)
2	3402-112	1	/P	Lens, Oil Inspection
3	3402-108	1		Gasket
4	3423-088	4		Pin, Dowel
5	0693-327	14	S	Screw, Cap
6	3423-097	1		Screw, Cap
7	3003-290	3	/P	Gasket
8	3423-539	1		Plug, Oil Gallery
9	3423-096	2	S	Screw, Cap
10	3402-042	1		Cap, Engine Oil Filler
11	3423-055	1		O-Ring
12	3402-363	1		Cap, Inspection
13	3402-101	1		O-Ring
14	3402-214	1		Plug, Oil Pressure
15	3402-012	1		Gasket
16	3413-008	1		Hose
17	3423-120	1		Clip
18	3413-009	1		Union, Water Drain
19	3402-538	1	/P	Gasket, Transfer Cover
20	3402-368	1		Cover, Transfer (inc. 21-22)
21	3402-097	1		Jet, Oil Mission
22	3423-051	1		O-Ring
23	3423-540	2		Plug, Oil Gallery
24	3005-242	2		Gasket
25	3402-041	1	S	Plug
26	3402-013	1	/P	Gasket
27	3423-098	11	S	Screw, Cap
28	3423-092	1	S	Screw, Cap
29	3007-505	2	/P	Screw, Cap

 2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUSA) 25 of 98
CRANKSHAFT ASSEMBLY

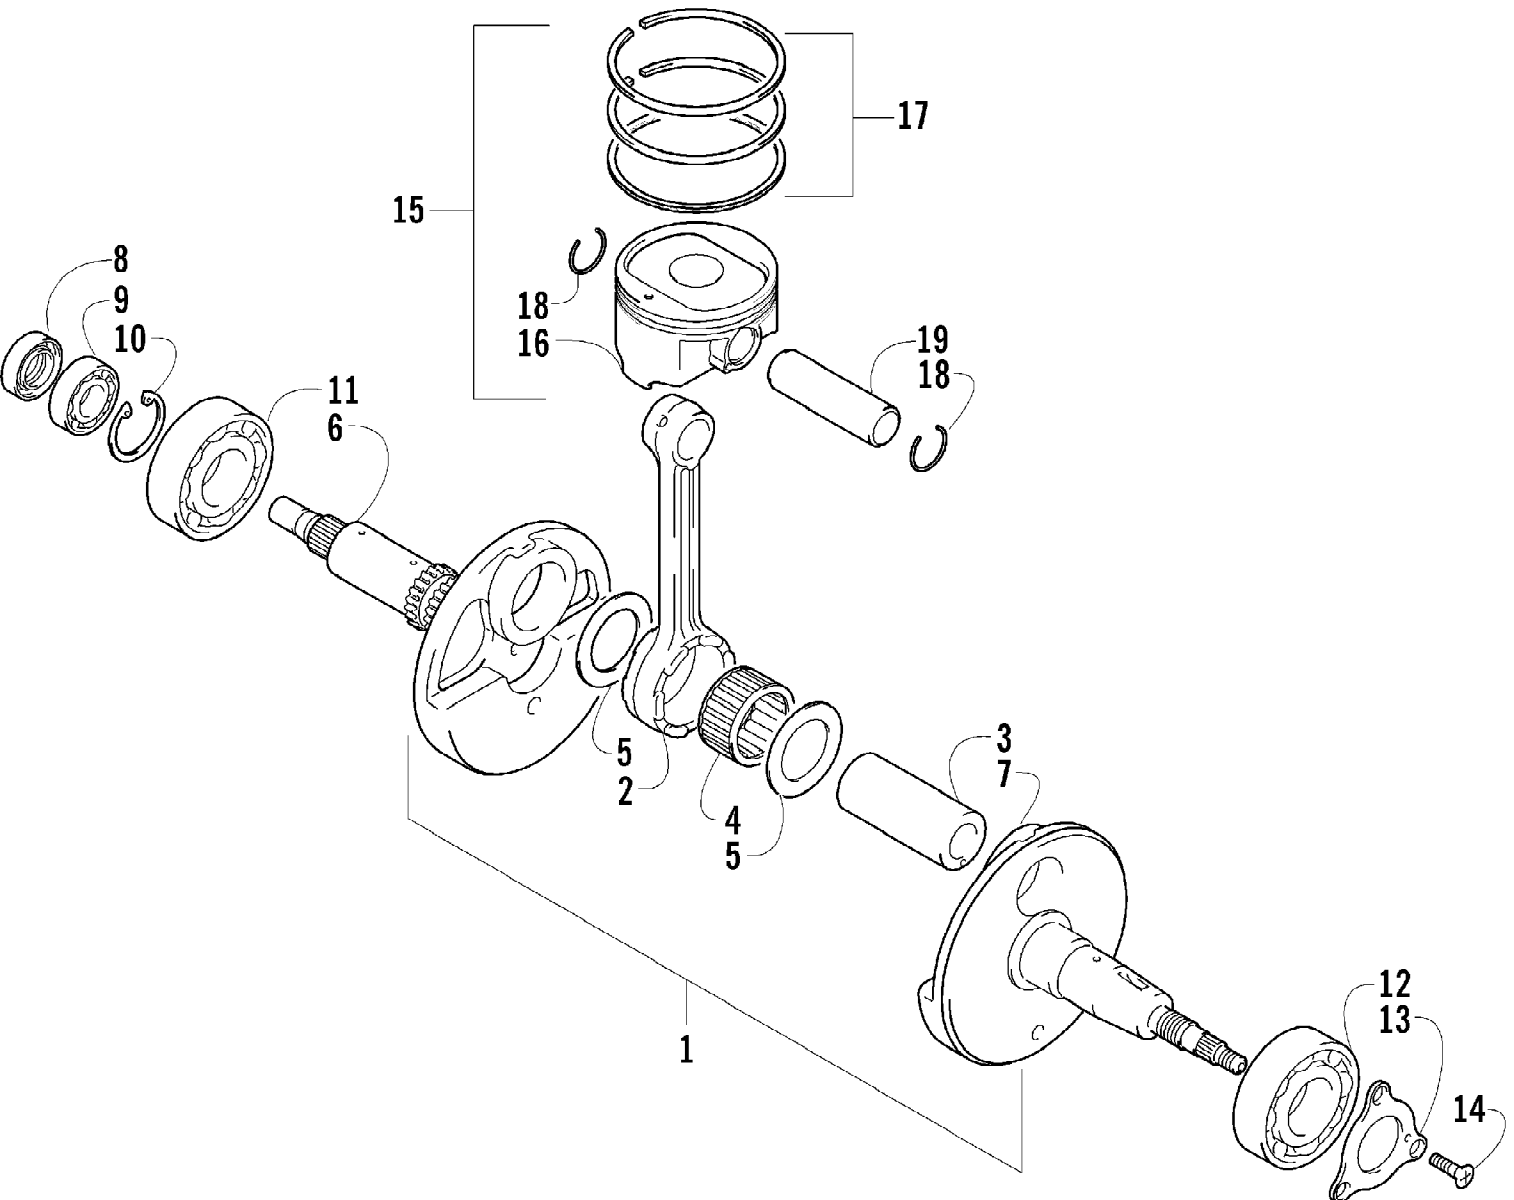

2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS) Page 26 of 98
CRANKSHAFT ASSEMBLY


Ref #	Part Number	Qty	S/P/F	Description
1	3402-811	1		Crankshaft Assembly (inc. 2-7)
2	3402-376	1		Rod, Connecting
3	3402-377	1		Pin, Crank
4	3402-717	1	/P	Bearing
5	3423-351	2		Washer
6	3402-812	1		Crankshaft - Right
7	3402-705	1	/P	Crankshaft - Left
8	3402-387	1		Seal, Oil
9	3402-384	1		Bearing - Right
10	3423-355	1		Circlip
11	3402-058	1		Bearing - Middle
12	3402-054	1		Bearing - Left
13	3402-188	1	/P	Retainer, Oil Seal - Left
14	3423-018	3		Screw
15	3402-788	1		Piston Set (inc. 16-18)
16	3402-719	1		Piston
17	3402-720	1		Ring Set, Piston
18	3423-344	2		Circlip
19	3402-375	1		Pin

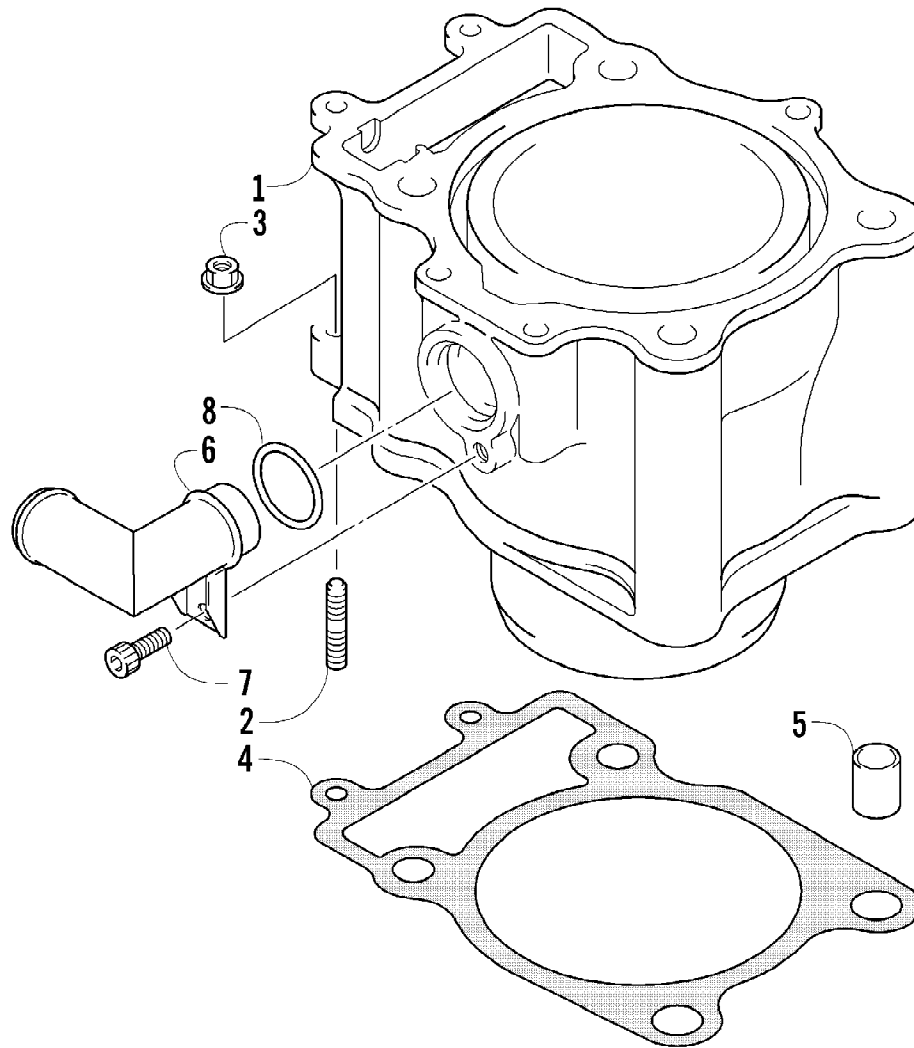 

2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS) Page 28 of 98
CYLINDER ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	3402-707	1		Cylinder
2	3423-384	2	S	Bolt, Stud
3	3004-488	2	S/P	Nut
4	3402-365	1	/P	Gasket, Cylinder
5	3423-088	2		Pin, Dowel
6	3413-006	1		Union, Water Hose
7	3423-121	1	S	Screw, Cap
8	3423-058	1		O-Ring

 
2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7) 29 of 98
CYLINDER HEAD ASSEMBLY

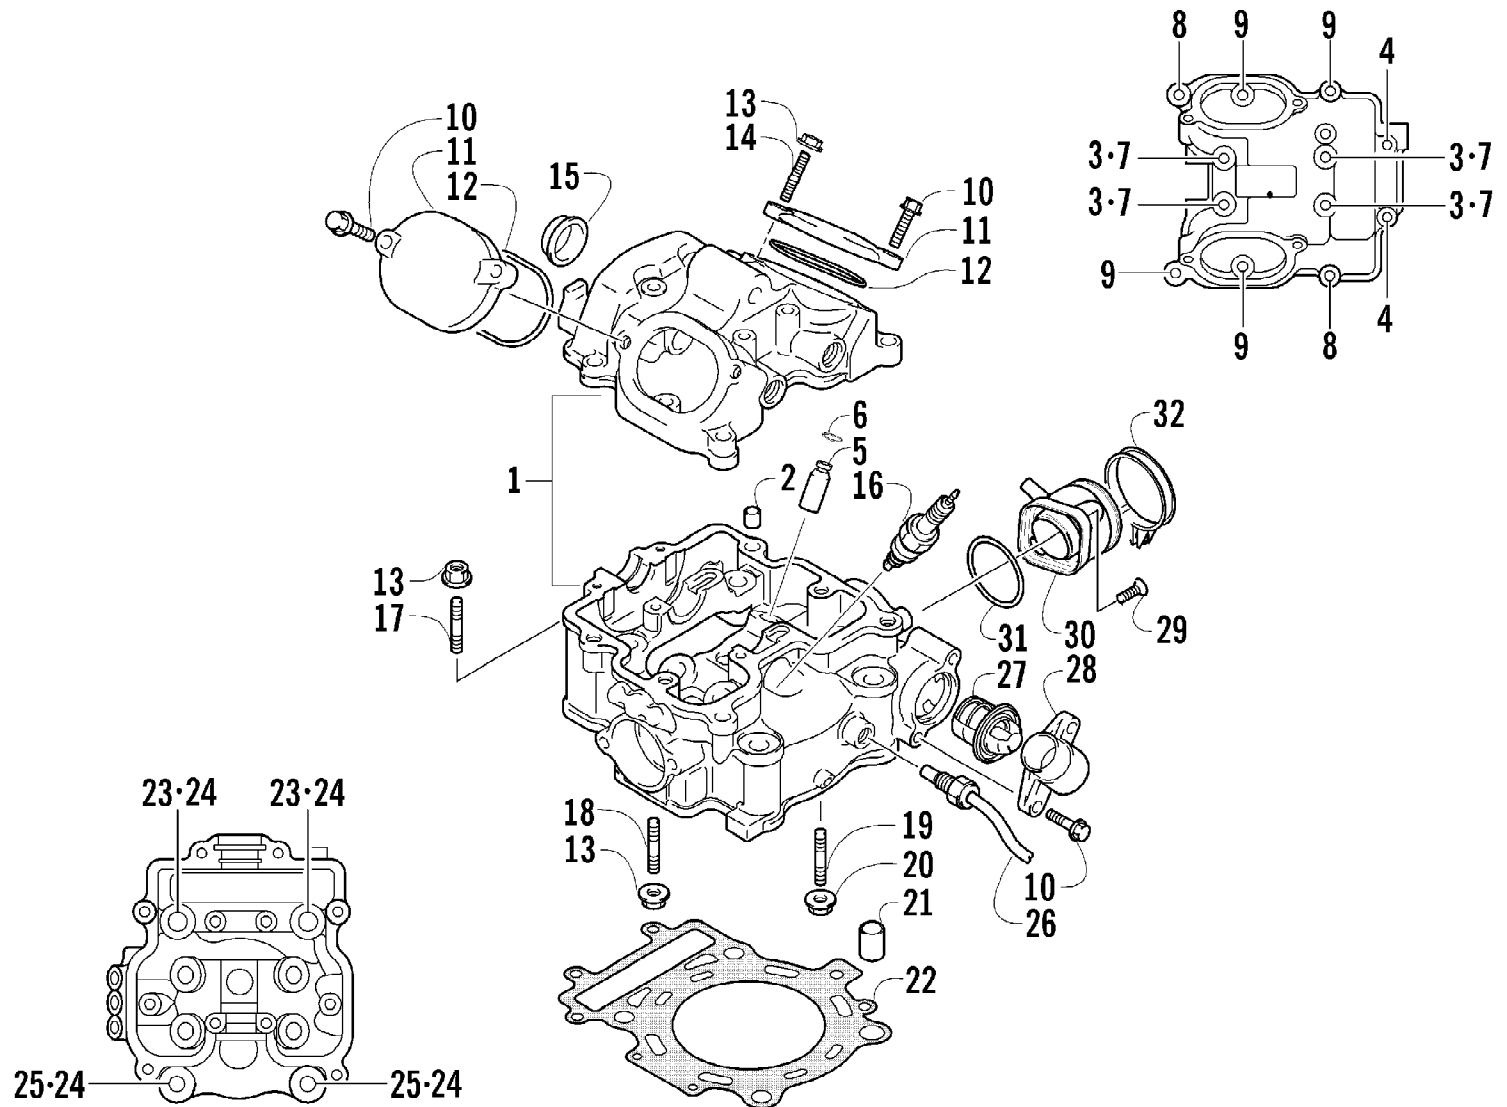

2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7)
 CYLINDER HEAD ASSEMBLY

Page 30 of 98


Ref #	Part Number	Qty	S/P/F	Description
1	3402-098	1		Head, Cylinder - Assembly (inc. 2-6)
2	3423-043	2	/P	Pin, Dowel
3	3423-006	4		Bolt
4	3008-376	2	S	Bolt
5	3402-099	4		Guide, Valve
6	3423-068	4		Circlip
7	3003-290	4	/P	Washer
8	3423-007	2	S	Bolt
9	3004-376	4	S/P	Bolt
10	3004-341	5	S/P	Bolt
11	3402-100	2		Cap, Inspection
12	3402-101	2		O-Ring
13	3004-488	5	S/P	Nut
14	3423-383	1		Bolt, Stud
15	3402-035	1		Plug, Head
16	0217-632	1		Spark Plug (NGK CR6E)
16	0217-708	1	F	Spark Plug (NGK CR7E)
16	0217-705	1	/P/F	Spark Plug (NGK CR8E)
17	3423-087	2	S	Bolt, Stud
18	3423-089	2	S	Bolt, Stud
19	3423-203	1	S/P	Bolt, Stud
20	3004-326	1	S/P	Nut
21	3423-088	2		Pin, Dowel
22	3402-362	1		Gasket, Cylinder Head
23	3423-016	2		Bolt
24	3402-010	4		Gasket
25	3423-015	2		Bolt
26	3530-038	1	S	Switch, Water Temperature
27	3413-012	1		Thermostat
28	3413-004	1		Cover, Thermostat
29	8476-620	2		Screw, Machine
30	0570-091	1		Manifold, Intake
31	0470-531	1		O-Ring
32	0423-317	1	/P	Clamp
	3402-048	1		Plug, Frost

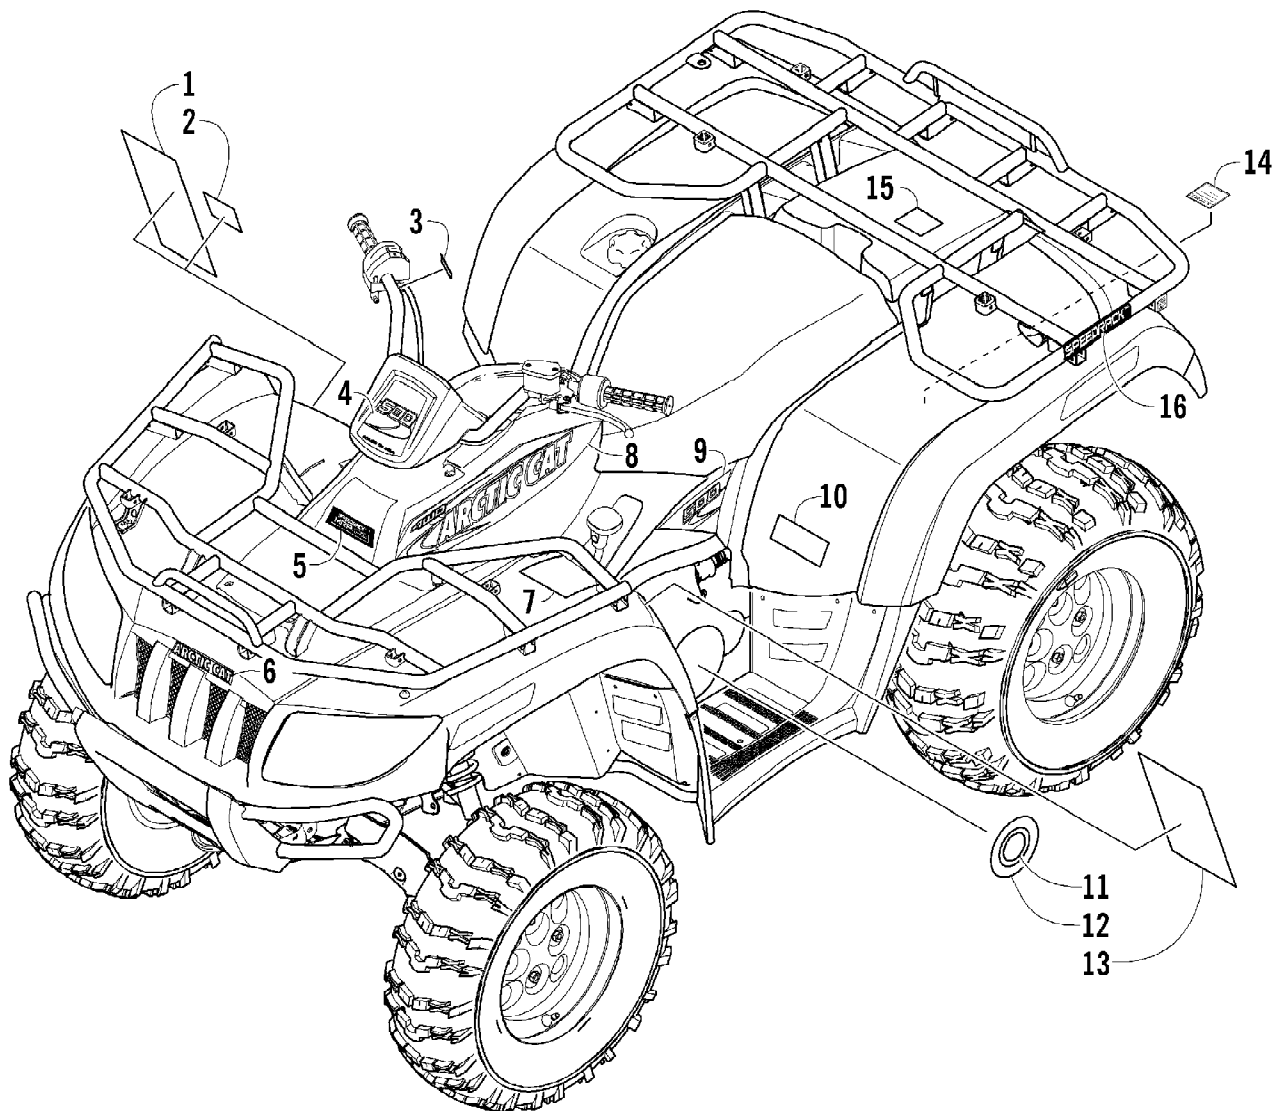 

2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7)
 DECALS Page 32 of 98

Ref #	Part Number	Qty	S/P/F	Description
1	1411-250	1	F	Decal, Warning - Reverse/Pre-Ride
2	0411-835	1		Decal, Warning - Turn/Hill
3	0411-966	1		Decal, Warning - Differential Lock
4	1411-076	1		Decal, Instrument Pod
5	1411-050	1	/P	Decal, Crest
6	0411-840	1		Decal, Front
7	0411-401	1	F	Decal, Warning - Age
8	1411-018	1		Decal, Side - Upper Right
8	1411-019	1		Decal, Side - Upper Left
9	1411-034	1		Decal, Side - Lower Right
9	1411-035	1		Decal, Side - Lower Left
10	0411-430	1		Decal, Warning - Tire Pressure
11	0411-003	1		Decal, Shift Pattern
12	0411-009	1		Decal, High-Low
13	0411-218	1	F	Decal, Warning - General
14	1411-077	1		Decal, Warning - Towing
15	0411-435	1		Decal, Passenger
16	0411-965	2		Decal, "Speedrack"

 
2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7) 33 of 98
DRIVE TRAIN ASSEMBLY

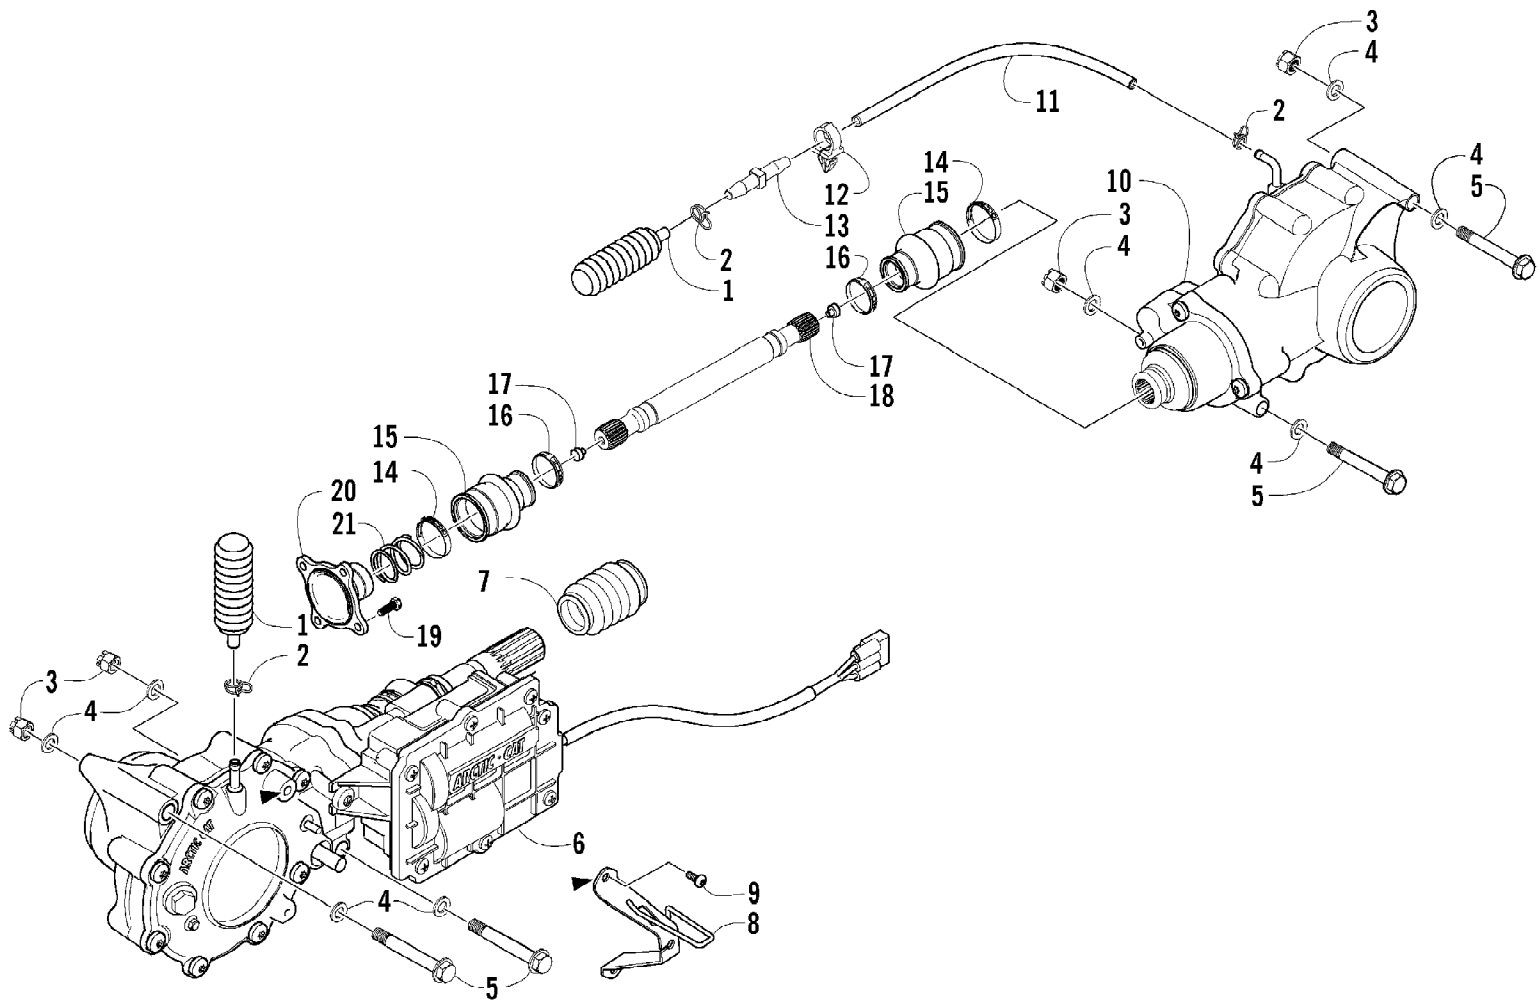

2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS) Page 34 of 98
DRIVE TRAIN ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0402-147	2	S	Bladder, Gearcase
2	0423-315	4		Clamp, Hose
3	8428-002	4		Nut, Lock
4	0423-426	8		Washer
5	0423-404	4		Screw, Cap
6	0502-754	1		Gearcase, Front
7	0402-966	1		Boot, Shaft
8	0502-500	1		Plate, Cable
9	0423-396	2		Screw, Self-Tapping
10	0502-820	1	/P	Gearcase, Rear
11	0410-049	AR		Hose, Vent
12	0623-101	1		Clip, Retaining
13	0470-462	1		Fitting, Vent
14	0423-393	2		Clamp
15	0402-985	2	/P	Boot
16	0423-411	2		Clamp
17	0673-618	2	/P	Bumper, Propeller Shaft
18	1402-234	1		Shaft, Propeller
19	8408-820	4	/P	Screw, Cap
20	0402-950	1		Flange, Output
21	1402-026	1		Spring

 
2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7) 35 of 98
ENGINE AND EXHAUST

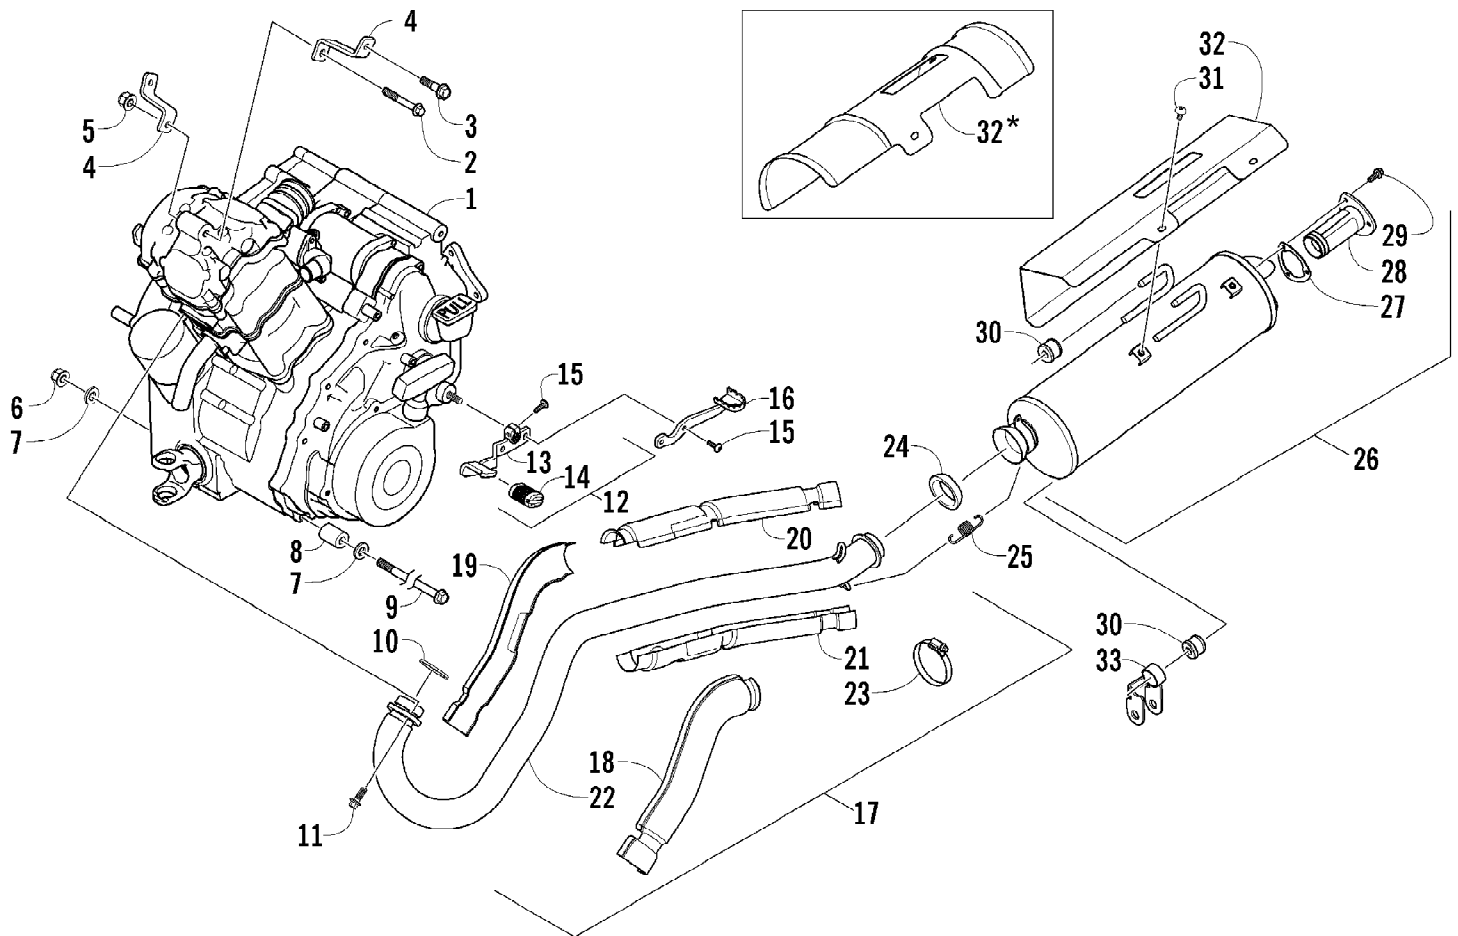

2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7) 36 of 98
ENGINE AND EXHAUST

Ref #	Part Number	Qty	S/P/F	Description
1	0462-031	1		Engine
2	8408-860	1		Screw, Cap
3	8408-816	2		Screw, Cap
4	1506-625	1		Bracket, Engine - Right
4	1506-626	1		Bracket, Engine - Left
5	8424-802	1		Nut
6	8428-002	2		Nut, Lock
7	0423-426	4		Washer
8	0423-042	1	S	Spacer
9	0423-405	2		Screw, Cap
10	0412-007	1	/P	Seal, Exhaust
11	8408-820	2	/P	Screw, Cap
12	0502-872	1		Lever, Shift - Assembly (inc. 13-14 and one No. 15)
13	0502-691	1		Lever, Toe Shift
14	1402-284	1		Pad, Toe - Shift Lever
15	8476-620	3		Screw, Machine
16	0502-693	1		Lever, Heel Shift
17	0512-259	1	S	Pipe, Exhaust - Assembly (inc. 18-23)
17	0512-341	1	/P/F	Pipe, Exhaust - Assembly (inc. 18-23)
18	0412-326	1		Shield, Exhaust Pipe - Outer - Front
19	0412-320	1		Shield, Exhaust Pipe - Inner - Front
20	0412-350	1		Shield, Exhaust Pipe - Outer - Rear
21	0412-339	1		Shield, Exhaust Pipe - Inner - Rear
22	0512-239	1	S	Pipe, Exhaust
22	0512-340	1	/P/F	Pipe, Exhaust
23	0423-317	3	/P	Clamp
24	0412-256	1	S	Seal, Muffler
25	0612-668	2	/P	Spring, Extension
26	0512-235	1	S	Muffler - Assembly (inc. 27-29)
26	0512-306	1	/P/F	Muffler - Assembly (inc. 27-29)
27	0412-313	1		Gasket, Spark Arrester
28	0512-219	1	/P	Arrester, Spark - Assembly
29	8408-616	3		Screw, Cap
30	0412-215	3	S	Bushing, Exhaust Pipe
31	8477-610	4		Screw, Machine
31	8477-610	3	F	Screw, Machine
32	0412-329	1	S	Cover, Muffler
32	0412-373	1	/P/F	Cover, Muffler
33	1506-732	1		Channel, Muffler Support

 2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7) 37 of 98
FRAME AND RELATED PARTS

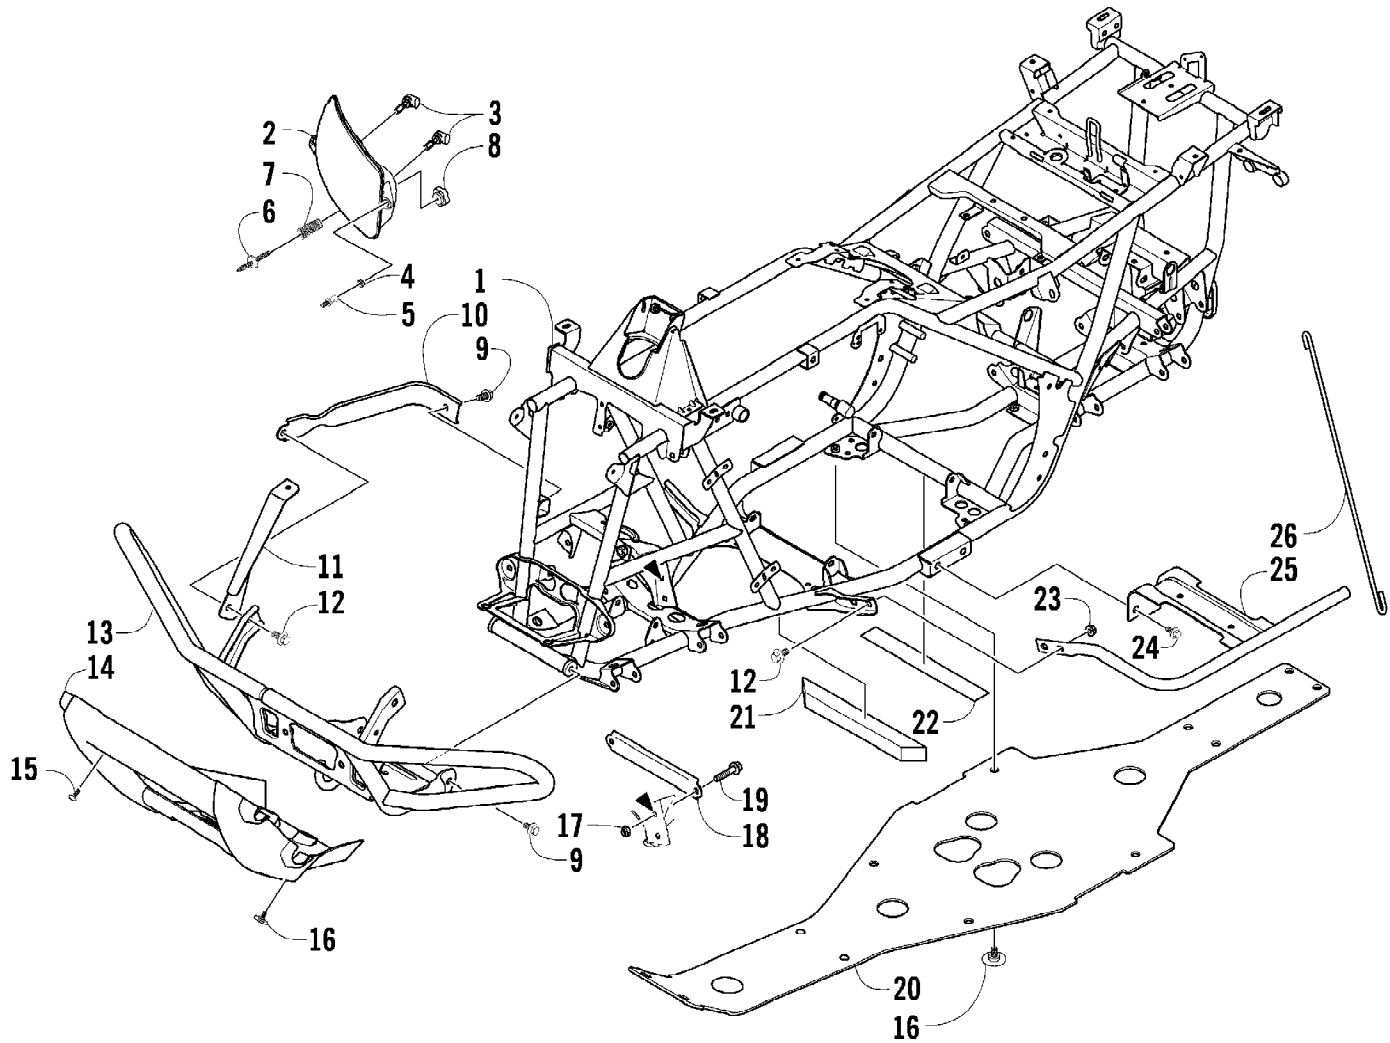


2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7)
FRAME AND RELATED PARTS

Page 38 of 98

Ref #	Part Number	Qty	S/P/F	Description
1	1506-717	1		Frame, Main
2	0509-016	1		Headlight Assembly - Right (inc. 3-4)
2	0509-018	1		Headlight Assembly - Left (inc. 3-4)
3	0409-055	4		Bulb, Headlight
4	0423-452	4		Socket, Mounting
5	0423-515	4		Stud, Mounting - Headlight
6	0423-514	2		Stud, Adjuster - Headlight
7	0423-522	2		Spring, Adjuster
8	0423-513	2		Knob, Adjuster
9	8409-020	4	/P	Screw, Cap
10	1506-596	1	/P	Channel, Bumper Mounting - Right
10	0506-653	1	S	Channel, Bumper Mounting - Left
11	1506-562	1		Bracket, Mounting - Bumper - Right
11	1506-563	1		Bracket, Mounting - Bumper - Left
12	8408-816	6		Screw, Cap
13	1506-855	1	/P	Bumper
14	1406-360	1		Grille, Bumper
15	0423-419	2		Screw, Machine
16	0423-101	16		Screw, Shoulder
17	8428-002	2		Nut, Lock
18	1506-429	1	S	Brace, A-Arm
19	8409-025	2		Screw, Cap
20	1406-030	1		Panel, Belly
21	1506-067	1		Pad, Foam
22	0406-289	1		Pad, Foam
23	8424-802	4		Nut
24	8409-016	4		Screw, Cap
25	1506-380	1		Footrest - Right
25	1506-379	1		Footrest - Left
26	1406-298	2		Rod, Support

 2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7) 39 of 98
FRONT BODY PANEL ASSEMBLY

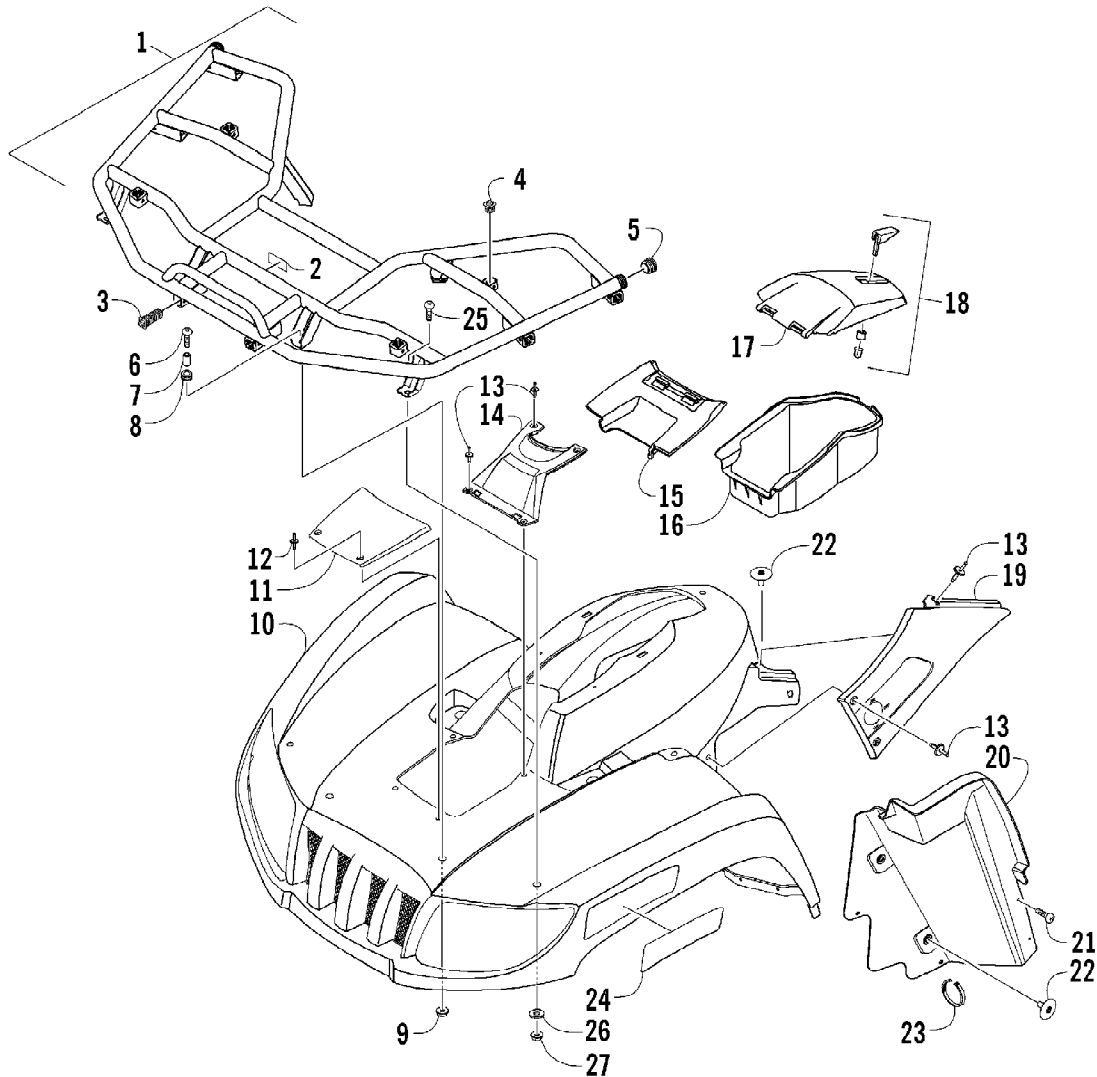


2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7)
 FRONT BODY PANEL ASSEMBLY

Page 40 of 98

Ref #	Part Number	Qty	S/P/F	Description
1	0541-272	1		Rack - Front - Assembly (inc. 2-5)
2	0411-576	1		Decal, Warning - Front Rack Load
3	2406-014	6		Bushing, Rack
4	0441-592	4	/P	Bushing, Rack
5	1441-049	2		Plug, Rack
6	8410-830	4		Screw, Machine
7	0423-463	4		Spacer
8	0423-465	4		Grommet
9	8432-802	4		Nut, Lock
10	1406-612	1	S	Panel, Fender - Front
11	1406-358	1		Cover, Access
12	0423-535	2		Rivet, Reinstallable
13	0623-362	10		Rivet, Reinstallable
14	1406-484	1		Cover, Steering Post
15	0470-513	1		Cover, Storage Box
16	1406-573	1		Box, Storage
17	0470-514	1		Lid, Storage Box
18	1406-599	1		Latch, Storage Box
19	1406-313	1		Panel, Side - Right
19	1406-314	1		Panel, Side - Left
20	1406-354	1		Panel, Splash - Right
20	1406-355	1	S	Panel, Splash - Left
21	0423-342	4	/P	Screw, Self-Tapping
22	0423-101	5		Screw, Body
23	0123-788	AR	/P	Cable Tie - 7.5 in.
24	0411-818	1		Decal, Reflector - Front - Right
24	0411-819	1		Decal, Reflector - Front - Left
25	0423-355	2		Screw, Shoulder
26	8050-222	2	/P	Washer
27	8424-602	2	/P	Nut, Lock

 2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7) 41 of 98
FRONT DRIVE GEARCASE ASSEMBLY

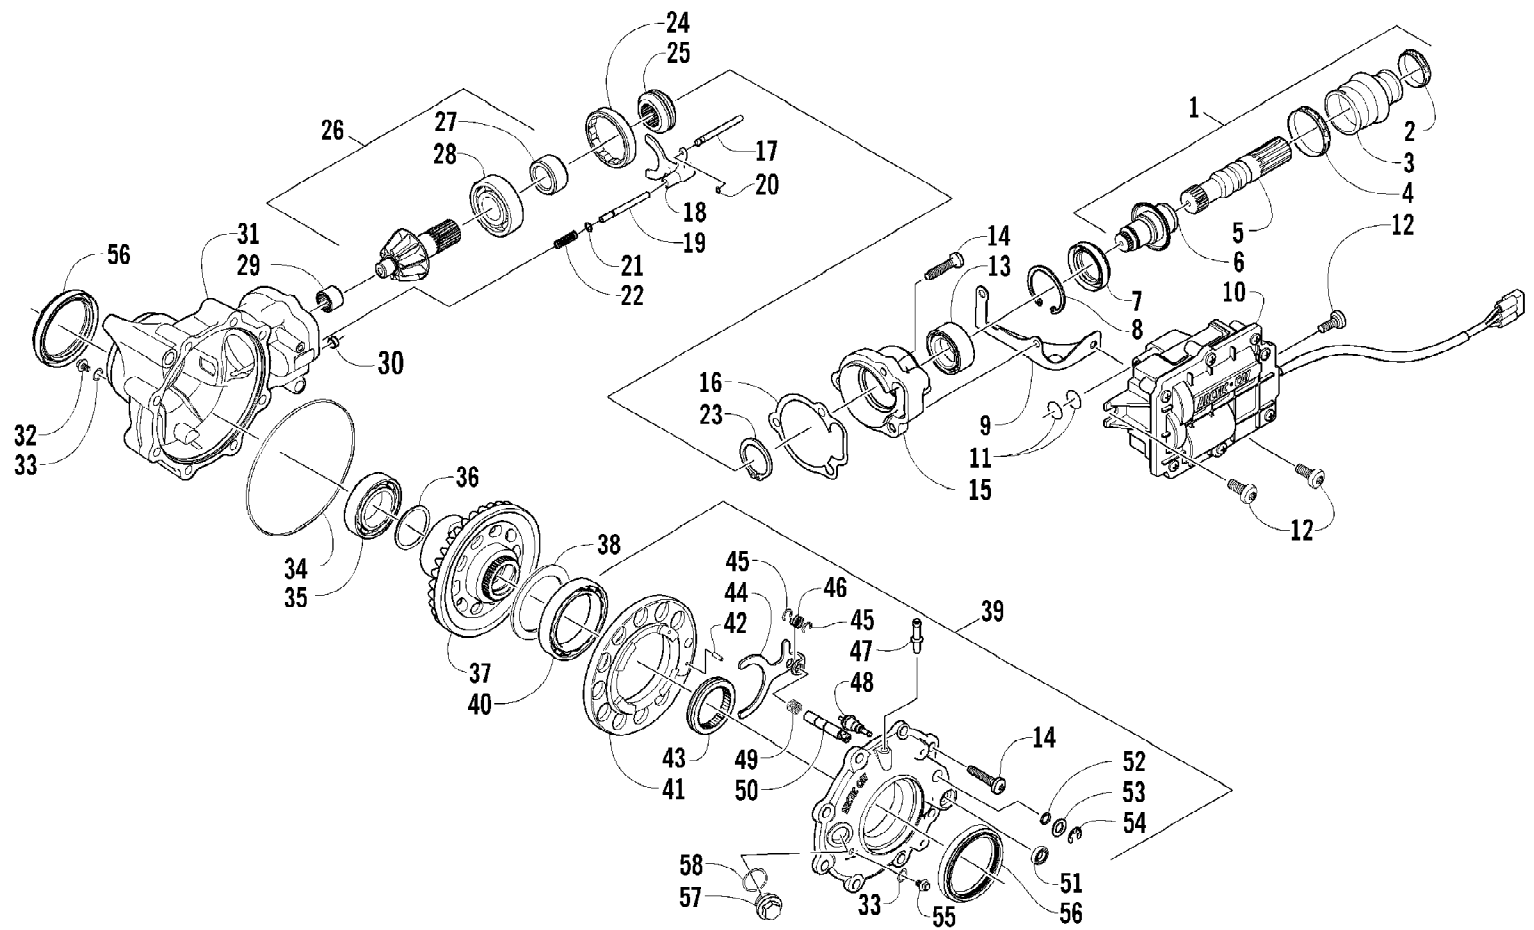


2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7) Page 42 of 98
 FRONT DRIVE GEARCASE ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
	0502-754	1		Front Drive Gearcase Assembly
1	0502-385	1		Shaft, Propeller - Assembly (inc. 2-6)
2	0423-411	1		Clamp, Boot
3	0402-985	1	/P	Boot, Propeller Shaft
4	0423-393	1		Clamp, Boot
5	1402-045	1		Shaft, Output
6	0502-407	1	S	Shaft, Input
7	1402-011	1		Seal
8	0423-423	1		Ring, Retaining
9	0502-347	1		Bracket, Actuator
10	0502-579	1		Actuator (inc. one No. 11)
11	0423-498	2	S	O-Ring
12	0423-396	3		Screw, Self-Tapping
13	1402-043	1		Bearing
14	0423-118	11		Screw, Self-Tapping
15	0502-528	1	/P	Housing, Pinion
16	0402-947	1		Gasket, Flange
17	0402-997	1		Shaft, Selector
18	0402-998	1		Fork, Selector
19	0402-417	1		Shaft, Shuttle
20	0423-402	1		Ring, Retaining
21	0423-147	1		O-Ring
22	0402-999	1		Spring, Return
23	0423-417	1		Ring, Retaining
24	0402-357	1		Collar, Lock
25	0402-413	1		Coupler, Drive
26	0502-783	1		Gear, Pinion - Assembly - 10T (inc. 27-28)
27	0402-336	1		Collar, Retaining
28	0402-327	1		Bearing
29	0402-328	1		Bearing
30	0402-411	1		Pin, Dowel
31	0502-514	1		Housing, Gearcase
32	1402-210	1	/P	Plug, Magnetic (inc. one No. 33)
33	0423-153	2		O-Ring
34	0423-149	1		O-Ring
35	0402-393	1		Bearing
36	0402-405	AR		Shim
36	0402-406	AR		Shim
36	0402-407	AR		Shim
36	0402-408	AR		Shim
36	0402-409	AR		Shim
37	0502-851	1		Gear, Ring - 36T
38	1402-074	AR		Shim
38	1402-075	AR		Shim
38	1402-076	AR		Shim
38	1402-077	AR		Shim
38	1402-078	AR		Shim
39	0502-434	1		Cover, Gearcase (inc. one No. 33, 40-55, and one No. 56)
40	1402-053	1		Bearing
41	0502-413	1		Flange, Bearing
42	1402-079	1		Pin, Parallel

2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS) Page 43 of 98
 FRONT DRIVE GEARCASE ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
43	1402-042	1		Collar, Sliding
44	1402-054	1		Fork
45	1402-058	2		Ring, Retaining
46	1402-057	1		Spring
47	1402-104	1		Fitting
48	0402-419	1		Switch, Indicator
49	1402-063	1		Spring
50	1402-055	1		Shaft, Lock
51	1402-056	1		Seal
52	0423-133	1		O-Ring
53	0423-132	1		Washer
54	0423-424	1		Ring, Retaining
55	1402-211	1		Plug, Oil Level (inc. one No. 33)
56	0402-394	2	S	Seal
57	0402-333	1	/P	Plug, Fill (inc. 58)
58	0423-154	1		O-Ring

 
2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7) 44 of 98
FRONT SUSPENSION ASSEMBLY

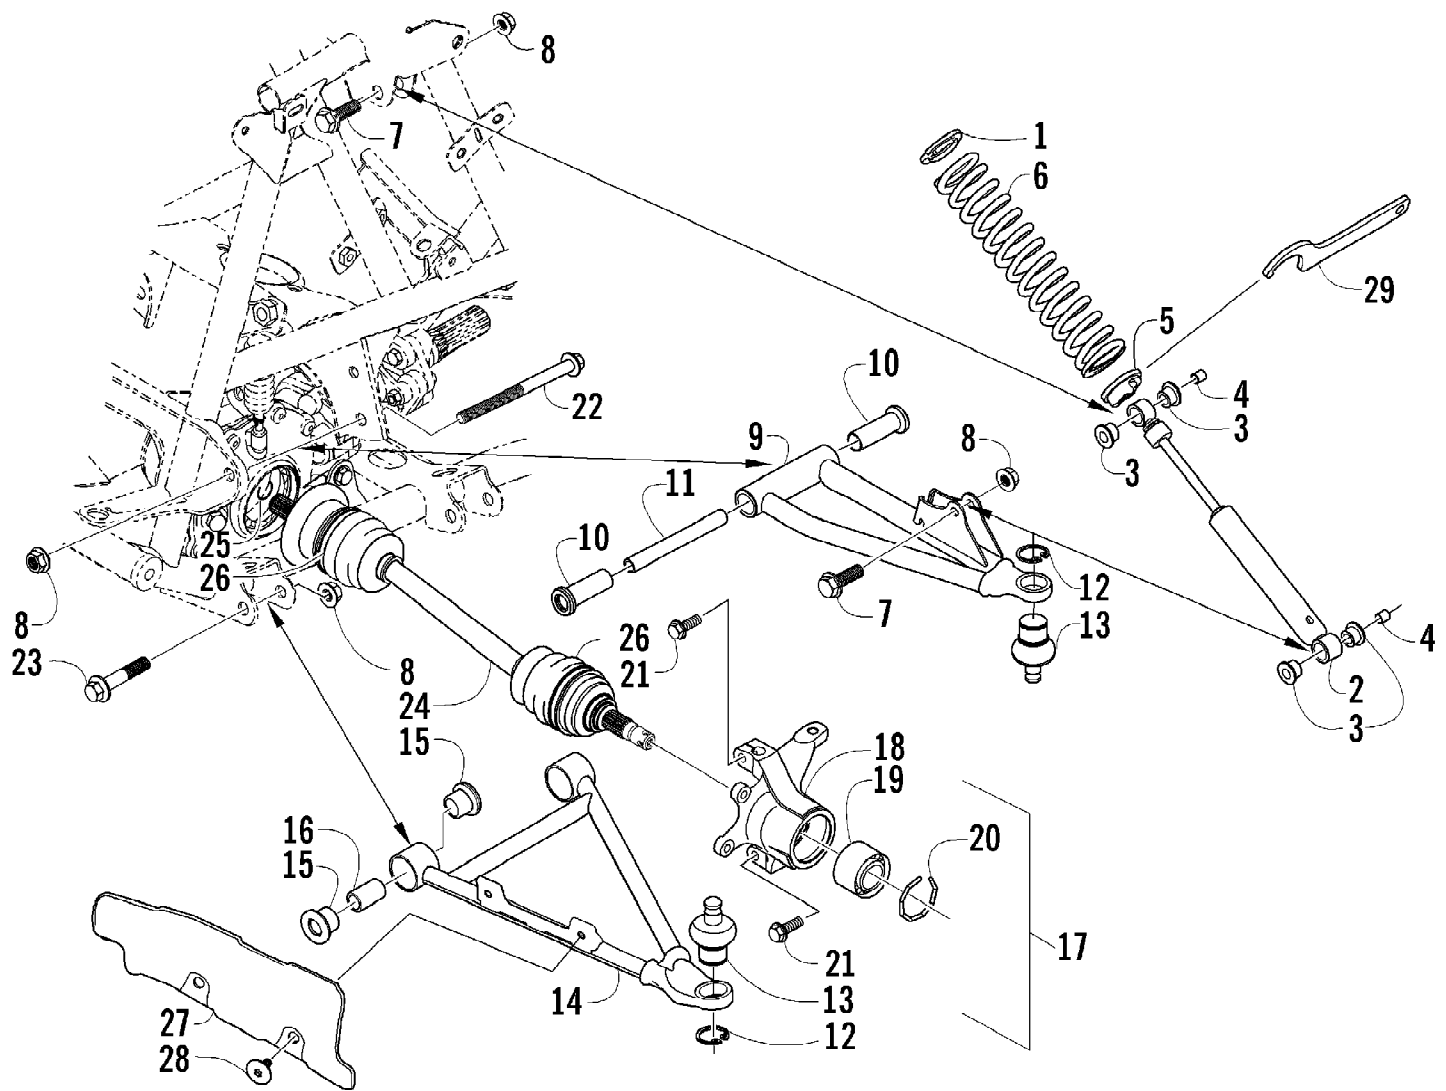

2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7)
 FRONT SUSPENSION ASSEMBLY Page 45 of 98

Ref #	Part Number	Qty	S/P/F	Description
1	1603-889	2	/P	Retainer, Spring
2	0403-127	2		Shock Absorber - Front (inc. 3-4)
3	0604-310	8		Bushing, Shock Absorber
4	0403-028	4		Sleeve, Shock
5	0403-102	2		Cam, Spring Adjuster
6	0403-146	2	/P	Spring, Shock Absorber
7	8409-040	4		Screw, Cap
8	8428-002	10		Nut, Lock
9	0503-272	1	S	A-Arm, Upper Right (inc. 10-13)
9	0503-273	1	S	A-Arm, Upper Left (inc. 10-13)
10	0403-081	4	S	Bushing
11	0403-080	2		Collar
12	0423-009	4	/P	Clip, Ball Joint
13	0405-115	4	/P	Ball Joint - Front
14	0503-268	1	/P	A-Arm, Lower Right (inc. 12-13 and 15-16)
14	0503-269	1		A-Arm, Lower Left (inc. 12-13 and 15-16)
15	0403-115	8	S	Bushing
16	0403-114	4	S	Collar
17	0505-460	1		Knuckle - Assembly - Right (inc. 18-20)
17	0505-461	1	S	Knuckle - Assembly - Left (inc. 18-20)
18	0	1	F	Knuckle, Steering - Right
18	0	1	F	Knuckle, Steering - Left
19	1402-027	2	S/P	Bearing, Wheel Hub
20	0423-423	2		Ring, Retaining
21	8409-030	4		Screw, Cap
22	0423-334	2		Screw, Cap
23	8409-075	4		Screw, Cap
24	0502-812	1	S	Axle, Drive - Front - Right (inc. 25-26)
24	0502-813	1	S	Axle, Drive - Front - Left (inc. 25-26)
25	1441-109	2	S	Clip, Retaining
26	0436-276	2	S	Repair Kit, Boot - Front Axle
27	0441-756	1		Guard, Boot - Axle - Right
27	0441-757	1		Guard, Boot - Axle - Left
28	0423-101	4		Screw, Body
29	0441-587	1		Wrench, Spanner

 2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7) 46 of 98
GAS TANK ASSEMBLY

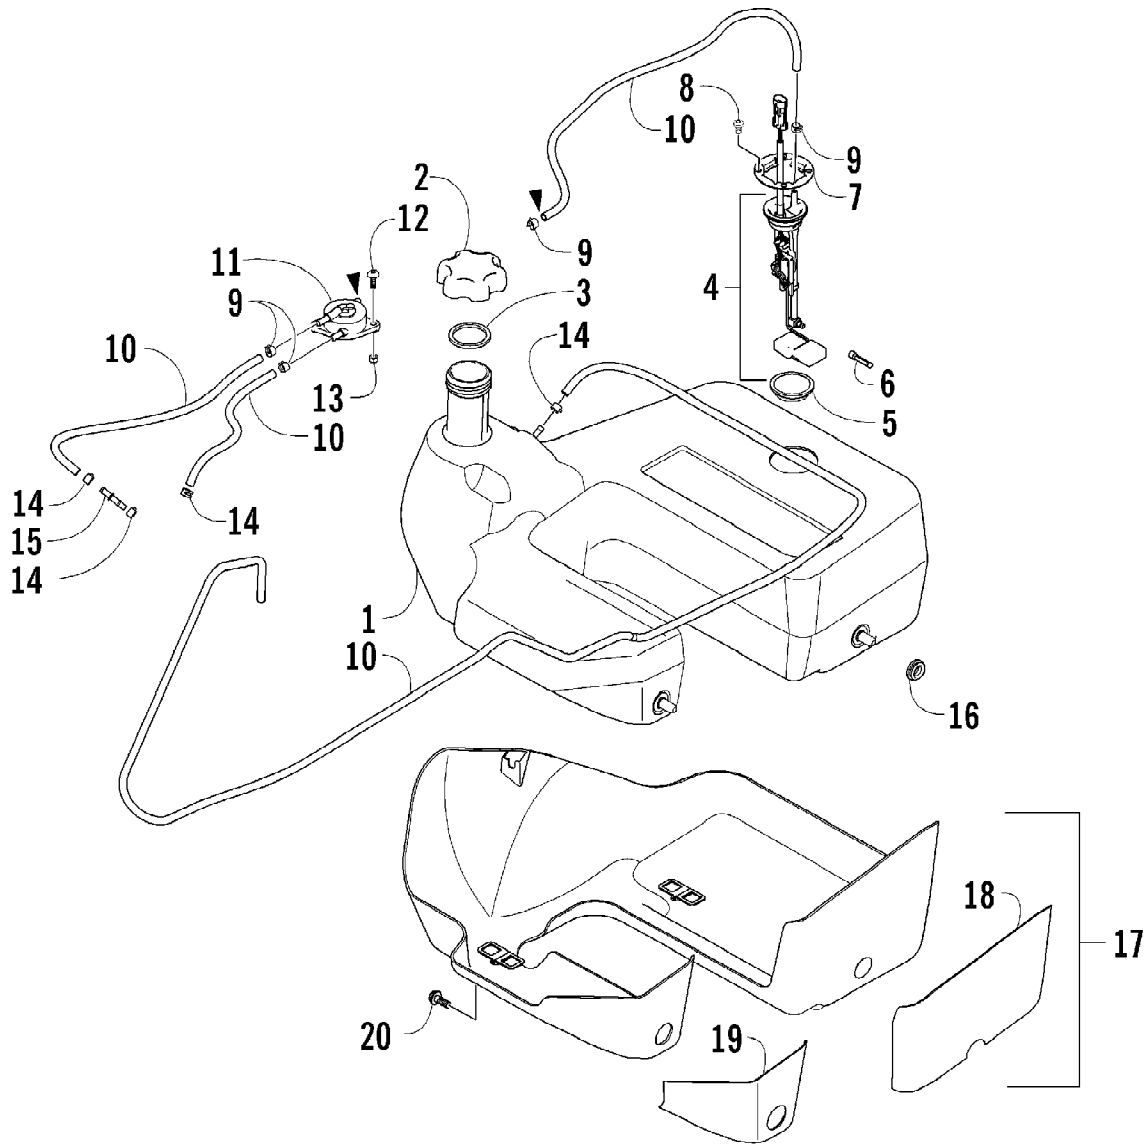


2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7)
 GAS TANK ASSEMBLY

Page 47 of 98

Ref #	Part Number	Qty	S/P/F	Description
1	0570-102	1	S	Tank, Gas - Assembly (inc. 2-8)
2	0470-438	1	/P	Cap, Gas Tank (inc. 3)
3	0109-733	1	/P	Gasket, Tank Cap
4	0570-112	1		Sensor, Fuel Level (inc. 5-6)
5	0470-521	1		Seal, Fuel Level Sensor
6	0470-475	1		Filter, Fuel
7	0470-546	1	S	Plate, Mounting - Fuel Level Sensor
8	1623-158	4		Screw, Self-Tapping
9	0423-461	4	S	Clamp, Hose
10	0410-070	AR	/P	Hose, Gasline - 25 ft
11	0470-519	1	S	Pump, Fuel
12	8476-620	2		Screw, Machine
13	0623-038	2		Nut w/Washer
14	1623-233	4		Clamp, Hose
15	0470-527	1	S	Fitting, Straight
16	0423-460	2		Grommet
17	0570-081	1		Shield, Gas Tank - Assembly (inc. 18-19)
18	0470-499	1		Shield, Heat
19	0470-498	1		Shield, Heat
20	8408-816	2		Screw, Cap

 2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7) 48 of 98
GEAR SHIFTING ASSEMBLY

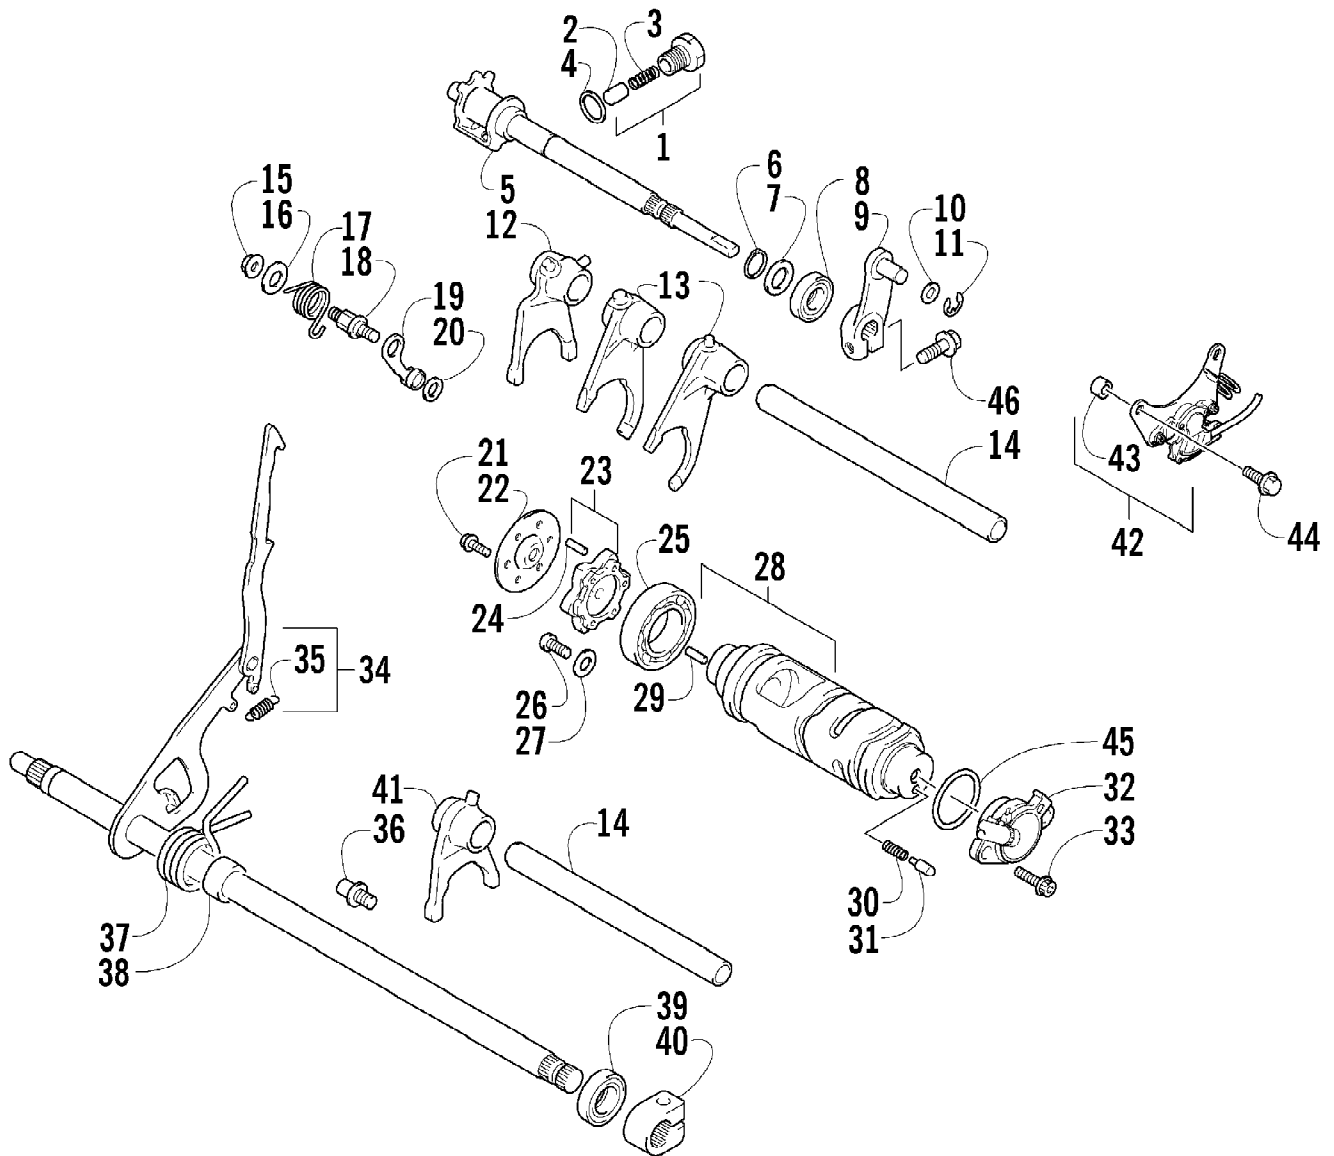


2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7)
 GEAR SHIFTING ASSEMBLY

Page 49 of 98

Ref #	Part Number	Qty	S/P/F	Description
1	3446-164	1		Stopper, Reverse (inc. 2-3)
2	3446-117	1		Stopper
3	3402-088	1		Spring
4	3402-012	1		Gasket, Cam Stopper
5	3446-349	1		Cam, Reverse Shift
6	3423-358	1	S	Circlip
7	3423-357	1		Washer
8	3402-076	1		Seal, Oil
9	3402-434	1	/P	Arm, Reverse Gear Shift
10	3423-204	1	/P	Washer
11	3423-168	1	S	E-Ring
12	3446-040	1		Fork, Gear Shift - Reverse
13	3446-347	2		Fork, Gear Shift
14	3446-052	2		Shaft, Gear Shift Fork
15	3007-373	1	/P	Nut, Cam Stopper
16	3423-142	1		Washer, Cam Stopper
17	3423-551	1		Spring, Cam Stopper
18	3446-048	1		Support, Cam Stopper
19	3446-043	1		Stopper, Cam
20	3423-141	1		Washer, Cam Stopper
21	3423-125	1	S	Screw, Cap
22	3446-309	1	/P	Guide, Gear Shift Cam
23	3446-049	1		Plate, Gear Shift Cam (inc. 24)
24	3423-045	5		Pin
25	3402-051	1		Bearing, Gear Shift Cam
26	3423-370	2		Screw, Machine
27	3423-135	2		Retainer, Shift Cam Bearing
28	3446-348	1		Cam, Gear Shift (inc. 29)
29	3423-114	1	/P	Pin
30	3402-087	2		Spring
31	3423-044	2		Contact
32	3402-816	1		Switch, Position
33	3423-418	2		Screw, Cap
34	3446-350	1	S	Shaft, Gear Shift (inc. 35)
35	3402-093	1		Spring
36	3446-056	1		Stopper, Gear Shift
37	3402-094	1		Spring, Gear Return
38	3446-054	1		Spacer, Gear Shift Shaft
39	3402-068	1	/P	Seal, Oil
40	3402-815	1		Boss, Gear Shift Lever
41	3446-039	1		Fork, Gear Shift
42	3409-020	1		Switch, Reverse (inc. 43)
43	3423-553	1		Spacer
44	3423-307	2	S	Screw, Cap
45	3423-059	1		O-Ring
46	8476-620	1		Screw, Machine

 2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7) 50 of 98
HANDLEBAR ASSEMBLY

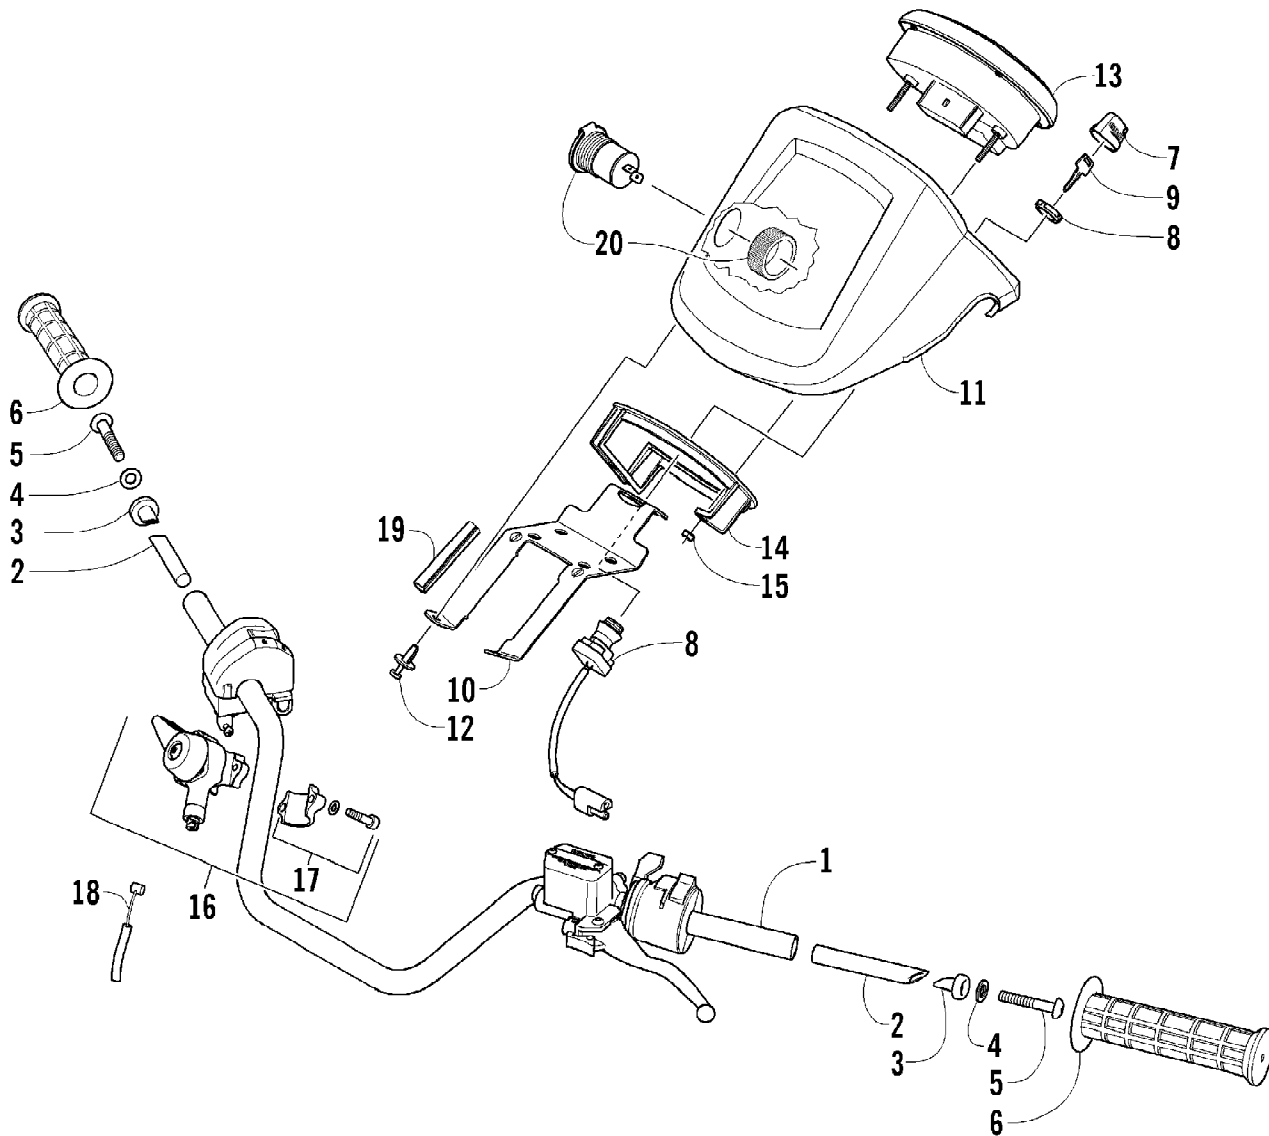


2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7)
 HANDLEBAR ASSEMBLY

Page 51 of 98

Ref #	Part Number	Qty	S/P/F	Description
1	0505-448	1		Tube, Handlebar
2	0405-148	2		Plug, Handlebar
3	0405-149	2		End Cap, Handlebar
4	8050-247	2	/P	Washer
5	8477-845	2		Screw, Machine
6	0405-147	2		Grip, Handlebar
7	0409-013	1		Cover, Key
8	3430-040	1		Switch, Ignition - Assembly (inc. 9)
9	3409-007	1	/P	Key, Ignition - Blank (C Series)
9	3409-011	1		Key, Ignition - Blank (D Series)
9	3409-012	1		Key, Ignition - Blank (E Series)
9	3409-013	1		Key, Ignition - Blank (F Series)
10	1506-578	1		Bracket, Mounting - Instrument Pod
11	0405-190	1		Instrument Pod
12	0423-535	2		Rivet, Reinstallable
13	0520-003	1		Gauge, Digital
14	0420-065	1	/P	Clamp, Plastic
15	0423-493	1		Nut, Hex
16	0502-527	1		Control, Differential Lock (inc. 17)
17	0502-613	1		Clamp, Differential Lock Control - Kit
18	0487-030	1	S	Cable, Differential Lock
19	0706-371	AR	/P	Trim Optional
20	0641-897	1	/P	Outlet, Accessory - 12V

 
2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7) 52 of 98
HI/LO SHIFTER ASSEMBLY

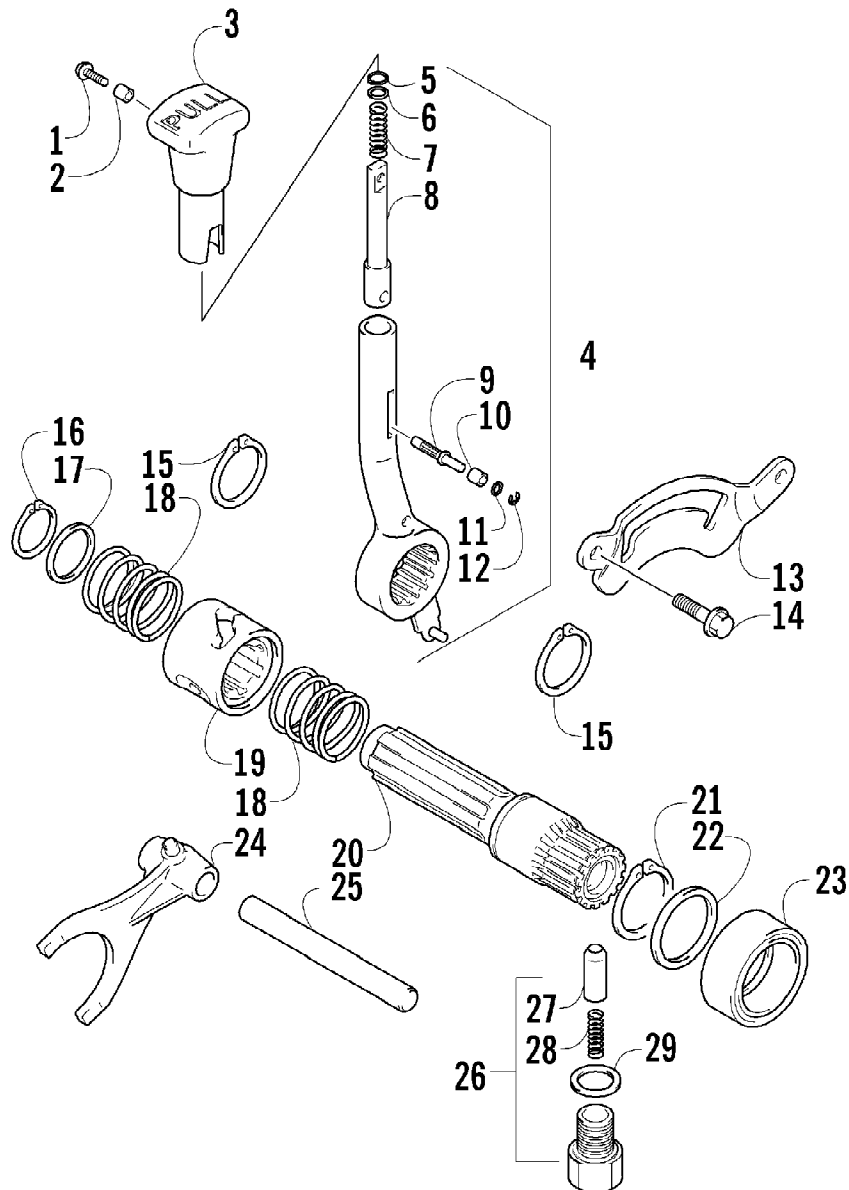

2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7)
 HI/LO SHIFTER ASSEMBLY Page 53 of 98

Ref #	Part Number	Qty	S/P/F	Description
1	3423-156	1	S	Screw, Shift Handle
2	3402-191	1		Spacer
3	3446-078	1		Handle, Shift
4	3446-351	1		Lever, Shift - Assembly (inc. 5-12)
5	3423-154	1		Circlip
6	3423-155	1		Washer
7	3446-107	1		Spring
8	3446-252	1		Rod
9	3423-205	1		Pin
10	3446-106	1		Roller
11	3423-152	1	/P	Washer
12	3423-153	1		E-Ring
13	3446-077	1		Plate, Lever Stop
14	3004-377	2	S/P	Bolt, Stopper Plate
15	3423-192	2	/P	Circlip, Shift Lever
16	3423-191	1	/P	Circlip
17	3402-382	1		Washer
18	3446-104	2		Spring
19	3446-250	1		Cam, Gear Shift
20	3446-328	1	/P	Shaft, Gear Shift
21	3423-193	1	S/P	Circlip, Gear Shift Shaft
22	3006-489	1		Washer, Gear Shift Shaft
23	3402-071	1	/P	Seal, Oil
24	3446-073	1		Fork, Gear Shift
25	3446-051	1		Shaft, Gear Shift Fork
26	3446-314	1		Stopper, Shift Cam - Assembly (inc. 27-28)
27	3446-315	1		Stopper, Shift Cam
28	3423-524	1		Spring
29	3402-012	1		Gasket, Cam Stopper

 2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7) 54 of 98
HYDRAULIC BRAKE ASSEMBLY

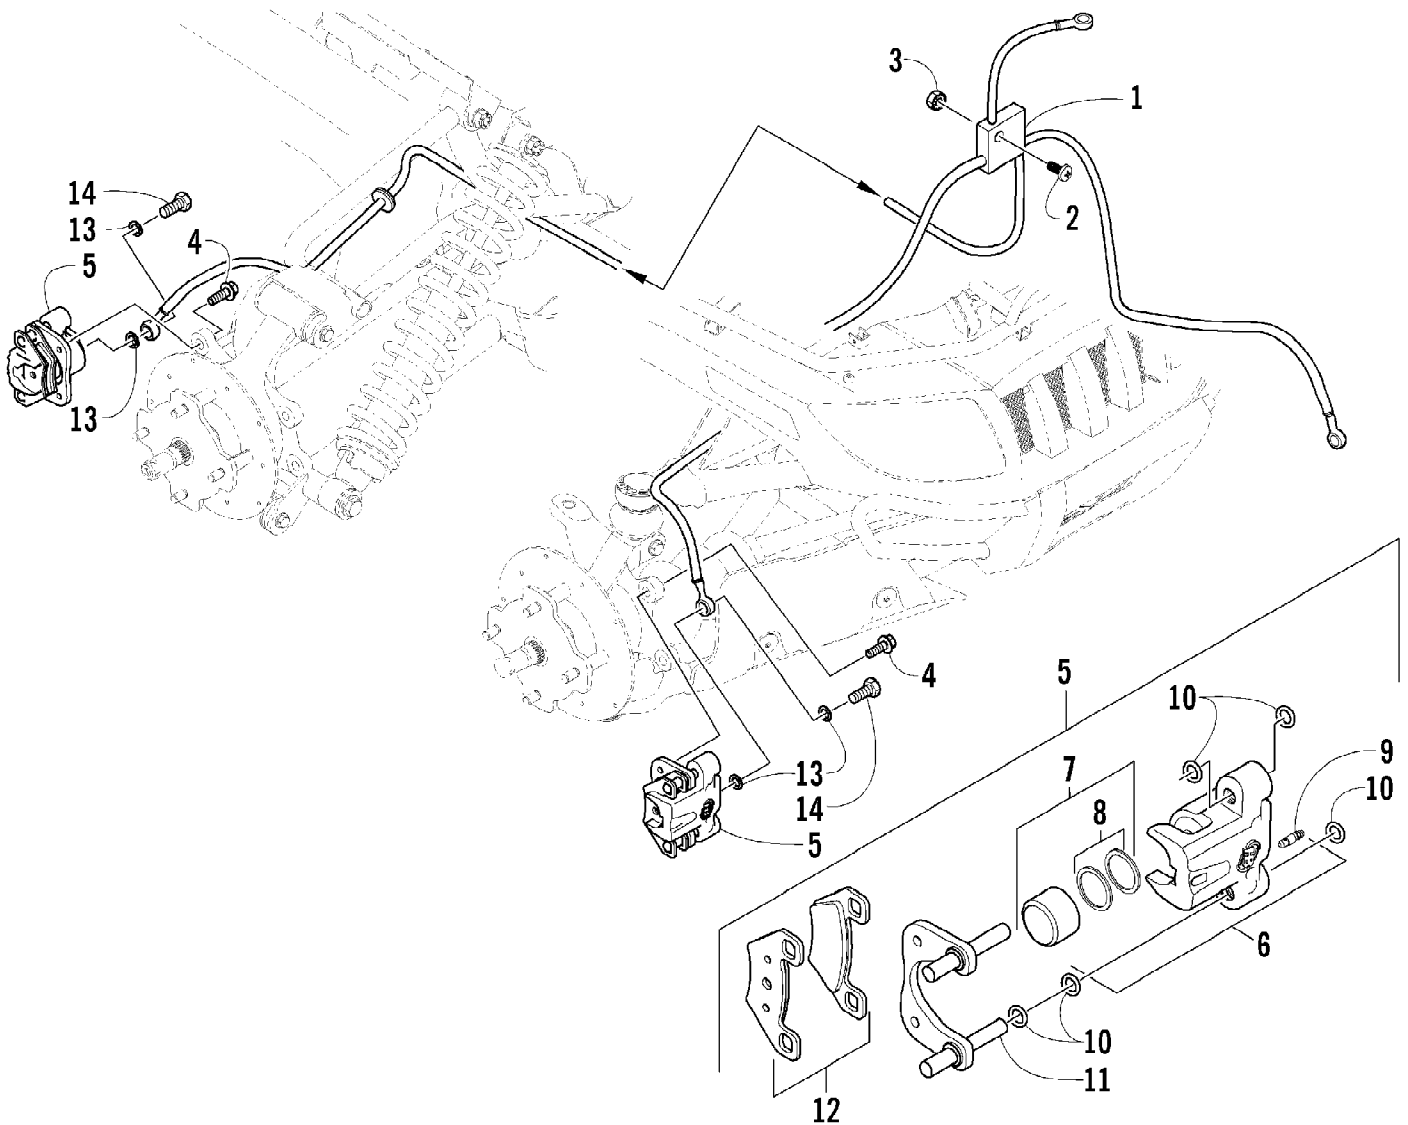


2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7)
 HYDRAULIC BRAKE ASSEMBLY

Page 55 of 98

Ref #	Part Number	Qty	S/P/F	Description
1	0502-627	1		Hose, Brake - Assembly
2	8476-625	1		Screw, Cap
3	0623-038	1		Nut w/Washer
4	8408-820	6	/P	Screw, Cap
5	0502-602	1	S	Caliper, Brake - Right Front (inc. 6-12)
5	0502-610	2	S	Caliper, Brake - Left Front and Right Rear (inc. 6-12)
6	0502-603	1	S	Housing, Caliper - Assembly - Right Front (inc. 7-9)
6	0502-611	2	S	Housing, Caliper - Assembly - Left Front and Right Rear (inc. 7-9)
7	0502-606	3		Piston/Seal Set (inc. 8)
8	0502-607	3		Seal Set
9	0502-609	3	/P	Valve, Bleed
10	0502-608	3		O-Ring, Guide - Set
11	0502-605	3		Bracket Assembly
12	0502-604	3	S	Pad, Brake - Set
13	0423-178	6		Washer, Crush
14	0423-413	3		Bolt, Banjo-Fitting

 
2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7)
HYDRAULIC HAND BRAKE ASSEMBLY

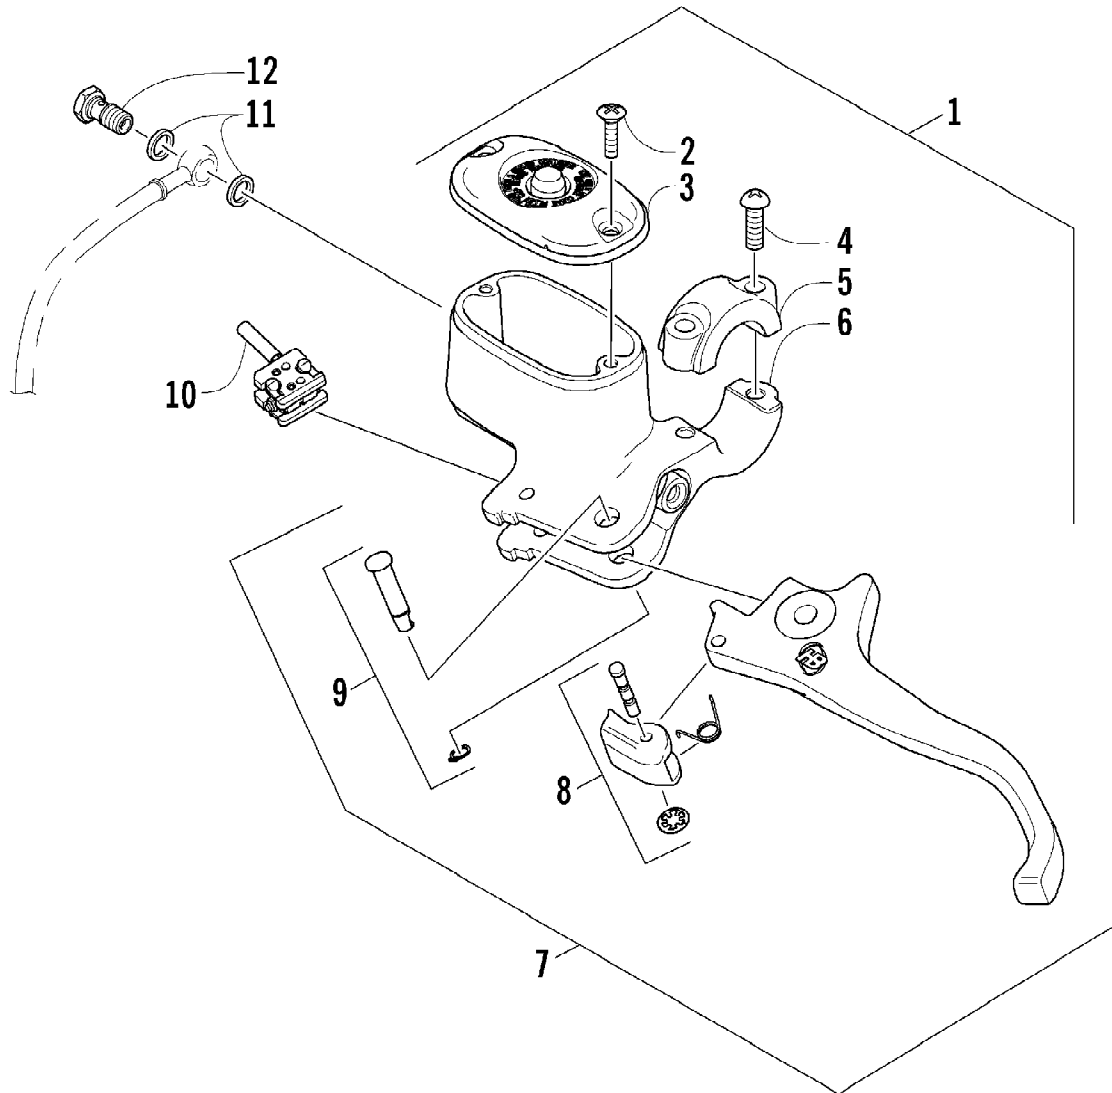

2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4A) Page 57 of 98
 HYDRAULIC HAND BRAKE ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0502-914	1	S	Brake Assembly (inc. 2-10)
2	0502-566	1		Screw, Reservoir Cover - Kit
3	0502-868	1	/P	Cover, Reservoir - Kit
4	0502-568	1		Screw, Master Cylinder Clamp - Kit
5	0502-869	1		Clamp, Master Cylinder - Kit
6	0502-704	1		Master Cylinder Assembly - Kit
7	0502-866	1		Lever Assembly - Kit (inc. 8-9)
8	0502-867	1	/P	Lock, Brake Lever - Kit
9	0502-580	1		Lever Pin - Kit
10	0502-564	1	/P	Switch, Brake - Kit
11	0423-178	2		Washer, Crush
12	0423-413	1		Bolt, Banjo-Fitting

 2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7) 58 of 98
MAGNETO ASSEMBLY

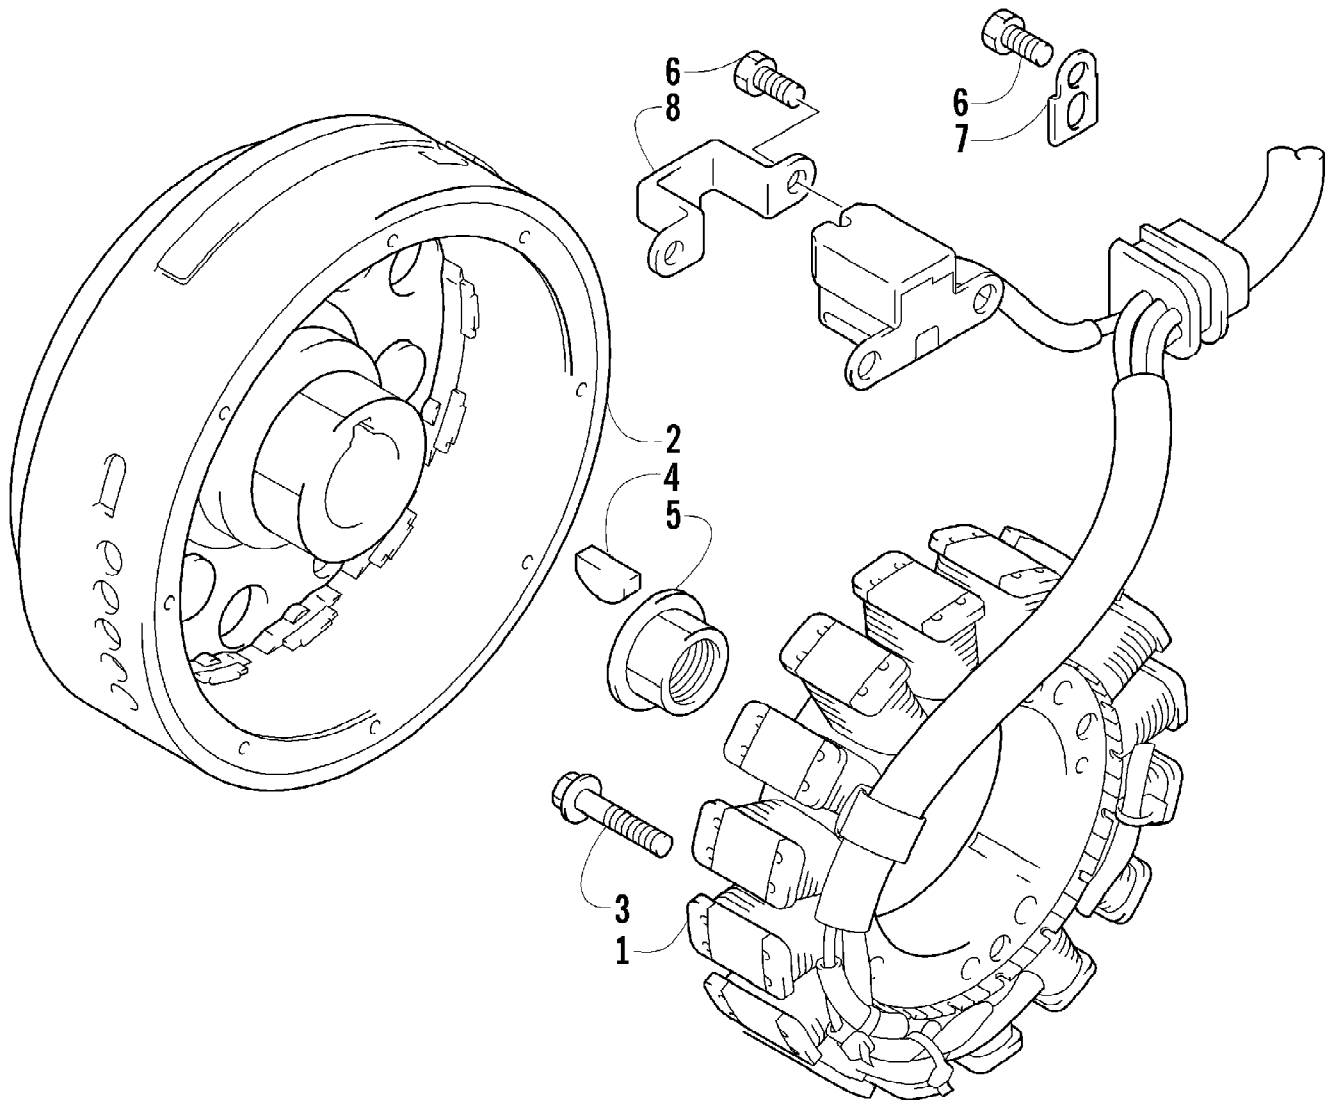


2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7)
MAGNETO ASSEMBLY

Page 59 of 98

Ref #	Part Number	Qty	S/P/F	Description
1	3430-058	1		Stator Assembly
2	3430-046	1		Rotor/Flywheel
3	3423-162	3	S	Screw, Cap
4	0691-785	1		Key
5	3423-086	1		Nut
6	3423-005	3	/P	Screw, Cap
7	3430-005	1		Clamp
8	3430-006	1		Clamp

 
2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7) 60 of 98
OIL FILTER/PUMP ASSEMBLY

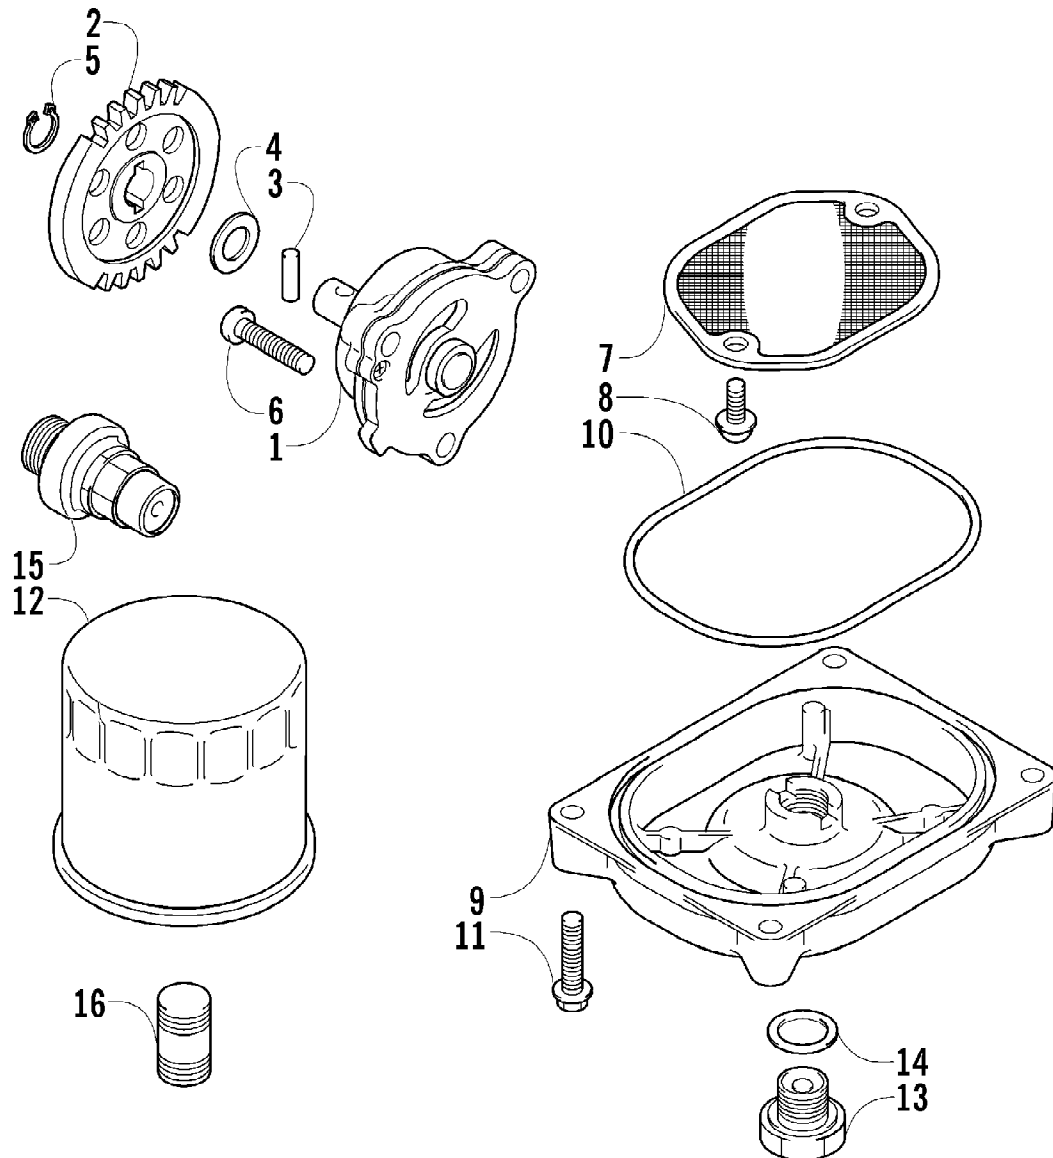

2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS) Page 61 of 98
 OIL FILTER/PUMP ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	3402-153	1		Pump, Oil
2	3402-026	1		Gear, Driven
3	3423-046	1		Pin
4	3423-115	1		Washer
5	3423-184	1	S	Circlip
6	3423-510	3		Screw
7	3402-156	1		Strainer, Oil
8	0693-389	2	S	Screw, Cap
9	3402-157	1		Cap, Oil Strainer
10	3423-077	1		O-Ring
11	3004-756	4	S	Screw, Cap
12	0812-005	1	S	Filter, Oil
13	3402-036	1	S	Plug, Drain
14	3402-012	1		Gasket
15	3402-359	1		Valve, Oil-Relief - Assembly
16	3402-158	1	S	Union, Oil Filter

 2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7) 62 of 98
REAR BODY PANEL ASSEMBLY

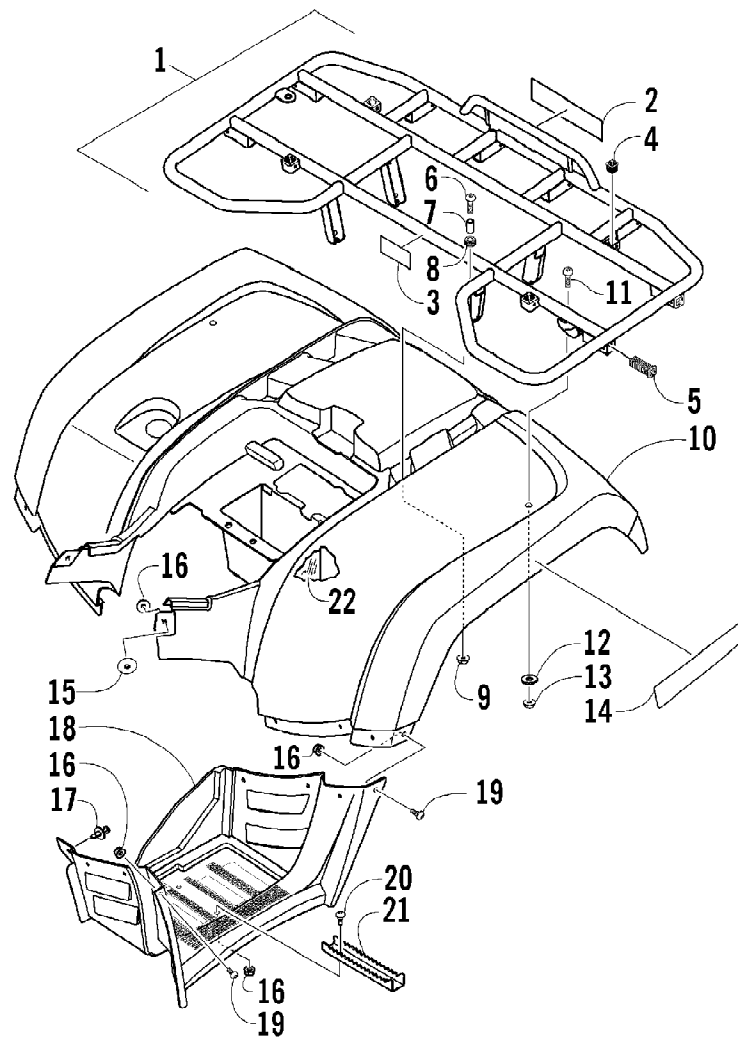


2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7)
 REAR BODY PANEL ASSEMBLY

Page 63 of 98

Ref #	Part Number	Qty	S/P/F	Description
1	0541-337	1	/P	Rack - Rear - Assembly (inc. 2-5)
2	0411-814	1	/P	Decal, "Arctic Cat"
3	0411-648	1		Decal, Warning - Rear Rack Load
4	0441-592	4	/P	Bushing, Rack
5	2406-014	8		Bushing, Rack
6	8410-830	4		Screw, Machine
7	0423-463	4		Spacer
8	0423-465	4		Grommet
9	8432-802	4		Nut, Lock
10	1406-604	1	S	Panel, Fender - Rear
11	0423-355	2		Screw, Shoulder
12	8050-222	2	/P	Washer
13	8424-602	2	/P	Nut, Lock
14	0411-820	1	S	Decal, Reflector - Rear - Right
14	0411-821	1	S	Decal, Reflector - Rear - Left
15	0423-101	2		Screw, Body
16	0423-540	22		Nut, Lock
17	0623-362	2		Rivet, Reinstallable
18	1406-356	1		Footwell - Right
18	1406-357	1	S	Footwell - Left
19	0423-419	16		Screw, Machine
20	0423-355	4		Screw, Shoulder
21	1506-125	2	/P	Footpeg
22	0412-296	1		Shield, Heat

 2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7) 64 of 98
REAR DRIVE GEARCASE ASSEMBLY

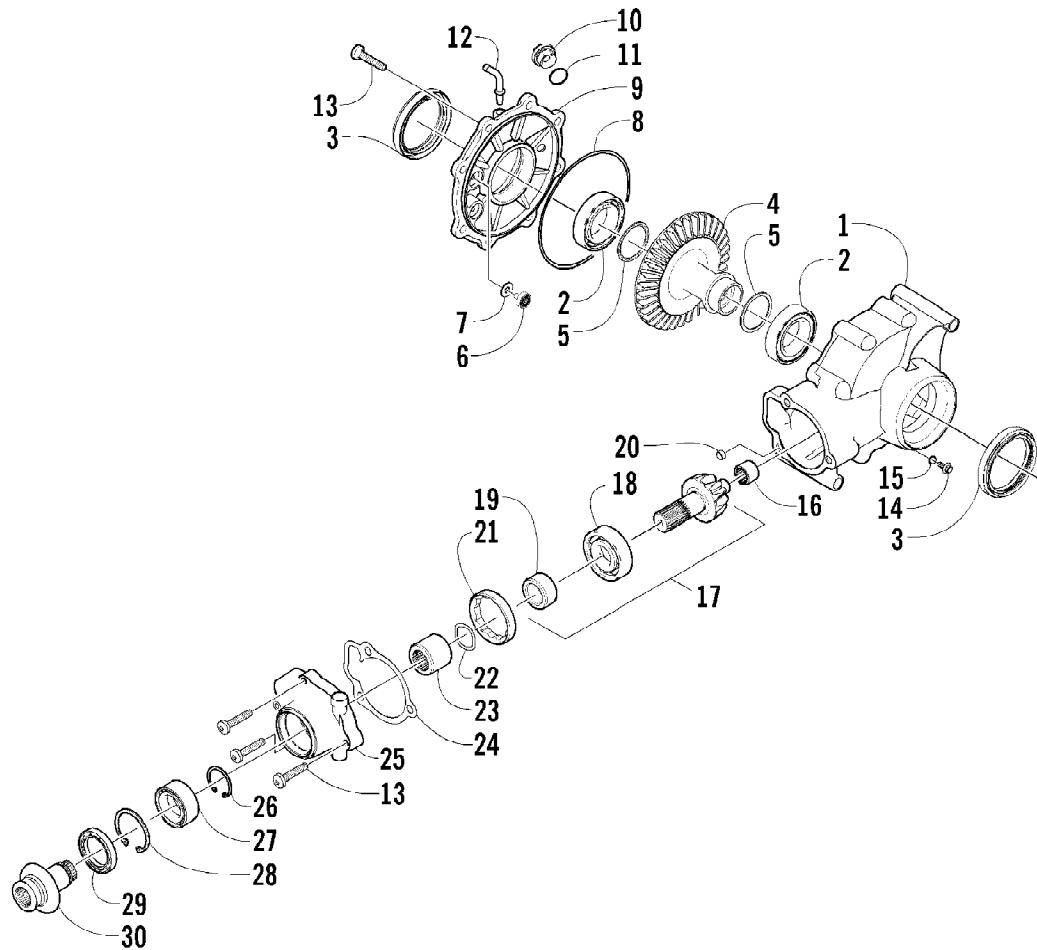


2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7)
 REAR DRIVE GEARCASE ASSEMBLY

Page 65 of 98

Ref #	Part Number	Qty	S/P/F	Description
	0502-820	1	/P	Rear Drive Gearcase Assembly
1	0502-622	1		Housing, Gearcase
2	0402-393	2		Bearing
3	0402-394	2	S	Seal
4	1402-032	1		Gear, Ring - 36T
5	0402-405	AR		Shim
5	0402-406	AR		Shim
5	0402-407	AR		Shim
5	0402-408	AR		Shim
5	0402-409	AR		Shim
6	0402-326	1		Button, Thrust
7	0402-429	AR		Shim
7	0402-430	AR		Shim
7	0402-431	AR		Shim
7	0402-432	AR		Shim
7	0402-433	AR		Shim
8	0423-149	1		O-Ring
9	0502-346	1		Cover, Gearcase
10	0402-333	1	/P	Plug, Fill (inc. 11)
11	0423-154	1		O-Ring
12	1402-102	1		Fitting
13	0423-118	11		Screw, Self-Tapping
14	0402-450	1	S	Plug, Magnetic (inc. 15)
15	0423-153	1		O-Ring
16	0402-328	1		Bearing
17	0502-783	1		Gear, Pinion - Assembly - 10T (inc. 18-19)
18	0402-327	1		Bearing
19	0402-336	1		Collar, Retaining
20	0402-411	1		Pin, Dowel
21	0402-331	1		Collar, Lock
22	0402-982	1		Washer, Wave
23	0402-981	1		Collar, Shaft
24	0402-947	1		Gasket, Flange
25	0502-529	1		Housing, Pinion
26	0423-417	1		Ring, Retaining
27	1402-043	1		Bearing
28	0423-423	1		Ring, Retaining
29	1402-011	1		Seal
30	0502-407	1	S	Shaft, Input

 2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7) 66 of 98
REAR SUSPENSION ASSEMBLY

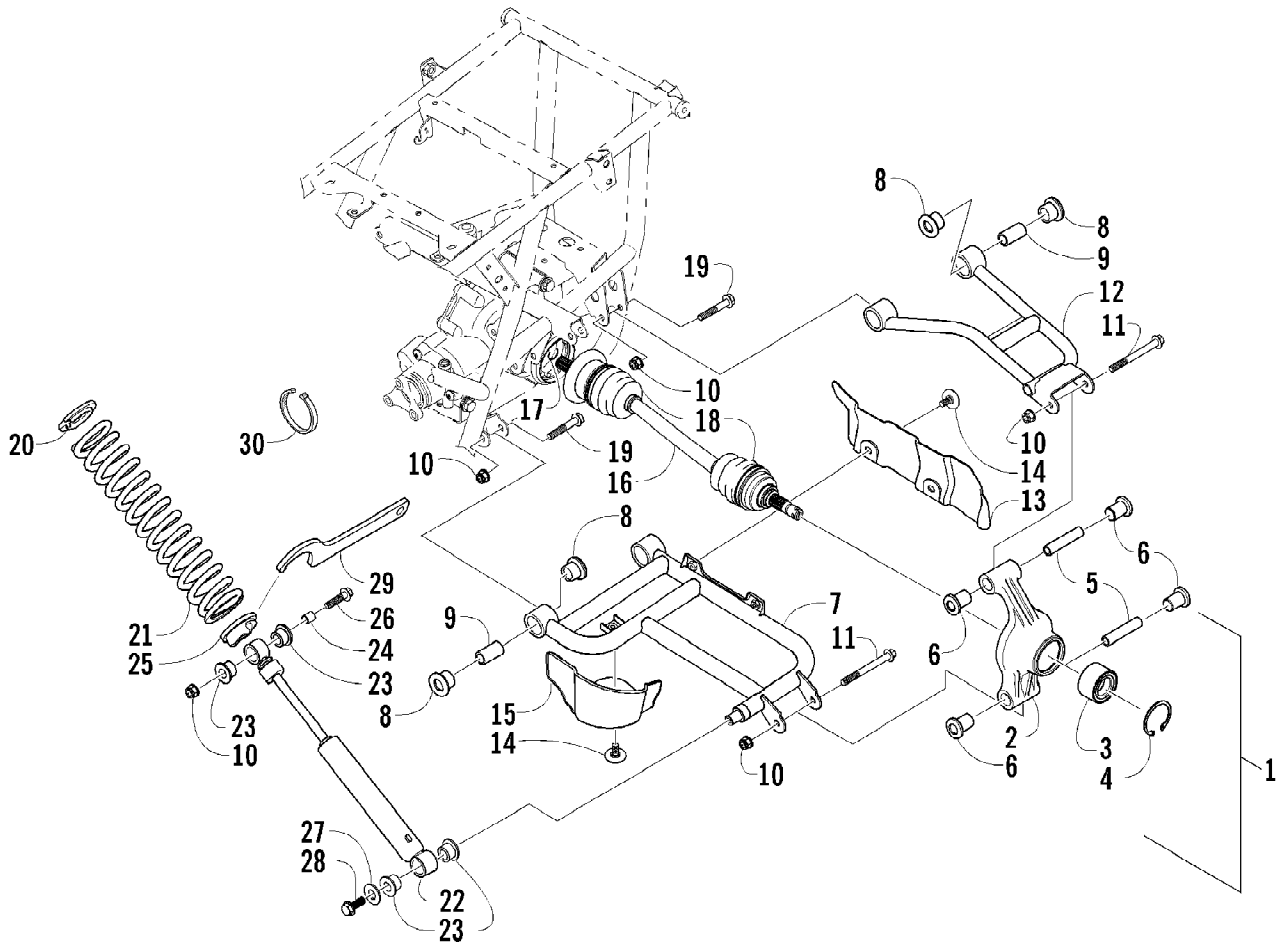


2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7)
 REAR SUSPENSION ASSEMBLY

Page 67 of 98

Ref #	Part Number	Qty	S/P/F	Description
1	0504-372	1	S	Knuckle, Right Rear - Assembly (inc. 2-6)
1	0504-373	1	S/P	Knuckle, Left Rear - Assembly (inc. 2-6)
2	0	1	F	Knuckle - Right
2	0	1	F	Knuckle - Left
3	1402-027	2	S/P	Bearing, Wheel Hub
4	0423-423	2		Ring, Retaining
5	0403-038	4	S/P	Collar, Suspension Bushing
6	0403-032	8	S	Bushing, Suspension
7	0504-326	1	S	A-Arm, Rear - Lower Right (inc. 8-9)
7	0504-327	1	S/P	A-Arm, Rear - Lower Left (inc. 8-9)
8	0403-115	16	S	Bushing
9	0403-114	8	S	Collar
10	8428-002	14		Nut, Lock
11	8409-000	4		Screw, Cap
12	0504-330	1		A-Arm, Rear - Upper Right (inc. 8-9)
12	0504-331	1	S	A-Arm, Rear - Upper Left (inc. 8-9)
13	0441-758	1		Guard, Boot - Right
13	0441-759	1		Guard, Boot - Left
14	0423-101	6		Screw, Body
15	1406-071	1		Guard, Boot - Right
15	1406-072	1		Guard, Boot - Left
16	0502-811	2	S	Axle, Drive (inc. 17-18)
17	0441-893	2	S	Clip, Retaining
18	0436-276	2	S	Repair Kit, Boot - Rear Axle
19	8409-075	8		Screw, Cap
20	1603-889	2	/P	Retainer, Spring
21	0404-113	2		Spring, Suspension
22	0404-085	2		Shock Absorber - Rear (inc. 23-24)
23	0604-310	8		Bushing, Shock Absorber
24	0403-028	2		Sleeve, Shock Absorber
25	0404-057	2		Cam, Spring Adjuster
26	8409-050	1		Screw, Cap - Right
26	8409-040	1		Screw, Cap - Left
27	0423-087	2		Washer
28	8408-820	2	/P	Screw, Cap
29	0441-587	1		Wrench, Spanner
30	0123-788	2	/P	Cable Tie - 7.5 in.

 2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS) Page 68 of 98
RECOIL STARTER ASSEMBLY

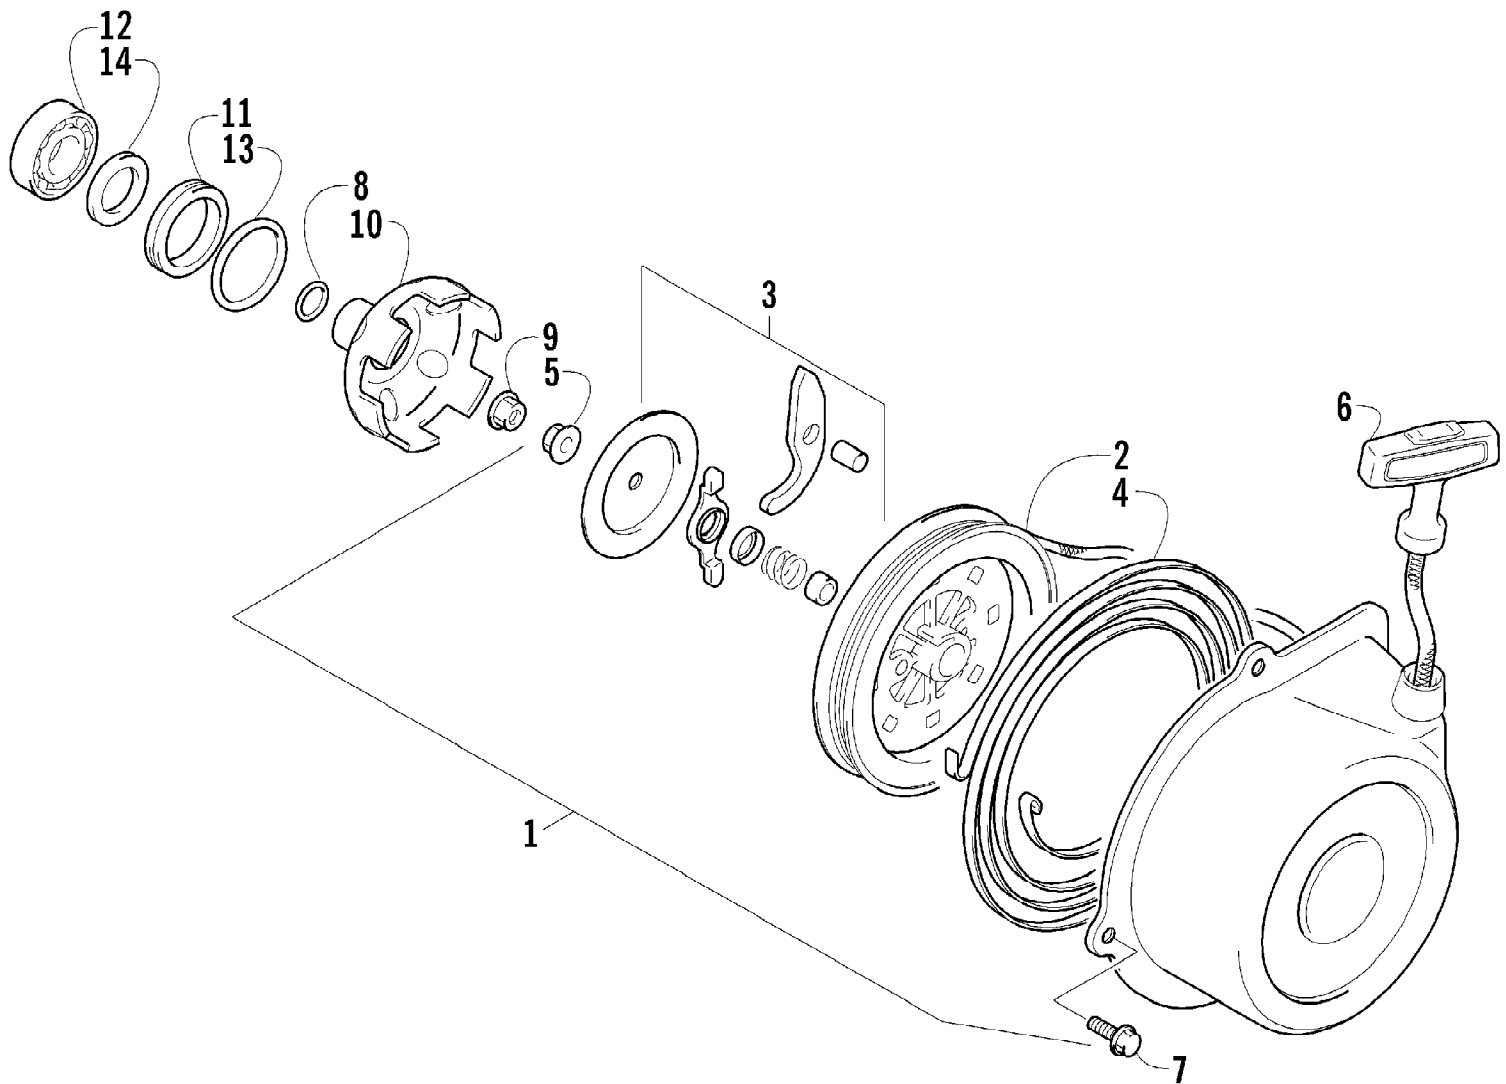

2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7)
 RECOIL STARTER ASSEMBLY

Page 69 of 98

Ref #	Part Number	Qty	S/P/F	Description
1	3445-003	1		Starter, Recoil - Assembly (inc. 2-6)
2	3445-004	1		Reel
3	3445-016	1		Ratchet Set
4	3445-007	1		Spring, Spiral
5	3004-488	1	S/P	Nut
6	3445-011	1		Rope Assembly
7	3423-428	4		Bolt
8	3423-053	1	/P	O-Ring
9	3004-491	1	S/P	Nut
10	3445-029	1	/P	Cup, Starter
11	3423-542	1	/P	Spacer
12	3402-051	1		Bearing
13	3423-063	1		O-Ring
14	3402-070	1		Seal, Oil

No
Diagram
Available

Parts List
Only

2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7)
 RELATED ITEMS


Ref #	Part Number	Qty	S/P/F	Description
	0436-479	1		Articulating Spool Mount
	0436-548	1		Articulating Spool Receiver Mount Adapter
	0436-768	1	S	Backrest
	0436-679	1		Bag, Fender - Black
	0436-660	1	S	Bag, Rack, Front - Black
	0436-802	1		Bag, Rack, Rear - Black
	0436-480	1		Bar, Utility/Gun Rack
	0436-811	1		Basket, Open-End
	0436-619	1		Brush Guard/Bumper
	0436-462	1		Bucket Holder
	0436-620	1		Bumper (Rear)
	0436-464	1		Camp Stove Cradle
	0436-454	1		Cargo Box
	0436-625	1		Cargo Box Quick-Release Kit
	0436-459	1	/P	Carryall (9 x 12)
	0436-460	1		Carryall (11 x 17)
	0436-652	1		Carryall (14 x 27)
	0436-476	1		Chain Saw Lock
	0436-664	1		Cover, Black and Green
	0436-668	1		Cover, Timber Camo
	0436-776	1	S	Cover, Trailerable
	0436-005	1	S	Engine Oil - 10W40
	0436-003	1	S	Engine Oil - 5W30
	0436-466	1		Fender Box
	0436-538	1		Gear Cradle
	0436-007	1	S	Gear Lube (Diff) - 80W90
	0436-501	1	S	Grease, High-Performance
	0436-627	1		Gun Scabbard Kit
	0436-706	1	/P	Gun Scabbard Mount
	0436-505	1		Hand Guards - Black
	0436-352	1		Hand/Thumb Warmers
	0436-639	1		Ice Auger Holder
	0436-787	1		License Plate Kit
	0436-463	1		Light Bar
	2257-460	1		Manual, Illustrated Parts
	2257-299	1		Manual, Operator's (E)
	2257-313	1		Manuel d'utilisation (F)
	0436-635	1		Plow Attachment Kit
	0436-228	1		Plow Blade, 50 in. - Straight
	0436-287	1		Plow Blade, 50 in. - One-Way
	0436-296	1		Plow Blade, 60 in. - Straight
	0436-360	1		Plow Blade, 60 in. - One-Way
	0436-822	1		Plow Blade, Carbon Fiber - 60 in. - Straight
	0436-823	1		Plow Blade, Carbon Fiber - 60 in. - One-Way
	0436-636	1	/P	Plow, Push Frame
	0436-626	1	S	Rack Basket
	0436-647	1		Rack Extension, 4 in. (Front)
	0436-646	1		Rack Extension, 8 in. (Rear)
	0436-629	1		Rapid Blind (Break-Up)
	0436-630	1		Rapid Blind (Shadow Grass)
	0436-628	1		Rapid Shack (Blue Ice)
	0436-511	1		Rod Holder - Adjustable
	0436-624	1		Sprayer System

2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7)
 RELATED ITEMS

Page 72 of 98

Ref #	Part Number	Qty	S/P/F	Description
	0436-741	1	/P	Sprayer Boom (120 in.)
	1402-028	1		Tire, Titan AT589 (25x8-12, Mud & Snow)
	0402-563	1		Tire, Titan AT589 (25x10-12, Mud & Snow)
	0436-297	1		Tool Holder - Double
	0436-263	1	/P	Tool Holder - Single
	0436-792	1	S	Tree Stand/Bow Case Holder
	0436-655	1		Winch, 2500 lb
	0436-623	1		Windshield, Clear w/Black Accent
	0436-470	1		Workbase (8 in.)

 2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS) Page 73 of 98
REVERSE SHIFT LEVER ASSEMBLY

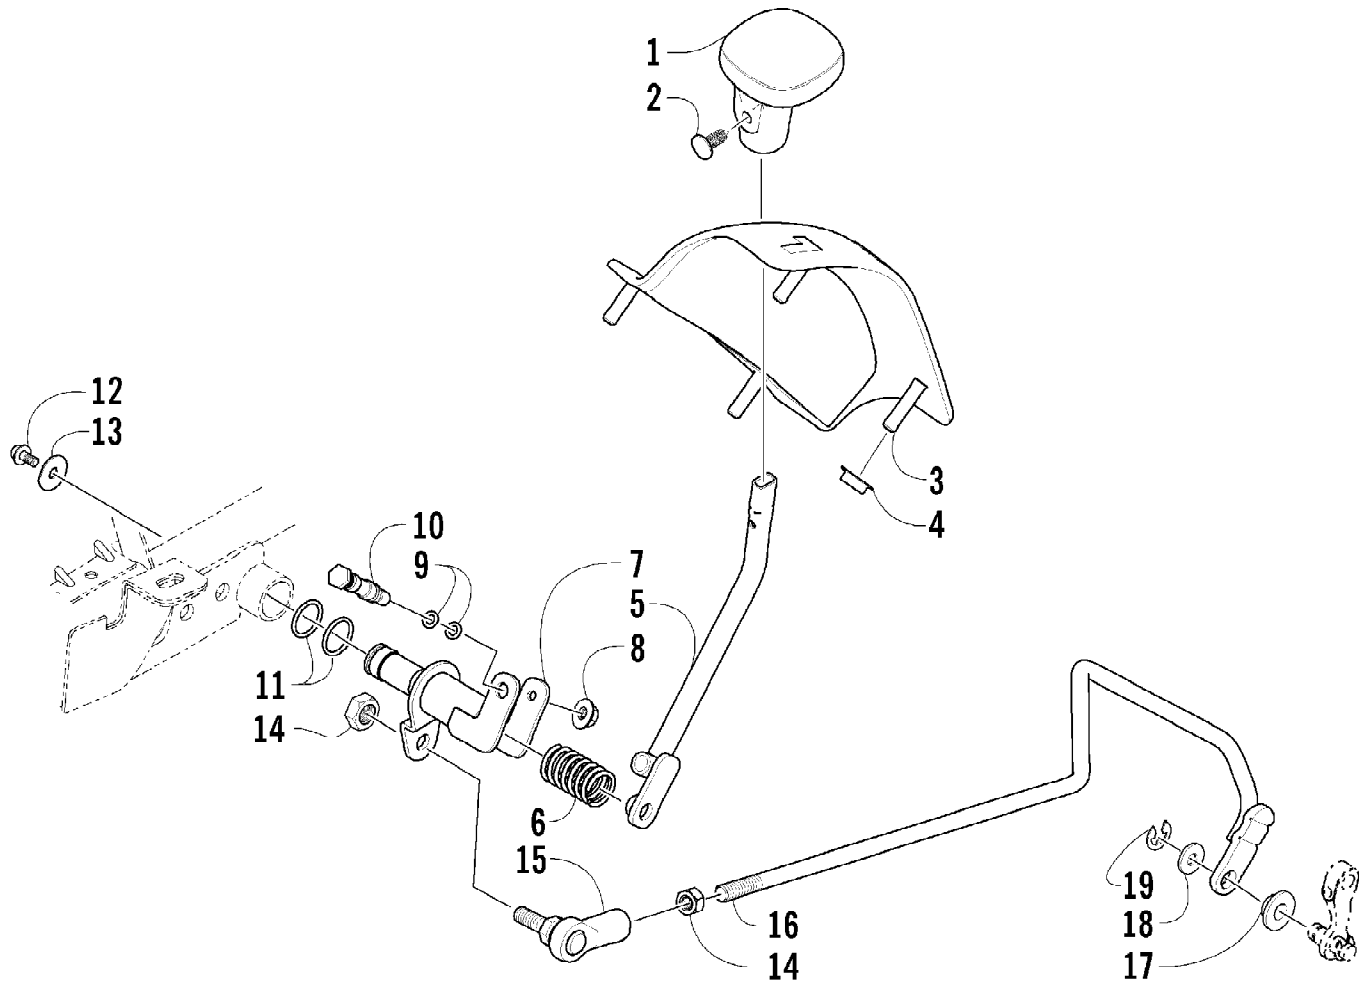


2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7)
 REVERSE SHIFT LEVER ASSEMBLY

Page 74 of 98

Ref #	Part Number	Qty	S/P/F	Description
1	0402-843	1	/P	Handle, Reverse Shift Lever
2	0423-345	1		Clip, Push
3	1402-111	1	S	Plate, Shift
4	0423-357	4		Nut, Stamped
5	0502-659	1		Lever, Reverse Shift
6	0502-410	1	S	Spring
7	0502-742	1		Axle, Reverse Shift Lever
8	8424-602	1	/P	Nut
9	0423-182	2	/P	O-Ring
10	0402-675	1		Axle, Pivot
11	0423-299	2	/P	O-Ring
12	8408-812	1		Screw, Cap
13	0423-087	1		Washer
14	0623-294	2		Nut
15	1402-270	1		End, Rod
16	0502-653	1		Linkage, Shift
17	0423-091	1		Bushing
18	8050-242	1		Washer
19	0423-169	1	/P	E-Ring

 
2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS47) 75 of 98
SEAT ASSEMBLY

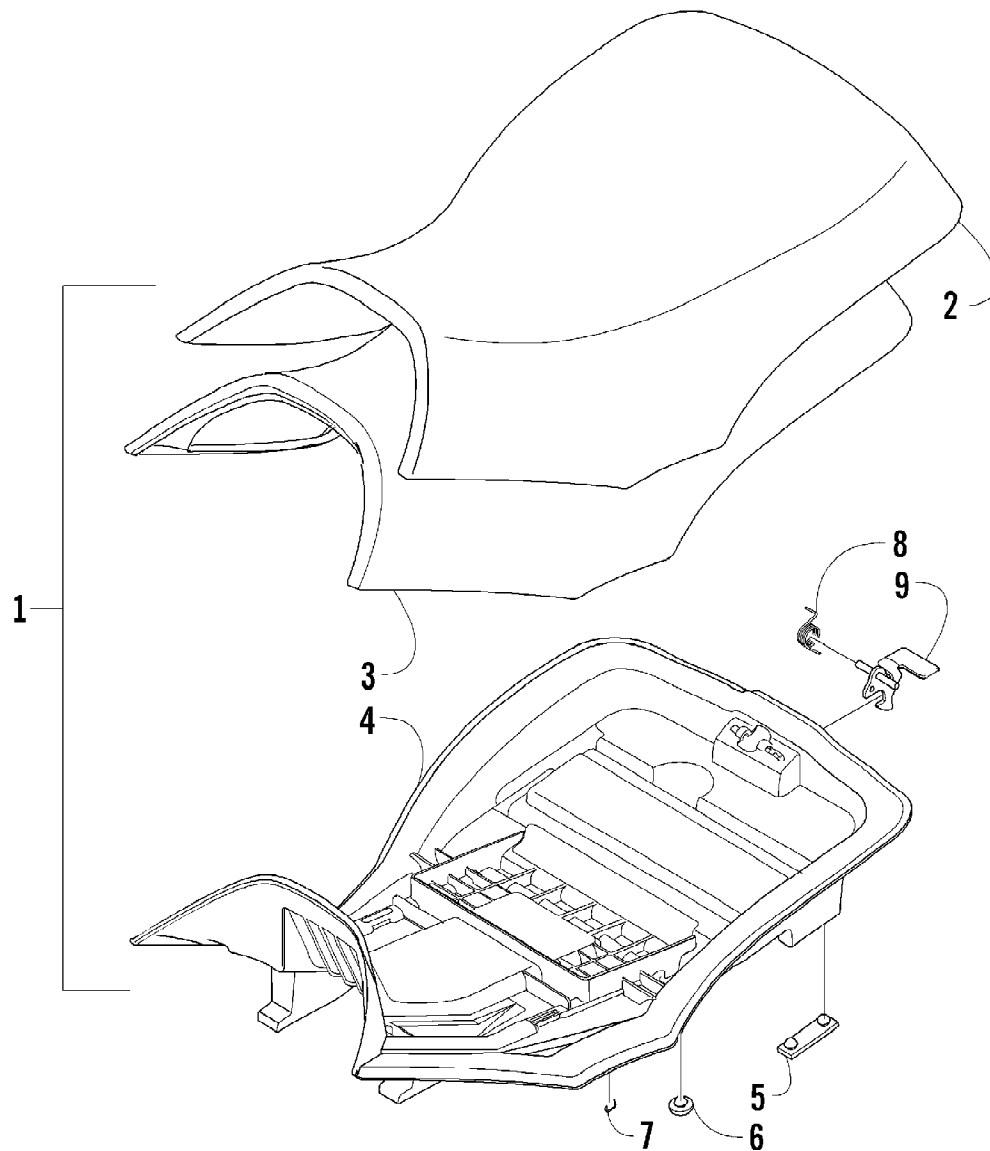

2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7)
 SEAT ASSEMBLY Page 76 of 98

Ref #	Part Number	Qty	S/P/F	Description
1	1506-937	1	S/P	Seat Assembly (inc. 2-9)
2	1506-209	1		Cover, Seat
3	1506-208	1		Foam, Seat
4	2406-144	1	S/P	Base, Seat - Assembly (inc. 5-6)
5	0406-879	2		Bumper, Seat - Rear
6	0406-877	4	/P	Bumper, Seat - Front
7	0624-263	AR		Staple
8	1406-592	1	/P	Spring, Seat Latch
9	1506-156	1		Latch, Seat

 2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7)
SECONDARY DRIVE ASSEMBLY

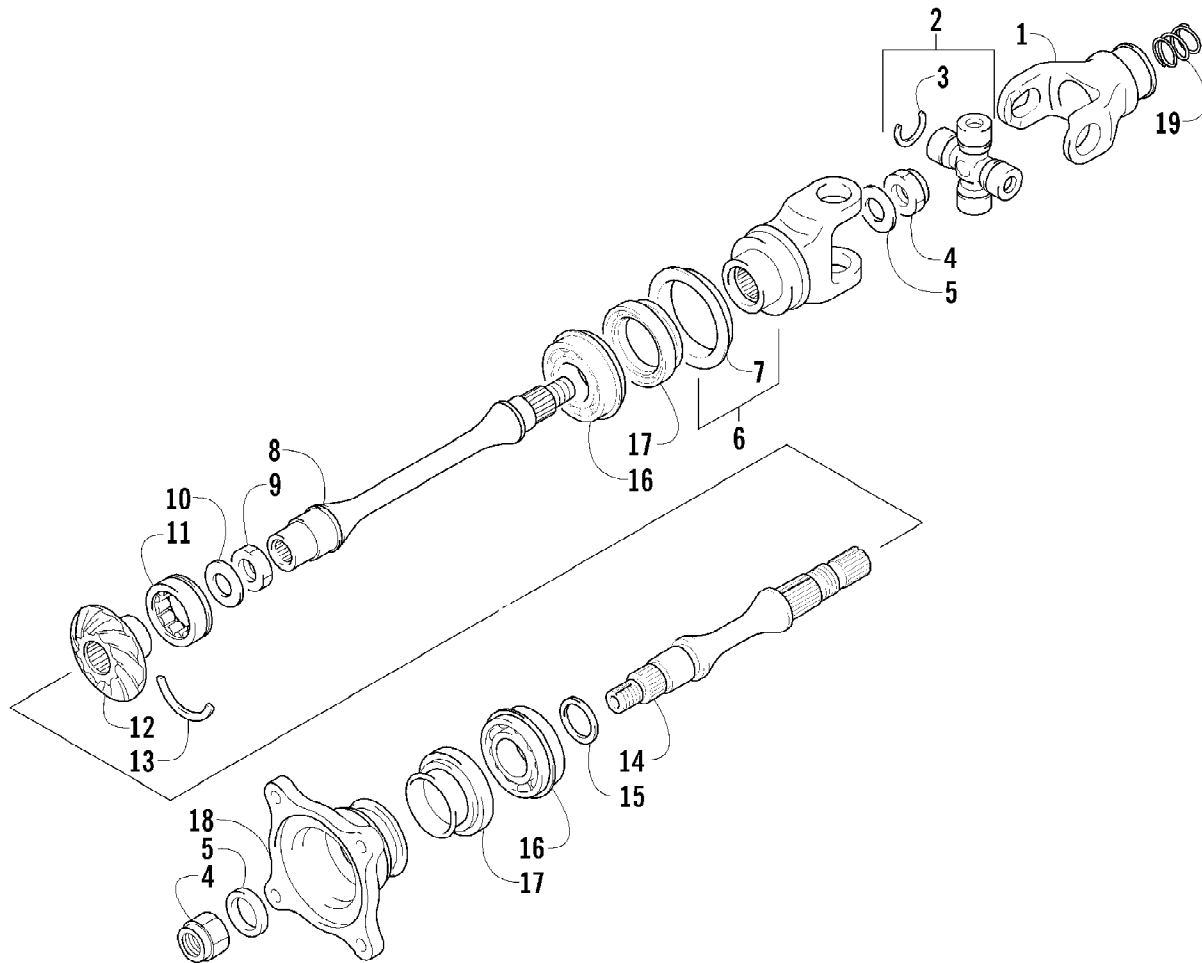


2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7)
 SECONDARY DRIVE ASSEMBLY

Page 78 of 98

Ref #	Part Number	Qty	S/P/F	Description
1	3446-327	1	/P	Yoke, Propeller Shaft
2	3402-562	1		Joint, Universal (inc. 3)
3	3423-479	4		Circlip
4	3423-025	2		Nut
5	3423-028	2		Washer
6	3402-742	1		Yoke, Front Drive Output (inc. 7)
7	3402-743	1		Plate, Output
8	3446-239	1		Shaft, Secondary Driven - Front
9	3423-136	1		Nut, Secondary Driven Gear
10	3423-137	1		Washer, Secondary Driven Gear
11	3402-515	1	/P	Bearing, Secondary Driven Gear
12	3446-222	1	/P	Gear, Secondary Driven
13	3423-072	1		Ring, Secondary Driven Gear Bearing
14	3446-346	1	S	Shaft, Secondary Driven - Rear
15	3402-017	AR		Shim, 25 x 34 x 0.60mm
15	3402-018	AR		Shim, 25 x 34 x 0.65mm
15	3402-019	AR		Shim, 25 x 34 x 0.70mm
15	3402-020	AR		Shim, 25 x 34 x 0.75mm
15	3402-021	AR	S	Shim, 25 x 34 x 0.80mm
15	3402-022	AR		Shim, 25 x 34 x 0.85mm
15	3402-023	AR		Shim, 25 x 34 x 0.90mm
15	3402-024	AR		Shim, 25 x 34 x 0.95mm
15	3402-025	AR	S	Shim, 25 x 34 x 1.00mm
15	3402-028	AR		Shim, 25 x 34 x 1.05mm
15	3402-029	AR		Shim, 25 x 34 x 1.10mm
15	3402-030	AR		Shim, 25 x 34 x 1.15mm
15	3402-031	AR		Shim, 25 x 34 x 1.20mm
16	3403-210	2	/P	Bearing
17	3402-072	2		Seal, Oil
18	3402-514	1	/P	Yoke, Rear Drive Output
19	1402-026	1		Spring

 
2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7)
SECONDARY TRANSMISSION ASSEMBLY

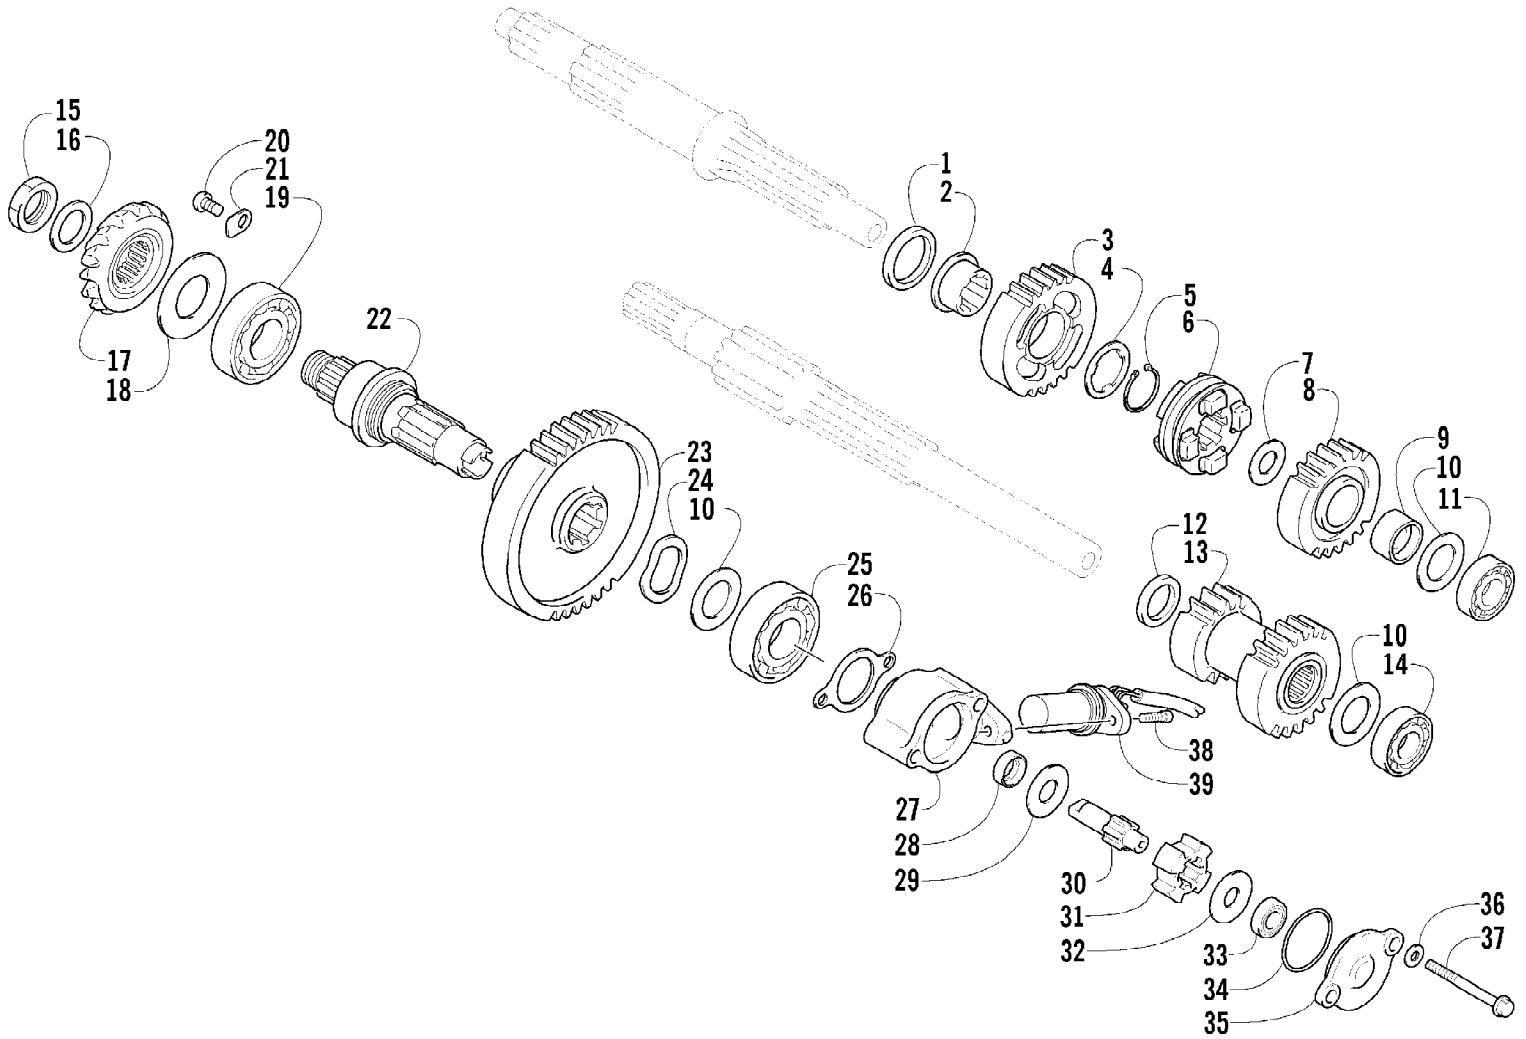

2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS) Page 80 of 98
 SECONDARY TRANSMISSION ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	3446-246	1		Spacer, Drive Gear
2	3446-247	1		Bushing, Drive Gear No. 1
3	3446-342	1		Gear, Drive - No. 1
4	3423-036	1		Washer, Drive Gear No. 1
5	3423-066	1	/P	Circlip, Drive Gear No. 1
6	3446-343	1		Dog, Sliding
7	3402-195	1		Washer, Drive Gear No. 2
8	3446-248	1		Gear, Drive - No. 2
9	3446-103	1		Bushing, Drive Gear No. 2
10	3402-381	3	/P	Washer
11	3402-046	1		Bearing, Driveshaft - Left
12	3423-148	1		Spacer, Idle Gear
13	3446-066	1		Gear, Idle
14	3402-979	1	/P	Bearing, Countershaft - Left
15	3423-023	1		Nut
16	3423-032	1		Washer
17	3446-274	1	/P	Gear, Secondary Drive Bevel
18	3423-549	1		Shim Set
19	3402-055	1	/P	Bearing
20	3423-370	2		Screw
21	3446-031	2	/P	Retainer, Secondary Driveshaft Bearing
22	3446-344	1		Shaft, Output
23	3446-345	1		Gear, Driven
24	3423-548	1		Lock Washer
25	3402-045	1	/P	Bearing
26	3446-244	1	/P	Gasket, Sensor Housing
27	3446-400	1		Housing, Speedometer Sensor
28	3006-322	1		Seal, Sensor Housing
29	3423-617	1		Washer
30	3446-402	1		Shaft, Speedometer Rotor
31	3402-837	1		Rotor, Speedometer
32	3423-767	1		Washer
33	3402-980	1		Bearing, Rotor Shaft
34	3423-766	1		O-Ring, Housing Cover
35	3446-401	1		Cover, Speedometer Housing
36	3003-290	2	/P	Gasket
37	3423-307	2	S	Bolt
38	3423-226	1		Bolt
39	3402-981	1		Sensor, Speedometer

 2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7) 81 of 98
STARTER CLUTCH ASSEMBLY

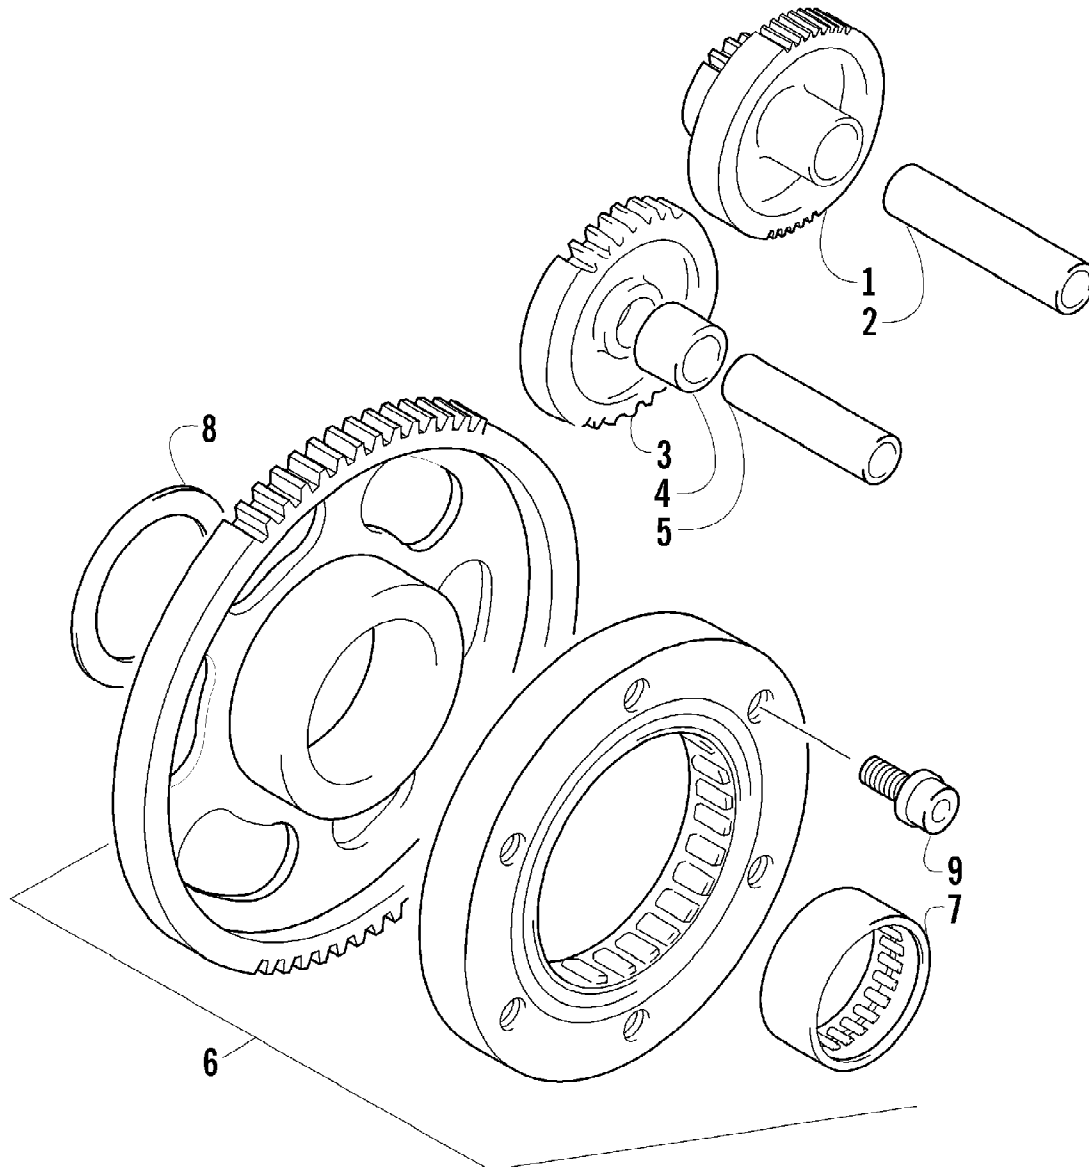


2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7)
 STARTER CLUTCH ASSEMBLY

Page 82 of 98

Ref #	Part Number	Qty	S/P/F	Description
1	3402-813	1	/P	Gear, Starter Idler - No.1
2	3423-331	1		Pin
3	3402-349	1		Gear, Starter Idler - No.2
4	3423-396	1		Spacer, Starter Idler Gear No. 2
5	3423-397	1		Pin
6	3402-457	1		Starter, Clutch - Set (inc. 7)
7	3402-063	1		Bearing
8	3423-104	1		Washer
9	3423-509	6		Bolt

 
2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7) 83 of 98
STARTER MOTOR ASSEMBLY

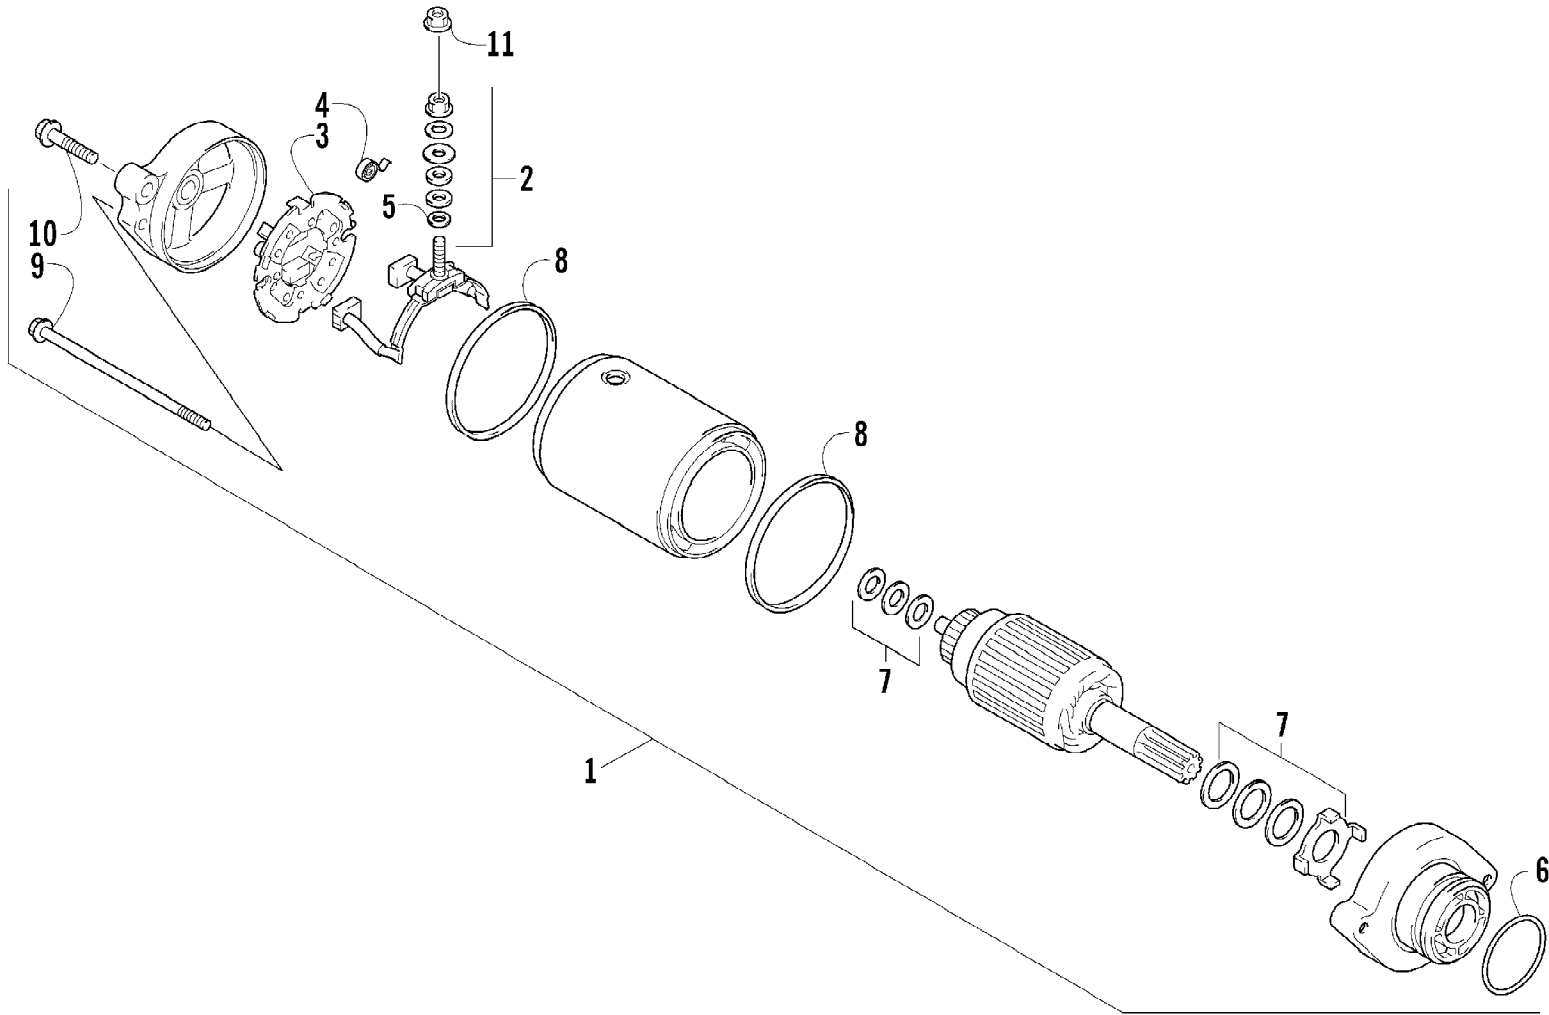

2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7)
 STARTER MOTOR ASSEMBLY Page 84 of 98

Ref #	Part Number	Qty	S/P/F	Description
1	3545-015	1	S	Motor, Starter - Assembly (inc. 2-9)
2	3008-094	1	/P	Terminal Set, Brush
3	3008-095	1	/P	Holder Set, Brush
4	3008-096	4		Spring, Brush
5	3008-164	1		O-Ring
6	3423-084	1		O-Ring
7	3436-001	1		Washer Set
8	3008-101	2	S	O-Ring
9	3423-085	2		Through-Bolt
10	3423-162	2	S	Bolt, Starter Motor
11	3423-195	1	/P	Nut, Starter Motor

 
2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7) 85 of 98
STEERING POST ASSEMBLY

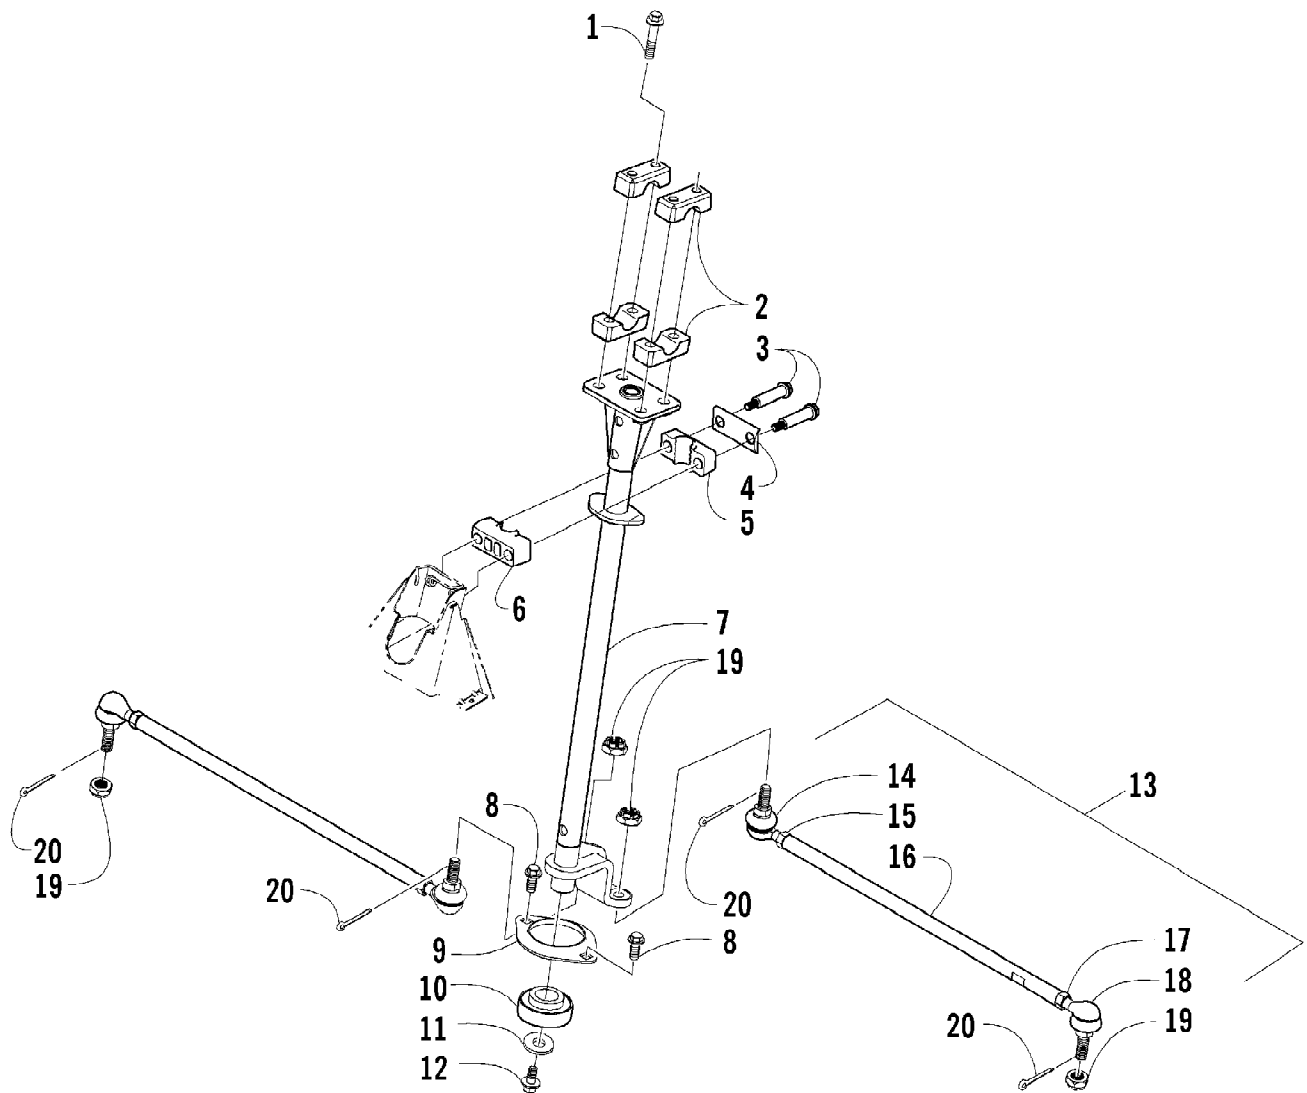

2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7)
 STEERING POST ASSEMBLY


Page 86 of 98

Ref #	Part Number	Qty	S/P/F	Description
1	8408-860	4		Screw, Cap
2	0405-035	4		Cap, Steering Adjuster
3	0423-505	2		Screw, Shoulder
4	0405-166	1		Cap, Housing
5	0405-138	1		Housing, Lower
6	0405-139	1		Housing, Upper
7	0505-451	1	S	Post, Steering
8	8408-816	2		Screw, Cap
9	0602-233	1		Flange, Bearing
10	0405-052	1		Bearing w/Inverted Oil Seal
11	0423-073	1		Washer
12	8409-020	1	/P	Screw, Cap
13	0505-408	2	S	Tie Rod - Assembly (inc. 14-18)
14	0405-083	2	S	Ball Joint, Tie Rod - Left
15	0423-013	2		Nut - Left
16	0405-107	2	S	Tie Rod
17	8420-002	2	/P	Nut - Right
18	0405-082	2	S	Ball Joint, Tie Rod - Right
19	0423-157	4		Nut, Lock
20	0623-175	4		Pin, Cotter

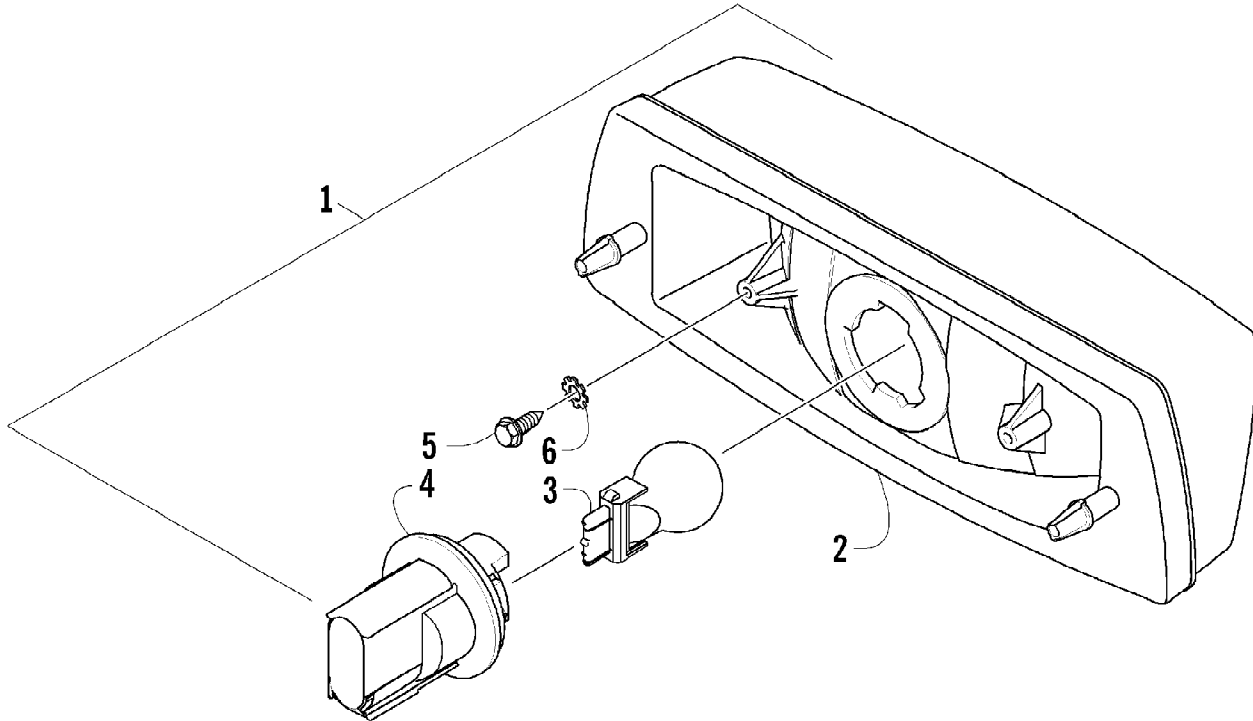 

2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7) Page 88 of 98
 TAILLIGHT ASSEMBLY


Ref #	Part Number	Qty	S/P/F	Description
1	0509-022	1		Taillight Assembly (inc. 2-4)
2	0509-025	1		Housing, Taillight
3	0409-056	1		Bulb, Taillight
4	0409-057	1		Socket, Taillight
5	0623-301	2	/P	Screw, Self-Tapping
6	8053-212	2	/P	Washer, Lock - External Tooth

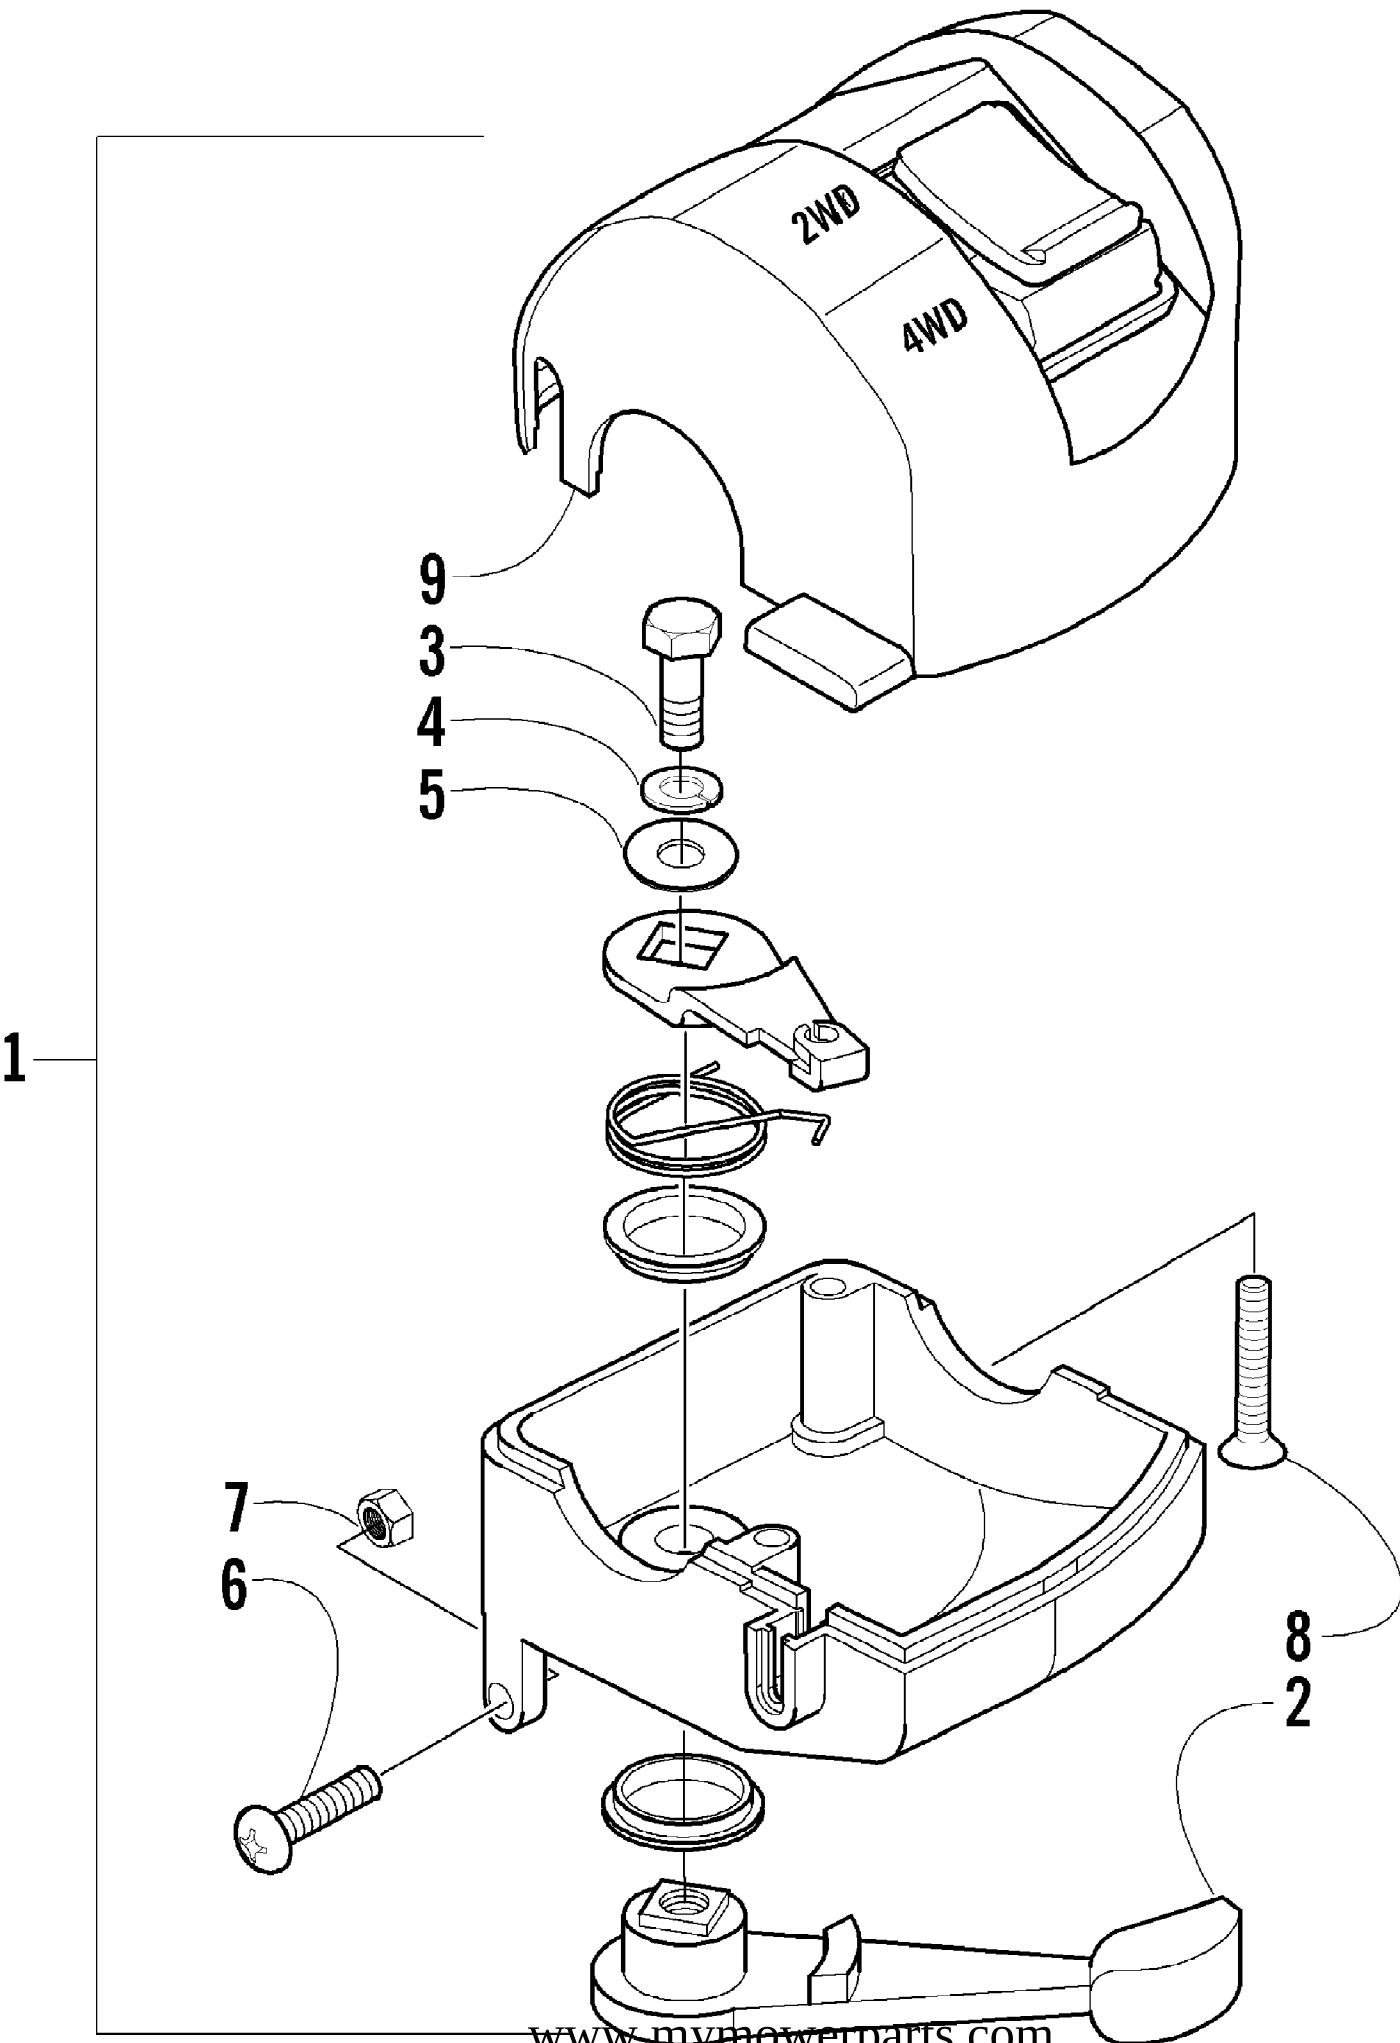 

2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7)
 THROTTLE CASE ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0509-012	1		Case, Throttle - Assembly (inc. 2-9)
2	3409-001	1		Lever
3	3004-533	1	S/P	Screw, Cap
4	3004-447	1	/P	Washer, Lock
5	3003-030	1	/P	Washer
6	3423-014	1		Screw
7	3423-327	1		Nut
8	3423-199	2		Screw
9	0409-048	1		Cover, Throttle w/Switch

 
2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7) 91 of 98
TRANSMISSION ASSEMBLY

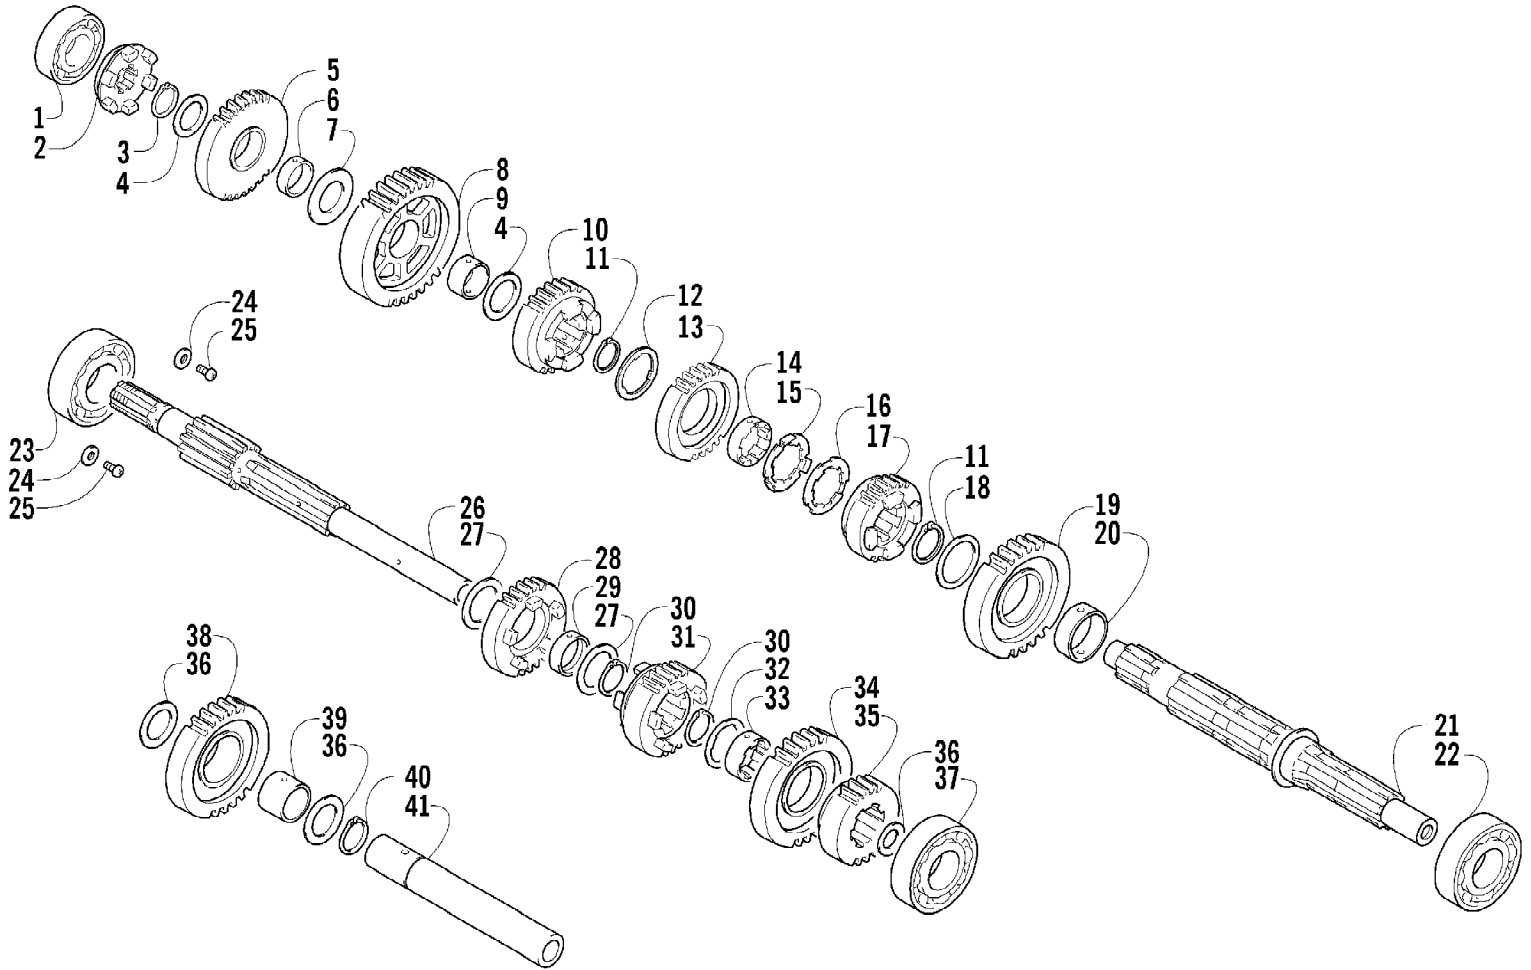

2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7)
TRANSMISSION ASSEMBLY Page 92 of 98

Ref #	Part Number	Qty	S/P/F	Description
1	3003-320	1	/P	Bearing, Driveshaft - Right
2	3446-030	1		Dog, Reverse
3	3423-189	1	S	Circlip
4	3402-335	2		Washer
5	3446-029	1		Gear, Reverse Driven
6	3446-032	1		Bushing, Reverse Driven Gear
7	3423-131	1		Washer, 1st Driven Gear - Right
8	3446-235	1	/P	Gear, 1st Driven
9	3402-692	1	/P	Bushing, 1st Driven Gear
10	3446-340	1		Gear, 4th Driven
11	3423-188	2	S	Circlip
12	3423-038	1		Washer, 3rd Driven Gear - Right
13	3446-339	1		Gear, 3rd Driven
14	3446-024	1		Bushing, 3rd Driven Gear
15	3423-039	1		Washer, 3rd Driven Gear - Left
16	3423-040	1		Washer, 3rd Driven Gear - Left
17	3446-341	1		Gear, 5th Driven
18	3402-383	1		Washer, 2nd Driven Gear
19	3446-022	1		Gear, 2nd Driven
20	3402-082	1		Bushing, 2nd Driven Gear
21	3446-234	1		Driveshaft
22	3402-336	1		Bearing, Driveshaft - Middle
23	3402-050	1		Bearing, Countershaft - Right
24	3423-135	2		Retainer, Countershaft Bearing
25	3423-370	2		Screw
26	3446-014	1		Countershaft
27	3423-187	2	/P	Washer, 4th Drive Gear
28	3446-337	1		Gear, 4th Drive
29	3423-547	1		Bushing, 4th Drive Gear
30	3423-066	2	/P	Circlip
31	3446-336	1		Gear, 3rd Drive
32	3423-037	1		Washer, 5th Drive Gear
33	3446-020	1		Bushing, 5th Drive Gear
34	3446-338	1		Gear, 5th Drive
35	3446-016	1		Gear, 2nd Drive
36	3402-195	3		Washer
37	3402-179	1		Bearing, Countershaft - Middle
38	3446-237	1		Gear, Reverse Idle
39	3446-238	1		Bushing, Reverse Idle
40	3423-190	1	S	Circlip
41	3446-236	1		Shaft, Reverse Idle

 
2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7) 93 of 98
WATER PUMP ASSEMBLY

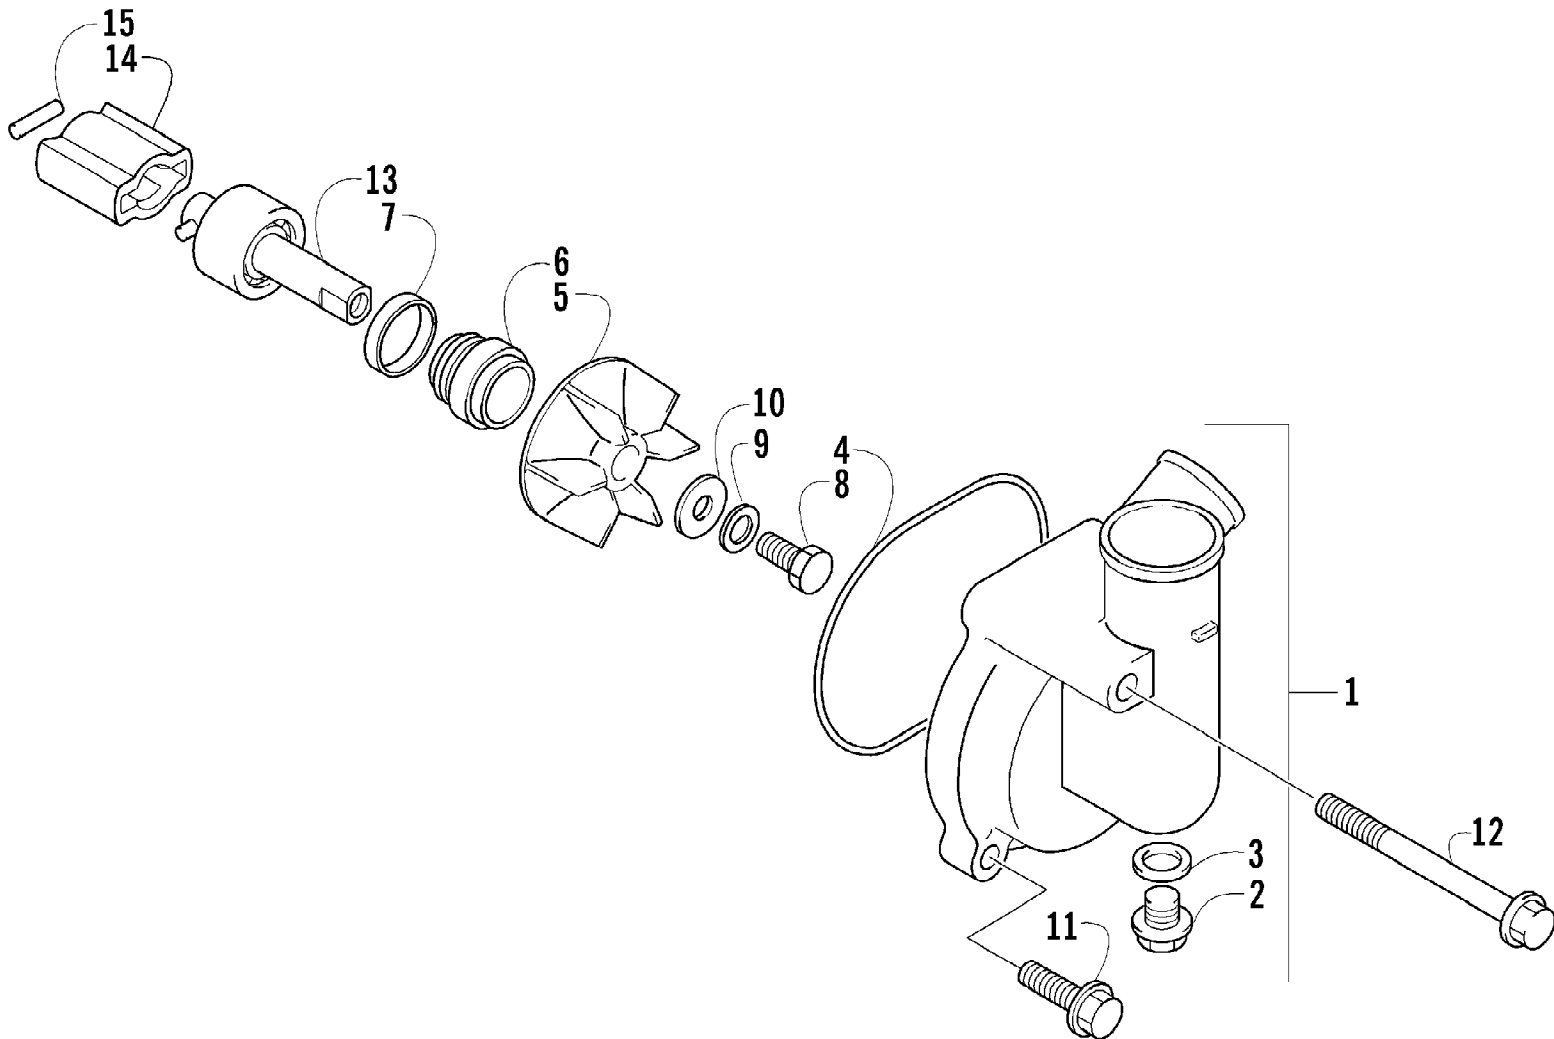

2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7)
 WATER PUMP ASSEMBLY Page 94 of 98

Ref #	Part Number	Qty	S/P/F	Description
1	3402-354	1	/P	Case, Water Pump (inc. 2-3)
2	3423-343	1		Screw, Cap
3	3402-436	1	/P	Gasket
4	3423-078	1		O-Ring
5	3413-001	1		Impeller
6	3005-909	1	/P	Seal, Mechanical
7	3003-356	1		Oil Seal
8	3423-543	1		Bolt
9	3003-431	1	/P	Washer
10	3003-432	1		Washer
11	3004-507	2	S	Screw, Cap
12	3423-119	1	S	Bolt
13	3413-002	1		Shaft, Pump w/Bearing
14	3413-011	1	/P	Joint, Pump Drive
15	3423-046	1		Pin, Driven Gear

 
2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS7) 95 of 98
WHEEL AND TIRE ASSEMBLY

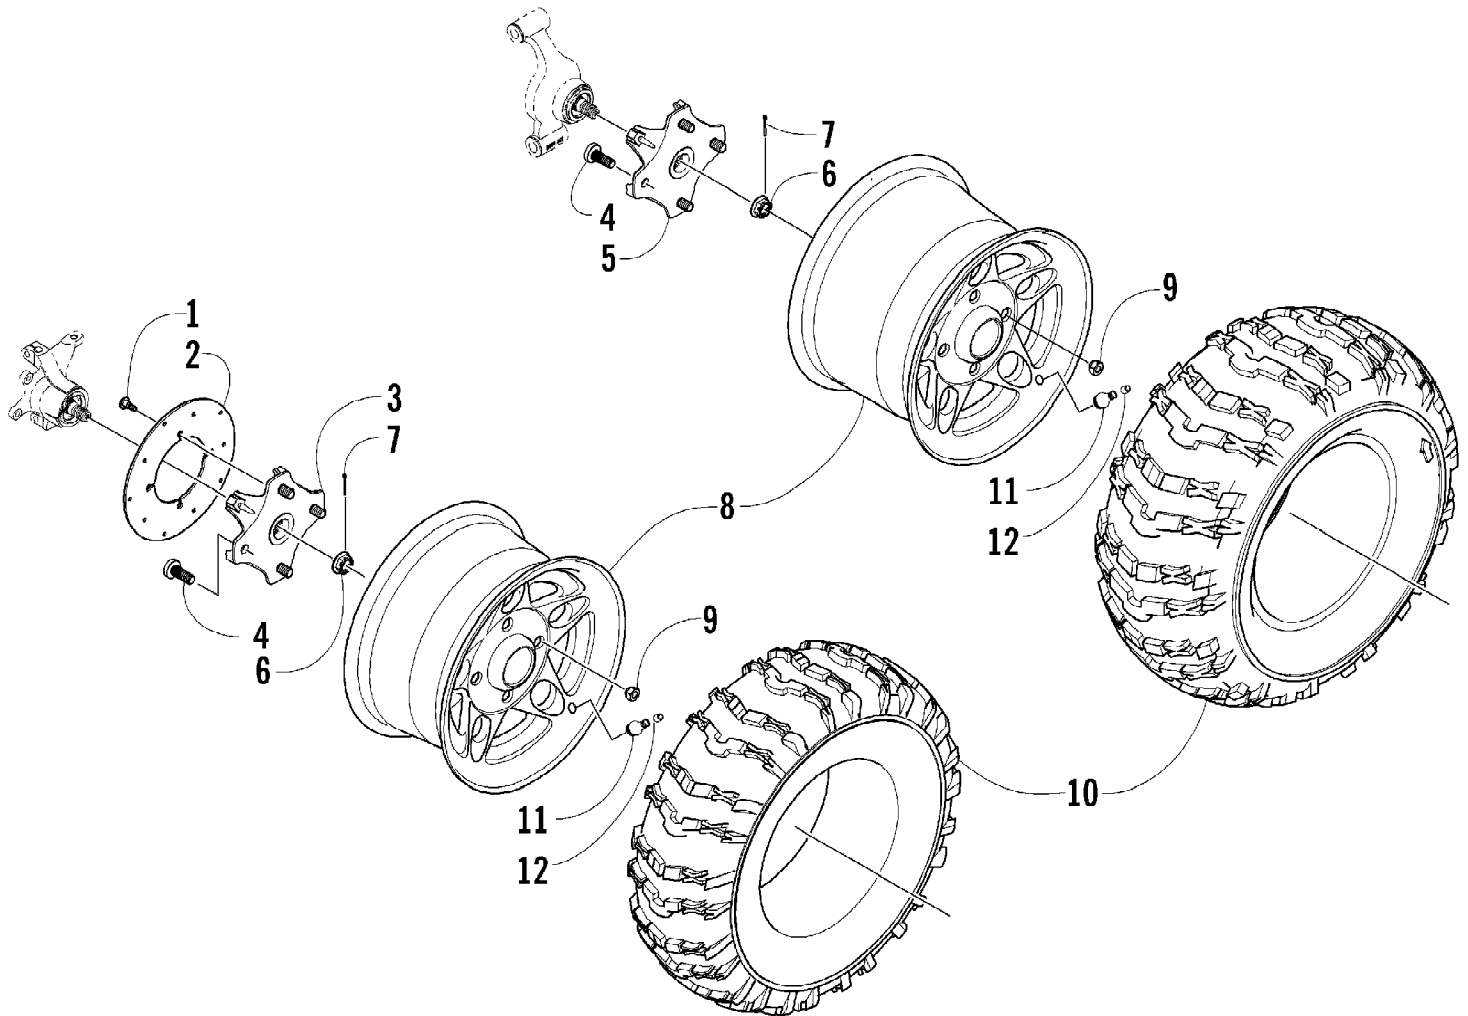

2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4AUS) Page 96 of 98
 WHEEL AND TIRE ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0423-557	12		Screw, Shoulder
2	1402-225	3	S	Disc, Brake
3	0502-599	2	S	Hub, Wheel - Front (inc. 4)
4	0402-974	16	/P	Stud, Wheel Hub
5	0502-601	1	S	Hub, Wheel - Rear - Left (inc. 4)
5	0502-599	1	S	Hub, Wheel - Rear - Right (inc. 4)
6	0423-607	4		Nut, Castle
7	0423-407	4		Pin, Cotter
8	1402-127	2		Wheel - Front
8	1402-115	2		Wheel - Rear
9	0423-408	16	/P	Nut, Lug
10	1402-100	2		Tire - Front
10	1402-137	2		Tire - Rear
11	0402-064	4		Stem, Valve (inc. 12)
12	0402-140	4		Cap, Valve Stem

 2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4A) ~~Page 97 of 98~~
WIRING HARNESS ASSEMBLY

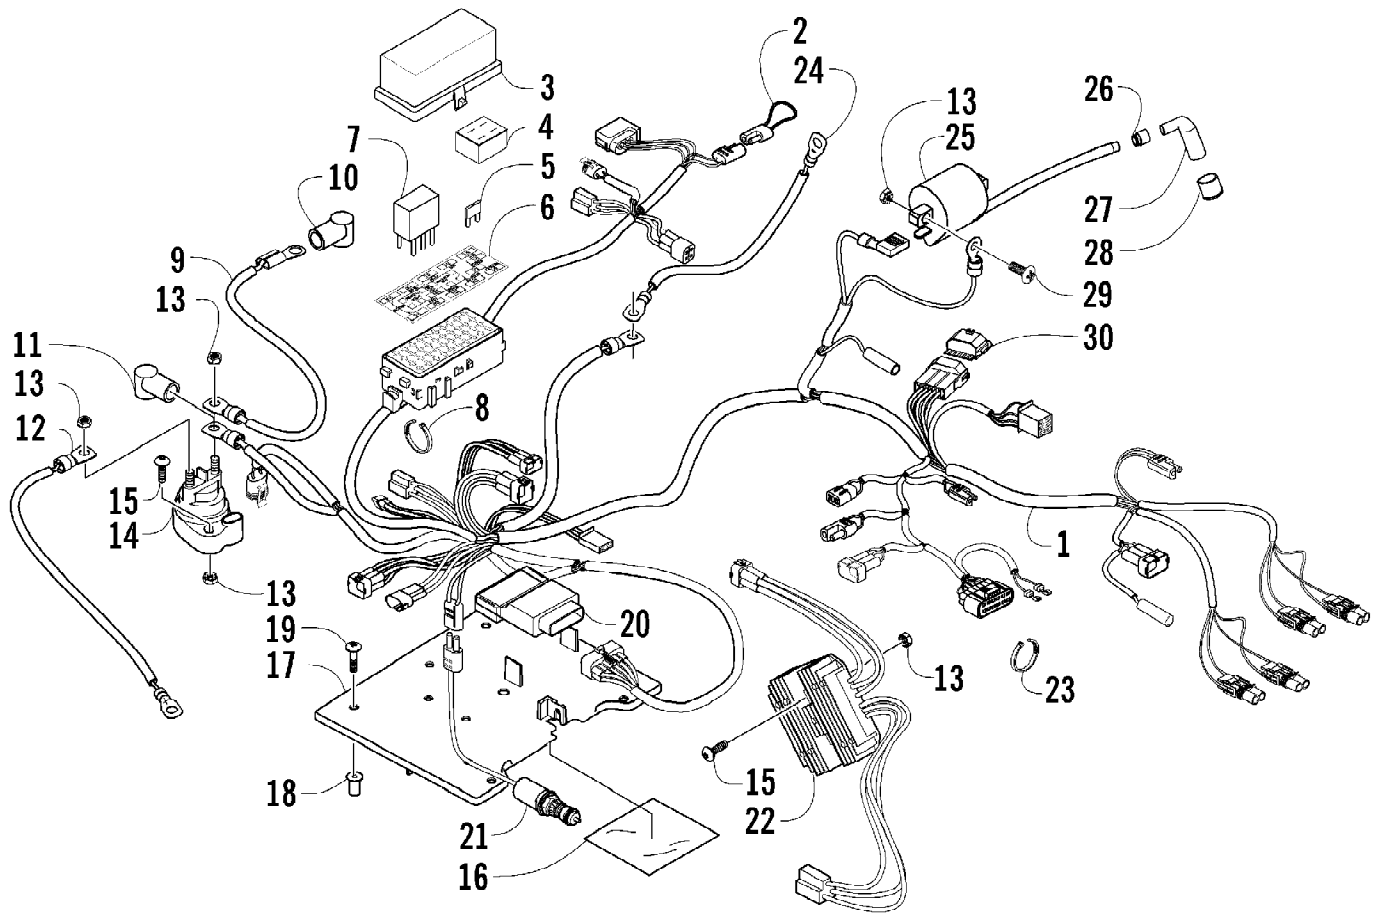

2006 ATV 500 MANUAL TRANSMISSION 4X4 FIS CAT GREEN (A2006IBM4A) Page 98 of 98
 WIRING HARNESS ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0486-185	1		Harness, Main (inc. 2-7)
2	0486-164	1		Tether, Accessory Connector
3	0530-008	1		Cover, Fuse Block
4	0430-037	1		Holder, Fuse
5	0430-032	4		Fuse - 10 Amp
5	0430-031	3		Fuse - 15 Amp
5	0430-030	2		Fuse - 30 Amp
6	0411-837	1		Decal, Fuse Block
7	0430-033	3	F	Relay
8	0123-788	AR	/P	Cable Tie - 7.5 in.
9	0445-053	1	/P	Cable, Solenoid/Starter (inc. 10)
10	0645-019	1		Boot, Terminal
11	0645-327	1		Boot, Terminal
12	0445-055	1	/P	Cable, Battery/Solenoid
13	0623-038	8		Nut w/Washer
14	0445-036	1	S	Solenoid
15	8476-625	4		Screw, Machine
16	0412-291	1		Shield, Heat
17	1406-600	1		Tray, Electrical
18	0123-010	4	/P	Nut, Expansion
19	0623-121	4		Screw, Machine
20	3530-040	1		CDI Unit
21	0409-072	1		Switch, Brake - Assembly
22	3530-028	1	S	Regulator, Voltage
23	0123-903	AR		Cable Tie - 11.5 in.
24	0445-054	1	/P	Cable, Battery/Ground
25	3530-027	1		Coil, Ignition - Assembly
26	3430-009	1	/P	Seal, High Tension Wire
27	3430-007	1	/P	Cap, Spark Plug
28	3430-008	1	/P	Seal, Spark Plug
29	8476-620	2		Screw, Machine
30	0430-047	1		Module, Engine Gear Switch