 


2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
AIR INTAKE ASSEMBLY

Page 1 of 60

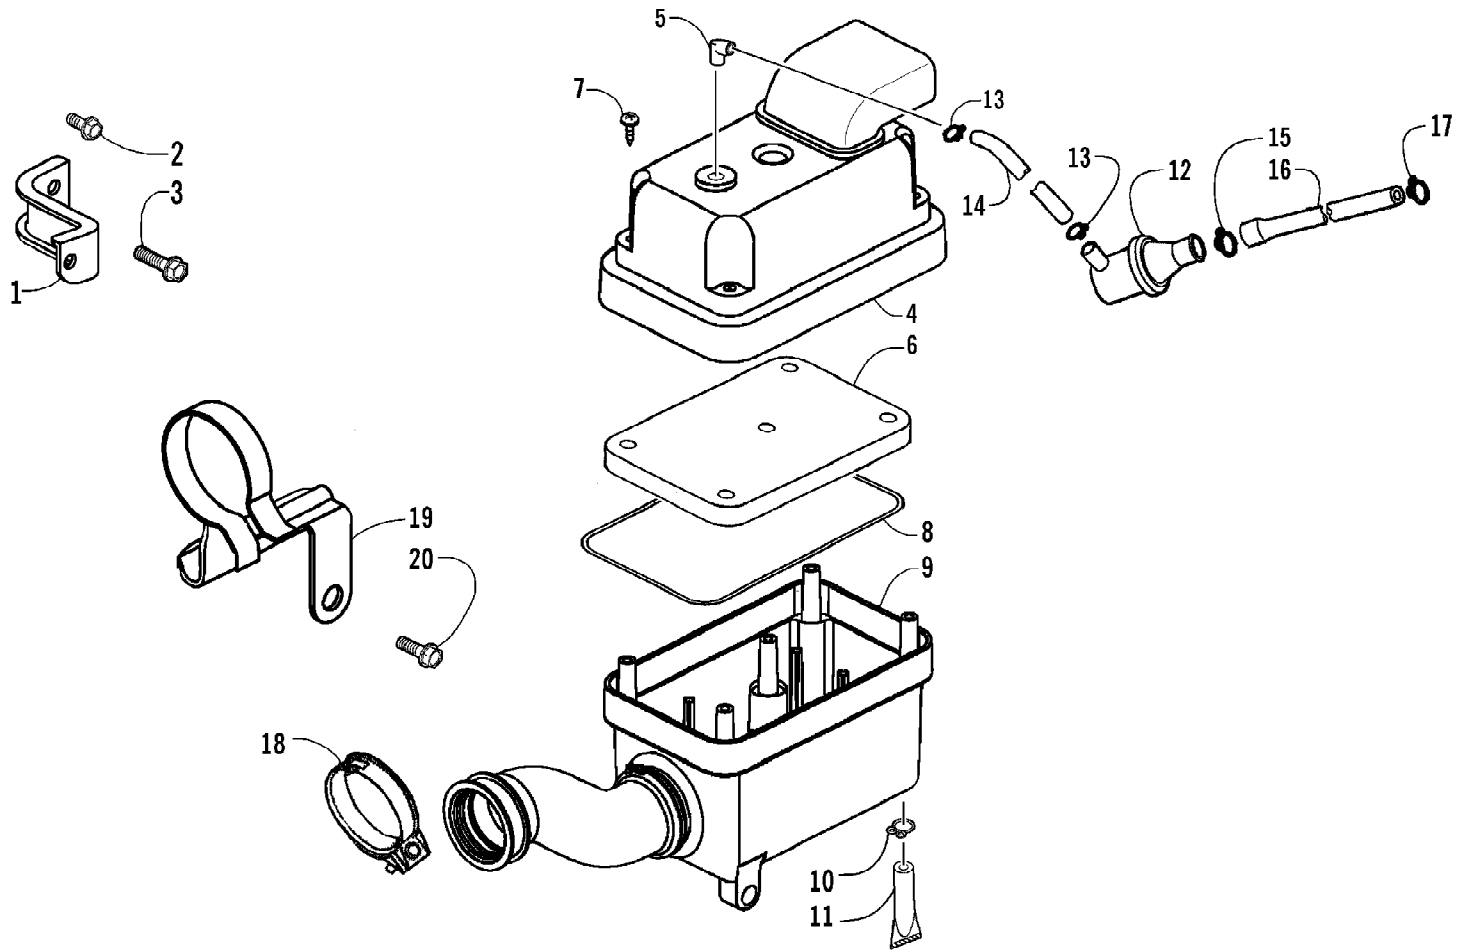


2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
AIR INTAKE ASSEMBLY

Page 2 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	3303-005	1		Bracket, Mounting
2	3303-357	1		Bolt, Flange
3	3304-569	1		Bolt, Flange
4	3303-062	1		Cover, Air Cleaner (inc. 5)
5	0	1	F	Fitting
6	3303-060	1		Element, Air Cleaner
7	3303-322	5	S	Screw, Self-Tapping
8	3303-063	1		Seal, Air Cleaner
9	3303-061	1		Case, Air Cleaner
10	3305-315	1		Clip
11	3304-168	1	/P	Tube, Drain
12	3303-064	1	/P	Catch, Air Cleaner Element
13	3303-350	2		Clip
14	3304-570	1	S	Tube
15	3303-052	1		Clip, Breather Tube
16	3303-001	1		Tube
17	3303-352	1		Clip
18	3303-288	1		Clamp
19	3303-287	1		Clamp Assembly - Air Cleaner Tube
20	3304-551	1	/P	Bolt, Flange

2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
BATTERY ASSEMBLY

 Page 3 of 60

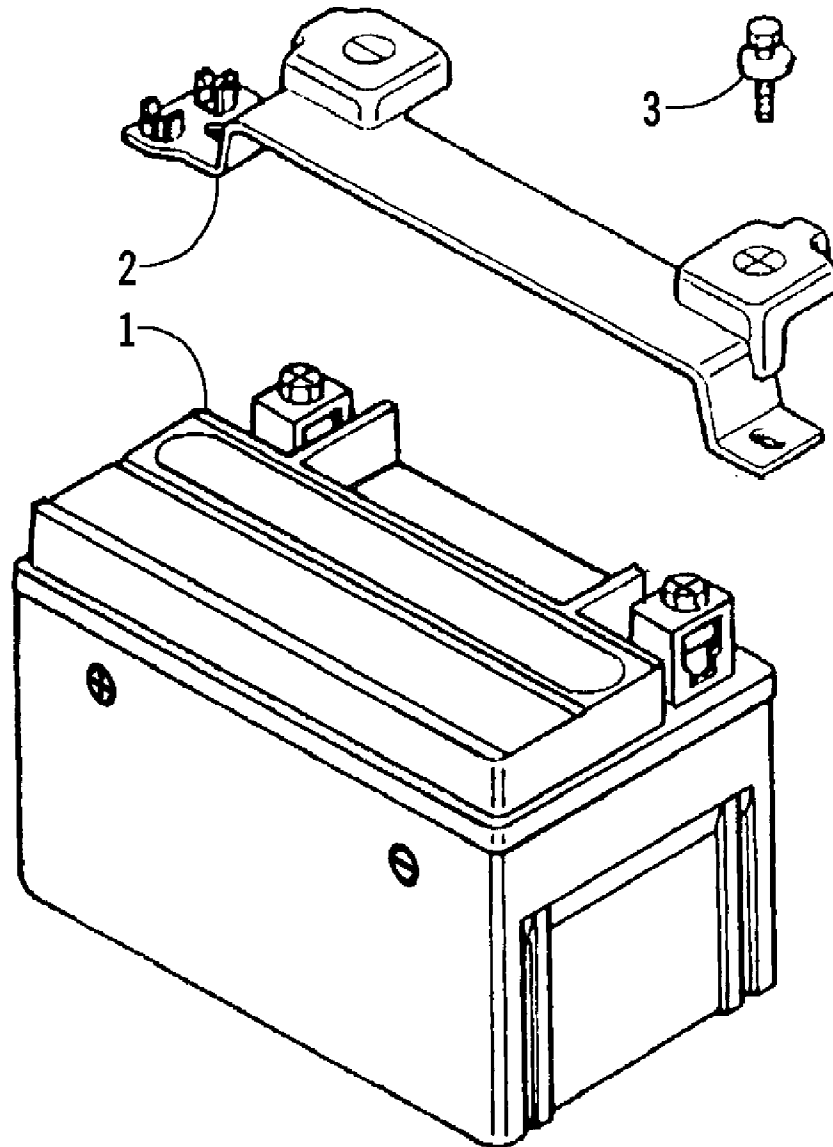


2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
BATTERY ASSEMBLY

Page 4 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	3303-131	1	/P	Battery
2	3303-182	1		Band, Battery
3	3303-263	2	/P	Bolt w/Washer

2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
BODY PANEL AND RACK ASSEMBLY

 Page 5 of 60

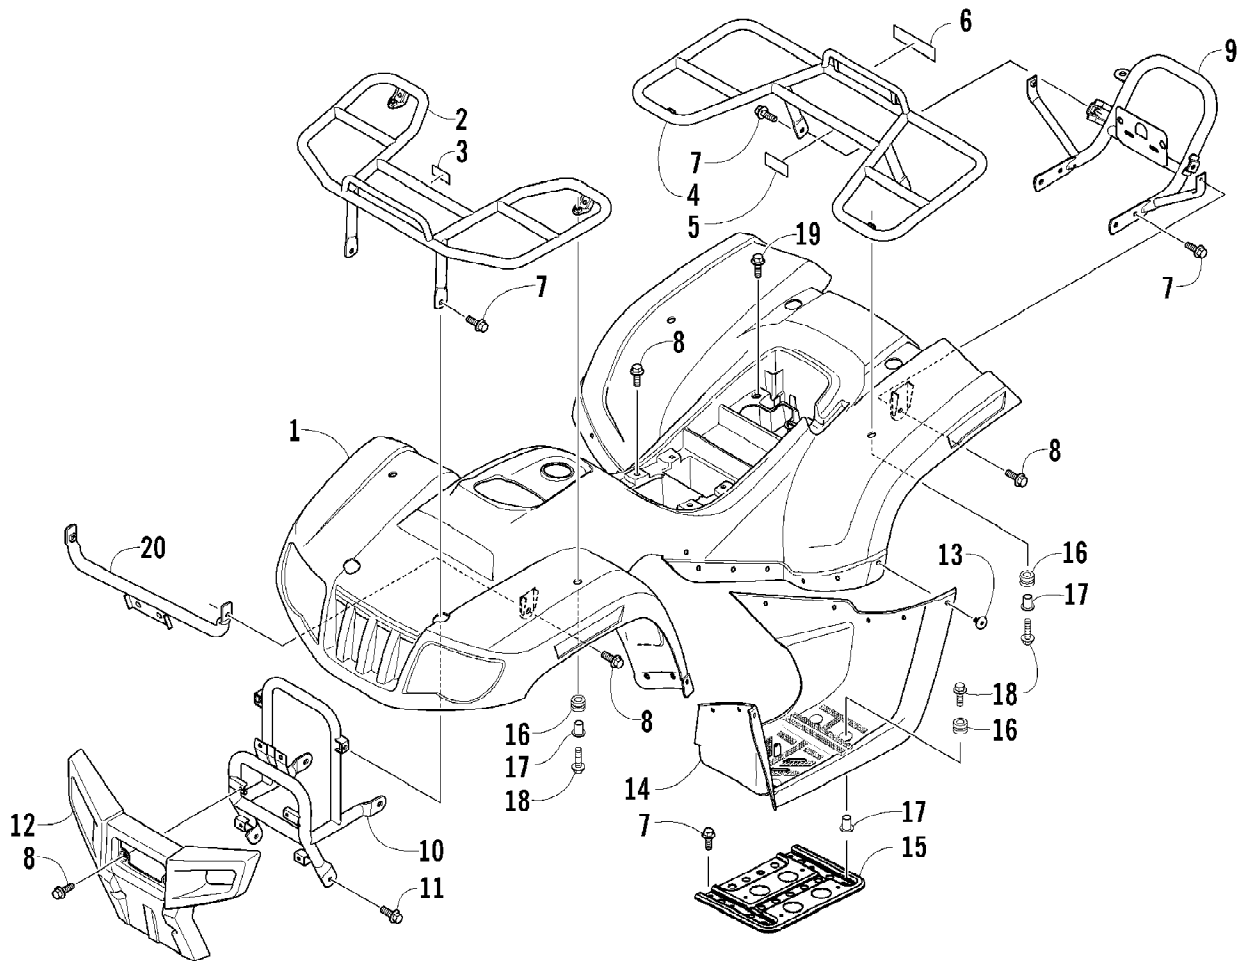


2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
BODY PANEL AND RACK ASSEMBLY

Page 6 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	3304-499	1	S	Panel, Body
2	3304-503	1		Rack - Front
3	1411-316	1		Decal, Warning - Front Rack Load
4	3304-504	1		Rack - Rear
5	1411-317	1		Decal, Warning - Rear Rack Load
6	1411-318	1		Decal, "Arctic Cat" - White
7	3304-543	14	/P	Bolt, Flange
8	3304-587	6	/P	Bolt, Flange
9	3304-505	1		Grip, Rear
10	3304-541	1		Bumper
11	3304-544	4		Bolt, Flange
12	3304-496	1	S	Fascia, Bumper - Front
13	-3303-592	20		Clip, Mudguard
14	3304-612	1	S	Mudguard, Floor - Right
14	3304-613	1	S	Mudguard, Floor - Left
15	3304-494	1		Reinforcement, Floor - Right
15	3304-495	1		Reinforcement, Floor - Left
16	3303-227	12		Rubber, Wind Screen
17	3303-233	12		Collar, Floor
18	3304-586	12	/P	Bolt w/Washer
19	3303-313	3	/P	Bolt, Flange
20	3304-549	1		Bracket, Mounting - Front Cover

2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
CARBURETOR ASSEMBLY

 Page 7 of 60

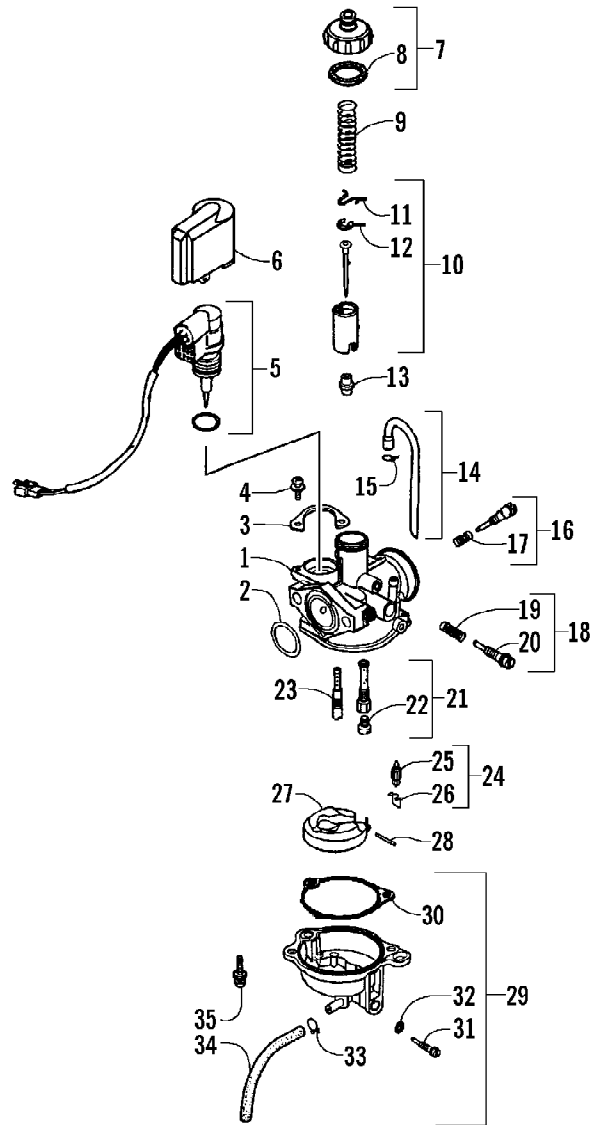


2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
CARBURETOR ASSEMBLY

Page 8 of 60

Ref #	Part Number	Qty	S/P/F	Description
	3303-405	1		Complete Carburetor Assembly
1	0	1	F	Body, Carburetor
2	3304-488	1		O-Ring
3	3304-471	1		Set Plate
4	3303-319	2	S	Screw w/Washer
5	3304-470	1		Automatic Bypass/Starter Assembly
6	3304-469	1		Holder, Cap
7	3304-462	1		Set, Top (inc. 8)
8	3304-463	1		Gasket, Top
9	3304-464	1		Spring, Compression
10	3304-467	1		Valve, Throttle - Assembly (inc. 11-12)
11	3304-465	1		Plate, Needle Clip
12	3304-466	1		Clip, Needle
13	3304-468	1		Needle Jet
14	3304-472	1		Tube, Rubber - Assembly (inc. 15)
15	3304-474	1		Clip, Tube
16	3304-475	1		Screw, Adjustment - Assembly (inc. 17)
17	3304-476	1		Spring, Compression
18	3304-477	1		Screw, Stop - Assembly (inc. 19-20)
19	3304-232	1		Spring, Compression
20	3304-478	1		Screw, Stop
21	3304-480	1		Holder, Needle Jet - Assembly (inc. 22)
22	3304-481	1		Jet, Main
23	3304-489	1		Jet, Slow
24	3304-490	1		Valve, Float - Assembly (inc. 25-26)
25	3304-483	1		Valve, Float - Set
26	3304-484	1		Clip
27	3304-491	1		Float Assembly
28	3304-485	1		Pin, Float Arm
29	3304-486	1		Body, Float Chamber - Assembly (inc. 30-34)
30	0	1	F	Gasket
31	3304-243	1		Screw, Drain
32	3304-239	1		O-Ring
33	3304-452	1		Clip, Tube
34	3305-248	1	/P	Tube, Drain
35	3303-320	2		Screw w/Washer

2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
CLUTCH ASSEMBLIES

 Page 9 of 60

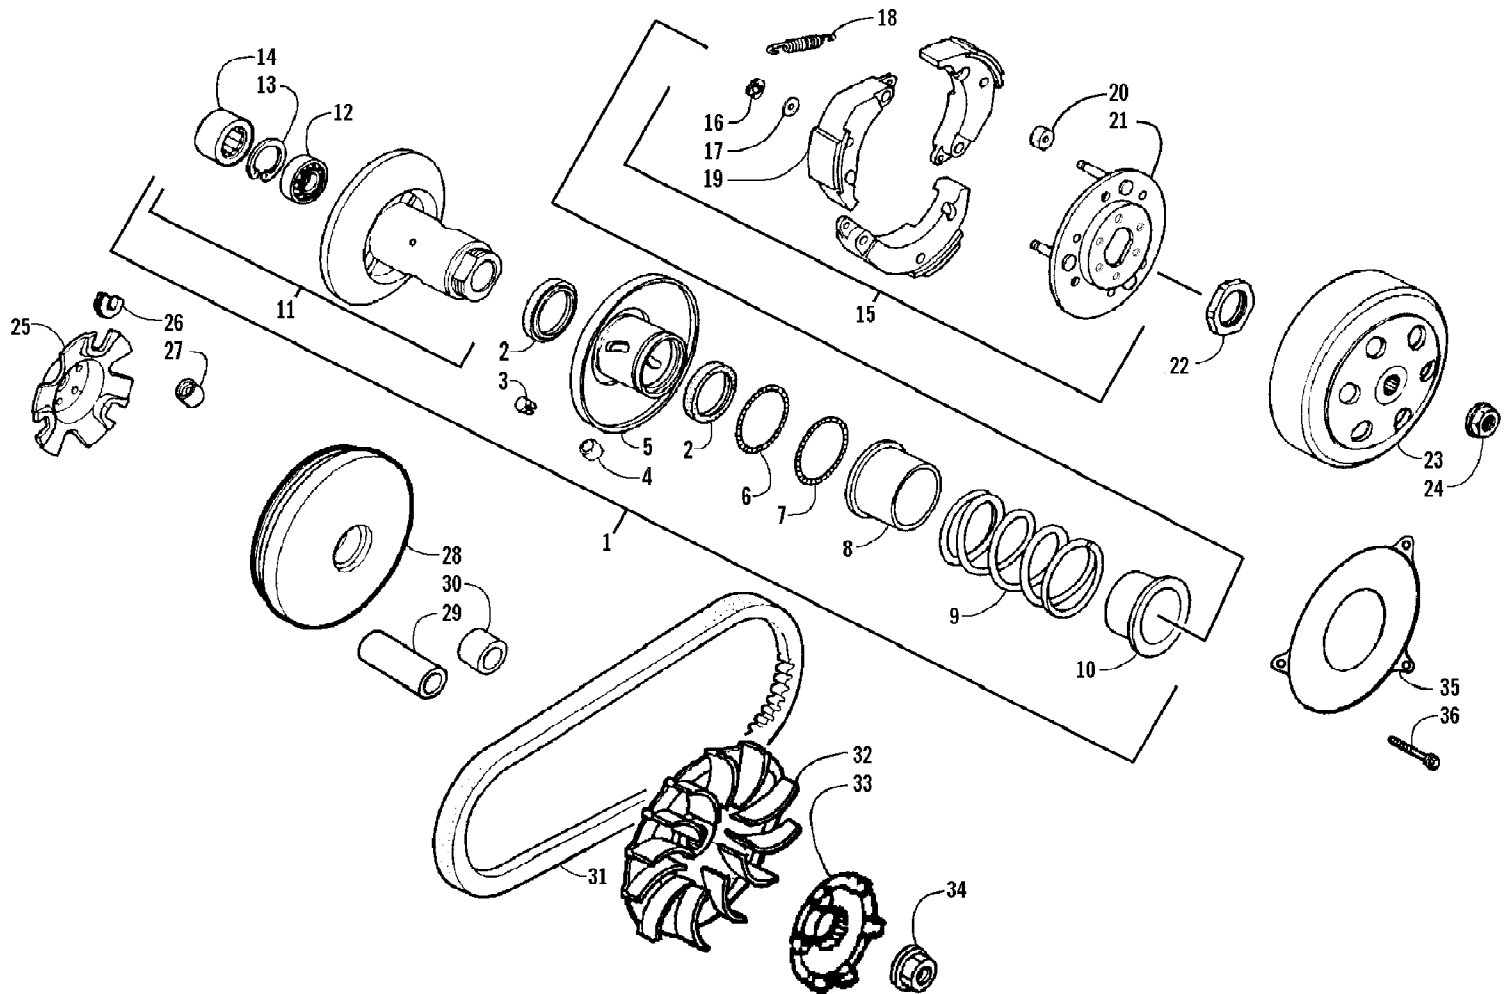


2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
CLUTCH ASSEMBLIES

Page 10 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	3303-411	1		Pulley, Driven - Assembly (inc. 2-22)
2	3303-299	2		Seal, Oil
3	3303-098	3		Guide, Pin
4	3303-099	3		Guide, Roller
5	3303-097	1		Face, Driven - Movable
6	3304-620	1		O-Ring
7	3304-619	1		O-Ring
8	3303-101	1		Collar, Seal
9	3303-100	1		Spring, Driven Face
10	3303-102	1		Collar, Spring
11	3303-096	1		Face, Driven - Fixed - Assembly (inc. 12-14)
12	3303-291	1		Bearing, Ball
13	3303-346	1		Circlip
14	3303-294	1		Bearing, Needle
15	3303-090	1		Face, Drive - Assembly (inc. 16-21)
16	3304-618	3	/P	E-Ring
17	3303-274	3		Washer, Thrust
18	3303-092	3		Spring, Clutch
19	3303-093	3		Weight, Clutch
20	3303-094	3		Rubber, Clutch Damper
21	3303-091	1		Face, Drive
22	3304-025	1	/P	Nut
23	3303-082	1		Housing, Centrifugal Clutch
24	3303-333	1	/P	Nut, Flange
25	3303-088	1		Plate, Ramp
26	3303-089	3		Slide
27	3303-087	6		Guide, Roller
28	3303-086	1		Face, Drive - Movable
29	3303-409	1		Boss, Drive Face
30	3303-410	1		Collar, Drive Face
31	3303-095	1		Belt, Drive
32	3303-083	1		Face, Drive
33	3303-116	1		Ratchet, Kick Starter
34	3303-334	1		Nut, Flange
35	3304-460	1		Plate, Dust
36	3303-381	3		Bolt, Flange

2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
CRANKCASE ASSEMBLY

 Page 11 of 60

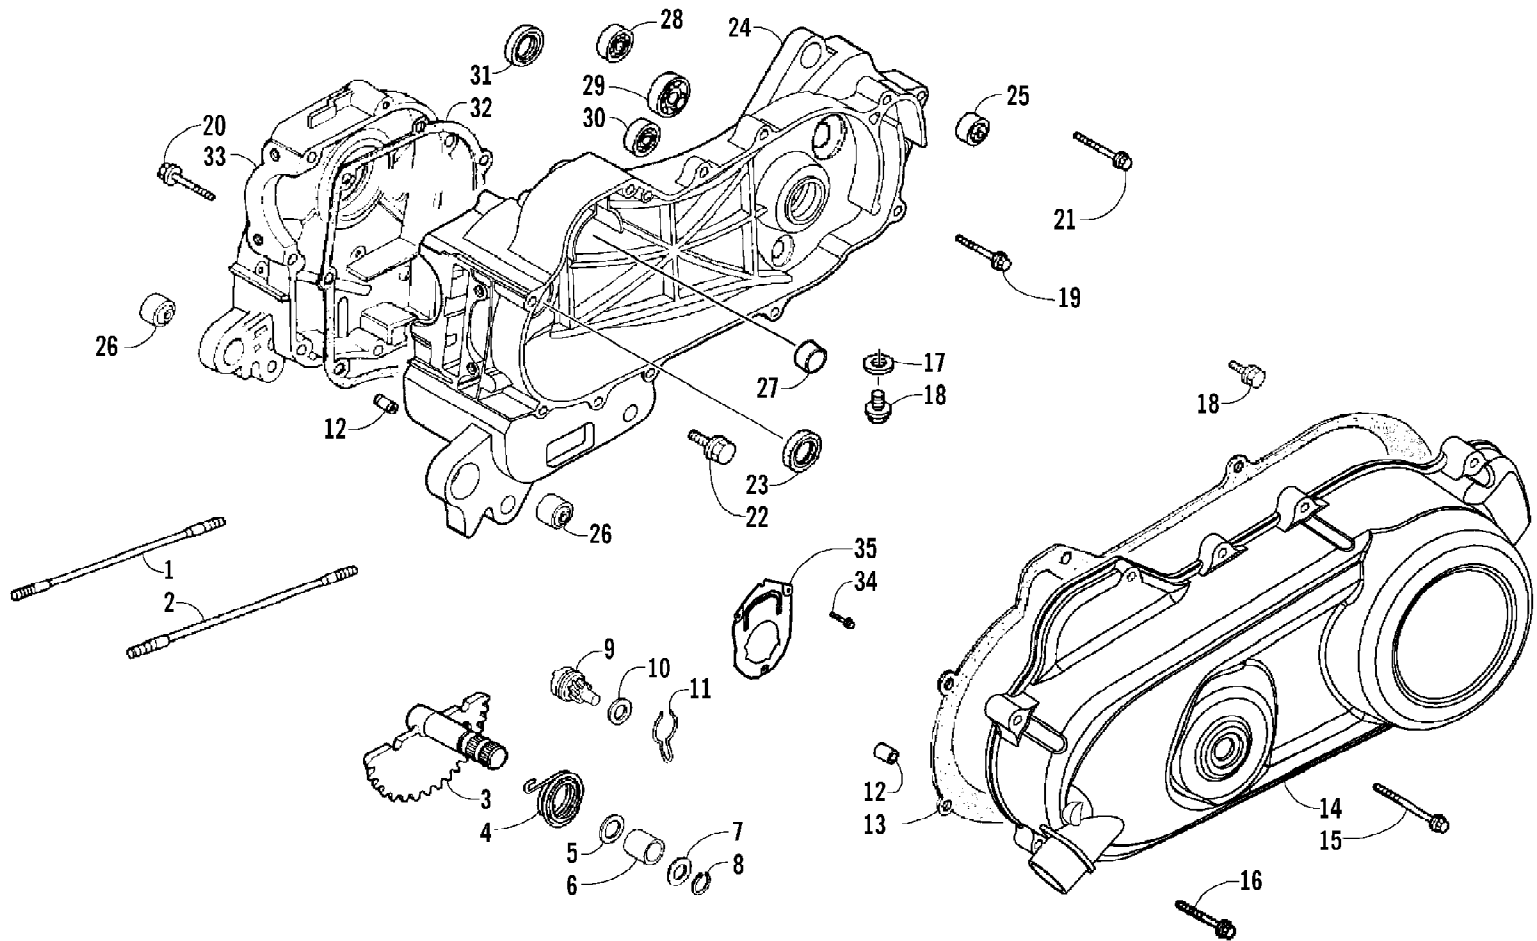


2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
CRANKCASE ASSEMBLY

Page 12 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	3303-247	2		Bolt, Stud
2	3303-248	2		Bolt, Stud
3	3303-119	1		Spindle, Kick Starter
4	3303-122	1		Spring, Return - Kick Starter
5	3303-121	1		Collar, Boss - Kick Starter
6	3303-120	1		Bushing, Spindle - Kick Starter
7	3303-276	1		Washer, Spindle - Kick Starter
8	3303-345	1		Circlip
9	3303-118	1		Gear, Driven - Kick Starter
10	3303-272	1		Washer, Thrust
11	3303-117	1		Spring, Driven - Kick Starter
12	3303-341	4		Pin, Dowel
13	3303-013	1		Gasket, Crankcase Cover - Left
14	3304-615	1		Cover , Crankcase - Left
15	3303-386	7	/P	Bolt, Flange
16	3303-385	1		Bolt, Flange
17	3303-278	1		Washer
18	3303-365	2		Bolt, Flange
19	3303-372	1		Bolt, Flange
20	3303-387	1		Bolt, Flange
21	3303-370	6		Bolt, Flange
22	3303-283	1	S	Bolt, Drain Plug - Assembly
23	3303-296	1		Seal, Oil
24	3303-004	1		Crankcase, Set - Left (inc. 25, one No. 26, and 27)
25	3303-403	2		Bushing, Rubber - Rear Cushion
26	3303-402	2	/P	Bushing, Rubber - Engine Hanger
27	3304-597	1		Bushing
28	3303-464	1		Bearing, Ball
29	3303-459	1		Bearing, Needle
30	3303-465	1		Bearing, Ball
31	3303-297	1	/P	Seal, Oil
32	3303-003	1		Gasket, Crankcase - Right
33	3303-400	1	/P	Crankcase, Set - Right (inc. one No. 26)
34	3303-391	3		Bolt
35	3303-009	1		Plate, Cover

2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
CRANKCASE COVER ASSEMBLY

 Page 13 of 60

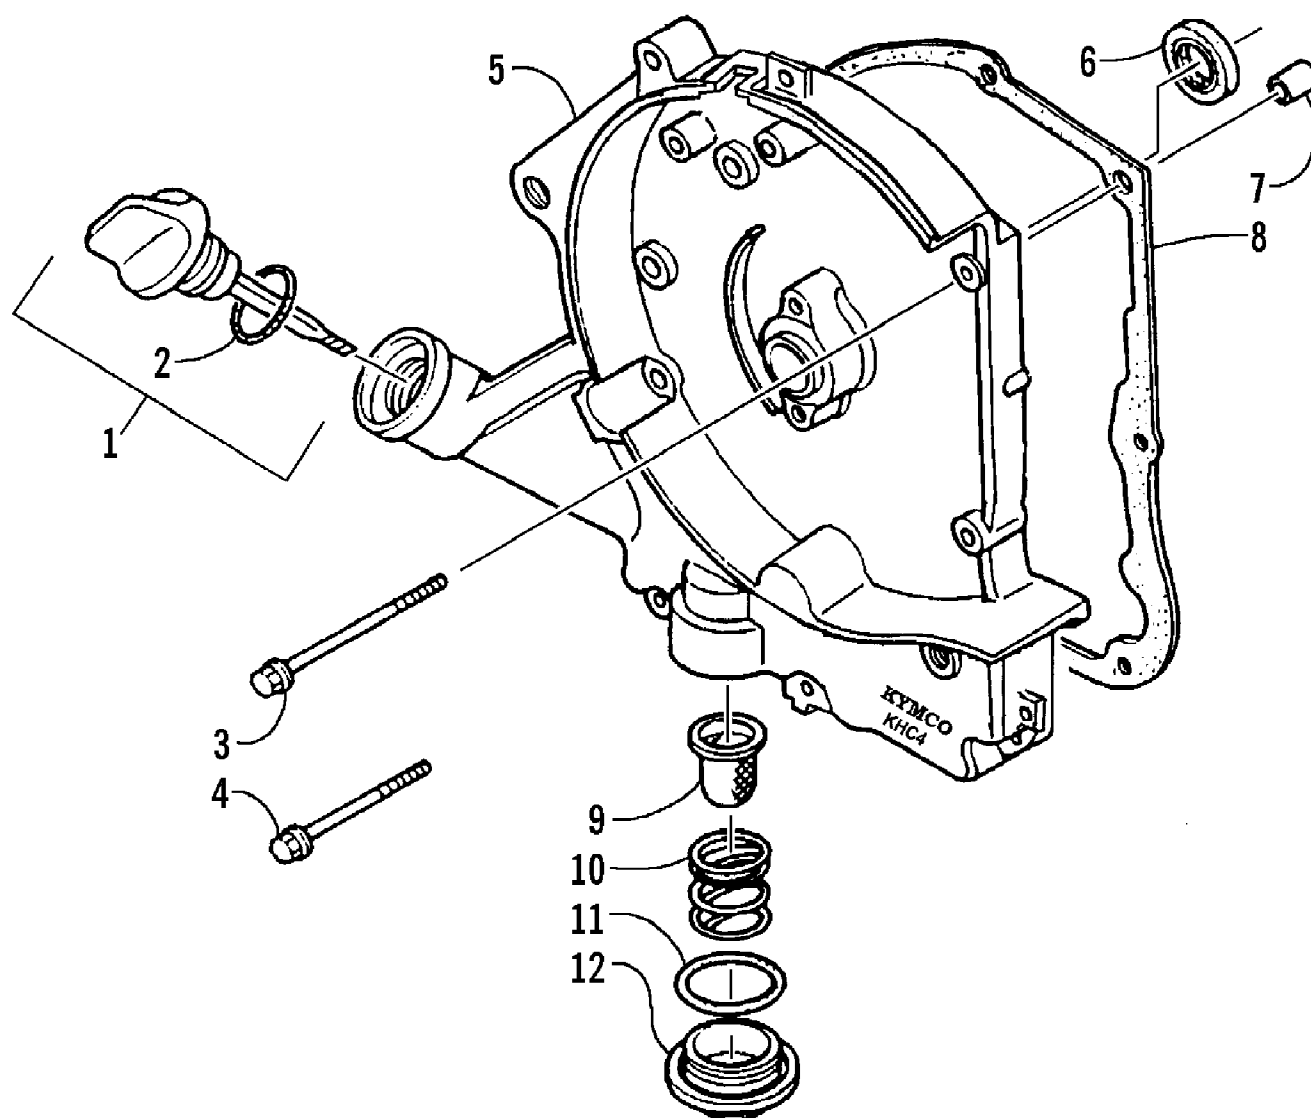


2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
CRANKCASE COVER ASSEMBLY

Page 14 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	3303-050	1		Gauge, Oil Level - Assembly (inc. 2)
2	3303-306	1	S	O-Ring
3	3303-390	4		Bolt, Flange
4	3304-580	4		Bolt, Flange
5	3303-007	1		Cover, Crankcase (inc. 6)
6	3303-296	1		Seal, Oil
7	3303-341	2		Pin, Dowel
8	3303-012	1		Gasket, Crankcase
9	3303-048	1	S	Screen, Oil Filter
10	3303-049	1	S	Spring, Oil Filter Screen
11	3304-096	1	/P	O-Ring
12	3303-021	1		Cap, Oil Filter

2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
CYLINDER HEAD ASSEMBLY

 
Page 15 of 60

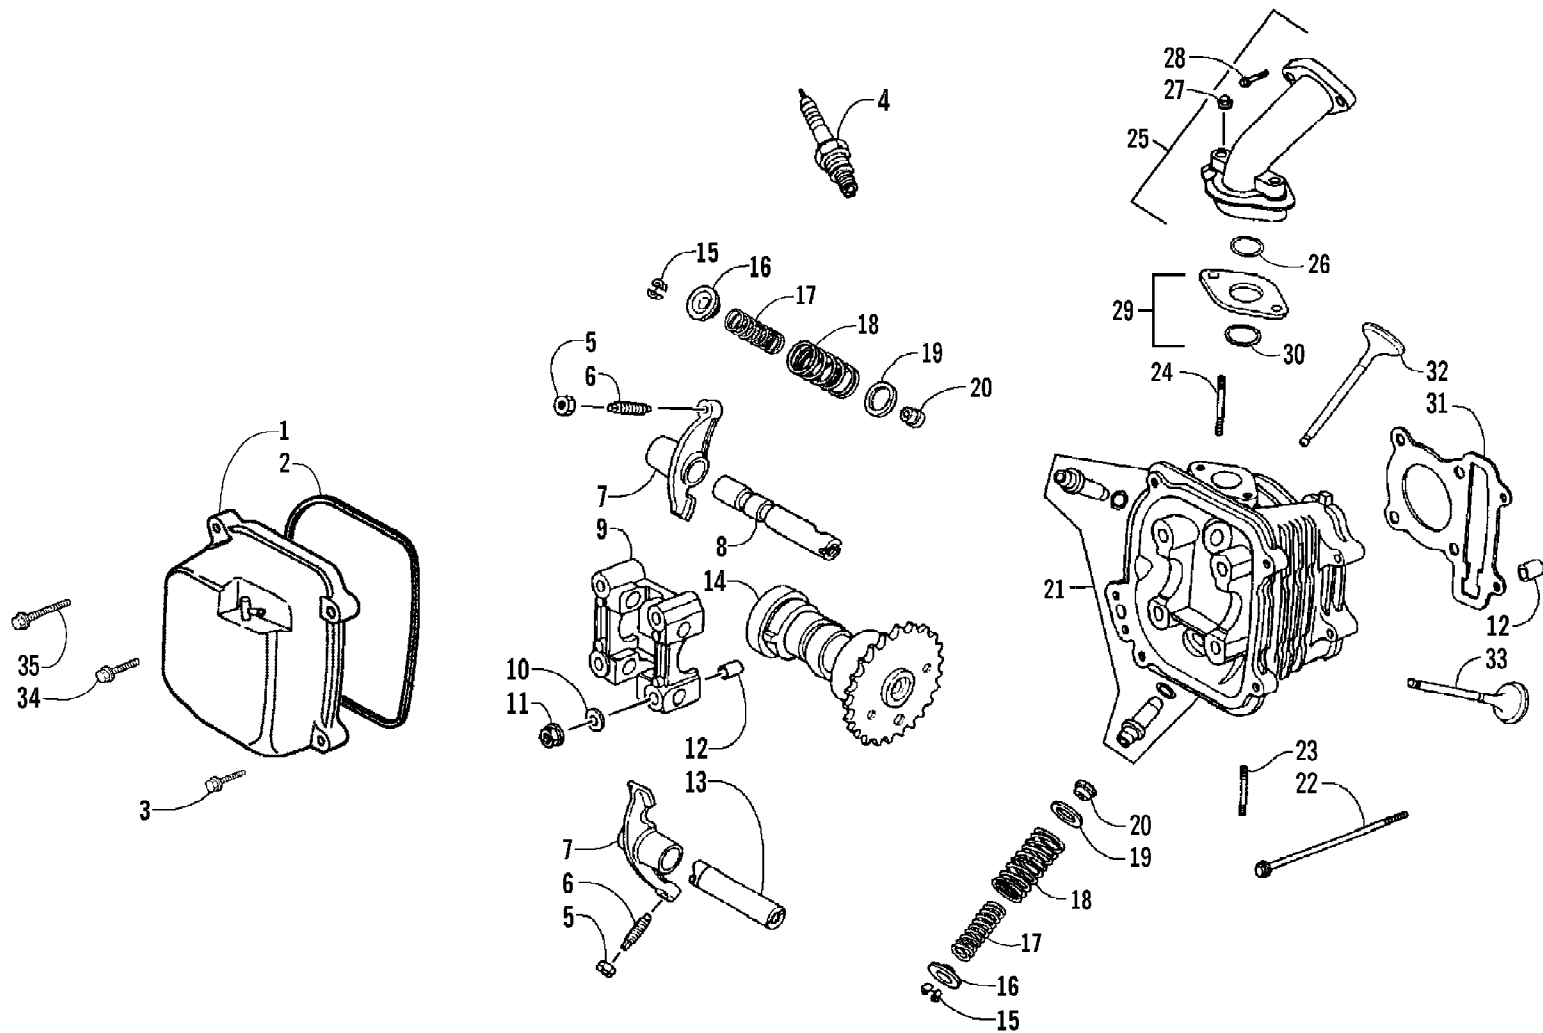

2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
CYLINDER HEAD ASSEMBLY

Page 16 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	3303-625	1	F	Complete Engine Assembly (AC20AA)
1	3303-020	1		Cover, Head - Assembly
2	3304-616	1		Gasket, Cylinder Head Cover
3	3303-360	2		Bolt, Flange
4	3304-832	1	S	Plug, Spark
5	3303-260	2	S	Nut, Tappet Adjusting
6	3303-246	2	S	Screw, Tappet Adjusting
7	3303-031	2		Valve, Rocker Arm
8	3303-032	1		Shaft, Rocker Arm - Intake
9	3303-018	1		Holder, Camshaft
10	3303-277	4	S	Washer, Sealing
11	3303-332	4		Nut, Flange
12	3303-342	4		Pin, Dowel
13	3303-033	1		Shaft, Rocker Arm - Exhaust
14	3304-617	1		Camshaft
15	3303-044	4		Cotter, Valve
16	3303-042	2	/P	Retainer, Valve Spring
17	3303-041	2		Spring, Valve - Inner
18	3303-040	2		Spring, Valve - Outer
19	3303-043	2		Seat, Valve Spring - Outer
20	3303-017	2	S	Seal, Valve Stem
21	3303-016	1		Head, Cylinder
22	3303-389	2		Bolt, Flange
23	3303-249	2		Bolt, Stud
24	3303-310	2		Bolt, Stud
25	3303-059	1		Pipe, Intake - Assembly (inc. 26)
26	3303-304	1		O-Ring
27	3303-331	2	/P	Nut, Flange
28	3303-384	2	/P	Bolt, Flange
29	3303-511	1	/P	Insulator, Carburetor - Assembly (inc. 30)
30	3304-596	1		O-Ring
31	3303-019	1		Gasket, Cylinder Head
32	3303-038	1		Valve, Intake
33	3303-039	1		Valve, Exhaust
34	3303-362	2		Bolt, Flange
35	3303-363	2		Bolt, Flange

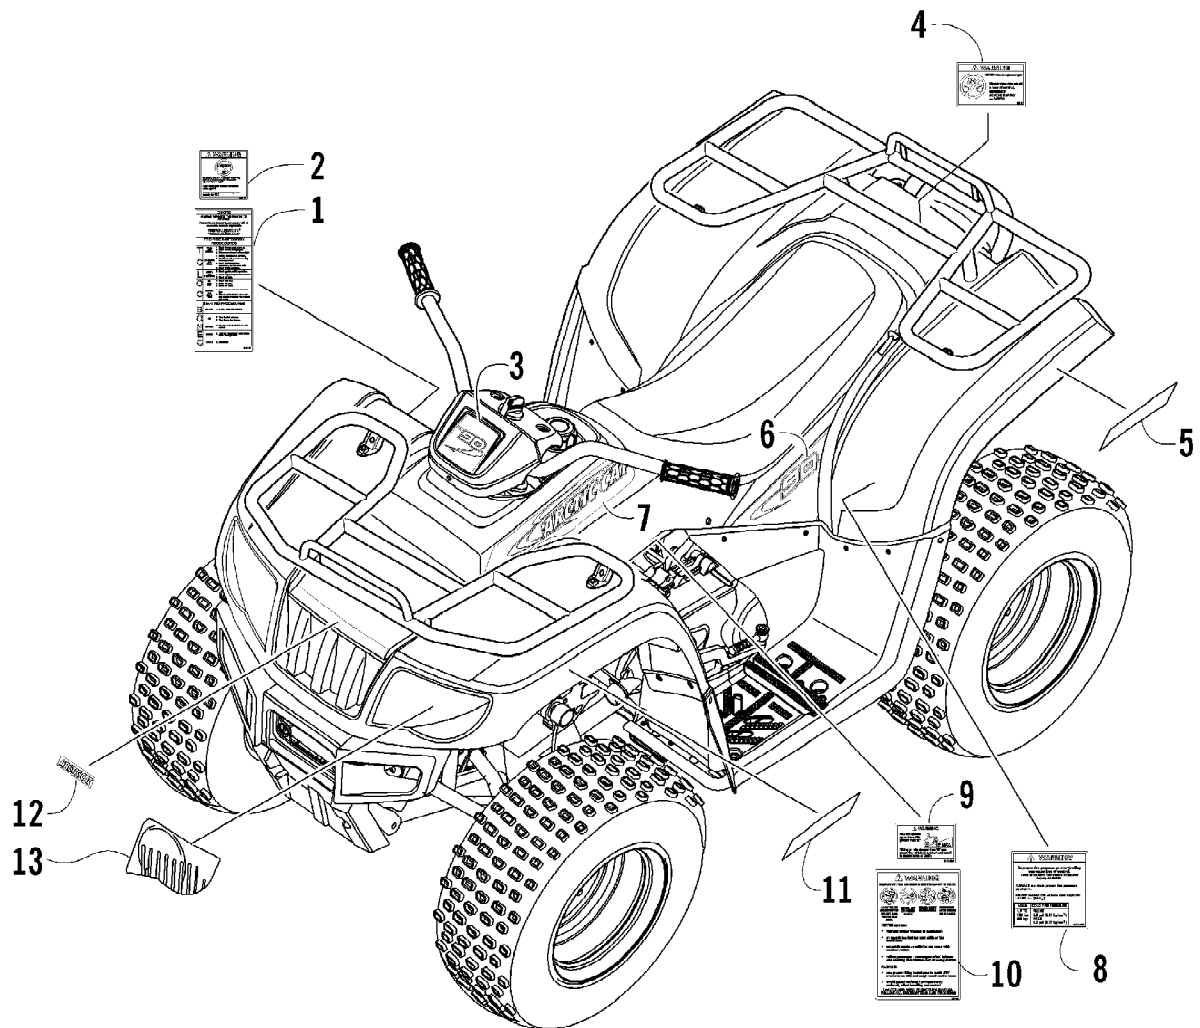 


2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
DECALS

Page 18 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	0411-457	1		Decal, Warning - Reverse/Pre-Ride
2	0411-400	1		Decal, Warning - Age
3	1411-215	1		Decal, Instrument Pod
4	0411-435	1		Decal, Warning - Passenger
5	1411-178	1		Decal, Reflector - Rear - Right
5	1411-179	1		Decal, Reflector - Rear - Left
6	1411-246	1		Decal, Graphic - Lower Right
6	1411-247	1		Decal, Graphic - Lower Left
7	1411-208	1		Decal, Graphic - Side - Right
7	1411-209	1		Decal, Graphic - Side - Left
8	0411-455	1		Decal, Warning - Tire/Load
9	0411-836	1		Decal, Warning - Hill
10	0411-218	1		Decal, Warning - General
11	1411-180	1		Decal, Reflector - Front - Right
11	1411-181	1		Decal, Reflector - Front - Left
12	1411-193	1		Decal, Graphic - Front
13	1411-242	1		Decal, Headlight - Right
13	1411-243	1		Decal, Headlight - Left

2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
ELECTRICAL AND WIRING HARNESS ASSEMBLY

 Page 19 of 60

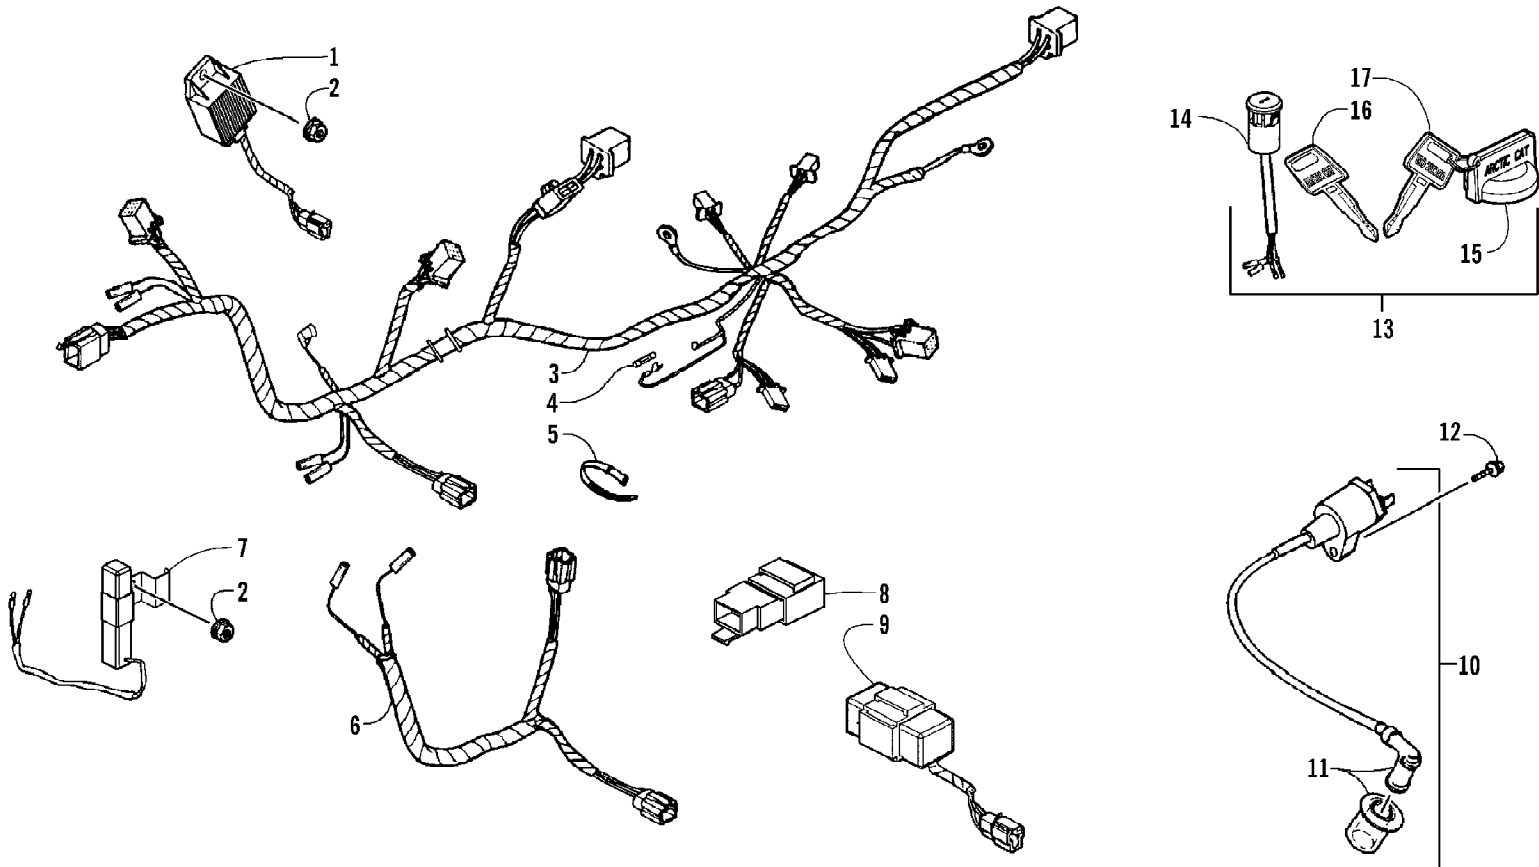


2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
ELECTRICAL AND WIRING HARNESS ASSEMBLY

Page 20 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	3303-132	1		Regulator, Voltage
2	3303-331	2	/P	Nut, Flange
3	3303-419	1		Harness, Main (inc. 4)
4	3303-399	2		Fuse
5	3303-289	4	/P	Cable Tie
6	3303-134	1	/P	Sub-Cord
7	3303-142	1		Resistor
8	3303-143	1		Relay, Starter
9	3303-413	1		CDI Assembly and Speed Control
10	3303-125	1		Coil Assembly - Ignition (inc. 11)
11	3303-126	1		Cap, Noise Suppressor - Assembly
12	3303-252	1		Bolt, Flange
13	3303-423	1		Switch, Ignition - Assembly (inc. 14-16)
14	0	1	F	Switch, Ignition
15	3304-520	1	F	Key, Ignition w/Cover Right Side Cut
15	3304-521	1	F	Key, Ignition w/Cover Left Side Cut
16	3304-522	1		Cover, Key - "Arctic Cat"

2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
EXHAUST ASSEMBLY

 Page 21 of 60

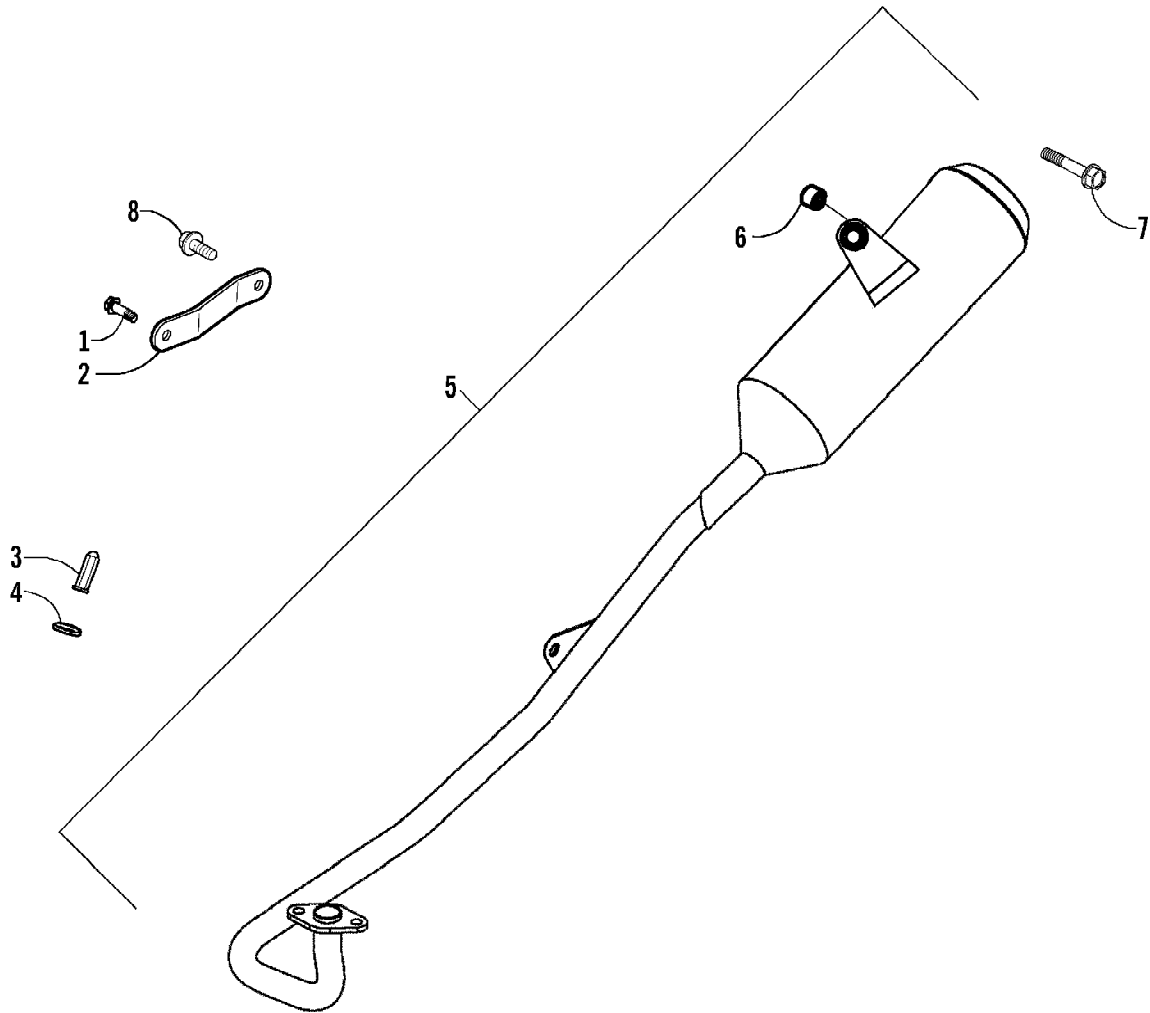


2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
EXHAUST ASSEMBLY

Page 22 of 60

Ref #	Part Number	Qty	S/P/F	Description
2	3304-573	1		Bracket, Mounting - Muffler
3	3303-261	2		Nut, Cap - 8 mm
4	3303-071	1		Gasket, Exhaust Pipe
5	3305-600	1		Muffler - Assembly (inc. 6)
6	3304-571	1		Bushing, Rubber
7	3304-572	1	/P	Bolt, Flange
7	3303-314	1		Bolt, Flange
8	3304-543	1	/P	Bolt, Flange

2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
FRAME AND RELATED PARTS ASSEMBLY

 Page 23 of 60

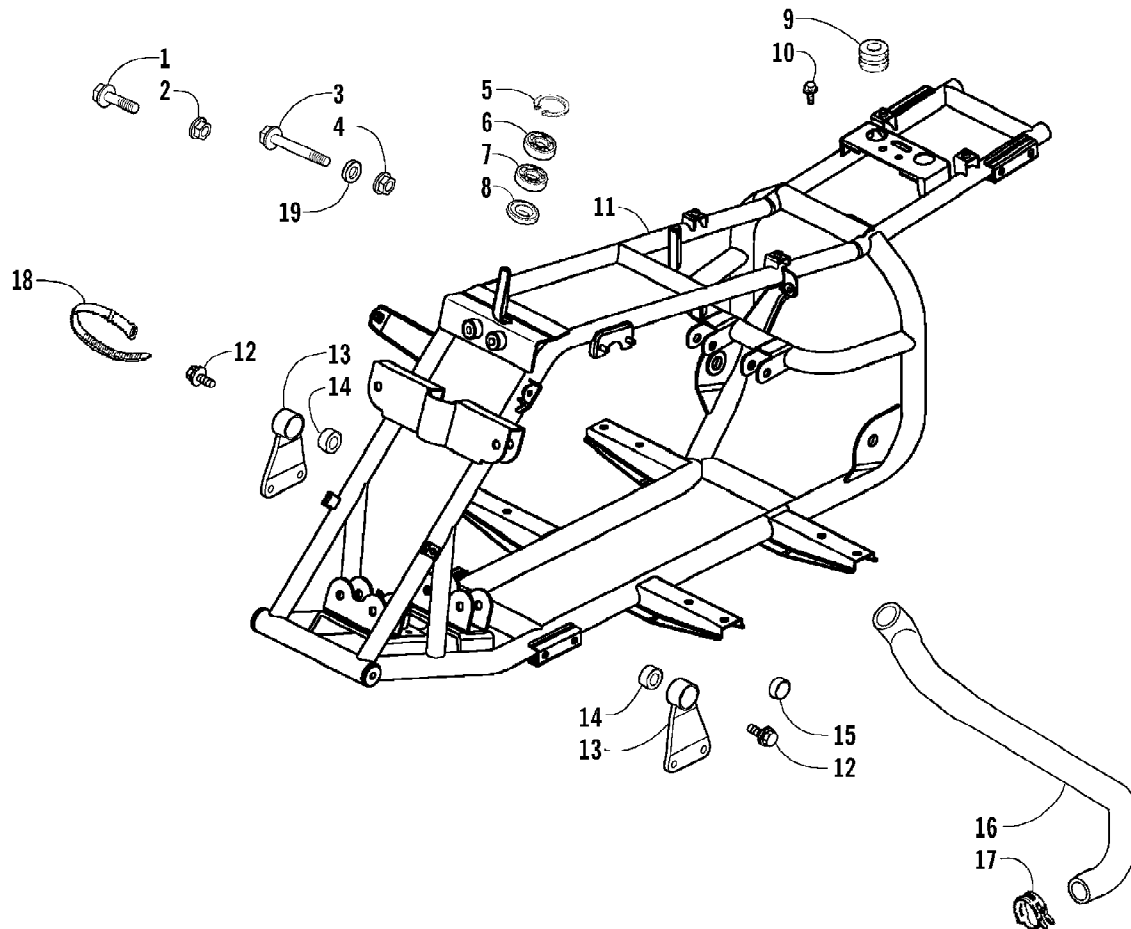


2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
FRAME AND RELATED PARTS ASSEMBLY

Page 24 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	3304-547	2	/P	Bolt, Flange
2	3303-269	2		Nut, Flange
3	3304-548	2	/P	Bolt, Flange
4	3303-265	2	S	Nut, Flange
5	3303-347	1		Circlip
6	3303-295	1		Seal, Oil
7	3303-392	1		Bearing
8	3303-298	1		Seal, Oil
9	3303-232	2		Rubber, Engine Mounting
10	3303-308	1		Bolt, Hex
11	3303-181	1		Frame, Main
12	3304-543	4	/P	Bolt, Flange
13	3304-545	1	S	Bracket, Engine Hanger - Right (inc. one No. 14)
13	3304-546	1	S	Bracket, Engine Hanger - Left (inc. one No. 14)
14	3304-542	2		Bushing, Rubber - Engine Hanger
15	3303-445	1		Collar
16	3303-010	1		Duct - Cover
17	3303-074	1		Clamp, Hose
18	3303-289	1	/P	Cable Tie

2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
FRONT SUSPENSION ASSEMBLY

 Page 25 of 60

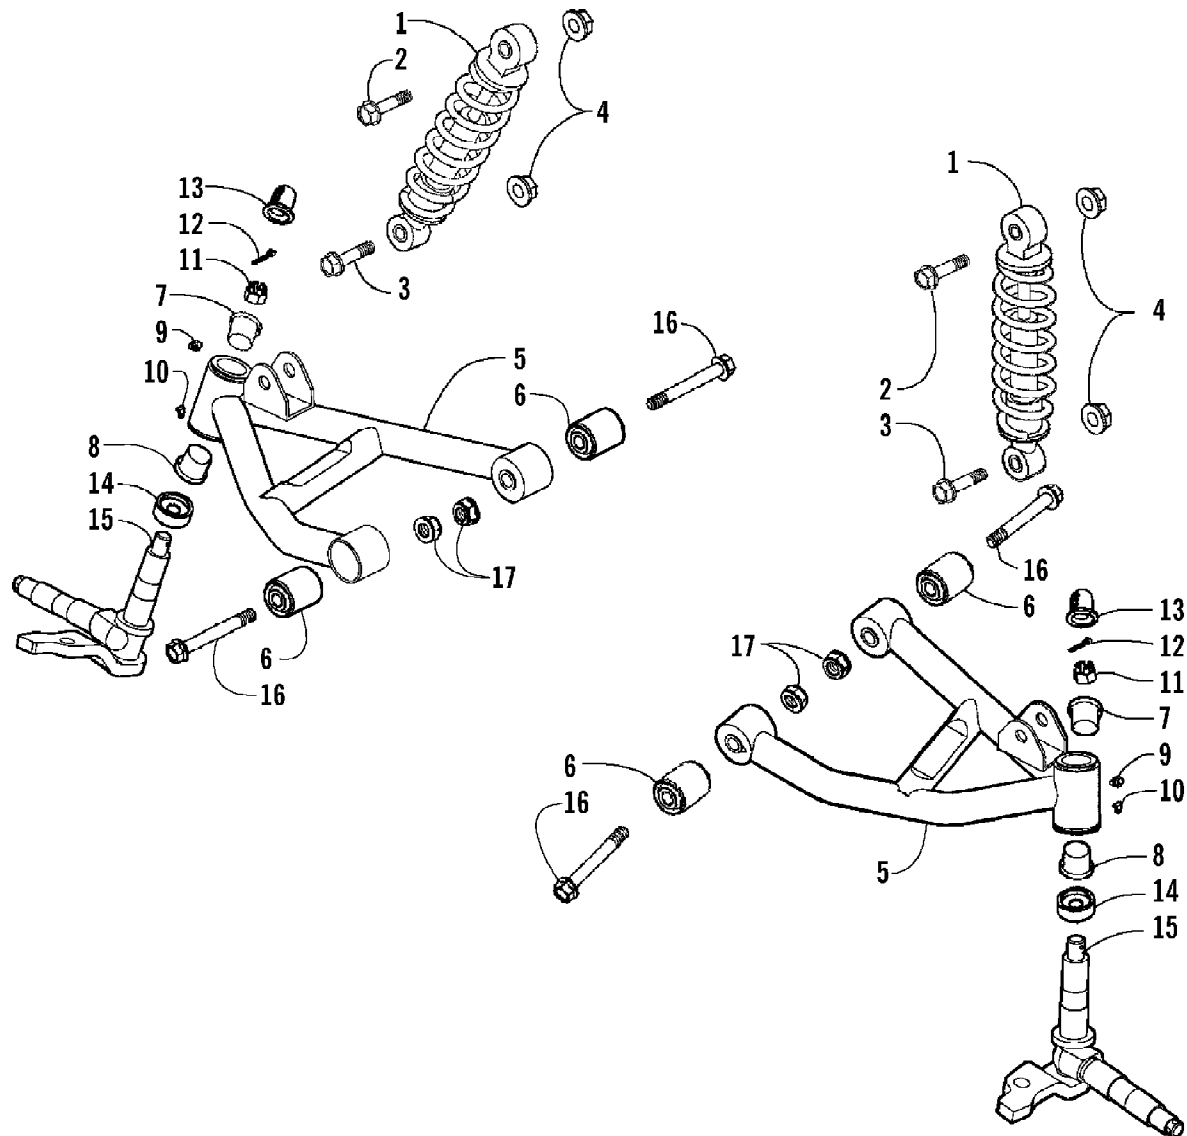


2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
FRONT SUSPENSION ASSEMBLY

Page 26 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	3303-431	2		Shock, Front - Assembly
2	3303-376	2	/P	Bolt, Flange
3	3303-309	2		Bolt, Hex
4	3303-333	4	/P	Nut, Flange
5	3303-438	1		Arm, Swing - Set - Front Right (inc. 6-10)
5	3303-439	1	/P	Arm, Swing - Set - Front Left (inc. 6-10)
6	3303-216	4		Bushing, Swing Arm
7	3303-218	2		Bushing, Swing Arm - Top
8	3303-217	2		Bushing, Swing Arm - Bottom
9	3303-393	2		Fitting, Grease
10	3303-394	2		Boot, Grease Fitting
11	3303-329	2		Nut, Flange Castle
12	3303-337	2		Pin, Cotter
13	3303-219	2		Cap, Swing Arm
14	3303-220	2		Seal, Swing Arm
15	3303-178	1		Shaft, Steering - Right
15	3303-180	1		Shaft, Steering - Left
16	3304-595	4	/P	Bolt, Flange
17	3303-265	4	S	Nut, Flange

2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
FRONT WHEEL AND BRAKE ASSEMBLIES

 Page 27 of 60

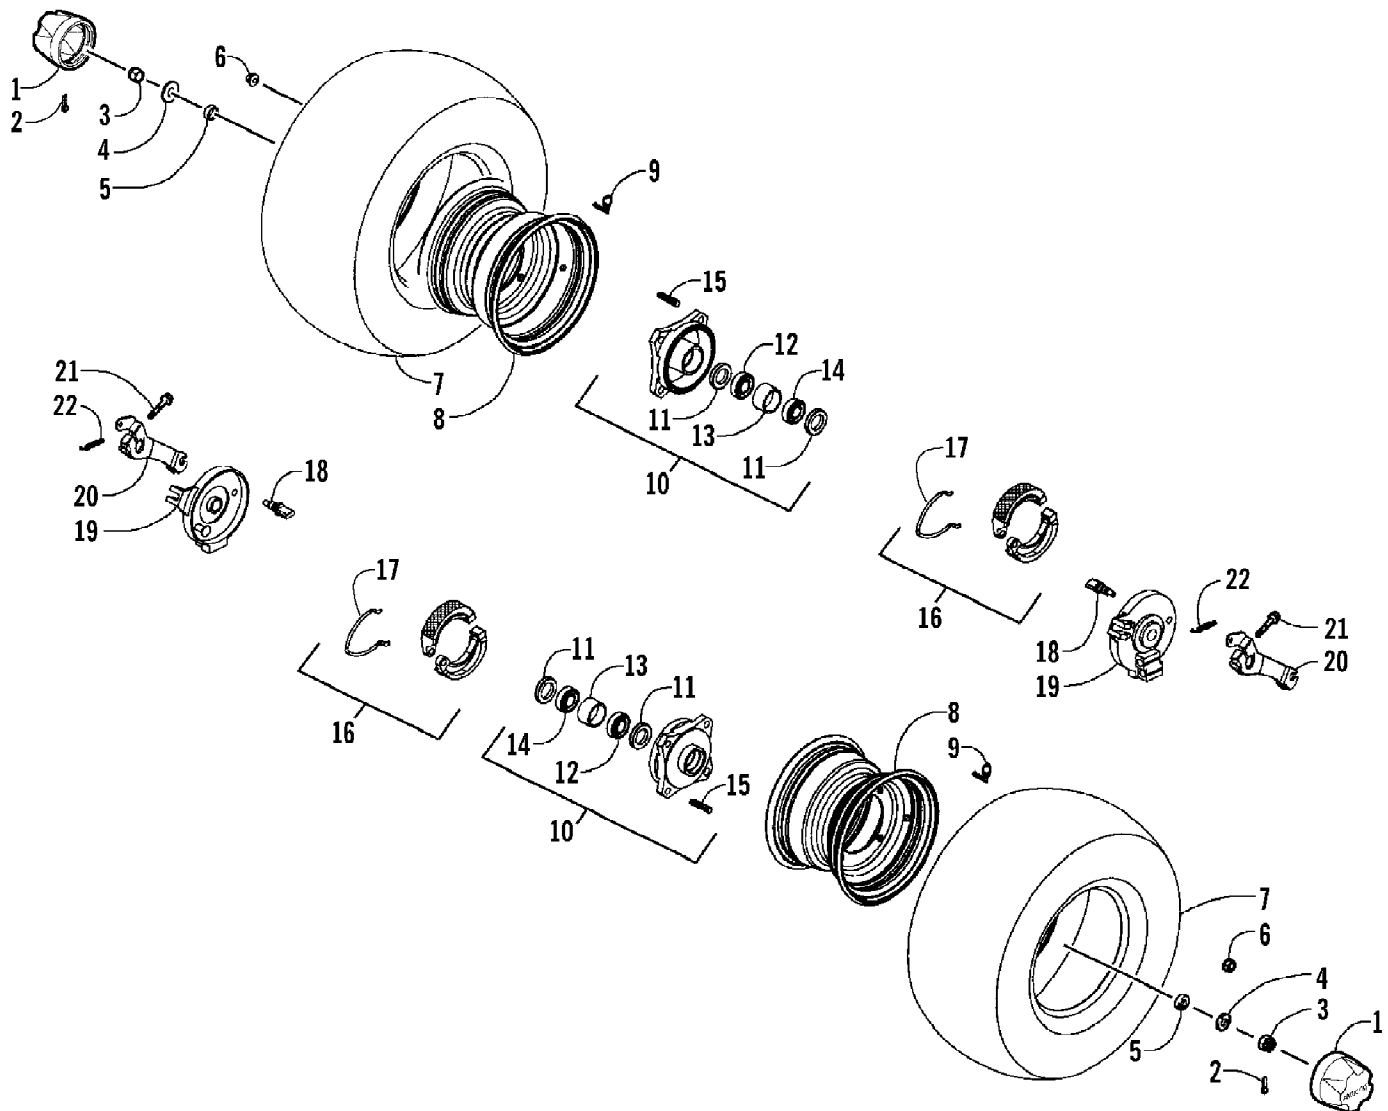

2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
FRONT WHEEL AND BRAKE ASSEMBLIES

Page 28 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	3303-430	2		Cap, Wheel Shaft
2	3303-470	2		Pin, Cotter
3	3303-328	2		Nut, Flange Castle
4	3303-279	2	/P	Washer
5	3303-164	2	/P	Collar, Wheel - Front
6	3303-266	8		Nut, Flange
7	3303-429	2		Tire - Assembly
8	3303-166	2		Rim - Assembly (inc. 9)
9	3304-562	2		Stem, Valve
10	3303-165	2		Hub, Front - Assembly (inc. 11-15)
11	3303-456	4		Seal, Dust
12	3303-468	2		Bearing, Ball - Radial
13	3303-445	2		Collar, Front Disc
14	3303-467	2		Bearing, Ball - Radial
15	3303-463	8		Bolt, Stud
16	3303-169	2		Shoe, Front - Assembly (inc. 17)
17	3304-563	2		Spring, Brake Shoe
18	3303-170	2		Cam, Front Brake
19	3303-168	1		Panel - Front - Right
19	3303-176	1		Panel - Front - Left
20	3303-171	1		Arm, Brake - Right
20	3303-177	1		Arm, Brake - Left
21	3303-355	2		Bolt, Flange
22	3303-172	2		Spring, Return




2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
GAS TANK ASSEMBLY

Page 30 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	3303-067	1		Cap, Gas Tank
2	3303-068	1		Seal, Gas Tank Cap
3	3303-065	1		Gas Tank - Assembly (inc. 4)
4	3303-406	2		Rubber, Gas Tank
5	3303-226	2		Collar
6	3303-383	2	/P	Bolt, Flange
7	3303-353	1		Tube, Gas - Assembly (inc. two No. 8)
8	3303-349	4		Clip
9	3303-056	1	S	Strainer, Fuel - Assembly
10	3303-354	1		Tube, Gas - Assembly (inc. 11)
11	3303-348	2		Clip
12	3303-058	1		Screen, Fuel Strainer
13	3303-066	2		Tube, Gas - Assembly (inc. two No. 8 and 14)
14	3303-351	2		Clamp, Tube
15	3303-070	1		Bracket, Shut-Off Valve
16	3303-331	2	/P	Nut, Flange
17	3303-316	2		Screw
18	3303-057	1		Valve, Shut-Off

2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
HANDLEBAR AND CONTROL ASSEMBLY

 Page 31 of 60

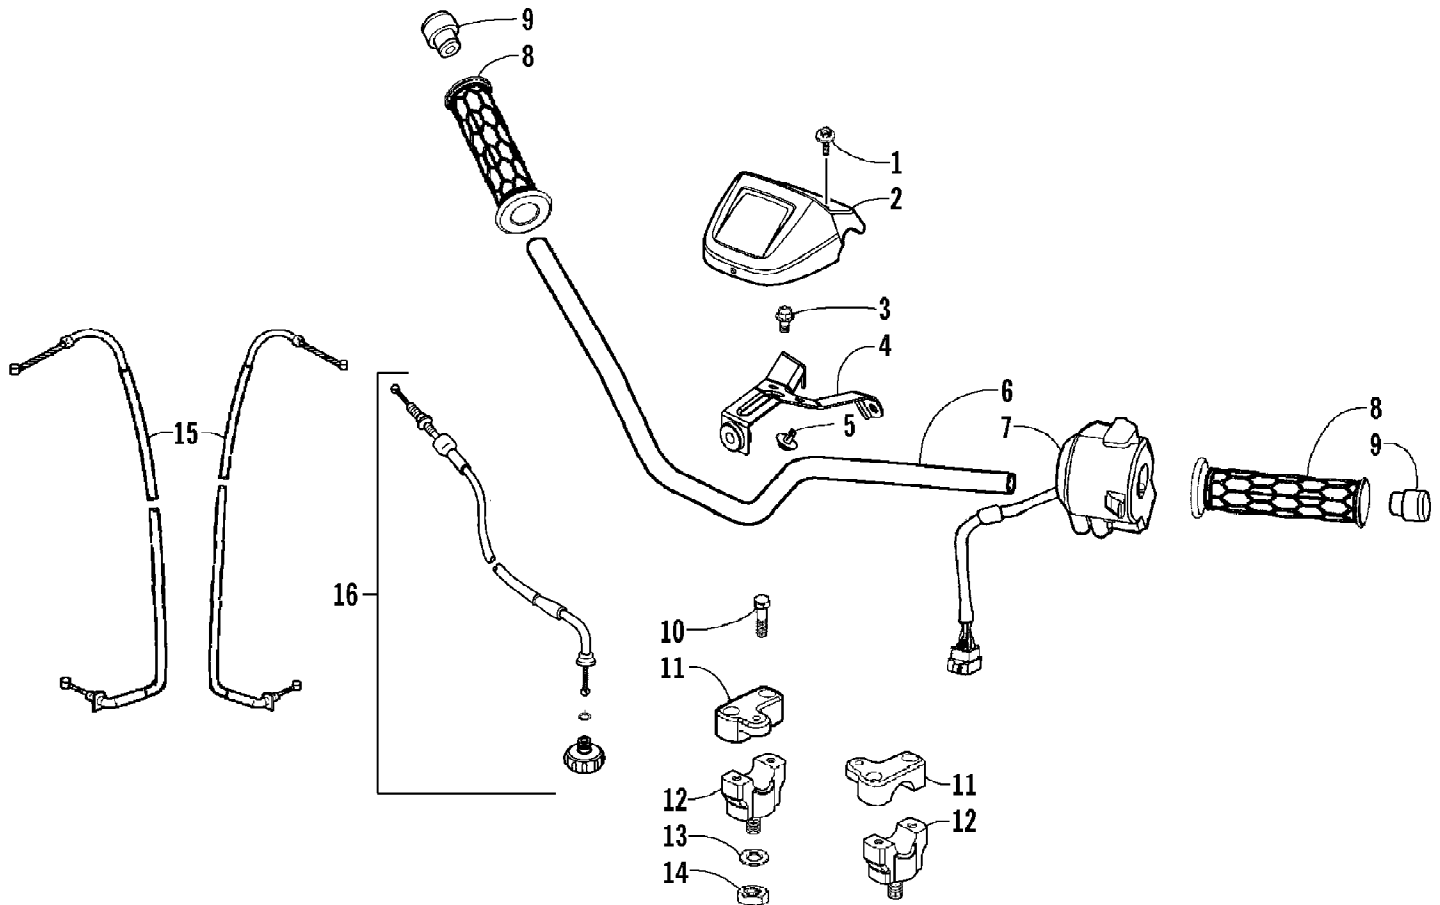


2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
HANDLEBAR AND CONTROL ASSEMBLY

Page 32 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	3304-029	2	/P	Bolt w/Washer
2	3304-501	1		Instrument Pod
3	3304-553	2		Bolt, Flange
4	3304-506	1		Bracket, Instrument Pod
5	3304-552	1		Clip, Mud Guard
6	3303-434	1		Handlebar
7	3303-424	1		Switch, Handlebar - Assembly
8	3303-203	2	S	Grip, Handlebar
9	3303-196	2		End Cap, Handlebar
10	3303-398	4		Bolt, Socket
11	3303-197	1		Holder, Handlebar - Right
11	3303-198	1		Holder, Handlebar - Left
12	3303-199	2		Holder, Handlebar - Lower
13	3303-336	2	S	Washer
14	3303-325	2		Nut, Hex
15	3303-173	2		Cable, Brake - Front
16	1502-096	1	/P	Cable, Throttle - Kit

2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
HYDRAULIC HAND BRAKE ASSEMBLY

 Page 33 of 60

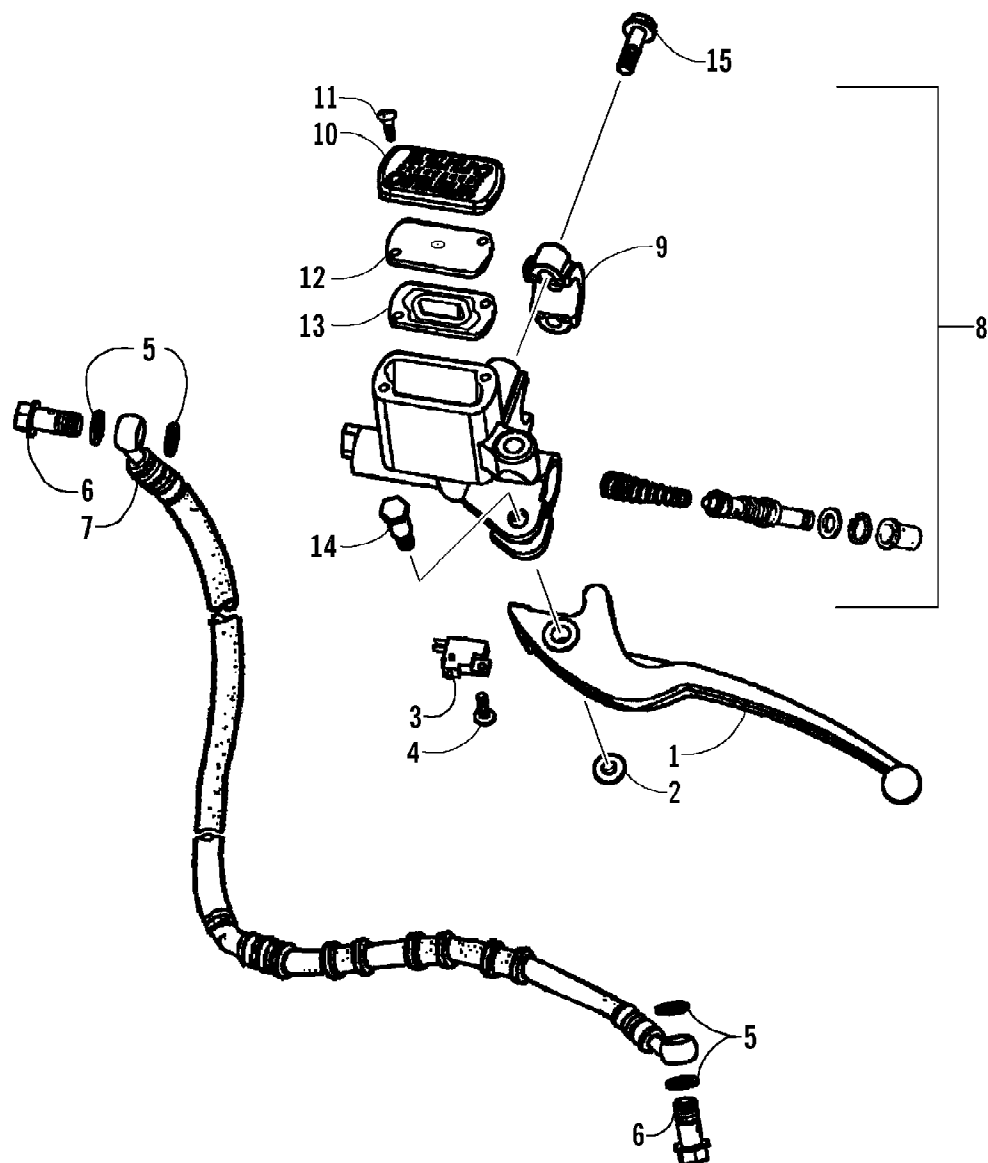



2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
HYDRAULIC HAND BRAKE ASSEMBLY

Page 34 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	3303-206	1	/P	Lever
2	3304-132	1	S	Nut, Flange
3	3303-141	1	/P	Switch Assembly
4	3303-321	1		Screw w/Washer
5	3303-284	4	/P	Washer, Crush
6	3303-257	2	/P	Bolt, Banjo-Fitting
7	3303-160	1		Hose, Brake - Assembly
8	3303-163	1	S/P	Brake, Master Cylinder - Assembly (inc. 9-14)
9	3303-175	1	/P	Clamp, Master Cylinder
10	3303-174	1	/P	Cap, Master Cylinder
11	3303-318	2		Screw, Flat-Head
12	3305-250	1		Plate, Diaphragm
13	3305-309	1		Diaphragm
14	3303-254	1	/P	Bolt, Lever
15	3304-611	2	S	Bolt, Flange

2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
KICK STARTER ASSEMBLY

  Page 35 of 60

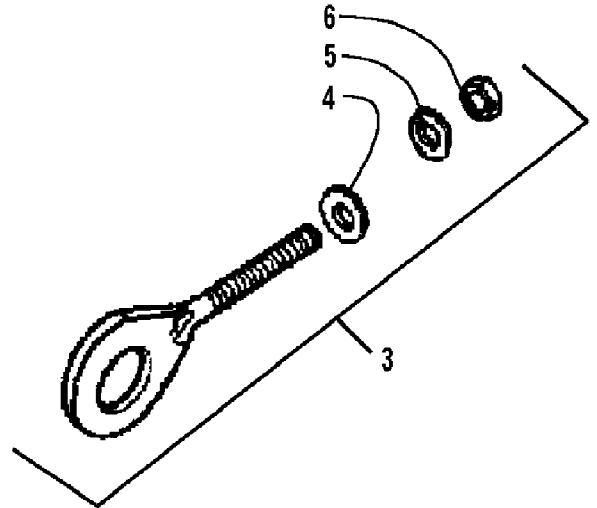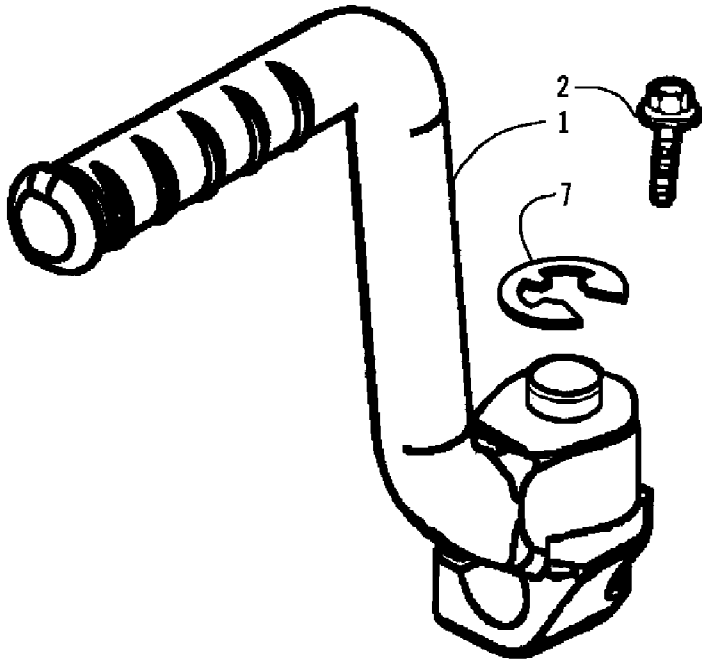


2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
KICK STARTER ASSEMBLY

Page 36 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	3303-549	1	/P	Arm, Kick Starter - Assembly
2	3303-359	2	S	Bolt, Flange
3	3303-147	1		Adjuster, Drive Train - Assembly (inc. 4-6)
4	3303-607	1	/P	Washer
5	3304-135	1	/P	Washer, Spring
6	3304-125	1		Nut, Hex
7	3305-247	1	/P	E-Clip

2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
PISTON ASSEMBLY

 Page 37 of 60

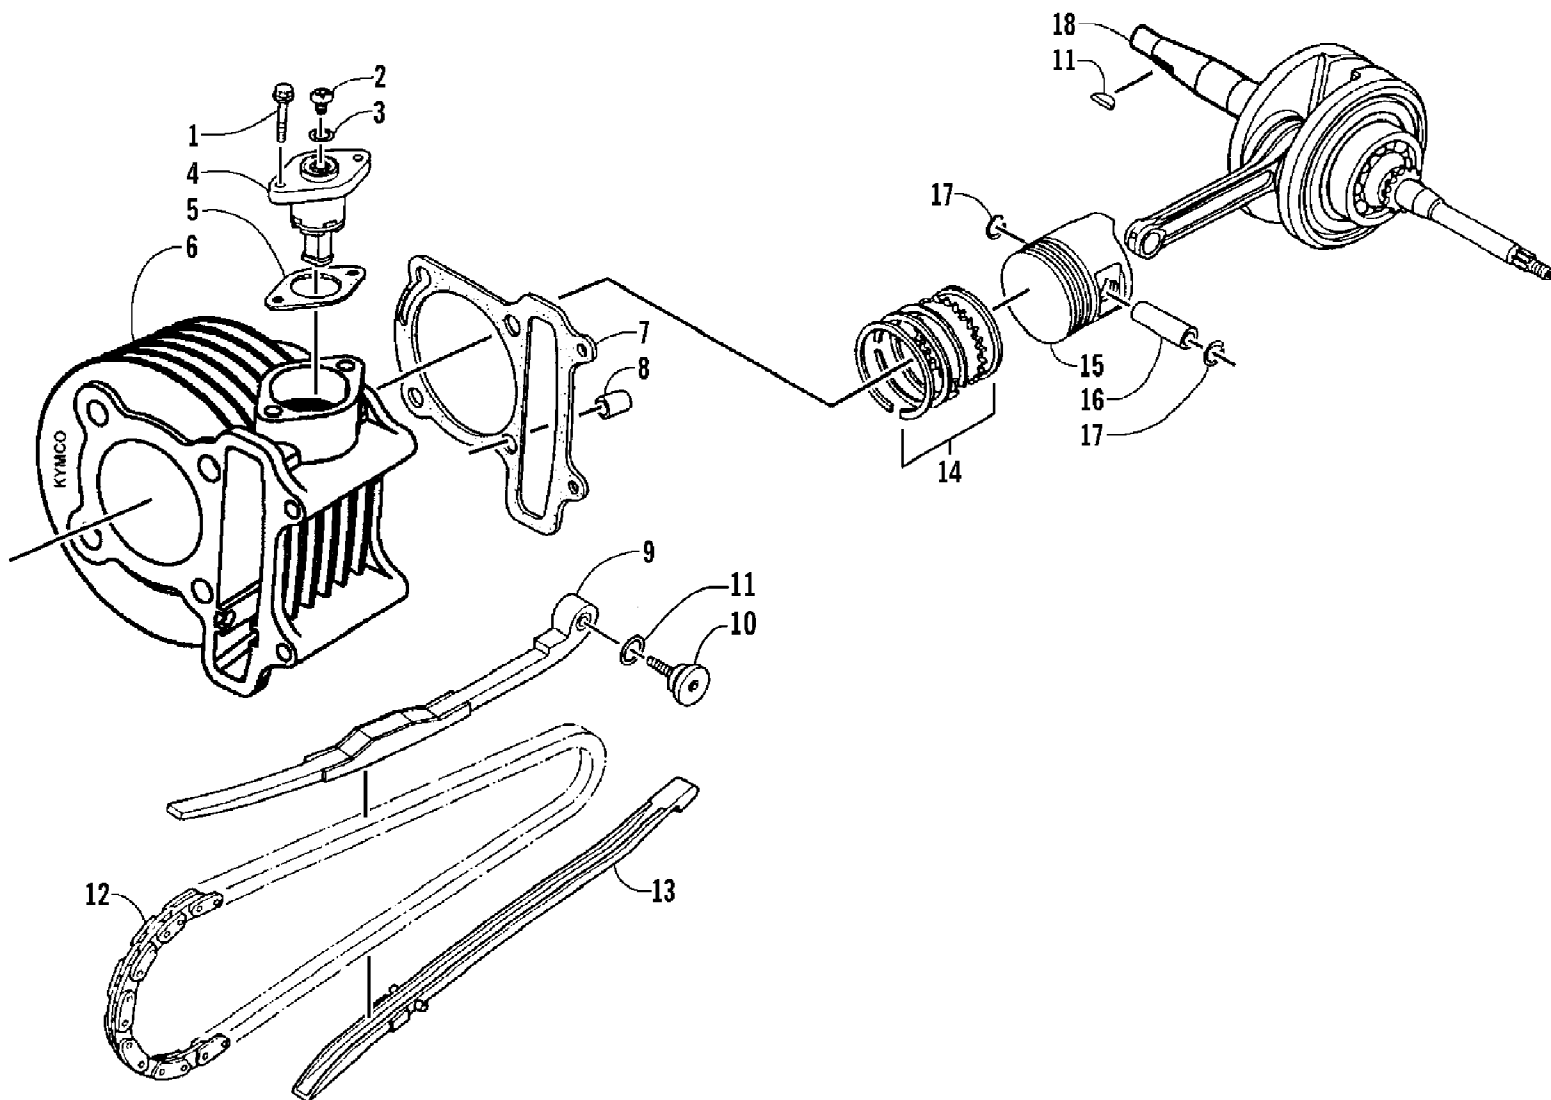


2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
PISTON ASSEMBLY

Page 38 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	3303-243	2	S	Bolt, Flange
2	3303-244	1		Screw
3	3303-305	1	S	O-Ring
4	3303-677	1		Adjuster, Cam Chain
5	3303-035	1		Gasket, Cam Chain Adjuster
6	3303-014	1		Cylinder A
7	3303-015	1		Gasket, Cylinder A
8	3303-342	2		Pin, Dowel
9	3303-034	1		Tensioner, Cam Chain
10	3303-036	1		Pivot, Cam Chain Tensioner
11	3303-301	1	/P	O-Ring
12	3303-030	1		Cam Chain
13	3303-037	1		Guide, Cam Chain
14	3303-024	1		Ring, Piston - Set
15	3303-025	1		Piston
16	3303-026	1		Pin, Piston
17	3303-027	2		Clip, Piston Pin
18	3303-023	1		Crankshaft
19	3303-290	1		Key

2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
REAR AXLE ASSEMBLY

 Page 39 of 60

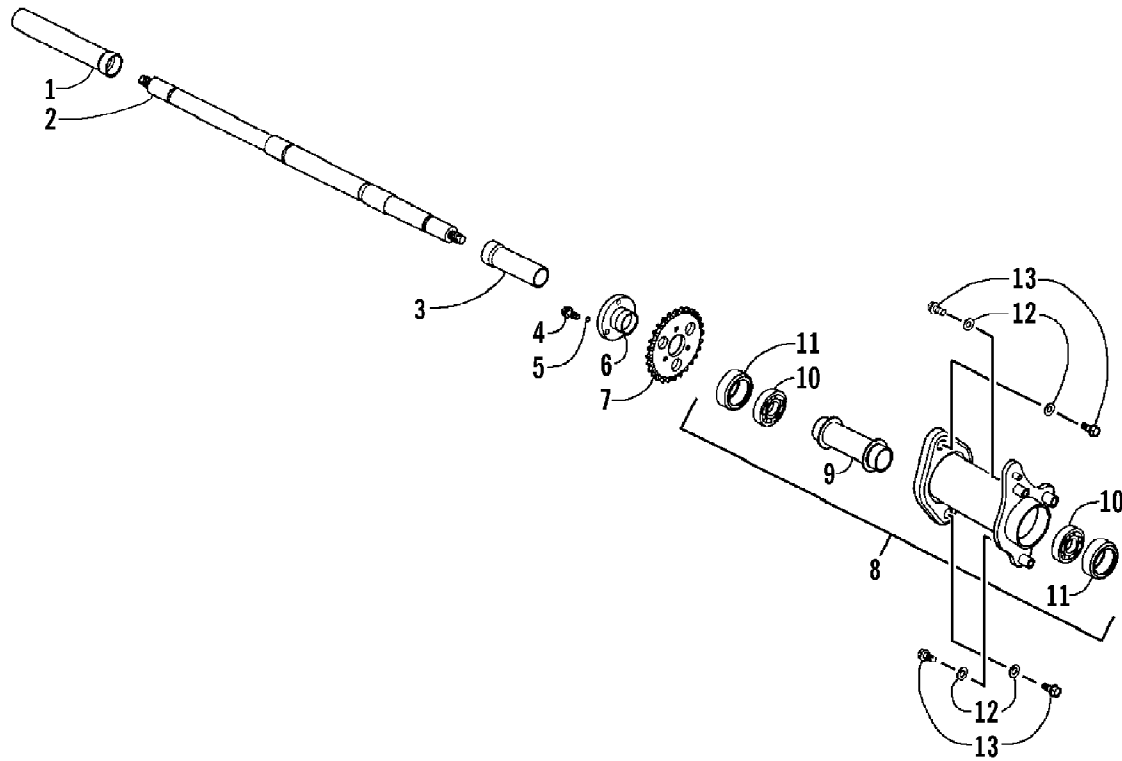


2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
 REAR AXLE ASSEMBLY

Page 40 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	3303-152	1		Spacer, Rear Wheel - Right
2	3303-151	1		Shaft, Rear Wheel
3	3303-153	1		Spacer, Rear Wheel - Left
4	3304-565	3	/P	Bolt, Flange
5	3303-607	3	/P	Washer, Spring
6	3303-149	1		Holder, Sprocket
7	3303-426	1		Sprocket, Final Drive
8	3303-154	1	S	Hub, Rear - Assembly (inc. 9-11)
9	3303-427	1		Collar, Hub - Right
10	3303-466	2		Bearing
11	3303-461	2		Seal, Dust
12	3303-281	4		Washer
13	3303-379	4		Bolt, Flange

2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
REAR SUSPENSION ASSEMBLY

 Page 41 of 60

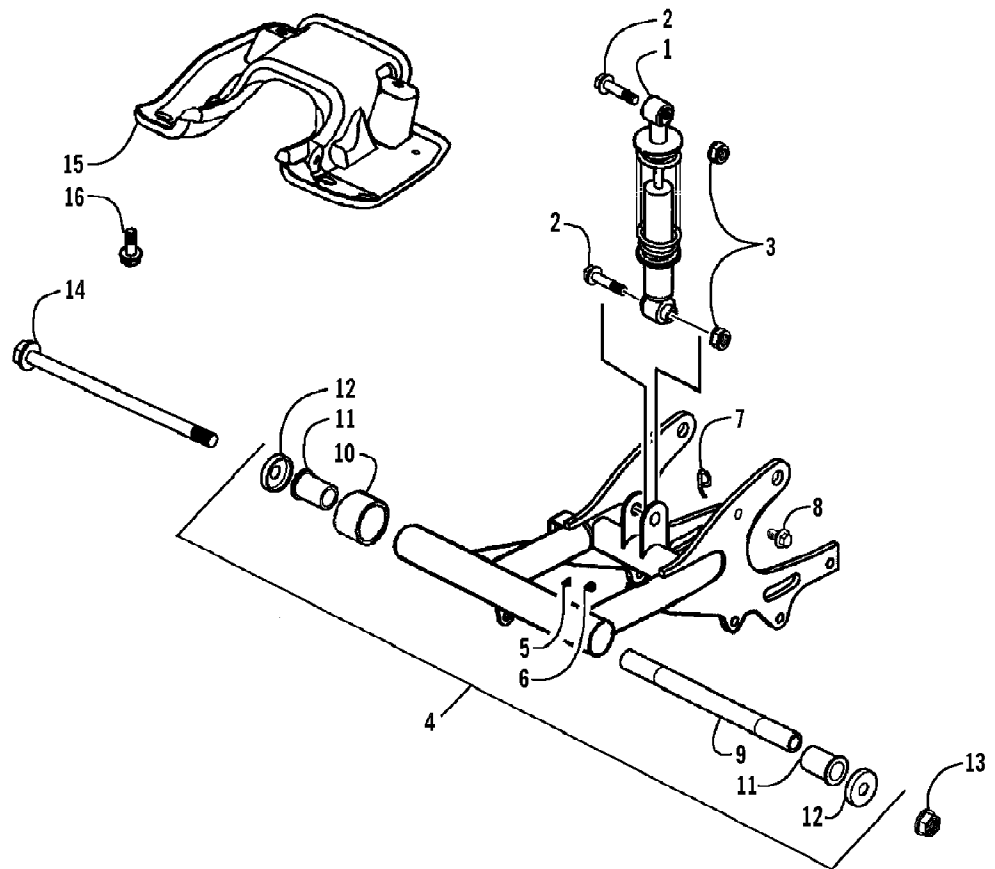


2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
 REAR SUSPENSION ASSEMBLY

Page 42 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	3303-433	1		Shock, Rear - Assembly
2	3303-376	2	/P	Bolt, Flange
3	3303-265	2	S	Nut, Flange
4	3303-432	1	/P	Fork, Rear - Assembly (inc. 5-12)
5	3303-394	1		Boot, Grease Fitting
6	3303-393	1		Fitting, Grease
7	3304-594	1		Clamp, Brake Hose
8	3303-356	1	/P	Bolt
9	3303-189	1		Axle, Rear Fork
10	3303-190	1		Sleeve, Rubber
11	3303-191	2		Bushing, Rear Fork
12	3303-192	2		Cap, Rear Fork
13	3304-032	1		Nut
14	3303-150	1		Bolt, Rear Fork
15	3304-593	1		Guard, Rear Fork
16	3304-587	4	/P	Bolt, Flange

2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
REAR WHEEL AND BRAKE ASSEMBLIES

 Page 43 of 60

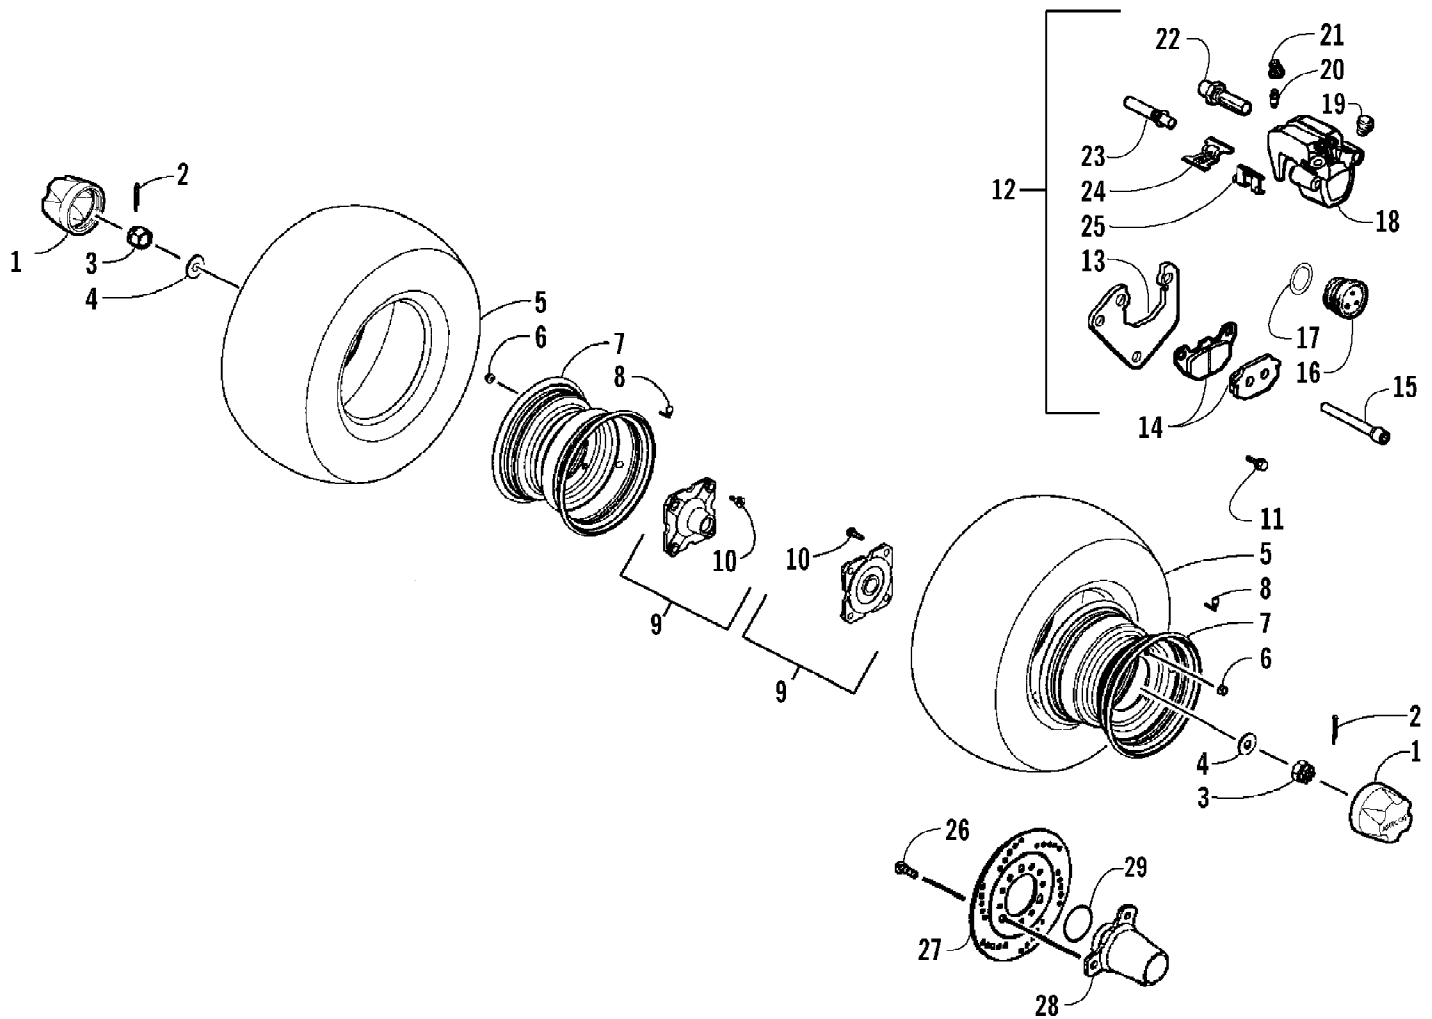

2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
REAR WHEEL AND BRAKE ASSEMBLIES

Page 44 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	3303-430	2		Cap, Wheel Shaft
2	3303-340	2		Pin, Cotter
3	3303-330	2		Nut, Flange Castle
4	3305-285	2		Washer
5	3303-428	2		Tire - Rear
6	3303-266	8		Nut, Flange
7	3303-156	2		Rim - Assembly (inc. 8)
8	3304-562	2		Stem, Valve
9	3304-564	2	S	Connector - Assembly (inc. 10)
10	3303-250	8		Bolt, Connector
11	3303-256	2		Bolt, Flange
12	3303-568	1	/P	Caliper, Rear - Assembly (inc. 13-25)
13	3303-469	1	/P	Bracket
14	3304-567	1	/P	Pad, Brake - Assembly
15	0	2	F	Pin, Bolt
16	3304-592	1	S	Piston
17	3304-327	1	S	Seal, Piston
18	0	1	F	Housing, Caliper - Assembly
19	3304-333	1		Plug
20	3304-302	1		Valve, Bleed
21	3304-303	1		Cap, Bleed Valve
22	3304-589	1		Bushing, Pin Bolt
23	3304-590	1		Boot B
24	3304-591	1		Spring, Brake Pad
25	3304-316	1	S	Seal, Dust
26	3303-253	3	/P	Bolt, Disc
27	3303-162	1		Disc, Brake - Rear
28	3303-161	1		Collar, Hub - Rear
29	3305-298	1		O-Ring

No
Diagram
Available

Parts List
Only


2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
RELATED ITEMS

Page 46 of 60

Ref #	Part Number	Qty	S/P/F	Description
	0436-431	1		Cover, Green and Black
	2257-522	1		Manual, Illustrated Parts
	2257-317	1		Manual, Operator's (E)
	2257-318	1		Manuel d'utilisation (F)
	0436-005	1	S	Oil, Engine - 10W40
	0436-003	1	S	Oil, Engine - 5W30
	0436-447	1		Windshield

2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
SEAT AND TOOL KIT ASSEMBLY

 Page 47 of 60

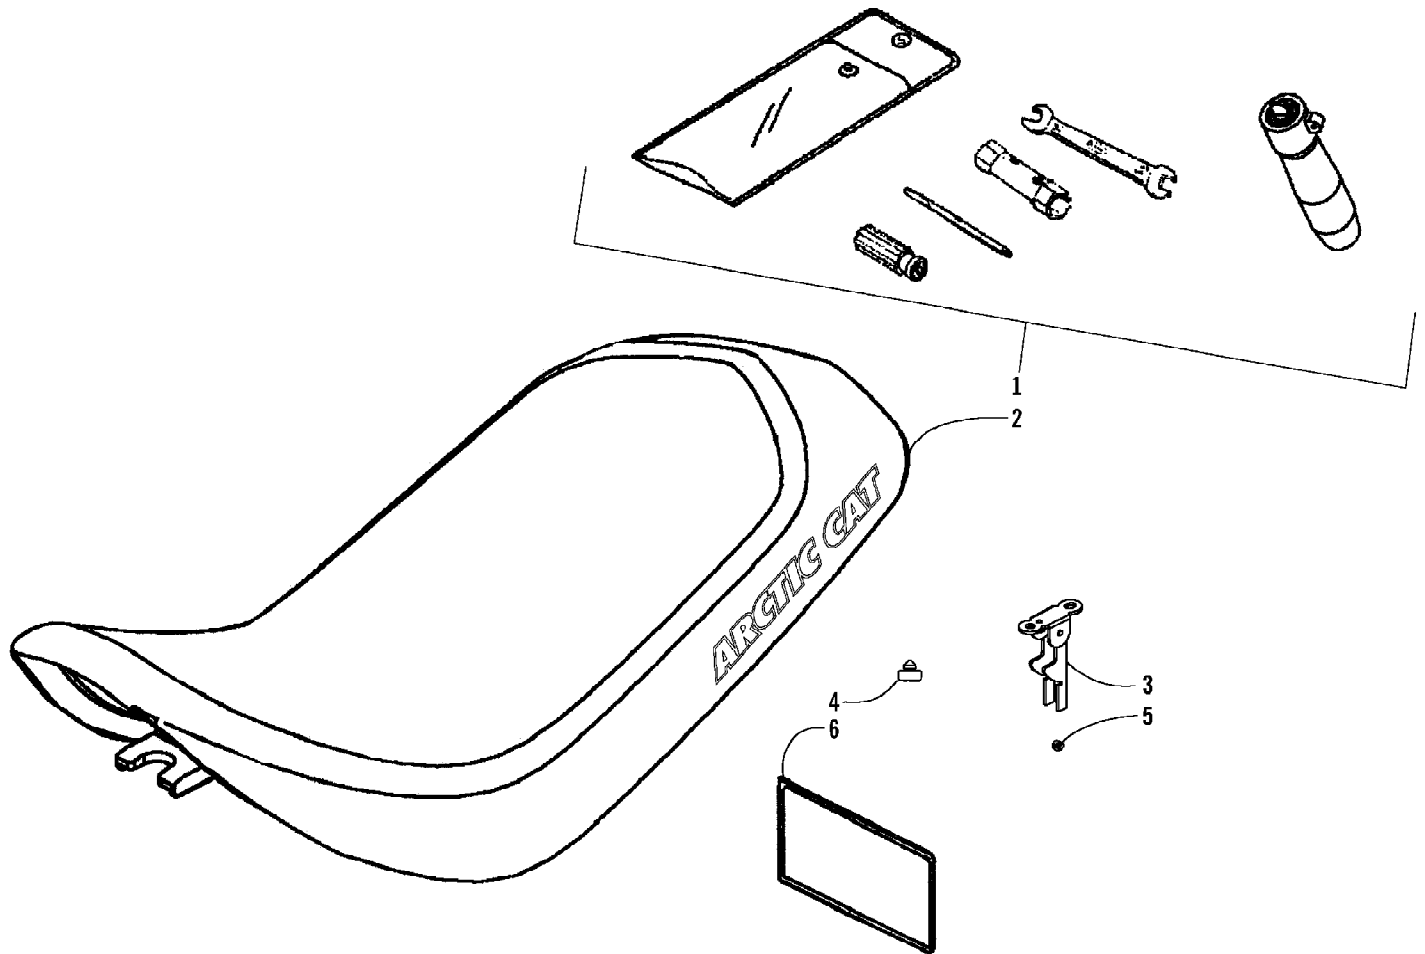

2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
SEAT AND TOOL KIT ASSEMBLY

Page 48 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	3303-578	1	/P	Tool - Kit
2	3304-497	1	/P	Seat - Assembly (inc. 3-5)
3	3304-392	1		Latch, Seat - Assembly
4	3304-568	2		Rubber, Seat Cushion
5	3303-331	2	/P	Nut, Flange
6	3303-242	1		Band, Tool Kit


2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
STARTER MOTOR AND OIL PUMP ASSEMBLIES

Page 50 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	3303-045	1		Pump, Oil - Assembly (inc. 2-3)
2	3304-426	1		Screw, Pan Head
3	3304-144	1		Pin, Dowel
4	3303-384	4	/P	Bolt, Flange
5	3303-046	1		Sprocket
6	3303-331	1	/P	Nut, Flange
7	3303-047	1		Chain, Oil Pump
8	3303-381	2		Bolt, Flange
9	3303-051	1		Separator, Oil
10	3303-282	2		Washer
11	3303-110	1		Shaft, Starter Reduction
12	3303-109	1		Gear, Starter Reduction
13	3304-639	1	/P	Motor, Starter - Assembly
14	3303-604	1		O-Ring
15	3303-115	1		Boss, Starter Clutch
16	3303-293	3		Roller
17	3303-114	3		Roller, Starter
18	3303-113	3		Spring, Roller - Outer Clutch
19	3303-395	1		Roller
20	3303-396	3		Bolt
21	3303-112	1		Clutch, Outer
22	3303-111	1		Gear, Starter
23	3303-292	1		Bearing, Ball
24	3303-285	1		Circlip
25	3303-258	1		Nut
26	3303-130	1		Holder, Starter

2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
STATOR, FLYWHEEL, AND ENGINE SHROUD ASSEMBLIES

 Page 51 of 60

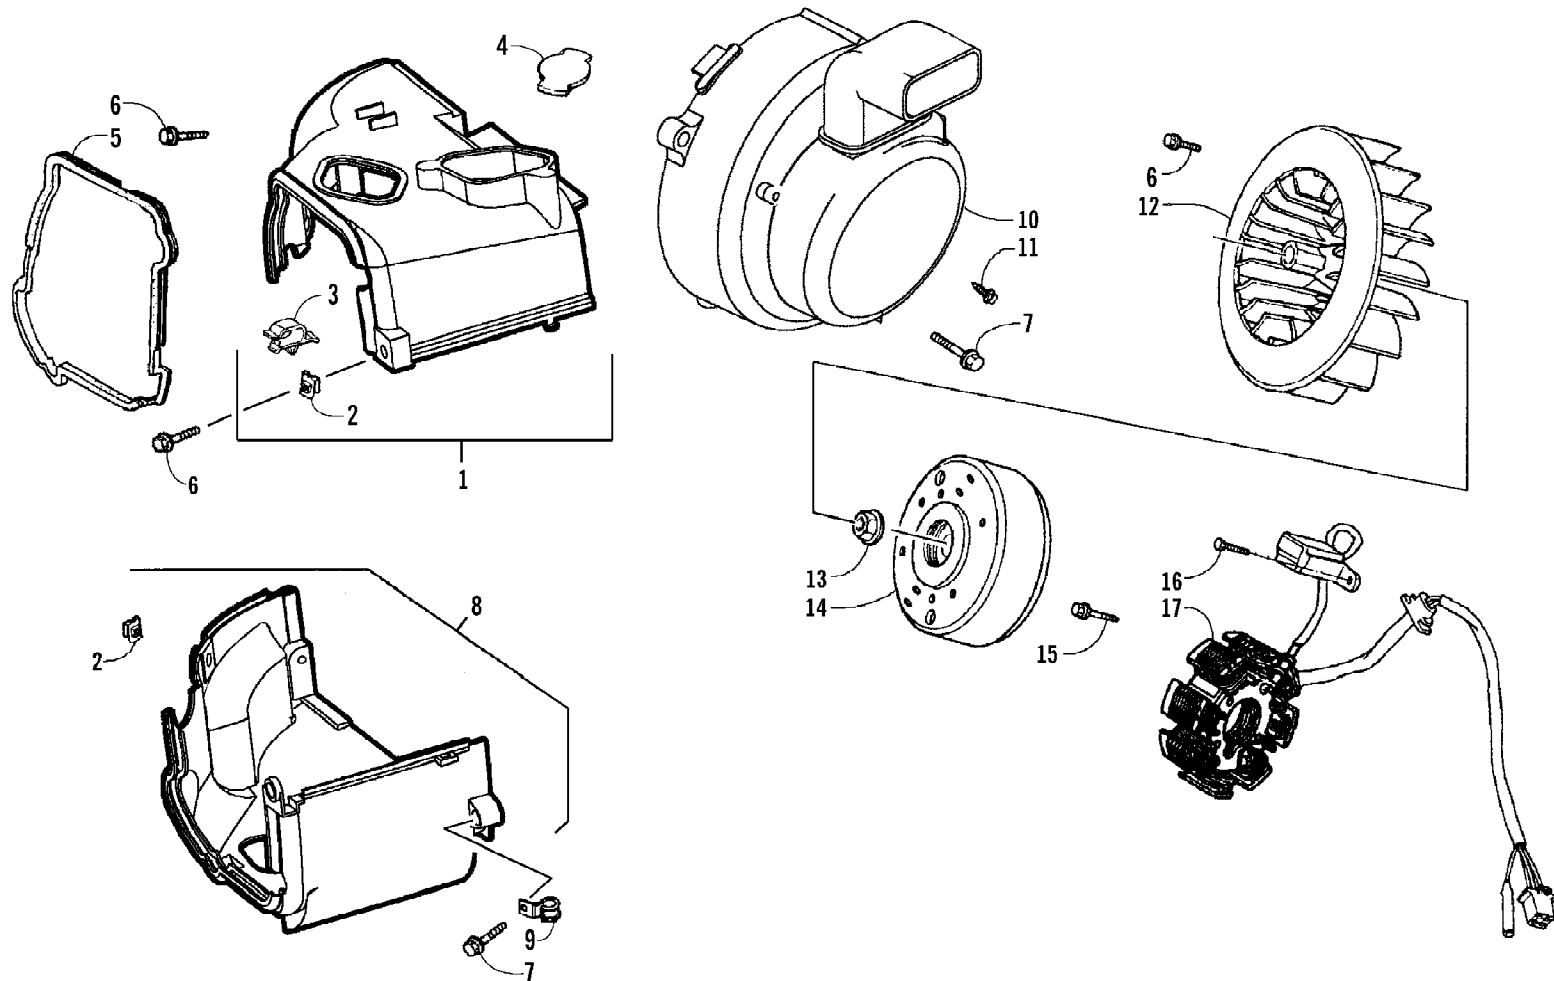

2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)


Page 52 of 60

STATOR, FLYWHEEL, AND ENGINE SHROUD ASSEMBLIES

Ref #	Part Number	Qty	S/P/F	Description
1	3303-079	1		Shroud B - Assembly (inc. one No. 2 and 3-4)
2	3303-267	2		Nut, Clip
3	3303-443	1	/P	Clip, Vacuum Tube
4	3303-408	1		Grommet, Shroud
5	3303-077	1		Seal, Shroud
6	3303-382	6	/P	Bolt, Flange
7	3303-384	3	/P	Bolt, Flange
8	3303-078	1		Shroud A - Assembly (inc. one No. 2)
9	3304-640	1		Clamp, Carburetor Drain Tube
10	3303-076	1		Cover, Fan - Assembly
11	3304-585	2	/P	Screw, Self-Tapping
12	3303-075	1		Fan, Cooling
13	3303-333	1	/P	Nut, Flange
14	3303-127	1		Flywheel (A) D402
14	3303-414	1		Flywheel (B) D406
14	3303-415	1		Flywheel (C) D414
15	3303-383	2	/P	Bolt, Flange
16	3303-308	2		Bolt
17	3304-641	1		Stator - Assembly (O) D402
17	3305-254	1	/P	Stator - Assembly (A) D406
17	3305-256	1	/P	Stator - Assembly (B) D414

2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
STEERING POST ASSEMBLY

 Page 53 of 60

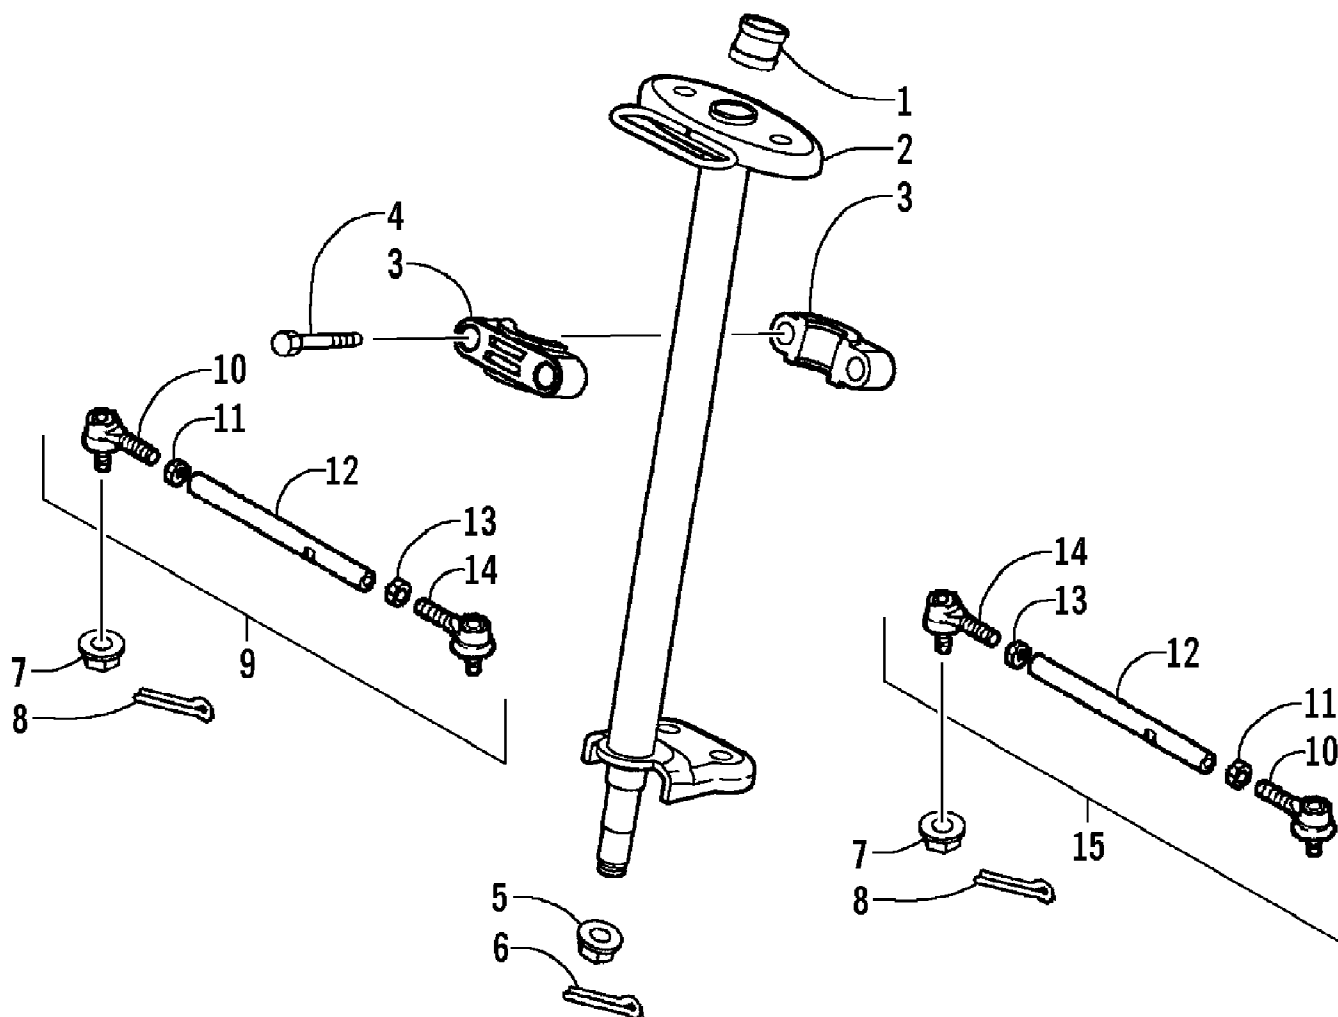


2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
STEERING POST ASSEMBLY

Page 54 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	3303-214	1	S	Sleeve, Steering Post
2	3303-573	1	/P	Post, Steering
3	3303-213	2		Holder, Steering Post
4	3304-559	2		Bolt, Flange
5	3304-032	1		Nut
6	3303-470	1		Pin, Cotter
7	3303-266	4		Nut, Flange
8	3303-621	4	/P	Pin, Cotter
9	3303-448	1		Tie Rod Assembly - Right (inc. one No. 10-14)
10	3303-223	2		Ball Joint, Tie Rod - Right
11	3303-327	2		Nut, Hex
12	3303-222	2		Tie Rod
13	3303-326	2		Nut, Hex
14	3303-224	2		Ball Joint, Tie Rod - Left
15	3303-449	1		Tie Rod Assembly - Left (inc. one No. 10-14)

2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
TAILLIGHT ASSEMBLY

 
Page 55 of 60

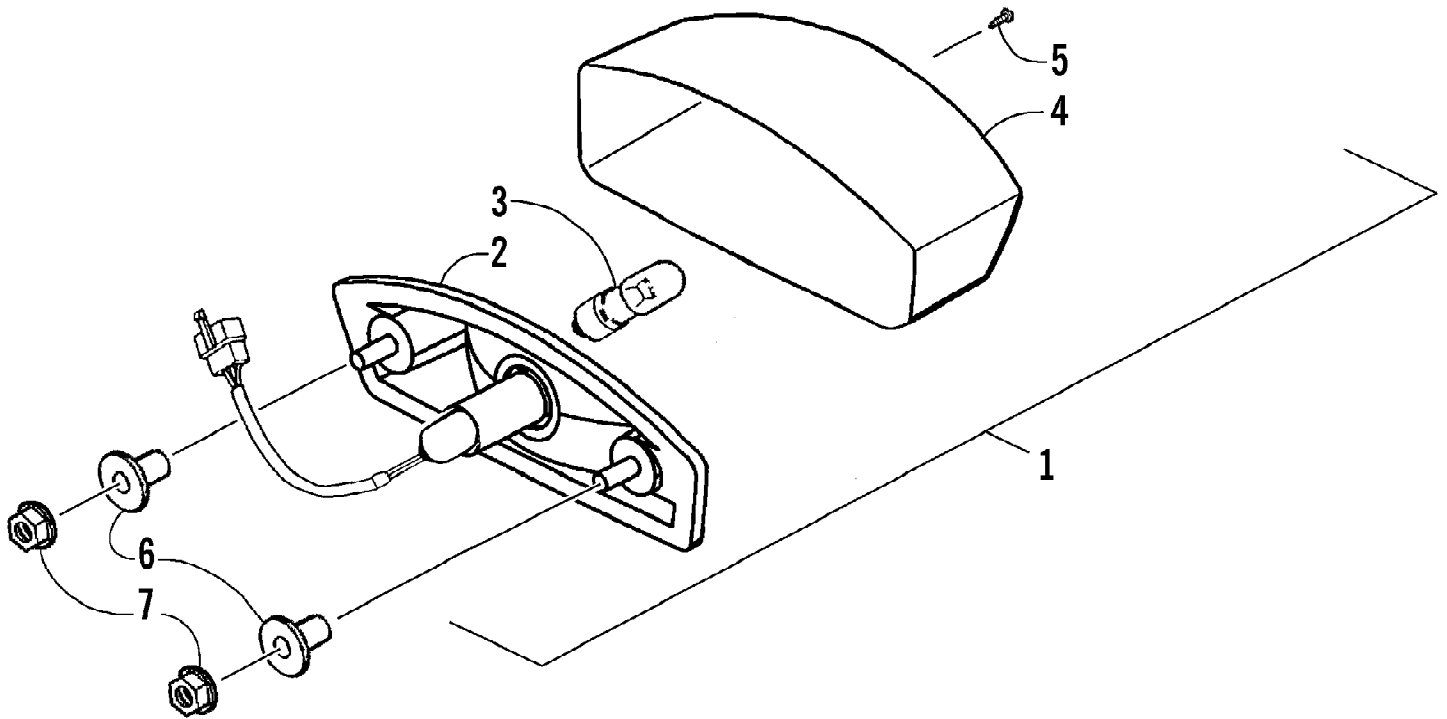

2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
TAILLIGHT ASSEMBLY

Page 56 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	3303-420	1		Taillight - Assembly (inc. 2-5)
2	3303-422	1		Base, Taillight
3	3303-444	1	S	Bulb, Taillight
4	3303-421	1	/P	Lens, Taillight
5	3304-537	2		Screw
6	3303-226	2		Collar, Front Fender
7	3303-331	2	/P	Nut, Flange

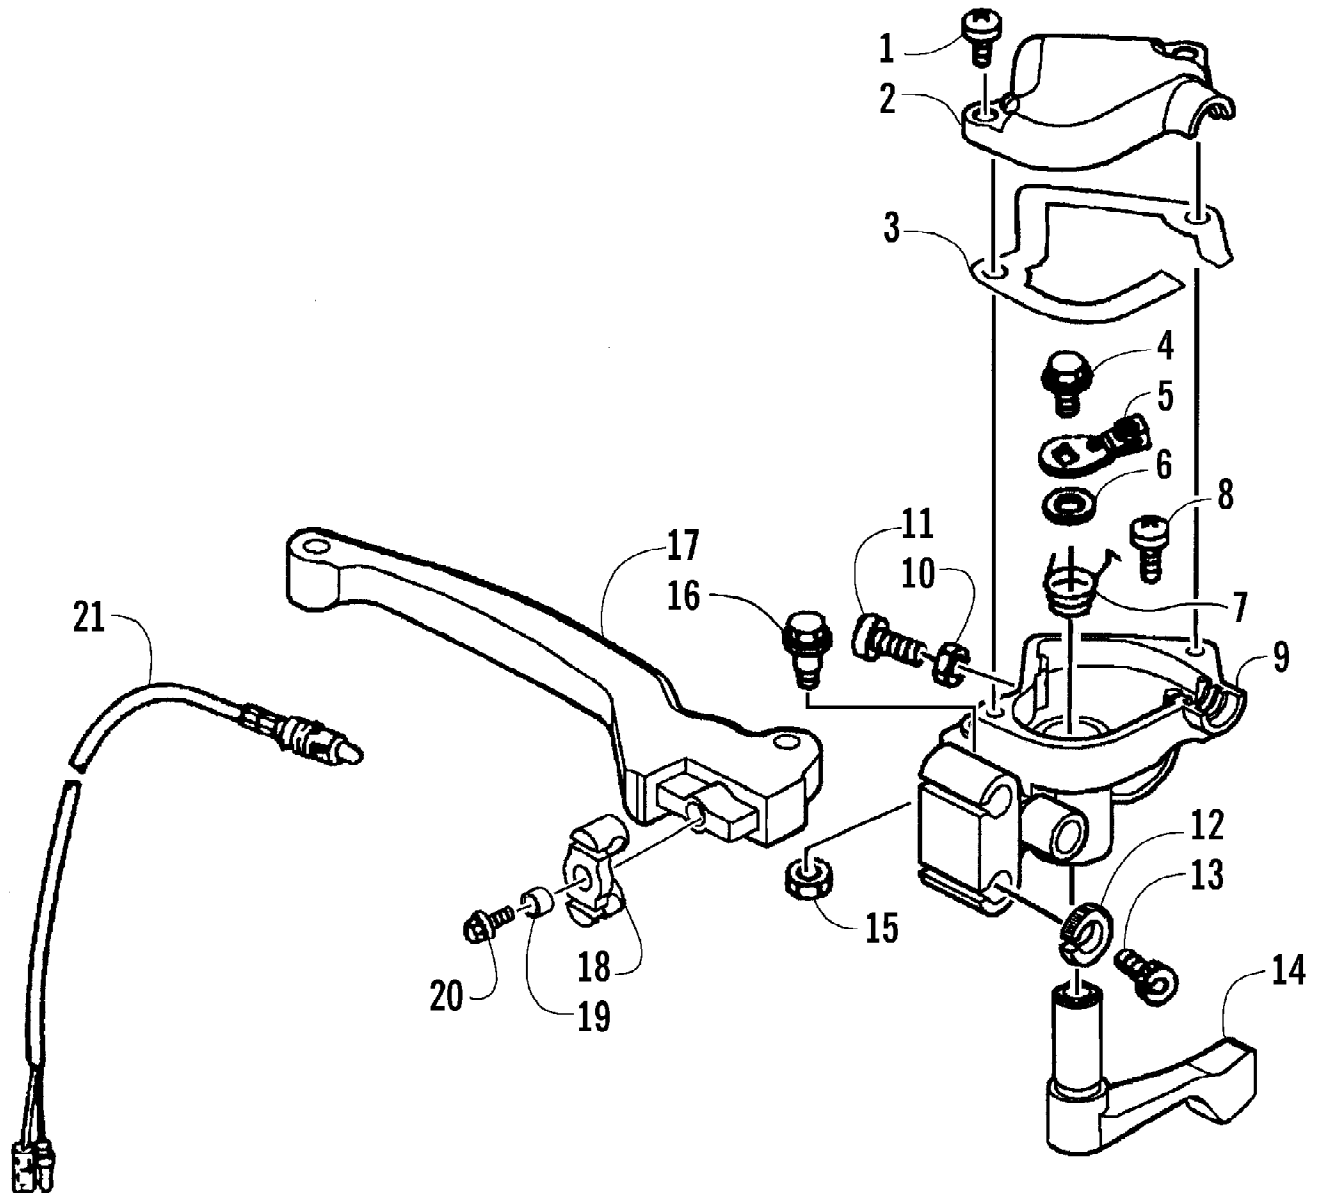 


2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
THROTTLE CONTROL ASSEMBLY

Page 58 of 60

Ref #	Part Number	Qty	S/P/F	Description
	3303-447	1		Complete Throttle Control Assembly
1	3303-315	2		Bolt, Flange
2	3303-207	1		Cover, Throttle Control
3	3303-209	1		Gasket, Throttle Control Cover
4	3304-554	1		Screw
5	3304-555	1		Cover, Parking Brake
6	3304-556	1		Button, Parking Brake
7	3304-557	1		Stopper, Parking Brake
8	3303-397	1		Bolt, Socket
9	3303-204	1		Case, Throttle Control
10	3303-324	1		Nut, Hex
11	3304-558	1		Screw
12	3303-271	2		Nut, Lock
13	3303-208	2		Bolt, Wire Adjustment
14	3303-200	1		Lever, Throttle
15	3303-262	1		Nut
16	3303-255	1		Bolt
17	3303-205	1		Lever, Brake
18	3303-201	1		Equalizer, Brake Cable
19	3303-202	1		Spacer
20	3303-558	1		Bolt, Flange
21	3303-140	1		Switch, Brake

2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
TRANSMISSION ASSEMBLY

 Page 59 of 60

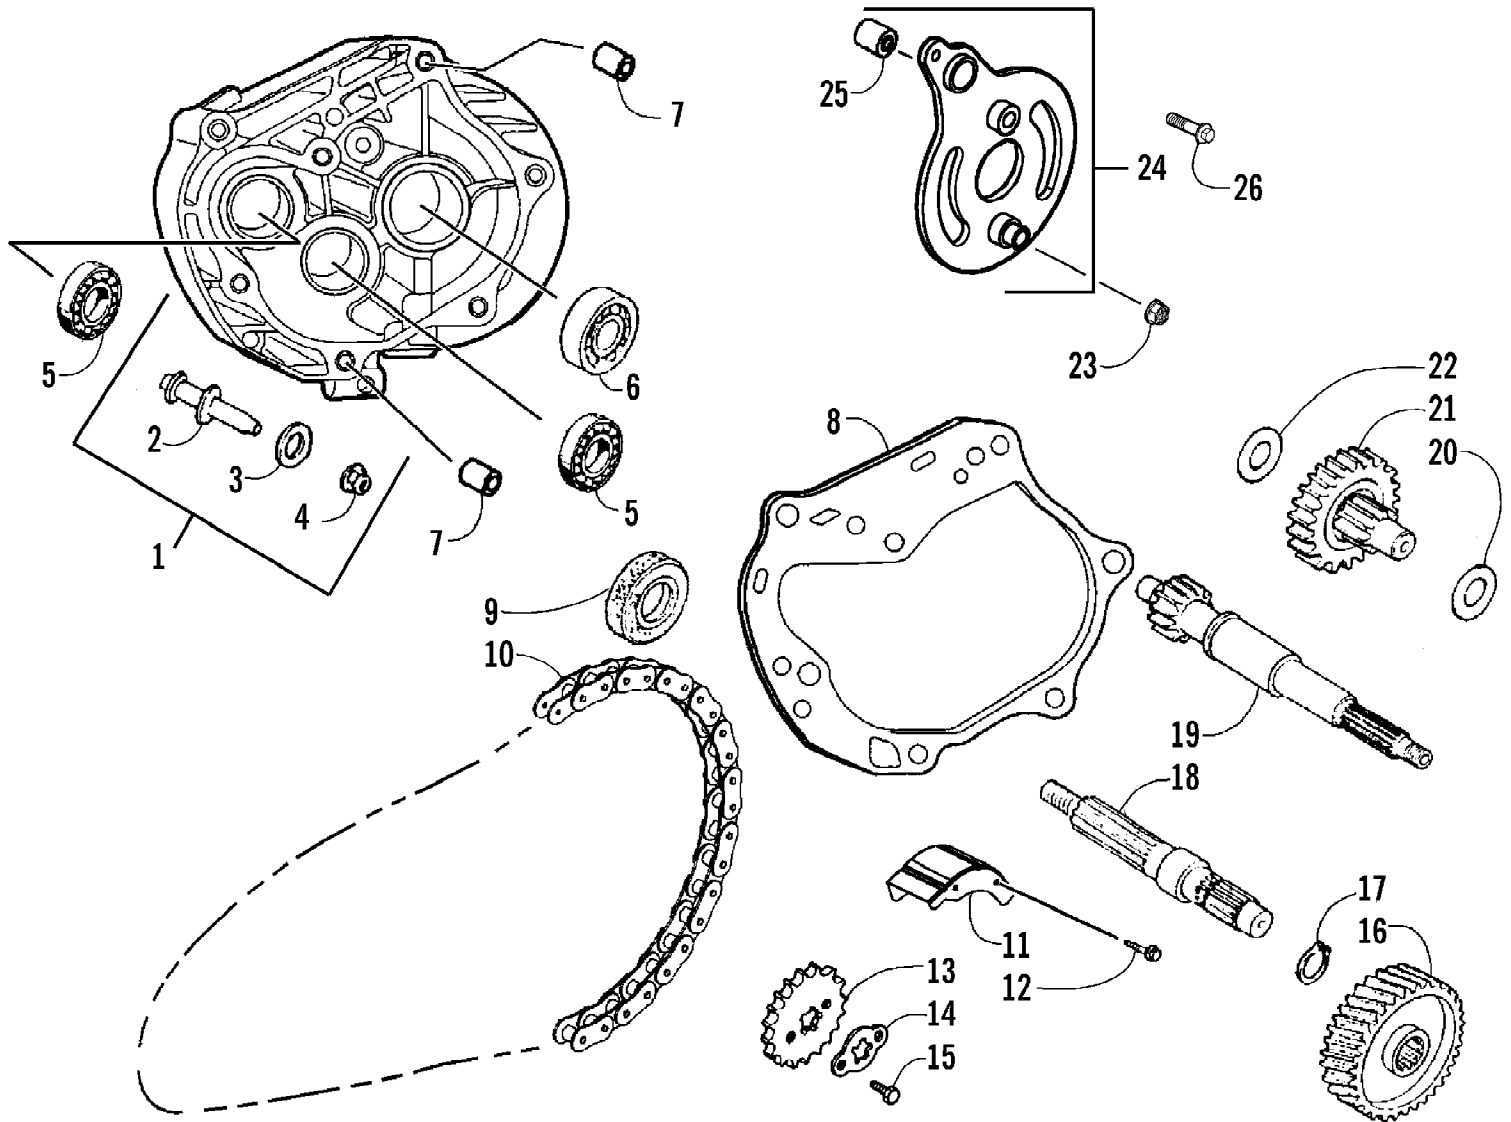

2006 ATV 90 UTILITY GREEN (A2006KUB2BUSG)
TRANSMISSION ASSEMBLY

Page 60 of 60

Ref #	Part Number	Qty	S/P/F	Description
1	3303-080	1		Case, Transmission - Set (inc. 2-6)
2	3304-606	1	/P	Bolt, Engine Brake
3	3303-462	1		O-Ring
4	3303-270	1		Nut, Flange
5	3303-596	2	/P	Bearing, Ball
6	3303-458	1	S	Bearing, Ball
7	3303-343	2		Pin, Dowel
8	3303-081	1		Gasket, Transmission Case A
9	3303-300	1		Seal, Oil
10	3303-425	1		Chain, Drive
11	3303-144	1		Cover, Chain
12	3304-610	2		Bolt, Flange
13	3304-609	1	S	Sprocket, Drive
14	3303-108	1		Plate
15	3303-307	2		Bolt
16	3303-106	1		Gear, Final
17	3303-344	1		Circlip
18	3303-105	1		Shaft, Final
19	3303-103	1		Driveshaft
20	3303-275	1	/P	Washer
21	3303-104	1		Countershaft - Assembly
22	3303-273	1		Washer
23	3303-268	2		Nut, Flange
24	3303-185	1	/P	Bracket, Engine Hanger - Assembly (inc. 25)
25	3303-403	1		Bushing, Rubber
26	3304-607	1		Bolt, Flange