 
 
 


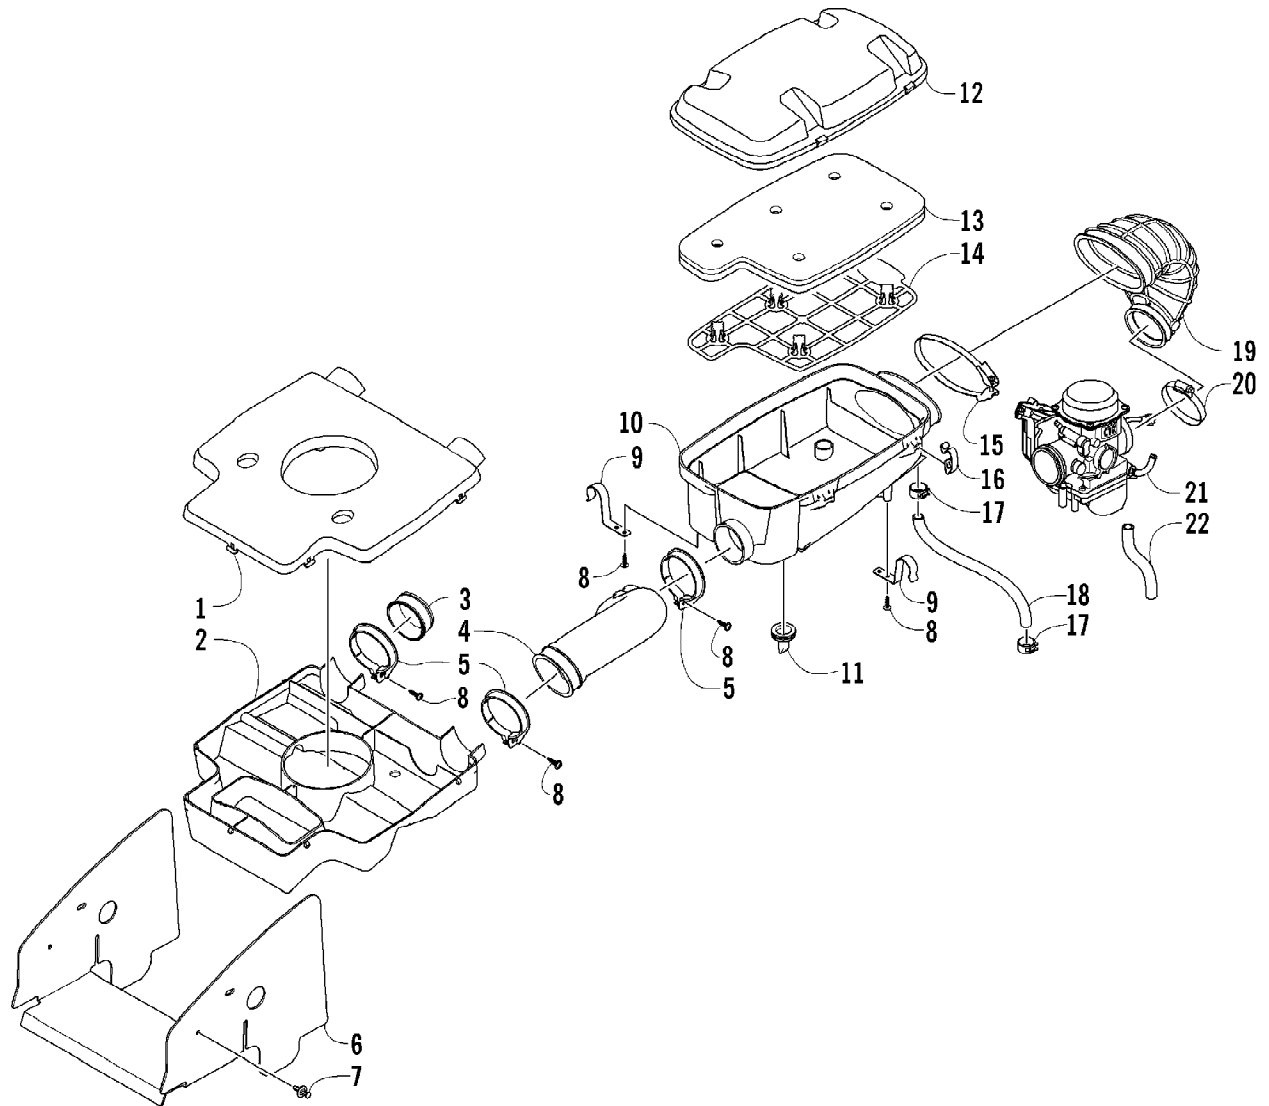


| Ref # | Part Number | Qty | S/P/F | Description                 |
|-------|-------------|-----|-------|-----------------------------|
| 1     | 0413-091    | 1   |       | Diverter, Air - Top         |
| 2     | 0413-093    | 1   |       | Diverter, Air - Bottom      |
| 3     | 0413-096    | 1   |       | Cap, Air Diverter           |
| 4     | 0470-529    | 1   |       | Boot, Air Intake            |
| 5     | 0423-551    | 3   |       | Clamp, Boot                 |
| 6     | 1406-747    | 1   |       | Shroud, Splash              |
| 7     | 0623-362    | 2   |       | Rivet, Reinstallable        |
| 8     | 0423-342    | 7   | /P    | Screw, Self-Tapping         |
| 9     | 0423-454    | 2   |       | Clip, Mounting - Air Intake |
| 10    | 0470-515    | 1   | S     | Housing, Air Intake         |
| 11    | 0470-442    | 2   | /P    | Valve, Drain                |
| 12    | 0470-755    | 1   | S     | Cover, Air Intake           |
| 13    | 0470-663    | 1   | /P    | Filter, Air                 |
| 14    | 0470-516    | 1   |       | Screen, Air Filter          |
| 15    | 0423-554    | 1   |       | Clamp, Boot                 |
| 16    | 0423-455    | 4   |       | Clip, Spring                |
| 17    | 1623-281    | 2   |       | Clamp, Hose                 |
| 18    | 0410-079    | 1   | S     | Hose, Vent - Crankcase      |
| 19    | 0470-524    | 1   |       | Boot, Carburetor            |
| 20    | 0423-019    | 1   |       | Clamp, Boot                 |
| 21    | 0470-739    | 1   |       | Carburetor, CVK36-AE        |
| 22    | 0510-592    | 1   |       | Hose, Carburetor Drain      |

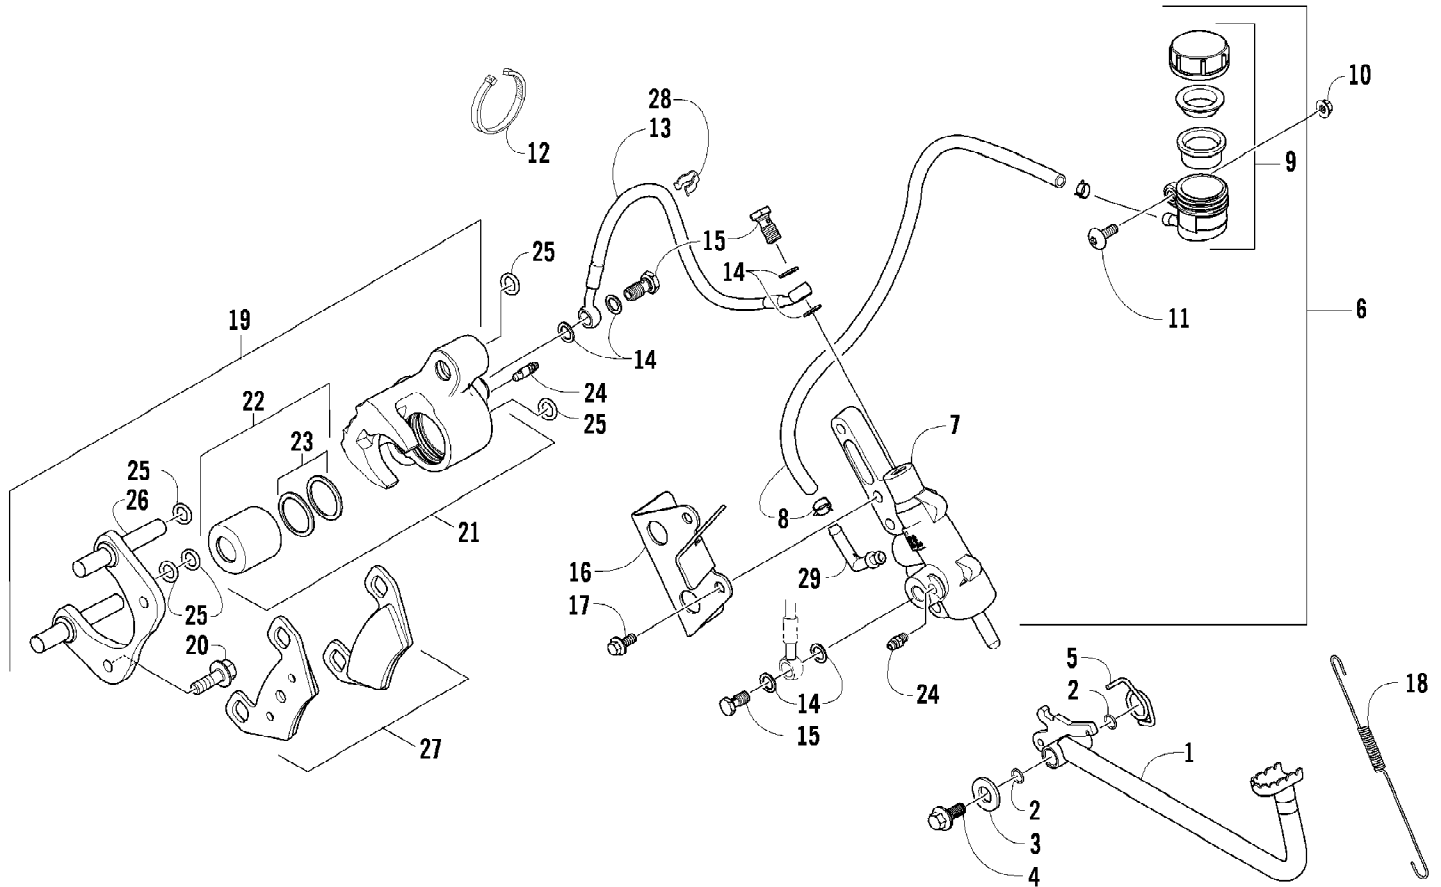


| Ref # | Part Number | Qty | S/P/F | Description                                                          |
|-------|-------------|-----|-------|----------------------------------------------------------------------|
|       | 1502-292    | 1   |       | Master Cylinder Replacement Kit                                      |
| 1     | 1502-066    | 1   |       | Lever, Brake                                                         |
| 2     | 1602-213    | 2   | /P    | O-Ring                                                               |
| 3     | 8050-252    | 1   |       | Washer                                                               |
| 4     | 8408-816    | 1   |       | Screw, Cap                                                           |
| 5     | 0502-807    | 1   |       | Spring, Brake Lever                                                  |
| 6     | 1502-293    | 1   |       | Brake Assembly (inc. 7-9)                                            |
| 7     | 0           | 1   | F     | Master Cylinder                                                      |
| 8     | 0           | 1   | F     | Hose, Brake Fluid Reservoir w/Clamps                                 |
| 9     | 1502-155    | 1   |       | Reservoir, Brake Fluid w/Clamp                                       |
| 10    | 0623-038    | 1   |       | Nut, Flanged                                                         |
| 11    | 8476-616    | 1   |       | Screw, Machine                                                       |
| 12    | 0123-788    | AR  | /P    | Cable Tie - 7.5 in.                                                  |
| 13    | 1502-139    | 1   |       | Hose, Brake                                                          |
| 14    | 0423-178    | 6   |       | Washer, Crush                                                        |
| 15    | 0423-413    | 3   |       | Bolt, Banjo-Fitting                                                  |
| 16    | 1502-179    | 1   |       | Bracket, Switch                                                      |
| 17    | 8408-625    | 2   |       | Screw, Cap                                                           |
| 18    | 0502-785    | 1   |       | Spring, Brake Switch                                                 |
| 19    | 1436-162    | 1   | S/P   | Caliper, Brake (inc. 21-23, one No. 24, and 25-27)                   |
| 20    | 8408-821    | 2   | /P    | Screw, Cap                                                           |
| 21    | 1436-160    | 1   | /P    | Housing, Caliper - Assembly - Right Rear (inc. 22-23 and one No. 24) |
| 22    | 0502-606    | 1   |       | Piston/Seal Set (inc. 23)                                            |
| 23    | 0502-607    | 1   |       | Seal Set                                                             |
| 24    | 0502-609    | 2   | /P    | Valve, Bleed                                                         |
| 25    | 0502-608    | 1   |       | O-Ring, Guide - Set                                                  |
| 26    | 0502-605    | 1   |       | Bracket Assembly                                                     |
| 27    | 0502-875    | 1   | S     | Pad, Brake - Set                                                     |
| 28    | 1502-115    | 2   |       | Clip, Brake Hose                                                     |
| 29    | 1502-296    | 1   | /P    | Adapter, Hose                                                        |

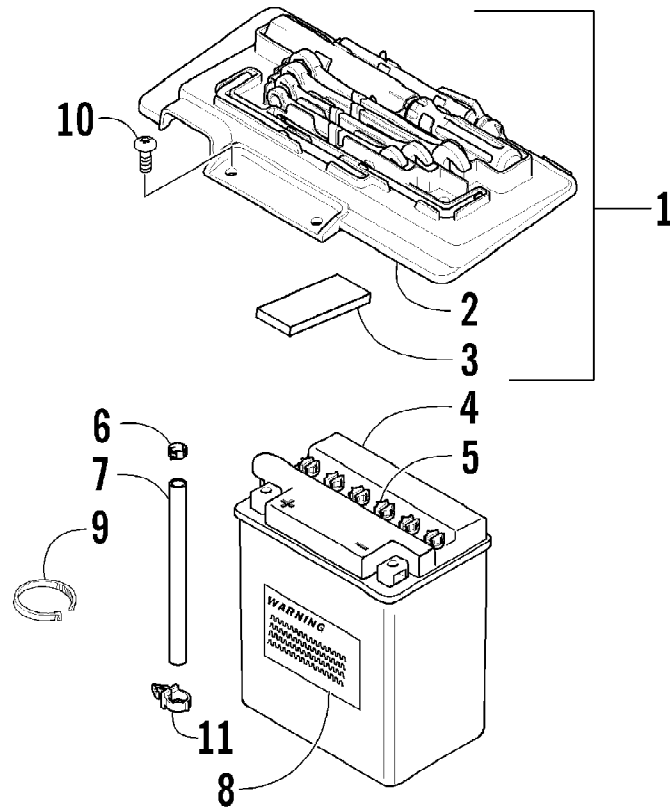


| Ref # | Part Number | Qty | S/P/F | Description                                 |
|-------|-------------|-----|-------|---------------------------------------------|
| 1     | 5991-395    | 1   | S     | Battery Cover/Tool Tray Assembly (inc. 2-3) |
| 2     | 2406-815    | 1   | /P    | Cover, Battery                              |
| 3     | 0406-288    | 2   |       | Pad, Battery                                |
| 3     | 0444-122    | 1   | S/P   | Kit, Tool Not Illustrated                   |
| 4     | 0745-045    | 1   | /P    | Battery Assembly (inc. 5-8)                 |
| 5     | 0645-045    | 6   |       | Cap, Battery                                |
| 6     | 0645-152    | 1   |       | Clamp, Hose                                 |
| 7     | 0645-263    | 1   | /P    | Hose, Vent                                  |
| 8     | 0645-151    | 1   |       | Label, Warning - Battery                    |
| 9     | 0123-903    | 4   |       | Cable Tie - 11.5 in.                        |
| 10    | 8476-616    | 2   |       | Screw, Machine                              |
| 11    | 0623-101    | AR  |       | Clip, Retaining                             |

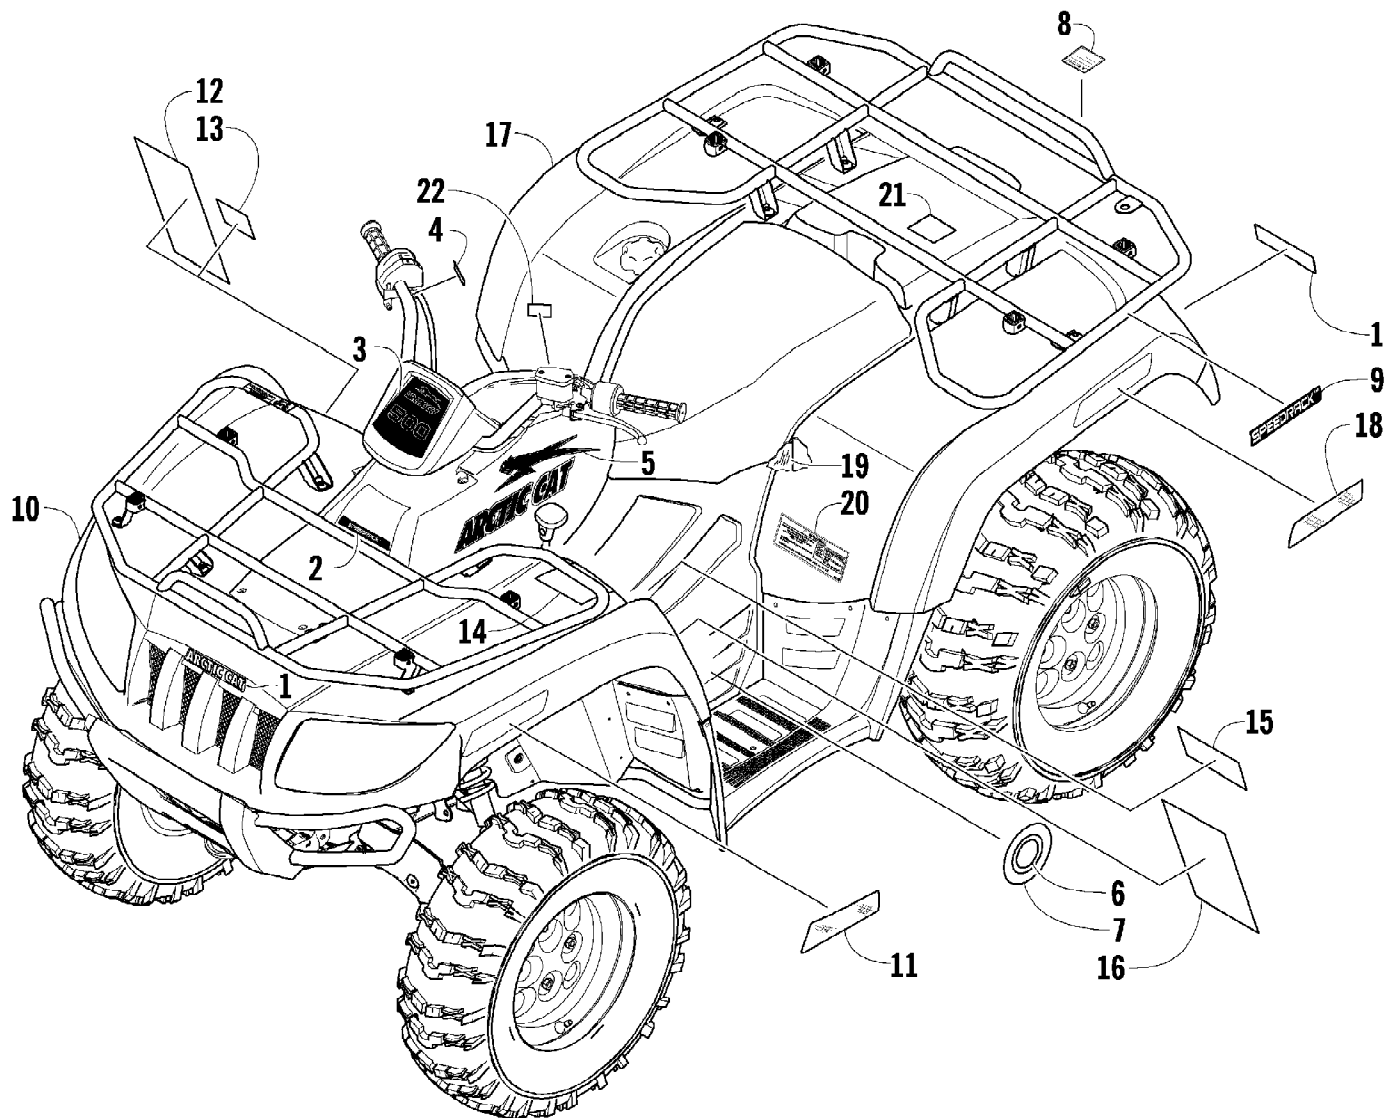 


| Ref # | Part Number | Qty | S/P/F | Description                                     |
|-------|-------------|-----|-------|-------------------------------------------------|
| 1     | 1411-725    | 2   |       | Decal, Front/Rear                               |
| 2     | 1411-050    | 1   | /P    | Decal, "Speedrack"                              |
| 3     | 1411-558    | 1   |       | Decal, Instrument Pod                           |
| 4     | 0411-966    | 1   |       | Decal, Warning - Differential Lock              |
| 5     | 1411-634    | 1   |       | Decal, Side - Upper Right                       |
| 5     | 1411-635    | 1   |       | Decal, Side - Upper Left                        |
| 6     | 0411-003    | 1   |       | Decal, Shift Pattern                            |
| 7     | 0411-009    | 1   |       | Decal, High-Low                                 |
| 8     | 1411-077    | 1   |       | Decal, Warning - Towing                         |
| 9     | 0411-965    | 2   |       | Decal, "Speedrack"                              |
| 10    | 0518-001    | 1   | S     | Panel, Fender - Front (inc. 11-16)              |
| 11    | 0411-818    | 1   |       | Decal, Reflector - Front - Right                |
| 11    | 0411-819    | 1   |       | Decal, Reflector - Front - Left                 |
| 12    | 1411-250    | 1   |       | Decal, Warning - Reverse/Pre-Ride               |
| 13    | 0411-835    | 1   |       | Decal, Warning - Turn/Hill                      |
| 14    | 0411-401    | 1   |       | Decal, Warning - Age                            |
| 15    | 1411-574    | 1   |       | Decal, Warning - Off-Road Only                  |
| 16    | 0411-218    | 1   |       | Decal, Warning - General                        |
| 17    | 2506-702    | 1   | S     | Panel, Fender - Rear (inc. 18-21 and one No. 1) |
| 18    | 1411-592    | 1   | /P    | Decal, Reflector - Rear - Right                 |
| 18    | 1411-593    | 1   | /P    | Decal, Reflector - Rear - Left                  |
| 19    | 0470-658    | 1   |       | Shield, Heat                                    |
| 20    | 0411-430    | 1   |       | Decal, Warning - Tire Pressure                  |
| 21    | 0411-435    | 1   |       | Decal, Passenger                                |
| 22    | 1411-865    | 1   |       | Decal, Warning - Brake Lever Lock               |

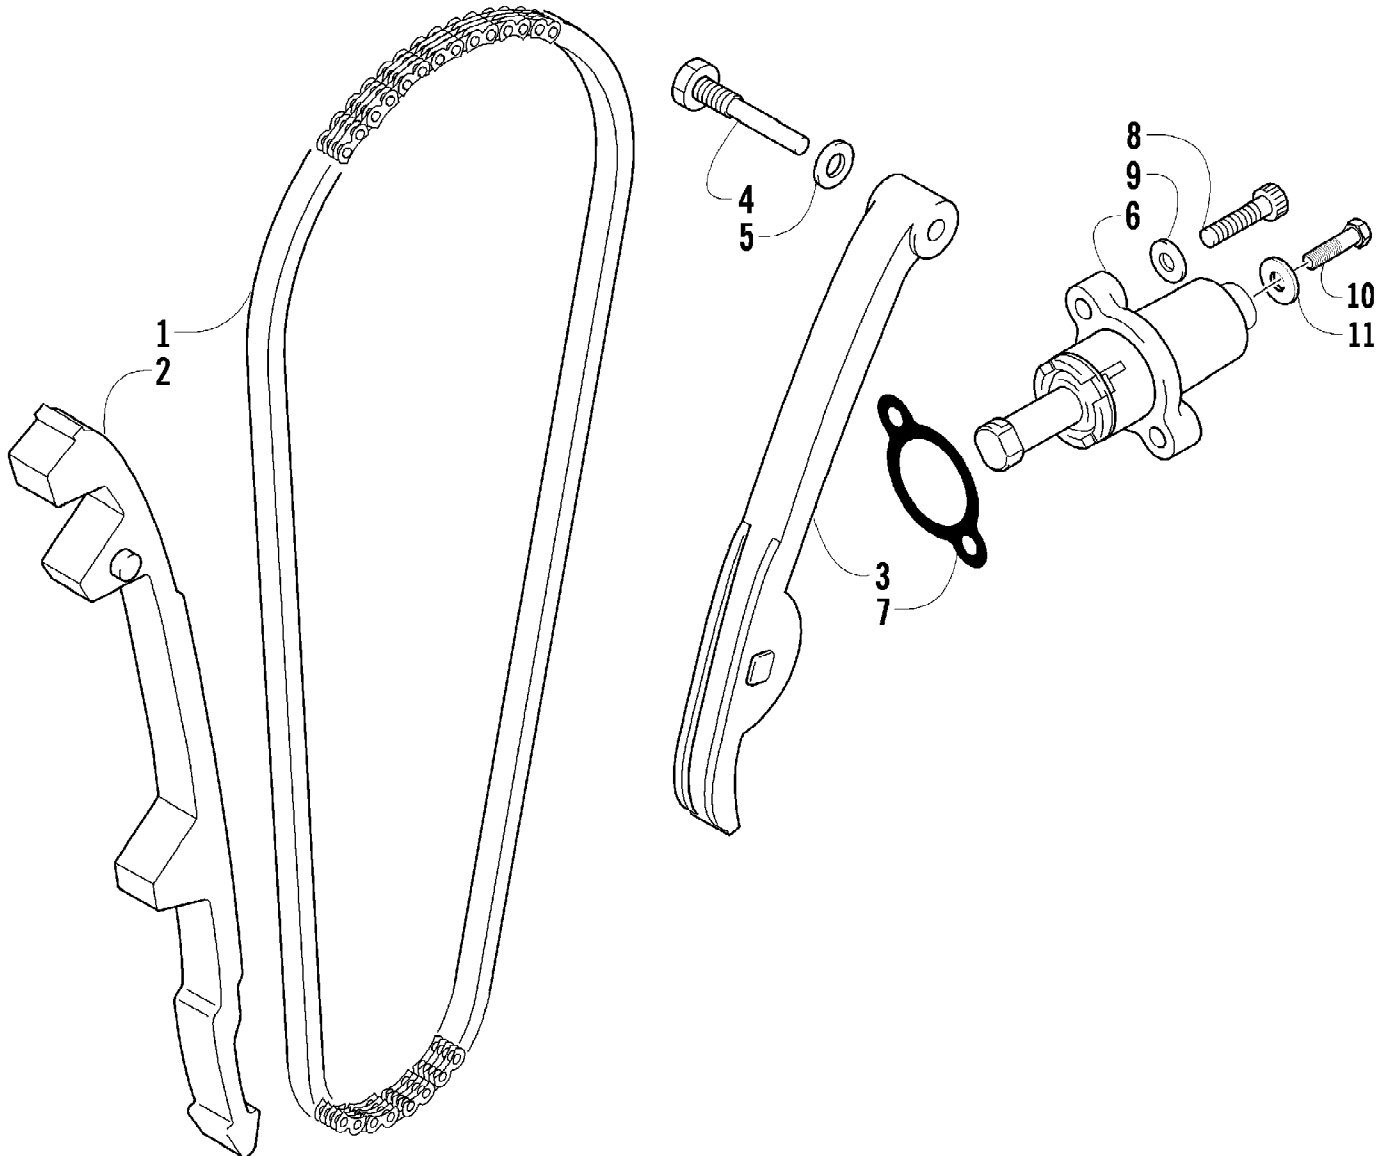 


| Ref # | Part Number | Qty | S/P/F | Description                    |
|-------|-------------|-----|-------|--------------------------------|
| 1     | 3402-353    | 1   |       | Chain, Cam                     |
| 2     | 3402-355    | 1   |       | Guide, Chain                   |
| 3     | 3402-356    | 1   |       | Tensioner, Chain               |
| 4     | 3423-074    | 1   |       | Bolt                           |
| 5     | 3402-436    | 1   | /P    | Washer                         |
| 6     | 3402-136    | 1   |       | Adjuster, Tensioner - Assembly |
| 7     | 3402-137    | 1   |       | Gasket                         |
| 8     | 3007-509    | 2   | /P    | Bolt                           |
| 9     | 3003-290    | 2   | /P    | Gasket                         |

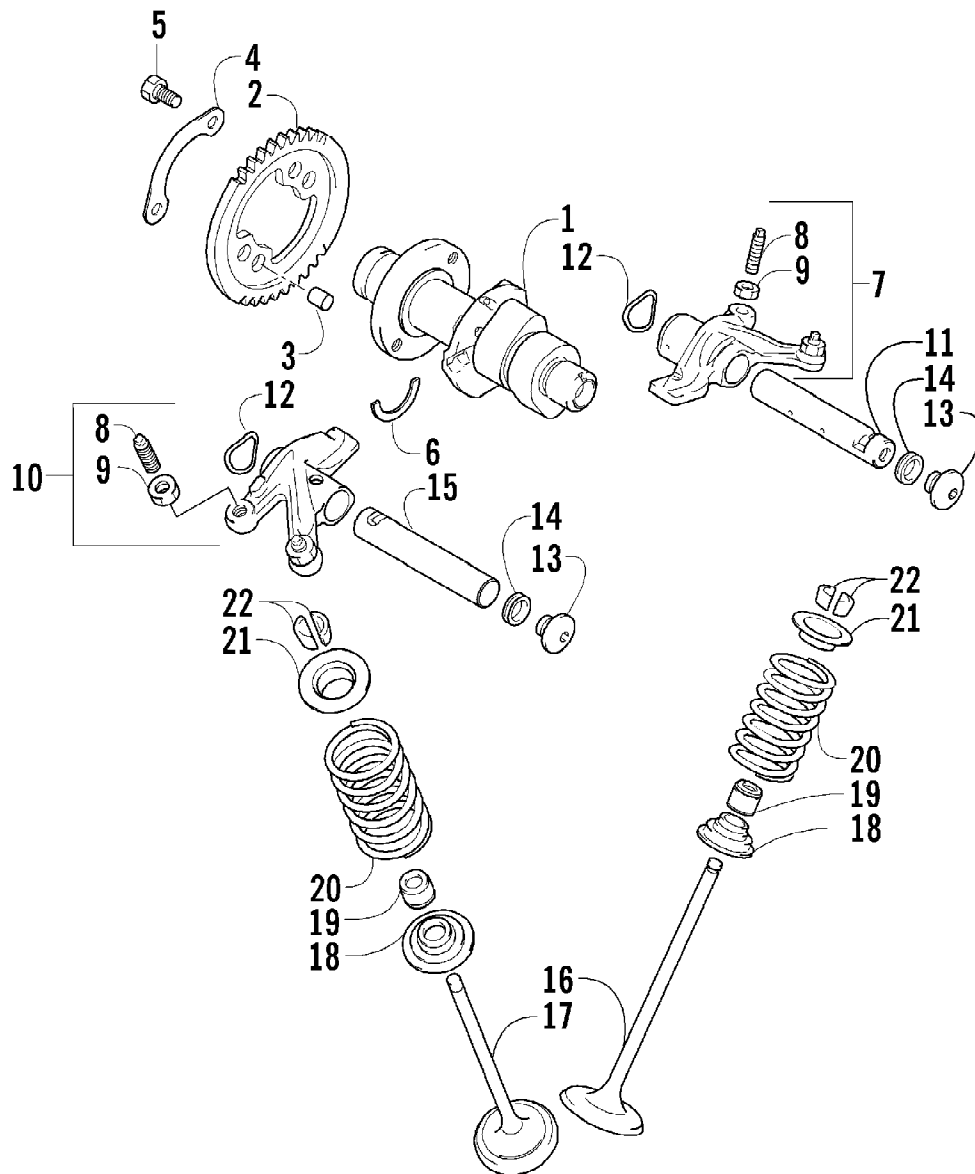 


| Ref # | Part Number | Qty | S/P/F | Description                                    |
|-------|-------------|-----|-------|------------------------------------------------|
| 1     | 3402-982    | 1   | /P    | Camshaft                                       |
| 2     | 3402-352    | 1   |       | Sprocket                                       |
| 3     | 3423-047    | 1   |       | Pin                                            |
| 4     | 3423-073    | 1   |       | Washer                                         |
| 5     | 3423-013    | 2   | S     | Screw, Cap                                     |
| 6     | 3423-071    | 1   | /P    | C-Ring                                         |
| 7     | 3402-805    | 1   | /P    | Arm, Valve Rocker - Intake (inc. two No. 8-9)  |
| 8     | 3423-075    | 4   |       | Screw                                          |
| 9     | 3423-076    | 4   |       | Nut                                            |
| 10    | 3402-139    | 1   |       | Arm, Valve Rocker - Exhaust (inc. two No. 8-9) |
| 11    | 3402-140    | 1   |       | Shaft, Rocker Arm - Intake                     |
| 12    | 3423-031    | 2   |       | Washer                                         |
| 13    | 3423-111    | 2   | S     | Plug, Shaft                                    |
| 14    | 3402-012    | 2   |       | Gasket                                         |
| 15    | 3402-141    | 1   |       | Shaft, Rocker Arm - Exhaust                    |
| 16    | 3402-725    | 2   | /P    | Valve, Intake                                  |
| 17    | 3402-143    | 2   |       | Valve, Exhaust                                 |
| 18    | 3402-148    | 4   |       | Seat, Spring                                   |
| 19    | 3402-078    | 4   |       | Seal, Oil                                      |
| 20    | 3402-726    | 4   |       | Spring, Valve                                  |
| 21    | 3423-541    | 4   | /P    | Retainer, Spring                               |
| 22    | 3402-147    | 8   |       | Cotter, Valve                                  |

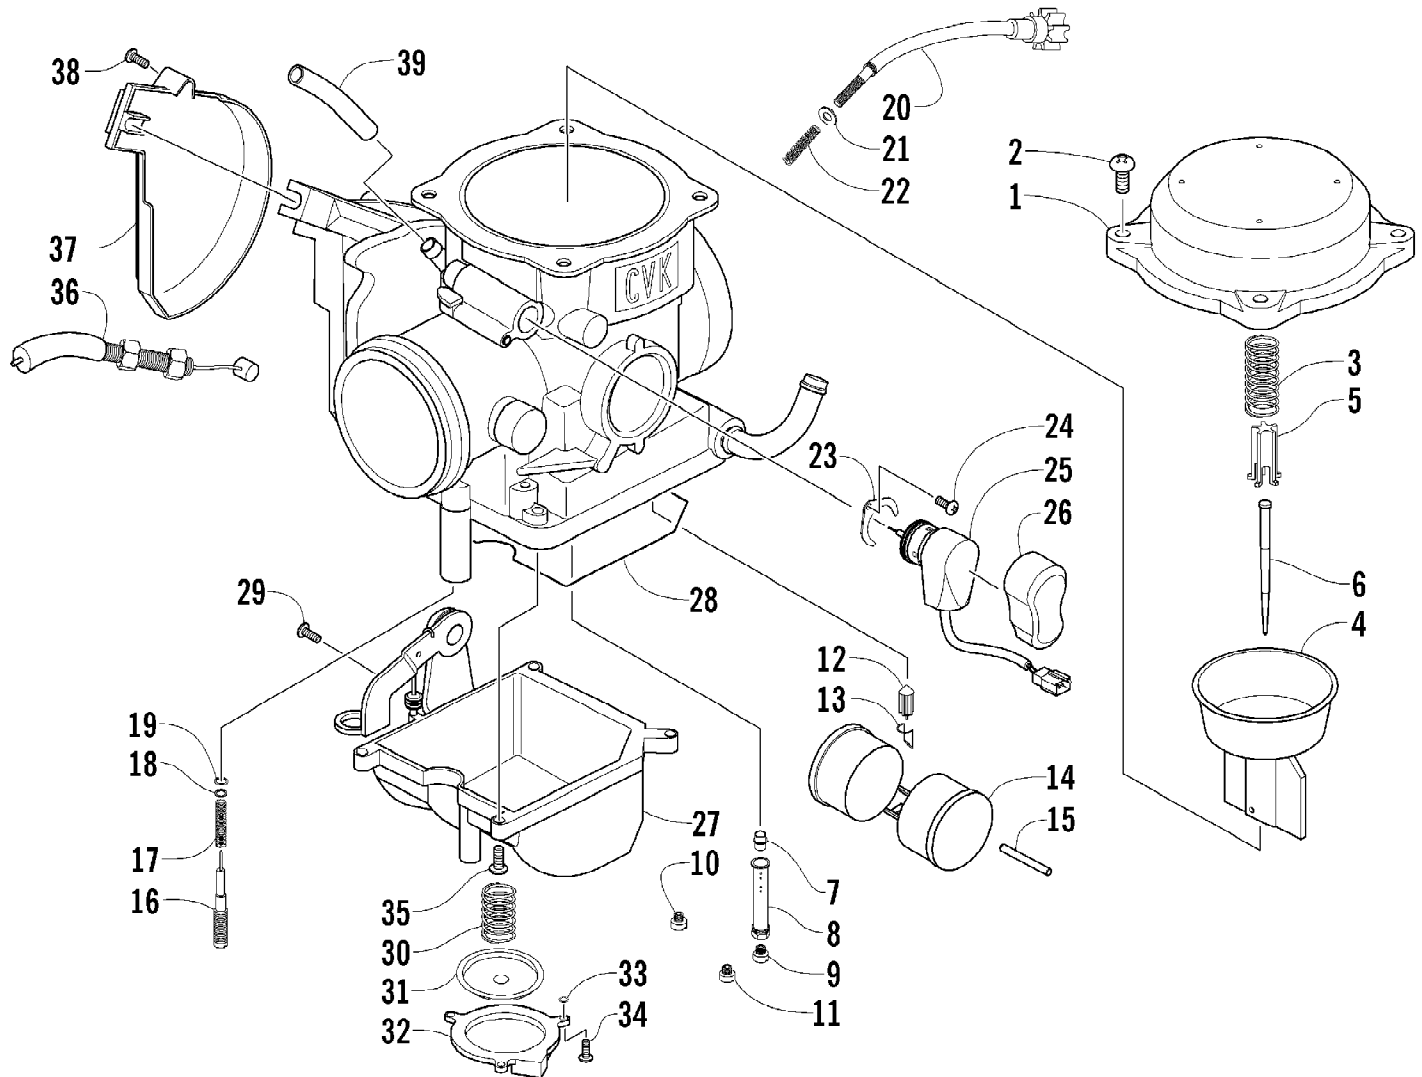 


| Ref # | Part Number | Qty | S/P/F | Description                            |
|-------|-------------|-----|-------|----------------------------------------|
|       | 0470-739    | 1   |       | Complete Carburetor Assembly           |
| 1     | 5507-001    | 1   |       | Cover, Top                             |
| 2     | 5507-002    | 4   | /P    | Screw, Top Cover                       |
| 3     | 5507-066    | 1   | /P    | Spring                                 |
| 4     | 5507-099    | 1   |       | Piston, Vacuum                         |
| 5     | 5507-005    | 1   |       | Seat, Spring                           |
| 6     | 5507-184    | 1   |       | Jet Needle                             |
| 7     | 5507-007    | 1   |       | Needle Jet                             |
| 8     | 5507-047    | 1   | /P    | Holder, Needle Jet                     |
| 9     | 5507-210    | 1   | S     | Main Jet - 138                         |
| 9     | 5507-044    | 1   |       | Main Jet - 140                         |
| 9     | 5507-043    | 1   |       | Main Jet - 142                         |
| 9     | 5507-057    | 1   | /P    | Main Jet - 135                         |
| 9     | 5507-075    | 1   |       | Main Jet - 132                         |
| 9     | 5507-074    | 1   |       | Main Jet - 130                         |
| 10    | 5507-070    | 1   | /P    | Slow Jet                               |
| 11    | 5507-112    | 1   |       | Starter Jet - 85                       |
| 12    | 5507-183    | 1   |       | Valve, Float - Set (inc. 13)           |
| 13    | 0           | 1   | F     | Clip                                   |
| 14    | 5507-039    | 1   |       | Float Set (inc. 15)                    |
| 15    | 0           | 1   | F     | Pin, Float                             |
| 16    | 5507-213    | 1   |       | Screw, Pilot - Set (inc. 17-19)        |
| 17    | 0           | 1   | F     | Spring                                 |
| 18    | 0           | 1   | F     | Washer                                 |
| 19    | 0           | 1   | F     | O-Ring                                 |
| 20    | 5507-027    | 1   |       | Screw, Idle Adjust                     |
| 21    | 5507-028    | 1   |       | Washer                                 |
| 22    | 5507-029    | 1   |       | Spring                                 |
| 23    | 5507-115    | 1   |       | Plate                                  |
| 24    | 5507-117    | 1   | /P    | Screw                                  |
| 25    | 5507-113    | 1   |       | Choke, Electric                        |
| 26    | 5507-114    | 1   |       | Cover, Electric Choke                  |
| 27    | 5507-214    | 1   |       | Chamber, Float - Assembly (inc. 28-34) |
| 28    | 5507-067    | 1   | /P    | O-Ring, Float Chamber                  |
| 29    | 5507-050    | 1   | /P    | Screw, Drain                           |
| 30    | 5507-211    | 1   |       | Spring                                 |
| 31    | 5507-197    | 1   |       | Diaphragm Assembly                     |
| 32    | 5507-198    | 1   |       | Housing, Pump                          |
| 33    | 5507-034    | 1   |       | U-Ring                                 |
| 34    | 5507-035    | 3   |       | Screw                                  |
| 35    | 5507-017    | 4   | /P    | Screw                                  |
| 36    | 0487-049    | 1   | /P    | Cable, Throttle                        |
| 37    | 5507-036    | 1   |       | Cover                                  |
| 38    | 5507-037    | 1   | /P    | Screw                                  |
| 39    | 0410-056    | 1   |       | Hose, Vent                             |

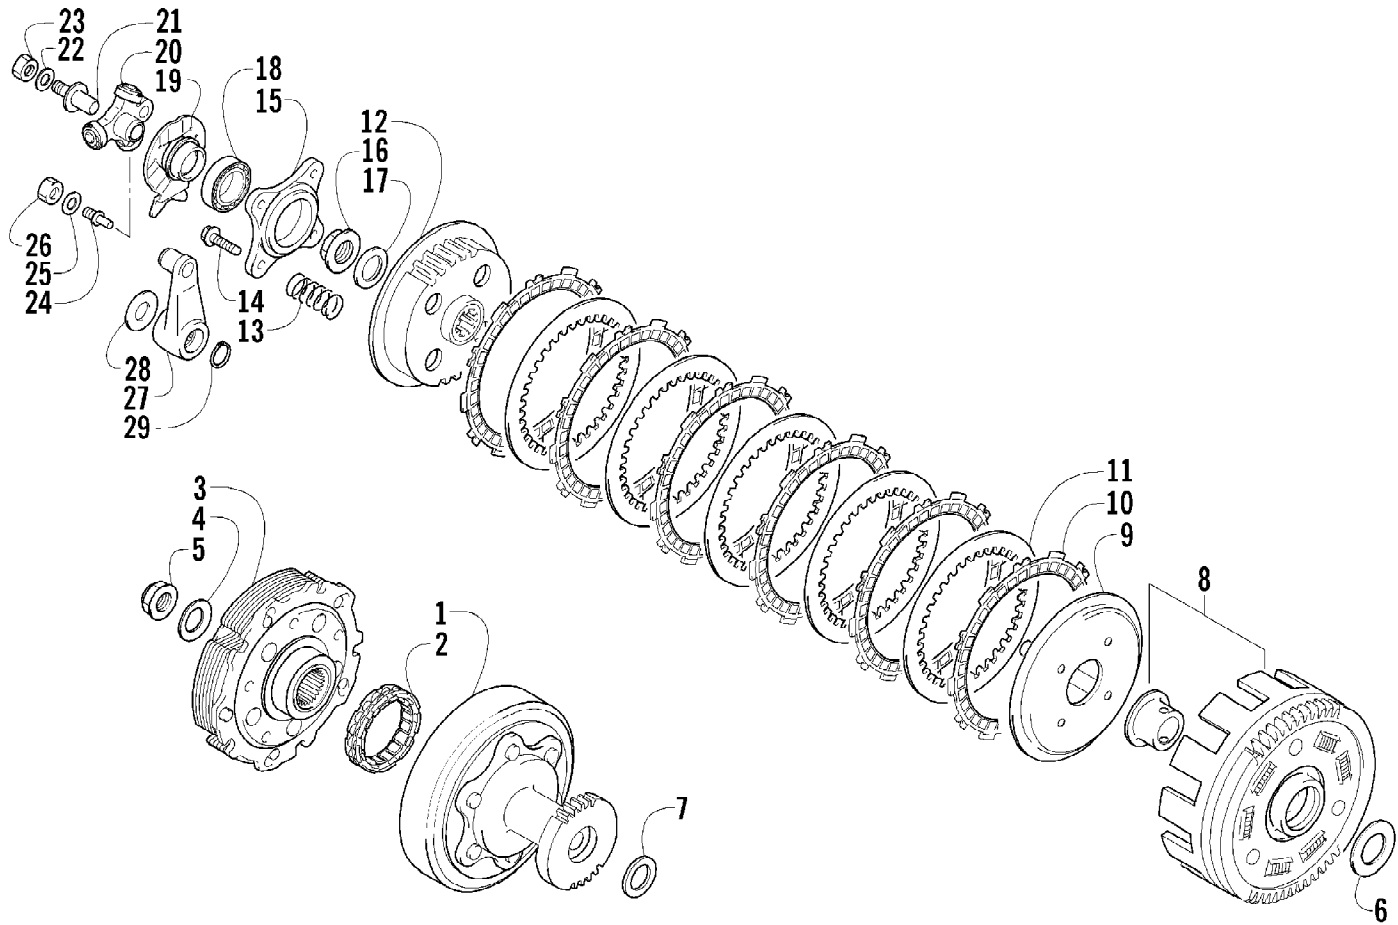 


| Ref # | Part Number | Qty | S/P/F | Description                     |
|-------|-------------|-----|-------|---------------------------------|
| 1     | 3446-329    | 1   |       | Housing, Starter Clutch         |
| 2     | 3446-003    | 1   |       | Clutch, Primary Drive One-Way   |
| 3     | 3446-330    | 1   |       | Shoe, Starter Clutch            |
| 4     | 3423-032    | 1   |       | Washer, Starter Clutch Shoe     |
| 5     | 3423-081    | 1   |       | Nut, Starter Clutch Shoe        |
| 6     | 3423-122    | 1   |       | Washer, Primary Driven          |
| 7     | 3423-350    | 1   |       | Washer, Primary Driven          |
| 8     | 3446-331    | 1   |       | Gear, Primary Driven - Assembly |
| 9     | 3446-008    | 1   |       | Disc, Clutch Pressure           |
| 10    | 3446-332    | 6   |       | Plate, Clutch Drive             |
| 11    | 3446-007    | 5   |       | Plate, Clutch Driven            |
| 12    | 3446-004    | 1   |       | Hub, Clutch Sleeve              |
| 13    | 3423-544    | 4   |       | Spring, Clutch                  |
| 14    | 3423-330    | 4   |       | Screw, Cap                      |
| 15    | 3446-009    | 1   |       | Plate, Clutch Release           |
| 16    | 3423-080    | 1   |       | Nut, Clutch Sleeve Hub          |
| 17    | 3423-032    | 1   |       | Washer, Clutch Sleeve Hub       |
| 18    | 3402-186    | 1   | /P    | Bearing, Clutch Release Plate   |
| 19    | 3446-334    | 1   |       | Guide, Clutch Release Roller    |
| 20    | 3446-335    | 1   |       | Roller Assembly, Clutch Release |
| 21    | 3423-361    | 1   |       | Bolt, Clutch Release - No. 1    |
| 22    | 3423-360    | 1   |       | Washer, Clutch Release - No. 1  |
| 23    | 3423-853    | 1   |       | Nut, Clutch Release - No. 1     |
| 24    | 3423-083    | 1   |       | Bolt, Clutch Release - No. 2    |
| 25    | 3423-027    | 1   |       | Washer, Clutch Release - No. 2  |
| 26    | 3008-014    | 1   |       | Nut, Clutch Release - No. 2     |
| 27    | 3446-333    | 1   |       | Arm, Clutch Release             |
| 28    | 3423-545    | 1   |       | Washer, Clutch Release Arm      |
| 29    | 3423-546    | 1   |       | Circlip, Clutch Release Arm     |

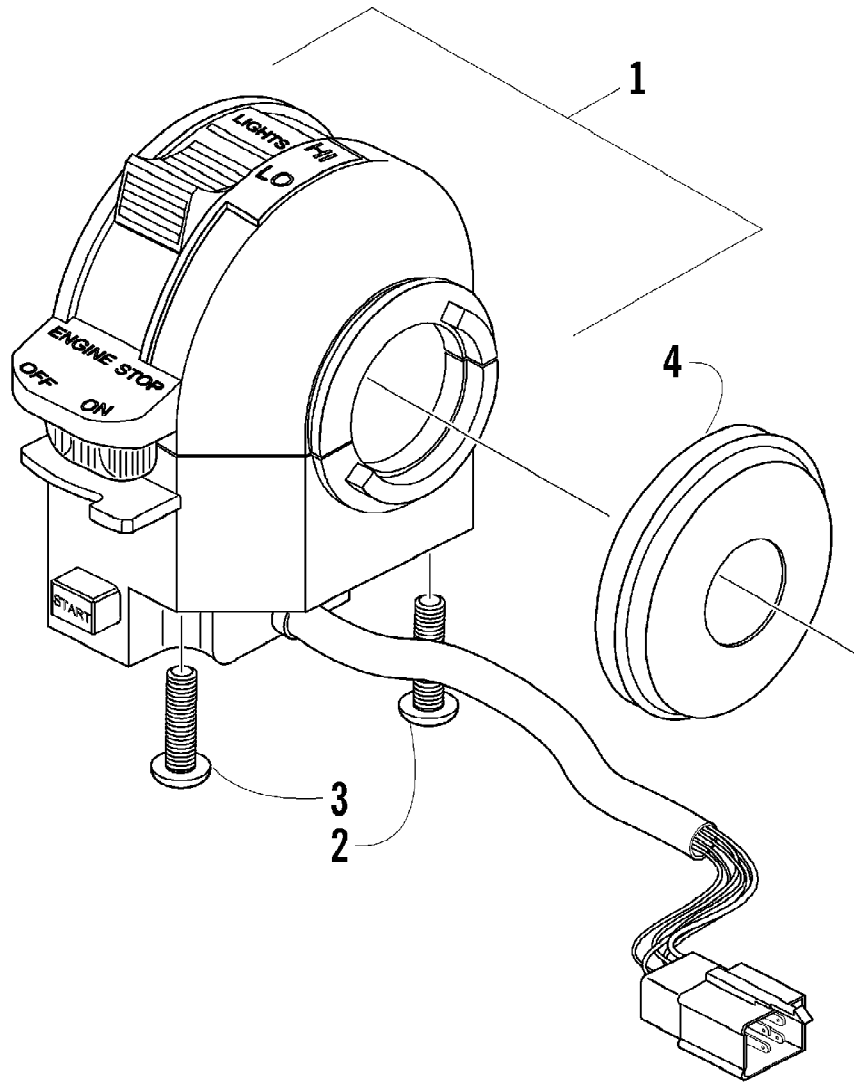 


| Ref # | Part Number | Qty | S/P/F | Description                           |
|-------|-------------|-----|-------|---------------------------------------|
| 1     | 0509-013    | 1   |       | Switch, Control - Assembly (inc. 2-3) |
| 2     | 3423-197    | 1   |       | Screw, Machine                        |
| 3     | 3423-196    | 1   |       | Screw, Machine                        |
| 4     | 3409-019    | 1   |       | Cover, Switch Housing                 |

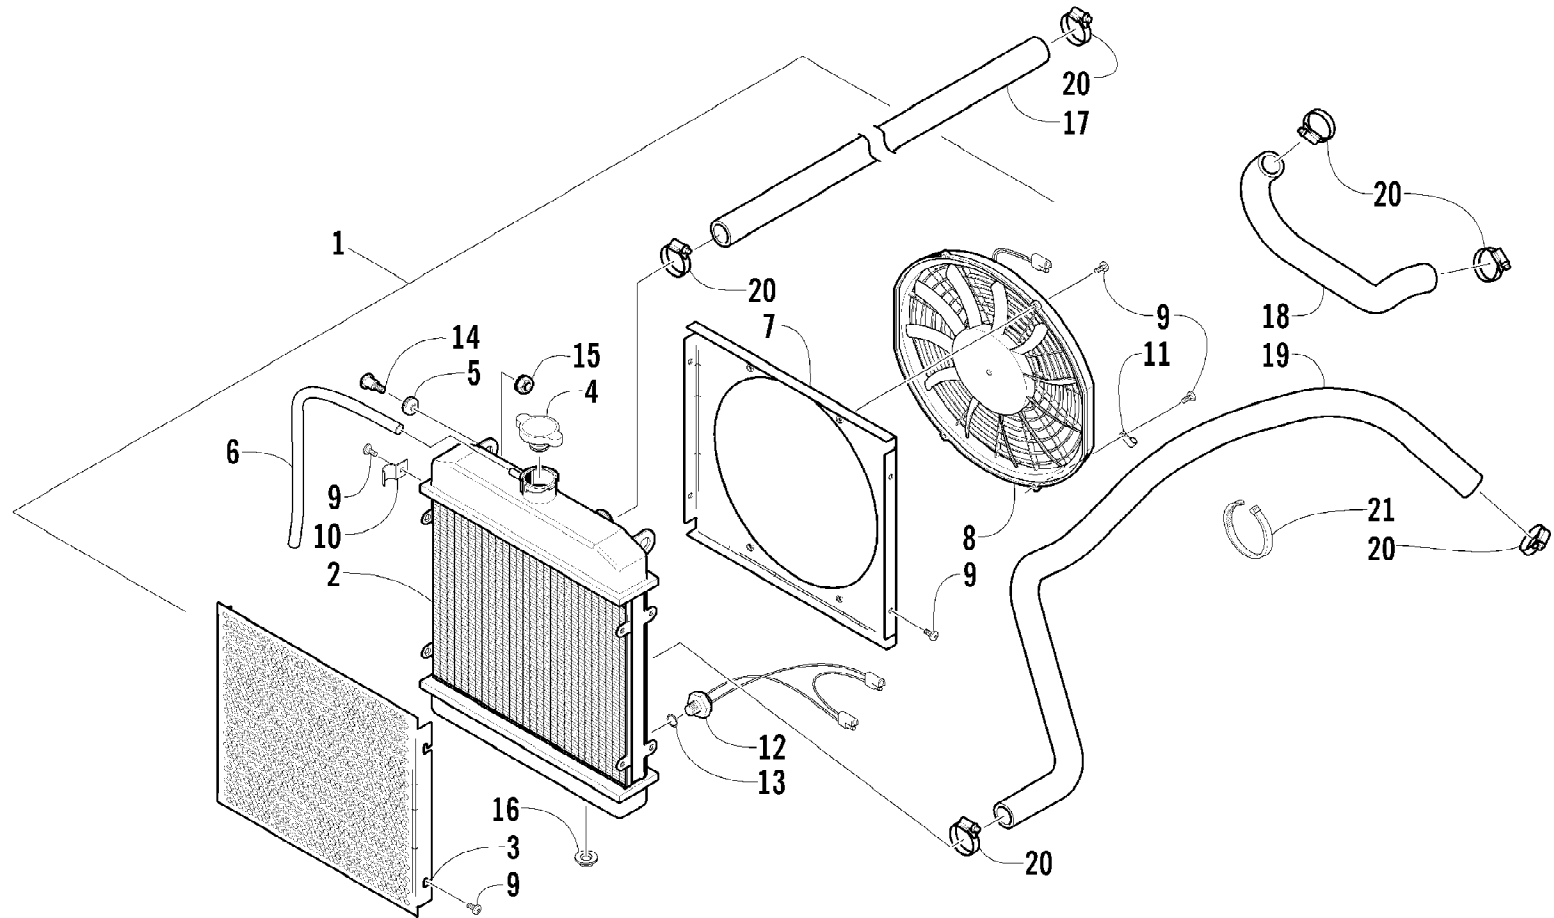 


| Ref # | Part Number | Qty | S/P/F | Description                   |
|-------|-------------|-----|-------|-------------------------------|
| 1     | 0413-172    | 1   | S     | Radiator Assembly (inc. 2-13) |
| 2     | 0413-184    | 1   | /P    | Radiator                      |
| 3     | 0413-007    | 1   |       | Screen, Radiator              |
| 4     | 0413-002    | 1   | S     | Cap, Radiator                 |
| 5     | 0423-030    | 2   |       | Grommet                       |
| 6     | 0610-016    | AR  | /P    | Hose - 25 ft                  |
| 7     | 0413-046    | 1   |       | Shroud, Fan                   |
| 8     | 0413-123    | 1   | /P    | Fan, Cooling                  |
| 9     | 8475-512    | 12  |       | Screw, Machine                |
| 10    | 0423-351    | 1   |       | Clamp, Wire                   |
| 11    | 0123-397    | 1   |       | Clamp, Cable                  |
| 12    | 0413-168    | 1   |       | Switch, Sensor - Temperature  |
| 13    | 1602-213    | 1   | /P    | O-Ring                        |
| 14    | 0423-484    | 2   |       | Screw, Shoulder               |
| 15    | 0623-038    | 2   |       | Nut w/Washer                  |
| 16    | 0423-028    | 2   |       | Bushing, Stem                 |
| 17    | 0410-002    | 1   |       | Hose, Coolant - Upper         |
| 18    | 0410-003    | 1   |       | Hose, Coolant - Crossover     |
| 19    | 0410-042    | 1   |       | Hose, Coolant - Lower         |
| 20    | 0423-496    | 6   |       | Clamp, Hose                   |
| 21    | 0623-751    | 1   |       | Cable Tie                     |

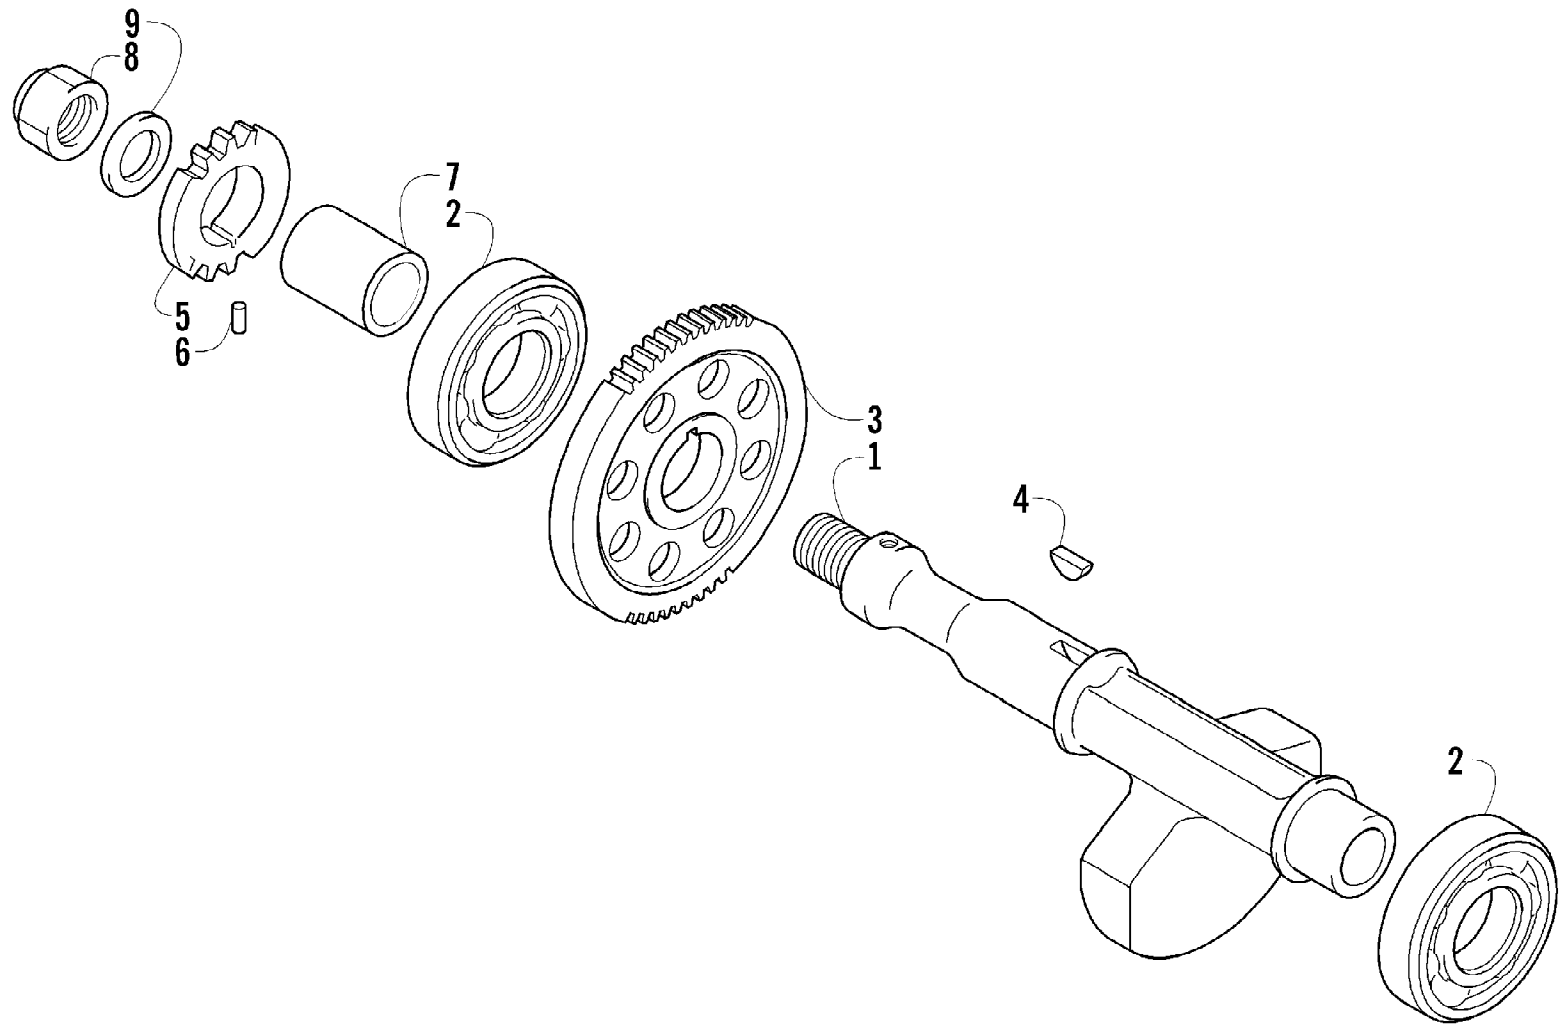 


| Ref # | Part Number | Qty | S/P/F | Description          |
|-------|-------------|-----|-------|----------------------|
| 1     | 3402-350    | 1   |       | Balancer, Crank      |
| 2     | 3402-050    | 2   |       | Bearing              |
| 3     | 3402-814    | 1   |       | Gear, Driven         |
| 4     | 3004-540    | 1   | /P    | Key                  |
| 5     | 3402-390    | 1   |       | Gear, Oil Pump Drive |
| 6     | 3423-114    | 1   | /P    | Pin, Drive Gear      |
| 7     | 3402-151    | 1   |       | Spacer, Drive Gear   |
| 8     | 3423-025    | 1   |       | Nut, Lock            |
| 9     | 3423-029    | 1   |       | Washer, Drive Gear   |

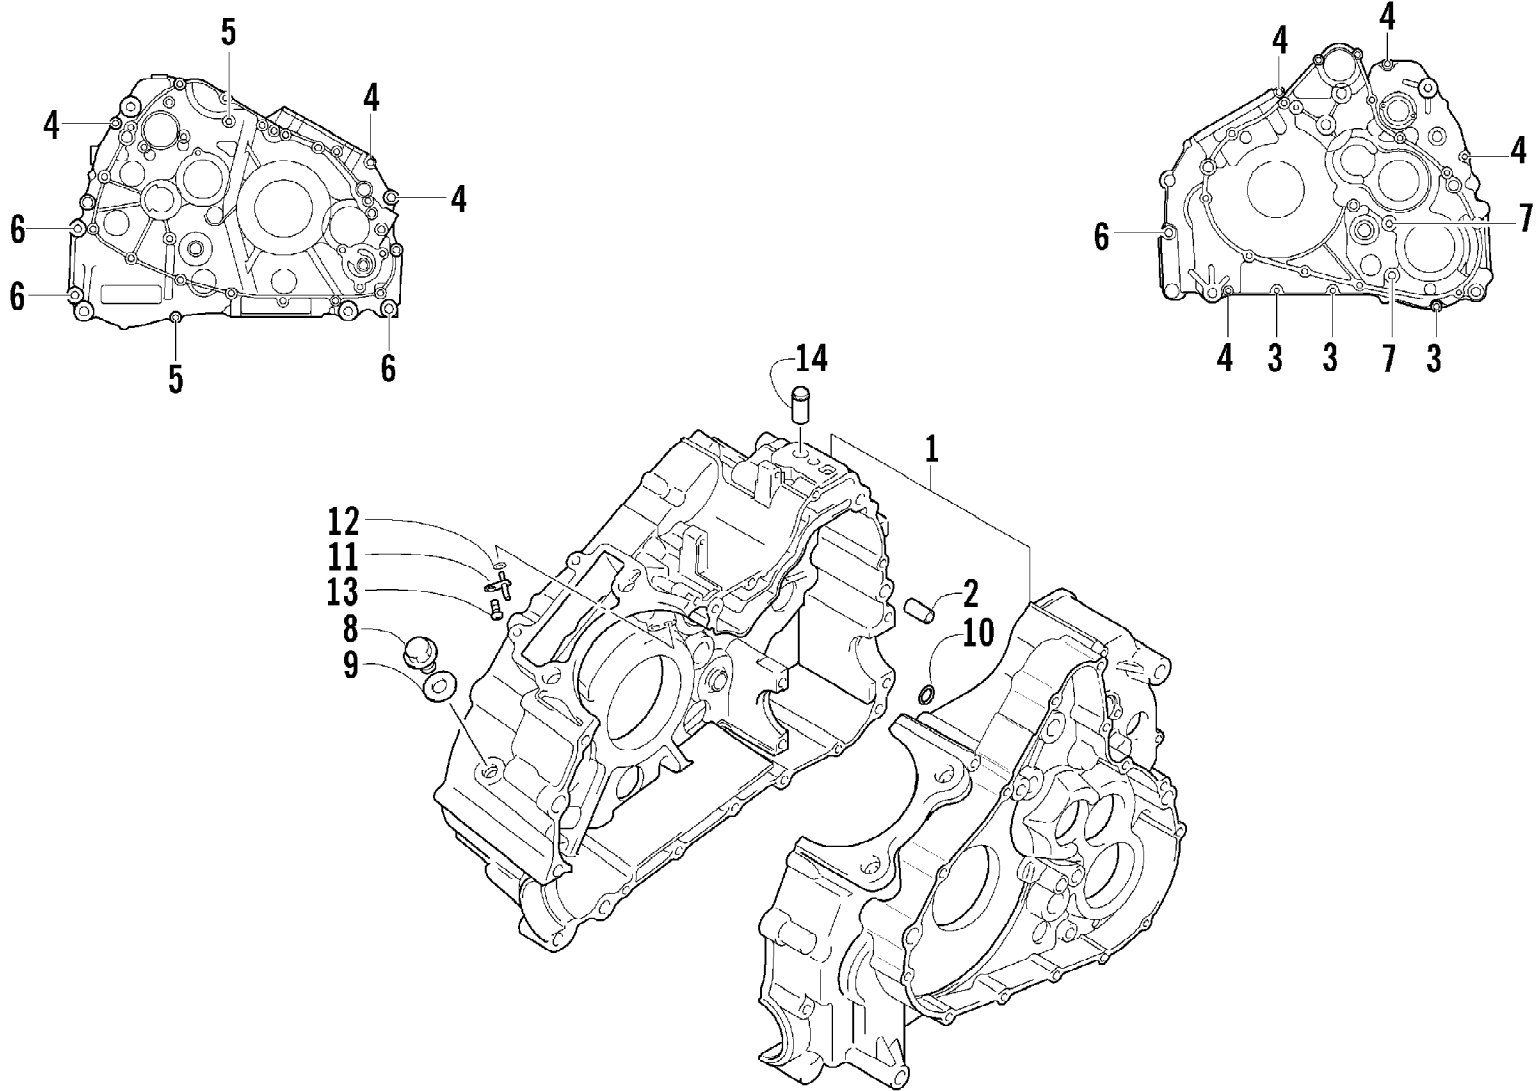 


| Ref # | Part Number | Qty | S/P/F | Description                    |
|-------|-------------|-----|-------|--------------------------------|
| 1     | 3402-809    | 1   | S     | Crankcase Assembly (inc. 2-13) |
| 2     | 3423-088    | 2   |       | Pin, Dowel                     |
| 3     | 3423-091    | 3   | S     | Bolt                           |
| 4     | 3423-092    | 7   | S     | Bolt                           |
| 5     | 3423-094    | 2   |       | Bolt                           |
| 6     | 0693-303    | 4   | S     | Bolt                           |
| 7     | 3423-093    | 2   |       | Bolt                           |
| 8     | 3423-095    | 1   |       | Plug, Oil Gallery              |
| 9     | 3402-011    | 1   |       | Gasket                         |
| 10    | 3423-052    | 1   |       | O-Ring                         |
| 11    | 3402-369    | 1   |       | Jet, Piston Cooling            |
| 12    | 3423-051    | 1   |       | O-Ring                         |
| 13    | 3423-370    | 1   |       | Screw                          |
| 14    | 3402-389    | 1   |       | Union, Breather Hose           |

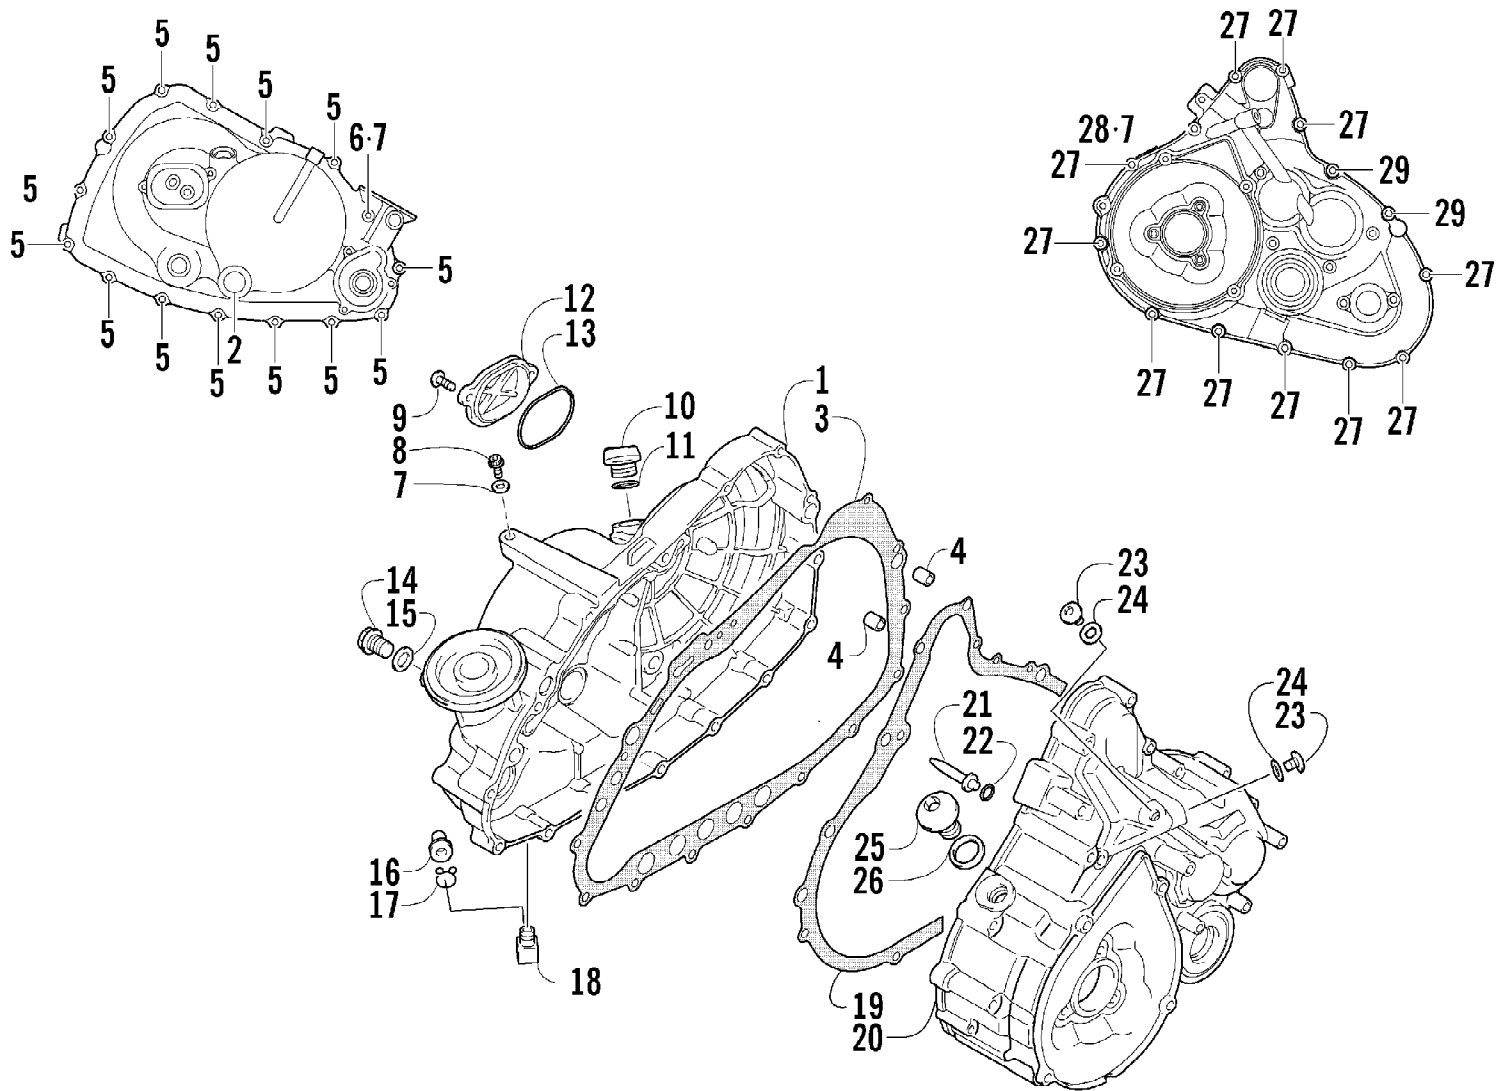 


| Ref # | Part Number | Qty | S/P/F | Description                  |
|-------|-------------|-----|-------|------------------------------|
| 1     | 3402-810    | 1   |       | Cover, Clutch (inc. 2)       |
| 2     | 3402-112    | 1   | /P    | Lens, Oil Inspection         |
| 3     | 3402-108    | 1   |       | Gasket                       |
| 4     | 3423-088    | 4   |       | Pin, Dowel                   |
| 5     | 0693-327    | 14  | S     | Screw, Cap                   |
| 6     | 3423-097    | 1   |       | Screw, Cap                   |
| 7     | 3003-290    | 3   | /P    | Gasket                       |
| 8     | 3423-539    | 1   |       | Plug, Oil Gallery            |
| 9     | 3423-096    | 2   | S     | Screw, Cap                   |
| 10    | 3402-042    | 1   |       | Cap, Engine Oil Filler       |
| 11    | 3423-055    | 1   |       | O-Ring                       |
| 12    | 3402-363    | 1   |       | Cap, Inspection              |
| 13    | 3402-101    | 1   |       | O-Ring                       |
| 14    | 3402-214    | 1   |       | Plug, Oil Pressure           |
| 15    | 3402-012    | 1   |       | Gasket                       |
| 16    | 3413-008    | 1   |       | Hose                         |
| 17    | 3423-120    | 1   |       | Clip                         |
| 18    | 3413-009    | 1   |       | Union, Water Drain           |
| 19    | 3402-538    | 1   | /P    | Gasket, Transfer Cover       |
| 20    | 3402-368    | 1   |       | Cover, Transfer (inc. 21-22) |
| 21    | 3402-097    | 1   |       | Jet, Oil Mission             |
| 22    | 3423-051    | 1   |       | O-Ring                       |
| 23    | 3423-540    | 2   |       | Plug, Oil Gallery            |
| 24    | 3005-242    | 2   |       | Gasket                       |
| 25    | 3402-041    | 1   | S     | Plug                         |
| 26    | 3402-013    | 1   | /P    | Gasket                       |
| 27    | 3423-098    | 11  | S     | Screw, Cap                   |
| 28    | 3423-092    | 1   | S     | Screw, Cap                   |
| 29    | 3007-505    | 2   | /P    | Screw, Cap                   |

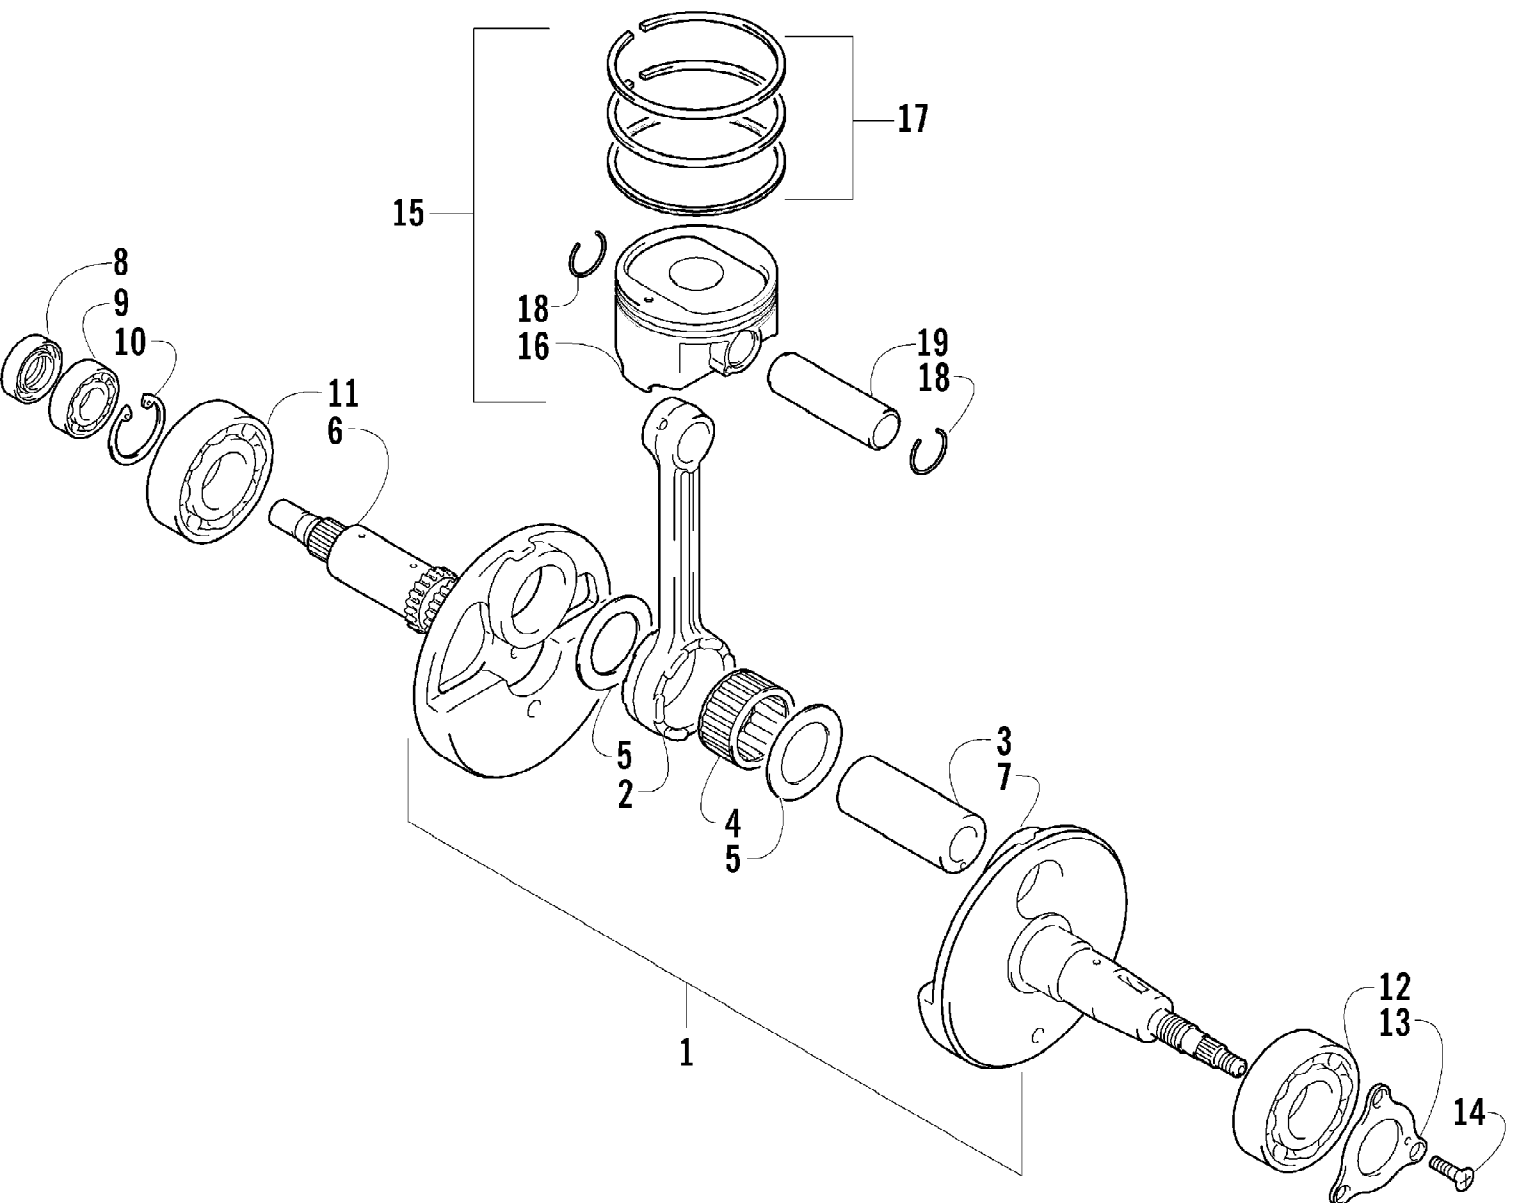 


| Ref # | Part Number | Qty | S/P/F | Description                    |
|-------|-------------|-----|-------|--------------------------------|
| 1     | 3402-811    | 1   |       | Crankshaft Assembly (inc. 2-7) |
| 2     | 3402-376    | 1   |       | Rod, Connecting                |
| 3     | 3402-377    | 1   |       | Pin, Crank                     |
| 4     | 3402-717    | 1   | /P    | Bearing                        |
| 5     | 3423-351    | 2   |       | Washer                         |
| 6     | 3402-812    | 1   |       | Crankshaft - Right             |
| 7     | 3402-705    | 1   | /P    | Crankshaft - Left              |
| 8     | 3402-387    | 1   |       | Seal, Oil                      |
| 9     | 3402-384    | 1   |       | Bearing - Right                |
| 10    | 3423-355    | 1   |       | Circlip                        |
| 11    | 3402-058    | 1   |       | Bearing - Middle               |
| 12    | 3402-054    | 1   |       | Bearing - Left                 |
| 13    | 3402-188    | 1   | /P    | Retainer, Oil Seal - Left      |
| 14    | 3423-018    | 3   |       | Screw                          |
| 15    | 3402-788    | 1   |       | Piston Set (inc. 16-18)        |
| 16    | 3402-719    | 1   |       | Piston                         |
| 17    | 3402-720    | 1   |       | Ring Set, Piston               |
| 18    | 3423-344    | 2   |       | Circlip                        |
| 19    | 3402-375    | 1   |       | Pin                            |

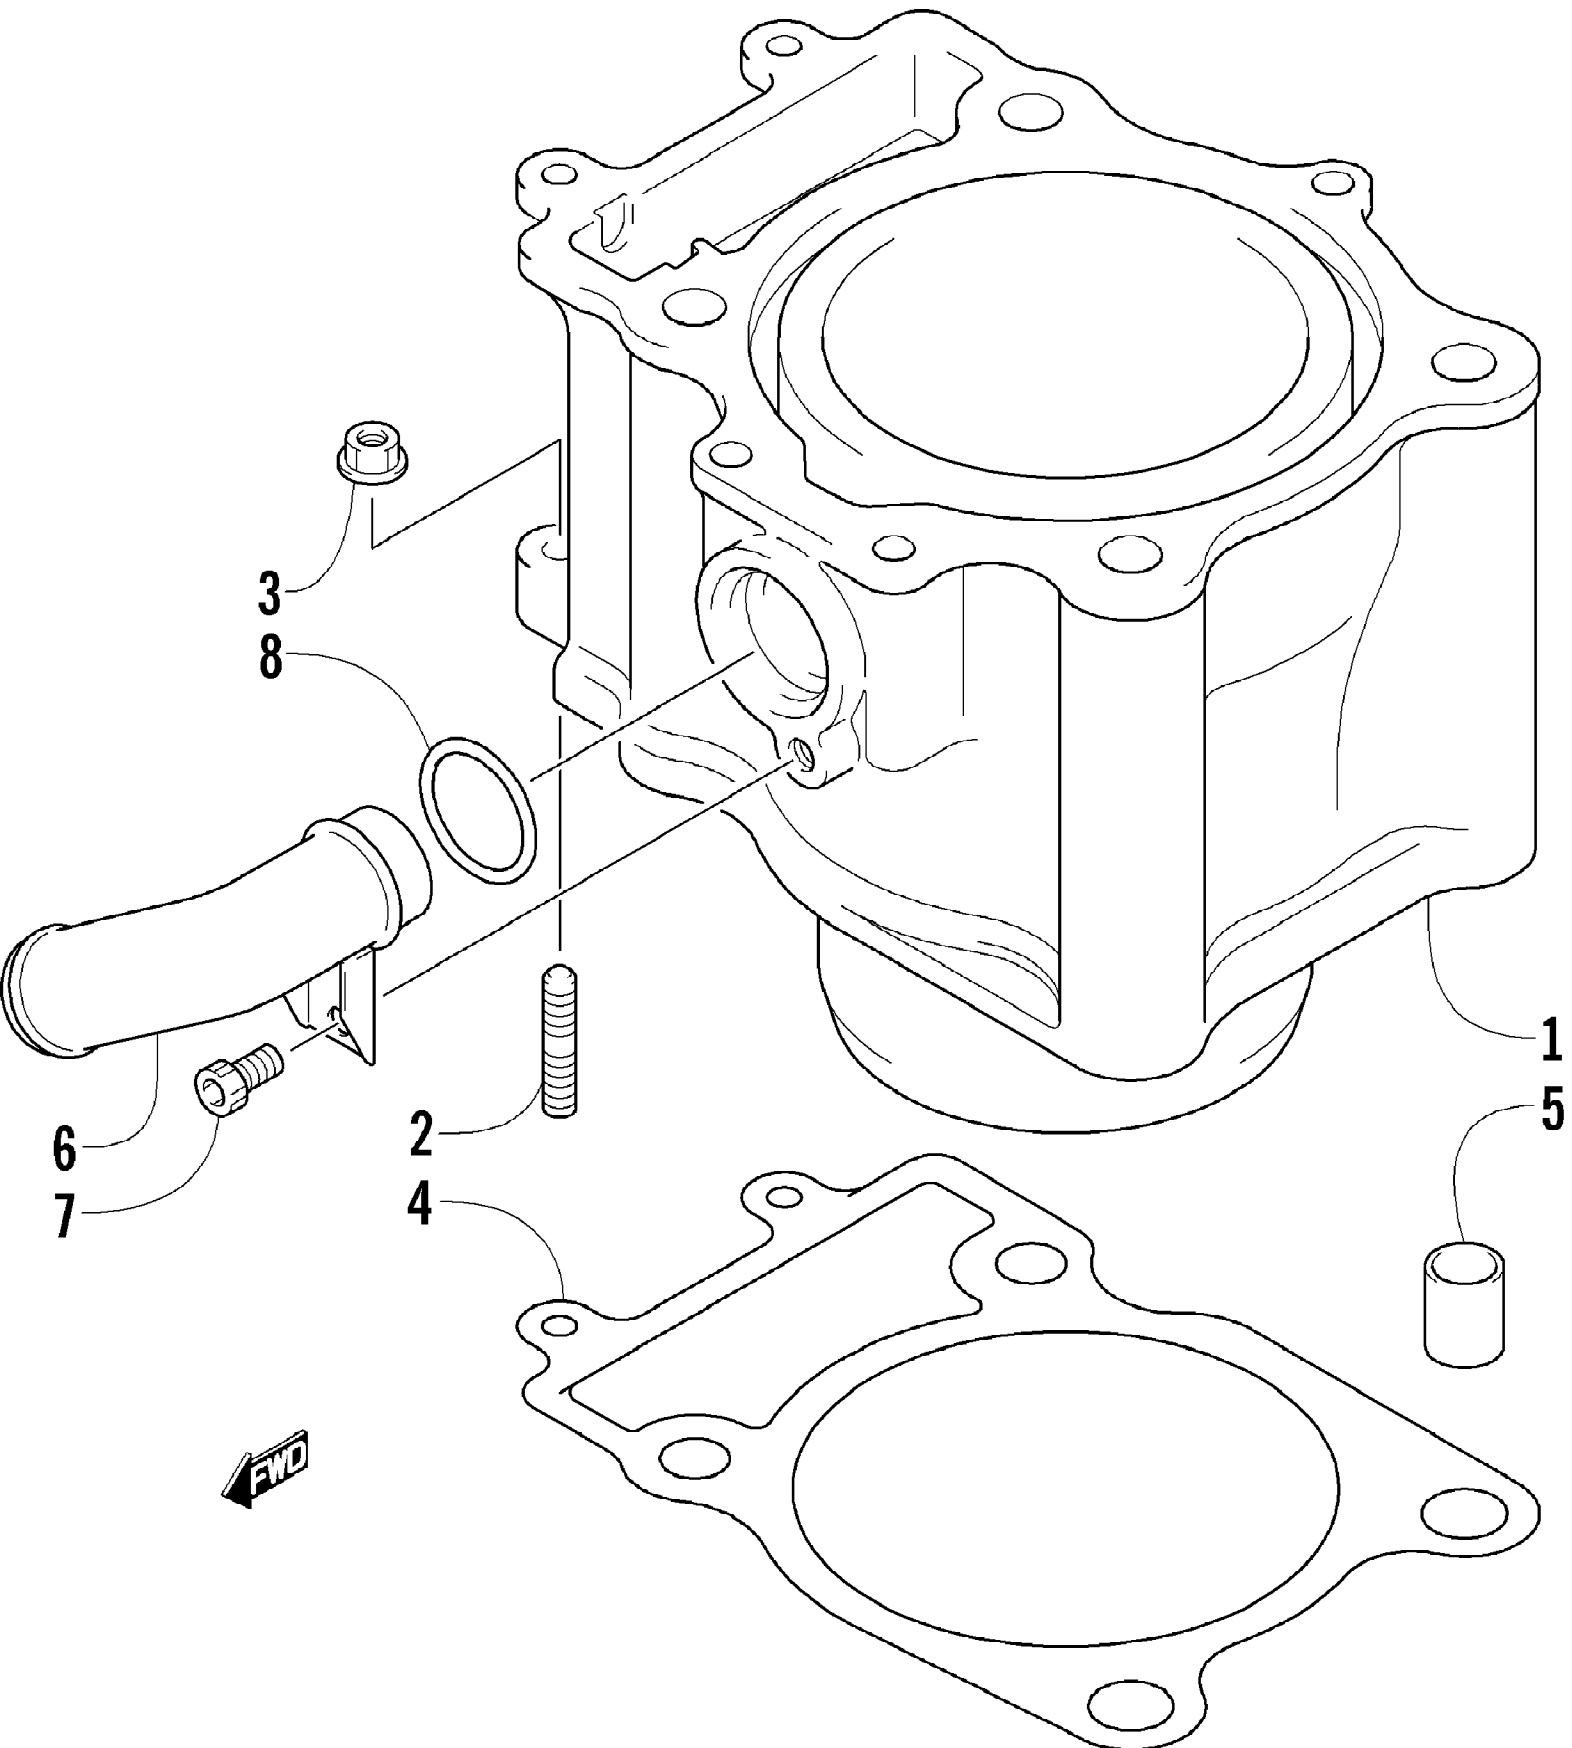 


| Ref # | Part Number | Qty | S/P/F | Description       |
|-------|-------------|-----|-------|-------------------|
| 1     | 3402-707    | 1   |       | Cylinder          |
| 2     | 3423-384    | 2   | S     | Bolt, Stud        |
| 3     | 3007-373    | 2   | /P    | Nut               |
| 4     | 3402-365    | 1   | /P    | Gasket, Cylinder  |
| 5     | 3423-088    | 2   |       | Pin, Dowel        |
| 6     | 3413-013    | 1   |       | Union, Water Hose |
| 7     | 3423-121    | 1   | S     | Screw, Cap        |
| 8     | 3423-058    | 1   |       | O-Ring            |

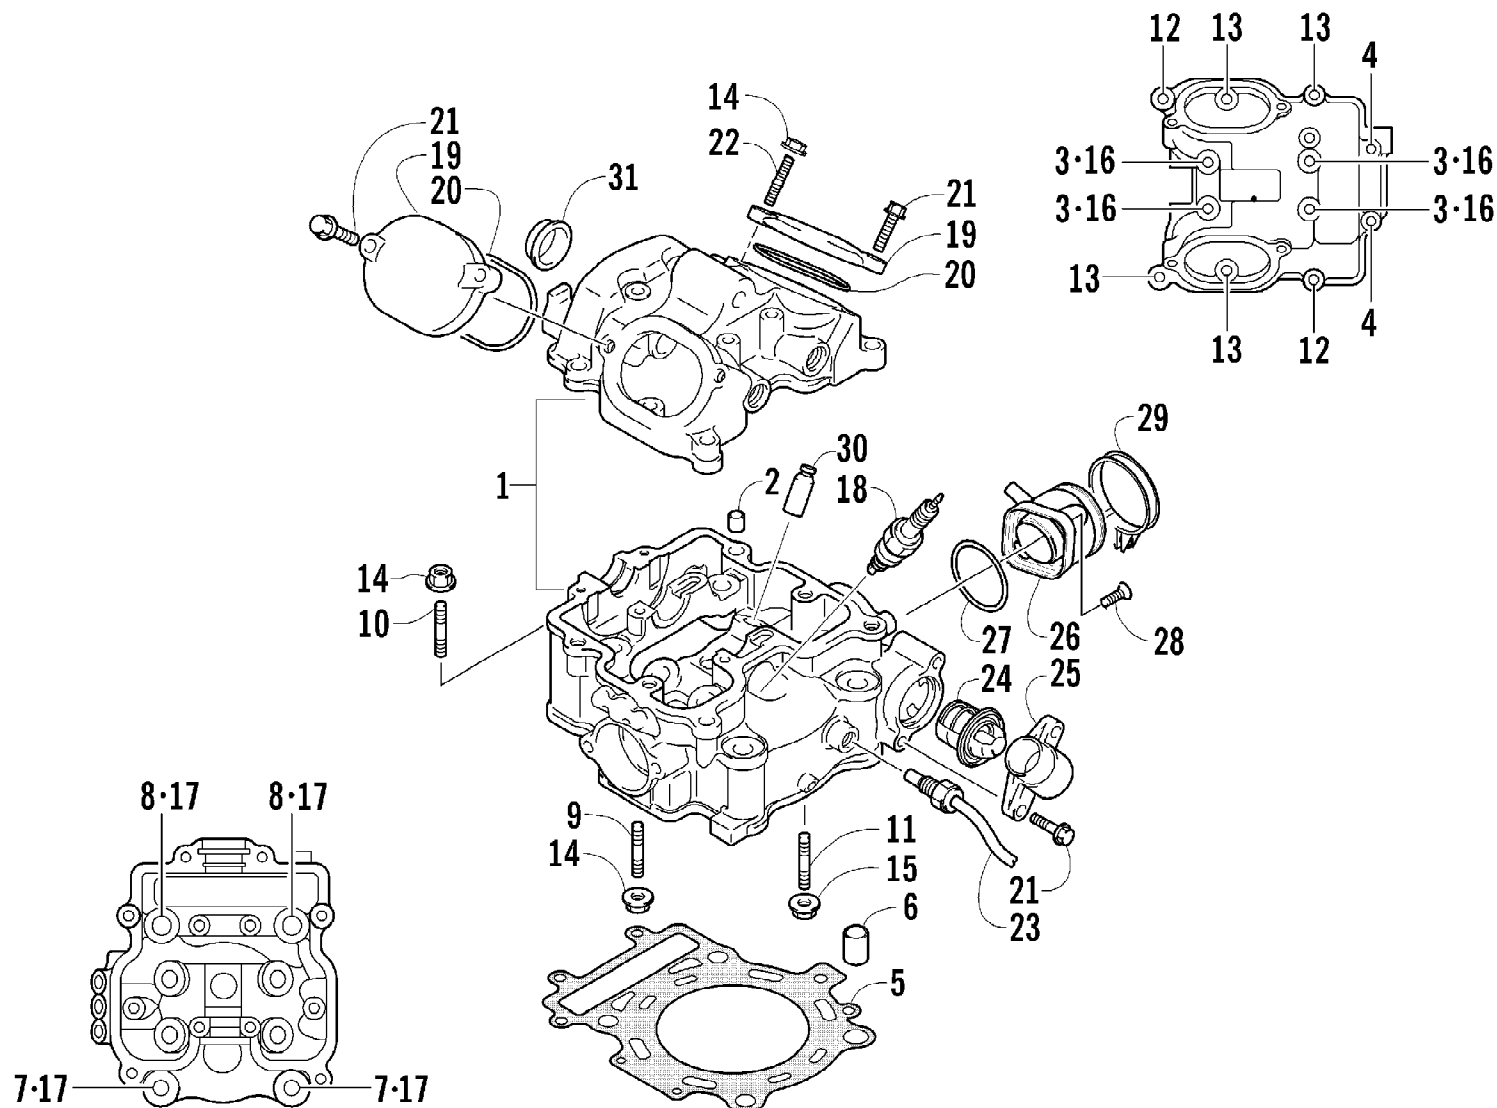 


| Ref # | Part Number | Qty | S/P/F | Description                          |
|-------|-------------|-----|-------|--------------------------------------|
| 1     | 3402-098    | 1   |       | Head, Cylinder - Assembly (inc. 2-4) |
| 2     | 3423-043    | 2   | /P    | Pin, Dowel                           |
| 3     | 3423-006    | 4   |       | Bolt                                 |
| 4     | 3007-395    | 2   | /P    | Bolt                                 |
| 5     | 3402-362    | 1   |       | Gasket, Cylinder Head                |
| 6     | 3423-088    | 2   |       | Pin, Dowel                           |
| 7     | 3423-015    | 2   |       | Bolt                                 |
| 8     | 3423-016    | 2   |       | Bolt                                 |
| 9     | 3423-089    | 2   | S     | Bolt, Stud                           |
| 10    | 3423-087    | 2   | S     | Bolt, Stud                           |
| 11    | 3423-862    | 1   | /P    | Bolt, Stud                           |
| 12    | 3423-007    | 2   | S     | Bolt                                 |
| 13    | 3007-380    | 4   | /P    | Bolt                                 |
| 14    | 3007-373    | 9   | /P    | Nut                                  |
| 15    | 3007-390    | 1   | /P    | Nut                                  |
| 16    | 3003-290    | 4   | /P    | Washer                               |
| 17    | 3402-010    | 4   |       | Gasket                               |
| 18    | 0217-632    | 1   |       | Spark Plug (NGK CR6E)                |
| 18    | 0217-708    | 1   | F     | Spark Plug (NGK CR7E)                |
| 18    | 0217-705    | 1   | /P/F  | Spark Plug (NGK CR8E)                |
| 19    | 3402-100    | 2   |       | Cap, Inspection                      |
| 20    | 3402-101    | 2   |       | O-Ring                               |
| 21    | 3004-341    | 5   | S/P   | Bolt                                 |
| 22    | 3423-383    | 1   |       | Bolt, Stud                           |
| 23    | 3530-045    | 1   | /P    | Switch, Water Temperature            |
| 24    | 3413-012    | 1   |       | Thermostat                           |
| 25    | 3413-004    | 1   |       | Cover, Thermostat                    |
| 26    | 0570-091    | 1   |       | Manifold, Intake                     |
| 27    | 0470-531    | 1   |       | O-Ring                               |
| 28    | 8476-620    | 2   |       | Screw, Machine                       |
| 29    | 0423-317    | 1   | /P    | Clamp                                |
| 30    | 3402-099    | 4   |       | Guide, Valve                         |
| 31    | 3402-035    | 1   |       | Plug, Head                           |
|       | 3402-048    | 1   | F     | Plug, Frost                          |

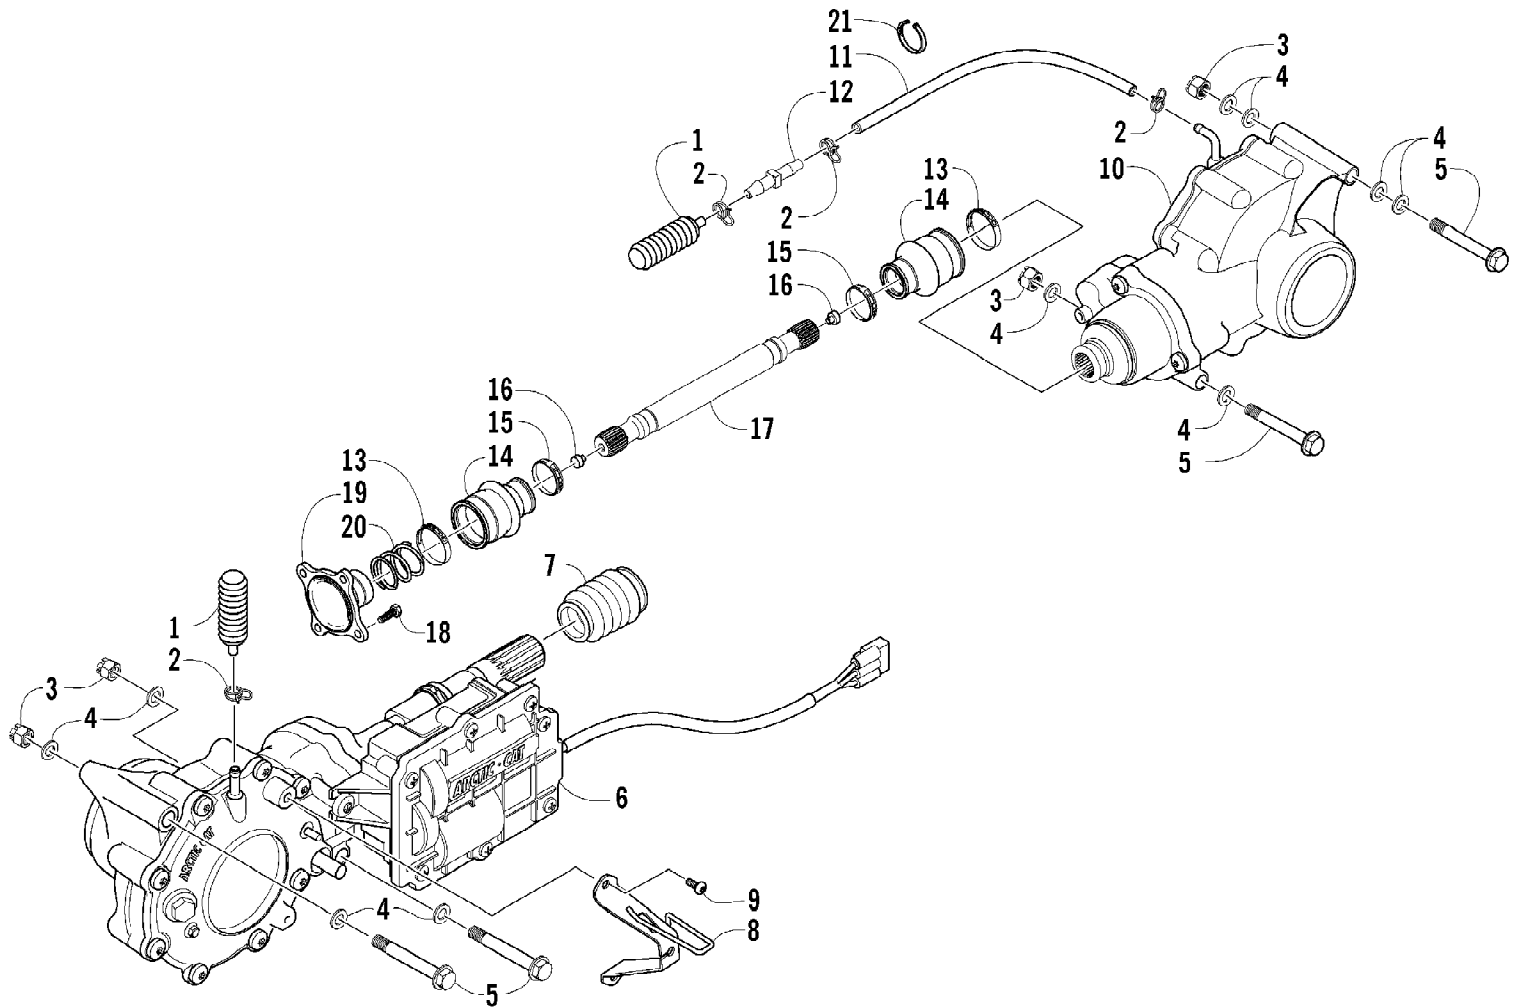 


| Ref # | Part Number | Qty | S/P/F | Description             |
|-------|-------------|-----|-------|-------------------------|
| 1     | 0402-147    | 2   | S     | Bladder, Gearcase       |
| 2     | 0423-315    | 4   |       | Clamp, Fitting          |
| 3     | 8428-002    | 4   |       | Nut, Lock               |
| 4     | 0423-426    | 10  |       | Washer                  |
| 5     | 0423-404    | 4   |       | Screw, Cap              |
| 6     | 1502-248    | 1   |       | Gearcase, Front Drive   |
| 7     | 0402-966    | 1   |       | Boot, Shaft             |
| 8     | 0502-500    | 1   |       | Plate, Cable            |
| 9     | 0423-396    | 2   |       | Screw, Self-Tapping     |
| 10    | 1502-079    | 1   | S     | Gearcase, Rear Drive    |
| 11    | 0410-048    | AR  | S     | Hose, Vent - 25 ft      |
| 12    | 0470-462    | 1   |       | Fitting, Vent           |
| 13    | 0423-393    | 2   |       | Clamp, Boot             |
| 14    | 0402-985    | 2   | /P    | Boot                    |
| 15    | 0423-411    | 2   |       | Clamp, Boot             |
| 16    | 0673-618    | 2   | /P    | Bumper, Propeller Shaft |
| 17    | 1402-233    | 1   |       | Shaft, Propeller        |
| 18    | 8408-820    | 4   | /P    | Screw, Cap              |
| 19    | 0402-950    | 1   |       | Flange, Output          |
| 20    | 1402-026    | 1   |       | Spring                  |
| 21    | 0123-788    | AR  | /P    | Tie, Cable              |

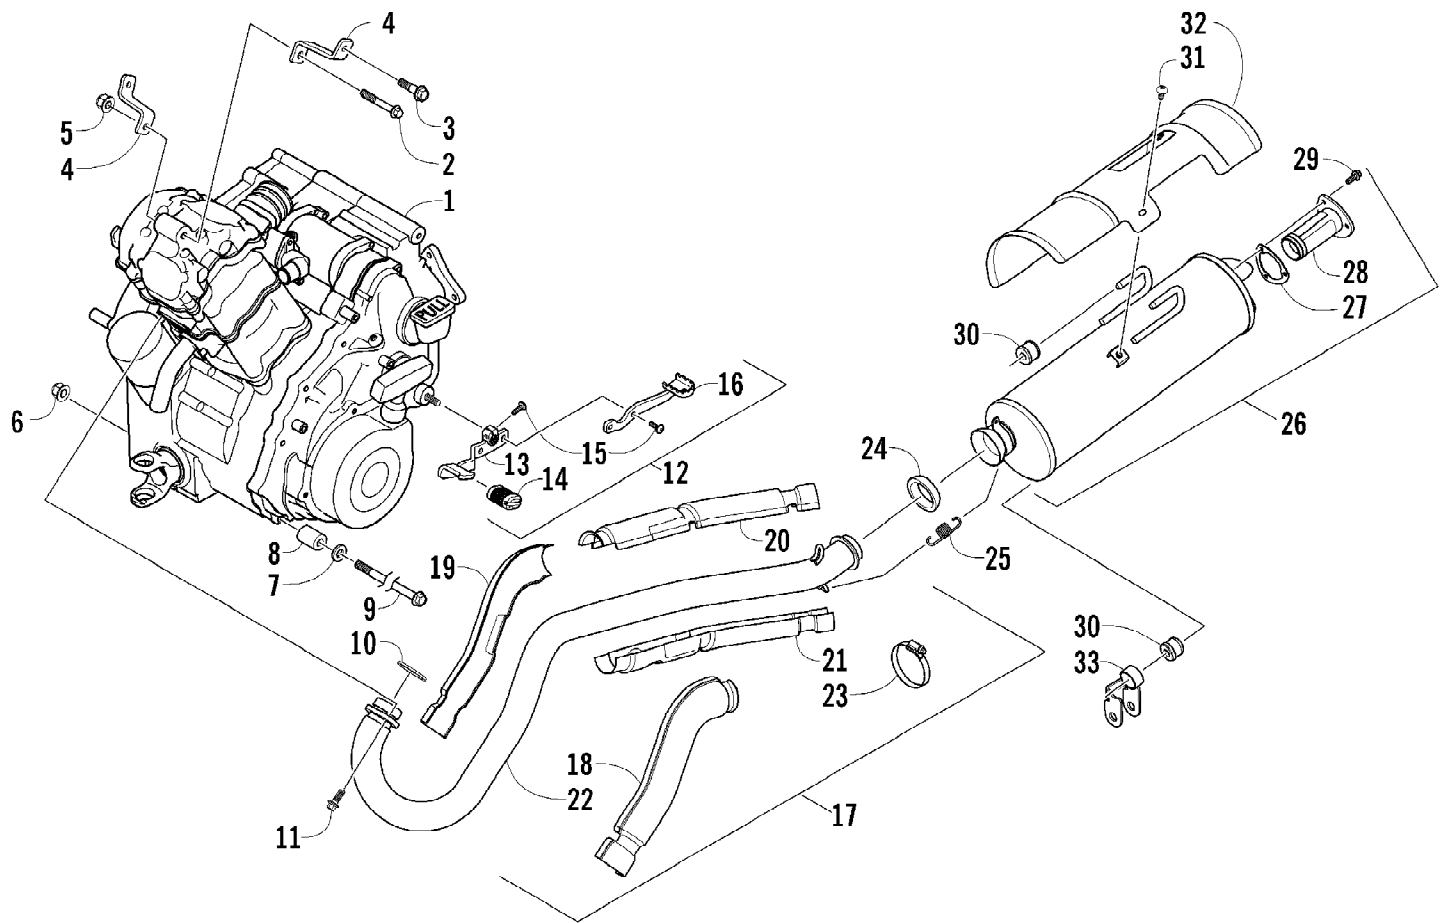 

| Ref # | Part Number | Qty | S/P/F | Description                                              |
|-------|-------------|-----|-------|----------------------------------------------------------|
| 1     | 0462-031    | 1   |       | Engine                                                   |
| 2     | 8408-860    | 1   |       | Screw, Cap                                               |
| 3     | 8408-816    | 2   |       | Screw, Cap                                               |
| 4     | 1506-625    | 1   |       | Bracket, Engine - Right                                  |
| 4     | 1506-626    | 1   |       | Bracket, Engine - Left                                   |
| 5     | 8424-802    | 1   |       | Nut                                                      |
| 6     | 8428-002    | 2   |       | Nut, Lock                                                |
| 7     | 0423-426    | 2   |       | Washer, Engine                                           |
| 8     | 0423-042    | 1   | S     | Spacer, Engine                                           |
| 9     | 0423-405    | 2   |       | Screw, Cap                                               |
| 10    | 0412-007    | 1   | /P    | Seal, Exhaust                                            |
| 11    | 8408-820    | 2   | /P    | Screw, Cap                                               |
| 12    | 0502-694    | 1   |       | Lever, Shift - Assembly (inc. 13-14, two No. 15, and 16) |
| 13    | 0502-691    | 1   |       | Lever, Toe Shift                                         |
| 14    | 1402-284    | 1   |       | Pad, Toe - Shift Lever                                   |
| 15    | 8476-620    | 3   |       | Screw, Machine                                           |
| 16    | 0502-693    | 1   |       | Lever, Heel Shift                                        |
| 17    | 0512-341    | 1   | /P    | Pipe, Exhaust - Assembly (inc. 18-23)                    |
| 18    | 0412-326    | 1   |       | Shield, Exhaust Pipe - Outer - Front                     |
| 19    | 0412-320    | 1   |       | Shield, Exhaust Pipe - Inner - Front                     |
| 20    | 0412-350    | 1   |       | Shield, Exhaust Pipe - Outer - Rear                      |
| 21    | 0412-339    | 1   |       | Shield, Exhaust Pipe - Inner - Rear                      |
| 22    | 0512-340    | 1   | /P    | Pipe, Exhaust                                            |
| 23    | 0423-317    | 3   | /P    | Hose Clamp                                               |
| 24    | 0412-375    | 1   | /P    | Seal, Muffler                                            |
| 25    | 0612-668    | 2   | /P    | Spring, Extension                                        |
| 26    | 0512-306    | 1   | /P    | Muffler - Assembly (inc. 27-29)                          |
| 27    | 0412-313    | 1   |       | Gasket, Spark Arrester                                   |
| 28    | 0512-219    | 1   | /P    | Arrester, Spark - Assembly                               |
| 29    | 8408-616    | 3   |       | Screw, Cap                                               |
| 30    | 0412-215    | 3   | S     | Bushing, Exhaust Pipe                                    |
| 31    | 8477-610    | 3   |       | Screw, Machine                                           |
| 32    | 0412-373    | 1   | /P    | Cover, Muffler                                           |
| 33    | 1506-732    | 1   |       | Channel, Muffler Support                                 |

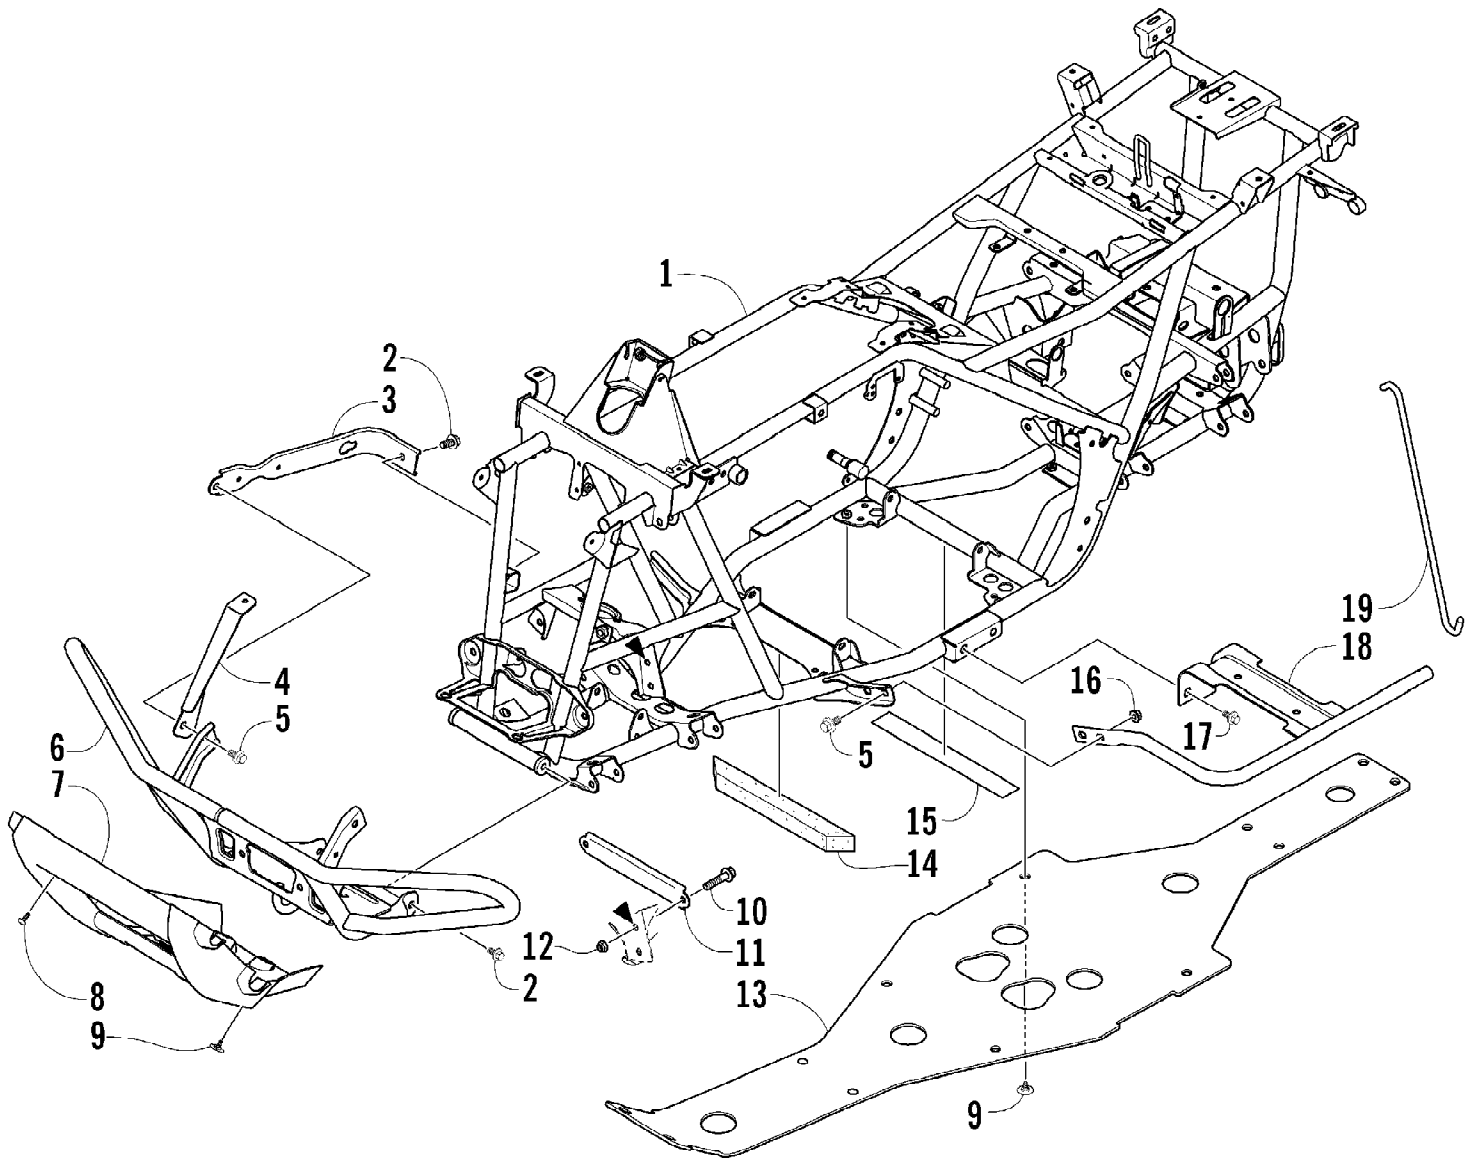 


| Ref # | Part Number | Qty | S/P/F | Description                        |
|-------|-------------|-----|-------|------------------------------------|
| 1     | 2506-549    | 1   |       | Frame, Main                        |
| 2     | 8409-020    | 4   | /P    | Screw, Cap                         |
| 3     | 1506-596    | 1   | /P    | Channel, Bumper Mounting - Right   |
| 3     | 0506-653    | 1   | S     | Channel, Bumper Mounting - Left    |
| 4     | 1506-562    | 1   |       | Bracket, Mounting - Bumper - Right |
| 4     | 1506-563    | 1   |       | Bracket, Mounting - Bumper - Left  |
| 5     | 8408-816    | 6   |       | Screw, Cap                         |
| 6     | 1506-855    | 1   | /P    | Bumper                             |
| 7     | 1406-360    | 1   |       | Grille, Bumper                     |
| 8     | 0423-419    | 2   |       | Screw, Machine                     |
| 9     | 0423-101    | 12  |       | Screw, Shoulder                    |
| 10    | 8409-025    | 2   |       | Screw, Cap                         |
| 11    | 1506-429    | 1   | S     | Brace, A-Arm                       |
| 12    | 8428-002    | 2   |       | Nut, Lock                          |
| 13    | 1406-030    | 1   |       | Panel, Belly                       |
| 14    | 1506-067    | 1   |       | Pad, Foam                          |
| 15    | 0406-289    | 1   |       | Pad, Foam                          |
| 16    | 8424-802    | 4   |       | Nut                                |
| 17    | 8409-016    | 4   |       | Screw, Cap                         |
| 18    | 1506-380    | 1   |       | Footrest - Right                   |
| 18    | 1506-379    | 1   |       | Footrest - Left                    |
| 19    | 2506-423    | 2   |       | Rod, Support                       |

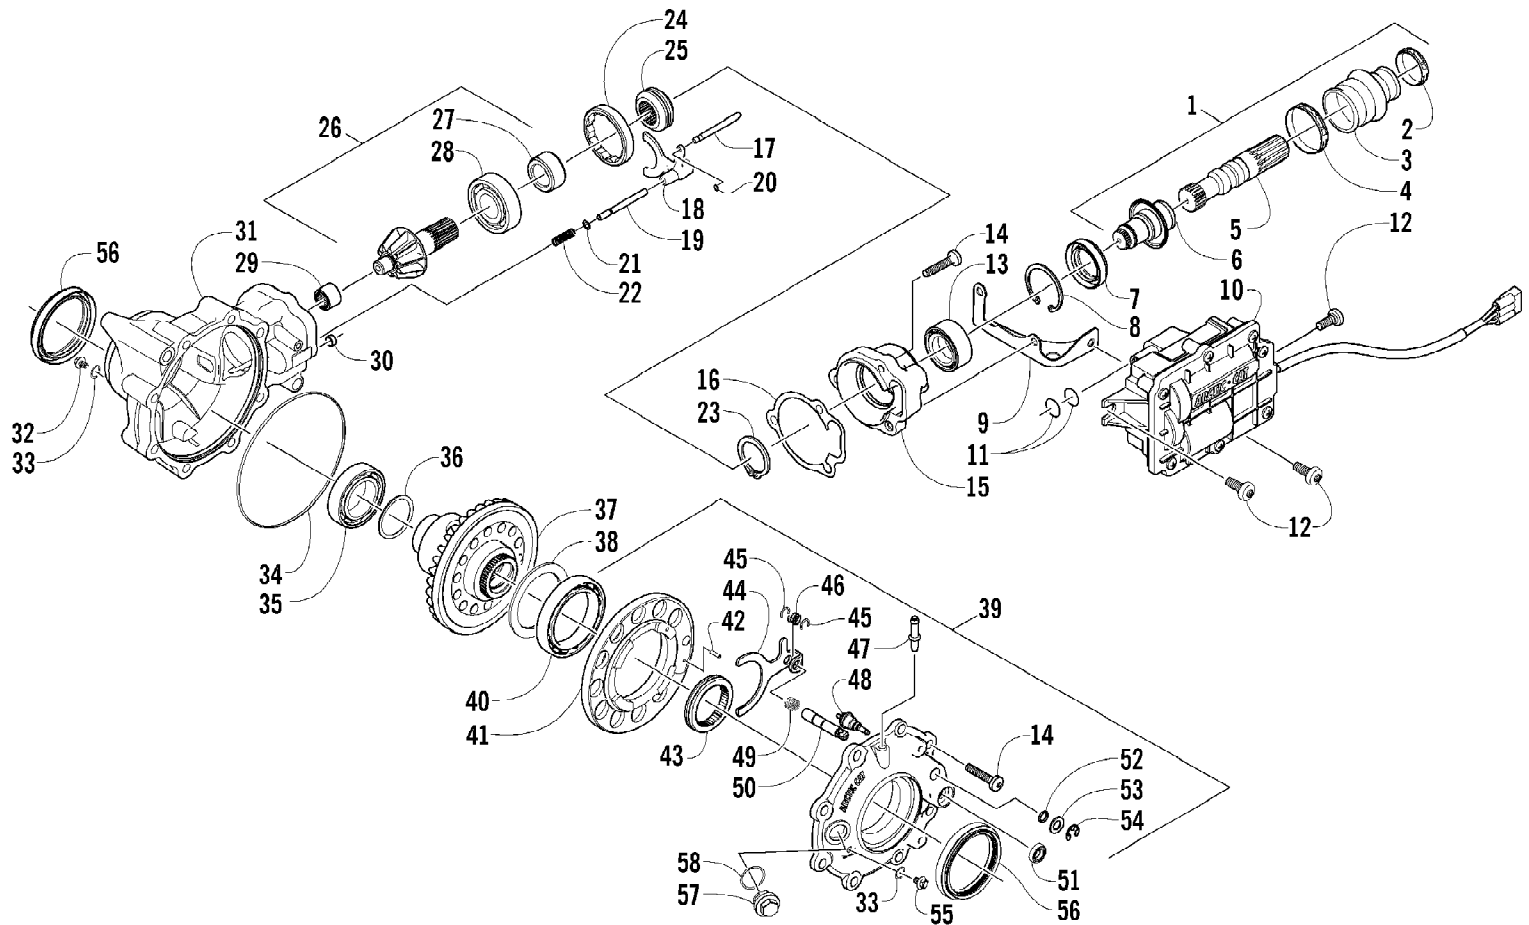 


| Ref # | Part Number | Qty | S/P/F | Description                                              |
|-------|-------------|-----|-------|----------------------------------------------------------|
|       | 1502-248    | 1   |       | Complete Front Drive Gearcase Assembly                   |
| 1     | 1502-083    | 1   |       | Shaft, Propeller - Assembly (inc. 2-6)                   |
| 2     | 0423-411    | 1   |       | Clamp, Boot                                              |
| 3     | 0402-985    | 1   | /P    | Boot, Propeller Shaft                                    |
| 4     | 0423-393    | 1   |       | Clamp, Boot                                              |
| 5     | 1402-045    | 1   |       | Shaft, Output                                            |
| 6     | 1502-085    | 1   | /P    | Shaft, Input                                             |
| 7     | 1402-011    | 1   |       | Seal                                                     |
| 8     | 0423-423    | 1   |       | Ring, Retaining                                          |
| 9     | 0502-347    | 1   |       | Bracket, Actuator                                        |
| 10    | 0502-579    | 1   |       | Actuator (inc. one No. 11)                               |
| 11    | 0423-498    | 2   | S     | O-Ring                                                   |
| 12    | 0423-396    | 3   |       | Screw, Self-Tapping                                      |
| 13    | 1402-043    | 1   |       | Bearing                                                  |
| 14    | 0423-118    | 11  |       | Screw, Self-Tapping                                      |
| 15    | 0502-528    | 1   | /P    | Housing, Pinion                                          |
| 16    | 0402-947    | 1   |       | Gasket, Flange                                           |
| 17    | 0402-997    | 1   |       | Shaft, Selector                                          |
| 18    | 0402-998    | 1   |       | Fork, Selector                                           |
| 19    | 0402-417    | 1   |       | Shaft, Shuttle                                           |
| 20    | 0423-402    | 1   |       | Ring, Retaining                                          |
| 21    | 0423-147    | 1   |       | O-Ring                                                   |
| 22    | 0402-999    | 1   |       | Spring, Return                                           |
| 23    | 0423-417    | 1   |       | Ring, Retaining                                          |
| 24    | 0402-357    | 1   |       | Collar, Lock                                             |
| 25    | 0402-413    | 1   |       | Coupler, Drive                                           |
| 26    | 0502-783    | 1   |       | Gear, Pinion - Assembly - 10T (inc. 27-28)               |
| 27    | 0402-336    | 1   |       | Collar, Retaining                                        |
| 28    | 0402-327    | 1   |       | Bearing                                                  |
| 29    | 0402-328    | 1   |       | Bearing                                                  |
| 30    | 0402-411    | 1   |       | Pin, Dowel                                               |
| 31    | 0502-514    | 1   |       | Housing, Gearcase                                        |
| 32    | 1402-210    | 1   | /P    | Plug, Magnetic (inc. one No. 33)                         |
| 33    | 0423-153    | 2   |       | O-Ring                                                   |
| 34    | 0423-149    | 1   |       | O-Ring                                                   |
| 35    | 0402-393    | 1   |       | Bearing                                                  |
| 36    | 0402-405    | AR  |       | Shim                                                     |
| 36    | 0402-406    | AR  |       | Shim                                                     |
| 36    | 0402-407    | AR  |       | Shim                                                     |
| 36    | 0402-408    | AR  |       | Shim                                                     |
| 36    | 0402-409    | AR  |       | Shim                                                     |
| 37    | 1502-234    | 1   | S     | Gear, Ring - 36T                                         |
| 38    | 1402-074    | AR  |       | Shim                                                     |
| 38    | 1402-075    | AR  |       | Shim                                                     |
| 38    | 1402-076    | AR  |       | Shim                                                     |
| 38    | 1402-077    | AR  |       | Shim                                                     |
| 38    | 1402-078    | AR  |       | Shim                                                     |
| 39    | 1502-097    | 1   |       | Cover, Gearcase (inc. one No. 33, 40-55, and one No. 56) |
| 40    | 1402-053    | 1   |       | Bearing                                                  |
| 41    | 0502-413    | 1   |       | Flange, Bearing                                          |
| 42    | 1402-079    | 1   |       | Pin, Parallel                                            |


| Ref # | Part Number | Qty | S/P/F | Description                       |
|-------|-------------|-----|-------|-----------------------------------|
| 43    | 1402-042    | 1   |       | Collar, Sliding                   |
| 44    | 1402-054    | 1   |       | Fork                              |
| 45    | 1402-058    | 2   |       | Ring, Retaining                   |
| 46    | 1402-057    | 1   |       | Spring                            |
| 47    | 1402-104    | 1   |       | Fitting                           |
| 48    | 0402-419    | 1   |       | Switch, Indicator                 |
| 49    | 1402-063    | 1   |       | Spring                            |
| 50    | 1402-055    | 1   |       | Shaft, Lock                       |
| 51    | 1402-056    | 1   |       | Seal                              |
| 52    | 0423-133    | 1   |       | O-Ring                            |
| 53    | 0423-132    | 1   |       | Washer                            |
| 54    | 0423-424    | 1   |       | Ring, Retaining                   |
| 55    | 1402-211    | 1   |       | Plug, Oil Level (inc. one No. 33) |
| 56    | 1402-441    | 2   | S     | Seal                              |
| 57    | 0402-333    | 1   | /P    | Plug, Fill (inc. 58)              |
| 58    | 0423-154    | 1   |       | O-Ring                            |

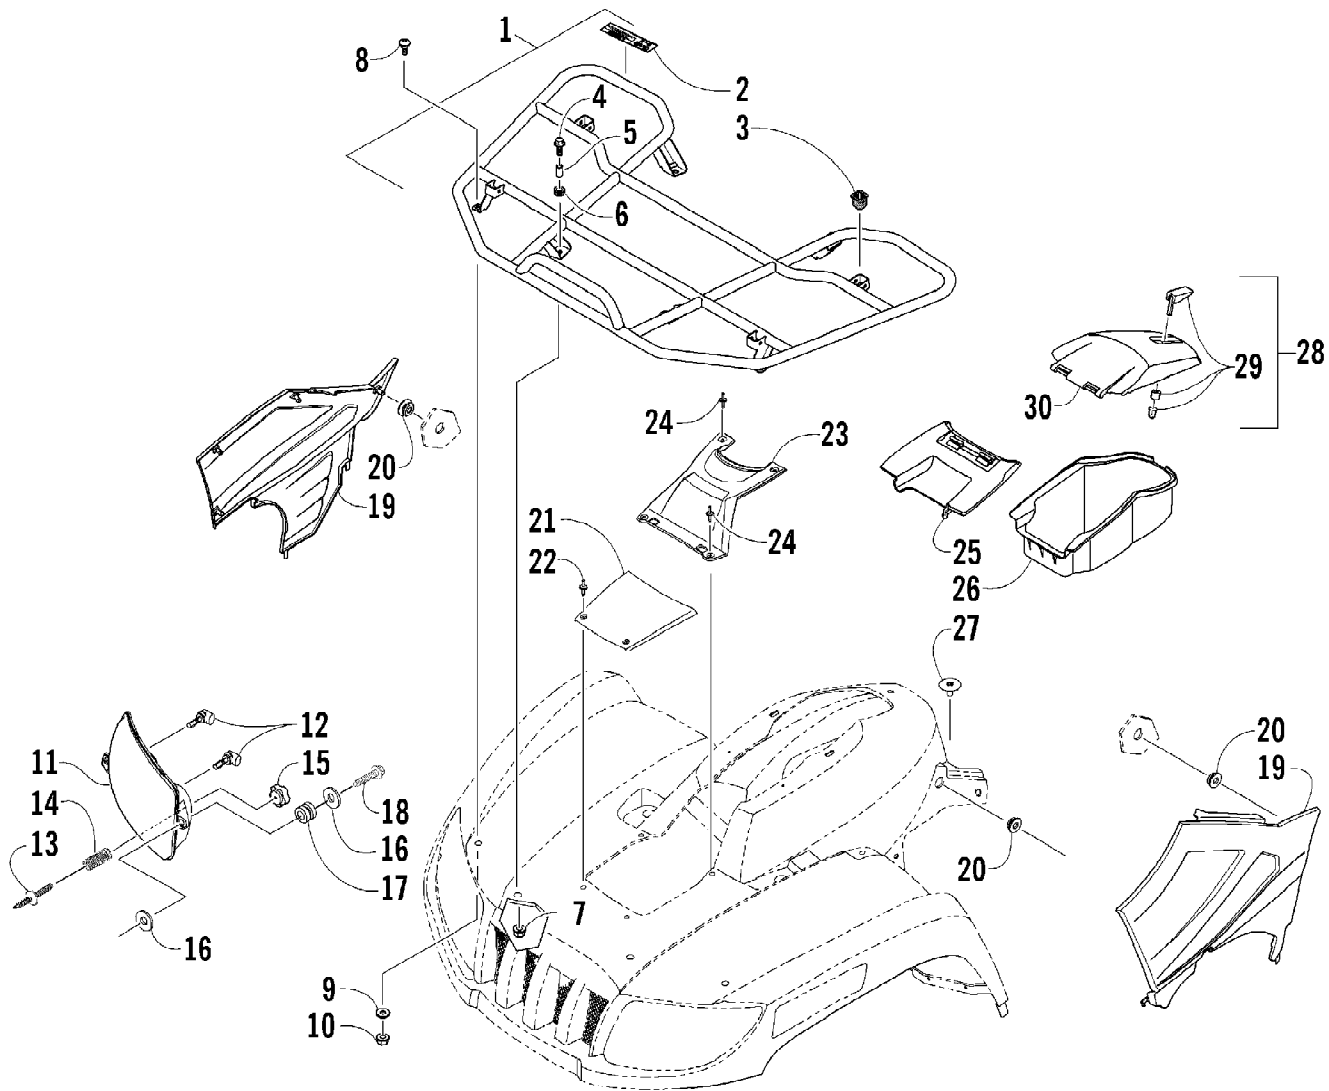 


| Ref # | Part Number | Qty | S/P/F | Description                           |
|-------|-------------|-----|-------|---------------------------------------|
| 1     | 2506-106    | 1   |       | Rack, Front - Assembly (inc. 2-3)     |
| 2     | 0411-576    | 1   |       | Decal, Warning - Front Rack Load      |
| 3     | 0441-592    | 4   | /P    | Bushing, Rack                         |
| 4     | 8410-830    | 4   |       | Screw, Cap                            |
| 5     | 0423-669    | 4   |       | Spacer                                |
| 6     | 0423-465    | 4   |       | Grommet                               |
| 7     | 8432-802    | 4   |       | Nut, Lock                             |
| 8     | 0423-654    | 2   |       | Screw, Shoulder                       |
| 9     | 8050-222    | 2   | /P    | Washer                                |
| 10    | 0423-540    | 2   |       | Nut, Lock                             |
| 11    | 0509-034    | 1   | S     | Headlight Assembly - Right (inc. 12)  |
| 11    | 0509-035    | 1   |       | Headlight Assembly - Left (inc. 12)   |
| 12    | 0409-055    | 4   |       | Bulb, Headlight                       |
| 13    | 0423-514    | 2   |       | Stud, Adjuster - Headlight            |
| 14    | 0423-522    | 2   |       | Spring, Adjuster                      |
| 15    | 0423-513    | 2   |       | Knob, Adjuster                        |
| 16    | 8050-217    | 8   | /P    | Washer                                |
| 17    | 0423-447    | 4   |       | Grommet                               |
| 18    | 0623-785    | 4   |       | Screw, Self-Tapping                   |
| 19    | 2406-376    | 1   |       | Panel, Side - Right                   |
| 19    | 2406-377    | 1   |       | Panel, Side - Left                    |
| 20    | 0423-678    | 7   |       | Grommet                               |
| 21    | 1406-358    | 1   |       | Cover, Access                         |
| 22    | 0423-535    | 2   |       | Rivet, Reinstallable                  |
| 23    | 1406-484    | 1   |       | Cover, Steering Post                  |
| 24    | 0623-362    | 4   |       | Rivet, Reinstallable                  |
| 25    | 0470-513    | 1   |       | Cover, Storage Box                    |
| 26    | 1406-573    | 1   |       | Box, Storage                          |
| 27    | 0423-101    | 2   |       | Screw, Body                           |
| 28    | 2506-234    | 1   |       | Lid, Storage Box w/Latch (inc. 29-30) |
| 29    | 1406-599    | 1   |       | Latch, Storage Box                    |
| 30    | 0470-514    | 1   |       | Lid, Storage Box                      |

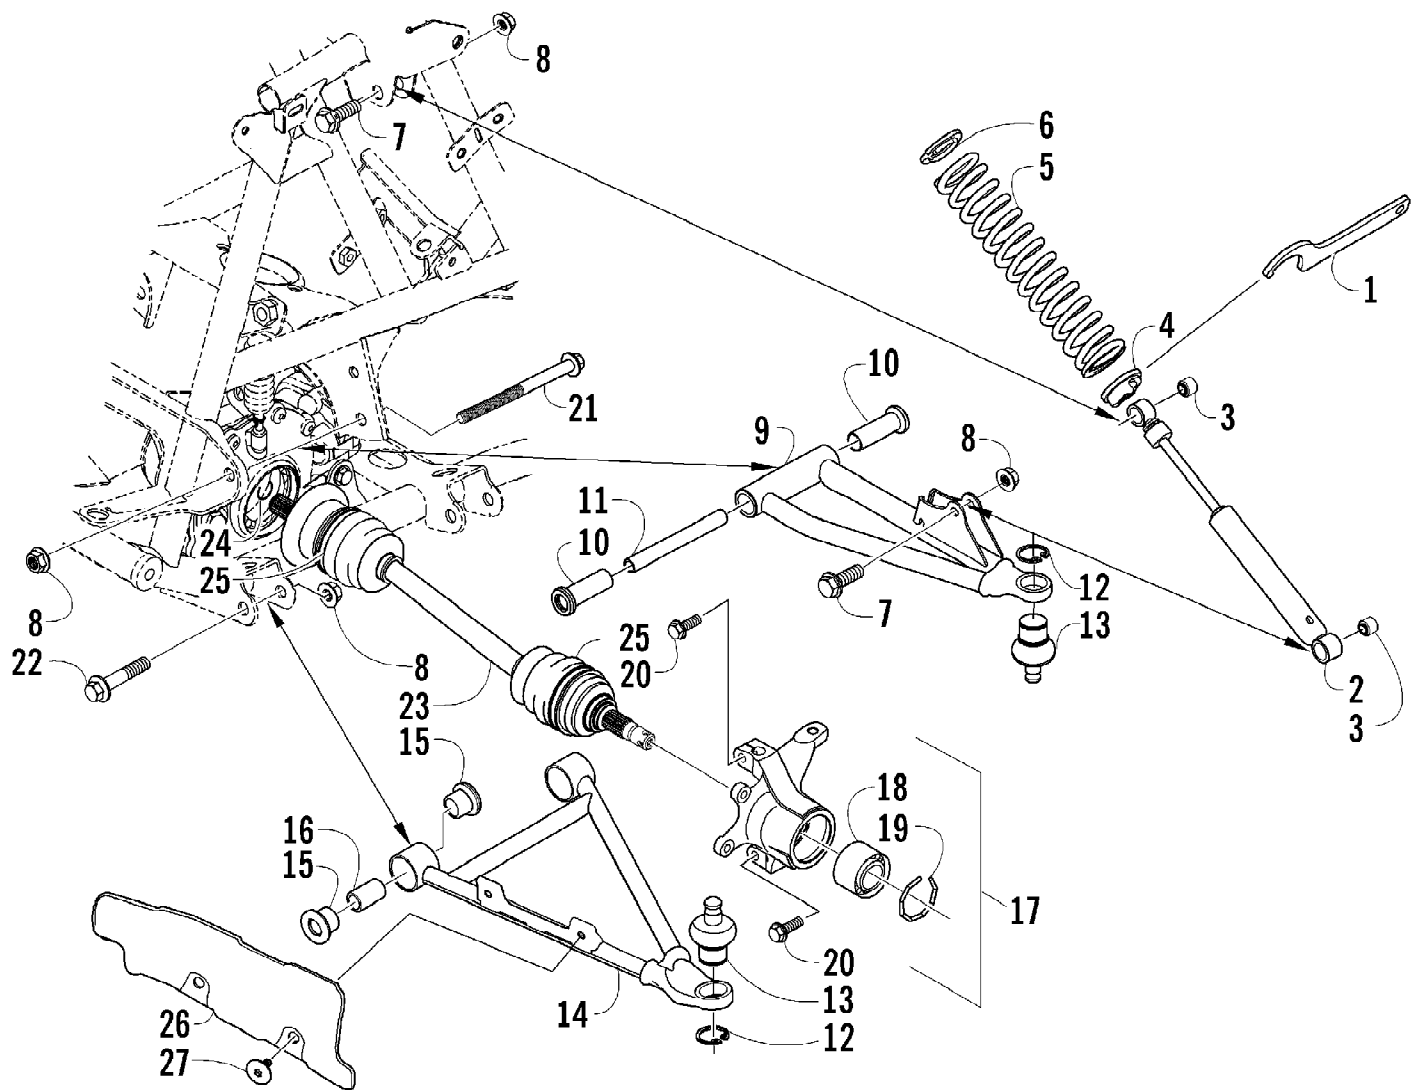 


| Ref # | Part Number | Qty | S/P/F | Description                                             |
|-------|-------------|-----|-------|---------------------------------------------------------|
| 1     | 0441-587    | 1   |       | Wrench, Spanner                                         |
| 2     | 0403-180    | 2   |       | Shock Absorber - Front (inc. 3)                         |
| 3     | 0403-182    | 4   |       | Bushing, Double-Bonded                                  |
| 4     | 0403-102    | 2   |       | Cam, Spring Adjuster                                    |
| 5     | 0403-178    | 2   |       | Spring, Shock Absorber                                  |
| 6     | 1603-889    | 2   | /P    | Retainer, Spring                                        |
| 7     | 8409-040    | 4   |       | Screw, Cap                                              |
| 8     | 8428-002    | 10  |       | Nut, Lock                                               |
| 9     | 0503-272    | 1   | S     | A-Arm, Upper Right (inc. 10-13)                         |
| 9     | 0503-273    | 1   | S     | A-Arm, Upper Left (inc. 10-13)                          |
| 10    | 0403-081    | 4   | S     | Bushing                                                 |
| 11    | 0403-080    | 2   |       | Collar                                                  |
| 12    | 0423-009    | 4   | /P    | Clip, Ball Joint                                        |
| 13    | 0405-115    | 4   | /P    | Ball Joint - Front                                      |
| 14    | 0503-342    | 1   | S     | A-Arm, Lower Right (inc. 12-13 and 15-16)               |
| 14    | 0503-343    | 1   | S     | A-Arm, Lower Left (inc. 12-13 and 15-16)                |
| 15    | 0403-115    | 8   | S     | Bushing                                                 |
| 16    | 0403-114    | 4   | S     | Collar                                                  |
| 17    | 0505-460    | 1   |       | Knuckle, Steering - Assembly - Right Front (inc. 18-19) |
| 17    | 0505-461    | 1   | S     | Knuckle, Steering - Assembly - Left Front (inc. 18-19)  |
| 18    | 1402-027    | 2   | S/P   | Bearing, Wheel Hub                                      |
| 19    | 0423-423    | 2   |       | Ring, Retaining                                         |
| 20    | 8409-030    | 4   |       | Screw, Cap                                              |
| 21    | 0423-334    | 2   |       | Screw, Cap                                              |
| 22    | 8409-075    | 4   |       | Screw, Cap                                              |
| 23    | 0502-812    | 1   | S     | Axle, Drive - Front - Right (inc. 24-25)                |
| 23    | 0502-813    | 1   | S     | Axle, Drive - Front - Left (inc. 24-25)                 |
| 24    | 1441-109    | 2   | S     | Clip, Retaining                                         |
| 25    | 0436-276    | 2   | S     | Repair Kit, Boot - Front Axle                           |
| 26    | 0441-752    | 1   |       | Guard, Boot - Axle - Right                              |
| 26    | 0441-753    | 1   |       | Guard, Boot - Axle - Left                               |
| 27    | 0423-545    | 4   | /P    | Screw, Body                                             |

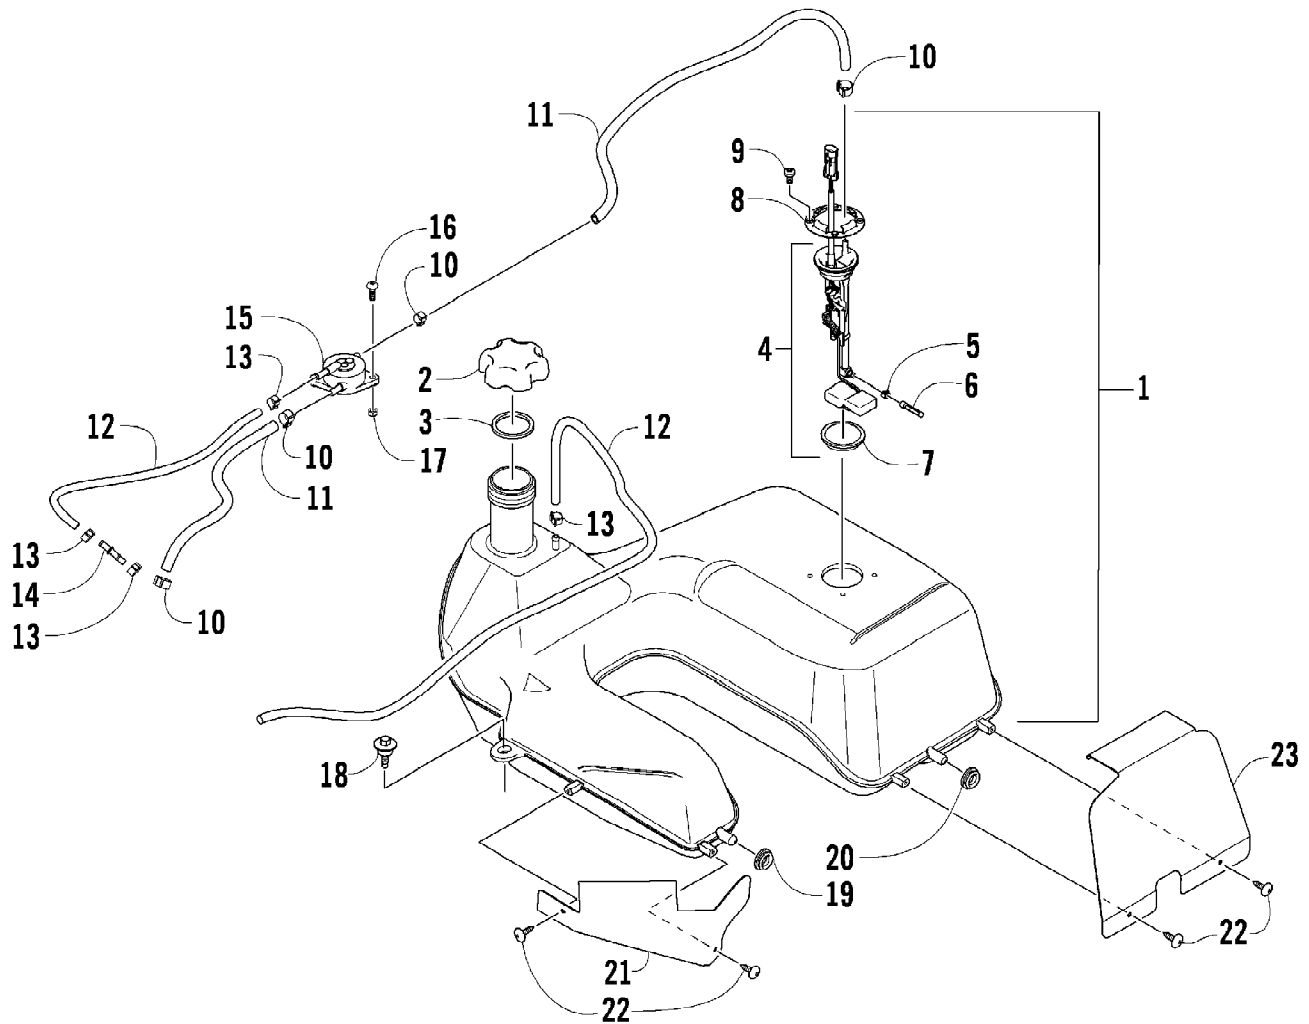 


| Ref # | Part Number | Qty | S/P/F | Description                         |
|-------|-------------|-----|-------|-------------------------------------|
| 1     | 0570-183    | 1   | S     | Tank, Gas - Assembly (inc. 2-9)     |
| 2     | 0470-438    | 1   | /P    | Cap, Gas Tank (inc. 3)              |
| 3     | 0109-733    | 1   | /P    | Gasket, Gas Tank Cap                |
| 4     | 0570-141    | 1   | S     | Sensor, Fuel Level (inc. 5-7)       |
| 5     | 0423-603    | 1   |       | Clamp, Hose                         |
| 6     | 0470-475    | 1   |       | Filter, Fuel                        |
| 7     | 0470-521    | 1   |       | Seal, Fuel Level Sensor             |
| 8     | 0470-639    | 1   | /P    | Plate, Mounting - Fuel Level Sensor |
| 9     | 1623-158    | 4   |       | Screw, Plastite                     |
| 10    | 0423-688    | 4   |       | Clamp, Hose                         |
| 11    | 0410-143    | AR  |       | Hose, Gasline - 25 ft               |
| 12    | 0410-070    | AR  | /P    | Hose, Gasline - 25 ft               |
| 13    | 0423-689    | 4   |       | Clamp, Hose                         |
| 14    | 0470-702    | 1   | /P    | Fitting, Straight                   |
| 15    | 0470-758    | 1   | /P    | Pump, Fuel                          |
| 16    | 8476-620    | 2   |       | Screw, Machine                      |
| 17    | 0623-038    | 2   |       | Nut, Lock                           |
| 18    | 0423-732    | 2   |       | Screw, Shoulder                     |
| 19    | 0423-460    | 1   |       | Grommet                             |
| 20    | 0423-806    | 1   |       | Grommet                             |
| 21    | 0470-709    | 1   |       | Shield, Gas Tank - Front            |
| 22    | 0623-797    | 4   |       | Screw, Self-Tapping                 |
| 23    | 0470-710    | 1   |       | Shield, Gas Tank - Rear             |

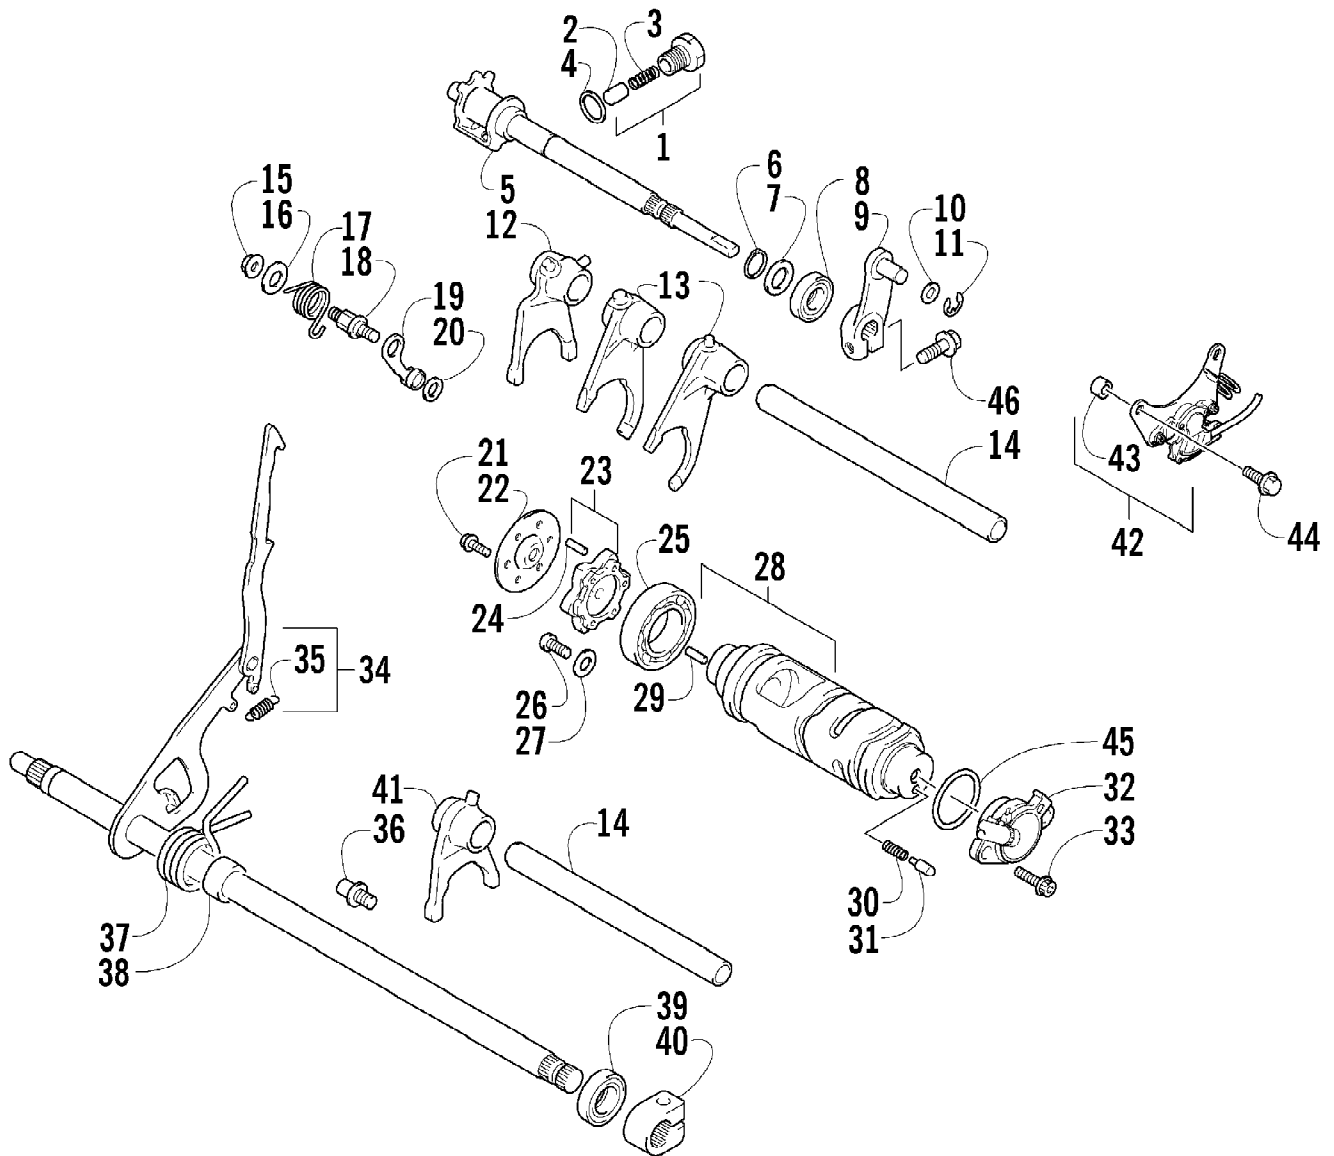 


| Ref # | Part Number | Qty | S/P/F | Description                     |
|-------|-------------|-----|-------|---------------------------------|
| 1     | 3446-164    | 1   |       | Stopper, Reverse (inc. 2-3)     |
| 2     | 3446-117    | 1   |       | Stopper                         |
| 3     | 3402-088    | 1   |       | Spring                          |
| 4     | 3402-012    | 1   |       | Gasket, Cam Stopper             |
| 5     | 3446-349    | 1   |       | Cam, Reverse Shift              |
| 6     | 3423-358    | 1   | S     | Circlip                         |
| 7     | 3423-357    | 1   |       | Washer                          |
| 8     | 3402-076    | 1   |       | Seal, Oil                       |
| 9     | 3402-434    | 1   | /P    | Arm, Reverse Gear Shift         |
| 10    | 3423-204    | 1   | /P    | Washer                          |
| 11    | 3423-168    | 1   | S     | E-Ring                          |
| 12    | 3446-040    | 1   |       | Fork, Gear Shift - Reverse      |
| 13    | 3446-347    | 2   |       | Fork, Gear Shift                |
| 14    | 3446-052    | 2   |       | Shaft, Gear Shift Fork          |
| 15    | 3007-373    | 1   | /P    | Nut, Cam Stopper                |
| 16    | 3423-142    | 1   |       | Washer, Cam Stopper             |
| 17    | 3423-551    | 1   |       | Spring, Cam Stopper             |
| 18    | 3446-048    | 1   |       | Support, Cam Stopper            |
| 19    | 3446-043    | 1   |       | Stopper, Cam                    |
| 20    | 3423-141    | 1   |       | Washer, Cam Stopper             |
| 21    | 3423-125    | 1   | S     | Bolt, Gear Shift Cam            |
| 22    | 3446-309    | 1   | /P    | Guide, Gear Shift Cam           |
| 23    | 3446-049    | 1   |       | Plate, Gear Shift Cam (inc. 24) |
| 24    | 3423-045    | 5   |       | Pin                             |
| 25    | 3402-051    | 1   |       | Bearing, Gear Shift Cam         |
| 26    | 3423-370    | 2   |       | Screw                           |
| 27    | 3423-135    | 2   |       | Retainer, Shift Cam Bearing     |
| 28    | 3446-348    | 1   |       | Cam, Gear Shift (inc. 29)       |
| 29    | 3423-114    | 1   | /P    | Pin                             |
| 30    | 3402-087    | 2   |       | Spring                          |
| 31    | 3423-044    | 2   |       | Contact                         |
| 32    | 3402-816    | 1   |       | Switch, Gear Position Assembly  |
| 33    | 3423-418    | 2   |       | Bolt                            |
| 34    | 3446-410    | 1   | /P    | Shaft, Gear Shift (inc. 35)     |
| 35    | 3402-093    | 1   |       | Spring                          |
| 36    | 3446-056    | 1   |       | Stopper, Gear Shift             |
| 37    | 3402-094    | 1   |       | Spring, Gear Return             |
| 38    | 3446-054    | 1   |       | Spacer, Gear Shift Shaft        |
| 39    | 3402-068    | 1   | /P    | Seal, Oil                       |
| 40    | 3402-815    | 1   |       | Boss, Gear Shift Lever          |
| 41    | 3446-039    | 1   |       | Fork, Gear Shift                |
| 42    | 3409-020    | 1   |       | Switch, Reverse (inc. 43)       |
| 43    | 3423-553    | 1   |       | Spacer                          |
| 44    | 3423-307    | 2   | S     | Bolt                            |
| 45    | 3423-059    | 1   |       | O-Ring                          |
| 46    | 8476-620    | 1   |       | Screw                           |

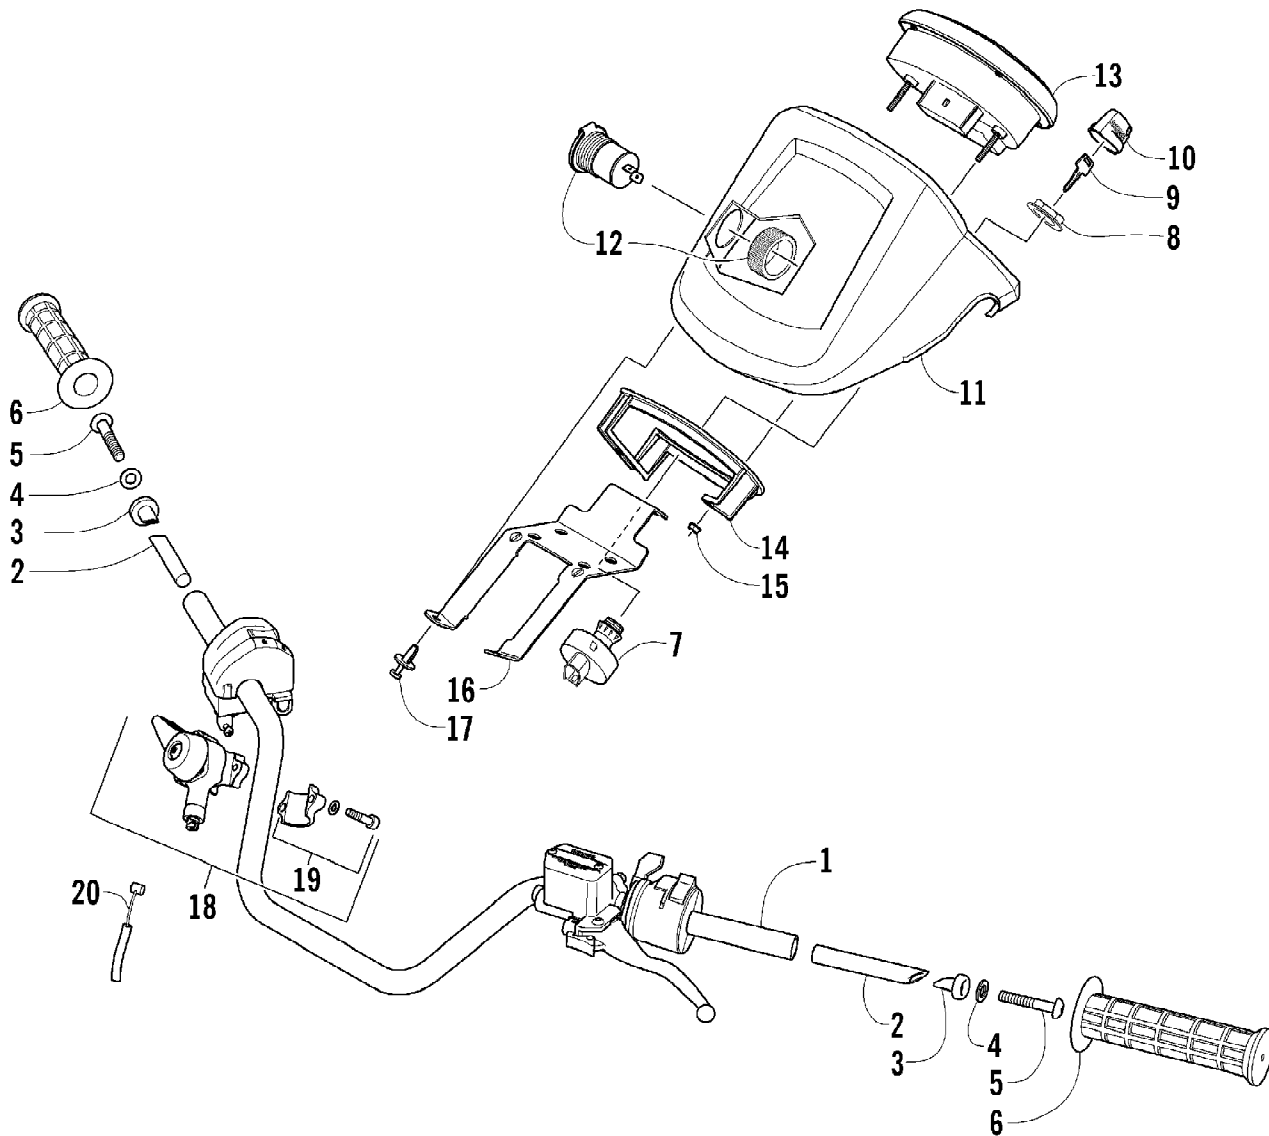 


| Ref # | Part Number | Qty | S/P/F | Description                               |
|-------|-------------|-----|-------|-------------------------------------------|
| 1     | 0505-476    | 1   |       | Tube, Handlebar                           |
| 2     | 0405-148    | 2   |       | Plug, Handlebar                           |
| 3     | 0405-149    | 2   |       | End Cap, Handlebar                        |
| 4     | 8050-247    | 2   | /P    | Washer                                    |
| 5     | 8477-845    | 2   |       | Screw, Machine                            |
| 6     | 0405-147    | 2   |       | Grip, Handlebar                           |
| 7     | 0430-069    | 1   | S     | Switch, Ignition - Assembly (inc. 8-10)   |
| 8     | 0430-050    | 1   |       | Nut, Flange - Ignition Switch             |
| 9     | 0430-042    | 1   |       | Key, Ignition (Y Series - Left-Side Cut)  |
| 9     | 0430-043    | 1   |       | Key, Ignition (Z Series - Right-Side Cut) |
| 10    | 0430-054    | 1   |       | Cover, Key                                |
| 11    | 0405-273    | 1   |       | Instrument Pod                            |
| 12    | 0641-897    | 1   | /P    | Outlet, Accessory - 12V                   |
| 13    | 0520-018    | 1   |       | Gauge, LCD                                |
| 14    | 0420-065    | 1   | /P    | Clamp, Plastic                            |
| 15    | 0423-493    | 2   |       | Nut, Hex                                  |
| 16    | 2506-470    | 1   |       | Bracket, Mounting - Instrument Pod        |
| 17    | 0423-535    | 2   |       | Rivet, Reinstallable                      |
| 18    | 0502-527    | 1   |       | Control, Differential Lock (inc. 19)      |
| 19    | 0502-613    | 1   |       | Clamp, Differential Lock Control - Kit    |
| 20    | 0487-050    | 1   | /P    | Cable, Differential Lock                  |

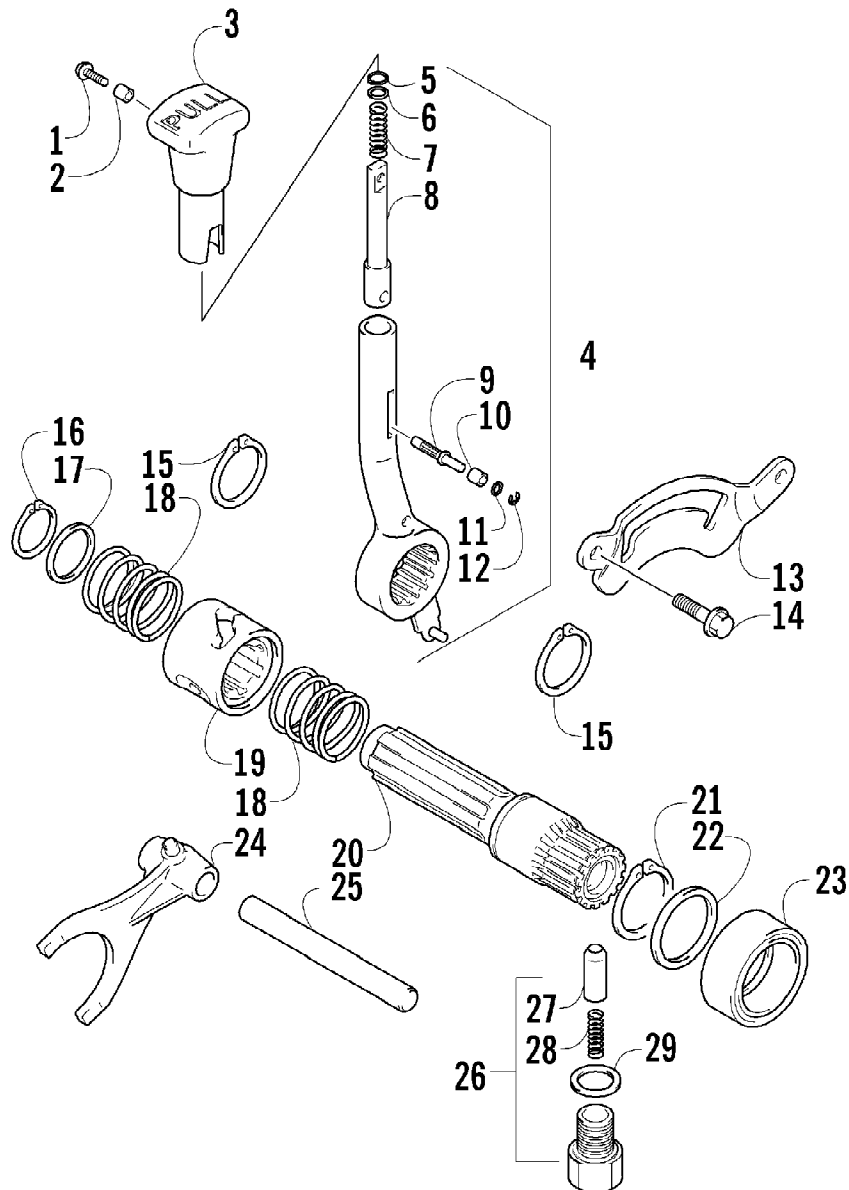 


| Ref # | Part Number | Qty | S/P/F | Description                                |
|-------|-------------|-----|-------|--------------------------------------------|
| 1     | 3423-156    | 1   | S     | Screw, Shift Handle                        |
| 2     | 3402-191    | 1   |       | Spacer                                     |
| 3     | 3446-078    | 1   |       | Handle, Shift                              |
| 4     | 3446-351    | 1   |       | Lever, Shift - Assembly (inc. 5-12)        |
| 5     | 3423-154    | 1   |       | Circlip                                    |
| 6     | 3423-155    | 1   |       | Washer                                     |
| 7     | 3446-107    | 1   |       | Spring                                     |
| 8     | 3446-252    | 1   |       | Rod                                        |
| 9     | 3423-205    | 1   |       | Pin                                        |
| 10    | 3446-106    | 1   |       | Roller                                     |
| 11    | 3423-152    | 1   | /P    | Washer                                     |
| 12    | 3423-153    | 1   |       | E-Ring                                     |
| 13    | 3446-077    | 1   |       | Plate, Lever Stop                          |
| 14    | 3004-377    | 2   | S/P   | Bolt, Stopper Plate                        |
| 15    | 3423-192    | 2   | /P    | Circlip, Shift Lever                       |
| 16    | 3423-191    | 1   | /P    | Circlip                                    |
| 17    | 3402-382    | 1   |       | Washer                                     |
| 18    | 3446-104    | 2   |       | Spring                                     |
| 19    | 3446-250    | 1   |       | Cam, Gear Shift                            |
| 20    | 3446-328    | 1   | /P    | Shaft, Gear Shift                          |
| 21    | 3423-193    | 1   | S/P   | Circlip, Gear Shift Shaft                  |
| 22    | 3006-489    | 1   |       | Washer, Gear Shift Shaft                   |
| 23    | 3402-071    | 1   | /P    | Seal, Oil                                  |
| 24    | 3446-073    | 1   |       | Fork, Gear Shift                           |
| 25    | 3446-051    | 1   |       | Shaft, Gear Shift Fork                     |
| 26    | 3446-314    | 1   |       | Stopper, Shift Cam - Assembly (inc. 27-28) |
| 27    | 3446-315    | 1   |       | Stopper, Shift Cam                         |
| 28    | 3423-524    | 1   |       | Spring                                     |
| 29    | 3402-012    | 1   |       | Gasket, Cam Stopper                        |

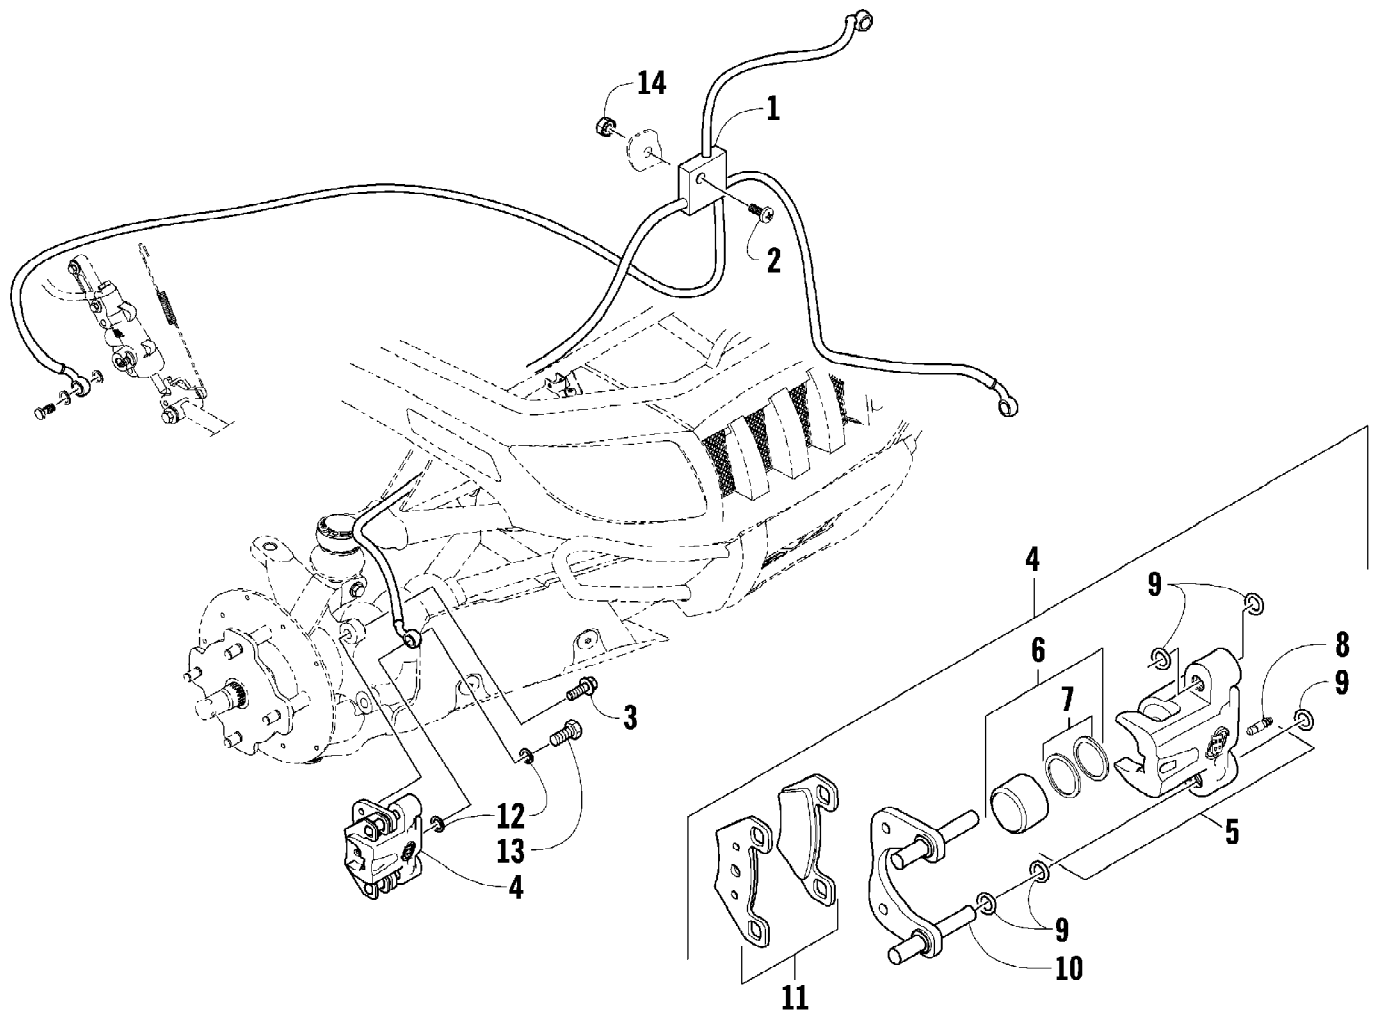 


| Ref # | Part Number | Qty | S/P/F | Description                                          |
|-------|-------------|-----|-------|------------------------------------------------------|
| 1     | 1502-015    | 1   |       | Hose, Brake - Assembly                               |
| 2     | 8476-625    | 1   |       | Screw, Cap                                           |
| 3     | 8408-821    | 4   | /P    | Screw, Cap                                           |
| 4     | 0502-878    | 1   | S     | Caliper, Brake - Right Front (inc. 5-11)             |
| 4     | 0502-879    | 1   | S     | Caliper, Brake - Left Front (inc. 5-11)              |
| 5     | 0502-603    | 1   | S     | Housing, Caliper - Assembly - Right Front (inc. 6-8) |
| 5     | 0502-611    | 1   | S     | Housing, Caliper - Assembly - Left Front (inc. 6-8)  |
| 6     | 0502-606    | 2   |       | Piston/Seal Set (inc. 7)                             |
| 7     | 0502-607    | 2   |       | Seal Set                                             |
| 8     | 0502-609    | 2   | /P    | Valve, Bleed                                         |
| 9     | 0502-608    | 2   |       | O-Ring, Guide - Set                                  |
| 10    | 0502-605    | 2   |       | Bracket Assembly                                     |
| 11    | 0502-875    | 2   | S     | Pad, Brake - Set                                     |
| 12    | 0423-178    | 4   |       | Washer, Crush                                        |
| 13    | 0423-413    | 2   |       | Bolt, Banjo-Fitting                                  |
| 14    | 0623-038    | 1   |       | Nut, Lock                                            |

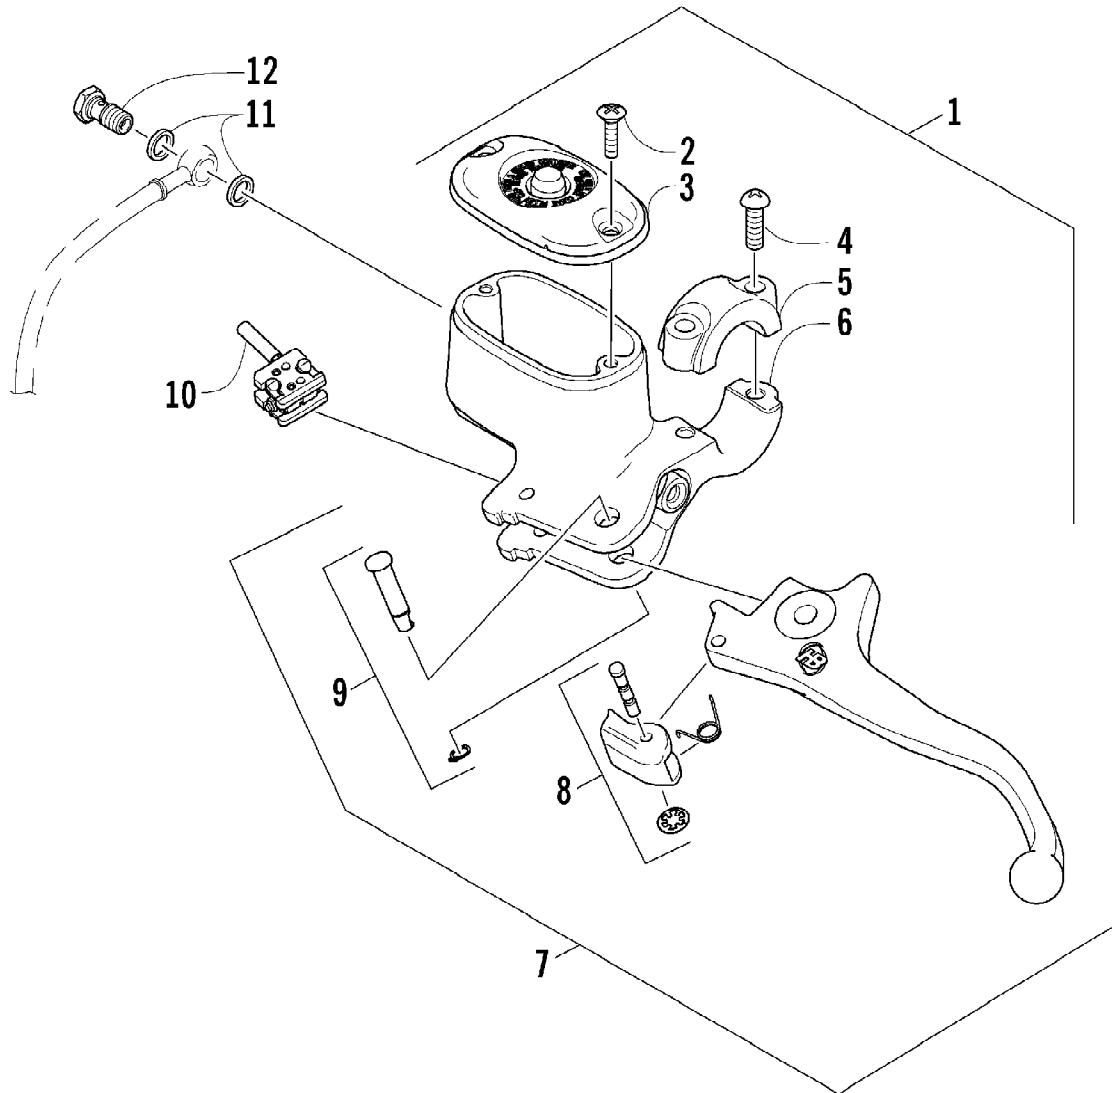 


| Ref # | Part Number | Qty | S/P/F | Description                  |
|-------|-------------|-----|-------|------------------------------|
| 1     | 0502-914    | 1   | S     | Brake Assembly (inc. 2-10)   |
| 2     | 0502-566    | 1   |       | Screw, Reservoir Cover       |
| 3     | 0502-868    | 1   | /P    | Cover, Reservoir             |
| 4     | 0502-568    | 1   |       | Screw, Master Cylinder Clamp |
| 5     | 0502-869    | 1   |       | Clamp, Master Cylinder       |
| 6     | 0502-704    | 1   |       | Master Cylinder Assembly     |
| 7     | 0502-866    | 1   |       | Lever Assembly (inc. 8-9)    |
| 8     | 0502-867    | 1   | /P    | Lock, Brake Lever - Kit      |
| 9     | 0502-580    | 1   |       | Lever Pin - Kit              |
| 10    | 0502-564    | 1   | /P    | Switch, Brake - Kit          |
| 11    | 0423-178    | 2   |       | Washer, Crush                |
| 12    | 0423-413    | 1   |       | Bolt, Banjo-Fitting          |

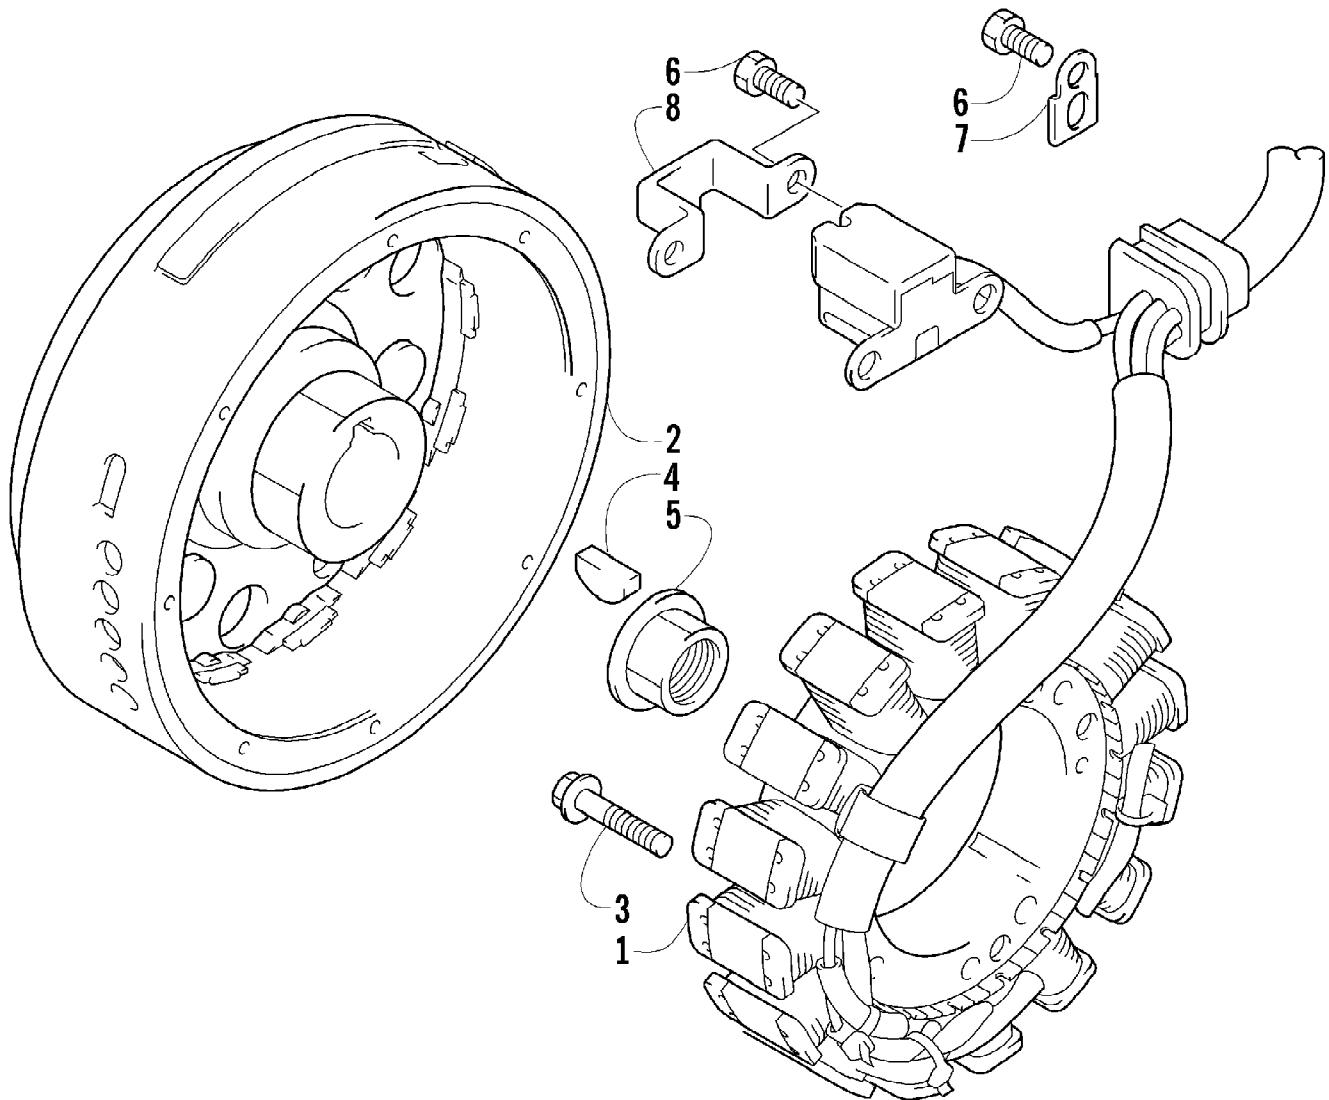 


| Ref # | Part Number | Qty | S/P/F | Description     |
|-------|-------------|-----|-------|-----------------|
| 1     | 3430-058    | 1   |       | Stator Assembly |
| 2     | 3430-046    | 1   |       | Rotor/Flywheel  |
| 3     | 3423-162    | 3   | S     | Screw, Cap      |
| 4     | 0691-785    | 1   |       | Key             |
| 5     | 3423-086    | 1   |       | Nut             |
| 6     | 3423-005    | 3   | /P    | Screw, Cap      |
| 7     | 3430-005    | 1   |       | Clamp           |
| 8     | 3430-006    | 1   |       | Clamp           |

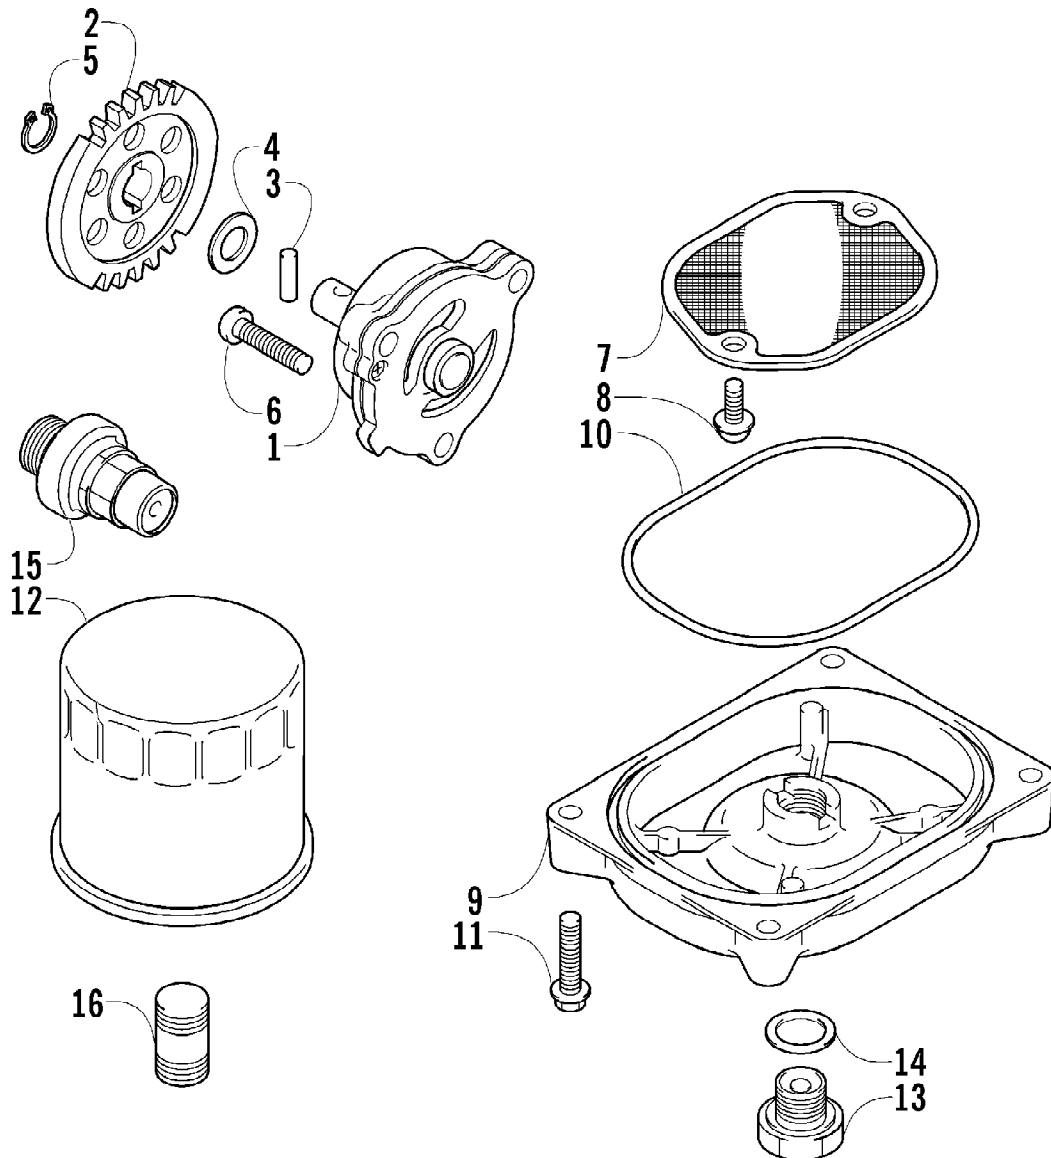 


| Ref # | Part Number | Qty | S/P/F | Description                  |
|-------|-------------|-----|-------|------------------------------|
| 1     | 3402-153    | 1   |       | Pump, Oil                    |
| 2     | 3402-026    | 1   |       | Gear, Driven                 |
| 3     | 3423-046    | 1   |       | Pin                          |
| 4     | 3423-443    | 1   |       | Washer                       |
| 5     | 3423-184    | 1   | S     | Circlip                      |
| 6     | 3423-510    | 3   |       | Screw                        |
| 7     | 3402-156    | 1   |       | Strainer, Oil                |
| 8     | 0693-389    | 2   | S     | Screw, Cap                   |
| 9     | 3402-157    | 1   |       | Cap, Oil Strainer            |
| 10    | 3423-077    | 1   |       | O-Ring                       |
| 11    | 3004-756    | 4   | S     | Screw, Cap                   |
| 12    | 0812-005    | 1   | S     | Filter, Oil                  |
| 13    | 3403-021    | 1   | /P    | Plug, Drain                  |
| 14    | 3402-012    | 1   |       | Gasket                       |
| 15    | 3402-359    | 1   |       | Valve, Oil-Relief - Assembly |
| 16    | 3402-158    | 1   | S     | Union, Oil Filter            |

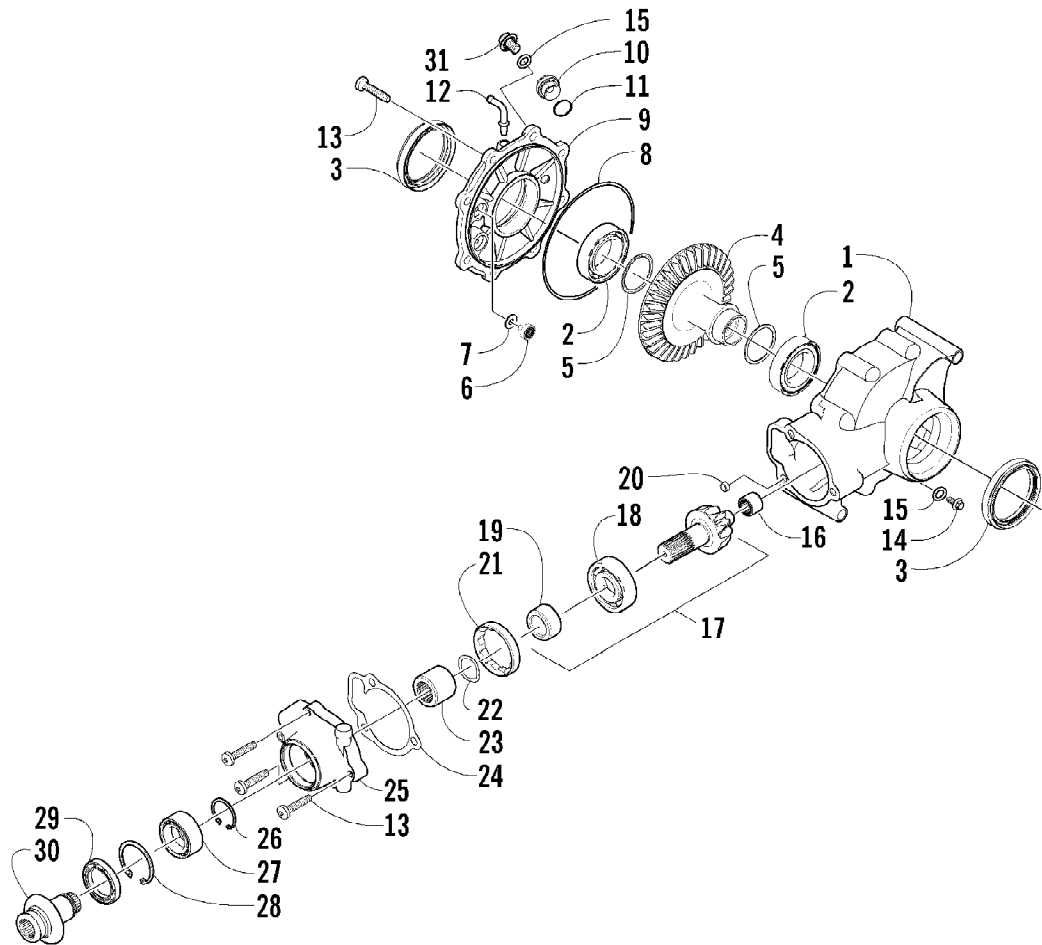 


| Ref # | Part Number | Qty | S/P/F | Description                                |
|-------|-------------|-----|-------|--------------------------------------------|
|       | 1502-079    | 1   | S     | Complete Rear Gearcase Assembly            |
| 1     | 0502-622    | 1   |       | Housing, Gearcase                          |
| 2     | 0402-393    | 2   |       | Bearing                                    |
| 3     | 1402-441    | 2   | S     | Seal                                       |
| 4     | 1402-032    | 1   |       | Gear, Ring - 36T                           |
| 5     | 0402-405    | AR  |       | Shim                                       |
| 5     | 0402-406    | AR  |       | Shim                                       |
| 5     | 0402-407    | AR  |       | Shim                                       |
| 5     | 0402-408    | AR  |       | Shim                                       |
| 5     | 0402-409    | AR  |       | Shim                                       |
| 6     | 0402-326    | 1   |       | Button, Thrust                             |
| 7     | 0402-429    | AR  |       | Shim                                       |
| 7     | 0402-430    | AR  |       | Shim                                       |
| 7     | 0402-431    | AR  |       | Shim                                       |
| 7     | 0402-432    | AR  |       | Shim                                       |
| 7     | 0402-433    | AR  |       | Shim                                       |
| 8     | 0423-149    | 1   |       | O-Ring                                     |
| 9     | 1502-082    | 1   |       | Cover, Gearcase                            |
| 10    | 0402-333    | 1   | /P    | Plug, Fill (inc. 11)                       |
| 11    | 0423-154    | 1   |       | O-Ring                                     |
| 12    | 1402-102    | 1   |       | Fitting                                    |
| 13    | 0423-118    | 11  |       | Screw, Self-Tapping                        |
| 14    | 0402-450    | 1   | S     | Plug, Magnetic (inc. one No. 15)           |
| 15    | 0423-153    | 2   |       | O-Ring                                     |
| 16    | 0402-328    | 1   |       | Bearing                                    |
| 17    | 0502-783    | 1   |       | Gear, Pinion - Assembly - 10T (inc. 18-19) |
| 18    | 0402-327    | 1   |       | Bearing                                    |
| 19    | 0402-336    | 1   |       | Collar, Retaining                          |
| 20    | 0402-411    | 1   |       | Pin, Dowel                                 |
| 21    | 0402-331    | 1   |       | Collar, Lock                               |
| 22    | 0402-982    | 1   |       | Washer, Spring                             |
| 23    | 0402-981    | 1   |       | Collar, Shaft                              |
| 24    | 0402-947    | 1   |       | Gasket, Flange                             |
| 25    | 0502-529    | 1   |       | Housing, Pinion                            |
| 26    | 0423-417    | 1   |       | Ring, Retaining                            |
| 27    | 1402-043    | 1   |       | Bearing                                    |
| 28    | 0423-423    | 1   |       | Ring, Retaining                            |
| 29    | 1402-011    | 1   |       | Seal                                       |
| 30    | 1502-085    | 1   | /P    | Shaft, Input                               |
| 31    | 1402-211    | 1   |       | Plug, Oil Level (inc. one No. 15)          |

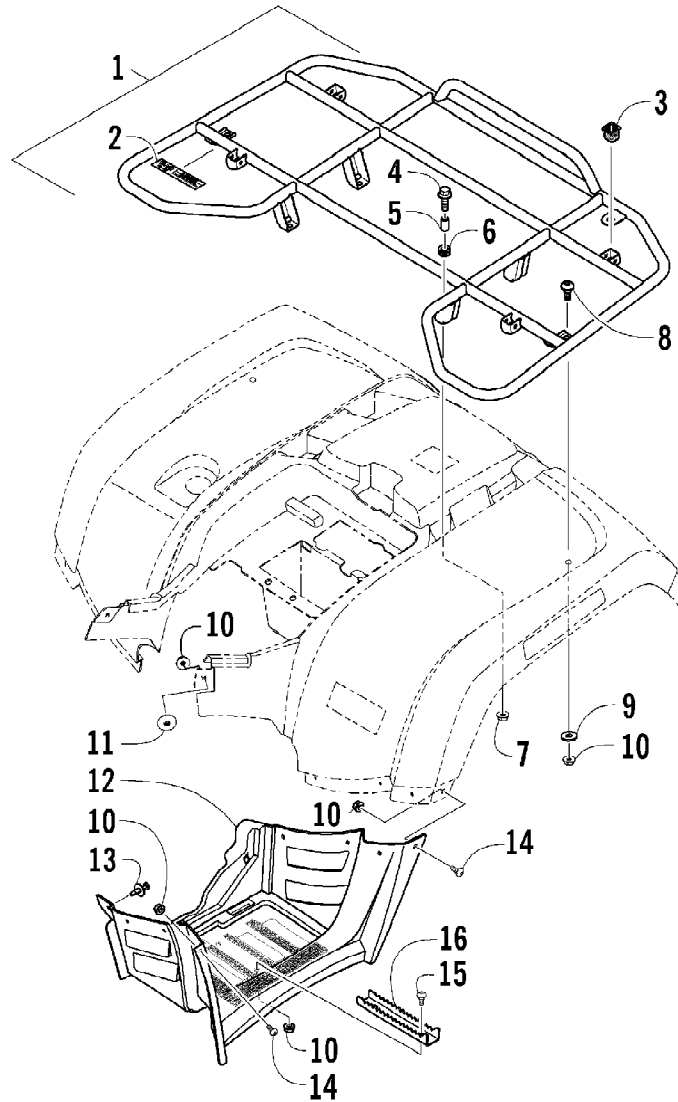 


| Ref # | Part Number | Qty | S/P/F | Description                      |
|-------|-------------|-----|-------|----------------------------------|
| 1     | 2506-125    | 1   |       | Rack, Rear - Assembly (inc. 2-3) |
| 2     | 0411-648    | 1   |       | Decal, Warning - Rear Rack Load  |
| 3     | 0441-592    | 4   | /P    | Bushing, Rack                    |
| 4     | 8410-830    | 4   |       | Screw, Cap                       |
| 5     | 0423-669    | 4   |       | Spacer                           |
| 6     | 0423-465    | 4   |       | Grommet                          |
| 7     | 8432-802    | 4   |       | Nut, Lock                        |
| 8     | 0423-654    | 2   |       | Screw, Shoulder                  |
| 9     | 8050-222    | 2   | /P    | Washer                           |
| 10    | 0423-540    | 24  |       | Nut, Lock                        |
| 11    | 0423-101    | 2   |       | Screw, Body                      |
| 12    | 2406-424    | 1   | /P    | Footwell - Right                 |
| 12    | 2406-425    | 1   | /P    | Footwell - Left                  |
| 13    | 0623-362    | 2   |       | Rivet, Reinstallable             |
| 14    | 0423-419    | 16  |       | Screw, Machine                   |
| 15    | 0423-355    | 4   |       | Screw, Shoulder                  |
| 16    | 1506-125    | 2   | /P    | Footpeg                          |

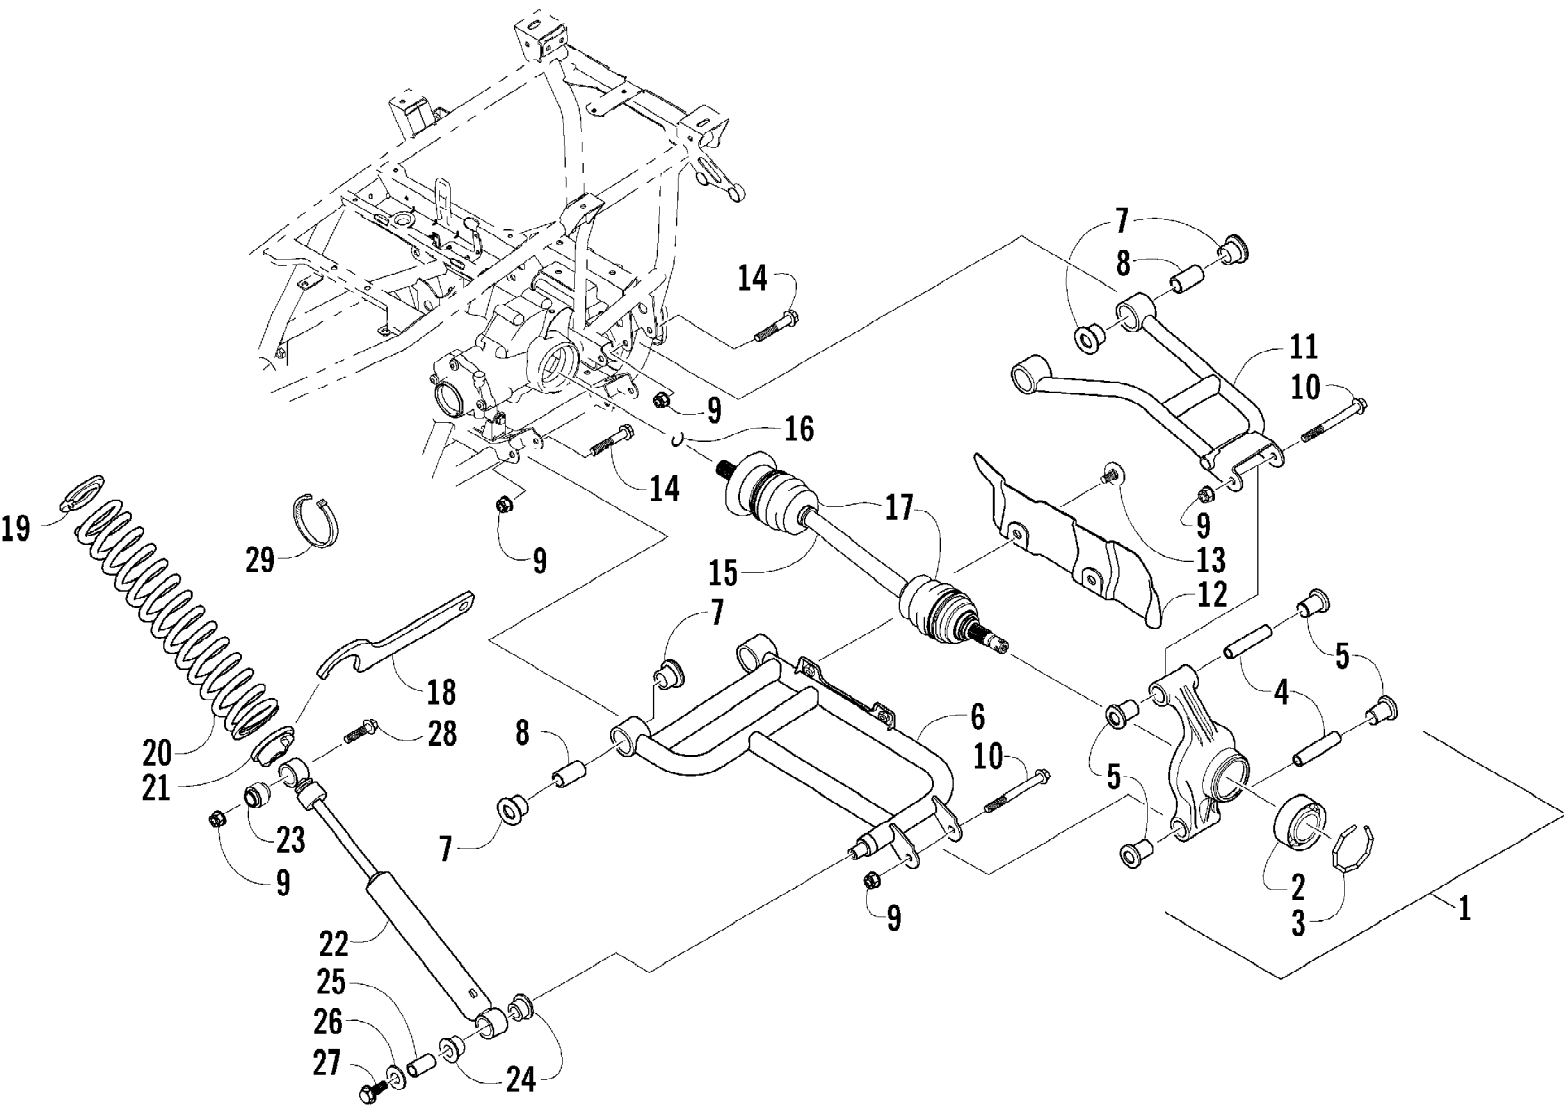 


| Ref # | Part Number | Qty | S/P/F | Description                               |
|-------|-------------|-----|-------|-------------------------------------------|
| 1     | 0504-372    | 1   | S     | Knuckle, Right Rear - Assembly (inc. 2-5) |
| 1     | 0504-373    | 1   | S/P   | Knuckle, Left Rear - Assembly (inc. 2-5)  |
| 2     | 1402-027    | 2   | S/P   | Bearing, Wheel Hub                        |
| 3     | 0423-423    | 2   |       | Ring, Retaining                           |
| 4     | 0403-038    | 4   | S/P   | Collar, Suspension Bushing                |
| 5     | 0403-032    | 8   | S     | Bushing, Suspension                       |
| 6     | 0504-440    | 1   | S     | A-Arm, Rear - Lower Right (inc. 7-8)      |
| 6     | 0504-441    | 1   | S     | A-Arm, Rear - Lower Left (inc. 7-8)       |
| 7     | 0403-115    | 16  | S     | Bushing                                   |
| 8     | 0403-114    | 8   | S     | Collar                                    |
| 9     | 8428-002    | 14  |       | Nut, Lock                                 |
| 10    | 8409-000    | 4   |       | Screw, Cap                                |
| 11    | 0504-476    | 1   |       | A-Arm, Rear - Upper Right (inc. 7-8)      |
| 11    | 0504-477    | 1   |       | A-Arm, Rear - Upper Left (inc. 7-8)       |
| 12    | 0441-754    | 1   |       | Guard, Boot - Right                       |
| 12    | 0441-755    | 1   |       | Guard, Boot - Left                        |
| 13    | 0423-545    | 4   | /P    | Screw, Body                               |
| 14    | 8409-075    | 8   |       | Screw, Cap                                |
| 15    | 0502-811    | 2   | S     | Axle, Drive (inc. 16-17)                  |
| 16    | 0441-893    | 2   | S     | Clip, Retaining                           |
| 17    | 0436-276    | 2   | S     | Repair Kit, Boot - Rear Axle              |
| 18    | 0441-587    | 1   |       | Wrench, Spanner                           |
| 19    | 1603-889    | 2   | /P    | Retainer, Spring                          |
| 20    | 0404-113    | 2   |       | Spring, Suspension                        |
| 21    | 0404-057    | 2   |       | Cam, Spring Adjuster                      |
| 22    | 0404-150    | 2   |       | Shock Absorber - Rear (inc. 23-25)        |
| 23    | 0403-182    | 2   |       | Bushing, Double-Bonded                    |
| 24    | 0603-955    | 4   |       | Bushing, Shock Absorber                   |
| 25    | 1603-219    | 2   | S     | Sleeve, Shock Absorber                    |
| 26    | 0423-087    | 2   |       | Washer                                    |
| 27    | 8408-820    | 2   | /P    | Screw, Cap                                |
| 28    | 8409-040    | 1   |       | Screw, Cap - Right                        |
| 28    | 8409-050    | 1   |       | Screw, Cap - Left                         |
| 29    | 0123-788    | 2   | /P    | Cable Tie                                 |

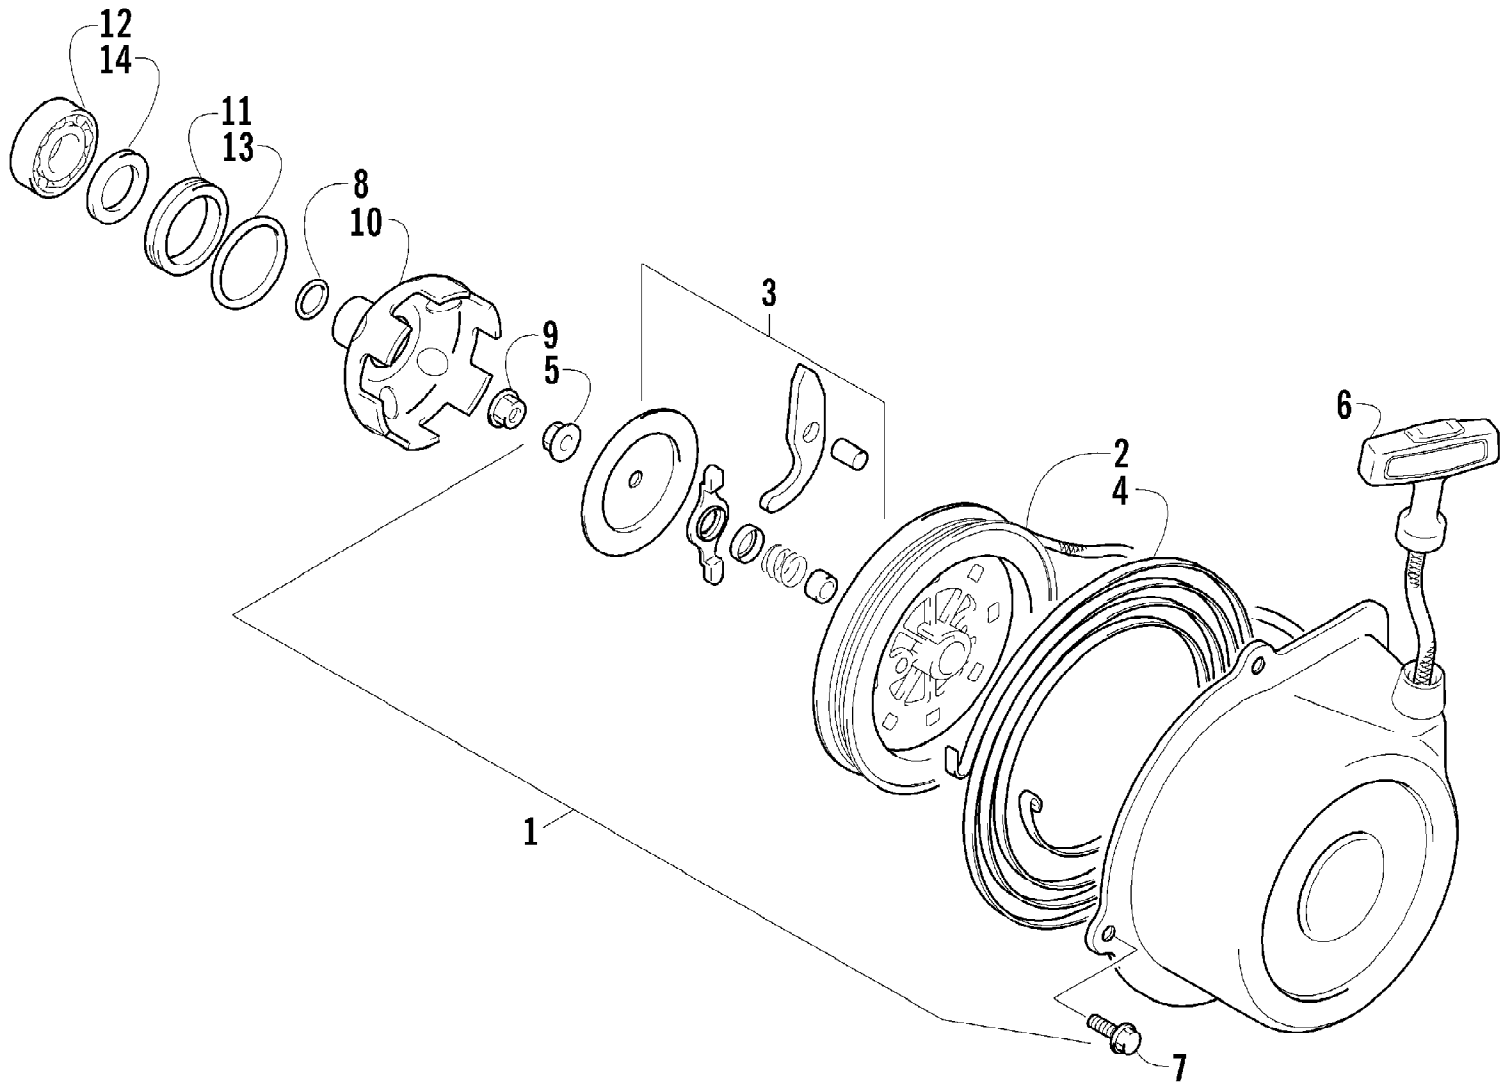 


| Ref # | Part Number | Qty | S/P/F | Description                           |
|-------|-------------|-----|-------|---------------------------------------|
| 1     | 3445-003    | 1   |       | Starter, Recoil - Assembly (inc. 2-6) |
| 2     | 3445-004    | 1   |       | Reel                                  |
| 3     | 3445-016    | 1   |       | Ratchet Set                           |
| 4     | 3445-007    | 1   |       | Spring, Spiral                        |
| 5     | 3007-373    | 1   | /P    | Nut                                   |
| 6     | 3445-011    | 1   |       | Rope Assembly                         |
| 7     | 3423-428    | 4   |       | Bolt                                  |
| 8     | 3423-053    | 1   | /P    | O-Ring                                |
| 9     | 3007-391    | 1   | /P    | Nut                                   |
| 10    | 3445-029    | 1   | /P    | Cup, Starter                          |
| 11    | 3423-542    | 1   | /P    | Spacer                                |
| 12    | 3402-051    | 1   |       | Bearing                               |
| 13    | 3423-063    | 1   |       | O-Ring                                |
| 14    | 3402-070    | 1   |       | Seal, Oil                             |

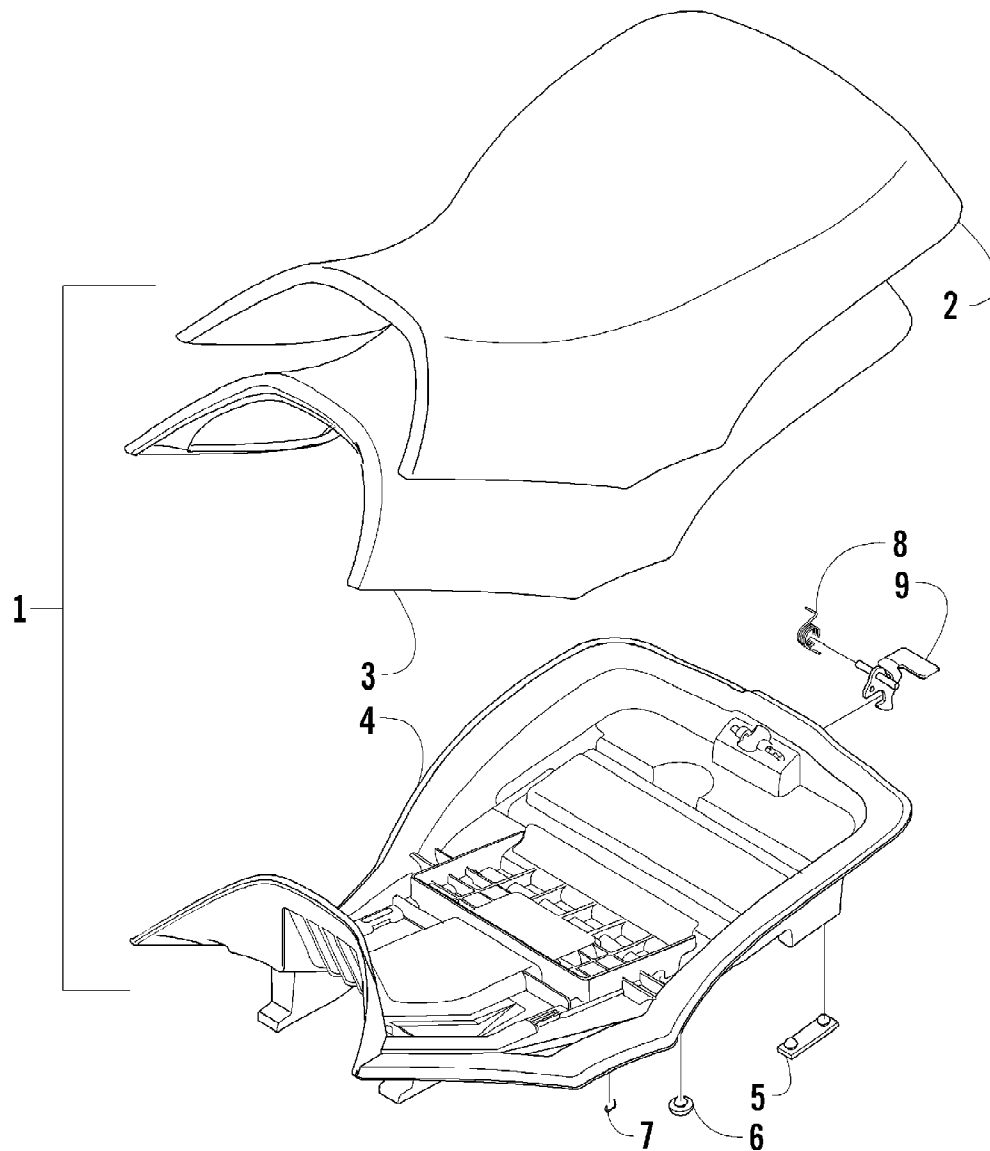 


| Ref # | Part Number | Qty | S/P/F | Description                      |
|-------|-------------|-----|-------|----------------------------------|
| 1     | 1506-937    | 1   | S/P   | Seat Assembly (inc. 2-9)         |
| 2     | 1506-209    | 1   |       | Cover, Seat                      |
| 3     | 1506-208    | 1   |       | Foam, Seat                       |
| 4     | 2406-144    | 1   | S/P   | Base, Seat - Assembly (inc. 5-6) |
| 5     | 0406-879    | 2   |       | Bumper, Seat - Rear              |
| 6     | 0406-877    | 4   | /P    | Bumper, Seat - Front             |
| 7     | 0624-263    | AR  |       | Staple                           |
| 8     | 1406-592    | 1   | /P    | Spring, Seat Latch               |
| 9     | 1506-156    | 1   |       | Latch, Seat                      |

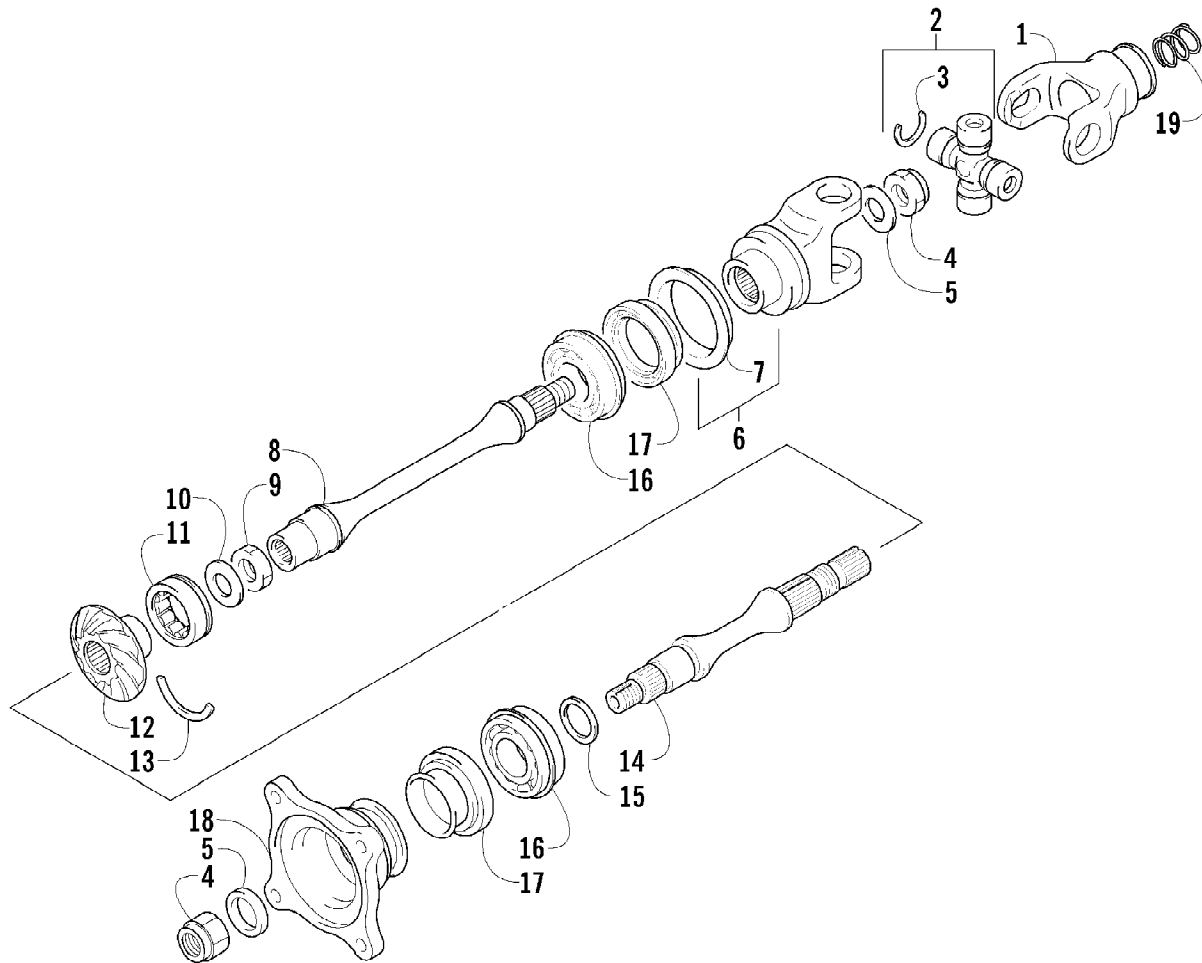 


| Ref # | Part Number | Qty | S/P/F | Description                         |
|-------|-------------|-----|-------|-------------------------------------|
| 1     | 3446-327    | 1   | /P    | Yoke, Propeller Shaft               |
| 2     | 3402-562    | 1   |       | Joint, Universal (inc. 3)           |
| 3     | 3423-479    | 4   |       | Circlip                             |
| 4     | 3423-025    | 2   |       | Nut                                 |
| 5     | 3423-028    | 2   |       | Washer                              |
| 6     | 3402-742    | 1   |       | Yoke, Front Drive Output (inc. 7)   |
| 7     | 3402-743    | 1   |       | Plate, Output                       |
| 8     | 3446-239    | 1   |       | Shaft, Secondary Driven - Front     |
| 9     | 3423-136    | 1   |       | Nut, Secondary Driven Gear          |
| 10    | 3423-137    | 1   |       | Washer, Secondary Driven Gear       |
| 11    | 3402-515    | 1   | /P    | Bearing, Secondary Driven Gear      |
| 12    | 3446-222    | 1   | /P    | Gear, Secondary Driven              |
| 13    | 3423-072    | 1   |       | Ring, Secondary Driven Gear Bearing |
| 14    | 3446-346    | 1   | S     | Shaft, Secondary Driven - Rear      |
| 15    | 3402-017    | AR  |       | Shim, 25 x 34 x 0.60mm              |
| 15    | 3402-018    | AR  |       | Shim, 25 x 34 x 0.65mm              |
| 15    | 3402-019    | AR  |       | Shim, 25 x 34 x 0.70mm              |
| 15    | 3402-020    | AR  |       | Shim, 25 x 34 x 0.75mm              |
| 15    | 3402-021    | AR  | S     | Shim, 25 x 34 x 0.80mm              |
| 15    | 3402-022    | AR  |       | Shim, 25 x 34 x 0.85mm              |
| 15    | 3402-023    | AR  |       | Shim, 25 x 34 x 0.90mm              |
| 15    | 3402-024    | AR  |       | Shim, 25 x 34 x 0.95mm              |
| 15    | 3402-025    | AR  | S     | Shim, 25 x 34 x 1.00mm              |
| 15    | 3402-028    | AR  |       | Shim, 25 x 34 x 1.05mm              |
| 15    | 3402-029    | AR  |       | Shim, 25 x 34 x 1.10mm              |
| 15    | 3402-030    | AR  |       | Shim, 25 x 34 x 1.15mm              |
| 15    | 3402-031    | AR  |       | Shim, 25 x 34 x 1.20mm              |
| 16    | 3403-210    | 2   | /P    | Bearing                             |
| 17    | 3402-072    | 2   |       | Seal, Oil                           |
| 18    | 3402-514    | 1   | /P    | Yoke, Rear Drive Output             |
| 19    | 1402-026    | 1   |       | Spring                              |

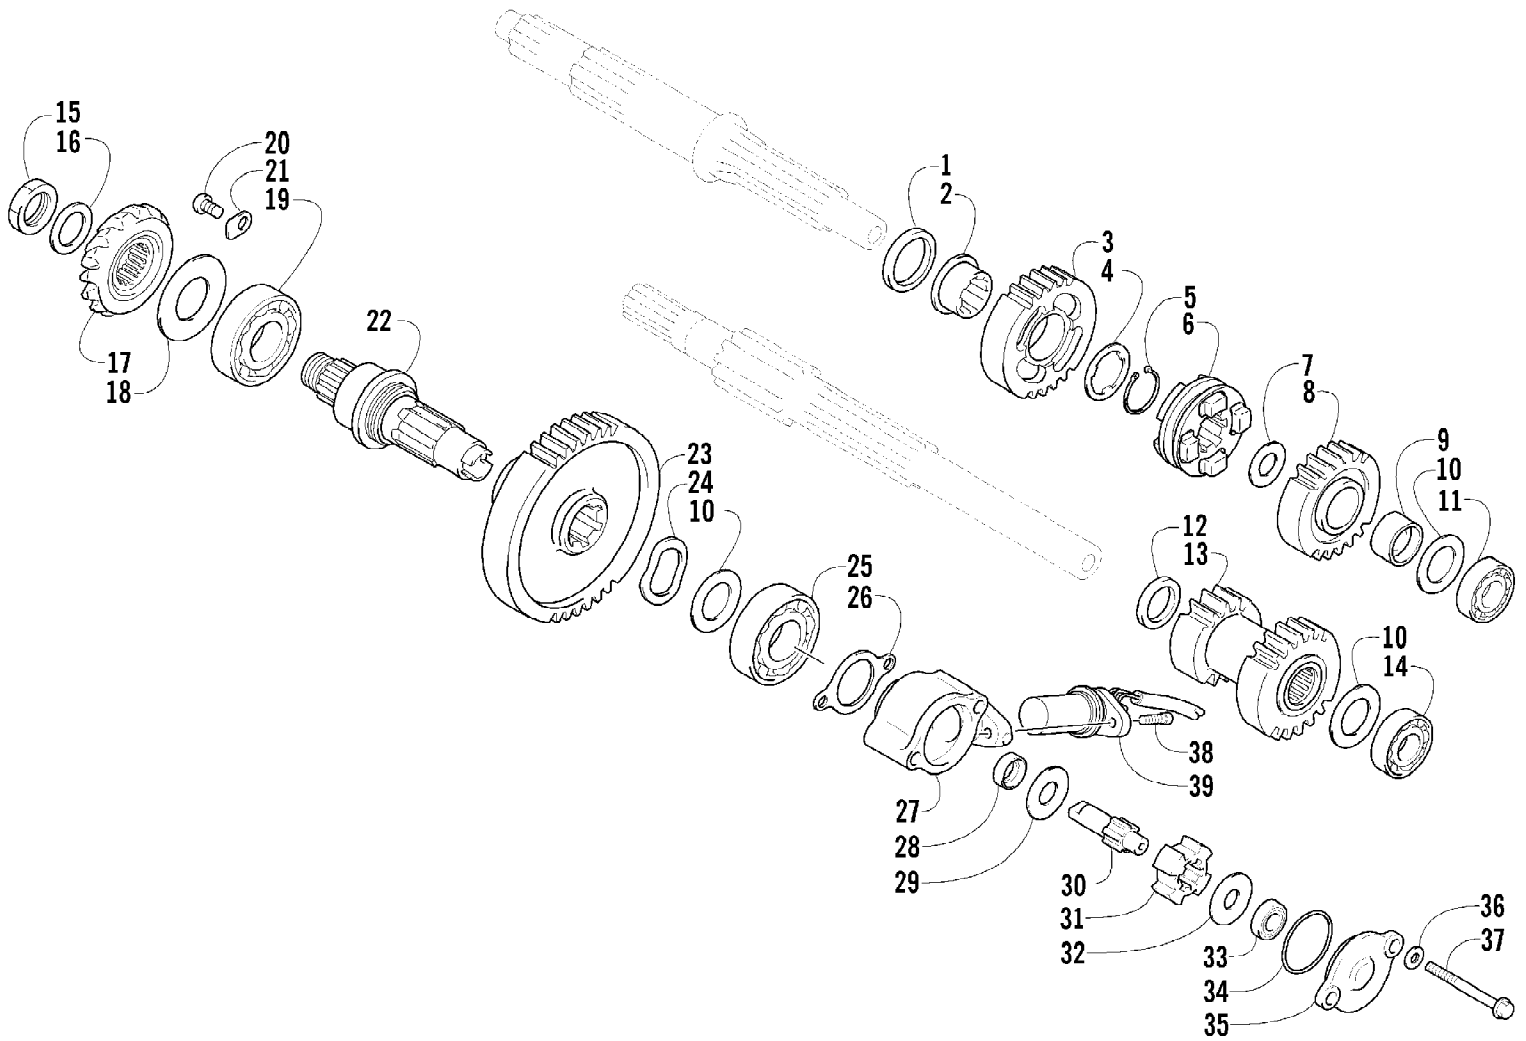 


| Ref # | Part Number | Qty | S/P/F | Description                            |
|-------|-------------|-----|-------|----------------------------------------|
| 1     | 3446-246    | 1   |       | Spacer, Drive Gear                     |
| 2     | 3446-247    | 1   |       | Bushing, Drive Gear No. 1              |
| 3     | 3446-342    | 1   |       | Gear, Drive - No. 1                    |
| 4     | 3423-036    | 1   |       | Washer, Drive Gear No. 1               |
| 5     | 3423-066    | 1   | /P    | Circlip, Drive Gear No. 1              |
| 6     | 3446-343    | 1   |       | Dog, Sliding                           |
| 7     | 3402-195    | 1   |       | Washer, Drive Gear No. 2               |
| 8     | 3446-248    | 1   |       | Gear, Drive - No. 2                    |
| 9     | 3446-103    | 1   |       | Bushing, Drive Gear No. 2              |
| 10    | 3402-381    | 3   | /P    | Washer                                 |
| 11    | 3402-046    | 1   |       | Bearing, Driveshaft - Left             |
| 12    | 3423-148    | 1   |       | Spacer, Idle Gear                      |
| 13    | 3446-066    | 1   |       | Gear, Idle                             |
| 14    | 3402-979    | 1   | /P    | Bearing, Countershaft - Left           |
| 15    | 3423-023    | 1   |       | Nut                                    |
| 16    | 3423-032    | 1   |       | Washer                                 |
| 17    | 3446-274    | 1   | /P    | Gear, Secondary Drive Bevel            |
| 18    | 3423-549    | 1   |       | Shim Set                               |
| 19    | 3402-055    | 1   | /P    | Bearing                                |
| 20    | 3423-370    | 2   |       | Screw                                  |
| 21    | 3446-031    | 2   | /P    | Retainer, Secondary Driveshaft Bearing |
| 22    | 3446-344    | 1   |       | Shaft, Output                          |
| 23    | 3446-345    | 1   |       | Gear, Driven                           |
| 24    | 3423-548    | 1   |       | Lock Washer                            |
| 25    | 3402-045    | 1   | /P    | Bearing                                |
| 26    | 3446-244    | 1   | /P    | Gasket, Sensor Housing                 |
| 27    | 3446-400    | 1   |       | Housing, Speedometer Sensor            |
| 28    | 3006-322    | 1   |       | Seal, Sensor Housing                   |
| 29    | 3423-617    | 1   |       | Washer                                 |
| 30    | 3446-402    | 1   |       | Shaft, Speedometer Rotor               |
| 31    | 3402-837    | 1   |       | Rotor, Speedometer                     |
| 32    | 3423-767    | 1   |       | Washer                                 |
| 33    | 3402-980    | 1   |       | Bearing, Rotor Shaft                   |
| 34    | 3423-766    | 1   |       | O-Ring, Housing Cover                  |
| 35    | 3446-401    | 1   |       | Cover, Speedometer Housing             |
| 36    | 3003-290    | 2   | /P    | Gasket                                 |
| 37    | 3423-307    | 2   | S     | Bolt                                   |
| 38    | 3423-226    | 1   |       | Bolt                                   |
| 39    | 3402-981    | 1   |       | Sensor, Speedometer                    |

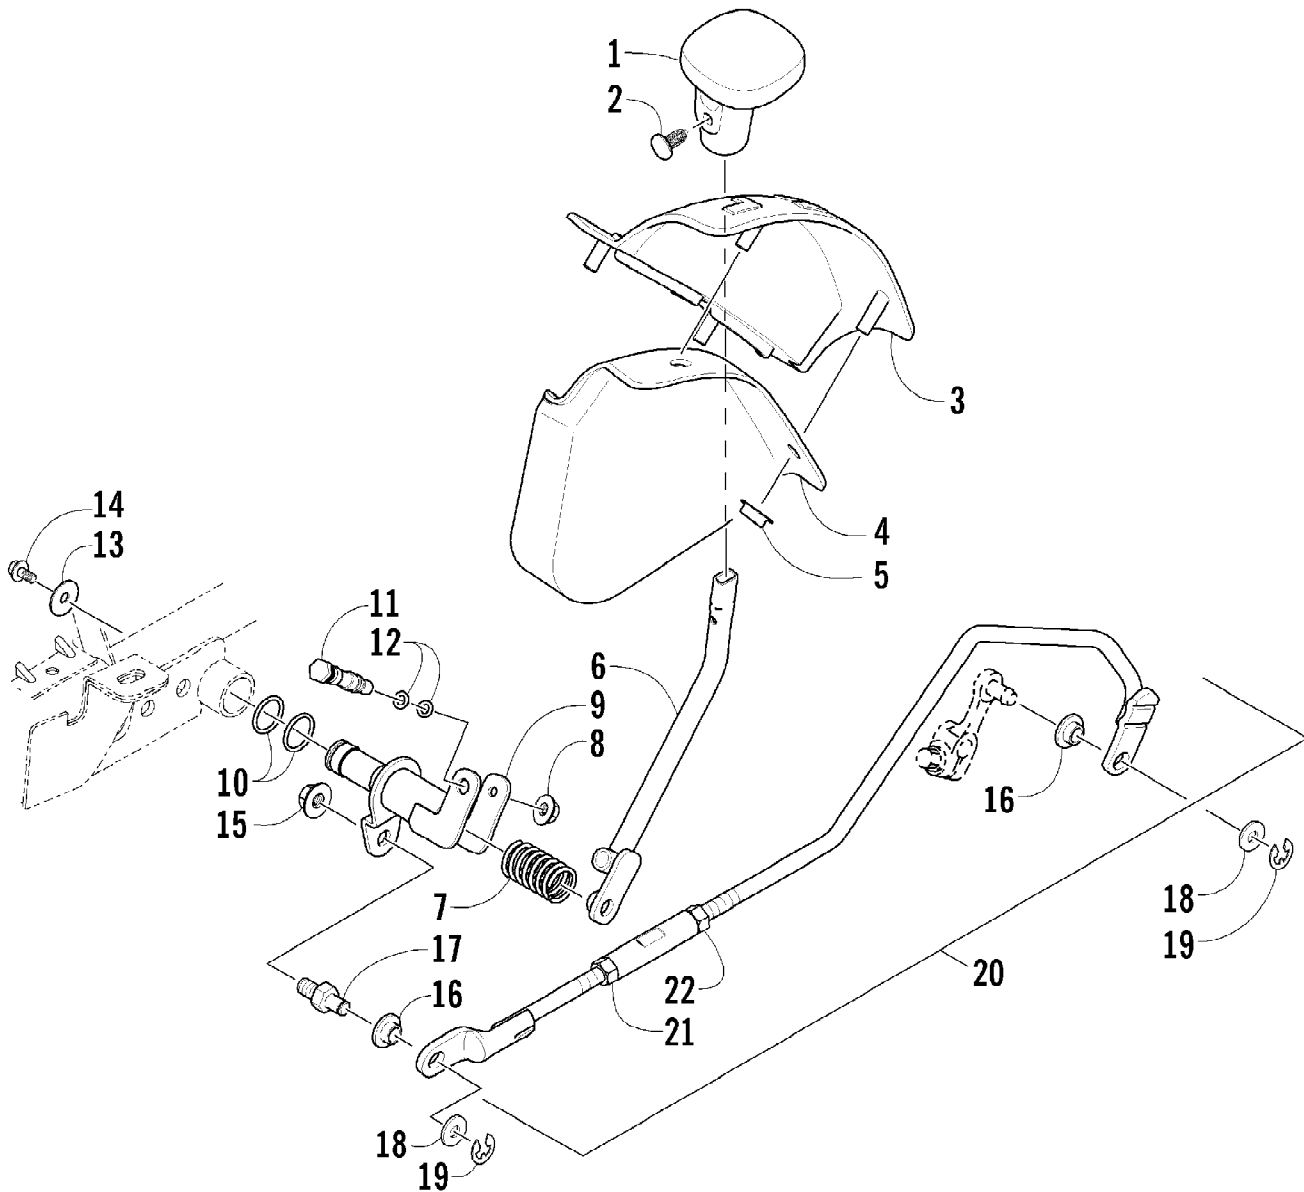 


| Ref # | Part Number | Qty | S/P/F | Description                            |
|-------|-------------|-----|-------|----------------------------------------|
| 1     | 0402-843    | 1   | /P    | Knob, Shift Lever                      |
| 2     | 0423-345    | 1   |       | Clip, Push                             |
| 3     | 1402-577    | 1   |       | Plate, Shift                           |
| 4     | 2406-345    | 1   |       | Shield, Shift Plate                    |
| 5     | 0423-357    | 4   |       | Nut, Stamped                           |
| 6     | 0502-659    | 1   |       | Lever, Shift                           |
| 7     | 0402-678    | 1   | /P    | Spring, Shift Lever                    |
| 8     | 8424-602    | 1   | /P    | Nut                                    |
| 9     | 0502-742    | 1   |       | Axle, Shift Lever                      |
| 10    | 0423-299    | 2   | /P    | O-Ring                                 |
| 11    | 0402-675    | 1   |       | Axle, Pivot                            |
| 12    | 0423-182    | 2   | /P    | O-Ring                                 |
| 13    | 0423-087    | 1   |       | Washer                                 |
| 14    | 8408-812    | 1   |       | Screw, Cap                             |
| 15    | 8424-802    | 1   |       | Nut, Hex                               |
| 16    | 0423-091    | 2   |       | Bushing, Shift Linkage                 |
| 17    | 1402-621    | 1   |       | Pin, Mounting - Shift Linkage          |
| 18    | 0623-094    | 2   |       | Washer                                 |
| 19    | 0423-169    | 2   | /P    | E-Ring                                 |
| 20    | 1502-204    | 1   |       | Linkage, Shift - Assembly (inc. 21-22) |
| 21    | 0623-294    | 1   |       | Nut, Hex - Right-Hand Thread           |
| 22    | 0123-917    | 1   | /P    | Nut, Hex - Left-Hand Thread            |

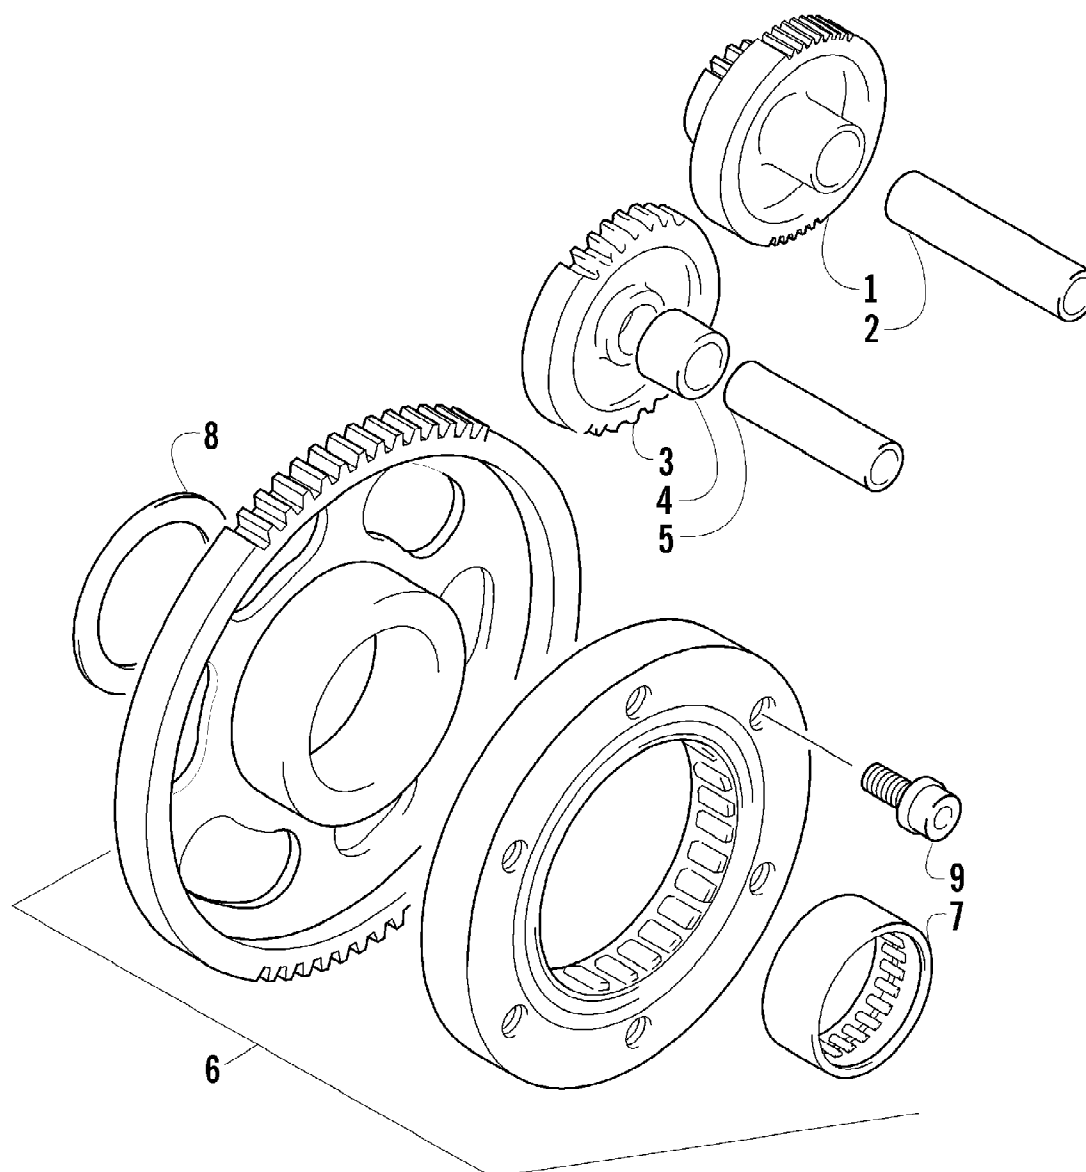 


| Ref # | Part Number | Qty | S/P/F | Description                      |
|-------|-------------|-----|-------|----------------------------------|
| 1     | 3402-813    | 1   | /P    | Gear, Starter Idler - No.1       |
| 2     | 3423-331    | 1   |       | Pin                              |
| 3     | 3402-349    | 1   |       | Gear, Starter Idler - No.2       |
| 4     | 3423-396    | 1   |       | Spacer, Starter Idler Gear No. 2 |
| 5     | 3423-397    | 1   |       | Pin                              |
| 6     | 3402-457    | 1   |       | Starter, Clutch - Set (inc. 7)   |
| 7     | 3402-063    | 1   |       | Bearing                          |
| 8     | 3423-104    | 1   |       | Washer                           |
| 9     | 3423-509    | 6   |       | Bolt                             |

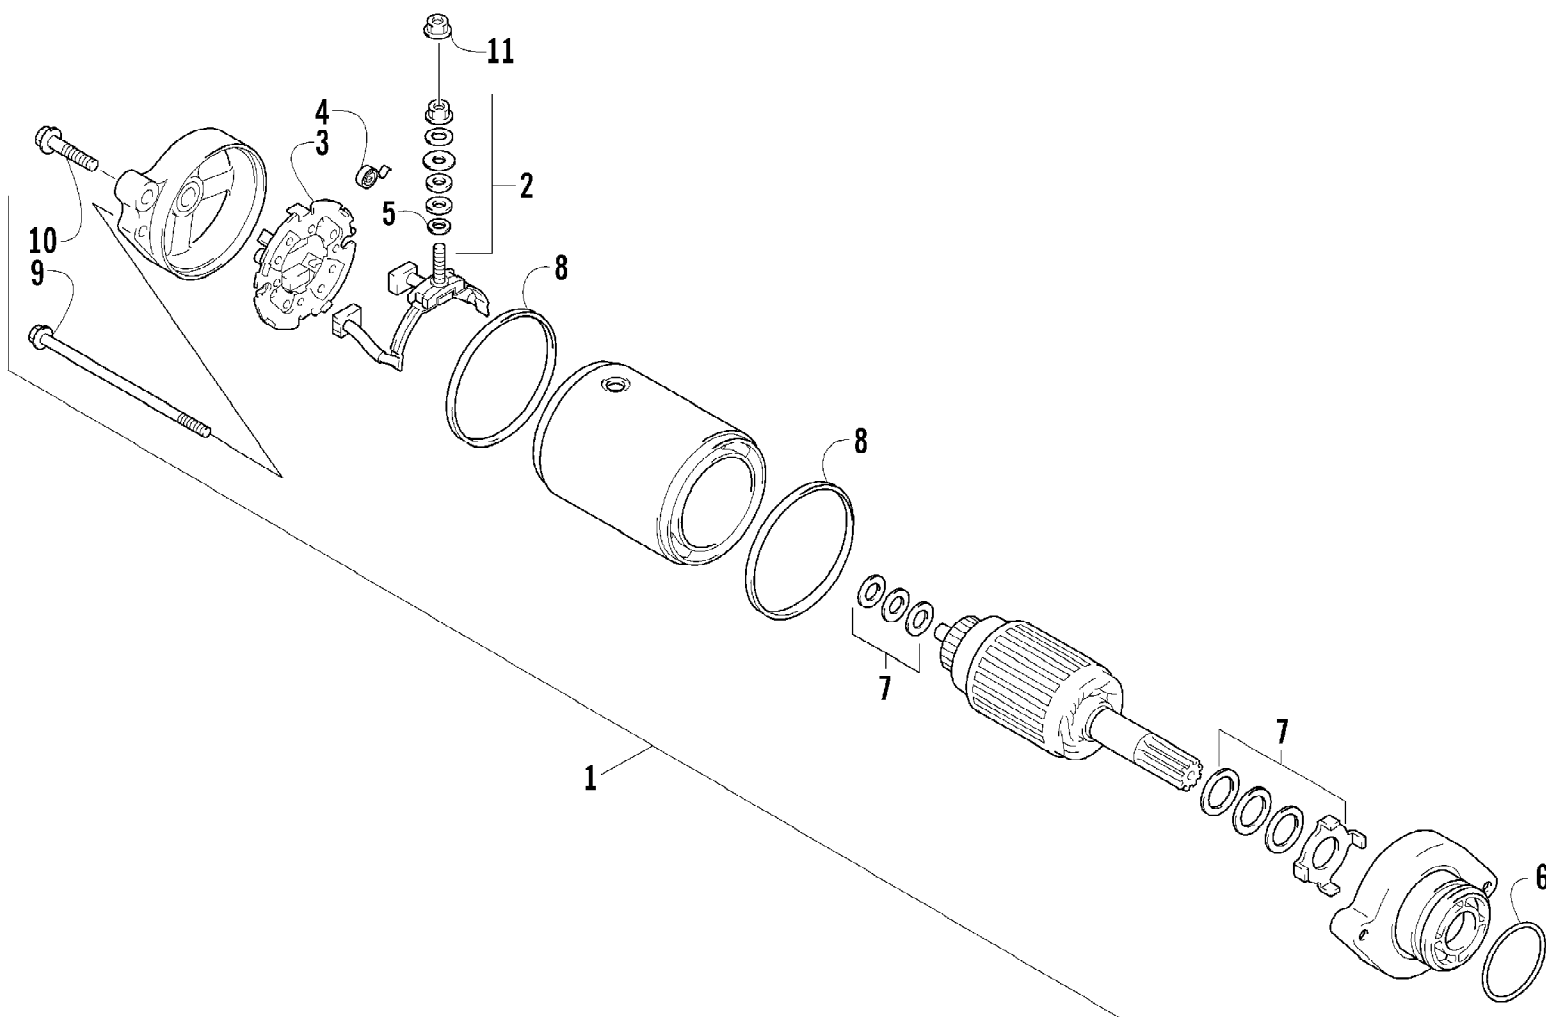 


| Ref # | Part Number | Qty | S/P/F | Description                          |
|-------|-------------|-----|-------|--------------------------------------|
| 1     | 3545-024    | 1   | /P    | Motor, Starter - Assembly (inc. 2-9) |
| 2     | 3008-094    | 1   | /P    | Terminal Set, Brush                  |
| 3     | 3008-095    | 1   | /P    | Holder Set, Brush                    |
| 4     | 3008-096    | 4   |       | Spring, Brush                        |
| 5     | 3008-164    | 1   |       | O-Ring                               |
| 6     | 3423-084    | 1   |       | O-Ring                               |
| 7     | 3436-001    | 1   |       | Washer Set                           |
| 8     | 3008-101    | 2   | S     | O-Ring                               |
| 9     | 3423-085    | 2   |       | Through-Bolt                         |
| 10    | 3007-369    | 2   | /P    | Bolt, Starter Motor                  |
| 11    | 3423-195    | 1   | /P    | Nut, Starter Motor                   |

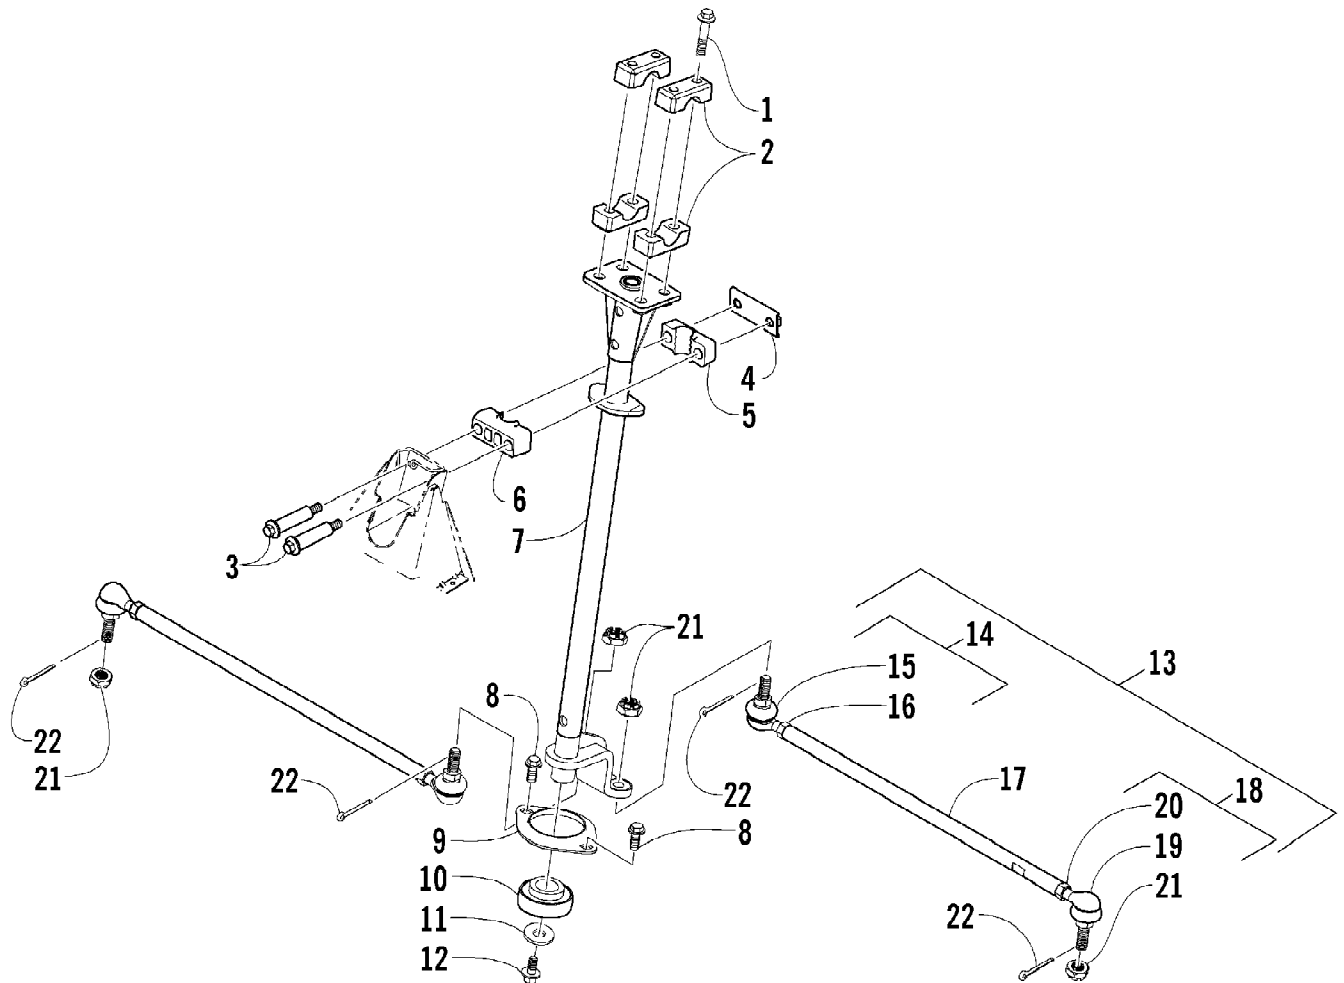 


| Ref # | Part Number | Qty | S/P/F | Description                                                           |
|-------|-------------|-----|-------|-----------------------------------------------------------------------|
| 1     | 8408-860    | 4   |       | Screw, Cap                                                            |
| 2     | 0405-035    | 4   |       | Cap, Steering Adjuster                                                |
| 3     | 0423-505    | 2   |       | Screw, Shoulder                                                       |
| 4     | 0505-484    | 1   |       | Cap, Housing                                                          |
| 5     | 0405-138    | 1   |       | Housing, Lower                                                        |
| 6     | 0405-139    | 1   |       | Housing, Upper                                                        |
| 7     | 0505-451    | 1   | S     | Post, Steering                                                        |
| 8     | 8408-816    | 2   |       | Screw, Cap                                                            |
| 9     | 0602-233    | 1   |       | Flange, Bearing                                                       |
| 10    | 0405-052    | 1   |       | Bearing w/Inverted Oil Seal                                           |
| 11    | 0423-073    | 1   |       | Washer                                                                |
| 12    | 8409-020    | 1   | /P    | Screw, Cap                                                            |
| 13    | 0505-499    | 2   | /P    | Tie Rod - Assembly (inc. 14-20)                                       |
| 14    | 0505-511    | 2   | /P    | End, Tie Rod - Left-Hand Thread - Kit (inc. 15-16 and two No. 21-22)  |
| 15    | 0           | 2   | F     | End, Tie Rod - Left Hand Thread                                       |
| 16    | 0423-013    | 2   |       | Nut - Left-Hand Thread                                                |
| 17    | 0405-281    | 2   | /P    | Tie Rod                                                               |
| 18    | 0505-510    | 2   | /P    | End, Tie Rod - Right-Hand Thread - Kit (inc. 19-20 and two No. 21-22) |
| 19    | 0           | 2   | F     | End, Tie Rod - Right-Hand Thread                                      |
| 20    | 8420-002    | 2   | /P    | Nut - Right-Hand Thread                                               |
| 21    | 0423-157    | 4   |       | Nut, Lock                                                             |
| 22    | 0623-175    | 4   |       | Pin, Cotter                                                           |

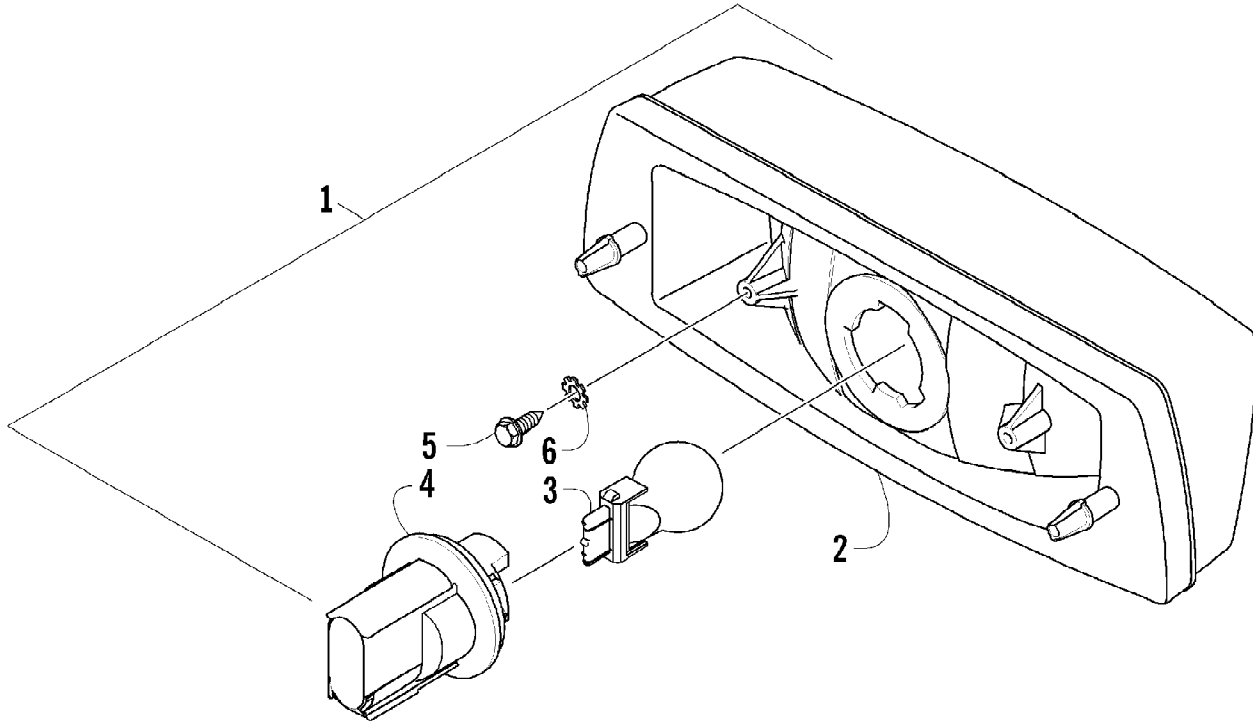 


| Ref # | Part Number | Qty | S/P/F | Description                   |
|-------|-------------|-----|-------|-------------------------------|
| 1     | 0509-022    | 1   |       | Taillight Assembly (inc. 2-4) |
| 2     | 0509-025    | 1   |       | Housing, Taillight            |
| 3     | 0409-056    | 1   |       | Bulb, Taillight               |
| 4     | 0409-057    | 1   |       | Socket, Taillight             |
| 5     | 0623-301    | 2   | /P    | Screw, Self-Tapping           |
| 6     | 8053-212    | 2   | /P    | Washer, Lock - External Tooth |

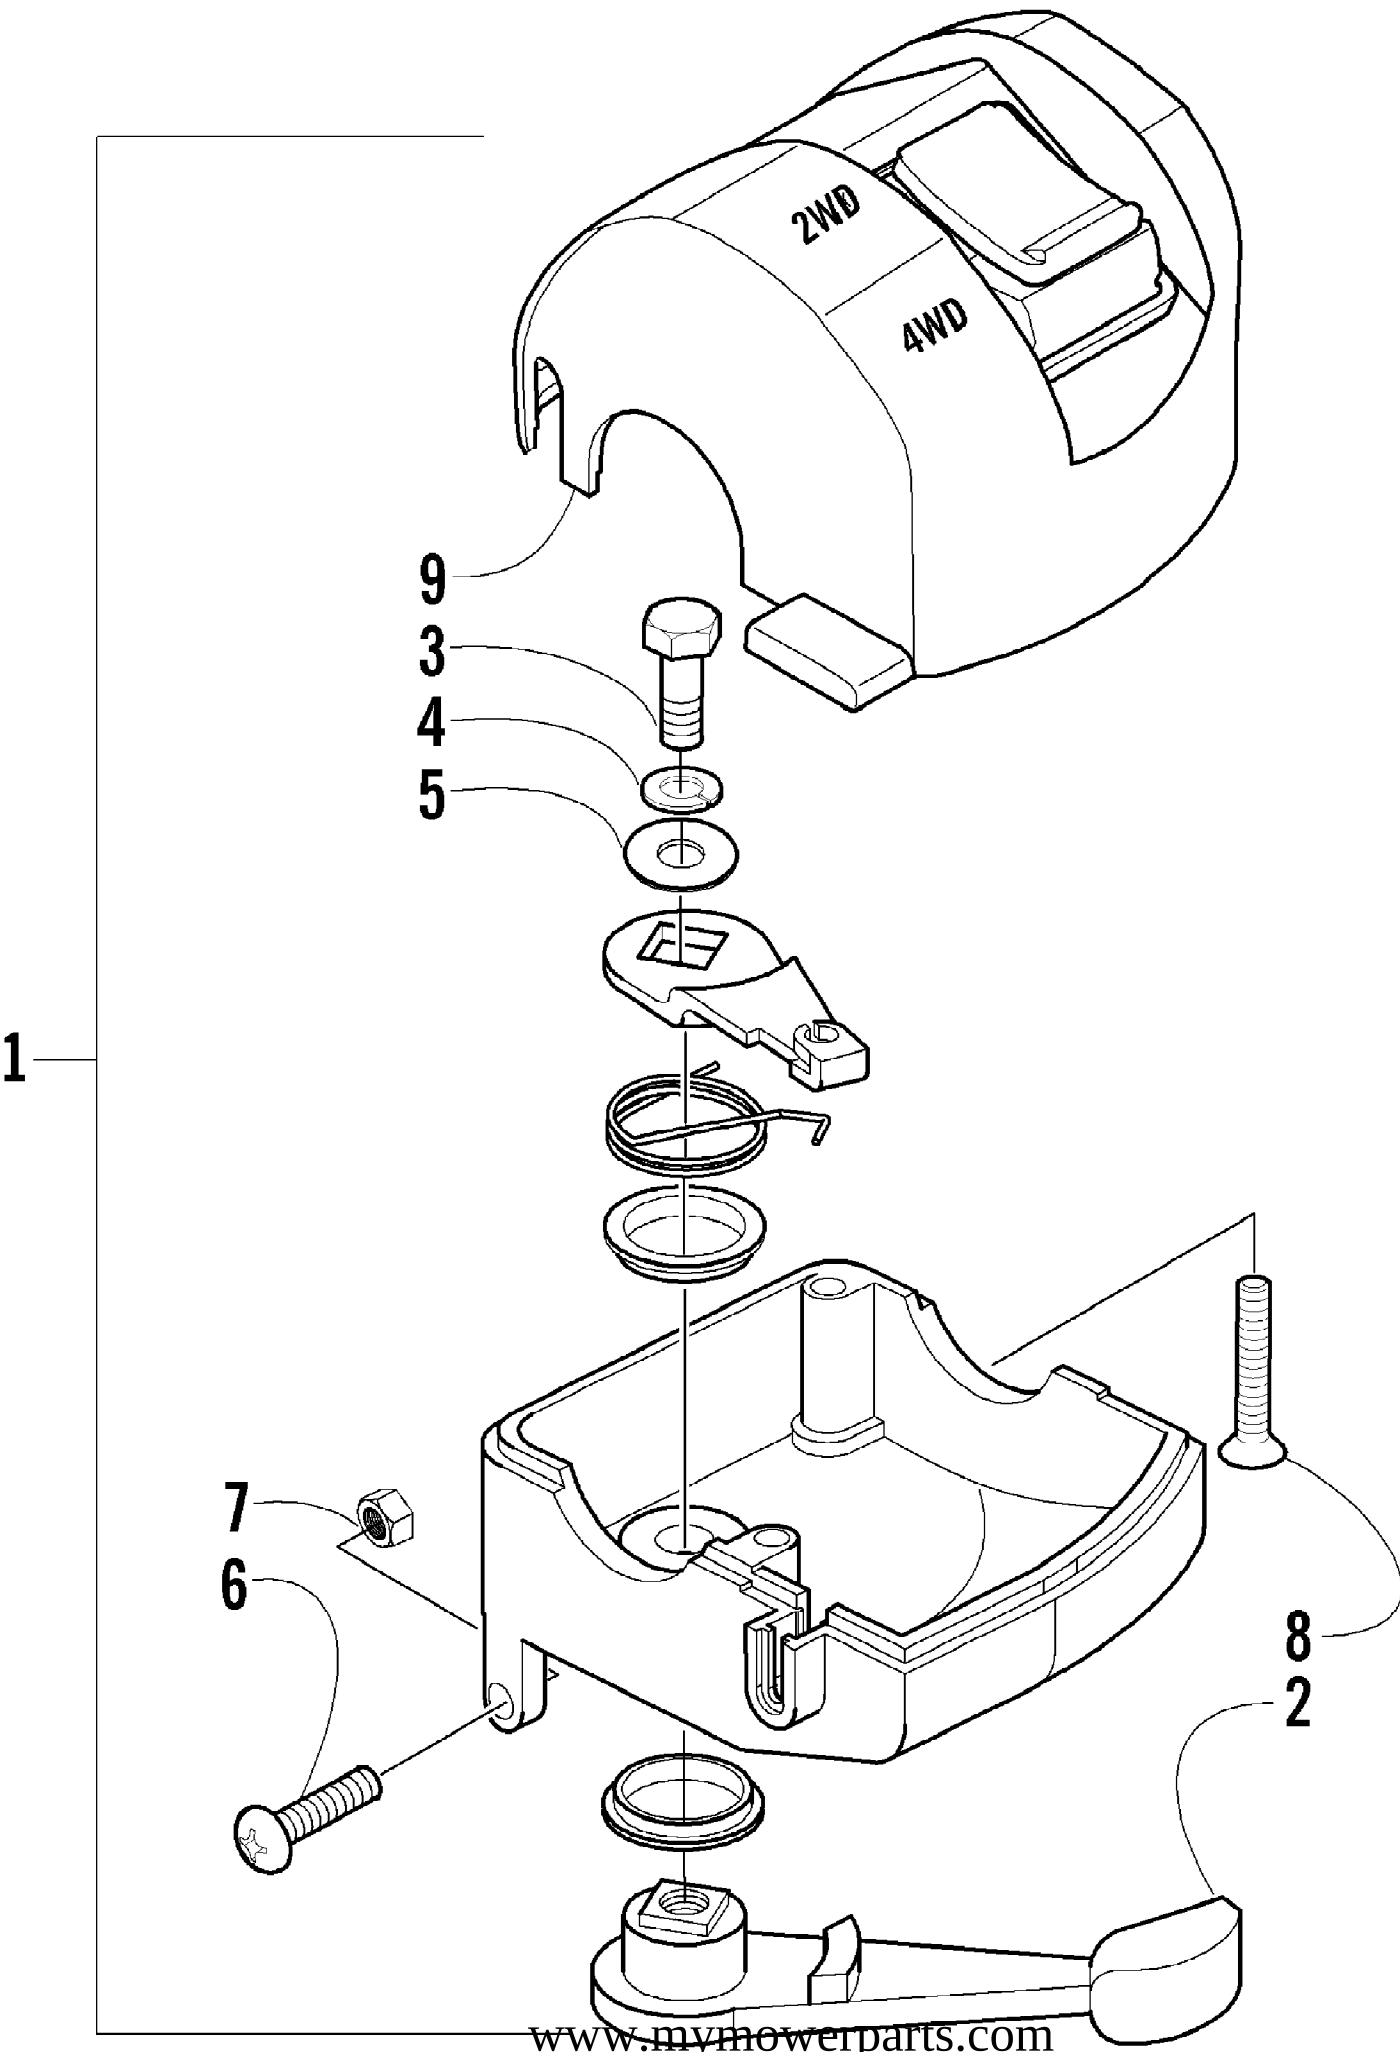 


| Ref # | Part Number | Qty | S/P/F | Description                          |
|-------|-------------|-----|-------|--------------------------------------|
| 1     | 0509-012    | 1   |       | Case, Throttle - Assembly (inc. 2-9) |
| 2     | 3409-001    | 1   |       | Lever                                |
| 3     | 3004-533    | 1   | S/P   | Screw, Cap                           |
| 4     | 3004-447    | 1   | /P    | Washer, Lock                         |
| 5     | 3003-030    | 1   | /P    | Washer                               |
| 6     | 3423-014    | 1   |       | Screw                                |
| 7     | 3423-327    | 1   |       | Nut                                  |
| 8     | 3423-199    | 2   |       | Screw                                |
| 9     | 0409-048    | 1   |       | Cover, Throttle w/Switch             |

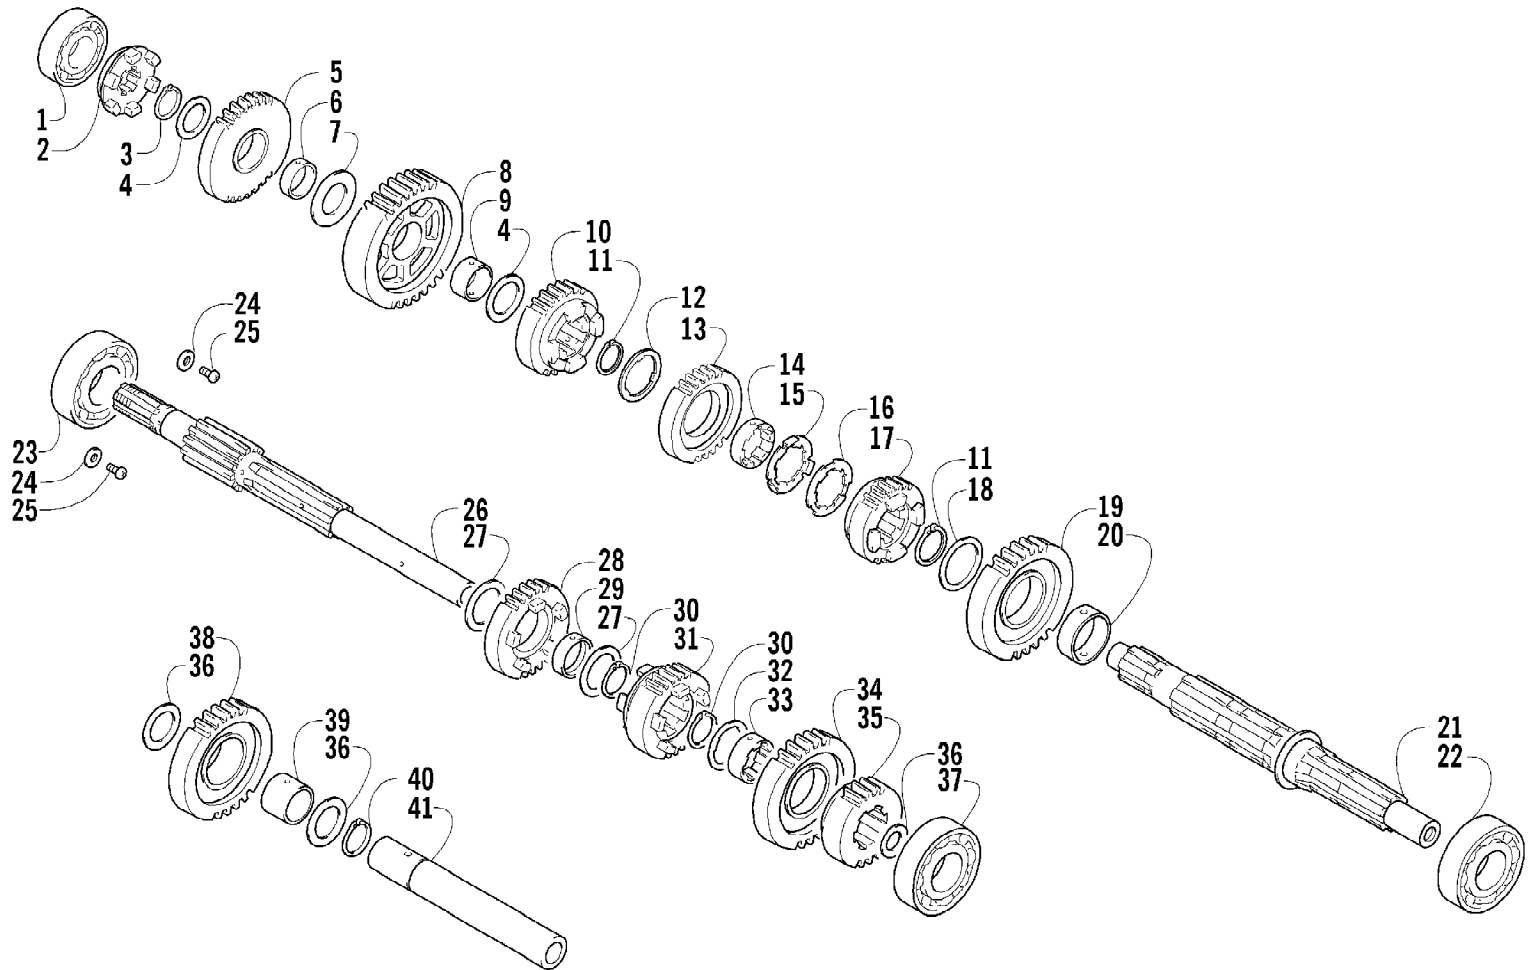 


| Ref # | Part Number | Qty | S/P/F | Description                     |
|-------|-------------|-----|-------|---------------------------------|
| 1     | 3003-320    | 1   | /P    | Bearing, Driveshaft - Right     |
| 2     | 3446-030    | 1   |       | Dog, Reverse                    |
| 3     | 3423-189    | 1   | S     | Circlip                         |
| 4     | 3402-335    | 2   |       | Washer                          |
| 5     | 3446-029    | 1   |       | Gear, Reverse Driven            |
| 6     | 3446-032    | 1   |       | Bushing, Reverse Driven Gear    |
| 7     | 3423-131    | 1   |       | Washer, 1st Driven Gear - Right |
| 8     | 3446-235    | 1   | /P    | Gear, 1st Driven                |
| 9     | 3402-692    | 1   | /P    | Bushing, 1st Driven Gear        |
| 10    | 3446-340    | 1   |       | Gear, 4th Driven                |
| 11    | 3423-866    | 2   | /P    | Circlip                         |
| 12    | 3423-038    | 1   |       | Washer, 3rd Driven Gear - Right |
| 13    | 3446-339    | 1   |       | Gear, 3rd Driven                |
| 14    | 3446-024    | 1   |       | Bushing, 3rd Driven Gear        |
| 15    | 3423-039    | 1   |       | Washer, 3rd Driven Gear - Left  |
| 16    | 3423-040    | 1   |       | Washer, 3rd Driven Gear - Left  |
| 17    | 3446-341    | 1   |       | Gear, 5th Driven                |
| 18    | 3402-383    | 1   |       | Washer, 2nd Driven Gear         |
| 19    | 3446-022    | 1   |       | Gear, 2nd Driven                |
| 20    | 3402-082    | 1   |       | Bushing, 2nd Driven Gear        |
| 21    | 3446-234    | 1   |       | Driveshaft                      |
| 22    | 3402-336    | 1   |       | Bearing, Driveshaft - Middle    |
| 23    | 3402-050    | 1   |       | Bearing, Countershaft - Right   |
| 24    | 3423-135    | 2   |       | Retainer, Countershaft Bearing  |
| 25    | 3423-370    | 2   |       | Screw                           |
| 26    | 3446-014    | 1   |       | Countershaft                    |
| 27    | 3423-187    | 2   | /P    | Washer, 4th Drive Gear          |
| 28    | 3446-337    | 1   |       | Gear, 4th Drive                 |
| 29    | 3423-547    | 1   |       | Bushing, 4th Drive Gear         |
| 30    | 3423-066    | 2   | /P    | Circlip                         |
| 31    | 3446-336    | 1   |       | Gear, 3rd Drive                 |
| 32    | 3423-037    | 1   |       | Washer, 5th Drive Gear          |
| 33    | 3446-020    | 1   |       | Bushing, 5th Drive Gear         |
| 34    | 3446-338    | 1   |       | Gear, 5th Drive                 |
| 35    | 3446-016    | 1   |       | Gear, 2nd Drive                 |
| 36    | 3402-195    | 3   |       | Washer                          |
| 37    | 3402-179    | 1   |       | Bearing, Countershaft - Middle  |
| 38    | 3446-237    | 1   |       | Gear, Reverse Idle              |
| 39    | 3446-238    | 1   |       | Bushing, Reverse Idle           |
| 40    | 3423-865    | 1   | /P    | Circlip                         |
| 41    | 3446-236    | 1   |       | Shaft, Reverse Idle             |

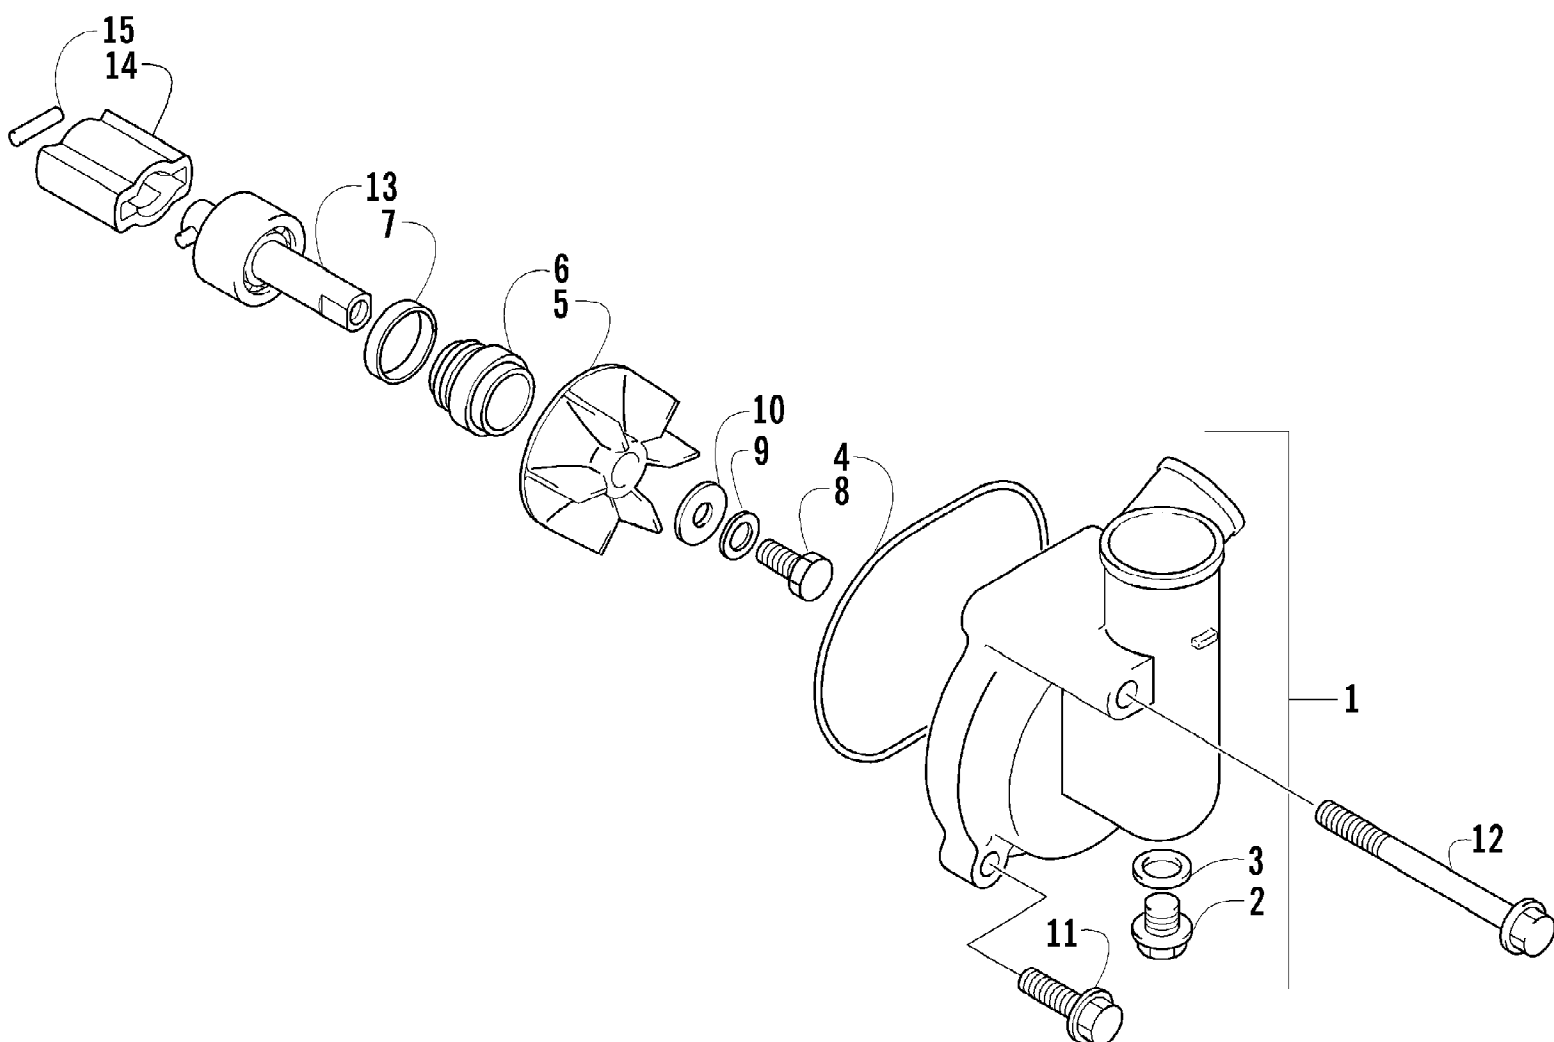 

| Ref # | Part Number | Qty | S/P/F | Description                 |
|-------|-------------|-----|-------|-----------------------------|
| 1     | 3402-354    | 1   | /P    | Case, Water Pump (inc. 2-3) |
| 2     | 3423-343    | 1   |       | Screw, Cap                  |
| 3     | 3402-436    | 1   | /P    | Gasket                      |
| 4     | 3423-078    | 1   |       | O-Ring                      |
| 5     | 3413-001    | 1   |       | Impeller                    |
| 6     | 3005-909    | 1   | /P    | Seal, Mechanical            |
| 7     | 3003-356    | 1   |       | Oil Seal                    |
| 8     | 3423-543    | 1   |       | Bolt                        |
| 9     | 3003-431    | 1   | /P    | Washer                      |
| 10    | 3003-432    | 1   |       | Washer                      |
| 11    | 3004-507    | 2   | S     | Screw, Cap                  |
| 12    | 3423-119    | 1   | S     | Bolt                        |
| 13    | 3413-002    | 1   |       | Shaft, Pump w/Bearing       |
| 14    | 3413-011    | 1   | /P    | Joint, Pump Drive           |
| 15    | 3423-046    | 1   |       | Pin, Driven Gear            |

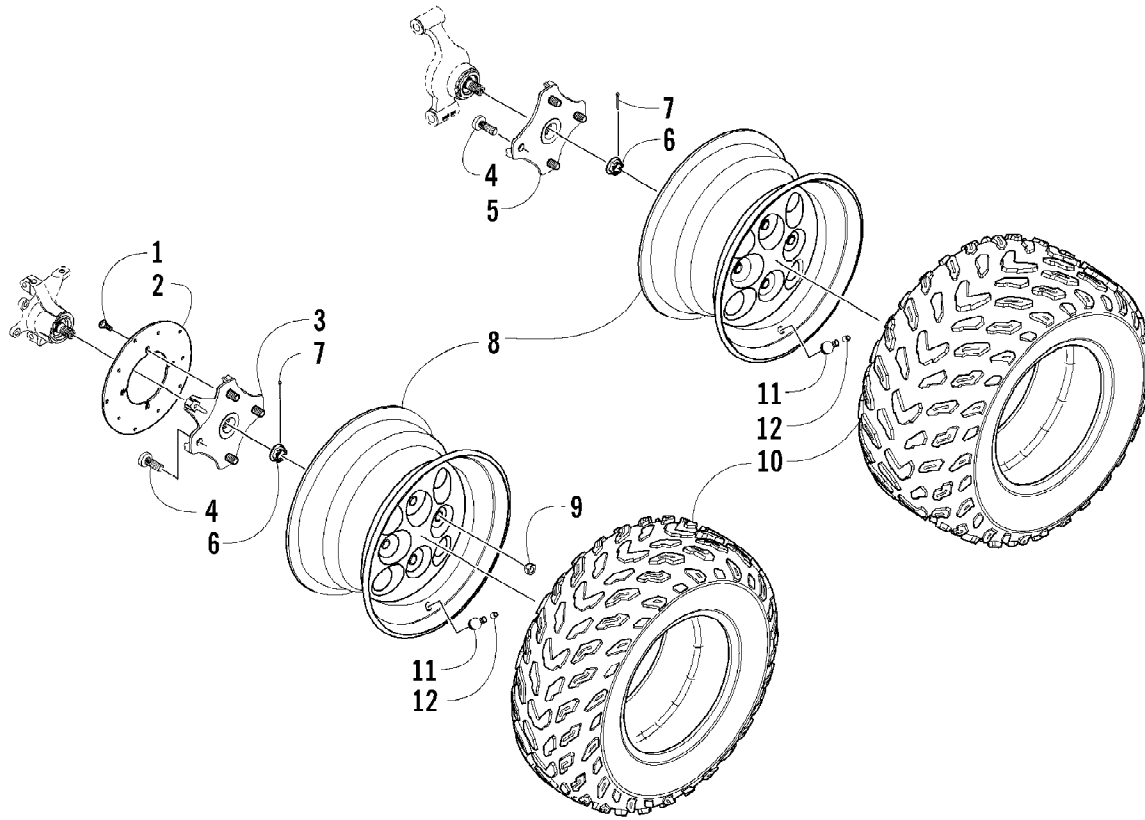 

| Ref # | Part Number | Qty | S/P/F | Description                        |
|-------|-------------|-----|-------|------------------------------------|
| 1     | 0423-557    | 12  |       | Screw, Shoulder                    |
| 2     | 1402-225    | 3   | S     | Disc, Brake                        |
| 3     | 0502-599    | 2   | S     | Hub, Wheel - Front (inc. 4)        |
| 4     | 0402-974    | 16  | /P    | Stud, Wheel Hub                    |
| 5     | 0502-601    | 1   | S     | Hub, Wheel - Rear - Left (inc. 4)  |
| 5     | 0502-599    | 1   | S     | Hub, Wheel - Rear - Right (inc. 4) |
| 6     | 0423-607    | 4   |       | Nut, Castle                        |
| 7     | 0423-407    | 4   |       | Pin, Cotter                        |
| 8     | 1402-127    | 2   |       | Wheel - Front                      |
| 8     | 1402-115    | 2   |       | Wheel - Rear                       |
| 9     | 0423-408    | 16  | /P    | Nut, Lug                           |
| 10    | 1402-548    | 2   |       | Tire - Front Goodyear              |
| 10    | 1402-549    | 2   |       | Tire - Rear Goodyear               |
| 11    | 0402-064    | 4   |       | Stem, Valve (inc. 12)              |
| 12    | 0402-140    | 4   |       | Cap, Valve Stem                    |

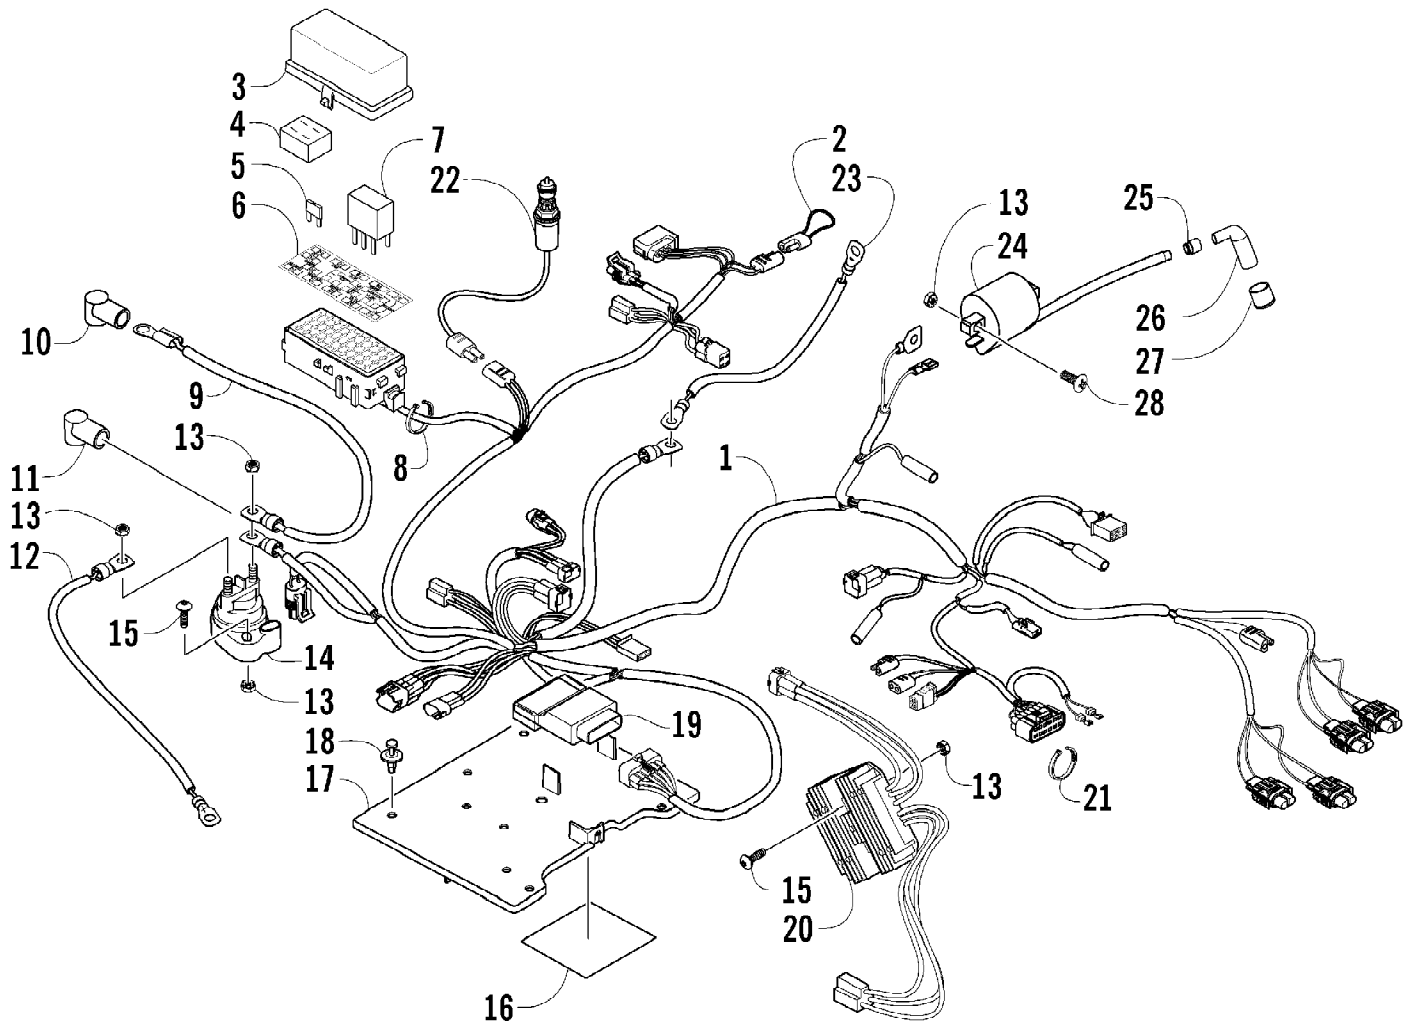 

| Ref # | Part Number | Qty | S/P/F | Description                       |
|-------|-------------|-----|-------|-----------------------------------|
| 1     | 0486-241    | 1   |       | Harness, Main (inc. 2-7)          |
| 2     | 0486-164    | 1   |       | Tether, Accessory Connector       |
| 3     | 0530-008    | 1   |       | Cover, Fuse Block                 |
| 4     | 0430-037    | 1   |       | Holder, Fuse                      |
| 5     | 0430-032    | 4   |       | Fuse - 10 Amp                     |
| 5     | 0430-031    | 3   |       | Fuse - 15 Amp                     |
| 5     | 0430-030    | 2   |       | Fuse - 30 Amp                     |
| 6     | 0411-837    | 1   |       | Decal, Fuse Block                 |
| 7     | 0430-033    | 3   |       | Relay (5-Pin) - 20 Amp            |
| 8     | 0123-788    | AR  | /P    | Cable Tie - 7.5 in.               |
| 9     | 0445-053    | 1   | /P    | Cable, Solenoid/Starter (inc. 10) |
| 10    | 0645-019    | 1   |       | Boot, Terminal                    |
| 11    | 0645-327    | 1   |       | Boot, Terminal                    |
| 12    | 0445-055    | 1   | /P    | Cable, Battery/Solenoid           |
| 13    | 0623-038    | 8   |       | Nut w/Washer                      |
| 14    | 0445-058    | 1   | /P    | Solenoid                          |
| 15    | 8476-625    | 4   |       | Screw, Machine                    |
| 16    | 0412-291    | 1   |       | Shield, Heat                      |
| 17    | 1406-600    | 1   |       | Tray, Electrical                  |
| 18    | 0623-362    | 4   |       | Rivet, Reinstallable              |
| 19    | 3530-040    | 1   |       | CDI Unit                          |
| 20    | 3530-028    | 1   | S     | Regulator, Voltage                |
| 21    | 0123-903    | AR  |       | Cable Tie - 11.5 in.              |
| 22    | 0409-089    | 1   |       | Switch, Brake - Assembly          |
| 23    | 0445-054    | 1   | /P    | Cable, Battery/Ground             |
| 24    | 3530-027    | 1   |       | Coil, Ignition - Assembly         |
| 25    | 3430-009    | 1   | /P    | Seal, High Tension Wire           |
| 26    | 3430-007    | 1   | /P    | Cap, Spark Plug                   |
| 27    | 3430-008    | 1   | /P    | Seal, Spark Plug                  |
| 28    | 8476-620    | 2   |       | Screw, Machine                    |