 



2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4DPS) 1 of 114  
AIR INTAKE ASSEMBLY

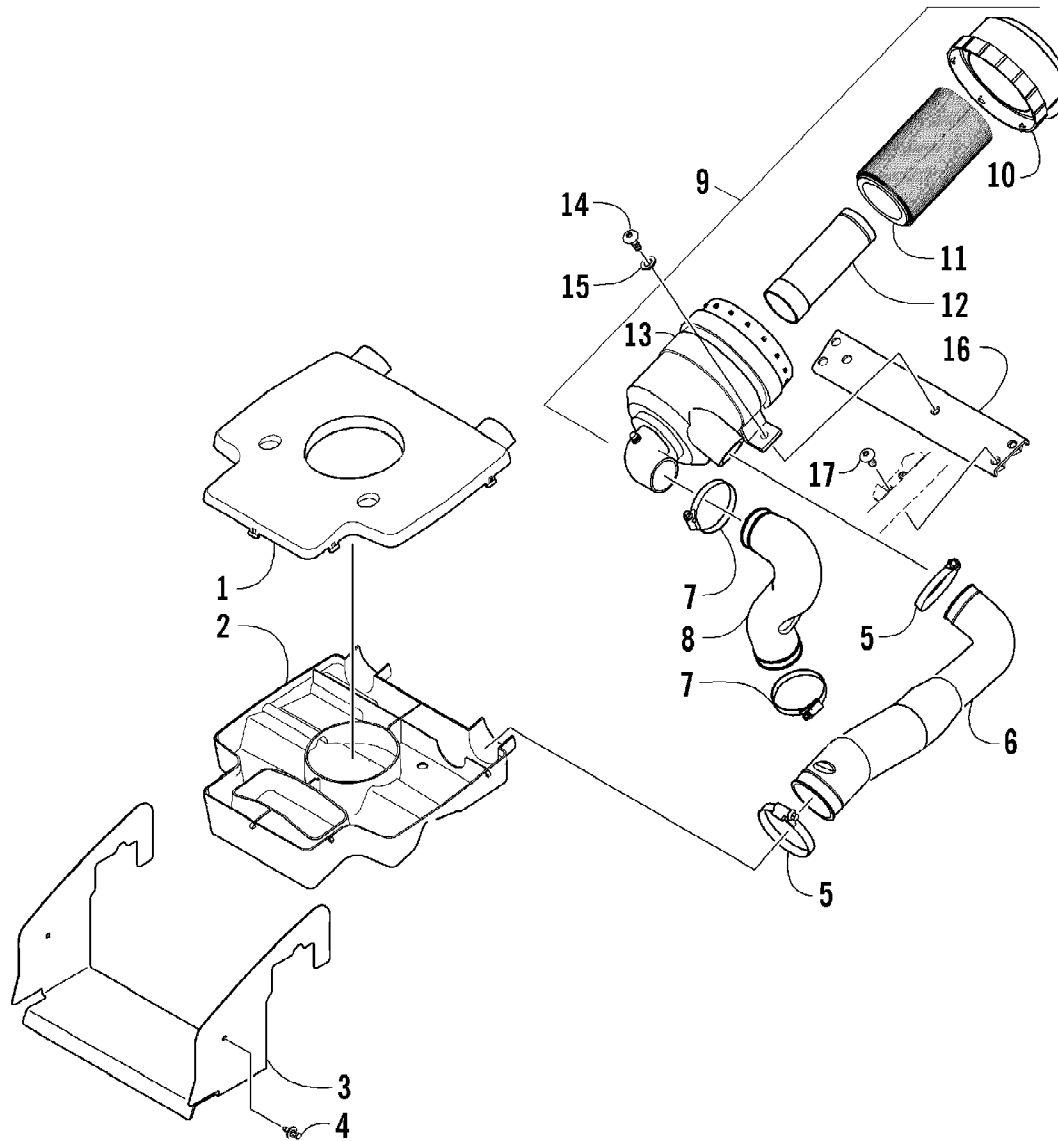

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4DPS) 2 of 114  
 AIR INTAKE ASSEMBLY

| Ref # | Part Number | Qty | S/P/F | Description                            |
|-------|-------------|-----|-------|----------------------------------------|
| 1     | 0413-091    | 1   |       | Diverter, Air - Top                    |
| 2     | 0413-093    | 1   |       | Diverter, Air - Bottom                 |
| 3     | 2406-509    | 1   |       | Shroud, Splash                         |
| 4     | 0623-362    | 2   |       | Rivet, Reinstallable                   |
| 5     | 0423-317    | 2   | /P    | Clamp, Boot                            |
| 6     | 0470-618    | 1   |       | Duct, Air Intake                       |
| 7     | 0423-066    | 2   |       | Clamp, Boot                            |
| 8     | 0470-621    | 1   |       | Duct, Engine Intake                    |
| 9     | 0470-617    | 1   |       | Filter, Air - Assembly (inc. 10-13)    |
| 10    | 0470-627    | 1   |       | Cap, Air Filter                        |
| 11    | 0470-619    | 1   |       | Element, Air Filter - Main             |
| 12    | 0470-620    | 1   |       | Element, Air Filter - Safety           |
| 13    | 0470-628    | 1   |       | Bracket, Mounting - Air Filter Element |
| 14    | 8476-620    | 2   |       | Screw, Bracket                         |
| 15    | 8050-222    | 2   | /P    | Washer                                 |
| 16    | 2506-082    | 1   |       | Bracket, Mounting - Air Filter         |
| 17    | 8476-616    | 4   |       | Screw, Machine                         |

 
2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4DPS) 3 of 114  
AUXILIARY BRAKE ASSEMBLY

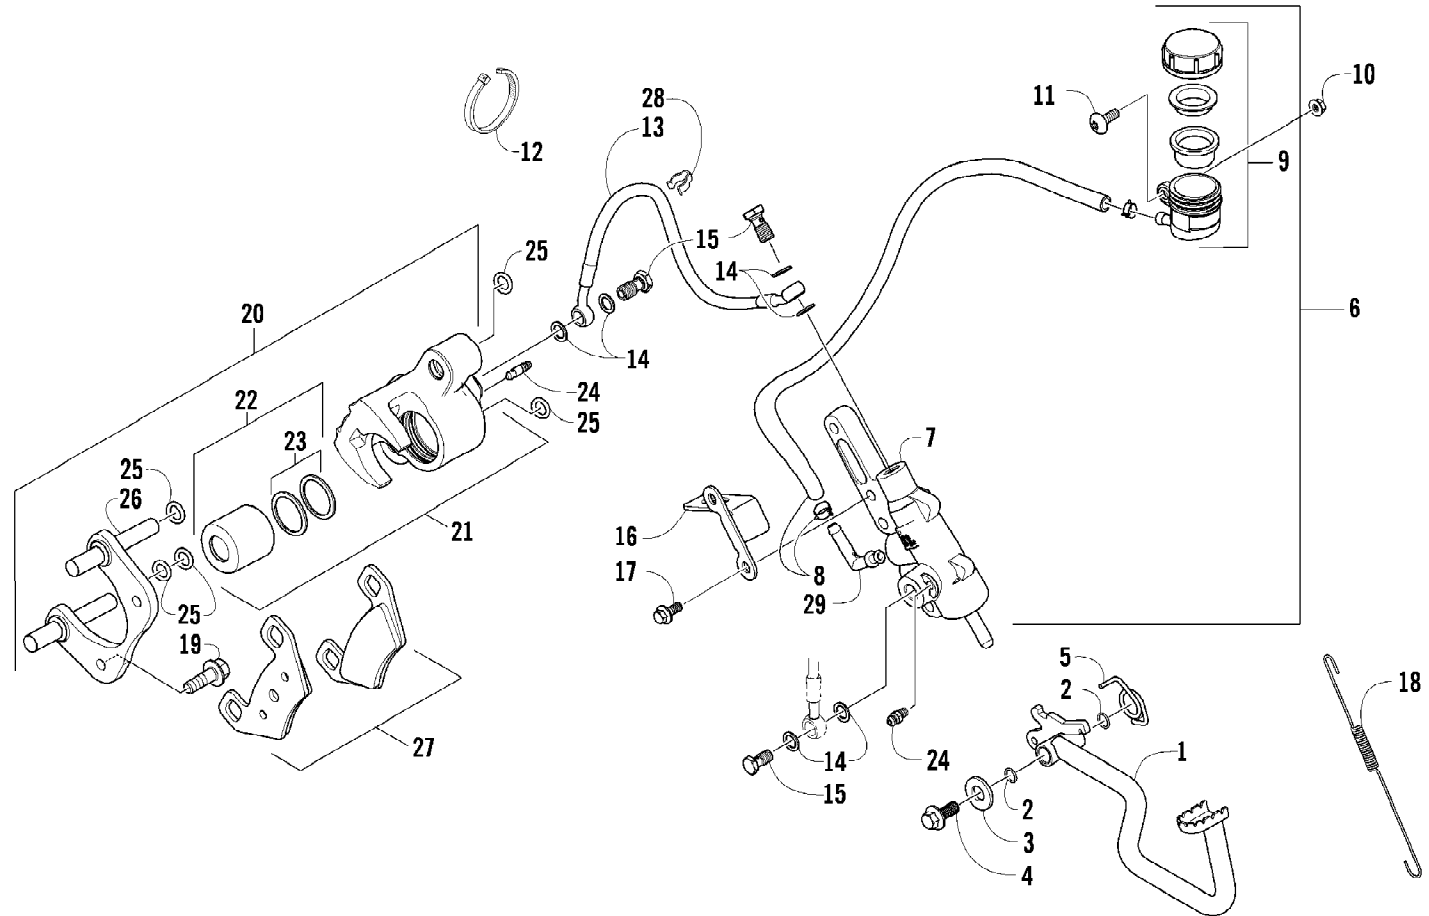

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4DPS) 4 of 114  
 AUXILIARY BRAKE ASSEMBLY


| Ref # | Part Number | Qty | S/P/F | Description                                                          |
|-------|-------------|-----|-------|----------------------------------------------------------------------|
|       | 1502-294    | 1   |       | Master Cylinder Replacement Kit                                      |
| 1     | 1502-063    | 1   |       | Lever, Brake                                                         |
| 2     | 1602-213    | 2   | /P    | O-Ring                                                               |
| 3     | 8050-252    | 1   |       | Washer                                                               |
| 4     | 8408-816    | 1   |       | Screw, Cap                                                           |
| 5     | 0502-807    | 1   |       | Spring, Brake Lever                                                  |
| 6     | 1502-293    | 1   |       | Brake Assembly (inc. 7-9)                                            |
| 7     | 0           | 1   | F     | Master Cylinder                                                      |
| 8     | 0           | 1   | F     | Hose, Brake Fluid Reservoir w/Clamps                                 |
| 9     | 1502-155    | 1   |       | Reservoir, Brake Fluid w/Clamp                                       |
| 10    | 0623-038    | 1   |       | Nut, Flanged                                                         |
| 11    | 8476-616    | 1   |       | Screw, Machine                                                       |
| 12    | 0123-788    | 1   | /P    | Cable Tie - 7.5 in.                                                  |
| 13    | 1502-140    | 1   |       | Hose, Brake                                                          |
| 14    | 0423-178    | 6   |       | Washer, Crush                                                        |
| 15    | 0423-413    | 3   |       | Bolt, Banjo-Fitting                                                  |
| 16    | 0502-840    | 1   |       | Bracket, Switch                                                      |
| 17    | 8408-625    | 2   |       | Screw, Cap                                                           |
| 18    | 0502-785    | 1   |       | Spring, Brake Switch                                                 |
| 19    | 8408-821    | 2   | /P    | Screw, Cap                                                           |
| 20    | 0502-878    | 1   | S     | Caliper, Brake (inc. 21-23, one No. 24, and 25-27)                   |
| 21    | 0502-603    | 1   | S     | Housing, Caliper - Assembly - Right Rear (inc. 22-23 and one No. 24) |
| 22    | 0502-606    | 1   |       | Piston/Seal Set (inc. 23)                                            |
| 23    | 0502-607    | 1   |       | Seal Set                                                             |
| 24    | 0502-609    | 2   | /P    | Valve, Bleed                                                         |
| 25    | 0502-608    | 1   |       | O-Ring, Guide - Set                                                  |
| 26    | 0502-605    | 1   |       | Bracket Assembly                                                     |
| 27    | 0502-875    | 1   | S     | Pad, Brake - Set                                                     |
| 28    | 1502-115    | 2   |       | Clip, Brake Hose                                                     |
| 29    | 1502-296    | 1   | /P    | Adapter, Hose                                                        |

 2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4DPS) 5 of 114  
BATTERY ASSEMBLY

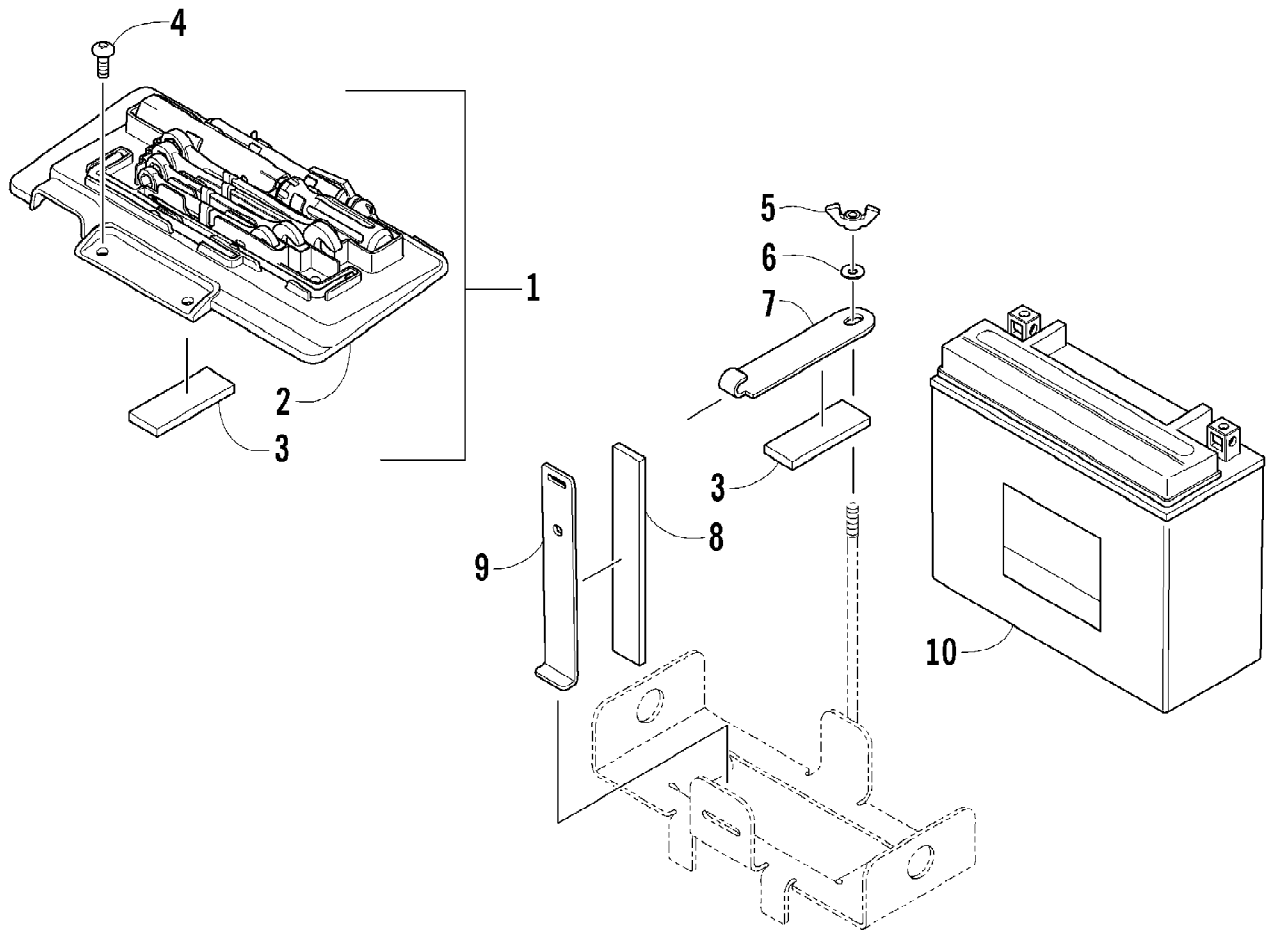

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4DPS) Page 6 of 114  
 BATTERY ASSEMBLY


| Ref # | Part Number | Qty | S/P/F | Description                                 |
|-------|-------------|-----|-------|---------------------------------------------|
| 1     | 5990-839    | 1   | S     | Battery Cover/Tool Tray Assembly (inc. 2-3) |
| 2     | 2406-511    | 1   | S/P   | Cover, Battery                              |
| 3     | 0406-288    | 2   |       | Pad, Battery                                |
| 3     | 0444-122    | 1   | S/P/F | Kit, Tool                                   |
| 4     | 8476-620    | 2   |       | Screw, Machine                              |
| 5     | 0623-325    | 1   |       | Nut, Wing                                   |
| 6     | 8050-217    | 1   | /P    | Washer                                      |
| 7     | 0645-243    | 1   |       | Strap, Battery - Top                        |
| 8     | 0406-289    | 1   |       | Pad, Battery                                |
| 9     | 0645-311    | 1   |       | Strap, Battery - Side                       |
| 10    | 0645-432    | 1   | S     | Battery                                     |

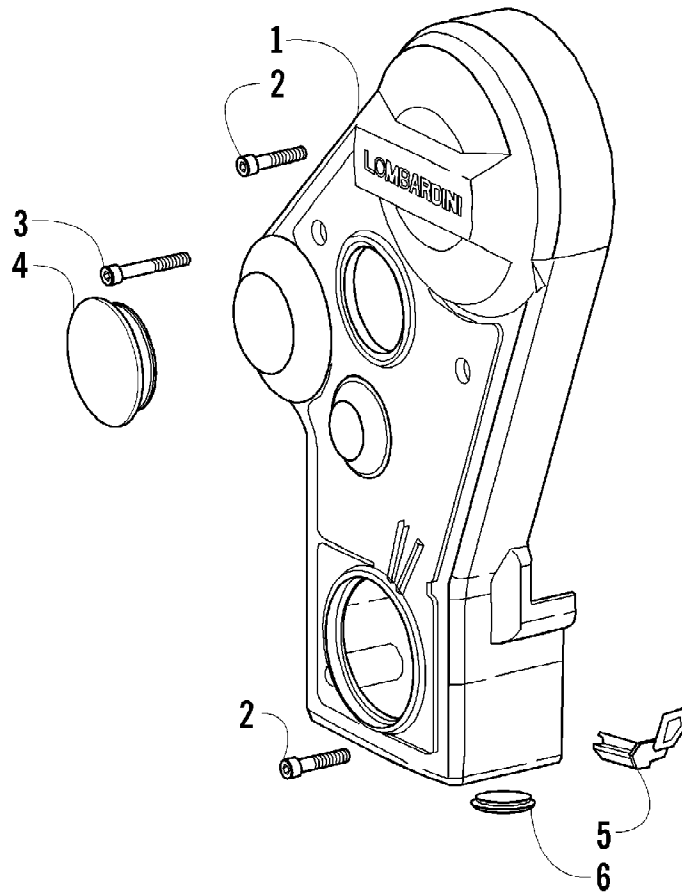 

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4DPS) 8 of 114  
BELT GUARD ASSEMBLY

| Ref # | Part Number | Qty | S/P/F | Description |
|-------|-------------|-----|-------|-------------|
| 1     | 3206-315    | 1   | S     | Guard, Belt |
| 2     | 3206-043    | 3   |       | Screw       |
| 3     | 3206-189    | 1   |       | Screw       |
| 4     | 3206-318    | 1   |       | Cap         |
| 5     | 3206-317    | 1   |       | Gasket      |
| 6     | 3206-316    | 1   |       | Plug        |

 
2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4DPS) 9 of 114  
BODY PANEL AND DECALS

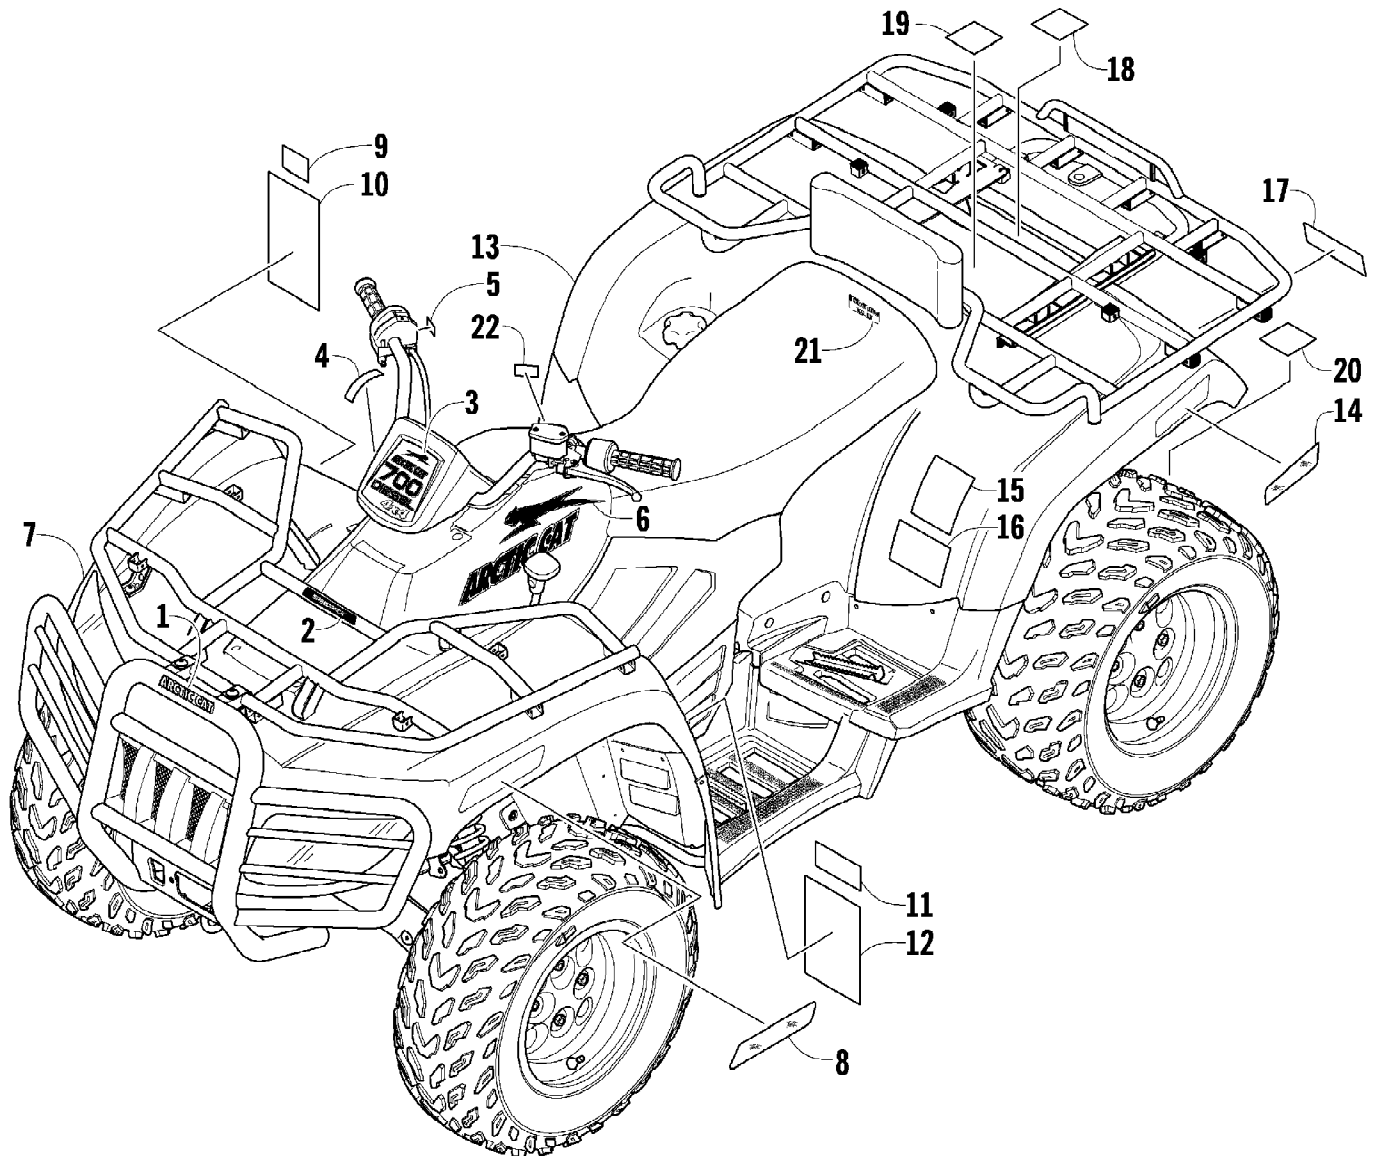

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4DUSR)  
 BODY PANEL AND DECALS Page 10 of 114

| Ref # | Part Number | Qty | S/P/F | Description                        |
|-------|-------------|-----|-------|------------------------------------|
| 1     | 0411-501    | 1   |       | Decal, Front Bumper - "Arctic Cat" |
| 2     | 1411-050    | 1   | /P    | Decal, Speedrack                   |
| 3     | 1411-610    | 1   |       | Decal, Instrument Pod              |
| 4     | 0411-426    | 1   |       | Decal, Warning - Clutch Cover      |
| 5     | 0411-966    | 1   |       | Decal, Warning - Differential Lock |
| 6     | 1411-634    | 1   |       | Decal, Side - Upper Right          |
| 6     | 1411-635    | 1   |       | Decal, Side - Upper Left           |
| 7     | 2506-322    | 1   | S     | Panel, Fender - Front (inc. 8-12)  |
| 8     | 0411-818    | 1   |       | Decal, Reflector - Front - Right   |
| 8     | 0411-819    | 1   |       | Decal, Reflector - Front - Left    |
| 9     | 0411-894    | 1   |       | Decal, Warning - Hill              |
| 10    | 1411-490    | 1   |       | Decal, Warning - Reverse/Pre-Ride  |
| 11    | 1411-574    | 1   |       | Decal, Warning - Off-Road Only     |
| 12    | 0411-753    | 1   |       | Decal, Warning - Age/General       |
| 13    | 2506-708    | 1   | S     | Panel, Fender - Rear (inc. 14-19)  |
| 14    | 1411-592    | 1   | /P    | Decal, Reflector - Rear - Right    |
| 14    | 1411-593    | 1   | /P    | Decal, Reflector - Rear - Left     |
| 15    | 0411-833    | 1   |       | Decal, Passenger                   |
| 16    | 0411-832    | 1   |       | Decal, Warning - Tire Pressure     |
| 17    | 1411-725    | 1   |       | Decal, Rear                        |
| 18    | 1411-269    | 1   |       | Decal, Warning - Passenger         |
| 19    | 1411-251    | 1   |       | Decal, Warning - Seat/Passenger    |
| 20    | 1411-077    | 1   |       | Decal, Warning - Towing            |
| 21    | 1411-508    | 1   |       | Decal, Storage                     |
| 22    | 1411-865    | 1   |       | Decal, Warning - Brake Lever Lock  |

 
2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4DPSR)  
BOTTOM END GASKET SET ASSEMBLY

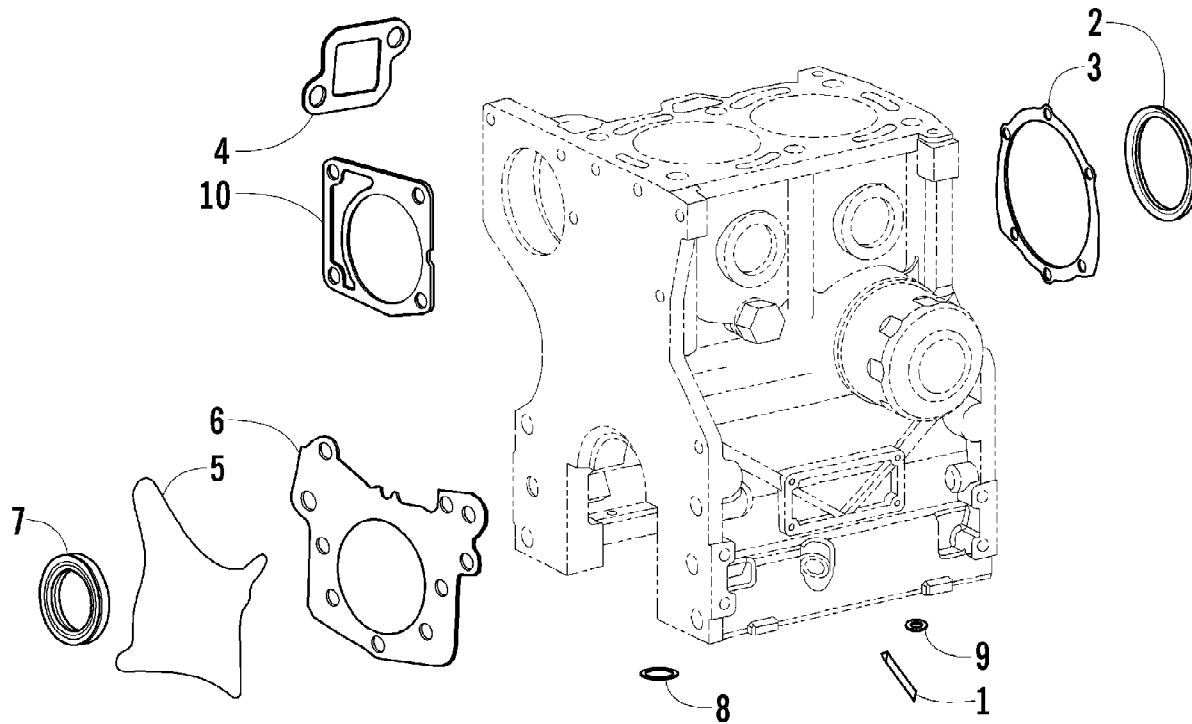

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4DPS)  
 BOTTOM END GASKET SET ASSEMBLY Page 12 of 114

| Ref # | Part Number | Qty | S/P/F | Description           |
|-------|-------------|-----|-------|-----------------------|
|       | 3206-329    | 1   |       | Bottom End Gasket Set |
| 1     | 3206-054    | 4   |       | Gasket, Crankcase     |
| 2     | 3206-091    | 1   |       | Ring, Engine Flange   |
| 3     | 3206-089    | 1   | S     | Gasket, Engine Flange |
| 4     | 3206-264    | 1   |       | Gasket, Thermostat    |
| 5     | 3206-172    | 1   |       | O-Ring, Oil Pump      |
| 6     | 3206-173    | 1   | /P    | Gasket, Oil Pump      |
| 7     | 3206-161    | 1   |       | Ring, Seal - Oil Pump |
| 8     | 3206-176    | 1   |       | Seal, Oil - Oil Pan   |
| 9     | 3206-177    | 1   |       | Seal, Oil - Oil Pan   |
| 10    | 3206-272    | 1   |       | Gasket, Water Pump    |

 
2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT41D) Page 13 of 114  
CAM PULLEYS, TIMING BELT, AND SPEED GOVERNOR ASSEMBLY

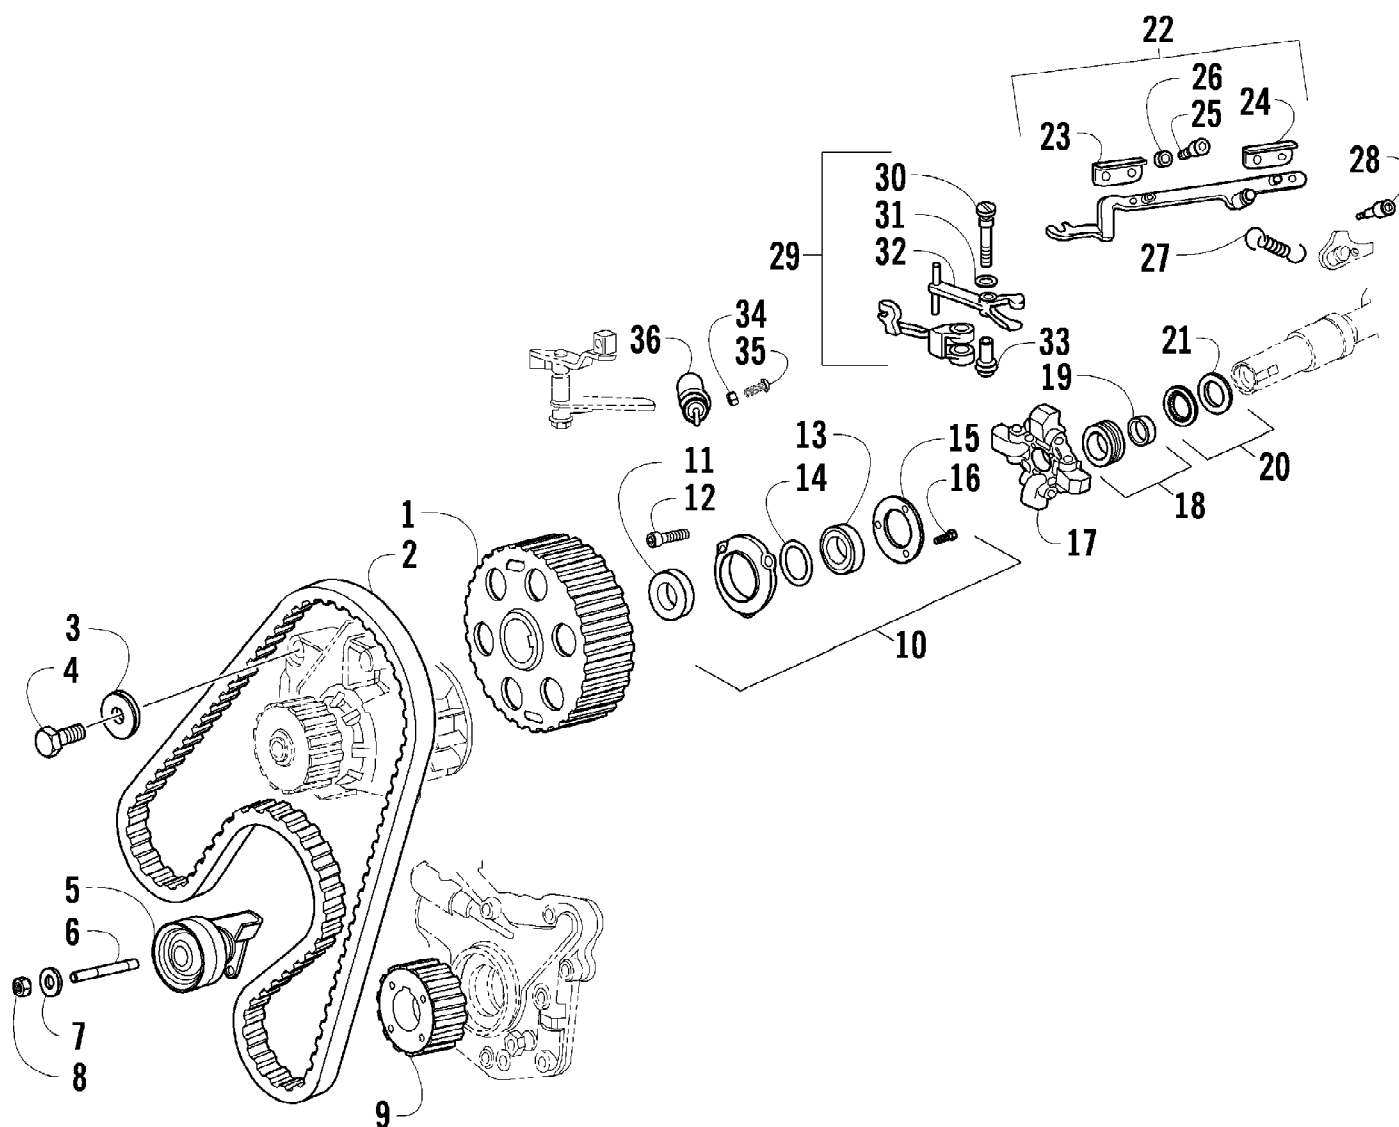

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4D) Page 14 of 114  
 CAM PULLEYS, TIMING BELT, AND SPEED GOVERNOR ASSEMBLY

| Ref # | Part Number | Qty | S/P/F | Description                             |
|-------|-------------|-----|-------|-----------------------------------------|
| 1     | 3206-153    | 1   |       | Pulley, Cam Driven                      |
| 2     | 3206-154    | 1   |       | Belt, Timing                            |
| 3     | 3206-156    | 1   |       | Washer                                  |
| 4     | 3206-155    | 1   |       | Screw                                   |
| 5     | 3206-159    | 1   |       | Pulley                                  |
| 6     | 3206-158    | 1   |       | Stud                                    |
| 7     | 3206-157    | 1   |       | Washer                                  |
| 8     | 3206-142    | 1   |       | Nut                                     |
| 9     | 3206-160    | 1   |       | Pulley, Cam Drive                       |
| 10    | 3206-209    | 1   |       | Camshaft Support (inc. 11-16)           |
| 11    | 3206-208    | 1   |       | Ring, Seal                              |
| 12    | 3206-088    | 3   |       | Screw                                   |
| 13    | 3206-211    | 1   |       | Bearing, Ball                           |
| 14    | 3206-210    | 1   |       | Seal, Oil                               |
| 15    | 3206-212    | 1   |       | Plate                                   |
| 16    | 3206-166    | 3   |       | Screw                                   |
| 17    | 3206-213    | 1   |       | Flyweight - Assembly                    |
| 18    | 3206-214    | 1   |       | Sleeve, Control (inc. 19)               |
| 19    | 3206-216    | 1   |       | Sleeve                                  |
| 20    | 3206-217    | 1   |       | Roller, Thrust (inc. 21)                |
| 21    | 3206-215    | 1   |       | Washer, Thrust                          |
| 22    | 3206-218    | 1   | S     | Rail, Injection Pump (inc. 23-26)       |
| 23    | 3206-220    | 1   |       | Plate                                   |
| 24    | 3206-219    | 1   |       | Plate                                   |
| 25    | 3206-221    | 2   |       | Screw                                   |
| 26    | 3206-223    | 2   |       | Washer                                  |
| 27    | 3206-222    | 1   |       | Spring, Fuel - Extra                    |
| 28    | 3206-225    | 2   |       | Screw                                   |
| 29    | 3206-228    | 1   |       | Lever, Governor - Assembly (inc. 30-33) |
| 30    | 3206-224    | 1   |       | Pin, Lever                              |
| 31    | 3206-226    | 1   |       | Seal                                    |
| 32    | 3206-229    | 1   |       | Sleeve                                  |
| 33    | 3206-227    | 1   |       | Journal                                 |
| 34    | 3206-232    | 1   |       | Nut                                     |
| 35    | 3206-231    | 1   |       | Screw                                   |
| 36    | 3206-230    | 1   |       | Device, Min-Max                         |

 2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4100R)  
CAMSHAFT AND FUEL PUMP DRIVE ECCENTRIC

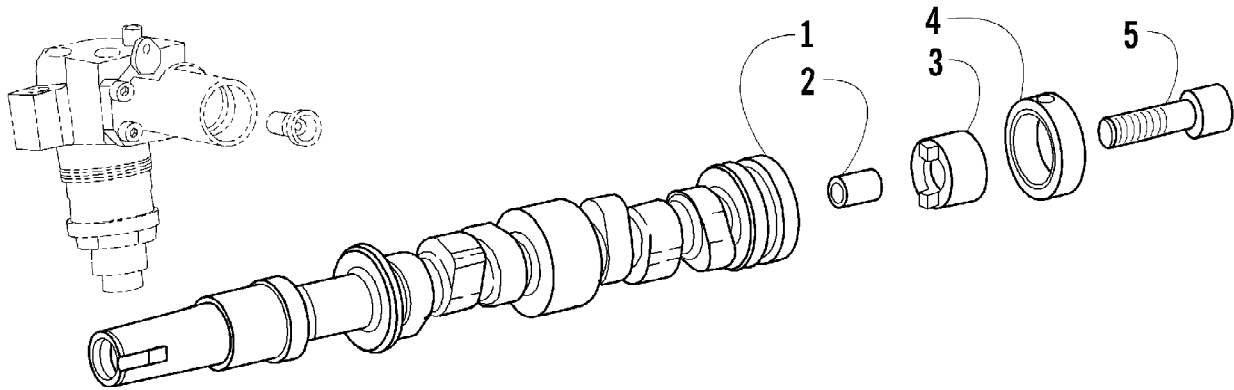


2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4DPSR)  
CAMSHAFT AND FUEL PUMP DRIVE ECCENTRIC

Page 16 of 114

| Ref # | Part Number | Qty | S/P/F | Description |
|-------|-------------|-----|-------|-------------|
| 1     | 3206-129    | 1   |       | Camshaft    |
| 2     | 3206-130    | 1   |       | Sleeve      |
| 3     | 3206-131    | 1   |       | Cam         |
| 4     | 3206-128    | 1   |       | Sleeve      |
| 5     | 3206-132    | 1   |       | Screw       |

 
2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4100R) Page 17 of 114  
CASE/BELT COOLING ASSEMBLY

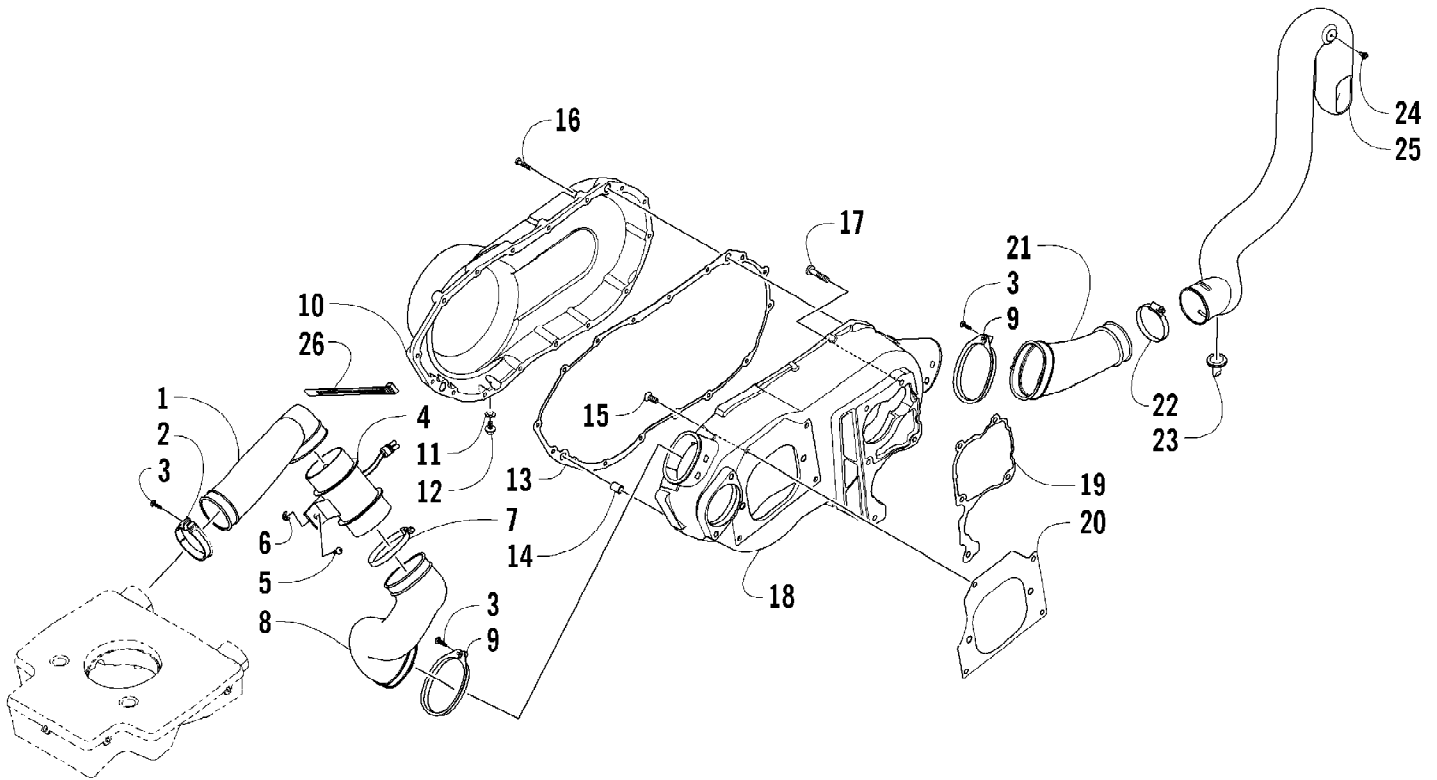

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT410SR)  
CASE/BELT COOLING ASSEMBLY Page 18 of 114

| Ref # | Part Number | Qty | S/P/F | Description                 |
|-------|-------------|-----|-------|-----------------------------|
| 1     | 0413-132    | 1   |       | Duct, Belt Cooling - Front  |
| 2     | 0423-551    | 1   |       | Clamp, Plastic              |
| 3     | 0423-342    | 3   | /P    | Screw, Self-Tapping         |
| 4     | 0413-141    | 1   |       | Fan, Belt Cooling           |
| 5     | 8475-512    | 2   |       | Screw, Machine              |
| 6     | 8424-502    | 2   |       | Nut, Hex                    |
| 7     | 0423-018    | 1   |       | Clamp, Boot                 |
| 8     | 0413-133    | 1   |       | Boot, Belt Cooling - Inlet  |
| 9     | 0423-550    | 2   |       | Clamp, Plastic              |
| 10    | 1502-157    | 1   |       | Cover, Clutch               |
| 11    | 0830-013    | 1   |       | Washer, Crush               |
| 12    | 8408-812    | 1   |       | Screw, Cap                  |
| 13    | 1402-528    | 1   |       | Gasket, V-Belt Cover        |
| 14    | 0829-002    | 2   |       | Dowel, Split                |
| 15    | 8473-820    | 4   |       | Screw, Machine              |
| 16    | 8468-630    | 16  |       | Screw, Machine              |
| 17    | 0423-118    | 5   |       | Screw, Self-Tapping         |
| 18    | 1402-527    | 1   |       | Cover, Clutch               |
| 19    | 1402-526    | 1   |       | Gasket, Gearcase            |
| 20    | 1402-524    | 1   |       | Gasket, Clutch Cover        |
| 21    | 0413-134    | 1   |       | Boot, Belt Cooling - Outlet |
| 22    | 0423-380    | 1   | /P    | Clamp, Boot                 |
| 23    | 0470-442    | 1   | /P    | Valve, Drain                |
| 24    | 0623-301    | 1   | /P    | Screw, Self-Tapping         |
| 25    | 0413-106    | 1   |       | Duct, Belt Cooling - Rear   |
| 26    | 0623-316    | 1   |       | Cable Tie                   |

 
2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4100R)  
CLUTCHES AND DRIVE BELT ASSEMBLIES

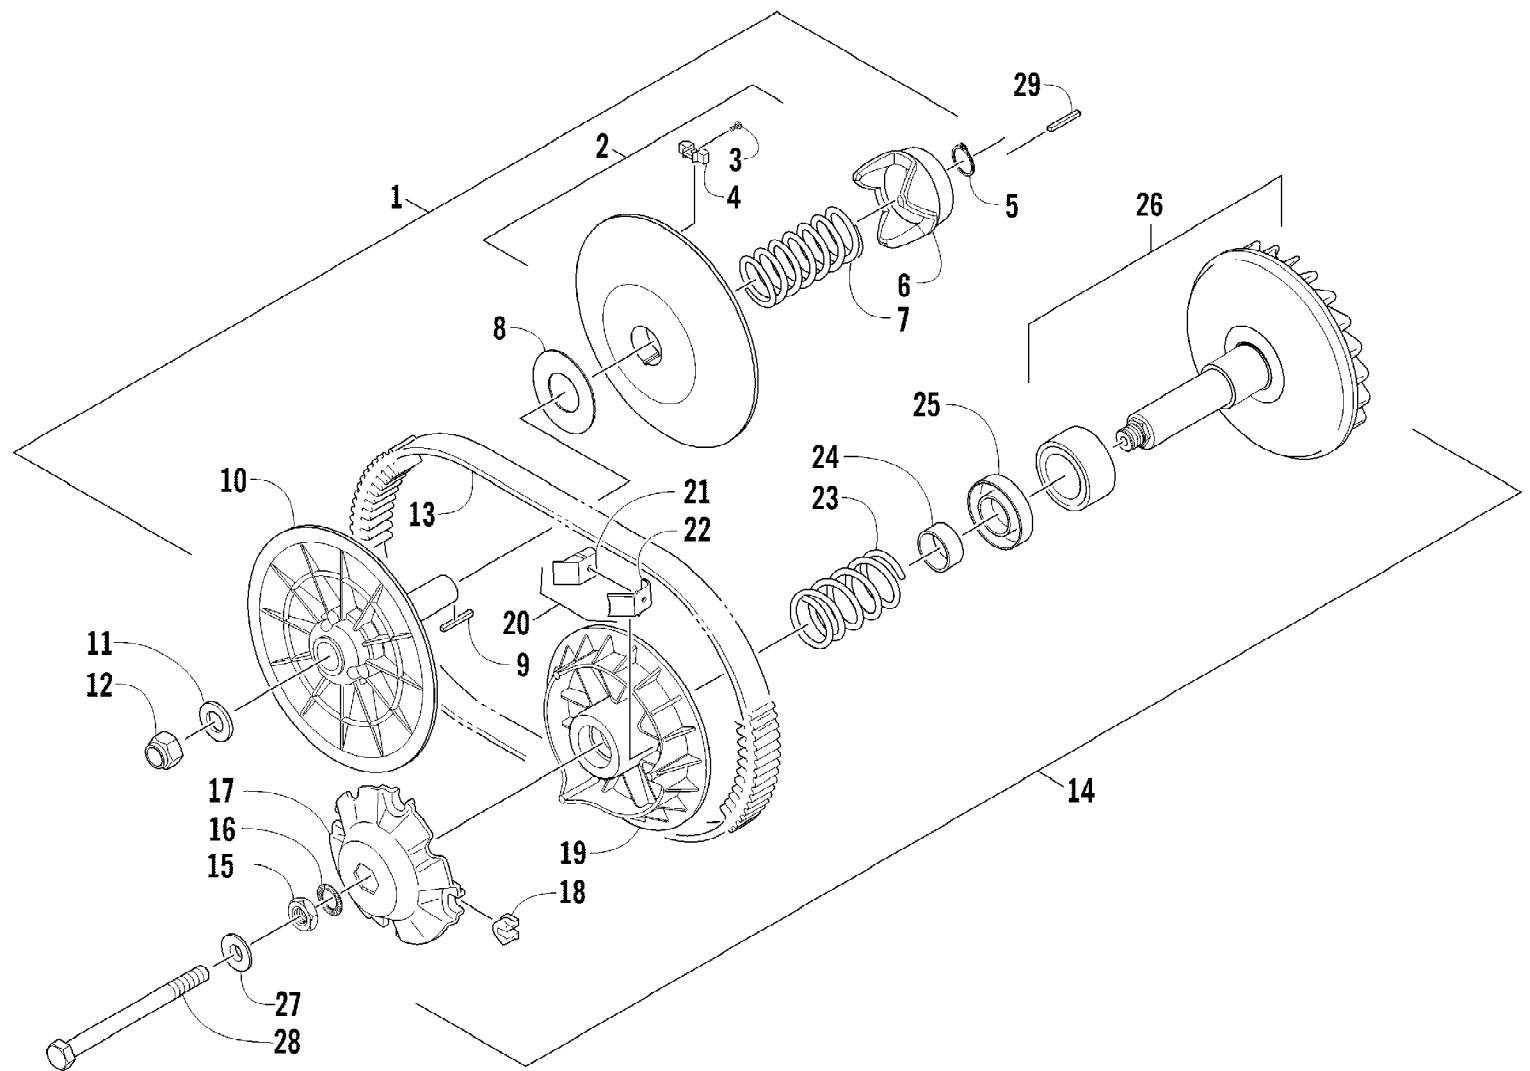

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4D) Page 20 of 114  
 CLUTCHES AND DRIVE BELT ASSEMBLIES

| Ref # | Part Number | Qty | S/P/F | Description                           |
|-------|-------------|-----|-------|---------------------------------------|
| 1     | 1502-073    | 1   | S     | Pulley, Driven - Assembly (inc 2-10)  |
| 2     | 1502-208    | 1   |       | Face, Driven - Movable (inc. 3-4)     |
| 3     | 0423-752    | 3   |       | Screw, Cam                            |
| 4     | 1402-632    | 3   | S     | Cam, Shoe                             |
| 5     | 0423-751    | 1   |       | Ring, Retaining                       |
| 6     | 1402-630    | 1   |       | Cam                                   |
| 7     | 0423-750    | 1   |       | Spring                                |
| 8     | 0423-749    | 1   |       | Shim                                  |
| 9     | 1402-631    | 1   |       | Key                                   |
| 10    | 1402-629    | 1   |       | Face, Driven - Fixed                  |
| 11    | 0828-020    | 1   |       | Washer                                |
| 12    | 0827-013    | 1   |       | Nut, Driven Pulley                    |
| 13    | 1402-564    | 1   |       | Belt, Drive                           |
| 14    | 1502-072    | 1   |       | Pulley, Drive - Assembly (inc. 15-26) |
| 15    | 0423-747    | 1   |       | Nut, Hex                              |
| 16    | 0423-746    | 1   |       | Washer, Lock                          |
| 17    | 1502-207    | 1   |       | Plate, Movable Drive Face             |
| 18    | 1402-628    | 3   |       | Damper, Movable Drive Face            |
| 19    | 1402-625    | 1   |       | Face, Drive - Movable                 |
| 20    | 1502-205    | 6   | /P    | Block, Weight - Assembly (inc. 21-22) |
| 21    | 1402-627    | 6   | S     | Weight                                |
| 22    | 1402-626    | 6   | S     | Block, Weight                         |
| 23    | 0423-745    | 1   |       | Spring                                |
| 24    | 1402-624    | 1   |       | Stopper                               |
| 25    | 1402-623    | 1   |       | Seat, Spring                          |
| 26    | 1502-206    | 1   |       | Face, Drive - Fixed                   |
| 27    | 0423-733    | 1   |       | Washer                                |
| 28    | 0423-673    | 1   |       | Bolt, Hex                             |
| 29    | 0423-718    | 1   |       | Key                                   |

 
2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT410) Page 21 of 114  
CONTROL SWITCH HOUSING ASSEMBLY

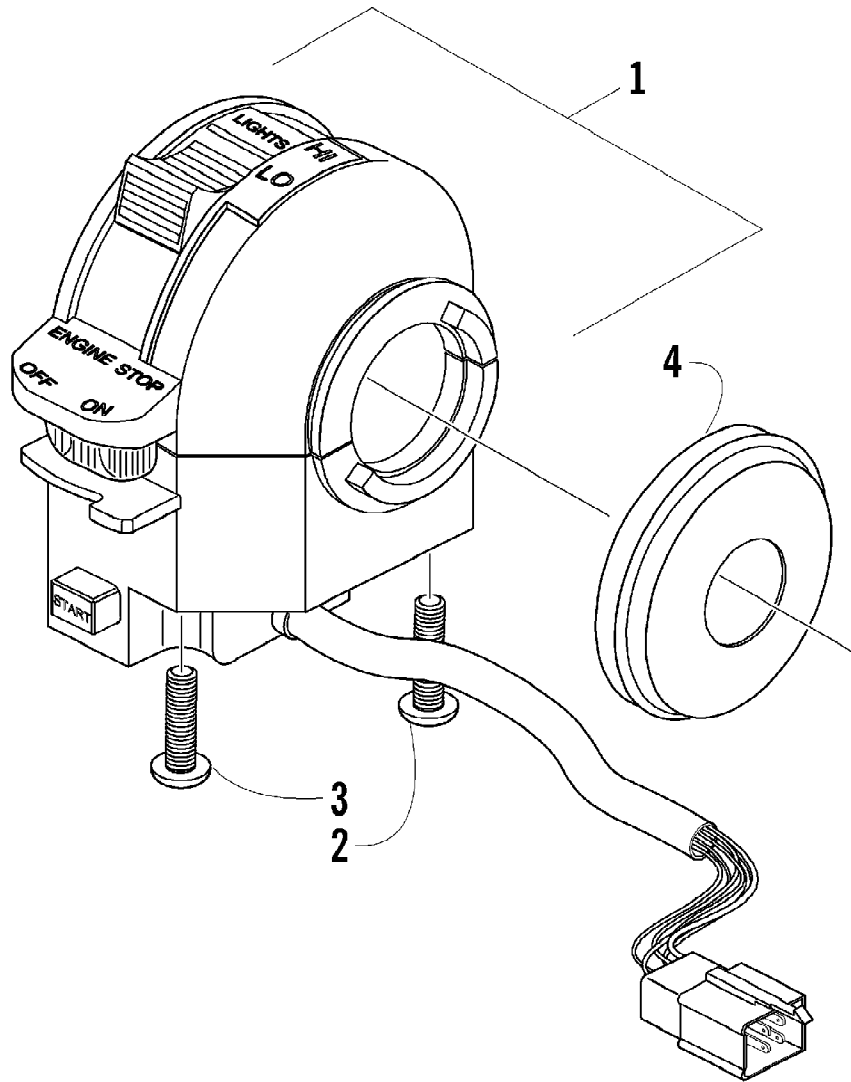

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4DUSP)  
CONTROL SWITCH HOUSING ASSEMBLY Page 22 of 114

| Ref # | Part Number | Qty | S/P/F | Description                           |
|-------|-------------|-----|-------|---------------------------------------|
| 1     | 0409-083    | 1   |       | Switch, Control - Assembly (inc. 2-3) |
| 2     | 3423-196    | 1   |       | Screw                                 |
| 3     | 0409-028    | 1   |       | Screw                                 |
| 4     | 3409-019    | 1   |       | Cover, Housing                        |

 
2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT410) Page 23 of 114  
COOLING ASSEMBLY

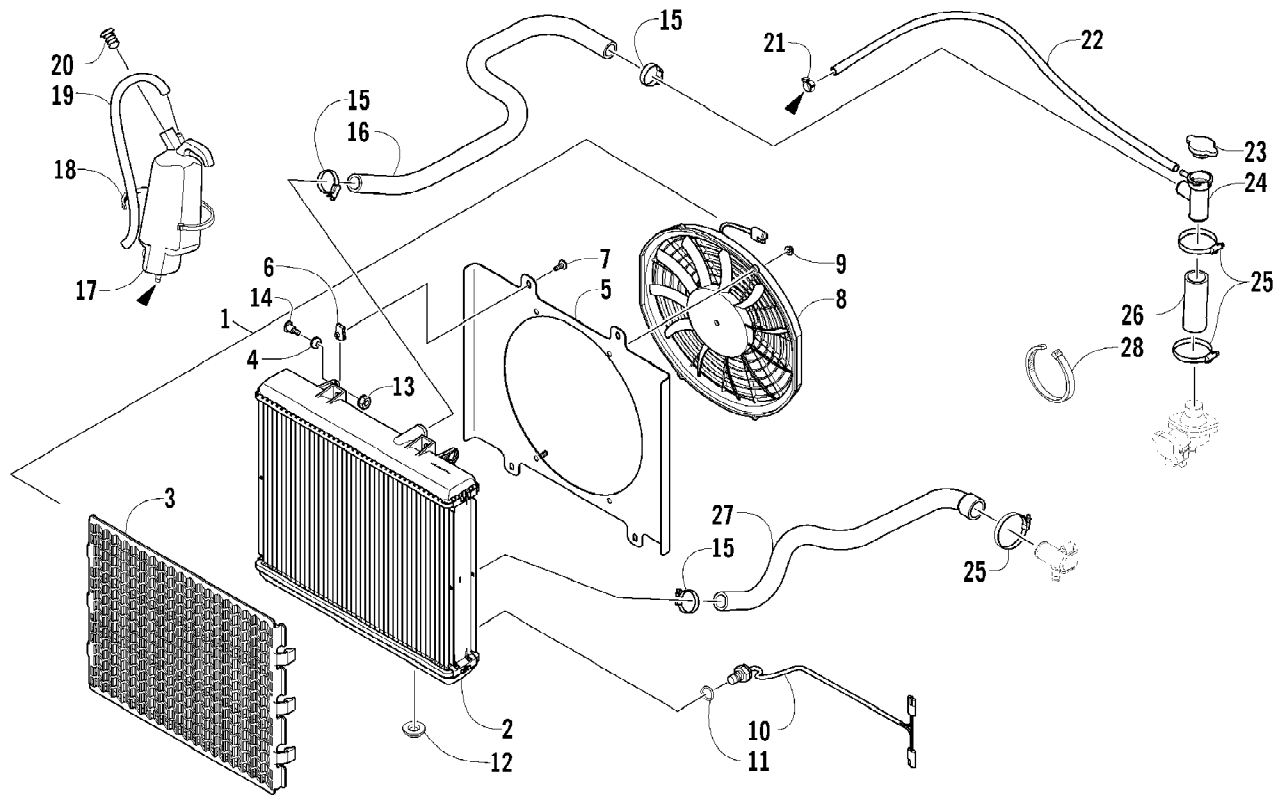

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4D) Page 24 of 114  
COOLING ASSEMBLY


| Ref # | Part Number | Qty | S/P/F | Description                   |
|-------|-------------|-----|-------|-------------------------------|
| 1     | 0413-143    | 1   |       | Radiator Assembly (inc. 2-11) |
| 2     | 0413-180    | 1   |       | Radiator                      |
| 3     | 0413-181    | 1   |       | Screen, Radiator              |
| 4     | 0423-030    | 2   |       | Grommet                       |
| 5     | 0413-182    | 1   |       | Shroud, Fan                   |
| 6     | 0423-577    | 4   |       | Clip, U-Nut                   |
| 7     | 8476-616    | 4   |       | Screw                         |
| 8     | 0413-183    | 1   |       | Fan, Cooling                  |
| 9     | 8424-602    | 4   | /P    | Nut, Hex                      |
| 10    | 0413-168    | 1   |       | Sensor, Temperature - Coolant |
| 11    | 1602-213    | 1   | /P    | O-Ring                        |
| 12    | 0423-028    | 2   |       | Bushing, Stem                 |
| 13    | 0623-038    | 2   |       | Nut w/Washer                  |
| 14    | 0423-484    | 2   |       | Screw, Shoulder               |
| 15    | 0423-496    | 3   |       | Clamp, Hose                   |
| 16    | 0410-106    | 1   |       | Hose, Coolant                 |
| 17    | 0413-086    | 1   |       | Tank, Coolant Overflow        |
| 18    | 0623-316    | 1   |       | Cable Tie                     |
| 19    | 0610-011    | AR  | /P    | Hose - 25 ft                  |
| 20    | 0413-087    | 1   |       | Stopper, Coolant Tank         |
| 21    | 0124-045    | 1   | /P    | Clamp, Hose                   |
| 22    | 0610-016    | AR  | /P    | Hose - 25 ft                  |
| 23    | 0413-002    | 1   | S     | Cap, Radiator                 |
| 24    | 0413-193    | 1   | /P    | Tank, Coolant Fill            |
| 25    | 1623-093    | 3   |       | Clamp                         |
| 26    | 0410-121    | 1   |       | Hose, Coolant - Coupler       |
| 27    | 0410-107    | 1   |       | Hose, Coolant                 |
| 28    | 0123-788    | 2   | /P    | Cable Tie                     |

 2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4100SR)  
CRANKCASE, CRANKSHAFT SUPPORT, AND OIL FILTER ASSEMBLIES

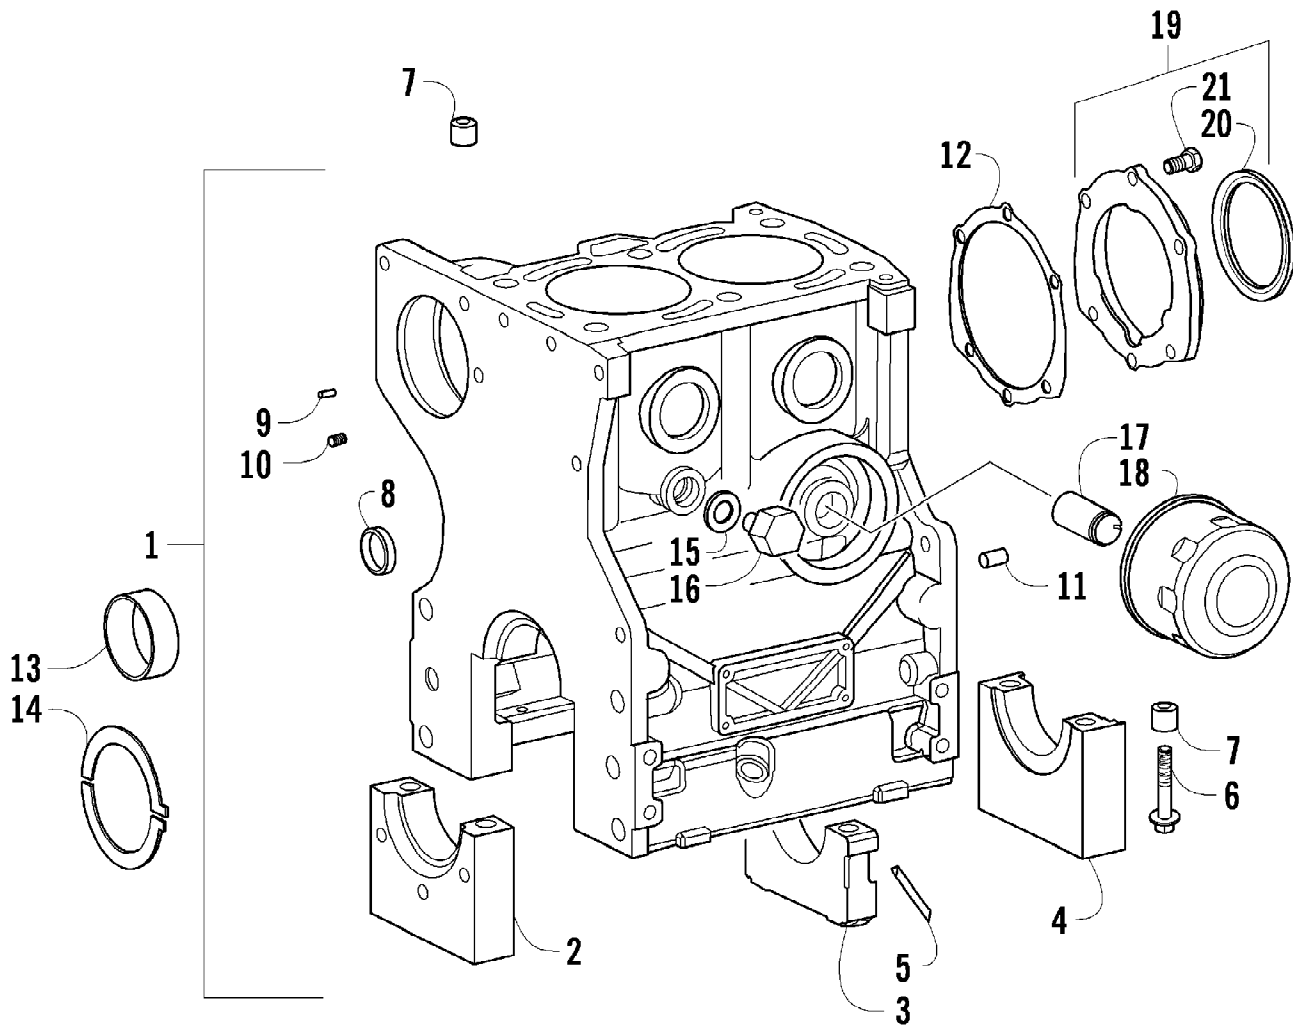

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4D) Page 26 of 114  
 CRANKCASE, CRANKSHAFT SUPPORT, AND OIL FILTER ASSEMBLIES


| Ref # | Part Number | Qty | S/P/F | Description                               |
|-------|-------------|-----|-------|-------------------------------------------|
| 1     | 3206-046    | 1   |       | Crankcase (inc. 2-6, two No. 7, and 8-10) |
| 2     | 0           | 1   | F     | Housing - Front                           |
| 3     | 0           | 1   | F     | Housing - Center                          |
| 4     | 0           | 1   | F     | Housing - Rear                            |
| 5     | 3206-054    | 4   |       | Gasket                                    |
| 6     | 3206-049    | 6   |       | Screw                                     |
| 7     | 3206-045    | 4   |       | Sleeve                                    |
| 8     | 3206-058    | 1   |       | Pin, Tapered                              |
| 9     | 3206-047    | 1   |       | Plug                                      |
| 10    | 3206-048    | 2   |       | Plug                                      |
| 11    | 3206-053    | 2   |       | Pin, Lock                                 |
| 12    | 3206-089    | 1   | S     | Gasket                                    |
| 13    | 3206-055    | 3   |       | Bearing                                   |
| 13    | 3206-056    | 3   |       | Bearing (-0.25 mm)                        |
| 13    | 3206-057    | 3   |       | Bearing (-0.50 mm)                        |
| 14    | 3206-050    | 2   |       | Washer                                    |
| 14    | 3206-051    | 2   |       | Washer ( 0.10 mm)                         |
| 14    | 3206-052    | 2   |       | Washer ( 0.20 mm)                         |
| 15    | 3206-206    | 1   |       | Gasket                                    |
| 16    | 3206-207    | 1   |       | Plug                                      |
| 17    | 3206-193    | 1   |       | Connector, Oil Filter                     |
| 18    | 3206-194    | 1   |       | Cartridge, Oil Filter                     |
| 19    | 3206-090    | 1   |       | Flange, Engine (inc. 20-21)               |
| 20    | 3206-091    | 1   |       | Ring                                      |
| 21    | 3206-088    | 6   |       | Screw                                     |

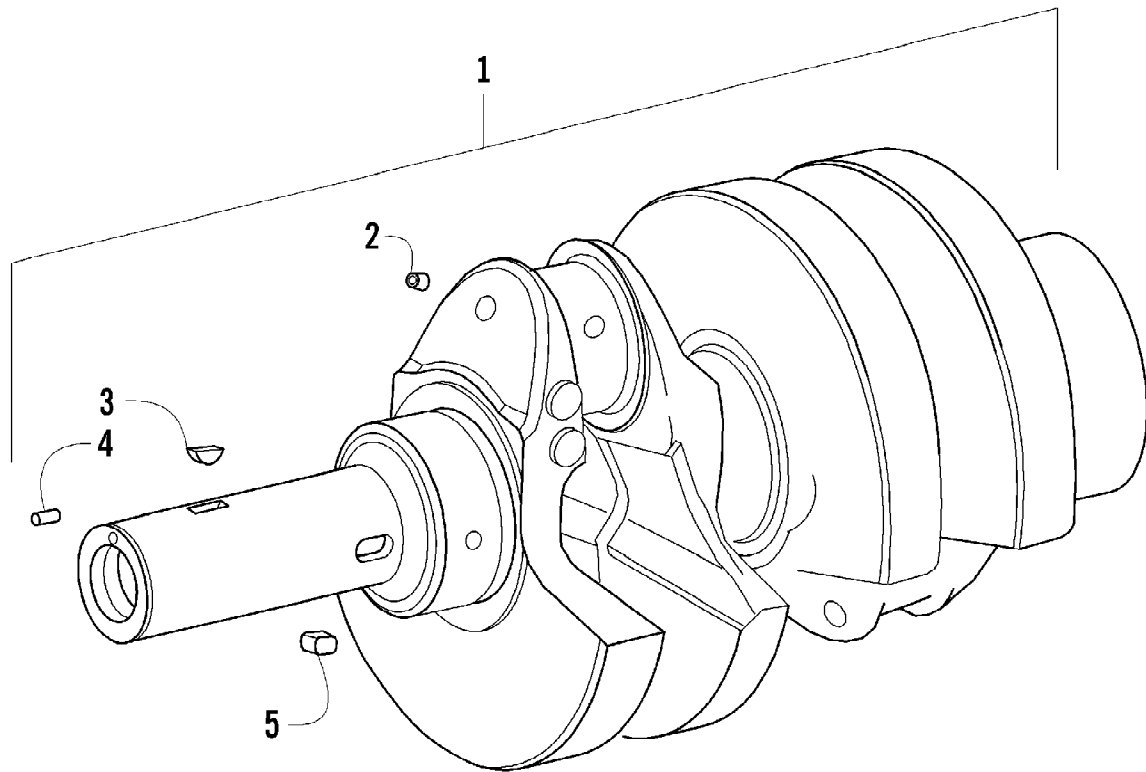 

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4DUSP)  
 CRANKSHAFT ASSEMBLY Page 28 of 114

| Ref # | Part Number | Qty | S/P/F | Description                    |
|-------|-------------|-----|-------|--------------------------------|
| 1     | 3206-019    | 1   |       | Crankshaft Assembly (inc. 2-5) |
| 2     | 3206-020    | 2   |       | Plug                           |
| 3     | 3206-018    | 1   |       | Key                            |
| 4     | 3206-022    | 1   |       | Pin                            |
| 5     | 3206-021    | 1   |       | Key                            |

 
2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT410) Page 29 of 114  
CYLINDER HEAD AND PRECOMBUSTION CHAMBER ASSEMBLY

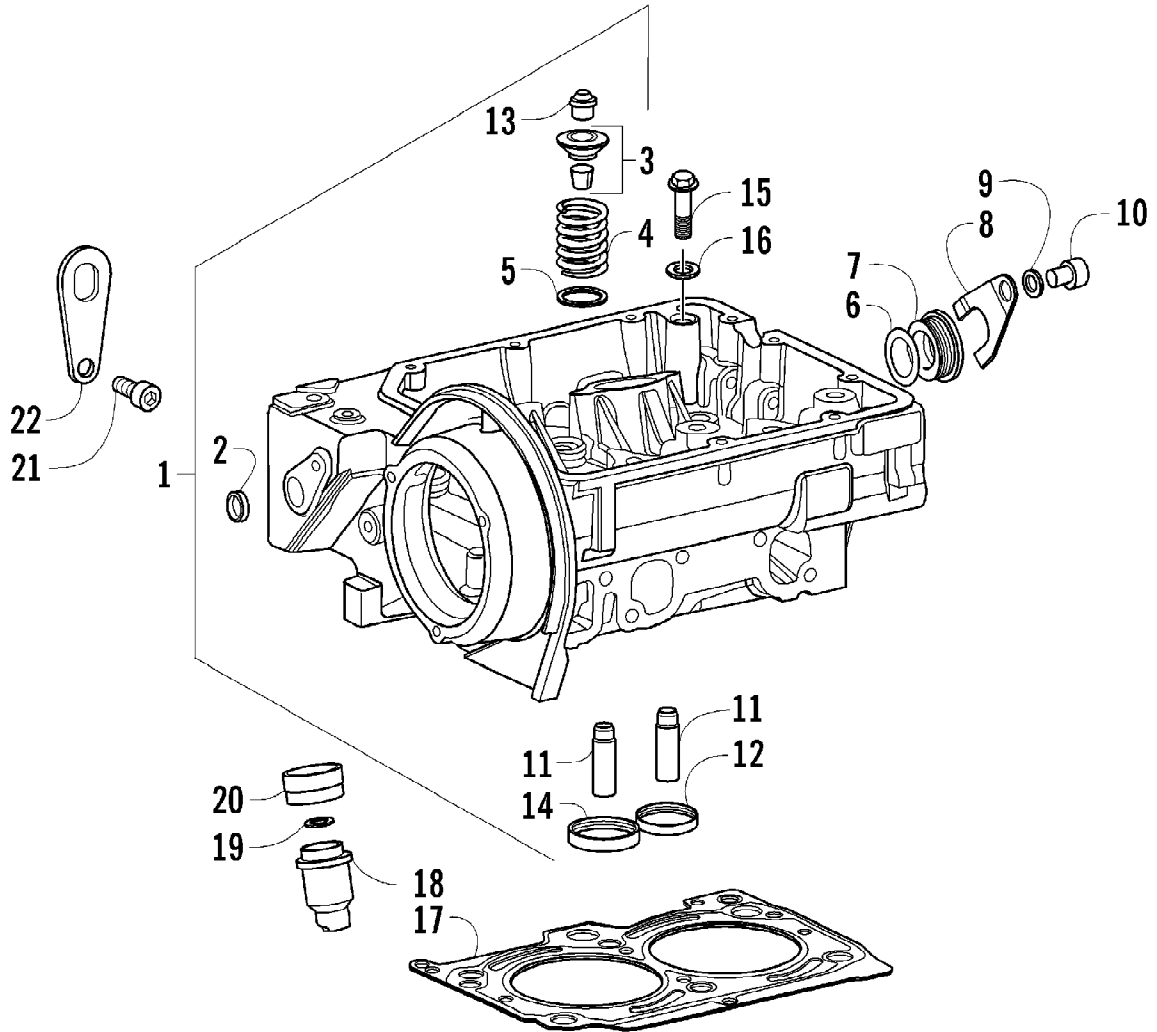

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4D) Page 30 of 114  
 CYLINDER HEAD AND PRECOMBUSTION CHAMBER ASSEMBLY

| Ref # | Part Number | Qty | S/P/F | Description                              |
|-------|-------------|-----|-------|------------------------------------------|
| 1     | 3206-063    | 1   |       | Cylinder Head (inc. 2-14)                |
| 2     | 3206-065    | 1   |       | Plug                                     |
| 3     | 3206-148    | 4   |       | Retainer                                 |
| 4     | 3206-147    | 4   |       | Spring, Valve                            |
| 5     | 3206-149    | 4   |       | Washer                                   |
| 6     | 3206-076    | 1   |       | O-Ring                                   |
| 7     | 3206-275    | 0   |       | Plug                                     |
| 8     | 3206-074    | 1   |       | Retainer                                 |
| 9     | 3206-075    | 1   |       | Washer                                   |
| 10    | 3206-077    | 1   |       | Bolt                                     |
| 11    | 3206-061    | 4   |       | Guide, Valve                             |
| 11    | 3206-062    | 4   |       | Guide, Valve ( 0.50 mm)                  |
| 12    | 3206-073    | 2   |       | Seat, Exhaust Valve                      |
| 13    | 3206-152    | 4   |       | Retainer, Valve                          |
| 14    | 3206-072    | 2   |       | Seat, Intake Valve                       |
| 15    | 3206-066    | 6   |       | Screw                                    |
| 16    | 3206-064    | 6   |       | Washer                                   |
| 17    | 3206-069    | 1   |       | Gasket, Head - 1.56-1.64 (1 small hole)  |
| 17    | 3206-070    | 1   |       | Gasket, Head - 1.66-1.74 (2 small holes) |
| 17    | 3206-071    | 1   |       | Gasket, Head - 1.76-1.84 (3 small holes) |
| 18    | 3206-068    | 2   |       | Chamber, Precombustion                   |
| 19    | 3206-079    | 2   |       | Spacer                                   |
| 20    | 3206-067    | 2   |       | Nut, Locking                             |
| 21    | 3206-078    | 2   |       | Bolt                                     |
| 22    | 3206-060    | 2   |       | Brace, Lifting                           |

 2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4D) Page 31 of 114  
DRIVE PULLEY AND ALTERNATOR BELT ASSEMBLY

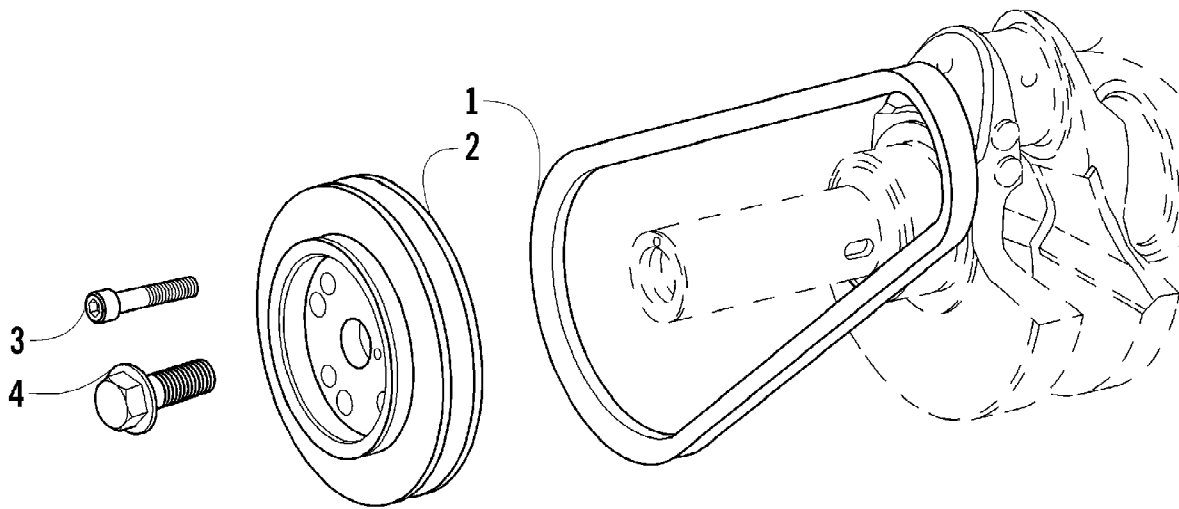


2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT410SR)  
DRIVE PULLEY AND ALTERNATOR BELT ASSEMBLY

Page 32 of 114

| Ref # | Part Number | Qty | S/P/F | Description |
|-------|-------------|-----|-------|-------------|
| 1     | 3206-042    | 1   |       | Belt        |
| 2     | 3206-044    | 1   |       | Pulley      |
| 3     | 3206-043    | 4   |       | Screw       |
| 4     | 3206-041    | 1   |       | Screw       |

 
2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT410) Page 33 of 114  
DRIVE TRAIN ASSEMBLY

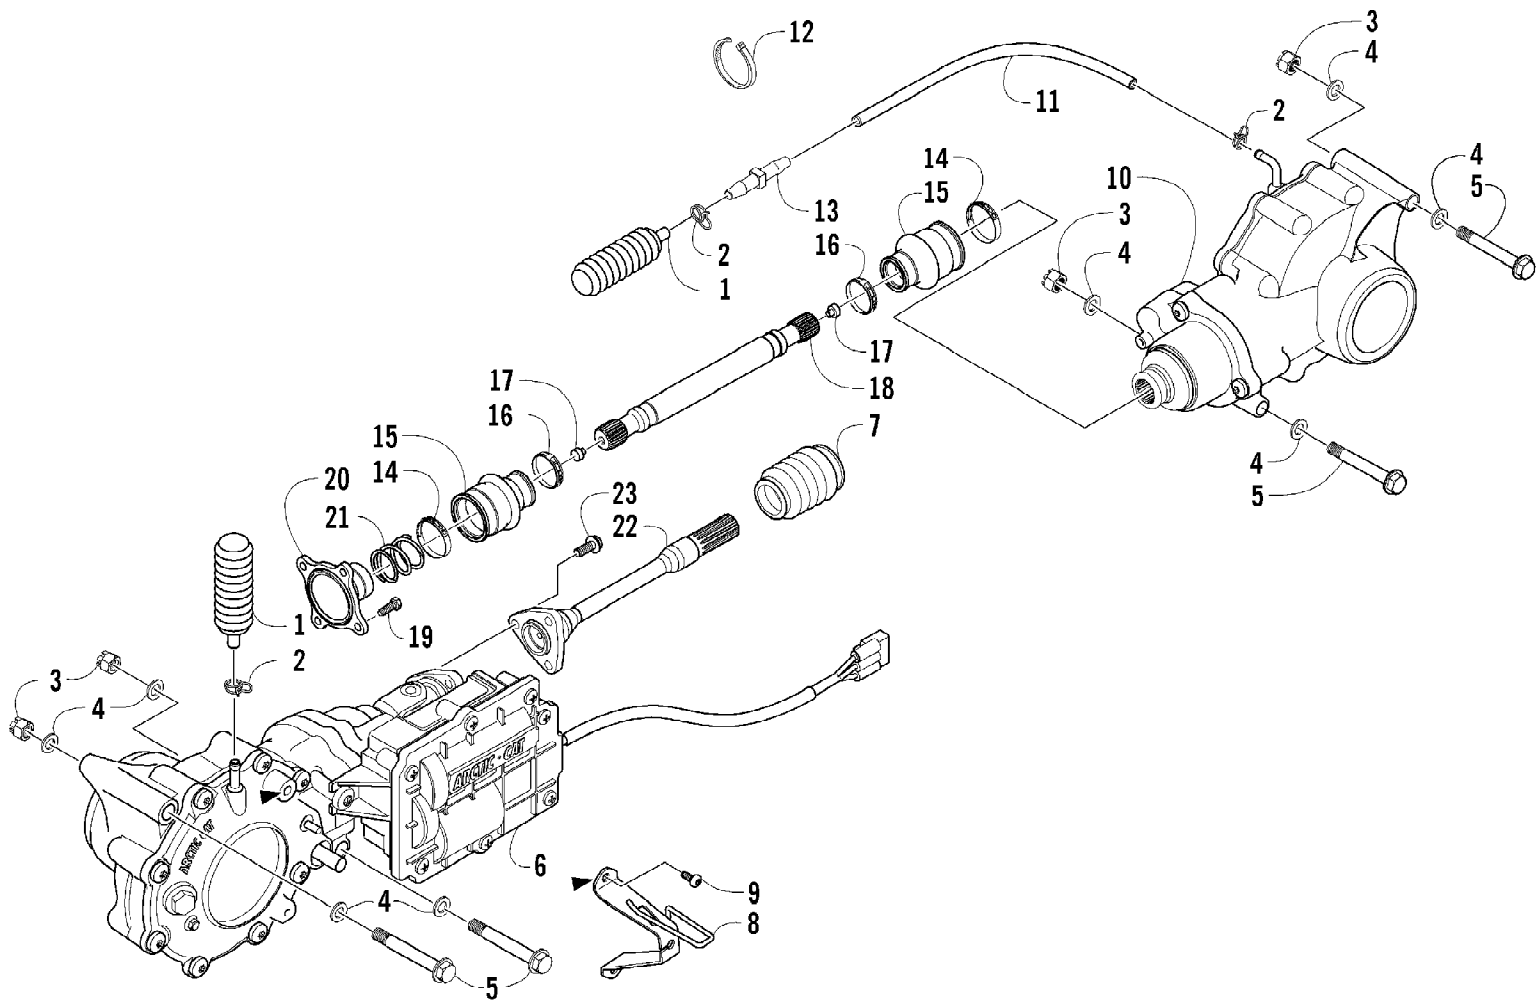

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4100R)  
DRIVE TRAIN ASSEMBLY Page 34 of 114

| Ref # | Part Number | Qty | S/P/F | Description             |
|-------|-------------|-----|-------|-------------------------|
| 1     | 0402-147    | 2   | S     | Bladder, Gearcase       |
| 2     | 0423-315    | 4   |       | Clamp, Fitting          |
| 3     | 0423-744    | 4   |       | Nut, Lock               |
| 4     | 0423-426    | 10  |       | Washer                  |
| 5     | 0423-404    | 4   |       | Screw, Cap              |
| 6     | 1502-244    | 1   |       | Gearcase, Front         |
| 7     | 0402-966    | 1   |       | Boot, Shaft             |
| 8     | 0502-500    | 1   |       | Plate, Cable            |
| 9     | 0423-396    | 2   |       | Screw, Self-Tapping     |
| 10    | 1502-079    | 1   | S     | Gearcase, Rear          |
| 11    | 0410-048    | AR  | S     | Hose, Vent              |
| 12    | 0123-788    | 1   | /P    | Cable Tie               |
| 13    | 0470-462    | 1   |       | Fitting, Vent           |
| 14    | 0423-393    | 2   |       | Clamp, Boot             |
| 15    | 0402-985    | 2   | /P    | Boot                    |
| 16    | 0423-411    | 2   |       | Clamp, Boot             |
| 17    | 0673-618    | 2   | /P    | Bumper, Propeller Shaft |
| 18    | 1402-507    | 1   |       | Shaft, Propeller        |
| 19    | 8408-820    | 4   | /P    | Screw, Cap              |
| 20    | 0402-950    | 1   |       | Flange, Output          |
| 21    | 1402-026    | 1   |       | Spring                  |
| 22    | 0502-976    | 1   |       | Shaft, Propeller        |
| 23    | 8409-025    | 3   |       | Screw, Cap              |

 
2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT410) Page 35 of 114  
ENGINE AND EXHAUST

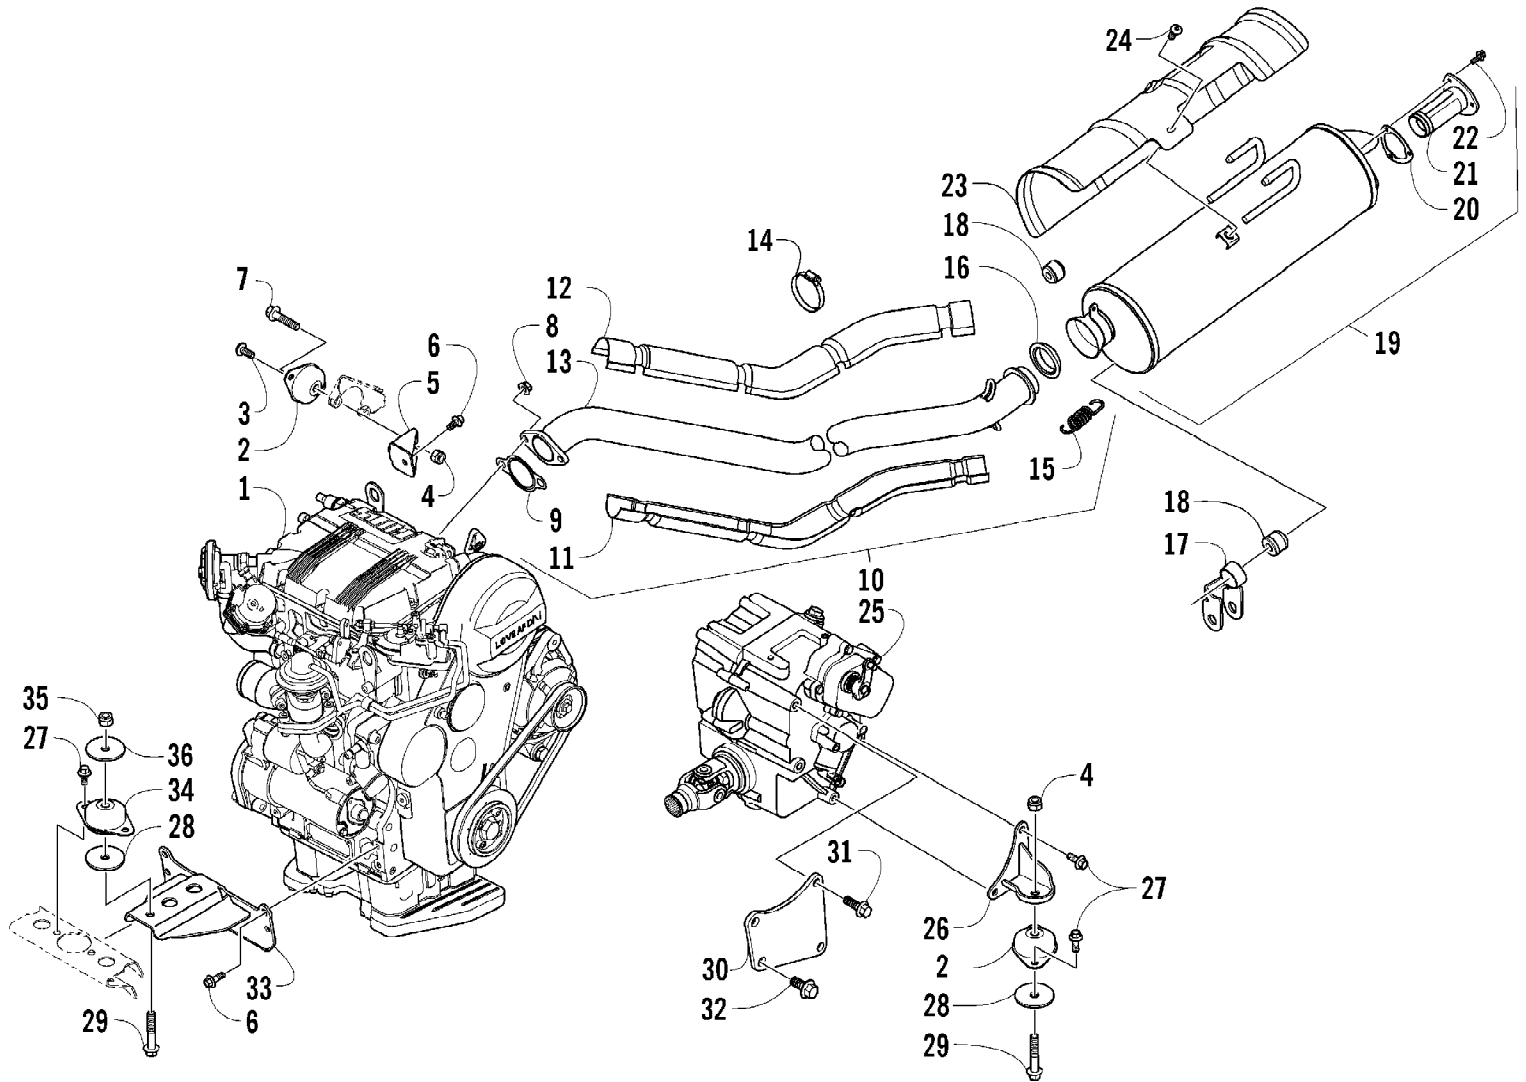

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4D) Page 36 of 114  
ENGINE AND EXHAUST

| Ref # | Part Number | Qty | S/P/F | Description                                |
|-------|-------------|-----|-------|--------------------------------------------|
| 1     | 0463-044    | 1   |       | Engine                                     |
| 2     | 2406-323    | 3   |       | Mount, Engine - Rubber                     |
| 3     | 8468-820    | 2   |       | Screw, Cap                                 |
| 4     | 8422-002    | 3   |       | Nut, Lock                                  |
| 5     | 2506-186    | 1   |       | Mounting, Bracket - Engine                 |
| 6     | 8408-816    | 5   |       | Screw, Cap                                 |
| 7     | 0423-736    | 1   |       | Screw, Cap                                 |
| 8     | 0423-687    | 2   | S     | Nut                                        |
| 9     | 3206-296    | 1   | /P    | Gasket, Exhaust Manifold                   |
| 10    | 0512-322    | 1   |       | Pipe, Exhaust - Assembly (inc. 11-14)      |
| 11    | 0412-386    | 1   |       | Shield, Exhaust Pipe - Lower               |
| 12    | 0412-385    | 1   |       | Shield, Exhaust Pipe - Upper               |
| 13    | 0512-321    | 1   |       | Pipe, Exhaust                              |
| 14    | 0423-317    | 4   | /P    | Hose Clamp                                 |
| 15    | 0612-668    | 2   | /P    | Spring                                     |
| 16    | 0412-375    | 1   | /P    | Seal, Exhaust                              |
| 17    | 1506-732    | 1   |       | Channel, Muffler Support (inc. one No. 18) |
| 18    | 0412-215    | 3   | S     | Bushing                                    |
| 19    | 0512-306    | 1   | /P    | Muffler (inc. 20-22)                       |
| 20    | 0412-313    | 1   |       | Gasket, Spark Arrester                     |
| 21    | 0512-219    | 1   | /P    | Arrester, Spark                            |
| 22    | 8408-616    | 3   |       | Screw, Cap                                 |
| 23    | 0412-373    | 1   | /P    | Cover, Muffler                             |
| 24    | 8477-610    | 3   |       | Screw, Machine                             |
| 25    | 0502-993    | 1   | S     | Gearcase - Assembly                        |
| 26    | 2506-190    | 1   |       | Bracket, Mounting - Engine - Right         |
| 26    | 2506-191    | 1   |       | Bracket, Mounting - Engine - Left          |
| 27    | 8408-820    | 8   | /P    | Screw, Cap                                 |
| 28    | 2506-061    | 3   |       | Washer, Engine Mount                       |
| 29    | 8408-055    | 3   |       | Screw, Cap                                 |
| 30    | 0408-015    | 1   |       | Plate, Mounting - Engine/Transmission      |
| 31    | 8409-030    | 2   |       | Screw, Cap                                 |
| 32    | 0423-685    | 2   |       | Screw, Cap                                 |
| 33    | 2506-189    | 1   |       | Bracket, Mounting - Engine - Front         |
| 34    | 2406-322    | 1   |       | Mount, Engine - Rubber                     |
| 35    | 0423-737    | 1   |       | Nut                                        |
| 36    | 0423-073    | 1   |       | Washer                                     |

 
2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT410SR)  
EXHAUST MANIFOLD ASSEMBLY Page 37 of 114

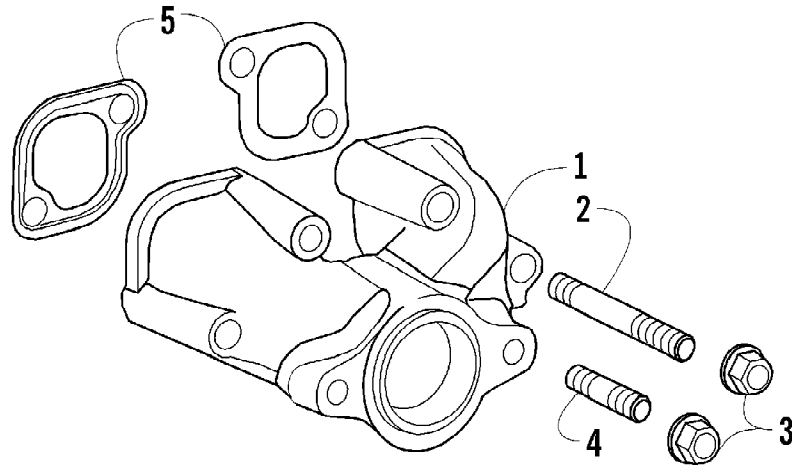

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4D) Page 38 of 114  
EXHAUST MANIFOLD ASSEMBLY

| Ref # | Part Number | Qty | S/P/F | Description              |
|-------|-------------|-----|-------|--------------------------|
| 1     | 3206-294    | 1   |       | Manifold, Exhaust        |
| 2     | 3206-292    | 4   |       | Stud                     |
| 3     | 3206-293    | 6   | /P    | Nut                      |
| 4     | 3206-297    | 2   |       | Stud                     |
| 5     | 3206-291    | 2   |       | Gasket, Exhaust Manifold |

 
2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4100R3)  
EXTERNAL ALTERNATOR ASSEMBLY

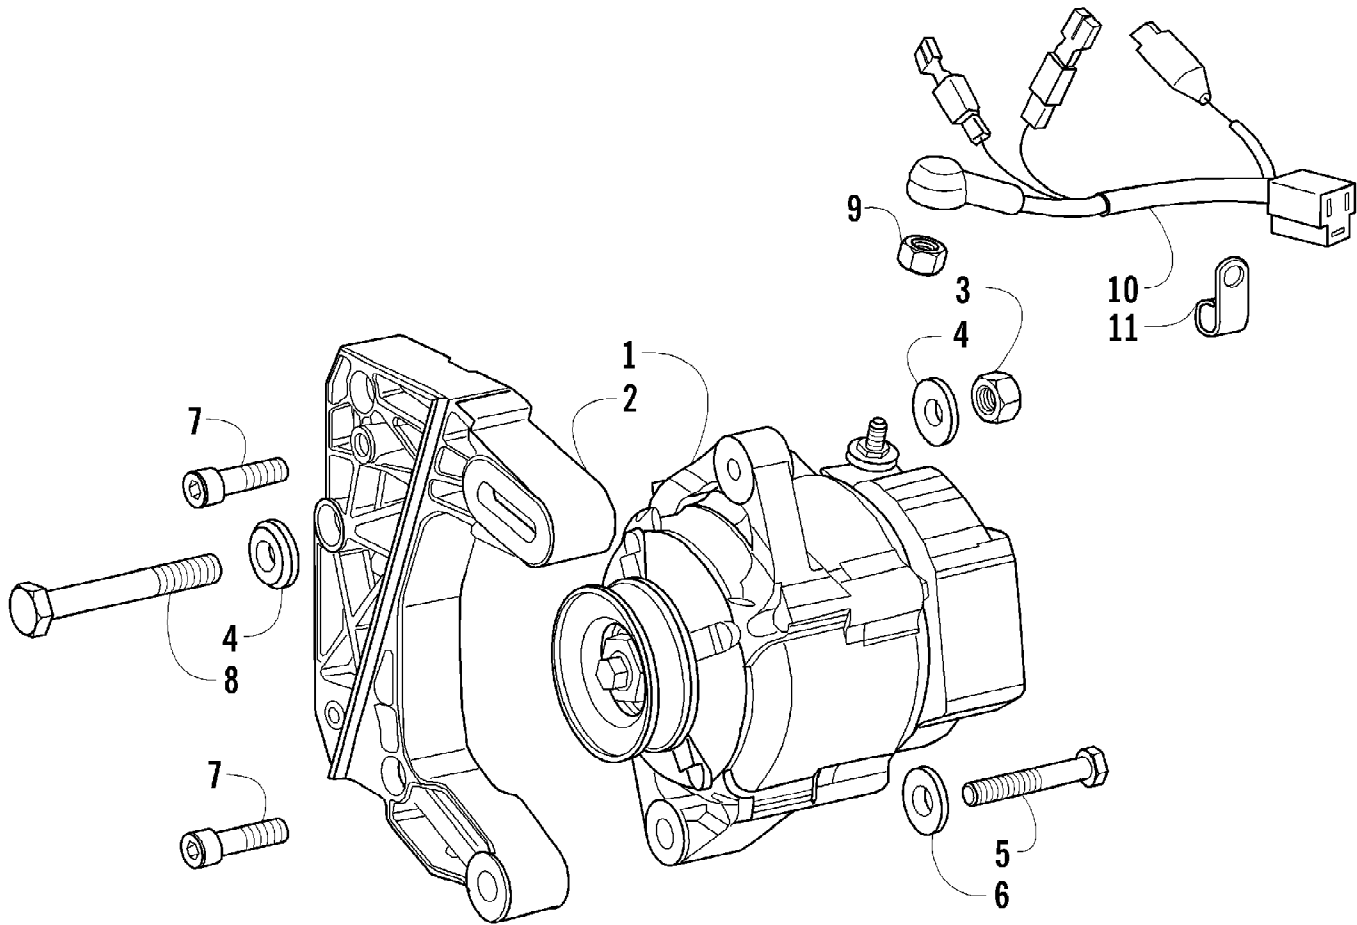

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4D) Page 10 of 114  
EXTERNAL ALTERNATOR ASSEMBLY

| Ref # | Part Number | Qty | S/P/F | Description         |
|-------|-------------|-----|-------|---------------------|
| 1     | 3206-303    | 1   |       | Alternator          |
| 2     | 3206-300    | 1   |       | Support, Alternator |
| 3     | 3206-142    | 1   |       | Nut                 |
| 4     | 3206-298    | 2   |       | Washer              |
| 5     | 3206-301    | 1   |       | Bolt                |
| 6     | 3206-302    | 1   |       | Washer              |
| 7     | 3206-266    | 3   |       | Screw               |
| 8     | 3206-299    | 1   |       | Bolt                |
| 9     | 3206-137    | 1   |       | Nut                 |
| 10    | 3206-324    | 1   |       | Wire w/Diode        |
| 11    | 3206-325    | 1   |       | Clamp               |

 
2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4D) Page 41 of 114  
FLYWHEEL AND CROWN GEAR ASSEMBLY

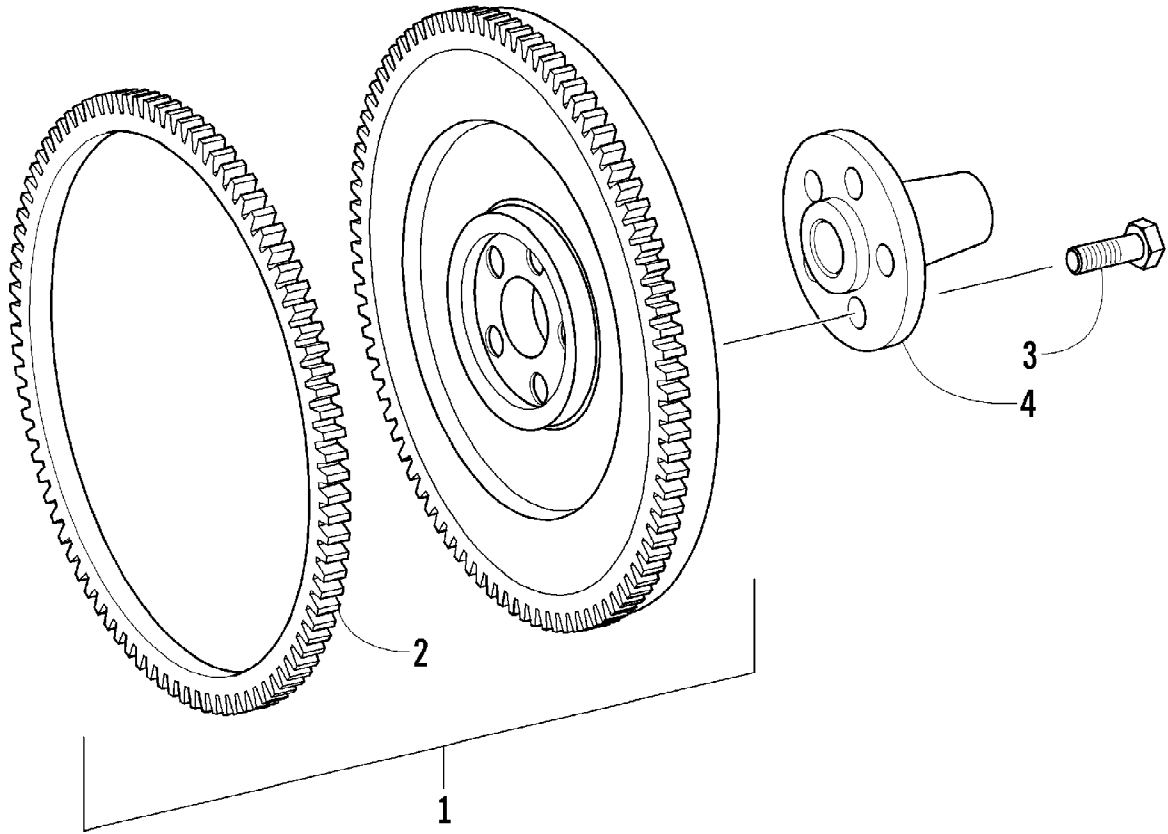

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4D) Page 12 of 114  
FLYWHEEL AND CROWN GEAR ASSEMBLY

| Ref # | Part Number | Qty | S/P/F | Description       |
|-------|-------------|-----|-------|-------------------|
| 1     | 3206-040    | 1   |       | Flywheel (inc. 2) |
| 2     | 3206-037    | 1   |       | Gear, Crown       |
| 3     | 8409-040    | 5   |       | Bolt              |
| 4     | 1402-560    | 1   |       | Axle, Stub        |

 
2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4D) Page 13 of 114  
FRAME AND RELATED PARTS

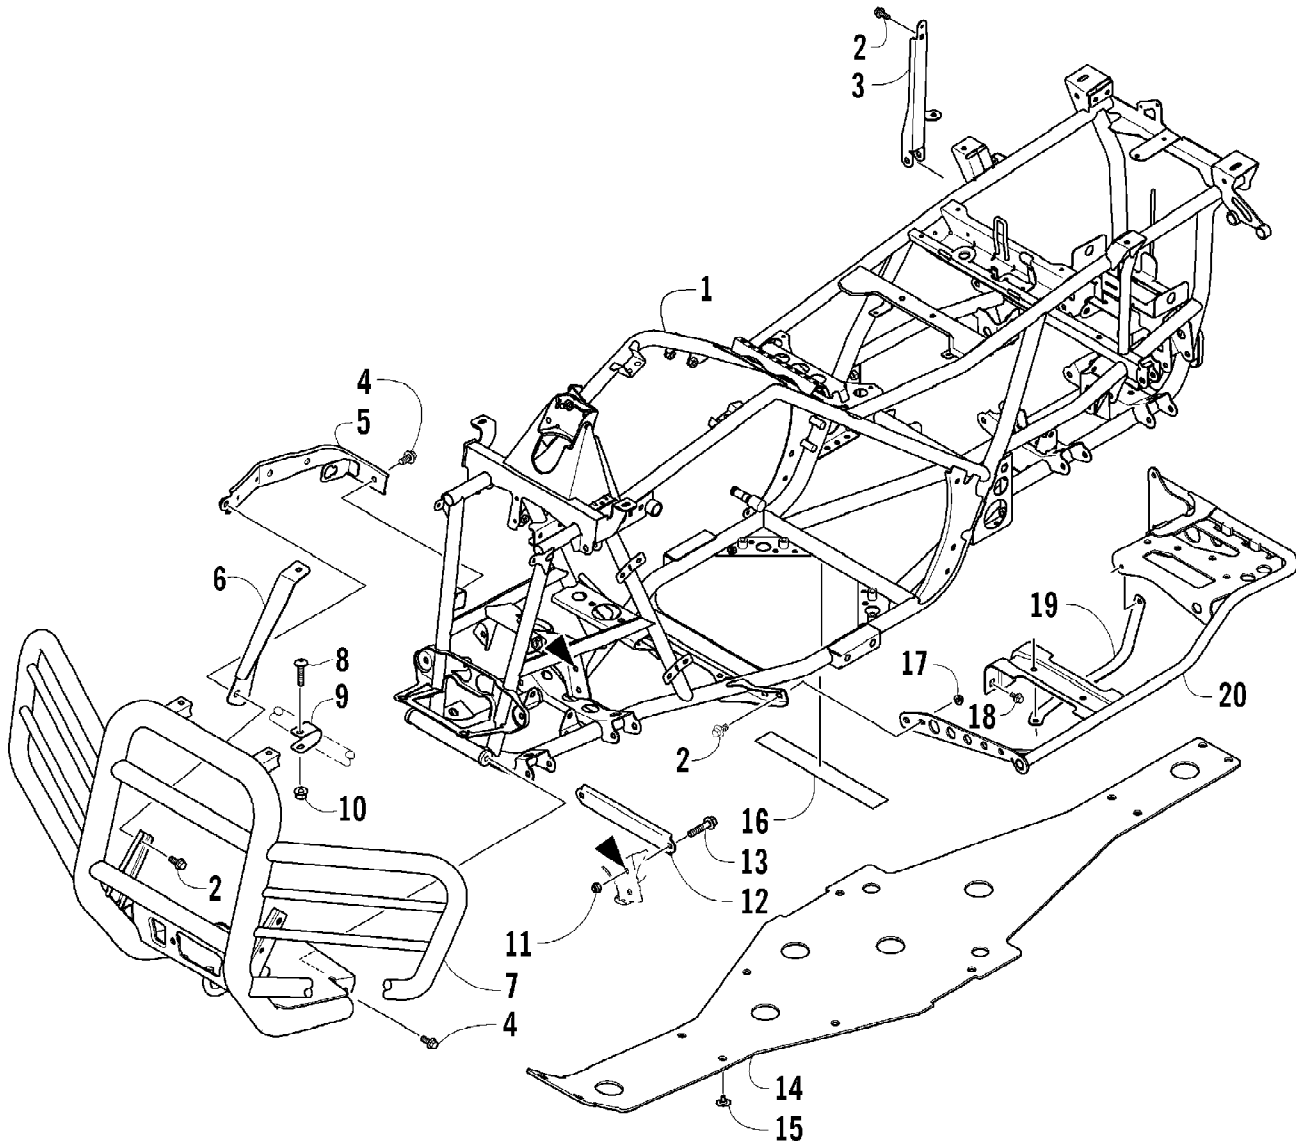

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4D) Page 14 of 114  
FRAME AND RELATED PARTS

| Ref # | Part Number | Qty | S/P/F | Description                        |
|-------|-------------|-----|-------|------------------------------------|
| 1     | 2506-568    | 1   |       | Frame, Main                        |
| 2     | 8408-816    | 11  |       | Screw, Cap                         |
| 3     | 2506-447    | 1   |       | Channel, Shock Support             |
| 4     | 8409-020    | 4   | /P    | Screw, Cap                         |
| 5     | 2506-813    | 1   |       | Channel, Bumper Mounting - Right   |
| 5     | 2506-285    | 1   |       | Channel, Bumper Mounting - Left    |
| 6     | 1506-562    | 1   |       | Bracket, Mounting - Bumper - Right |
| 6     | 1506-563    | 1   |       | Bracket, Mounting - Bumper - Left  |
| 7     | 2506-421    | 1   |       | Bumper                             |
| 8     | 8468-845    | 2   |       | Screw, Machine                     |
| 9     | 1506-667    | 2   |       | Strap, Bumper Support              |
| 10    | 8424-805    | 2   |       | Nut, Lock                          |
| 11    | 0423-744    | 2   |       | Nut, Lock                          |
| 12    | 1506-429    | 1   | S     | Brace, A-Arm                       |
| 13    | 8409-025    | 2   |       | Screw, Cap                         |
| 14    | 2406-253    | 1   |       | Panel, Belly                       |
| 15    | 0423-101    | 12  |       | Screw, Body                        |
| 16    | 0406-289    | 2   |       | Pad, Frame                         |
| 17    | 8424-802    | 4   |       | Nut, Flange                        |
| 18    | 8409-016    | 3   |       | Screw, Cap                         |
| 19    | 2406-216    | 1   |       | Strap, Footrest - Right            |
| 19    | 2406-217    | 1   |       | Strap, Footrest - Left             |
| 20    | 1506-848    | 1   |       | Footrest - Right                   |
| 20    | 1506-849    | 1   |       | Footrest - Left                    |

 2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT41D) Page 15 of 114  
FRONT DRIVE GEARCASE ASSEMBLY

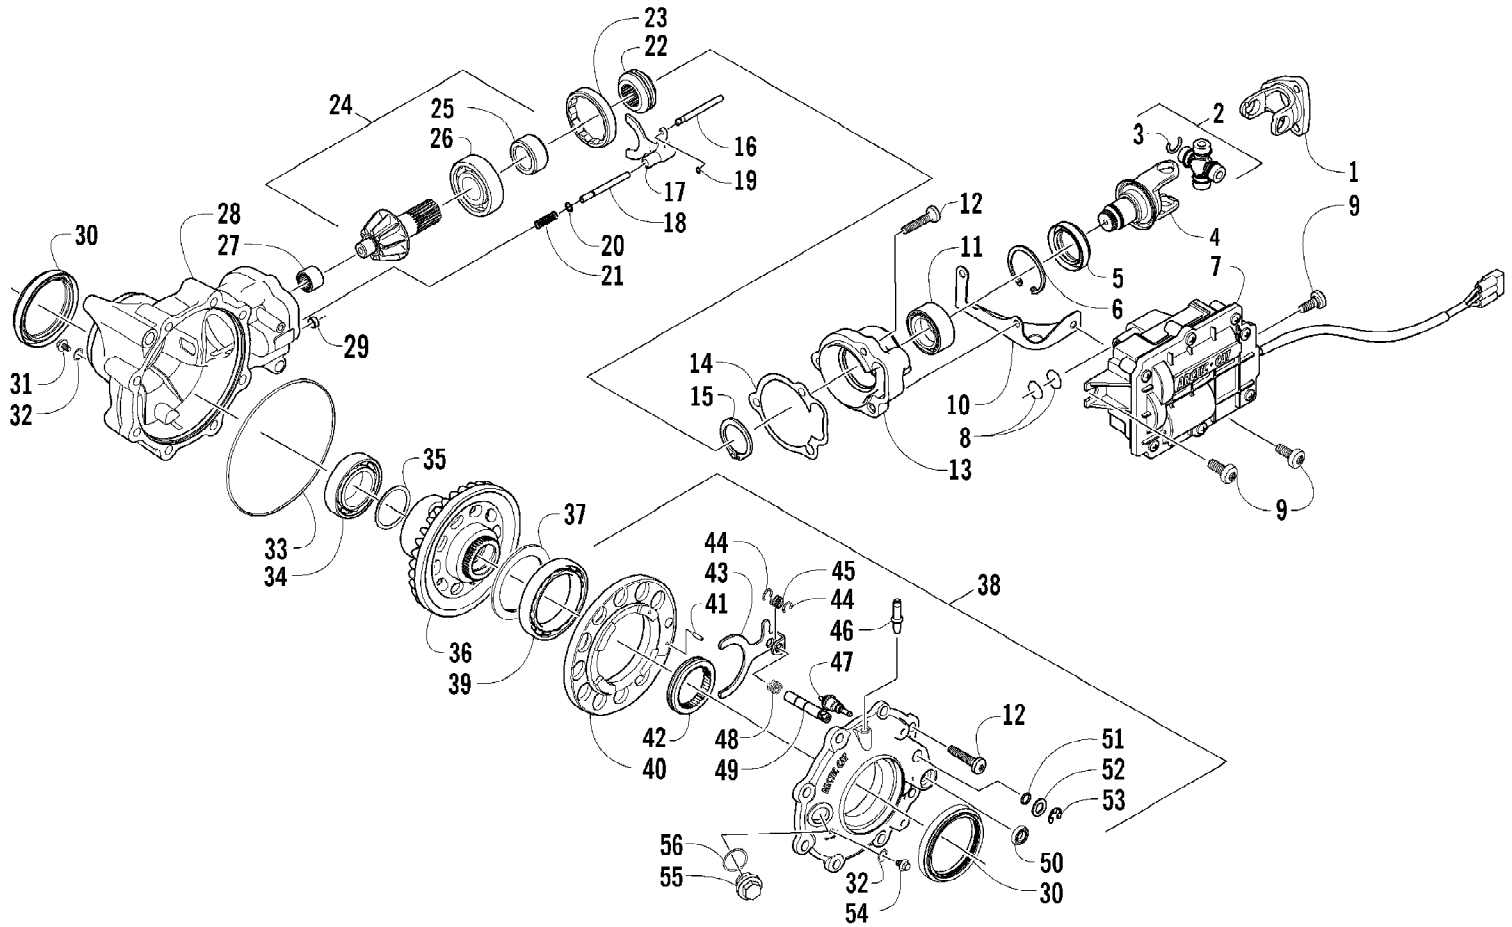


2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4D) Page 16 of 114  
 FRONT DRIVE GEARCASE ASSEMBLY

| Ref # | Part Number | Qty | S/P/F | Description                                              |
|-------|-------------|-----|-------|----------------------------------------------------------|
|       | 1502-244    | 1   |       | Complete Front Drive Gearcase                            |
| 1     | 1402-369    | 1   |       | Yoke, Flange                                             |
| 2     | 1402-164    | 1   | /P    | Joint, Universal - Set (inc. 3)                          |
| 3     | 0423-450    | 4   |       | Retainer                                                 |
| 4     | 0502-517    | 1   |       | Yoke, Front End - Assembly                               |
| 5     | 1402-011    | 1   |       | Seal                                                     |
| 6     | 0423-423    | 1   |       | Ring, Retaining                                          |
| 7     | 0502-579    | 1   |       | Actuator (inc. one No. 8)                                |
| 8     | 0423-498    | 2   | S     | O-Ring                                                   |
| 9     | 0423-396    | 3   |       | Screw, Self-Tapping                                      |
| 10    | 0502-347    | 1   |       | Bracket, Actuator                                        |
| 11    | 1402-043    | 1   |       | Bearing                                                  |
| 12    | 0423-118    | 11  |       | Screw, Self-Tapping                                      |
| 13    | 0502-528    | 1   | /P    | Housing, Pinion                                          |
| 14    | 0402-947    | 1   |       | Gasket, Flange                                           |
| 15    | 0423-417    | 1   |       | Ring, Retaining                                          |
| 16    | 0402-997    | 1   |       | Shaft, Selector                                          |
| 17    | 0402-998    | 1   |       | Fork, Selector                                           |
| 18    | 0402-417    | 1   |       | Shaft, Shuttle                                           |
| 19    | 0423-402    | 1   |       | Ring, Retaining                                          |
| 20    | 0423-147    | 1   |       | O-Ring                                                   |
| 21    | 0402-999    | 1   |       | Spring, Return                                           |
| 22    | 0402-413    | 1   |       | Coupler, Drive                                           |
| 23    | 0402-357    | 1   |       | Collar, Lock                                             |
| 24    | 0502-783    | 1   |       | Gear, Pinion - Assembly - 10T (inc. 25-26)               |
| 25    | 0402-336    | 1   |       | Collar, Retaining                                        |
| 26    | 0402-327    | 1   |       | Bearing                                                  |
| 27    | 0402-328    | 1   |       | Bearing                                                  |
| 28    | 0502-514    | 1   |       | Housing, Gearcase                                        |
| 29    | 0402-411    | 1   |       | Pin, Dowel                                               |
| 30    | 1402-441    | 2   | S     | Seal                                                     |
| 31    | 1402-210    | 1   | /P    | Plug, Magnetic (inc. one No. 32)                         |
| 32    | 0423-153    | 2   |       | O-Ring                                                   |
| 33    | 0423-149    | 1   |       | O-Ring                                                   |
| 34    | 0402-393    | 1   |       | Bearing                                                  |
| 35    | 0402-405    | AR  |       | Shim                                                     |
| 35    | 0402-406    | AR  |       | Shim                                                     |
| 35    | 0402-407    | AR  |       | Shim                                                     |
| 35    | 0402-408    | AR  |       | Shim                                                     |
| 35    | 0402-409    | AR  |       | Shim                                                     |
| 36    | 1502-234    | 1   | S     | Gear, Ring - 36T                                         |
| 37    | 1402-074    | AR  |       | Shim                                                     |
| 37    | 1402-075    | AR  |       | Shim                                                     |
| 37    | 1402-076    | AR  |       | Shim                                                     |
| 37    | 1402-077    | AR  |       | Shim                                                     |
| 37    | 1402-078    | AR  |       | Shim                                                     |
| 38    | 1502-097    | 1   |       | Cover, Gearcase (inc. one No. 30, one No. 32, and 39-54) |
| 39    | 1402-053    | 1   |       | Bearing                                                  |
| 40    | 0502-413    | 1   |       | Flange, Bearing                                          |
| 41    | 1402-079    | 1   |       | Pin, Parallel                                            |
| 42    | 1402-042    | 1   |       | Collar, Sliding                                          |

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4DUSP)  
 FRONT DRIVE GEARCASE ASSEMBLY Page 4 of 114

| Ref # | Part Number | Qty | S/P/F | Description                       |
|-------|-------------|-----|-------|-----------------------------------|
| 43    | 1402-054    | 1   |       | Fork                              |
| 44    | 1402-058    | 2   |       | Ring, Retaining                   |
| 45    | 1402-057    | 1   |       | Spring                            |
| 46    | 1402-104    | 1   |       | Fitting                           |
| 47    | 0402-419    | 1   |       | Switch, Indicator                 |
| 48    | 1402-063    | 1   |       | Spring                            |
| 49    | 1402-055    | 1   |       | Shaft, Lock                       |
| 50    | 1402-056    | 1   |       | Seal                              |
| 51    | 0423-133    | 1   |       | O-Ring                            |
| 52    | 0423-132    | 1   |       | Washer                            |
| 53    | 0423-424    | 1   |       | Ring, Retaining                   |
| 54    | 1402-211    | 1   |       | Plug, Oil Level (inc. one No. 32) |
| 55    | 0402-333    | 1   | /P    | Plug, Fill (inc. 56)              |
| 56    | 0423-154    | 1   |       | O-Ring                            |

 
2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT41D) Page 48 of 114  
FRONT RACK AND HEADLIGHT ASSEMBLIES

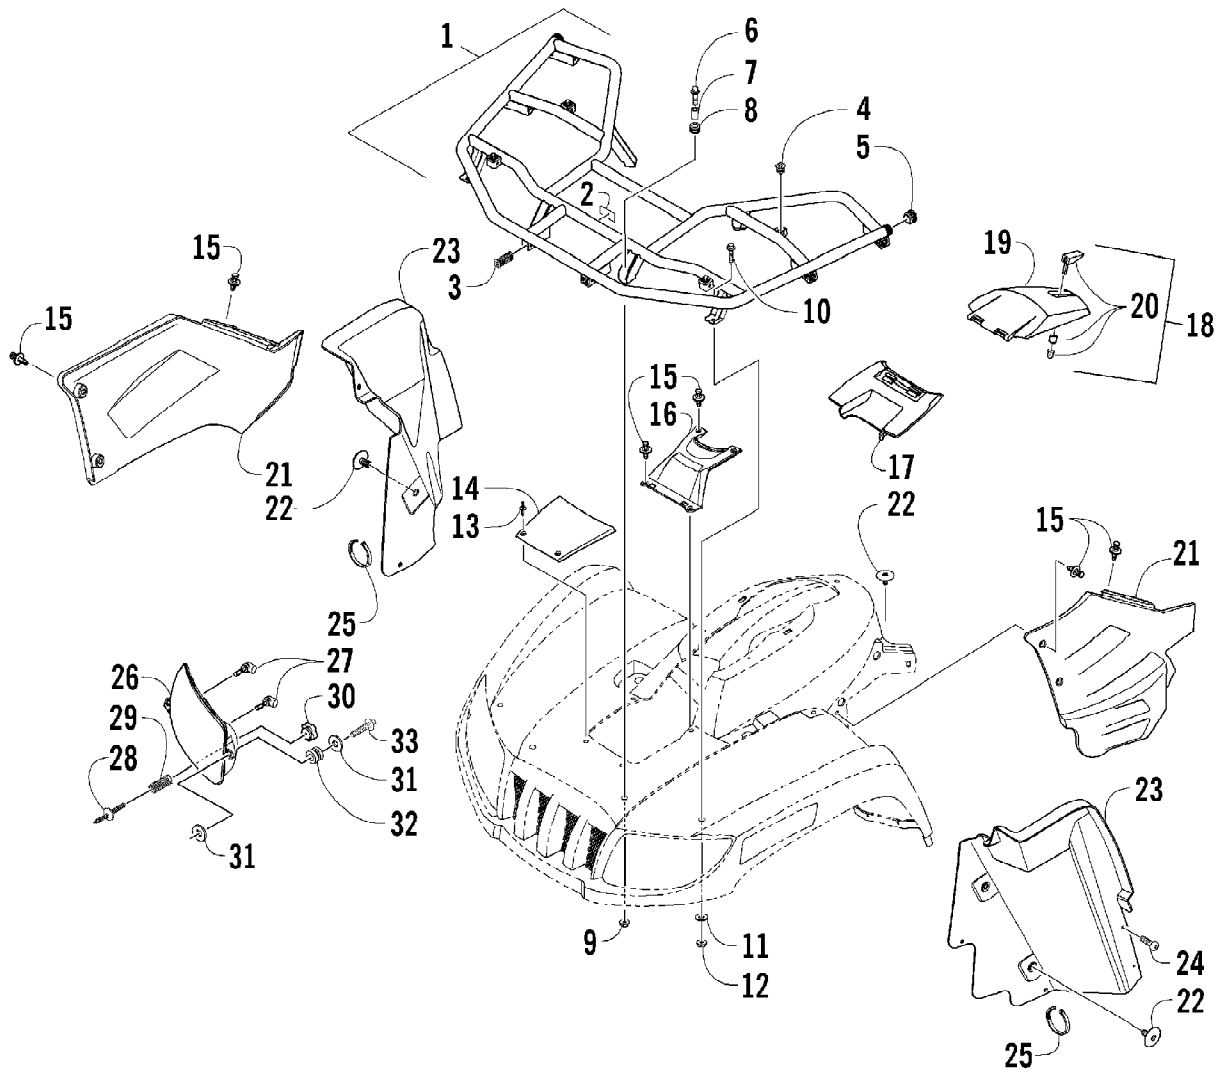

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4D) Page 19 of 114  
 FRONT RACK AND HEADLIGHT ASSEMBLIES


| Ref # | Part Number | Qty | S/P/F | Description                           |
|-------|-------------|-----|-------|---------------------------------------|
| 1     | 1506-883    | 1   |       | Rack - Front - Assembly (inc. 2-5)    |
| 2     | 0411-576    | 1   |       | Decal, Warning - Front Rack Load      |
| 3     | 2406-014    | 6   |       | Bushing, Rack                         |
| 4     | 0441-592    | 4   | /P    | Bushing, Rack                         |
| 5     | 1441-049    | 2   |       | Plug, Rack                            |
| 6     | 8410-830    | 4   |       | Screw, Cap                            |
| 7     | 0423-669    | 4   |       | Spacer                                |
| 8     | 0423-465    | 4   |       | Grommet                               |
| 9     | 8432-802    | 4   |       | Nut, Lock                             |
| 10    | 0423-654    | 2   |       | Screw, Shoulder                       |
| 11    | 8050-222    | 2   | /P    | Washer                                |
| 12    | 0423-540    | 2   |       | Nut, Lock                             |
| 13    | 0423-535    | 2   |       | Rivet, Reinstallable                  |
| 14    | 1406-358    | 1   |       | Cover, Access                         |
| 15    | 0623-362    | 12  |       | Rivet, Reinstallable                  |
| 16    | 1406-484    | 1   |       | Cover, Steering Post                  |
| 17    | 0470-513    | 1   |       | Cover, Storage Box                    |
| 18    | 2506-234    | 1   |       | Lid, Storage Box w/Latch (inc. 19-20) |
| 19    | 0470-514    | 1   |       | Lid, Storage Box                      |
| 20    | 1406-599    | 1   |       | Latch, Storage Box                    |
| 21    | 2406-404    | 1   |       | Panel, Side - Lower - Right           |
| 21    | 2406-405    | 1   |       | Panel, Side - Lower - Left            |
| 22    | 0423-101    | 5   |       | Screw, Body                           |
| 23    | 2506-434    | 1   |       | Panel, Splash - Right                 |
| 23    | 2506-383    | 1   | /P    | Panel, Splash - Left                  |
| 24    | 0423-342    | 2   | /P    | Screw, Self-Tapping                   |
| 25    | 0123-788    | AR  | /P    | Cable Tie - 7.5 in.                   |
| 26    | 0509-034    | 1   | S     | Headlight Assembly - Right (inc. 27)  |
| 26    | 0509-035    | 1   |       | Headlight Assembly - Left (inc. 27)   |
| 27    | 0409-055    | 4   |       | Bulb, Headlight                       |
| 28    | 0423-514    | 2   |       | Stud, Adjuster - Headlight            |
| 29    | 0423-522    | 2   |       | Spring, Adjuster                      |
| 30    | 0423-513    | 2   |       | Knob, Adjuster                        |
| 31    | 8050-217    | 8   | /P    | Washer                                |
| 32    | 0423-447    | 4   |       | Grommet                               |
| 33    | 0623-785    | 4   |       | Screw, Self-Tapping                   |

 2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT410) Page 50 of 114  
FRONT SUSPENSION ASSEMBLY

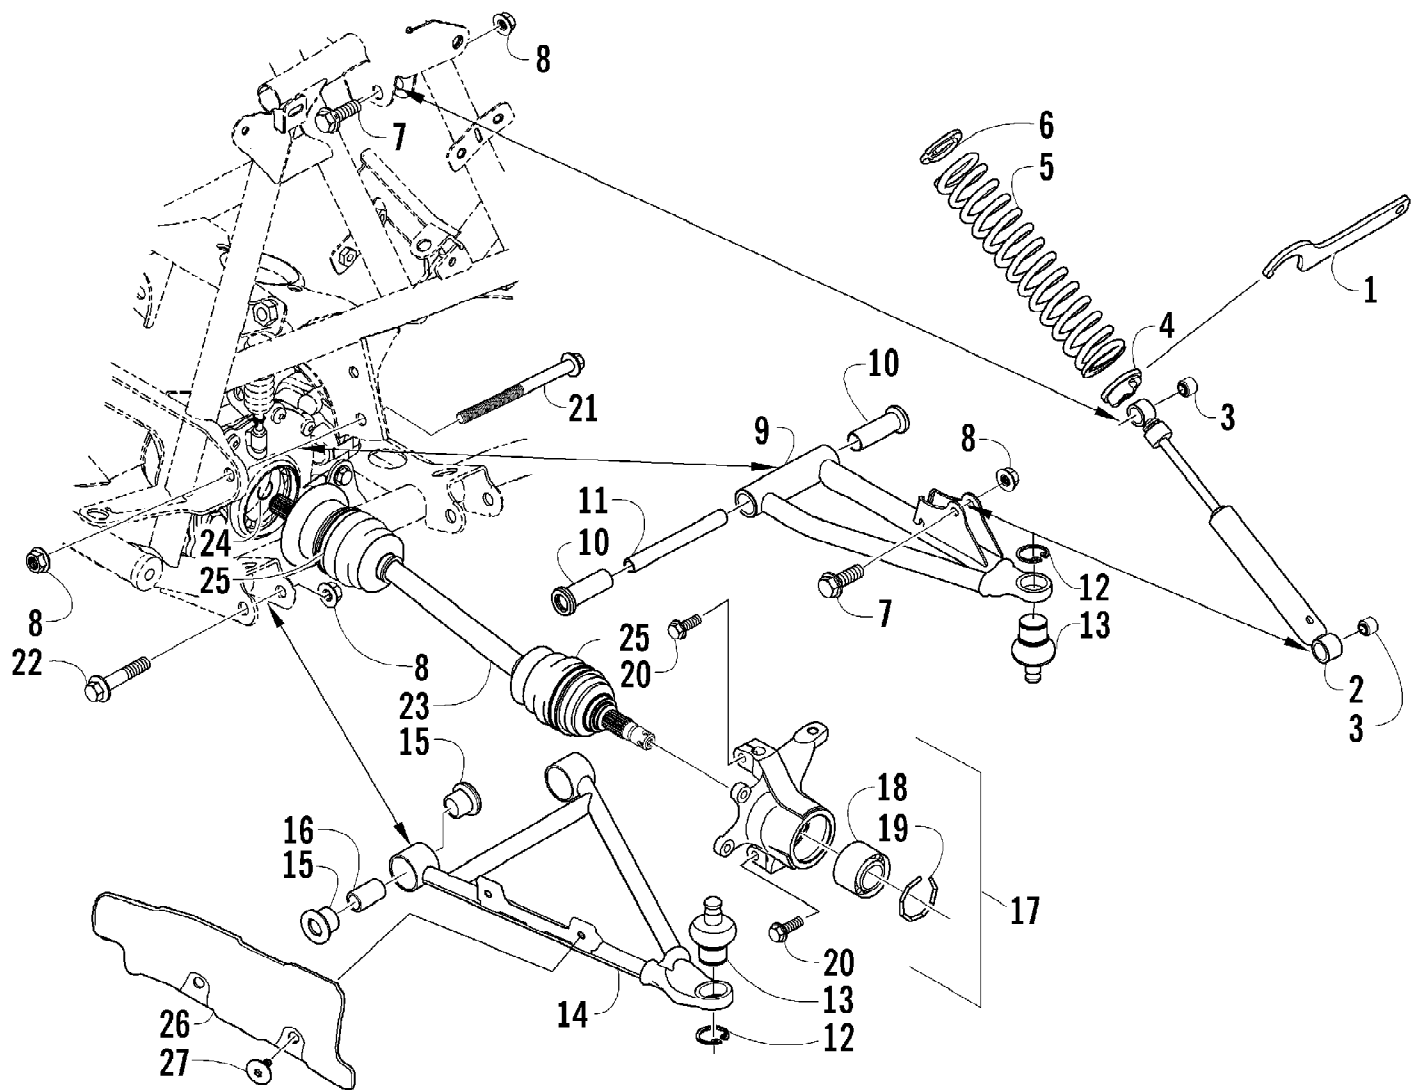


2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4D) Page 51 of 114  
 FRONT SUSPENSION ASSEMBLY

| Ref # | Part Number | Qty | S/P/F | Description                               |
|-------|-------------|-----|-------|-------------------------------------------|
| 1     | 0441-587    | 1   |       | Wrench, Spanner                           |
| 2     | 0403-176    | 2   |       | Shock Absorber - Front (inc. 3)           |
| 3     | 0403-182    | 4   |       | Bushing, Double-Bonded                    |
| 4     | 0403-102    | 2   |       | Cam, Spring Adjuster                      |
| 5     | 0403-174    | 2   |       | Spring, Shock Absorber                    |
| 6     | 1603-889    | 2   | /P    | Retainer, Spring                          |
| 7     | 8409-040    | 4   |       | Screw, Cap                                |
| 8     | 8428-002    | 10  |       | Nut, Lock                                 |
| 9     | 0503-272    | 1   | S     | A-Arm, Upper Right (inc. 10-13)           |
| 9     | 0503-273    | 1   | S     | A-Arm, Upper Left (inc. 10-13)            |
| 10    | 0403-081    | 4   | S     | Bushing                                   |
| 11    | 0403-080    | 2   |       | Collar                                    |
| 12    | 0423-009    | 4   | /P    | Clip, Ball Joint                          |
| 13    | 0405-115    | 4   | /P    | Ball Joint - Front                        |
| 14    | 0503-342    | 1   | S     | A-Arm, Lower Right (inc. 12-13 and 15-16) |
| 14    | 0503-343    | 1   | S     | A-Arm, Lower Left (inc. 12-13 and 15-16)  |
| 15    | 0403-115    | 8   | S     | Bushing                                   |
| 16    | 0403-114    | 4   | S     | Collar                                    |
| 17    | 0505-460    | 1   |       | Knuckle - Assembly - Right (inc. 18-19)   |
| 17    | 0505-461    | 1   | S     | Knuckle - Assembly - Left (inc. 18-19)    |
| 18    | 1402-027    | 2   | S/P   | Bearing, Wheel Hub                        |
| 19    | 0423-423    | 2   |       | Ring, Retaining                           |
| 20    | 8409-030    | 4   |       | Screw, Cap                                |
| 21    | 0423-334    | 2   |       | Screw, Cap                                |
| 22    | 8409-075    | 4   |       | Screw, Cap                                |
| 23    | 0502-812    | 2   | S     | Axle, Drive - Front (inc. 24-25)          |
| 24    | 1441-109    | 2   | S     | Clip, Retaining                           |
| 25    | 0436-276    | 2   | S     | Repair Kit, Boot                          |
| 26    | 0441-752    | 1   |       | Guard, Boot - Right                       |
| 26    | 0441-753    | 1   |       | Guard, Boot - Left                        |
| 27    | 0423-545    | 4   | /P    | Screw, Body                               |

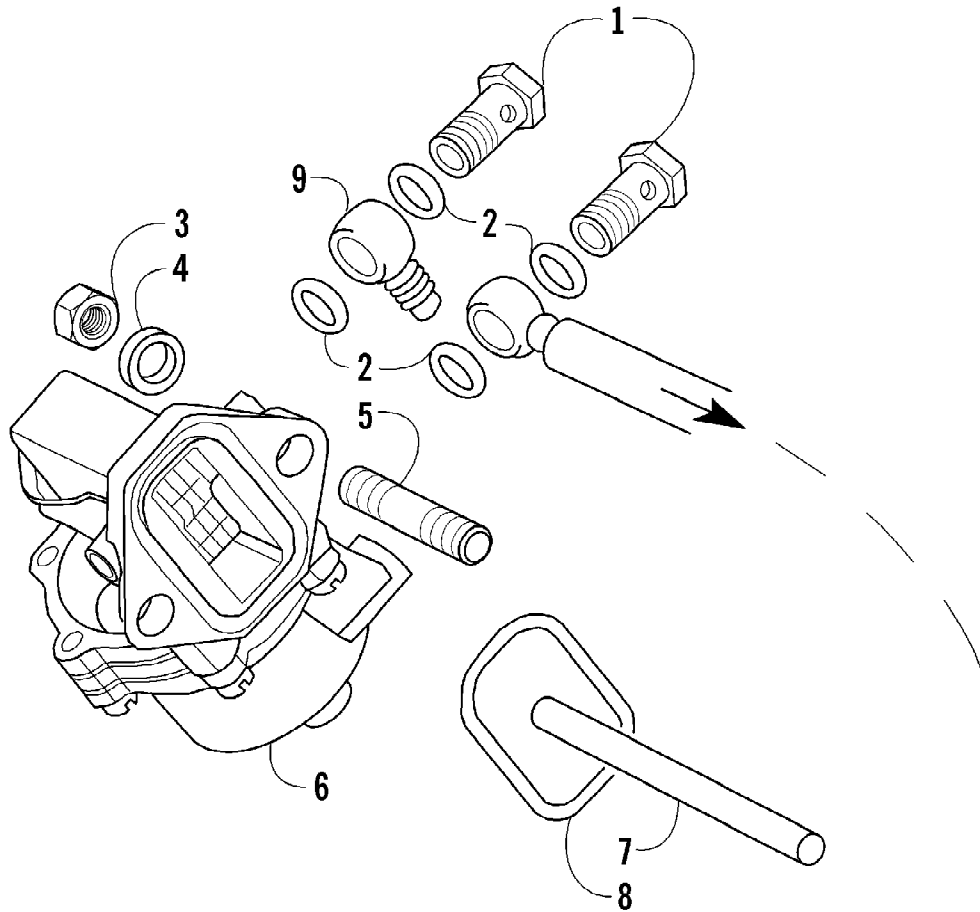 

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4D) Page 53 of 114  
FUEL FEED PUMP AND PUSH ROD ASSEMBLIES


| Ref # | Part Number | Qty | S/P/F | Description         |
|-------|-------------|-----|-------|---------------------|
| 1     | 3206-009    | 2   |       | Bolt, Banjo-Fitting |
| 2     | 3206-010    | 4   |       | Washer, Crush       |
| 3     | 3206-245    | 2   |       | Nut                 |
| 4     | 3206-234    | 2   |       | Washer              |
| 5     | 3206-254    | 2   |       | Stud                |
| 6     | 3206-255    | 1   |       | Pump                |
| 7     | 3206-257    | 1   |       | Rod, Push           |
| 8     | 3206-256    | 1   |       | O-Ring              |
| 9     | 3206-258    | 1   |       | Banjo-Fitting       |

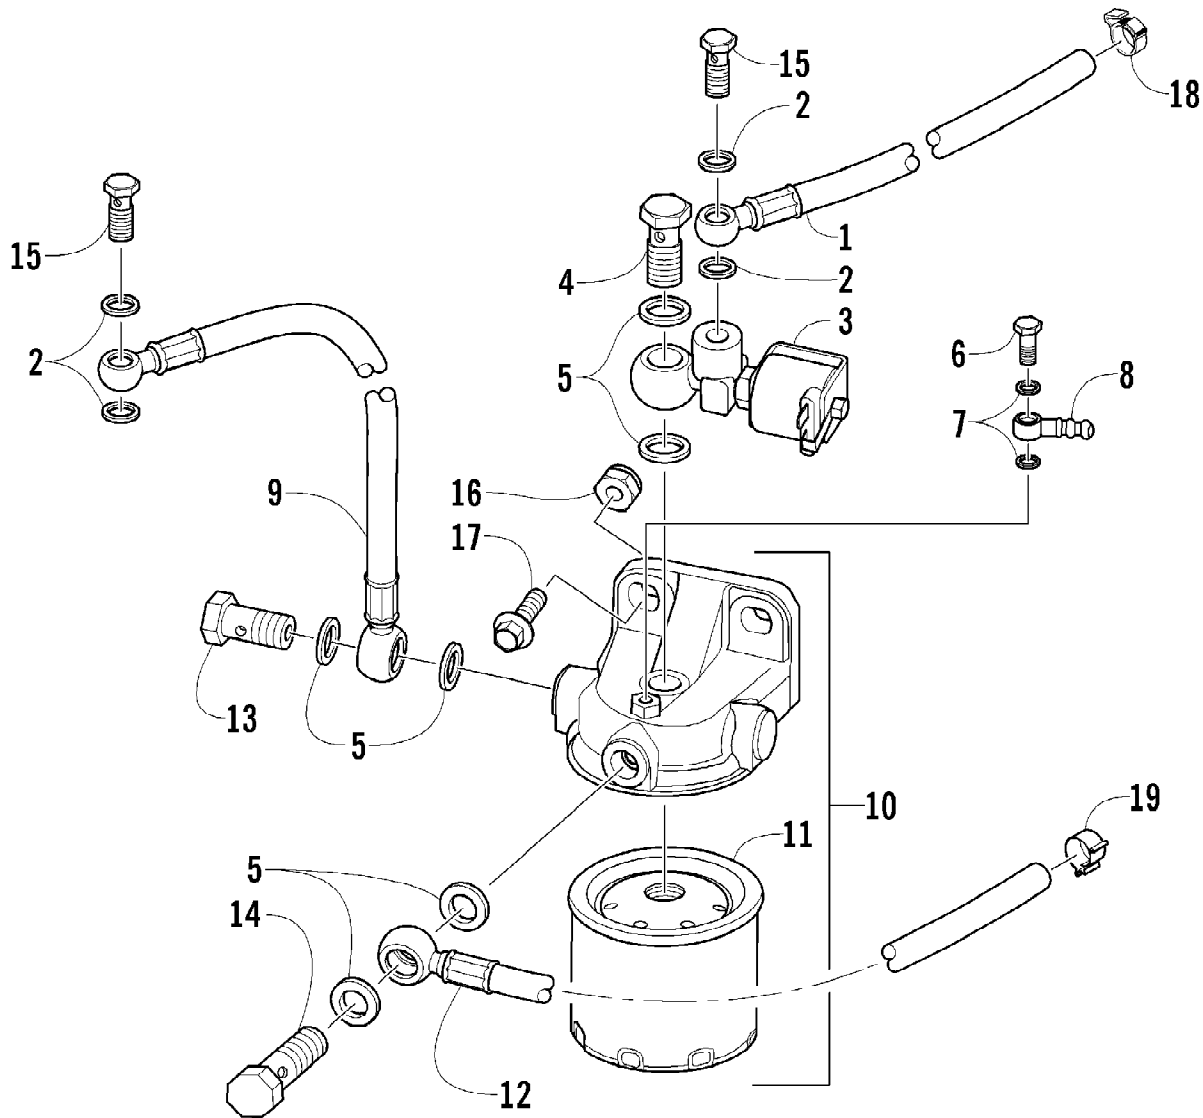 

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4D) Page 5 of 114  
 FUEL FILTER, ELECTRO-VALVE, AND HOSES ASSEMBLY


| Ref # | Part Number | Qty | S/P/F | Description                      |
|-------|-------------|-----|-------|----------------------------------|
| 1     | 3206-014    | 1   |       | Hose, Fuel                       |
| 2     | 3206-010    | 4   |       | Washer, Crush                    |
| 3     | 3206-002    | 1   |       | Electro-Valve                    |
| 4     | 3206-003    | 1   |       | Cap, Filler                      |
| 5     | 3206-004    | 6   |       | Washer, Crush                    |
| 6     | 3206-006    | 1   |       | Bolt, Banjo-Fitting              |
| 7     | 3206-007    | 2   |       | Gasket                           |
| 8     | 3206-008    | 1   |       | Banjo-Fitting                    |
| 9     | 3206-015    | 1   |       | Hose, Fuel                       |
| 10    | 3206-001    | 1   |       | Fuel Filter - Assembly (inc. 11) |
| 11    | 3206-012    | 1   |       | Fuel Filter                      |
| 12    | 3206-013    | 1   |       | Hose, Fuel                       |
| 13    | 3206-011    | 1   |       | Bolt, Banjo-Fitting              |
| 14    | 3206-005    | 1   |       | Bolt, Banjo-Fitting w/Valve      |
| 15    | 3206-009    | 2   |       | Bolt, Banjo-Fitting              |
| 16    | 8432-802    | 2   |       | Nut, Lock                        |
| 17    | 8408-825    | 2   |       | Screw, Cap                       |
| 18    | 0124-045    | 1   | /P    | Clamp, Hose                      |
| 19    | 0423-670    | 1   |       | Clamp, Hose                      |

 2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT410) Page 56 of 114  
FUEL SYSTEM INJECTION PUMP ASSEMBLY

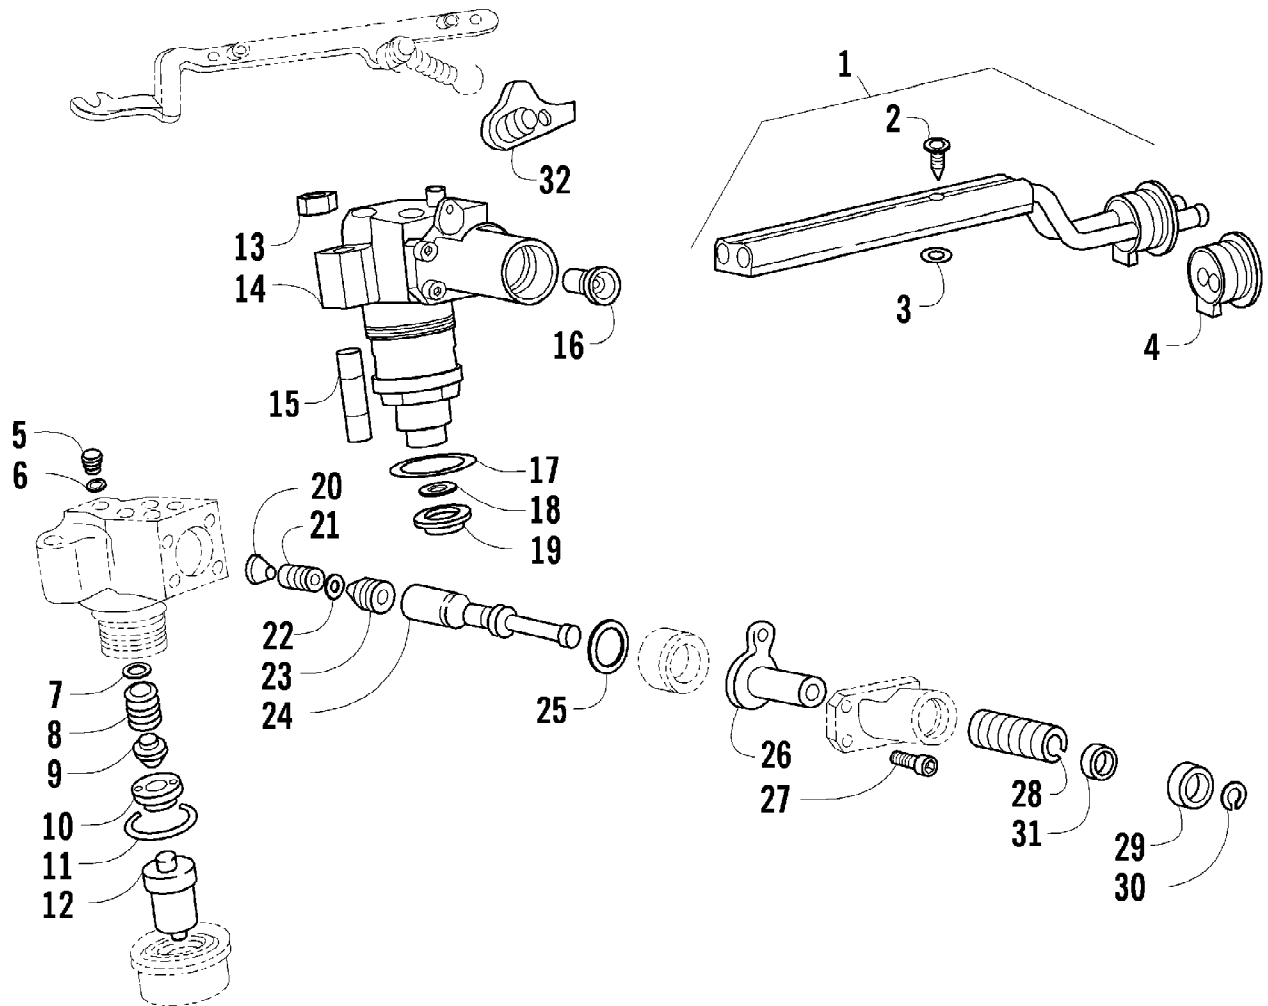


2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT410) Page 57 of 114  
 FUEL SYSTEM INJECTION PUMP ASSEMBLY

| Ref # | Part Number | Qty | S/P/F | Description               |
|-------|-------------|-----|-------|---------------------------|
| 1     | 3206-092    | 1   |       | Pipe, Delivery (inc. 2-4) |
| 2     | 3206-093    | 4   |       | Screw, Fit                |
| 3     | 3206-095    | 4   |       | Seal, Ring                |
| 4     | 3206-094    | 1   |       | Seal, Delivery Pipe       |
| 5     | 3206-098    | 2   |       | Valve, Bleed              |
| 6     | 3206-126    | 2   |       | Gasket                    |
| 7     | 3206-103    | 2   |       | Spacer - 2.00             |
| 7     | 3206-104    | 2   |       | Spacer - 1.90             |
| 7     | 3206-105    | 2   |       | Spacer - 1.80             |
| 7     | 3206-106    | 2   |       | Spacer - 1.70             |
| 7     | 3206-107    | 2   |       | Spacer - 1.60             |
| 7     | 3206-108    | 2   |       | Spacer - 1.50             |
| 7     | 3206-109    | 2   |       | Spacer - 1.40             |
| 7     | 3206-110    | 2   |       | Spacer - 1.30             |
| 7     | 3206-111    | 2   |       | Spacer - 1.20             |
| 7     | 3206-112    | 2   |       | Spacer - 1.10             |
| 7     | 3206-113    | 2   |       | Spacer - 1.00             |
| 8     | 0           | 1   | F     | Spring, Pressure          |
| 9     | 3206-114    | 2   |       | Drive Rod                 |
| 10    | 3206-115    | 2   |       | Spacer                    |
| 11    | 3206-125    | 2   |       | O-Ring                    |
| 12    | 3206-123    | 2   |       | Nozzle                    |
| 13    | 3206-245    | 4   |       | Nut                       |
| 14    | 3206-102    | 2   |       | Pump, Injection - Nozzle  |
| 15    | 3206-097    | 4   |       | Stud                      |
| 16    | 3206-133    | 2   |       | Tappet                    |
| 17    | 3206-122    | 2   |       | O-Ring                    |
| 18    | 3206-124    | 2   |       | Gasket, Copper            |
| 19    | 3206-059    | 2   |       | Arrester, Spark           |
| 20    | 3206-116    | 2   |       | Filler                    |
| 21    | 3206-099    | 2   |       | Spring, Delivery Valve    |
| 22    | 3206-117    | 2   |       | Gasket, Valve             |
| 23    | 3206-100    | 2   |       | Valve, Delivery           |
| 24    | 0           | 1   | F     | Plunger, Injection        |
| 25    | 3206-118    | 1   |       | O-Ring                    |
| 26    | 3206-119    | 2   |       | Sleeve                    |
| 27    | 3206-120    | 8   |       | Screw                     |
| 28    | 3206-101    | 2   |       | Spring, Tappet            |
| 29    | 0           | 1   | F     | Push Rod                  |
| 30    | 3206-121    | 2   |       | Circlip                   |
| 31    | 3206-375    | 1   |       | Retainer, Lower           |
| 32    | 3206-127    | 1   |       | Plate, Locking            |

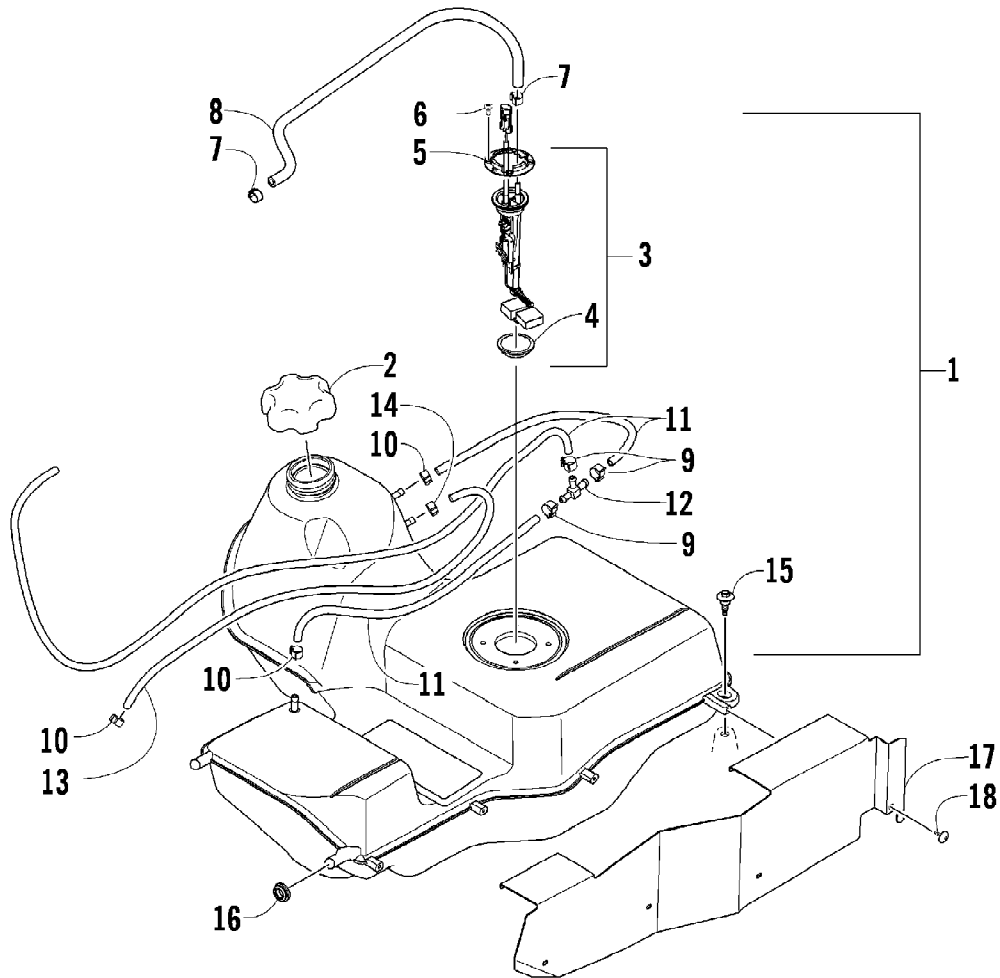 

| Ref # | Part Number | Qty | S/P/F | Description                               |
|-------|-------------|-----|-------|-------------------------------------------|
| 1     | 0570-214    | 1   |       | Tank, Fuel - Assembly w/Straps (inc. 2-6) |
| 2     | 0470-653    | 1   |       | Cap, Fuel Tank                            |
| 3     | 0570-228    | 1   | /P    | Sensor, Fuel Level (inc. 4)               |
| 4     | 0470-521    | 1   |       | Seal, Fuel Level Sensor                   |
| 5     | 0470-639    | 1   | /P    | Plate, Mounting - Fuel Level Sensor       |
| 6     | 1623-158    | 4   |       | Screw, Plastite                           |
| 7     | 0423-689    | 2   |       | Clamp, Hose                               |
| 8     | 0410-143    | AR  |       | Hose, Fuel - 25 ft                        |
| 9     | 0423-670    | 3   |       | Clamp, Hose                               |
| 10    | 0423-688    | 4   |       | Clamp, Hose                               |
| 11    | 0410-070    | AR  | /P    | Hose, Fuel - 25 ft                        |
| 12    | 0109-332    | 1   |       | Fitting, T                                |
| 13    | 0410-142    | AR  |       | Hose, Fuel - 25 ft                        |
| 14    | 0423-732    | 2   |       | Screw, Mounting - Fuel Tank               |
| 15    | 0623-038    | 2   |       | Nut, Hex                                  |
| 16    | 0423-460    | 2   |       | Grommet                                   |
| 17    | 0470-715    | 1   |       | Shield, Fuel Tank                         |
| 18    | 0623-797    | 4   |       | Screw, Self-Tapping                       |

 
2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT410-00) of 114  
HANDLEBAR ASSEMBLY

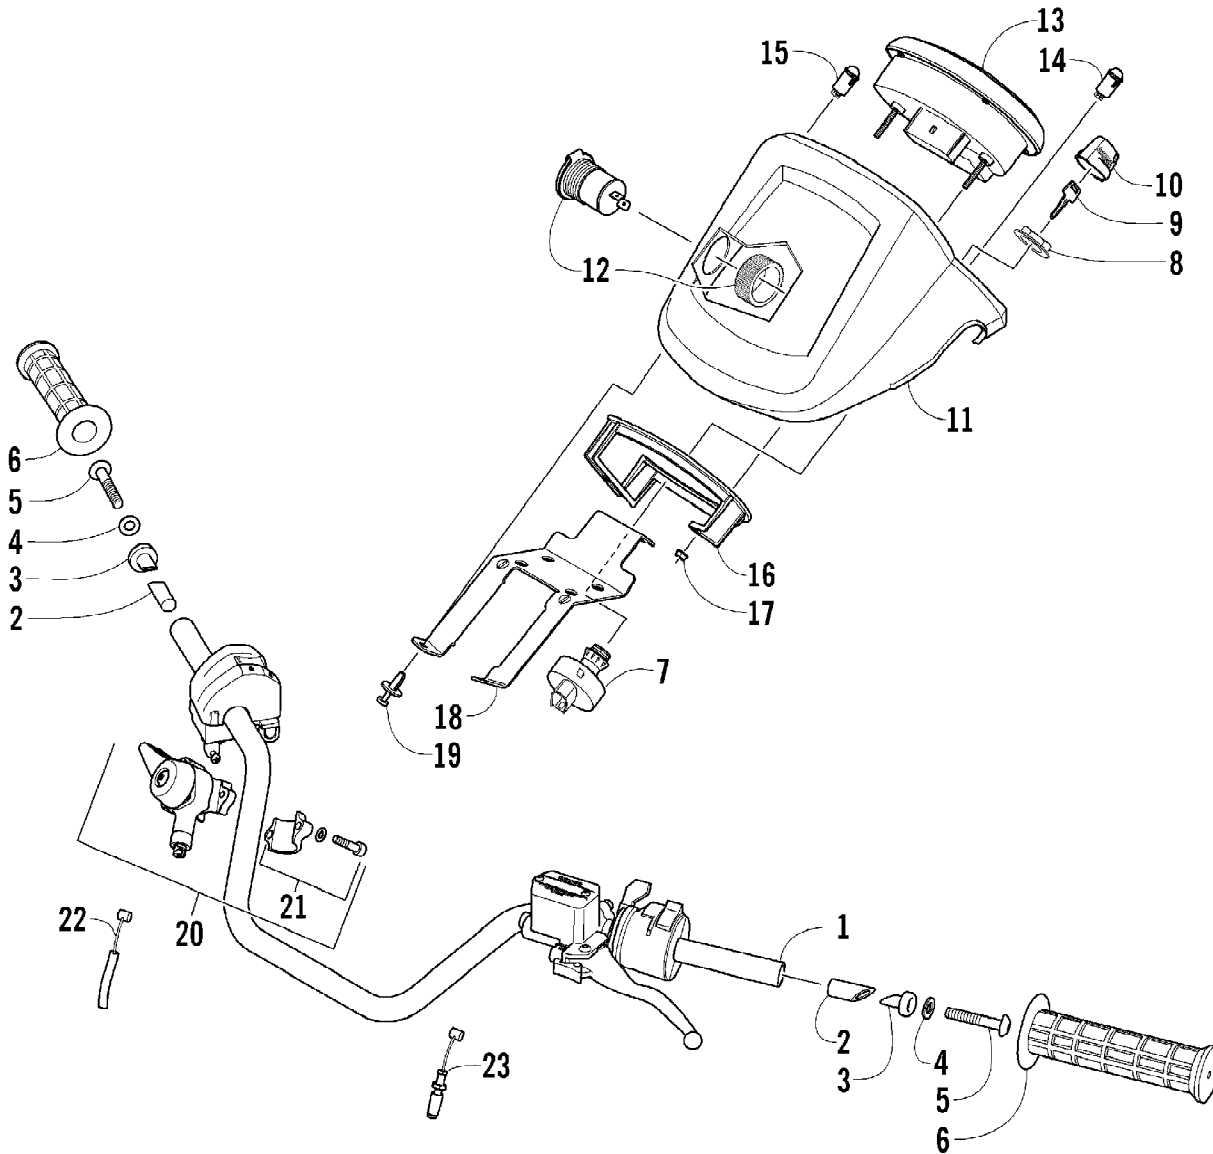

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4DUSR)  
 HANDLEBAR ASSEMBLY Page 1 of 114

| Ref # | Part Number | Qty | S/P/F | Description                                       |
|-------|-------------|-----|-------|---------------------------------------------------|
| 1     | 0505-476    | 1   |       | Tube, Handlebar                                   |
| 2     | 0405-218    | 2   |       | Plug, Handlebar                                   |
| 3     | 0405-149    | 2   |       | End Cap, Handlebar                                |
| 4     | 8050-247    | 2   | /P    | Washer                                            |
| 5     | 8477-845    | 2   |       | Screw, Machine                                    |
| 6     | 0405-147    | 2   |       | Grip, Handlebar                                   |
| 7     | 0430-069    | 1   | S     | Switch, Ignition - Assembly (inc. 8-10)           |
| 8     | 0430-050    | 1   |       | Nut, Flange - Ignition Switch                     |
| 9     | 0430-042    | 1   |       | Key, Ignition (Y Series - Left-Side Cut)          |
| 9     | 0430-043    | 1   |       | Key, Ignition - Blank (Z Series - Right-Side Cut) |
| 10    | 0430-054    | 1   |       | Cover, Key                                        |
| 11    | 0505-500    | 1   |       | Instrument Pod                                    |
| 12    | 0641-897    | 1   | /P    | Outlet, Accessory - 12V                           |
| 13    | 0520-024    | 1   |       | Gauge, LCD                                        |
| 14    | 0420-074    | 1   |       | Light, Indicator - Glow Plug                      |
| 15    | 0420-075    | 1   |       | Light, Indicator - Battery                        |
| 16    | 0420-065    | 1   | /P    | Clamp, Plastic                                    |
| 17    | 0423-493    | 2   |       | Nut w/Washer                                      |
| 18    | 2506-470    | 1   |       | Bracket, Mounting - Instrument Pod                |
| 19    | 0423-535    | 2   |       | Rivet, Reinstallable                              |
| 20    | 0502-527    | 1   |       | Control, Differential Lock (inc. 21)              |
| 21    | 0502-613    | 1   |       | Clamp, Differential Lock Control - Kit            |
| 22    | 0487-050    | 1   | /P    | Cable, Differential Lock                          |
| 23    | 0487-044    | 1   |       | Cable, Throttle                                   |

 
2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT41000) Page 2 of 114  
HYDRAULIC BRAKE ASSEMBLY

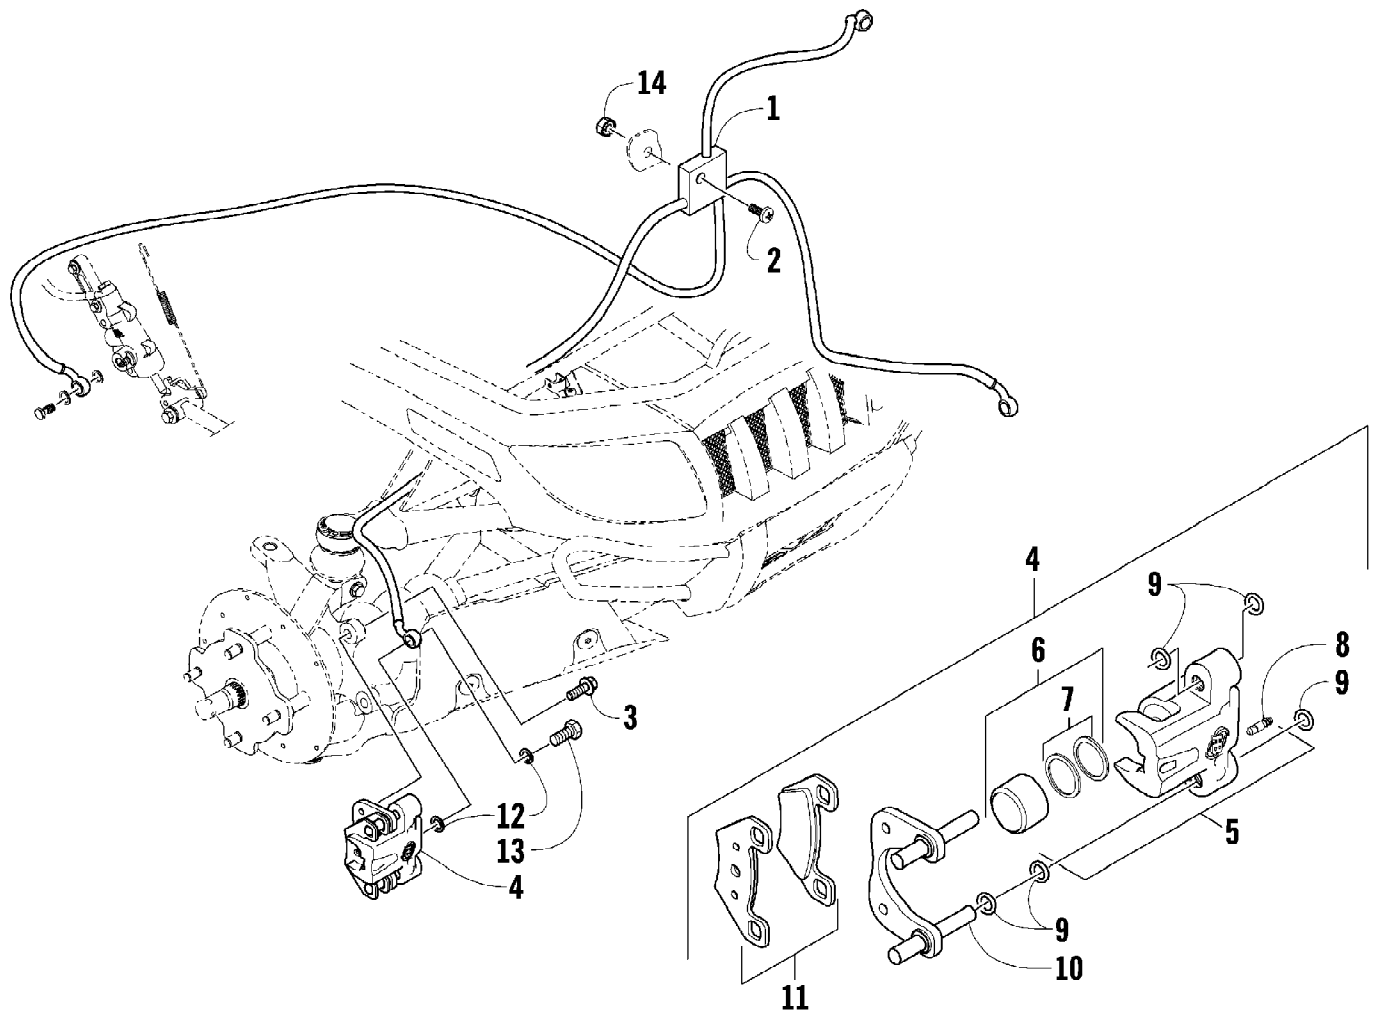

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4D) Page 3 of 114  
 HYDRAULIC BRAKE ASSEMBLY

| Ref # | Part Number | Qty | S/P/F | Description                                          |
|-------|-------------|-----|-------|------------------------------------------------------|
| 1     | 1502-015    | 1   |       | Hose, Brake - Assembly                               |
| 2     | 8476-625    | 1   |       | Screw, Cap                                           |
| 3     | 8408-821    | 4   | /P    | Screw, Cap                                           |
| 4     | 0502-878    | 1   | S     | Caliper, Brake - Right Front (inc. 5-11)             |
| 4     | 0502-879    | 1   | S     | Caliper, Brake - Left Front (inc. 5-11)              |
| 5     | 0502-603    | 1   | S     | Housing, Caliper - Assembly - Right Front (inc. 6-8) |
| 5     | 0502-611    | 1   | S     | Housing, Caliper - Assembly - Left Front (inc. 6-8)  |
| 6     | 0502-606    | 2   |       | Piston/Seal Set (inc. 7)                             |
| 7     | 0502-607    | 2   |       | Seal Set                                             |
| 8     | 0502-609    | 2   | /P    | Valve, Bleed                                         |
| 9     | 0502-608    | 2   |       | O-Ring, Guide - Set                                  |
| 10    | 0502-605    | 2   |       | Bracket Assembly                                     |
| 11    | 0502-875    | 2   | S     | Pad, Brake - Set                                     |
| 12    | 0423-178    | 4   |       | Washer, Crush                                        |
| 13    | 0423-413    | 2   |       | Bolt, Banjo-Fitting                                  |
| 14    | 0623-038    | 1   |       | Nut, Lock                                            |

 
2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT410) Page 4 of 114  
HYDRAULIC HAND BRAKE ASSEMBLY

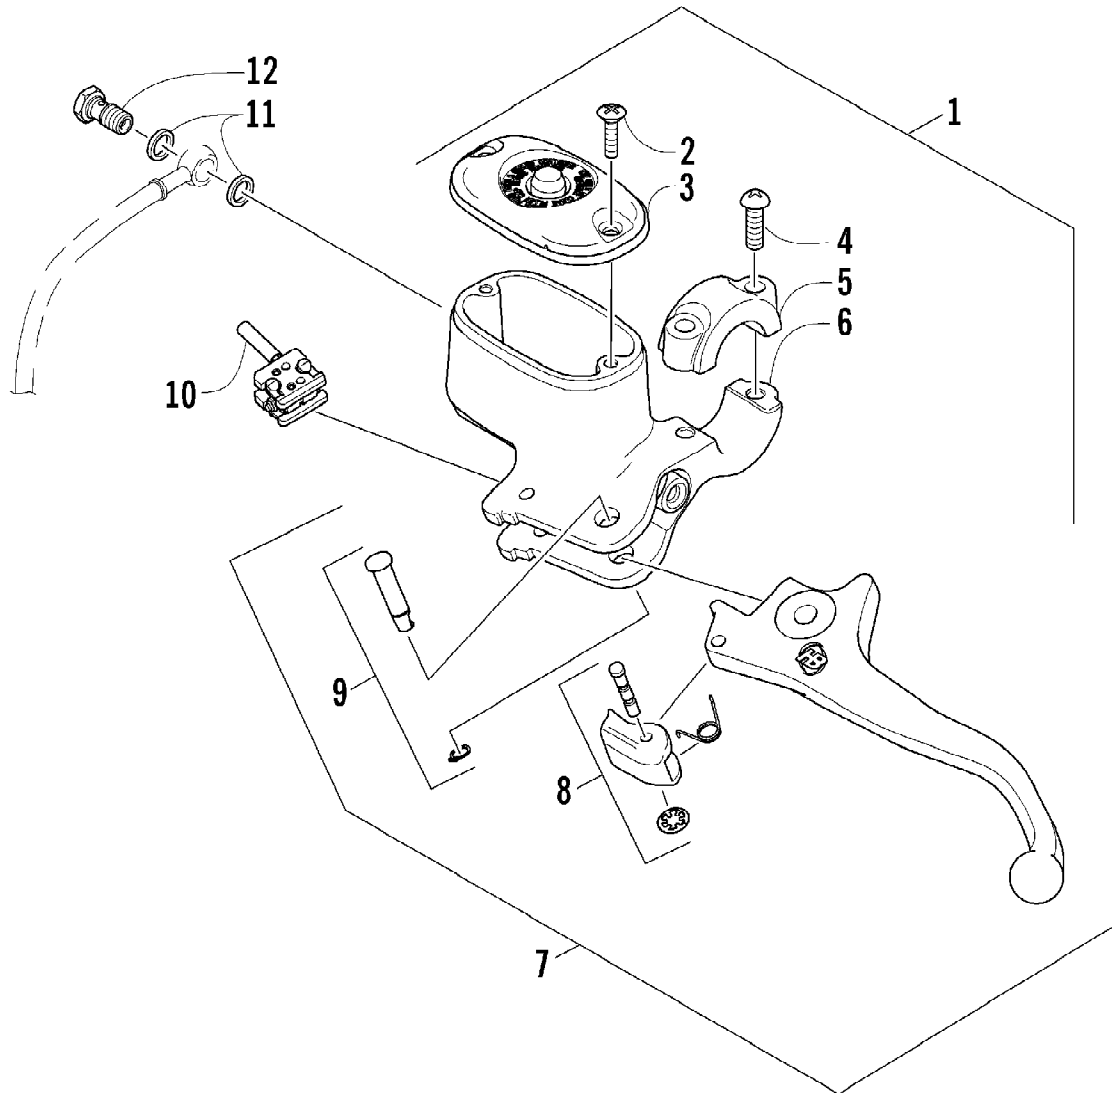

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT41D) Page 5 of 114  
HYDRAULIC HAND BRAKE ASSEMBLY

| Ref # | Part Number | Qty | S/P/F | Description                  |
|-------|-------------|-----|-------|------------------------------|
| 1     | 0502-914    | 1   | S     | Brake Assembly (inc. 2-10)   |
| 2     | 0502-566    | 1   |       | Screw, Reservoir Cover       |
| 3     | 0502-868    | 1   | /P    | Cover, Reservoir             |
| 4     | 0502-568    | 1   |       | Screw, Master Cylinder Clamp |
| 5     | 0502-869    | 1   |       | Clamp, Master Cylinder       |
| 6     | 0502-704    | 1   |       | Master Cylinder Assembly     |
| 7     | 0502-866    | 1   |       | Lever Assembly (inc. 8-9)    |
| 8     | 0502-867    | 1   | /P    | Lock, Brake Lever - Kit      |
| 9     | 0502-580    | 1   |       | Lever Pin - Kit              |
| 10    | 0502-564    | 1   | /P    | Switch, Brake - Kit          |
| 11    | 0423-178    | 2   |       | Washer, Crush                |
| 12    | 0423-413    | 1   |       | Bolt, Banjo-Fitting          |

 
2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT410-00) Page 6 of 114  
INTAKE MANIFOLD AND THROTTLE CONTROL ASSEMBLY

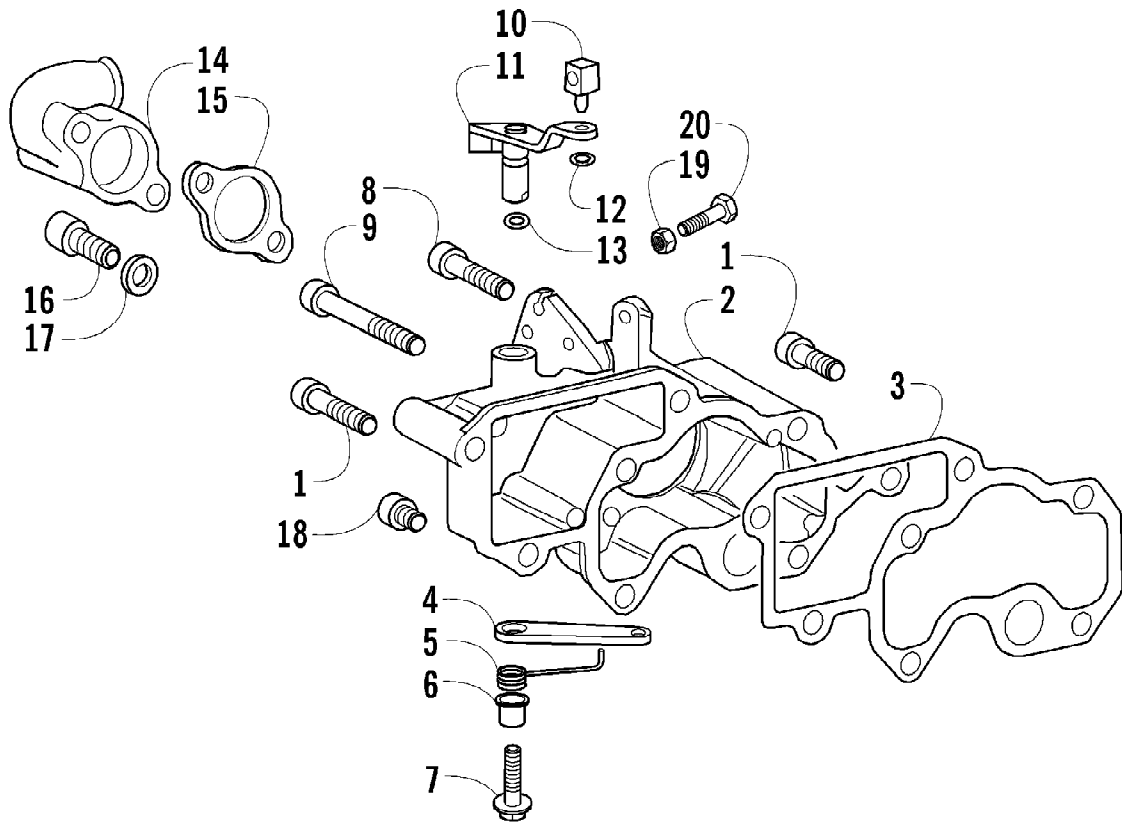

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4D) Page 67 of 114  
 INTAKE MANIFOLD AND THROTTLE CONTROL ASSEMBLY

| Ref # | Part Number | Qty | S/P/F | Description             |
|-------|-------------|-----|-------|-------------------------|
| 1     | 3206-276    | 3   |       | Screw                   |
| 2     | 3206-278    | 1   |       | Manifold, Intake        |
| 3     | 3206-277    | 1   |       | Gasket, Intake Manifold |
| 4     | 3206-286    | 1   |       | Lever, Internal         |
| 5     | 3206-283    | 1   |       | Spring, Recovery        |
| 6     | 3206-284    | 1   |       | Sleeve                  |
| 7     | 3206-285    | 1   |       | Screw                   |
| 8     | 3206-280    | 1   |       | Screw                   |
| 9     | 3206-279    | 1   |       | Screw                   |
| 10    | 3206-288    | 1   |       | Pin                     |
| 11    | 3206-287    | 1   |       | Lever, External         |
| 12    | 3206-242    | 1   |       | Circlip                 |
| 13    | 3206-281    | 1   |       | O-Ring                  |
| 14    | 3206-290    | 1   |       | Flange, Intake          |
| 15    | 3206-289    | 1   |       | Gasket                  |
| 16    | 3206-169    | 2   |       | Screw                   |
| 17    | 3206-234    | 2   |       | Washer                  |
| 18    | 3206-266    | 4   |       | Screw                   |
| 19    | 3206-137    | 1   |       | Nut                     |
| 20    | 3206-282    | 1   |       | Bolt                    |

 
2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT410) Page 8 of 114  
OIL PAN ASSEMBLY

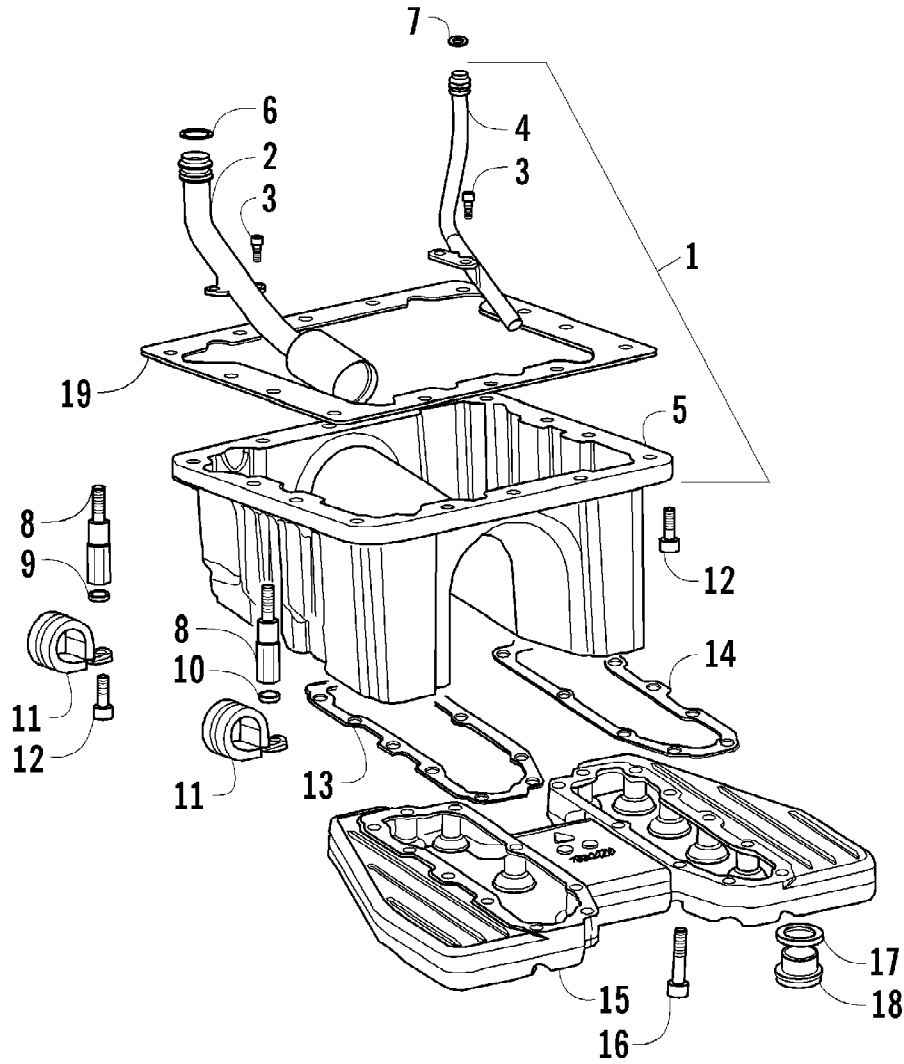

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT41D) Page 9 of 114  
 OIL PAN ASSEMBLY

| Ref # | Part Number | Qty | S/P/F | Description                           |
|-------|-------------|-----|-------|---------------------------------------|
| 1     | 3206-179    | 1   | /P    | Pan, Oil - Assembly (inc. 2-5)        |
| 2     | 0           | 1   |       | Pipe, Oil - Intake Not a Service Part |
| 3     | 3206-183    | 4   |       | Screw                                 |
| 4     | 0           | 1   |       | Pipe, Oil - Return Not a Service Part |
| 5     | 0           | 1   |       | Pan, Oil Not a Service Part           |
| 6     | 3206-176    | 1   |       | Seal, Oil                             |
| 7     | 3206-177    | 1   |       | Seal, Oil                             |
| 8     | 3206-178    | 2   |       | Stud, Hollow                          |
| 9     | 3206-192    | 1   |       | Washer                                |
| 10    | 3206-191    | 1   |       | Washer                                |
| 11    | 3206-190    | 2   |       | Clamp                                 |
| 12    | 3206-088    | 20  |       | Screw                                 |
| 13    | 3206-186    | 1   |       | Gasket                                |
| 14    | 3206-187    | 1   |       | Gasket                                |
| 15    | 3206-188    | 1   |       | Cover, Oil Pan                        |
| 16    | 3206-189    | 20  |       | Screw                                 |
| 17    | 3206-181    | 1   |       | Gasket, Copper                        |
| 18    | 3206-182    | 1   |       | Plug                                  |
| 19    | 3206-175    | 1   |       | Gasket                                |

 
2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT410-01) Page 70 of 114  
OIL PUMP ASSEMBLY

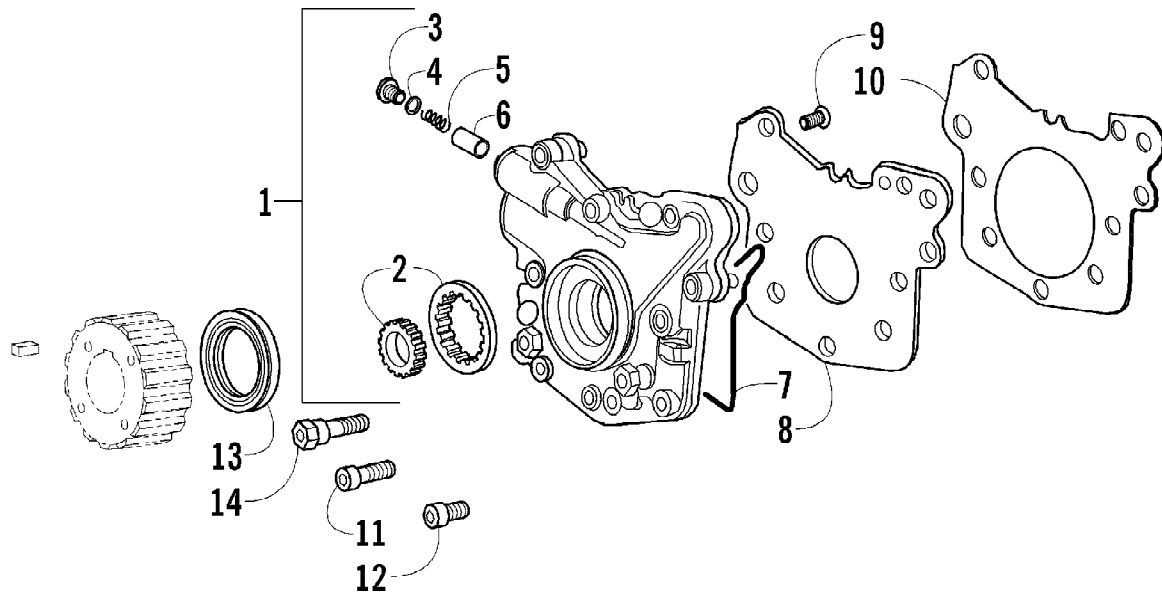

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT41000) Page 1 of 114  
 OIL PUMP ASSEMBLY

| Ref # | Part Number | Qty | S/P/F | Description            |
|-------|-------------|-----|-------|------------------------|
| 1     | 3206-171    | 1   |       | Pump, Oil (inc. 2-10)  |
| 2     | 3206-167    | 1   |       | Rotors, Oil Pump       |
| 3     | 3206-163    | 1   |       | Plug                   |
| 4     | 3206-162    | 1   |       | Gasket                 |
| 5     | 3206-164    | 1   |       | Spring, Pressure Valve |
| 6     | 3206-165    | 1   |       | Rod, Drive             |
| 7     | 3206-172    | 1   |       | O-Ring                 |
| 8     | 0           | 1   | F     | Plate                  |
| 9     | 3206-166    | 3   |       | Screw                  |
| 10    | 3206-173    | 1   | /P    | Gasket                 |
| 11    | 3206-168    | 1   |       | Bolt                   |
| 12    | 3206-169    | 6   |       | Screw                  |
| 13    | 3206-161    | 1   |       | Ring, Seal             |
| 14    | 3206-174    | 2   |       | Screw                  |

 
2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT410-01) Page 2 of 114  
PISTON SET AND CONNECTING ROD ASSEMBLY

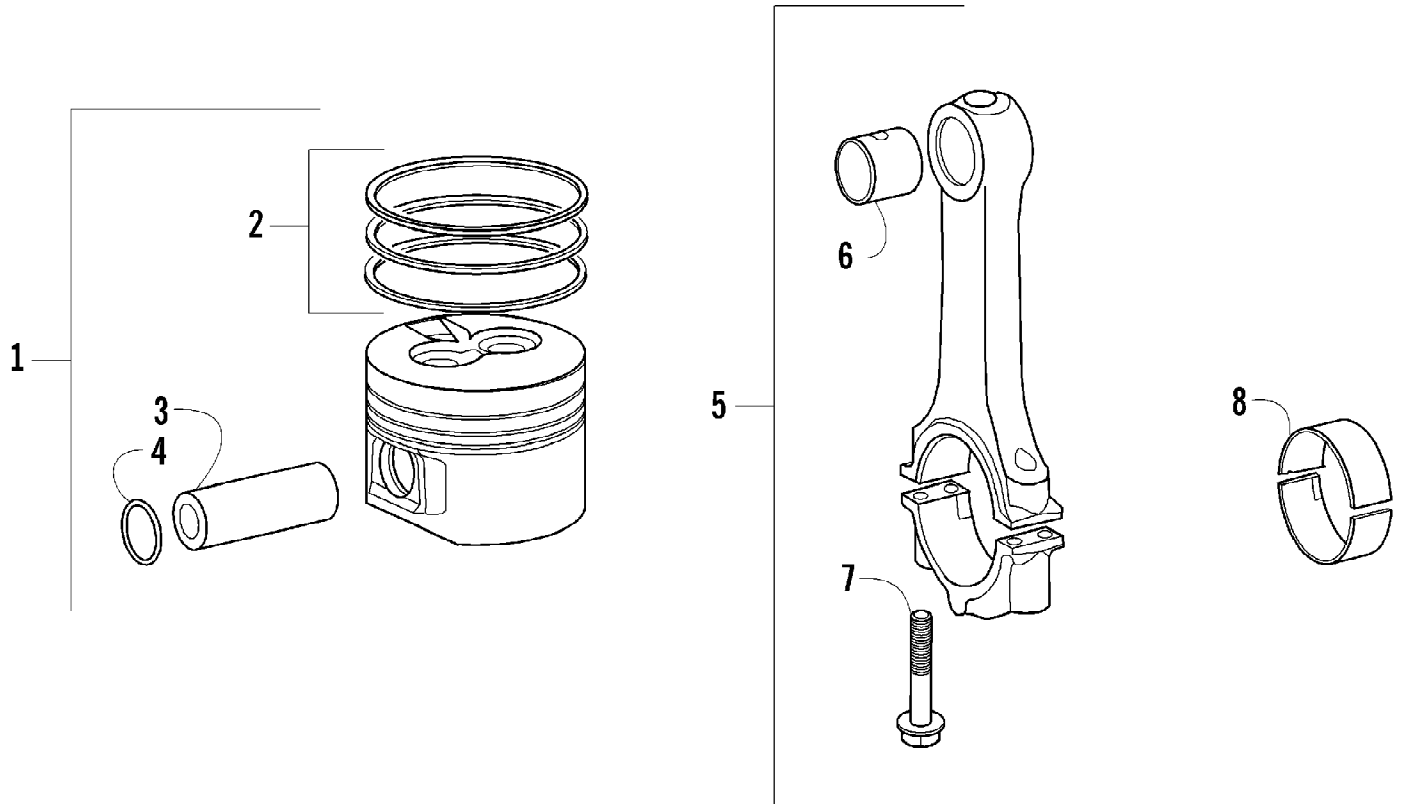

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4D) Page 3 of 114  
 PISTON SET AND CONNECTING ROD ASSEMBLY

| Ref # | Part Number | Qty | S/P/F | Description               |
|-------|-------------|-----|-------|---------------------------|
| 1     | 3206-026    | 2   |       | Piston - Set (inc. 2-4)   |
| 1     | 3206-027    | 2   |       | Piston - Set ( 0.50 mm)   |
| 1     | 3206-028    | 2   |       | Piston - Set ( 1.00 mm)   |
| 2     | 3206-023    | 2   |       | Ring - Set                |
| 2     | 3206-024    | 2   |       | Ring - Set ( 0.50 mm)     |
| 2     | 3206-025    | 2   |       | Ring - Set ( 1.00 mm)     |
| 3     | 3206-030    | 2   |       | Piston Pin                |
| 4     | 3206-031    | 4   |       | Circlip                   |
| 5     | 3206-035    | 2   |       | Connecting Rod (inc. 6-7) |
| 6     | 3206-029    | 2   |       | Bushing                   |
| 7     | 3206-036    | 4   |       | Bolt                      |
| 8     | 3206-032    | 2   |       | Bushing                   |
| 8     | 3206-033    | 2   |       | Bushing (-0.25 mm)        |
| 8     | 3206-034    | 2   |       | Bushing (-0.50 mm)        |

 
2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT410) Page 74 of 114  
REAR DRIVE GEARCASE ASSEMBLY

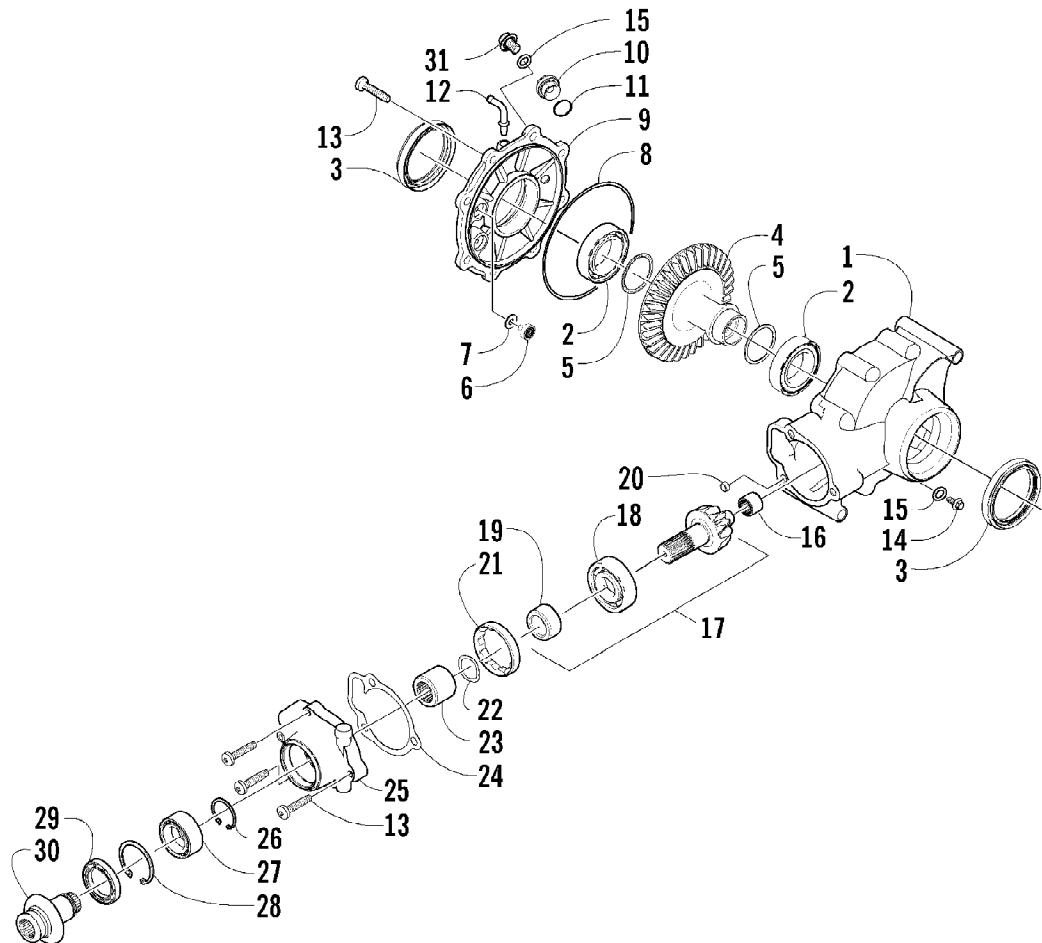

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4D) Page 75 of 114  
 REAR DRIVE GEARCASE ASSEMBLY

| Ref # | Part Number | Qty | S/P/F | Description                                |
|-------|-------------|-----|-------|--------------------------------------------|
|       | 1502-079    | 1   | S     | Complete Rear Gearcase Assembly            |
| 1     | 0502-622    | 1   |       | Housing, Gearcase                          |
| 2     | 0402-393    | 2   |       | Bearing                                    |
| 3     | 1402-441    | 2   | S     | Seal                                       |
| 4     | 1402-032    | 1   |       | Gear, Ring - 36T                           |
| 5     | 0402-405    | AR  |       | Shim                                       |
| 5     | 0402-406    | AR  |       | Shim                                       |
| 5     | 0402-407    | AR  |       | Shim                                       |
| 5     | 0402-408    | AR  |       | Shim                                       |
| 5     | 0402-409    | AR  |       | Shim                                       |
| 6     | 0402-326    | 1   |       | Button, Thrust                             |
| 7     | 0402-429    | AR  |       | Shim                                       |
| 7     | 0402-430    | AR  |       | Shim                                       |
| 7     | 0402-431    | AR  |       | Shim                                       |
| 7     | 0402-432    | AR  |       | Shim                                       |
| 7     | 0402-433    | AR  |       | Shim                                       |
| 8     | 0423-149    | 1   |       | O-Ring                                     |
| 9     | 1502-082    | 1   |       | Cover, Gearcase                            |
| 10    | 0402-333    | 1   | /P    | Plug, Fill (inc. 11)                       |
| 11    | 0423-154    | 1   |       | O-Ring                                     |
| 12    | 1402-102    | 1   |       | Fitting                                    |
| 13    | 0423-118    | 11  |       | Screw, Self-Tapping                        |
| 14    | 0402-450    | 1   | S     | Plug, Magnetic (inc. one No. 15)           |
| 15    | 0423-153    | 2   |       | O-Ring                                     |
| 16    | 0402-328    | 1   |       | Bearing                                    |
| 17    | 0502-783    | 1   |       | Gear, Pinion - Assembly - 10T (inc. 18-19) |
| 18    | 0402-327    | 1   |       | Bearing                                    |
| 19    | 0402-336    | 1   |       | Collar, Retaining                          |
| 20    | 0402-411    | 1   |       | Pin, Dowel                                 |
| 21    | 0402-331    | 1   |       | Collar, Lock                               |
| 22    | 0402-982    | 1   |       | Washer, Spring                             |
| 23    | 0402-981    | 1   |       | Collar, Shaft                              |
| 24    | 0402-947    | 1   |       | Gasket, Flange                             |
| 25    | 0502-529    | 1   |       | Housing, Pinion                            |
| 26    | 0423-417    | 1   |       | Ring, Retaining                            |
| 27    | 1402-043    | 1   |       | Bearing                                    |
| 28    | 0423-423    | 1   |       | Ring, Retaining                            |
| 29    | 1402-011    | 1   |       | Seal                                       |
| 30    | 1502-085    | 1   | /P    | Shaft, Input                               |
| 31    | 1402-211    | 1   |       | Plug, Oil Level (inc. one No. 15)          |

 
2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT410) Page 76 of 114  
REAR RACK AND BACKREST ASSEMBLY

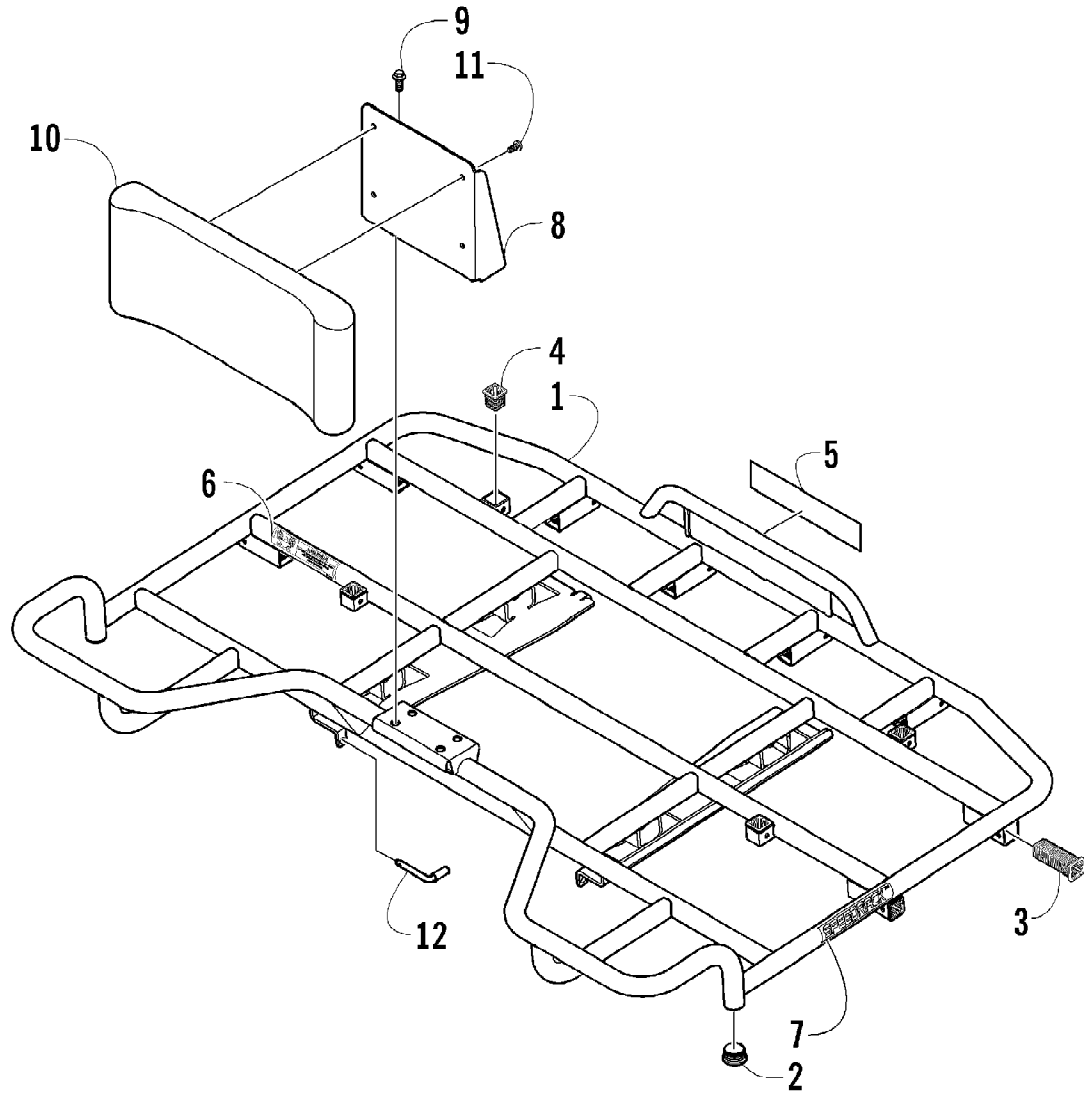

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT41000) Page 7 of 114  
 REAR RACK AND BACKREST ASSEMBLY

| Ref # | Part Number | Qty | S/P/F | Description                      |
|-------|-------------|-----|-------|----------------------------------|
|       | 0436-798    | 1   | /P    | Rear Rack Kit                    |
|       | 0453-349    | 1   |       | Instructions                     |
| 1     | 0541-438    | 1   | S     | Rack, Rear - Assembly (inc. 2-7) |
| 2     | 1441-049    | 2   |       | Plug                             |
| 3     | 2406-014    | 8   |       | Bushing                          |
| 4     | 0441-592    | 4   | /P    | Bushing                          |
| 5     | 0411-814    | 1   | /P    | Decal, "Arctic Cat"              |
| 6     | 0411-648    | 1   |       | Decal, Warning - Rear Rack Load  |
| 7     | 0411-965    | 2   |       | Decal, Speedrack                 |
| 8     | 0541-486    | 1   |       | Bracket, Backrest                |
| 9     | 8408-816    | 4   |       | Screw, Cap                       |
| 10    | 0506-686    | 1   |       | Backrest                         |
| 11    | 8476-620    | 4   |       | Screw, Machine                   |
| 12    | 0541-447    | 2   | /P    | Pin                              |

 
2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4D) Page 78 of 114  
REAR RACK AND FOOTWELL ASSEMBLIES

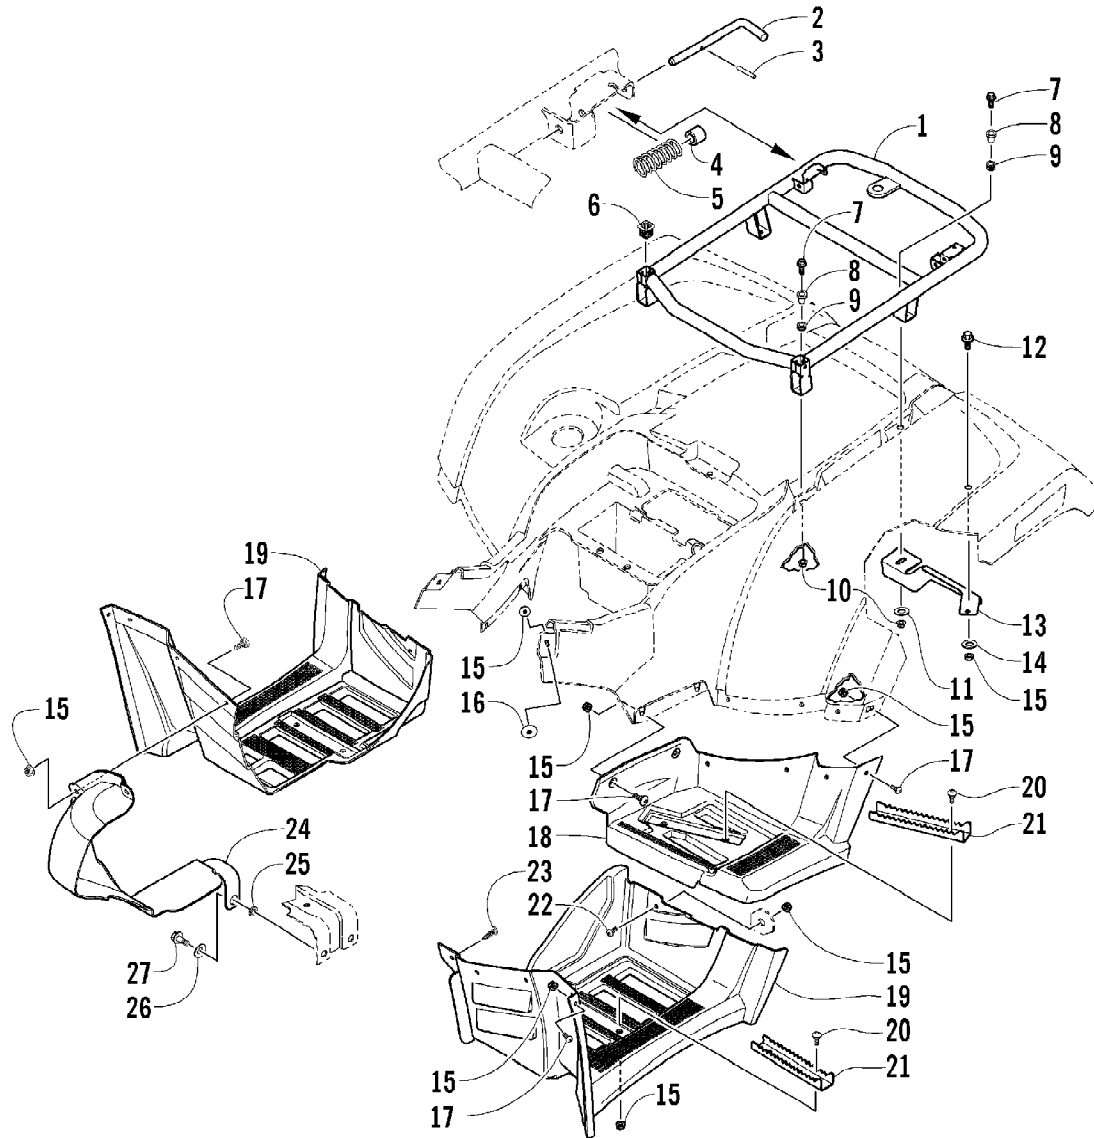

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4D) Page 9 of 114  
 REAR RACK AND FOOTWELL ASSEMBLIES

| Ref # | Part Number | Qty | S/P/F | Description                      |
|-------|-------------|-----|-------|----------------------------------|
| 1     | 2506-221    | 1   | /P    | Rack, Rear - Assembly (inc. 2-6) |
| 2     | 0541-504    | 2   |       | Pin - Assembly (inc. 3-5)        |
| 3     | 0423-635    | 2   |       | Pin, Roll                        |
| 4     | 0423-677    | 2   |       | Collar                           |
| 5     | 0423-636    | 2   |       | Spring                           |
| 6     | 0441-592    | 4   | /P    | Bushing, Rack                    |
| 7     | 8410-835    | 4   |       | Screw, Cap                       |
| 8     | 0423-669    | 4   |       | Spacer                           |
| 9     | 0423-465    | 4   |       | Grommet                          |
| 10    | 8432-802    | 4   |       | Nut, Lock                        |
| 11    | 0423-087    | 2   |       | Washer                           |
| 12    | 0423-654    | 2   |       | Screw, Shoulder                  |
| 13    | 2506-092    | 1   |       | Bracket, Rear Fender - Right     |
| 13    | 2506-093    | 1   |       | Bracket, Rear Fender - Left      |
| 14    | 8050-222    | 2   | /P    | Washer                           |
| 15    | 0423-540    | 34  |       | Nut, Lock                        |
| 16    | 0423-101    | 2   |       | Screw, Body                      |
| 17    | 0423-419    | 20  |       | Screw, Machine                   |
| 18    | 2406-042    | 1   |       | Footwell, Rear - Right           |
| 18    | 2406-043    | 1   |       | Footwell, Rear - Left            |
| 19    | 2506-193    | 1   |       | Footwell - Right                 |
| 19    | 2406-471    | 1   | /P    | Footwell - Left                  |
| 20    | 0423-355    | 8   |       | Screw, Shoulder                  |
| 21    | 1506-125    | 4   | /P    | Footpeg                          |
| 22    | 8477-620    | 2   |       | Screw, Machine                   |
| 23    | 0423-719    | 2   |       | Screw, Self-Tapping              |
| 24    | 2406-531    | 1   |       | Panel, Splash                    |
| 25    | 0405-261    | 1   |       | Bushing, Splash Panel            |
| 26    | 8050-282    | 1   | /P    | Washer                           |
| 27    | 8409-020    | 1   | /P    | Screw, Cap                       |

 
2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4D) Page 80 of 114  
REAR SUSPENSION ASSEMBLY

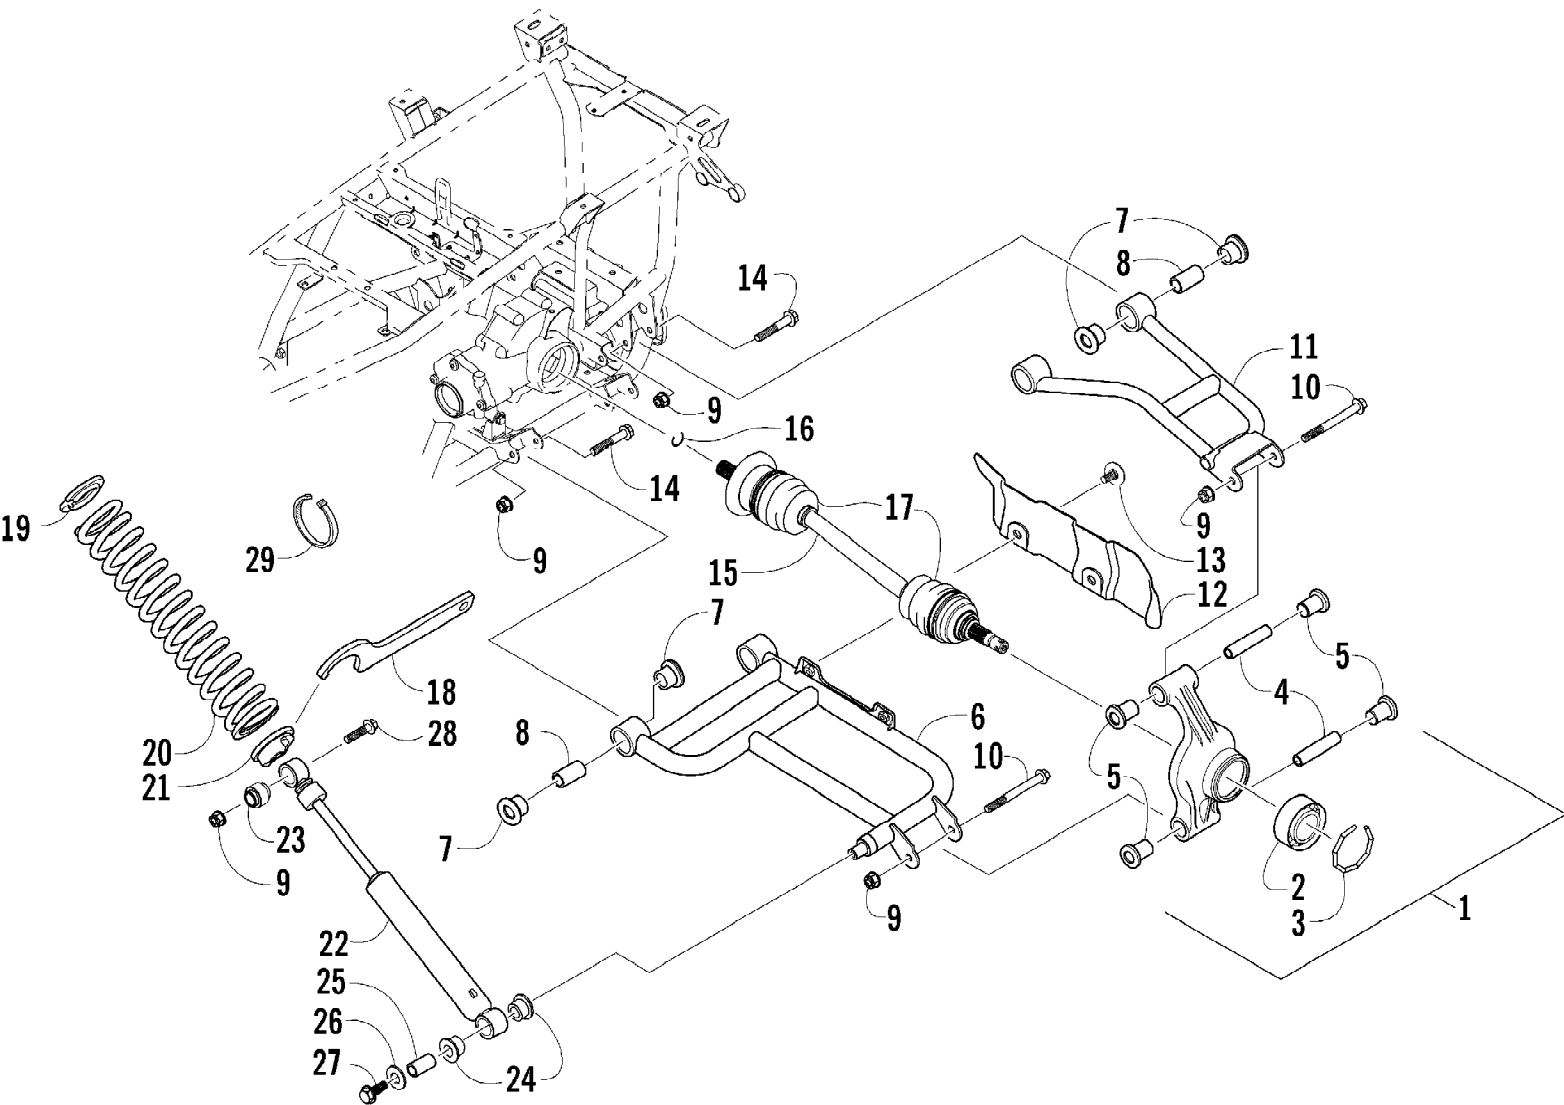

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4D) Page 81 of 114  
 REAR SUSPENSION ASSEMBLY

| Ref # | Part Number | Qty | S/P/F | Description                               |
|-------|-------------|-----|-------|-------------------------------------------|
| 1     | 0504-372    | 1   | S     | Knuckle, Right Rear - Assembly (inc. 2-5) |
| 1     | 0504-373    | 1   | S/P   | Knuckle, Left Rear - Assembly (inc. 2-5)  |
| 2     | 1402-027    | 2   | S/P   | Bearing, Wheel Hub                        |
| 3     | 0423-423    | 2   |       | Ring, Retaining                           |
| 4     | 0403-038    | 4   | S/P   | Collar, Suspension Bushing                |
| 5     | 0403-032    | 8   | S     | Bushing, Suspension                       |
| 6     | 0504-440    | 1   | S     | A-Arm, Rear - Lower Right (inc. 7-8)      |
| 6     | 0504-441    | 1   | S     | A-Arm, Rear - Lower Left (inc. 7-8)       |
| 7     | 0403-115    | 16  | S     | Bushing                                   |
| 8     | 0403-114    | 8   | S     | Collar                                    |
| 9     | 0423-744    | 14  |       | Nut, Lock                                 |
| 10    | 8409-000    | 4   |       | Screw, Cap                                |
| 11    | 0504-476    | 1   |       | A-Arm, Rear - Upper Right (inc. 7-8)      |
| 11    | 0504-477    | 1   |       | A-Arm, Rear - Upper Left (inc. 7-8)       |
| 12    | 0441-754    | 1   |       | Guard, Boot - Right                       |
| 12    | 0441-755    | 1   |       | Guard, Boot - Left                        |
| 13    | 0423-545    | 4   | /P    | Screw, Body                               |
| 14    | 8409-075    | 8   |       | Screw, Cap                                |
| 15    | 0502-811    | 2   | S     | Axle, Drive - Rear (inc. 16-17)           |
| 16    | 0441-893    | 2   | S     | Clip, Retaining                           |
| 17    | 0436-276    | 2   | S     | Repair Kit, Boot                          |
| 18    | 0441-587    | 1   |       | Wrench, Spanner                           |
| 19    | 1603-889    | 2   | /P    | Retainer, Spring                          |
| 20    | 0403-174    | 2   |       | Spring, Suspension                        |
| 21    | 0404-057    | 2   |       | Cam, Spring Adjuster                      |
| 22    | 0404-147    | 2   |       | Shock Absorber - Rear (inc. 23-25)        |
| 23    | 0403-182    | 2   |       | Bushing, Double-Bonded                    |
| 24    | 0603-955    | 4   |       | Bushing, Shock Absorber                   |
| 25    | 1603-219    | 2   | S     | Sleeve, Shock Absorber                    |
| 26    | 0423-087    | 2   |       | Washer                                    |
| 27    | 8408-820    | 2   | /P    | Screw, Cap                                |
| 28    | 8409-050    | 2   |       | Screw, Cap                                |
| 29    | 0123-788    | 2   | /P    | Tie, Cable - 8 in.                        |

 
2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT41D) Page 2 of 114  
ROCKER ARM COVER AND BREATHER SYSTEM ASSEMBLIES

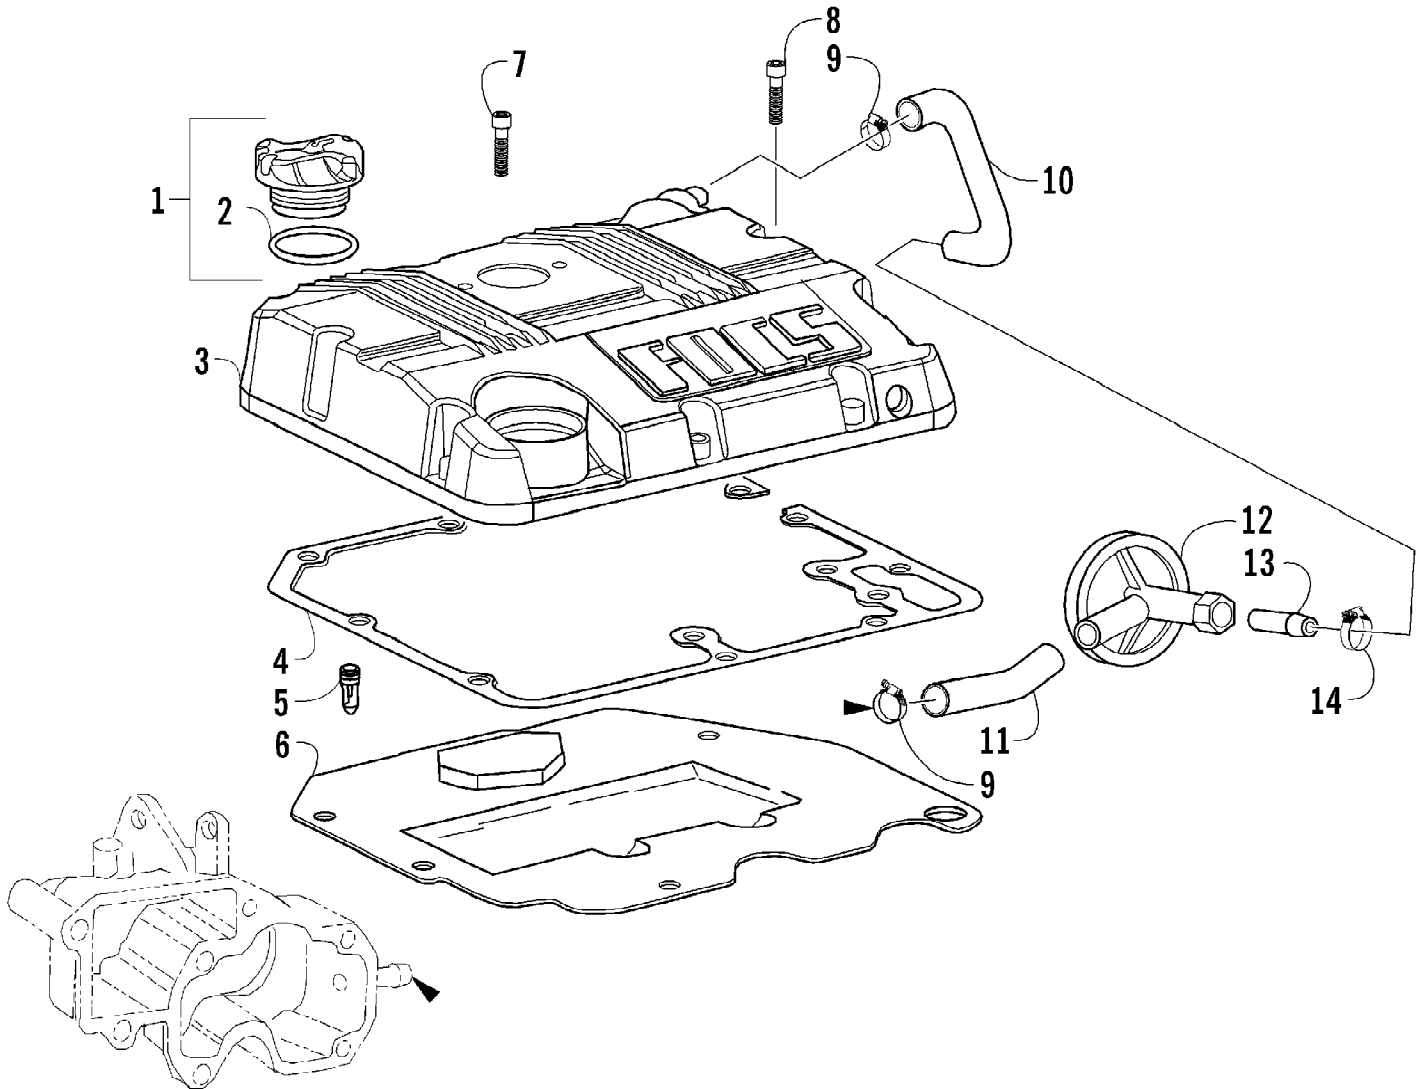

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4DUSP) Page 3 of 114  
 ROCKER ARM COVER AND BREATHER SYSTEM ASSEMBLIES

| Ref # | Part Number | Qty | S/P/F | Description              |
|-------|-------------|-----|-------|--------------------------|
| 1     | 3206-081    | 1   |       | Cap, Oil Filler (inc. 2) |
| 2     | 3206-087    | 1   |       | O-Ring                   |
| 3     | 3206-080    | 1   |       | Cover, Rocker Arm        |
| 4     | 3206-086    | 1   |       | Gasket                   |
| 5     | 3206-084    | 1   |       | Connection               |
| 6     | 3206-085    | 1   |       | Separator                |
| 7     | 3206-083    | 2   |       | Screw                    |
| 8     | 3206-082    | 8   |       | Screw                    |
| 9     | 3206-200    | 4   |       | Clamp                    |
| 10    | 3206-205    | 1   |       | Hose, Connection         |
| 11    | 3206-202    | 1   |       | Hose, Drain              |
| 12    | 3206-201    | 1   |       | Valve, Suction           |
| 13    | 3206-203    | 1   |       | Tube, Valve              |
| 14    | 3206-204    | 1   |       | Clamp                    |

 2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT41D) Page 84 of 114  
ROCKER ARM, VALVES, AND OIL SWITCH ASSEMBLIES

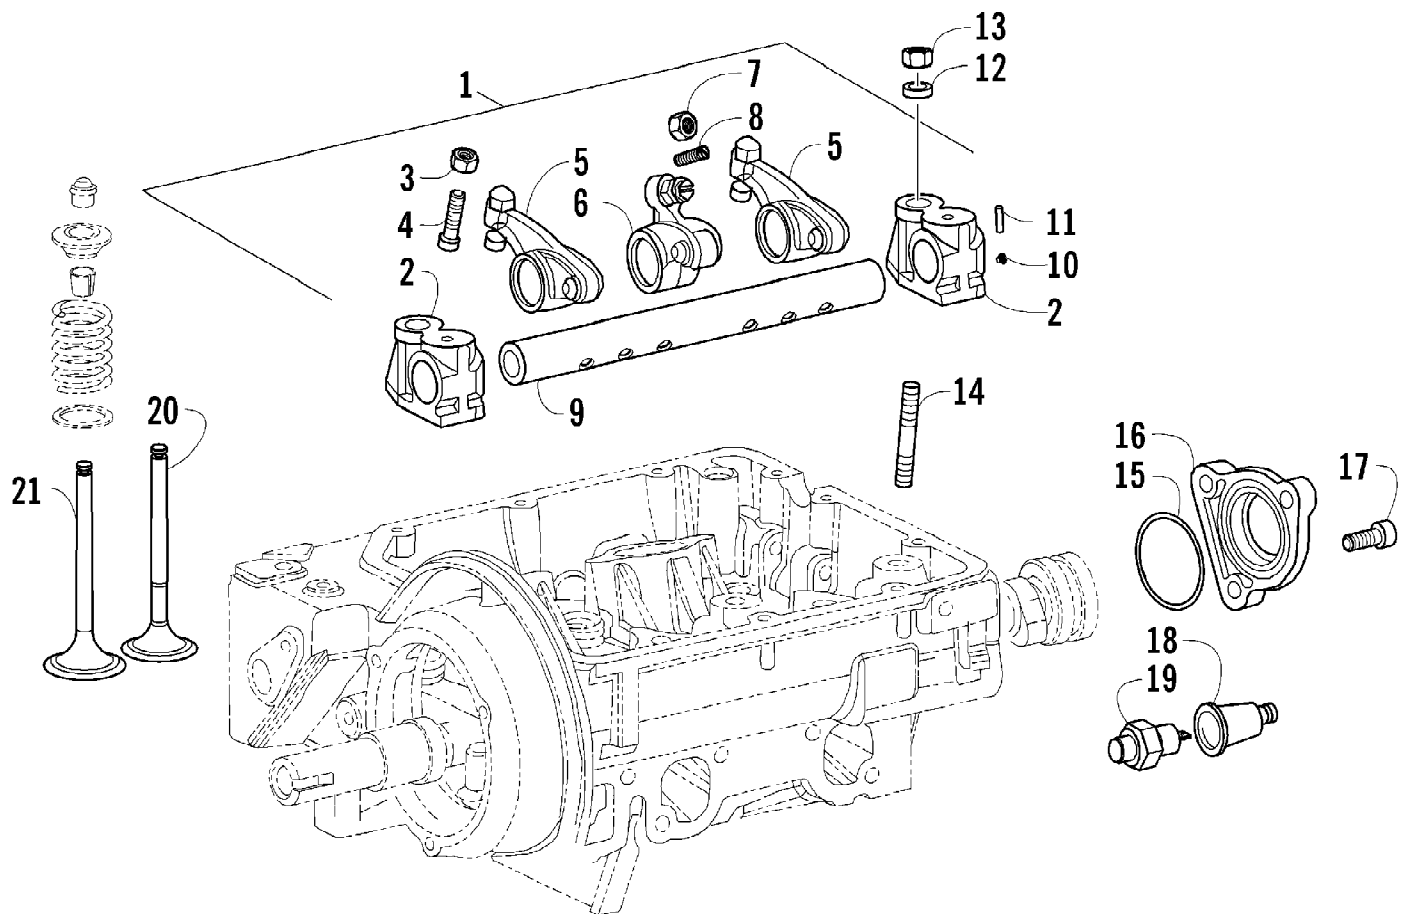


2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT41008)  
 ROCKER ARM, VALVES, AND OIL SWITCH ASSEMBLIES

Page 85 of 114

| Ref # | Part Number | Qty | S/P/F | Description                        |
|-------|-------------|-----|-------|------------------------------------|
| 1     | 3206-135    | 1   |       | Arm, Rocker - Assembly (inc. 2-11) |
| 2     | 3206-141    | 2   |       | Support                            |
| 3     | 3206-137    | 4   |       | Nut                                |
| 4     | 3206-136    | 4   |       | Screw                              |
| 5     | 3206-134    | 4   |       | Arm, Rocker - Intake/Exhaust       |
| 6     | 3206-140    | 2   |       | Arm, Rocker - Injection Pump       |
| 7     | 3206-139    | 2   |       | Nut                                |
| 8     | 3206-138    | 2   |       | Screw                              |
| 9     | 3206-144    | 1   |       | Shaft, Rocker Arm                  |
| 10    | 3206-146    | 2   |       | Plug                               |
| 11    | 3206-145    | 1   |       | Pin, Lock                          |
| 12    | 3206-064    | 3   |       | Washer                             |
| 13    | 3206-142    | 3   |       | Nut                                |
| 14    | 3206-143    | 3   |       | Stud, Bolt                         |
| 15    | 3206-313    | 1   |       | O-Ring                             |
| 16    | 3206-314    | 1   |       | Flange                             |
| 17    | 3206-082    | 3   |       | Screw                              |
| 18    | 3206-305    | 1   |       | Elbow, Pipe                        |
| 19    | 3206-304    | 1   |       | Switch, Oil                        |
| 20    | 3206-150    | 2   |       | Valve, Exhaust                     |
| 21    | 3206-151    | 2   |       | Valve, Intake                      |

 
2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT410-00) Page 86 of 114  
SEAT ASSEMBLY

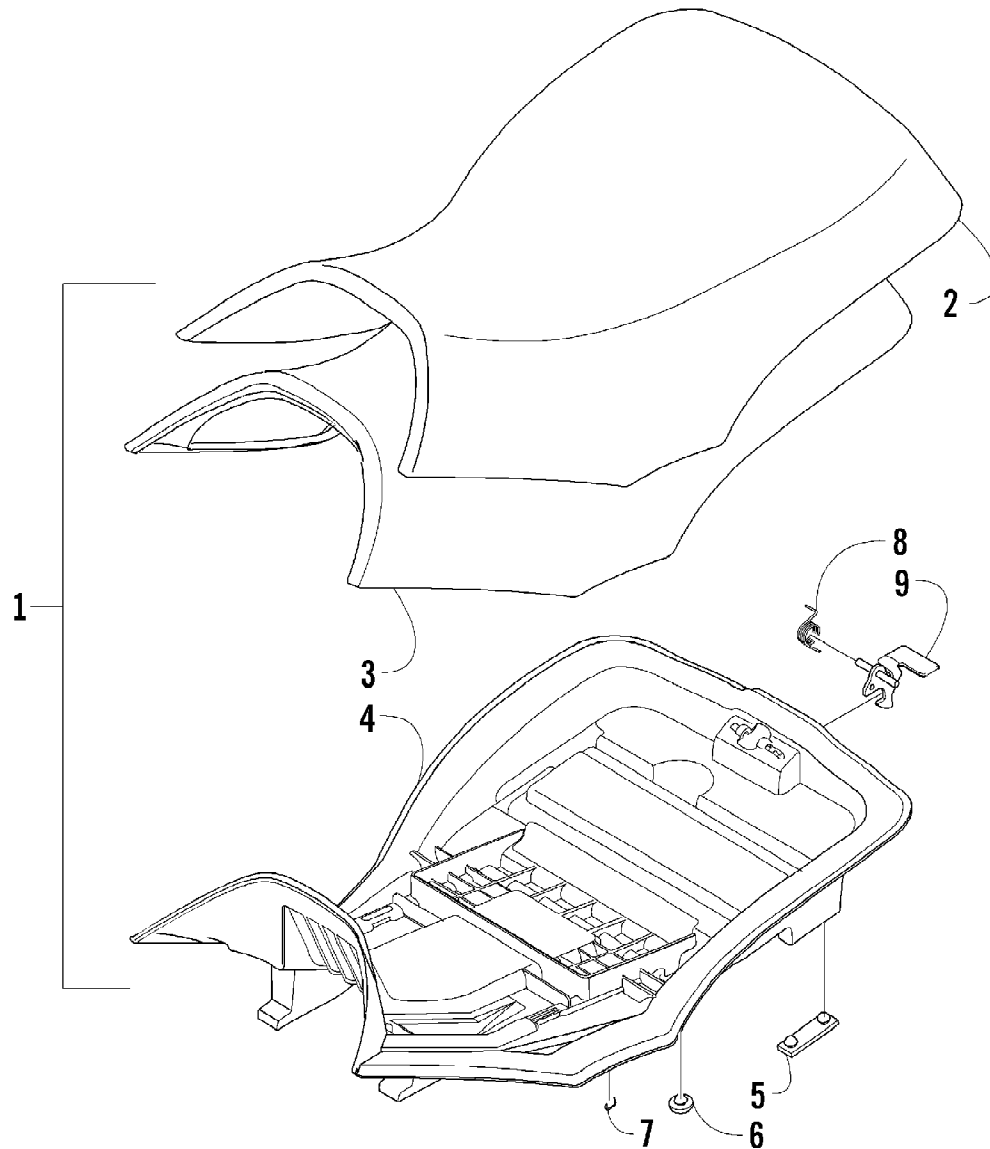


2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4DUSP)  
 SEAT ASSEMBLY Page 87 of 114

| Ref # | Part Number | Qty | S/P/F | Description                      |
|-------|-------------|-----|-------|----------------------------------|
| 1     | 1506-937    | 1   | S/P   | Seat Assembly (inc. 2-9)         |
| 2     | 1506-209    | 1   |       | Cover, Seat                      |
| 3     | 1506-208    | 1   |       | Foam, Seat                       |
| 4     | 2406-144    | 1   | S/P   | Base, Seat - Assembly (inc. 5-6) |
| 5     | 0406-879    | 2   |       | Bumper, Seat - Rear              |
| 6     | 0406-877    | 4   | /P    | Bumper, Seat - Front             |
| 7     | 0624-263    | AR  |       | Staple                           |
| 8     | 1406-592    | 1   | /P    | Spring, Seat Latch               |
| 9     | 1506-156    | 1   |       | Latch, Seat                      |

 2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4D) Page 8 of 114  
SHIFT LEVER ASSEMBLY

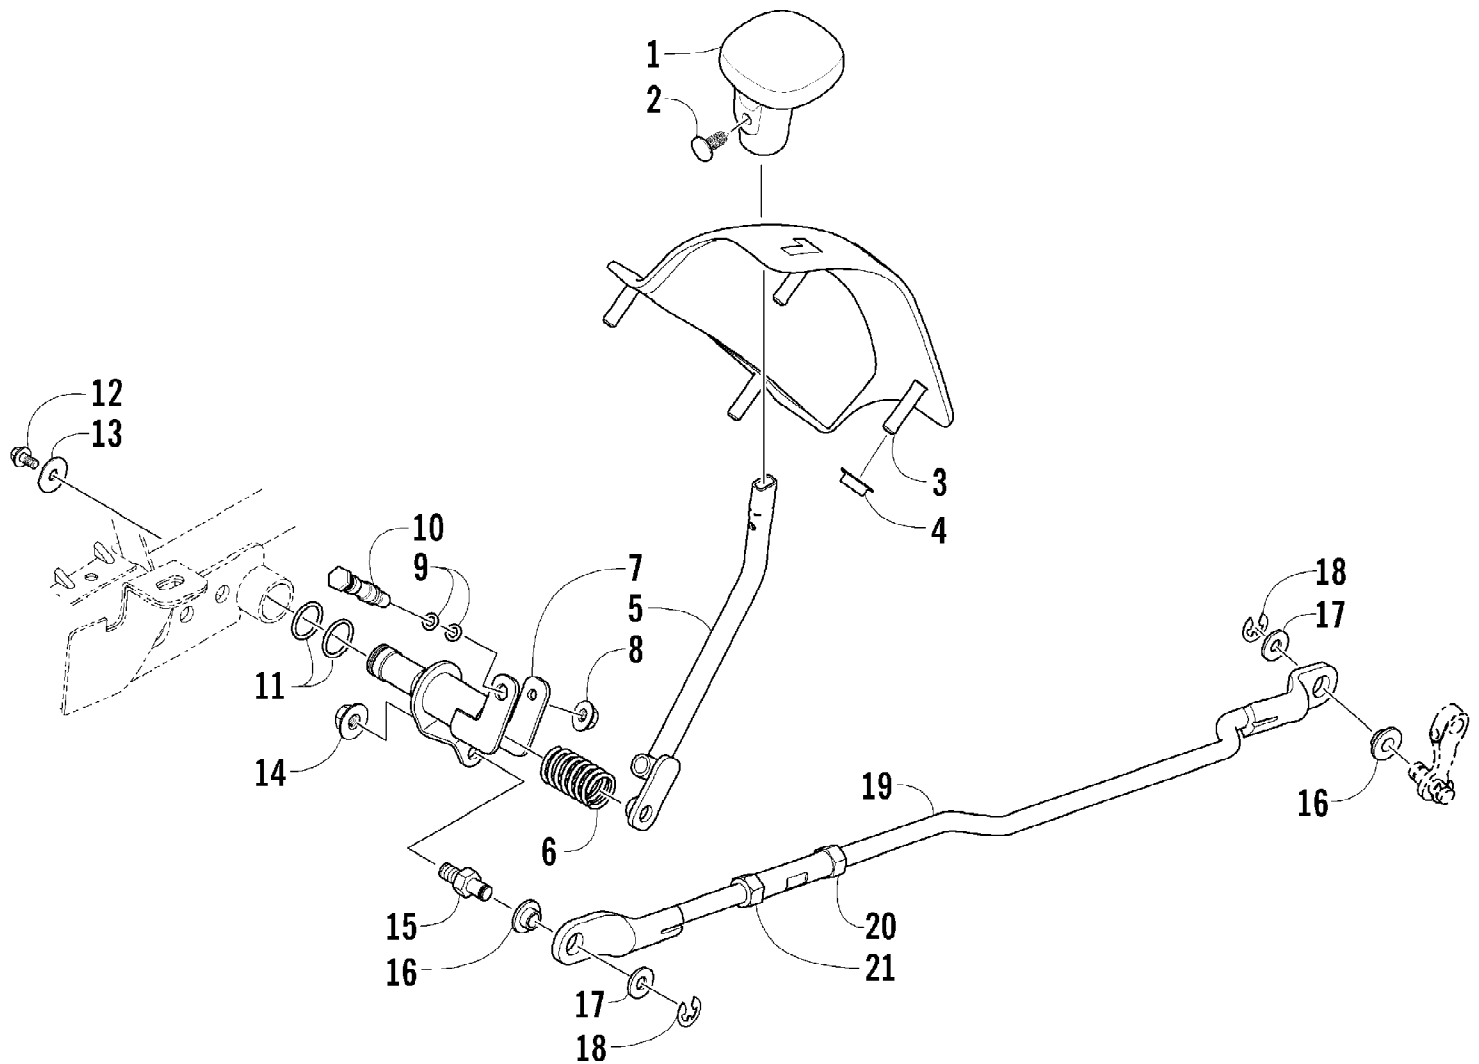


| Ref # | Part Number | Qty | S/P/F | Description                            |
|-------|-------------|-----|-------|----------------------------------------|
| 1     | 0402-843    | 1   | /P    | Knob, Shift Lever                      |
| 2     | 0423-345    | 1   |       | Clip, Push                             |
| 3     | 1402-576    | 1   |       | Plate, Shift                           |
| 4     | 0423-357    | 4   |       | Nut, Stamped                           |
| 5     | 0502-659    | 1   |       | Lever, Shift                           |
| 6     | 0402-678    | 1   | /P    | Spring, Shift Lever                    |
| 7     | 1502-012    | 1   |       | Axle, Shift Lever                      |
| 8     | 8424-602    | 1   | /P    | Nut                                    |
| 9     | 0423-182    | 2   | /P    | O-Ring                                 |
| 10    | 0402-675    | 1   |       | Axle, Pivot                            |
| 11    | 0423-299    | 2   | /P    | O-Ring                                 |
| 12    | 8408-812    | 1   |       | Screw, Cap                             |
| 13    | 0423-087    | 1   |       | Washer                                 |
| 14    | 8424-802    | 1   |       | Nut, Hex                               |
| 15    | 1402-621    | 1   |       | Pin, Mounting - Shift Linkage          |
| 16    | 0423-091    | 2   |       | Bushing, Shift Linkage                 |
| 17    | 0623-094    | 2   |       | Washer                                 |
| 18    | 0423-169    | 2   | /P    | E-Ring                                 |
| 19    | 1502-226    | 1   |       | Linkage, Shift - Assembly (inc. 20-21) |
| 20    | 0123-917    | 1   | /P    | Nut, Hex - Left-Hand Thread            |
| 21    | 0623-294    | 1   |       | Nut, Hex - Right-Hand Thread           |

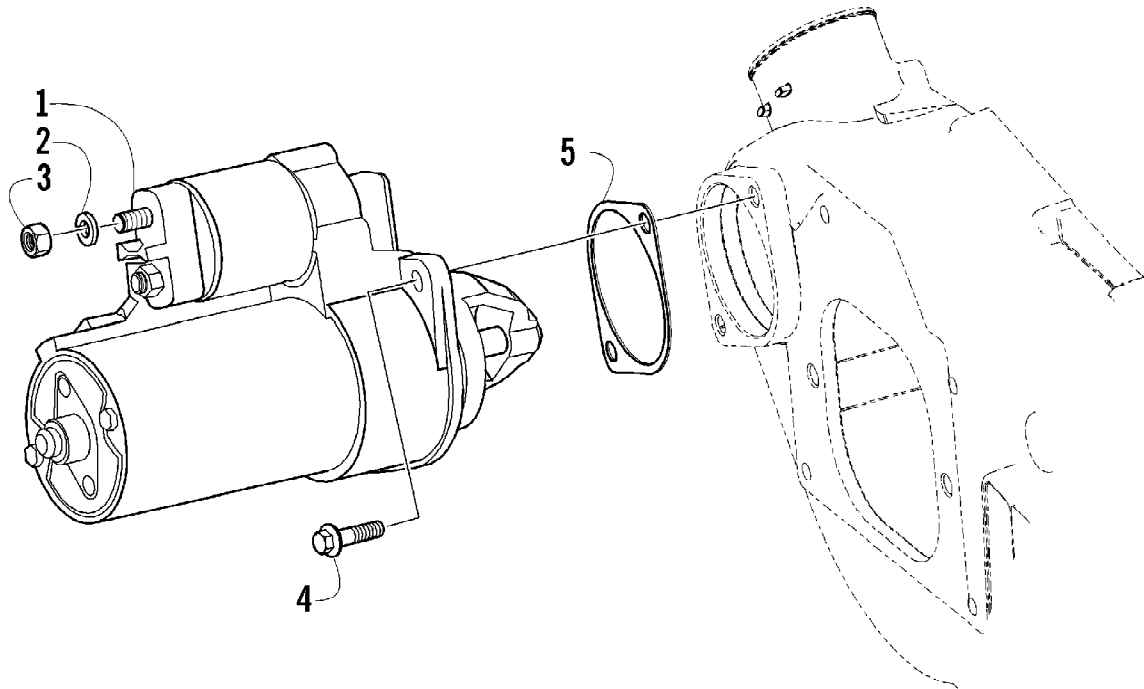 

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4D) Page 91 of 114  
STARTER MOTOR ASSEMBLY


| Ref # | Part Number | Qty | S/P/F | Description     |
|-------|-------------|-----|-------|-----------------|
| 1     | 3206-319    | 1   |       | Motor, Starter  |
| 2     | 3206-322    | 1   |       | Washer, Lock    |
| 3     | 3206-321    | 1   |       | Nut             |
| 4     | 8409-025    | 2   |       | Screw, Cap      |
| 5     | 1402-525    | 1   |       | Gasket, Starter |

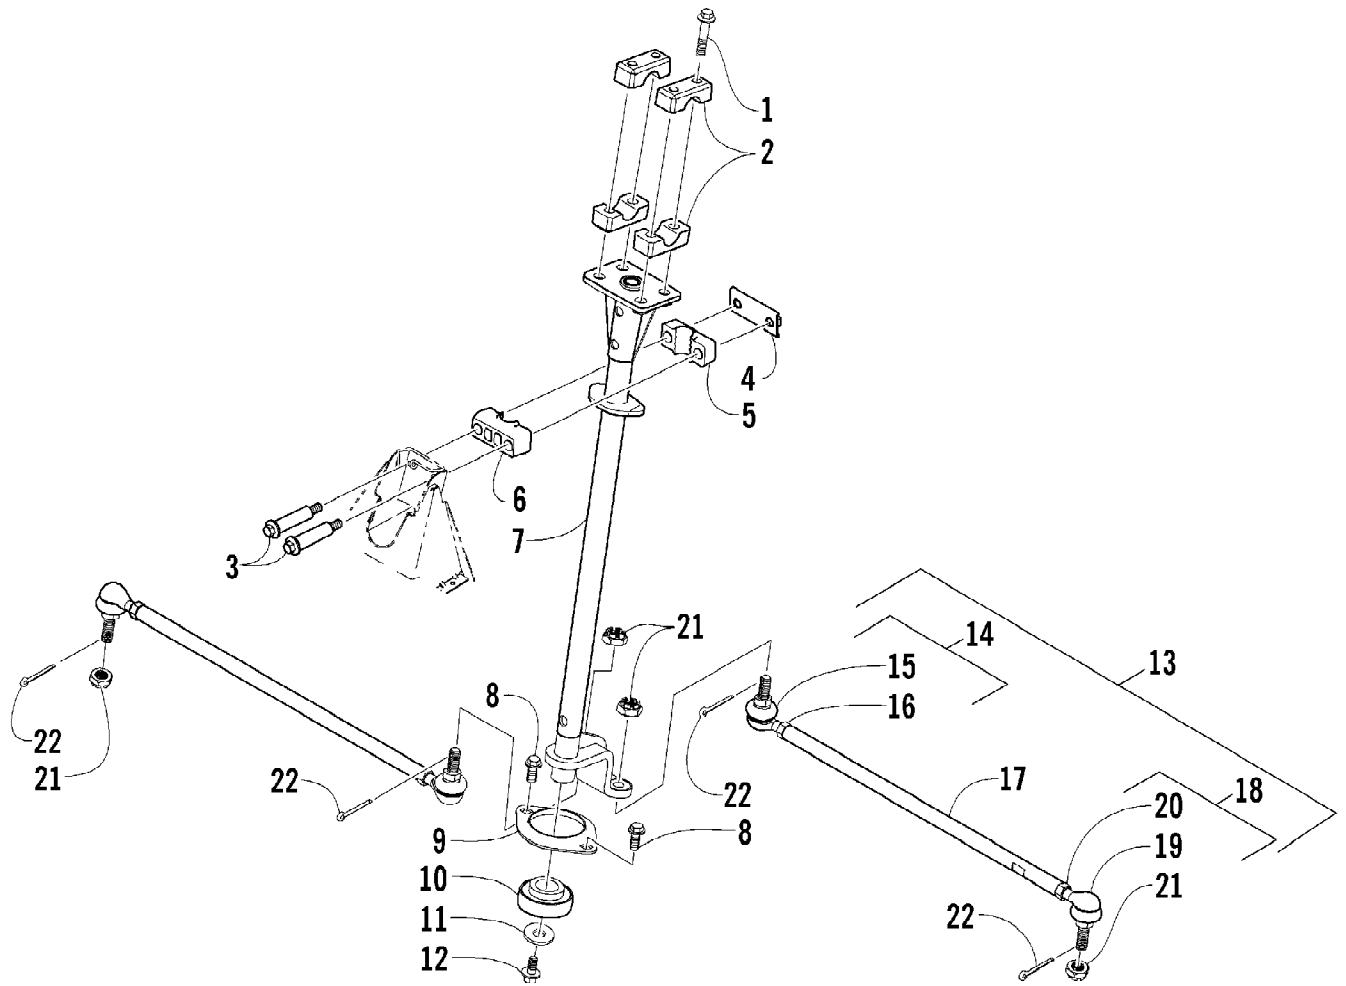 

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4D) Page 93 of 114  
 STEERING ASSEMBLY

| Ref # | Part Number | Qty | S/P/F | Description                                                           |
|-------|-------------|-----|-------|-----------------------------------------------------------------------|
| 1     | 8408-860    | 4   |       | Screw, Cap                                                            |
| 2     | 0405-035    | 4   |       | Cap, Steering Adjuster                                                |
| 3     | 0423-505    | 2   |       | Screw, Shoulder                                                       |
| 4     | 0505-484    | 1   |       | Cap, Housing                                                          |
| 5     | 0405-138    | 1   |       | Housing, Lower                                                        |
| 6     | 0405-139    | 1   |       | Housing, Upper                                                        |
| 7     | 0505-451    | 1   | S     | Post, Steering                                                        |
| 8     | 8408-816    | 2   |       | Screw, Cap                                                            |
| 9     | 0602-233    | 1   |       | Flange, Bearing                                                       |
| 10    | 0405-052    | 1   |       | Bearing w/Inverted Oil Seal                                           |
| 11    | 0423-073    | 1   |       | Washer                                                                |
| 12    | 8409-020    | 1   | /P    | Screw, Cap                                                            |
| 13    | 0505-499    | 2   | /P    | Tie Rod - Assembly (inc. 14-20)                                       |
| 14    | 0505-511    | 2   | /P    | End, Tie Rod - Left-Hand Thread - Kit (inc. 15-16 and two No. 21-22)  |
| 15    | 0           | 2   | F     | End, Tie Rod - Left Hand Thread                                       |
| 16    | 0423-013    | 2   |       | Nut - Left-Hand Thread                                                |
| 17    | 0405-281    | 2   | /P    | Tie Rod                                                               |
| 18    | 0505-510    | 2   | /P    | End, Tie Rod - Right-Hand Thread - Kit (inc. 19-20 and two No. 21-22) |
| 19    | 0           | 2   | F     | End, Tie Rod - Right-Hand Thread                                      |
| 20    | 8420-002    | 2   | /P    | Nut - Right-Hand Thread                                               |
| 21    | 0423-157    | 4   |       | Nut, Lock                                                             |
| 22    | 0623-175    | 4   |       | Pin, Cotter                                                           |

 
2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT410-00) Page 94 of 114  
TAILLIGHT ASSEMBLY

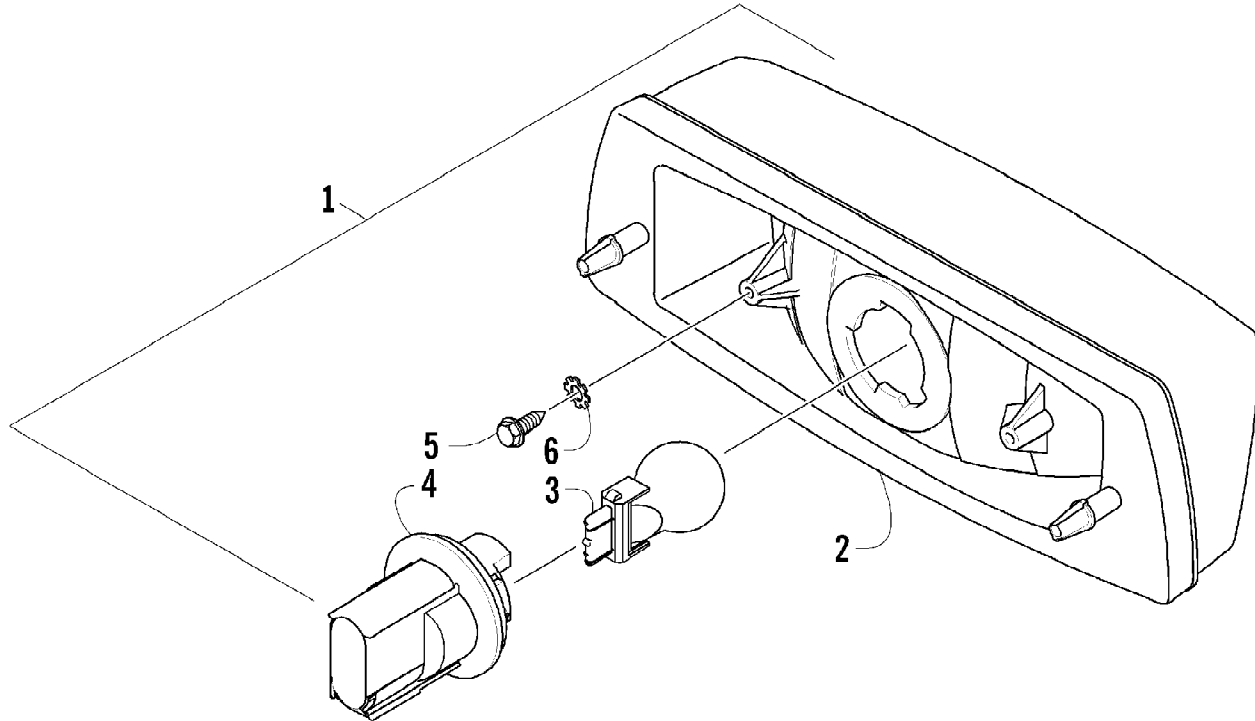

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4D) Page 95 of 114  
 TAILLIGHT ASSEMBLY


| Ref # | Part Number | Qty | S/P/F | Description                   |
|-------|-------------|-----|-------|-------------------------------|
| 1     | 0509-022    | 1   |       | Taillight Assembly (inc. 2-4) |
| 2     | 0509-025    | 1   |       | Housing, Taillight            |
| 3     | 0409-056    | 1   |       | Bulb, Taillight               |
| 4     | 0409-057    | 1   |       | Socket, Taillight             |
| 5     | 0623-301    | 2   | /P    | Screw, Self-Tapping           |
| 6     | 8053-212    | 2   | /P    | Washer, Lock - External Tooth |

 2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT41000) Page 96 of 114  
THERMOSTAT, WATER INLET FLANGE, AND OIL LEVEL STICK ASSEMBLIES

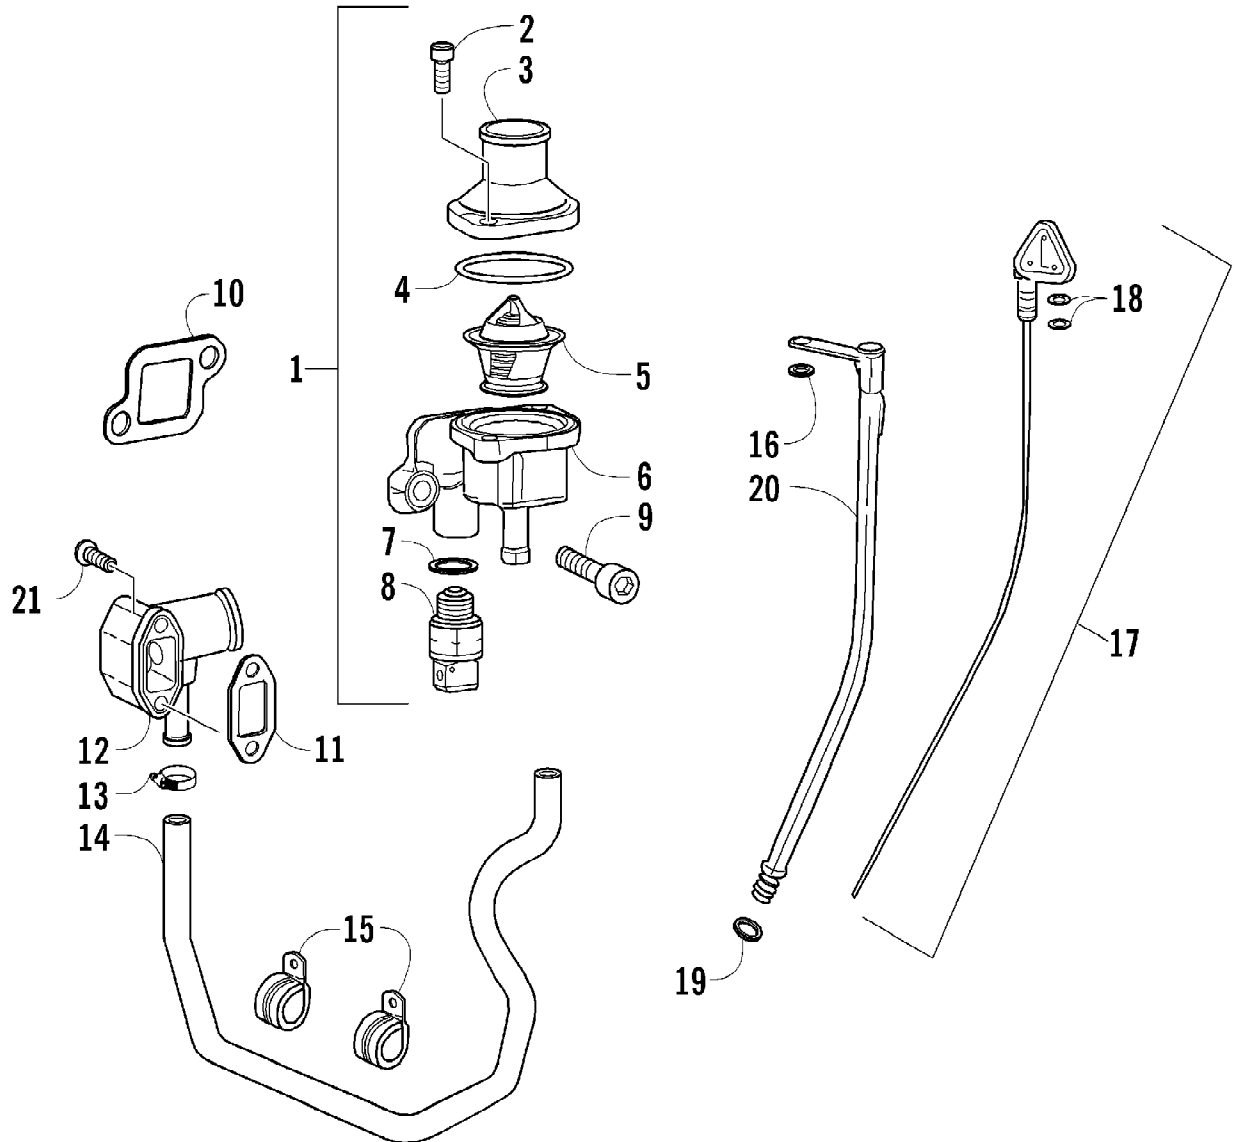

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4D) Page 9 of 114  
 THERMOSTAT, WATER INLET FLANGE, AND OIL LEVEL STICK ASSEMBLIES


| Ref # | Part Number | Qty | S/P/F | Description                      |
|-------|-------------|-----|-------|----------------------------------|
| 1     | 3206-262    | 1   |       | Thermostat - Assembly (inc. 2-8) |
| 2     | 3206-169    | 2   |       | Screw                            |
| 3     | 3206-259    | 1   |       | Cover, Thermostat                |
| 4     | 3206-260    | 1   |       | O-Ring                           |
| 5     | 3206-261    | 1   |       | Thermostat                       |
| 6     | 3206-263    | 1   |       | Body, Thermostat - Assembly      |
| 7     | 3206-206    | 1   |       | Gasket                           |
| 8     | 3206-265    | 1   |       | Sensor, Water Temperature        |
| 9     | 3206-266    | 2   |       | Screw                            |
| 10    | 3206-264    | 1   |       | Gasket                           |
| 11    | 3206-268    | 1   |       | Gasket                           |
| 12    | 3206-269    | 1   |       | Flange                           |
| 13    | 3206-200    | 2   |       | Clamp                            |
| 14    | 0410-111    | 1   |       | Hose                             |
| 15    | 3206-190    | 2   |       | Clamp                            |
| 16    | 3206-199    | 1   |       | Washer                           |
| 17    | 3206-197    | 1   |       | Stick, Oil Level (inc. 18)       |
| 18    | 3206-198    | 2   |       | Seal                             |
| 19    | 3206-195    | 1   |       | O-Ring                           |
| 20    | 3206-196    | 1   |       | Guard, Oil Level Stick           |
| 21    | 3206-267    | 2   |       | Screw                            |

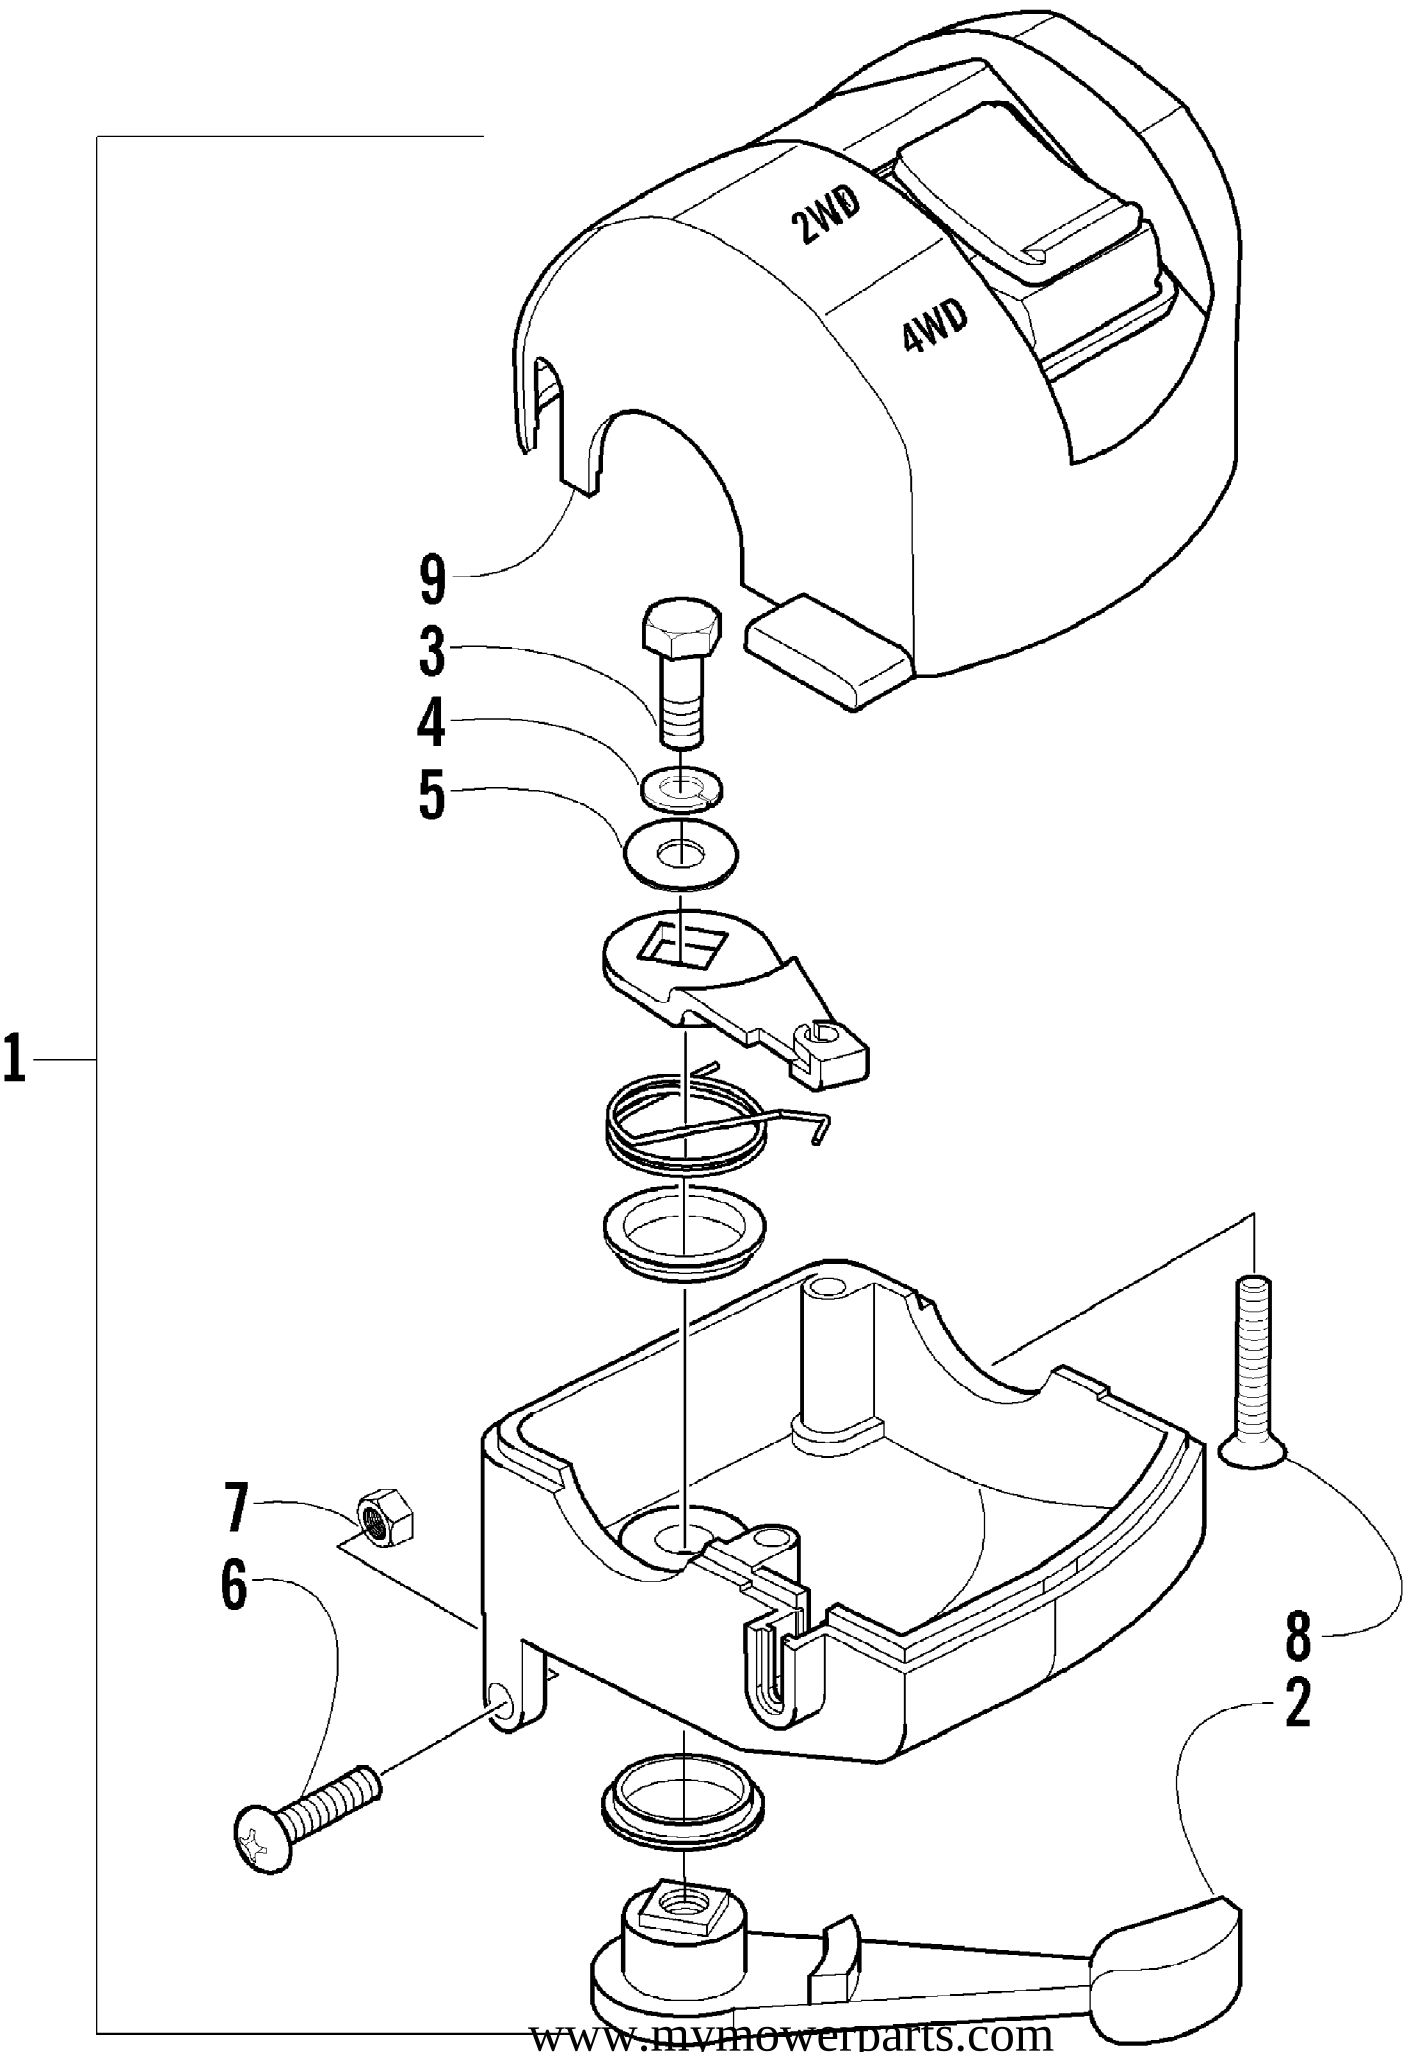 

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT41000) Page 99 of 114  
 THROTTLE CASE ASSEMBLY

| Ref # | Part Number | Qty | S/P/F | Description                          |
|-------|-------------|-----|-------|--------------------------------------|
| 1     | 0509-012    | 1   |       | Case, Throttle - Assembly (inc. 2-9) |
| 2     | 3409-001    | 1   |       | Lever                                |
| 3     | 3004-533    | 1   | S/P   | Screw, Cap                           |
| 4     | 3004-447    | 1   | /P    | Washer, Lock                         |
| 5     | 3003-030    | 1   | /P    | Washer                               |
| 6     | 3423-014    | 1   |       | Screw                                |
| 7     | 3423-327    | 1   |       | Nut                                  |
| 8     | 3423-199    | 2   |       | Screw                                |
| 9     | 0409-048    | 1   |       | Cover, Throttle w/Switch             |

 
2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4245R) Page 10 of 114  
THROTTLE CONTROL AND LOCKED TORQUE DEVICE ASSEMBLIES

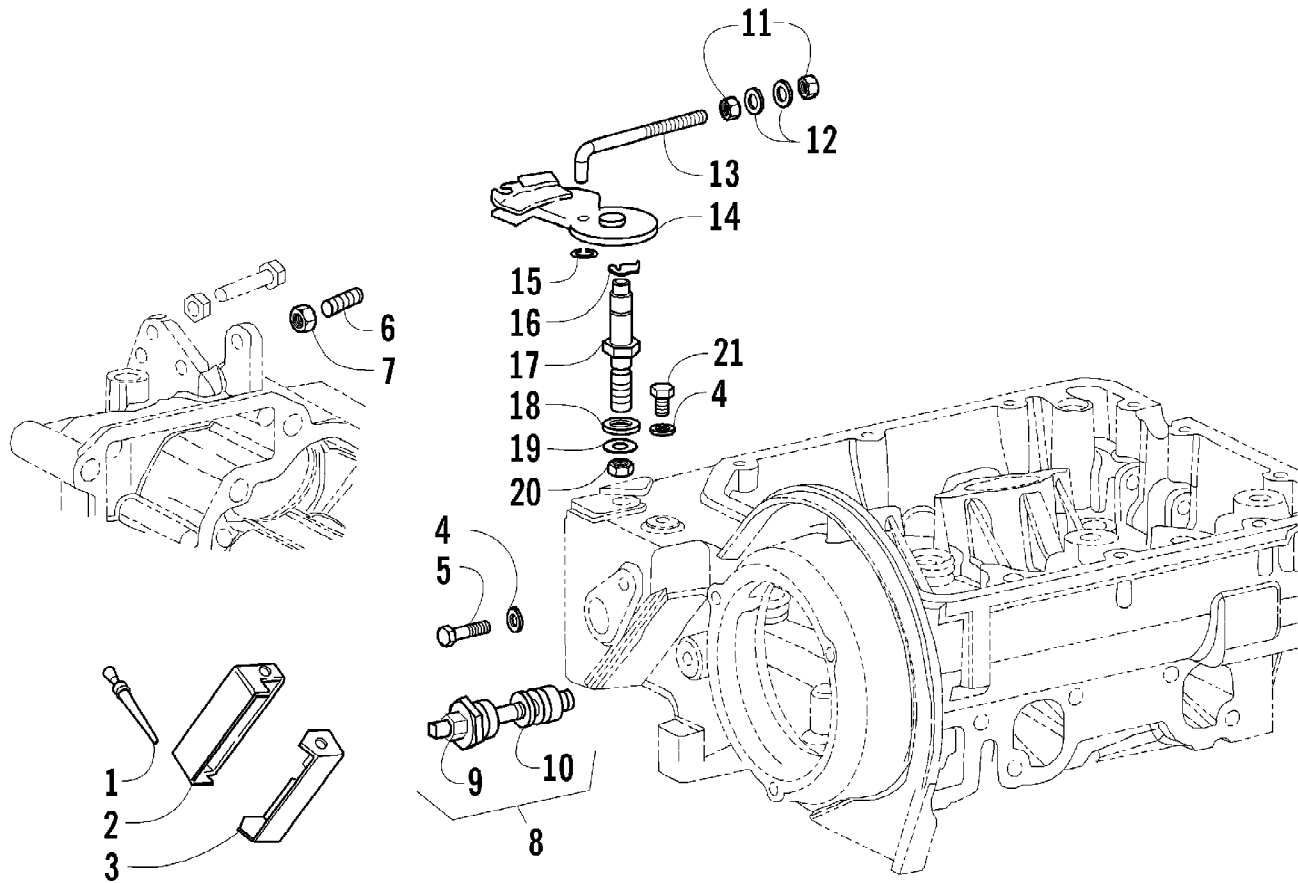

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4DUSR)  
 THROTTLE CONTROL AND LOCKED TORQUE DEVICE ASSEMBLIES Page 1 of 114

| Ref # | Part Number | Qty | S/P/F | Description                       |
|-------|-------------|-----|-------|-----------------------------------|
| 1     | 3206-247    | 3   |       | Nail                              |
| 2     | 3206-251    | 1   |       | Plate, Safety                     |
| 3     | 3206-250    | 1   |       | Plate, Safety                     |
| 4     | 3206-007    | 2   |       | Gasket, Copper                    |
| 5     | 3206-252    | 1   |       | Bolt                              |
| 6     | 3206-249    | 1   |       | Screw                             |
| 7     | 3206-248    | 1   |       | Nut                               |
| 8     | 3206-236    | 1   |       | Device, Locked Torque (inc. 9-10) |
| 9     | 0           | 1   | F     | Nut                               |
| 10    | 3206-235    | 1   |       | Gasket                            |
| 11    | 3206-237    | 2   |       | Nut                               |
| 12    | 3206-238    | 2   |       | Washer                            |
| 13    | 3206-239    | 1   |       | Rod, Tie                          |
| 14    | 3206-241    | 1   |       | Lever, Throttle Control           |
| 15    | 3206-242    | 1   |       | Circlip                           |
| 16    | 3206-243    | 1   |       | Circlip                           |
| 17    | 3206-244    | 1   |       | Pin                               |
| 18    | 3206-253    | 1   |       | Washer                            |
| 19    | 3206-246    | 1   |       | Seal, Oil                         |
| 20    | 3206-245    | 1   |       | Nut                               |
| 21    | 3206-240    | 2   |       | Bolt                              |

 
2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4205R) 2 of 114  
TOP END GASKET SET ASSEMBLY

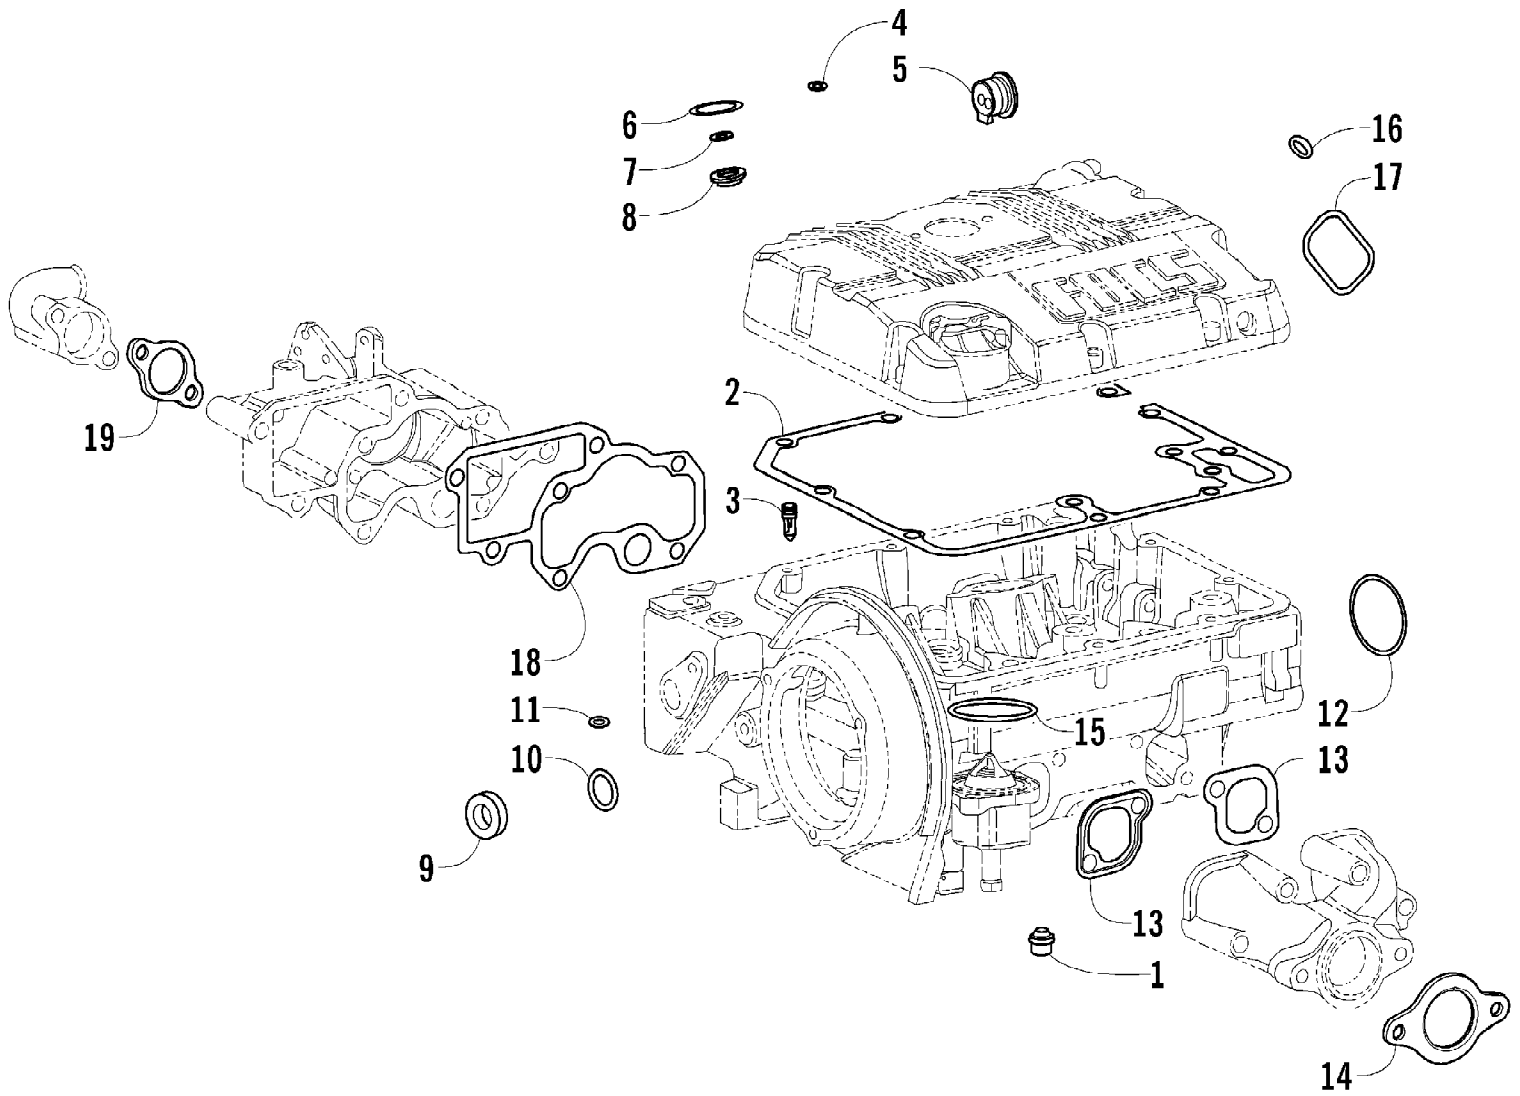

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT420SR)  
 TOP END GASKET SET ASSEMBLY Page 3 of 114

| Ref # | Part Number | Qty | S/P/F | Description                        |
|-------|-------------|-----|-------|------------------------------------|
|       | 3206-328    | 1   |       | Top End Gasket Set                 |
| 1     | 3206-152    | 4   |       | Retainer, Valve - Cylinder Head    |
| 2     | 3206-086    | 1   |       | Gasket, Rocker Arm Cover           |
| 3     | 3206-084    | 1   |       | Connection, Rocker Arm Cover       |
| 4     | 3206-095    | 4   |       | Seal, Ring - Delivery Pipe         |
| 5     | 3206-094    | 1   |       | Seal, Delivery Pipe                |
| 6     | 3206-122    | 2   |       | O-Ring, Injection Nozzle           |
| 7     | 3206-124    | 2   |       | Gasket, Copper - Injection Nozzle  |
| 8     | 3206-059    | 2   |       | Arrester, Spark - Injection Nozzle |
| 9     | 3206-208    | 1   |       | Ring, Seal - Governor Cover        |
| 10    | 3206-210    | 1   |       | Seal, Oil - Governor Cover         |
| 11    | 3206-226    | 1   |       | Seal, Governor Lever               |
| 12    | 3206-313    | 1   |       | O-Ring, Cylinder Head Flange       |
| 13    | 3206-291    | 2   |       | Gasket, Exhaust Manifold           |
| 14    | 3206-296    | 1   | /P    | Gasket, Exhaust                    |
| 15    | 3206-260    | 1   |       | O-Ring, Thermostat                 |
| 16    | 3206-010    | 4   |       | Washer, Crush                      |
| 17    | 3206-256    | 1   |       | O-Ring, Fuel Feed Pump             |
| 18    | 3206-277    | 1   |       | Gasket, Intake Manifold            |
| 19    | 3206-289    | 1   |       | Gasket, Intake Flange              |

 2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4) **Page 4 of 114**  
TRANSMISSION LEFT-SIDE ASSEMBLY

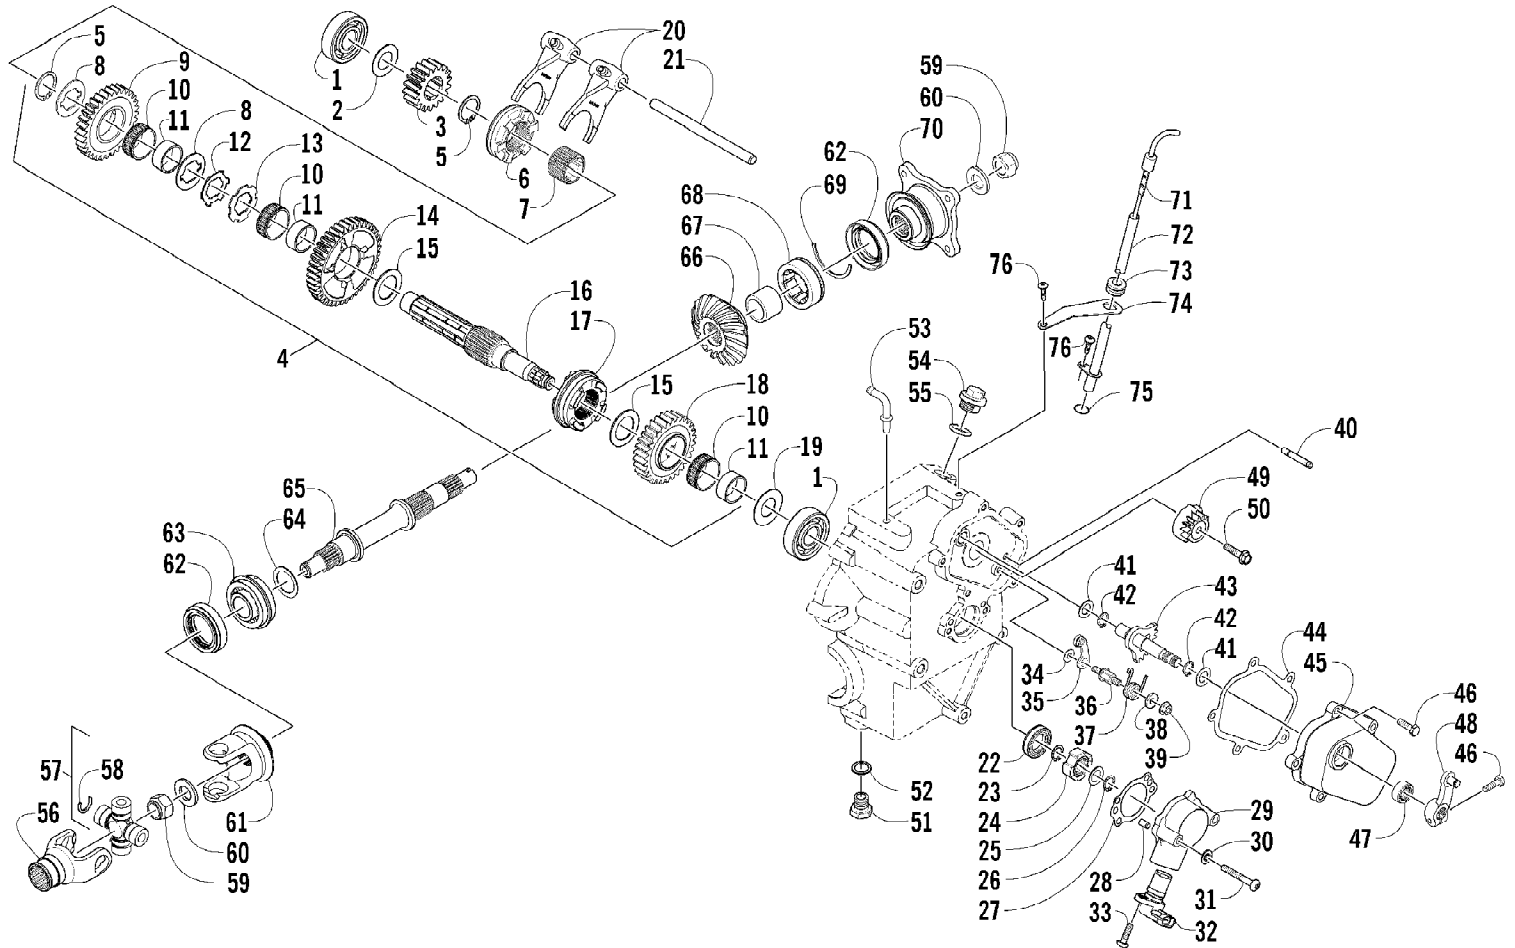


2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4) Page 105 of 114  
TRANSMISSION LEFT-SIDE ASSEMBLY

| Ref # | Part Number | Qty | S/P/F | Description                             |
|-------|-------------|-----|-------|-----------------------------------------|
| 1     | 0832-014    | 2   | S     | Bearing                                 |
| 2     | 0828-010    | 1   |       | Washer, Thrust - Secondary Transmission |
| 3     | 1402-558    | 1   |       | Gear, Drive - No. 2 (18T)               |
| 4     | 1502-149    | 1   | S     | Countershaft (inc. 5-18)                |
| 5     | 0831-011    | 2   |       | Ring, Retaining                         |
| 6     | 0822-014    | 1   |       | Dog, Reverse Gear                       |
| 7     | 0822-045    | 1   |       | Insert, Gear                            |
| 8     | 0828-008    | 2   |       | Washer, Secondary Transmission          |
| 9     | 0822-013    | 1   |       | Gear, Reverse Driven                    |
| 10    | 0832-011    | 3   |       | Bearing                                 |
| 11    | 0822-005    | 3   |       | Bushing                                 |
| 12    | 0828-015    | 1   |       | Washer, Lock - Secondary Transmission   |
| 13    | 0828-014    | 1   |       | Washer, Secondary Transmission          |
| 14    | 0822-004    | 1   |       | Gear, Driven - Low (40T)                |
| 15    | 0822-046    | 2   |       | Shim, Drive Gear Spacer                 |
| 16    | 0822-003    | 1   |       | Countershaft                            |
| 17    | 0822-007    | 1   |       | Dog, Sliding Driven Gear - High/Low     |
| 18    | 0822-006    | 1   |       | Gear, Driven - High (30T)               |
| 19    | 0828-011    | 1   |       | Washer                                  |
| 20    | 0818-072    | 2   | /P    | Fork, Shift                             |
| 21    | 0818-006    | 1   |       | Shaft, Shift Fork                       |
| 22    | 0822-052    | 1   |       | Seal, Countershaft - Right              |
| 23    | 0831-040    | 1   |       | Ring, External Retaining                |
| 24    | 0822-050    | 1   |       | Trigger, Speedometer Sensor             |
| 25    | 0828-069    | 1   |       | Washer, Thrust                          |
| 26    | 0831-039    | 1   |       | Ring, External Retaining                |
| 27    | 0830-129    | 1   |       | Gasket, Odometer Drive                  |
| 28    | 0829-023    | 2   |       | Pin, Solid Dowel                        |
| 29    | 0822-049    | 1   |       | Housing, Speedometer Sensor             |
| 30    | 0830-107    | 2   |       | Seal, Fastener                          |
| 31    | 8468-645    | 2   |       | Screw, Machine                          |
| 32    | 0824-042    | 1   | /P    | Sensor, Speedometer                     |
| 33    | 8468-620    | 1   | /P    | Screw, Machine                          |
| 34    | 0828-038    | 1   |       | Washer                                  |
| 35    | 0818-002    | 1   |       | Stopper, Swing Arm - Cam Assembly       |
| 36    | 0818-004    | 1   |       | Support, Cam Stopper                    |
| 37    | 0818-028    | 1   |       | Spring, Torsion - Cam Arm               |
| 38    | 0828-035    | 1   |       | Washer                                  |
| 39    | 8424-602    | 1   | /P    | Nut, Hex Flange                         |
| 40    | 1402-556    | 1   |       | Stop, Spring - Selector                 |
| 41    | 0828-036    | 2   |       | Washer                                  |
| 42    | 0831-010    | 2   |       | Ring, Retaining                         |
| 43    | 0818-007    | 1   | /P    | Shaft, Sub - Gear Shift                 |
| 44    | 1402-557    | 1   |       | Gasket, Cover - Selector                |
| 45    | 1502-009    | 1   |       | Cover, Selector - Gearcase              |
| 46    | 8405-620    | 6   |       | Screw, Cap                              |
| 47    | 0830-044    | 1   |       | Seal, Sub - Gear Shift                  |
| 48    | 0818-014    | 1   |       | Arm, Selector                           |
| 49    | 0818-005    | 1   | S     | Plate, Gear Shift Cam                   |
| 50    | 0826-006    | 1   |       | Screw, Cap                              |
| 51    | 0812-006    | 1   |       | Plug, Drain - Magnetic                  |
| 52    | 0830-017    | 1   |       | Gasket, Compression                     |
| 53    | 1402-102    | 1   |       | Pin, Solid Dowel                        |

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4DUSR)  
TRANSMISSION LEFT-SIDE ASSEMBLY Page 6 of 114


| Ref # | Part Number | Qty | S/P/F | Description                         |
|-------|-------------|-----|-------|-------------------------------------|
| 54    | 0402-333    | 1   | /P    | Plug, Fill (inc. 55)                |
| 55    | 0423-154    | 1   |       | O-Ring                              |
| 56    | 0819-063    | 1   |       | Yoke, Propeller Shaft               |
| 57    | 1402-463    | 1   | S     | Joint, Universal - Set (inc. 58)    |
| 58    | 0423-450    | 4   |       | Ring, Retaining - Universal Joint   |
| 59    | 0827-013    | 2   |       | Nut, Hex                            |
| 60    | 0828-020    | 2   |       | Washer                              |
| 61    | 0819-061    | 1   |       | Yoke, Drive Output - Front Assembly |
| 62    | 0830-043    | 2   |       | Seal, Oil - Driven Shaft            |
| 63    | 0832-017    | 1   |       | Bearing, Driven Shaft               |
| 64    | 0828-026    | 1   |       | Shim, 25.00 x 34.00 x 1.00          |
| 65    | 1402-554    | 1   |       | Shaft, Output - Secondary           |
| 66    | 0819-002    | 1   |       | Gear, Secondary Driven              |
| 67    | 1402-555    | 1   |       | Sleeve, Bearing - Output Shaft      |
| 68    | 0832-016    | 1   |       | Bearing, Driven Gear                |
| 69    | 0819-011    | 1   |       | Ring, Driven Bearing                |
| 70    | 0819-005    | 1   |       | Flange, Output Joint - Assembly     |
| 71    | 0470-689    | 1   |       | Level Stick, Lubricant              |
| 72    | 2506-388    | 1   |       | Tube, Level Stick                   |
| 73    | 0423-465    | 1   |       | Grommet                             |
| 74    | 2506-445    | 1   |       | Bracket, Level Stick Tube           |
| 75    | 0423-715    | 1   |       | O-Ring                              |
| 76    | 0423-396    | 2   |       | Screw, Self-Tapping                 |

 2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4205R)  
TRANSMISSION RIGHT-SIDE ASSEMBLY

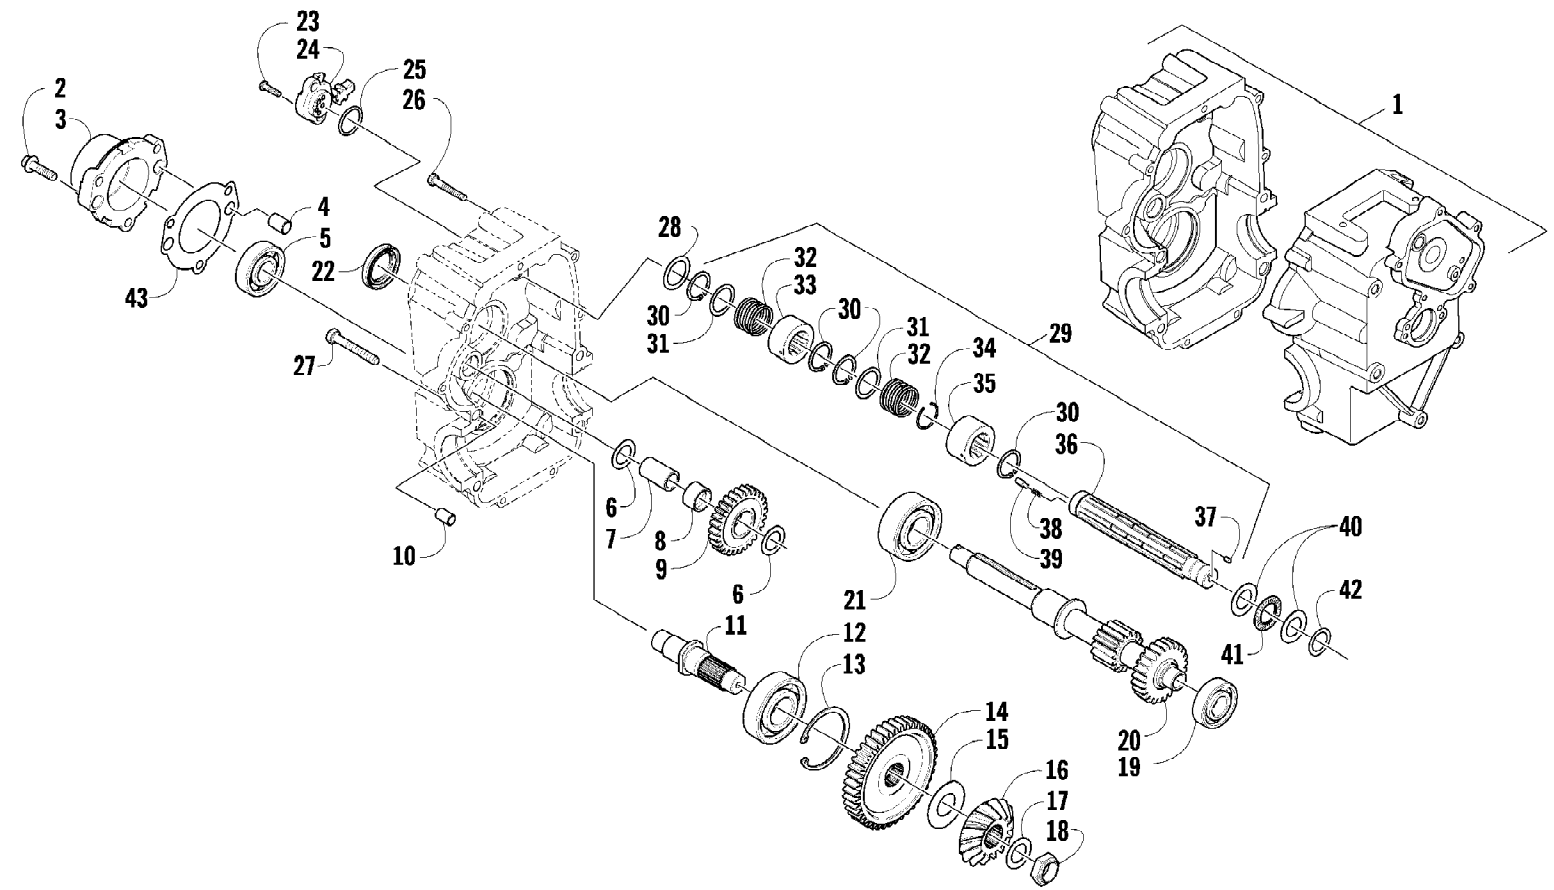

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4) Page 10 of 114  
TRANSMISSION RIGHT-SIDE ASSEMBLY


| Ref # | Part Number | Qty | S/P/F | Description                               |
|-------|-------------|-----|-------|-------------------------------------------|
| 1     | 1502-043    | 1   | S     | Housing, Gearcase - Set                   |
| 2     | 8408-830    | 3   |       | Screw, Cap                                |
| 3     | 0801-006    | 1   |       | Housing, Secondary Output Shaft Bearing   |
| 4     | 0829-002    | 2   |       | Dowel, Split                              |
| 5     | 0832-014    | 1   | S     | Bearing, Secondary Output Shaft           |
| 6     | 0828-016    | 2   |       | Washer, Thrust                            |
| 7     | 0822-015    | 1   |       | Shaft, Reverse Idle                       |
| 8     | 0822-012    | 1   |       | Bushing, Reverse Idle Gear                |
| 9     | 0822-011    | 1   |       | Gear, Reverse Idle                        |
| 10    | 0829-003    | 2   |       | Dowel, Split                              |
| 11    | 0822-067    | 1   | /P    | Shaft, Output - Secondary                 |
| 12    | 0832-015    | 1   | S/P   | Bearing, Output - Secondary Shaft         |
| 13    | 0402-347    | 1   |       | Ring, Retaining                           |
| 14    | 1402-559    | 1   |       | Gear, Driven - No. 2 (42 Tooth)           |
| 15    | 0828-030    | 1   |       | Shim, 24 x 48 x 0.25 mm                   |
| 15    | 0828-031    | 1   |       | Shim, 24 x 48 x 0.30 mm                   |
| 15    | 0828-032    | 1   |       | Shim, 24 x 48 x 0.35 mm                   |
| 15    | 0828-033    | 1   |       | Shim, 24 x 48 x 0.90 mm                   |
| 15    | 0828-018    | 1   |       | Shim, 24 x 48 x 0.95 mm                   |
| 15    | 0828-062    | 1   |       | Shim, 24 x 48 x 1.00 mm                   |
| 15    | 0828-063    | 1   |       | Shim, 24 x 48 x 1.05 mm                   |
| 15    | 0828-064    | 1   |       | Shim, 24 x 48 x 1.10 mm                   |
| 15    | 0828-065    | 1   |       | Shim, 24 x 48 x 1.15 mm                   |
| 16    | 0819-001    | 1   |       | Gear, Secondary Drive                     |
| 17    | 0828-019    | 1   |       | Washer, Thrust                            |
| 18    | 0827-012    | 1   |       | Nut, Hex                                  |
| 19    | 0832-013    | 1   | S     | Bearing                                   |
| 20    | 1402-553    | 1   |       | Shaft, Input                              |
| 21    | 0832-012    | 1   | S     | Bearing, Driveshaft                       |
| 22    | 0830-035    | 1   |       | Seal, Driveshaft                          |
| 23    | 8470-520    | 2   |       | Screw, Machine                            |
| 24    | 0818-049    | 1   | S     | Sensor, Gear Shift Position               |
| 25    | 0423-714    | 1   |       | O-Ring                                    |
| 26    | 8405-640    | 7   |       | Screw, Cap                                |
| 27    | 8405-855    | 4   |       | Screw, Cap                                |
| 28    | 0828-040    | 1   |       | Washer, Steel                             |
| 29    | 0818-046    | 1   |       | Shaft, Gear Shift - Assembly (inc. 30-37) |
| 30    | 0831-011    | 4   |       | Ring, Retaining                           |
| 31    | 0828-039    | 2   |       | Washer                                    |
| 32    | 0818-012    | 2   |       | Spring, Cam - Gear Shift                  |
| 33    | 0818-027    | 1   |       | Cam, Reverse - Gear Shift                 |
| 34    | 0818-011    | 1   |       | C-Ring                                    |
| 35    | 0818-009    | 1   |       | Cam, Forward - Gear Shift                 |
| 36    | 0818-010    | 1   |       | Shaft, Gear Shift                         |
| 37    | 0829-011    | 1   |       | Pin, Dowel                                |
| 38    | 0818-017    | 2   |       | Spring, Gear Shift Contacts               |
| 39    | 0818-013    | 2   |       | Contact, Gear Shift                       |
| 40    | 0828-067    | 2   |       | Washer, Thrust Bearing                    |
| 41    | 0832-034    | 1   | S     | Bearing, Thrust - Roller                  |
| 42    | 0828-037    | 1   |       | Washer                                    |
| 43    | 1402-605    | 1   |       | Gasket                                    |

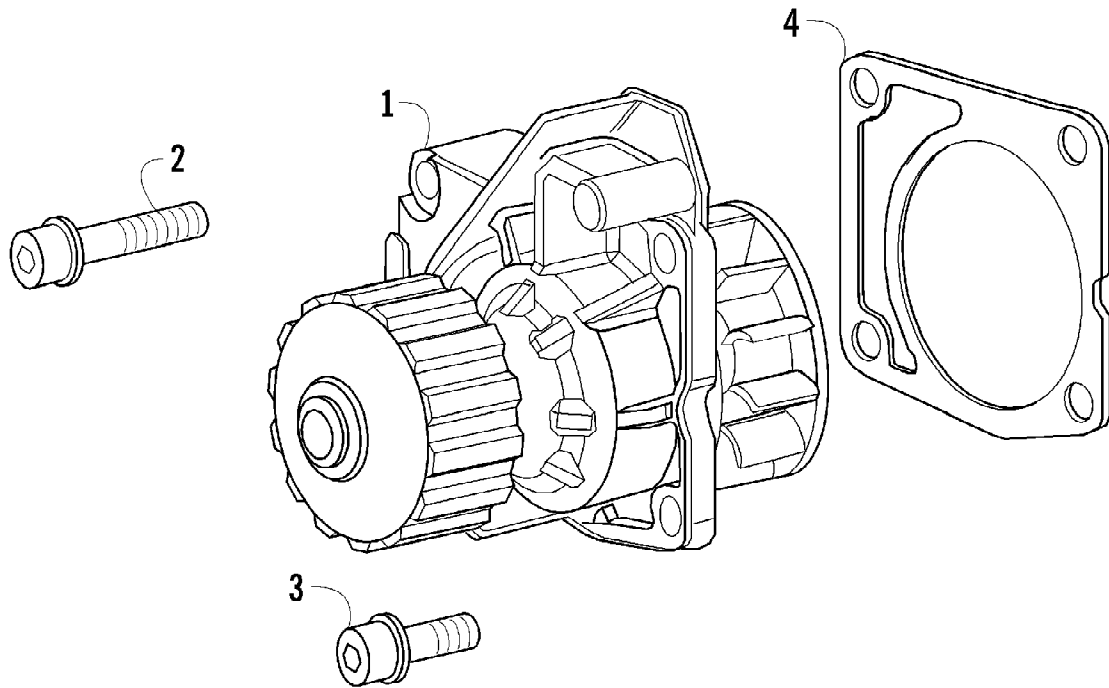 

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4) Page 10 of 114  
WATER PUMP ASSEMBLY

| Ref # | Part Number | Qty | S/P/F | Description            |
|-------|-------------|-----|-------|------------------------|
| 1     | 3206-271    | 1   |       | Pump, Water - Assembly |
| 2     | 3206-273    | 2   |       | Screw                  |
| 3     | 3206-274    | 2   |       | Screw                  |
| 4     | 3206-272    | 1   |       | Gasket                 |

 
2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4245R)  
WHEEL AND TIRE ASSEMBLY

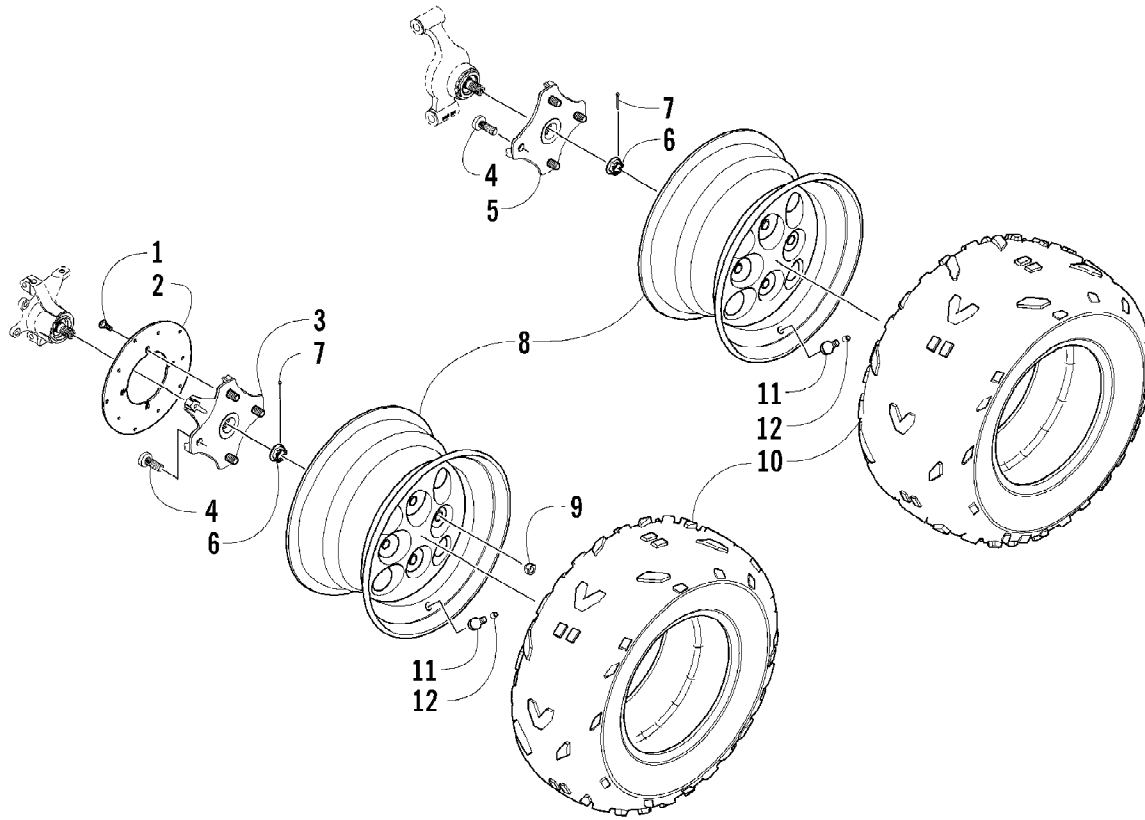

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4DUSR)  
 WHEEL AND TIRE ASSEMBLY Page 12 of 114

| Ref # | Part Number | Qty | S/P/F | Description                        |
|-------|-------------|-----|-------|------------------------------------|
| 1     | 0423-557    | 12  |       | Screw, Shoulder w/Loctite          |
| 2     | 1402-225    | 3   | S     | Disc, Brake                        |
| 3     | 0502-599    | 2   | S     | Hub, Wheel - Front (inc. 4)        |
| 4     | 0402-974    | 16  | /P    | Stud, Wheel Hub                    |
| 5     | 0502-601    | 1   | S     | Hub, Wheel - Rear - Left (inc. 4)  |
| 5     | 0502-599    | 1   | S     | Hub, Wheel - Rear - Right (inc. 4) |
| 6     | 0423-607    | 4   |       | Nut, Castle                        |
| 7     | 0423-407    | 4   |       | Pin, Cotter                        |
| 8     | 1402-127    | 2   |       | Wheel - Front                      |
| 8     | 1402-115    | 2   |       | Wheel - Rear                       |
| 9     | 0423-408    | 16  | /P    | Nut, Mounting - Wheel              |
| 10    | 1402-658    | 2   |       | Tire - Front                       |
| 10    | 1402-659    | 2   |       | Tire - Rear                        |
| 11    | 0402-064    | 4   |       | Stem, Valve (inc. 12)              |
| 12    | 0402-140    | 4   |       | Cap, Valve Stem                    |

 2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4) Page 13 of 114  
WIRING HARNESS ASSEMBLY

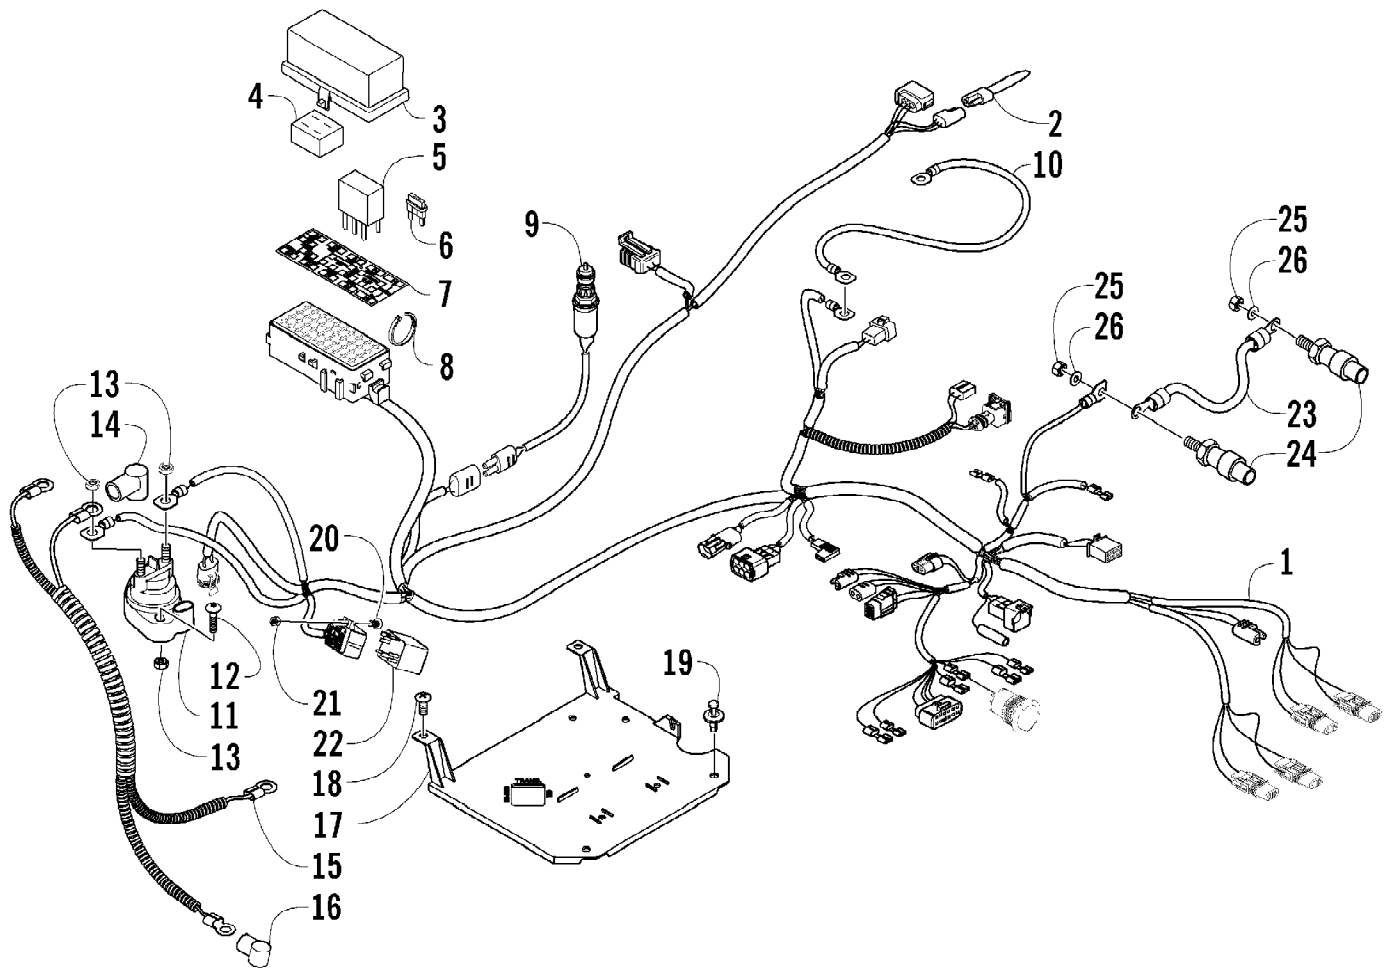

2008 ATV 700 AUTOMATIC TRANSMISSION 4X4 DIESEL RED (A2008TBT4) Page 14 of 114  
 WIRING HARNESS ASSEMBLY

| Ref # | Part Number | Qty | S/P/F | Description                 |
|-------|-------------|-----|-------|-----------------------------|
| 1     | 0486-246    | 1   |       | Harness, Main (inc. 2-7)    |
| 2     | 0486-164    | 1   |       | Tether, Accessory Connector |
| 3     | 0530-008    | 1   |       | Cover, Fuse Block           |
| 4     | 0430-037    | 1   |       | Holder, Fuse                |
| 5     | 0430-033    | 1   |       | Relay (5-Pin) - 20 Amp      |
| 5     | 0430-045    | 3   | /P    | Relay (4-Pin) - 20 Amp      |
| 6     | 0430-032    | 4   |       | Fuse - 10 Amp               |
| 6     | 0430-031    | 4   |       | Fuse - 15 Amp               |
| 6     | 0430-030    | 2   |       | Fuse - 30 Amp               |
| 7     | 1411-381    | 1   |       | Decal, Fuse Block           |
| 8     | 0123-788    | AR  | /P    | Cable Tie - 7.5 in.         |
| 9     | 0409-089    | 1   |       | Switch, Brake - Assembly    |
| 10    | 0445-060    | 1   |       | Cable, Battery/Ground       |
| 11    | 0445-058    | 1   | /P    | Solenoid                    |
| 12    | 8476-625    | 2   |       | Screw, Machine              |
| 13    | 0623-038    | 4   |       | Nut w/Washer                |
| 14    | 0645-327    | 1   |       | Boot, Terminal              |
| 15    | 0445-059    | 1   |       | Cable, Battery - Assembly   |
| 16    | 0645-019    | 2   |       | Boot, Terminal              |
| 17    | 2406-388    | 1   |       | Tray, Electrical            |
| 18    | 8476-620    | 2   |       | Screw, Machine              |
| 19    | 0623-362    | 4   |       | Rivet, Reinstallable        |
| 20    | 0423-371    | 1   |       | Screw, Machine              |
| 21    | 8424-502    | 1   |       | Nut, Hex                    |
| 22    | 3206-311    | 1   |       | Relay, Glow Plug            |
| 23    | 3206-307    | 1   |       | Wire, Glow Plug             |
| 24    | 3206-306    | 2   |       | Plug, Glow                  |
| 25    | 3206-308    | 2   |       | Nut                         |
| 26    | 3206-309    | 2   |       | Washer                      |