 


2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2008ATV4EFS)
 AIR INTAKE ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0470-755	1	S	Cover, Air Intake
2	0470-560	1		Screen, Air Filter
3	0470-558	1		Filter, Air
4	0470-728	1		Housing, Air Intake
5	0423-455	4		Clip, Spring
6	0470-749	1		Duct, Air Intake Engine
7	0423-763	1		Grommet, Air Intake
8	0570-215	1		Resonator
9	0470-729	1		Boot, Air Intake
10	0423-342	4	/P	Screw, Self-Tapping
11	0423-019	1		Clamp, Boot
12	0470-442	1	/P	Valve, Drain
13	0410-079	1	S	Hose, Vent - Crankcase
14	0423-045	2		Clamp, Hose
15	0423-766	1		Cap, Drain
16	1623-287	1		Clamp
17	0423-554	1		Clamp, Boot
18	0470-511	1		Boot, Air Intake
19	0430-055	1		Sensor, Air Temperature (inc. 21)
20	5507-224	1		O-Ring
21	2406-604	1		Panel, Shield
22	0623-362	2		Rivet, Reinstallable


2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2008ATV4EFS)
AUXILIARY BRAKE ASSEMBLY

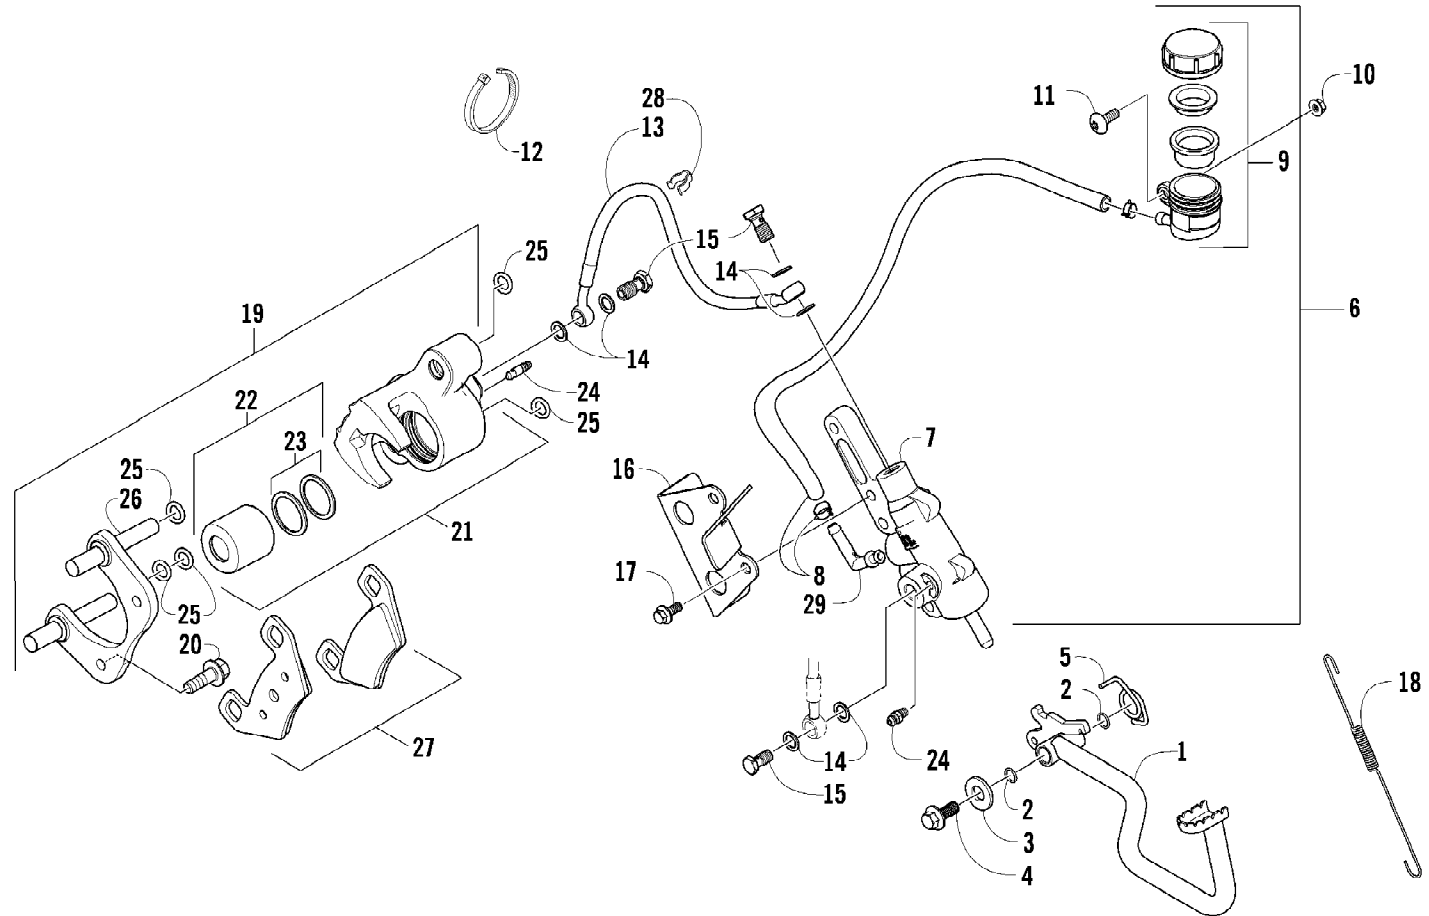

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2008ATV4EFS)
 AUXILIARY BRAKE ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
	1502-295	1		Master Cylinder Replacement Kit
1	1502-063	1		Lever, Brake
2	1602-213	2	/P	O-Ring
3	8050-252	1		Washer
4	8408-816	1		Screw, Cap
5	0502-807	1		Spring, Brake Lever
6	1502-293	1		Brake Assembly (inc. 7-9)
7	0	1	F	Master Cylinder
8	0	1	F	Hose, Brake Fluid Reservoir w/Clamps
9	1502-155	1		Reservoir, Brake Fluid w/Clamp
10	0623-038	1		Nut, Flanged
11	8476-616	1		Screw, Machine
12	0123-788	1	/P	Cable Tie - 7.5 in.
13	1502-139	1		Hose, Brake
14	0423-178	6		Washer, Crush
15	0423-413	3		Bolt, Banjo-Fitting
16	1502-179	1		Bracket, Switch
17	8408-625	2		Screw, Cap
18	0502-785	1		Spring, Brake Switch
19	1436-163	1		Caliper, Brake (inc. 20-23, one No. 24, and 25-27)
20	8408-821	2	/P	Screw, Cap
21	1436-161	1	/P	Housing, Caliper - Assembly - Right Rear (inc. 22-23 and one No. 24)
22	0502-606	1		Piston/Seal Set (inc. 23)
23	0502-607	1		Seal Set
24	0502-609	2	/P	Valve, Bleed
25	0502-608	1		O-Ring, Guide - Set
26	0502-605	1		Bracket Assembly
27	0502-875	1	S	Pad, Brake - Set
28	1502-115	2		Clip, Brake Hose
29	1502-296	1	/P	Adapter, Hose

 
2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2008ATV700H1FEI)
BATTERY ASSEMBLY

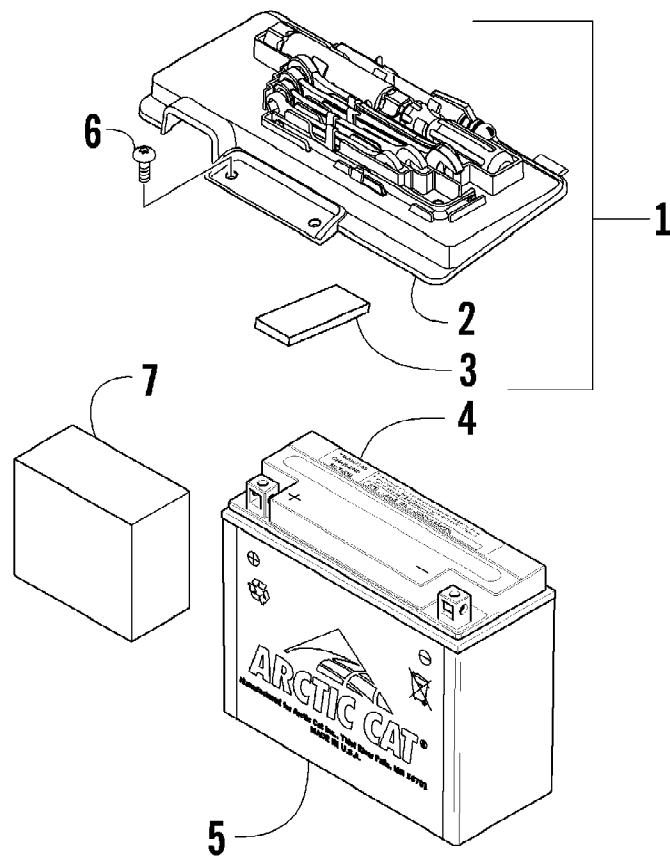

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2008ATV4E of S3)
BATTERY ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	5991-395	1	S	Battery Cover/Tool Tray Assembly (inc. 2-3)
2	2406-815	1	/P	Cover, Battery
3	0406-288	2		Pad, Battery
3	0444-122	1	S/P/F	Kit, Tool
4	0645-480	1		Battery Assembly (inc. 5)
5	0645-430	1		Decal, Battery - Warning
6	8476-620	2		Screw, Machine
7	0417-012	1		Foam, Battery

 
2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A20084014-013)
BODY PANELS AND DECALS

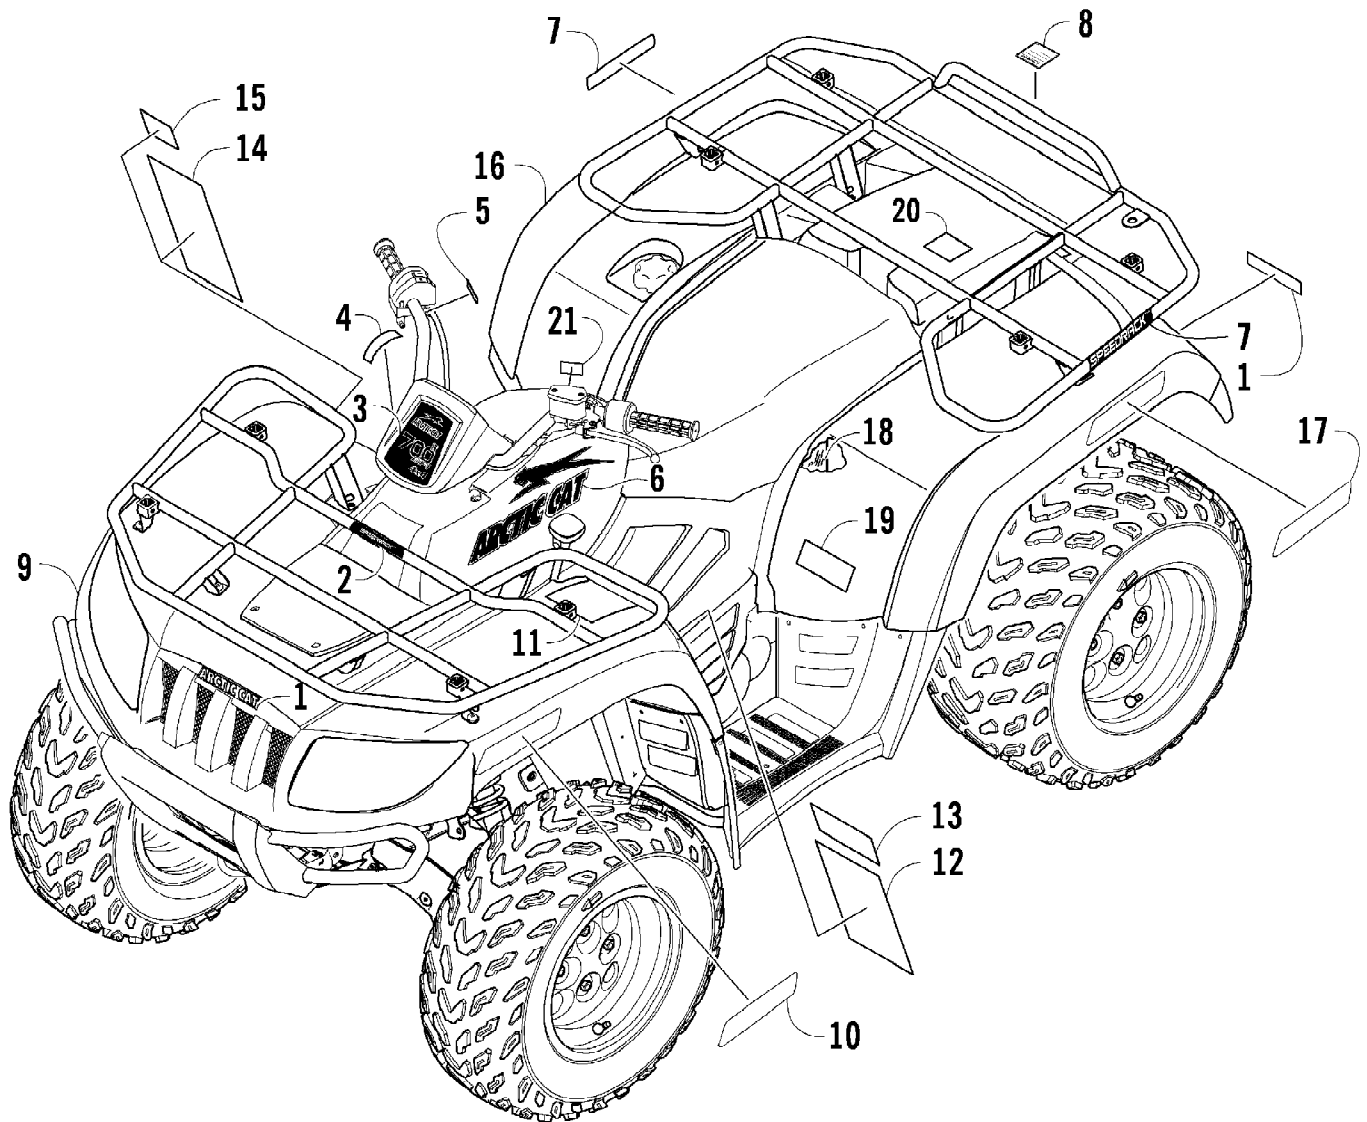

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2008ATV4E of S3)
 BODY PANELS AND DECALS

Ref #	Part Number	Qty	S/P/F	Description
1	1411-840	2		Decal, Front/Rear
2	1411-050	1	/P	Decal, "Speedrack"
3	1411-564	1		Decal, Instrument Pod
4	0411-426	1		Decal, Warning - Clutch Cover
5	0411-966	1		Decal, Warning - Differential Lock
6	1411-634	1		Decal, Side - Upper Right
6	1411-635	1		Decal, Side - Upper Left
7	0411-965	2		Decal, "Speedrack"
8	1411-077	1		Decal, Warning - Towing
9	2506-784	1	S	Panel, Fender - Front (inc. 10-15)
10	0411-818	1		Decal, Reflector - Front - Right
10	0411-819	1		Decal, Reflector - Front - Left
11	0411-401	1		Decal, Warning - Age
12	0411-218	1		Decal, Warning - General
13	1411-574	1		Decal, Warning - Off-Road Only
14	1411-250	1		Decal, Warning - Reverse/Pre-Ride
15	0411-835	1		Decal, Warning - Turn/Hill
16	2506-786	1	S	Panel, Fender - Rear (inc. 17-20 and one No. 1)
17	1411-592	1	/P	Decal, Reflector - Rear - Right
17	1411-593	1	/P	Decal, Reflector - Rear - Left
18	0470-658	1		Shield, Heat
19	0411-430	1		Decal, Warning - Tire Pressure
20	0411-435	1		Decal, Passenger
21	1411-865	1		Decal, Warning - Brake Lever Lock

 
2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2008ATV4EFS)
CAM CHAIN ASSEMBLY

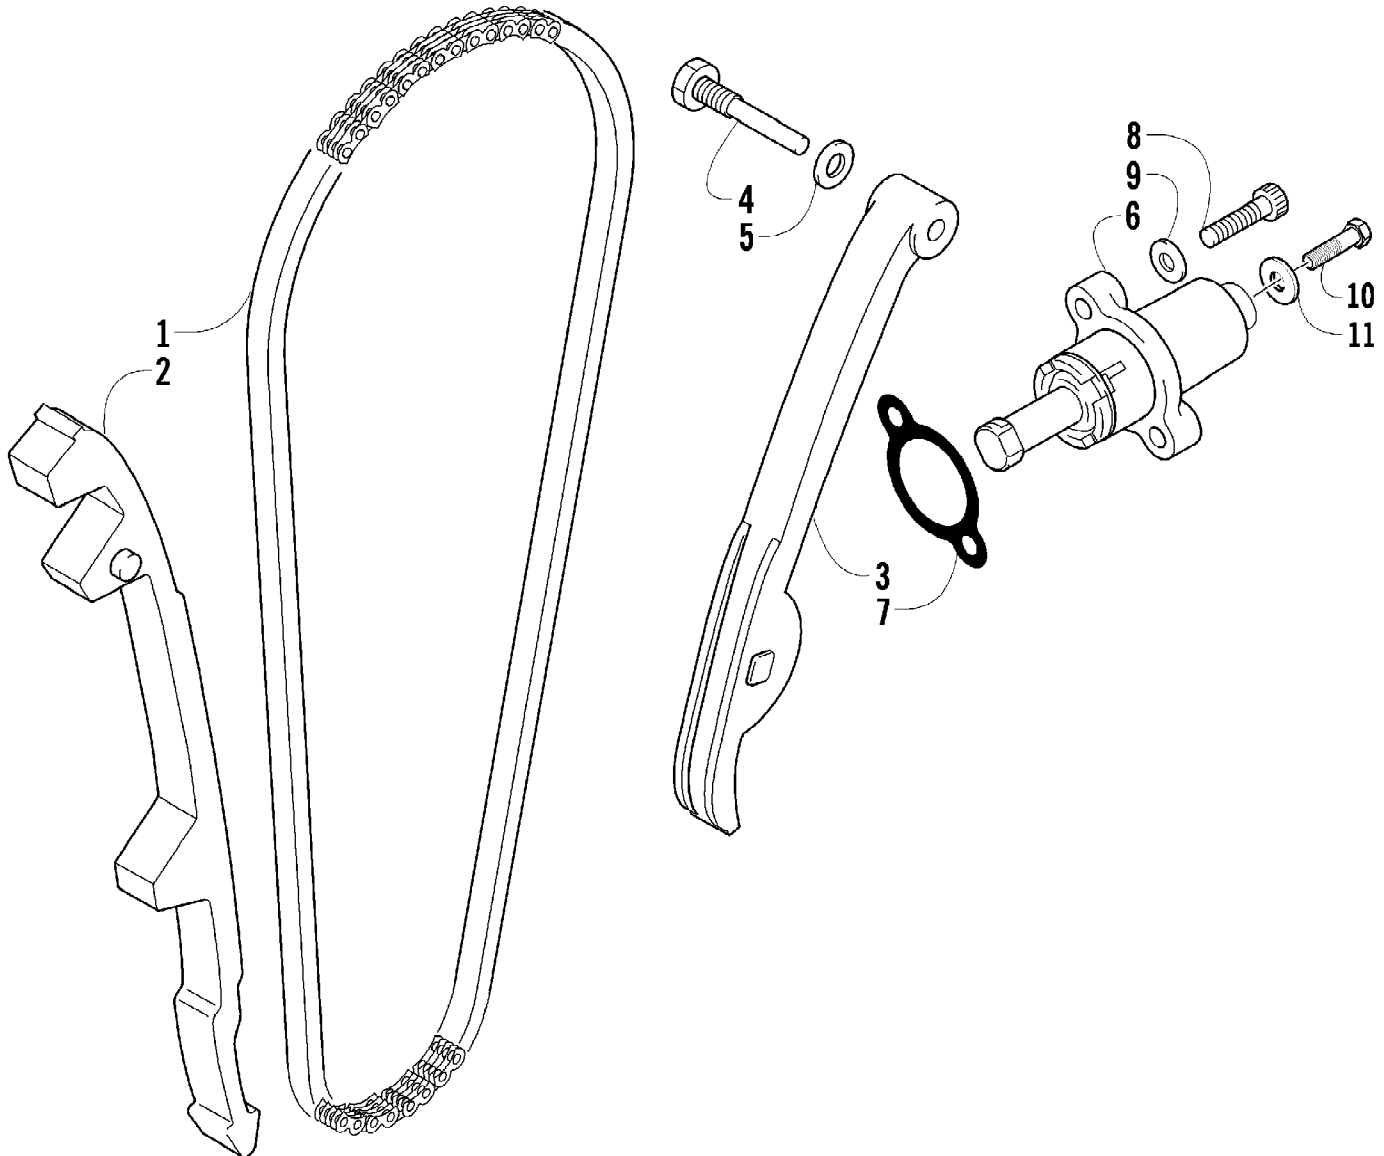

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2081210 of 13)
 CAM CHAIN ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0810-001	1		Chain, Cam
2	0810-002	1		Guide, Chain
3	0810-003	1		Tensioner, Chain
4	0826-036	1		Bolt
5	0830-025	1		Washer
6	0810-004	1		Adjuster, Tensioner - Assembly
7	0830-018	1		Gasket
8	8468-625	2		Screw, Machine
9	0830-107	2		Gasket
10	8400-610	1		Screw, Cap
11	0828-110	1		Washer

 2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2008141013)
CAMSHAFT/VALVE ASSEMBLY

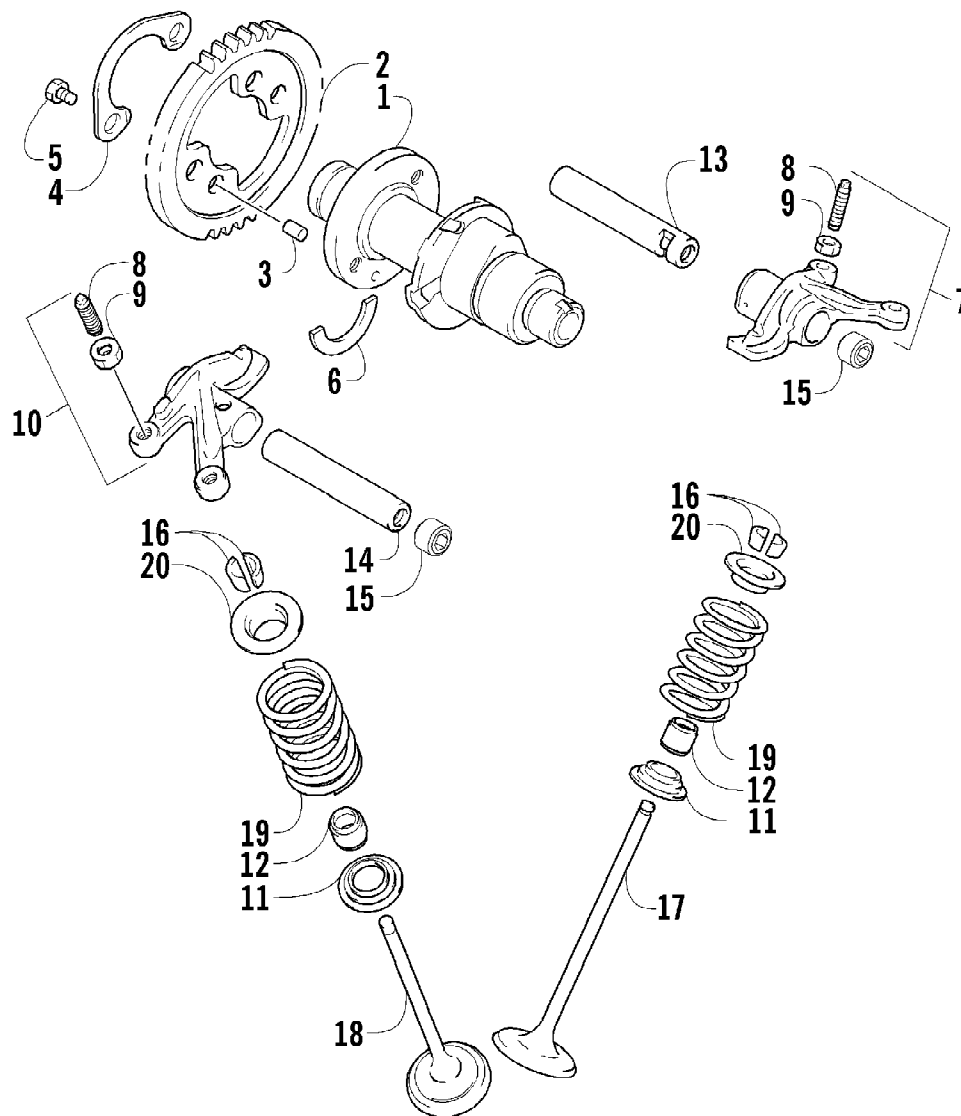


2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2008121401S)
 CAMSHAFT/VALVE ASSEMBLY

Page 14 of 13

Ref #	Part Number	Qty	S/P/F	Description
1	0809-200	1	S	Camshaft
2	0809-002	1		Sprocket
3	0829-008	1		Pin
4	0828-004	1		Washer
5	0826-034	2		Bolt
6	0809-003	1		C-Ring
7	0809-202	1	S/F	Arm, Valve Rocker - Intake (inc. two No. 8-9)
8	0809-033	4	S/F	Screw
9	0827-007	4	F	Nut
10	0809-205	1	S/F	Arm, Valve Rocker - Exhaust (inc. two No. 8-9)
11	0809-006	4	F	Seat, Spring - Valve
12	0830-016	4	S/F	Seal, Oil
13	0809-007	1	F	Shaft, Rocker Arm - Intake
14	0809-008	1	F	Shaft, Rocker Arm - Exhaust
15	0831-066	2	F	Plug, Shaft
16	0809-014	8	F	Keeper, Valve
17	0809-039	2	S/F	Valve, Intake
18	0809-040	2	S/F	Valve, Exhaust
19	0809-138	4	S/F	Spring, Valve
20	0809-013	4	F	Retainer, Spring

 
2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A20814) (FIS)
CASE/BELT COOLING ASSEMBLY

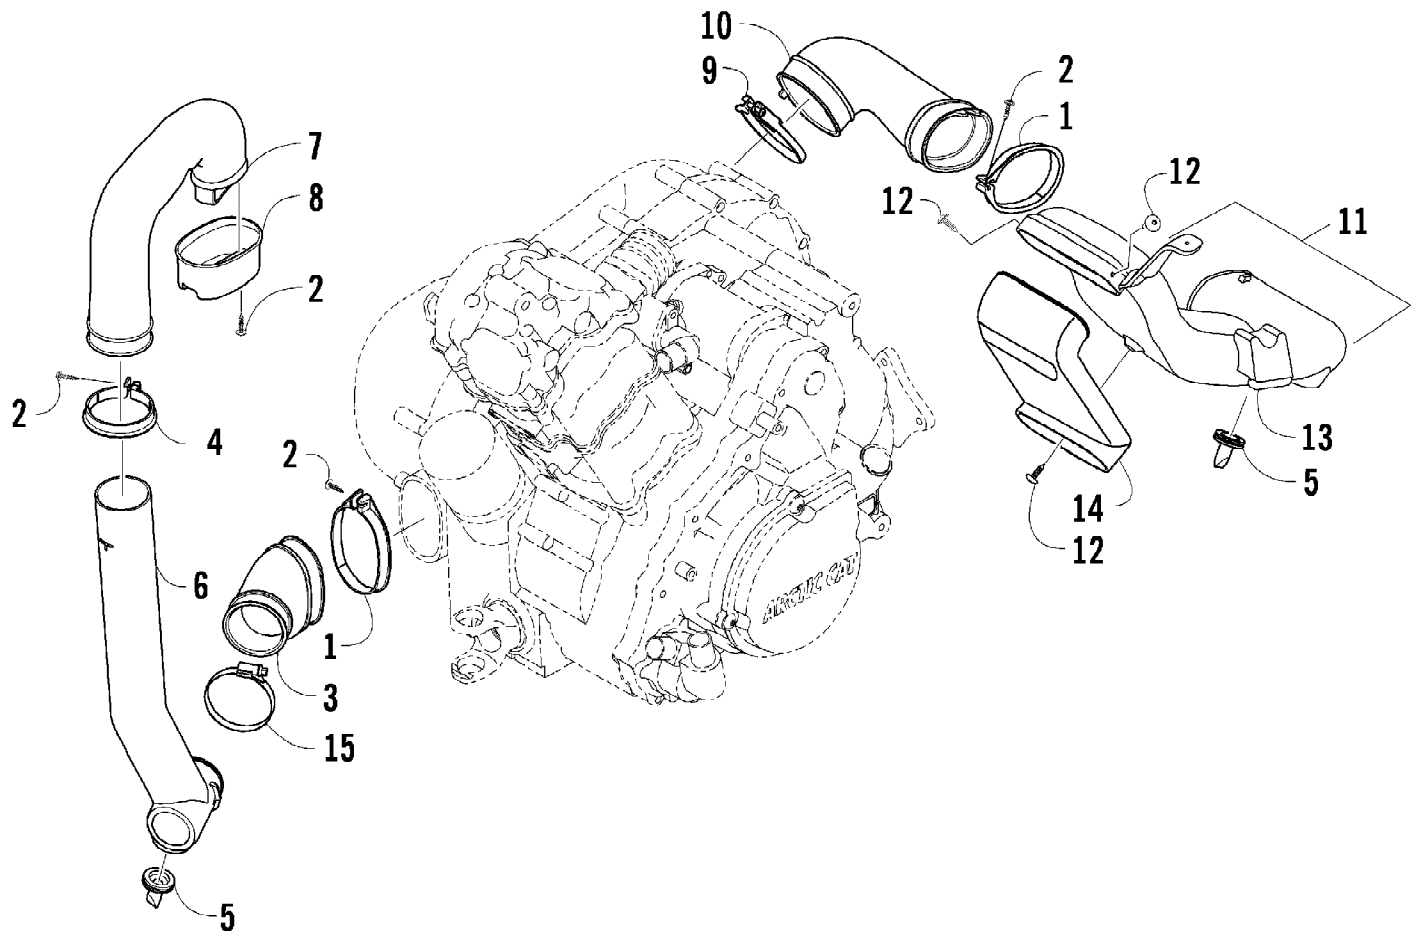

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2081214 of 13)
CASE/BELT COOLING ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0423-550	2		Clamp, Plastic
2	0423-342	5	/P	Screw, Self-Tapping
3	0413-198	1	/P	Boot, Duct - Air Intake - Front
4	0423-551	1		Clamp, Boot
5	0470-442	2	/P	Valve, Drain
6	0513-010	1		Duct, Air Intake - Front - Lower
7	0470-750	1		Duct, Air Intake - Front - Upper
8	0470-729	1		Cup, Air Intake
9	0423-730	1		Clamp, Boot
10	0413-187	1	S	Boot, Duct - Air Out - Rear
11	0470-824	1	/P	Duct, Air Out - Rear (inc. three No. 12 and 13-14)
12	0623-784	4		Screw, Self-Tapping
13	0470-825	1		Duct
14	0470-778	1		Duct
15	0423-019	1		Clamp, Hose

 
2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A200814) of 93
CLUTCH/V-BELT/MAGNETO COVER ASSEMBLY

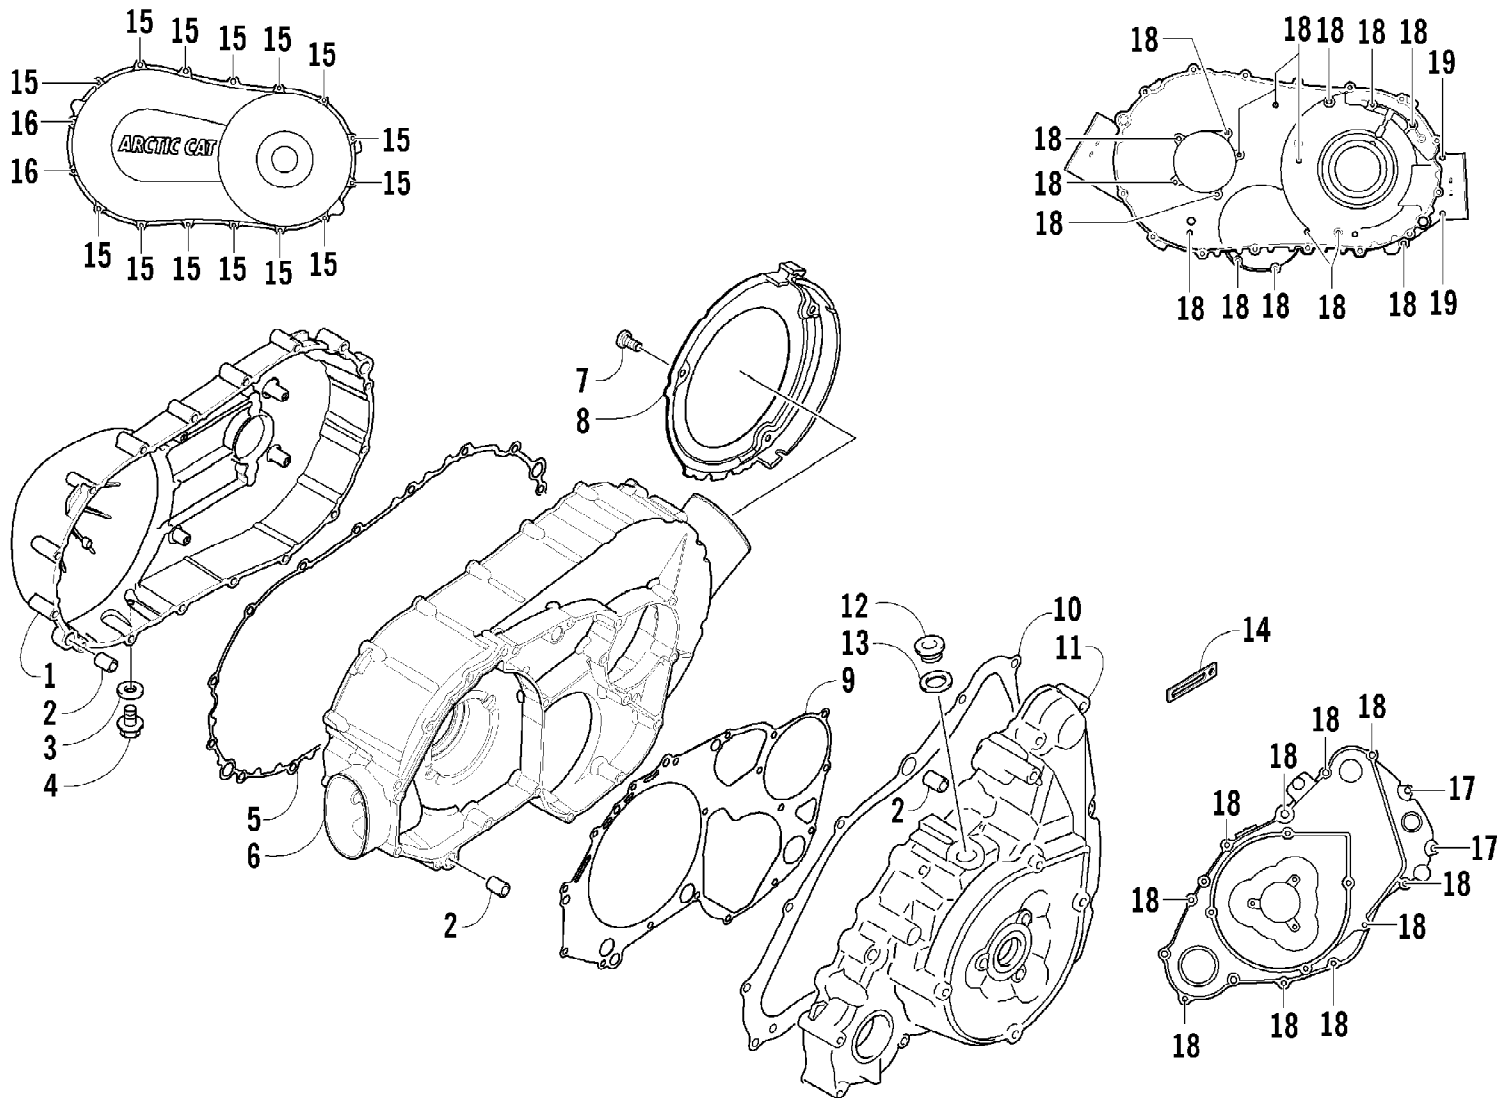

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2081214 of 93)
 CLUTCH/V-BELT/MAGNETO COVER ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0806-088	1	/P	Cover, V-Belt
2	0829-002	4		Pin, Dowel
3	0830-013	1		Washer, Crush
4	8408-812	1		Screw, Cap
5	0830-174	1	/P	Gasket, V-Belt Cover
6	0806-086	1		Cover, Clutch
7	0826-029	3		Screw
8	0806-048	1		Plate, Air Intake
9	0830-116	1	/P	Gasket, Clutch Cover
10	0830-128	1		Gasket, Magneto Cover
11	0806-082	1	/P	Cover, Magneto - Assembly
12	0806-022	1		Plug
13	0830-015	1		Washer, Crush
14	3002-964	1	/P	Clamp, Wire
15	8468-645	14		Screw, Machine
16	8468-655	2		Screw, Machine
17	8468-625	2		Screw, Machine
18	8468-640	26		Screw, Machine
19	8468-675	2		Screw, Machine

 
2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A20081470193)
CONTROL SWITCH HOUSING ASSEMBLY

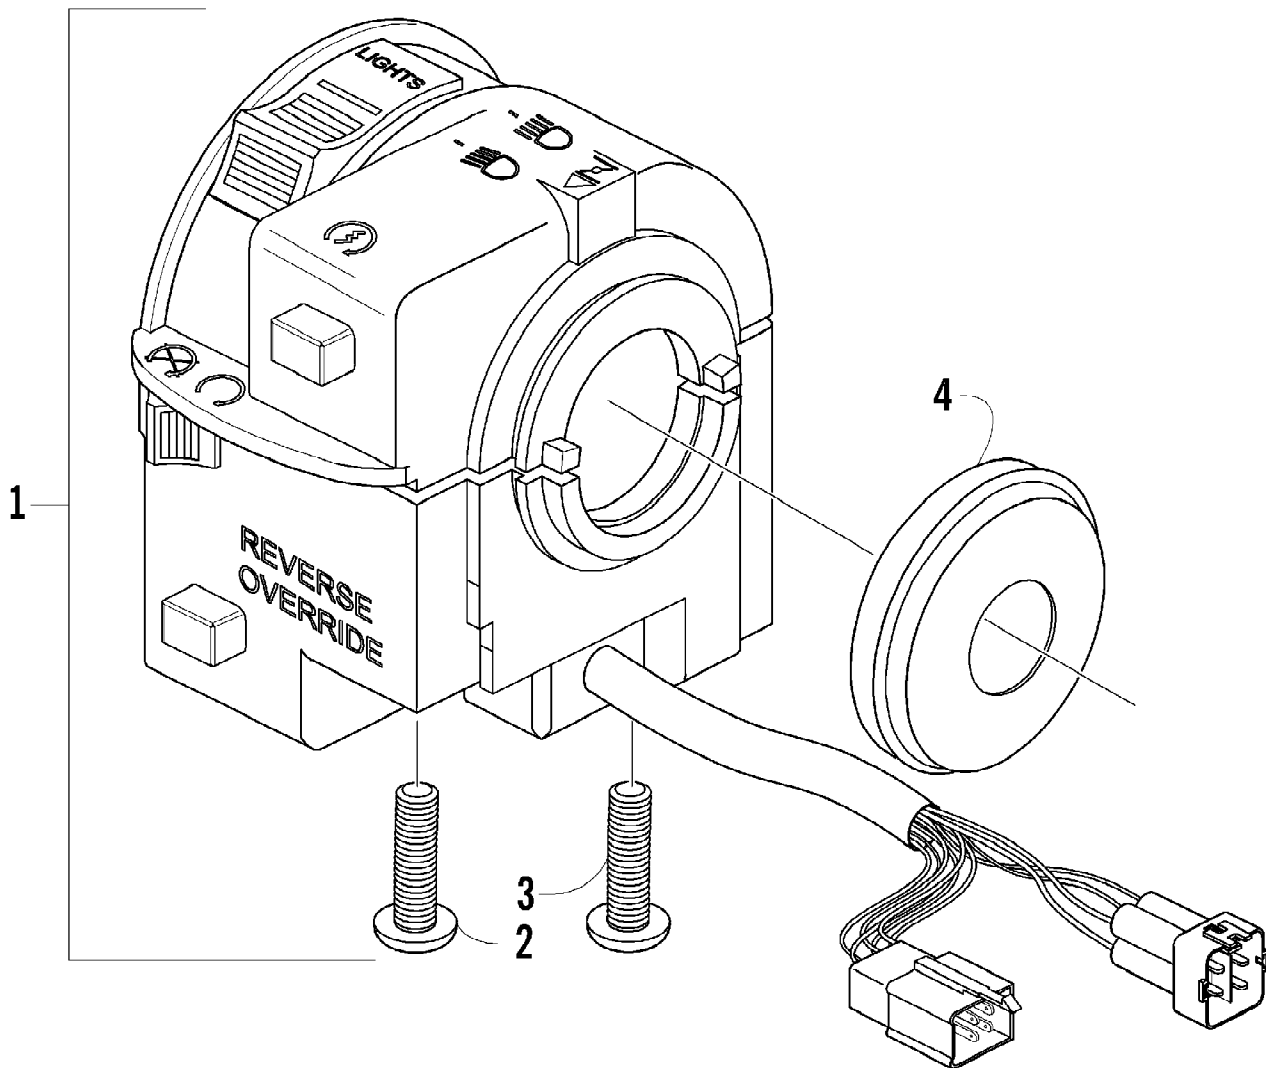

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2081214 of 13)
 CONTROL SWITCH HOUSING ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0509-014	1		Switch, Control - Assembly (inc. 2-4)
2	0409-027	1		Screw, Machine
3	0409-028	1		Screw, Machine
4	3409-019	1		Cover, Switch Housing

 2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A20814) (FIS)
COOLING ASSEMBLY

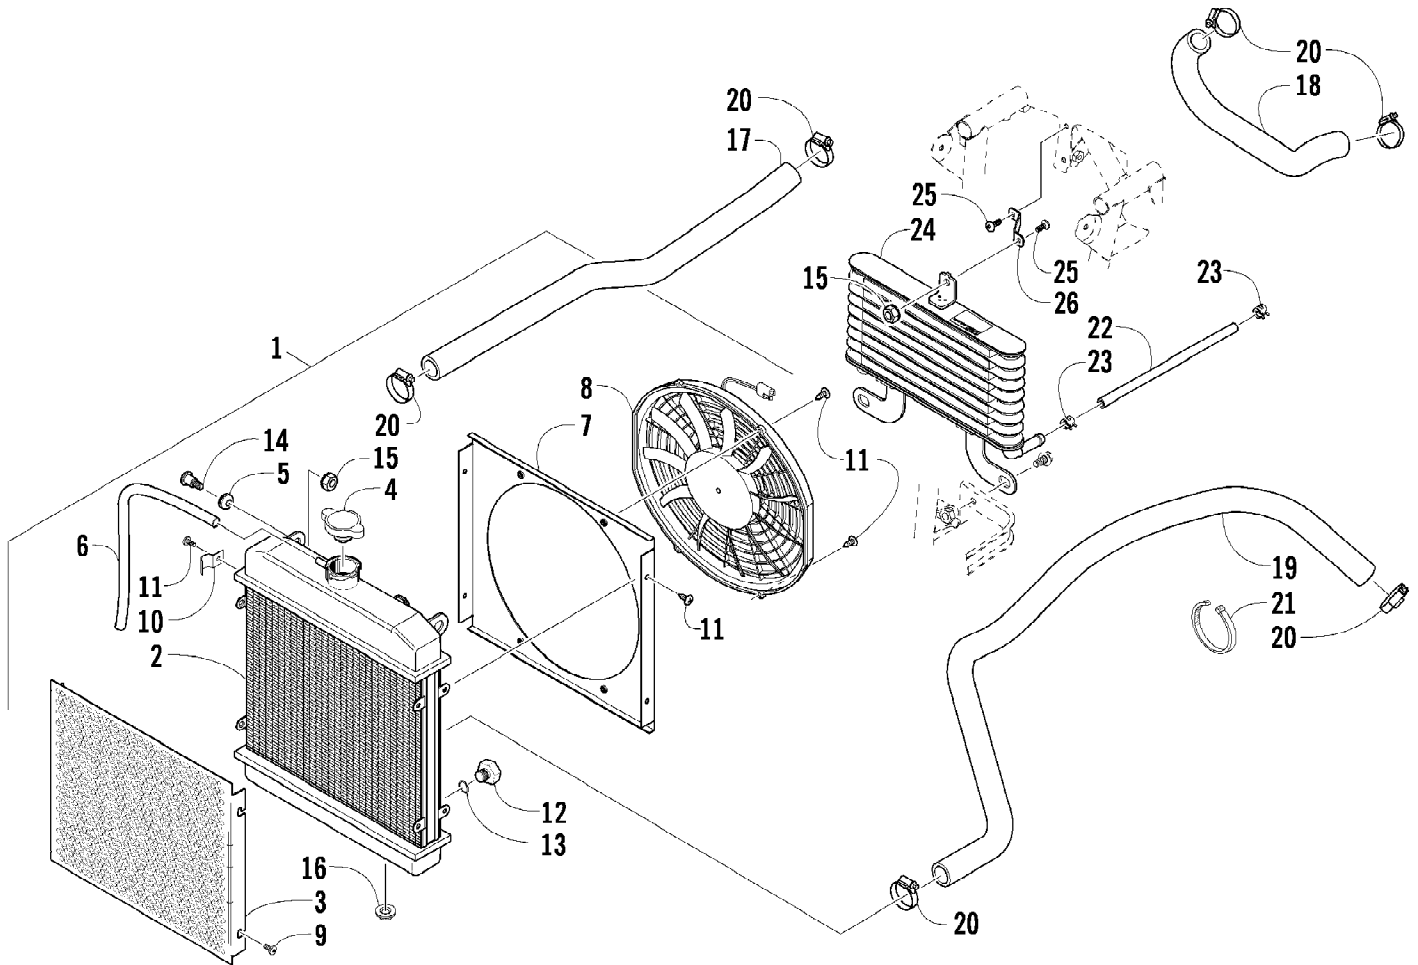


2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2008ATV700H1FEI)
 COOLING ASSEMBLY

Page 20 of 33

Ref #	Part Number	Qty	S/P/F	Description
1	0413-199	1	S	Radiator Assembly (inc. 2-13)
2	0413-205	1		Radiator
3	0413-007	1		Screen, Radiator
4	0413-002	1	S	Cap, Radiator
5	0423-030	2		Grommet
6	0610-016	AR	/P	Hose - 25 ft
7	0413-203	1		Shroud, Fan
8	0413-123	1	/P	Fan, Cooling
9	8475-512	4		Screw, Machine
10	0423-351	1		Clamp, Wire
11	0623-378	8		Screw, Self-Tapping
12	0413-195	1		Plug, Drain
13	1602-213	1	/P	O-Ring
14	0423-484	2		Screw, Shoulder
15	0623-038	4		Nut w/Washer
16	0423-028	2		Bushing, Stem
17	0410-002	1		Hose, Coolant - Upper
18	0410-022	1		Hose, Coolant - Crossover
19	0410-041	1		Hose, Coolant - Lower
20	0423-496	6		Clamp, Hose
21	0123-788	2	/P	Cable Tie
22	0410-127	2		Hose, Oil Cooler
23	0423-632	4		Clamp, Hose
24	0413-163	1	S	Cooler, Oil
25	8476-612	2		Screw, Machine
26	0513-022	1		Bracket, Mounting - Oil Cooler - Upper

 
2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A208121-E) (Page 21 of 33)
CRANK BALANCER ASSEMBLY

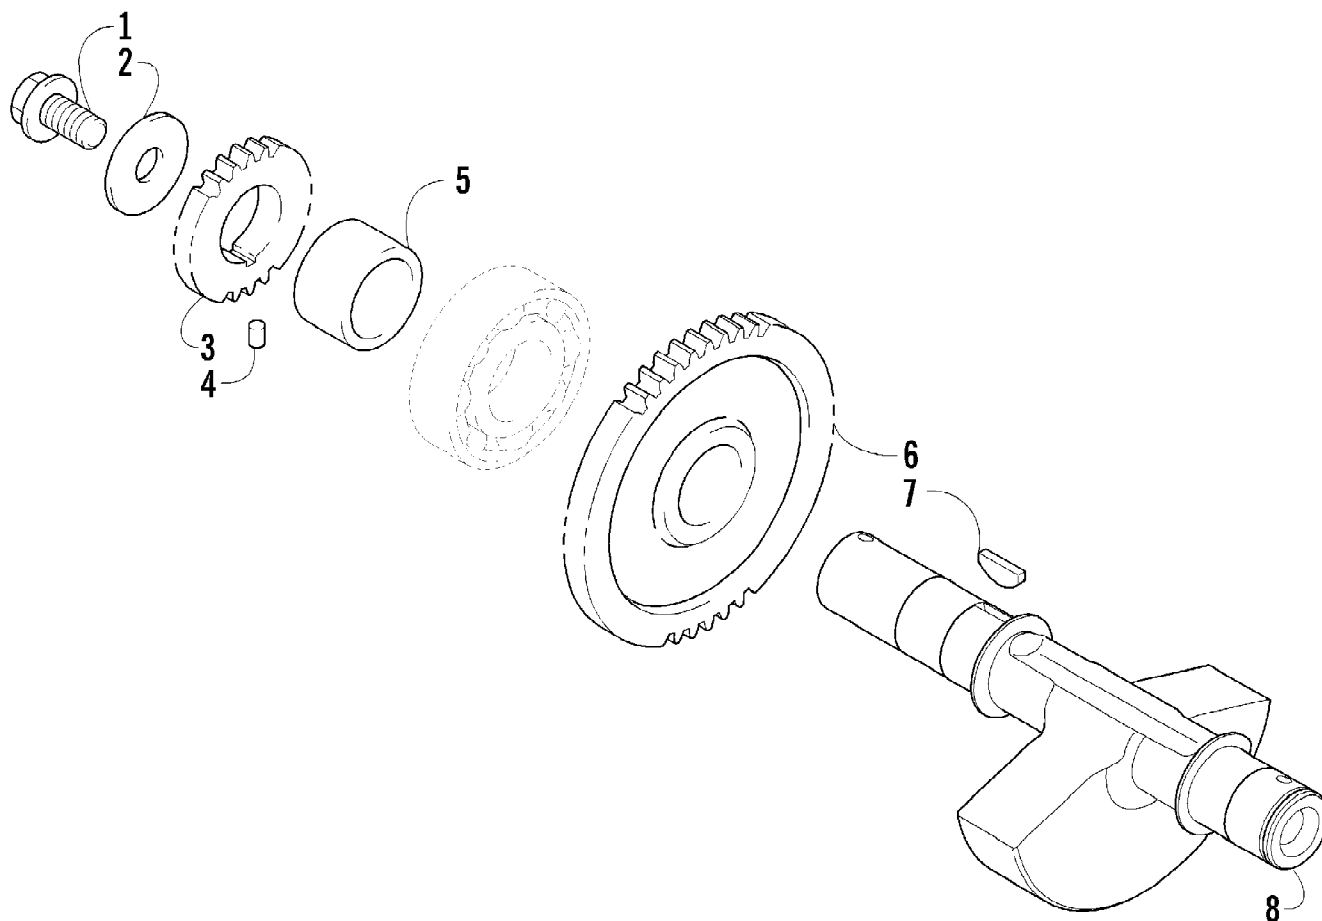

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A208124 of 13)
 CRANK BALANCER ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0826-033	1		Screw, Cap
2	0828-003	1		Washer
3	0811-003	1		Gear, Oil Pump Drive
4	0829-007	1		Dowel, Solid
5	0811-004	1		Spacer
6	0811-002	1		Gear, Driven
7	0829-006	1		Key - Crank Balancer Shaft
8	0811-017	1		Balancer, Crank

 
2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A200824) (P8124) (P8124)
CRANKCASE ASSEMBLY

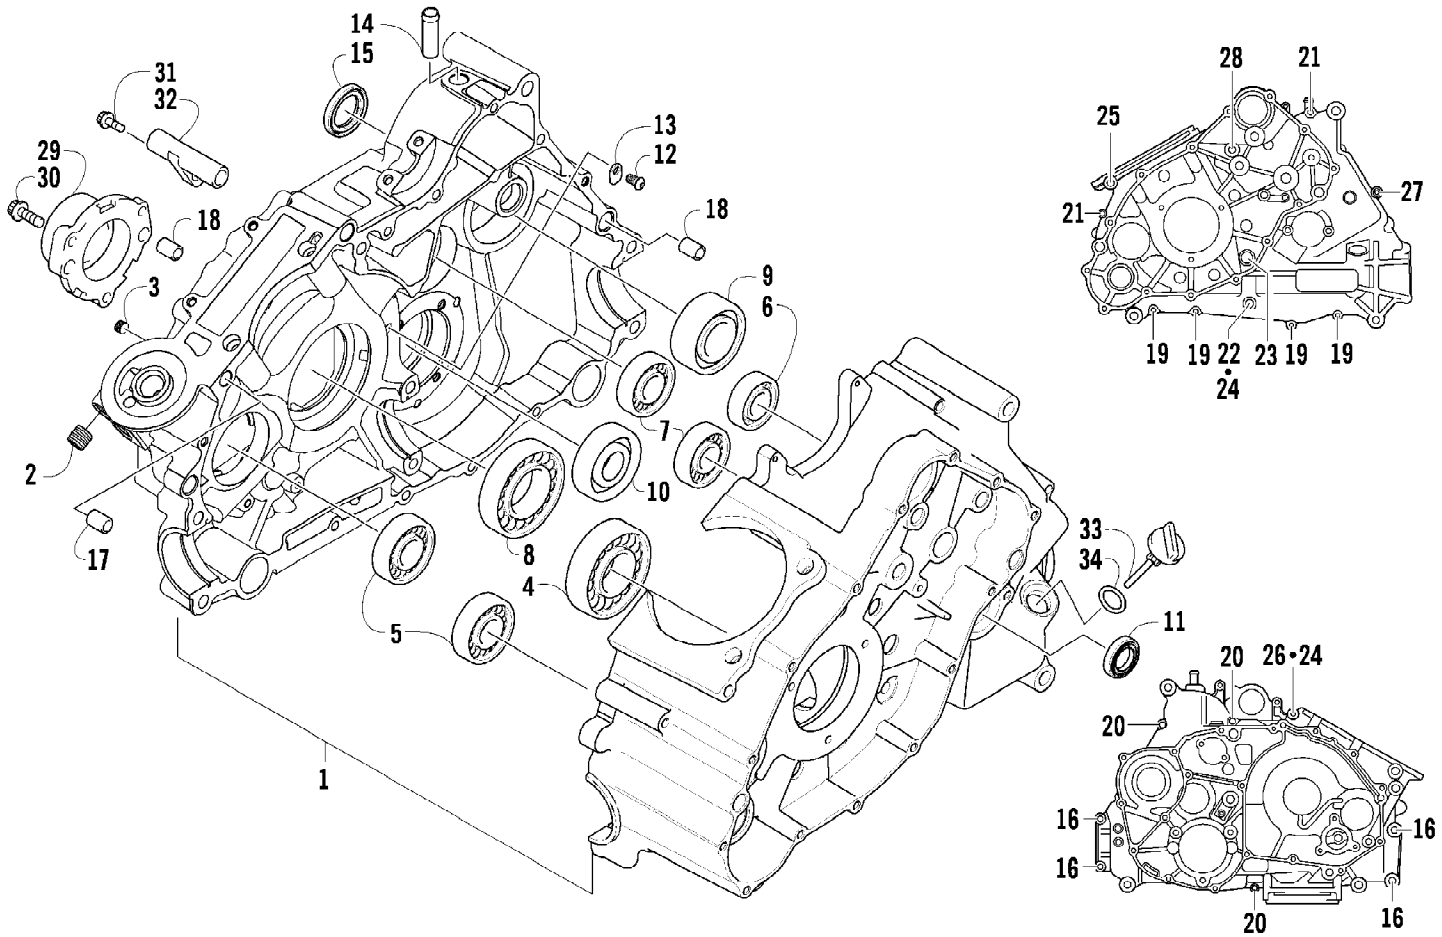

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A208124 of 13)
 CRANKCASE ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0837-004	1	S	Crankcase Assembly (inc. 2-16)
2	0812-064	2		Plug
3	0801-002	1		Plug
4	0832-043	1	/P	Bearing, Ball
5	0832-044	2	/P	Bearing
6	0832-049	1	/P	Bearing
7	0832-050	2	/P	Bearing
8	0832-042	1	/P	Bearing, Ball
9	0832-048	1	/P	Bearing, Ball - Driveshaft
10	0832-051	1	S	Bearing
11	0822-052	1		Seal, Countershaft
12	0826-100	4		Screw, Cap
13	0822-010	4	/P	Retainer, Bearing
14	0801-028	1		Pipe, Breather
15	0830-035	1		Seal, Driveshaft
16	8412-850	4		Screw, Cap
17	0829-003	1		Pin, Dowel
18	0829-002	5		Pin, Dowel
19	8468-645	4		Screw, Machine
20	8468-655	3		Screw, Machine
21	8468-675	2		Screw, Machine
22	8412-860	1		Screw, Cap
23	0826-017	1		Screw, Cap
24	0830-008	2		Gasket
25	0826-019	1		Screw, Cap
26	0826-018	1		Screw, Cap
27	8468-695	1		Screw, Machine
28	8468-680	1		Screw, Machine
29	0801-006	1		Housing, Secondary Shaft Bearing
30	0826-105	3		Bolt
31	0801-069	1		Pipe, Breather
32	0826-038	1		Bolt, Breather Pipe
33	0801-073	1		Stick, Oil Level
34	0830-010	1		O-Ring, Oil Level Stick

 
2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A208124) (Page 24 of 33)
CRANKSHAFT AND PISTON ASSEMBLY

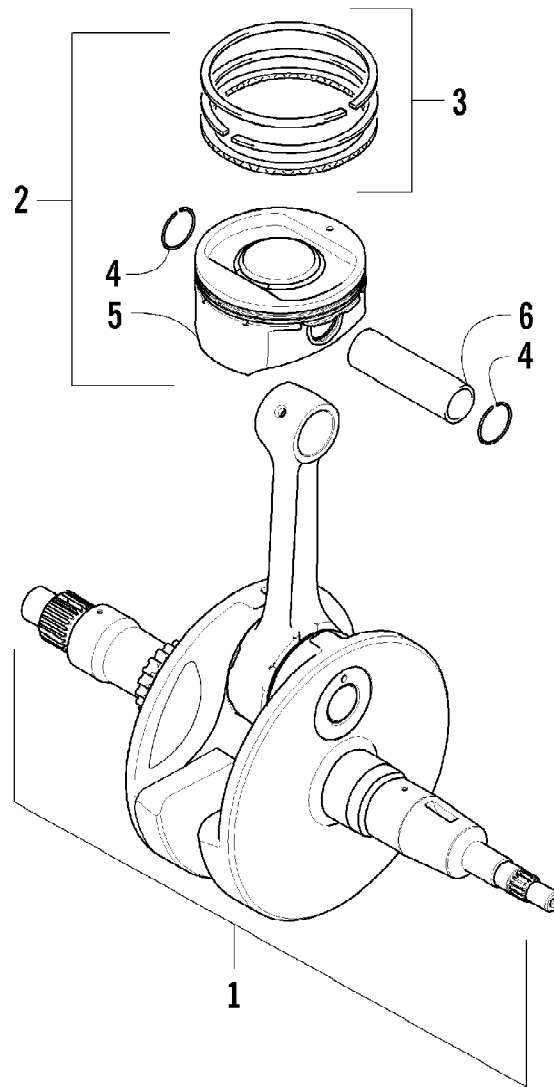

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A208124 of S3)
 CRANKSHAFT AND PISTON ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0805-032	1	S	Crankshaft Assembly
2	0805-158	1	S	Piston Set (inc. 3-6)
3	0805-132	1		Ring, Piston - Set
4	0831-001	2		Circlip, Piston Pin
5	0805-131	1		Piston
6	0805-210	1		Pin, Piston

 2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A208127) of 93
CYLINDER ASSEMBLY

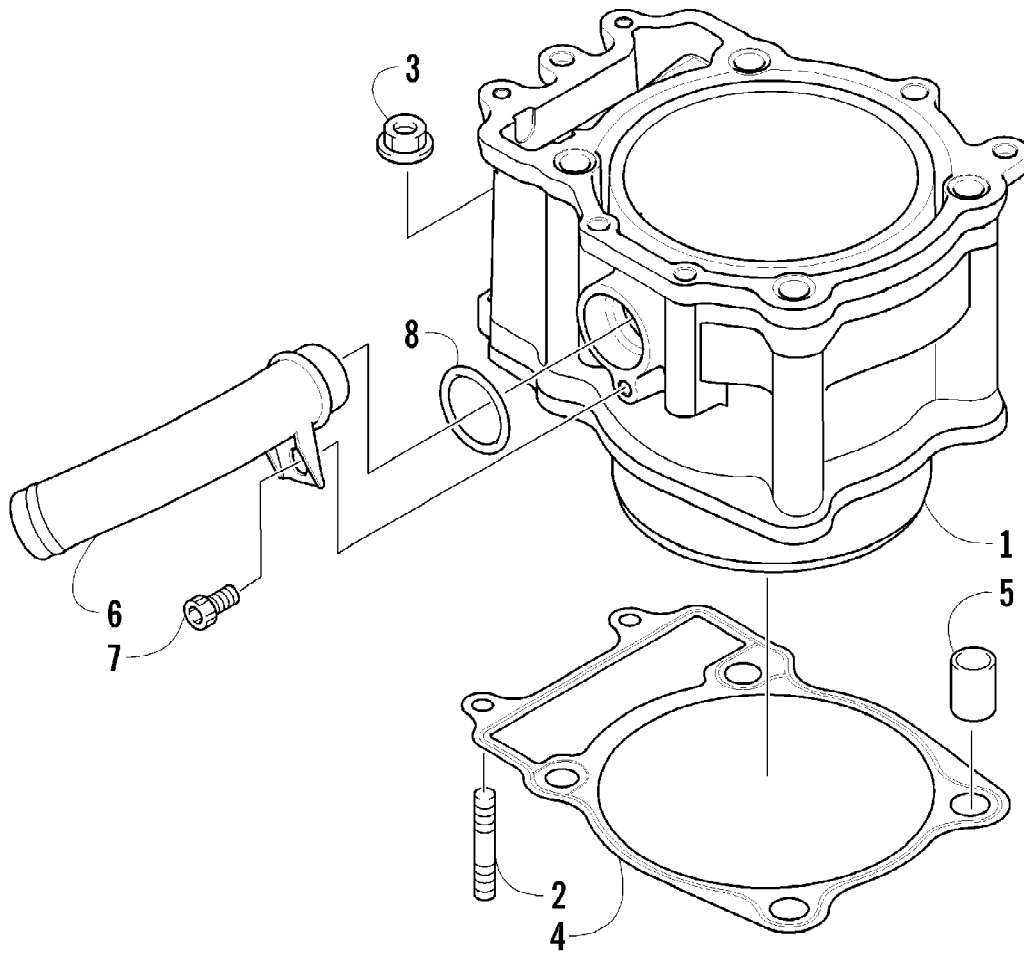


2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2008124) (S)
CYLINDER ASSEMBLY

Page 28 of 33

Ref #	Part Number	Qty	S/P/F	Description
1	0804-024	1	S	Cylinder
2	0827-002	2		Bolt, Stud
3	8424-604	2		Nut
4	0830-111	1		Gasket, Base
5	0829-002	2		Pin, Dowel
6	0804-002	1	S	Union, Coolant Hose
7	8468-612	1		Screw, Machine
8	0830-007	1		O-Ring

 2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2008ATV700H1FIS)
CYLINDER HEAD ASSEMBLY

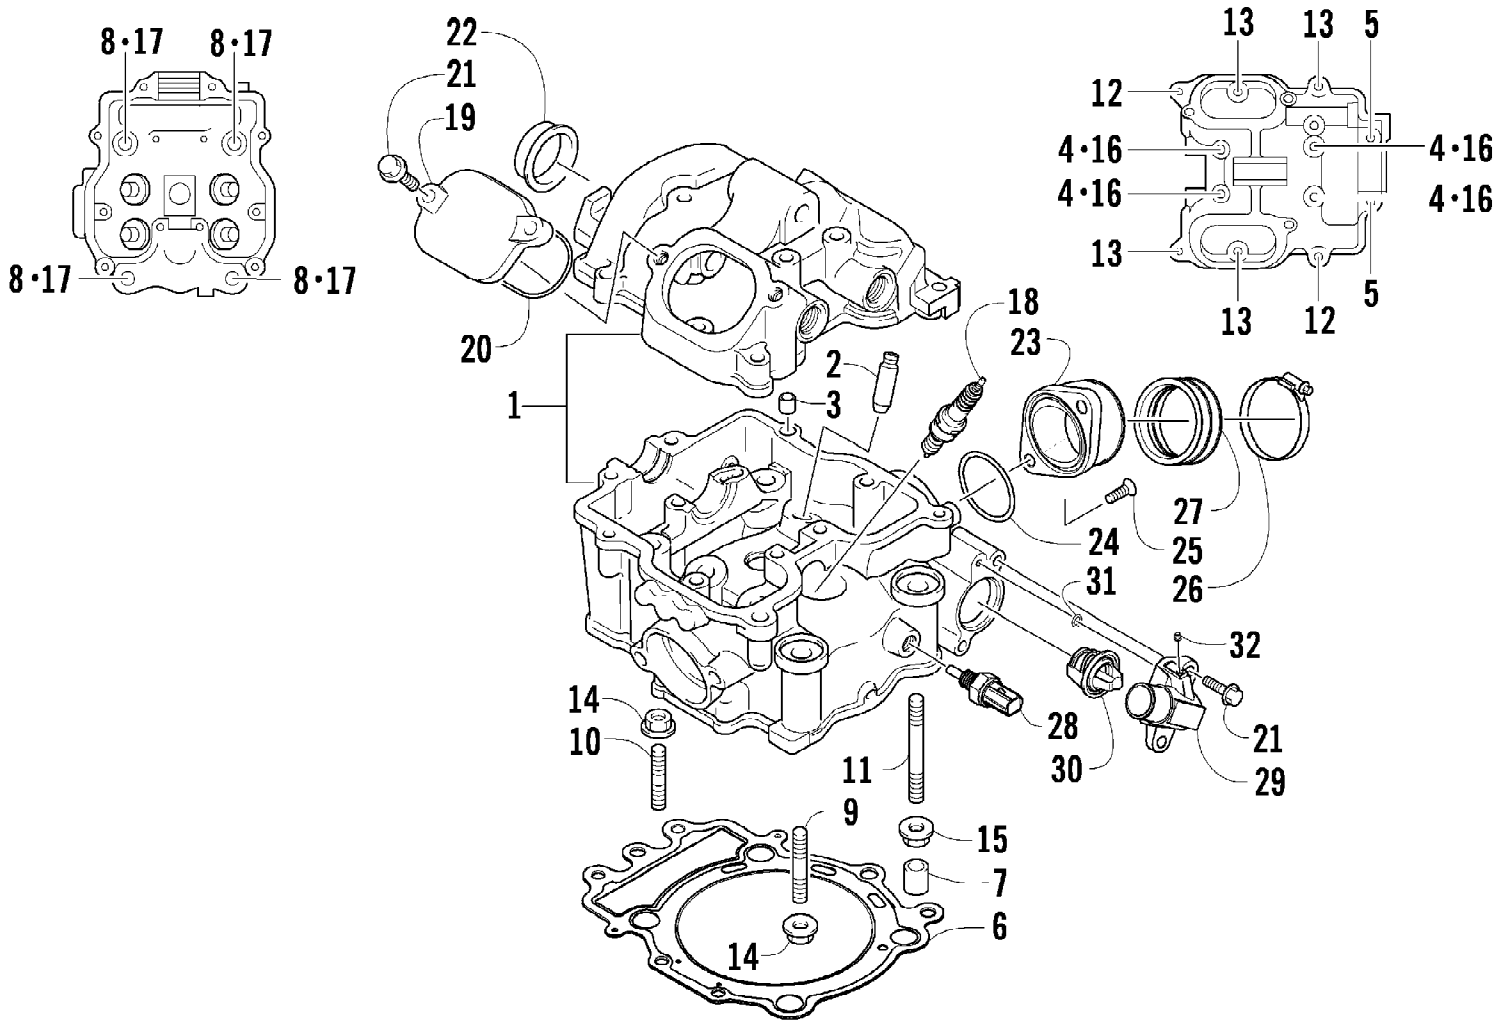


2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2008ATV700H1FEI)
CYLINDER HEAD ASSEMBLY

Page 30 of 33

Ref #	Part Number	Qty	S/P/F	Description
1	0808-082	1	F	Head, Cylinder - Assembly (inc. 2-4)
2	0	4	F	Guide, Valve
3	0829-001	2	S	Dowel, Sleeve
4	0826-001	4		Screw, Cap
5	0826-002	2		Screw, Cap
6	0830-112	1		Gasket, Cylinder Head
7	0829-002	2		Pin, Dowel
8	0808-037	4	/P	Screw, Cap
9	0827-054	2		Bolt, Stud
10	0827-002	2		Bolt, Stud
11	0827-031	1		Bolt, Stud
12	0826-005	2		Screw, Cap
13	0826-006	4		Screw, Cap
14	8424-604	4		Nut
15	8424-804	1		Nut
16	0830-107	4		Gasket - Seal, Fastener
17	0830-147	4	/P	Washer, Crush
18	0217-727	1	S	Spark Plug (RG6YC)
19	0808-003	2		Cap, Inspection
20	0830-167	2	/P	O-Ring
21	0826-007	4		Screw, Cap
22	0808-077	1		Plug, Cylinder Head
23	0470-668	1		Flange, Intake Manifold
24	0830-090	1		O-Ring
25	0826-008	2		Screw, Machine
26	0423-066	1		Clamp, Intercooler
27	0470-669	1	S	Boot
28	0808-124	1		Switch, Engine Coolant Temperature - Assembly
29	0808-113	1		Cover, Thermostat
30	0808-078	1		Thermostat
31	0830-168	1	/P	O-Ring
32	0830-169	1		Plug

 
2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A20080131E) (A20080131E) (A20080131E)
DRIVE TRAIN ASSEMBLY

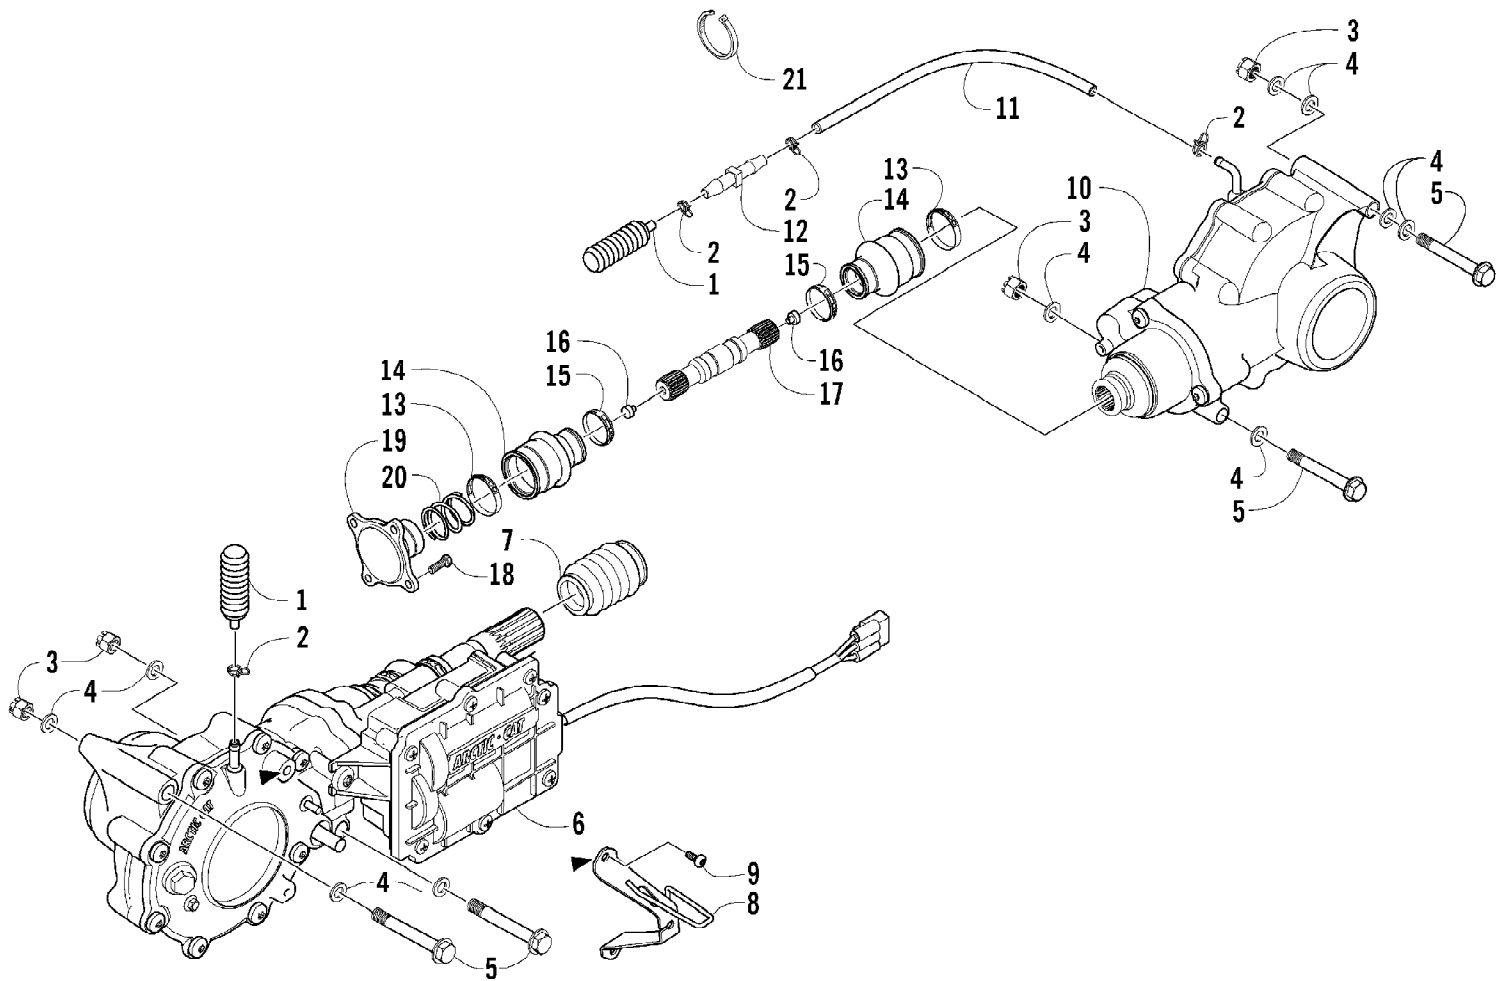

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A20081234) (Page 34 of 53)
 DRIVE TRAIN ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	1402-620	2	/P	Bladder, Gearcase
2	0423-315	4		Clamp, Fitting
3	8428-002	4		Nut, Lock
4	0423-426	10		Washer
5	0423-404	4		Screw, Cap
6	1502-306	1		Gearcase, Front
7	0402-966	1		Boot, Shaft
8	0502-500	1		Plate, Cable
9	0423-396	2		Screw, Self-Tapping
10	1502-080	1		Gearcase, Rear
11	0410-048	AR	S	Hose, Vent
12	0470-462	1		Fitting, Vent
13	0423-393	2		Clamp, Boot
14	0402-985	2	/P	Boot
15	0423-411	2		Clamp, Boot
16	0673-618	2	/P	Bumper, Propeller Shaft
17	1402-233	1		Shaft, Propeller
18	8408-820	4	/P	Screw, Cap
19	0402-950	1		Flange, Output
20	1402-026	2		Spring
21	0123-788	AR	/P	Tie, Cable

 
2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A208123) For FIS
ENGINE AND EXHAUST

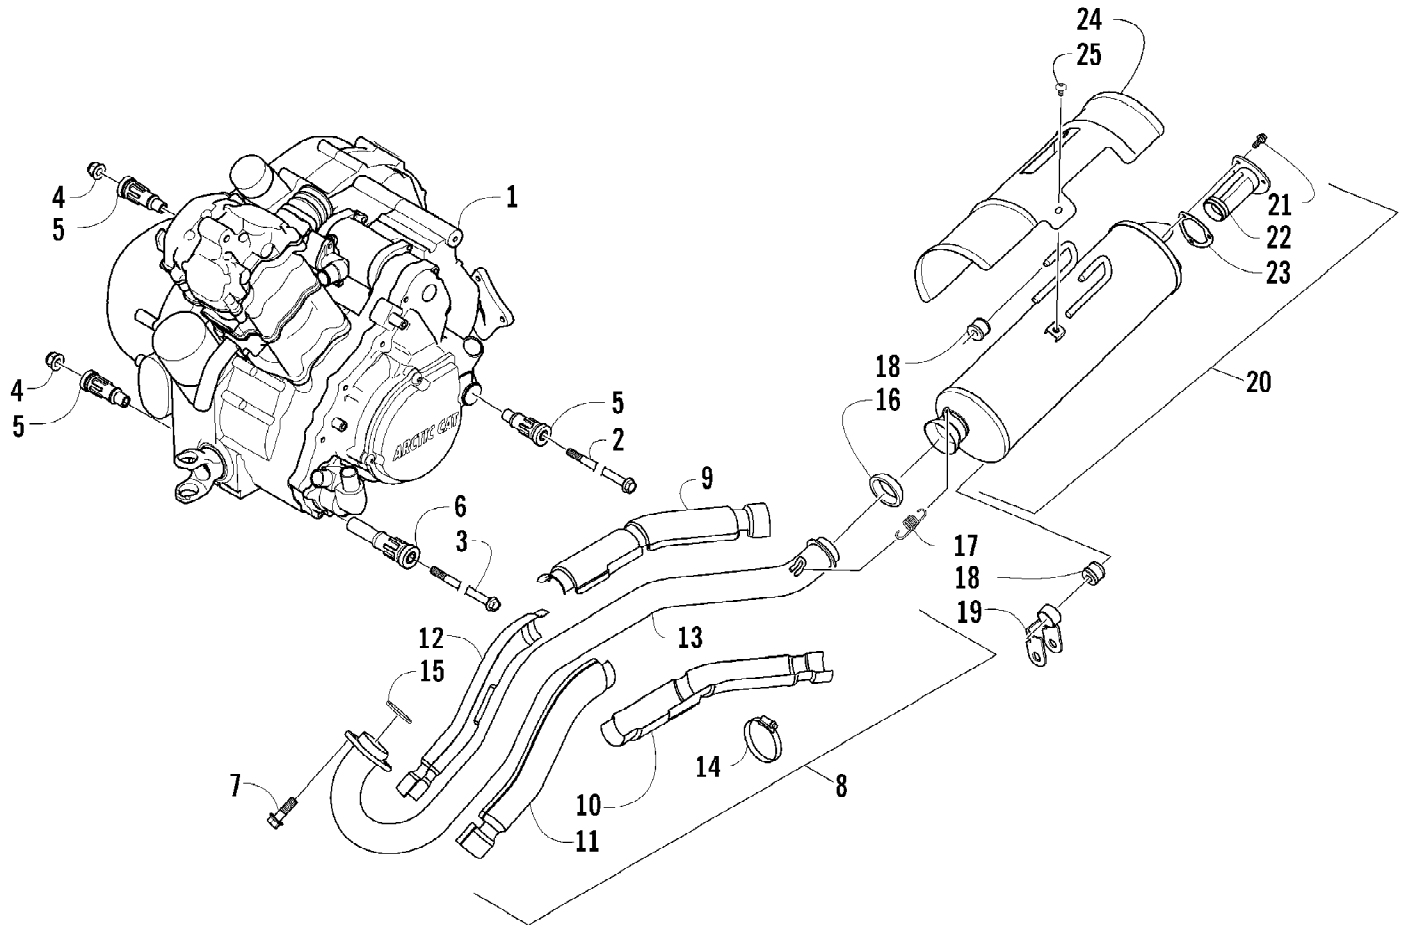

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2081234 of 93)
 ENGINE AND EXHAUST

Ref #	Part Number	Qty	S/P/F	Description
1	0800-039	1	S	Engine, A700CH1
2	0423-451	1		Screw, Cap
3	0423-405	1		Screw, Cap
4	8428-002	2		Nut, Lock
5	0801-129	3		Mount, Rubber - Engine
6	0801-122	1		Mount, Rubber - Engine
7	8408-820	2	/P	Screw, Cap
8	0512-345	1	/P	Pipe, Exhaust - Assembly (inc. 9-14)
9	0412-350	1		Shield, Exhaust Pipe - Outer - Rear
10	0412-339	1		Shield, Exhaust Pipe - Inner - Rear
11	0412-349	1		Shield, Exhaust Pipe - Inner - Front
12	0412-348	1		Shield, Exhaust Pipe - Outer - Front
13	0512-344	1		Pipe, Exhaust
14	0423-317	3	/P	Hose Clamp
15	0412-338	1	/P	Gasket, Exhaust Pipe
16	0412-375	1	/P	Seal, Exhaust
17	0612-668	2	/P	Spring, Extension
18	0412-215	3	S	Bushing, Exhaust Pipe
19	1506-732	1		Channel, Muffler Support
20	0512-355	1	/P	Muffler - Assembly (inc. 21-23)
21	8408-616	3		Screw, Cap
22	0512-219	1	/P	Arrester, Spark - Assembly
23	0412-313	1		Gasket, Spark Arrester
24	0412-373	1	/P	Cover, Muffler
25	8477-610	3		Screw, Machine

 
2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A20080135) (Page 35 of 93)
FRAME AND RELATED PARTS

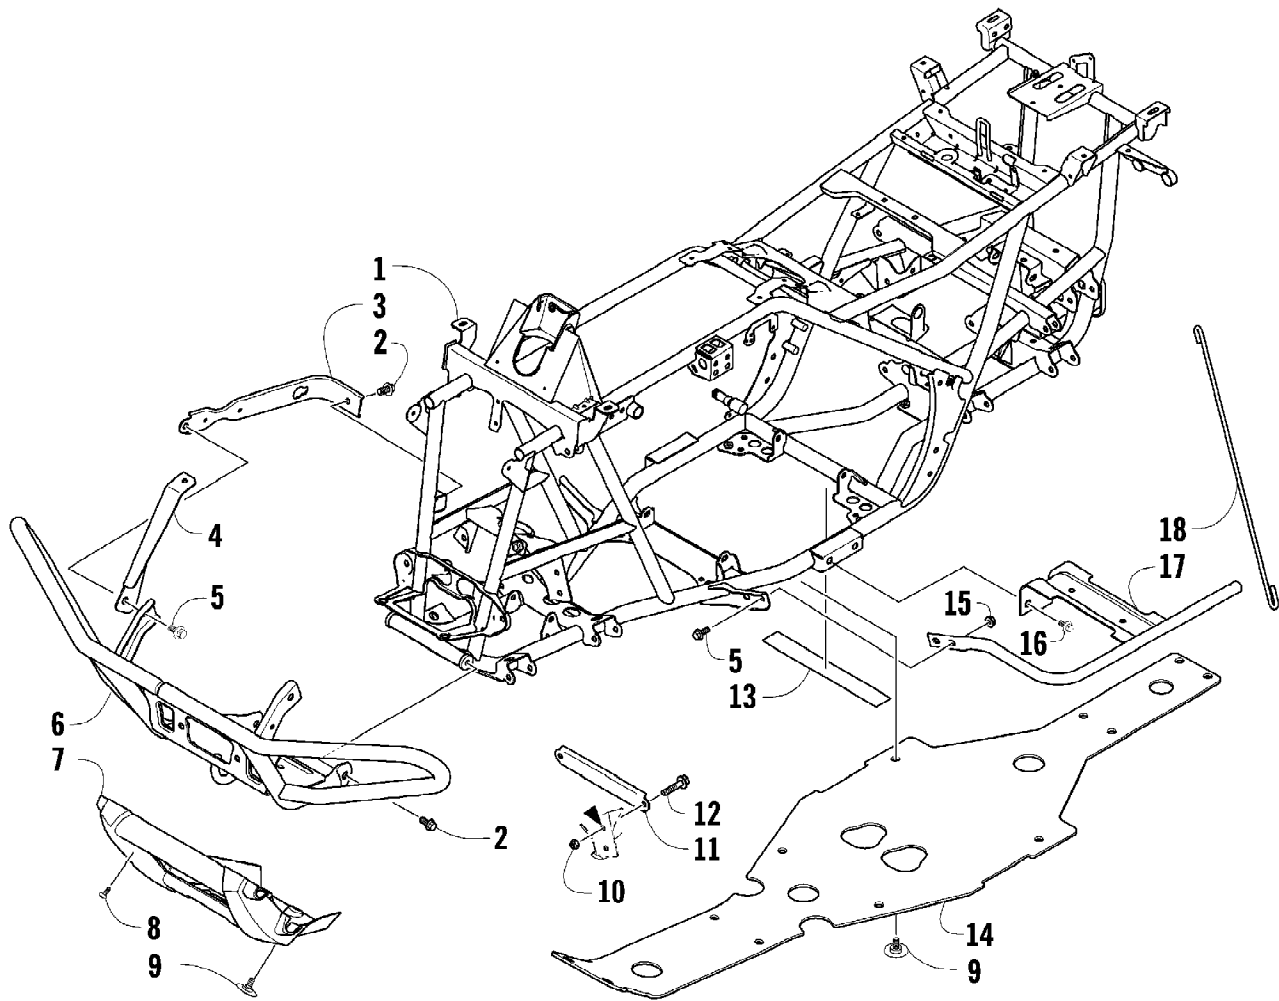

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2081234) (Page 34 of 33)
 FRAME AND RELATED PARTS

Ref #	Part Number	Qty	S/P/F	Description
1	2506-541	1		Frame, Main
2	8409-020	4	/P	Screw, Cap
3	1506-596	1	/P	Channel, Bumper Mounting - Right
3	0506-653	1	S	Channel, Bumper Mounting - Left
4	1506-562	1		Bracket, Mounting - Bumper - Right
4	1506-563	1		Bracket, Mounting - Bumper - Left
5	8408-816	6		Screw, Cap
6	1506-855	1	/P	Bumper, Front
7	2406-732	1		Fascia, Bumper - Front
8	0423-419	2		Screw, Machine
9	0423-101	14		Screw, Body
10	0423-744	2		Nut, Lock
11	1506-429	1	S	Brace, A-Arm
12	8409-025	2		Screw, Cap
13	0406-289	2		Pad, Frame
14	1406-030	1		Panel, Belly
15	8424-802	4		Nut, Flange
16	8409-016	4		Screw, Cap
17	1506-380	1		Footrest - Right
17	1506-379	1		Footrest - Left
18	2506-423	2		Rod, Support

 2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A20081237) (A20081237) (A20081237)
FRONT DRIVE GEARCASE ASSEMBLY

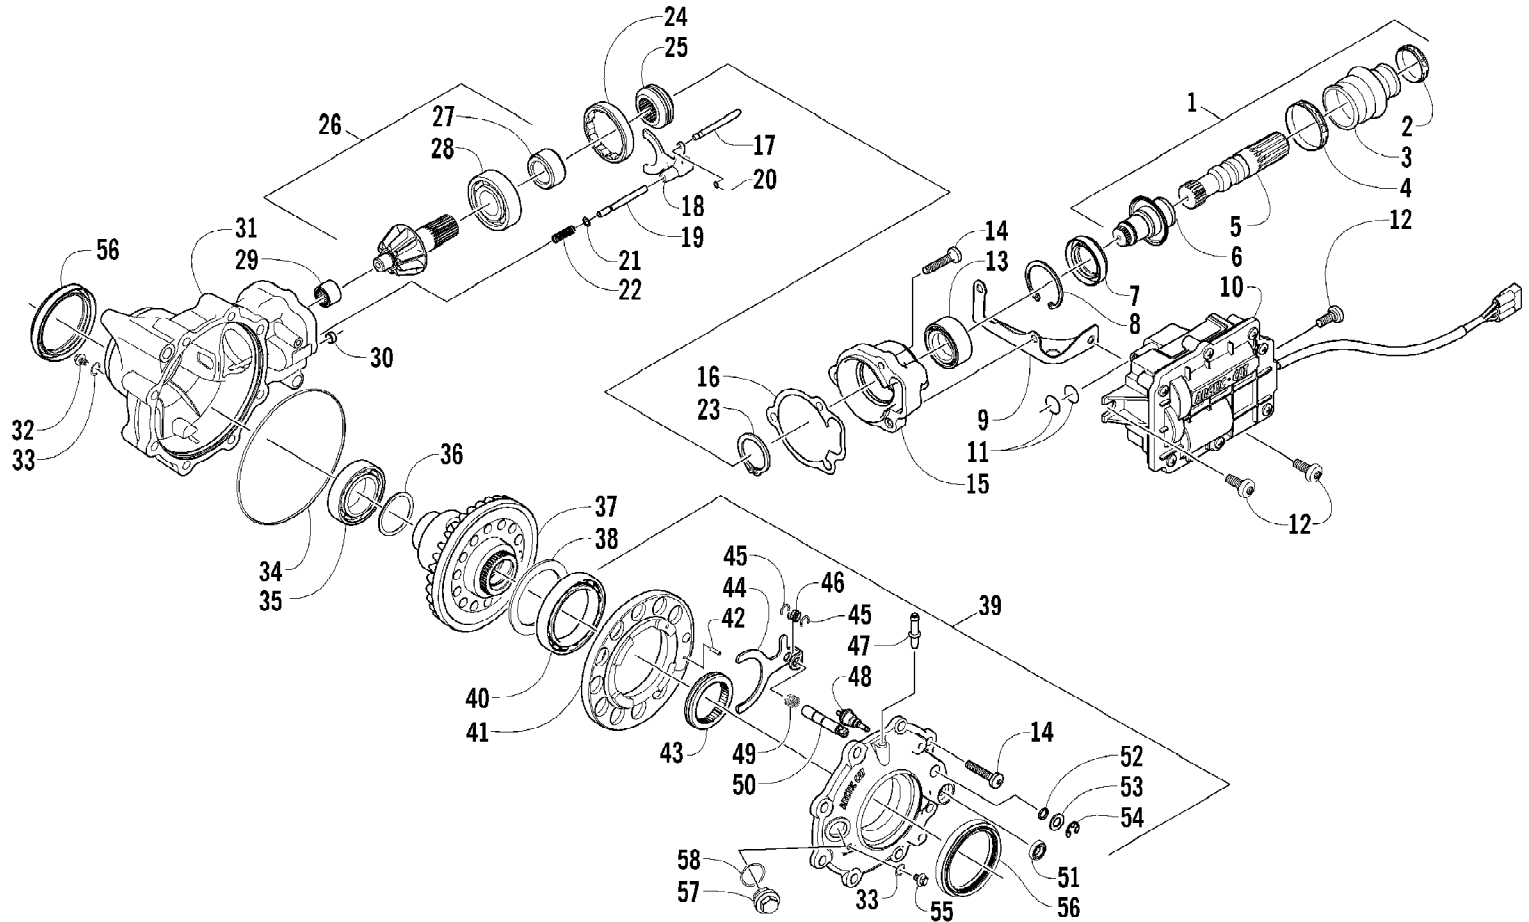


2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2008013401) Page 38 of 53
 FRONT DRIVE GEARCASE ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
	1502-306	1		Complete Front Drive Gearcase Assembly
1	1502-083	1		Shaft, Propeller - Assembly (inc. 2-6)
2	0423-411	1		Clamp, Boot
3	0402-985	1	/P	Boot, Propeller Shaft
4	0423-393	1		Clamp, Boot
5	1402-045	1		Shaft, Output
6	1502-085	1	/P	Shaft, Input
7	1402-011	1		Seal
8	0423-423	1		Ring, Retaining
9	0502-347	1		Bracket, Actuator
10	0502-579	1		Actuator (inc. one No. 11)
11	0423-498	2	S	O-Ring
12	0423-396	3		Screw, Self-Tapping
13	1402-043	1		Bearing
14	0423-118	11		Screw, Self-Tapping
15	0502-528	1	/P	Housing, Pinion
16	0402-947	1		Gasket, Flange
17	0402-997	1		Shaft, Selector
18	0402-998	1		Fork, Selector
19	0402-417	1		Shaft, Shuttle
20	0423-402	1		Ring, Retaining
21	0423-147	1		O-Ring
22	0402-999	1		Spring, Return
23	0423-417	1		Ring, Retaining
24	0402-357	1		Collar, Lock
25	0402-413	1		Coupler, Drive
26	0502-784	1		Gear, Pinion - Assembly - 11T (inc. 27-28)
27	0402-336	1		Collar, Retaining
28	0402-327	1		Bearing
29	0402-328	1		Bearing
30	0402-411	1		Pin, Dowel
31	0502-514	1		Housing, Gearcase
32	1402-210	1	/P	Plug, Magnetic (inc. one No. 33)
33	0423-153	2		O-Ring
34	0423-149	1		O-Ring
35	0402-393	1		Bearing
36	0402-405	AR		Shim
36	0402-406	AR		Shim
36	0402-407	AR		Shim
36	0402-408	AR		Shim
36	0402-409	AR		Shim
37	1502-233	1	S	Gear, Ring - 34T
38	1402-074	AR		Shim
38	1402-075	AR		Shim
38	1402-076	AR		Shim
38	1402-077	AR		Shim
38	1402-078	AR		Shim
39	1502-097	1		Cover, Gearcase (inc. one No. 33, 40-55, and one No. 56)
40	1402-053	1		Bearing
41	0502-413	1		Flange, Bearing
42	1402-079	1		Pin, Parallel

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2081234E of S3)
 FRONT DRIVE GEARCASE ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
43	1402-042	1		Collar, Sliding
44	1402-054	1		Fork
45	1402-058	2		Ring, Retaining
46	1402-057	1		Spring
47	1402-104	1		Fitting
48	0402-419	1		Switch, Indicator
49	1402-063	1		Spring
50	1402-055	1		Shaft, Lock
51	1402-056	1		Seal
52	0423-133	1		O-Ring
53	0423-132	1		Washer
54	0423-424	1		Ring, Retaining
55	1402-211	1		Plug, Oil Level (inc. one No. 33)
56	1402-441	2	S	Seal
57	0402-333	1	/P	Plug, Fill (inc. 58)
58	0423-154	1		O-Ring

 
2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A20812740) of 93
FRONT RACK AND HEADLIGHT ASSEMBLIES

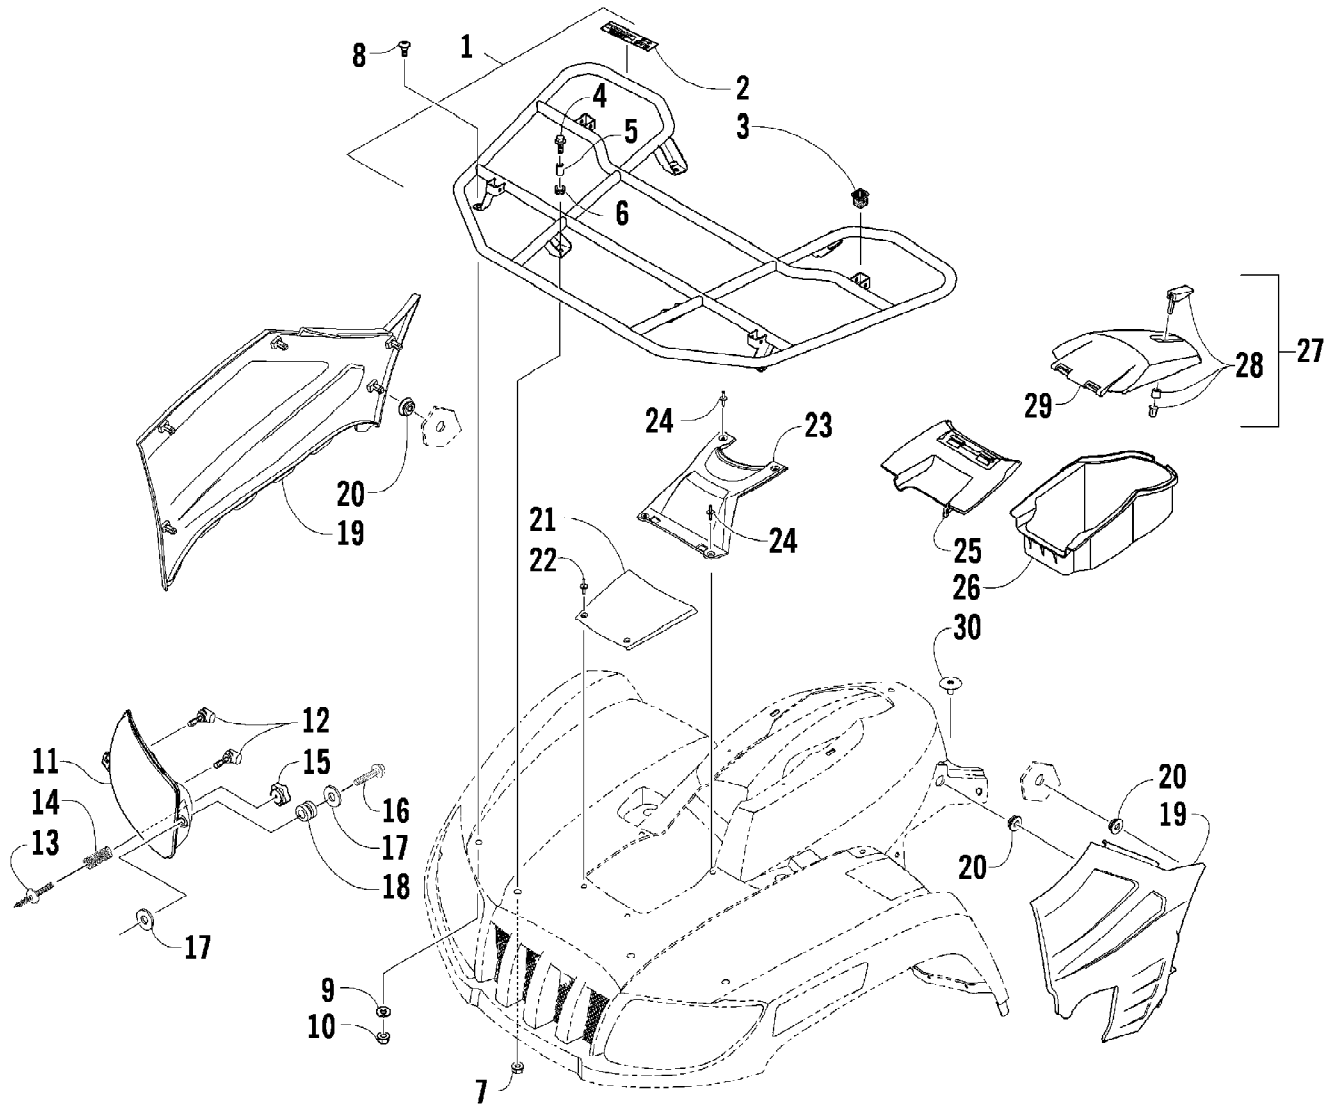

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2008741 of 93)
 FRONT RACK AND HEADLIGHT ASSEMBLIES

Ref #	Part Number	Qty	S/P/F	Description
1	2506-106	1		Rack, Front - Assembly (inc. 2-3)
2	0411-576	1		Decal, Warning - Front Rack Load
3	0441-592	4	/P	Bushing, Rack
4	8410-830	4		Screw, Cap
5	0423-669	4		Spacer
6	0423-465	4		Grommet
7	8432-802	4		Nut, Lock
8	0423-654	2		Screw, Shoulder
9	8050-222	2	/P	Washer
10	0423-540	2		Nut, Lock
11	0509-034	1	S	Headlight Assembly - Right (inc. 12)
11	0509-035	1		Headlight Assembly - Left (inc. 12)
12	0409-055	4		Bulb, Headlight
13	0423-514	2		Stud, Adjuster - Headlight
14	0423-522	2		Spring, Adjuster
15	0423-513	2		Knob, Adjuster
16	0623-785	4		Screw, Self-Tapping
17	8050-217	8	/P	Washer
18	0423-447	4		Grommet
19	2406-300	1		Panel, Side - Lower - Right
19	2406-419	1		Panel, Side - Lower - Left
20	0423-678	8		Grommet
21	1406-358	1		Cover, Access
22	0423-535	2		Rivet, Reinstallable
23	1406-484	1		Cover, Steering Post
24	0623-362	4		Rivet, Reinstallable
25	0470-513	1		Cover, Storage Box
26	1406-573	1		Box, Storage
27	2506-234	1		Lid, Storage Box w/Latch (inc. 28-29)
28	1406-599	1		Latch, Storage Box
29	0470-514	1		Lid, Storage Box
30	0423-101	2		Screw, Body

 
2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2008740) of 13
FRONT SUSPENSION ASSEMBLY

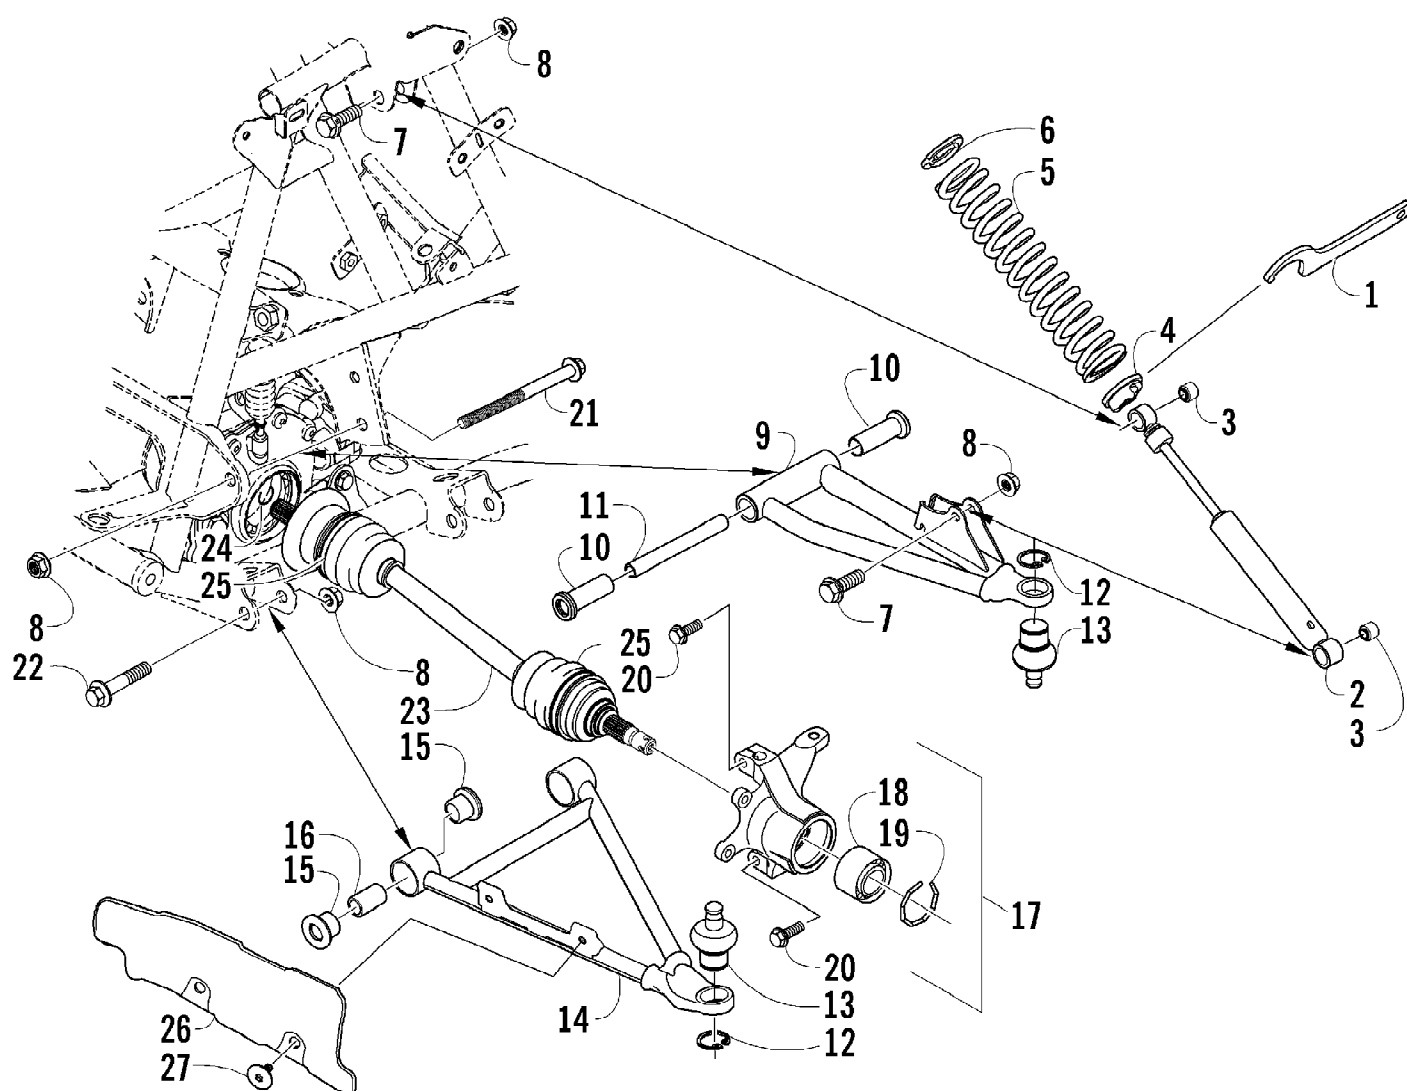

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A208124) of 13
 FRONT SUSPENSION ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0441-587	1		Wrench, Spanner
2	0403-188	2		Shock Absorber - Front (inc. 3)
3	0403-182	4		Bushing, Double-Bonded
4	0403-102	2		Cam, Spring Adjuster
5	0503-354	2		Spring, Shock Absorber
6	1603-889	2	/P	Retainer, Spring
7	8409-040	4		Screw, Cap
8	0423-744	10		Nut, Lock
9	0503-272	1	S	A-Arm, Upper Right (inc. 10-13)
9	0503-273	1	S	A-Arm, Upper Left (inc. 10-13)
10	0403-081	4	S	Bushing
11	0403-080	2		Collar
12	0423-009	4	/P	Clip, Ball Joint
13	0405-115	4	/P	Ball Joint - Front
14	0503-342	1	S	A-Arm, Lower Right (inc. 15-16 and two No. 12-13)
14	0503-343	1	S	A-Arm, Lower Left (inc. 15-16 and two No. 12-13)
15	0403-115	8	S	Bushing
16	0403-114	4	S	Collar
17	0505-460	1		Knuckle - Assembly - Right (inc. 18-19)
17	0505-461	1	S	Knuckle - Assembly - Left (inc. 18-19)
18	1402-027	2	S/P	Bearing, Wheel Hub
19	0423-423	2		Ring, Retaining
20	8409-030	4		Screw, Cap
21	0423-334	2		Screw, Cap
22	8409-075	4		Screw, Cap
23	0502-812	1	S	Axle, Drive - Front - Right (inc. 24-25)
23	0502-813	1	S	Axle, Drive - Front - Left (inc. 24-25)
24	1441-109	2	S	Clip, Retaining
25	0436-276	2	S	Repair Kit, Boot - Front Axle
26	1441-084	1		Guard, Boot - Right
26	1441-085	1		Guard, Boot - Left
27	0423-545	4	/P	Screw, Body

 
2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A200874E) (S)
GAS TANK ASSEMBLY

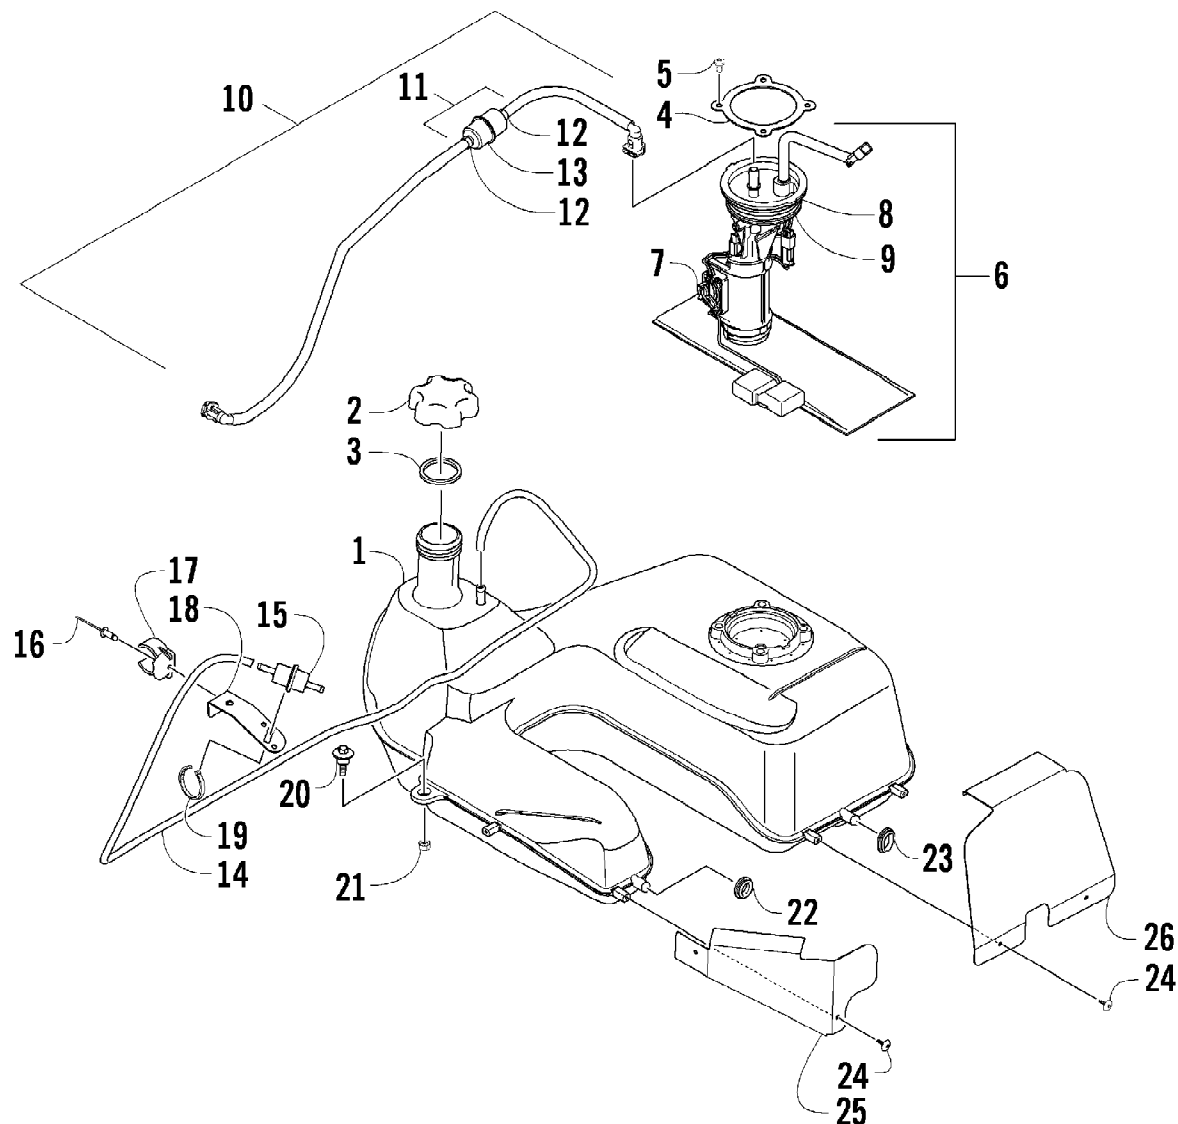

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2081274E of 93)
 GAS TANK ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0570-159	1		Tank, Gas - Assembly (inc. 2-5 and one No. 9)
2	0470-438	1	/P	Cap, Gas Tank (inc. 3)
3	0109-733	1	/P	Gasket, Gas Tank Cap
4	0470-606	1		Plate, Mounting - Fuel Pump
5	8476-612	4		Screw, Self-Tapping
6	0570-207	1	S	Pump, Fuel - Assembly (inc. 7-9)
7	0570-252	1	/P	Sensor, Fuel Level - Kit (inc. 8-9)
8	0470-614	1		Seal, Fuel Pump
9	0470-613	1		Seal, Fuel Pump
10	0570-243	1		Hose, Gasline - Assembly (inc. 11-13)
11	0570-246	1		Filter, Fuel - Kit (inc. 12-13)
12	0	2	F	Clamp
13	0	1	F	Filter, Fuel
14	0410-070	AR	/P	Hose, Gasline - 25 ft
15	0510-335	1	/P	Filter, In-Line
16	8060-628	1		Rivet
17	1670-826	1		Bracket, Fuel Filter
18	0470-827	1		Bracket, Filter Mounting
19	0123-788	1	/P	Tie, Cable
20	0423-732	2		Screw, Gas Tank
21	0623-038	1		Nut w/Washer
22	0423-460	1		Grommet
23	0423-806	1		Grommet
24	0623-797	4		Screw, Self-Tapping
25	0470-709	1		Shield, Heat - Gas Tank - Front
26	0470-710	1		Shield, Heat - Gas Tank - Rear

 
2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2081246) (Page 46 of 93)
GEAR SHIFTING ASSEMBLY

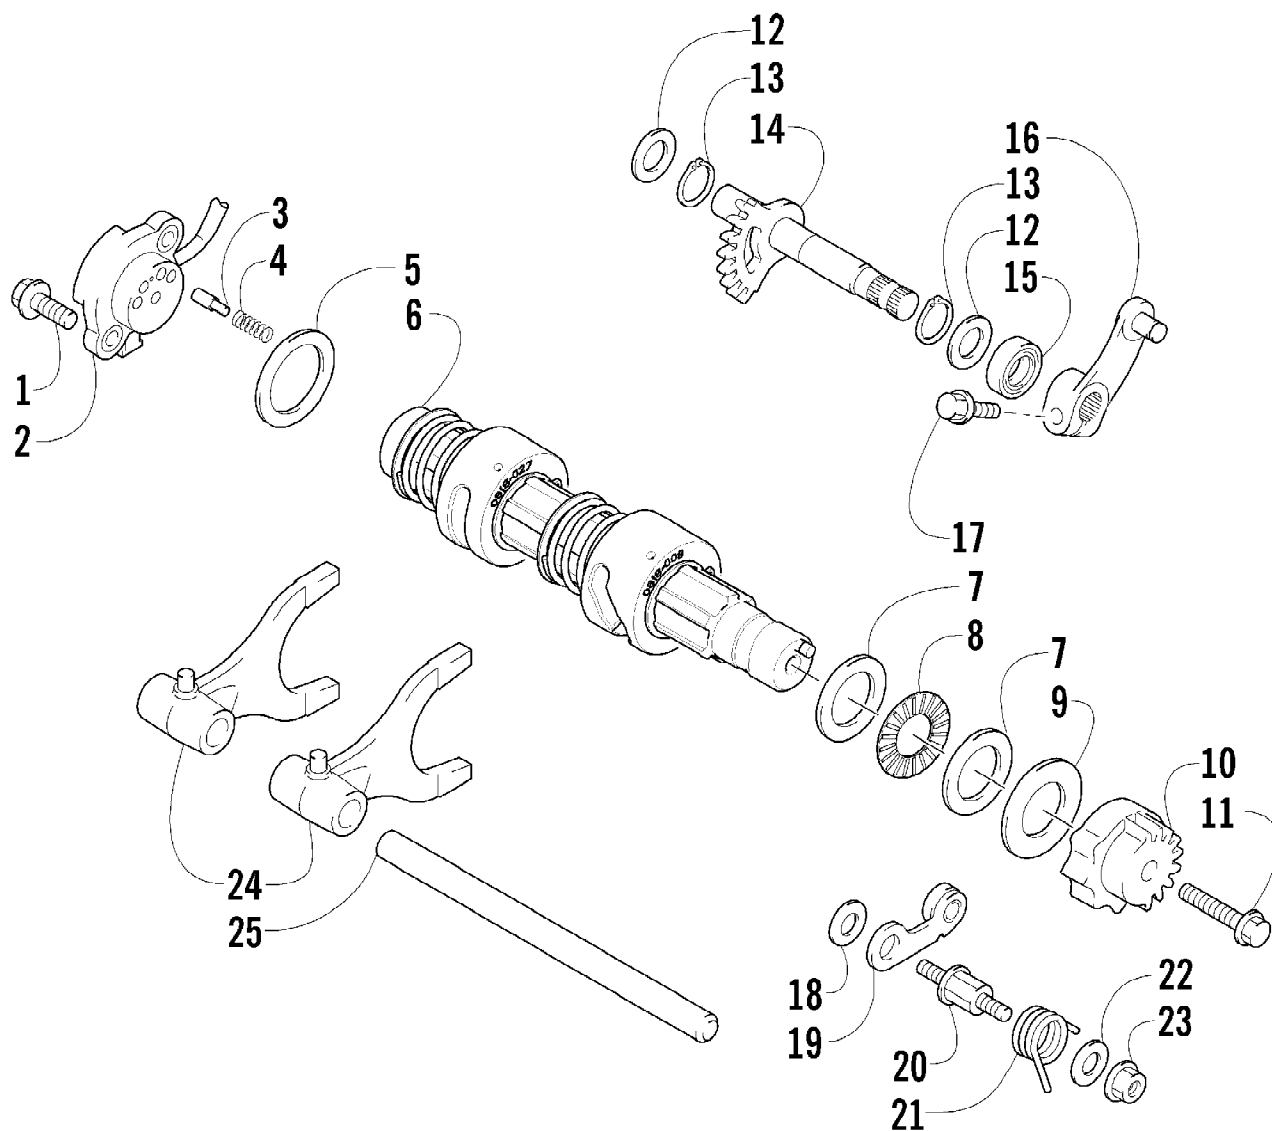

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2008ATV700H1FEI) (Page 4 of 13)
 GEAR SHIFTING ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	8470-520	2		Screw, Machine
2	0818-049	1	S	Base, Gear Shift Position
3	0818-013	2		Contact
4	0818-017	2		Spring
5	0828-040	1		Washer, Shift Shaft
6	0818-046	1		Shaft, Gear Shift - Assembly
7	0828-067	2		Washer, Shift Shaft
8	0832-034	1	S	Bearing
9	0828-037	1		Washer, Gear Shift Cam Plate
10	0818-005	1	S	Plate, Gear Shift Cam
11	0826-006	1		Bolt, Gear Shift Cam Plate
12	0828-036	2		Washer, Sub-Gear Shift Shaft
13	0831-010	2		Circlip, Sub-Gear Shift Shaft
14	0818-007	1	/P	Shaft, Sub-Gear Shift
15	0830-044	1		Seal, Sub-Gear Shift Shaft
16	0818-014	1		Arm, Shift
17	8468-620	1	/P	Screw, Machine
18	0828-038	1		Washer, Cam Stopper
19	0818-002	1		Stopper, Cam
20	0818-004	1		Support, Cam Stopper
21	0818-028	1		Spring, Cam Stopper
22	0828-035	1		Washer, Cam Stopper Spring
23	8424-602	1	/P	Nut, Cam Stopper Spring
24	0818-072	2	/P	Fork, Shift
25	0818-006	1		Shaft, Shift Fork

 
2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2008748) (13)
HANDLEBAR ASSEMBLY

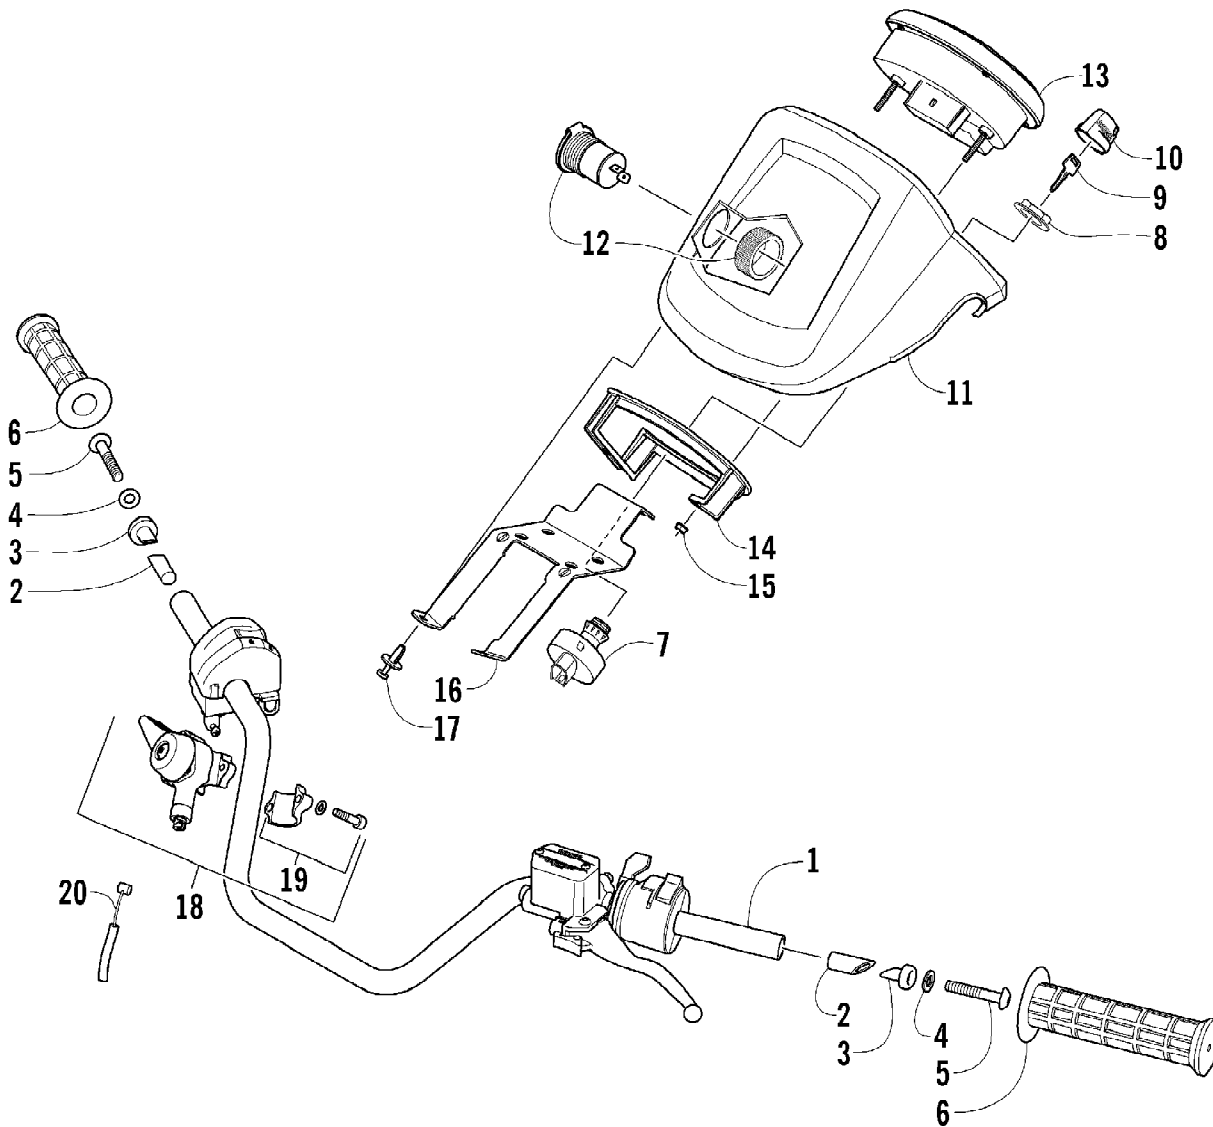

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2008ATV700H1FEI)
 HANDLEBAR ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0505-448	1		Tube, Handlebar
2	0405-218	2		Plug, Handlebar
3	0405-149	2		End Cap, Handlebar
4	8050-247	2	/P	Washer
5	8477-845	2		Screw, Machine
6	0405-147	2		Grip, Handlebar
7	0430-069	1	S	Switch, Ignition - Assembly (inc. 8-10)
8	0430-050	1		Nut, Flange - Ignition Switch
9	0430-042	1		Key, Ignition (Y Series - Left-Side Cut)
9	0430-043	1		Key, Ignition (Z Series - Right-Side Cut)
10	0430-054	1		Cover, Key
11	0505-515	1		Instrument Pod
12	0641-897	1	/P	Outlet, Accessory - 12V
13	0420-081	1		Gauge, LCD
14	0420-065	1	/P	Clamp, Plastic
15	0423-493	2		Nut, Hex
16	2506-470	1		Bracket, Mounting - Instrument Pod
17	0423-535	2		Rivet, Reinstallable
18	0502-527	1		Control, Differential Lock (inc. 19)
19	0502-613	1		Clamp, Differential Lock Control - Kit
20	0487-050	1	/P	Cable, Differential Lock

 
2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2081250) (FIS)
HYDRAULIC BRAKE ASSEMBLY

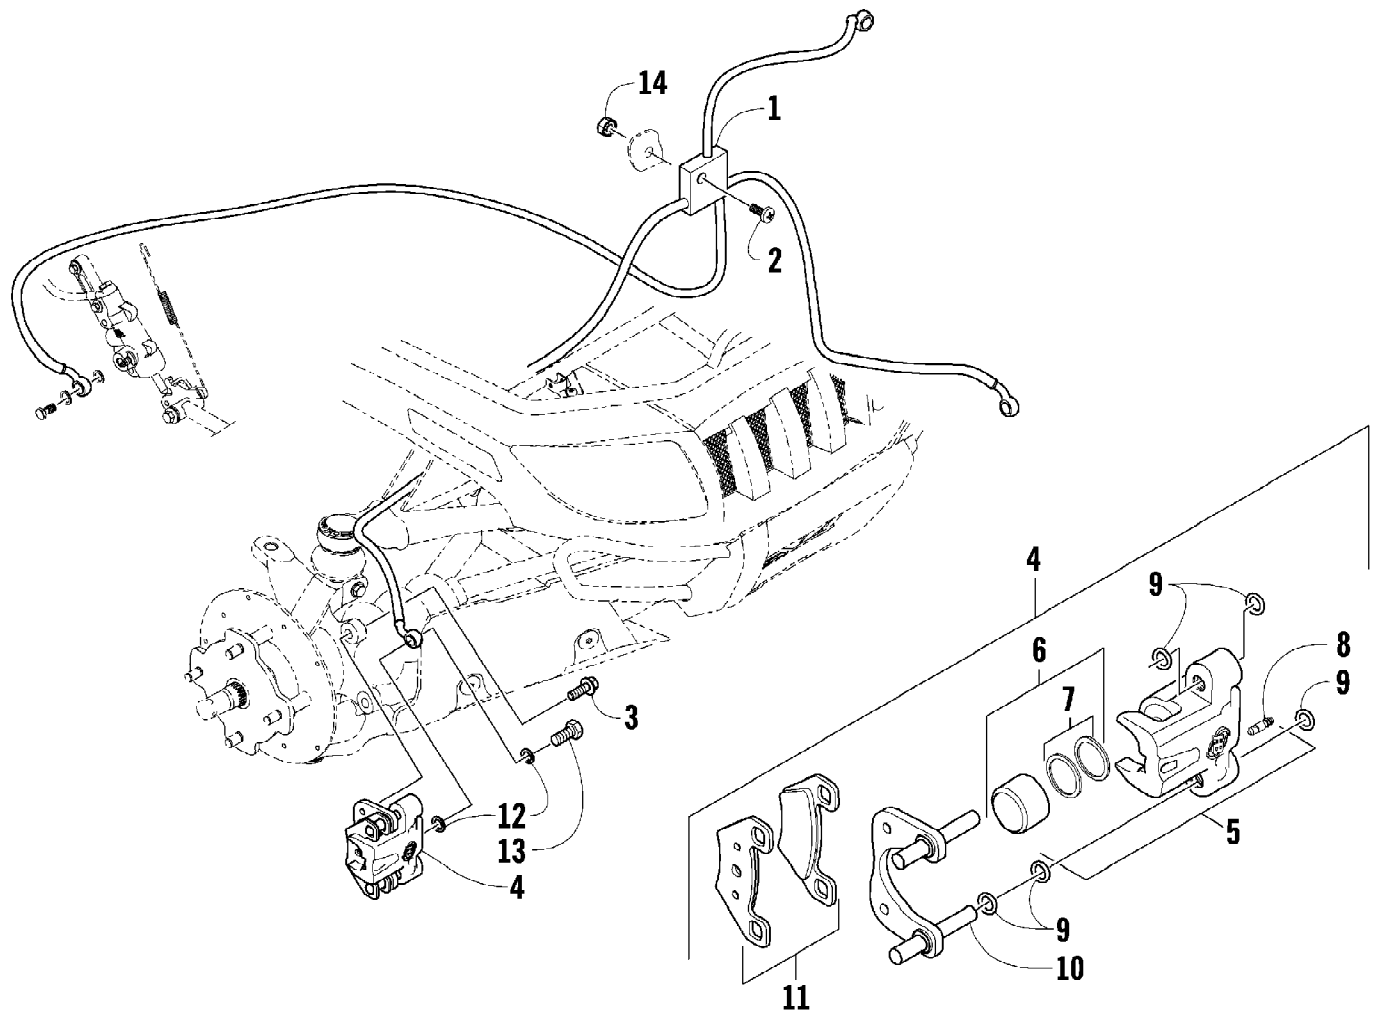

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2081251 of 13)
 HYDRAULIC BRAKE ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	1502-015	1		Hose, Brake - Assembly
2	8476-625	1		Screw, Cap
3	8408-821	4	/P	Screw, Cap
4	0502-878	1	S	Caliper, Brake - Right Front (inc. 5-11)
4	0502-879	1	S	Caliper, Brake - Left Front (inc. 5-11)
5	0502-603	1	S	Housing, Caliper - Assembly - Right Front (inc. 6-8)
5	0502-611	1	S	Housing, Caliper - Assembly - Left Front (inc. 6-8)
6	0502-606	2		Piston/Seal Set (inc. 7)
7	0502-607	2		Seal Set
8	0502-609	2	/P	Valve, Bleed
9	0502-608	2		O-Ring, Guide - Set
10	0502-605	2		Bracket Assembly
11	0502-875	2	S	Pad, Brake - Set
12	0423-178	4		Washer, Crush
13	0423-413	2		Bolt, Banjo-Fitting
14	0623-038	1		Nut, Lock

 
2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2008750 of 93)
HYDRAULIC HAND BRAKE ASSEMBLY

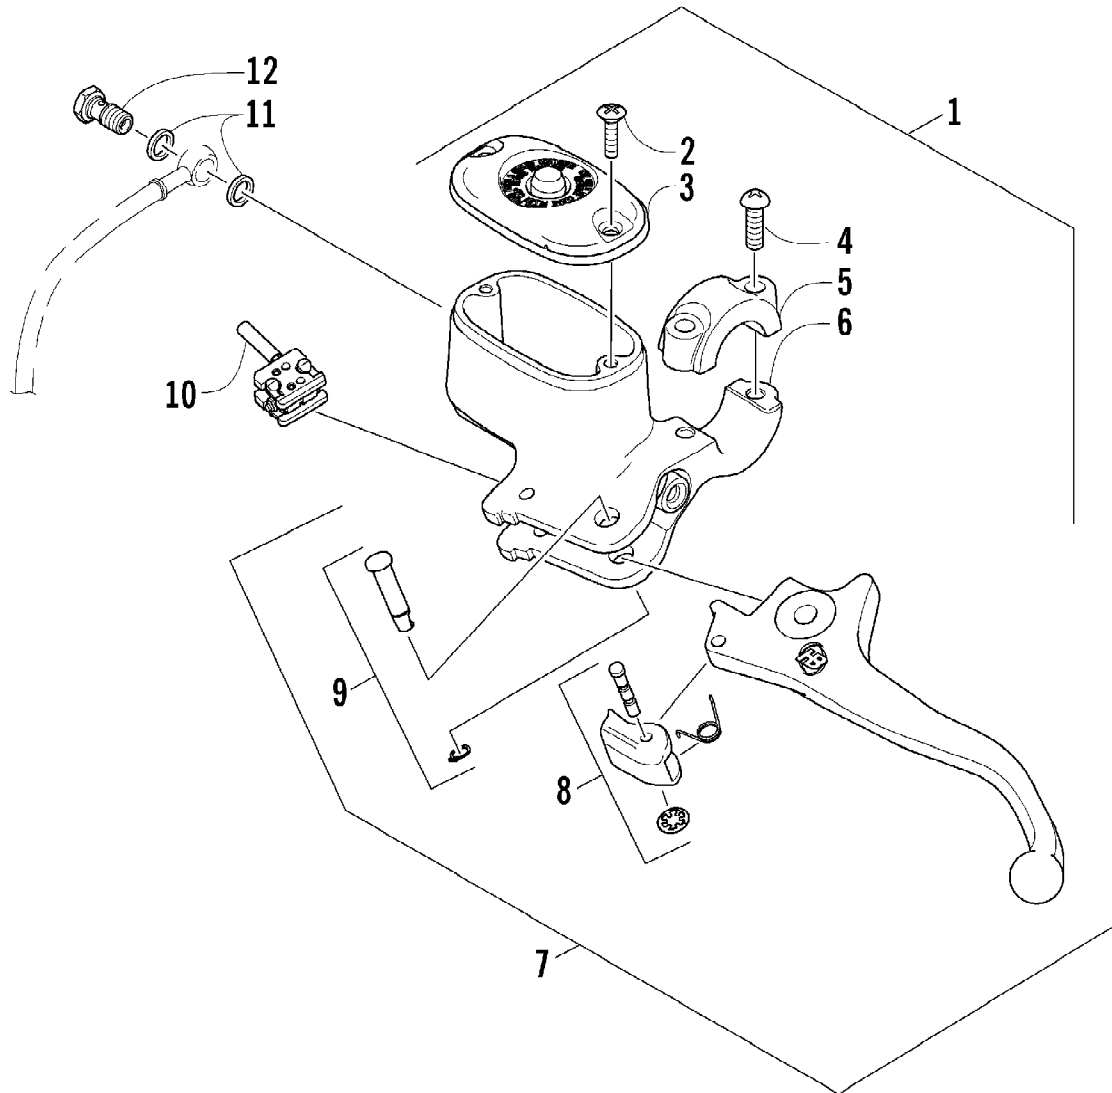

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A20081254 of S3)
 HYDRAULIC HAND BRAKE ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0502-914	1	S	Brake Assembly (inc. 2-10)
2	0502-566	1		Screw, Reservoir Cover
3	0502-868	1	/P	Cover, Reservoir
4	0502-568	1		Screw, Master Cylinder Clamp
5	0502-869	1		Clamp, Master Cylinder
6	0502-704	1		Master Cylinder Assembly
7	0502-866	1		Lever Assembly (inc. 8-9)
8	0502-867	1	/P	Lock, Brake Lever - Kit
9	0502-580	1		Lever Pin - Kit
10	0502-564	1	/P	Switch, Brake - Kit
11	0423-178	2		Washer, Crush
12	0423-413	1		Bolt, Banjo-Fitting

 
2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2081254 of 93)
MAGNETO ASSEMBLY

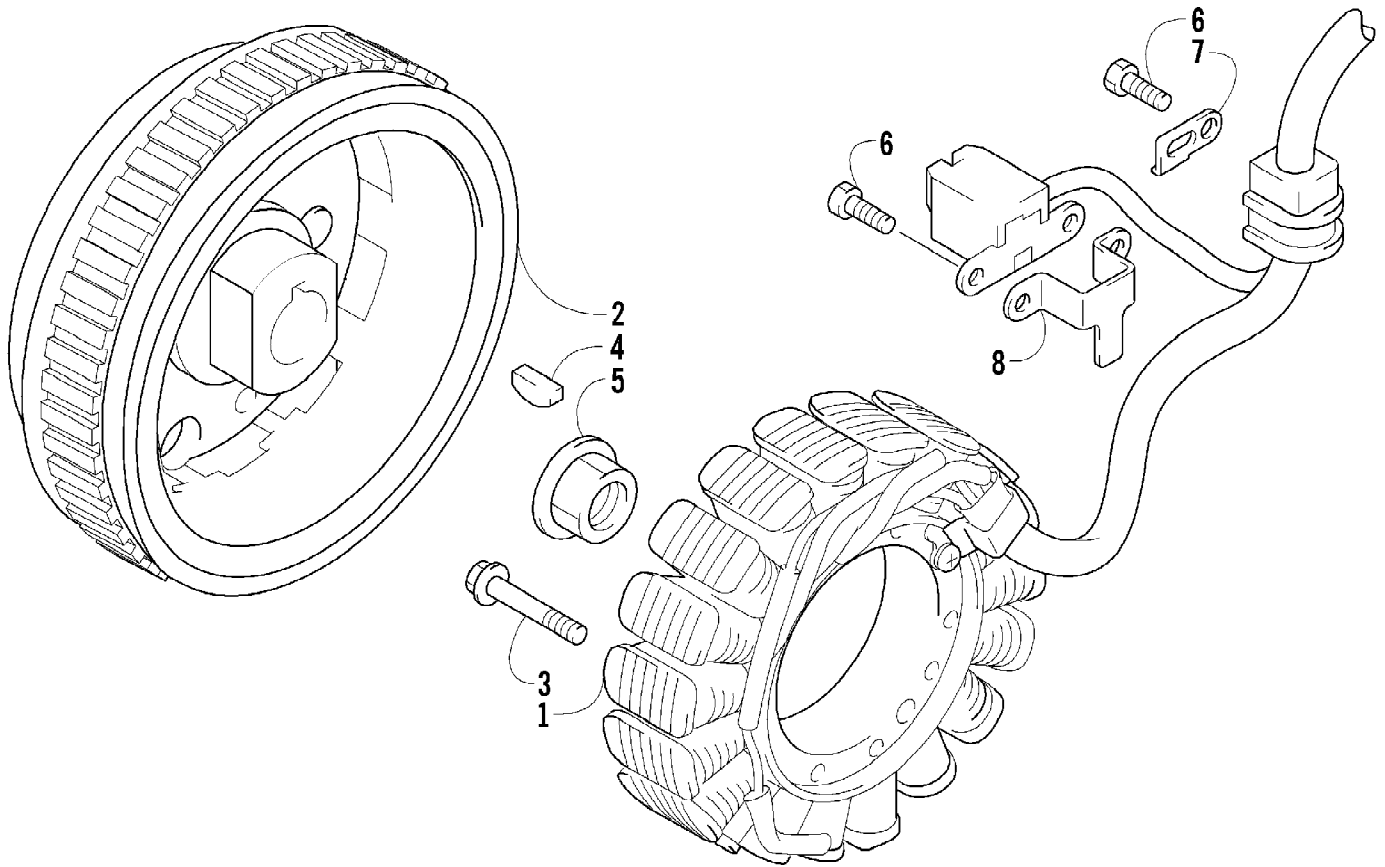

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2081254) (Page 5 of 13)
MAGNETO ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0802-041	1		Stator - Assembly
2	0802-048	1		Rotor/Flywheel
3	0826-102	3		Screw, Machine
4	0829-012	1		Key
5	0827-014	1		Nut
6	8470-510	3		Screw, Machine
7	0802-015	1		Clamp - No. 1
8	0802-016	1		Clamp - No. 2

 
2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2081254) (Page 5 of 9)
OIL FILTER/PUMP ASSEMBLY

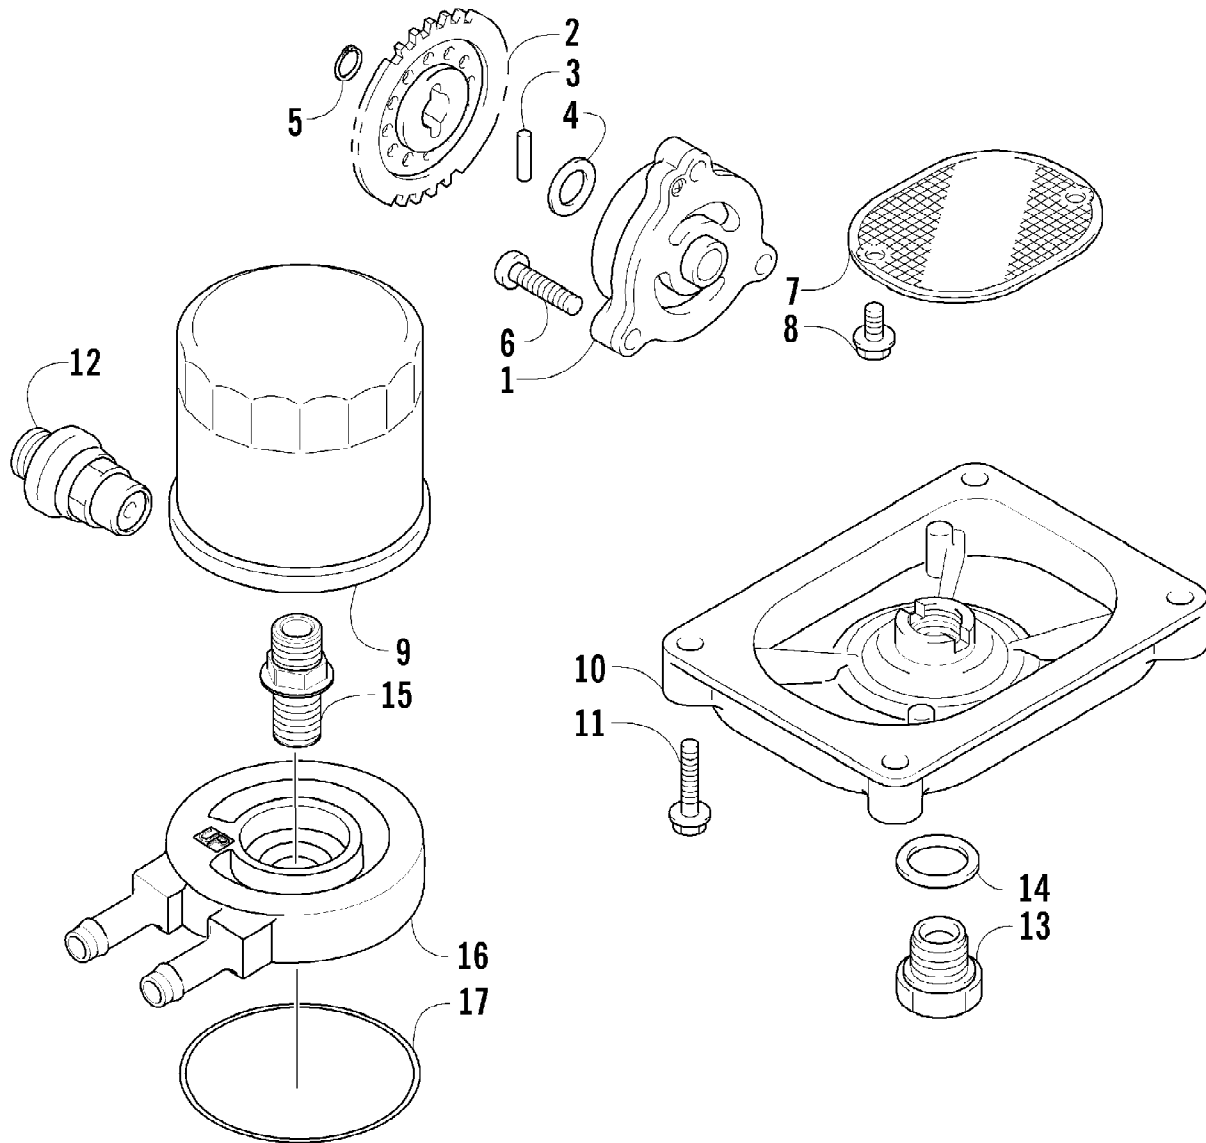

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2081254E of S3)
 OIL FILTER/PUMP ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0812-023	1		Pump, Oil
2	0812-002	1	S	Gear, Driven
3	0829-009	1		Pin
4	0828-007	1	/P	Washer
5	0831-002	1		Circlip
6	0826-039	3		Screw, Cap
7	0812-057	1	/P	Strainer, Oil
8	0826-040	2		Screw, Machine
9	0812-029	1	S	Filter, Oil
10	0812-053	1		Cap, Oil Strainer
11	8468-625	4		Screw, Machine
12	0812-007	1		Valve, Oil-Relief - Assembly
13	0812-006	1		Plug, Drain
14	0830-017	1		Gasket, Drain Plug
15	0812-056	1		Stand, Oil Fitting
16	0812-055	1		Tower, Oil Fitting
17	0830-166	1		O-Ring, Oil Fitting

 2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2008754) (Page 5 of 13)
OUTER MAGNETO COVER ASSEMBLY

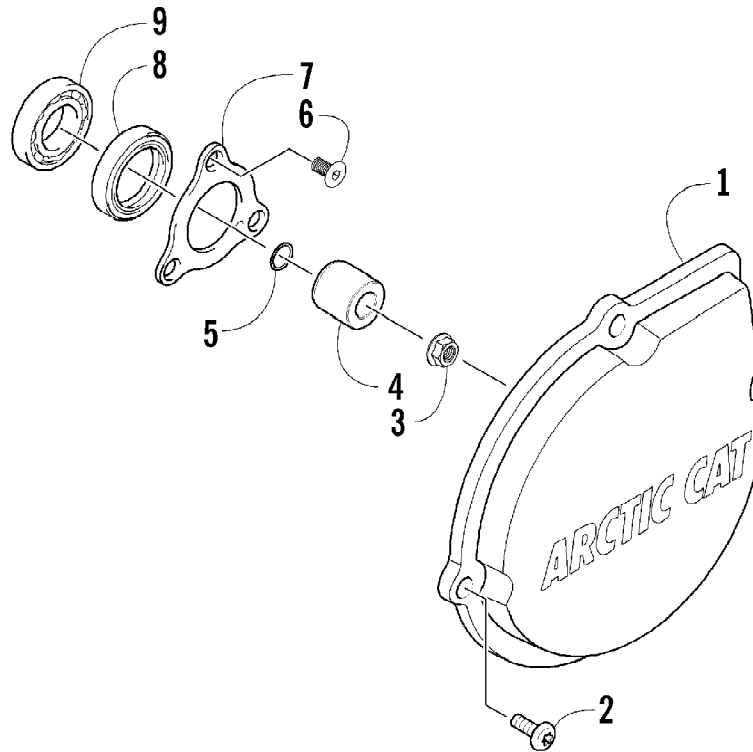


2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2081254) (S)
 OUTER MAGNETO COVER ASSEMBLY

Page 54 of 93

Ref #	Part Number	Qty	S/P/F	Description
1	0820-062	1		Cover, Magneto - Outer
2	0826-008	4		Screw, Machine
3	0827-008	1		Nut
4	0820-061	1		Bushing
5	0830-108	1		O-Ring
6	0826-031	3		Screw
7	0805-008	1		Retainer, Oil Seal
8	0830-158	1		Seal, Oil
9	0832-045	1	S	Bearing

 
2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2081260) (FIS)
REAR DRIVE GEARCASE ASSEMBLY

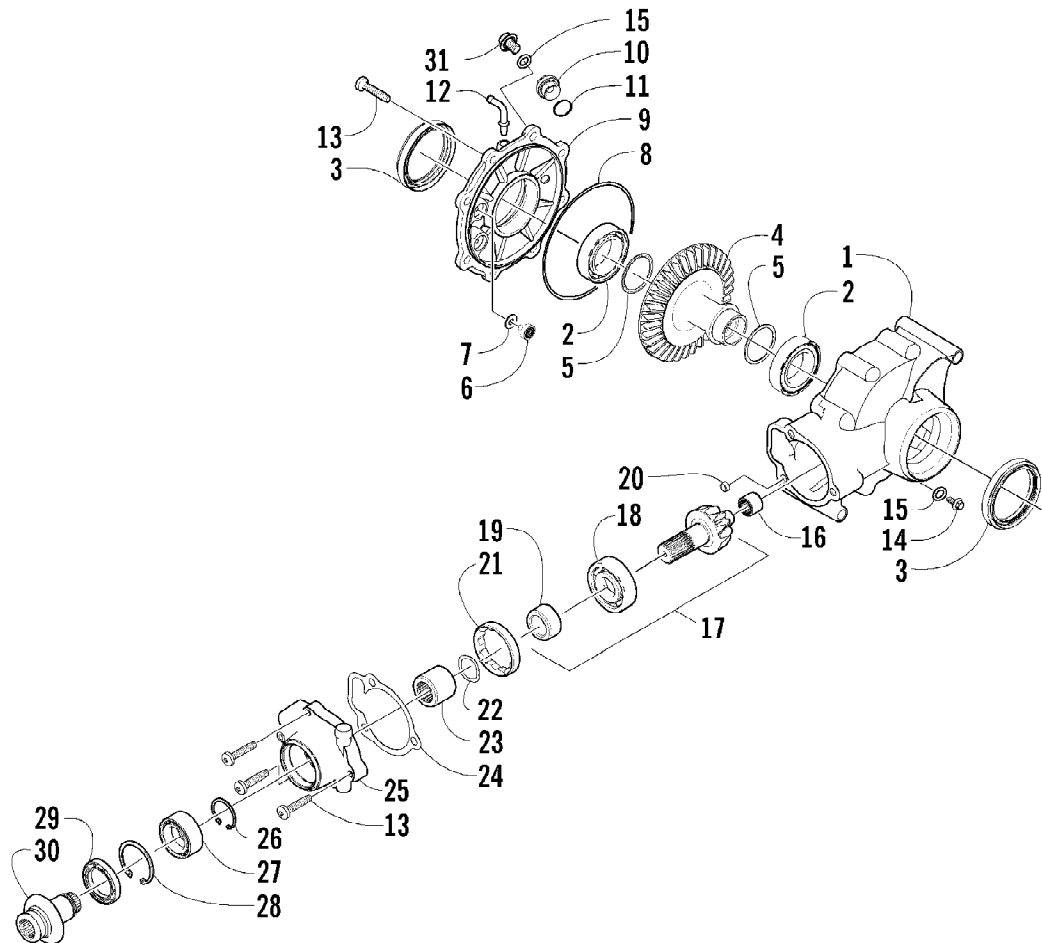

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A20081261 of 13)
 REAR DRIVE GEARCASE ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
	1502-080	1		Complete Rear Drive Gearcase Assembly
1	0502-622	1		Housing, Gearcase
2	0402-393	2		Bearing
3	1402-441	2	S	Seal
4	1402-033	1		Gear, Ring - 34T
5	0402-405	AR		Shim
5	0402-406	AR		Shim
5	0402-407	AR		Shim
5	0402-408	AR		Shim
5	0402-409	AR		Shim
6	0402-326	1		Button, Thrust
7	0402-429	AR		Shim
7	0402-430	AR		Shim
7	0402-431	AR		Shim
7	0402-432	AR		Shim
7	0402-433	AR		Shim
8	0423-149	1		O-Ring
9	1502-082	1		Cover, Gearcase
10	0402-333	1	/P	Plug, Fill (inc. 11)
11	0423-154	1		O-Ring
12	1402-102	1		Fitting
13	0423-118	11		Screw, Self-Tapping
14	0402-450	1	S	Plug, Magnetic (inc. one No. 15)
15	0423-153	2		O-Ring
16	0402-328	1		Bearing
17	0502-784	1		Gear, Pinion - Assembly - 11T (inc. 18-19)
18	0402-327	1		Bearing
19	0402-336	1		Collar, Retaining
20	0402-411	1		Pin, Dowel
21	0402-331	1		Collar, Lock
22	0402-982	1		Washer, Wave
23	0402-981	1		Collar, Shaft
24	0402-947	1		Gasket, Flange
25	0502-529	1		Housing, Pinion
26	0423-417	1		Ring, Retaining
27	1402-043	1		Bearing
28	0423-423	1		Ring, Retaining
29	1402-011	1		Seal
30	1502-085	1	/P	Shaft, Input
31	1402-211	1		Plug, Oil Level (inc. one No. 15)

 
2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2008700H1FEI) (Page 62 of 93)
REAR RACK AND FOOTWELL ASSEMBLIES

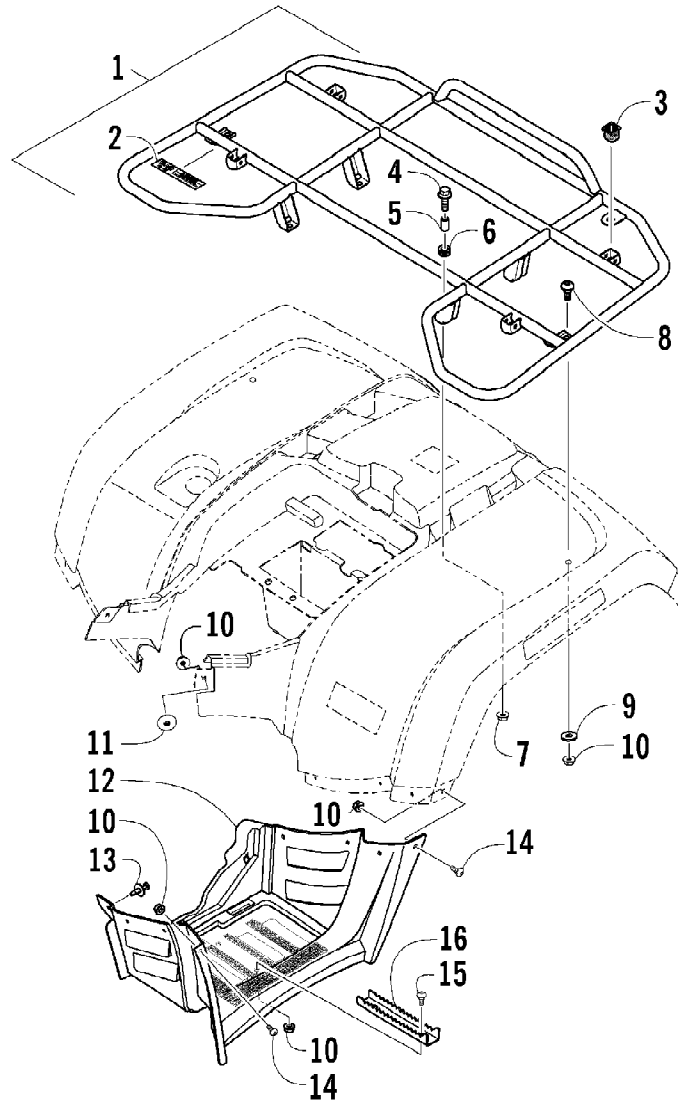

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2081261 of 93)
 REAR RACK AND FOOTWELL ASSEMBLIES

Ref #	Part Number	Qty	S/P/F	Description
1	2506-125	1		Rack, Rear - Assembly (inc. 2-3)
2	0411-648	1		Decal, Warning - Rear Rack Load
3	0441-592	4	/P	Bushing, Rack
4	8410-830	4		Screw, Cap
5	0423-669	4		Spacer
6	0423-465	4		Grommet
7	8432-802	4		Nut, Lock
8	0423-654	2		Screw, Shoulder
9	8050-222	2	/P	Washer
10	0423-540	24		Nut, Lock
11	0423-101	2		Screw, Body
12	1406-356	1		Footwell - Right
12	2406-425	1	/P	Footwell - Left
13	0623-362	2		Rivet, Reinstallable
14	0423-419	16		Screw, Machine
15	0423-355	4		Screw, Shoulder
16	1506-125	2	/P	Footpeg

 
2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2008704) (93)
REAR SUSPENSION ASSEMBLY

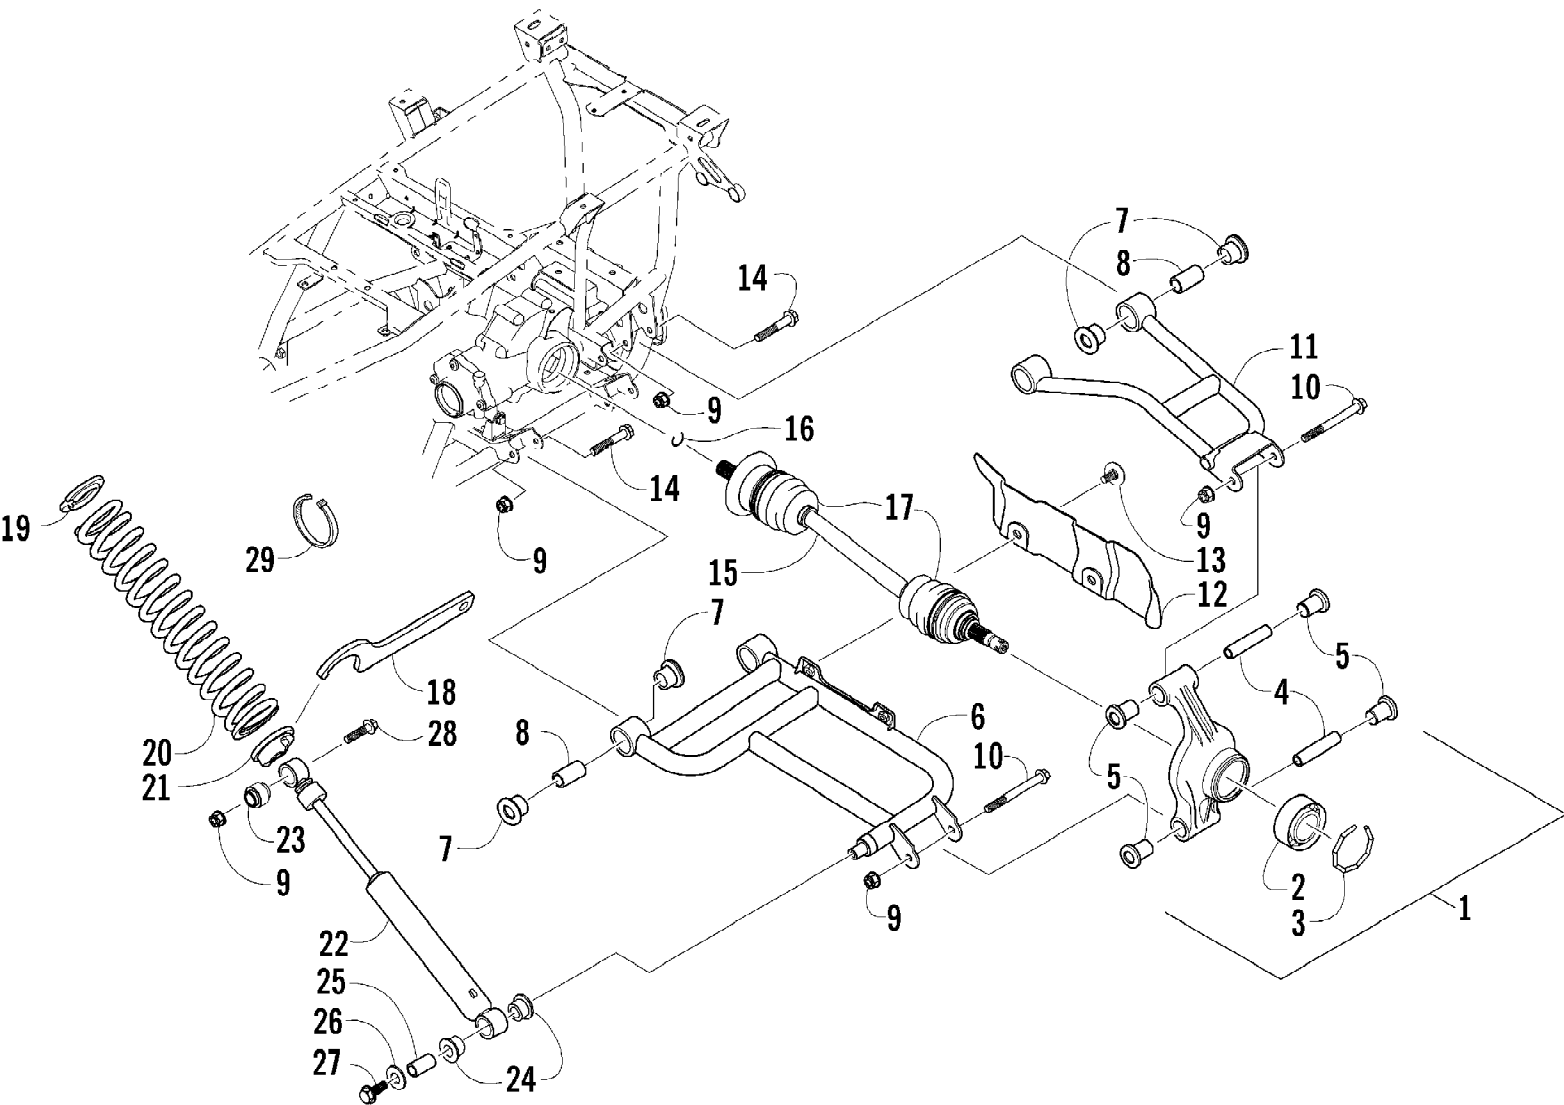

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2081261 of 93)
 REAR SUSPENSION ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0504-372	1	S	Knuckle, Right Rear - Assembly (inc. 2-5)
1	0504-373	1	S/P	Knuckle, Left Rear - Assembly (inc. 2-5)
2	1402-027	2	S/P	Bearing, Wheel Hub
3	0423-423	2		Ring, Retaining
4	0403-038	4	S/P	Collar, Suspension Bushing
5	0403-032	8	S	Bushing, Suspension
6	0504-440	1	S	A-Arm, Rear - Lower Right (inc. 7-8)
6	0504-441	1	S	A-Arm, Rear - Lower Left (inc. 7-8)
7	0403-115	16	S	Bushing
8	0403-114	8	S	Collar
9	0423-744	14		Nut, Lock
10	8409-000	4		Screw, Cap
11	0504-512	1	S	A-Arm, Rear - Upper Right (inc. 7-8)
11	0504-513	1	S	A-Arm, Rear - Upper Left (inc. 7-8)
12	1441-086	1		Guard, Boot - Right
12	1441-087	1		Guard, Boot - Left
13	0423-545	4	/P	Screw, Body
14	8409-075	8		Screw, Cap
15	0502-811	2	S	Axle, Drive (inc. 16-17)
16	0441-893	2	S	Clip, Retaining
17	0436-276	2	S	Repair Kit, Boot - Rear Axle
18	0441-587	1		Wrench, Spanner
19	1603-889	2	/P	Retainer, Spring
20	0504-517	2		Spring, Suspension
21	0404-057	2		Cam, Spring Adjuster
22	0404-158	2		Shock Absorber - Rear (inc. 23-25)
23	0403-182	2		Bushing, Double-Bonded
24	0603-955	4		Bushing, Shock Absorber
25	1603-219	2	S	Sleeve, Shock Absorber
26	0423-087	2		Washer
27	8408-820	2	/P	Screw, Cap
28	8409-040	1		Screw, Cap - Right
28	8409-050	1		Screw, Cap - Left
29	0123-788	AR	/P	Cable Tie

 
2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2081261 of 93)
SEAT ASSEMBLY

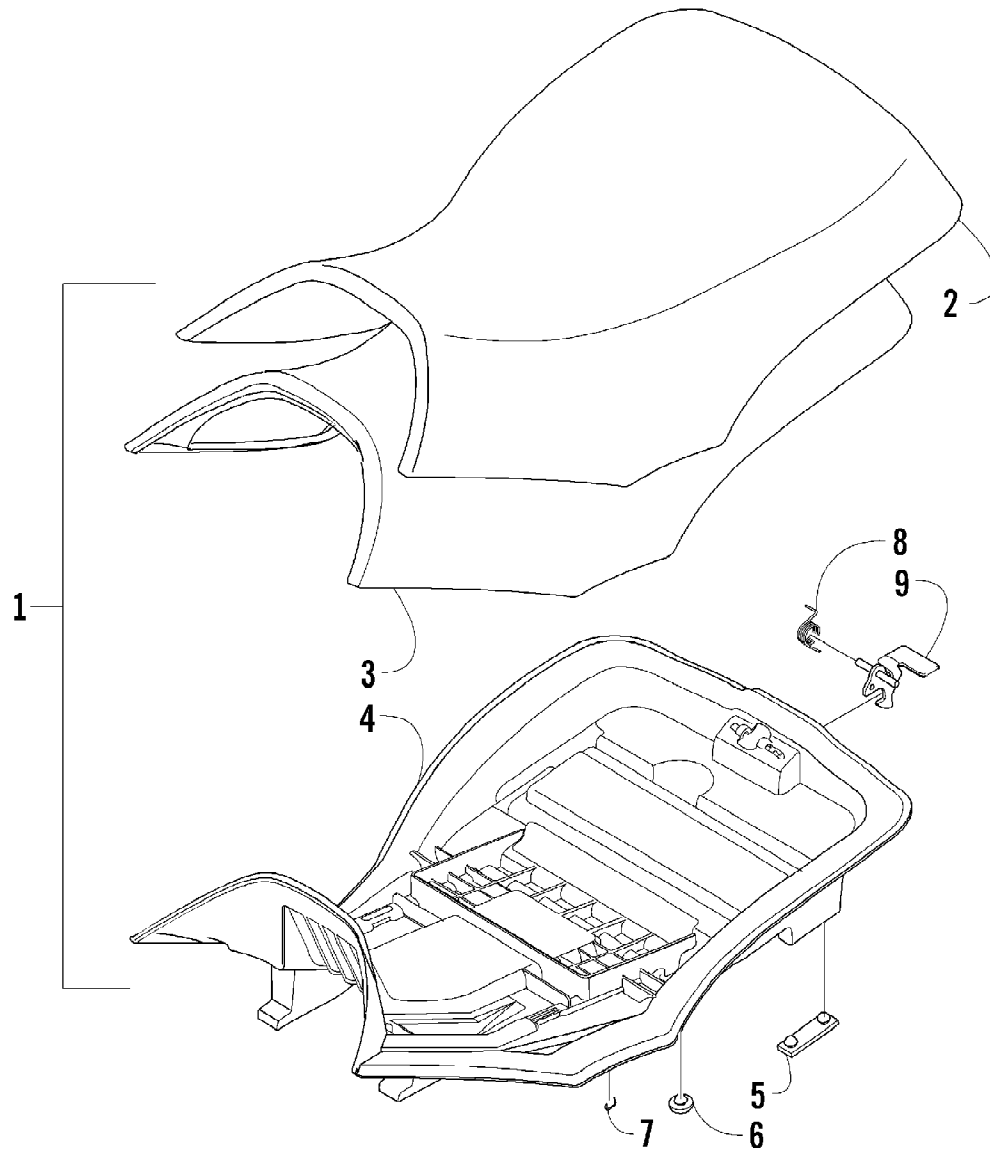

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2081267 of 93)
SEAT ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	2506-805	1		Seat Assembly (inc. 2-9)
2	2506-756	1		Cover, Seat
3	2506-755	1		Foam, Seat
4	2406-144	1	S/P	Base, Seat - Assembly (inc. 5-6)
5	0406-879	2		Bumper, Seat - Rear
6	0406-877	4	/P	Bumper, Seat - Front
7	0624-528	AR	/P	Staple
8	1406-592	1	/P	Spring, Seat Latch
9	1506-156	1		Latch, Seat

 
2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2008700H1FEIS)
SECONDARY DRIVE ASSEMBLY

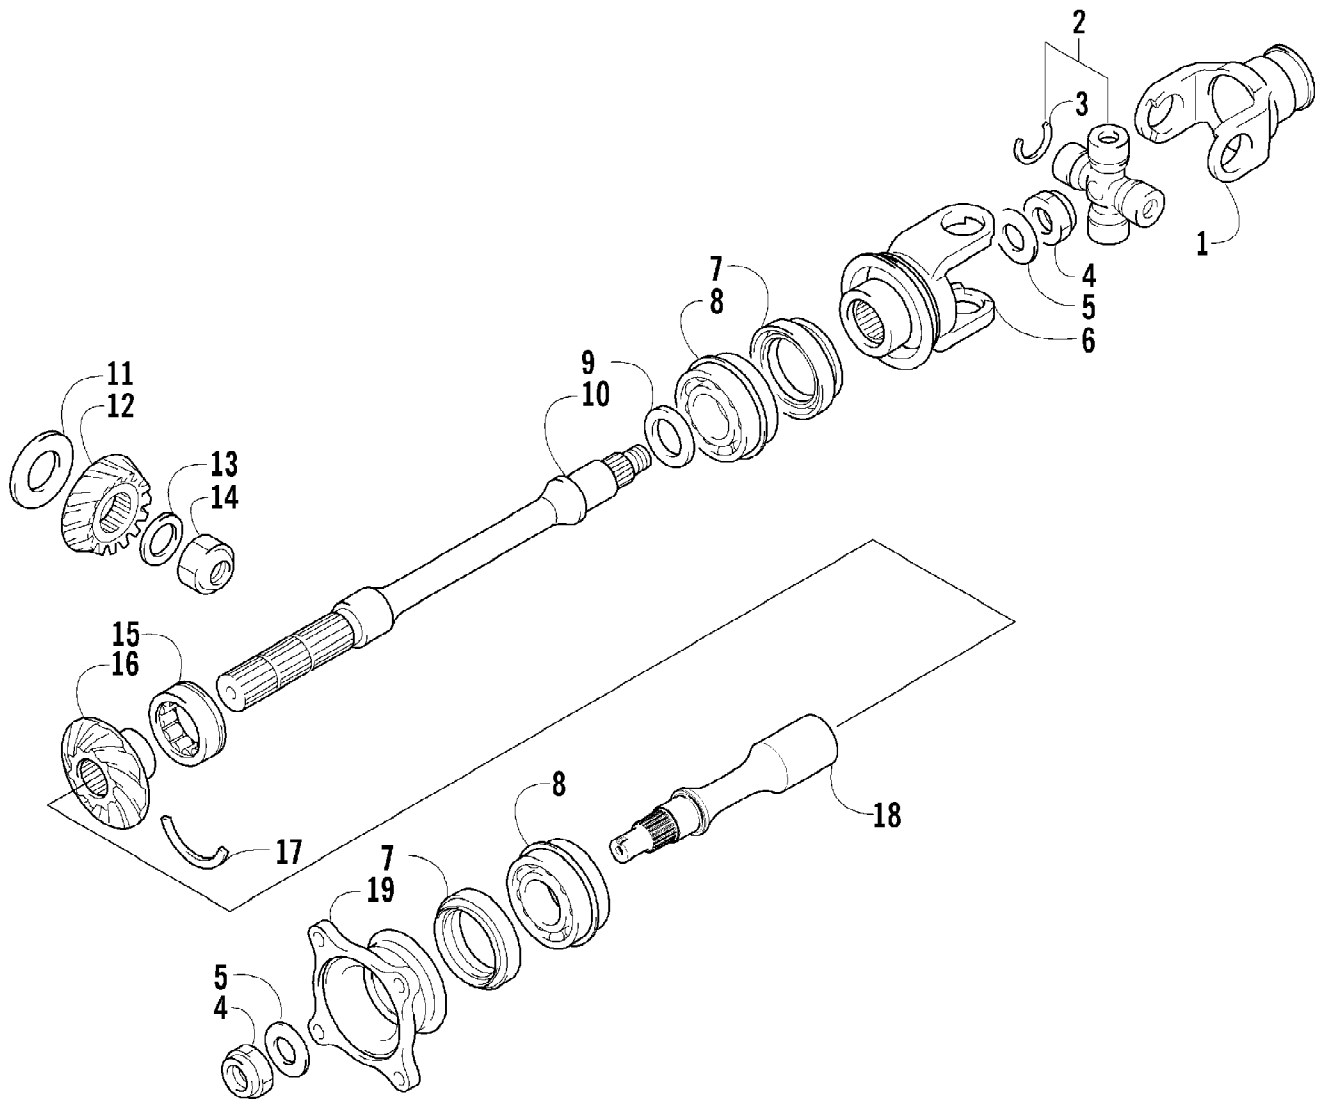

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2008ATV700H1FEI) Page 6 of 13
 SECONDARY DRIVE ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0819-063	1		Yoke, Propeller Shaft Joint
2	1402-164	1	/P	Joint, Universal - Set (inc. 3)
3	0423-450	4		Circlip
4	0827-013	2		Nut, Rear Output Joint
5	0828-020	2		Washer, Rear Output Flange
6	0819-061	1		Yoke, Drive Output - Front
7	0830-043	2		Seal, Oil - Driven Shaft
8	0832-017	2		Bearing, Driven Shaft
9	0828-021	AR		Shim, 25 x 34 x 0.25 mm
9	0828-022	AR		Shim, 25 x 34 x 0.30 mm
9	0828-023	AR		Shim, 25 x 34 x 0.70 mm
9	0828-024	AR		Shim, 25 x 34 x 0.90 mm
9	0828-025	AR		Shim, 25 x 34 x 0.95 mm
9	0828-026	AR		Shim, 25 x 34 x 1.00 mm
9	0828-027	AR		Shim, 25 x 34 x 1.05 mm
9	0828-028	AR		Shim, 25 x 34 x 1.10 mm
9	0828-029	AR		Shim, 25 x 34 x 1.15 mm
10	0819-003	1	S	Shaft, Secondary Driven - Front
11	0828-030	AR		Shim, 24 x 48 x 0.25 mm
11	0828-031	AR		Shim, 24 x 48 x 0.30 mm
11	0828-032	AR		Shim, 24 x 48 x 0.35 mm
11	0828-033	AR		Shim, 24 x 48 x 0.90 mm
11	0828-018	AR		Shim, 24 x 48 x 0.95 mm
11	0828-062	AR		Shim, 24 x 48 x 1.00 mm
11	0828-063	AR		Shim, 24 x 48 x 1.05 mm
11	0828-064	AR		Shim, 24 x 48 x 1.10 mm
11	0828-065	AR		Shim, 24 x 48 x 1.15 mm
12	0819-001	1		Gear, Secondary Drive
13	0828-019	1		Washer
14	0827-012	1		Nut
15	0832-016	1		Bearing, Driven Gear
16	0819-002	1		Gear, Secondary Driven
17	0819-011	1		Ring, Driven Bearing
18	0819-053	1		Shaft, Secondary Driven - Rear
19	0819-005	1		Flange, Output Joint - Rear

 
2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2081270) of 13
SECONDARY TRANSMISSION ASSEMBLY

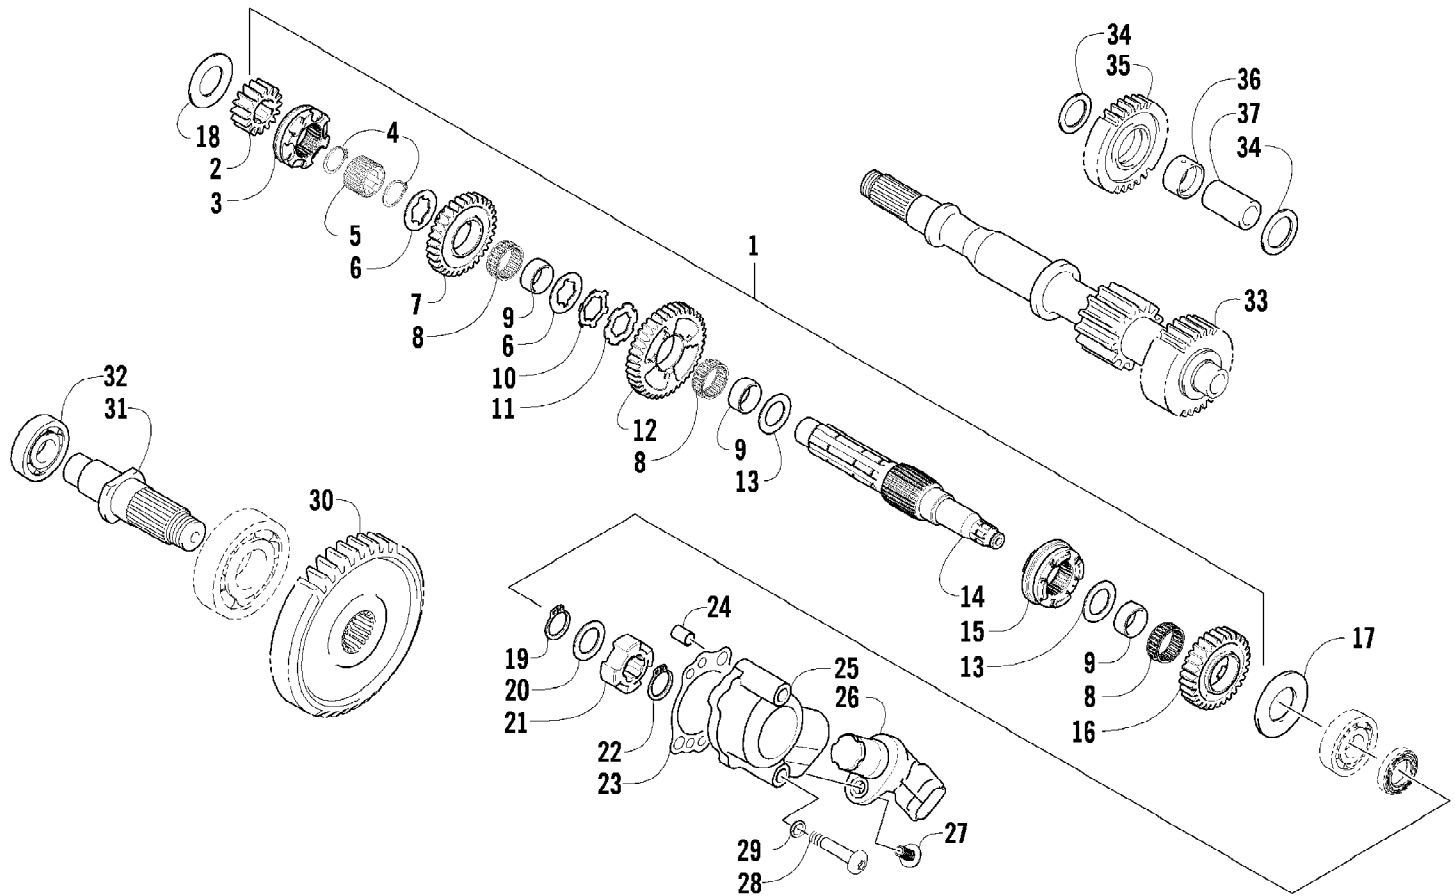

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2008741 of 93)
 SECONDARY TRANSMISSION ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0822-048	1		Countershaft Assembly (inc. 2-16)
2	0822-008	1		Gear, Drive
3	0822-014	1		Dog, Reverse Driven Gear
4	0831-011	2		Circlip
5	0822-045	1		Spacer, Reverse Driven Gear
6	0828-008	2		Washer
7	0822-013	1		Gear, Reverse Driven
8	0832-011	3		Bearing
9	0822-005	3		Bushing
10	0828-014	1		Washer, Lock
11	0828-015	1		Washer, Lock
12	0822-004	1		Gear, Driven - Low
13	0822-046	2		Washer, Driven Gear
14	0822-003	1		Countershaft
15	0822-007	1		Dog, Sliding
16	0822-006	1		Gear, Driven - High
17	0828-011	1		Washer, Drive Gear
18	0828-010	1		Washer, Drive Gear
19	0831-040	1		Ring, Retaining
20	0828-069	1		Washer, Thrust
21	0822-050	1		Trigger, Speedometer Sensor
22	0831-039	1		Ring, Retaining
23	0830-129	1		Gasket
24	0829-023	2		Pin, Dowel
25	0822-049	1		Housing, Speedometer Sensor
26	0824-042	1	/P	Sensor, Speedometer
27	8468-620	1	/P	Screw, Machine
28	8468-645	2		Screw, Machine
29	0830-107	2		Seal, Fastener
30	0822-009	1		Gear, Driven
31	0822-067	1	/P	Shaft, Output
32	0832-014	1	S	Bearing
33	0822-001	1		Driveshaft
34	0828-016	2		Washer, Reverse Idle Gear
35	0822-011	1		Gear, Reverse Idle
36	0822-012	1		Bushing, Reverse Idle Gear
37	0822-015	1		Shaft, Reverse Idle

 
2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2081274) (13)
SHIFT LEVER ASSEMBLY

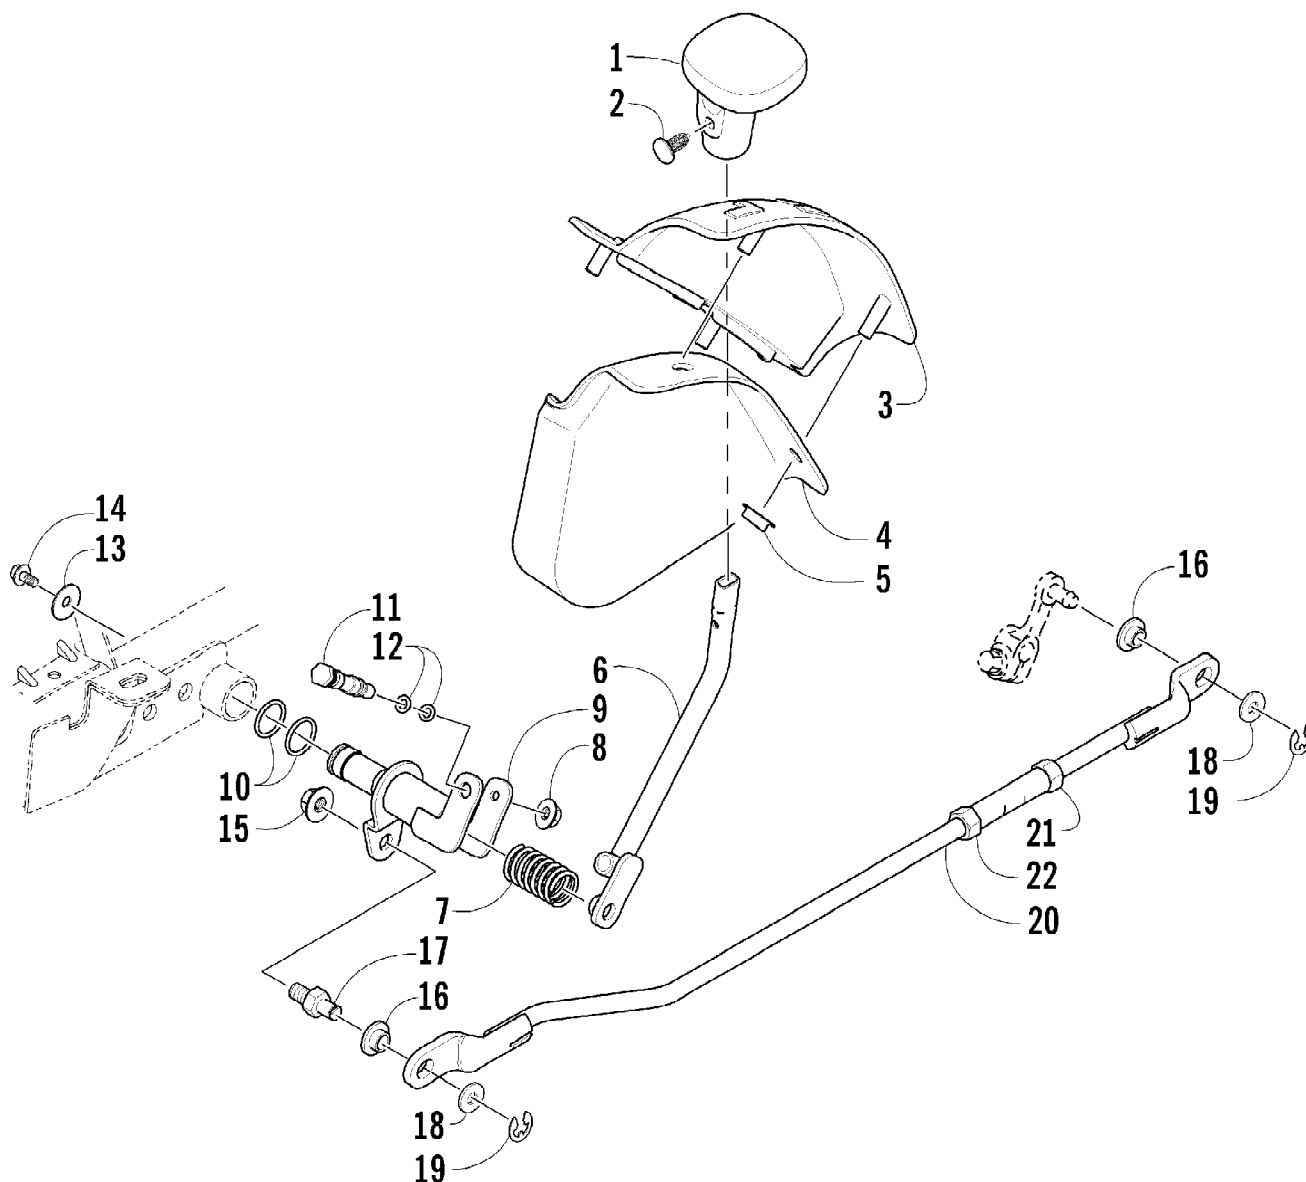

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2081274) (13)
 SHIFT LEVER ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0402-843	1	/P	Knob, Shift Lever
2	0423-345	1		Clip, Push
3	1402-576	1		Plate, Shift
4	2406-345	1		Shield, Shift Plate
5	0423-357	4		Nut, Stamped
6	0502-659	1		Lever, Shift
7	0402-678	1	/P	Spring, Shift Lever
8	8424-602	1	/P	Nut
9	0502-742	1		Axle, Shift Lever
10	0423-299	2	/P	O-Ring
11	0402-675	1		Axle, Pivot
12	0423-182	2	/P	O-Ring
13	0423-087	1		Washer
14	8408-812	1		Screw, Cap
15	8424-802	1		Nut, Hex
16	0423-091	2		Bushing, Shift Linkage
17	1402-621	1		Pin, Mounting - Shift Linkage
18	0623-094	2		Washer
19	0423-169	2	/P	E-Ring
20	1502-200	1		Linkage, Shift - Assembly (inc. 21-22)
21	0623-294	1		Nut, Hex - Right-Hand Thread
22	0123-917	1	/P	Nut, Hex - Left-Hand Thread

 
2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2081274) (13)
STARTER CLUTCH ASSEMBLY

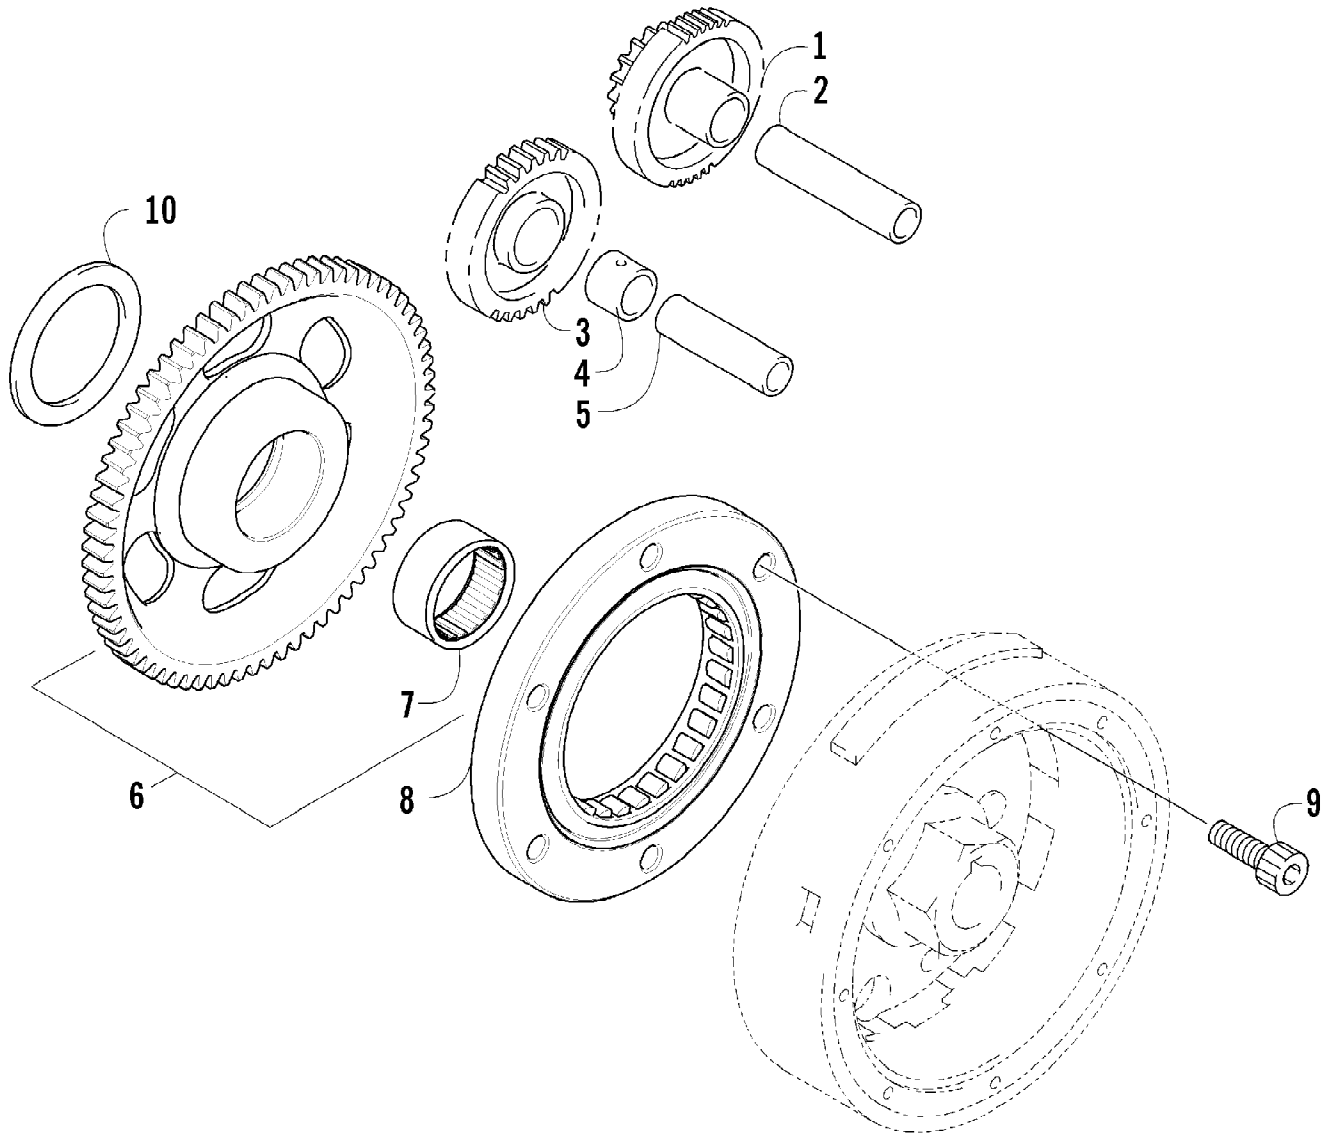

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2081274-E of S3)
 STARTER CLUTCH ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0815-001	1		Gear, Starter Idler - No. 1
2	0829-031	1	/P	Shaft, Starter Gear
3	0815-002	1		Gear, Starter Idler - No. 2
4	0815-003	1		Spacer, Starter Idler Gear No. 2
5	0829-032	1	/P	Shaft, Starter Gear
6	0815-004	1		Gear Starter Clutch (inc. 7)
7	0832-004	1	S	Bearing
8	0802-035	1		Clutch, Starter
9	0826-069	6		Screw, Machine
10	0828-094	1		Washer

 
2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2081274) (13)
STARTER MOTOR ASSEMBLY

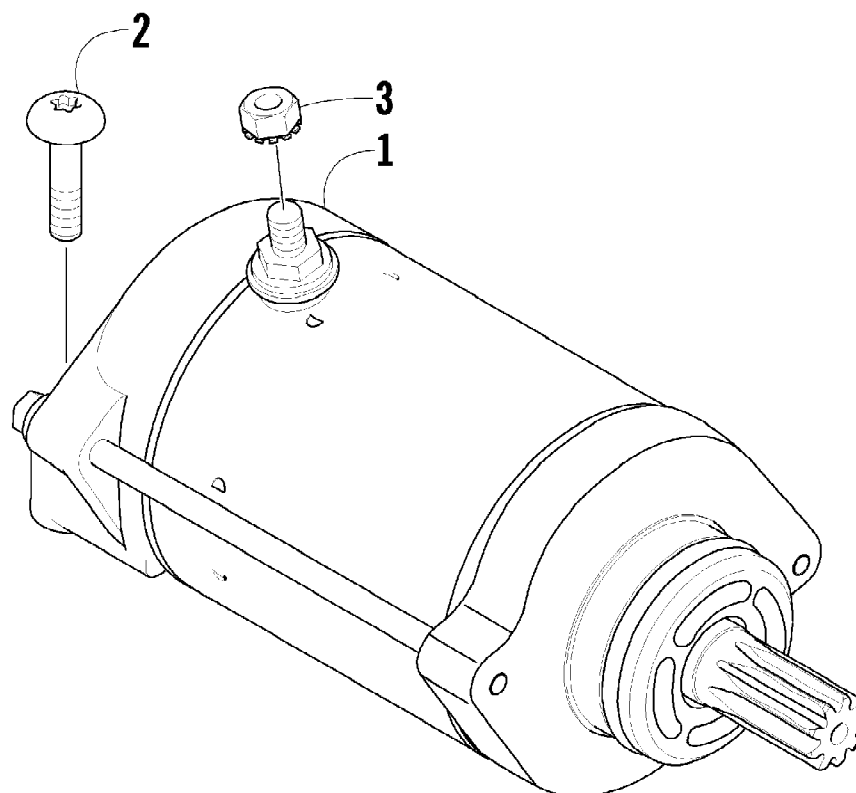

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2081274 of 13)
STARTER MOTOR ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0825-013	1	/P	Motor, Starter - Assembly
2	8476-625	2		Screw, Machine
3	0623-038	1		Nut w/Washer

 
2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2008740193)
STEERING ASSEMBLY

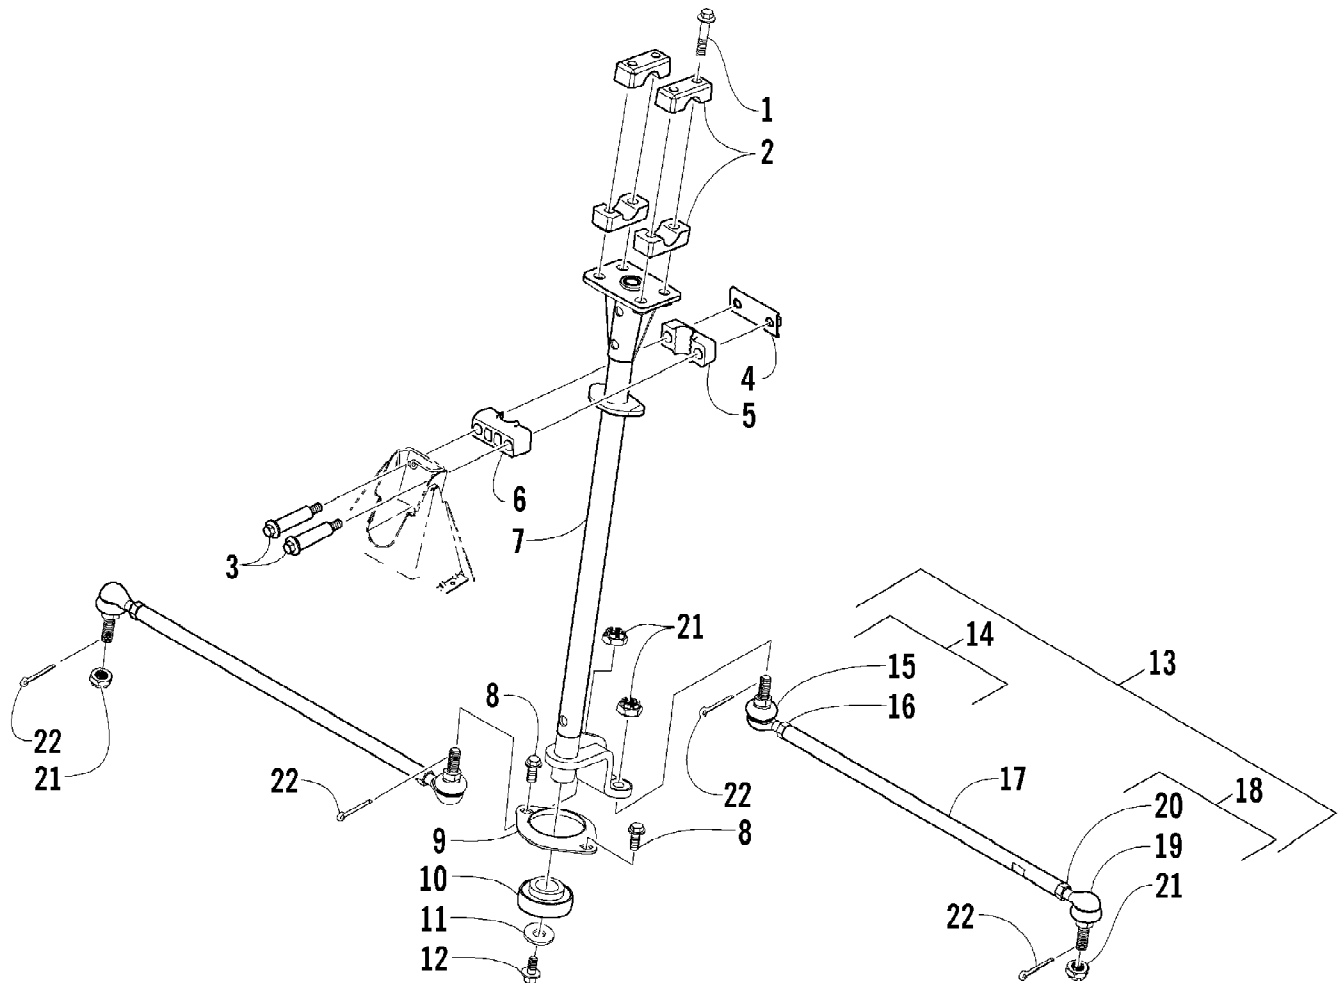

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2081274) of 13
 STEERING ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	8408-860	4		Screw, Cap
2	0405-035	4		Cap, Steering Adjuster
3	0423-505	2		Screw, Shoulder
4	0505-484	1		Cap, Housing
5	0405-138	1		Housing, Lower
6	0405-139	1		Housing, Upper
7	0505-451	1	S	Post, Steering
8	8408-816	2		Screw, Cap
9	0602-233	1		Flange, Bearing
10	0405-052	1		Bearing w/Inverted Oil Seal
11	0423-073	1		Washer
12	8409-020	1	/P	Screw, Cap
13	0505-499	2	/P	Tie Rod - Assembly (inc. 14-20)
14	0505-511	2	/P	End, Tie Rod - Left-Hand Thread - Kit (inc. 15-16 and two No. 21-22)
15	0	2	F	End, Tie Rod - Left Hand Thread
16	0423-013	2		Nut - Left-Hand Thread
17	0405-281	2	/P	Tie Rod
18	0505-510	2	/P	End, Tie Rod - Right-Hand Thread - Kit (inc. 19-20 and two No. 21-22)
19	0	2	F	End, Tie Rod - Right-Hand Thread
20	8420-002	2	/P	Nut - Right-Hand Thread
21	0423-157	4		Nut, Lock
22	0623-175	4		Pin, Cotter

 
2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2008700H1FEI)
TAILLIGHT ASSEMBLY

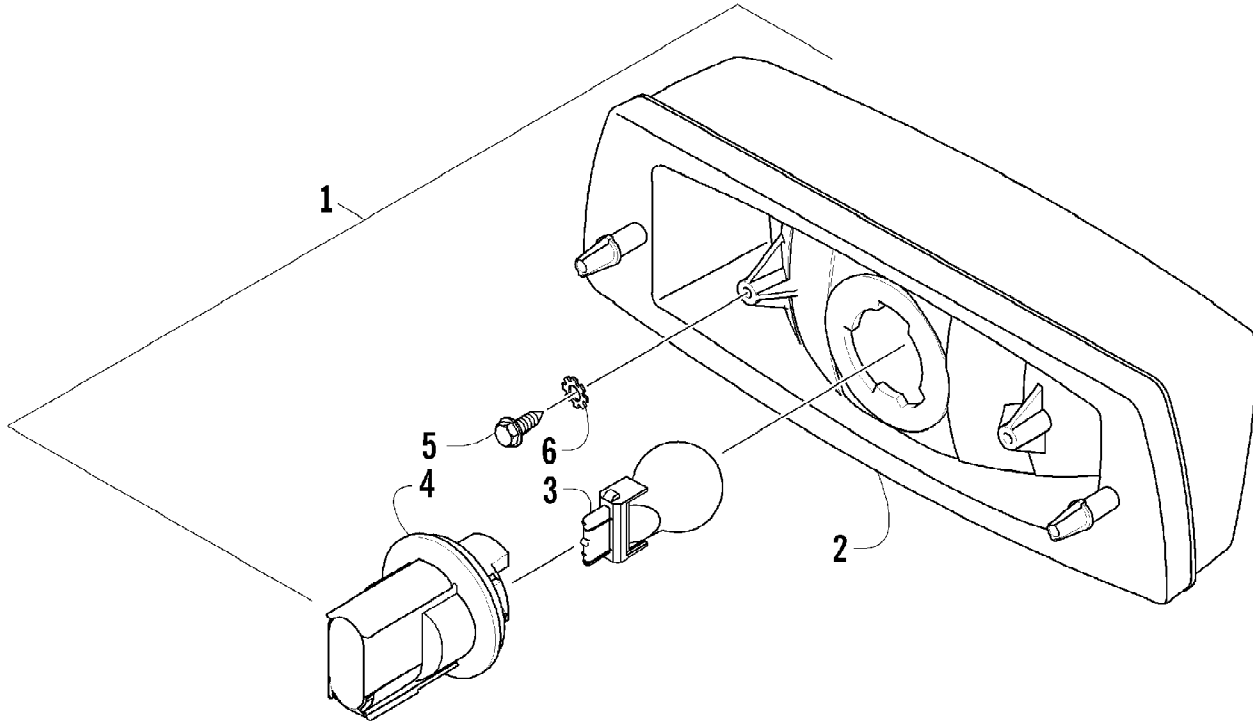

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2081281) (Page 8 of 13)
 TAILLIGHT ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0509-022	1		Taillight Assembly (inc. 2-4)
2	0509-025	1		Housing, Taillight
3	0409-056	1		Bulb, Taillight
4	0409-057	1		Socket, Taillight
5	0623-301	2	/P	Screw, Self-Tapping
6	8053-212	2	/P	Washer, Lock - External Tooth

 
2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2008700H1FEIS)
THROTTLE BODY ASSEMBLY

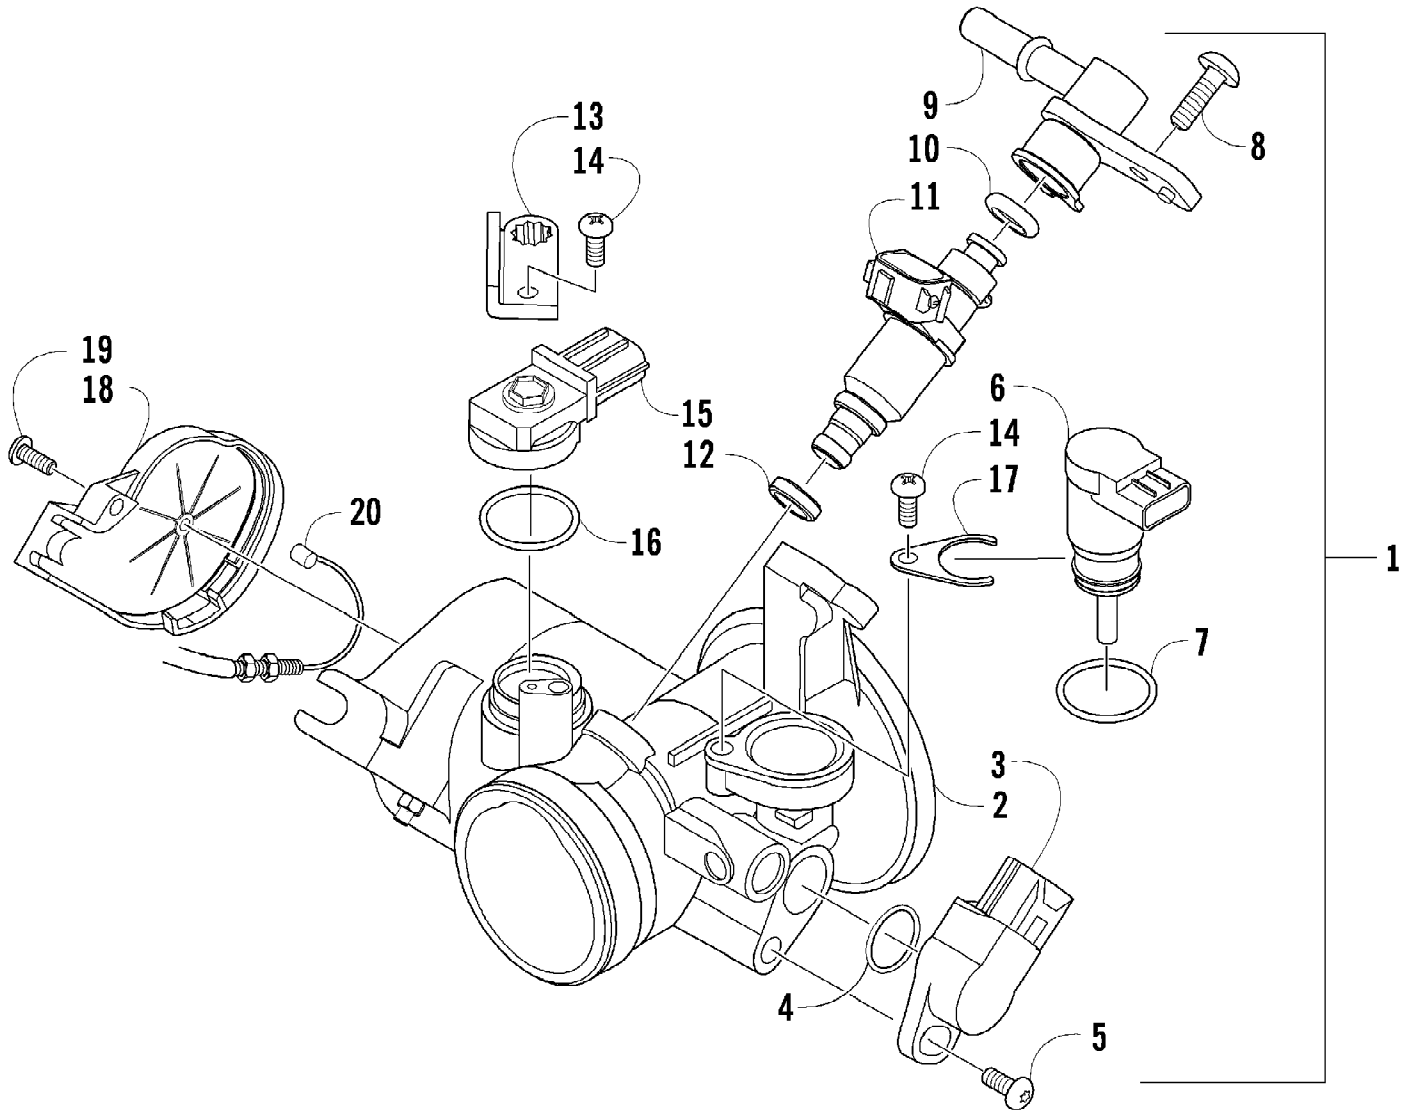

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A20081284) (Page 13 of 13)
 THROTTLE BODY ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0470-753	1		Throttle - Assembly (inc. 2-19)
2	0	1	F	Throttle Body
3	0430-072	1		Sensor, Throttle Position
4	5507-234	1		O-Ring, Throttle Position Sensor
5	5507-231	1		Screw, Throttle Position Sensor
6	0430-074	1		Valve, ISC
7	5507-233	1		O-Ring, ISC Valve
8	5507-238	1		Screw
9	0470-687	1		Rail, Fuel
10	0470-767	1		O-Ring, Fuel Injector
11	0470-762	1		Injector, Fuel
12	0470-768	1		Seal, Fuel Injector
13	5507-227	1		Bracket, MAP Sensor
14	5507-117	2	/P	Screw
15	0430-073	1		Sensor, MAP
16	5507-232	1		O-Ring, MAP Sensor
17	5507-229	1		Plate, ISC Valve
18	5507-223	1		Cover
19	5507-037	1	/P	Screw
20	0487-057	1		Cable, Throttle

 2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A208184) of 13
THROTTLE CASE ASSEMBLY

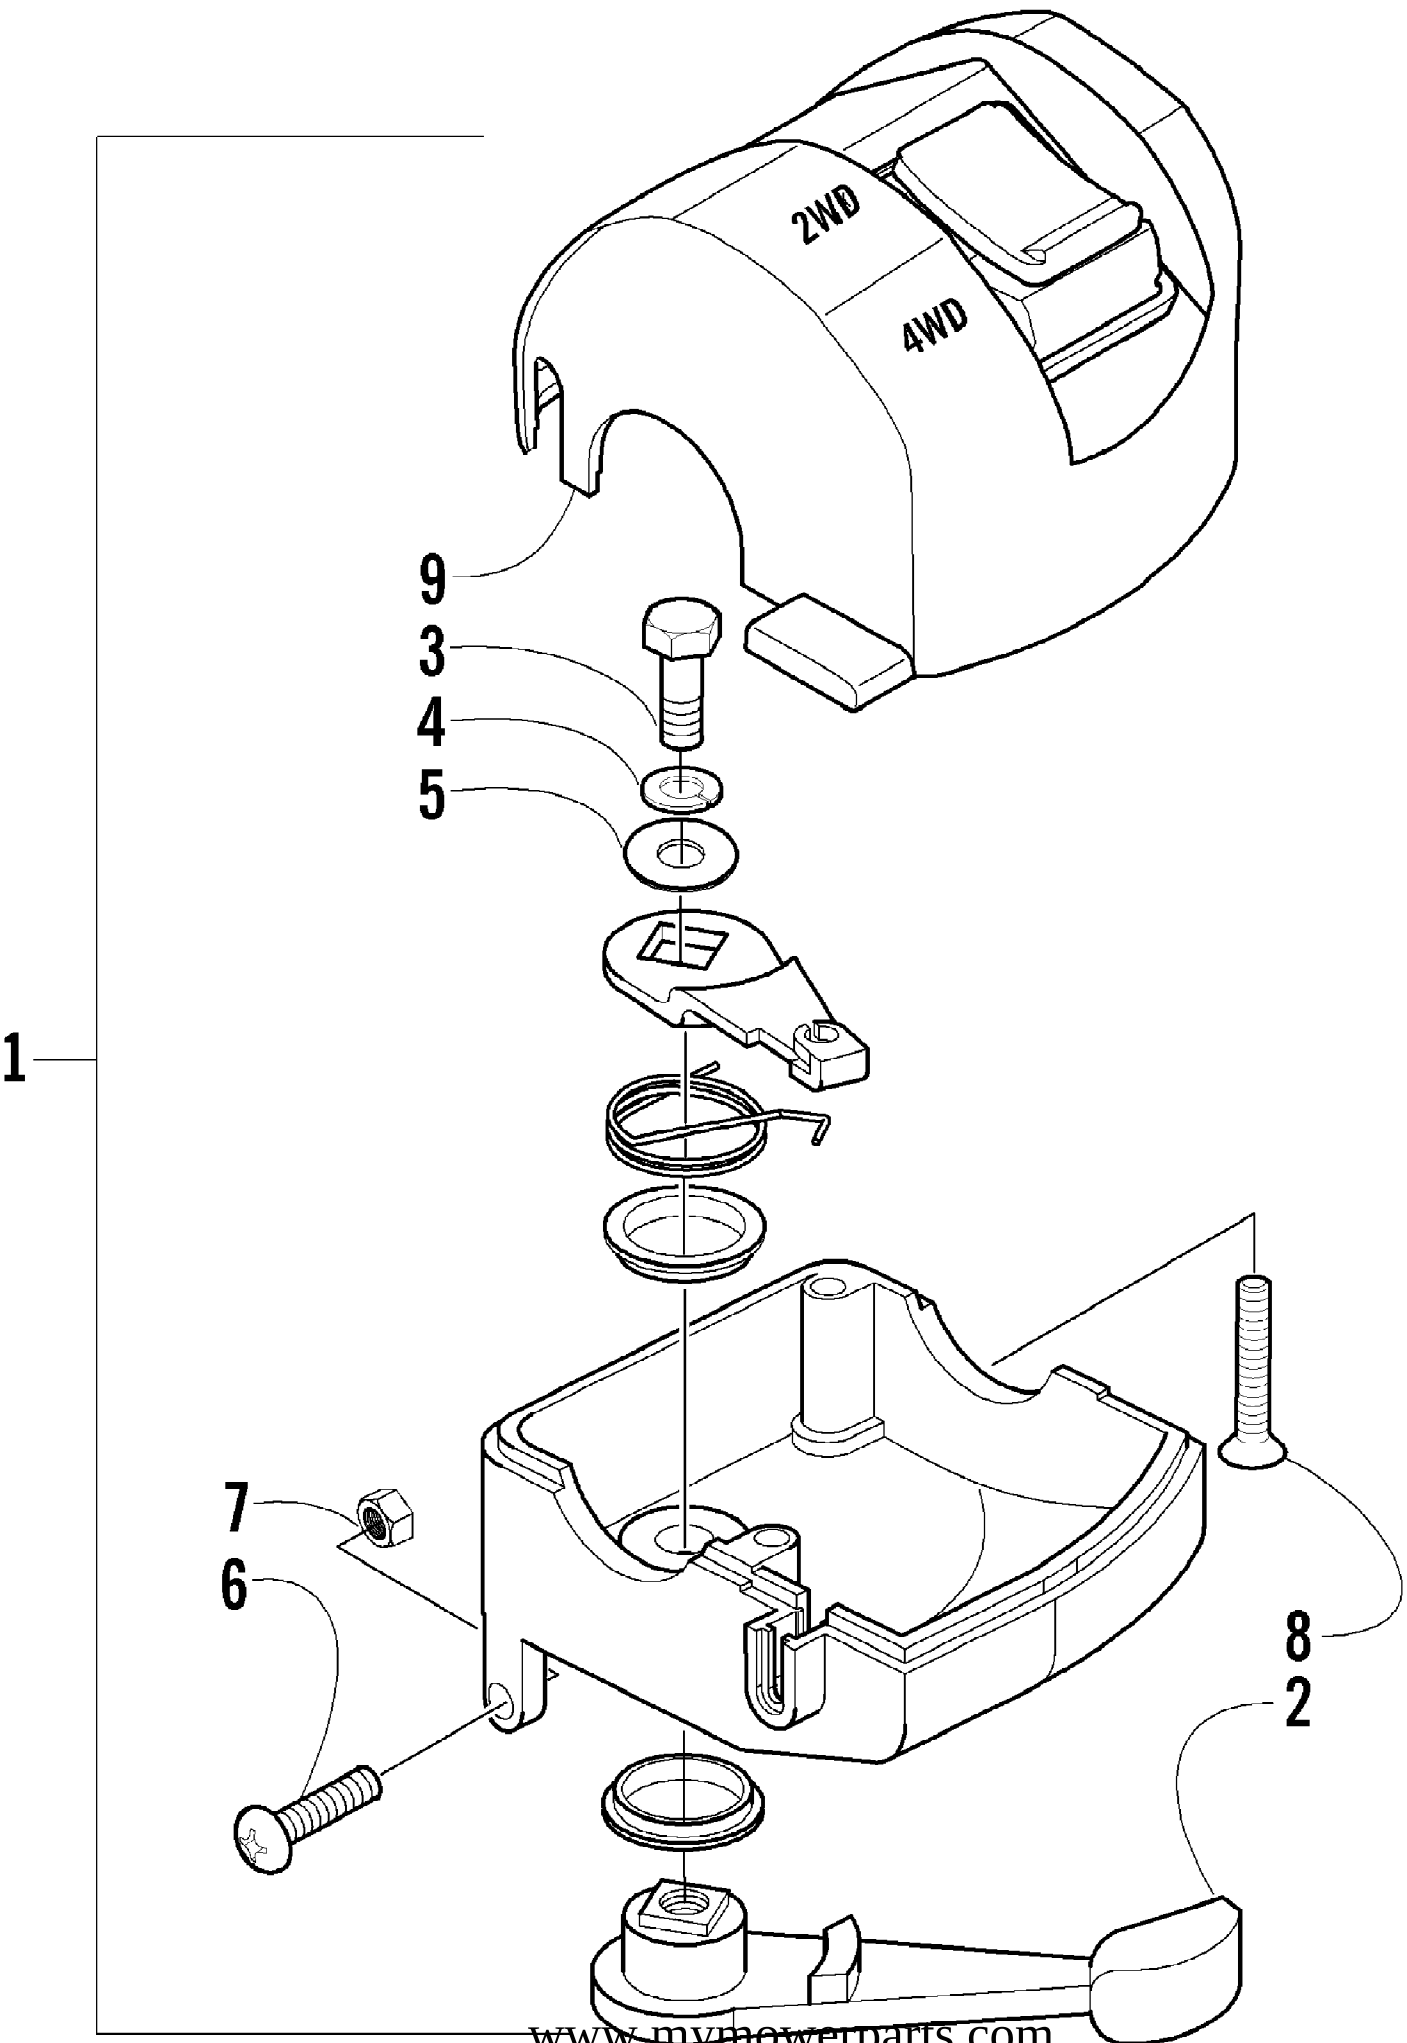


2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2081281-013)
 THROTTLE CASE ASSEMBLY

Page 8 of 13

Ref #	Part Number	Qty	S/P/F	Description
1	0509-012	1		Case, Throttle - Assembly (inc. 2-9)
2	3409-001	1		Lever
3	3004-533	1	S/P	Screw, Cap
4	3004-447	1	/P	Washer, Lock
5	3003-030	1	/P	Washer
6	3423-014	1		Screw
7	3423-327	1		Nut
8	3423-199	2		Screw
9	0409-048	1		Cover, Throttle w/Switch

 
2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A208128) of 13
TRANSMISSION ASSEMBLY

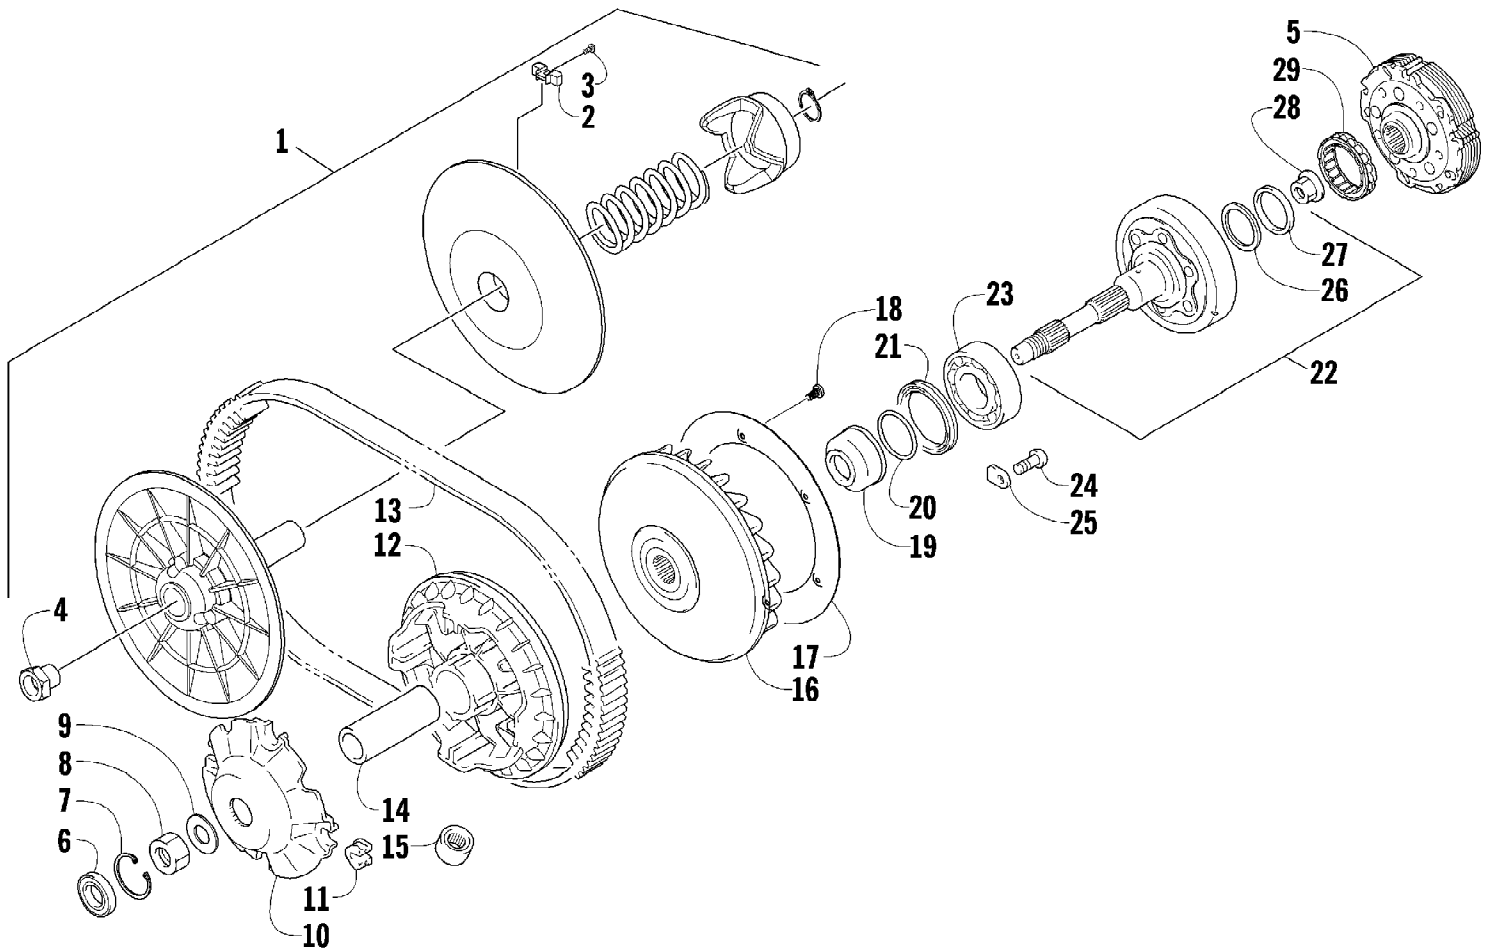

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A20081287 of 13)
TRANSMISSION ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0823-157	1	S/P	Pulley, Driven - Assembly (inc. 2-4)
2	0823-176	3	/P	Shoe, Cam
3	0823-177	3		Screw, Cam
4	0823-178	1		Nut, Driven Pulley
5	0823-098	1	S	Clutch, Centrifugal - 6 Plate
6	0832-060	1		Bearing
7	0831-078	1		Ring, Retaining
8	0827-010	1		Nut
9	0828-106	1		Washer
10	0823-008	1		Plate, Movable Drive Face
11	0823-010	4		Damper, Movable Drive Face
12	0823-159	1		Face, Movable Drive
13	0823-013	1		V-Belt
14	0823-149	1		Spacer, Movable Drive Face
15	0823-167	8	/P	Roller, Movable Drive Face
16	0823-156	1	/P	Face, Fixed Drive
17	0823-131	1		Shroud, Drive Face
18	0623-914	6		Screw, Self-Tapping
19	0823-015	1		Spacer, Fixed Drive Face
20	0470-531	1		O-Ring
21	0830-034	1	S	Seal, Clutch Housing - Right
22	0823-270	1	S	Housing, Clutch - Assembly (inc. 26-27)
23	0832-047	1	S	Bearing
24	0826-029	2		Screw, Bearing Retainer
25	0822-084	2	S	Retainer, Bearing
26	0828-075	1		Shim
27	0823-017	1	S	Seal, Clutch Housing - Left
28	0827-011	1		Nut
29	0823-018	1		Clutch, One-Way

 
2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2008781) (Page 18 of 13)
WATER PUMP ASSEMBLY

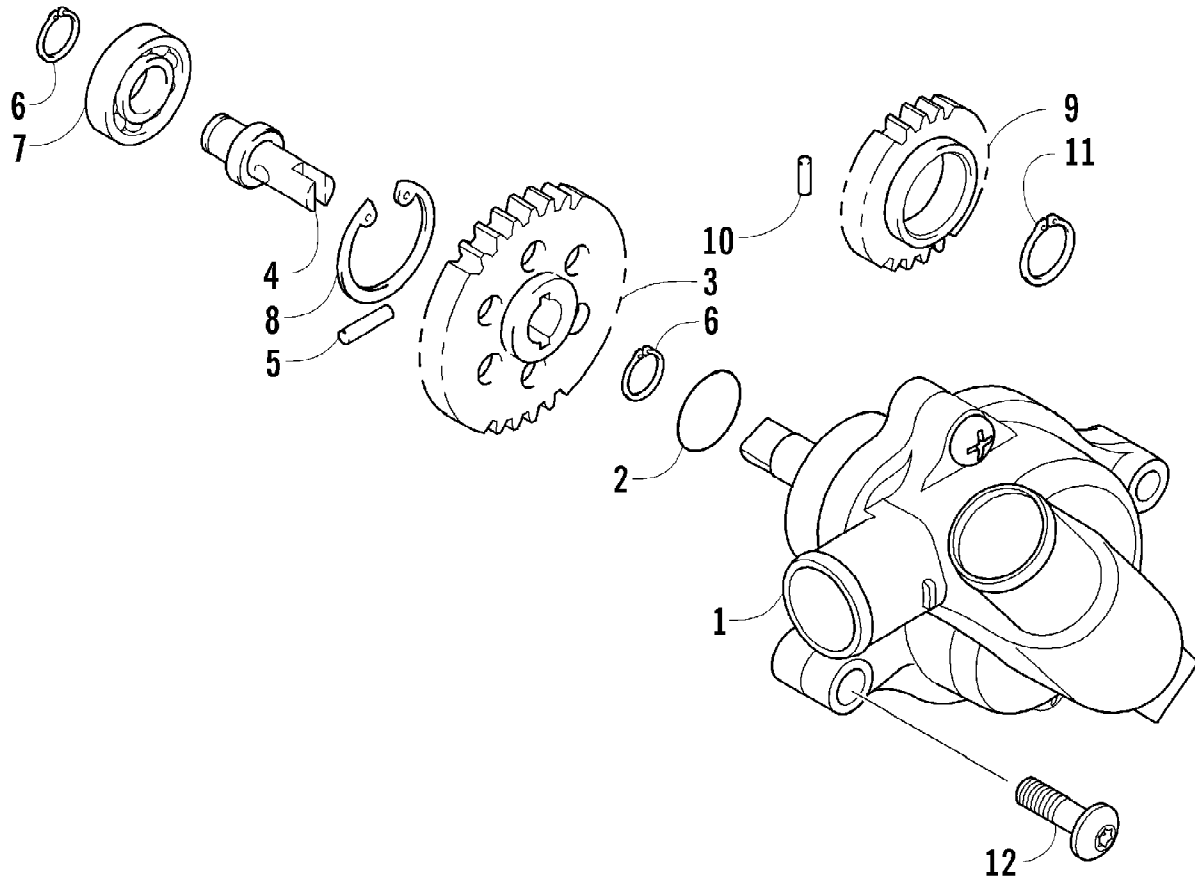

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2081284 of S1)
 WATER PUMP ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0813-001	1		Pump, Water - Assembly (inc. 2)
2	0830-029	1		O-Ring
3	0813-004	1		Gear, Driven
4	0813-005	1		Shaft, Driven Gear
5	0829-009	1		Pin, Driven Gear
6	0831-002	2		Circlip, Driven Gear
7	0832-008	1	S	Bearing, Shaft
8	0831-004	1		Circlip, Shaft Bearing
9	0811-003	1		Gear, Water Pump Drive
10	0829-007	1		Pin, Drive Gear
11	0831-005	1		Circlip, Drive Gear
12	8468-665	2		Screw, Machine

 
2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2008700H1FEI)
WHEEL AND TIRE ASSEMBLY

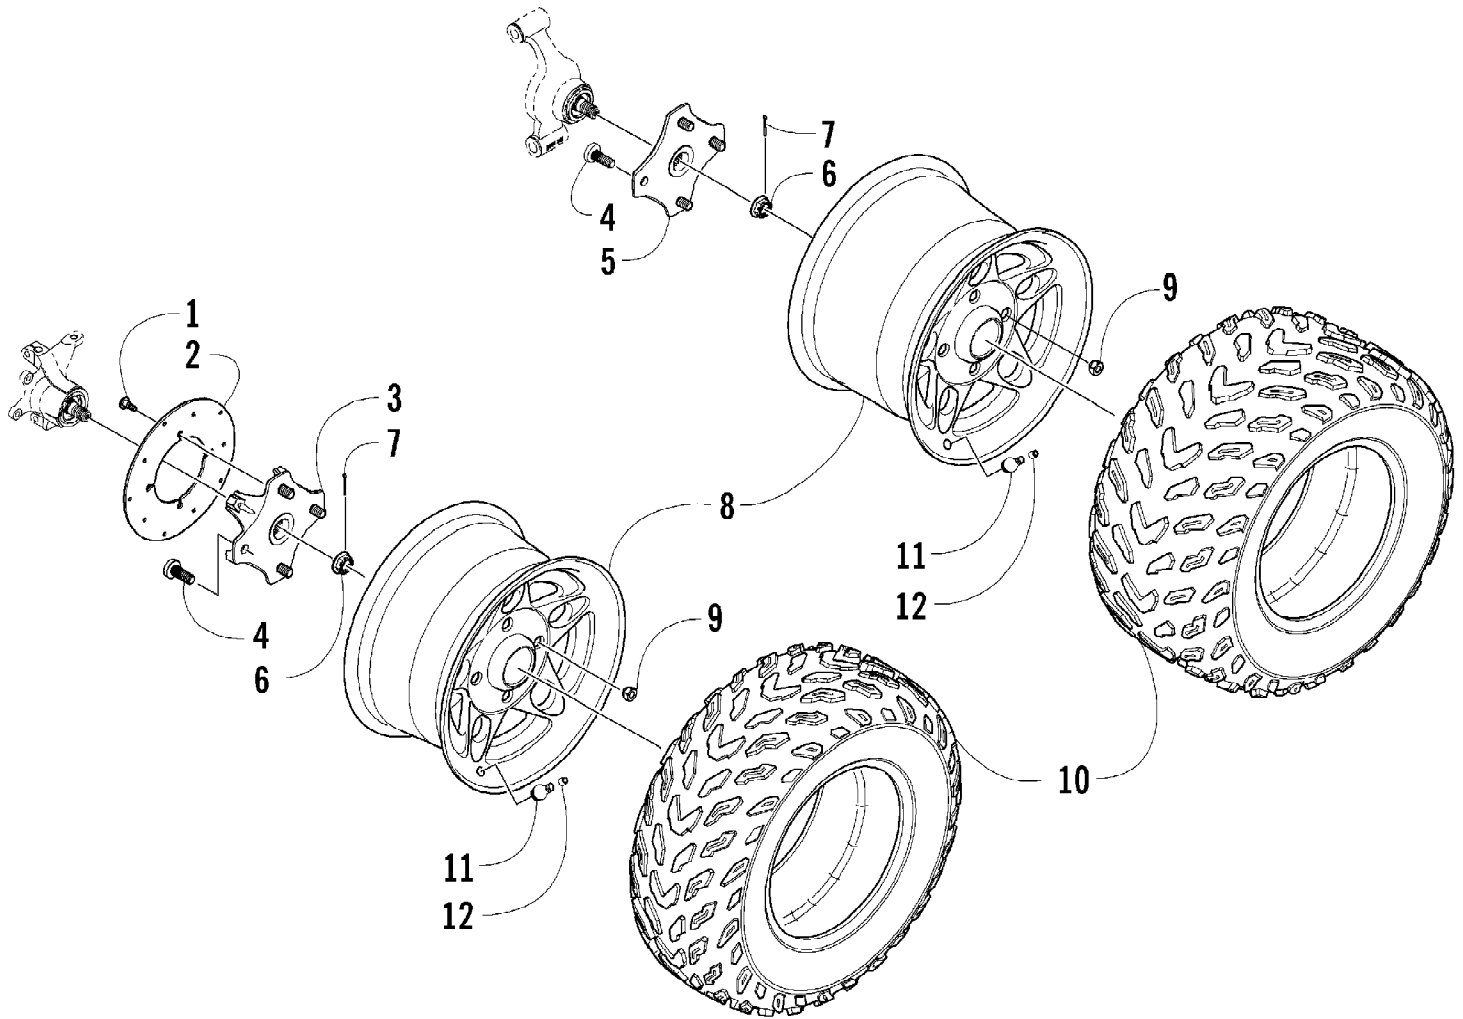

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A2081291 of 13)
 WHEEL AND TIRE ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0423-557	12		Screw, Shoulder w/Loctite
2	1436-164	3	/P	Disc, Brake
3	0502-599	2	S	Hub, Wheel - Front (inc. 4)
4	0402-974	16	/P	Stud, Wheel Hub
5	0502-601	1	S	Hub, Wheel - Rear - Left (inc. 4)
5	0502-599	1	S	Hub, Wheel - Rear - Right (inc. 4)
6	0423-607	4		Nut, Castle Flange
7	0423-407	4		Pin, Cotter
8	1402-424	2		Wheel - Front
8	1402-425	2		Wheel - Rear
9	0423-618	16		Nut, Mounting - Wheel
10	1402-548	2		Tire - Front
10	1402-549	2		Tire - Rear
11	0402-064	4		Stem, Valve (inc. 12)
12	0402-140	4		Cap, Valve Stem

 2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A208129) (Page 92 of 93)
WIRING HARNESS ASSEMBLY

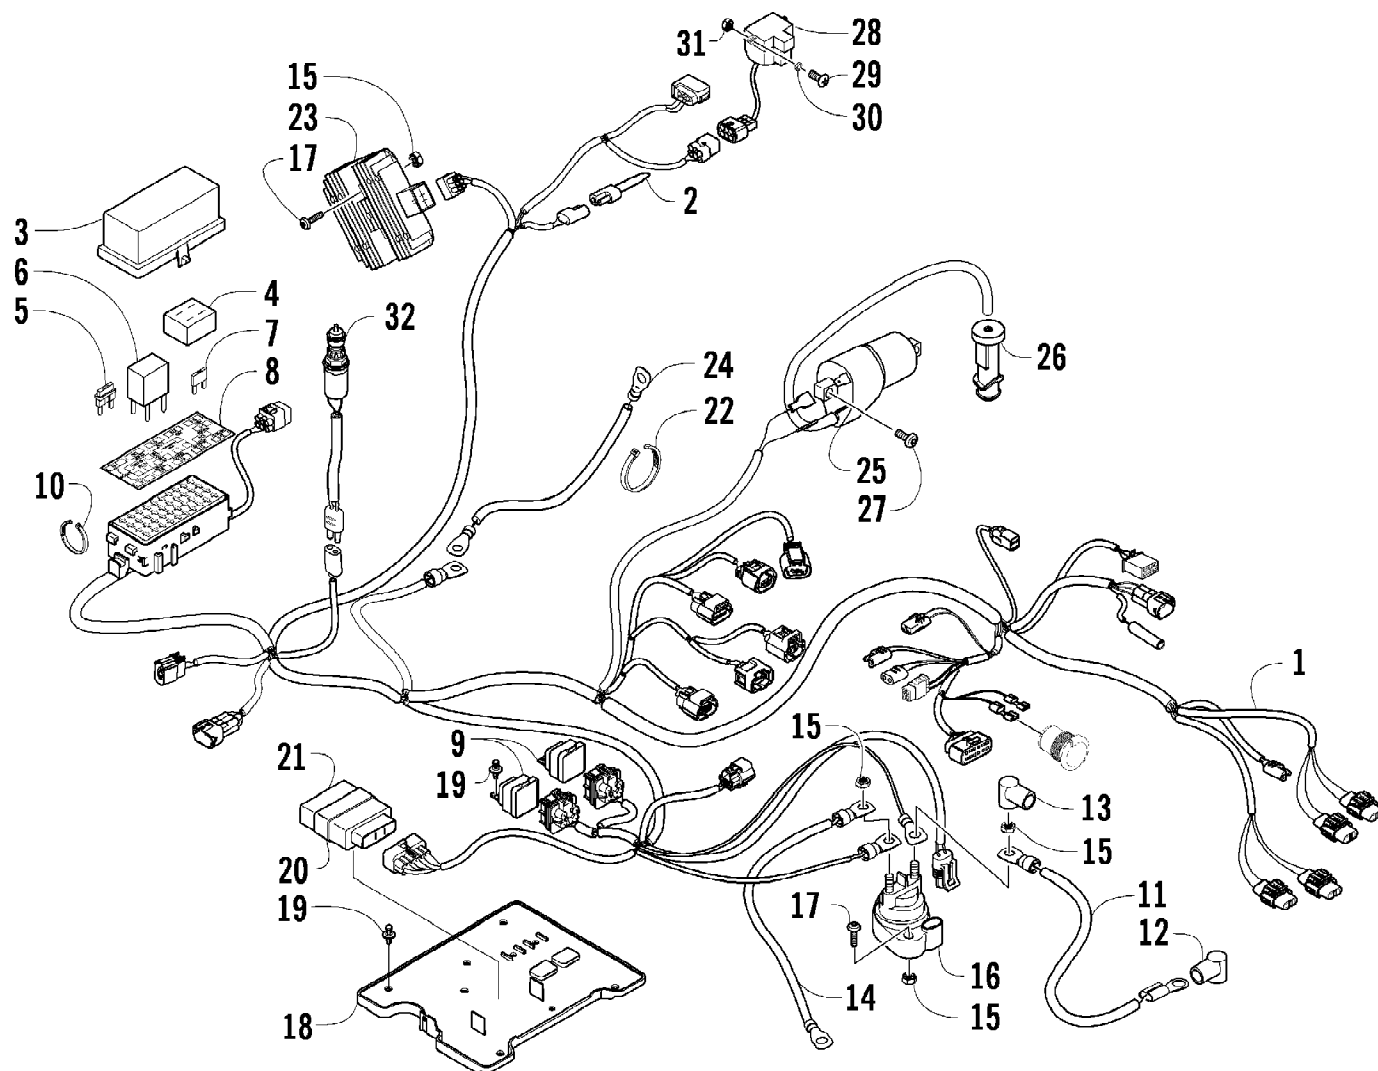

2008 ATV 700 H1 FEI AUTOMATIC TRANSMISSION 4X4 FIS SILVER SE (A20081294 of 13)
 WIRING HARNESS ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0486-277	1		Harness, Main (inc. 2-9)
2	0486-164	1		Tether, Accessory Connector
3	0530-008	1		Cover, Fuse Block
4	0430-037	1		Holder, Fuse
5	0430-034	1		Diode
6	0430-045	5	/P	Relay (4-Pin) - 20 Amp
7	0430-032	5		Fuse - 10 Amp
7	0430-031	3		Fuse - 15 Amp
7	0430-030	2		Fuse - 30 Amp
8	1411-526	1		Decal, Fuse Block
9	0430-052	2		Relay (5-Pin) - 30 Amp
10	0123-788	AR	/P	Cable Tie - 7.5 in.
11	0445-064	1		Cable, Solenoid/Starter (inc. 12)
12	0645-019	1		Boot, Terminal
13	0645-327	1		Boot, Terminal
14	0445-062	1		Cable, Battery/Solenoid
15	0623-038	6		Nut w/Washer
16	0445-058	1	/P	Solenoid
17	8476-625	4		Screw, Machine
18	2406-643	1		Tray, Electrical
19	0623-362	3		Rivet, Reinstallable
20	0430-076	1		Cushion, ECU
21	0530-014	1	S	ECU
22	0123-903	AR		Cable Tie - 11.5 in.
23	0824-037	1	/P	Regulator, Voltage
24	0445-070	1		Cable, Battery/Ground
25	0824-043	1		Coil, Ignition - Assembly
26	0824-049	1	/P	Cap, Spark Plug
27	8476-620	2		Screw, Machine
28	0409-064	1		Switch, Invert Sensor
29	8468-425	2		Screw, Machine
30	0123-802	2		Washer
31	0423-493	2		Nut, Hex
32	0409-089	1		Switch, Brake - Assembly