 



2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1PO88)
ACCELERATOR ASSEMBLY

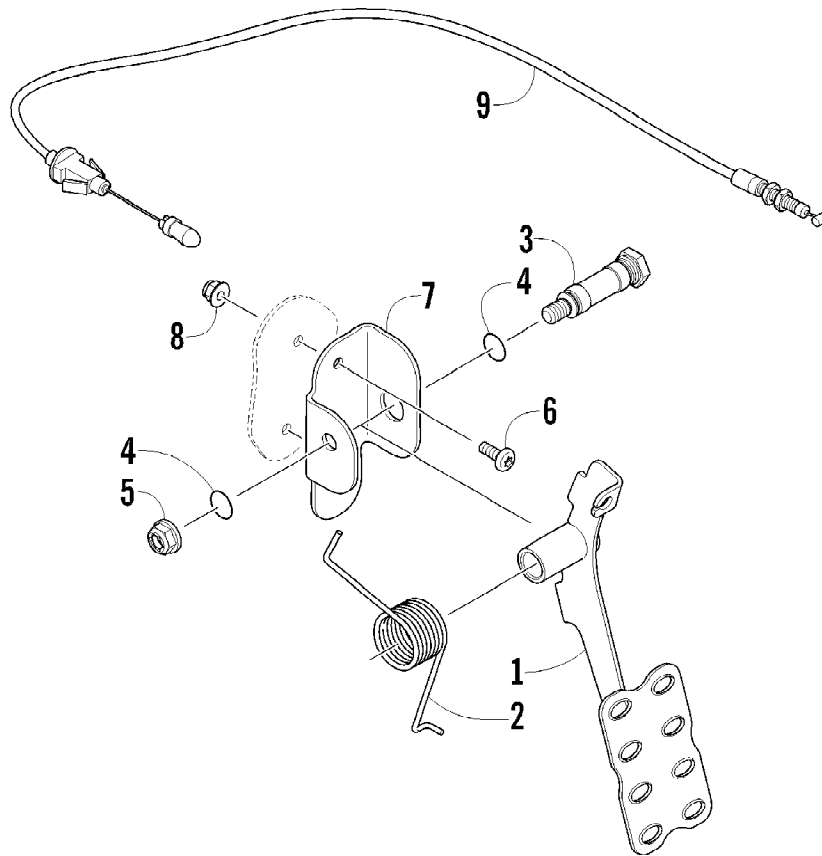

2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1PO88)
 ACCELERATOR ASSEMBLY Page 2 of 87

Ref #	Part Number	Qty	S/P/F	Description
1	1502-590	1		Pedal, Accelerator
2	0405-233	1		Spring
3	0402-872	1		Axle
4	1602-213	2	/P	O-Ring
5	8422-002	1		Nut, Lock
6	8471-616	2		Screw, Machine
7	0502-991	1		Bracket, Accelerator Pedal
8	8427-602	2		Nut, Lock
9	0487-066	1		Cable, Accelerator

 2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1PO88) Page 3 of 87
AIR INTAKE ASSEMBLY

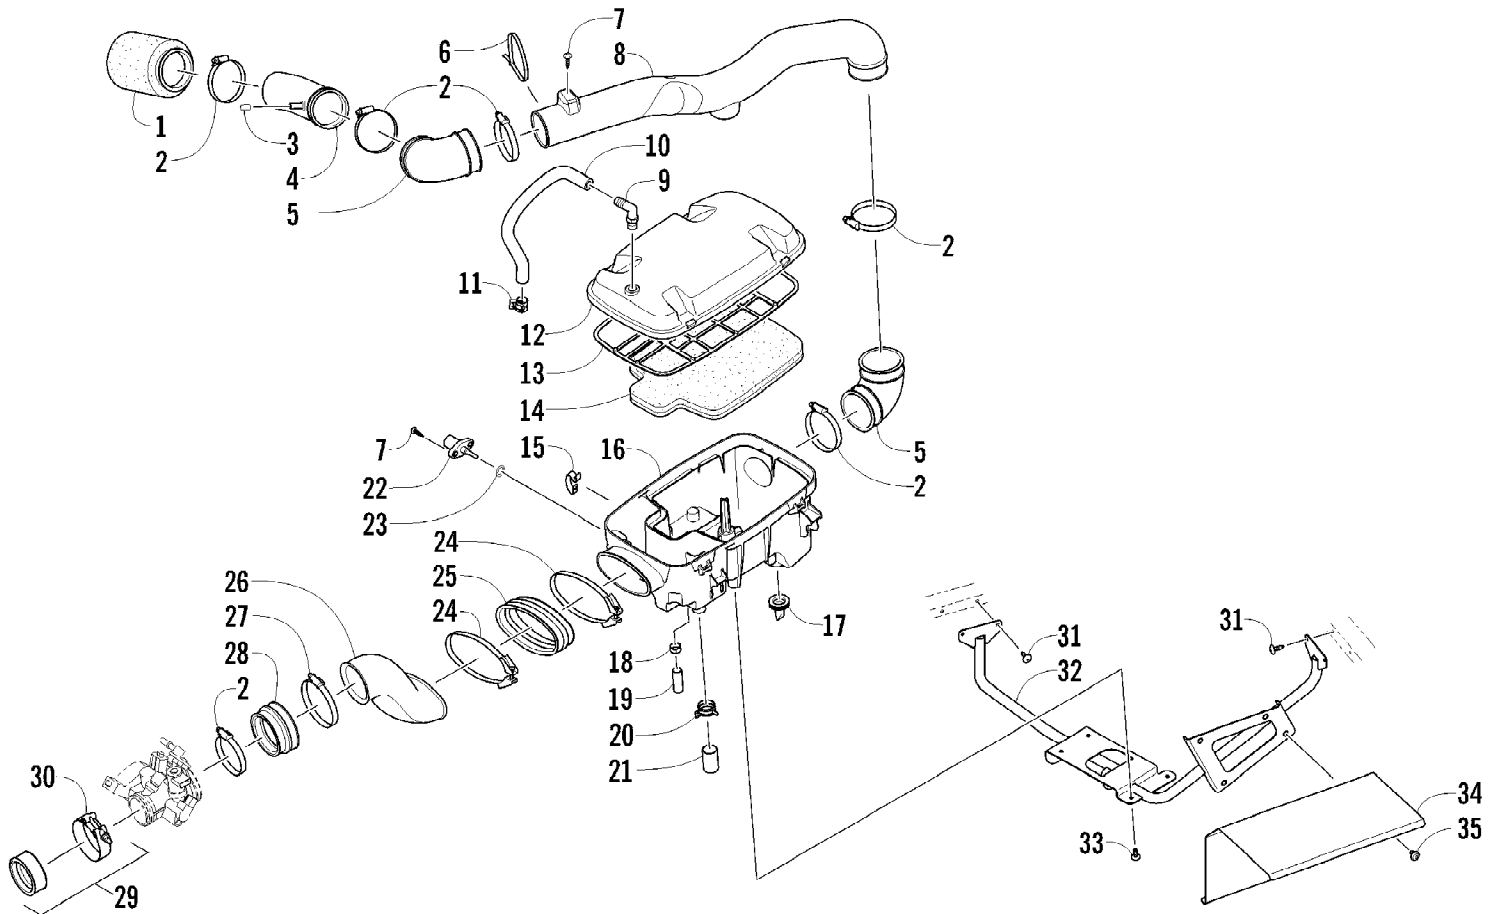


2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1PO88)
 AIR INTAKE ASSEMBLY

Page 4 of 87

Ref #	Part Number	Qty	S/P/F	Description
1	0470-834	1		Filter, Intake
2	0423-019	6		Clamp
3	1423-050	1		Cap
4	0513-043	1		Duct, Intake
5	0413-098	2		Boot, Air-In
6	0123-903	AR		Cable Tie - 11.5 in.
7	0423-342	4	/P	Screw, Self-Tapping
8	0470-900	1		Duct, Intake
9	0470-881	1		Fitting, Elbow
10	0410-226	1		Hose, Vent
11	1623-281	1		Clamp, Hose
12	0470-861	1		Cover, Air Intake
13	0470-560	1		Screen, Air Filter
14	0470-558	1		Filter, Air
15	0423-455	4		Clip, Spring
16	0570-327	1		Housing, Air Intake
17	0470-442	1	/P	Valve, Drain
18	0610-563	1		Clamp, Hose
19	0470-863	1		Cap, Drain
20	1623-287	1		Clamp, Hose
21	0423-766	1		Cap, Drain
22	0430-055	1		Sensor, Air Temperature (inc. 23)
23	5507-224	1		O-Ring
24	1423-074	2		Clamp
25	0470-906	1		Boot, Intake
26	0470-901	1		Boot, Intake
27	0423-018	1		Clamp
28	0470-907	1		Boot
29	0437-069	1	/P	Boot (inc. 30)
30	1423-041	1		Clamp, Manifold
31	0623-784	4		Screw, Self-Tapping
32	2516-706	1		Mount, Airbox
33	8468-612	4		Screw, Machine
34	0470-908	1		Shield, Heat
35	8477-610	4		Screw, Machine

 
2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1POB80) Page 5 of 87
BATTERY AND STARTER MOTOR ASSEMBLY

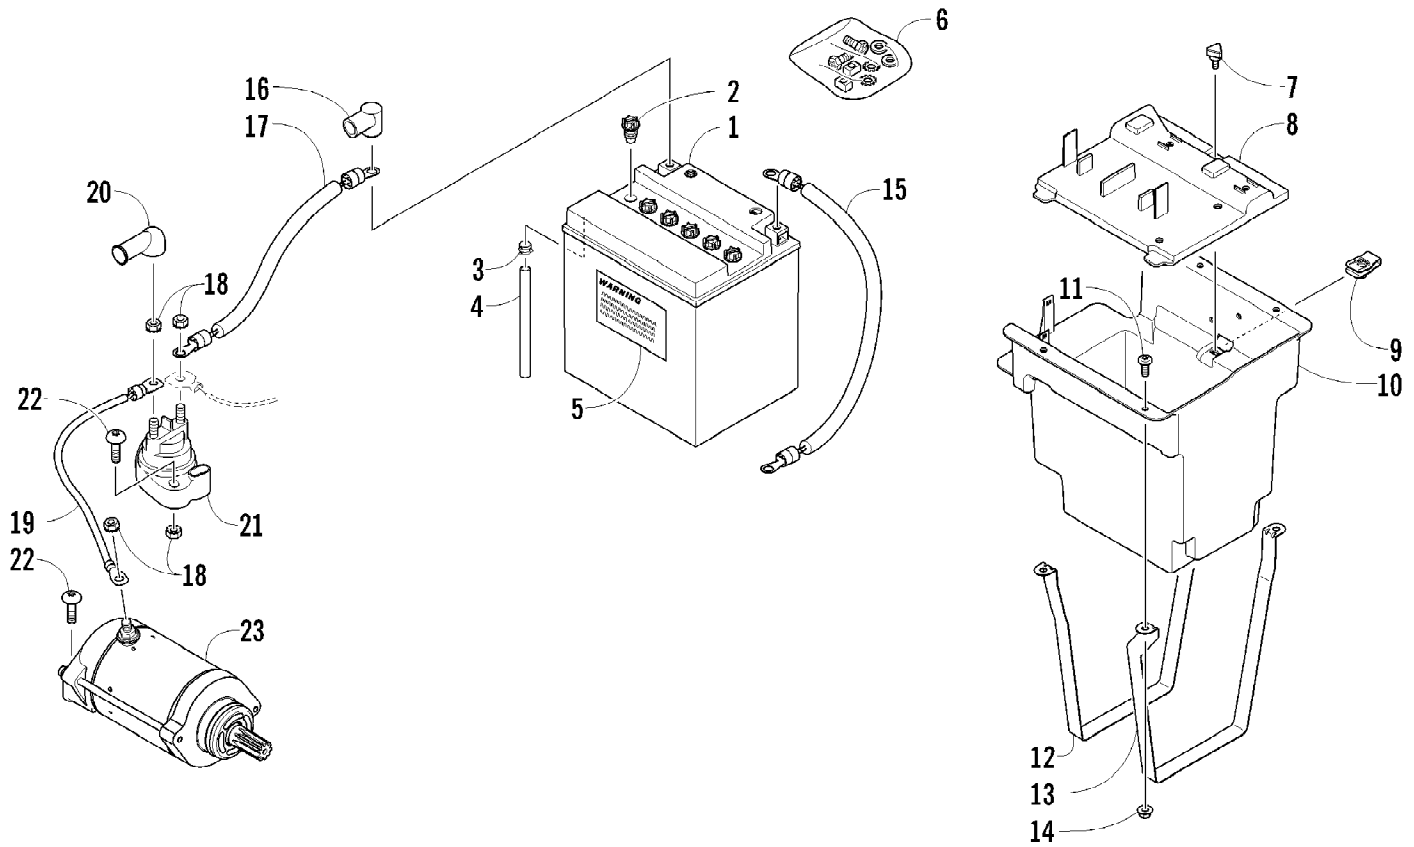

2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1POB8)
 BATTERY AND STARTER MOTOR ASSEMBLY Page 6 of 87


Ref #	Part Number	Qty	S/P/F	Description
1	0445-081	1		Battery (inc. 2-6)
2	0645-588	6	/P	Cap, Battery
3	0645-152	1		Clamp, Hose
4	0645-262	1		Hose, Vent
5	0645-430	2		Decal, Warning
6	0445-082	1		Kit, Hardware
7	1441-624	1		Screw, Thumb
8	2406-947	1		Cover, Battery Box
9	0423-577	1		Clip, U-Nut
10	2406-914	1		Box, Battery
11	8476-616	4		Screw, Machine
12	0470-854	1		Hold-Down, Battery Box - Right
13	0470-855	1		Hold-Down, Battery Box - Left
14	8424-602	4	/P	Nut
15	0445-050	1		Cable, Battery/Ground
16	0645-019	2		Boot, Terminal
17	0445-049	1		Cable, Battery/Solenoid
18	0623-038	5		Nut w/Washer
19	0445-061	1		Cable, Solenoid/Starter
20	0645-327	1		Boot, Terminal - Solenoid
21	0445-058	1	/P	Solenoid
22	8476-625	4		Screw, Machine
23	0825-013	1	/P	Motor, Starter - Assembly

 2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1PO88) Page 7 of 87
CAM CHAIN ASSEMBLY

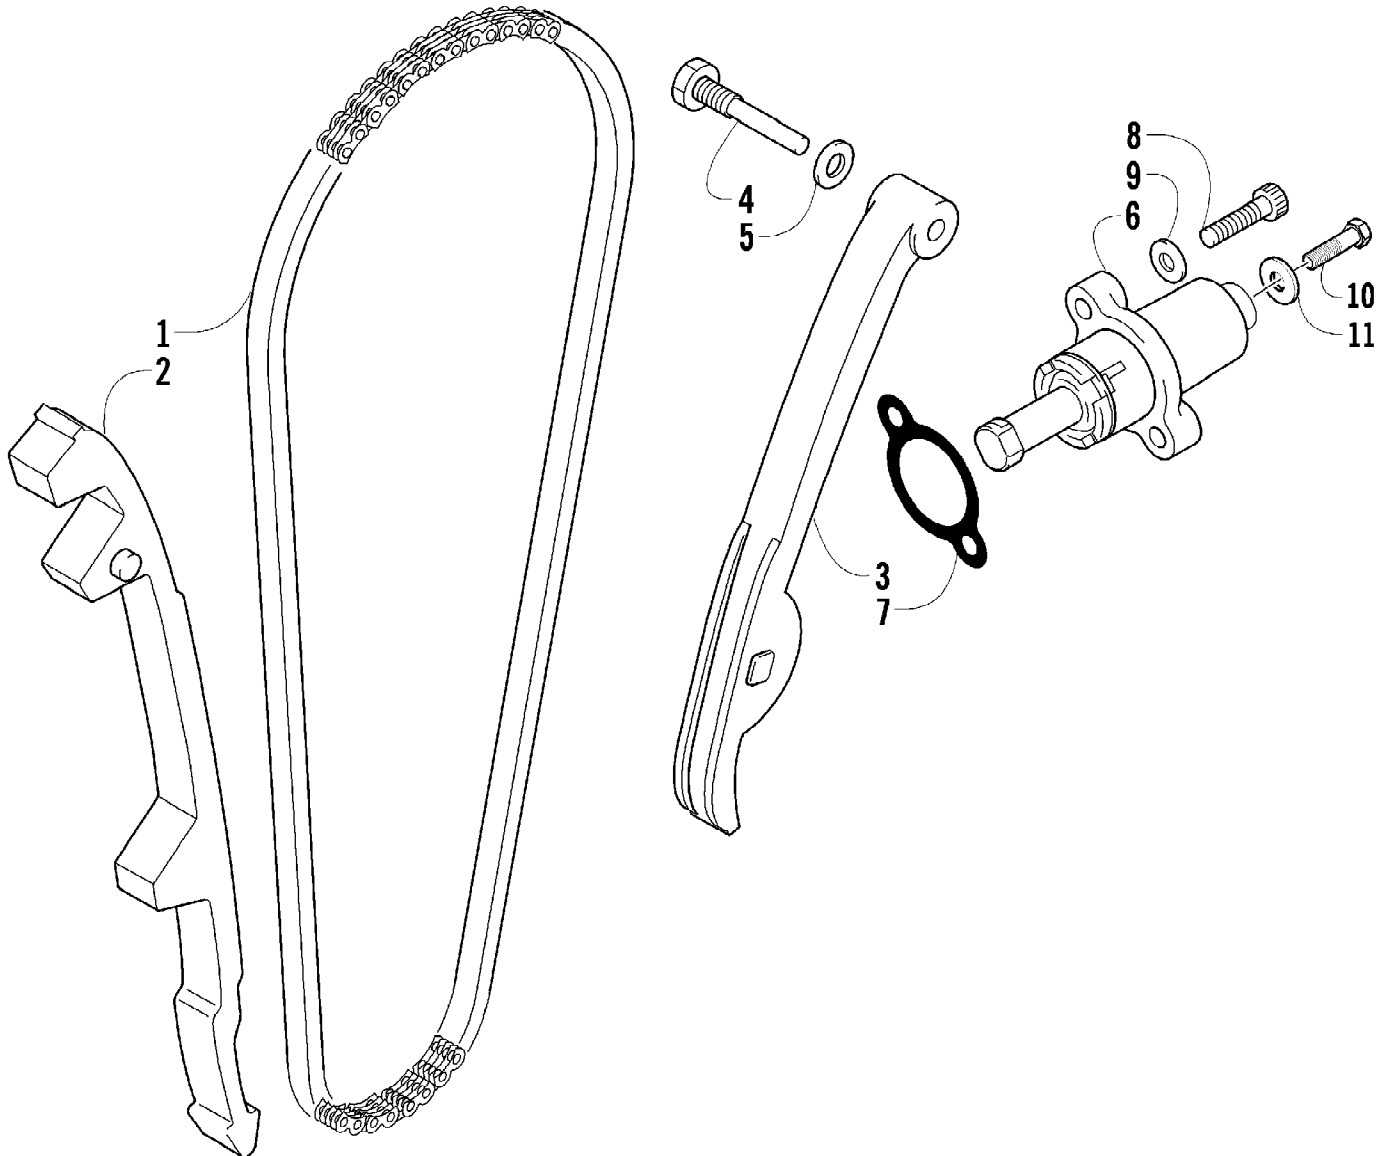

2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1POB8) Page 8 of 87
CAM CHAIN ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0810-001	1		Chain, Cam
2	0810-002	1		Guide, Chain
3	0810-003	1		Tensioner, Chain
4	0826-036	1		Pivot, Tensioner
5	0830-025	1		Washer, Crush
6	0810-004	1		Adjuster, Tensioner - Assembly
7	0830-018	1		Gasket
8	8468-625	2		Screw, Machine
9	0830-107	2		Gasket
10	8400-610	1		Screw, Cap
11	0828-129	1		Washer

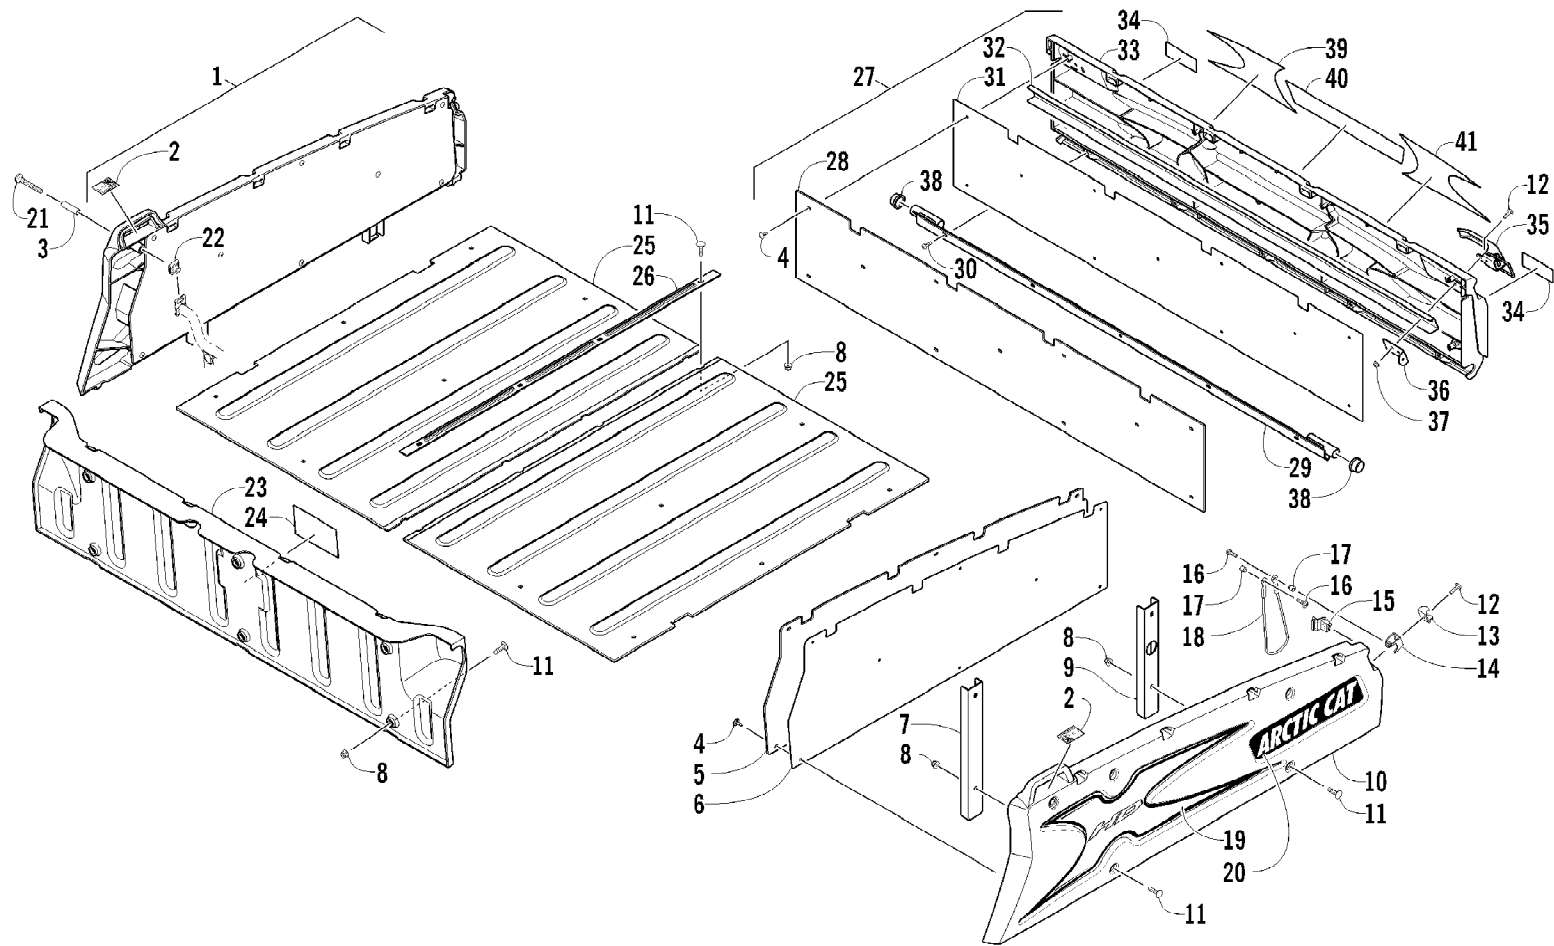 


2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036)
 CARGO BOX AND TAILGATE ASSEMBLY

Page 10 of 87

Ref #	Part Number	Qty	S/P/F	Description
1	4506-522	1		Side, Cargo Box - Assembly - Right (inc. 2-15)
1	4506-523	1		Side, Cargo Box - Assembly - Left (inc. 2-15)
2	2411-294	2		Decal, Warning - Pinch Point
3	2416-368	2		Spacer
4	1423-011	27		Screw, Self-Tapping
5	4506-524	2		Panel, Side - Inner
6	2416-647	2		Pad, Foam
7	4506-154	2		Brace, Support - Front
8	8427-802	30		Nut, Lock
9	4506-153	2		Brace, Support - Rear
10	2416-392	1		Side, Cargo Box - Right
10	2416-393	1		Side, Cargo Box - Left
11	0423-623	30		Bolt, Carriage
12	1423-038	6		Screw, Machine
13	2516-710	2		Bracket, Retaining - Latch
14	2416-379	2		Bracket, Retaining - Cable
15	2416-390	1		Insert, Panel - Right
15	2416-391	1		Insert, Panel - Left
16	8470-520	4		Screw, Machine
17	1423-009	4		Spacer
18	0487-080	2		Cable, Tailgate
19	2411-206	1		Decal, Side Panel - Right
19	2411-207	1		Decal, Side Panel -Left
20	2411-208	1		Decal, "Arctic Cat" - Right
20	2411-209	1		Decal, "Arctic Cat" - Left
21	1423-010	2		Screw, Machine
22	2416-378	2		Clip, U-Nut
23	2416-394	1		Panel, Front
24	2411-229	1		Decal, Warning - Cargo Box
25	2416-396	2		Panel, Lower
26	2516-871	1		Bracket, Retaining - Lower Panel
27	4506-521	1		Tailgate Assembly (inc. 28-37)
28	4506-526	1		Panel, Tailgate - Inner
29	2516-716	1		Shaft, Pivot - Tailgate
30	1623-618	5		Screw, Self-Tapping
31	2416-648	1		Pad, Foam
32	2416-652	1		Brace, Support
33	2416-395	1		Panel, Tailgate - Outer
34	2411-182	2		Decal, Reflector
35	2516-729	2		Latch, Tailgate - Assembly
36	2416-370	2		Bracket, Support - Latch
37	8424-602	4	/P	Nut
38	2416-363	2		Bushing
39	2411-210	1		Decal, Tailgate - Right
40	2411-212	1		Decal, Tailgate - Center
41	2411-211	1		Decal, Tailgate - Left

 
2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036) 11 of 87
CASE/BELT COOLING ASSEMBLY

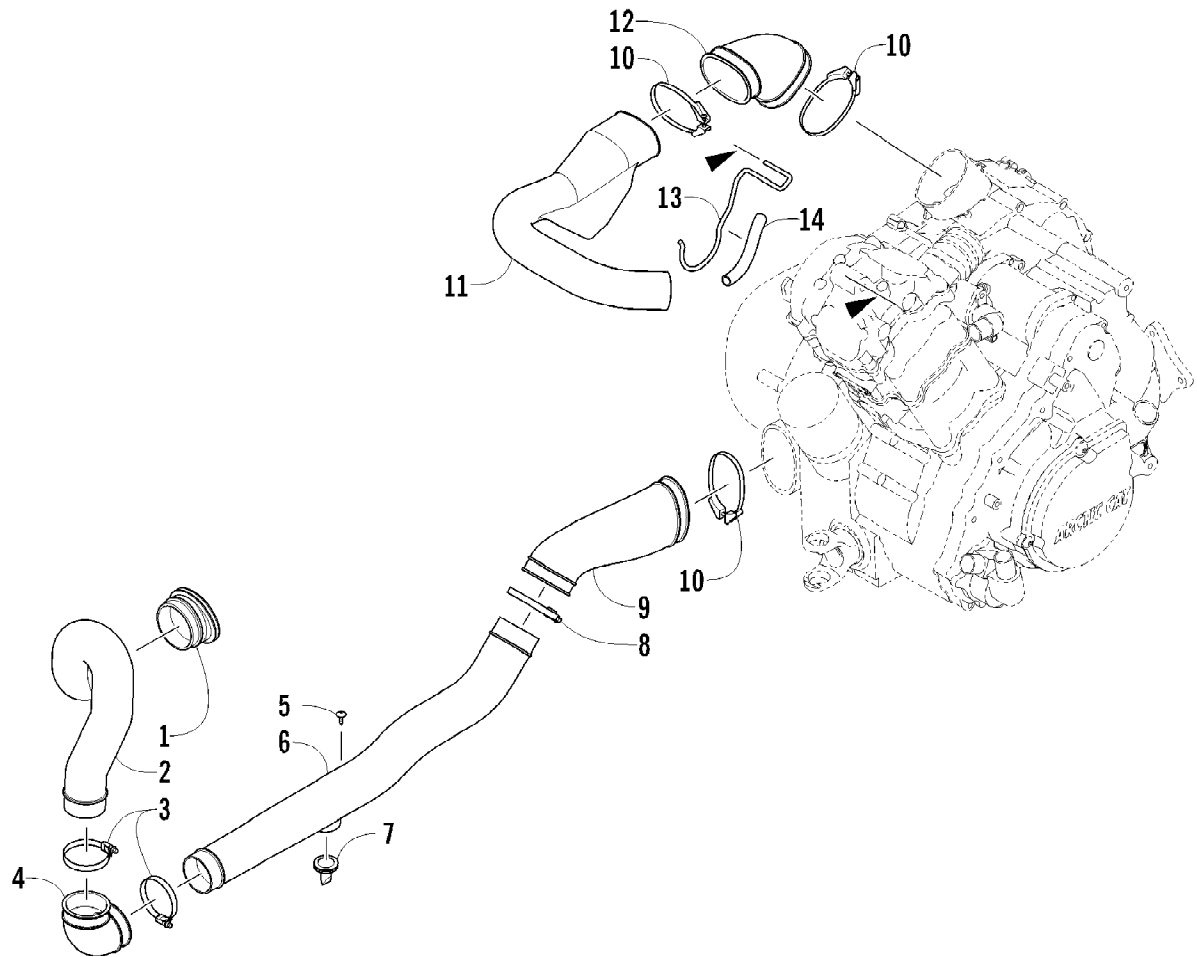

2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036) 12 of 87
CASE/BELT COOLING ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	2416-088	1		Boot, Air-In
2	0413-275	1		Duct, Air-In
3	0423-019	2		Clamp
4	0413-098	1		Boot, Air Duct
5	0623-784	1		Screw, Self-Tapping
6	0413-236	1		Duct, Air-In
7	0470-442	1	/P	Valve, Drain
8	0423-018	1		Clamp
9	0413-274	1		Boot, Air-In
10	0423-730	3		Clamp
11	0413-291	1	/P	Duct, Air-Out
12	0413-109	1		Duct, Air-Out
13	0413-286	1		Wire Form, Support
14	0610-513	AR		Hose - 25 ft

 
2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036) 13 of 87
CLUTCH/V-BELT/MAGNETO COVER ASSEMBLY

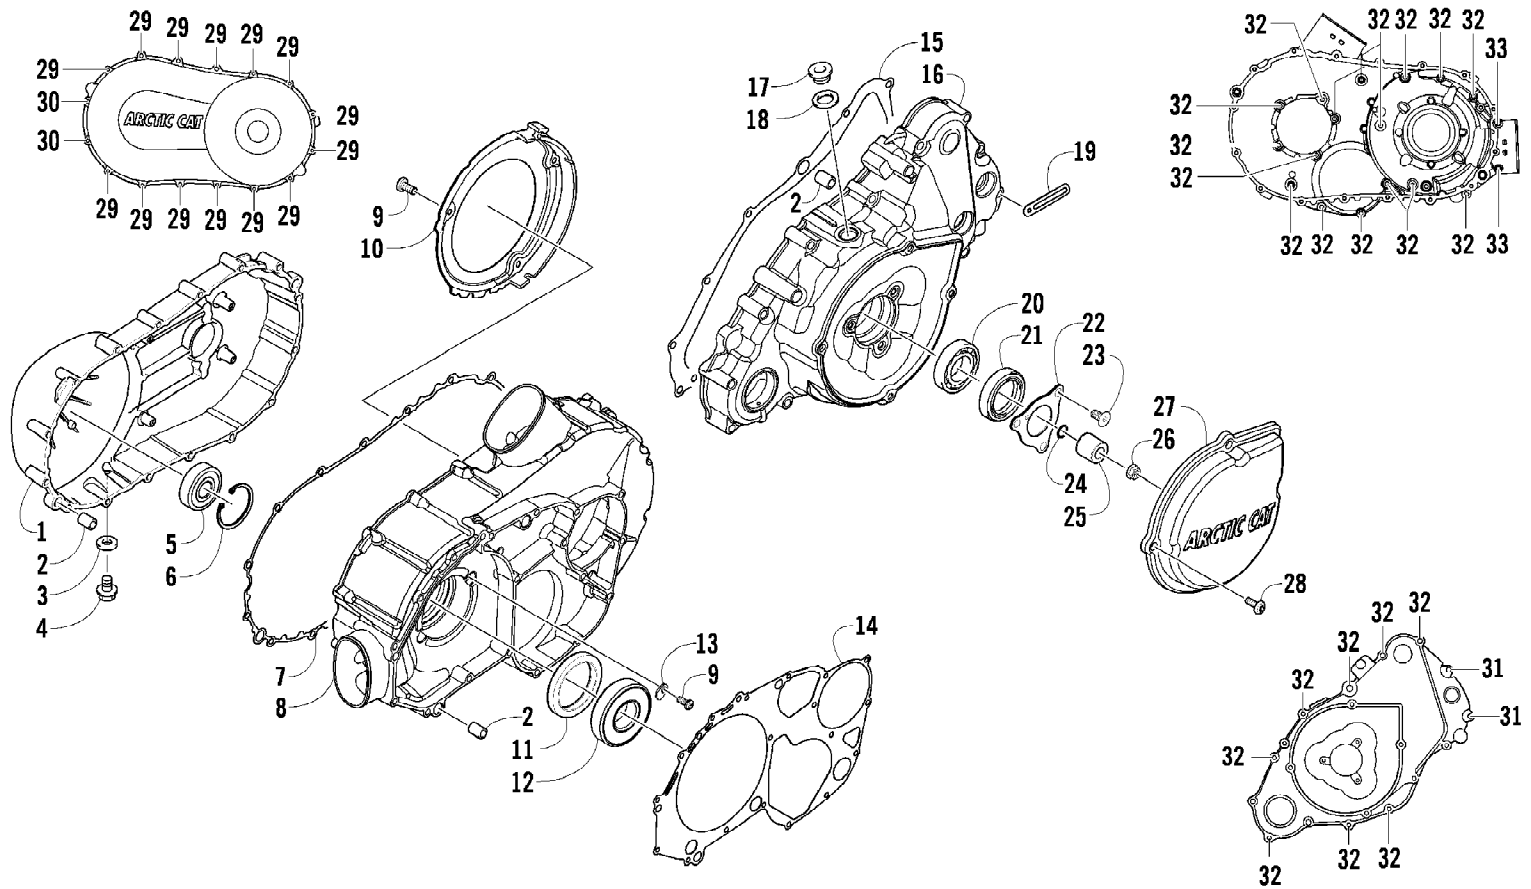

2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036) 14 of 87
 CLUTCH/V-BELT/MAGNETO COVER ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0806-088	1	/P	Cover, V-Belt
2	0829-002	6		Pin, Dowel
3	0830-013	1		Washer, Crush
4	8408-812	1		Screw, Cap
5	0832-060	1		Bearing
6	0831-078	1		Ring, Retaining
7	0830-174	1	/P	Gasket, V-Belt Cover
8	0806-091	1		Cover, Clutch
9	0826-029	5		Screw, Machine
10	0806-048	1		Plate, Air Intake
11	0830-188	1	/P	Seal
12	0832-047	1	S	Bearing
13	0822-010	2	/P	Retainer, Bearing
14	0830-116	1	/P	Gasket, Clutch Cover
15	0830-128	1		Gasket, Magneto Cover
16	0806-082	1	/P	Cover, Magneto - Assembly
17	0826-155	1		Plug
18	0830-015	1		Washer, Crush
19	3002-964	1	/P	Clamp, Wire
20	1602-981	1	/P	Bearing
21	0830-158	1		Seal
22	0805-008	1		Retainer, Seal
23	0826-031	3		Screw, Machine
24	0830-108	1		O-Ring
25	0820-061	1		Bushing
26	0827-008	1		Nut
27	0820-062	1		Cover, Magneto
28	8468-616	4		Screw, Machine
29	8468-645	14		Screw, Machine
30	8468-655	2		Screw, Machine
31	8468-625	2		Screw, Machine
32	8468-640	24		Screw, Machine
33	8468-675	2		Screw, Machine

 2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P000) 15 of 87
CONSOLE, FLOOR PANEL & STORAGE BOX ASSEMBLY

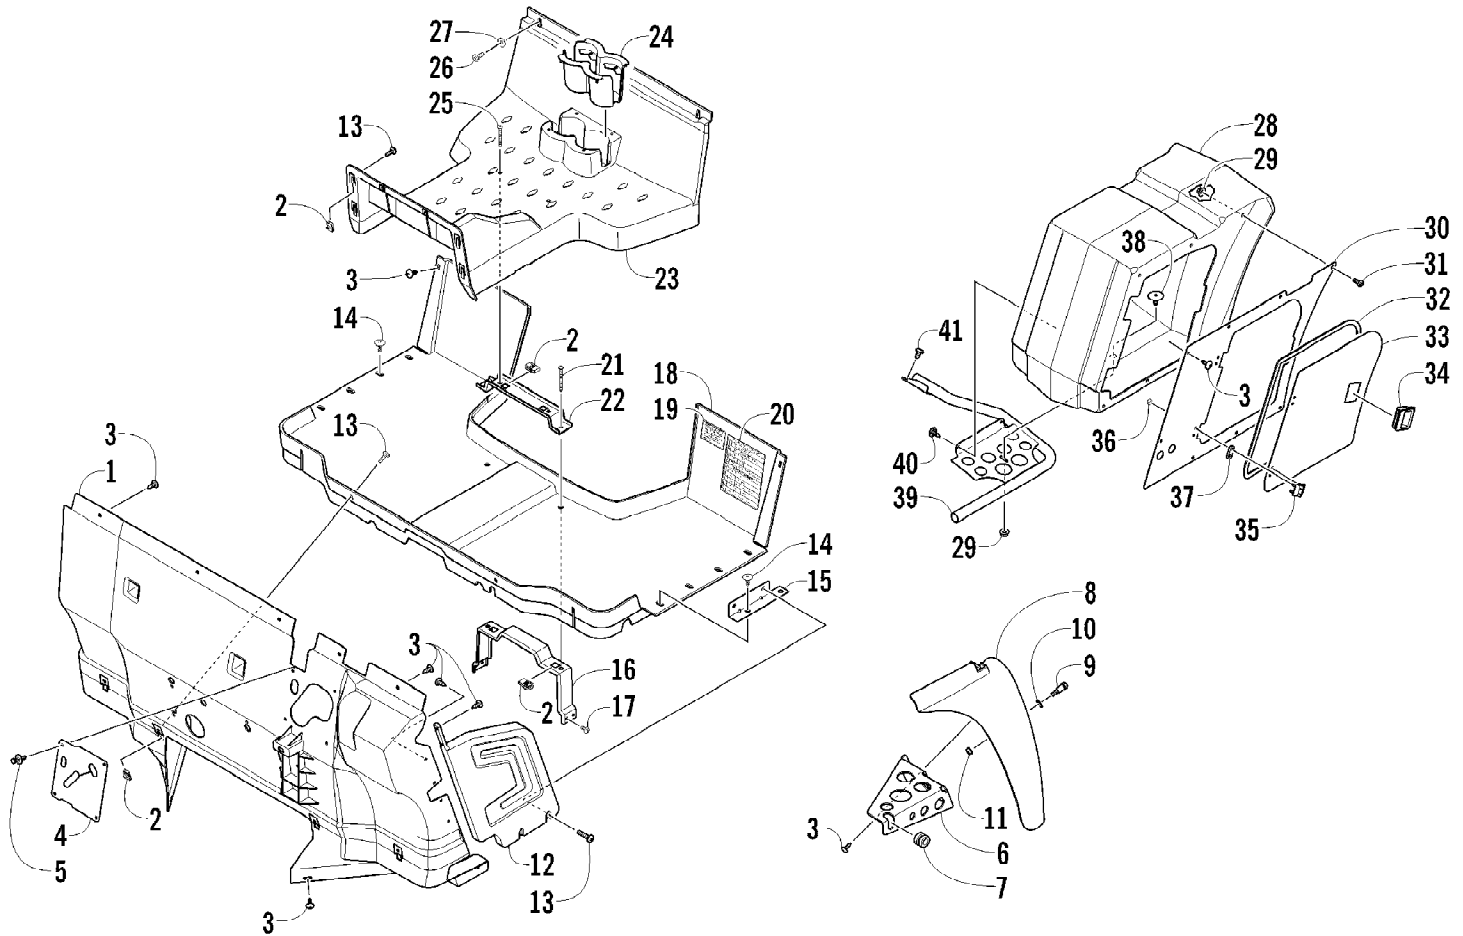


2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036)
 CONSOLE, FLOOR PANEL & STORAGE BOX ASSEMBLY

Page 16 of 87

Ref #	Part Number	Qty	S/P/F	Description
1	2516-798	1		Panel, Fender - Inner
2	0423-577	17		Clip, U-Nut
3	0623-784	26		Screw, Self-Tapping
4	0405-407	1		Seal, Steering Column
5	0623-362	4		Rivet, Reinstallable
6	2506-066	1		Bracket, Support - Right
6	2506-067	1		Bracket, Support - Left
7	0423-447	2		Grommet
8	4506-054	1		Fender, Front - Right
8	4506-055	1		Fender, Front - Left
9	0623-855	2		Screw, Shoulder
10	8050-217	2	/P	Washer
11	8048-366	2		Nut, Lock
12	2416-641	2		Panel, Side
13	8468-625	14		Screw, Machine
14	0423-545	8	/P	Screw, Shoulder
15	4506-260	1		Bracket, Side Panel - Right
15	4506-261	1		Bracket, Side Panel - Left
16	2516-313	1		Bracket, Support
17	8476-616	4		Screw, Machine
18	2416-085	1		Floor
19	2411-233	1		Decal, "Tread Lightly"
20	2411-232	1		Decal, Pre-Ride
21	8468-670	2		Screw, Machine
22	2416-483	1		Bracket, Support - Center Footrest
23	2416-412	1		Footrest, Center
24	2416-109	1		Insert, Cupholder
25	8468-655	2		Screw, Machine
26	8476-630	2		Screw, Machine
27	8450-133	2		Washer
28	4506-528	1		Storage Box - Right - Assembly (inc. 29-37)
28	4506-527	1		Storage Box - Left - Assembly (inc. 29-37)
29	0423-540	14		Nut, Lock
30	2516-858	2		Panel, Reinforcement
31	8477-616	12		Screw, Machine
32	2416-504	2		Seal, Access Door
33	2516-853	2		Door, Access
34	1423-035	2		Latch, Access Door
35	1423-037	4		Hinge (inc. 36)
36	1623-928	16		Nut, Stamped
37	1423-036	4		Spacer
38	0423-101	2		Screw, Shoulder
39	2516-854	1		Bracket, Support - Storage Box - Right
39	2516-855	1		Bracket, Support - Storage Box - Left
40	0623-797	4		Screw, Self-Tapping
41	8476-816	2		Screw, Machine

 
2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036) 17 of 87
COOLING ASSEMBLY

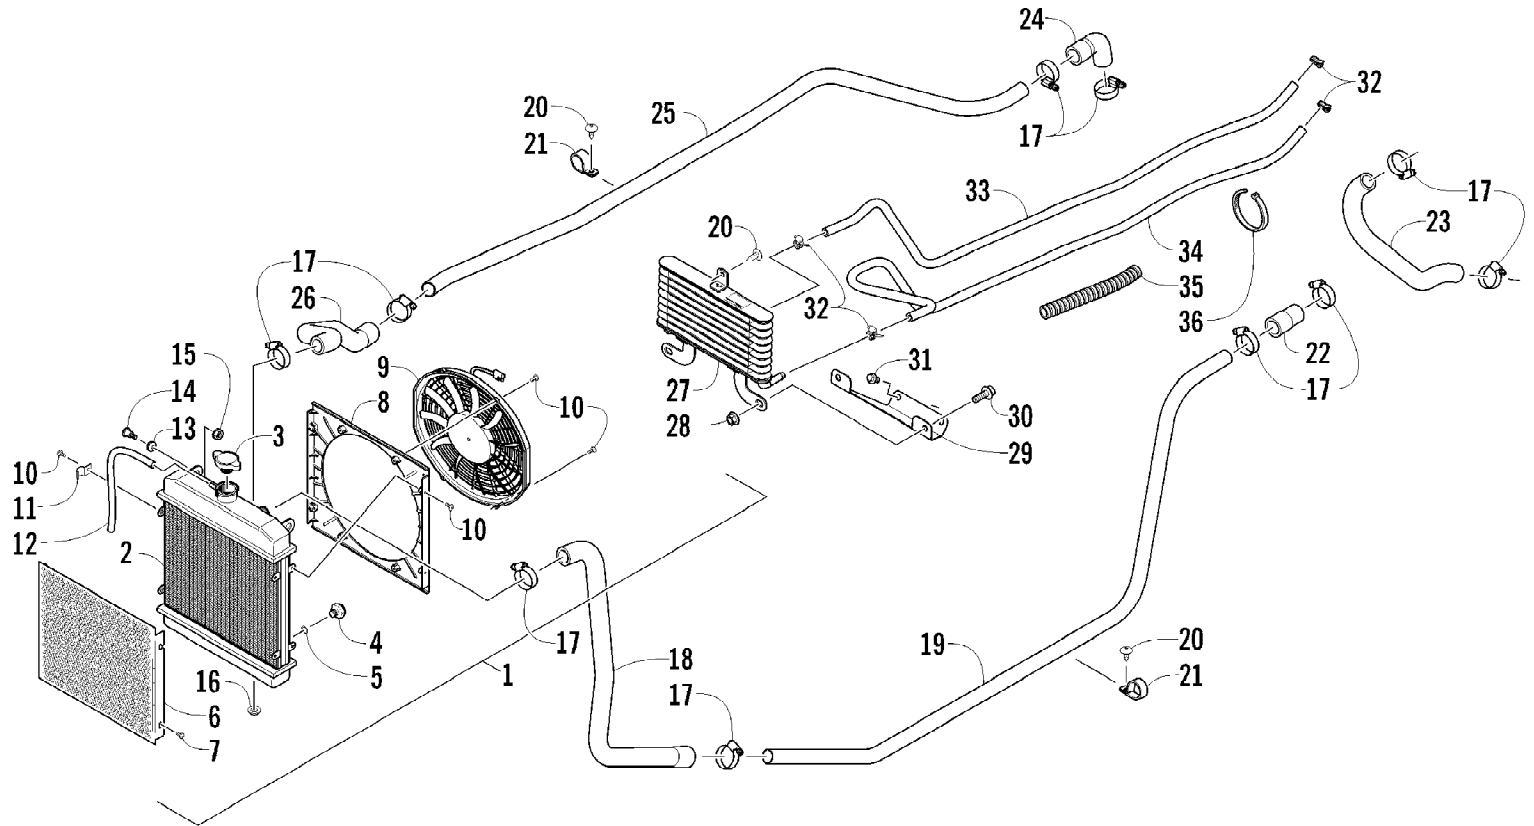

2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036)
 COOLING ASSEMBLY Page 18 of 87

Ref #	Part Number	Qty	S/P/F	Description
1	0413-256	1	/P	Radiator - Assembly (inc. 2-13)
2	0413-205	1		Radiator
3	0413-255	1	/P	Cap, Radiator
4	0413-195	1		Plug, Drain
5	1602-213	1	/P	O-Ring
6	0413-007	1		Screen, Radiator
7	8475-512	4		Screw, Machine
8	0413-203	1		Shroud, Fan
9	0413-123	1	/P	Fan, Cooling
10	0623-378	8		Screw, Self-Tapping
11	0423-351	1		Clamp, Wire
12	0610-016	AR	/P	Hose - 25 ft
12	0610-015	AR	/P	Hose - 100 ft
13	0423-030	2		Grommet
14	0423-484	2		Screw, Shoulder
15	0623-038	2		Nut w/Washer
16	0423-028	2		Bushing, Stem
17	0423-496	10		Clamp, Hose
18	0410-092	1		Hose, Coolant - Upper Radiator
19	0410-223	1		Pipe, Coolant - Upper
20	0623-784	3		Screw, Self-Tapping
21	0423-594	2		Clamp, Pipe - Coolant
22	0410-225	1		Hose, Coolant - Pipe/Thermostat Cover
23	0410-022	1		Hose, Coolant - Rear
24	0410-215	1		Hose, Coolant
25	0410-224	1		Pipe, Coolant - Lower
26	0410-094	1		Hose, Coolant - Lower Radiator
27	0413-211	1	/P	Cooler, Oil
28	8424-002	2		Nut
29	0513-041	1		Bracket, Mounting - Oil Cooler
30	8409-020	2	/P	Screw, Cap
31	8408-816	2		Screw, Cap
32	0423-632	4		Clamp, Hose
33	0410-183	1		Hose, Oil - Lower
34	0410-228	1		Hose, Oil - Upper
35	1619-453	AR		Conduit, High Temperature - 5 ft
36	0623-751	AR		Tie, Cable - Reusable

 
2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036) 19 of 87
CRANK BALANCER ASSEMBLY

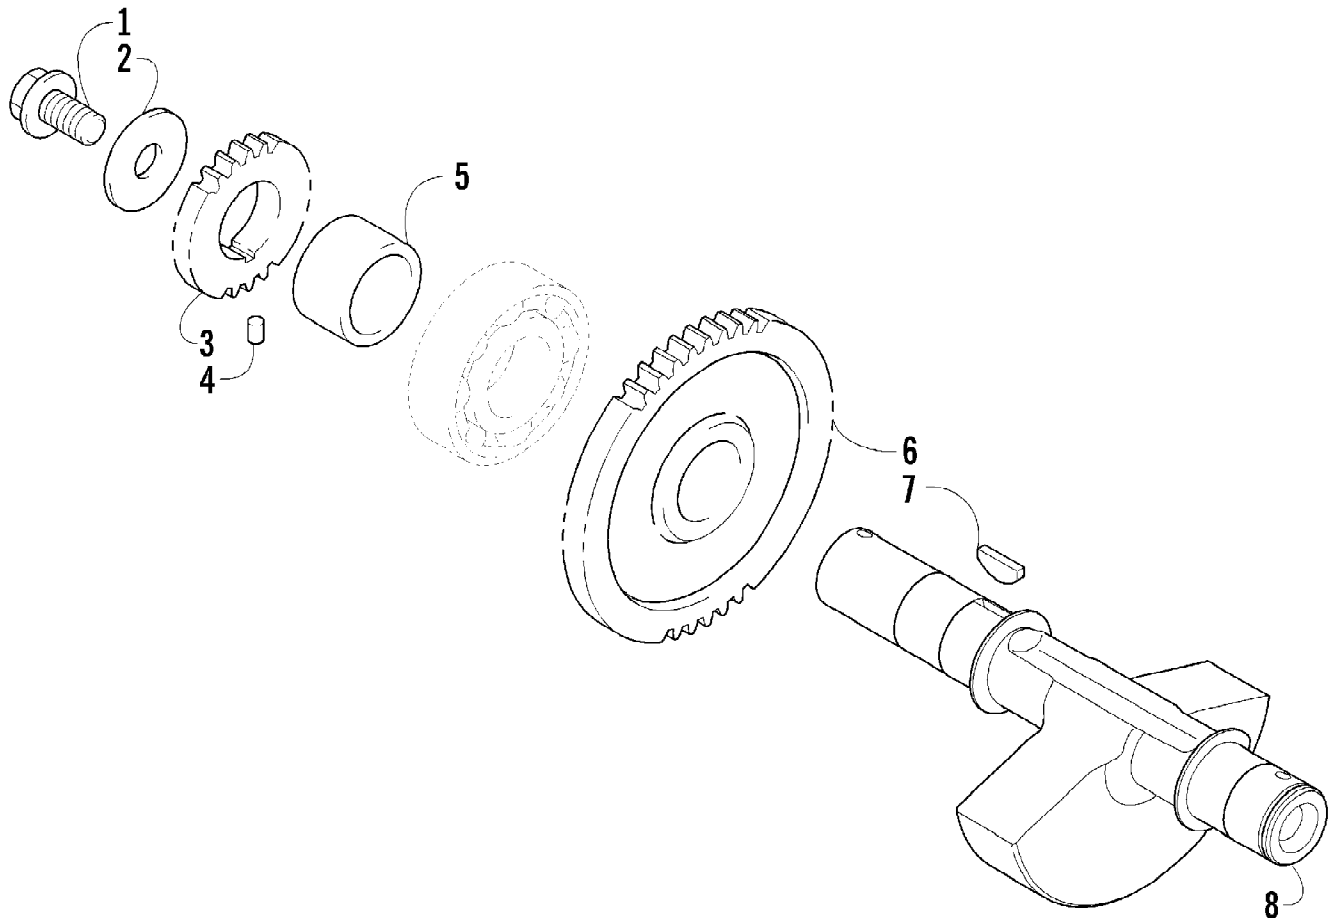

2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036) 20 of 87
 CRANK BALANCER ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0826-033	1		Screw, Cap
2	0828-003	1		Washer
3	0811-003	1		Gear, Oil Pump Drive
4	0829-007	1		Pin, Dowel
5	0811-004	1		Spacer
6	0811-002	1		Gear, Driven
7	0829-006	1		Key
8	0811-017	1		Balancer, Crank

 2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036) 21 of 87
CRANKCASE ASSEMBLY

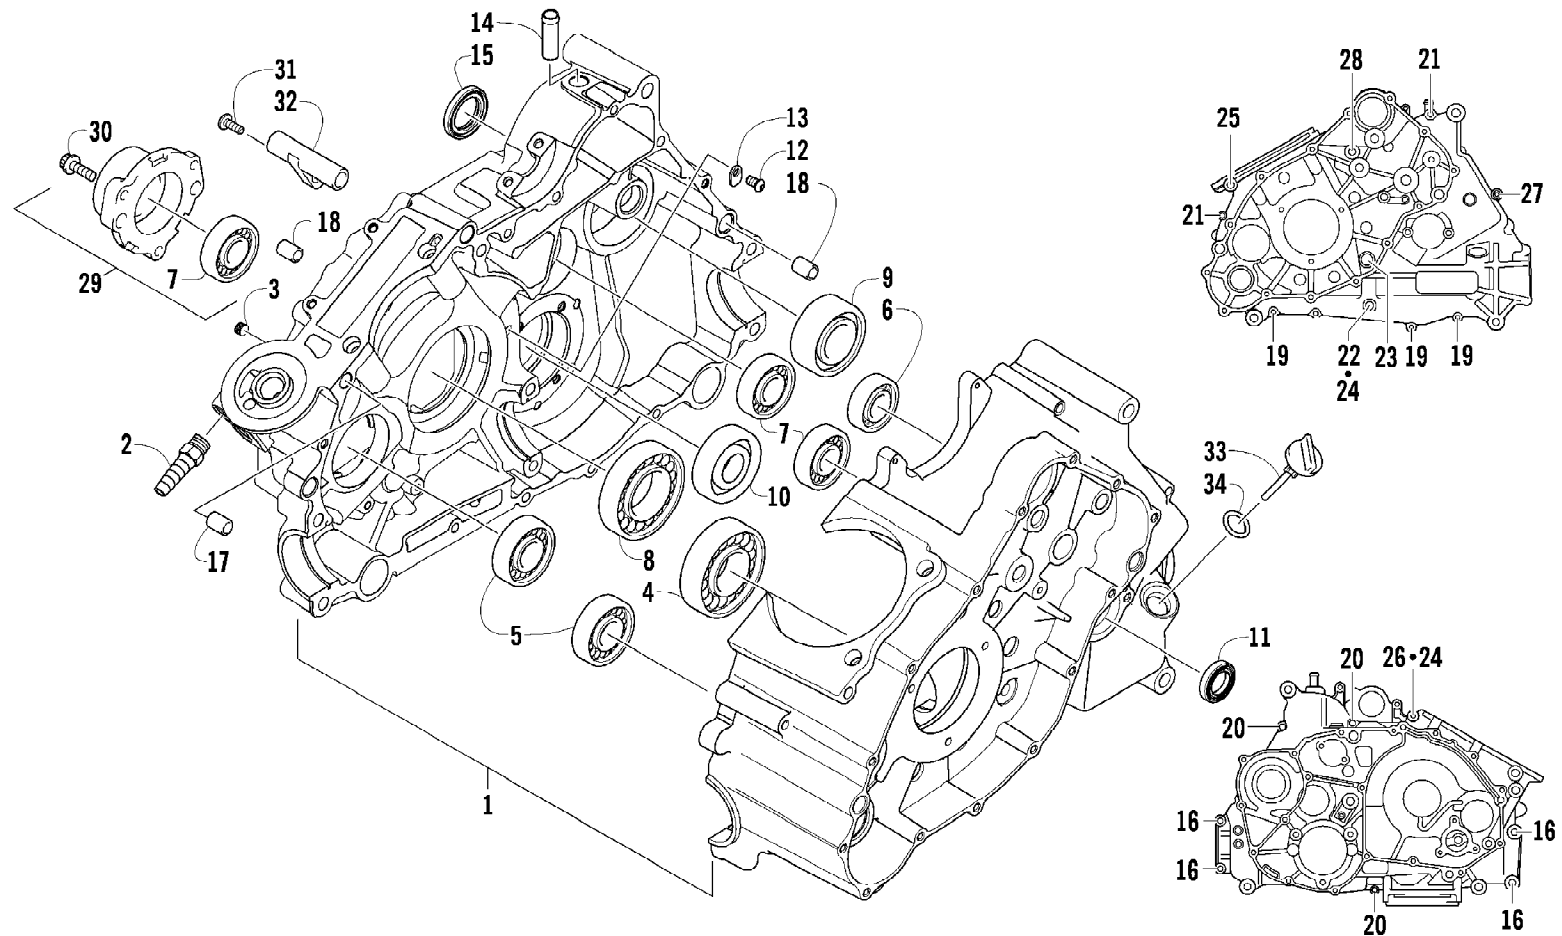


2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036)
 CRANKCASE ASSEMBLY

Page 22 of 87

Ref #	Part Number	Qty	S/P/F	Description
1	0801-150	1		Crankcase Assembly (inc. 2-15)
2	0812-061	2		Fitting, Adapter
3	0801-002	2		Plug
4	0832-043	1	/P	Bearing
5	0832-044	2	/P	Bearing
6	0832-049	1	/P	Bearing
7	0832-050	3	/P	Bearing
8	0832-042	1	/P	Bearing
9	0832-048	1	/P	Bearing
10	0832-077	1	/P	Bearing
11	0822-052	1		Seal, Countershaft
12	0826-100	4		Screw, Machine
13	0822-010	4	/P	Retainer, Bearing
14	0801-028	1		Pipe, Breather
15	0830-035	1		Seal, Driveshaft
16	8412-850	4		Screw, Cap
17	0829-003	1		Pin, Dowel
18	0829-002	5		Pin, Dowel
19	8468-645	3		Screw, Machine
20	8468-655	3		Screw, Machine
21	8468-675	2		Screw, Machine
22	8412-860	1		Screw, Cap
23	0826-017	1		Screw, Cap
24	0830-008	2		Gasket
25	0826-019	1		Screw, Cap
26	0826-018	1		Screw, Cap
27	8468-695	1		Screw, Machine
28	8468-680	1		Screw, Machine
29	0801-029	1		Housing, Secondary Shaft (inc. one No. 7)
30	0826-105	3		Screw, Cap
31	0826-038	1		Screw, Cap
32	0801-069	1		Pipe, Breather
33	0801-073	1		Stick, Oil Level (inc. 34)
34	0830-010	1		O-Ring

 
2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P000) 23 of 87
CRANKSHAFT AND PISTON ASSEMBLY

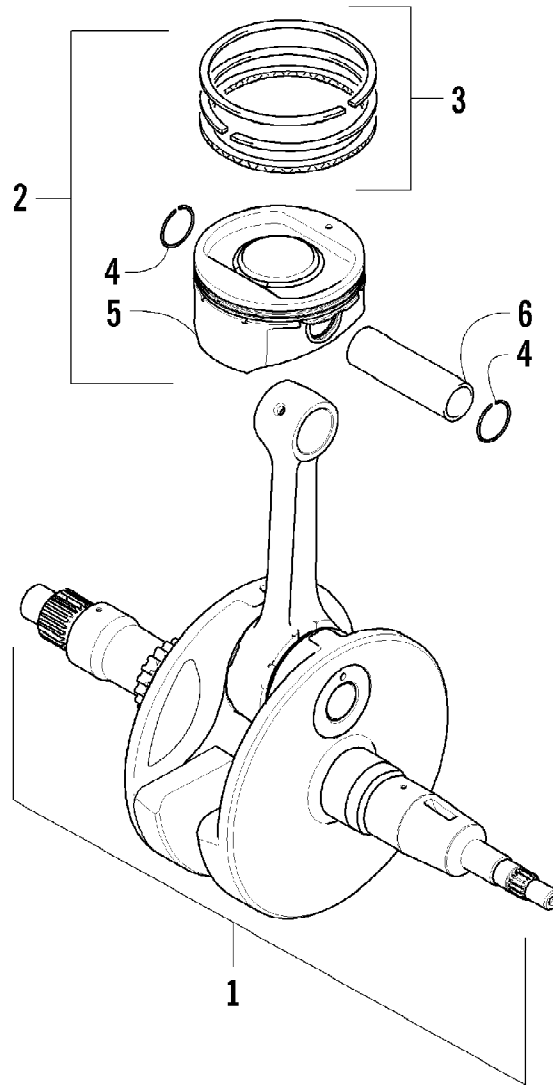

2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036) Page 24 of 87
CRANKSHAFT AND PISTON ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0805-032	1	S	Crankshaft Assembly
2	0805-297	1	/P	Piston Set (inc. 3-6)
3	0805-132	1		Ring, Piston - Set
4	0831-001	2		Circlip, Piston Pin
5	0805-296	1		Piston
6	0805-210	1		Pin, Piston

 
2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036) 25 of 87
CYLINDER ASSEMBLY

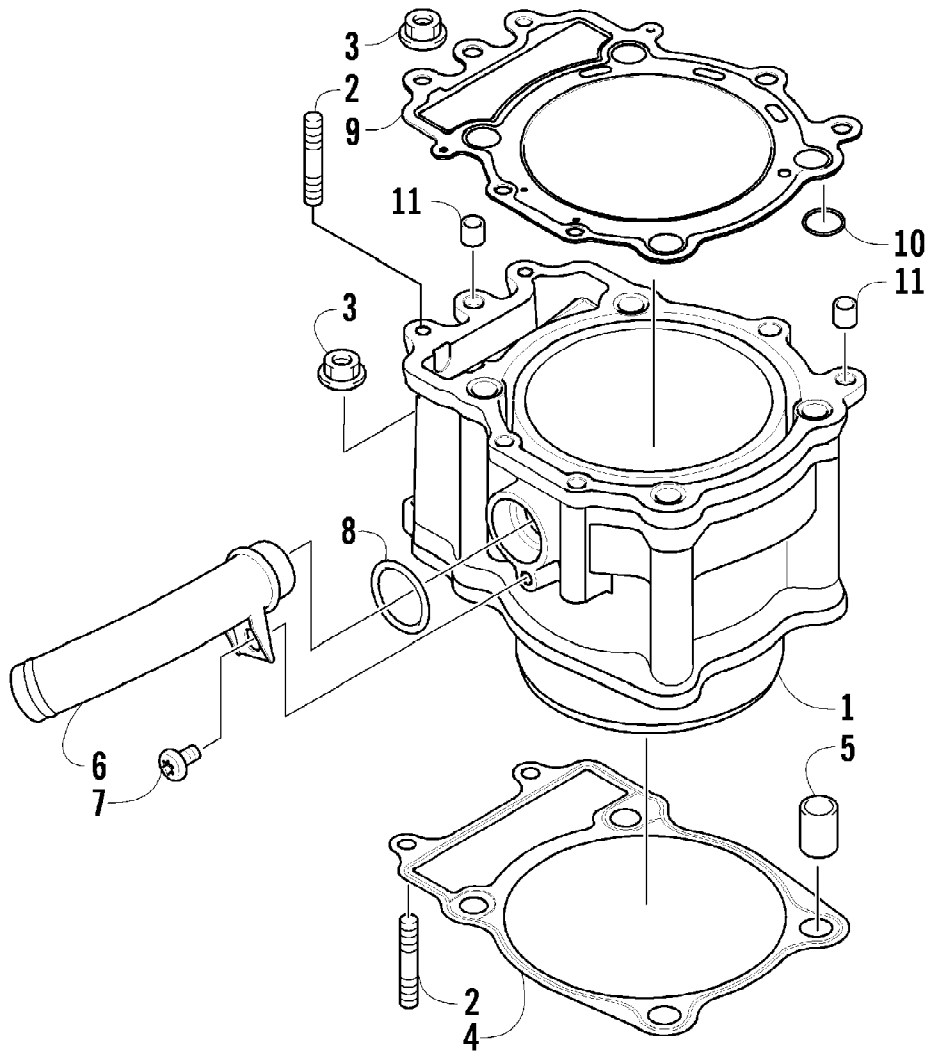

2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036)
 CYLINDER ASSEMBLY Page 26 of 87

Ref #	Part Number	Qty	S/P/F	Description
1	0804-053	1	/P	Cylinder
2	0827-002	4		Bolt, Stud
3	8424-604	4		Nut
4	0830-111	1		Gasket, Base
5	0829-002	2		Pin, Dowel
6	0804-047	1	/P	Union, Coolant Hose
7	8468-612	1		Screw, Machine
8	0830-007	1		O-Ring
9	0830-112	1		Gasket, Cylinder Head
10	0830-113	4		O-Ring
11	0829-048	2	/P	Pin, Dowel

 2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036) 27 of 87
CYLINDER HEAD AND CAMSHAFT/VALVE ASSEMBLY

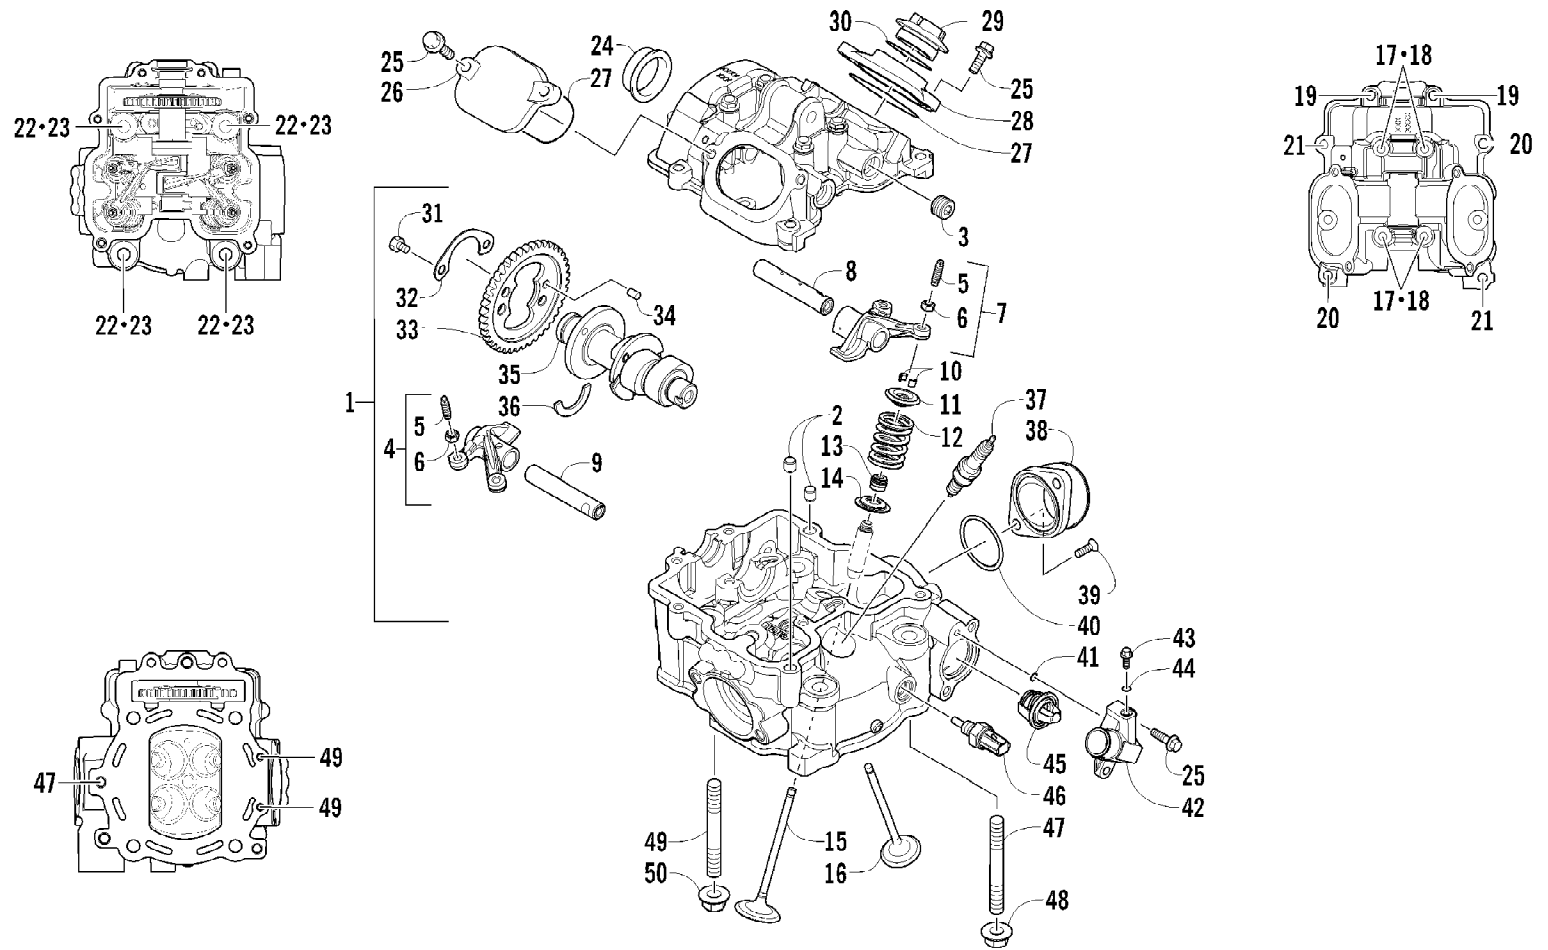


2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036)
 CYLINDER HEAD AND CAMSHAFT/VALVE ASSEMBLY

Page 28 of 87

Ref #	Part Number	Qty	S/P/F	Description
1	0808-184	1		Head, Cylinder - Assembly (inc. 2-17)
2	0829-048	2	/P	Pin, Dowel
3	0831-083	2		Plug, Shaft
4	0809-237	1	/P	Arm, Valve Rocker - Exhaust (inc. two No. 5-6)
5	0809-240	4	/P	Screw, Adjuster
6	0827-059	4		Nut
7	0809-234	1	/P	Arm, Valve Rocker - Intake (inc. two No. 5-6)
8	0809-241	1		Shaft, Rocker Arm - Intake
9	0809-242	1		Shaft, Rocker Arm - Exhaust
10	0809-233	8		Cotter, Valve
11	0809-232	4		Retainer, Spring
12	0809-231	4	/P	Spring, Valve
13	0830-186	4	/P	Seal, Oil
14	0809-215	4		Seat, Spring - Valve
15	0809-228	2	/P	Valve, Intake
16	0809-229	2	/P	Valve, Exhaust
17	0826-149	4		Screw, Cap
18	0830-155	4	/P	Gasket
19	0826-002	2		Screw, Cap
20	0826-005	2		Screw, Cap
21	0826-006	2		Screw, Cap
22	0808-037	4	/P	Screw, Cap
23	0830-147	4	/P	Washer
24	0808-077	1		Plug, Cylinder Head
25	0826-007	6		Screw, Cap
26	0808-003	1		Cap, Inspection
27	0830-167	2	/P	O-Ring
28	0808-206	1		Cap, Inspection
29	0812-089	1		Plug, Oil Fill
30	0830-215	1		O-Ring
31	0826-034	2		Screw, Cap
32	0828-004	1		Plate, Retainer
33	0809-002	1		Sprocket
34	0829-049	1		Pin, Dowel
35	0809-245	1	/P	Camshaft
36	0809-003	1		C-Ring
37	0217-799	1	/P	Spark Plug CPR8E
38	0470-668	1		Flange, Intake Manifold
39	0826-008	2		Screw, Machine
40	0830-090	1		O-Ring
41	0830-168	1	/P	O-Ring
42	0808-208	1		Cover, Thermostat (inc. 43-44)
43	8408-512	1		Screw, Cap
44	0423-182	1	/P	O-Ring
45	0808-078	1		Thermostat
46	0808-124	1		Switch, Engine Coolant Temperature
47	0827-031	1		Bolt, Stud
48	8424-804	1		Nut
49	0827-054	2		Bolt, Stud
50	8424-604	2		Nut

 2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036) 29 of 87
DASH ASSEMBLY

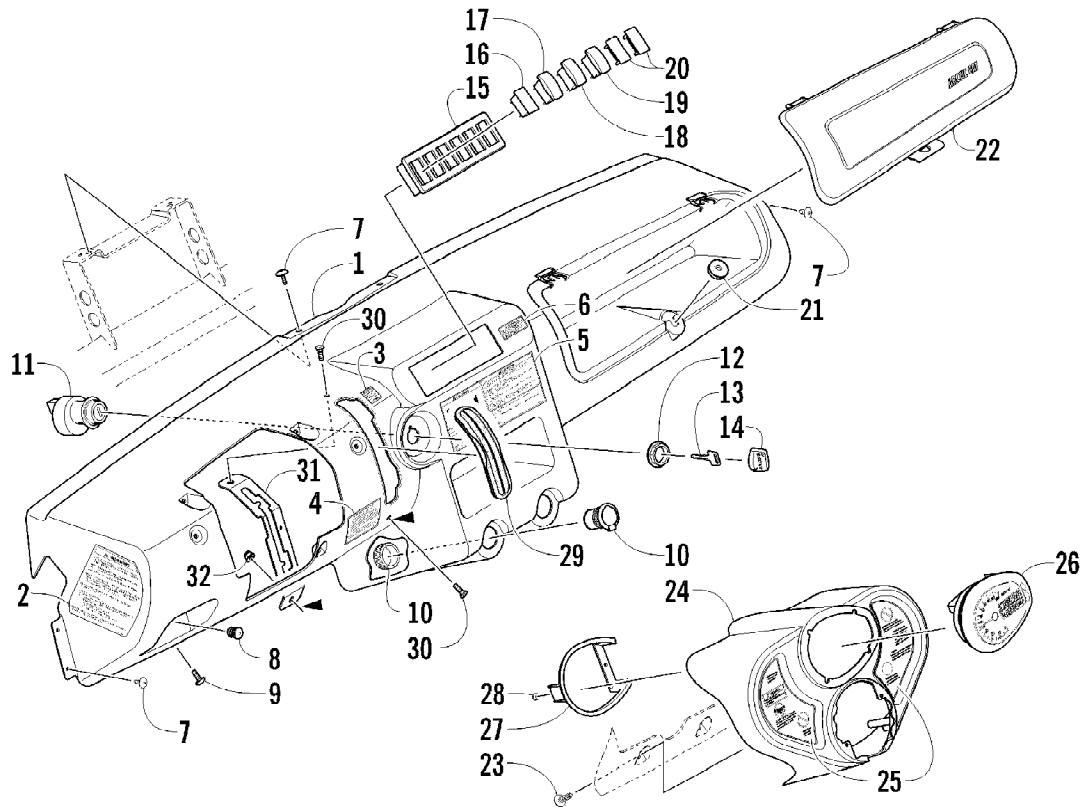


2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036)
 DASH ASSEMBLY

Page 30 of 87

Ref #	Part Number	Qty	S/P/F	Description
1	2516-801	1		Panel, Dash
2	2411-236	1		Decal, Warning - Dash Side
3	2411-560	1		Decal, Caution - Engine RPM
4	2411-311	1		Decal, Starting
5	2411-291	1		Decal, Warning - Dash Center
6	1411-124	1		Decal, Warning - Differential Lock
7	0623-784	AR		Screw, Self-Tapping
8	1623-697	1		Plug, Hole
9	0423-419	3		Screw, Machine
10	0641-897	2	/P	Outlet, Accessory - 12V
11	0430-089	1	/P	Switch, Ignition (inc. 12-14)
12	0430-050	1		Nut, Flange - Ignition Switch
13	0430-042	1		Key, Ignition - Series (Y Series - Left-Side Cut)
13	0430-043	1		Key, Ignition - Series (Z Series - Right-Side Cut)
14	0430-054	1		Cover, Key
15	0409-142	1		Panel, Switch - Mount
16	0420-111	1		Indicator, Seat Belt/Park
17	0409-067	1		Switch, Light
18	0409-061	1		Switch, 2WD/4WD/Differential Lock
19	0409-071	1		Switch, Reverse Override
20	0409-070	2		Plug, Switch Hole
21	0423-541	1		Grommet, Latch - Glove Box
22	1406-789	1		Cover, Glove Box
23	0423-342	5	/P	Screw, Self-Tapping
24	2406-539	1		Pod, Instrument
25	2411-292	1		Decal, Warning - Dash - Right
25	2411-293	1		Decal, Warning - Dash - Left
26	0520-111	1		Gauge, Analog LCD
27	0420-065	1	/P	Bracket, Retaining
28	0423-493	2		Nut w/Washer
29	2416-656	1	S	Boot, Shift
30	8474-616	2		Screw, Machine
31	1502-832	1		Gate, Shift
32	8427-602	1		Nut, Lock

 2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P0000) 31 of 87
DRIVE TRAIN ASSEMBLY

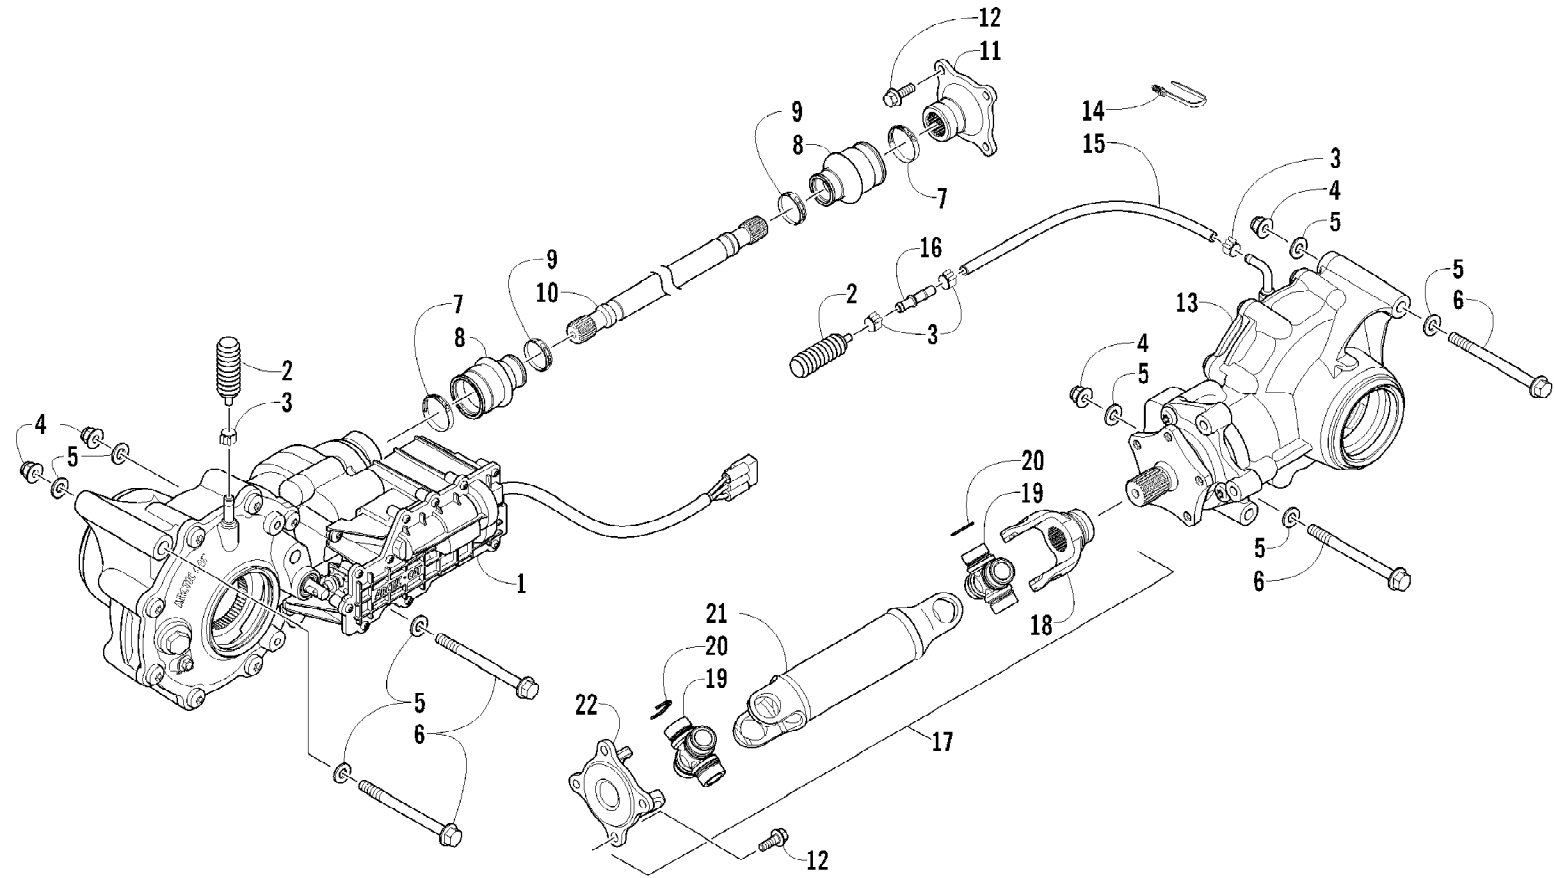


2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036)
 DRIVE TRAIN ASSEMBLY

Page 32 of 87

Ref #	Part Number	Qty	S/P/F	Description
1	1502-740	1		Gearcase, Front
2	1402-620	2	/P	Bladder, Gearcase
3	0423-670	4		Clamp, Hose
4	8428-002	4		Nut, Lock
5	0423-426	8		Washer
6	0423-404	4		Screw, Cap
7	0423-393	2		Clamp
8	0402-985	2	/P	Boot
9	0423-411	2		Clamp
10	1402-904	1		Shaft, Propeller - Front
11	0402-950	1		Flange, Output
12	8408-820	8	/P	Screw, Cap
13	1502-771	1		Gearcase, Rear
14	0423-075	AR		Tie, Cable - Push-Mount
15	0410-070	AR	/P	Hose, Vent - 25 ft
16	0470-702	1	/P	Fitting, Vent
17	1502-743	1		Driveshaft, Rear - Assembly (inc. 18-22)
18	1402-567	1		Yoke, Slip
19	0402-944	2	/P	Joint, Universal (inc.20)
20	0423-395	8		Ring, Retaining
21	1502-736	1		Driveshaft, Rear
22	1402-689	1		Yoke, Flange

 2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036) 33 of 87
ENGINE AND EXHAUST

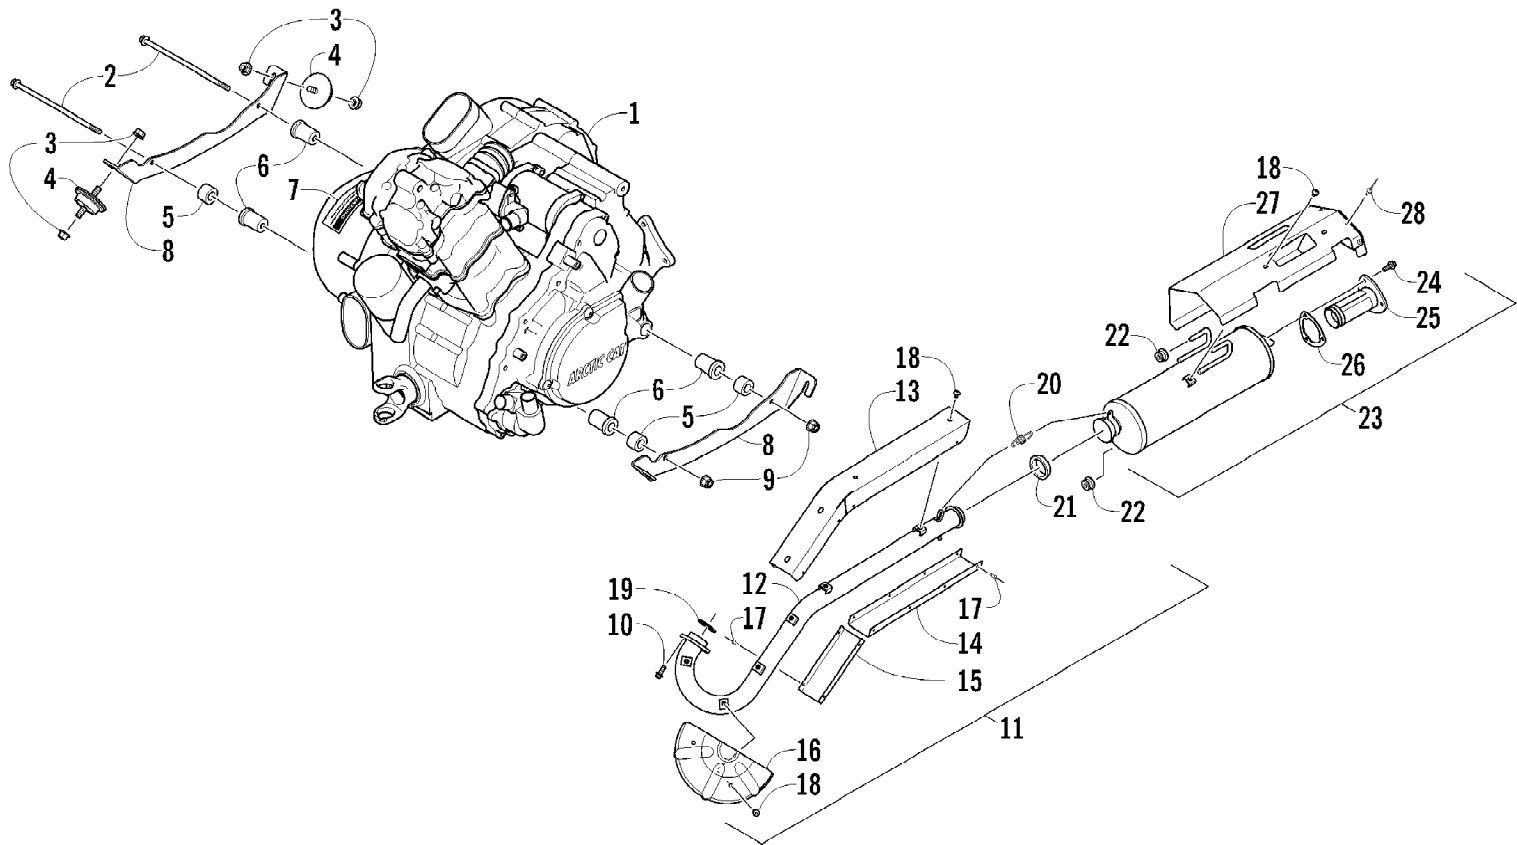


2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036)
 ENGINE AND EXHAUST

Page 34 of 87

Ref #	Part Number	Qty	S/P/F	Description
1	0800-105	1	S	Engine
2	1423-064	2	/P	Screw, Cap
3	8424-002	8		Nut
4	0408-014	4		Mount, Engine
5	1423-025	3	/P	Spacer
6	0801-180	4	/P	Bushing
7	0411-426	1		Decal, Warning
8	2516-768	1		Bracket, Engine - Right
8	2516-769	1		Bracket, Engine - Left
9	8428-002	2		Nut, Lock
10	8408-820	2	/P	Screw, Cap
11	0512-531	1		Pipe, Exhaust - Assembly (inc. 12-18)
12	0512-532	1		Pipe, Exhaust
13	0412-581	1		Shield, Pipe - Upper Rear
14	0412-580	1		Shield, Pipe - Lower Rear
15	0412-579	1		Shield, Pipe - Lower Front
16	0512-547	1		Shield, Pipe - Forward
17	1623-130	12		Rivet
18	8477-610	9		Screw, Machine
19	0412-338	1	/P	Gasket, Exhaust
20	0612-668	2	/P	Spring
21	0412-375	1	/P	Seal, Exhaust
22	0412-544	3		Bushing
23	0512-355	1	/P	Muffler - Assembly (inc. 24-26)
24	8408-616	3		Screw, Cap
25	0512-219	1	/P	Spark Arrester Assembly
26	0412-313	1		Gasket, Spark Arrester
27	0512-578	1		Shield, Heat - Muffler (inc. 28)
28	8061-486	3	/P	Rivet

 
2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P000) 35 of 87
FRAME AND RELATED PARTS

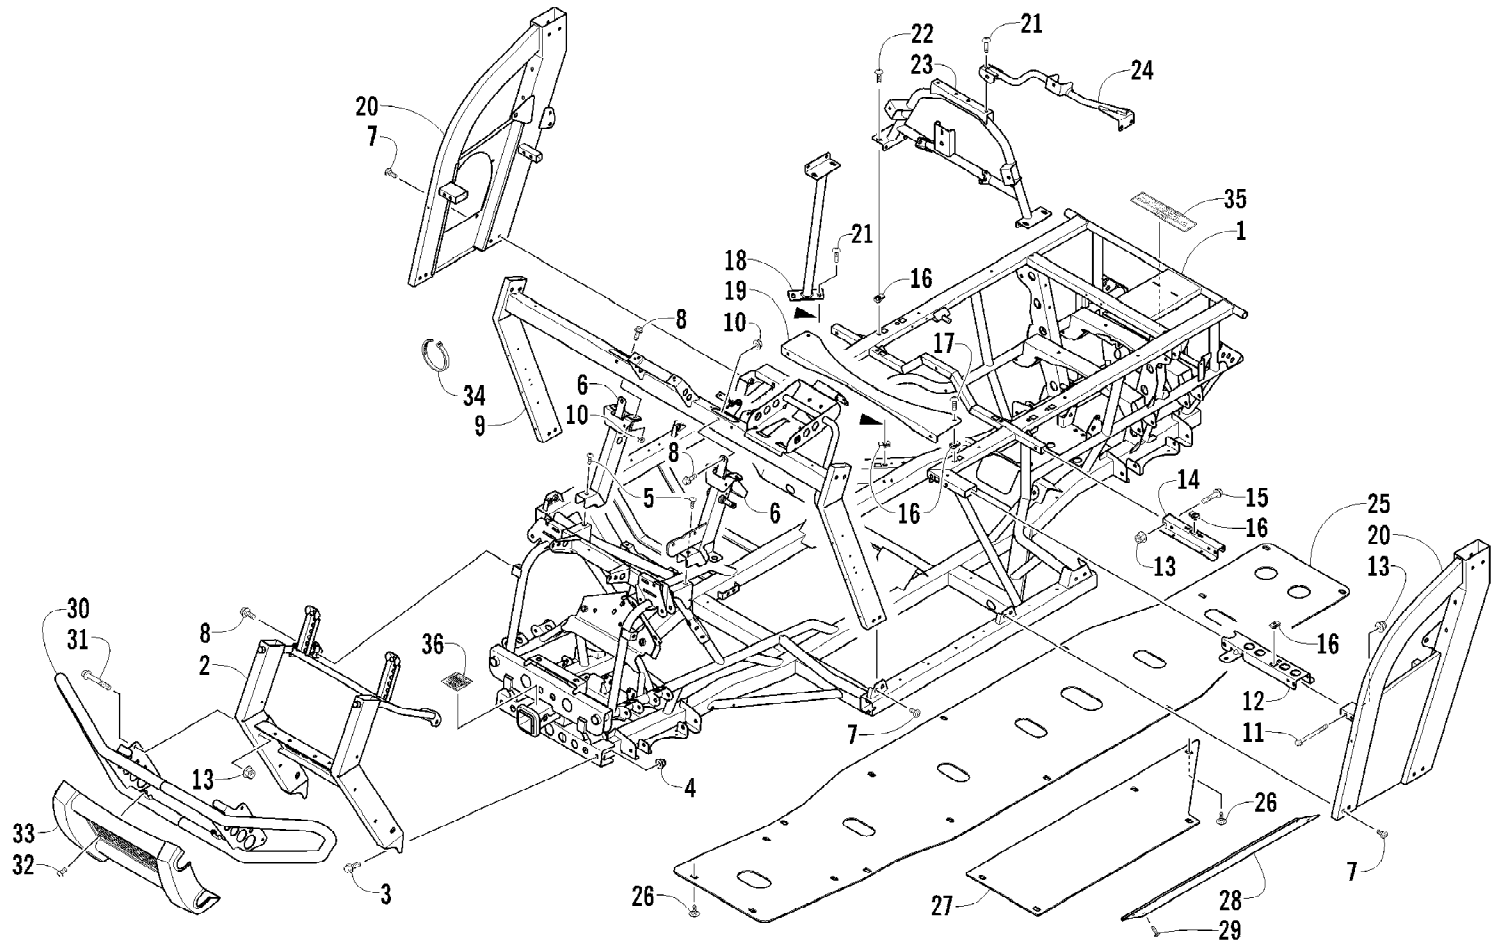

2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036) 36 of 87
 FRAME AND RELATED PARTS

Ref #	Part Number	Qty	S/P/F	Description
1	2516-770	1	S	Frame, Main
2	2516-556	1		Bracket, Mounting - Bumper
3	8409-020	2	/P	Screw, Cap
4	8427-002	2		Nut, Lock
5	8476-820	2		Screw, Machine
6	0505-688	1		Bracket, Steering Support - Right
6	1502-790	1		Bracket, Steering Support - Left
7	0423-817	12		Screw, Machine
8	8408-820	8	/P	Screw, Cap
9	0505-652	1		Support, Steering
10	8424-802	6		Nut
11	8408-870	6		Screw, Cap
12	1506-844	1		Bracket, Seat Support - Front - Right
12	1506-845	1		Bracket, Seat Support - Front - Left
13	8427-802	16		Nut, Lock
14	1506-842	2		Bracket, Seat Support - Rear
15	8408-850	6		Screw, Cap
16	0423-577	14		Clip, U-Nut
17	8477-620	2		Screw, Machine
18	2516-777	1		Tube, Support
19	2516-775	1		Bracket, Front Seat
20	2516-102	1		Support, Overhead - Right
20	2516-103	1		Support, Overhead - Left
21	8476-616	6		Screw, Machine
22	8468-616	4		Screw, Machine
23	2516-780	1		Support, ROPS
24	2516-844	1		Seat, Support - Right
24	2516-845	1		Seat, Support - Left
25	2416-452	1		Plate, Skid - Center
26	0423-545	26	/P	Screw, Shoulder
27	2416-453	2		Panel, Belly - Side
28	2506-612	2		Plate, Skid - Side
29	0423-849	8		Screw, Self-Tapping
30	2506-779	1		Bumper
31	8408-860	4		Screw, Cap
32	8477-616	4		Screw, Machine
33	2406-713	1		Fascia, Bumper - Front
34	0123-788	AR	/P	Tie, Cable - 8 in.
35	2411-234	1		Decal, Warning - Towing - Rear
36	1411-122	1		Decal, Warning - Towing - Front

 2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P0000) 37 of 87
FRONT DRIVE GEARCASE ASSEMBLY

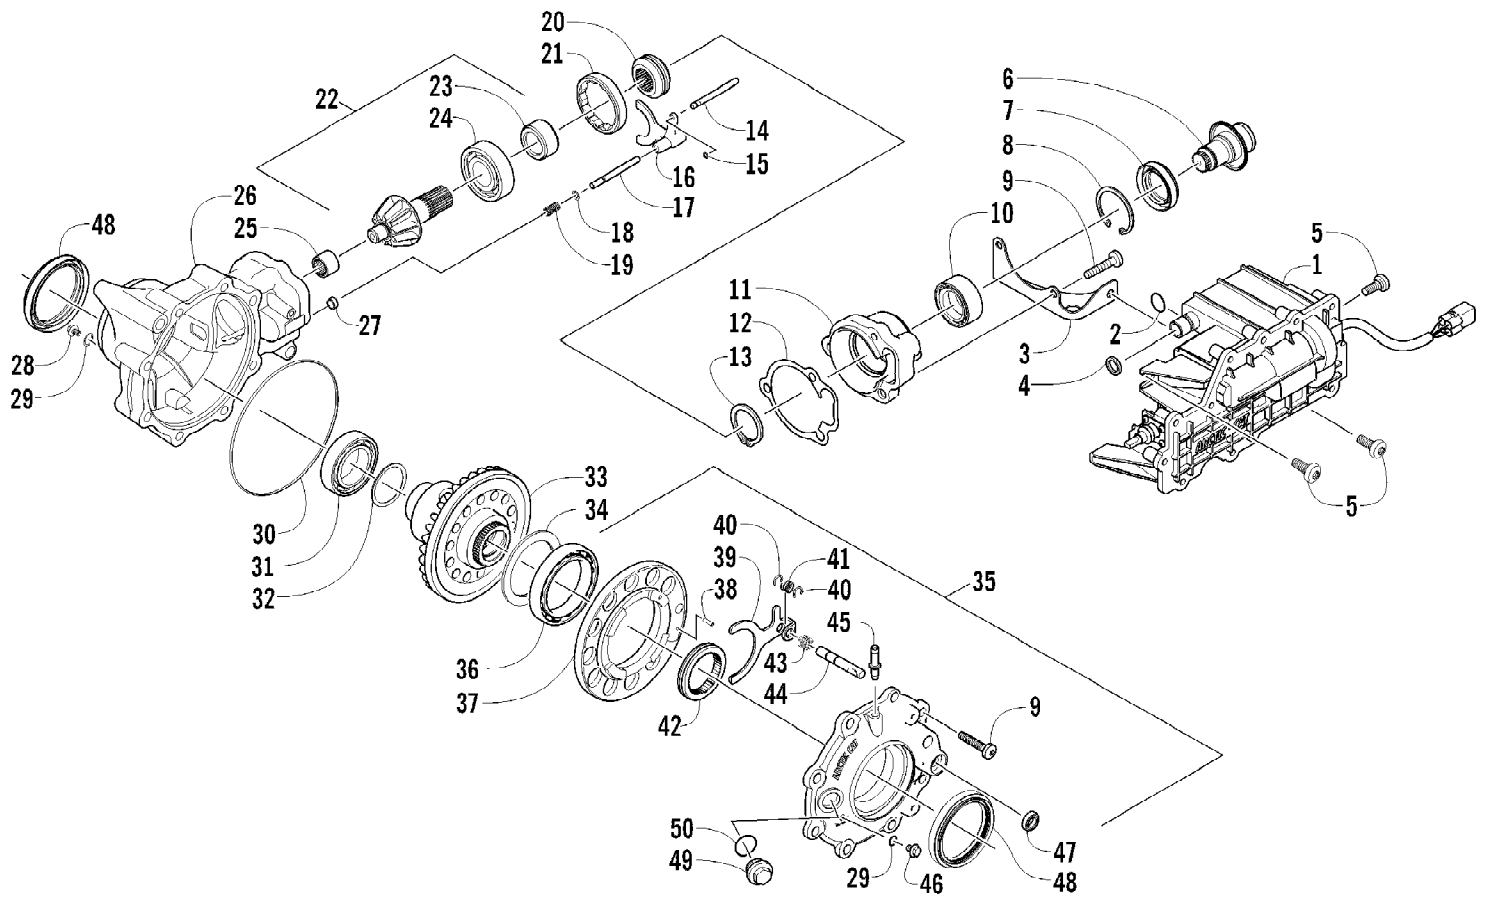

2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036)
 FRONT DRIVE GEARCASE ASSEMBLY


Page 38 of 87

Ref #	Part Number	Qty	S/P/F	Description
	1502-740	1		Complete Front Drive Gearcase Assembly
1	0502-585	1	S	Actuator (inc. 2)
2	1402-981	1		O-Ring
3	1502-237	1		Bracket, Actuator
4	0423-892	1	/P	O-Ring
5	0423-396	3		Screw, Self-Tapping
6	1502-085	1	/P	Shaft, Input
7	1402-011	1		Seal
8	0423-423	1		Ring, Retaining
9	0423-118	11		Screw, Self-Tapping
10	1402-043	1		Bearing
11	0502-528	1	/P	Housing, Pinion
12	0402-947	1		Gasket, Flange
13	0423-417	1		Ring, Retaining
14	0402-997	1		Shaft, Selector
15	0423-402	1		Ring, Retaining
16	0402-998	1		Fork, Selector
17	0402-417	1		Shaft, Shuttle
18	0423-147	1		O-Ring
19	0402-999	1		Spring, Return
20	0402-413	1		Coupler, Drive
21	0402-357	1		Collar, Lock
22	0502-783	1		Gear, Pinion - Assembly - 10T (inc. 23-24)
23	0402-336	1		Collar, Retaining
24	0402-327	1		Bearing
25	0402-328	1		Bearing
26	0502-514	1		Housing, Gearcase
27	0402-411	1		Pin, Dowel
28	1402-210	1	/P	Plug, Magnetic (inc. one No. 29)
29	0423-153	2		O-Ring
30	0423-149	1		O-Ring
31	0402-393	1		Bearing
32	0402-405	AR		Shim, 41 x 49 x 1.3 mm
32	0402-406	AR		Shim, 41 x 49 x 1.4 mm
32	0402-407	AR		Shim, 41 x 49 x 1.5 mm
32	0402-408	AR		Shim, 41 x 49 x 1.6 mm
32	0402-409	AR		Shim, 41 x 49 x 1.7 mm
33	1502-555	1	/P	Gear, Ring - 36T
34	1402-074	AR		Shim, 61 x 69 x 1.3 mm
34	1402-075	AR		Shim, 61 x 69 x 1.4 mm
34	1402-076	AR		Shim, 61 x 69 x 1.5 mm
34	1402-077	AR		Shim, 61 x 69 x 1.6 mm
34	1402-078	AR		Shim, 61 x 69 x 1.7 mm
35	1502-389	1		Cover, Gearcase (inc. one No. 29, 36-47, and one No. 48)
36	1402-053	1		Bearing
37	0502-413	1		Flange, Bearing
38	1402-079	1		Pin, Parallel
39	1402-054	1		Fork
40	1402-058	2		Ring, Retaining
41	1402-057	1		Spring
42	1402-042	1		Collar, Sliding

2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036) 39 of 87
 FRONT DRIVE GEARCASE ASSEMBLY


Ref #	Part Number	Qty	S/P/F	Description
43	1402-063	1		Spring
44	1402-656	1		Shaft, Lock
45	1402-104	1		Fitting
46	1402-211	1		Plug, Oil Level (inc. one No. 29)
47	1402-056	1		Seal
48	1402-713	2	S	Seal
49	0402-333	1	/P	Plug, Fill (inc. 50)
50	0423-154	1		O-Ring

 2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036) 40 of 87
FRONT SUSPENSION ASSEMBLY

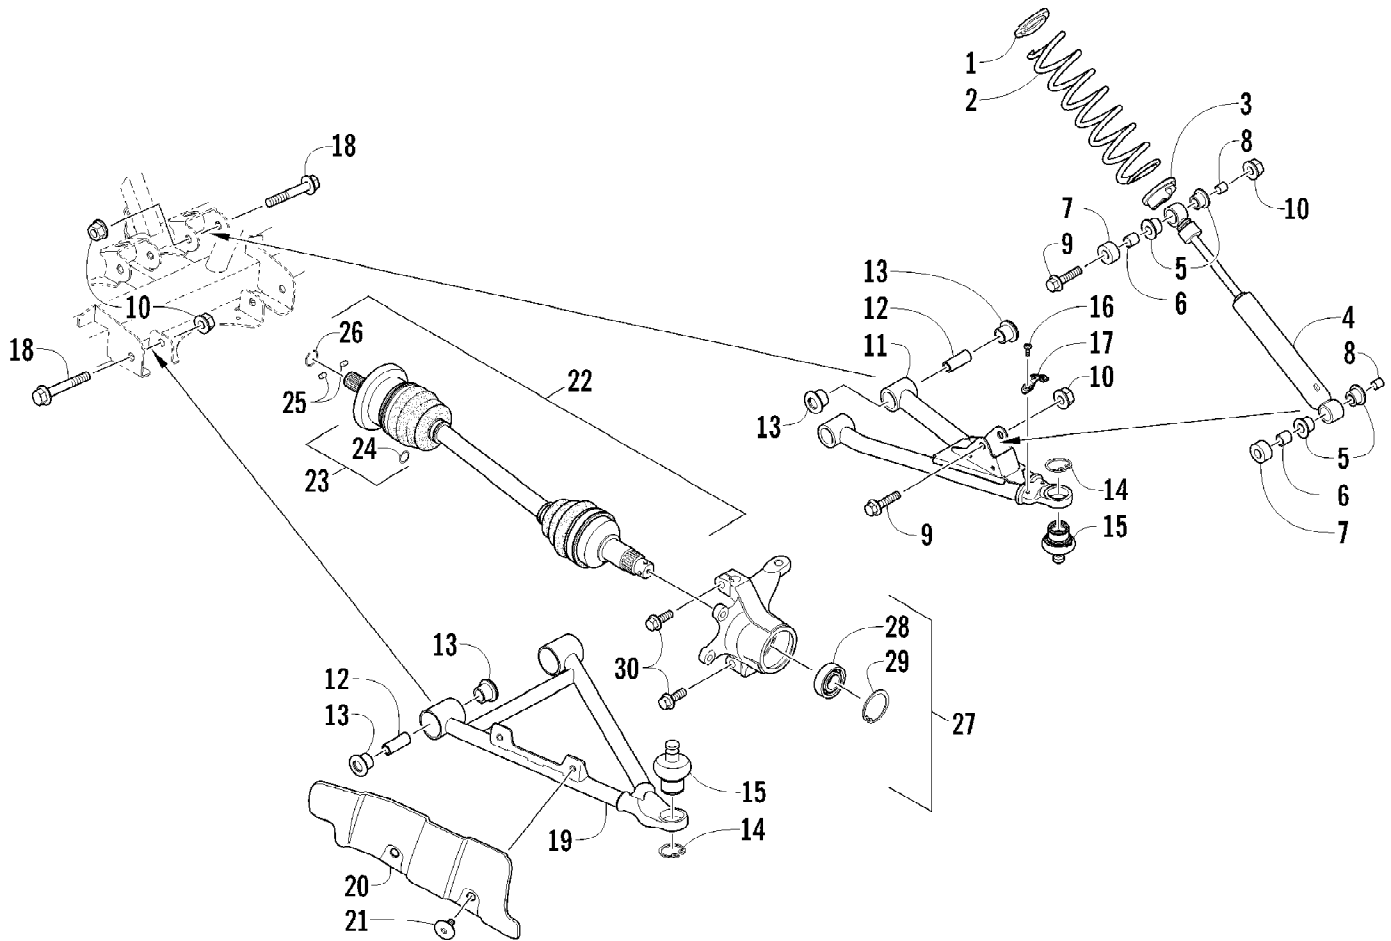

2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036) 41 of 87
 FRONT SUSPENSION ASSEMBLY


Ref #	Part Number	Qty	S/P/F	Description
1	1603-889	2	/P	Retainer, Spring
2	0503-402	2		Spring, Suspension
3	0403-102	2		Cam, Spring Adjuster
4	0403-147	2		Shock Absorber (inc. 5-6)
5	0603-955	8		Bushing
6	1603-209	4		Sleeve
7	1423-054	4		Spacer
8	0404-116	4		Sleeve
9	8409-055	4		Screw, Cap
10	8428-002	12		Nut, Lock
11	0503-432	1		A-Arm, Upper Right (inc. 12-15)
11	0503-433	1		A-Arm, Upper Left (inc. 12-15)
12	0403-214	8	/P	Axle
13	0403-208	16	/P	Bushing
14	0423-009	4	/P	Ring, Retaining
15	0405-115	4	/P	Ball Joint
16	0423-946	4		Screw, Self-Tapping
17	1502-594	2		Clamp, Routing
18	8409-075	8		Screw, Cap
19	0503-376	1	/P	A-Arm, Lower Right (inc. 12-15)
19	0503-377	1	/P	A-Arm, Lower Left (inc. 12-15)
20	1406-034	1		Guard, Boot - Right
20	1406-035	1		Guard, Boot - Left
21	0423-545	4	/P	Screw, Shoulder
22	1502-803	1	S	Axle, Drive - Right (inc. 23-26)
22	1502-802	1	S/P	Axle, Drive - Locking - Left (inc. 23-26)
23	1436-419	2		Repair Kit, Boot (inc. 24)
24	1441-988	2		Clip, Retaining
25	1402-885	4		Pin, Detent
26	1402-889	2		Clip, Retaining
27	0505-580	1	/P	Knuckle - Assembly - Right (inc. 28-29)
27	0505-581	1	/P	Knuckle - Assembly - Left (inc. 28-29)
28	1402-809	2	/P	Bearing
29	0423-423	2		Ring, Retaining
30	8409-030	4		Screw, Cap

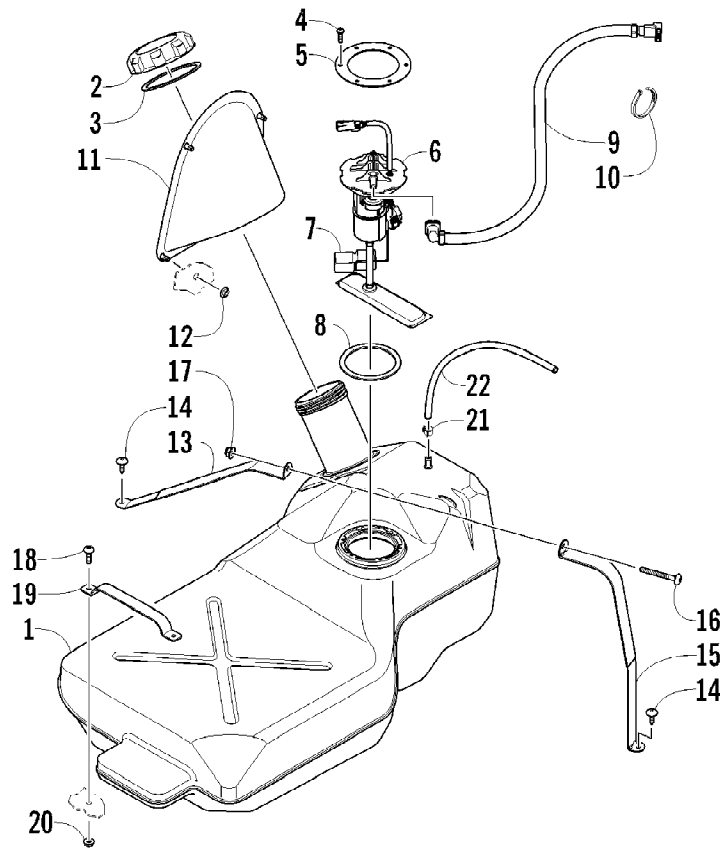 

2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036)
 GAS TANK ASSEMBLY Page 43 of 87

Ref #	Part Number	Qty	S/P/F	Description
1	0570-309	1		Tank, Gas - Assembly (inc. 2-5)
2	0470-541	1	/P	Cap, Gas Tank (inc. 3)
3	1670-228	1		Gasket, Gas Tank Cap
4	0423-898	6		Screw, Self-Tapping
5	2670-042	1		Plate, Retaining
6	0570-281	1	S	Pump, Fuel - Assembly (inc. 7-8)
7	2670-235	1		Float
8	0470-838	1		Seal
9	0470-745	1		Hose, Gasline
10	0123-788	AR	/P	Tie, Cable - 8 in.
11	1406-886	1		Insert, Gas Tank Cap
12	0423-357	4		Nut, Stamped
13	0470-829	1		Bracket, Hold-Down - Right
14	0623-784	2		Screw, Self-Tapping
15	0470-830	1		Bracket, Hold-Down - Left
16	8476-650	1		Screw, Machine
17	8427-602	1		Nut, Lock
18	8476-620	2		Screw, Machine
19	0470-544	1		Bracket, Hold-Down - Front
20	0623-038	2		Nut w/Washer
21	0423-688	1		Clamp, Hose
22	0410-070	AR	/P	Hose, Gasline - 25 ft

 2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036) 44 of 87
GEAR SHIFTING ASSEMBLY

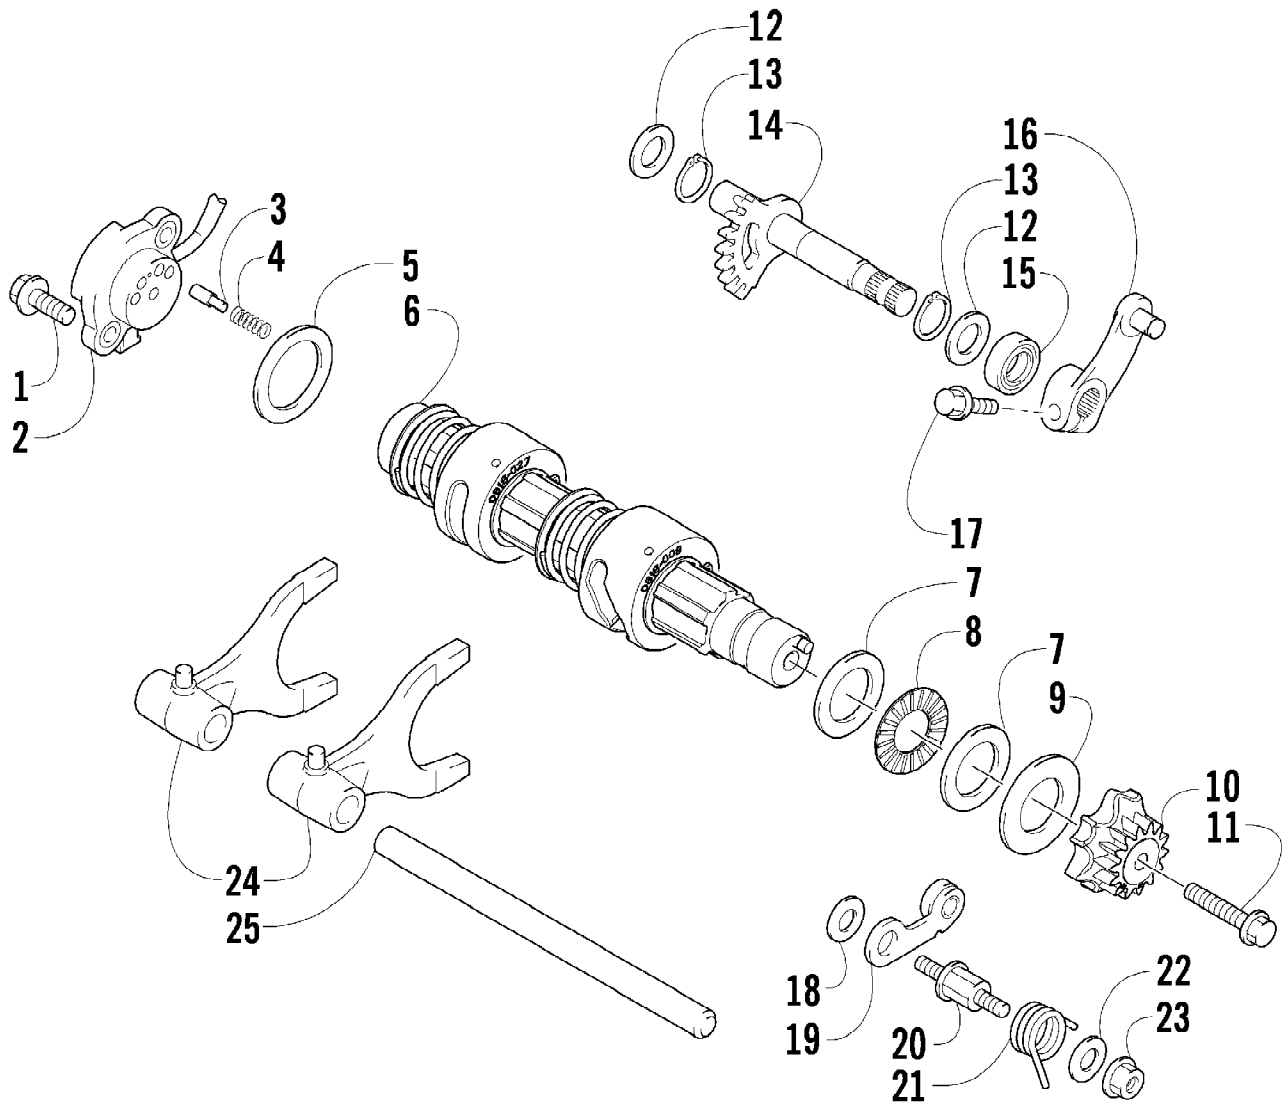


2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036)
 GEAR SHIFTING ASSEMBLY

Page 45 of 87

Ref #	Part Number	Qty	S/P/F	Description
1	8470-520	2		Screw, Machine
2	0409-090	1	/P	Switch, Gear Position
3	0818-013	2		Contact
4	0818-017	2		Spring
5	0828-040	1		Washer
6	0818-093	1		Shaft, Gear Shift - Assembly
7	0828-095	2		Washer
8	0832-052	1	/P	Bearing, Thrust
9	0828-037	1		Washer
10	0818-124	1		Plate, Gear Shift Cam
11	0826-006	1		Screw, Cap
12	0828-036	2		Washer
13	0831-010	2		Ring, Retaining
14	0818-007	1	/P	Shaft, Sub-Gear Shift
15	0830-044	1		Seal, Sub-Gear Shift Shaft
16	0818-014	1		Arm, Select
17	8468-620	1	/P	Screw, Machine
18	0828-038	1		Washer
19	0818-002	1		Stopper, Cam
20	0818-004	1		Support, Cam Stopper
21	0818-090	1		Spring
22	0828-035	1		Washer
23	8424-602	1	/P	Nut
24	0818-072	2	/P	Fork, Shift
25	0818-006	1		Shaft, Shift Fork

 2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036) 46 of 87
HOOD AND HEADLIGHT ASSEMBLY

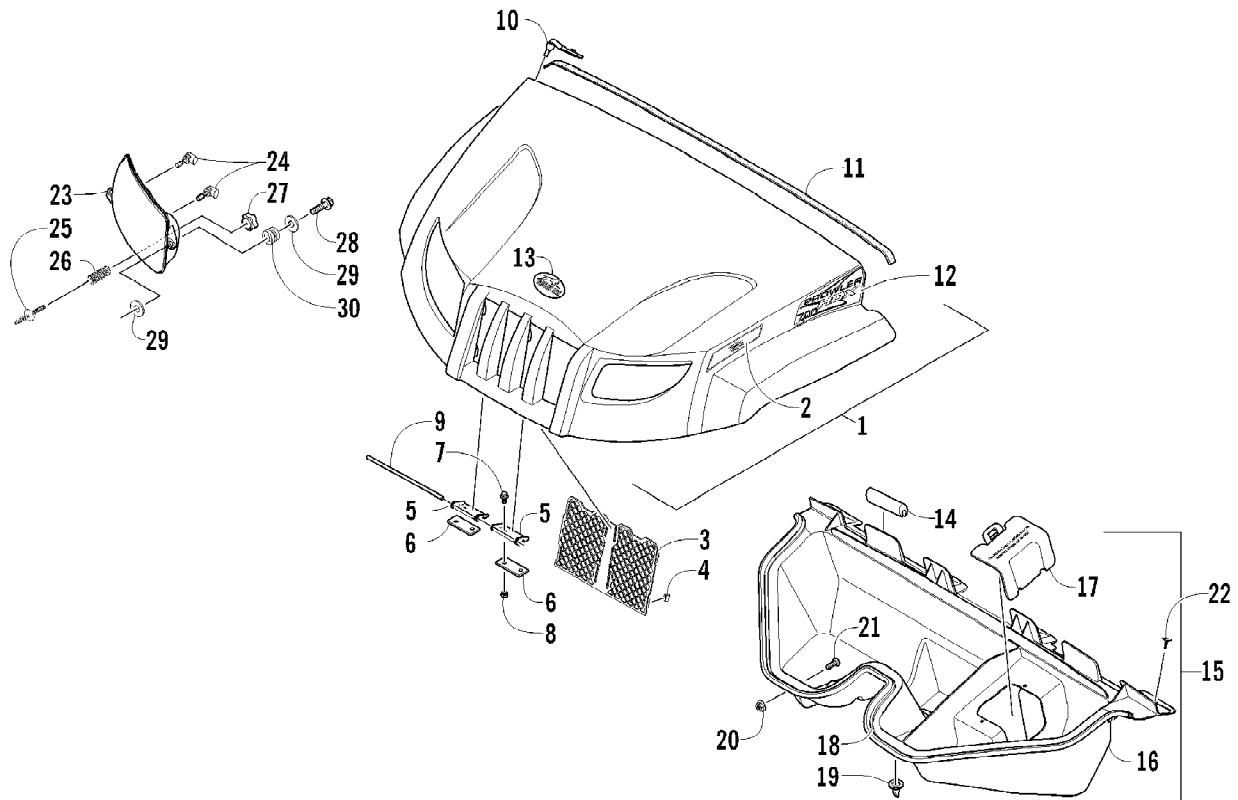

2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036)
 HOOD AND HEADLIGHT ASSEMBLY

Page 47 of 87


Ref #	Part Number	Qty	S/P/F	Description
1	4506-074	1		Hood - Assembly (inc. 2)
2	0411-818	1		Decal, Reflector - Right
2	0411-819	1		Decal, Reflector - Left
3	1406-733	1	/P	Screen, Grille
4	0123-987	8		Clip, U
5	2516-606	2		Bracket, Hood
6	2506-868	AR		Shim, Hood
7	8408-820	4	/P	Screw, Cap
8	8427-802	4		Nut, Lock
9	1406-915	1		Pin, Hood
10	2606-624	2		Strap, Hold-Down
11	0417-013	1		Trim, Hood/Dash
12	2411-238	1		Decal, Hood - "Prowler HDX" - Right
12	2411-239	1		Decal, Hood - "Prowler HDX" - Left
13	2411-416	1		Decal, Hood
14	0417-014	AR		Trim, Dash Support
15	4506-037	1	/P	Storage, Under-Hood - Assembly (inc. 16-19)
16	2416-520	1		Box, Storage
17	1406-944	1		Cover, Access - Master Cylinder
18	1406-946	1		Seal, Storage Box
19	0470-442	1	/P	Valve, Drain
20	8424-602	2	/P	Nut
21	8476-616	2		Screw, Machine
22	0423-545	4	/P	Screw, Shoulder
23	0509-044	1	/P	Headlight Assembly - Right (inc. 24)
23	0509-035	1		Headlight Assembly - Left (inc. 24)
24	0409-055	4		Bulb, Headlight
25	0423-514	2		Stud, Adjuster
26	0423-522	2		Spring, Adjuster
27	0423-513	2		Knob, Adjuster
28	0623-785	4		Screw, Self-Tapping
29	8050-217	8	/P	Washer
30	0423-447	4		Grommet

2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036)
 HYDRAULIC BRAKE ASSEMBLY

Page 49 of 87

Ref #	Part Number	Qty	S/P/F	Description
1	1402-893	1		Hose, Rear Brake
2	0623-038	1		Nut w/Washer
3	8476-620	1		Screw, Machine
4	1502-692	1		Lever, Brake
5	8408-822	1		Screw, Cap
6	0623-044	1		Washer
7	1602-213	2	/P	O-Ring
8	0502-786	1		Cylinder, Master Brake - Assembly (inc. 9-11)
9	0402-592	2		Nut
10	1402-520	1		Clevis
11	0405-225	1		Cap, Reservoir
12	1402-377	1		Pin, Clevis
13	0117-868	1		Pin, Cotter
14	8050-217	1	/P	Washer
15	0502-785	1		Spring, Brake Switch
16	8424-802	2		Nut, Lock
17	8408-860	2		Screw, Cap
18	0423-178	13		Washer, Crush
19	0423-413	5		Bolt, Banjo-Fitting
20	0423-610	1		Bolt, Double Banjo-Fitting
21	1402-290	1		Hose, Brake - Front Right
22	1402-389	1		Hose, Brake - Front Left
23	8408-826	4		Screw, Cap
24	1502-730	1	/P	Caliper, Brake - Front Right (inc. 25-31)
24	1502-731	1	/P	Caliper, Brake - Front Left (inc. 25-31)
24	1502-726	1	S	Caliper, Brake - Rear Right (inc. 25-31)
24	1502-727	1	S	Caliper, Brake - Rear Left (inc. 25-31)
25	1436-160	1	/P	Housing, Caliper - Assembly - Front Right
25	1436-161	1	/P	Housing, Caliper - Assembly - Front Left
25	1436-160	1	/P	Housing, Caliper - Assembly - Rear Right
25	1436-161	1	/P	Housing, Caliper - Assembly - Rear Left
26	0502-606	4		Piston/Seal Set (inc. 27)
27	0502-607	4		Seal Set
28	0502-609	4	/P	Valve, Bleed
29	0502-608	4		O-Ring, Guide - Set
30	0502-960	2		Bracket Assembly - Front
30	0502-605	2		Bracket Assembly - Rear
31	1502-694	4	S	Pad, Brake - Set
32	8408-821	4	/P	Screw, Cap
33	0436-902	AR	/P	Fluid, Brake - 12 oz

 
2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036) 50 of 87
MAGNETO ASSEMBLY

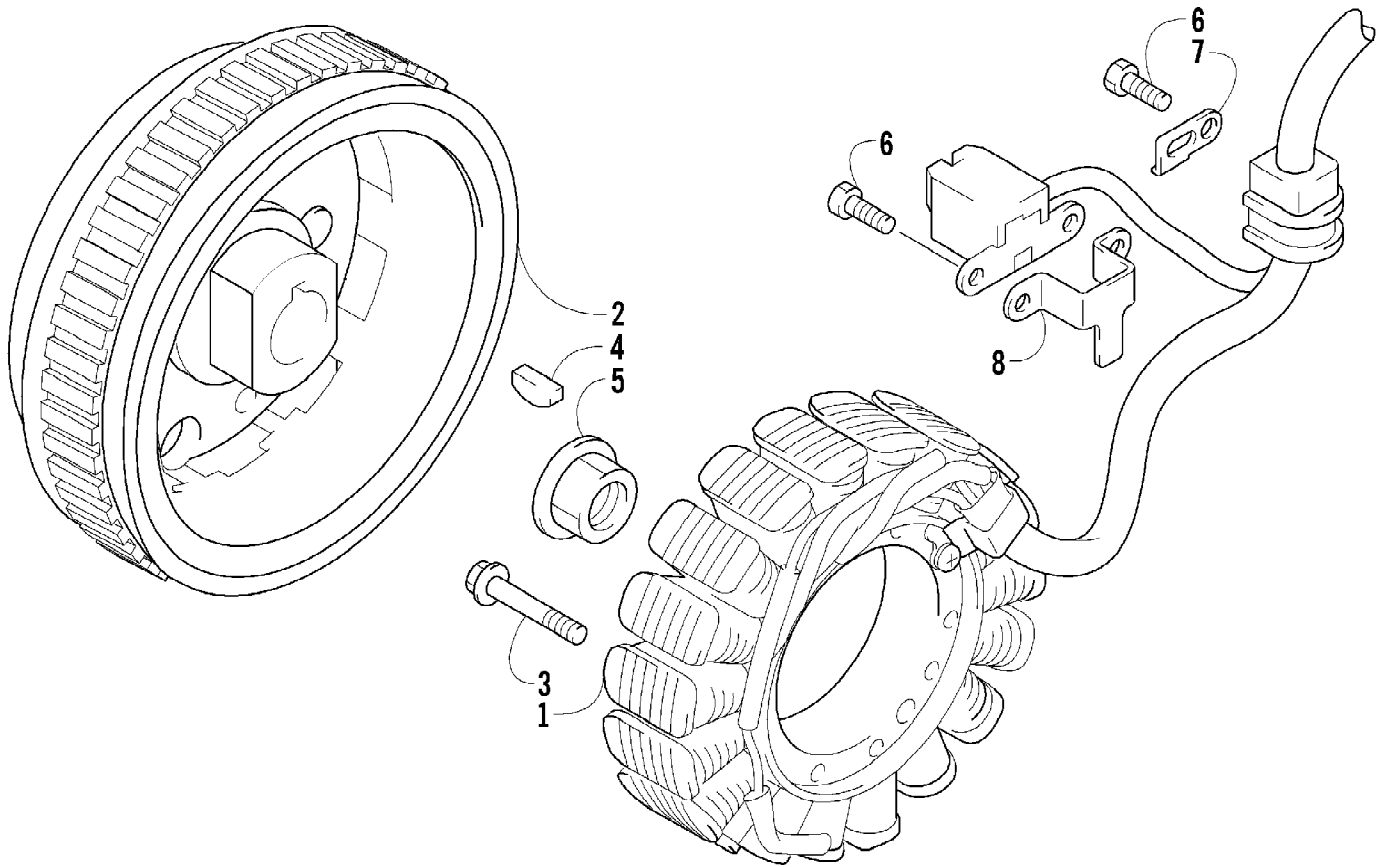

2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036) 51 of 87
MAGNETO ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0802-041	1		Stator - Assembly
2	0802-048	1		Rotor/Flywheel
3	0826-102	3		Screw, Machine
4	0829-012	1		Key
5	0827-014	1		Nut
6	8470-510	3		Screw, Machine
7	0802-015	1		Clamp - No. 1
8	0802-016	1		Clamp - No. 2

 
2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P000) 52 of 87
OIL FILTER/PUMP ASSEMBLY

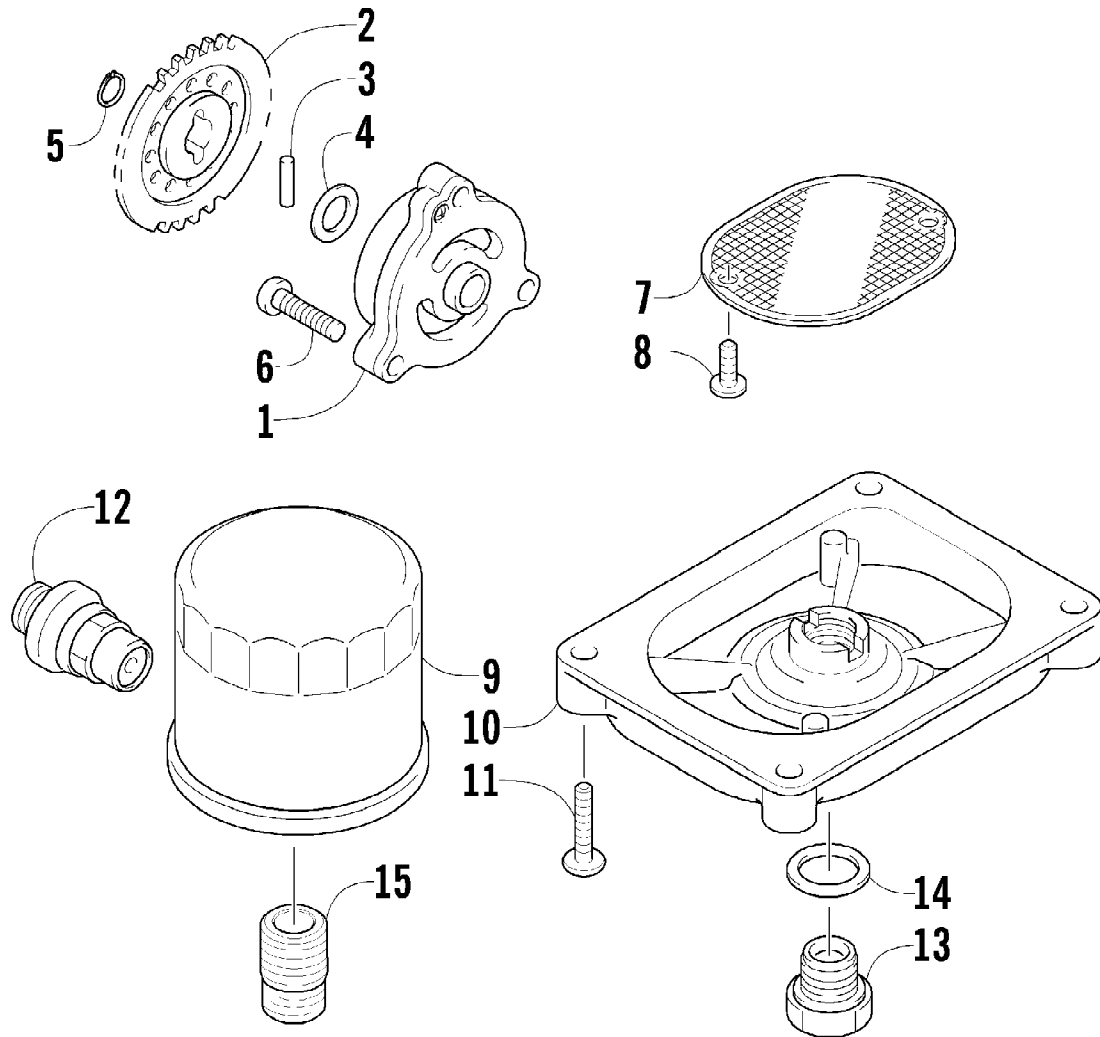

2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P000) 53 of 87
 OIL FILTER/PUMP ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0812-023	1		Pump, Oil
2	0812-083	1	/P	Gear, Driven
3	0829-009	1		Pin
4	0828-007	1	/P	Washer
5	0831-002	1		Ring, Retaining
6	0826-039	3		Screw, Machine
7	0812-057	1	/P	Strainer, Oil
8	0826-040	2		Screw, Machine
9	0812-029	1	S	Filter, Oil
10	0812-053	1		Cap, Oil Strainer
11	8468-625	4		Screw, Machine
12	0812-007	1		Valve, Oil-Relief - Assembly
13	0812-006	1		Plug, Drain
14	0830-017	1		Gasket, Drain Plug
15	0812-008	1		Union, Oil Filter

 
2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036)
REAR DRIVE GEARCASE ASSEMBLY

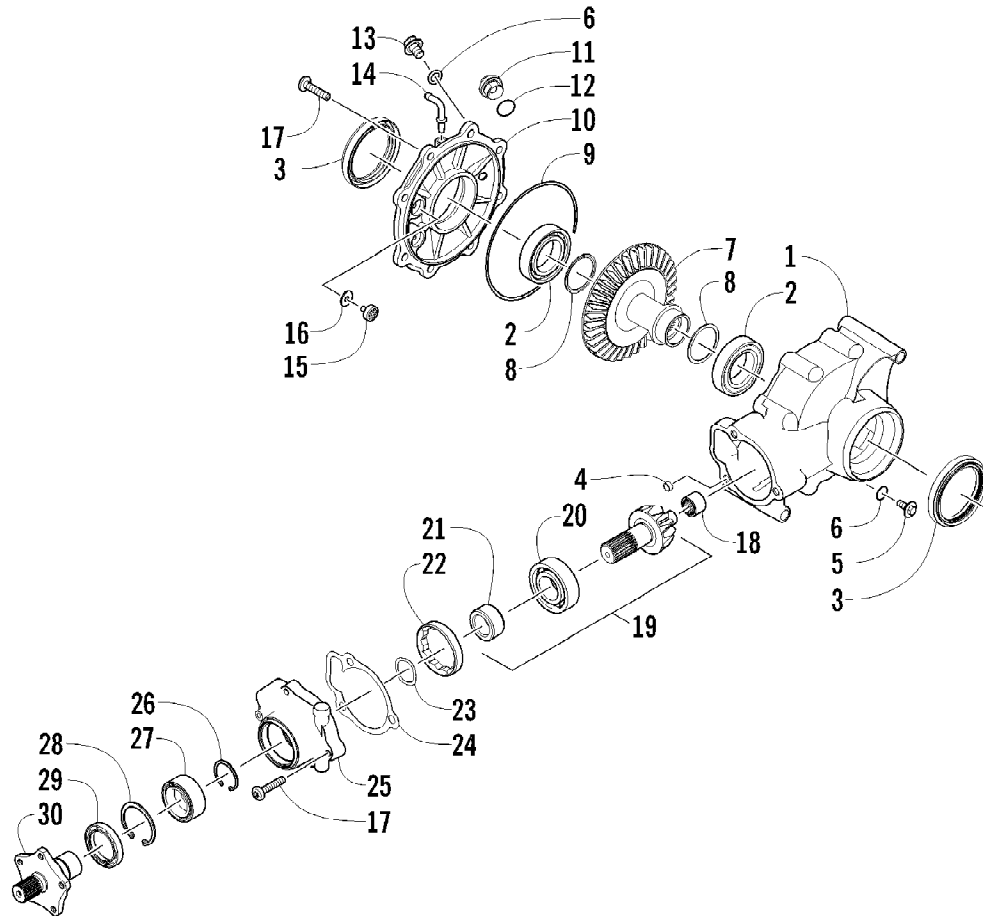

2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036) 55 of 87
 REAR DRIVE GEARCASE ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
	1502-771	1		Complete Rear Drive Gearcase Assembly
1	1502-317	1		Housing, Gearcase
2	0402-393	2		Bearing
3	1402-713	2	S	Seal
4	0402-411	1		Pin, Dowel
5	1402-210	1	/P	Plug, Fill (inc. one No. 6)
6	0423-153	2		O-Ring
7	1402-032	1		Gear, Ring - 36T
8	0402-405	AR		Shim, 41 x 49 x 1.3 mm
8	0402-406	AR		Shim, 41 x 49 x 1.4 mm
8	0402-407	AR		Shim, 41 x 49 x 1.5 mm
8	0402-408	AR		Shim, 41 x 49 x 1.6 mm
8	0402-409	AR		Shim, 41 x 49 x 1.7 mm
9	0423-149	1		O-Ring
10	1502-082	1		Cover, Gearcase
11	0402-333	1	/P	Plug, Magnetic (inc. 12)
12	0423-154	1		O-Ring
13	1402-211	1		Plug, Oil Level (inc. one No. 6)
14	1402-102	1		Fitting
15	0402-326	1		Button, Thrust
16	0402-429	AR		Shim, 6.3 x 18 x 1.3 mm
16	0402-430	AR		Shim, 6.3 x 18 x 1.4 mm
16	0402-431	AR		Shim, 6.3 x 18 x 1.5 mm
16	0402-432	AR		Shim, 6.3 x 18 x 1.6 mm
16	0402-433	AR		Shim, 6.3 x 18 x 1.7 mm
17	0423-118	11		Screw, Self-Tapping
18	0402-328	1		Bearing
19	0502-783	1		Gear, Pinion - Assembly - 10T (inc. 20-21)
20	0402-327	1		Bearing
21	0402-336	1		Collar, Retaining
22	0402-331	1		Collar, Lock
23	0402-982	1		Washer, Wave
24	0402-947	1		Gasket, Flange
25	0502-746	1		Housing, Pinion
26	0423-546	1		Ring, Retaining
27	0402-324	1		Bearing
28	0402-347	1		Ring, Retaining
29	1402-314	1		Seal
30	1502-748	1		Shaft, Input

 2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P0000) 56 of 87
REAR SUSPENSION ASSEMBLY

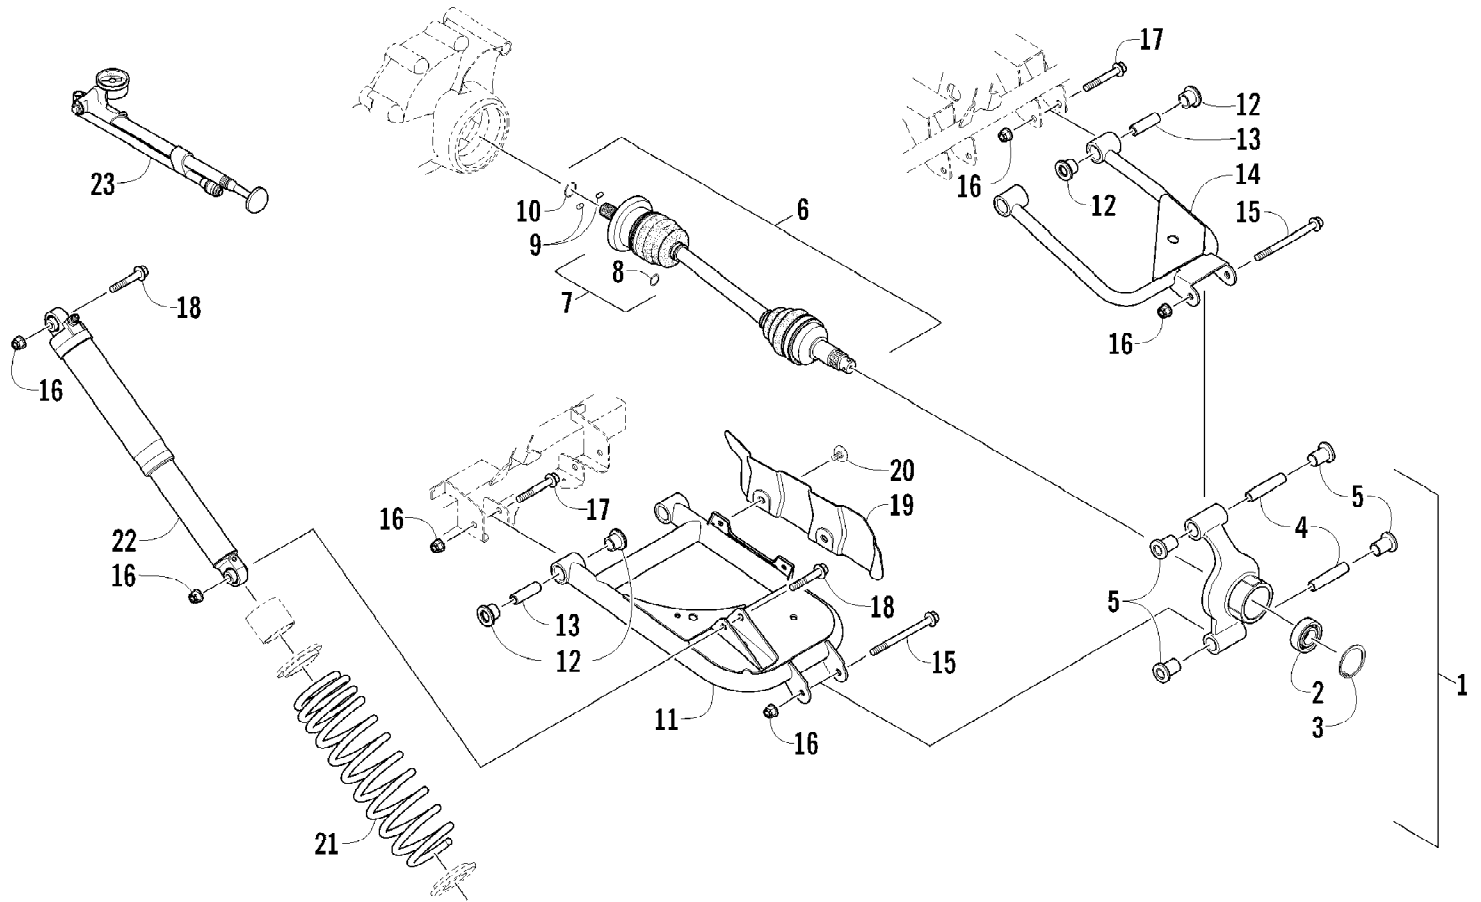


2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036)
 REAR SUSPENSION ASSEMBLY

Page 57 of 87

Ref #	Part Number	Qty	S/P/F	Description
1	0504-613	2		Knuckle, Rear - Assembly (inc. 2-5)
2	1402-809	2	/P	Bearing
3	0423-423	2		Ring, Retaining
4	0403-213	4	/P	Axle
5	0403-206	8	/P	Bushing
6	1502-801	2	S	Axle, Drive (inc. 7-10)
7	1436-419	2		Repair Kit, Boot (inc. 8)
8	1441-988	2		Clip, Retaining
9	1402-884	4		Pin, Detent
10	1402-890	2		Clip, Retaining
11	0504-592	1		A-Arm, Rear - Lower Right (inc. 12-13)
11	0504-593	1		A-Arm, Rear - Lower Left (inc. 12-13)
12	0403-208	16	/P	Bushing
13	0403-214	8	/P	Axle
14	0504-598	1		A-Arm, Rear - Upper Right (inc. 12-13)
14	0504-599	1		A-Arm, Rear - Upper Left (inc. 12-13)
15	8409-000	4		Screw, Cap
16	8428-002	16		Nut, Lock
17	8409-075	8		Screw, Cap
18	8409-060	4		Screw, Cap
19	1406-068	1		Guard, Boot - Right
19	1406-069	1		Guard, Boot - Left
20	0423-545	4	/P	Screw, Shoulder
21	0504-669	2		Spring, Suspension
22	0404-195	2		Shock Absorber
23	2603-614	1	/P	Pump, Air - Shock

 
2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P000) 58 of 87
REAR SUSPENSION SHOCK ABSORBER

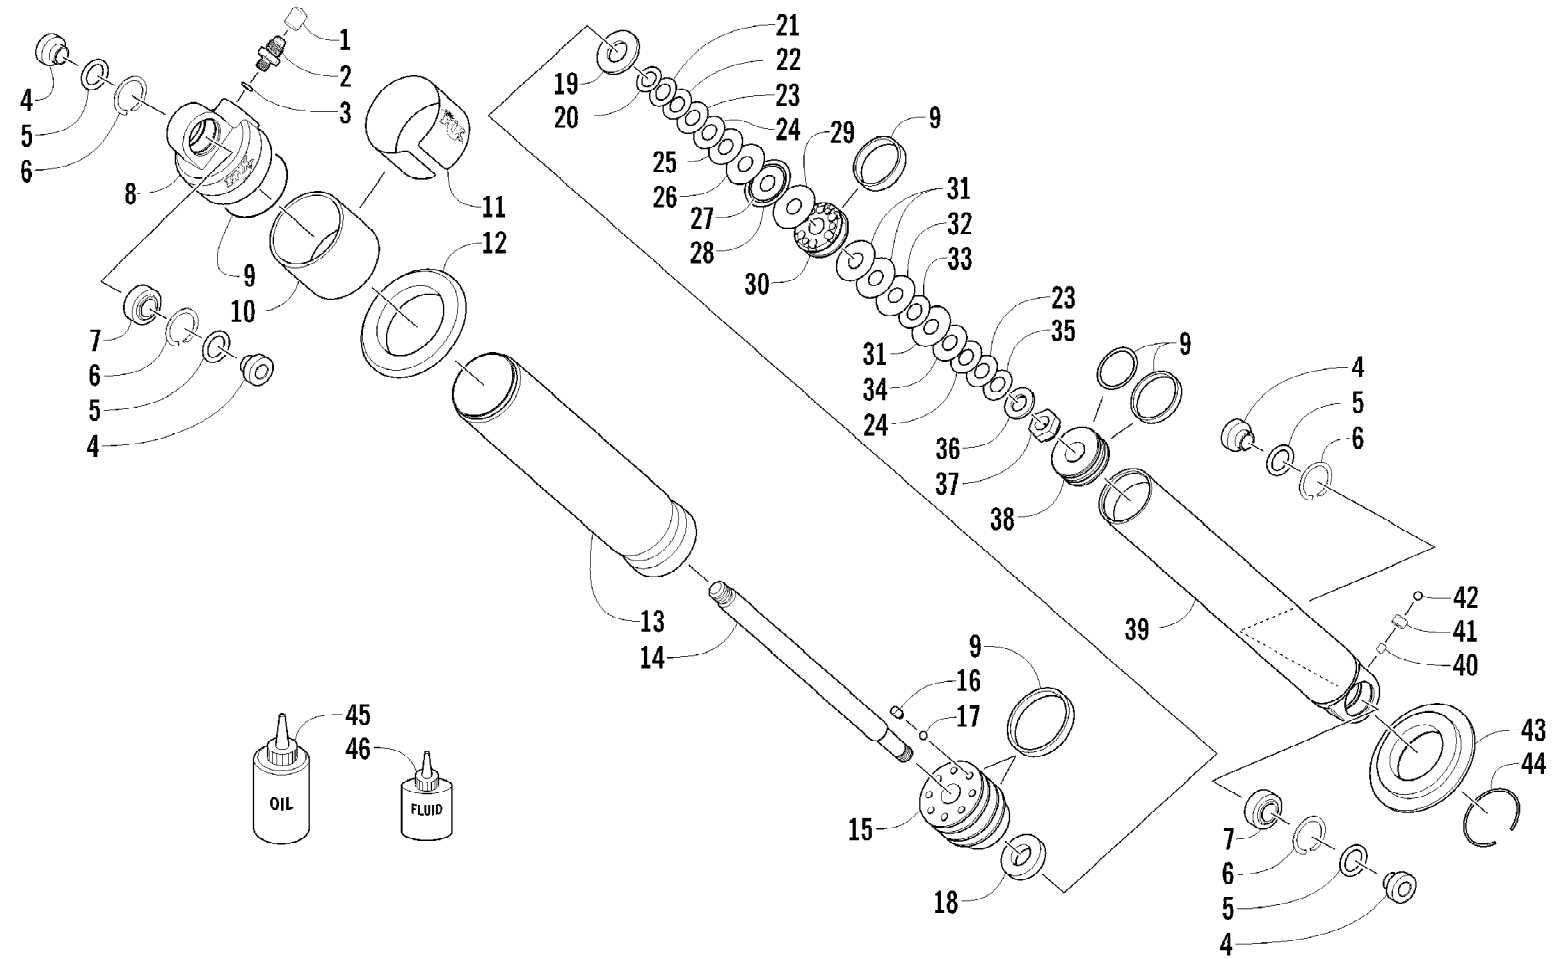

2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036) 59 of 87
 REAR SUSPENSION SHOCK ABSORBER

Ref #	Part Number	Qty	S/P/F	Description
	0404-195	1		Complete Shock Absorber
1	2603-327	1		Cap, Air Valve
2	2603-651	1		Valve, Air (inc. 3)
3	1604-318	1		O-Ring
4	0404-236	4		Bushing
5	0404-235	4		O-Ring
6	3604-147	4		Ring, Retaining
7	1604-664	2		Bearing
8	0404-225	1		End Cap, Shock
9	2604-796	1		Kit, Seal/Cap Rebuild
10	0404-198	1		Sleeve, Wear
11	2411-567	1		Decal, Shock
12	0404-196	1		Spring Retainer, Upper
13	0404-234	1		Body, Shock - Upper
14	3604-481	1		Rod, Shock
15	2603-333	1		Bearing - Assembly
16	1603-940	1		Screw, Set
17	1604-315	1		Ball, Bleed
18	0603-386	1	/P	Bumper, Internal - Top Out
19	0603-540	1	/P	Washer, Top Out
20	2603-224	1		Valve, 0.620 x 0.015 in.
21	0603-878	1	/P	Valve, 0.700 x 0.012 in.
22	0603-879	1	/P	Valve, 0.800 x 0.012 in.
23	0603-338	2	/P	Valve, 0.900 x 0.010 in.
24	0603-341	2	/P	Valve, 1.000 x 0.010 in.
25	0603-344	1	/P	Valve, 1.100 x 0.010 in.
26	0603-347	1		Valve, 1.250 x 0.010 in.
27	0603-342	1	/P	Valve, 1.100 x 0.006 in.
28	2603-936	1		Valve Ring, 1.250 x 0.008 in.
29	0603-349	1	/P	Valve, 1.300 x 0.008 in.
30	0603-208	1		Piston, 0.078 in. - Orifice
31	0603-346	3	/P	Valve, 1.250 x 0.008 in.
32	0603-345	1		Valve, 1.250 x 0.006 in.
33	0603-336	1		Valve, 0.900 x 0.006 in.
34	0603-343	1		Valve, 1.100 x 0.008 in.
35	0603-335	1	/P	Valve, 0.800 x 0.010 in.
36	0603-389	1	/P	Washer, Backup
37	0603-301	1	/P	Nut
38	0404-230	1		Piston, Floating
39	0404-227	1		Body, Shock - Lower
40	1604-428	1		Plug, Rubber - Valve
41	2603-338	1		Screw, Set
42	2603-337	1		Ball, Air Valve
43	0404-197	1		Spring Retainer, Lower
44	2603-245	1		Retainer
45	5639-240	AR	S/P	Oil, Shock - 1 qt
46	4639-012	AR		Fluid, Float Shock - 8 oz

 
2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P000) 60 of 87
ROPS AND TAILLIGHT ASSEMBLY

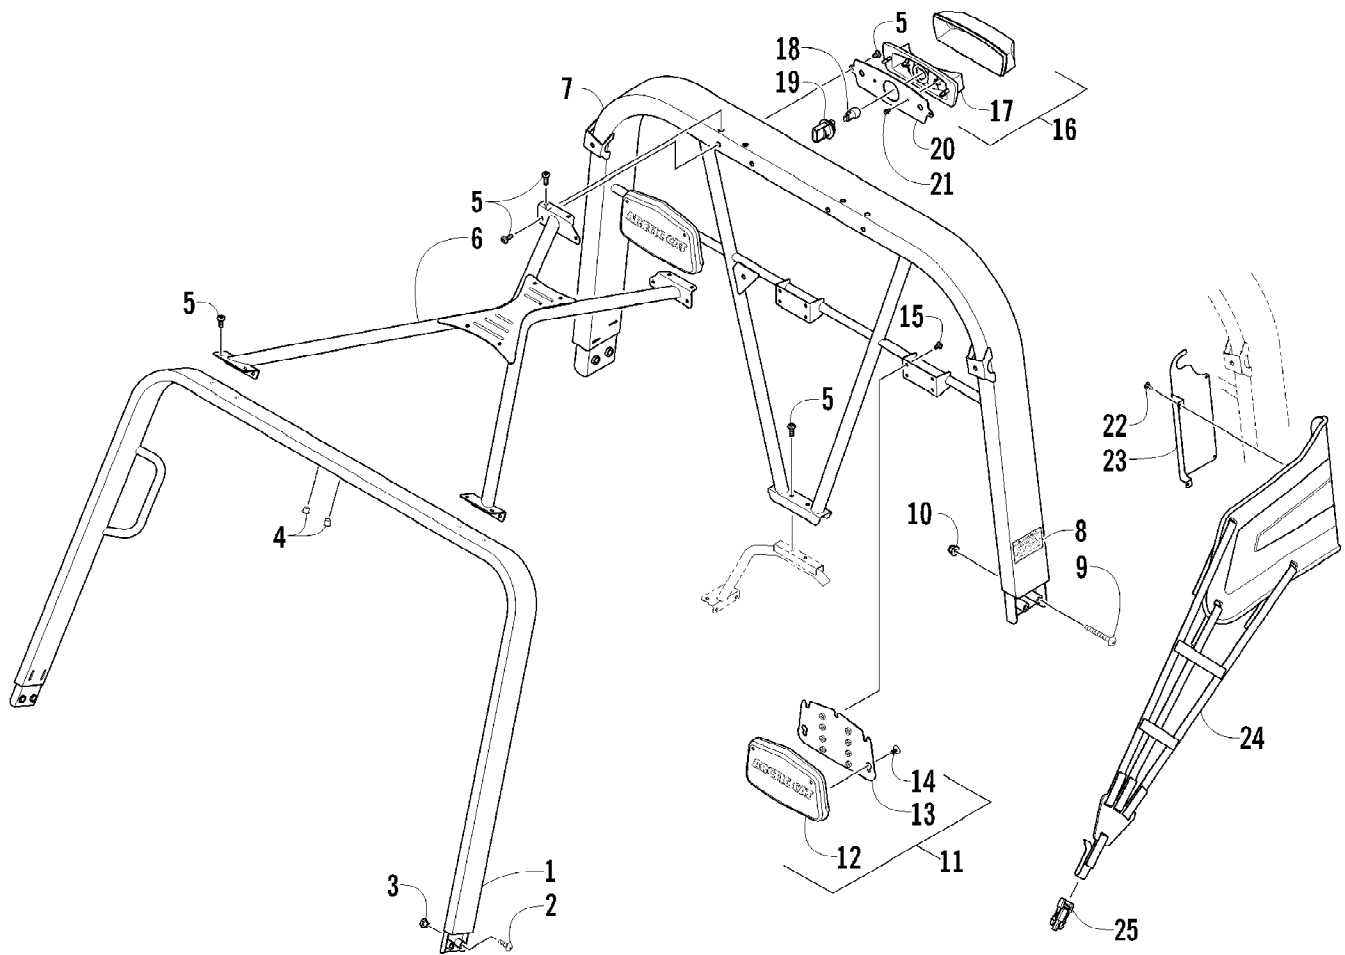

2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036) Page 61 of 87
 ROPS AND TAILLIGHT ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	2516-108	1		Tube, ROPS - Front
2	0423-886	4		Screw, Machine
3	0423-903	4		Nut, T
4	0423-905	2		Plug
5	0423-910	20		Screw, Machine
6	2516-304	1		Support, Canopy
7	2516-601	1		Tube, ROPS - Rear
8	2411-522	2		Decal, Warning - ROPS
9	0423-916	4		Screw, Machine
10	8427-805	4		Nut, Lock
11	1506-795	3		Pad, Headrest - Assembly (inc. 12-14)
12	1406-884	3		Pad, Headrest
13	1506-722	3		Mount, Headrest
14	0623-544	15		Clip, Retaining
15	0423-361	12		Screw, Machine
16	0509-022	1		Taillight Assembly (inc. 17-19)
17	0509-025	1		Housing, Taillight
18	0409-056	1		Bulb, Taillight
19	0409-057	1		Socket, Taillight
20	2406-069	1		Bracket, Taillight Mounting
21	0623-301	2	/P	Screw, Self-Tapping
22	0623-784	8		Screw, Self-Tapping
23	4506-150	1		Bracket, Mounting - Side Restraint - Right
23	4506-151	1		Bracket, Mounting - Side Restraint - Left
24	0517-138	1	/P	Restraint, Side - Right (inc. 25)
24	0517-139	1	/P	Restraint, Side - Left (inc. 25)
25	2416-793	2	/P	Buckle, Retaining

 
2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P0000) 62 of 87
SEAT ASSEMBLY

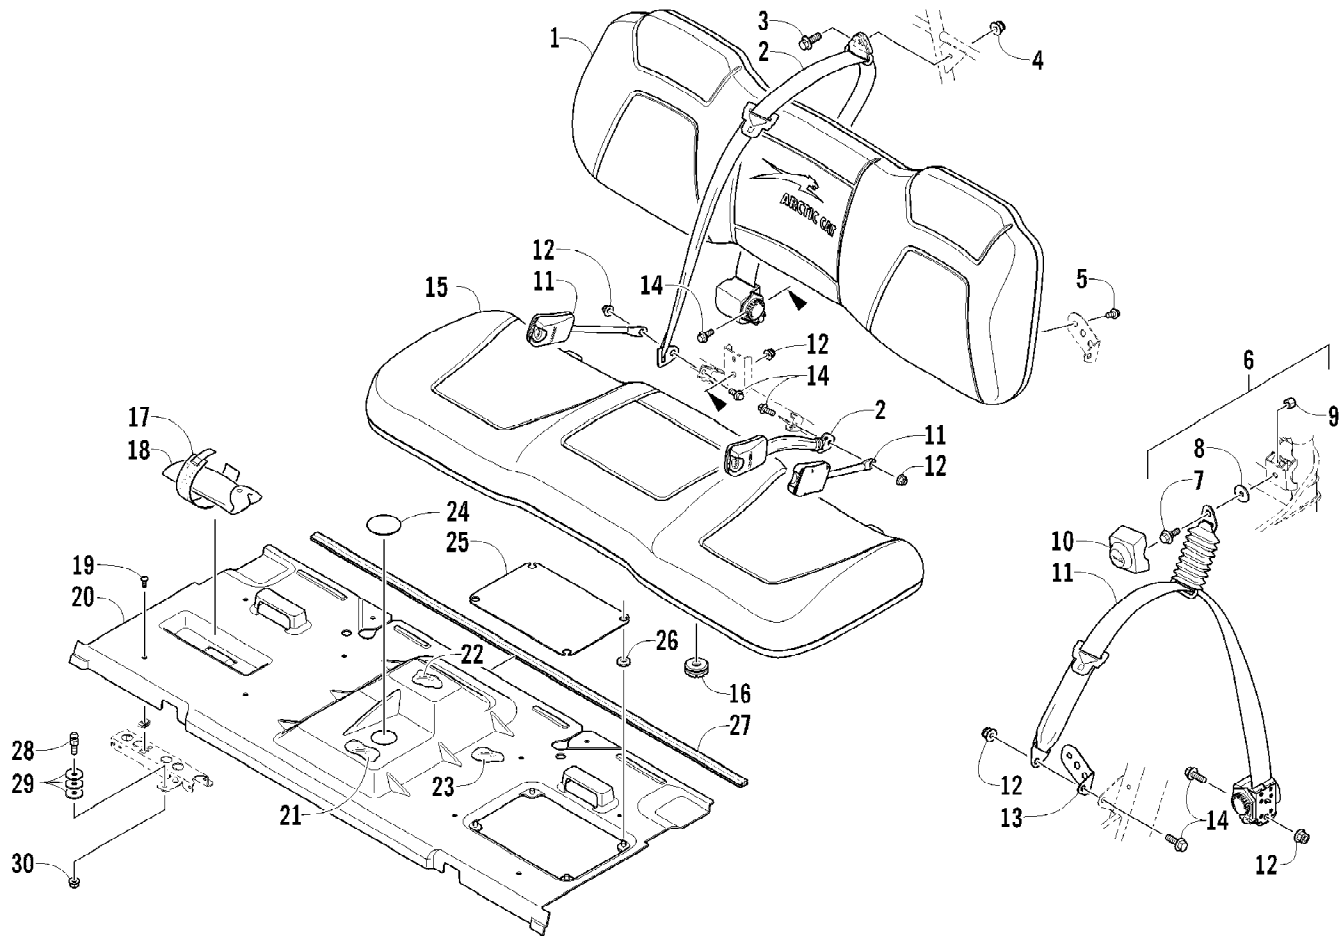

2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036)
 SEAT ASSEMBLY Page 63 of 87

Ref #	Part Number	Qty	S/P/F	Description
1	2516-897	1		Backrest Assembly
2	2516-887	1		Belt, Seat - 3 Point
3	8411-025	1		Screw, Cap
4	8427-005	1		Nut, Lock
5	8408-820	4	/P	Screw, Cap
6	0423-915	2		Shoulder Bolt Assembly (inc. 7-9)
7	0	2	F	Screw, Shoulder
8	0	2	F	Washer
9	0	2	F	Nut, Lock
10	2416-148	1		Cover, Seat Belt - Right
10	2416-149	1		Cover, Seat Belt - Left
11	2516-886	2		Belt, Seat
12	8427-002	7		Nut, Lock
13	2516-868	1		Bracket, Backrest Support - Right
13	2516-869	1		Bracket, Backrest Support - Left
14	8408-025	7		Screw, Cap
15	2516-898	1		Seat Assembly (inc. 16)
16	1423-066	2		Grommet
17	0707-582	1		Retainer, Toolkit
18	2516-863	1	/P	Kit, Tool
19	8477-620	10		Screw, Machine
20	2416-457	1		Base, Seat
21	0412-583	1		Foil, Protective
22	0412-584	1		Foil, Protective
23	0412-585	1		Foil, Protective
24	0623-600	1		Plug
25	2416-491	1		Cover, Access
26	1623-156	4		Grommet
27	2406-915	1		Seal, Cargo Box
28	0423-559	2		Stud, Latch - Seat
29	0423-073	6		Washer
30	8424-002	2		Nut

 2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036)
SECONDARY DRIVE ASSEMBLY

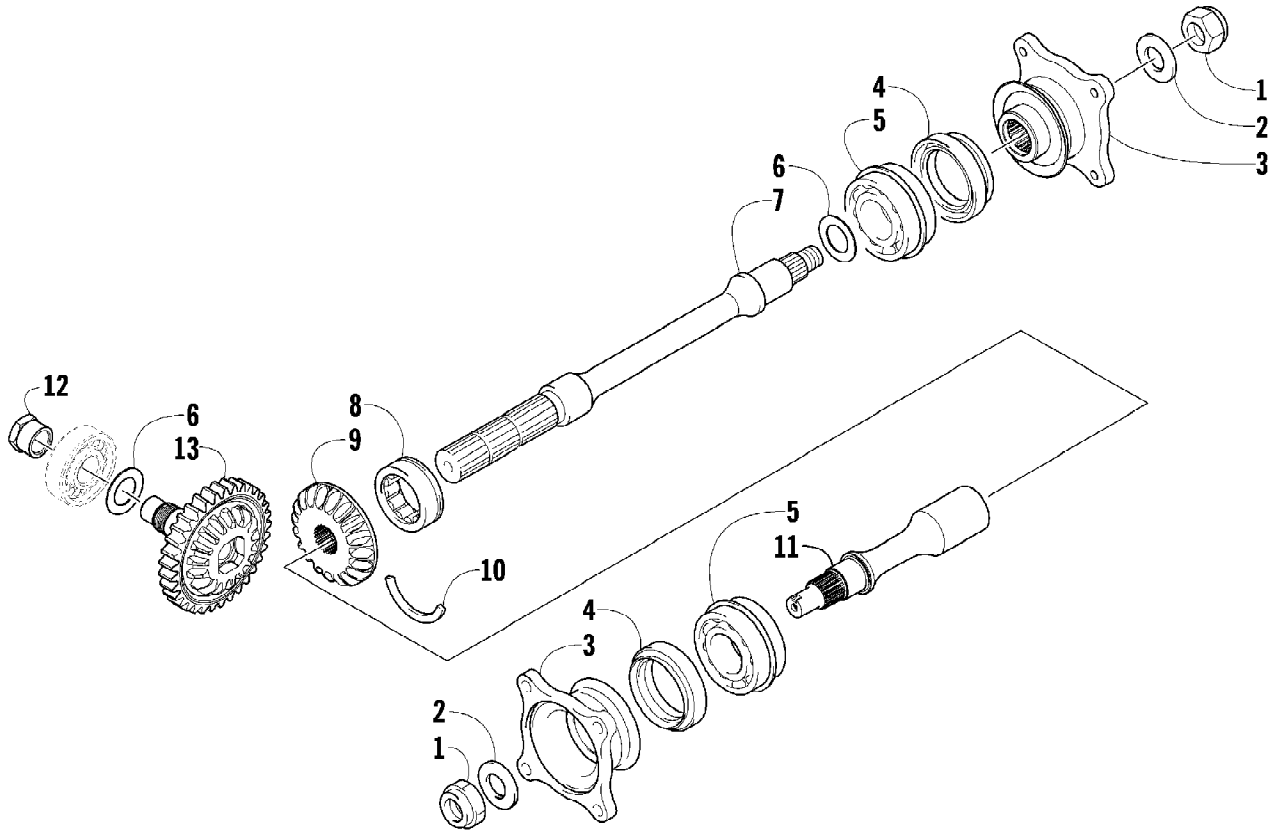


2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036)
 SECONDARY DRIVE ASSEMBLY

Page 65 of 87

Ref #	Part Number	Qty	S/P/F	Description
1	0827-013	2		Nut
2	0828-020	2		Washer
3	0819-005	2		Flange, Output Joint
4	0830-043	2		Seal, Oil
5	0832-017	2		Bearing
6	0828-021	AR		Shim, 25 x 34 x 0.25 mm
6	0828-022	AR		Shim, 25 x 34 x 0.30 mm
6	0828-023	AR		Shim, 25 x 34 x 0.70 mm
6	0828-024	AR		Shim, 25 x 34 x 0.90 mm
6	0828-025	AR		Shim, 25 x 34 x 0.95 mm
6	0828-026	AR		Shim, 25 x 34 x 1.00 mm
6	0828-027	AR		Shim, 25 x 34 x 1.05 mm
6	0828-028	AR		Shim, 25 x 34 x 1.10 mm
6	0828-029	AR		Shim, 25 x 34 x 1.15 mm
7	0819-089	1	/P	Shaft, Secondary Driven - Front
8	0832-016	1		Bearing
9	0822-106	1		Gear, Secondary Driven
10	0819-011	1		Ring, Driven Bearing
11	0819-053	1		Shaft, Secondary Driven - Rear
12	0827-052	1		Nut
13	0822-131	1		Gear, Secondary Driven

 2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P000) 66 of 87
SECONDARY TRANSMISSION ASSEMBLY

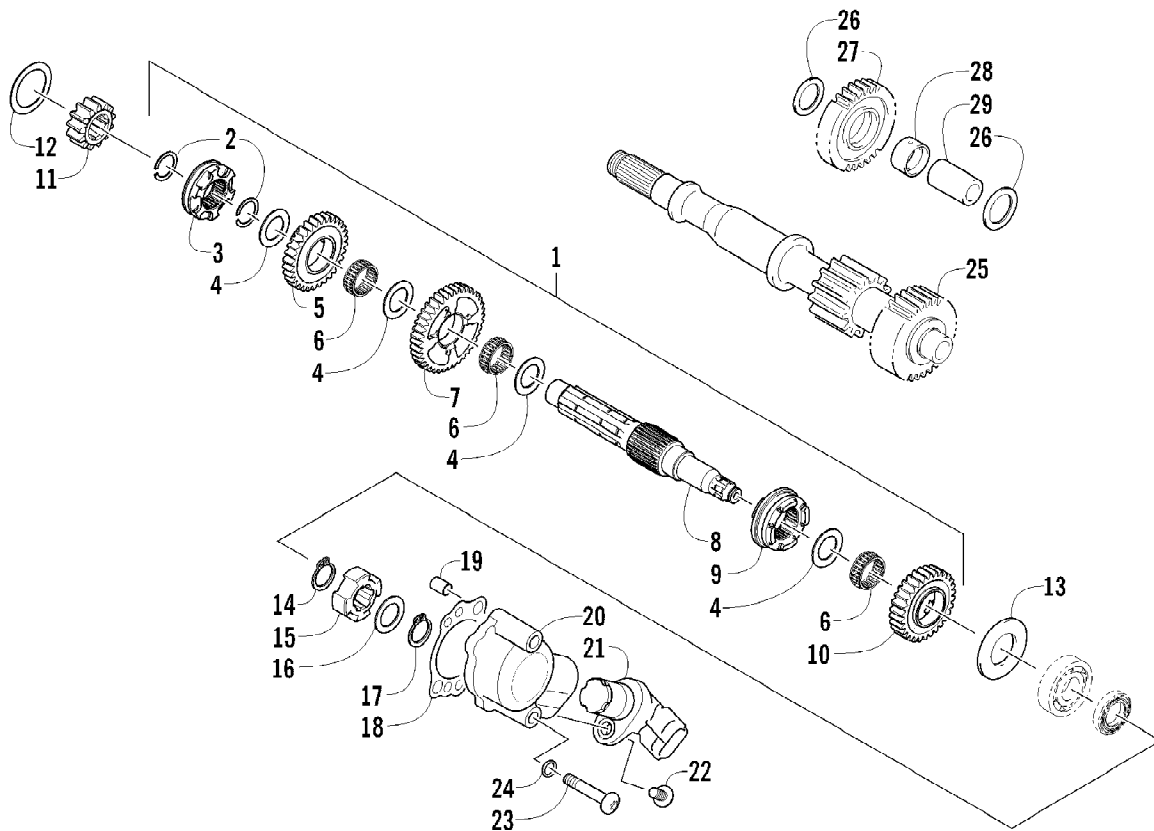


2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036)
 SECONDARY TRANSMISSION ASSEMBLY

Page 67 of 87

Ref #	Part Number	Qty	S/P/F	Description
1	0822-124	1		Countershaft Assembly (inc. 2-10)
2	0831-085	2		Ring, Retaining
3	0822-120	1		Gear Select, Reverse
4	0822-121	4		Shim
5	0822-119	1		Gear, Reverse Driven
6	0832-082	3		Bearing
7	0822-114	1		Gear, Driven - Low
8	0822-113	1		Countershaft
9	0822-116	1		Gear Select, Sliding
10	0822-115	1		Gear, Driven - High
11	0822-125	1		Gear, Drive
12	0828-019	1		Washer, Thrust
13	0828-011	1		Washer
14	0831-040	1		Ring, Retaining
15	0822-050	1		Trigger, Speedometer Sensor
16	0828-069	1		Washer, Thrust
17	0831-039	1		Ring, Retaining
18	0830-129	1		Gasket
19	0829-023	2		Pin, Dowel
20	0822-049	1		Housing, Speedometer Sensor
21	0824-042	1	/P	Sensor, Speedometer
22	8468-620	1	/P	Screw, Machine
23	8468-645	2		Screw, Machine
24	0830-107	2		Gasket
25	0822-001	1		Driveshaft
26	0828-016	2		Washer, Thrust
27	0822-011	1		Gear, Reverse Idle
28	0822-012	1		Bushing
29	0822-015	1		Shaft, Reverse Idle

 
2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036) 68 of 87
SHIFTER ASSEMBLY

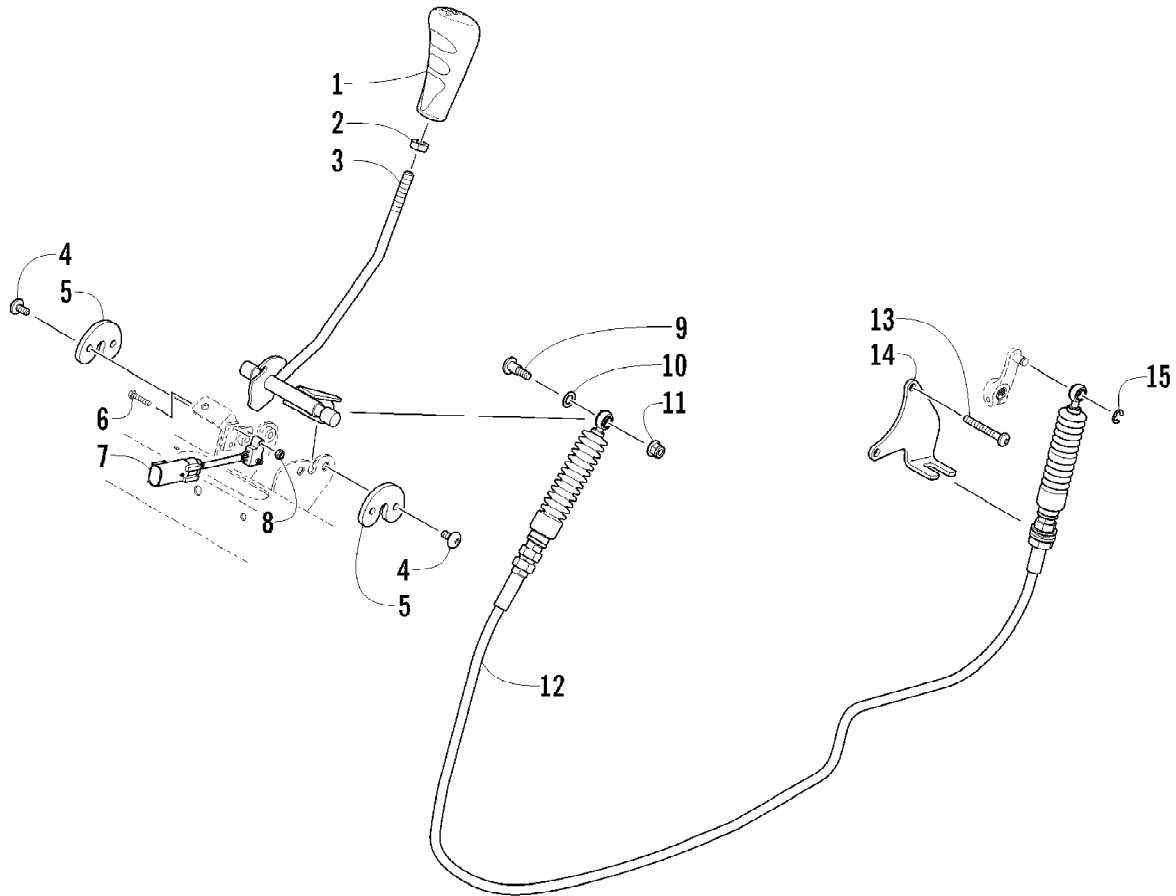

2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036)
 SHIFTER ASSEMBLY Page 69 of 87

Ref #	Part Number	Qty	S/P/F	Description
1	1402-908	1		Knob, Shift
2	0423-885	1		Nut
3	1502-745	1	S	Lever, Shift
4	0826-029	4		Screw, Machine
5	1402-275	2		Retainer, Shift Linkage
6	1423-056	1		Screw, Machine
7	0409-131	1		Switch, Limit-Park Brake
8	1441-328	1		Nut, Lock
9	0423-356	1		Screw, Shoulder
10	0623-094	1		Washer
11	8427-602	1		Nut, Lock
12	0487-078	1		Cable, Shift
13	8468-645	2		Screw, Machine
14	2406-894	1	/P	Bracket, Shift Cable
15	0124-057	1	/P	E-Ring

 2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036) 70 of 87
STARTER CLUTCH ASSEMBLY

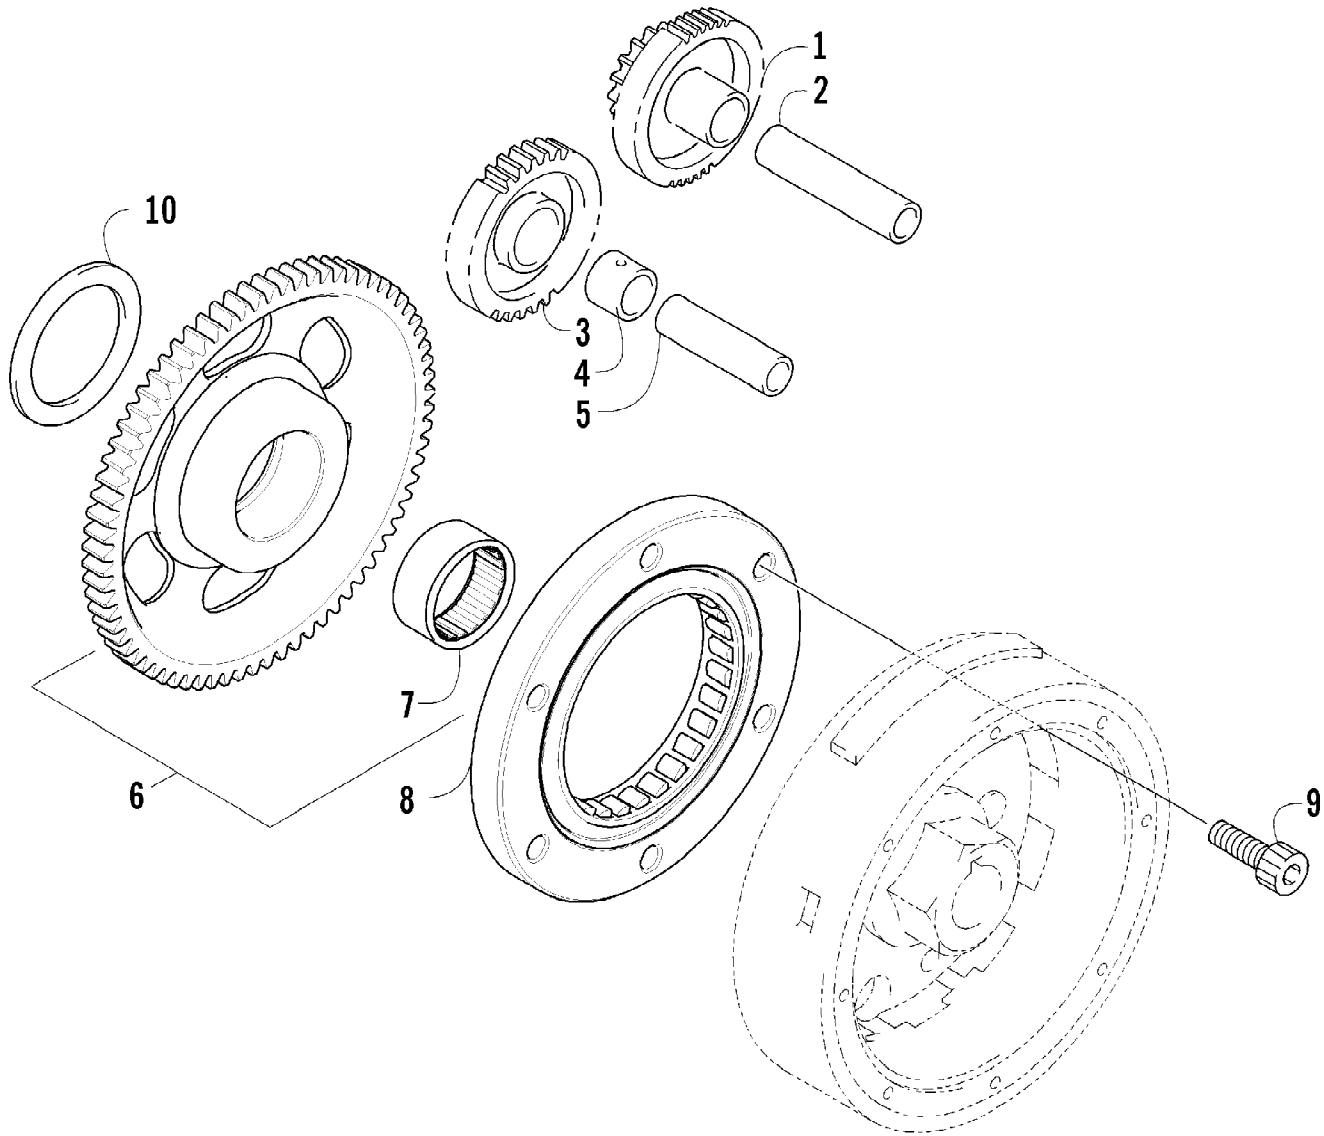


2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036)
 STARTER CLUTCH ASSEMBLY

Page 71 of 87

Ref #	Part Number	Qty	S/P/F	Description
1	0815-001	1		Gear, Starter Idler - No. 1
2	0829-031	1	/P	Shaft, Starter Gear
3	0815-002	1		Gear, Starter Idler - No. 2
4	0815-003	1		Spacer, Starter Idler Gear No. 2
5	0829-032	1	/P	Shaft, Starter Gear
6	0815-004	1		Gear, Starter Clutch (inc. 7)
7	0832-079	1	/P	Bearing
8	0802-035	1		Clutch, Starter
9	0826-069	6		Screw, Machine
10	0828-094	1		Washer

 
2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036) 72 of 87
STEERING ASSEMBLY

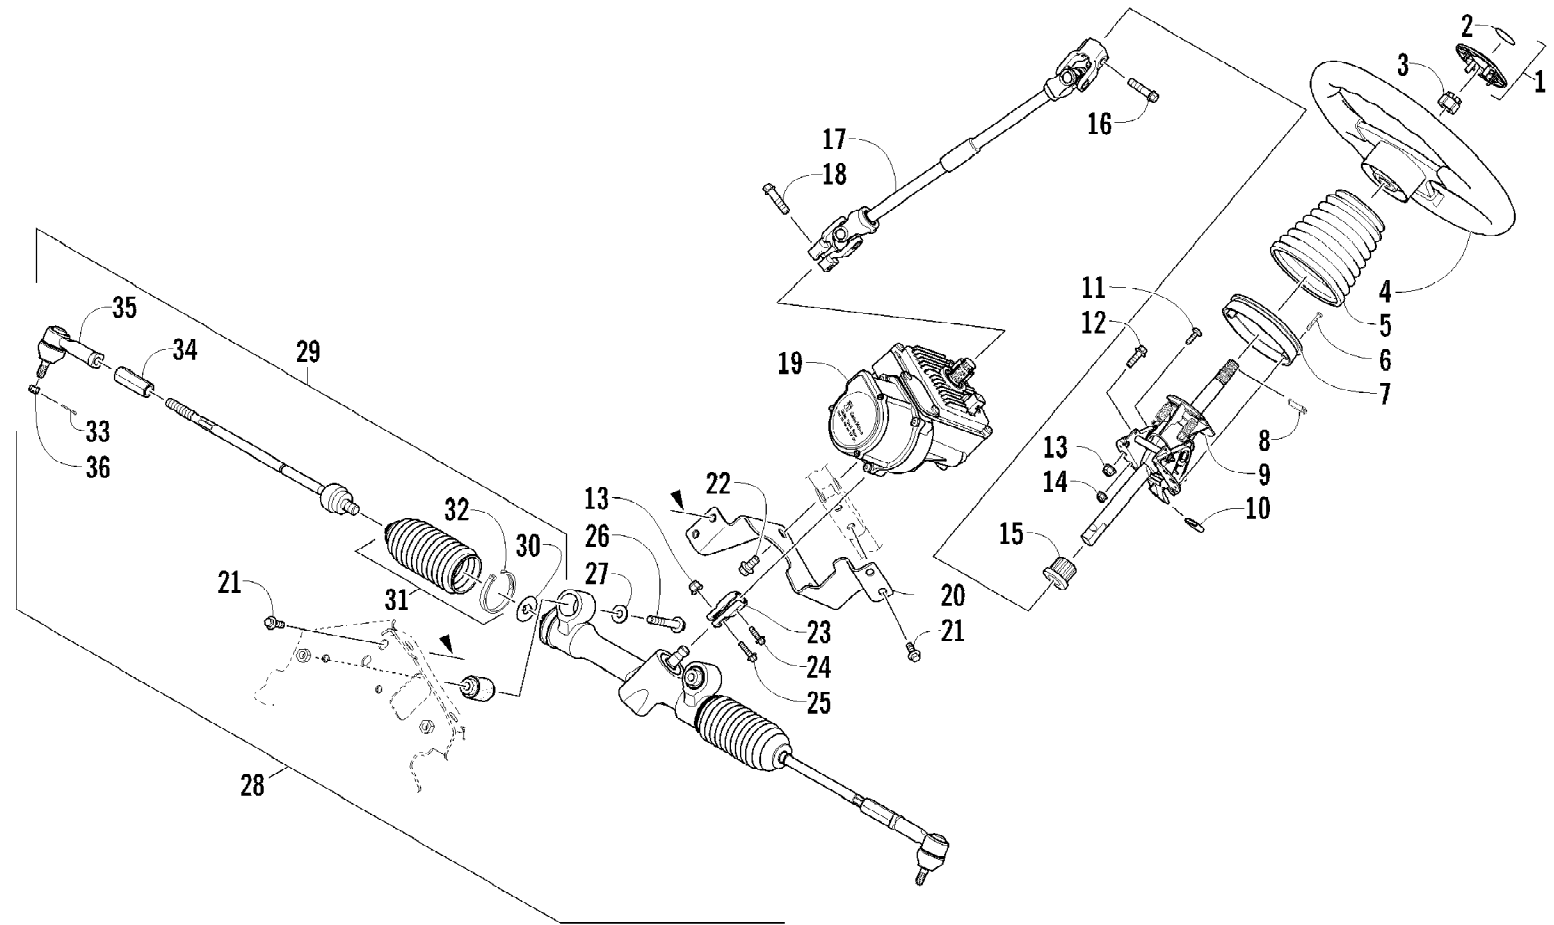

2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P0000) Page 73 of 87
STEERING ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0505-690	1		Cap, Steering Wheel (inc. 2)
2	1411-798	1		Decal, Steering Wheel
3	0423-884	1		Nut
4	0405-398	1		Wheel, Steering - Assembly
5	0405-339	1		Boot
6	0423-743	2		Screw, Self-Tapping
7	0405-258	1		Support
8	1423-045	1		Clip, Retaining
9	0505-588	1	/P	Mechanism, Tilt
10	2406-590	1		Cap, Tilt Lever
11	8476-620	2		Screw, Machine
12	8408-825	2		Screw, Cap
13	8427-802	3		Nut, Lock
14	8427-602	2		Nut, Lock
15	0505-730	1		Bushing (Up to VIN: 301735)
15	0405-155	1		Bushing (VIN: 301736 and Up)
16	1423-047	1		Screw, Cap
17	0405-379	1		Shaft, Steering - Assembly
18	1423-044	1		Screw, Cap
19	0505-727	1	S/P	Assembly, Electronic Power Steering
20	4506-152	1		Bracket, Mounting
21	8408-816	4		Screw, Cap
22	8409-020	4	/P	Screw, Cap
23	0405-388	1		Coupler, Steering
24	1423-052	1		Screw, Cap
25	1423-053	1		Screw, Cap
26	8408-070	2		Screw, Cap
27	0623-728	2		Washer
28	0505-689	1	/P	Housing, Rack and Pinion (inc. 29-35)
29	0505-719	2	/P	Tie Rod - Assembly (inc. 30-35)
30	0405-428	2		Plate, Retaining
31	0505-745	2		Kit, Tie Rod Boot (inc. 32-33)
32	0123-903	2		Tie, Cable - 11.5 in.
33	0623-175	2		Pin, Cotter
34	0505-744	2		Kit, Nut (inc. 33)
35	0505-743	2	/P	Kit, Tie Rod End (inc. 33)
36	0423-072	2		Nut

 
2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036) 74 of 87
SWAY BAR ASSEMBLY

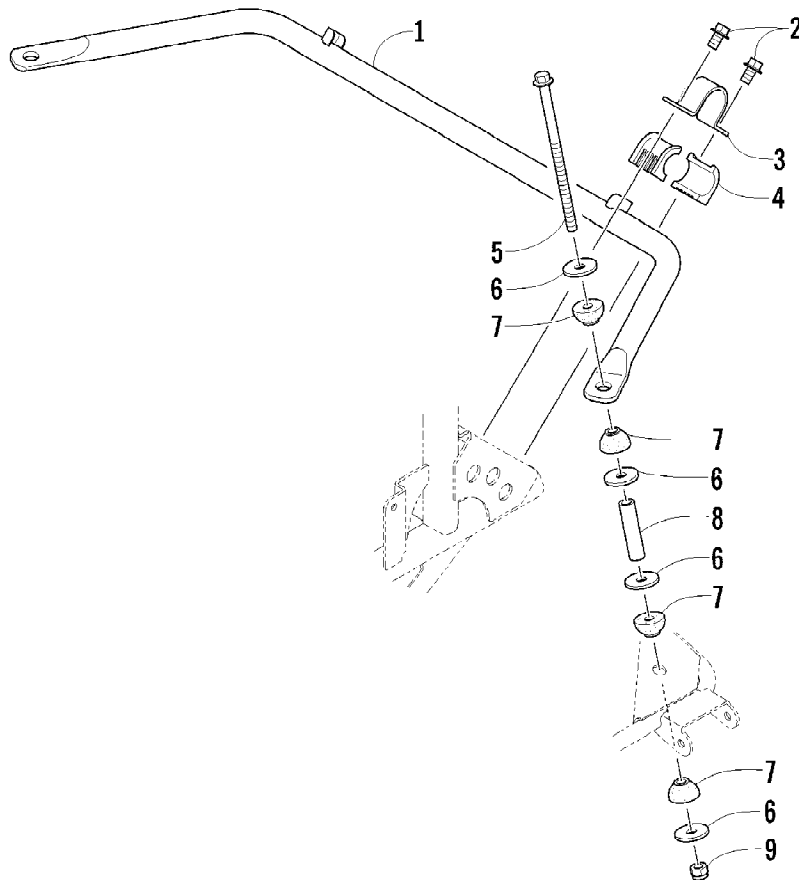

2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036) 75 of 87
 SWAY BAR ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0504-634	1		Bar, Sway
2	8409-016	4		Screw, Cap
3	0504-631	2		Clamp, Sway Bar Bushing
4	0404-190	4		Half-Clamp
5	0423-723	2		Screw, Cap
6	0423-073	8		Washer
7	1402-434	8		Bushing
8	1423-039	2		Spacer
9	8422-002	2		Nut, Lock

 
2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036) Page 76 of 87
THROTTLE BODY ASSEMBLY

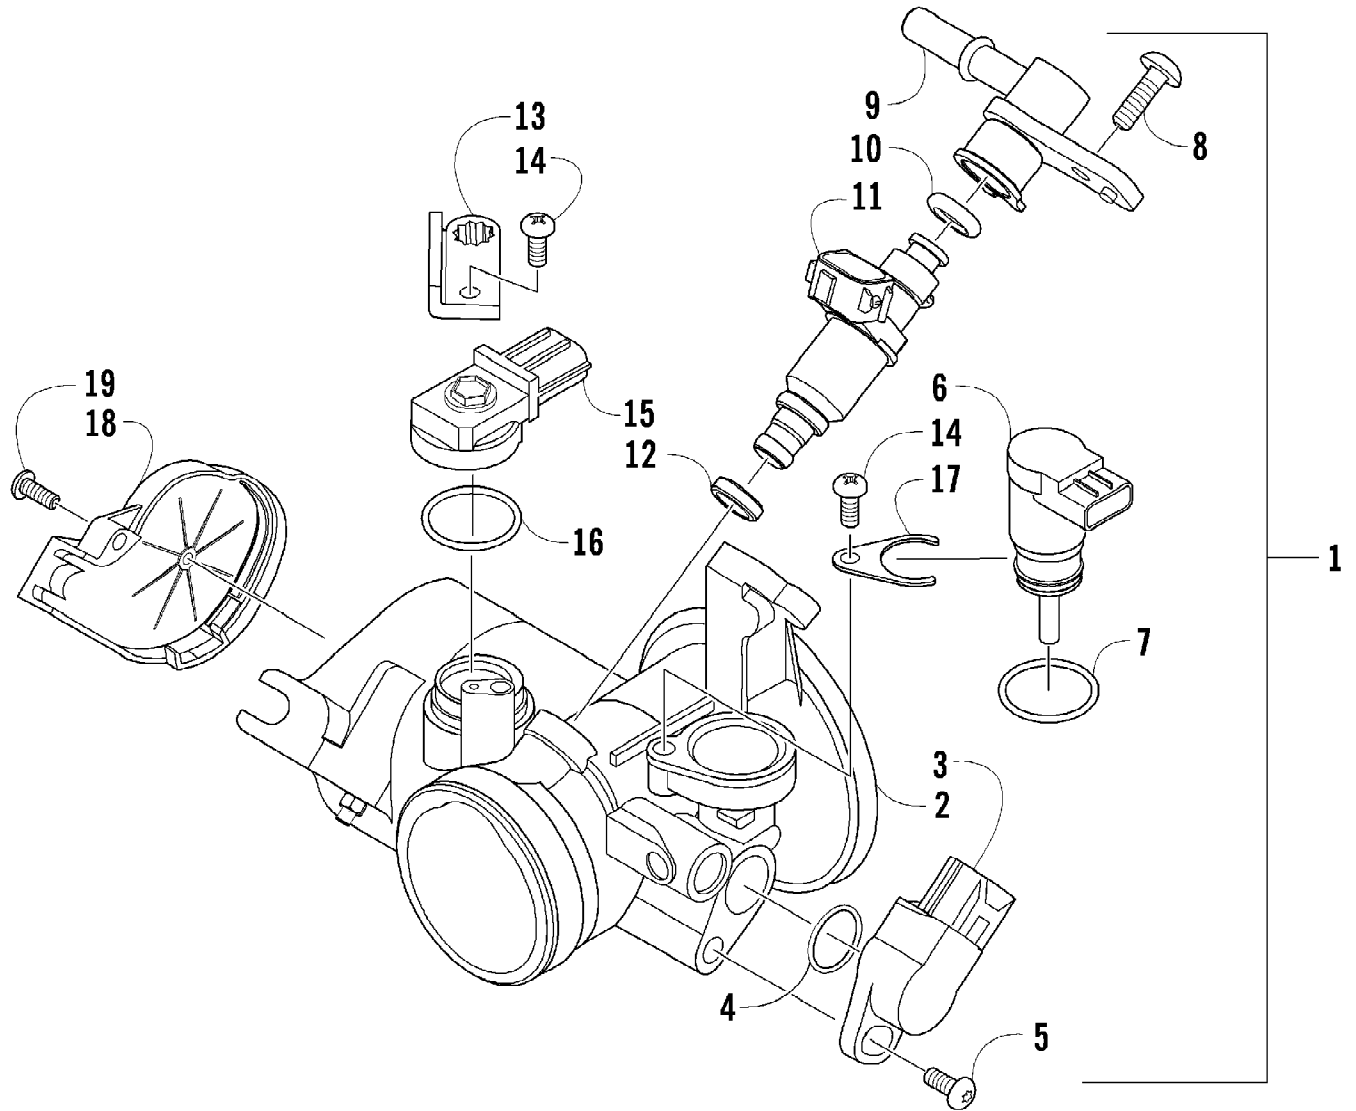

2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036)
 THROTTLE BODY ASSEMBLY Page 77 of 87

Ref #	Part Number	Qty	S/P/F	Description
1	0470-753	1		Throttle Body - Assembly (inc. 2-19)
2	0	1	F	Throttle Body
3	0430-072	1		Sensor, Throttle Position
4	5507-234	1		O-Ring, Throttle Position Sensor
5	5507-231	1		Screw, Machine
6	0430-074	1		Valve, ISC
7	5507-233	1		O-Ring, ISC Valve
8	5507-238	1		Screw, Machine
9	0470-687	1		Rail, Fuel
10	0470-767	1		O-Ring, Fuel Injector
11	0470-762	1		Injector, Fuel
12	0470-768	1		Seal, Fuel Injector
13	5507-227	1		Bracket, MAP Sensor
14	5507-117	2	/P	Screw, Machine
15	0430-073	1		Sensor, MAP
16	5507-232	1		O-Ring, MAP Sensor
17	5507-229	1		Plate, Retaining
18	5507-223	1		Cover
19	5507-037	1	/P	Screw, Machine

 2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P0000) 78 of 87
TILT FRAME ASSEMBLY

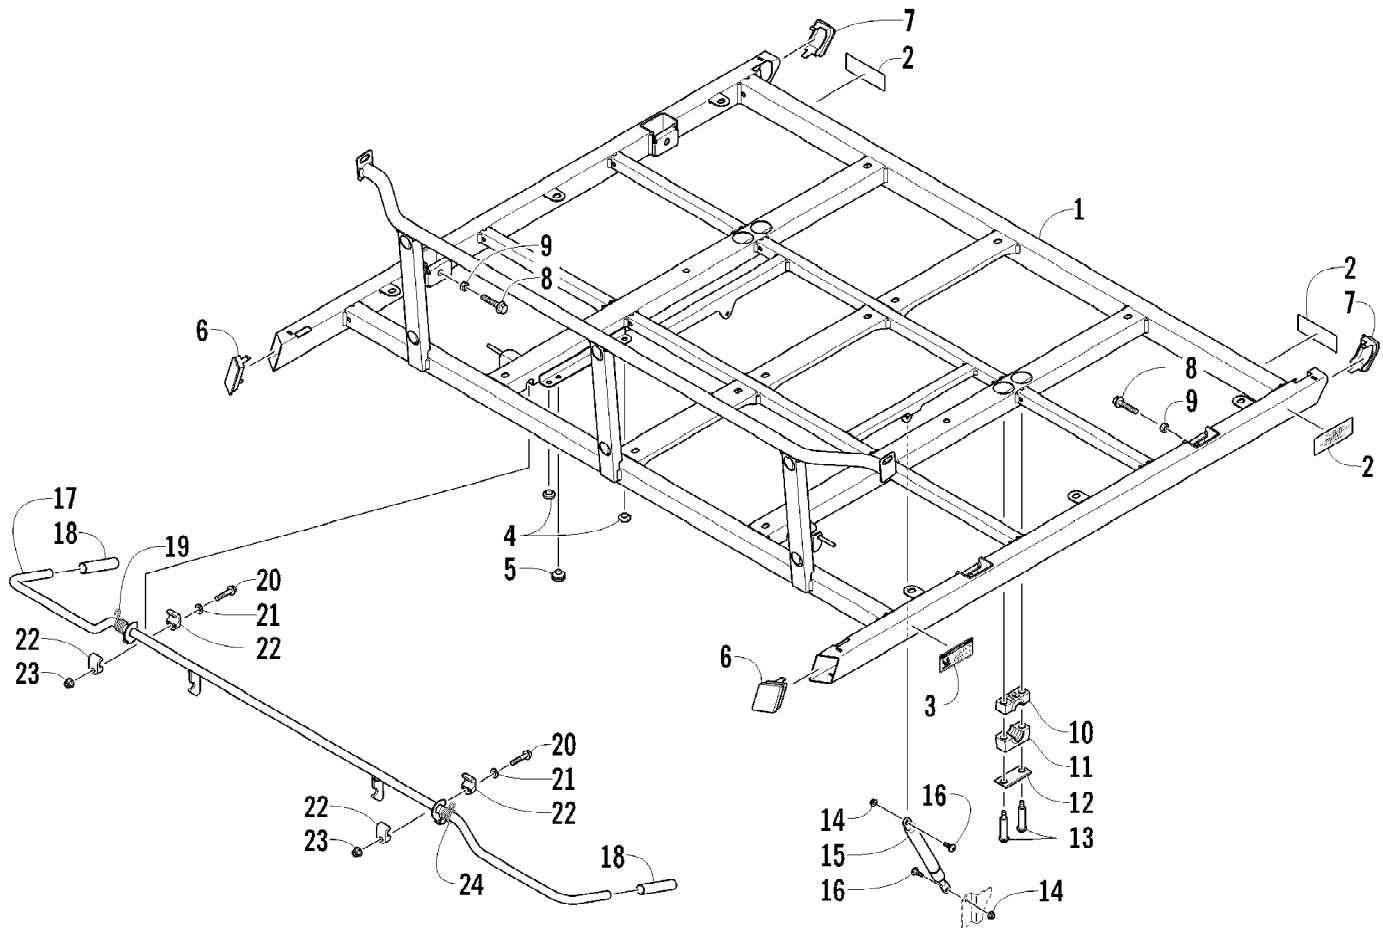


2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036)
 TILT FRAME ASSEMBLY

Page 79 of 87

Ref #	Part Number	Qty	S/P/F	Description
1	2516-712	1		Frame,Tilt - Assembly
2	2411-182	4		Decal, Reflector
3	1411-120	2		Decal, Warning - Pinch Point
4	0406-877	4	/P	Bumper
5	1423-057	2		Bumper
6	2416-366	1		Endcap, Front - Right
6	2416-367	1		Endcap, Front - Left
7	2416-364	1		Endcap, Rear - Right
7	2416-365	1		Endcap, Rear - Left
8	8420-002	4	/P	Screw, Cap
9	1423-012	4		Nut
10	0405-139	2		Housing, Upper
11	0405-138	2		Housing, Lower
12	0405-166	2		Cap, Housing
13	0423-505	4		Screw, Shoulder
14	8424-602	4	/P	Nut
15	2506-194	2		Support, Lift
16	0423-356	4		Screw, Shoulder
17	2516-724	1		Rod, Latch - Tilt Frame
18	1406-736	2		Grip, Latch Rod
19	2416-404	1		Spring, Latch - Right
20	8408-845	2		Screw, Cap
21	0423-087	2		Washer
22	1406-674	4		Half-Clamp
23	8427-802	2		Nut, Lock
24	2416-405	1		Spring, Latch - Left

 
2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036) 80 of 87
TRANSMISSION ASSEMBLY

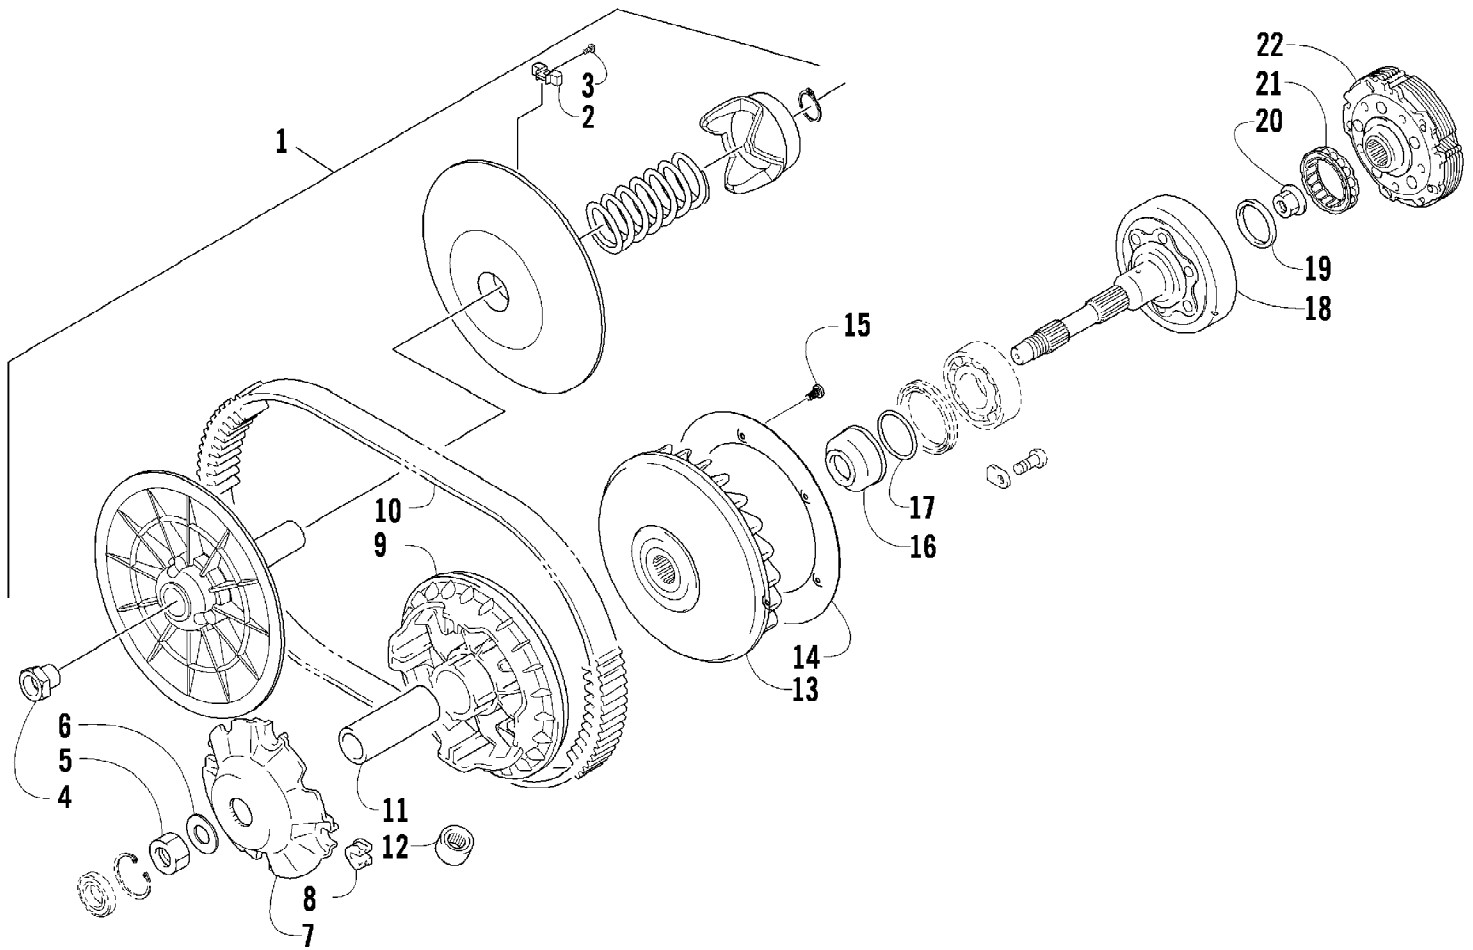

2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036) 81 of 87
TRANSMISSION ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0823-254	1	S	Pulley, Driven - Assembly (inc. 2-4)
2	0823-176	3	/P	Shoe, Cam
3	0823-177	3		Screw, Machine
4	0823-178	1		Nut
5	0827-010	1		Nut
6	0828-106	1		Washer
7	0823-008	1		Plate, Movable Drive Face
8	0823-010	4		Damper, Movable Drive Face
9	0823-159	1		Face, Movable Drive
10	0823-013	1		Belt, Drive
11	0823-149	1		Spacer
12	0823-164	8		Roller
13	0823-156	1	/P	Face, Fixed Drive
14	0823-131	1		Shroud, Drive Face
15	0623-914	6		Screw, Self-Tapping
16	0823-015	1		Spacer, Fixed Drive Face
17	0470-531	1		O-Ring
18	0823-261	1	S/P	Housing, Clutch - Assembly
19	0830-189	1	/P	Seal
20	0827-011	1		Nut
21	0823-018	1		Clutch, One-Way
22	0823-310	1	/P	Clutch, Centrifugal - 6 Plate

 
2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P000) 82 of 87
WATER PUMP ASSEMBLY

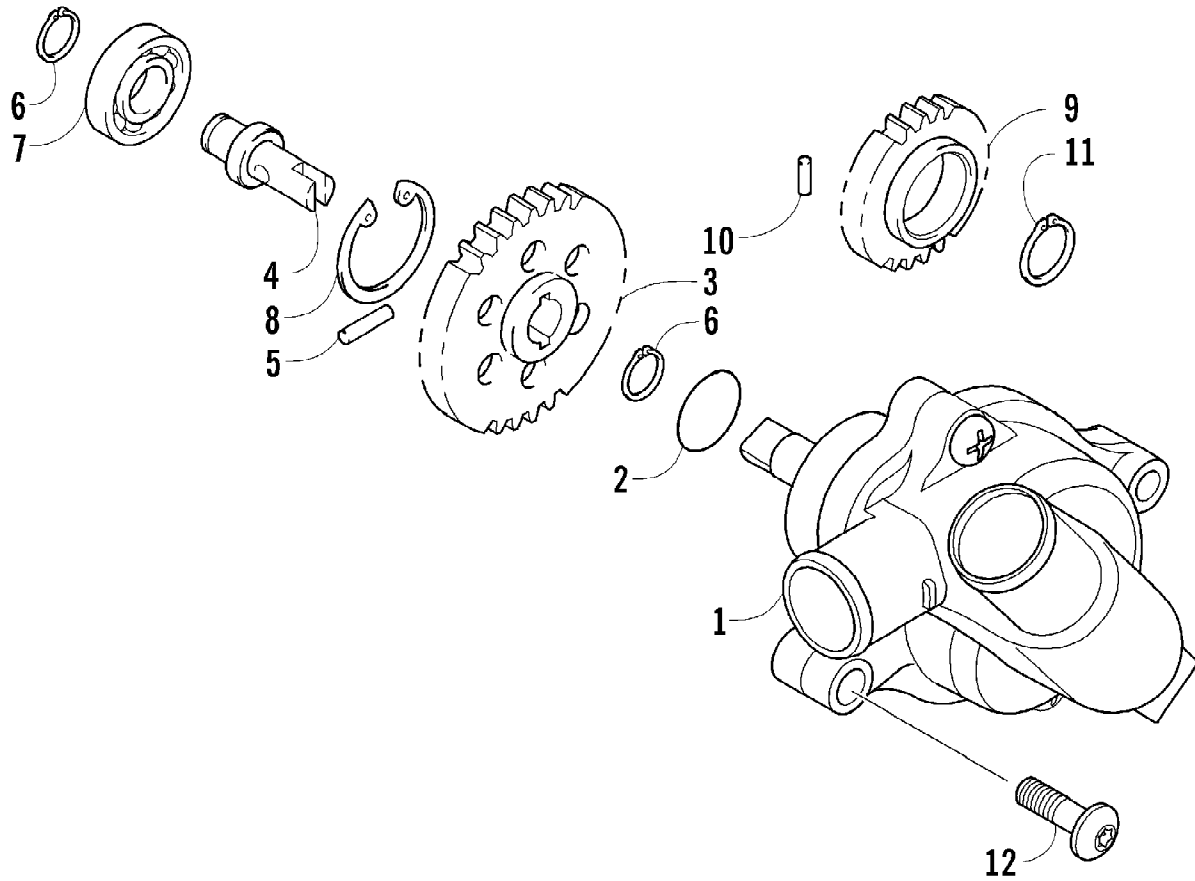

2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036) 83 of 87
 WATER PUMP ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0813-001	1		Pump, Water - Assembly (inc. 2)
2	0830-029	1		O-Ring
3	0813-004	1		Gear, Driven
4	0813-005	1		Shaft, Driven Gear
5	0829-009	1		Pin
6	0831-002	2		Ring, Retaining
7	0832-046	1	/P	Bearing
8	0831-004	1		Ring, Retaining
9	0811-003	1		Gear, Water Pump Drive
10	0829-007	1		Pin
11	0831-005	1		Ring, Retaining
12	8468-665	2		Screw, Machine

 
2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036) 84 of 87
WHEEL AND TIRE ASSEMBLY

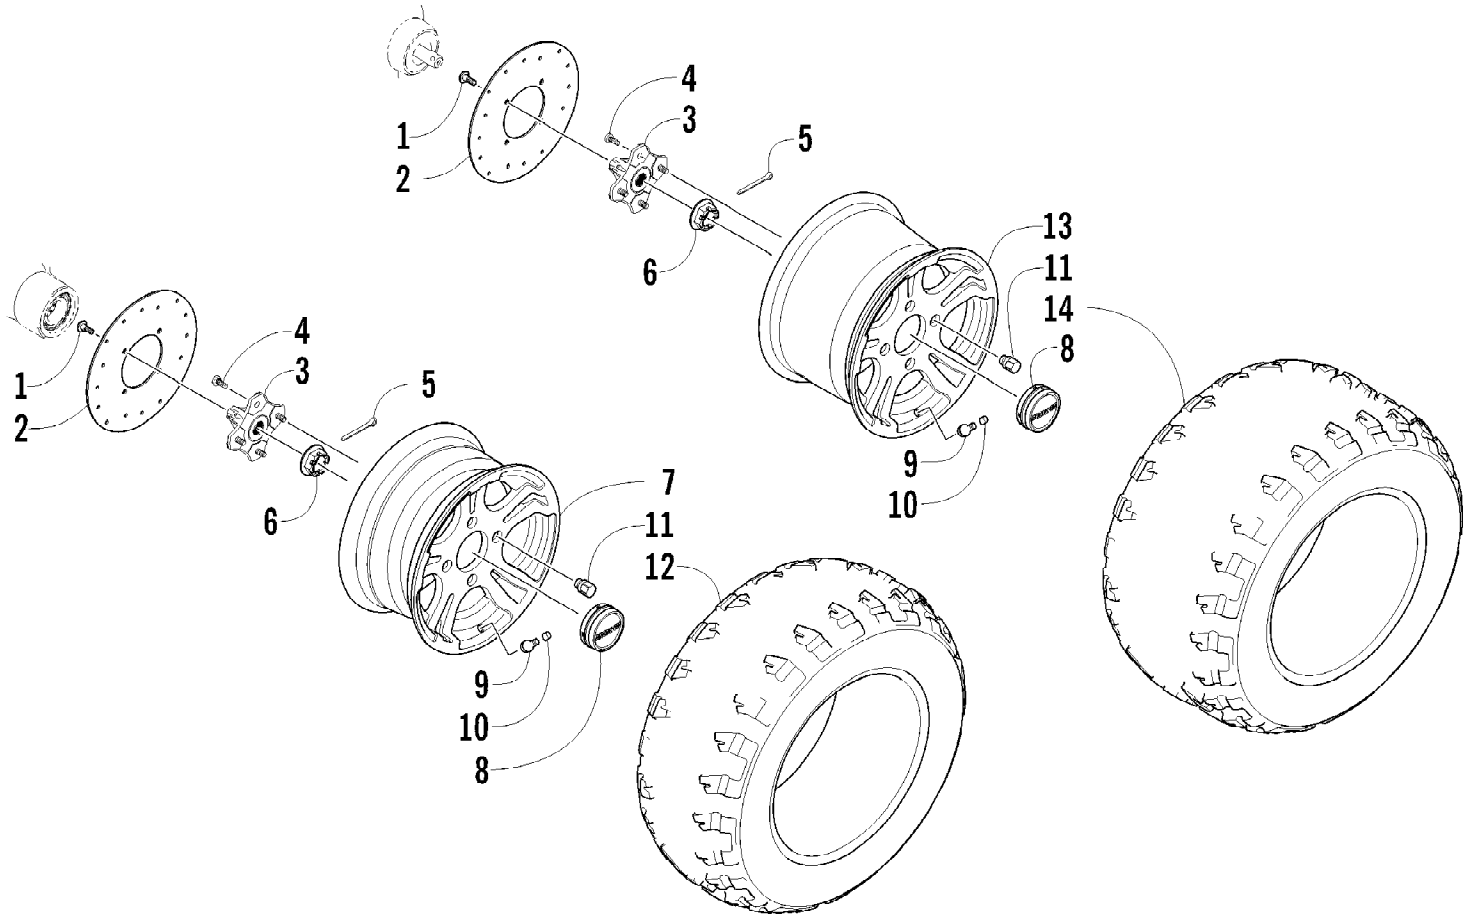

2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036)
WHEEL AND TIRE ASSEMBLY Page 85 of 87

Ref #	Part Number	Qty	S/P/F	Description
1	0423-557	16		Screw, Shoulder
2	1436-418	2	/P	Disc, Brake - Front
2	1436-164	2	/P	Disc, Brake - Rear
3	1502-433	2	/P	Hub, Wheel - Front (inc. 4)
3	1502-437	2		Hub, Wheel - Rear (inc. 4)
4	0402-974	16	/P	Stud
5	0423-407	4		Pin, Cotter
6	0423-607	4		Nut, Castle
7	1402-732	2		Wheel - Front (inc. 8)
8	1402-736	4		Cap, Wheel
9	0402-064	4		Stem, Valve (inc. 10)
10	0402-140	4		Cap, Valve Stem
11	0423-618	16		Nut, Lug
12	1402-860	2		Tire - Front
13	1402-918	2	/P	Wheel - Rear (inc. 8)
14	1402-861	2		Tire - Rear

 2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036) 86 of 87
WIRING HARNESS ASSEMBLY

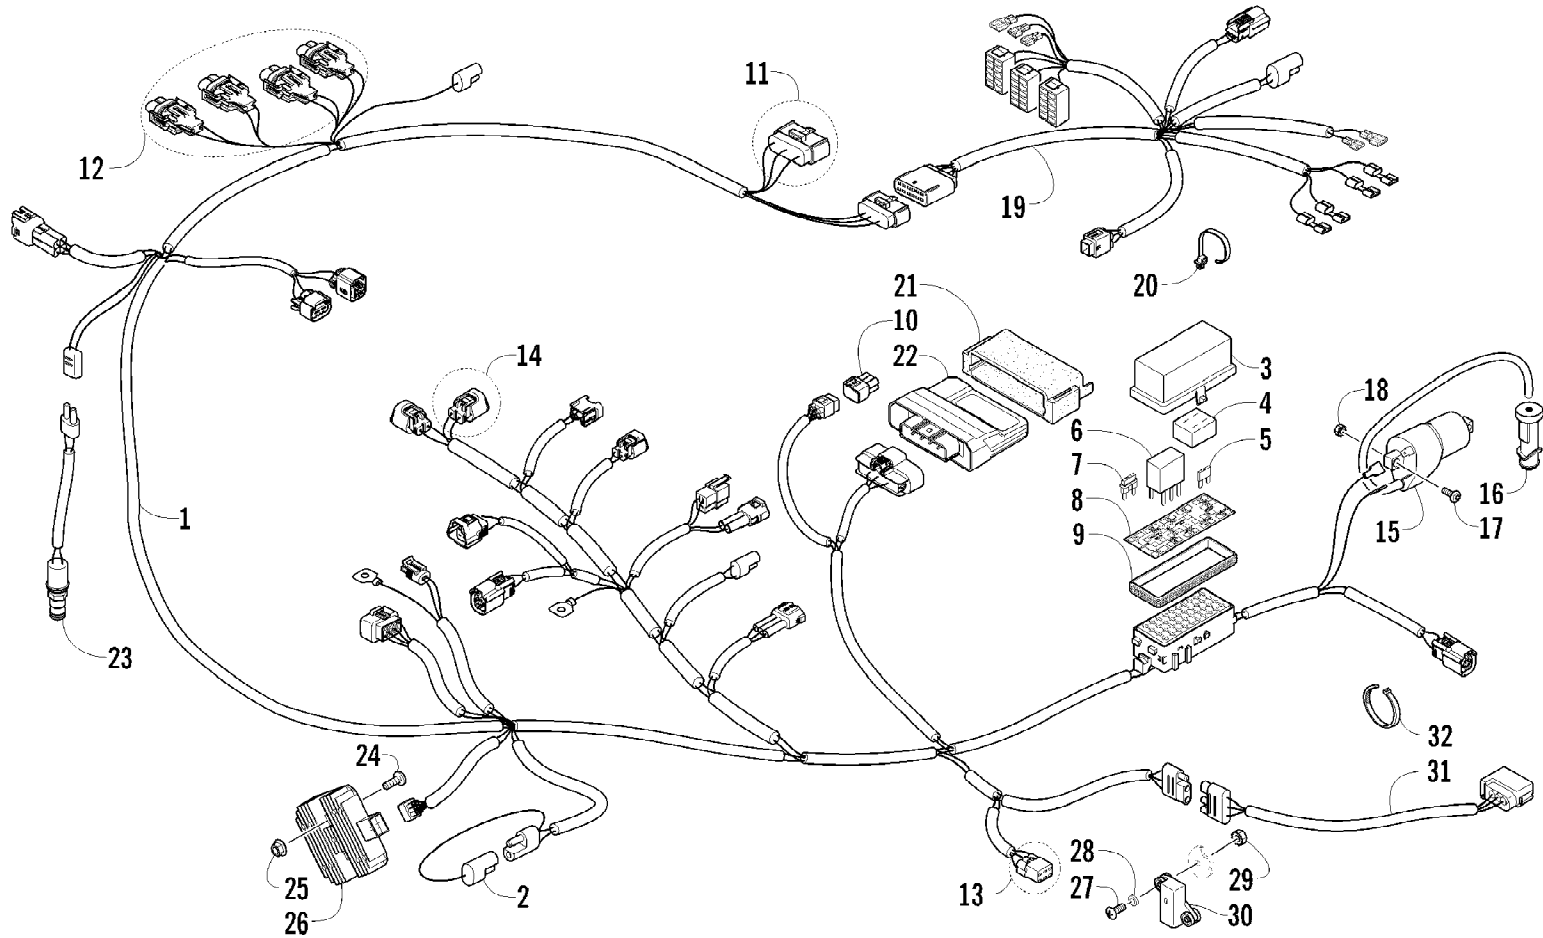

2011 PROWLER 700 HDX INTERNATIONAL METALLIC GRAY (U2011P5T1P036) 87 of 87
 WIRING HARNESS ASSEMBLY

Ref #	Part Number	Qty	S/P/F	Description
1	0486-350	1		Harness, Main (inc. 2-10)
2	0486-164	1		Tether, Accessory Connector
3	0430-085	1		Cover, Fuse Block
4	0430-037	1		Holder, Fuse
5	0430-032	5		Fuse - 10 Amp
5	0430-031	4		Fuse - 15 Amp
5	0430-030	3		Fuse - 30 Amp
6	0430-045	6	/P	Relay (4-Pin) - 20 Amp
7	0430-034	2		Diode
8	2411-213	1		Decal, Fuse Block
9	0430-086	1		Seal
10	0430-097	1		Cover, Diagnostics Connector
11	1436-415	1		Repair Kit, Connector - LCD Gauge
12	1436-290	AR		Repair Kit, Connector - Headlight
13	1436-416	1		Repair Kit, Connector - Tilt Sensor
14	1436-417	1		Repair Kit, Connector - Idle Speed Control
15	0824-043	1		Coil, Ignition - Assembly
16	0824-049	1	/P	Cap, Spark Plug
17	8476-620	2		Screw, Machine
18	0623-038	2		Nut w/Washer
19	0486-398	1		Harness, Console
20	0423-075	AR		Tie, Cable - Push-Mount
21	0430-076	1		Cushion, ECU
22	0530-048	1		ECU
23	0409-089	1		Switch, Brake - Assembly
24	8476-625	2		Screw, Machine
25	8424-602	2	/P	Nut
26	0824-037	1	/P	Regulator, Voltage
27	8468-425	2		Screw, Machine
28	0123-802	2		Washer
29	0423-493	2		Nut w/Washer
30	0409-064	1		Sensor, Tilt
31	0486-176	1		Harness, Adapter - Taillight
32	0123-788	AR	/P	Tie, Cable - 8 in.
32	0123-903	AR		Tie, Cable - 11.5 in.
32	0623-144	AR		Tie, Cable - 17.5 in.