

100200 to 100299

Illustrated Parts List

Model Series

100200 to 100299

TYPE NUMBERS

0010 through 0070

0110 through 0597

401000 through 401180

TO FIND

THE CORRECT NUMBER OF THE PART YOU NEED:

FOLLOW THE INSTRUCTIONS BELOW


- A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 012301 are listed herein only as 0123. The two digits (01 or 02, etc.) to the right of the space are not needed for parts identification. Then use the Illustrated Parts List covering the Model Series.
- B. Refer to Illustrated Parts section and compare the old part with illustration. The number on the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames on which individual reference numbers are given can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical Parts List, where Reference and Master Part Number are listed. **THE MASTER PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE".**
- D. If a "Note" appears below the Master Part Number, this means that this part differs from the Master Part for certain types. If the Type number is listed under "Note", order the part referred to.
- E. If the Engine Type Number does not appear after any part number listed under "Note", use the Master Part Number.
- F. For Type Numbers higher than those covered by this book, please refer to the factory if you are unable to identify the part by comparison.

PRINTED IN U.S.A.




COPYRIGHT ©

100200 to 100299

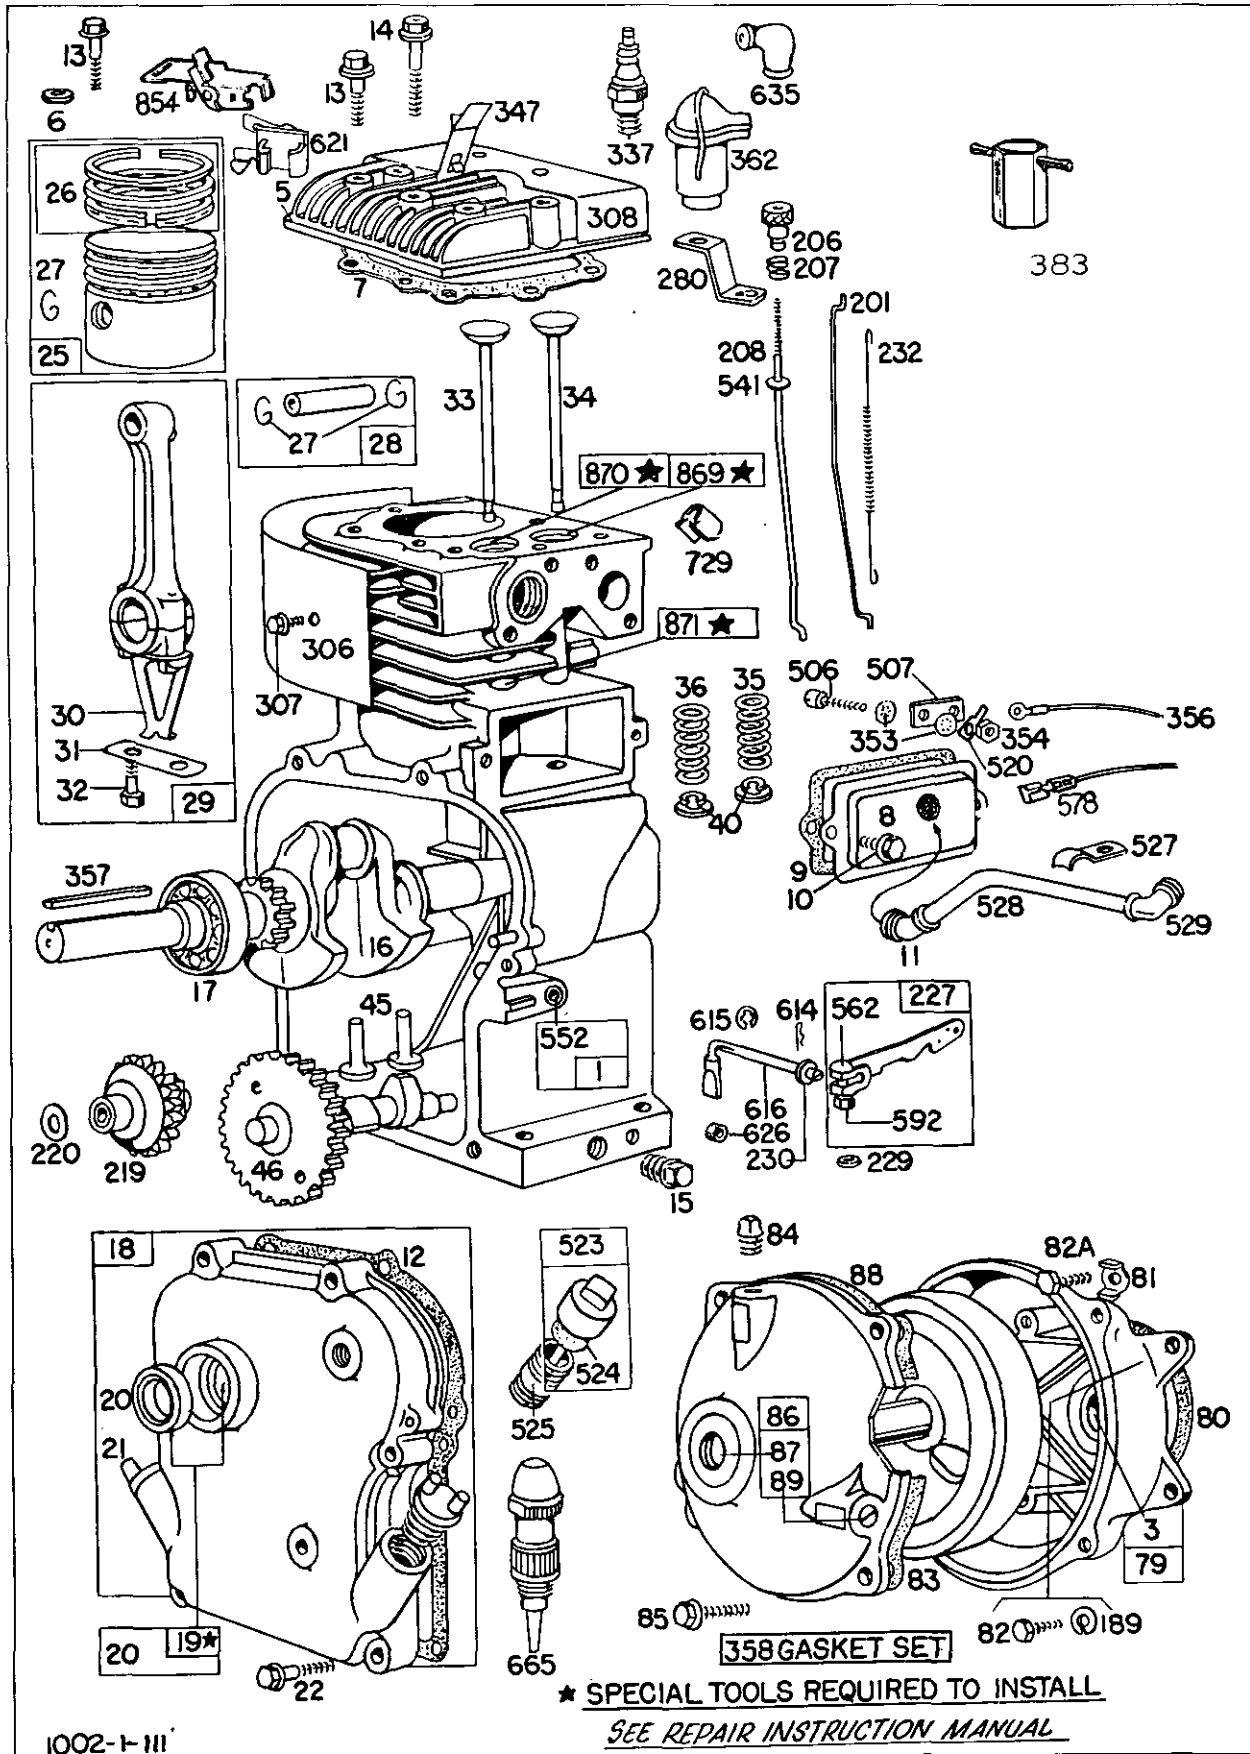


Assemblies include all parts shown in frames.

100200 to 100299

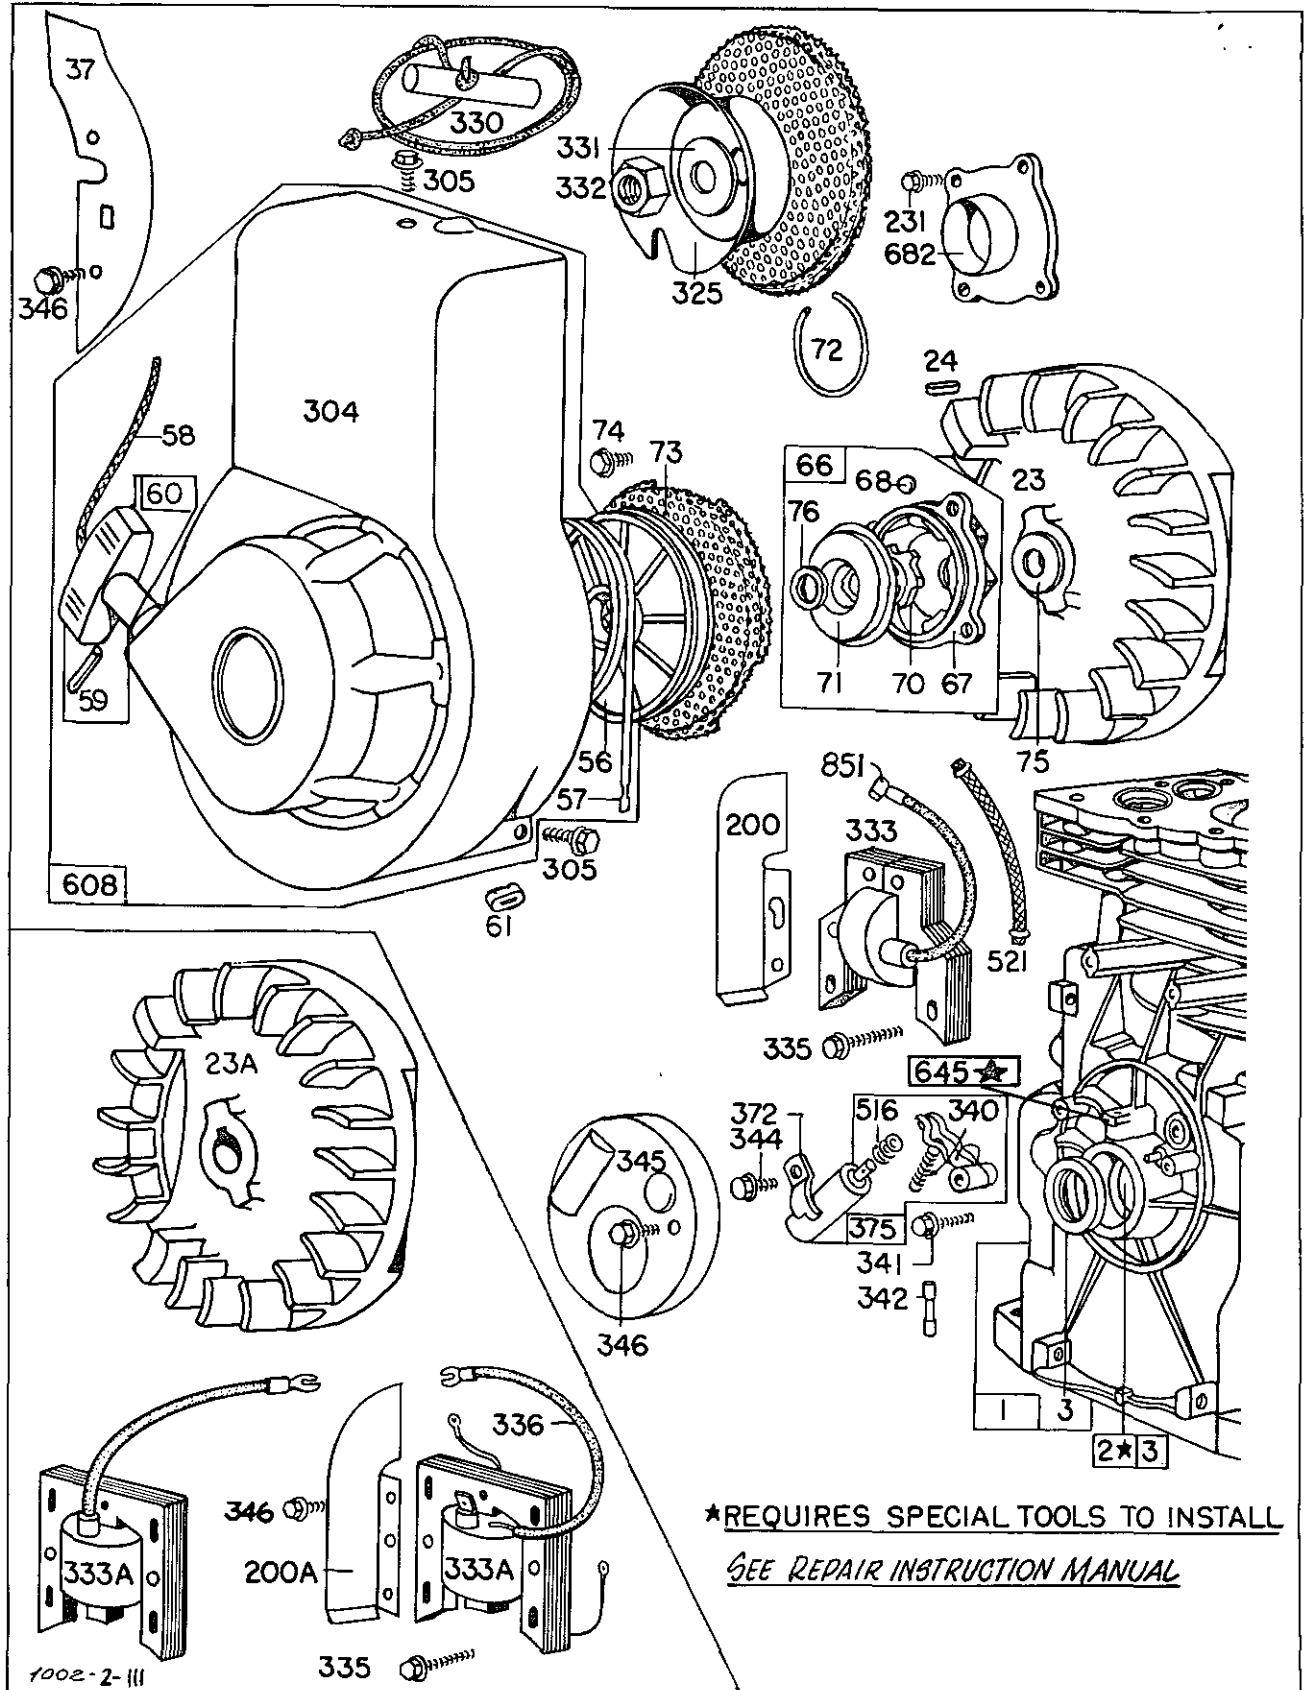

Assemblies include all parts shown in frames.

100200 to 100299

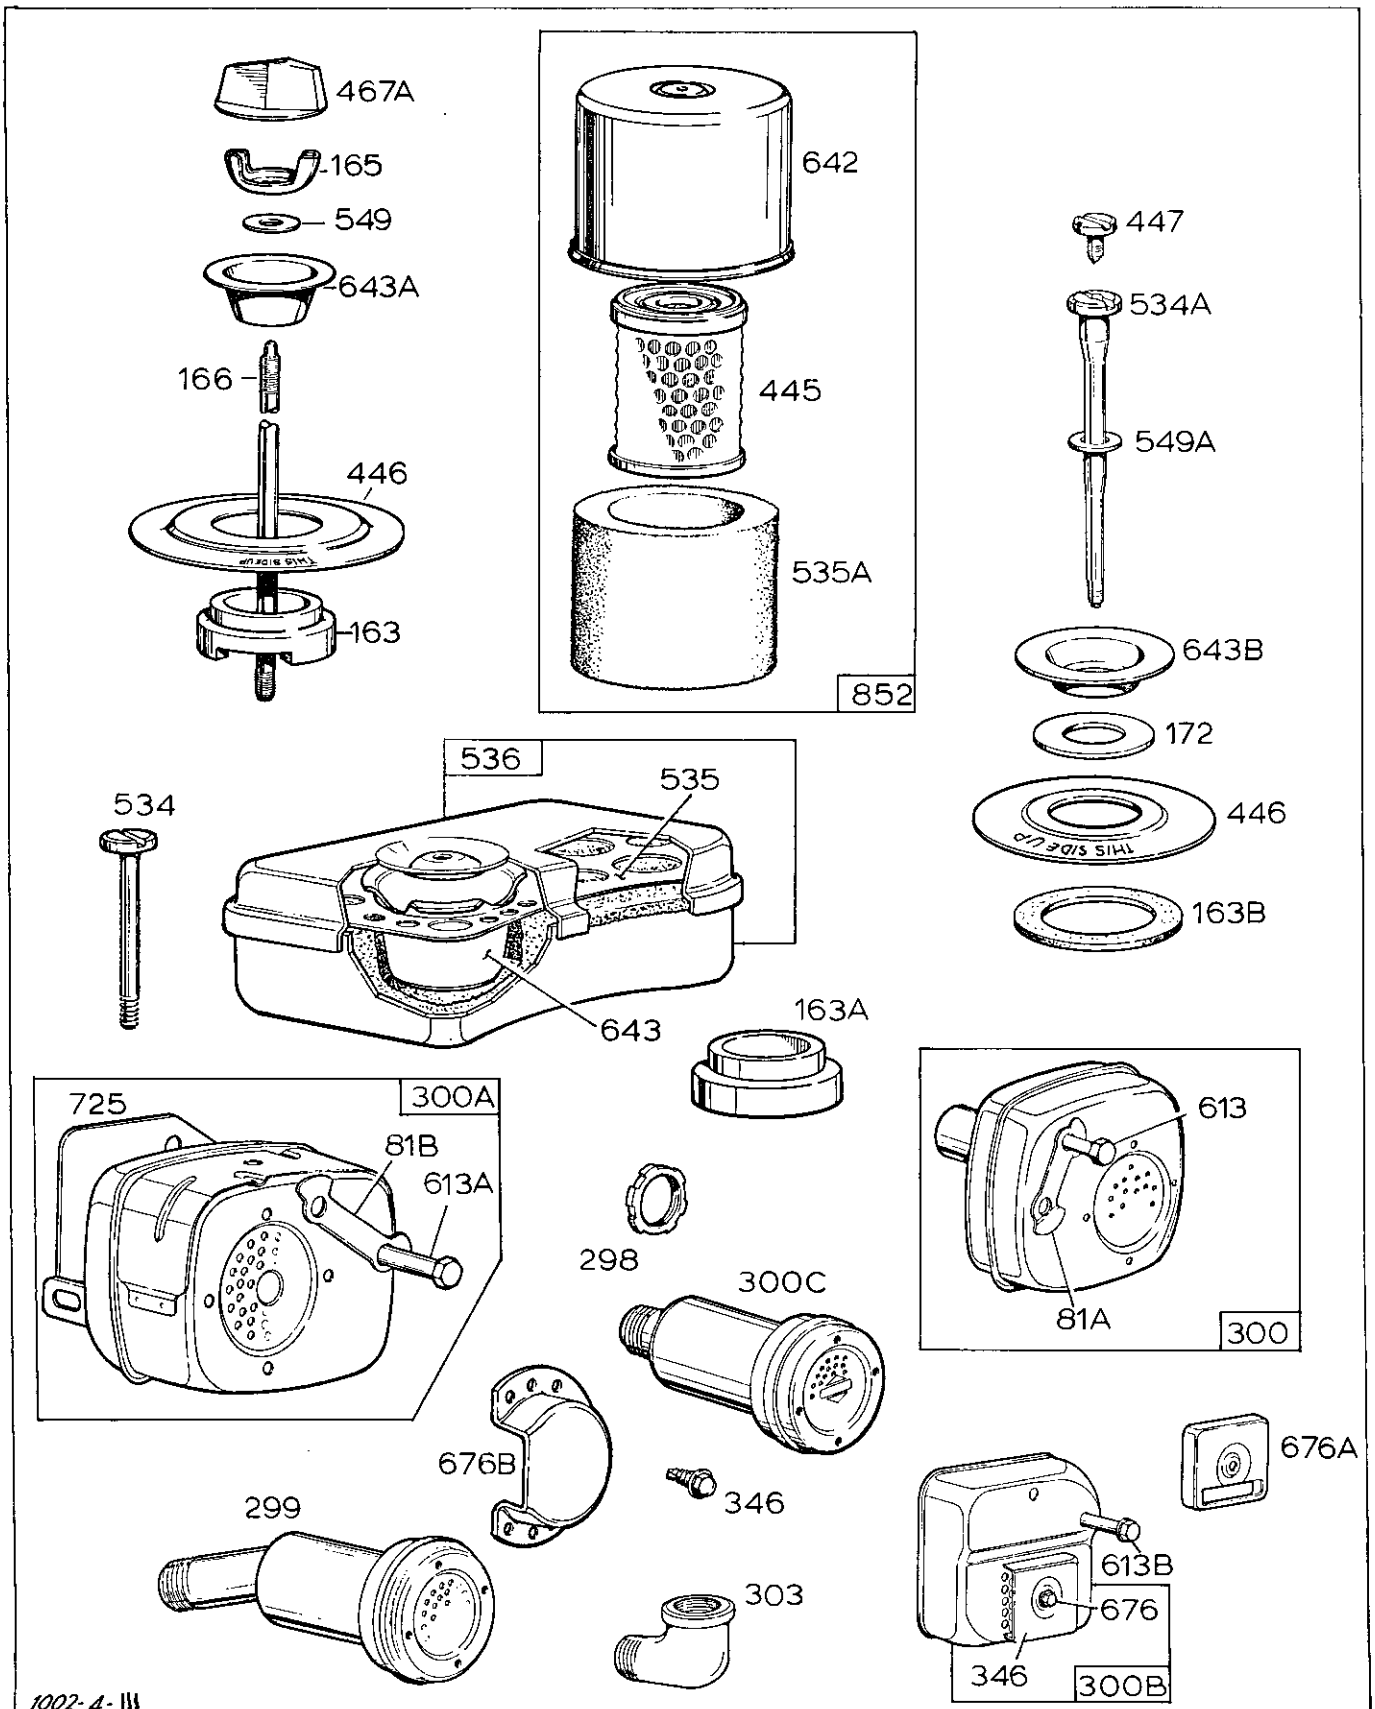

Assemblies include all parts shown in frames.

100200 to 100299

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	397412	Cylinder Assembly (Includes Piston, Rings and Connecting Rod Assembly)	16	260719	Crankshaft		260727	Crankshaft
2	297565	Bushing—Cylinder		Note: 260721	Crankshaft			Used on Type Nos.
	Note:	Requires special tools for installation.			Used on Type Nos.			0038, 0115, 0163,
3	299819	Seal—Oil			0049, 0116, 0131,			0190, 0196, 0201,
5	211542	Head—Cylinder			0132, 0136, 0156,			0205, 0207, 0217,
6	22963	Washer			0160, 0170, 0176,			0223, 0227, 0248,
7	*270383	Gasket—Cylinder Head			0185, 0194, 0210,			0256, 0266, 0276,
8	294178	Breather—Valve Chamber			0224, 0230, 0236,			0296, 0302, 0304,
9	* 27549	Gasket—Valve Cover			0242, 0253, 0259,			0314, 0343, 0345,
10	93394	Screw—Breather Mounting Sem			0260, 0261, 0262,			0361, 0362, 0369,
11	66578	Grommet—Breather Tube			0268, 0273, 0293,			0370, 0372, 0394,
12	*270080	Gasket—Crankcase— .015" thick (Standard)			0298, 0307, 0308,			0404, 0405, 0436,
	270125	Gasket—Crankcase— .005" thick			0311, 0317, 0319,			0437, 0440, 0454,
	270126	Gasket—Crankcase— .009" thick			0335, 0336, 0338,			0456, 0471, 0491,
13	93368	Screw—Cylinder Head (2-3/32" long)			0344, 0356, 0373,			0492, 0501, 0506,
	Note:	93583 Stud—Cylinder Head			0377, 0379, 0387,			0514, 0518, 0531,
		22963 Washer			0402, 0419, 0430,			0532, 0537, 0547,
		Used on Type Nos.			0435, 0442, 0452,			0548, 0582, 0587,
		0434, 0528, 0532,			0468, 0495, 0508,			401016, 401102.
		0546, 0551, 0565,			0525, 0526, 0535,			260928 Crankshaft
		0582, 0593.			0552, 0555, 0560,			Used on Type Nos.
14	93369	Screw—Cylinder Head (2-15/32" long)			0562, 0567, 0571,			0036, 0113, 0124,
	Note:	93583 Stud—Cylinder Head			0585,			0137, 0149, 0168,
		22963 Washer			401017, 401103,			0172, 0184, 0191,
		Used on Type Nos.			401111, 401113,			0193, 0197, 0208,
		0434, 0528, 0532,			401114, 401115.			0213, 0222, 0250,
		0551, 0554, 0565,			260724 Crankshaft			0252, 0254, 0257,
		0582, 0593.			Used on Type Nos.			0264, 0272, 0277,
15	91249	Plug—Pipe, 1/4" Std., Square Hd.			0035, 0112, 0182,			0284, 0286, 0294,
	Note:	93448 Plug—Pipe (Hex. Socket)			0218, 0255, 0337,			0295, 0297, 0300,
		Used on Type Nos.			0339, 0340, 0346,			0305, 0306, 0309,
		0247, 0347, 0499.			0365, 0439, 0529,			0318, 0320, 0321,
					0551, 0569, 0570,			0323, 0329, 0331,
					0584, 0595,			0348, 0351, 0352,
					401013, 401099.			0355, 0367, 0376,
					260726 Crankshaft			0378, 0380, 0388,
					Used on Type Nos.			0391, 0393, 0398,
					0037, 0114, 0249,			0406, 0407, 0409,
					0251, 0283, 0325,			0418, 0420, 0424,
					0353, 0354, 0363,			0427, 0429, 0441,
					0384, 0396, 0426,			0443, 0447, 0449,
					0455, 0498, 0545,			0450, 0451, 0458,
					0566, 0572,			0459, 0462, 0469,
					401015, 401101.			0470, 0479, 0480,
								0481, 0482, 0484,
								0486, 0490, 0493,
								0494, 0497, 0500,
								0502, 0503, 0510,
								0511, 0512, 0513,
								0516, 0517, 0519,
								0520, 0534, 0542,
								0550, 0556, 0559,
								0561, 0564, 0586,
								0591, 0594,
								401014, 401100.

*Included in Gasket Set—
Part No. 297615.

100200 to 100299

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		261204 Crankshaft Used on Type Nos. 0444, 0509.			391484 Seal-Oil Used on the Auxiliary P.T.O. Shaft on Type Nos. 0070, 0117, 0126, 0143, 0154, 0177, 0216, 0235, 0245, 0364, 0366, 0368, 0408, 0444, 0485, 0507, 0540, 401092.			MODEL 100200 SERIES PISTON RING SETS:
		261398 Crankshaft Used on Type Nos. 0541, 0565, 0583, 0593, 0596.			392741 Oil Seal and Spacer Used on Type Nos. 0541, 0565, 0583 0593, 0596.			Note: For Chrome Piston Ring Set—Standard Size—order Part No. 298744 (Available only for Engines after Code No. 6306141).
17	99158	Bearing—Ball						The following Piston Ring Sets are used after Code No. 6306141:
18	297602	Cover Assy.— Crankcase Used on Model Series 100201, 100202.				26	298174	Ring Set—Std. Piston
		Note: 298183 Cover Assy.— Crankcase Used on Model Series 100292.	21	66768	Plug—Oil Filler		298175	Ring Set—.010" O.S. Piston
		298204 Cover Assy.— Crankcase Used on Model Series 100231, 100232.	22	93032	Screw—Crankcase Cover Mounting Sem		298176	Ring Set—.020" O.S. Piston
		298517 Cover Assy.— Crankcase Used on Model Series 100212, 100251, 100252, except as listed under Note.			Note: 93656 Stud 90832 Washer—Lock Used to mount Crankcase Cover on Type Nos. 0408, 0444, 0463, 0466, 0521, 0549.		298177	Ring Set—.030" O.S. Piston
		Note: 392778 Cover Assy.— Crankcase Used on Type Nos. 0541, 0565, 0583, 0593, 0596.	23	297229	Flywheel Assembly (Used after Code No. 6308231.)			The following Piston Ring Sets are used before Code No. 6306171:
19	297603	Bushing—Crankcase Cover Note: Requires special tools for installation.			Note: 211424 Pulley—V-Belt Uses: 68428 Belt—Vee Used between flywheel and Starter Clutch on Type No. 0221.		297575	Ring Set—Std. Piston
20	294606	Seal—Oil Note: 393812 Seal—Oil Used on Model 100231, 100232 Series Engines. 298504 Oil Seal and Spacer Used on Type Nos. 0211, 0269, 0279, 0303, 0341, 0357, 0382, 0385, 0386, 0389, 0401, 0403, 0410, 0415, 0445, 0446, 0464, 0475, 0483, 0489, 0522, 0523, 0589.	23A	297348	Flywheel Assembly (Used before Code No. 6308261.)		297576	Ring Set—.010" O.S. Piston
			24	61760	Key—Flywheel		297577	Ring Set—.020" O.S. Piston
			25	298168	Piston Assembly—Std.		297578	Ring Set—.030" O.S. Piston
				298169	Piston Assembly— .010" O.S.	27	260645	Lock—Piston Pin
				298170	Piston Assembly— .020" O.S.	28	297581	Pin Assy.—Piston— Standard
				298171	Piston Assembly— .030" O.S.		297582	Pin Assy.—Piston— .005" O.S.
						29	297569	Rod Assy.—Connecting Note: For Connecting Rod with .020" undersize Crankpin Bore—order No. 298786.
						30	221786	Dipper—Connecting Rod Used after Code No. 6503231. Note: 221507 Dipper— Connecting Rod Used before Code No. 6503241.

100200 to 100299

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
31	221741	Lock—Connecting Rod Screw Used after Code No. 6503231. Note: 221451 Lock—Connecting Rod Screw Used before Code No. 6503241.	40	93312	Retainer—Valve Spring Used with valves with groove in stem. Note: 23184 Retainer—Intake Valve 23187 Pin—Intake Valve Retainer Used with valves with hole in stem except those with rotocap (as follows:) 292259 Rotocap—Exhaust Valve 230126 Pin—Exhaust Valve Rotocap Retainer 230127 Retainer—Exhaust Valve Rotocap Used on Type Nos. 0038, 0124, 0248, 0256, 0258, 0266, 0267, 0276, 0302, 0315, 0337, 0345, 0346, 0361, 0418, 0426, 0437, 0454, 0471, 0490, 0491, 0498, 0506, 0514, 0516, 0531.	211424 Pulley—V-Belt 68428 Belt—Vee Used on Type No. 0221.		
32	93450	Screw—Connecting Rod Used after Code No. 6503231. Note: 91162 Screw—Connecting Rod Used before Code No. 6503241.	45	260642	Tappet—Valve	57	294303	Spring—Rewind Starter Note: 221014 Anchor—Spring To Starter Housing Used on Type No. 0221.
33	211119	Valve—Exhaust Note: 260860 Valve—Exhaust Used on Type Nos. 0038, 0124, 0248, 0256, 0258, 0266, 0267, 0276, 0302, 0315, 0337, 0345, 0346, 0361, 0418, 0426, 0437, 0454, 0471, 0490, 0491, 0498, 0506, 0514, 0516, 0531, 0593.	46	211117	Gear—Cam Note: 211284 Gear—Cam Used on Type Nos. 0070, 0117, 0126, 0143, 0154, 0177, 0216, 0235, 0245, 0364, 0366, 0368, 0408, 0444, 0485, 0507, 0521, 0536, 0540, 0544, 401092.	58	66694	Rope—Rewind Starter—47-1/8" long Used after Code No. 6507211. Note: 395022 Rope—Rewind Starter—47-1/8" long Used before Code No. 6507221. If longer rope is needed order No. 66684 (used after Code No. 6507211) or No. 66514 (used before Code No. 6507221) and cut to required length.
34	261044	Valve—Intake Used after Code No. 6911261. Note: 260961 Valve—Intake Used before Code No. 6912011.	52	* 27355	Gasket—Carburetor Mounting (2)	59	230228	Pin—Starter Grip
35	260552	Spring—Intake Valve	56	280117	Pulley—Rewind Starter Used after Code No. 6507211. Note: 294088 Pulley—Rewind Starter Used before Code No. 6507221. 295871 Pulley—Rewind Starter	60	393152	Grip—Starter Rope
36	26478	Spring—Exhaust Valve Note: 26826 Spring—Exhaust Valve Used on Type Nos. 0038, 0124, 0248, 0256, 0258, 0266, 0267, 0276, 0302, 0315, 0337, 0345, 0346, 0361, 0418, 0426, 0437, 0454, 0471, 0490, 0491, 0498, 0506, 0514, 0516, 0531.				61	68618	Bumper—Starter Pulley (Used only with Steel Pulley) Note: 68848 Bumper—Starter Pulley Uses: 93254 Screw—Mtg. Used on Type No. 0221.
37	222443	Guard—Flywheel				66	298310	Clutch Assembly—Rewind Starter Used after Code No. 6405220.

*Included in Gasket Set—
Part No. 297615.

100200 to 100299

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		Note: 298798 Clutch Assy.—Rewind Starter Uses: 212132 Housing—Starter Clutch 298799 Ratchet—Rewind Starter and 66718 Washer—Thrust Used before Code No. 6405250 and on Type Nos. 0170, 0180, 0221, 0224, 0281, 0285, 0287, 0316, 0319, 0328, 0347, 0355, 0356, 0358, 0368, 0373, 0377, 0379, 0386, 0387, 0403, 0407, 0425, 0433, 0434, 0435, 0452, 0528, 0540, 0558, 0560, 0589.			For Other Specials See Ref. 66	82A	92279	Screw—Cap, Hex. Hd.—5/16-24 x 1-1/2"
67	212131	Housing—Starter Clutch Used after Code No. 6405220.	71	221653	Washer—Clutch Ret. Used after Code No. 6405220.	83	211293	Shaft & Gear—Drive Note: 211338 Shaft & Gear—Drive Used on Type Nos. 0156, 0170, 0356, 0379, 0452, 401111, 401114, 401115.
		Note: 210400 Housing—Starter Clutch Used before Code No. 6405250. For Special See Ref. 66			Note: 221301 Washer—Clutch Retainer Used before Code No. 6405250.			211663 Shaft & Gear—Drive Used on Type No. 0319.
68	63770	Ball—Clutch	72	26032	Spring—Clutch Retainer			211918 Shaft & Gear—Drive Used on Type No. 0435.
70	298436	Ratchet—Rewind Starter Used after Code No. 6405220.	73	221661	Screen—Starter Pulley Used after Code No. 6405220.	84	92617	Plug—Breather
		Note: 296597 Ratchet—Rewind Starter Used before Code No. 6405250. 298799 Ratchet—Rewind Starter Uses: 66718 Washer, Thrust, Ratchet 230813 Adapter—Ratchet Spring 260414 Spring—Ratchet Between Ratchet No. 298799 and Starter Hsg. on Type Nos. 0021, 0589.			Note: 220648 Screen—Starter Pulley Used before Code No. 6405250. 221748 Screen—Starter Pulley Used on Type No. 0221.	85	92747	Screw—Gear Case Mounting Sem
			74	93490	Screw—Rotating Screen Mounting Sem	86	291730	Cover Assembly—Gear Case
			75	220865	Washer—Spring	87	19011	Seal—Oil
			76	68238	Washer—Ratchet Sealing	88	27313	Gasket—Gear Case Cover
					Note: 270045 Washer—Ratchet Sealing Used with Single Tooth Ratchet on Type Nos. 0125, 0134, 0143, 0151, 0152, 0153, 0156, 0159, 0161, 0170, 0171, 0174, 0180, 0181, 401034, 401049, 401050, 401056, 401057, 401059, 401062, 401064, 401068, 401069, 401070, 401075, 401077, 401110, 401111, 401114, 401115, 401116, 401117, 401118.	89	93448	Plug—Oil Drain
			79	290779	Case Assembly—Gear	90	297599	Carburetor Assembly Note: 297680 Carburetor Assembly Used on Type Nos. 0203, 0229, 401021, 401031, 401033, 401053.
			80	27667	Gasket—Gear Case			298547 Carburetor Assembly Used on Type Nos. 0016, 0219, 0220, 0221, 0230, 0232, 0233, 0235, 0239, 0240, 0244, 0245, 0246, 0287, 0305, 0308, 0313, 0331, 0332, 0334, 0341, 0348, 0350, 0360, 0366, 0367, 0375, 0383, 0388, 0392, 0393, 0399, 0402, 0408, 0409, 0416, 0430, 0433, 0438, 0446, 0449, 0451, 0478, 0484, 0486, 0496, 0497, 0500, 0523, 0550.
			81	220234	Lock—Gear Case Mounting Screw			
			81A	222929	Lock—Muffler Screw			
			81B	222263	Lock—Muffler Screw			
			82	91541	Screw—Cap, Hex. Hd.—5/16-24 x 7/8"			

100200 to 100299

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		390390 Carburetor Assembly Used on Type Nos. 0401, 0403, 0407, 0412, 0414, 0415, 0428, 0445, 0453, 0461, 0473, 0475, 0489.			391422 Tank Assy.—Fuel Used on Type No. 0464.	202	260678	Link—Throttle
		392403 Carburetor Assembly Used on Type No. 0528.	181	392304	Cap—Fuel Tank Note: 293270 Cap—Fuel Tank Used on Type Nos. 0401, 0412, 0413, 0415, 0486.	203	393919	Crank—Bell Note: 297718 Crank—Bell (Used before Code No. 79010500.)
95	93499	Screw—Throttle Valve to Shaft Sem			297863 Cap—Fuel Tank Used on Type Nos. 0134, 0152, 0153, 0156, 0161, 0170, 0174, 0180, 0181, 0216, 0224, 0226, 0228, 0241, 0280, 0285, 0316, 0319, 0328, 0330, 0347, 0355, 0356, 0358, 0368, 0373, 0377, 0379, 0382, 0386, 0387, 0401, 0412, 0413, 0414, 0415, 0425, 0434, 0435, 0449, 0452, 0480, 0540, 0558, 0560, 0589, 401034, 401052, 401056, 401057, 401062, 401064, 401068, 401069, 401073, 401110, 401111, 401114, 401115.	204	222962	Bushing—Governor Lever (flat) For Specials See Ref. 223
96	211203	Throttle—Carburetor				205	93838	Screw—Shoulder
97	297468	Shaft and Lever—Throttle				206	230149	Nut—Control Rod Note: 394332 Gov. Control Assy. Used on Type Nos. 0308, 0430.
114	66594	Gasket—Needle Valve Nut				206A	280012	Nut—Speed Adjusting Note: 21772 Nut—Governor Adjusting Used on Type No. 0538.
116	65978	Packing—Needle Valve				207	26855	Spring—Control Rod
117	230590	Nut—Needle Valve				208	230737	Rod—Control Note: 230946 Rod—Control Used on Type Nos. 0350, 0360, 0367, 0392, 0409, 0433, 0446, 0449, 0451, 0484, 0486, 0496, 0500, 0546, 0550.
118	23433	Valve—Needle						261297 Rod—Control Used on Type No. 0483.
120	92290	Washer—Lock, No. 10 x 1/16 x 3/64"				209	260695	Spring—Governor Note: 260902 Spring—Gov. Used on Type Nos. 0480, 0512, 0549.
124	93357	Screw—Sem, Phillips Hex. Hd.	189	90366	Washer—Lock, 5/16 x 1/8 x 1/16	216	299859	Link—Choke (includes Bell Crank)
147	230591	Seat—Needle Valve	190	93440	Screw—Fuel Tank Mounting Sem	261A	391899	Rod—Choke
148	22235	Washer—Needle Valve (2)	191	* 27911	Gasket—Fuel Tank Mtg. (2)	261B	392405	Rod—Control
149	26336	Spring—Needle Valve	200	221480	Guide—Air (Used after Code No. 6308231.)	216C	231093	Link—Choke
152	260575	Spring—Throttle Adjustment	200A	221508	Guide—Air (Used before Code No. 6308261.)	217	260189	Spring—Choke Link
154	93527	Screw—Machine, Rd. Hd.—5-40 x 5/8	201	261558	Link—Governor (Used after Code No. 80060100) Note: 260661 Link—Governor (Used before Code No. 80060100)	217A	261331	Spring—Control Rod
163	270488	Gasket—Air Cleaner Mounting				218	221198	Washer—Choke Link
163A	27660	Gasket—Air Cleaner Mounting				219	391737	Gear—Governor Used after Code No. 75061907. Note: 297656 Gear—Gov. Used before Code No. 75062007.
163B	271139	Gasket—Air Cleaner Mounting				220	221551	Washer—Thrust
165	93856	Wing Nut						
166	231176	Stud—Air Cleaner						
172	271077	Spacer—Air Cleaner						
180	297600	Tank Assembly—Fuel Note: 390160 Tank Assy.—Fuel Used on Type Nos. 0401, 0403, 0407, 0412, 0414, 0415, 0428, 0445, 0453, 0461, 0473, 0475, 0489.						

*Included in Gasket Set—
Part No. 297615.

100200 to 100299

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
223	221517	Lever—Gov. Control	227	393920	Lever Assy.—Governor			230944 Guide—Control Rod
	Note: 23688	Bushing—Gov. Lever		Note: 297601	Lever Assy.—Governor			Used in 221384 Strap on Type Nos. 0015, 0035, 0036, 0037, 0049, 0070, 0308, 0389, 0391, 0430, 0468, 0488, 0513, 0542, 0552.
		(with 3/8" dia. Flange)			(For 3/16" dia. Gov. Crank)			390341 Strap—Control Rod
		Used before Code No. 6608031 except on type numbers listed under No. 230943 and 93440 which used 23688	229	220680	Washer—Gov. Lever			Used on Type Nos. 0132, 0140, 0148, 0155, 0178, 0179, 0193, 0194, 0195, 0214, 0242, 0251, 0252, 0261, 0267, 0279, 0299, 0307, 0317, 0325, 0335, 0337, 0346, 0353, 0365, 0381, 0382, 0384, 0458, 0493, 0508, 0520, 0572.
		Bushing, 90597 Screw and 260847 Spring until Code No. 6708011.	230	222450	Washer—Gov. Lever (1/4" inside dia.)			Locknut—Muffler
	Uses:	93067 Screw—Sem		Note: 221559	Washer—Gov. Lever	298	261409	Muffler—Exhaust (Round Lo-Tone)
	Or:	90597 Screw—Machine, Fil. Hd.—10-32 x 1/2" with 260847 Spring—Friction			(3/16" inside dia.)	299	393368	Muffler—Exhaust (Round Lo-Tone)
		230943 Bushing—Gov. Lever	231	93064	Screw—Sem		Note: 393010	Muffler—Exhaust
		(with 1/2" dia. Flange)	232	260478	Spring—Governor Link			Uses 91464 Exhaust Elbow—90° Street
	Uses:	93440 Screw	256	299859	Crank—Bell (includes Bell Crank Link)			Used on Type Nos. 0363, 0459, 0542.
		93569 Washer—Spring	256A	222582	Lever—Choke			Muffler—Exhaust (Lo-Tone)
		Used after Code No. 6707311 on Type Nos. 0132, 0140, 0148, 0155, 0178, 0179, 0193, 0194, 0195, 0214, 0242, 0251, 0252, 0261, 0267, 0279, 0299, 0307, 0316, 0317, 0325, 0328, 0335, 0337, 0346, 0353, 0365, 0381, 0382, 0384, 0386, 0387, 0434, 0452, 0458, 0480, 0493, 0508, 0520, 0540, 0560, 0572, 0591.	257	93543	Screw—Fil. Hd. Sem	300	393593	Muffler—Exhaust (Lo-Tone)
			257A	90746	Screw—Fil. Hd. Sem			(Includes 270918 Gasket)
			265	221535	Clamp—Casing	300A	391313	Muffler—Exhaust
			265A	222629	Bracket—Cable Clamp		Note: 391232	Guard—Muffler
			267	93496	Screw—Sem		Uses:	93415 Screw (Guard and Retainer Mtg.)
			267A	93543	Screw—Sem			93606 Screw (Guard to Muffler Mtg.)
			268	66986	Casing—Control Wire—48" long			222379 Retainer—Muffler
				Note:	If longer casing is needed, specify length in inches; if a shorter casing is needed order No. 66986 and cut to required length.			Used on Type Nos. 0503, 0553.
			269	26099	Wire—Control 54" long	300B	297274	Muffler—Exhaust (Side Outlet)
				Note:	If longer wire is needed, specify length in inches; if shorter wire is needed order No. 26099 and cut to required length.		Note: 222291	Guard—Muffler (Mounted to Cylinder Head)
			270	63426	Locknut—Control Wire Casing			Used on Type Nos. 0350, 0378, 0496.
			271	290568	Lever Assy.—Control			
			280	221384	Strap—Control Rod			
				Note: 394332	Gov. Control Assy.			
					Used in 221384 Strap on Type Nos. 0308, 0430.			
224	93491	Rivet (Used with Flat Bushing 230844 after Code No. 6608021) For Specials See Ref. 223						

100200 to 100299

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION		
	89953	Muffler— Exhaust Used on Type Nos. 0229, 0314, 0352, 0440.			0458, 0460, 0474, 0476, 0478, 0521, 401020, 401022, 401023, 401027, 401030, 401036, 401038, 401044, 401045, 401053, 401057, 401066, 401067, 401081, 401082, 401084, 401090, 401096, 401099, 401100, 401101, 401102, 401103, 401112, 401117, 401118.			297855 Housing— Blower (For Rewind Starter) Used on Type Nos. 0137, 0141, 0155, 0157, 0158, 0159, 0168, 0175, 0191, 0229, 0231, 0236, 0237, 0240, 0242, 0247, 0269, 0281, 0288, 0305, 0310, 0317, 0345, 0346, 0374, 0375, 0390, 0395, 0402, 0412, 0413, 0414, 0415, 0420, 0424, 0437, 0453, 0473, 0475, 0480, 401045, 401048, 401051, 401053, 401058, 401068, 401079, 401087, 401093, 401116.		
	294599	Muffler— Exhaust Used on Type Nos. 0151, 0159, 0164, 0169, 0211, 0219, 0247, 0249, 0251, 0252, 0254, 0274, 0275, 0281, 0287, 0292, 0300, 0303, 0315, 0324, 0325, 0331, 0333, 0334, 0348, 0360, 0367, 0376, 0380, 0395, 0396, 0403, 0405, 0406, 0407, 0409, 0443, 0445, 0455, 401047, 401048, 401051, 401052, 401059, 401062, 401074, 401075, 401097, 401116.			390578 Muffler— Exhaust Used on Type No. 0433.			298572 Housing— Blower (For Rewind Starter) Uses: 297663 Hsg.—Starter 222060 Spacer—Starter Housing (4) 230581 Nut—Starter Mounting (4) 93414 Bolt—Starter Mounting (4) 92290 Washer—Lock (4) Used on Type No. 0221.		
	297506	Muffler— Exhaust (Direct Outlet) Used on Type Nos. 0035, 0037, 0038, 0126, 0134, 0135, 0136, 0139, 0141, 0142, 0143, 0144, 0145, 0154, 0162, 0174, 0182, 0189, 0195, 0196, 0198, 0201, 0205, 0207, 0210, 0217, 0222, 0225, 0226, 0227, 0228, 0232, 0235, 0237, 0245, 0248, 0256, 0258, 0259, 0266, 0269, 0296, 0302, 0304, 0317, 0322, 0329, 0332, 0345, 0347, 0361, 0362, 0365, 0366, 0370, 0372, 0401, 0404, 0408, 0412, 0414, 0415, 0423, 0425, 0431, 0434, 0438, 0444, 0447,	300C	393010	Muffler—Exhaust (Round Lo-Tone)				298636 Housing— Blower Used on Type Nos. 0219, 0226, 0308, 0326, 0349, 0383, 0409, 0410, 0430, 0438, 0451, 0467.	
			303	91464	Elbow—Exhaust 90 Degree, Street Note: 91219 Elbow—Exhaust 45 Degree, Street Used on Type Nos. 0300, 0331, 0363, 0382, 0405, 0409, 0443, 0455.			305	93158	Screw—Blower Housing Mounting
			304		Housing—Blower Note: For Type Numbers not listed below, see Ref. No. 608. 297260 Housing— Blower (For Rope Starter) Used on Type Nos. 0110, 0253, 0255, 0256, 0264, 0265, 0268, 0272, 0289, 0290, 0293, 0294, 0297, 0307, 0320, 0321, 0336, 0348, 0376, 0398, 0411, 0421, 0431, 0455, 0458, 0459, 0465, 0479, 0584, 401033.			306	221511	Shield—Cylinder Note: 222583 Shield—Cyl. Used on Type No. 0528.
								307	93042	Screw—Cylinder Shield Mounting Sem
								308	221512	Cover—Cylinder Head

100200 to 100299

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	
325	298731	Starter Pulley with Screen	346	93705	Screw—Hex. Head	409	299837	Lever-Trol—Speed Control	
330	395022	Rope—Starter (47")	347	220884	Switch—Stop (For 1-1/2" High—37 - 42 M.M. Spark Plug)	414	220982	Washer	
330A	69932	Rope—Starter (55")	Note:	221808	Switch—Stop (For 2" High—51 M.M. Spark Plug)	432	221377	Cap—Spring	
331	220865	Washer—Flywheel			298927	Switch—Stop (For 2" High Spark Plug)	432A	221766	Cap—Choke Spring
332	92284	Nut—Flywheel			Used on Type Nos. 0361, 0362.	433	93265	Pin—Diaphragm Cover	
333	298316	Armature—Magnet (Used after Code No. 6308231.)			390785	Switch—Stop Used on Type Nos. 0361, 0362, 0369, 0370, 0373, 0401, 0422, 0480, 0532, 0537, 0582.	434	210959	Cover—Diaphragm
333A	297594	Armature—Magnet (Used before Code No. 6308261.)			353	92791	Washer—Lock (2)	435	93141
335	93414	Screw—Armature Mtg.	354	90576	Nut—Terminal	445	392308	Cartridge—Air Cleaner	
336	297250	Cable—Ignition (Used before Code No. 6208220. Cables used after this Code Number are integral with the Ignition Coil.)	356	299500	Wire—Ground Note: 391115 Wire—Ground Used on Type Nos. 0436, 0445, 0457, 0461, 0490, 0526, 0531, 0532, 0539, 0548, 0551, 0558, 0563, 0582, 0588. 392074 Wire—Ground Used on Type No. 0510, 0552, 0589.	446	222844	Base—Air Cleaner	
337	298809	Plug—Spark (with Gasket) 1-1/2" High—37-42 M.M. Note: 29693 Plug—Spark (with Gasket) 2" High—51 M.M. 293918 Plug—Spark (with Gasket) (Resistor Type 1-1/2") 392588 Plug—Spark (with Gasket) (Resistor Type 2" High)	357	91539	Key	447	93913	Screw—Cover Mtg.	
340	26018	Spring—Breaker Arm	358	297615	Gasket Set	454	296178	Housing—Fuel Pipe Screen (for 3/16" O.D. Pipe)	
341	93381	Screw—Breaker Arm Mounting Sem	362	291630	Shield—Spark Plug (with Stop Switch) Note: 89742 Shield—Spark Plug Used on Type No. 0548.	467	391908	Knob—Choke Rod	
342	65704	Plunger—Breaker Point	372	220477	Clamp—Condenser	467A	212293	Knob—Air Cleaner	
344	93042	Screw—Condenser Clamp Mounting Sem	375	294628	Breaker Points and Condenser Set Note: 299061 Ignition Kit Includes: 294628 Point Set 65704 Plunger 61760 Key—Flywheel	473	93475	Screw—Sem	
345	220366	Cover—Breaker Point and Condenser Note: 222168 Cover—Breaker Point and Condenser Used on Type Nos. 0180, 0316, 0319, 0328, 0347, 0355, 0356, 0358, 0368, 0377, 0379, 0386, 0387, 0397, 0425, 0434, 0435, 0452, 0528, 0540, 0558, 0560, 0589.	383	89838	Wrench—Spark Plug	506	90200	Screw—Machine, Fil. Hd.—8-32 x 1/2"	
			392	260455	Spring—Fuel Pump Diaphragm	507	66895	Insulator	
			392A	260847	Spring—Choke Friction	516	260374	Spring—Connector	
			394	270026	Diaphragm	520	93722	Terminal—Spade	
						521	298529	Shielding—Ignition Cable	
						523	297357	Cap—Oil Filler Note: 295923 Cap Assy.—Oil Filler Uses: 230553 Nipple—Oil Filler (5-1/4" Lg.)	
						524	65304	Gasket Oil Filler Cap	
						525	91258	Nipple—Oil Filler (2-1/2" Lg.) Note: (All Nipples Listed Use 394884 Adaptor—Oil Filler) 230553 Nipple—Oil Filler (5-1/4" Lg.)	
						526	93343	Screw—Tank Bracket Mounting Sem	
						527	221514	Clamp—Breather Tube	
						528	230722	Tube—Breather	
						529	67838	Grommet—Breather Tube	
						533	230149	Knob—Control Rod Uses: 93384 Nut	

100200 to 100299

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
534	93322	Screw—Air Cleaner		280015	Cup—Air Cleaner		299420	Starter and Shield Assy.—Rewind (Sno-Gard 10 o'clock position)
	Note:	93374 Screw—Air Cleaner			Used on Type Nos. 0255, 0388, 0418.			Used on Type Nos. 0316, 0319, 0328, 0347, 0355, 0356, 0358, 0368, 0376, 0377, 0379, 0386, 0387, 0425, 0434, 0435, 0452, 0540, 0558, 0560, 0589.
		Used on Type Nos. 0228, 401057.	538	390756	Rod—Control			
	230741	Stud—Air Cleaner	538A	299545	Rod—Control			
	92067	Nut—Wing	539	221372	Clip—Control Rod			
		Used on Type Nos. 0255, 0388, 0418, 0441, 0462, 0538, 0566.	539A	93784	Clamp—Choke Rod			
534A	93825	Screw—Air Cleaner	541	22398	Washer			
535	27987	Element—Air Cleaner	542	92265	Screw			
	Note:	270067 Element—Air Cleaner	549	271118	Washer—Air Cleaner			
		Used on Type Nos. 0228, 401057.	549A	270978	Washer (Below Internal Screw Head)			
	270209	Element—Air Cleaner	552	231079	Bushing—Governor Shaft			
		Used on Type Nos. 0255, 0388, 0418.			(1/4" inside dia.)			
	390492	Element—Air Cleaner		Note:	230732 Bushing—Gov. Shaft	609	260694	Spring—Throttle Link
	Uses:				(3/16" inside dia.)	611	391813	Fuel Pipe and Clip Assembly
	390588	Cover—Air Cleaner			Used before Code No. 75062007.	612	296811	Pipe—Fuel
	221969	Support—Air Cleaner	562	92613	Bolt—Governor Lever	613	93549	Screw—Muffler Mtg.
	270730	Gasket—Air Cleaner	578	392750	Wire—Starter Switch	613A	93704	Screw—Muffler Mtg.
		Used on Type Nos. 0441, 0462, 0538, 0566.	592	231082	Nut—Hex.—10-24	613B	93377	Screw—Muffler Mtg.
535A	270979	Element—Air Cleaner	608	297372	Starter Assy.—Rewind (10 o'clock position)	614	93306	Cotter—Hair Pin
536	297036	Cleaner Assembly—Air		Note:	297543 Starter Assy.—Rewind (3 o'clock)	615	93307	Retainer—E-Ring
	Note:	297778 Cover—Carburetor Intake			Used on Type Nos. 0160, 0165, 0203, 0273, 0525, 401021, 401031, 401046, 401108.	616	231077	Crank—Governor (1/4" dia. Shaft)
		Used on Type Nos. 0171, 401049, 401050, 401070.			297854 Starter Assy.—Rewind (12 o'clock)			Used after Code No. 75061907.
	297595	Cleaner Assembly—Air			Used on Type Nos. 0547, 0548, 0565, 0593.		Note:	230723 Crank—Gov. (3/16" dia. Shaft)
		Used on Type Nos. 0228, 401057.			298573 Starter Assy.—Rewind (Cast Hsg.)			Used before Code No. 75062007.
	299593	Cleaner Assembly—Air			Used on Type No. 0221.	621	297472	Switch—Stop
	Uses:					624	390383	Crank—Bell (includes Bell Crank Link)
	221634	Cover—Air Cleaner					Note:	222476 Crank—Bell
	221969	Support—Air Cleaner						Used on Type No. 0483.
						626	230749	Spacer—Gov. Crank
						629	261094	Spring—Throttle Return
						630	222597	Lever—Adapter
						631	230862	Bushing
						634	270167	Washer, Throttle Shaft (Felt)
						635	66538	Elbow—Spark Plug
						642	222626	Cover—Air Cleaner
						643	222991	Cup—Air Cleaner
						643A	222845	Cup—Air Cleaner
						643B	222594	Cup—Air Cleaner

100200 to 100299

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
645	23513	Bushing—Plunger	725	221885	Shield—Heat	851	221798	Terminal—Ignition Cable
665	298858	Oil Minder	729	93708	Clip—Wire (Used to retain Ground Wire Lead to Cyl. Rib)	852	392368	Cleaner Assy.—Air Note: For Dual Element Air Cleaner Kit Order No. 393018.
676	221488	Deflector—Exhaust (side outlet)	731	299419	Hood—Snow Note: 392756 Hood—Snow (Key Style) Used on Type No. 0540.	854	392884	Bracket Assy.—Stop Switch
676A	221527	Deflector—Exhaust (direct outlet) Note: 393759 Deflector—Exhaust (Direct Outlet) Used on Type No. 0139.	733	93518	Screw—Hood	869	211787	Seat—Intake Valve (Standard)
676B	393757	Deflector—Exhaust	779	390383	Link—Bell Crank (includes Bell Crank)	870	211172	Seat—Exhaust Valve (Standard)
681	299060	Needle Valve Kit	780	222101	Anchor—Spring	871	63709	Guide—Exhaust Valve
682	211516	Shield—Clutch						