

80200 to 80299
81200 to 81299

Illustrated Parts List

Model Series

80200 to 80299

TYPE NUMBERS
0010 through 0942
1000 through 1140
2035 through 2049
9010 through 9911
9934 through 9958
948000 through 948230
951000 through 951047

81200 to 81299

TYPE NUMBERS
0010 through 0202
9010 through 9197
948500 through 948669
951500 through 951545

TO FIND

THE CORRECT NUMBER OF THE PART YOU NEED:

FOLLOW THE INSTRUCTIONS BELOW

- A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 012301 are listed herein only as 0123. The two digits (01 or 02, etc.) to the right of the space are not needed for parts identification. Then use the Illustrated Parts List covering the Model Series.
- B. Refer to Illustrated Parts section and compare the old part with illustration. The number on the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames on which individual reference numbers are given can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical Parts List, where Reference and Master Part Number are listed. **THE MASTER PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE".**
- D. If a "Note" appears below the Master Part Number, this means that this part differs from the Master Part for certain types. If the Type number is listed under "Note", order the part referred to.
- E. If the Engine Type Number does not appear after any part number listed under "Note", use the Master Part Number.
- F. For Type Numbers higher than those covered by this book, please refer to the factory if you are unable to identify the part by comparison.

 
PRINTED IN U.S.A.

COPYRIGHT®




K&T Saw Shop 606-578-9623 or 606-561-4983

80200 to 80299 81200 to 81299

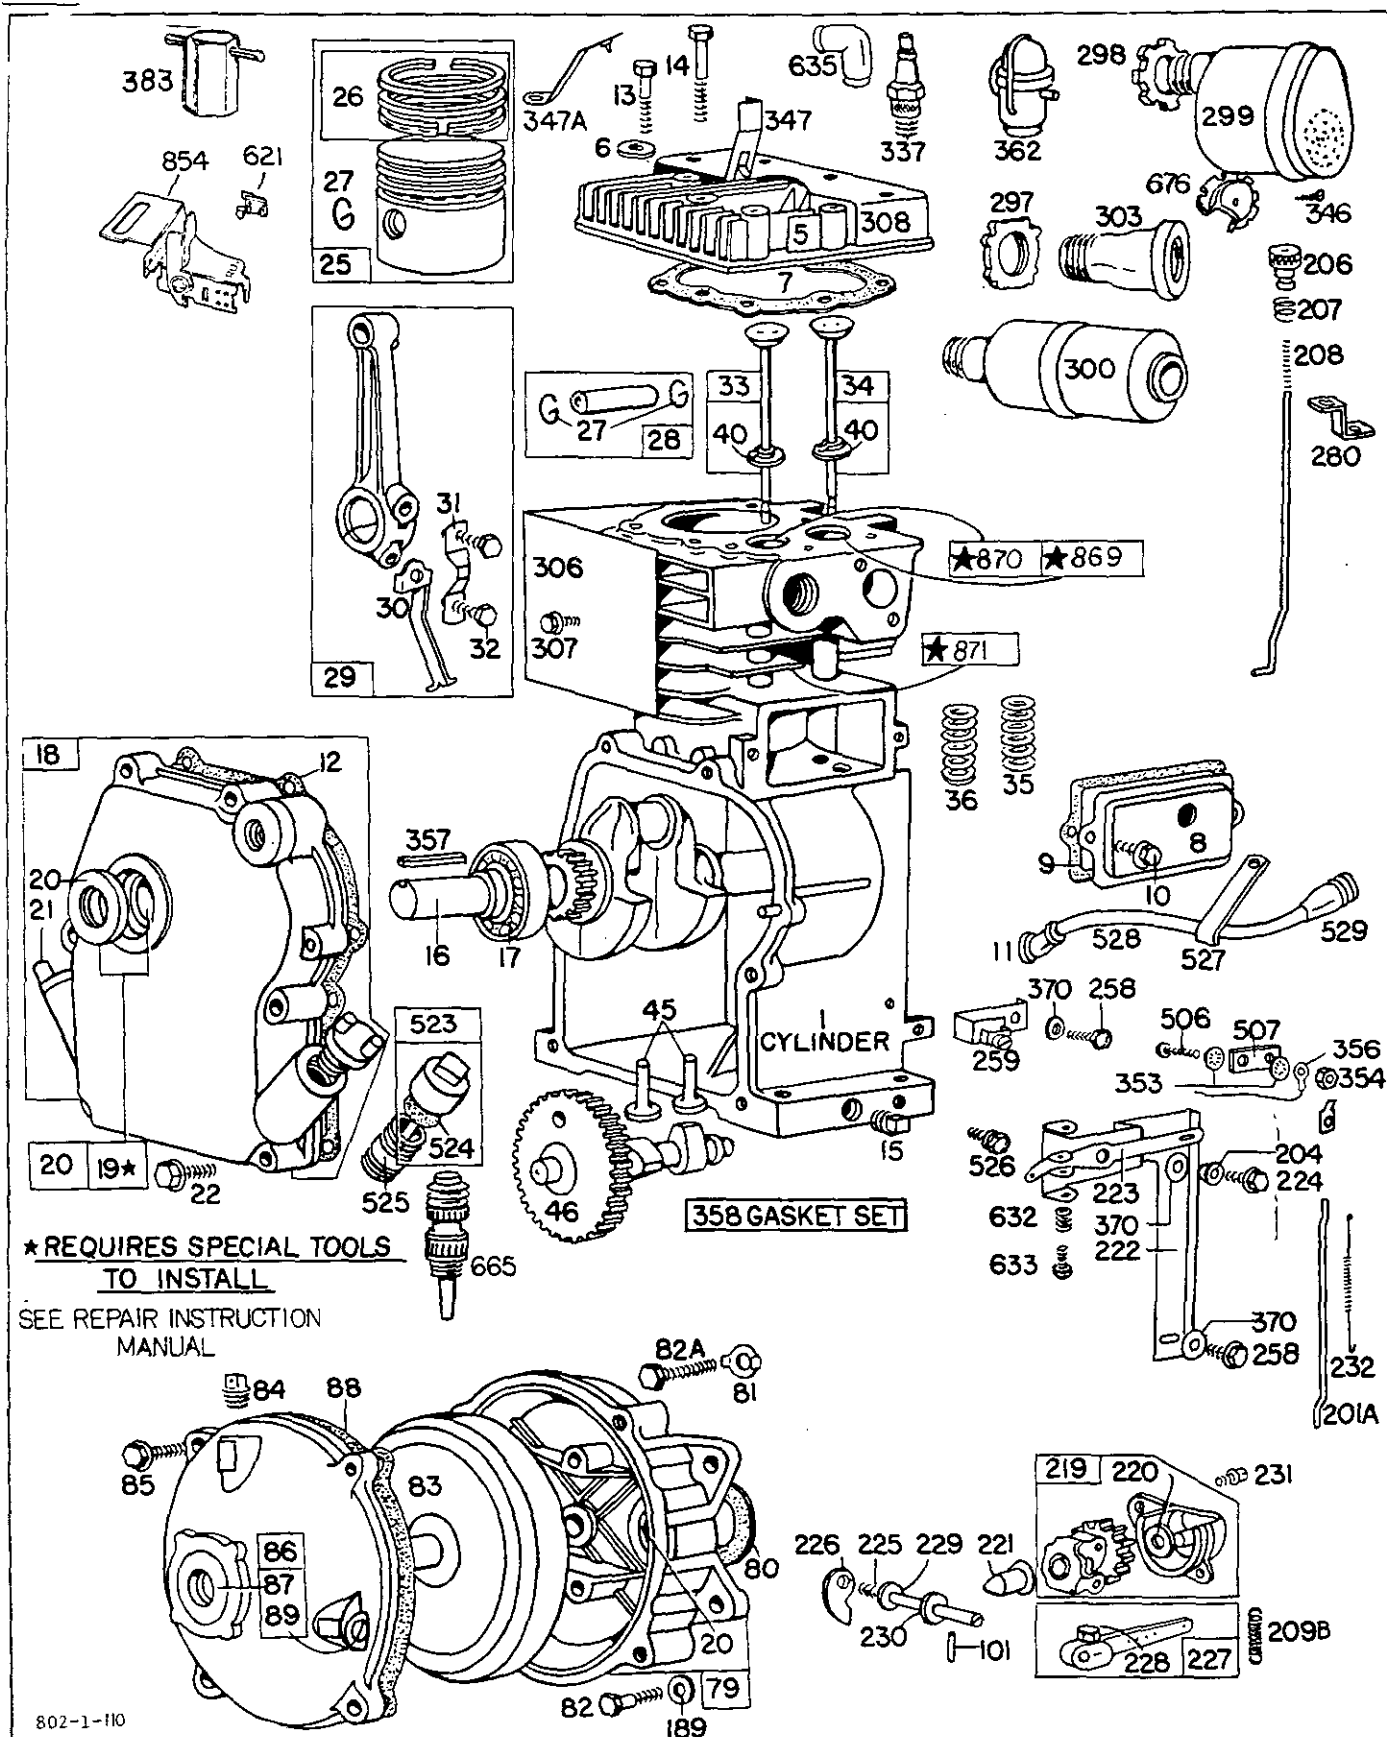


 Assemblies include all parts shown in frames.




80200 to 80299 81200 to 81299

 CARBURETOR WITH MULTI-PURPOSE SPEED ADJUSTER LEVER

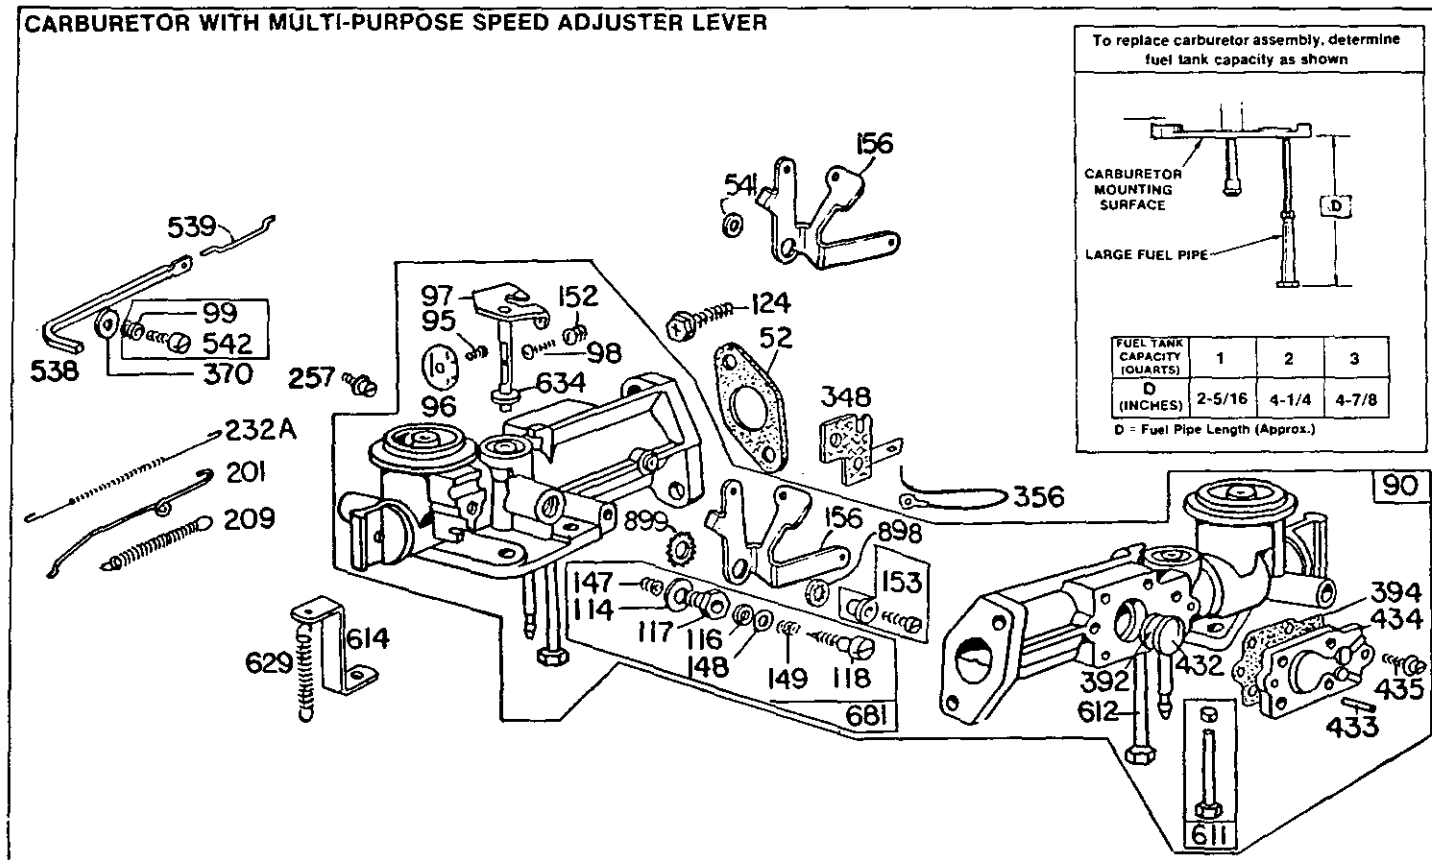

GENERAL NOTE: WHEN ORIGINAL CARBURETOR DOES NOT MATCH THE ABOVE ILLUSTRATION (REF. 90), ORDER PARTS FROM LOWER ILLUSTRATION (REF. 90A).

 
CARBURETOR WITH INDIVIDUAL LEVER SELECTIONS

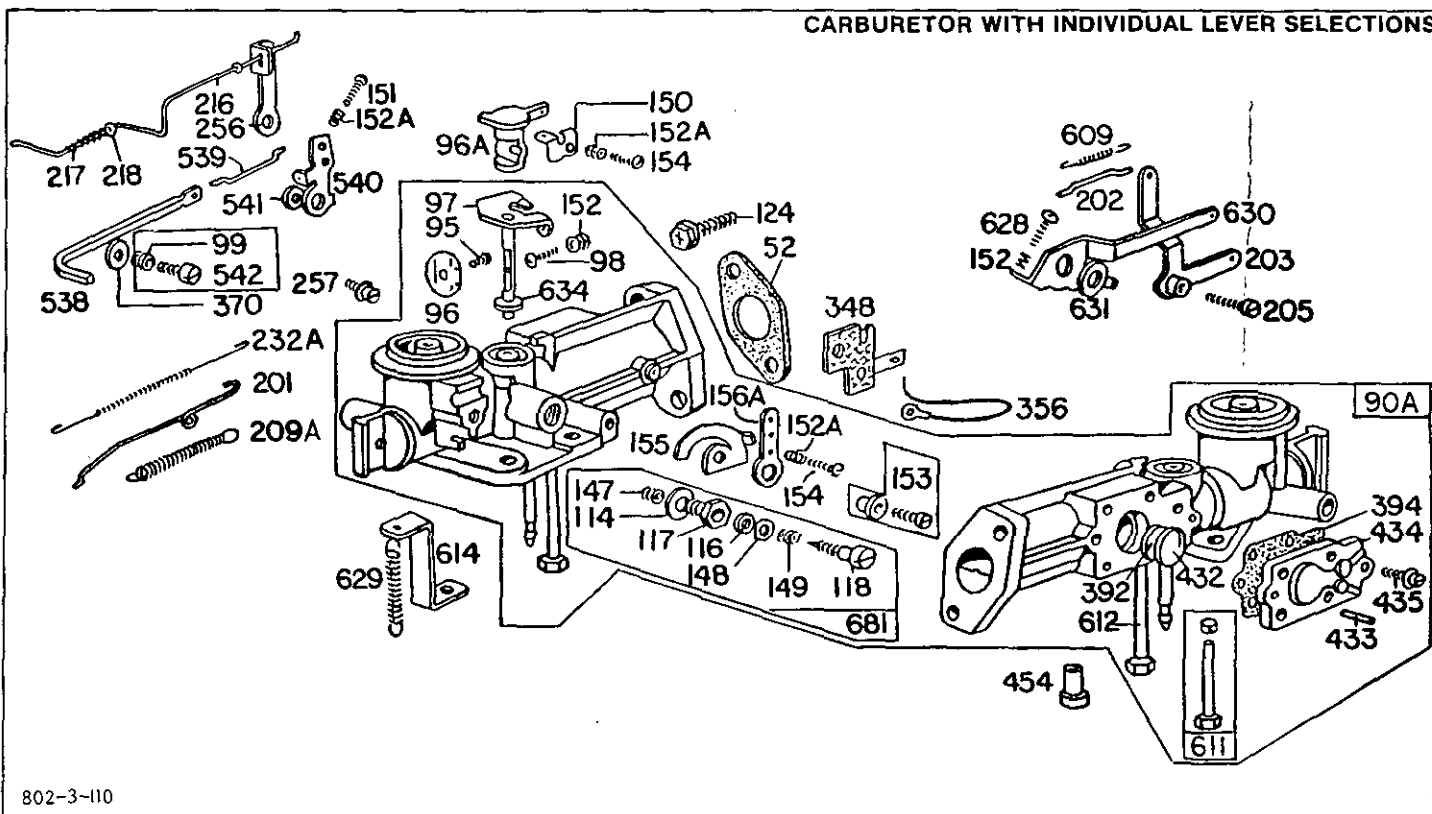

802-3-110

Assemblies include all parts shown in frames.

 
80200 to 80299
81200 to 81299

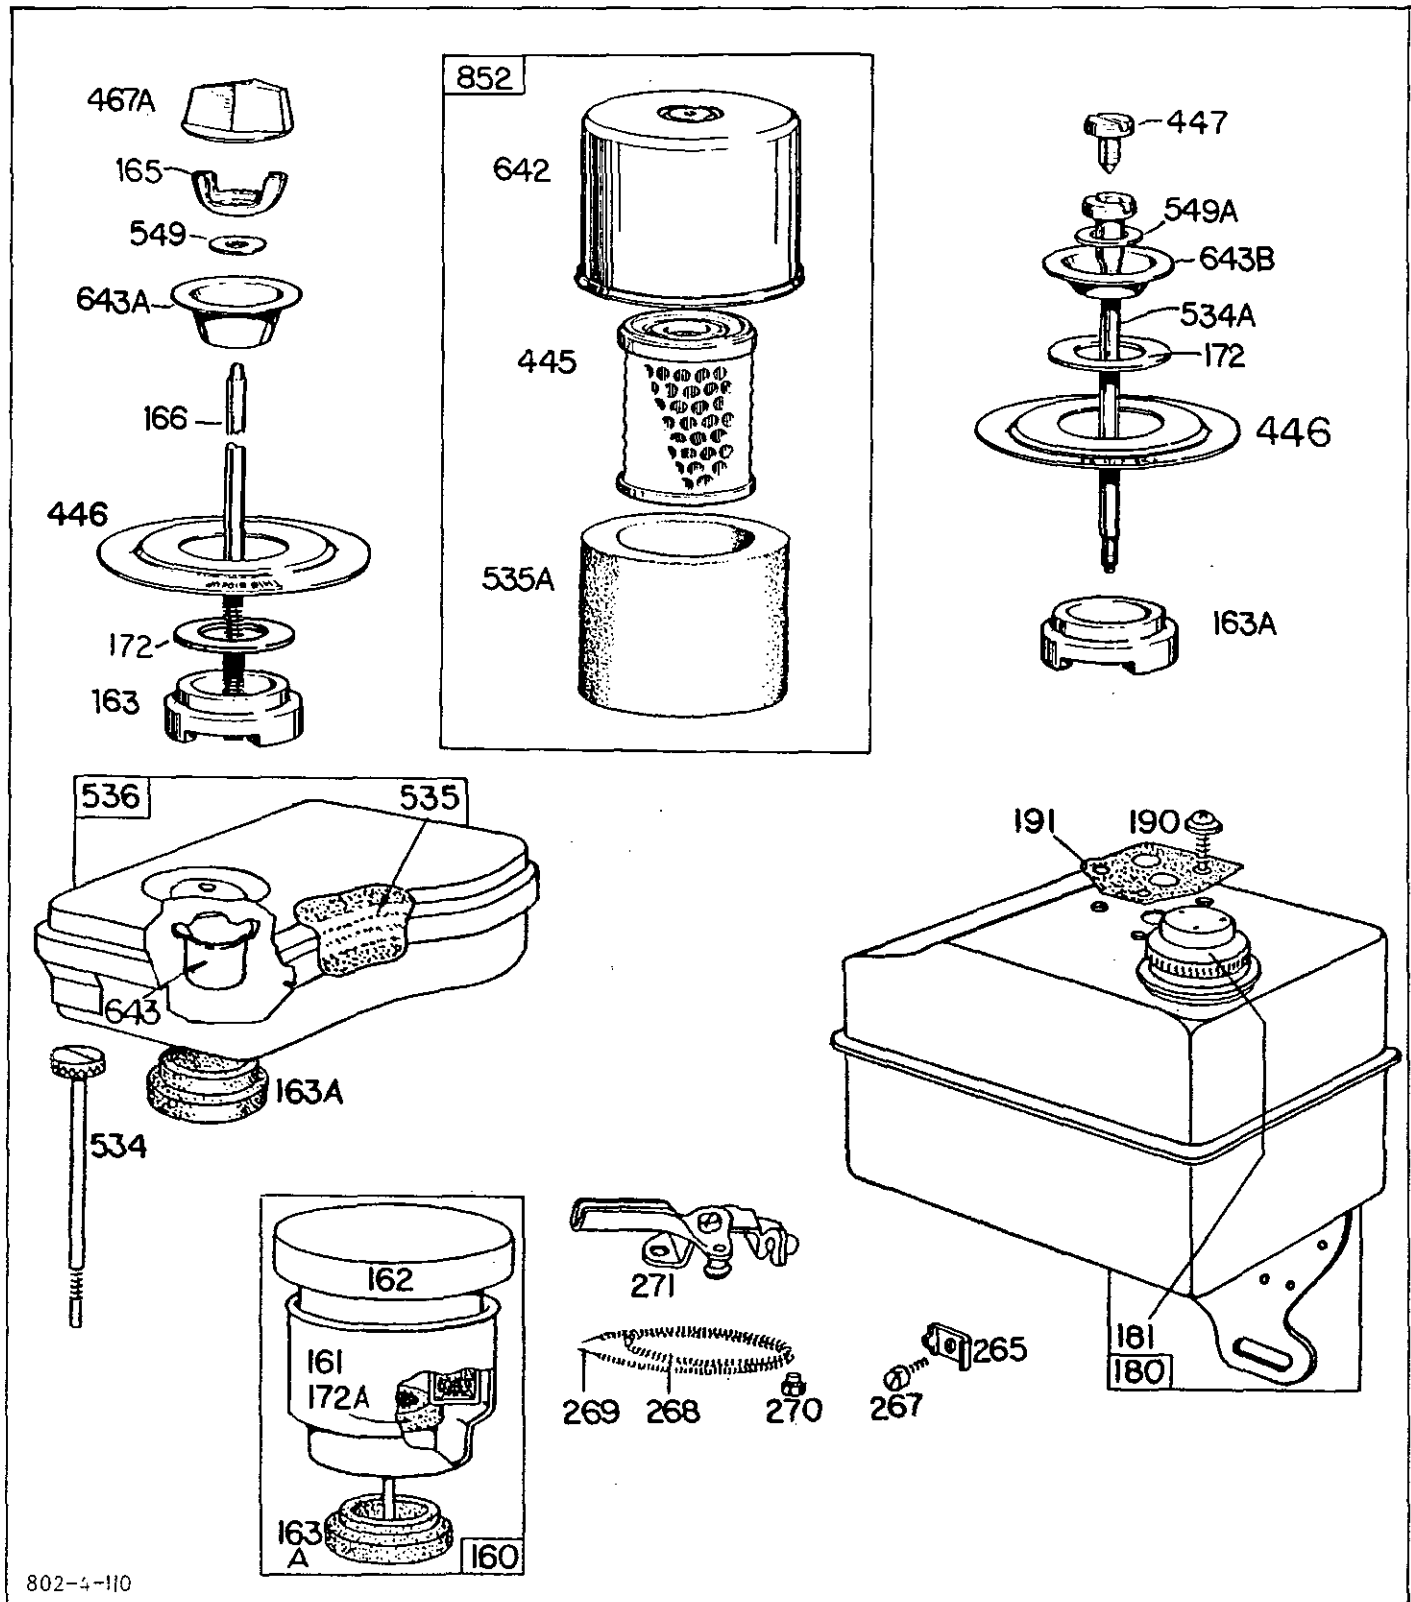

Assemblies include all parts shown in frames.

80200 to 80299

 81200 to 81299

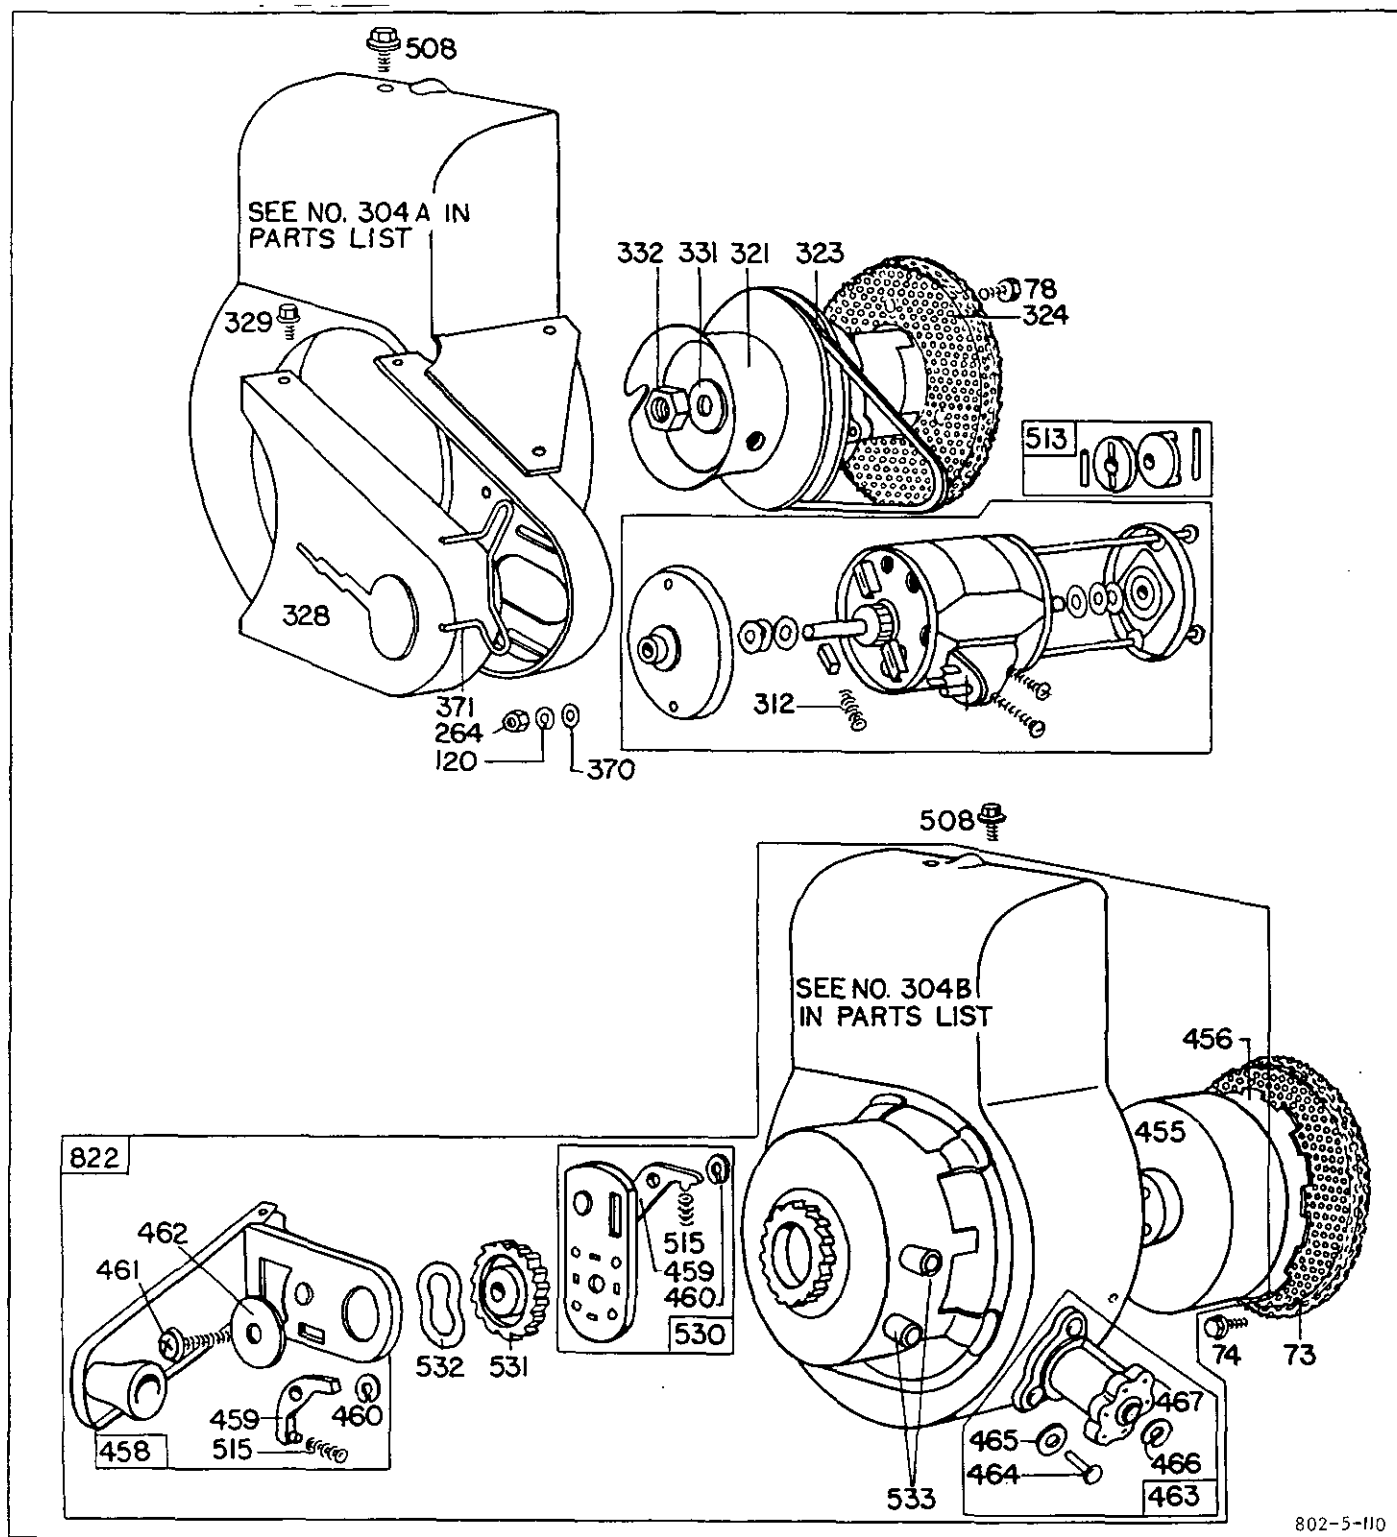

Assemblies include all parts shown in frames.

80200 to 80299

81200 to 81299

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	296561	Cylinder Assembly Used on <i>Model 80200</i> Series	15	91249	Plug—Pipe, 1/4" Std., Square Head			948533, 948534, 948592, 948593, 948609, 948626, 951515, 951516, 951517, 951518.
	296610	Cylinder Assembly Used on <i>Model 81200</i> Series		Note: 93448	Plug—Oil Drain (Hex. Socket Head) Used on <i>Model 80200</i> Series Type Nos. 948050, 948055, 948060.			260113 Crankshaft Used on <i>Model 80200</i> Series Type Nos. 1036, 9044, 9217, 9251, 9309, 9324, 9383, 9397, 9409, 9414, 9415, 9418, 9439, 9450, 9452, 9538, 9571, 9575, 9609, 9620, 9622, 9623, 9628, 9631, 9642, 9654, 9673, 9700, 9711, 9715, 9724, 9743, 9746, 9755, 9768, 9770, 9804, 9828, 9830, 9852, 9859, 9884, 9886, 9893, 9940, 9945, 9947, 9948, 9950, 9953, 9955, 9957, 951025, 951026, also used on <i>Model 81200</i> Series Type Nos. 951525, 951526.
2	293708	Bushing—Cylinder			Also on Type Nos. 0547, 0587, 0589, 0591, 0649, 0762, 0763, 0781, 1796, 0797, 0799, 0803, 0815, 0820, 0838, 0849, 0855, 0870, 0872, 0903, 0904, 0907, 0924, 0931, 0933, 1008, 1028, 1044, 1055, 1058, 1063, 1067, 1070, 1071, 1088, 1107, 1129.			260121 Crankshaft Used on <i>Model 80200</i> Series Type Nos. 0173, 9354, 948090, 948121; also used on <i>Model 81200</i> Series Type Nos. 0159, 948633, 948653, 948654, 948669.
	Note:	Requires special tools for installation.						260182 Crankshaft Used on <i>Model 80200</i> Series Type Nos. 0036, 0164, 0168, 0196, 0208, 0216, 0225, 0227, 0261, 0267, 0277, 0283, 0295, 0304, 0306, 0322, 0351, 0359, 0382, 0386, 0390, 0391, 0436, 0442, 0448, 0457, 0460, 0467, 0473, 0483,
3	299819	Seal—Oil						
5	210812	Head—Cylinder						
6	22963	Washer						
7	*27670	Gasket—Cylinder Head						
8	294178	Breather—Valve Chamber						
9	*27549	Gasket—Valve Cover						
10	93394	Screw—Valve Cover Mounting Sem						
11	66578	Grommet—Breather Tube						
12	*270833	Gasket—Crankcase—.015" thick (Standard)	16	260257	Crankshaft			
	270895	Gasket—Crankcase—.005" thick			260109 Crankshaft Used on <i>Model 80200</i> Series Type Nos. 0299, 9191, 9305, 9325, 951045.			
	*270896	Gasket—Crankcase—.009" thick			260110 Crankshaft Used on <i>Model 80200</i> Series Type Nos. 0038, 0120, 0121, 0200, 0203, 0221, 0222, 0274, 0346, 0453, 0494, 0640, 0664, 0703, 0706, 0717, 0728, 0739, 0783, 0818, 0823, 0824, 0898, 0920, 1013, 1035, 1060, 1084, 9145, 9146, 948015, 948016, 948017, 948018, 948031, 948032, 948033, 948034, 948070, 948224, 948229, 951015, 951016, 951017, 951018; also used on <i>Model 81200</i> Series Type Nos. 0120, 0121, 0148, 0192, 9151, 948515, 948516, 948517, 948518, 948531, 948532,			
13	93111	Screw—Cylinder Head (1-15/16" long)						
	Note:	93583 Stud—Cylinder Head (1)						
	22963	Washer Used on Type Nos. 0587, 0687, 0693, 0738, 0809, 0829, 0848, 0876, 0902, 0925, 1037, 1047, 1050, 1090, 1098, 1101, 1102, 1105, 1109, 1127, 1130, 1136, 9868, 9958.						
14	93113	Screw—Cylinder Head (2-5/16" long)						
	Note:	93583 Stud—Cylinder Head						
	22963	Washer Used on Type Nos. 0644, 0662, 0668, 0738, 0747, 0829, 0902, 0925, 1047, 1090, 1098, 1102, 1127, 9700, 9868, 9958.						

*Included in Gasket Set—
Part No. 297275.

80200 to 80299

81200 to 81299

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		0485, 0508, 0516, 0526, 0537, 0556, 0580, 0597, 0602, 0608, 0617, 0658, 0674, 0689, 0696, 0709, 0713, 0730, 0778, 0782, 0795, 0810, 0814, 0835, 0841, 0871, 0895, 0914, 0925, 0938, 1000, 1006, 1012, 1033, 1037, 1041, 1050, 1054, 1059, 1074, 1087, 1091, 1100, 1111, 1116, 1125, 1135, 1140, 2036, 9495, 9780, 9954, 948063, 948064, 948104, 948117, 948118, 948119, 948127, 948134, 948162, 948189; also used on <i>Model 81200</i> Series Type Nos. 0138, 0141, 0144, 0145, 0149, 0152, 0153, 0154, 0156, 0158, 0162, 0175, 0179, 0189, 0190, 0193, 9188, 948547, 948563, 948584, 948595, 948608, 948624, 948625, 948634, 948636, 948646, 948658, 948665. 260187 Crankshaft Used on <i>Model 80200</i> Series Type Nos. 0040, 0166, 0170, 0220, 0302, 0379, 0381, 0384, 0389, 0402, 0438, 0498, 0499, 0505, 0544, 0550, 0557, 0577, 0581, 0639, 0665, 0670, 0688, 0693, 0705, 0726, 0727, 0757, 0764, 0803, 0849, 0851, 0870, 0940, 1040, 1048, 1124, 1129, 1132, 948103, 948188, 948200; also used on <i>Model 81200</i> Series Type Nos. 0143, 0168, 0174, 0184, 0201, 948639, 948649.			260201 Crankshaft Used on <i>Model 80200</i> Series Type No. 0632. 260276 Crankshaft Used on <i>Model 80200</i> Series Type Nos. 0049, 0125, 0126, 0129, 0141, 0151, 0156, 0157, 0171, 0184, 0186, 0294, 0207, 0209, 0210, 0211, 0218, 0228, 0230, 0235, 0253, 0257, 0259, 0260, 0263, 0271, 0273, 0281, 0303, 0307, 0313, 0320, 0335, 0338, 0341, 0348, 0356, 0367, 0368, 0371, 0380, 0403, 0421, 0425, 0432, 0447, 0462, 0464, 0500, 0518, 0523, 0532, 0560, 0562, 0564, 0566, 0603, 0605, 0611, 0612, 0616, 0632, 0667, 0669, 0672, 0676, 0678, 0679, 0686, 0691, 0698, 0707, 0720, 0733, 0750, 0759, 0763, 0774, 0788, 0821, 0826, 0836, 0850, 0854, 0856, 0873, 0900, 0910, 0912, 0927, 1009, 1010, 1015, 1020, 1039, 1043, 1056, 1095, 1127, 2049, 948020, 948021, 948022, 948023, 948035, 948036, 948037, 948038, 948066, 948076, 948077, 948088, 948093, 948097, 948105, 948109, 948126, 948132, 948140, 948144, 948149, 948150, 948157, 948160, 948169, 948174, 948176, 948182, 948185, 948186. 8			948187, 948205, 948207, 948214, 948215, 948219, 951020, 951021, 951022, 951023; also used on <i>Model 81200</i> Series Type Nos. 0103, 0104, 0125, 0126, 0147, 0155, 0161, 0165, 0169, 0171, 0199, 948520, 948521, 948522, 948523, 948535, 948536, 948537, 948538, 948545, 948546, 948561, 948565, 948571, 948580, 948587, 948596, 948599, 948613, 948614, 948617, 948618, 948621, 948622, 948627, 948637, 948641, 948651, 948652, 948655, 948664, 951520, 951521, 951522, 951523. 260395 Crankshaft Used on <i>Model 80200</i> Series Type No. 948055; also used on <i>Model 81200</i> Series Type Nos. 0135, 948605. 260489 Crankshaft Used on <i>Model 80200</i> Series Type Nos. 0037, 0169, 0174, 0190, 0198, 0223, 0287, 0290, 0364, 0374, 0375, 0433, 0434, 0479, 0627, 0634, 0638, 0683, 0684, 0692, 0694, 0719, 0749, 0760, 0772, 0784, 0791, 0813, 0843, 0865, 0906, 0913, 0918, 1001, 1049, 1052, 1061, 9161, 9891, 9946, 948057, 948059, 948064, 948067, 948069, 948123.

80200 to 80299

81200 to 81299

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		948131, 948139, 948155, 948191, 948192, 948211, 948213, 948216, 948226, 951046; also used on <i>Model 81200</i> Series Type Nos. 0146, 0164, 0178, 0181, 0191, 0194, 0198, 0200, 948570, 948572, 948573, 948574, 948585, 948590, 948612, 948623, 948628, 948640, 948659, 948666. 260491 Crankshaft Used on <i>Model 80200</i> Series Type Nos. 0039, 0239, 0254, 0327, 0832, 1057. 948228; also used on <i>Model 81200 Series</i> Type Nos. 0133, 948577. 260492 Crankshaft Used on <i>Model 80200</i> Series Type Nos. 0018, 0165, 0214, 0231, 0255, 0278, 0280, 0292, 0301, 0308, 0323, 0330, 0334, 0336, 0361, 0366, 0372, 0373, 0376, 0378, 0385, 0399, 0404, 0405, 0406, 0410, 0420, 0422, 0426, 0430, 0431, 0441, 0465, 0466, 0471, 0475, 0476, 0477, 0482, 0486, 0493, 0497, 0503, 0514, 0520, 0528, 0536, 0542, 0547, 0552, 0553, 0554, 0568, 0570, 0586, 0587, 0590, 0591, 0592, 0601, 0606, 0607, 0618, 0650, 0652, 0687, 0695, 0702, 0734, 0740, 0751, 0762, 0776, 0796, 0797, 0801, 0805, 0807,			0815, 0829, 0839, 0846, 0848, 0855, 0858, 0862, 0872, 0876, 0879, 0880, 0903, 0933, 0936, 0939, 1003, 1008, 1014, 1034, 1055, 1058, 1064, 1067, 1070, 1072, 1088, 1089, 1099, 1106, 1108, 1110, 1131, 1137, 9165, 9943, 948141, 948143, 951044; also used on <i>Model 81200 Series</i> Type Nos. 948567, 948568, 948589, 948616. 260512 Crankshaft Used on <i>Model 80200</i> Series Type Nos. 9300. 260562 Crankshaft Used on <i>Model 80200</i> Series Type Nos. 0163, 0201, 0237, 0250, 0262, 0266, 0297, 0342, 0355, 0357, 0458, 0484, 0504, 0531, 0569, 0583, 0615, 0668, 0680, 0697, 0800, 0812, 0820, 0831, 0838, 0857, 0892, 0899, 1011, 948159, 948180; also used on <i>Model 81200</i> Series Type Nos. 948551, 951540, 951541. 260674 Crankshaft Used on <i>Model 80200</i> Series Type Nos. 948151, 948152; also used on <i>Model 81200</i> Series Type No. 948638. 260759 Crankshaft Used on <i>Model 80200</i> Series Type Nos. 9252; also used on <i>Model</i> <i>81200 Series</i> Type Nos. 9139, 9183, 951545.			260932 Crankshaft Used on <i>Model 80200</i> Series Type Nos. 0035, 0124, 0149, 0150, 0153, 0176, 0183, 0185, 0206, 0219, 0240, 0246, 0270, 0276, 0289, 0311, 0317, 0318, 0328, 0340, 0350, 0358, 0365, 0369, 0388, 0392, 0396, 0398, 0407, 0428, 0455, 0456, 0459, 0474, 0502, 0511, 0517, 0534, 0548, 0559, 0574, 0595, 0596, 0621, 0625, 0626, 0633, 0636, 0637, 0644, 0646, 0653, 0663, 0675, 0677, 0681, 0682, 0685, 0690, 0708, 0710, 0716, 0721, 0722, 0729, 0732, 0735, 0766, 0769, 0771, 0775, 0789, 0790, 0792, 0794, 0806, 0811, 0816, 0827, 0840, 0842, 0844, 0860, 0863, 0864, 0866, 0875, 0889, 0897, 0901, 0905, 0908, 0909, 0917, 0919, 0921, 0935, 0937, 0942, 1004, 1021, 1022, 1025, 1026, 1027, 1030, 1032, 1045, 1047, 1068, 1069, 1076, 1077, 1079, 1083, 1093, 1095, 1098, 1104, 1112, 1113, 1115, 1117, 1118, 1123, 1126, 1136, 1139, 2035, 9155, 9253, 9314, 9377, 9440, 9451, 9469, 9489, 9509, 9530, 9563, 9598, 9599, 9648, 9745, 9756, 9773, 9817, 9878, 9885, 9911, 9949, 9951, 948049, 948062, 948071, 948075, 948082, 948085, 948099, 948122, 948147, 948161, 948166, 948171,

80200 to 80299

81200 to 81299

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		948179, 948195, 948208, 948210, 948225, 951047; also used on Model 81200 Series Type Nos. 0101, 0102, 0142, 0160, 0163, 0166, 0172, 0173, 0177, 0186, 9197, 948549, 948555, 948556, 948557, 948558, 948564, 948569, 948583, 948602, 948647, 948660, 948662.			See No. 394909 Cover Assy., under Note, for exceptions.			Used on Model 80200 Series Type Nos. 0133, 0136, 0158, 0162, 0197, 0234, 0243, 0332, 0401, 0539, 0582, 0592, 0600, 0613, 0614, 0731, 0734, 0744, 0753, 0761, 0834, 0915, 1016, 948221, 948222; also used on Model 81200 Series Type No. 0130.
		261128 Crankshaft Used on Model 80200 Series Type Nos.	392975		Cover Assembly—Crankcase Used before Code No. 81120900.			394909 Cover Assy.—Crankcase Used after Code No. 81120800. Used on Model 80231, 80232, 80233, 80236, 81231, 81232, 81233, 81236 Series.
		261161 Crankshaft Used on Model 80200 Series Type Nos. 0533, 0576, 0718, 0723, 0837.	Note:	296295	Cover Assy.—Crankcase Used on Model 80200 Series Type Nos. 948025, 948026, 948039, 948040, 948107, 948125, 948163, 948170, 948173, 948198; also used on Model 81200 Series Type Nos. 948525, 948526, 948539, 948540, 948566.			294307 Cover Assy.—Crankcase Used before Code No. 81120900. Used on Model 80201 80202, 80206 Series Type Nos. 9024, 9133, 9134, 9165, 9312, 9347, 9387, 9416, 9417, 9513, 9643, 951010, 951011, 951012, 951013, 951039, 951040, 951041, 951042, 951043, 951044; and on all Model 80211, 80212, 80251, 80252, 80253, 80256 Series; also used on Model 81201, 81202, 81203, 81206 Series Type Nos. 951510, 951511, 951512, 951513, 951539, 951540, 951541, 951542, 951543, 951544; and on all Model 81211, 81212, 81251, 81252, 81253, 81256 Series.
		261298 Crankshaft Used on Model 80200 Series Type Nos. 0659, 0731, 0761, 0779, 0781, 0799, 0834, 1016, 1028, 1063, 1071, 1107.			297378 Cover Assy.—Crankcase Used on Model 80200 Series Type Nos. 948136, 948153; also used on Model 81200 Series Type No. 948632.			
		261404 Crankshaft Used on Model 80200 Series Type Nos. 0786, 0787.			298511 Cover Assy.—Crankcase Used before Code No. 81120900.			
		261450 Crankshaft Used on Model 80200 Series Type Nos. 9819, 9868, 9887, 9894, 9934, 9952, 9958.			395259 Cover Assy.—Crankcase Used after Code No. 81120800. Used on Model 80200 Series Type Nos. 2035, 2036.			
17	99158	Bearing—Ball			394879 Cover Assy.—Crankcase Used after Code No. 81120800.			
18	394820	Cover Assembly—Crankcase Used after Code No. 81120800.			298281 Cover Assy.—Crankcase Used before Code No. 81120900.			
		392974 Cover Assy.—Crankcase Used before Code No. 81120900. Used on Model 80201, 80202, 80203, 80206, 81201, 81202, 81203, 81206 Series;						

80200 to 80299

81200 to 81299

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION			
19	293708	Bushing—Crankcase Cover Note: Bushings require special tools for installation. Note: 220538 Bushing—Crankcase Cover Used on <i>Model 80211, 80212, 80251, 80252, 80253, 80256, 81211, 81212, 81251, 81252, 81253, 81256 Series; also used on Model 80201, 80202, 80206 Series Type Nos. 9024, 9133, 9134, 9165, 9312, 9347, 9387, 9416, 9417, 9513, 9643, 948177, 948230, 951010, 951011, 951012, 951013, 951039, 951040, 951041, 951042, 951043, 951044; also used on Model 81200 Series Type Nos. 948619, 948667, 951510, 951511, 951512, 951513, 951539, 951540, 951541, 951542, 951543, 951544.</i> 294499 Bushing Assembly—Crankcase Cover Used on <i>Model 80211, 80212, 80251, 80252, 80253, 80256, 81211, 81212, 81251, 81252, 81253, 81256 Series; also used on Model 80201, 80202, 80206 Series Type Nos. 9024, 9133, 9134, 9165, 9312, 9347, 9387, 9416, 9417, 9513, 9643, 948177, 948230, 951010, 951011, 951012, 951013, 951039, 951040, 951041, 951042,</i>	20	299819	also used on <i>Model 81200 Series Type Nos. 948619, 948667, 951510, 951511, 951512, 951513, 951539, 951540, 951541, 951542, 951543, 951544.</i> Seal—Oil Note: 294160 Seal—Oil Used on the auxiliary P.T.O. Shaft on <i>Model 80200 Series Type Nos. 948025, 948026, 948039, 948040, 948107, 948125, 948163, 948170, 948173, 948198; also used on Model 81200 Series Type Nos. 948525, 948526, 948539, 948540, 948566.</i> 391484 Seal—Oil Used on the auxiliary P.T.O. Shaft on <i>Model 80200 Series Type Nos. 0133, 0135, 0136, 0158, 0162, 0197, 0234, 0243, 0332, 0401, 0539, 0582, 0592, 0600, 0613, 0614, 0713, 0734, 0744, 0753, 0761, 0834, 0915, 1016, 948221, 948222; also used on Model 81200 Series Type Nos. 0130.</i> 392838 Oil Seal and Spacer Used on <i>Model 80211 80212, 80251, 80252, 80253, 80256, 81211, 81212, 81251, 81252, 81253, 81256 Series; (Except Type Nos. Listed Under 392986 Oil Seal and Spacer)</i> also used on <i>Model 80201, 80202, 80206 Series Type Nos. 9024, 9133, 9134, 9165, 9312, 9347, 9387, 9416, 9417, 9513, 9643,</i>	21	66768	948177, 948230, 951010, 951011, 951012, 951013, 951039, 951040, 951041, 951042, 951043, 951044; also used on <i>Model 81200 Series Type Nos. 948619, 948667, 951510, 951511, 951512, 951513, 951539, 951540, 951541, 951542, 951543, 951544.</i> 392986 Oil Seal and Spacer Used on <i>Model 80212 Series Type Nos. 1090, 1102, 9819, 9868, 9887, 9894, 9934, 9952, 9958.</i> 393812 Seal—Oil Used on <i>Model 80231, 80232, 80233, 80236, 81231, 81232, 81233, 81236 Series.</i>	22	93032	Plug—Oil Filler Screw—Crankcase Cover Mounting Sem Note: 92747 Screw—Crankcase Mounting Sem Used on two top holes to mount cover on <i>Model 80211, 80212, 80251, 80252, 80253, 80256, 81211, 81212, 81251, 81252, 81253, 81256 Series and on Model 80200 Series Type Nos. 9023, 9024, 9133, 9134, 9165, 9312, 9347, 9387, 9416, 9417, 9513, 9643, 9819, 9958, 951010, 951011, 951012, 951013, 051039, 051040, 051041, 051042, 051043, 051044, also used on Model 81200 Series Type Nos. 951510, 951511, 951912, 951513,</i>

80200 to 80299

81200 to 81299

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		951539, 951540, 951541, 951542, 951543, 951544, 93656 Stud 90832 Washer—Lock Used to mount Crank- case Cover on Type Nos. 0567, 0659, 0712, 0731, 0753, 0765, 0781, 0798, 0799, 0802, 0834, 1016, 1019, 1028, 1029, 1038, 1063, 1071, 1080, 1081, 1082, 1107, 1119, 1120.			MODEL 80200 SERIES RING SETS: Note: For Chrome Piston Ring Set—standard size—order Part No. 297201.			0433, 0434, 0436, 0453, 0479, 0485, 0505, 0516, 0526, 0550, 0559, 0605, 0611, 0612, 0645, 0663, 0664, 0665, 0667, 0672, 0674, 0682, 0689, 0691, 0692, 0694, 0703, 0705, 0706, 0709, 0710, 0713, 0725, 0733, 0739, 0749, 0759, 0782, 0788, 0791, 0792, 0864, 0866, 0873, 0941, 1000, 1032, 1033, 1035, 1039, 1040, 1051, 9044, 9191, 9885, 948094, 948117, 948118, 951045; also used on Model 81200 Series Type Nos.
23	296884	Flywheel—Magneto (Used on and after Code No. 6212310) Note: 297949 Flywheel— Magneto Used on Type Nos. 1074, 1077, 1091, 1104, 1111, 9711, 9742, 9819, 9952.	26	294232	Ring Set—Std. Piston			0144, 0146, 0147, 0148, 0156, 0159, 0164, 0178, 0181, 0184, 0189, 0190, 0191, 0192, 0194, 948571, 948572, 948573, 948574, 948575, 948576, 948590, 948591, 948592, 948602, 948623, 948628, 948629, 948637, 948659, 948660, 948665, 948666, 948669.
				294224	Ring Set—.010" O.S. Piston			260443 Valve—Exhaust (with hole in stem) (STELLITE®) Used on Model 80200 Series Type Nos.
				294225	Ring Set—.020" O.S. Piston			0124, 0129, 0133, 0222, 0223, 0225, 0240, 0295, 0304, 0307, 0346, 0349, 0351, 0359, 0391, 0473, 0597, 0602, 0728, 0771, 0897, 0912, 0914, 0919, 1004, 1010, 1015, 1054, 1056, 2035,
				294226	Ring Set—.030" O.S. Piston			
					MODEL 81200 SERIES RING SETS: Note: For Chrome Piston Ring Set—standard size— order Part No. 297201.			
				295657	Ring Set—Std. Piston			
				295658	Ring Set—.010" O.S. Piston			
				295659	Ring Set—.020" O.S. Piston			
				295660	Ring Set—.030" O.S. Piston			
23A	295936	Flywheel—Magneto (Used before Code No. 6212310)	27	26026	Lock—Piston Pin			
24	61760	Key—Flywheel	28	298909	Pin Assembly—Piston— Standard			
25	295587	Piston Assembly—Std. Note: 295455 Piston Assy.— Standard Used on Model 81200 Series.		298908	Pin Assembly—Piston— .005" O.S.			
	295588	Piston Assembly— .010" O.S. Note: 295456 Piston Assy.— .010" O.S. Used on Model 81200 Series.	29	294367	Rod Assy.— Connecting Note: For Connecting Rod with .020" undersize Crankpin Bore—order No. 296079.			
	295589	Piston Assembly— .020" O.S. Note: 295457 Piston Assy.— .020" O.S. Used on Model 81200 Series.	30	220670	Dipper—Connecting Rod			
	295590	Piston Assembly— .030" O.S. Note: 295458 Piston Assy.— .030" O.S. Used on Model 81200 Series.	31	220756	Lock—Connecting Rod Screw			
			32	92296	Screw—Connecting Rod			
			33	296676	Valve—Exhaust (Grooved Stem— Includes Retainer No. 93312) 260442 Valve—Exhaust (with hole in stem) Used on Model 80200 Series Type Nos.			
					0035, 0036, 0037, 0038, 0039, 0040, 0049, 0208, 0248, 0277, 0315, 0374, 0375, 0392, 0432,			

80200 to 80299

81200 to 81299

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		2036, 2049, 9044, 9309, 9325, 9495, 9571, 9622, 9623, 9628, 9715, 9724, 9746, 9755, 9768, 9859, 9878, 9953, 948094, 948119, 948120, 948147, 948161, 948179, 948229, 948230; also used on <i>Model 81200</i> Series Type Nos. 0101, 0102, 0104, 0162, 0169, 0175, 9188.			0392, 0432, 0433, 0434, 0436, 0453, 0473, 0479, 0485, 0505, 0516, 0526, 0550, 0559, 0597, 0602, 0605, 0611, 0612, 0645, 0663, 0664, 0665, 0667, 0672, 0674, 0682, 0689, 0691, 0692, 0694, 0703, 0705, 0706, 0709, 0710, 0713, 0725, 0728, 0733, 0739, 0749, 0759, 0771, 0782, 0788, 0791, 0792, 0864, 0866, 0874, 0897, 0912, 0914, 0919, 0941, 1000, 1004, 1010, 1015, 1032, 1033, 0135, 1039, 1040, 1051, 1054, 1056, 2035, 2036, 2049, 9044, 9191, 9309, 9325, 9495, 9571, 9622, 9623, 9628, 9715, 9724, 9746, 9755, 9768, 9859, 9878, 9885, 9953, 948117, 948118, 948119, 948179, 948230, 951045; also used on <i>Model 81200</i> Series Type Nos. 0101, 0102, 0104, 0144, 0146, 0147, 0148, 0156, 0159, 0162, 0164, 0169, 0175, 0178, 0181, 0184, 0189, 0190, 0191, 0192, 0194, 9188, 948571, 948572, 948573, 948574, 948575, 948576, 948590, 948591, 948592, 948608, 948623, 948628, 948629, 948637, 948659, 948665, 948666, 948669.			40 93312 Retainer—Valve Spring Used with valves with groove in stem. Note: 23184 Retainer—Intake Valve 23187 Pin—Intake Valve Retainer (Used with Valves with hole in stem except those with rotocap, as follows:) 292259 Rotocap— Exhaust Valve 230126 Pin—Rotocap Exhaust Valve Retainer 230127 Retainer— Exhaust Valve Rotocap Used on <i>Model 80200</i> Series Type Nos. 0035, 0036, 0037, 0038, 0039, 0040, 0049, 0124, 0129, 0133, 0208, 0225, 0248, 0277, 0295, 0304, 0307, 0346, 0349, 0351, 0359, 0374, 0375, 0391, 0392, 0432, 0433, 0434, 0436, 0453, 0473, 0479, 0485, 0505, 0516, 0526, 0550, 0559, 0597, 0602, 0605, 0611, 0612, 0645, 0663, 0664, 0665, 0667, 0672, 0674, 0682, 0689, 0691, 0692, 0694, 0703, 0705, 0706, 0709, 0710, 0713, 0725, 0728, 0733, 0739, 0749, 0759, 0771, 0782, 0788, 0791, 0792, 0864, 0866, 0873, 0897, 0912, 0914, 0919, 0941, 1000, 1004, 1010, 1015, 1032, 1033, 1035, 1039, 1040, 1051, 1054, 1056, 2035, 2036, 2049, 9309, 9325, 9495, 9571,
34	296677	Valve—Intake (Grooved Stem—Includes Retainer No. 93312) Note: 230101 Valve—Intake (with hole in stem) Used on <i>Model 80200</i> Series Type Nos. 0222, 0223, 0225, 0240, 0295, 0307, 0315, 0346, 0349, 0359, 0391, 0602, 0728, 9309, 9325, 9495, 9622, 9623, 9628, 9715, 948094, 948119, 948120, 948147, 948161, 948179, 948229, 948230; also Used on <i>Model 81200</i> Series Type Nos. 0101, 0102, 0104, 0162, 0169, 0175, 9188, 948608, 948660.						
35	260552	Spring—Intake Valve						
36	26478	Spring—Exhaust Valve						
	Note: 26826	Spring—Exhaust Valve Used on <i>Model 80200</i> Series Type Nos. 0035, 0036, 0037, 0038, 0039, 0040, 0049, 0124, 0129, 0133, 0208, 0225, 0248, 0277, 0295, 0304, 0307, 0346, 0349, 0351, 0359, 0374, 0375, 0391,	37	220971	Guard—Flywheel			

80200 to 80299

81200 to 81299

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		9622, 9623, 9628, 9715, 9724, 9746, 9755, 9768, 9859, 9878, 9885, 9953, 948117, 948118, 948119, 948179, 948230, 951045; also used on <i>Model 81200</i> Series Type Nos. 0101, 0102, 0104, 0144, 0146, 0147, 0148, 0156, 0159, 0162, 0164, 0169, 0175, 0178, 0181, 0184, 0189, 0190, 0191, 0192, 0194, 9188, 948571, 948572, 948573, 948574, 948575, 948576, 948590, 948591, 948592, 948608, 948623, 948628, 948629, 948637, 948659, 948665, 948666, 948669.			948221, 948222; also used on <i>Model 81200</i> Series Type Nos. 0130.			67 212131 Housing—Starter Clutch Used after Code No. 6405220.
			52	*27355	Gasket—Intake Elbow Mounting (2 used)			Note: 210400 Housing—Starter Clutch Used before Code No. 6405250.
			56	280117	Pulley—Rewind Starter Used after Code No. 6506301.			68 63770 Ball—Clutch
					Note: 294088 Pulley—Rewind Starter Used before Code No. 6507011.	69	66718	Washer—Thrust
			57	294303	Spring—Rewind Starter	70	298436	Ratchet—Rewind and Wind-up Starter Used after Code No. 6405220.
			58	66694	Rope—Starter—48-5/8" Used after Code No. 6506301.			Note: 296597 Ratchet—Rewind and Wind-up Starter Used before Code No. 6405250.
					Note: 395022 Rope—Starter—47-1/8 4 long Used before Code No. 6507011. If longer rope is needed, order No. 66684 (used after Series No. 6506301) or No. 66514 (used before Code No. 6507011) and cut to required length.			298799 Ratchet—Rewind Used on Type Nos. 0142, 0167, 0211, 0319, 0323, 0334, 0336, 0364, 0380, 0393, 0412, 0419, 0444, 0447, 0507, 0533, 0576, 0619, 0718, 0723, 0738, 0837, 0902, 9387, 9451, 9489, 9599.
45	230173	Tappet—Valve	59	230228	Pin—Starter Grip	71	221653	Washer—Clutch Retainer Used after Code No. 6405220.
46	210453	Gear—Cam	60	393152	Grip—Starter Rope			Note: 221301 Washer—Clutch Retainer (Used before Code No. 6405220)
		Note: 210804 Gear—Cam Used on <i>Model 80200</i> Series Type Nos. 948025, 948026, 948039, 948040, 948107, 948125, 948163, 948170, 948173, 948198; also used on <i>Model 81200</i> Series Type Nos. 948525, 948526, 948539, 948540, 948566.	61	68618	Bumper—Starter Pulley (Used only with Steel Pulley)	72	26032	Spring—Clutch Retainer—Washer (Used before Code No. 6405220)
		211337 Gear—Cam Used on <i>Model 80200</i> Series Type Nos. 0133, 0135, 0136, 0158, 0162, 0197, 0234, 0243, 0332, 0401, 0539, 0582, 0592, 0600, 0613, 0614, 0731, 0734, 0744, 0753, 0761, 0787, 0834, 0915, 1016,	66	298310	Clutch Assembly—Rewind and Wind-up Starter Used after Code No. 6405220.	73	221661	Screen—Rotating Used after Code No. 6405220.
					Note: 298798 Clutch Assy.—Rewind and Wind-up Starter Used before Code No. 6405250 and on Type Nos. 0142, 0167, 0211, 0319, 0323, 0334, 0336, 0364, 0380, 0383, 0412, 0419, 0444, 0447, 0507, 0533, 0576, 0619, 0718, 0723, 0738, 0837, 0902, 9387, 9451, 9489, 9599.			Note: 220648 Screen—Rotating (Used before Code No. 6405250)
						74	93490	Screw—Rotating Screen Mounting Sem
						75	220865	Washer—Spring

*Included in Gasket Set—
Part No. 297275.

80200 to 80299

81200 to 81299

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
76	68238	Washer—Ratchet Sealing Used after Code No. 6405220. Note: 270045 Washer—Sealing Used before Code No. 6405250 on <i>Model 80200</i> Series Type Nos. 0142, 0147, 0157, 0162, 0167, 0175, 0178, 0186, 0192, 0201, 0211, 0228, 948051, 948126, 948154, 948156, 948158, 948159, 948164, 948172, 948178, 948183, 948190, 948204, 948217, also used on <i>Model 81200</i> Series Type No. 0132.			211845 Shaft Assembly—Drive Used on <i>Model 80200</i> Series Type Nos. 0447.			296799 Carb. Assy. (Choke-A-Matic) (2 Quart) Used on <i>Model 80200</i> Series Type Nos. 0132, 0142, 0144, 0234, 0242, 0273, 0278, 0293, 0319, 0328, 0333, 0352, 0357, 0366, 0372, 0388, 0404, 0406, 0422, 0430, 0458, 0477, 0486, 0493, 0501, 0506, 0515, 0540, 0545, 0546, 0547, 0549, 0572, 0590, 0601, 0632, 0635, 0651, 0656, 0661, 0662, 0668, 0678, 0679, 0680, 0687, 0702, 0708, 0710, 0714, 0723, 0732, 0737, 0740, 0741, 0747, 0752, 0753, 0786, 0797, 0803, 0815, 0837, 0839, 0842, 0855, 0864, 0870, 0879, 0903, 0904, 0912, 0930, 1004, 1010, 1017, 1022, 1080, 1081, 1082, 1089, 1097, 1123, 1129, 948027, 948028, 948029, 948030, 948031, 948032, 948033, 948034, 948035, 948036, 948037, 948038, 948039, 948040, 948072, 948092, 948111, 948114, 948125, 948130, 948148, 948172, 948177, 948183, 948184; also used on <i>Model 81200</i> Series Type Nos. 0172, 0174, 0201, 948527, 948528, 948529, 948530, 948531, 948532, 948533, 948534, 948535,
78	93705	Screw—Pulley Screen Mounting Sem	84	92617	Plug—Breather			
79	290779	Case Assy.—Gear	85	92747	Screw—Gear Case Mounting Sem			
80	27667	Gasket—Gear Case	86	291730	Cover Assembly—Gear Case Note: Order—Cover Assy.—Gear Case Used on Type No. 948617 from the equipment manufacturer.			
81	220234	Lock—Gear Case Mounting Screw	87	19011	Seal—Oil			
82	91541	Screw—Cap, Hex. Hd.—5/16-24 x 7/8"	88	27313	Gasket—Gear Case Cover			
82A	92279	Screw—Cap, Hex. Hd.—5/16-24 x 1-1/2"	89	93448	Plug—Oil Drain, 1/4" Pipe Thread (Used after Code No. 6304170) Note: 92015 Plug—Oil Drain 1/8" Pipe Thread (Used before Code No. 6304180)			
83	211293	Shaft Assembly—Drive Note: Order—Shaft Assembly—Drive Used on Type Nos. 948617 from the equipment manufacturer. 211338 Shaft Assembly—Drive Used on <i>Model 80200</i> Series Type Nos. 0157, 0211, 948157, 948185 211340 Shaft Assembly—Drive Used on <i>Model 80200</i> Series Type Nos. 0380, 948097; also used on <i>Model 81200</i> Series Type No. 948546.	90	393976	Carburetor Assembly (For 2 Quart Tank) Note: All Carburetors listed under Ref. 90 use 222955 Ref. 156 Lever. 393975 Carburetor Assembly (For 1 Quart Tank) 393977 Carburetor Assembly (For 3 Quart Tank)			
			90A	296784	Carburetor Assembly (Manual Choke) (2 Quart) Note: 296785 Carburetor Assy. (Manual Choke) (1 Quart) Used on <i>Model 80200</i> Series Type Nos. 0205, 0299, 0318, 0614, 0850, 0877, 0915, 948193; also used on <i>Model 81200</i> Series Type Nos. 0163, 948598.			

80200 to 80299

81200 to 81299

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
	948536, 948537, 948538, 948539, 948540, 948548, 948550, 948553, 948560, 948606, 948641.			0809, 0832, 0835, 0843, 0898, 0925, 1006, 1087, 1112, 1135,				296902 Carburetor Assy. (Manual Choke) (2 Quart) Used on <i>Model 81200</i> Series Type No. 948561.
	296800 Carb. Assy. (Choke-A-Matic) (1 Quart) Used on <i>Model 80200</i> Series Type Nos. 0237, 0330, 0378, 0381, 0399, 0465, 0476, 0491, 0503, 0528, 0553, 0568, 0570, 0573, 0592, 0696, 0734, 0736, 0751, 0761, 0787, 0801, 0805, 0848, 0858, 0872, 0876, 0880, 1003, 1042, 1048, 1064, 1088, 1108, 948102, 948133, 948143, 948168; also used on <i>Model 81200</i> Series Type No. 948630.			948047, 948048, 948067, 948069, 948076, 948082, 948084, 948090, 948103, 948104, 948117, 948118, 948119, 948134, 948141, 948155, 948179, 948186, 948191, 948199, 948205, 948213, 948215, 948218, 948224, 948225, 948226, 948228; also used on <i>Model 81200</i> Series Type Nos. 0116, 0133, 0144, 0147, 0154, 0162, 0175, 0176, 0190, 0193, 0200, 948571, 948575, 948576, 948577, 948595, 948596, 948608, 948609, 948612, 948617, 948621, 948624, 948625, 948637, 948644, 948646, 948658, 948659, 948665.				296903 Carburetor Assy. (Manual Choke) (3 Quart) Used on <i>Model 80200</i> Series Type Nos. 0152, 0156, 0163, 0173, 0186, 0187, 0210, 0229, 0231, 0232, 0233, 0244, 0253, 0263, 0271, 0281, 0283, 0288, 0294, 0297, 0304, 0334, 0345, 0379, 0389, 0392, 0400, 0410, 0423, 0438, 0453, 0467, 0484, 0498, 0529, 0578, 0621, 0639, 0645, 0672, 0689, 0733, 0750, 0766, 0774, 0821, 0826, 0846, 0896, 1033, 1077, 948045, 948046, 948049, 948071, 948075, 948079, 948080, 948089, 948099, 948115, 948116, 948121, 948137, 948140, 948150, 948154, 948174, 948176, 948180, 948182, 948203, 948206, 948207, 948220; also used on <i>Model 81200</i> Series Type Nos. 0138, 0148, 0158, 0161, 0167, 0171, 0179, 0187, 0192, 0199, 948545, 948563, 948592, 948611, 948620, 948634, 948642, 948645, 948650, 948652, 948664.
	296825 Carb. Assy. (Manual Choke) (3 Quart) Used on <i>Model 80200</i> Series Type Nos. 0143, 0165, 0166, 0168, 0190, 1093, 0199, 0200, 0203, 0207, 0208, 0218, 0219, 0222, 0223, 0225, 0227, 0239, 0240, 0245, 0254, 0257, 0259, 0277, 0287, 0295, 0302, 0313, 0327, 0349, 0356, 0362, 0374, 0375, 0390, 0391, 0421, 0428, 0432, 0448, 0456, 0473, 0516, 0534, 0561, 0597, 0603, 0608, 0617, 0638, 0640, 0691, 0706, 0729, 0759, 0764, 0772, 0778, 0791, 0792,			296882 Carburetor Assy. (Choke-A-Matic) Used on <i>Model 80200</i> Series Type Nos. 0015, 0018, 0148, 0154, 0160, 0213, 0256, 0490, 0519, 0582, 0785, 0822, 1105, 1128, 948051, 948052, 948053, 948054, 948061, 948073, 948074, 948107, 948113, 948163, 948165, 948198; also used on <i>Model 81200</i> Series Type Nos. 948566, 948582, 948661.				

80200 to 80299

81200 to 81299

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
	296904	Carburetor Assy. (Manual Choke) (2 Quart) Used on <i>Model 80200</i> Series Type Nos. 0149, 0153, 0157, 0172, 0178, 0185, 0194, 0202, 0211, 0220, 0225, 0230, 0238, 0243, 0246, 0249, 0250, 0260, 0270, 0272, 0275, 0276, 0279, 0280, 0284, 0285, 0291, 0296, 0298, 0301, 0303, 0307, 0308, 0317, 0336, 0337, 0339, 0342, 0343, 0360, 0361, 0363, 0368, 0373, 0376, 0380, 0382, 0385, 0393, 0398, 0402, 0405, 0408, 0412, 0419, 0420, 0424, 0425, 0459, 0464, 0466, 0471, 0475, 0480, 0494, 0518, 0521, 0527, 0535, 0544, 0551, 0552, 0567, 0586, 0588, 0596, 0606, 0618, 0629, 0633, 0634, 0636, 0660, 0675, 0681, 0704, 0707, 0783, 0784, 0810, 0823, 0824, 0853, 0854, 0866, 0873, 0882, 0901, 0906, 0910, 0918, 0926, 0927, 0932, 1009, 1026, 1034, 1074, 1114, 1138, 948050, 948055, 948060, 948062, 948064, 948066, 948077, 948081, 948083, 948091, 948096, 948098, 948110, 948124, 948128, 948129, 948132, 948144, 948145, 948149, 948156, 948167,		948178, 948181, 948185, 948192, 948196, 948201, 948208, 948210, 948214, 948227; also used on <i>Model 81200</i> Series Type Nos. 0132, 0135, 0136, 0137, 0140, 0141, 0143, 0152, 0155, 0165, 0166, 0168, 0169, 0170, 0186, 948551, 948562, 948581, 948583, 948584, 948585, 948587, 948588, 948605, 948610, 948613, 948614, 948615, 948616, 948627, 948635, 948636, 948648, 948649, 948653, 948655, 948656, 948657. 296905 Carburetor Assy. (Manual Choke) (1 Quart) Used on <i>Model 80200</i> Series Type Nos. 0268, 0292, 0365, 0487, 0512, 0542, 0554, 0583, 0600, 0615, 0652, 0657, 0666, 0701, 0727, 0796, 0808, 0851, 0860, 0875, 0888, 0908, 0917, 0929, 1008, 1070, 948097, 948105, 948126, 948157; also used on <i>Model 81200</i> Series Type Nos. 0177, 948546, 948549, 948622, 948638, 296921 Carburetor Assy. (Choke-A-Matic) Used on <i>Model 80200</i> Series Type Nos. 0136, 0151, 0269, 0323, 0332, 0344, 0355, 0504, 0579, 0669, 0693,		948146; also used on <i>Model 81200</i> Series Type Nos. 948567, 948568, 948603, 948604, 948651. 296927 Carburetor Assy. (Manual Choke) Used on <i>Model 80200</i> Series Type Nos. 0140, 0141, 0158, 0159, 0181, 0189, 0197, 0212, 0258, 0326, 0395, 0401, 0536, 0539, 948058, 948078, 948112, 948135, 948160, 948170, 948173, 948175, 948212, 948230; also used on <i>Model 81200</i> Series Type Nos. 948559, 948562, 948579, 948594, 948607, 948667. 297019 Carburetor Assu. (Choke-A-Matic) Used on <i>Model 80200</i> Series Type Nos. 0248, 0255; also used on <i>Model 81200</i> Series Type Nos. 948589. 297047 Carburetor Assy. (Manual Choke) Used on <i>Model 80200</i> Series Type Nos. 0182, 948095, 948194; also used on <i>Model 81200</i> Series Type Nos. 948597, 948631, 948633. 297140 Carburetor Assy. (Mech. Governor—Manual Choke) (3 Quart) Used on <i>Model 80200</i> Series Type Nos. 9165, 9191, 9251, 9252, 9312, 9325, 9354, 9383, 9439, 9451, 9489, 9513, 9575, 9599, 9622, 9648, 9673, 9743,		

80200 to 80299

81200 to 81299

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		9755, 9804, 9828, 9852, 9886, 9955, 951044, 951045; also used on <i>Model 81200</i> Series Type No. 951526.			used on <i>Model 81200</i> Series Type Nos. 9139, 9151, 9183, 9188, 9197, 951510, 951511, 951512, 951513, 951515, 951516, 951517, 951518, 951520, 951521, 951522, 951523, 951525, 951541, 951545.			297882 Carburetor Assy. (Manual Choke) Used on <i>Model 80200</i> Series Type Nos. 0175, 948151.
		297143 Carburetor Assy. (Mech. Governor—Manual Choke) (1 Quart) Used on <i>Model 80200</i> Series Type Nos. 9305, 9324, 9409, 9414, 9415, 9452.			297202 Carburetor Assy. (Mech. Governor—Manual Choke) Used on <i>Model 80200</i> Series Type Nos. 9024, 9347, 951039, 951040, 951042; also used on <i>Model 81200</i> Series Type Nos. 951540, 951542, 951543, 951544.			297903 Carburetor Assy. (Manual Choke) (2 Quart) Used on <i>Model 80200</i> Series Type Nos. 0137, 0147, 0282, 948154.
		297153 Carburetor Assy. (Mech. Governor—Manual Choke) (2 Quart) Used on <i>Model 80200</i> Series Type Nos. 9044, 9133, 9134, 9145, 9146, 9155, 9196, 9217, 9300, 9309, 9314, 9377, 9387, 9397, 9416, 9417, 9418, 9440, 9450, 9469, 9495, 9509, 9530, 9538, 9563, 9571, 9598, 9609, 9620, 9623, 9628, 9631, 9642, 9643, 9654, 9700, 9711, 9715, 9724, 9745, 9746, 9756, 9768, 9770, 9773, 9780, 9817, 9819, 9830, 9859, 9868, 9878, 9884, 9885, 9887, 9891, 9893, 9894, 9911, 9934, 9940, 9943, 9945, 9946, 9947, 9949, 9950, 9951, 9952, 9953, 9954, 9957, 9958, 951010, 951011, 951012, 951013, 951015, 951016, 951017, 951018, 951020, 951021, 951022, 951023, 951025, 951026, 951043, 951046; also,			297203 Carburetor Assy. (Mech. Governor—Manual Choke) Used on <i>Model 80200</i> Series Type Nos. 9023, 9253, 951041; also used on <i>Model 81200</i> Series Type No. 951539.			297918 Carburetor Assy. (Manual Choke) (2 Quart) Used on <i>Model 80200</i> Series Type Nos. 0167, 0192, 0228, 0236, 0369, 0407, 0447, 0461, 0474, 0500, 0507, 0533, 0576, 0595, 0626, 0690, 0699, 0712, 0718, 0735, 0758, 0765, 0779, 0789, 0802, 0813, 0829, 0833, 0847, 0889, 0933, 1007, 1016, 1024, 1025, 1028, 1029, 1038, 1053, 1056, 1062, 1066, 1068, 1071, 1073, 1103, 1106, 1117, 1121, 1132, 948217; also used on <i>Model 81200</i> Series Type Nos. 0142, 0160, 0202, 948647, 948654, 948662.
					297223 Carburetor Assy. (Manual Choke) Used on <i>Model 80200</i> Series Type Nos. 0264, 0429, 0481; also used on <i>Model 81200</i> Series Type Nos. 0157, 948619, 948663.			297995 Carburetor Assy. (Choke-A-Matic) Used on <i>Model 80200</i> Series Type Nos. 0162, 0514, 1130, 948158, 948164.
					297419 Carburetor Assy. (Manual Choke) Used on <i>Model 80200</i> Series Type Nos. 0262, 0266, 948106.			391463 Carburetor Assy. (3 Quart) Used on <i>Model 80200</i> Series Type No. 0602.
					297877 Carburetor Assy. (Manual Choke) Used on <i>Model 80200</i> Series Type No. 948152.			

80200 to 80299

81200 to 81299

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		391773 Carburetor Assy. Used on Type Nos. 0659, 0799, 0909, 0922.	97	297961	Shaft and Lever—Throttle			948077, 948110, 948116, 948149, 948150, 948151, 948152, 948217; also used on <i>Model 81200</i> Series Type Nos. 0101, 0102, 0103, 0104, 0142, 0155, 0157, 0160, 0170, 948619, 948633, 948638, 948645, 948647, 948654, 948662, 948663.
		393975 Carburetor Assy. (1 Quart) Used on <i>Model 80200</i> Series Type Nos. 0492, 0502, 0862, 0869, 948136, 948153, 948204; also used on <i>Model 81200</i> Series Type Nos. 948552, 948632.	98	93524	Screw—Machine, Rd. Hd.—5-40 x 1/2"	152	260746	Spring Throttle Adjustment
		393976 Carburetor Assy. (Manual Choke) (2 Quart) Used on <i>Model 80200</i> Series Type Nos. 0201, 0431, 0435, 0436, 0437, 0441, 0443, 0444, 0446, 0449, 0454, 0455, 0460, 0463, 0468, 0470, 0472, 0478, 0482, 0511, 0522, 0524, 0531, 0543, 0555, 0565, 0569, 0585, 0619, 0647, 0650, 0738, 0748, 0776, 0793, 0800, 0812, 0820, 0831, 0838, 0883, 0899, 0902, 0916, 0923, 0931, 0939, 1005, 1011, 1018, 1019, 948159, 948190.	99	393586	Spring (Includes Fil. Hd. Screw)	152A	260575	Spring—Speed and Throttle Adjustment
		393977 Carburetor Assy. (Manual Friction) (3 Quart) Used on Type Nos. 0351, 0413, 0442, 0462, 0526, 0532, 0587, 0589, 0670, 0686, 0739, 0767, 0871, 0914.	101	93043	Pin—Governor Shaft	153	298031	Screw—Carburetor Cam and Lever
			114	66594	Gasket—Needle Valve Nut Note: 66604 Gasket—Needle Valve Nut Used on <i>Model 80200</i> Series Type Nos. 9023, 9024, 9253, 9347; also used on <i>Model 81200</i> Series Type Nos. 951539, 951540.			Note: 93177 Screw—Bell Crank 230531 Collar—Bell Crank 220982 Washer Used on <i>Model 80200</i> Series Type Nos. 0015, 0018, 0137, 0147, 0148, 0154, 0160, 0162, 0175, 0213, 0248, 0255, 0256, 0282, 0413, 0490, 0514, 0519, 0582, 0834, 1130, 948051, 948052, 948053, 948054, 948061, 948073, 948074, 948107, 948113, 948151, 948154, 948158, 948163, 948164, 948165, 948198; also used on <i>Model 81200</i> Series Type Nos. 948566, 948582, 948589, 948661. 93342 Screw—Bell Crank
			116	65978	Packing—Needle Valve			
			117	230590	Nut—Needle Valve			
			118	23433	Valve—Needle			
			120	92290	Washer—Lock—No. 10 x 1/16 x 3/64			
			124	93357	Screw—Hex. Hd.			
			147	230591	Seat—Needle Valve			
			148	22235	Washer—Needle Valve (2)			
			149	26336	Spring—Needle Valve			
			150	220105	Connector—Gov. Link			
			151	93350	Screw—Machine, Rd. Hd. 5-40 x 3/4"			
					Note: 93527 Screw—Machine, Rd. Hd.—5-40 x 5/8" Used on <i>Model 80200</i> Series Type Nos. 0016, 0035, 0036, 0037, 0038, 0039, 0049, 0167, 0192, 0194, 0210, 0228, 0230, 0262, 0264, 0266, 0268, 0292, 0298, 0308, 0369, 0413, 0420, 0429, 0475, 0481, 0551, 0556, 0602, 0626, 0655, 0670, 0739, 0814, 0841, 0845, 0849, 0854, 0862, 0869, 0871, 0905, 0909, 0913, 0914, 0921, 0922, 1006, 1101, 1102.			
95	93499	Screw—Throttle Valve Mounting Sem						
96	211203	Valve Throttle						
96A	211067	Throttle—Carburetor						

80200 to 80299

81200 to 81299

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		230450 Collar—Bell Crank Used on <i>Model 80200</i> Series Type Nos. 0016, 0140, 0141, 0158, 0159, 0181, 0182, 0189, 0197, 0212, 0252, 0258, 0262, 0264, 0266, 0326, 0395, 0401, 0429, 0481, 0536, 0539, 0558, 0649, 948058, 948078, 948095, 948106, 948112, 948135, 948160, 948170, 948173, 948175, 948194, 948212, 948230; also used on <i>Model 81200</i> Series Type Nos. 0157, 948559, 948562, 948579, 948594, 948597, 948607, 948619, 948631, 948633, 948663, 948667.	163	270488	Gasket—Air Cleaner Mounting			0229, 0231, 0232, 0233, 0239, 0240, 0244, 0245, 0248, 0253, 0254, 0255, 0257, 0259, 0263, 0269, 0271, 0277, 0281, 0283, 0287, 0288, 0294, 0295, 0297, 0302, 0304, 0313, 0323, 0327, 0332, 0334, 0344, 0345, 0349, 0351, 0355, 0356, 0362, 0374, 0375, 0379, 0389, 0390, 0391, 0392, 0400, 0410, 0413, 0421, 0423, 0428, 0432, 0438, 0442, 0448, 0453, 0456, 0462, 0467, 0473, 0484, 0498, 0504, 0516, 0526, 0529, 0532, 0534, 0561, 0578, 0579, 0587, 0589, 0597, 0602, 0621, 0638, 0639, 0640, 0645, 0669, 0670, 0672, 0686, 0689, 0691, 0693, 0706, 0729, 0733, 0739, 0750, 0759, 0764, 0766, 0767, 0772, 0774, 0778, 0791, 0792, 0809, 0821, 0826, 0832, 0843, 0846, 0871, 0896, 0898, 0914, 0941, 1006, 1015, 1033, 1051, 1055, 1069, 1077, 1087, 1090, 1101, 1102, 1109, 1111, 1112, 1116, 1120, 1127, 1135, 1140, 9165, 9191, 9251, 9252, 9312, 9325, 9347, 9354, 9383, 9439, 9451, 9489, 9513, 9575, 9599, 9622, 9648, 9673, 9743, 9755, 9804, 9828, 9852, 9886, 9955, 948045, 948046, 948047, 948048,
			163A	27660	Gasket—Air Cleaner Mounting			
			165	93856	Wing Nut			
				Note:	92067 Nut—Wing Used on Type Nos. 1000.			
			166	231176	Stud—Air Cleaner			
				Note:	230058 Stud—Air Cleaner Used on Type Nos. 1000.			
			172	271077	Spacer—Air Cleaner			
			172A	27795	Gasket—Air Cleaner			
			180	296591	Tank Assy.—Fuel (2 Quart)			
				Note:	296377 Tank Assy.—Fuel (1 Quart) Used on <i>Model 80200</i> Series Type Nos. 0162, 0175, 0262, 0266, 0514, 9305, 9324, 9409, 9414, 9415, 9452, 948097, 948102, 948105, 948106, 948126, 948133, 948136, 948143, 948153, 948157, 948158, 948164, 948168, 948193, 948204; also used on <i>Model 81200</i> Series Type Nos. 0163, 0177, 948546, 948549, 948552, 948598, 948622, 948630, 948632, 948638.			
					296592 Tank Assy.—Fuel (3 Quart) Used on <i>Model 80200</i> Series Type Nos. 0136, 0143, 0151, 0152, 0156, 0163, 0165, 0166, 0168, 0173, 0182, 0186, 0187, 0190, 0193, 0199, 0200, 0203, 0207, 0208, 0210, 0218, 0219, 0222, 0223, 0226, 0227,			
154	93527	Screw—Machine, Rd. Hd.—5-40 x 5/8"						
155	220107	Cam—Speed Adjuster						
156	222955	Lever—Speed Adjuster						
156A	220949	Lever—Speed Adjuster						
	Note:	For 220952 Lever—Speed Adjuster, see Ref. No. 256.						
		Used on <i>Model 80200</i>						
160	294870	Cleaner Assy.—Air (Includes Mounting Stud)						
161	293991	Bowl—Air Cleaner						
162	294861	Cover and Filter—Air Cleaner						
	Note:	297778 Cover—Carburetor Intake Includes Mounting Stud Used on <i>Model 80200</i> Series Type Nos. 0284, 948097, 948102, 948128, 948172, 948204; also used on <i>Model 81200</i> Series Type No. 948546.						

80200 to 80299

81200 to 81299

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
	948049, 948057,			948645, 948646,				391351 Tank Assy.—
	948067, 948069,			948650, 948651,				Fuel
	948071, 948075,			948652, 948658,				Used on <i>Model 80200</i>
	948076, 948079,			948659, 948664,				Series Type No. 0615.
	948080, 948082,			948665, 951526,				391352 Tank Assy.—
	948084, 948089,			951540, 951542,				Fuel (2 Quart)
	948090, 948095,			951543, 951544.				Used on <i>Model 80200</i>
	948099, 948103,			297880 Tank Assy.—				Series Type Nos.
	948104, 948115,			Fuel (1 Quart)				0606, 0857, 1000,
	948116, 948117,			Used on <i>Model 8020</i>				9643.
	948118, 948119,			Series Type Nos.				391353 Tank Assy.—
	948121, 948134,			948151, 948152.				Fuel (3 Quart)
	948137, 948140,			297904 Tank Assy.—				Used on <i>Model 80200</i>
	948141, 948146,			Fuel (2 Quart)				Series Type Nos.
	948150, 948155,			Used on <i>Model 80200</i>				0603, 0608, 0617,
	948174, 948176,			Series Type Nos.				0835, 0925.
	948179, 948180,			948154, 948156,	181	298425		Cap—Fuel Tank
	948182, 948186,			948158, 948159.		Note:		293270 Cap—Fuel Tank
	948191, 948194,			299817 Tank Assy.—				Used on Type Nos.
	948199, 948203,			Fuel (1 Quart—with				0308, 0424, 0431,
	948205, 948206,			Bracket)				0435, 0449, 0463,
	948207, 948213,			Used on <i>Model 80200</i>				0466, 0471, 0472,
	948215, 948218,			Series Type Nos.				0475, 0478, 0481,
	948220, 948222,			0019, 0205, 0237,				0482, 0522.
	948224, 948225,			0268, 0292, 0299,				297863 Cap—Fuel Tank
	948226, 948228,			0318, 0330, 0365,				Used on <i>Model 80200</i>
	951039, 951040,			0378, 0381, 0399,				Series Type Nos.
	951042, 951044,			0465, 0476, 0487,				0142, 0147, 0157,
	951045; also used on			0491, 0492, 0502,				0167, 0175, 0178,
	<i>Model 81200</i> Series			0503, 0512, 0528,				0192, 0201, 0211,
	Type Nos. 0116, 0133,			0542, 0553, 0554,				0242, 0243, 0308,
	0138, 0144, 0147,			0568, 0570, 0573,				0380, 0393, 0412,
	0148, 0153, 0154,			0583, 0592, 0600,				0424, 0431, 0435,
	0158, 0161, 0162,			0614, 0652, 0657,				0444, 0446, 0447,
	0167, 0171, 0175,			0659, 0666, 0696,				0449, 0463, 0466,
	0176, 0179, 0187,			0701, 0727, 0734,				0471, 0472, 0475,
	0190, 0192, 0193,			0736, 0751, 0761,				0478, 0481, 0482,
	0199, 0200,			0787, 0796, 0799,				0507, 0533, 0576,
	948545, 948563,			0801, 0805, 0808,				0619, 0718, 0723,
	948567, 948568,			0848, 0850, 0851,				0738, 0837, 0902,
	948571, 948575,			0858, 0860, 0862,				9252, 9387, 9440,
	948576, 948577,			0869, 0872, 0875,				9451, 9469, 9489,
	948589, 948592,			0876, 0877, 0880,				9563, 9599,
	948595, 948596,			0888, 0908, 0909,				948126, 948151,
	948597, 948603,			0915, 0917, 0922,				948152, 948154,
	948604, 948608,			0929, 0935, 0936,				948156, 948158,
	948609, 948611,			1003, 1008, 1014,				948159, 948164,
	948612, 948617,			1042, 1048, 1058,				948178, 948185,
	948620, 948621,			1063, 1064, 1067,				948190, 948204,
	948624, 948625,			1070, 1088, 1107,				948217; also used on
	948631, 948633,			1108, 1115, 1130.				<i>Model 81200</i> Series
	948634, 948637,							Type Nos. 0170, 9139,
	948642, 948644,							9183.
								951541, 951545.

80200 to 80299

81200 to 81299

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		392304 Cap—Fuel Tank Used on Type Nos. 0781, 1028, 1071.			0256, 0282, 0413, 0490, 0514, 0519, 0582, 0834, 1130, 948051, 948052, 948053, 948054, 948061, 948073, 948074, 948107, 948113, 948151, 948154, 948158, 948163, 948164, 948165, 948198; also used on <i>Model 81200</i>		Note: 260545 Spring—Air Vane Governor Used before Code No. 6602121 on Type No. Series 0010 to 0311 and on all Type Nos. 948010 to 948999.	
189	90366	Washer—Lock— 5/16 x 1/8 x 1/16"			Series Type Nos. 948566, 948582, 948589, 948661.			Used on <i>Model 81200</i> Series Type No. 948661.
190	93440	Screw—Fuel Tank Mounting Sem			221390 Crank—Bell Used on <i>Model 80200</i>			260662 Spring—Air Vane Governor Used on <i>Model 80200</i>
191	*27911	Gasket—Fuel Tank Mounting			Series Type Nos. 0016, 0140, 0141, 0158, 0159, 0181, 0182, 0189, 0197, 0212, 0252, 0258, 0262, 0264, 0266, 0326, 0429, 0481, 0536, 0539, 0558, 0649, 948058, 948078, 948095, 948106, 948112, 948135, 948160, 948170, 948173, 948175, 948194, 948212, 948230; also used on <i>Model 81200</i> Series Type Nos. 0157, 948559, 948562, 948579, 948594, 948597, 948607, 948619, 948631, 948633, 948663, 948667.		Series Type Nos. 0328, 0330, 0352, 0378, 0388, 0399, 0568, 0570, 0572, 0573, 0601, 0651, 0656, 0661, 0723, 0736, 0737, 0741, 0801, 0815, 0879, 0880, 0903, 0904, 1003, 1042, 1048, 1064, 1108, 1123, 1129.	
	Note:	Engines using 3 Quart tank Nos. 296592, and 391353 require (2) gaskets.						
200	297310	Blade—Governor (Used on and after Serial No. 6212310)						
	Note:	221456 Guide—Air Used on and after Serial No. 6212310 only on Mechanical Governor Series 9000 and up; also 951010 to 951999.						
200A	294298	Blade—Governor (Used before Serial No. 6212310)						260687 Spring—Air Vane Governor Used on <i>Model 80200</i>
	Note:	220692 Guide—Air Used before Serial 6212310 only on Type No. Series 951010 to 951999.						Series Type Nos. 0323, 0332, 0344, 0366, 0515, 0546, 0632, 0635, 0659, 0669, 0679, 0708, 0710, 0732, 0740, 0786, 0787, 0799, 0805, 0837, 0842, 0855, 0864, 0881, 0892, 0909, 0922, 1004, 1022, 1080, 1081, 1082, 1088, 1097.
201	260898	Link—Governor						209B 260546 Spring—Mechanical Governor Used only on Mechanical Governor Series 9000 and up; also 951010 to 951999.
201A	260565	Link—Governor Used only on Mechanical Governor Series 9000 and up; also 951010 to 951999.	204	23688	Bushing—Gov. Lever			
			205	230671	Screw—Bell Crank			
			206	230149	Nut—Control Rod			
			207	26855	Spring—Control Rod			
			208	230680	Rod—Control			
			209	260041	Spring—Air Vane Gov.			
			209A	260041	Spring—Air Vane Gov. Used after Code No. 6602111 on Type No. Series 0010 to 0942 except on <i>Model</i> <i>80200</i> Series Type No. 0293 after Code No. 65010111.			
202	260563	Link—Throttle Used only on Mechanical Governor Series 9000 and up; also 951010 to 951999.						216 260449 Link—Choke
								217 260189 Spring—Choke Link
								218 221198 Washer—Choke Link (3)
203	297069	Crank—Bell						219 296688 Governor Housing and Gear Assembly
	Note:	221147 Crank—Bell Used on <i>Model 80200</i> Series Type Nos. 0015, 0018, 0137, 0147, 0148, 0154, 0160, 0162, 0175, 0213, 0248, 0255,						220 221361 Washer—Thrust

*Included in Gasket Set—
Part No. 297275.

22

*Included in Gasket Set—
Part No. 297275.

80200 to 80299

81200 to 81299

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
221	230177	Cup—Governor	267	93496	Screw—Sem			0435, 0446, 0463,
222	220691	Bracket—Mechanical Governor	268	66986	Casing—Control Wire—48" long			0466, 0471, 0475, 0478, 0481, 0482, 0653, 0809, 1090, 948110, 948172, 948182; also used on Model 81200 Series Type Nos. 948614, 948642, 948653.
223	221389	Lever—Gov. Control		Note:	If longer casing is needed, specify length in inches; if a shorter casing is needed order No. 66986 and cut to required length.			295905 Muffler—Exhaust (w/Exhaust Deflector) Used on Model 80200 Series Type Nos. 0150, 0172, 0173, 0185, 0193, 0218, 0228, 0265, 0271, 0281, 0296, 0328, 0334, 0336, 0360, 0372, 0376, 0385, 0389, 0393, 0407, 0412, 0419, 0422, 0427, 0429, 0444, 0447, 0449, 0464, 0477, 0498, 0507, 0533, 0541, 0552, 0567, 0576, 0579, 0586, 0605, 0611, 0612, 0618, 0630, 0647, 0651, 0656, 0660, 0664, 0665, 0699, 0710, 0714, 0718, 0720, 9044, 9252, 9354, 9387, 9416, 9440, 9469, 9563, 9609, 9642, 948102, 948105, 948121, 948136, 948151, 948153, 948181, 948199, 948202, 948204, 948208, 951043; also used on Model 81200 Series Type Nos. 0132, 0170, 9139, 9183, 948552, 948618, 948622, 948630, 948632, 948652, 951541, 951545.
	Note:	221379 Lever—Gov. Control Used on Model 80200 Series Type Nos. 9161, 9184, 9187, 9312, 9314, 9354, 9416, 9417, 9513, 9878, 9943, 9949, 951043, 951046.	269	26099	Wire—Control 54" long			
224	93067	Screw—Governor Lever Mounting Sem		Note:	If longer wire is needed, specify length in inches; if shorter wire is needed order No. 26099 and cut to required length.			
225	230181	Shaft—Governor Lever	270	63426	Locknut—Control Wire Casing			
226	220381	Follower—Gov. Crank	271	290568	Lever Assy.—Control			
227	296087	Lever Assy.—Governor	280	221384	Bracket			
228	93100	Screw—Gov. Lever	297	91811	Locknut—Exhaust Elbow			
229	220680	Washer—Thrust	298	220859	Locknut—Mufler			
230	22868	Washer—Spacer	299	392811	Muffler—Exhaust (Lo-Tone)			
231	93064	Screw—Sem		Note:	394781 Guard—Muffler			
232	260478	Spring—Mechanical Governor Link Used on Mechanical Governor Series 90000 and up; also 951010 to 951999.		Uses:	93606 Screw (Guard to Muffler Mounting) 62199 Washer (Guard to Bracket) 93873 Screw (Guard to Bracket Mounting) 223127 Brace—Muffler Used on Type Nos. 1094, 1110, 1132.			
232A	260585	Spring—Air Vane Governor Link Used before Code No. 6602121 on Type No. Series 0010 to 0311 and 948010 to 948999.	300	89966	Muffler—Exhaust			
	Note:	Do Not Use with 260898 Gov. Link (Ref. 201)		Note:	89945 Muffler—Exhaust Used on Type Nos. 9309, 9397, 9623, 948631. 292054 Muffler—Exhaust Used on Model 80200 Series Type Nos. 0186, 0256, 0273, 0284, 0293, 0431,			
256	220952	Lever—Speed Adjuster						
257	93543	Screw—Fil Hd., 10-32 x 3/8"						
	Note:	93105 Screw—Sem 222018 Bracket—Locator Used on Model 80200 Series Type Nos. 0357, 0458, 0515, 0680.						
258	93062	Screw—Sem						
259	294502	Bracket—Control Wire Casing						
264	90355	Nut—Hex., 10-32						
265	221370	Clamp—Casing						

80200 to 80299

81200 to 81299

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		297934 Muffler—Exhaust Used on <i>Model 80200</i> Series Type Nos. 0157, 0211, 948157, 948185.	305	93158	Screw—Sem	333	298502	Armature—Magneto (Used on and after Code No. 6212310)
		391435 Muffler—Exhaust (Lo-Tone) Used on <i>Model 80200</i> Series Type Nos. 0637, 0771, 0772, 9746, 9755, 9768, 9773, 9817, 9859, 9953.		Note:	93294 Screw—Blower Housing Mounting Used on <i>Model 80203</i> , 80206, 81203, 81206, Series.		Note:	298274 Armature—Magneto Used on <i>Model 80200</i> Series Type Nos. 0391, 0479, 0597, 0694, 9495; also used on <i>Model 81200</i> Series Type Nos. 0162, 9188.
303	91838	Elbow—Exhaust (45° Street)	306	220478	Shield—Cylinder	333A	291617	Armature—Magneto (Used before Serial No. 6212310)
	Note:	91943 Elbow—Exhaust (90° Street) Used on <i>Model 80200</i> Series Type Nos. 0210, 0263, 0307, 0587, 0637, 0659, 0771, 0774, 0821, 9309, 9397, 9418, 9571, 9700, 9746, 9755, 9859, 9953, 948072, 948137, 948148, 948150. 948199; also used on <i>Model 81200</i> Series Type Nos. 0161, 948664.	307	93490	Screw—Cylinder Shield Mounting Sem	334	93381	Screw—Armature Mounting Sem
			308	220581	Cover—Cylinder Head	335	93381	Screw—Armature Mounting Sem
				Note:	When ordering Cover—Cyl. Head for Type Nos. listed below, order No. 220884 Stop Switch and No. 220581 Cover together. Used on <i>Model 80200</i> Series Type Nos. 9415, 9452.	336	292149	Cable—Ignition
			312	260404	Spring—Brush		Note:	This group of ignition cables including No. 292149 is used on engines when cable is not molded into the coil.
			321	210711	Pulley—Starter			294519 Cable—Ignition Used on Type Nos. 948076, 948561.
			323	67228	Belt—Vee			294577 Cable—Ignition Used on Type Nos. 948590, 948628, 948644.
			324	220648	Screen—Electric Starter Pulley	337	298809	Plug—Spark (with gasket) (1-1/2" High—37-42 M.M.)
			325	293959	Pulley—Starter (1/2" hole in Pulley)		Note:	29693 Plug—Spark (with gasket) (2" High—51 M.M.)
				Note:	For Pulley with Screen with 5/8" hole in Pulley—order No. 298731.			293918 Plug—Spark Used on <i>Model 80200</i> (with gasket) (1-1/2" High—37 M.M.) (Resistor Type)
					220547 Pulley—Starter (1/2" hole in Pulley) Used on <i>Model 80200</i> Series Type No. 0257.			392588 Plug—Spark (with gasket) (Resistor Type) (2" High—51 M.M.)
304		Housing—Blower	328	221038	Guard—Belt	340	26018	Spring—Breaker Arm
	Note:	For Type Nos. not listed below, see Ref. No. 608.	329	93705	Screw—Belt Guard Mounting Sem	341	93381	Screw—Sem
		294263 Housing—Blower (For Rope Starters) Used on <i>Model 80201</i> , 80231, 80251, 81201, 81231, 81251 Series.	330	395022	Rope—Starter	342	65704	Plunger—Breaker Point
304A	295190	Blower Housing and Brackets (For Electric Starter) Used on <i>Model 80203</i> , 80233, 80253, 81203, 81233, 81253 Series.	331	62577	Washer—Flywheel (1/2" hole)	344	93042	Screw—Condenser Clamp Mounting Sem
				Note:	For Washer with 5/8" Hole—Order No. 220865.			
304B	296792	Housing—Blower (For Wind-up Starter) Used on <i>Model 80206</i> , 81206 Series.	332	91708	Nut—Flywheel (1/2-20 left hand thread)			
				Note:	For Flywheel Nut with 5/8-18 right hand thread—order No. 92284.			

80200 to 80299

81200 to 81299

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
345	220366	Cover—Breaker Point and Condenser			9885, 9945, 9948, 9950, 9953.	455	296455	Cup, Hub, and Spring Assembly
	Note:	222168 Cover—Breaker Point and Condenser Used on <i>Model 80200</i> Series Type Nos. 0447, 0507, 0533, 0576, 0718, 0723, 0837, 0902, 1097, 1105, 1128, 9489, 9599.			391805 Wire—Ground Used on Type Nos. 0016, 0017, 0035, 0036, 0037, 0038, 0039, 0040, 0049, 0718, 0723, 0837, 1056, 2035, 2036, 2049.	456	221222	Plate—Retainer
346	93705	Screw—Sem				458	296305	Handle Assembly—Cranking
347	220884	Switch—Stop (For 1-1/2" High—37 & 42 M.M. Spark Plug)				459	221332	Pawl—Ratchet
	Note:	221808 Switch—Stop (For 2" High—51 M.M. Spark Plug)	357	91539	Key—3/16" Square	460	93272	Retainer—Ratchet Pawl
				Note:	93065 Key—Woodruff Used on Type No. 0719.	461	93231	Screw—Handle Mtg.
347A	298926	Switch—Stop (For 1-1/2" High—37-42 M.M. Spark Plug)	358	297275	Gasket Set	462	221237	Washer—Handle Mtg.
	Note:	293739 Switch—Stop (For 2" High—51 M.M. Spark Plug) Used on Type Nos. 0157, 0178, 0243, 0810, 0823, 0824, 9383, 9700; also used on <i>Model 81200</i> Series Type Nos. 0132, 0170, 948546, 948589, 948591, 948622, 948629, 948638, 951539.	362	291630	Shield—Spark Plug (with stop switch)	463	296445	Holder Assembly—Flywheel
				Note:	89742 Shield—Spark Plug Used on <i>Model 80200</i> Series Type Nos. 9620, 9628, 9958.	464	93291	Rivet—Holder Assy. Mounting
348	296110	Plate Assembly—Stop Switch Insulator	363	19069	Puller—Flywheel (Optional Accessory)	465	221226	Washer—Holder Assy. Mounting
353	92791	Washer—Lock—Shakeproof	370	66432	Washer—Plain	466	93272	Retainer—Holder Control Knob
354	90576	Nut—Hex.—8-32	371	260275	Restrictor—Belt	467	211017	Knob—Control
356	391115	Wire—Ground	372	220477	Clamp—Condensor	467A	212293	Knob—Air Cleaner
	Note:	296185 Wire—Ground Used on Choke-A-Matic Carburetors	375	294628	Breaker Points and Condenser Set	506	90200	Screw—Machine, Fil. Hd.—8-32 x 1/2"
		299500 Wire—Ground Used on Type Nos. 0919, 0920, 0921, 1001, 1012, 1026, 1036, 1049, 1084, 1086, 1094, 1095, 1120, 1124, 1135,		Note:	299061 Ignition Kit Includes: 294628 Point Set 65704 Plunger 61760 Key—Flywheel	507	66895	Insulator
			383	89838	Wrench—Spark Plug		Note:	93722 Terminal—Spade Used on Type No. 9700.
			392	260455	Spring—Fuel Pump Diaphragm	508	93294	Screw—Blower Housing Mounting Sem
			394	270026	Diaphragm	513	296567	Clutch Assembly—Electric Starter
			432	221377	Cap—Spring	515	260537	Spring—Ratchet Pawl
			433	93265	Pin—Diaphragm	516	260374	Spring—Connector
			434	210959	Cover—Diaphragm	520	93722	Terminal—Spade
			435	93141	Screw—Diaphragm Cover	521	297973	Shielding—Ignition Cable
			445	392308	Cartridge—Air Cleaner			Used on and after Serial No. 6212310 on cables molded into ignition coil, and also on Type Nos. 948590, 948628, 948644.
			446	222844	Base—Air Cleaner	523	69345	Cap—Oil Filler
			447	93913	Screw—Cover Mtg.		Note:	297357 Cap—Oil Filler Used on <i>Model 80200</i> Series Type Nos. 2035, 2036, 948136, 948153; also used on <i>Model 81200</i> Series Type No. 948632.
			454	296178	Housing—Fuel Pipe Screen (for 3/16" O.D. Brass Pipe Only)			393526 Cap and Dip Stick—Oil Filler Used on Type No. 2049.
				393768	Housing—Fuel Pipe Screen (for 1/8" O.D. Brass Pipe Only)			

80200 to 80299

81200 to 81299

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
524	65304	Gasket—Oil Filler Cap	534	93322	Screw—Air Cleaner			0236, 0282, 0369,
525	91258	Nipple—Oil Filler		Note: 93568	Screw—Air Cleaner			0407, 0413, 0447,
	Note:	Use 394884 Adaptor—Oil Filler with Nipple		270551	Spacer—Air Cleaner Screw			0461, 0474, 0500,
526	93343	Screw—Tank Bracket Mounting Sem			Used on Model 80200 Series Type Nos. 0357, 0458, 0515, 0680.			0507, 0533, 0576,
	Note: 93686	Screw—Tank Bracket to Cylinder Mounting Sem		230058	Stud—Air Cleaner			0595, 0602, 0626,
	Uses:	66432 Washer Used on Type Nos. 0019, 0205, 0237, 0268, 0292, 0299, 0318, 0330, 0365, 0378, 0381, 0399, 0465, 0476, 0487, 0491, 0492, 0502, 0503, 0512, 0528, 0542, 0553, 0554, 0568, 0570, 0573, 0583, 0592, 0600, 0614, 0652, 0657, 0659, 0666, 0696, 0701, 0727, 0734, 0736, 0751, 0761, 0787, 0796, 0799, 0801, 0805, 0808, 0848, 0850, 0851, 0858, 0860, 0862, 0869, 0872, 0875, 0876, 0877, 0880, 0888, 0908, 0909, 0915, 0917, 0922, 0929, 0935, 0936, 1003, 1008, 1014, 1042, 1048, 1058, 1064, 1067, 1070, 1088, 1107, 1108, 1115, 1130.		534A	93818	Screw—Air Cleaner		0633, 0659, 0670,
			535	27987	Element—Air Cleaner			0690, 0699, 0712,
				Note: 390492	Element—Air Cleaner			0716, 0718, 0735,
				Uses:	390588 Cover—Air Cleaner			0739, 0758, 0765,
					221969 Support—Air Cleaner	541	22398	Washer—Speed Adjuster and Governor Lever
					270730 Gasket—Air Cleaner			
					Used on Type No. 0548.	542	393586	Screw—Machine, Fil. Hd.
			535A	270979	Element—Air Cleaner		Note: 93686	Screw Self Tapping
			536	296766	Cleaner Assy.—Air			221372 Clip—Speed Control Rod
			538	260683	Rod—Speed Control (Square Rod)			Used only with Round Wire Control Rod
				Note:	For Round Wire Rod order:	549	271118	Washer—Air Cleaner
					260560 Rod—Speed Control	549A	270978	Washer (Below Internal Screw Head)
					Link—Rod (Used only with Square Rod)	608	294259	Starter Assy.—Rewind (10 o'clock)
527	221279	Clamp—Breather Tube			Lever—Speed Adjuster		Note: 294282	Starter Assy.—Rewind (4 o'clock)
528	230634	Tube—Breather			Note: 220678			Used on Model 80200 Series Type Nos. 0247, 948068.
	Note: 66638	Tube—Breather Used on Type No. 948561.	539	260684	Link—Rod (Used only with Square Rod)			
529	67608	Grommet—Breather Tube	540	221380	Lever—Speed Adjuster			
530	296304	Housing Assy.—Pawl			Used on Model 80200 Series Type Nos. 0137, 0147, 0167, 0175, 0192, 0228,			
531	230615	Ratchet—Top Starter						
532	260500	Washer—Spring						
533	67478	Knob—Stop						

26

80200 to 80299

81200 to 81299

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
	294337	Starter Assy.— Rewind (12 o'clock) Used on <i>Model 80200</i> Series Type Nos. 0015, 0016, 0018, 0019, 0035, 0036, 0037, 0038, 0039, 0040, 0049, 0157, 0172, 0211, 0231, 0260, 0266, 0270, 0278, 0291, 0301, 0329, 0339, 0342, 0351, 0361, 0366, 0373, 0385, 0388, 0392, 0398, 0399, 0400, 0402, 0404, 0405, 0406, 0408, 0410, 0420, 0424, 0425, 0427, 0430, 0431, 0437, 0441, 0446, 0447, 0448, 0463, 0466, 0468, 0471, 0472, 0478, 0482, 0483, 0494, 0500, 0507, 0508, 0514, 0516, 0527, 0533, 0537, 0543, 0544, 0545, 0547, 0550, 0552, 0555, 0556, 0564, 0570, 0573, 0576, 0586, 0591, 0602, 0605, 0608, 0610, 0611, 0612, 0621, 0624, 0637, 0640, 0646, 0657, 0658, 0659, 0661, 0662, 0663, 0664, 0665, 0666, 0667, 0675, 0681, 0682, 0687, 0688, 0728, 0733, 0734, 0736, 0739, 0742, 0759, 0760, 0761, 0762, 0763, 0766, 0771, 0775, 0782, 0786, 0787, 0788, 0790, 0794, 0795, 0797, 0801, 0803, 0805, 0814, 0815, 0816, 0822, 0825, 0826, 0845, 0846, 0848, 0849, 0851,		0855, 0862, 0864, 0865, 0866, 0867, 0870, 0872, 0873, 0874, 0876, 0896, 0900, 0901, 0903, 0904, 0905, 0910, 0914, 0918, 0919, 0925, 0932, 0933, 0939, 1001, 1005, 1008, 1012, 1015, 1016, 1024, 1025, 1027, 1031, 1036, 1039, 1040, 1042, 1046, 1047, 1048, 1050, 1054, 1056, 1058, 1059, 1064, 1065, 1067, 1068, 1070, 1074, 1075, 1076, 1077, 1078, 1083, 1088, 1091, 1094, 1096, 1098, 1104, 1108, 1111, 1112, 1114, 1116, 1118, 1122, 1124, 1127, 1129, 1130, 1132, 1136, 1137, 1138, 1139, 2035, 2036, 2049, 9044, 9347, 9620, 9631, 9643, 9830, 9868, 9878, 9893, 9945, 9947, 9950, 9958, 948075, 948105, 948132, 948157, 948167, 948181, 948183, 948185; also used on <i>Model 81200</i> Series Type No. 948622. 295038 Starter Assy.— Rewind (6 o'clock) Used on <i>Model 80200</i> Series Type No. 0151. 295816 Starter Assy.— Rewind (3 o'clock) Used on <i>Model 80200</i> Series Type Nos. 0207, 0209, 0282, 0313, 0316, 0335, 0462, 0523, 0616, 0685, 0744, 1003, 1043, 9312,		948051, 948186, 948219. 296894 Starter Assy.— Rewind (1:30 o'clock) Used on <i>Model 80200</i> Series Type Nos. 0142, 0177, 0237, 0248, 0353, 0355, 0477, 0506, 0540, 0583, 0592, 0615, 0626, 0680, 0697, 0708, 0716, 0727, 0731, 0785, 0834, 0930, 1002, 1053, 948073, 951040; also used on <i>Model</i> <i>81200</i> Series Type Nos. 948597, 948598. 609 260564 Spring—Throttle Link Used on Mechanical Governor Series 9000 and up; also 951010 to 951999. 611 391813 Fuel Pipe and Clip Assembly Note: 297219 Pipe—Fuel (2-5/8" long) Plastic Used on <i>Model 80200</i> Series Type Nos. 0162, 0175, 0205, 0237, 0262, 0266, 0268, 0292, 0299, 0318, 0330, 0365, 0378, 0381, 0465, 0476, 0487, 0491, 0492, 0502, 0503, 0512, 0514, 0528, 0542, 0553, 0554, 0568, 0570, 0573, 0583, 0600, 0614, 0615, 0652, 0657, 0659, 0666, 0696, 0701, 0727, 0734, 0736, 0751, 0761, 0848, 0850, 0851, 0858, 0860, 0862, 0869, 0872, 0875, 0876, 0877, 0880, 0888, 0908, 0909, 0915, 0917, 0922, 0929, 0936, 1003, 1008, 1014, 1048, 1130, 9305, 9324.		

27

80200 to 80299

81200 to 81299

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		9409, 9414, 9415, 9452, 948097, 948102, 948105, 948106, 948126, 948133, 948136, 948143, 948151, 948152, 948153, 948157, 948158, 948164, 948168, 948193, 948204; also used on Model 81200 Series Type Nos. 0163, 0177, 948546, 948549, 948552, 948598, 948622, 948630, 948632, 948638.	629	260546	Spring—Throttle Return	642	222626	Cover—Air Cleaner
612	296811	Pipe—Fuel (1-5/8" long) Plastic		Note: 260871	Spring—Throttle Return	643	222991	Cup—Air Cleaner
614	221384	Bracket			Used on Model 80200 Series Type Nos. 0431, 0435, 0436, 0437, 0441, 0443, 0446, 0449, 0454, 0463, 0468, 0470, 0472, 0478, 0482, 0522, 0524, 0531, 0543, 0555, 0565, 0569, 0585, 0748, 0776, 0793, 0800, 0812, 0820, 0831, 0838, 0899, 0923, 0939, 1005, 1011, 1018, 1019, 1092, 1139.	643A	222845	Cup—Air Cleaner
	Note: 222161	Anchor—Spring	630	221425	Arm—Throttle Control	643B	222594	Cup—Air Cleaner
		Used on Model 80200 Series Type Nos. 0431, 0435, 0436, 0437, 0441, 0443, 0446, 0449, 0454, 0463, 0468, 0470, 0472, 0478, 0482, 0522, 0524, 0531, 0543, 0555, 0565, 0569, 0585, 0748, 0776, 0793, 0800, 0812, 0820, 0831, 0838, 0899, 0923, 0939, 1005, 1011, 1018, 1019, 1092, 1139.	631	221427	Washer—Throttle Control Arm	645	23513	Bushing—Plunger
			632	260575	Spring—Governor Control Lever	665	298858	Oil Minder
			633	93364	Screw—Machine, Rd. Hd.—6-32 x 7/8"	676	393760	Deflector—Muffler
				Note: 90056	Screw—Machine, Rd. Hd.—6-32 x 5/8" Used on Model 80200 Series Type Nos. 9023, 9024, 9253, 9347, 9440, 9469, 9563; also used on Model 81200 Series Type Nos. 9139, 951541.		Note:	For Spark Arrestor Assy. use No. 392190 on Type Nos. 0836, 1043, 1072, 1140, 2035, 2036, 2049.
621	297472	Switch—Stop						For Spark Arrestor Assy. use No. 392191 on Type Nos. 0925, 9804, 9894.
628	93149	Screw—Machine, Rd. Hd. 5-40 x 3/8"	634	270167	Washer—Throttle Shaft (Felt)	681	299060	Needle Valve Kit
			635	66538	Elbow—Spark Plug	682	211516	Shield—Starter Clutch
				Note: 393904	Elbow—R.F. Suppressor (Only used with Spark Plug 29693) Used on Type No. 9944.	822	296732	Starter Assy.—Wind-Up
						851	221798	Terminal—Ignition Cable
						852	392368	Cleaner Assy.—Air
							Note:	Dual Element Air Cleaner Kit Part No. 393018.
						854	392884	Bracket Assy.—Stop Switch
						869	210879	Seat—Intake Valve (Standard)
							Note:	For Options see Repair Manual.
						870	211291	Seat—Exhaust Valve (Standard)
							Note:	For Options see Repair Manual.
						871	63709	Guide—Exhaust Valve
						898	92507	Lockwasher—Internal Tooth
						899	93397	Lockwasher—External Tooth