

110900 to 110999

Illustrated Parts List

Model Series 110900 to 110999

TYPE NUMBERS
0010 through 0051
0109 through 0473

TO FIND

THE CORRECT NUMBER OF THE PART YOU NEED:

FOLLOW THE INSTRUCTIONS BELOW


- A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed herein only as 0123. The two digits (01 or 02, etc.) to the right of the space are not needed for parts identification. Then use the Illustrated Parts List covering these Model Series.
- B. Refer to Illustrated Parts section and compare the old part with illustration. The number on the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames on which individual reference numbers are given can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical Parts List, where Reference and Master Part Numbers are listed. **THE MASTER PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE"**.
- D. If a "Note" appears below the Master Part Number, this means that this part differs from the Master Part for certain types. If the Type Number is listed under "Note", order the part referred to.
- E. If the Engine Type Number does not appear after any part number listed under "Note", use the Master Part Number.
- F. For Type Numbers higher than those covered by this book, please refer to the factory if you are unable to identify the part by comparison.

PRINTED IN U.S.A.




COPYRIGHT ©

110900 to 110999

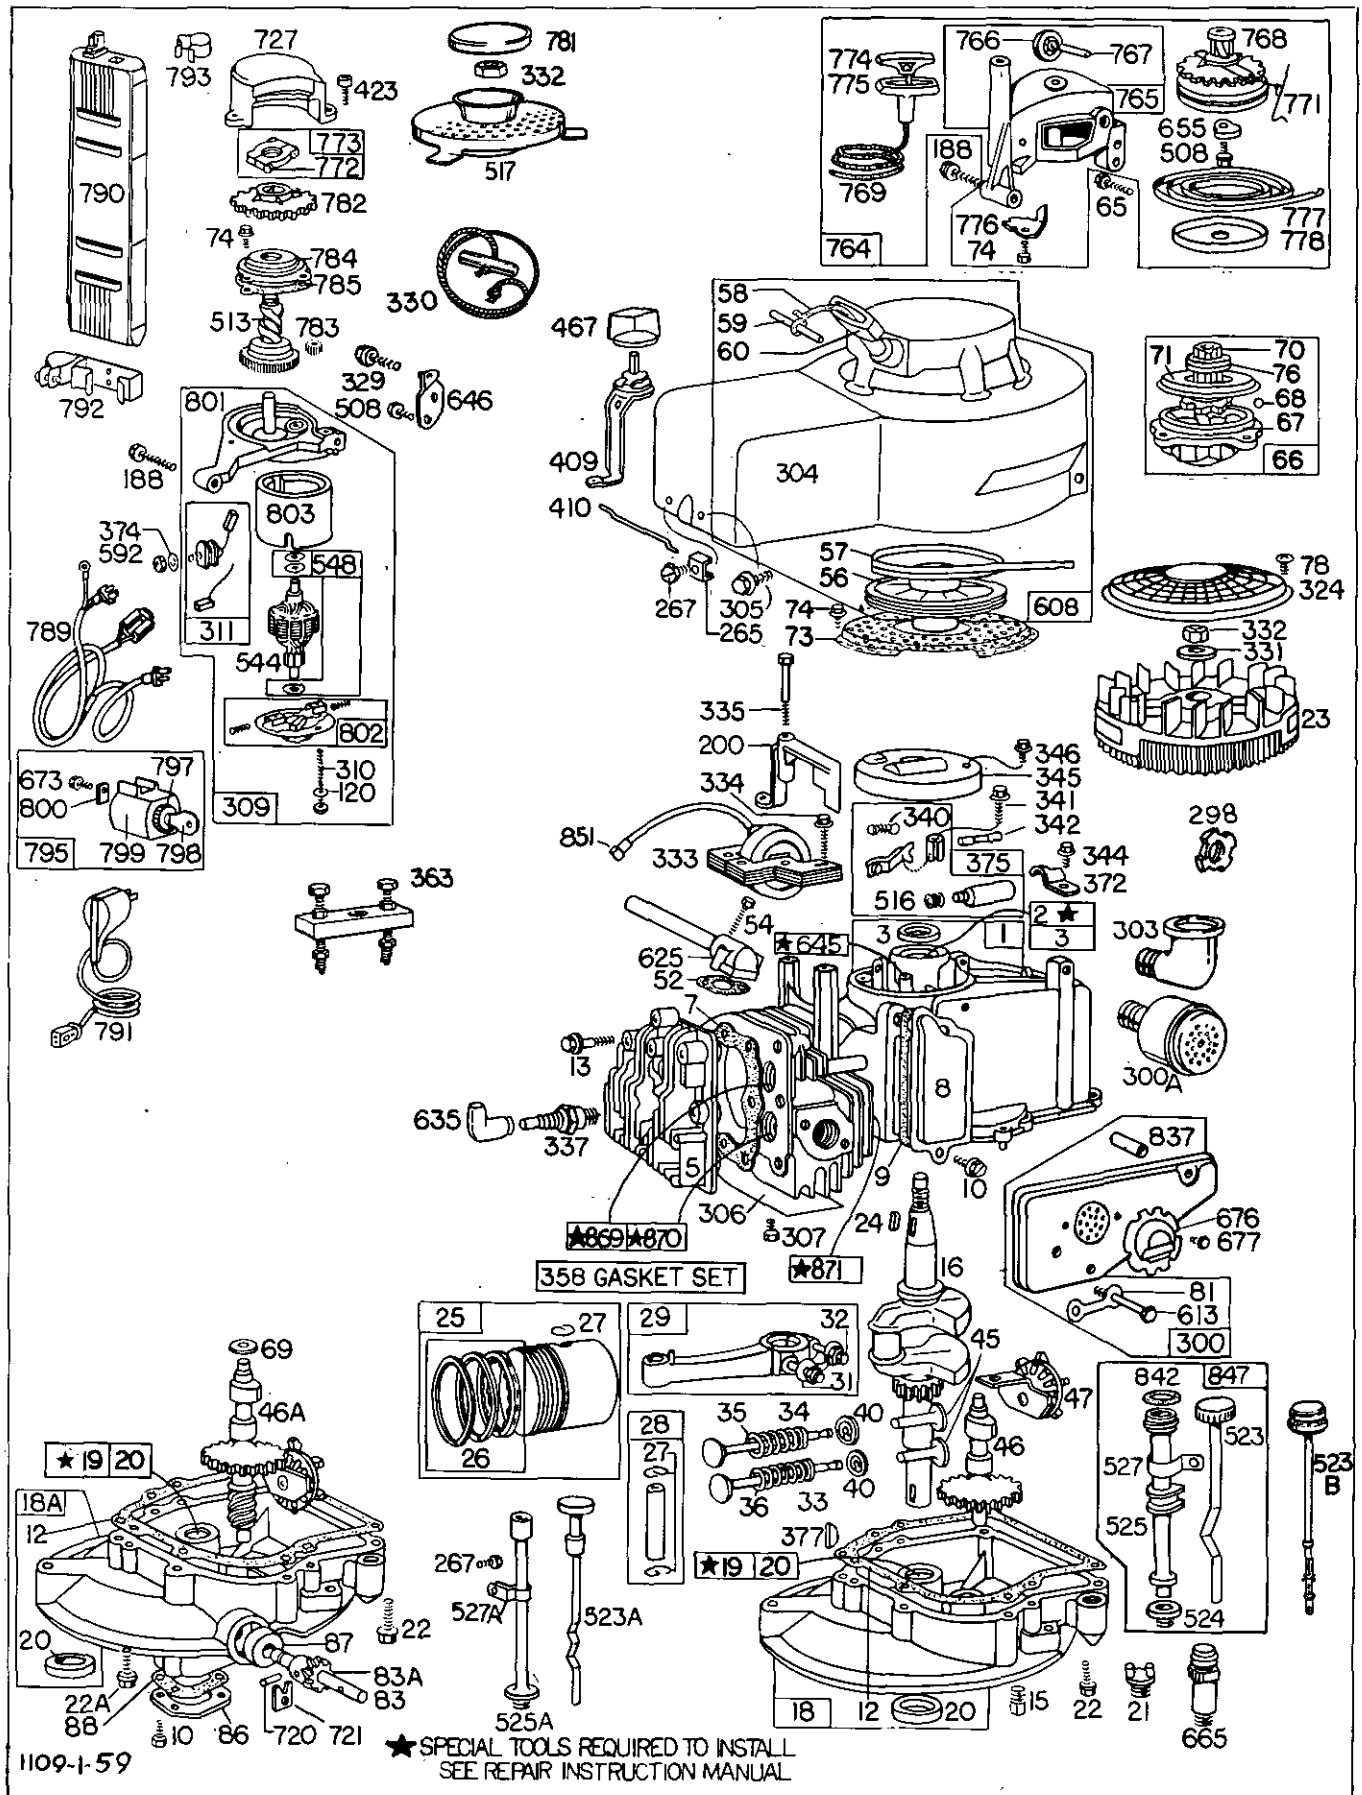

Assemblies include all parts shown in frames.

110900 to 110999

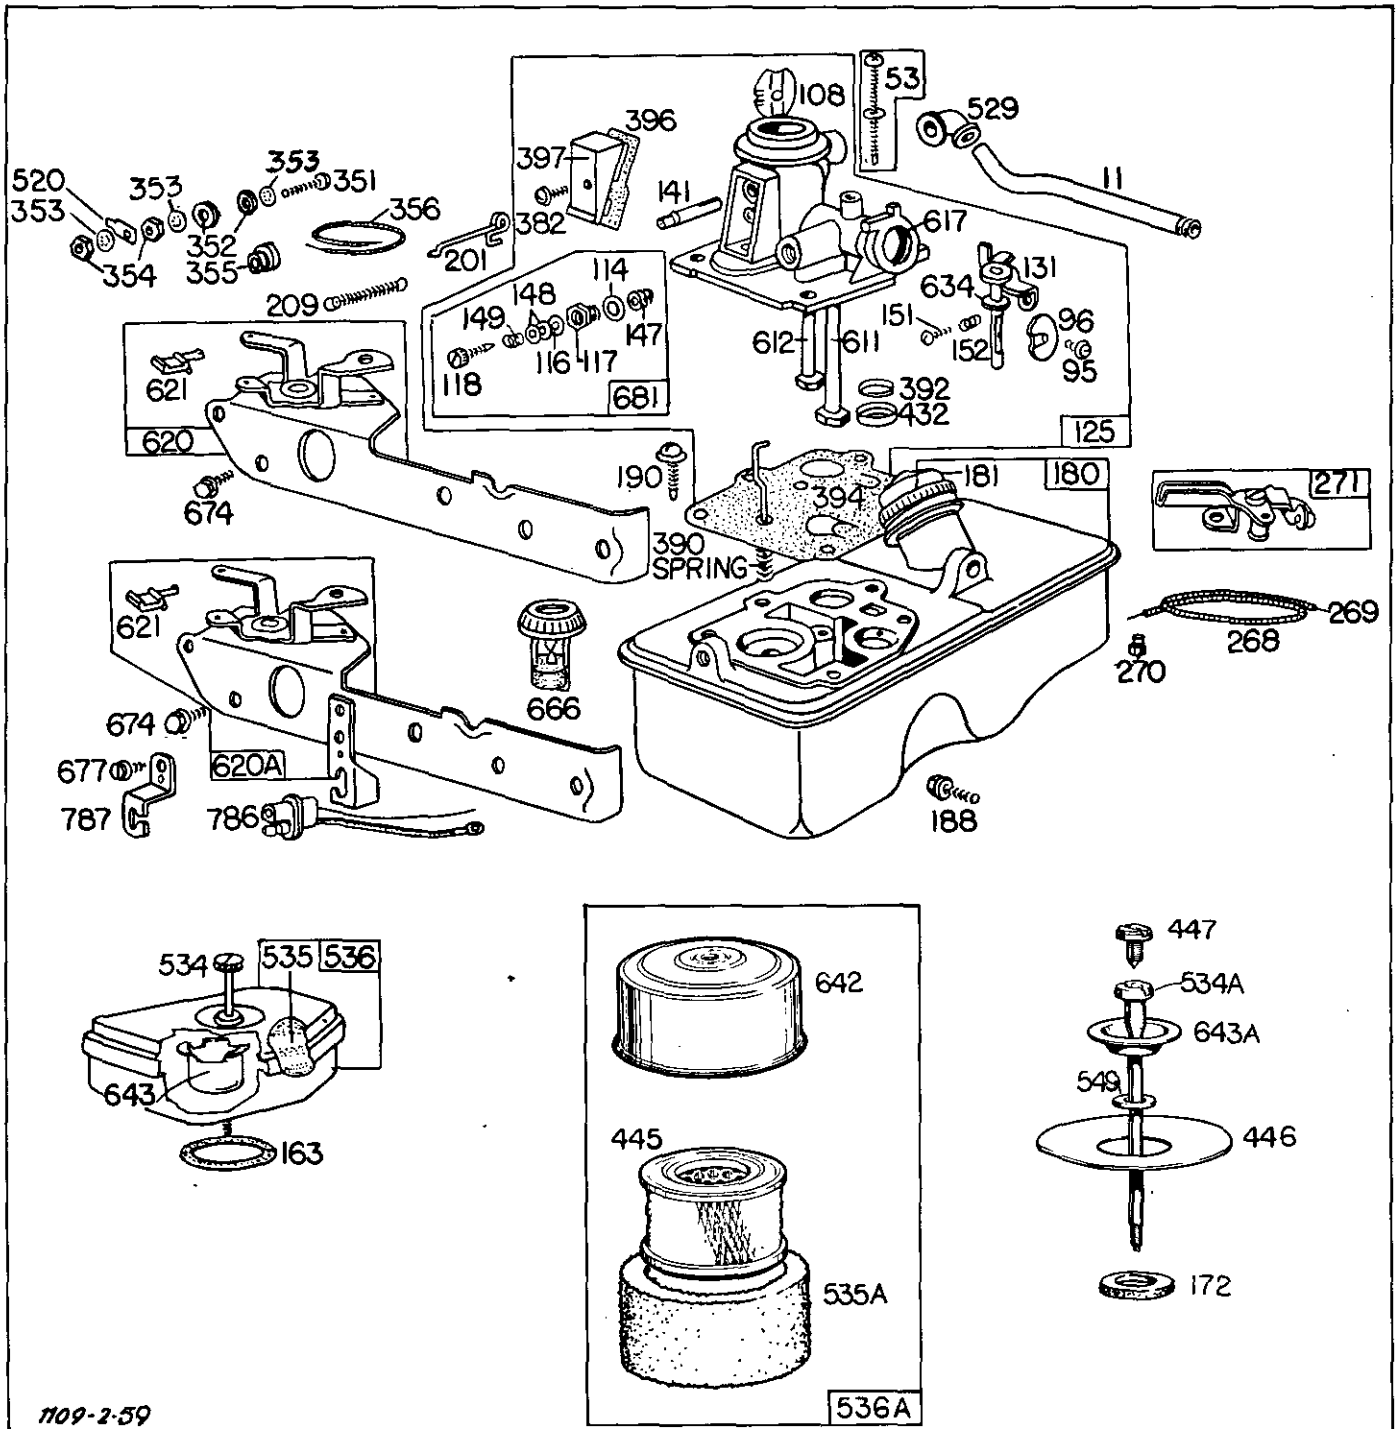

Assemblies include all parts shown in frames.

110900 to 110999

REF. NO. I - 16

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	391639	Cylinder Assembly		0262, 0263, 0266,			0315, 0316, 0320,	
2	293708	Bushing-Cylinder		0271, 0274, 0285,			0321, 0324, 0325,	
	Note:	Requires special tools for installation.		0292, 0300, 0306,			0327, 0335, 0337,	
3	299819	Seal-Oil		0313, 0318, 0319,			0339, 0345, 0346,	
5	211851	Head-Cylinder		0322, 0323, 0340,			0349, 0350, 0351,	
7	*270836	Gasket-Cylinder Hd.		0352, 0355, 0369,			0360, 0362, 0365,	
8	298383	Breather-Valve Chamber		0373, 0387, 0391,			0368, 0378, 0381,	
				0392, 0402, 0417,			0382, 0385, 0388,	
				0418, 0420, 0426,			0389, 0390, 0393,	
9	*270239	Gasket-Valve Cover		0433, 0467, 0468.			0396, 0400, 0407,	
10	93394	Screw-Breather and P.T.O. Gear Sump Cover (Ref. No. 86) Mounting Sem		261253 Crankshaft			0410, 0413, 0414,	
				Used on type Nos.			0423, 0427, 0443,	
				0017, 0119, 0170,			0444, 0445, 0446,	
				0175, 0223, 0225,			0447, 0449, 0450,	
11	231043	Tube-Breather		0258, 0275, 0278,			0451, 0452, 0453,	
12	*270833	Gasket-Crankcase-.015" thick (Standard)		0311, 0363, 0376.			0455, 0457, 0461,	
	*270895	Gasket-Crankcase-.005" thick		261254 Crankshaft			0462, 0464, 0466,	
	*270896	Gasket-Crankcase-.009" thick		Used on type Nos.			0468, 0469, 0470.	
				0018, 0120, 0172,			261263 Crankshaft	
				0182, 0184, 0192,			Used on type Nos.	
				0195, 0197, 0221,			0138, 0185, 0210,	
13	93111	Screw-Cylinder Hd. (1-15/16" long)		0226, 0227, 0282,			0211, 0212, 0213,	
	Note:	93772 Stud-Cylinder Head (2)		0291, 0301, 0305,			0240, 0243, 0244,	
		22963 Washer (2)		0326, 0328, 0330,			0264, 0287, 0288,	
		Used on type No. 0310.		0343, 0353, 0359,			0298, 0299, 0331,	
				0364, 0366, 0421,			0347, 0348, 0377,	
				0422, 0430, 0438,			0403, 0406, 0408,	
				0441, 0459, 0472,			0411, 0416, 0431,	
				0473.			0435, 0436, 0454.	
15	91084	Plug-Oil Drain		261256 Crankshaft			261264 Crankshaft	
	Note:	93418 Plug-Oil Drain (Socket Head)		Uses:			Used on type Nos.	
		Used on type Nos.		220708 Shim-			0139, 0171, 0235,	
		0172, 0178, 0180,		Crankshaft, Thrust			0342.	
		0199, 0255, 0257,		Used on type Nos.			261265 Crankshaft	
		0258, 0265, 0275,		0149, 0166.			Used on type Nos.	
		0277, 0278, 0279,		261262 Crankshaft			0140, 0180, 0189,	
		0293, 0294, 0330,		Used on type Nos.			0190, 0193, 0220,	
		0341, 0346, 0355,		0050, 0051, 0137,			0229, 0231, 0256,	
		0357, 0358, 0365,		0161, 0173, 0174,			0257, 0276, 0277,	
		0371, 0372, 0420,		0176, 0178, 0183,			0279, 0289, 0290,	
		0433, 0434, 0443,		0188, 0191, 0209,			0344.	
		0452, 0459, 0463,		0215, 0216, 0217,			261266 Crankshaft	
		0468.		0219, 0222, 0224,			Uses:	
				0228, 0232, 0233,			220708 Shim-	
				0234, 0236, 0239,			Crankshaft, Thrust	
				0245, 0249, 0265,			Used on type Nos.	
				0267, 0269, 0272,			0150, 0196, 0198,	
				0280, 0284, 0286,			0252.	
				0293, 0294, 0296,			261280 Crankshaft	
				0297, 0302, 0303,			Used on type No.	
				0308, 0310, 0314,			0199, 0357, 0358,	

* Included in Gasket Set Part No. 391662.

REF. NO. 16 - 65

110900 to 110999

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		0371, 0372, 0428, 0429.	25	391650	Piston Assy. - Standard	45	261250	Tappet-Valve
		261281 Crankshaft Used on type No. 0201.		391651	Piston Assy. - .010" O.S.	46	212021	Gear-Cam
		261353 Crankshaft Used on type Nos. 0341, 0375, 0380, 0405, 0424, 0425.		391652	Piston Assy. - .020" O.S.		Note:	212026 Gear-Cam Used on <i>Model 110995</i> and <i>110998</i> Series.
		261514 Crankshaft Used on type Nos. 0442, 0460.		391653	Piston Assy. - .030" O.S.	46A	391389	Cam Gear, Worm And Oil Slinger Assy.
18	391644	Sump-Oil	PISTON RING SETS:				Note:	391388 Cam Gear, Worm and Oil Slinger Assembly Used on type Nos. 0051, 0173, 0178, 0183, 0185, 0191, 0193, 0211, 0217, 0219, 0231, 0232, 0236, 0239, 0240, 0256, 0257, 0265, 0267, 0269, 0272, 0276, 0277, 0279, 0280, 0284, 0286, 0287, 0288, 0293, 0294, 0297, 0298, 0299, 0308, 0310, 0320, 0321, 0324, 0325, 0331, 0335, 0337, 0345, 0346, 0348, 0349, 0350, 0351, 0403, 0407, 0408, 0414, 0427, 0442, 0444, 0445, 0446, 0447, 0449, 0450, 0453, 0455, 0457, 0464, 0469, 0470.
	Note:	391646 Sump-Oil Used on <i>Model 110995</i> and <i>110998</i> Series.	26	391654	Ring Set-Standard Piston			
		391647 Sump-Oil Used on type No. 0199.		391656	Ring Set-.010" O.S. Piston			
		392381 Sump-Oil Used on type Nos. 0341, 0375, 0380, 0405, 0424, 0425.		391658	Ring Set-.020" O.S. Piston			
18A	391645	Sump-Oil Used on <i>Model 110985</i> and <i>110988</i> Series.		391660	Ring Set-.030" O.S. Piston			
19	293709	Bushing-Oil Sump	27	26026	Lock-Piston Pin			
	Note:	Requires special tools for installation.	28	391649	Pin Assembly-Piston- Standard			
20	391483	Seal-Oil	29	391640	Rod Assembly- Connecting			
	Note:	391485 Seal-Oil (Crankshaft-P.T.O. Side)	31	222390	Lock-Connecting Rod Screw			
		391484 Seal-Oil (1/2" Auxiliary Drive Shaft) Used on <i>Model 110995</i> and <i>110998</i> Series.	32	93670	Screw-Connecting Rod			
21	66768	Plug-Oil Filler	33	212004	Valve-Exhaust			
22	93032	Screw-Sump Mtg. Sem		Note:	212157 Valve-Exhaust Used on type Nos. 0404, 0412, 0451, 0455.			
22A	93415	Screw-Sump Mtg. Sem (One used in Auxiliary Drive Gear Sump) on <i>Model 110985</i> and <i>110988</i> Series.	34	261233	Valve-Intake			
	Note:	Use 93032 Screw in the other (5) Sump Mounting Holes.	35	260552	Spring-Intake Valve			
23	391488	Flywheel-Magneto	36	26478	Spring-Exhaust Valve			
24	61760	Key-Flywheel		Note:	26826 Spring-Exhaust Valve Used on type Nos. 0404, 0412, 0451, 0455.	47	294652	Oil Slinger Gear and Bracket
			40	93312	Retainer-Valve Spring Used with valves with groove in stem.	52	*270844	Gasket-Intake Elbow
				Note:	292259 Rotocap- Exhaust Valve	53	391982	Screw-Tank to Carburetor
					230126 Pin-Exhaust Valve Rotocap Retainer	54	93485	Screw-Intake Elbow Mounting
					230127 Retainer- Exhaust Valve Rotocap Used on type Nos. 0404, 0412, 0451, 0455.	56	280117	Pulley-Starter
						57	294303	Spring-Rewind Starter
						58	66694	Rope-Rewind Starter- 63" long (For use with Plastic Pulley)
						59	230228	Pin-Starter Grip
						60	393152	Grip-Starter Rope
						65	93587	Screw-Vertical Pull Starter Mounting

110900 to 110999

REF. NO. 66 - 209

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
66	298310	Clutch Assy. -Rewind Starter		0390, 0393, 0413, 0466.	86	221780	Cover-Sump	
67	212131	Housing-Starter Clutch		230921 Shaft-Drive Used on type Nos.	87	391484	Seal-Oil	
68	63770	Ball-Clutch		0217, 0222, 0302, 0407.	88	270328	Gasket-Sump Cover	
69	66874	Washer-Thrust		230948 Shaft-Drive Used on type Nos.	95	93499	Screw-Throttle Valve Mounting Sem	
	Note:	68938 Washer-Thrust Used on type Nos. 0051, 0173, 0178, 0183, 0185, 0191, 0193, 0211, 0217, 0219, 0231, 0232, 0236, 0239, 0240, 0256, 0257, 0265, 0267, 0269, 0272, 0276, 0277, 0279, 0280, 0284, 0286, 0287, 0288, 0293, 0294, 0297, 0298, 0299, 0308, 0310, 0320, 0321, 0324, 0325, 0331, 0335, 0337, 0393, 0403, 0407, 0408, 0414, 0427, 0442, 0444, 0445, 0446, 0447, 0449, 0450, 0453, 0455, 0457, 0464, 0469, 0470.		0183, 0191, 0209, 0210, 0264, 0286, 0287, 0288, 0310, 0339, 0388, 0403, 0408, 0416, 0423, 0431, 0449, 0450, 0455, 0460, 0461.	96	211237	Valve-Throttle	
				230952 Shaft-Drive Used on type Nos. 0219, 0224, 0231, 0232, 0327, 0400, 0406, 0443, 0446, 0453, 0469.	108	280178	Valve-Choke	
				230987 Shaft-Drive Used on type Nos. 0190, 0289, 0290.	114	66594	Gasket-Needle Valve Nut	
				231213 Shaft-Drive Used on type No. 0462.	116	65978	Packing-Needle Valve	
70	298436	Ratchet-Rewind Starter	83A	230856 Gear-Drive	117	230590	Nut-Needle Valve	
71	221653	Washer-Clutch Retainer		Note: 230906 Gear-Drive Used on type Nos. 0051, 0173, 0178, 0183, 0185, 0191, 0193, 0211, 0217, 0219, 0231, 0232, 0236, 0239, 0240, 0256, 0257, 0265, 0267, 0269, 0272, 0276, 0277, 0279, 0280, 0284, 0286, 0287, 0288, 0293, 0294, 0297, 0298, 0299, 0308, 0310, 0320, 0321, 0324, 0325, 0331, 0335, 0337, 0385, 0393, 0396, 0403, 0407, 0408, 0414, 0427, 0442, 0444, 0445, 0446, 0447, 0449, 0450, 0453, 0455, 0457, 0464, 0469, 0470.	118	23433	Valve-Needle	
73	221661	Screen-Starter Pulley			120	92290	Washer-Lock- No. 10 x 1/16 x 3/64"	
74	93490	Screw-Sem			125	391642	Carburetor Assembly	
76	68238	Washer-Ratchet Sealing			131	299977	Shaft and Lever- Throttle	
78	93758	Screw-Screen Mtg. (4)			141	68908	Shaft-Choke	
81	222237	Lock-Muffler Screw			147	231049	Seat-Needle Valve	
83	230831	Shaft-Drive			148	22235	Washer-Needle Valve (2)	
	Note:	230860 Shaft-Drive Used on type Nos. 0171, 0180, 0297, 0320, 0337, 0342.			149	26336	Spring-Needle Valve	
		230870 Shaft-Drive Used on type Nos. 0185, 0189, 0215, 0229, 0240, 0256, 0257, 0276, 0277, 0279, 0298, 0299, 0316, 0331, 0389,			151	93524	Screw-Rd. Hd. - 5-40 x 1/2	
					152	260746	Spring-Throttle Adj.	
					163	271139	Gasket-Air Cleaner Mounting	
					172	271077	Gasket-Air Cleaner	
					180	391694	Tank Assembly-Fuel	
					181	298425	Cap-Fuel Tank	
						Note:	391494 Cap-Fuel Tank (Chrome)	
					188	93585	Screw-Fuel Tank and Starter Mounting	
					190	93440	Screw-Fuel Tank Mtg.	
					200	68388	Blade-Governor	
					201	261027	Link-Governor	
					209	260875	Spring-Governor (For 3400 to 3600 RPM Top Speed Set-No Load)	
						Note:	260876 Spring-Governor (For 3900 to 4100 RPM Top Speed Set-No Load) Used on type No. 0255.	

REF. NO. 209 - 300

110900 to 110999

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
	260877	Spring—Governor (For 3200 to 3400 RPM Top Speed Set—No Load) Used on type Nos. 0173, 0174, 0188, 0192, 0196, 0198, 0210, 0213, 0225, 0228, 0233, 0234, 0241, 0242, 0252, 0253, 0258, 0261, 0262, 0270, 0275, 0278, 0282, 0283, 0285, 0295, 0301, 0314, 0315, 0319, 0326, 0328, 0340, 0342, 0347, 0357, 0358, 0366, 0373, 0374, 0376, 0399, 0400, 0404, 0411, 0430, 0431, 0453, 0456, 0463, 0467.		0324, 0325, 0327, 0330, 0333, 0339, 0344, 0353, 0361, 0378, 0379, 0383, 0386, 0420, 0433, 0438, 0442, 0449, 0450, 0460, 0461, 0472, 0473.			0284, 0286, 0287, 0288, 0312, 0313, 0317, 0341, 0370, 0401, 0402, 0403, 0406, 0419, 0436, 0454, 0457, 0458.	
	261034	Spring—Governor (For 2900 to 3100 RPM Top Speed Set—No Load) Used on type Nos. 0175, 0176, 0179, 0182, 0183, 0184, 0200, 0220, 0221, 0222, 0226, 0230, 0235, 0302, 0310, 0318, 0345, 0348, 0349, 0351, 0356, 0359, 0377, 0393, 0407, 0413, 0427, 0434, 0459, 0462.		261061 Spring—Governor (For 3600 to 3800 RPM Top Speed Set—No Load) Used on type Nos. 0297, 0303, 0316, 0418, 0443, 0446.			261312 Spring—Governor (For 2400 to 2600 RPM) Used on type Nos. 0375, 0425.	
	261060	Spring—Governor (For 3100 to 3300 RPM Top Speed Set—No Load) Used on type Nos. 0016, 0017, 0018, 0050, 0051, 0178, 0181, 0185, 0190, 0240, 0247, 0265, 0272, 0289, 0290, 0293, 0294, 0309.		261105 Spring—Governor (For 3000 to 3200 RPM) Used on type Nos. 0170, 0171, 0172, 0173, 0186, 0187, 0189, 0194, 0197, 0201, 0223, 0227, 0229, 0231, 0232, 0248, 0256, 0257, 0259, 0264, 0273, 0276, 0277, 0279, 0280, 0298, 0299, 0307, 0308, 0311, 0331, 0332, 0335, 0346, 0352, 0362, 0363, 0369, 0381, 0384, 0388, 0389, 0390, 0392, 0395, 0396, 0397, 0398, 0408, 0414, 0416, 0417, 0420, 0423, 0428, 0429, 0432, 0447, 0448, 0466, 0467.			261419 Spring—Governor (For 2500 to 2700 RPM) Used on type Nos. 0380, 0405, 0424.	
						265	22372	Clamp—Casing
						267	93469	Screw—Clamp Mtg.
						268	66986	Casing—Control Wire—48" long <i>Note: If longer casing is needed, specify length in inches; if a shorter casing is needed order No. 66986 and cut to required length.</i>
						269	26099	Wire Control, 54" long <i>Note: If longer wire is needed, specify length in inches; if shorter wire is needed order No. 26099 and cut to required length.</i>
						270	63426	Locknut—Control Wire Casing
						271	290568	Lever Assembly Control
						298	220859	Locknut—Muffler
						300	391492	Muffler—Exhaust (Includes No. 270774 Mounting Gasket) <i>Note: 393400 Muffler—Exhaust Used on type Nos. 0411, 0448.</i>

110900 to 110999

REF. NO. 300A - 523

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION		
300A	391435	Muffler-Exhaust			Used on type Nos.	374	92813	Washer-Lock-Shakeproof		
	Note:	298830 Muffler-Exhaust			0251, 0261, 0262,	375	294628	Breaker Points and Condenser Set		
		Uses:			0295, 0326, 0339,		Note:	299061 Ignition Kit		
		91943 Elbow-Exhaust			0359, 0360, 0388,			Includes:		
		220859 Locknut-Muffler			0421, 0423, 0438.			294628 Point Set		
		Used on type Nos.			293918 Plug-Spark			65704 Plunger		
		0282, 0289, 0290,			(with Gasket)	377	93065	61760 Key-Flywheel		
		0291, 0320.			1-1/2" high (Resistor type)	382	93545	Key-Woodruff No. 6		
		299106 Muffler-Exhaust			392588 Plug-Spark			Screw-Choke Link Cover		
		Used on type Nos.	340	26018	(with Gasket)	390	261249	Spring-Diaphragm		
		0233, 0234, 0347,	341	93381	2" high (Resistor type)	392	260455	Spring-Fuel Pump Diaphragm		
		0366, 0430, 0431,	342	65704	392588 Plug-Spark	394	391643	Diaphragm-Carburetor		
		0447.			(with Gasket)	396	270571	Gasket-Choke Link Cover		
303	91943	Elbow-Exhaust			2" high (Resistor type)	397	211678	Cover-Choke Link Control-Dial		
304	391636	Housing-Blower			344	93042	409	391590	Control-Dial	
305	93559	Screw-Blower Housing Mounting Sem			Screw-Condenser Clamp Mounting Sem	410	260993	423	93599	Screw-Sem
					345	220366	432	221377	Cap-Spring	
306	222394	Shield-Cylinder			Cover-Breaker Point and Condenser	436	93705	445	392308	Cartridge-Air Cleaner
307	93490	Screw-Cylinder Shield Mounting Sem			Screw-Dust Cover Mounting	446	222844	447	93817	Screw-Cover Mtg.
309	391551	Motor-Starter			351	93735	Screw-Terminal	467	299858	Knob-Dial Control
310	93774	Bolt-Starter Motor			352	66068	Washer-Insulating	508	93158	Screw-Sem
311	390204	Brush Kit-Starter Motor			353	92791	Washer-Lock-Shakeproof (3)	513	390074	Clutch Assembly
324	280140	Screen-Rotating			354	90576	Nut-Hex. -8-32 (2)	516	260374	Spring-Connector
329	93294	Screw-Sem			355	66554	Collar-Insulating	517	392765	Pulley-Starter Rope
330	391609	Rope-Starter (For use on all Engines with Electric Starters with Auxiliary Rope Pulley)			356	298479	Wire-Ground	520	93722	Terminal-Spade
					Note:	298581	Wire-Ground	523	391838	Cap with Dipstick-Oil Filler
							Used on type Nos.			For complete Oil Fill Cap with Dipstick and Oil Filler Tube Assy. -order Part 392056.
331	220865	Washer-Flywheel					0187, 0309.			Note:
332	92284	Nut-Flywheel					391554	Wire-Ground		Used on type No. 0401.
333	298502	Armature-Magneto					Used on type Nos.			For complete Oil Fill Cap with Dipstick and Oil Filler Tube Assy. -order Part 393498.
334	93381	Screw-Armature Mounting Sem					0015, 0016, 0017, 0018, 0050, 0051, 0167, 0266, 0286, 0287, 0288, 0293, 0294, 0298, 0299, 0302, 0310 0314, 0315, 0319, 0324, 0325, 0340, 0355, 0362, 0366, 0386, 0393, 0403, 0430, 0442.			
335	93435	Screw-Armature and Governor Blade								
337	298809	Plug-Spark (with gasket) 1-1/2" high- (37 & 42 mm.)								
	Note:	Spark Plugs use Ignition Cable Terminal No. 221798.	358	391662	Gasket Set					
		29693 Plug-Spark (with Gasket) 2" high-51 mm.	363	19069	Puller-Flywheel (Optional Accessory)					
			372	220477	Clamp-Condenser					

REF. NO. 523A - 768

110900 to 110999

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
523A	392056	Cap with Dipstick—Oil Filler (Complete Oil Fill Cap with Dipstick and Oil Filler Tube Assy.)			0293, 0294, 0295, 0328, 0353, 0355, 0373, 0411, 0468.	681	299060	Needle—Valve Kit
523B	392359	Extended Oil Minder Cap and Tube Assy.	620A	391648	Carburetor Control Plate and Harness Plug Bracket	720	93474	Pin—Gear to Shaft
524	68838	Seal—Filler Tube		Note:	392036 Carburetor Control Plate and Harness Plug Bracket Used on type No. 0294.	721	221779	Stop—Drive Shaft
525	280131	Tube—Oil Filler	621	297472	Switch—Stop	727	211757	Cover—Electric Starter
525A	392056	Tube—Oil Filler (Complete Oil Fill Cap with Dipstick and Oil Filler Tube Assy.)	625	391377	Tube—Fuel Intake	764	391486	Starter Assembly—Vertical Pull
527	222549	Clamp—Oil Filler Tube	634	270167	Washer—Throttle Shaft (Felt)		Note:	392064 Starter Assy.—Vertical Pull Used on type Nos. 0341, 0375, 0405, 0424, 0425.
527A	222064	Tube Clamp	635	66538	Elbow—Spark Plug			392584 Starter Assy.—Vertical Pull
529	67838	Grommet—Breather	642	222626	Cover—Air Cleaner			Used on type No. 0346.
534	93374	Screw—Air Cleaner	643	221321	Cup—Air Cleaner			392801 Starter Assy.—Vertical Pull
534A	93818	Screw—Air Cleaner (Internal)	643A	222594	Cup—Air Cleaner			Used on type Nos. 0358, 0428.
535	270848	Element—Air Cleaner	645	23513	Bushing—Plunger			392851 Starter Assy.—Side Pull
535A	270979	Element—Air Cleaner	646	222444	Bracket—Electric Starter Mounting			Used on type No. 0379.
536	391641	Cleaner Assembly—Air	655	222057	Anchor—Spring	765	299947	Housing—Vertical Pull Starter
536A	392368	Cleaner Assy.—Air	665	296768	Oil Minder		Note:	392138 Housing—Vertical Pull Starter
544	391667	Armature—Starter	666	299992	Gauge—Fuel Level			Used on type Nos. 0341, 0375, 0405, 0424, 0425.
548	390208	Washer Set—Starter Motor	673	93705	Screw—Receptacle Retainer			392993 Housing—Vertical Pull Starter
549	270978	Washer (Below Internal Screw Head)	674	93559	Screw—Tank to Bracket			Used on type No. 0358.
592	90356	Nut—Hex.—10-24	676	222238	Deflector—Muffler			393011 Housing—Side Pull Starter
608	393841	Starter Assy.—Rewind		Note:	221794 Deflector—Muffler Used on type Nos. 0310, 0345, 0379, 0383, 0447.			Used on type No. 0379.
611	297219	Pipe—Fuel (long)			222292 Deflector—Muffler Used on type No. 0340.	766	280022	Pulley—Rope (Small)
612	296811	Pipe—Fuel (short)			222522 Deflector—Muffler Used on type Nos. 0380, 0405, 0424, 0425, 0468.	767	231048	Pin—Small Rope Pulley
613	93549	Screw—Muffler Mtg.	677	93705	Screw—Muffler Deflector and Harness Retainer	768	299948	Pulley and Gear Assembly—Starter (50" Rope)
617	270344	Seal—Fuel Intake Tube		Note:	93606 Screw—Muffler Deflector Used on type Nos. 0310, 0345, 0379, 0383, 0447.		Note:	Use Part No. 66904 (79") Starter Rope Used on type No. 0379.
620	391442	Plate—Carburetor Control						392063 Pulley and Gear Assy.—Starter
	Note:	391503 Plate—Carburetor Control Used on type Nos. 0015, 0016, 0017, 0018, 0050, 0051, 0156, 0161, 0166, 0190, 0194, 0195, 0197, 0213, 0218, 0219, 0238, 0239, 0250, 0251, 0253, 0261, 0265, 0272,						

110900 to 110999

REF. NO. 768 - 871

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		Used on type Nos. 0341, 0375, 0405, 0424, 0425.		Note:	390129 Wiring Harness—Starter Motor	791	390197	Charger—Battery
769	66734	Rope—Vertical Pull Starter (50'')		Uses:	222091 Bracket—Harness Plug	792	390137	Bracket Assembly—Battery Mounting
	Note:	66904 Rope—Side Pull Starter (79'')		Used on type Nos. 0256, 0276.		793	261049	Clip—Wiring Harness
		Used on type No. 0379.		390192 Wiring Harness—Starter Motor		795	390122	Switch Assembly—Starter—Ignition
771	299961	Clip—Vertical Pull		Used on type No. 0248.			Note:	390128 Switch Assy. Starter—Ignition (Less Housing)
772	93598	Screw—Sem						Used on type No. 0234.
773	390112	Retainer Assy.—Spur Gear	787	222088	Retainer—Harness Plug	797	390201	Nut Set
774	280121	Insert—Starter Handle	789	390207	Wiring Harness Assy.—Mower (55' long with 32' long side Lead Wire— for Switch on Handle)	798	590316	Key Set—Starter Switch
775	280036	Grip—Starter Rope		Note:	390372 Wiring Harness Assy.—Mower (12' long with 8' long side Lead Wire— for Switch on Deck)	799	211773	Housing—Starter Switch
	Note:	280195 Grip—Starter Rope				800	222212	Retainer—Switch Receptacle
		Used on type Nos. 0358, 0428.				801	390202	Motor Output End Cover and Mounting Bracket
776	222049	Guide—Rope				802	390203	Cap Assembly—End
777	390066	Spring—Vertical Pull Starter				803	391668	Shell to Housing
778	280021	Cover—Vertical Pull Starter Pulley				837	222241	Spacer—Muffler Mtg.
781	280034	Cap—Electric Starter Pulley	790	390123	Battery—Electric Starter (G. E. No. 41B001LD09)	842	270920	Seal—Filler Cap
782	280038	Gear—Electric Starter Spur		Note:	If this Battery does not fit, refer to Equipment Manufacturer.	847	392056	Filler Group—Oil
783	230960	Gear—Electric Starter Pinion		Uses:			Note:	393498 Filler Group—Oil
784	222085	Cover—Electric Starter Clutch Gear		391999 Battery Terminal (G. E. No. 152B5421—121)				Used on type No. 0401.
785	270610	Gasket—Electric Starter Clutch Gear Cover		392000 Charger Terminal (G. E. No. 251A6695—G1)		851	221798	Terminal—Ignition Cable
786	390102	Wiring Harness—Starter Motor (Cylinder Head end)				869	210879	Seat—Intake Valve (Standard)
						870	211291	Seat—Exhaust Valve (Standard)
						871	63709	Guide—Exhaust Valve

