



125K00

Illustrated Parts List

Model Series

125K00

TYPE NUMBERS
0005 through 0562.

TABLE OF CONTENTS

Alternator	4
Air Cleaner	4
Blower Housing/Shrouds	5
Camshaft	2
Carburetor	3
Controls	4
Crankshaft	2
Cylinder	2
Electric Starter	6
Electrical	4
Engine Sump	2
Exhaust System	4
Flywheel	6
Flywheel Brake	4
Fuel Supply	3
Governor Spring	4
Ignition	4
Kits/Gaskets	2 & 3
Lubrication	2
Piston Group	2
Rewind Starter	6
Valves	2

 
BRIGGS & STRATTON



PRINTED IN U.S.A.







COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

125K00

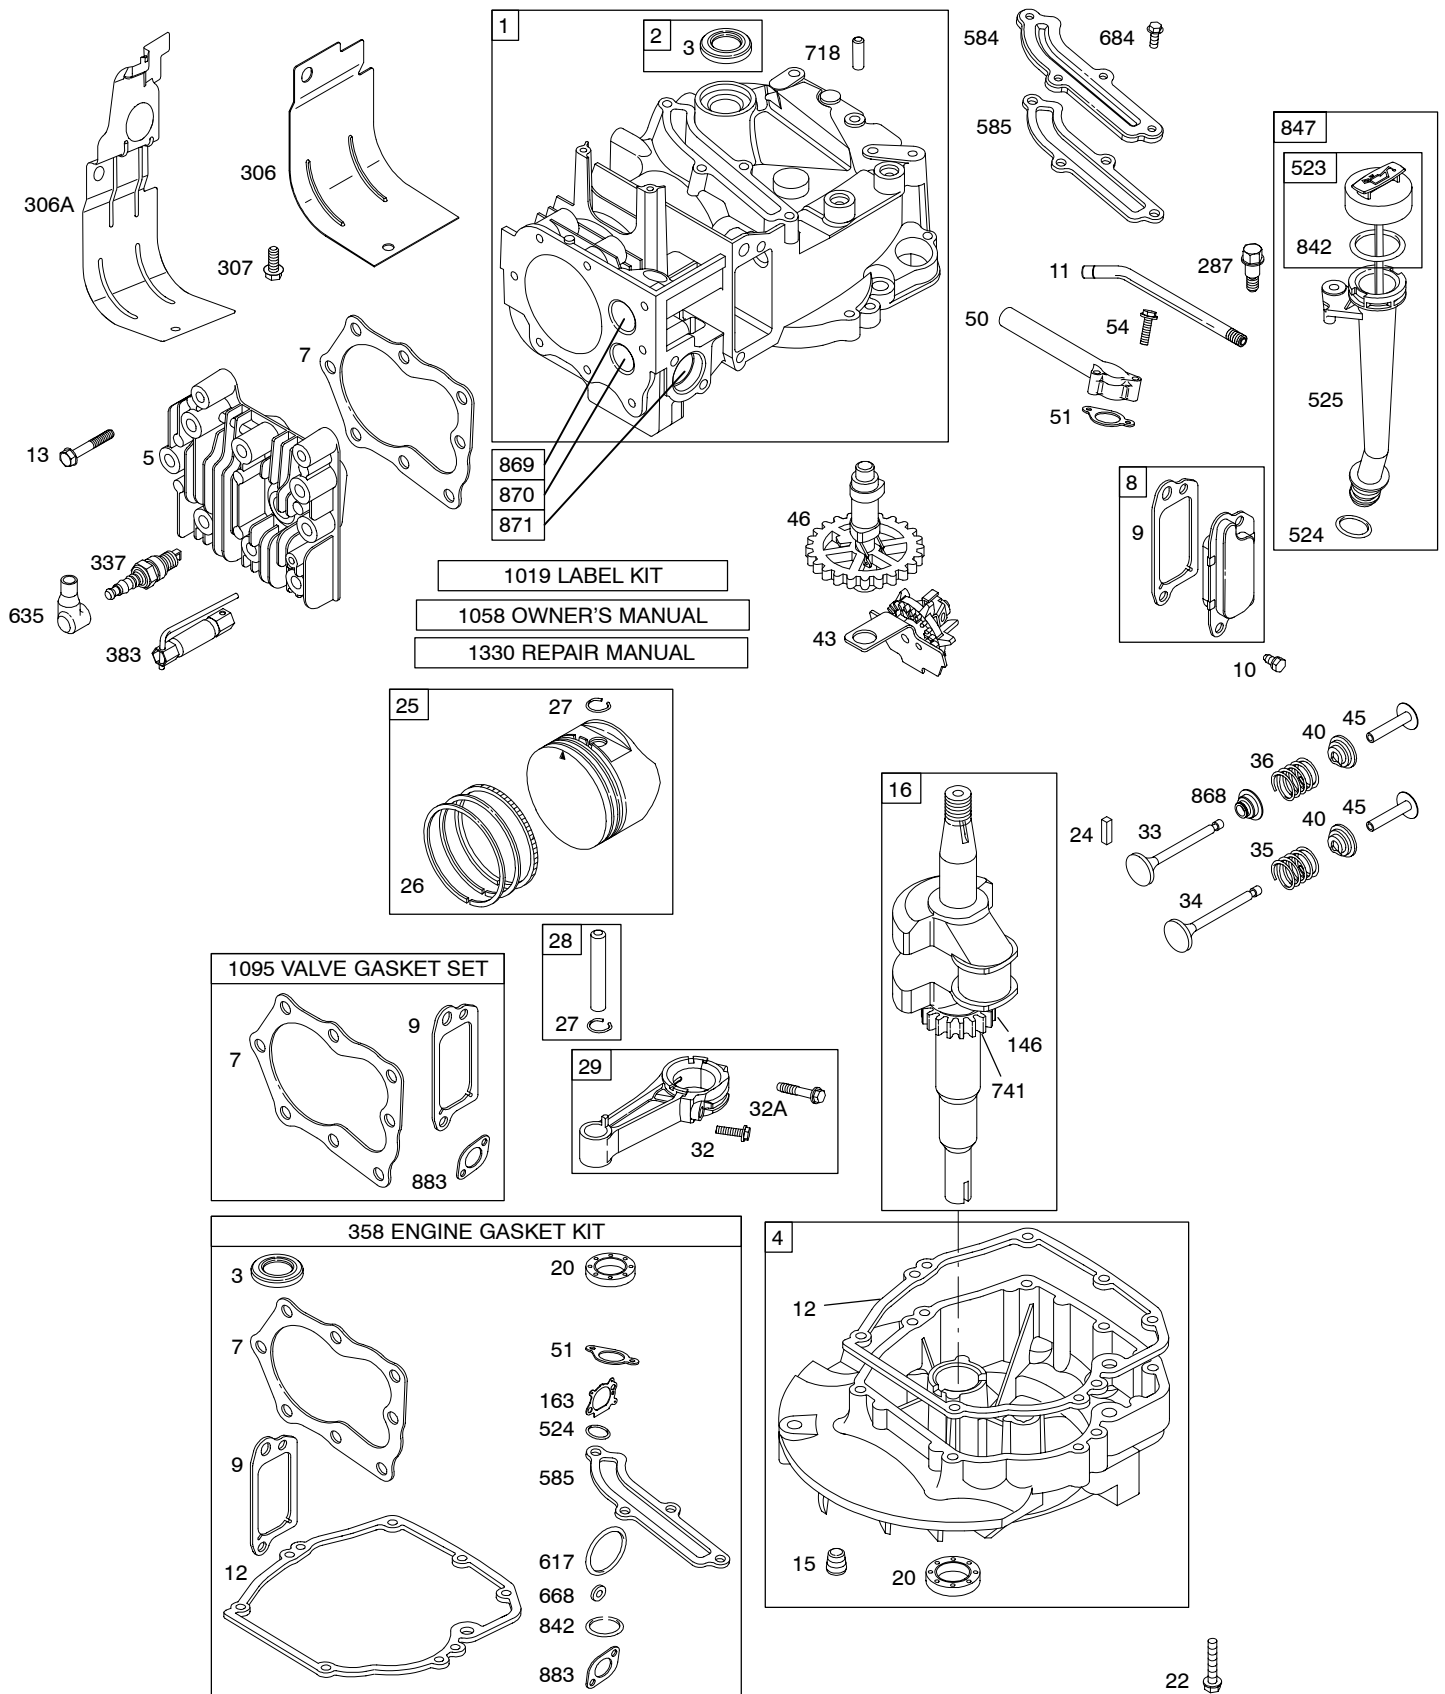


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5482-2 Assemblies include all parts shown in frames. 10/07/2005










 
 
 
 
 
 
125K00

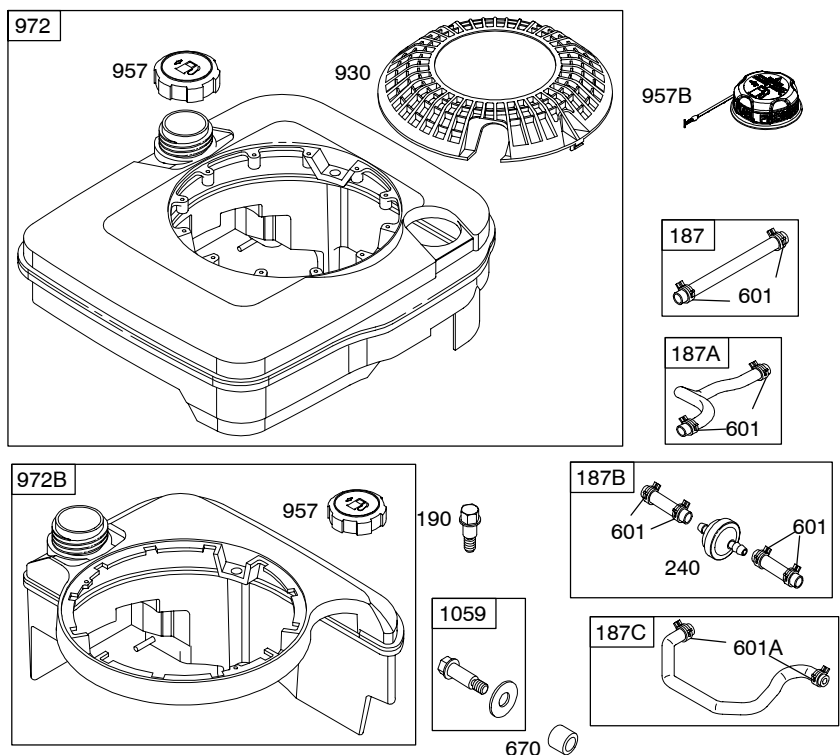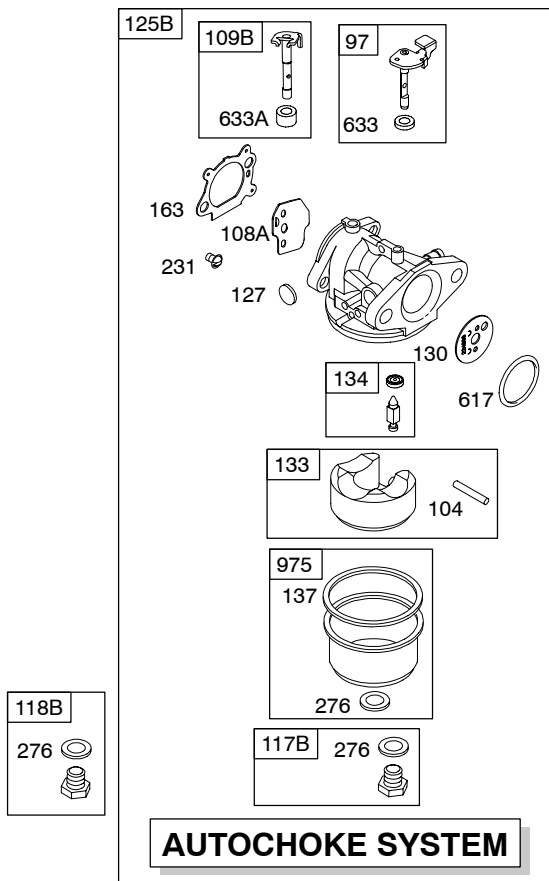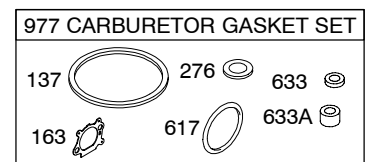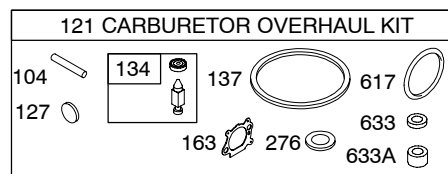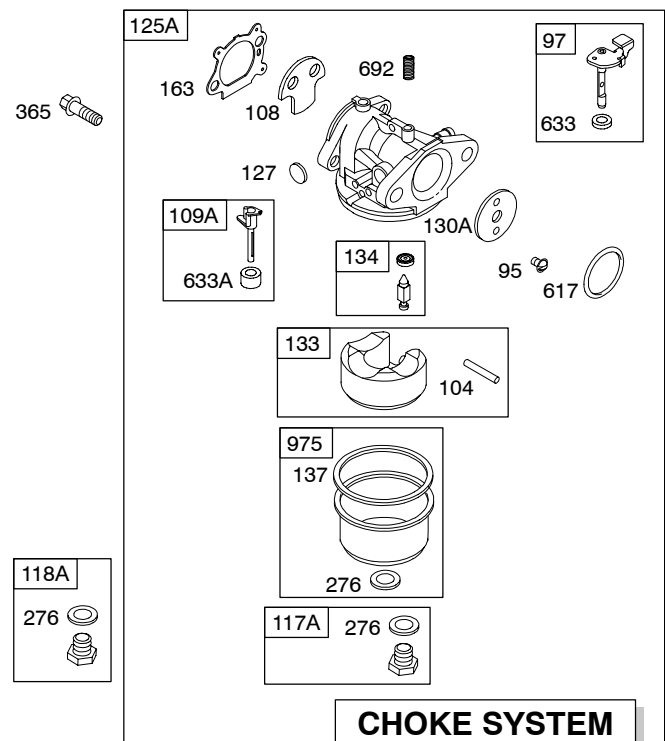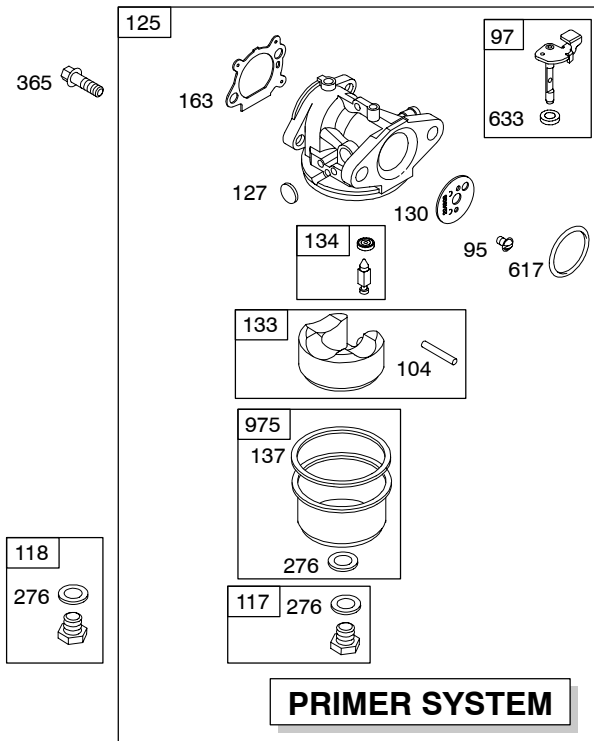





125K00

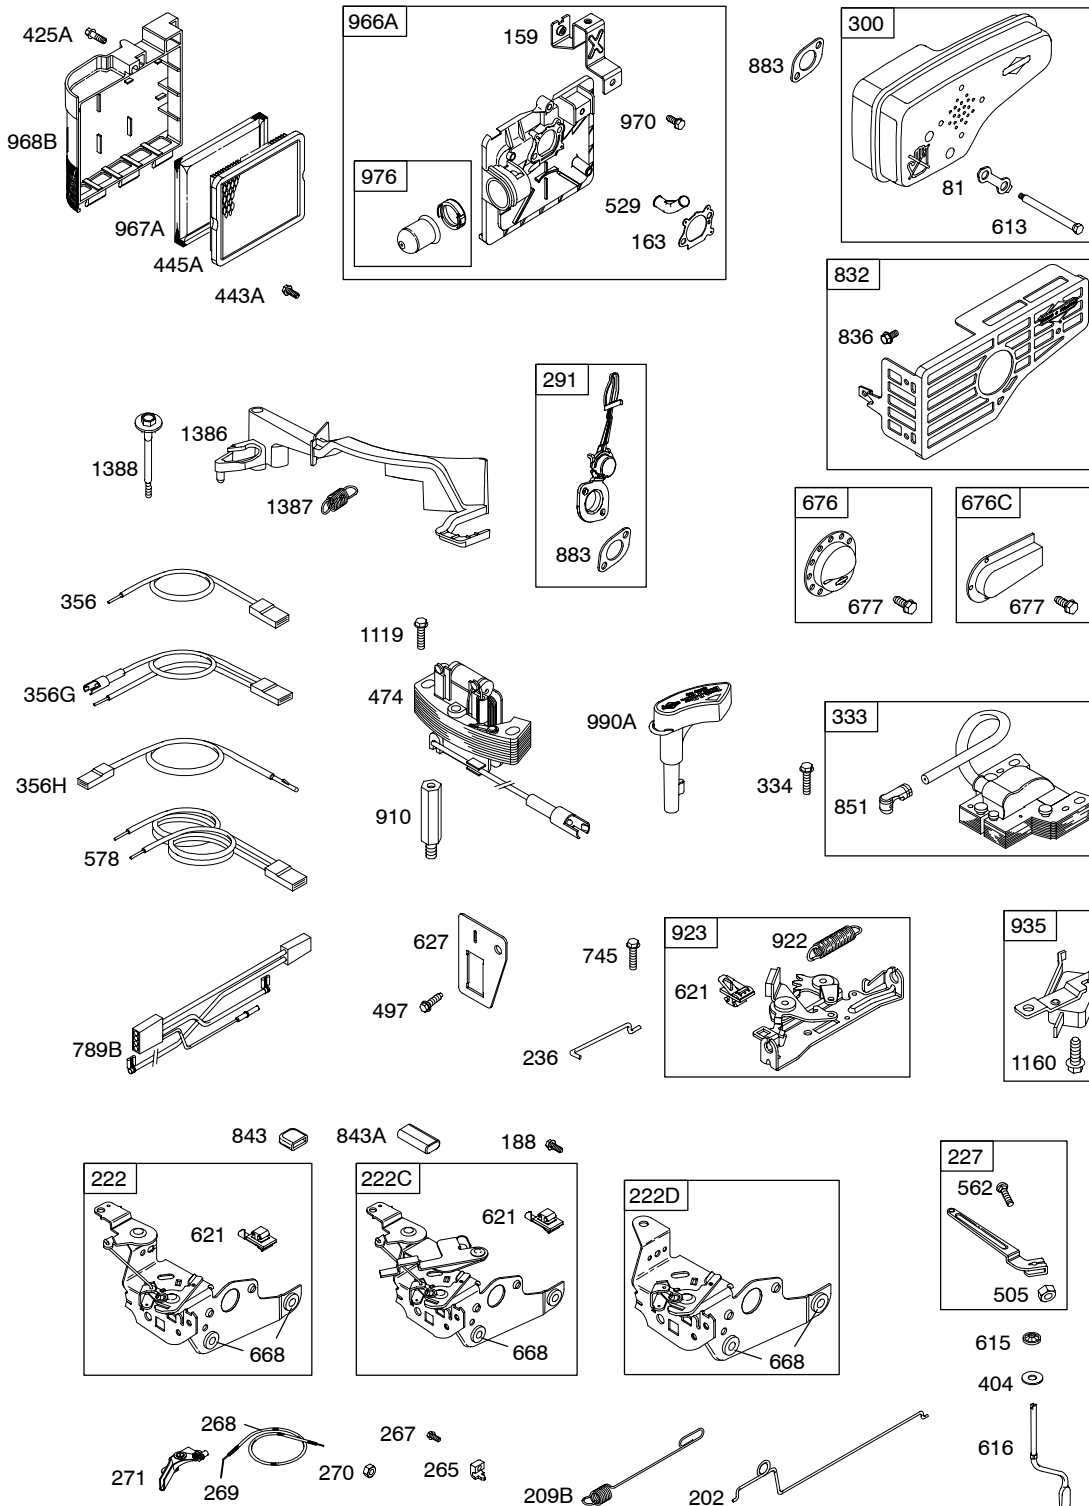 

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5482-4 Assemblies include all parts shown in frames. 10/07/2005

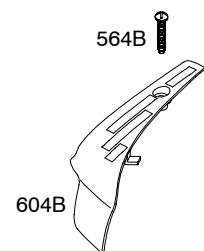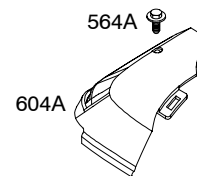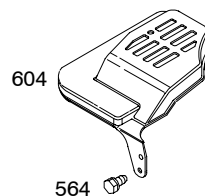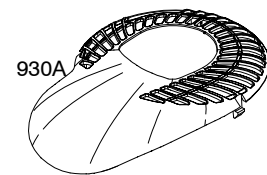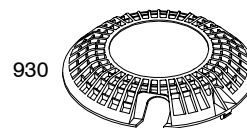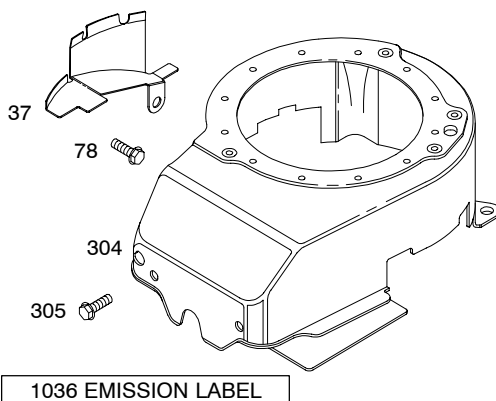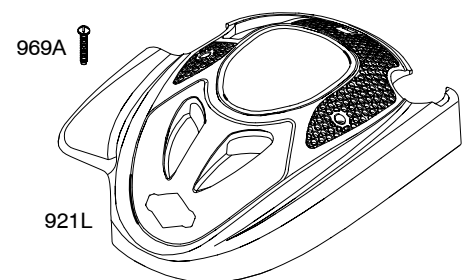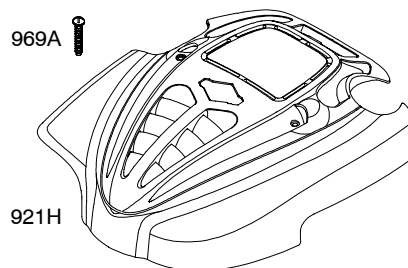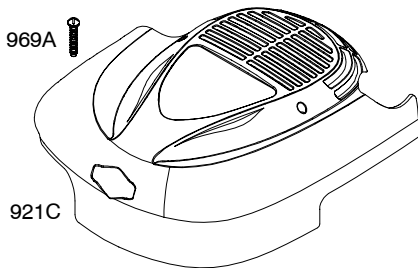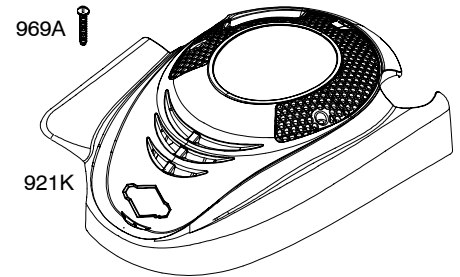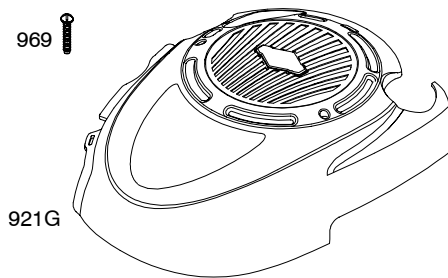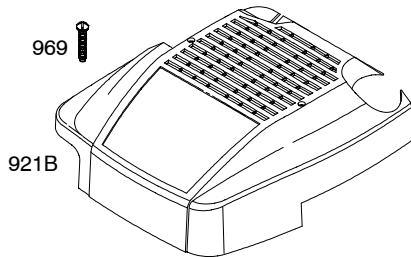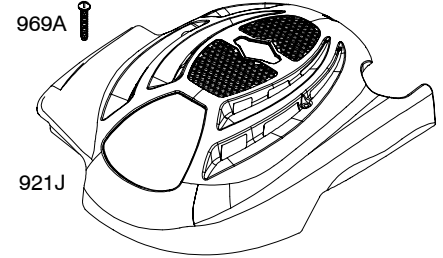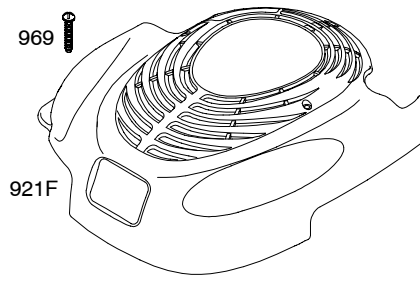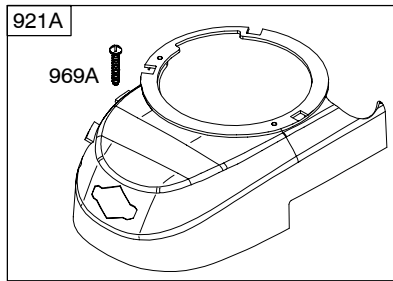               

125K00

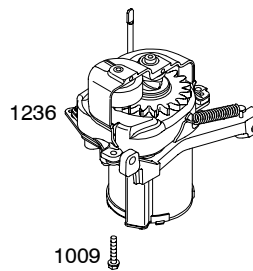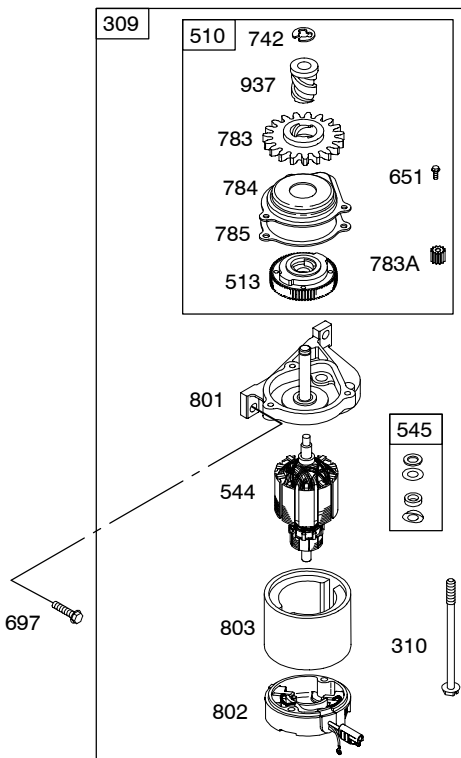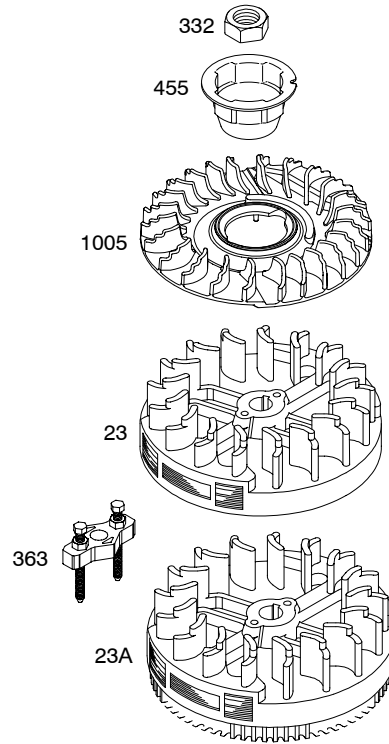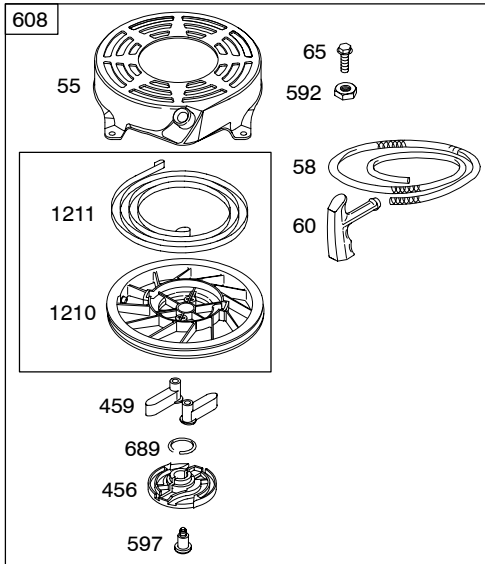    

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5482-6 Assemblies include all parts shown in frames. 10/07/2005

125K00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	697322	Cylinder Assembly	20	★399781	Seal–Oil (PTO Side)	26	790360	Ring Set (Standard)
2	399269	Kit–Bushing/Seal (Magneto Side)	22	691092	Screw (Crankcase Cover/ Sump)			(Used After Code Date 04031400).
3	★299819	Seal–Oil (Magneto Side)	23	692315	Flywheel (Rewind Start)			----- Note -----
4	493279	Sump–Engine ----- Note ----- 696294 Sump–Engine Used on Type No(s). 0266, 0286.			----- Note ----- 696291 Flywheel Used on Type No(s). 0266, 0286.			499425 Ring Set (Standard) (Used Before Code Date 04031500).
5	691160	Head–Cylinder			691992 Flywheel Used on Type No(s). 0005, 0129, 0130, 0131, 0132, 0137, 0138, 0140, 0187, 0188, 0194, 0195.			499426 Ring Set (.010" Oversize)
7	★Ø692249	Gasket–Cylinder Head	23A	691987	Flywheel (Electric Start)			791324 Ring Set (.020" Oversize)
8	695250	Breather Assembly	24	222698	Key–Flywheel			(Used After Code Date 04102100).
9	★Ø696125	Gasket–Breather	25	790359	Piston Assembly (Standard) (Used After Code Date 04031400).	27	691866	Lock–Piston Pin
10	691125	Screw (Breather Assembly)			----- Note ----- 697339 Piston Assembly (Standard) (Used Before Code Date 04031500).	28	499423	Pin–Piston (Standard)
11	691781	Tube–Breather			697340 Piston Assembly (.010" Oversize)	29	499424	Rod–Connecting (Standard)
12	★692232	Gasket–Crankcase			791326 Piston Assembly (.020" Oversize) (Used After Code Date 04102100).	32	691664	Screw (Connecting Rod)
13	690912	Screw (Cylinder Head)			697341 Piston Assembly (.020" Oversize) (Used Before Code Date 04102200).	32A	695759	Screw (Connecting Rod)
15	691680	Plug–Oil Drain (Square Socket)			697342 Piston Assembly (.030" Oversize)	33	262651	Valve–Exhaust
16	691451	Crankshaft ----- Note ----- 691450 Crankshaft Used on Type No(s). 0025,0133,0139,0141, 0142,0253,0263,0303, 0317,0318,0319,0325, 0336,0345,0355,0370, 0426,0427,0446,0448, 0449,0451,0453,0457, 0460,0461,0473,0477, 0482,0483,0487,0497, 0499,0500,0506,0509, 0512,0518,0542,0546, 0548,0561,0562. 694849 Crankshaft Used on Type No(s). 0005,0130,0131,0132, 0137,0138. 696009 Crankshaft Used on Type No(s). 0179,0186,0189,0193, 0195. 691455 Crankshaft Used on Type No(s). 0129,0323. 791061 Crankshaft Used on Type No(s). 0187,0188,0194,0195.				34	262652	Valve–Intake
						35	691270	Spring–Valve (Intake)
						36	691270	Spring–Valve (Exhaust)
						37	694086	Guard–Flywheel
						40	692194	Retainer–Valve
						43	691997	Slinger–Governor/Oil
						45	690548	Tappet–Valve
						46	691449	Camshaft
						50	497465	Manifold–Intake
						51	★272199	Gasket–Intake
						54	691650	Screw (Intake Manifold)
						55	691421	Housing–Rewind Starter

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

Ø Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5482–7

Assemblies include all parts shown in frames.

10/07/2005

125K00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
58	697316	Rope-Starter (Cut To Required Length) ----- Note ----- 791362 Rope-Starter Used on Type No(s). 0131, 0132, 0193, 0194, 0195.	118	497466	Jet-Main (High Altitude) ----- Note ----- 497315 Jet-Main (High Altitude) Used on Type No(s). 0134, 0561.	187B	791891	Line-Fuel (Includes Filter)
60	281434	Grip-Starter Rope	118A	497466	Jet-Main (High Altitude)	187C	791875	Line-Fuel (Molded) (Used After Code Date 05063000). ----- Note ----- 696292 Line-Fuel (Molded) (Used Before Code Date 05070100).
65	690837	Screw (Rewind Starter)	118B	692677	Jet-Main (High Altitude)	188	693399	Screw (Control Bracket)
78	691108	Screw (Flywheel Guard)	121	498260	Kit-Carburetor Overhaul	190	690940	Screw (Fuel Tank)
81	691740	Lock-Muffler Screw	125	498170	Carburetor (Primer System) ----- Note ----- 790821 Carburetor (Primer System) Used on Type No(s). 0134, 0561.	202	691829	Link-Mechanical Governor
95	691636	Screw (Throttle Valve)	125A	499059	Carburetor (Choke System)	209B	699056	Spring-Governor ----- Note ----- 691292 Spring-Governor Used on Type No(s). 0142, 0178, 0179, 0186, 0187, 0188, 0189, 0325, 0336, 0355, 0426, 0427, 0460, 0461, 0483, 0512, 0548. 691851 Spring-Governor Used on Type No(s). 0130, 0139, 0141. 691290 Spring-Governor Used on Type No(s). 0005, 0131, 0132, 0137. 691291 Spring-Governor Used on Type No(s). 0129, 0138, 0140. 691852 Spring-Governor Used on Type No(s). 0193, 0194, 0195.
97	493267	Shaft-Throttle (Metal) ----- Note ----- 696565 Shaft-Throttle (Plastic)	125B	790845	Carburetor (Autochoke System)			
104	691242	Pin-Float Hinge	127	694468	Plug-Welch			
108	691182	Valve-Choke	130	696564	Valve-Throttle			
108A	790844	Valve-Choke	130A	691203	Valve-Throttle			
109A	498593	Shaft-Choke	133	398187	Float-Carburetor			
109B	790843	Shaft-Choke	134	398188	Kit-Needle/Seat			
117	498978	Jet-Main (Standard) ----- Note ----- 494870 Jet-Main (Standard) Used on Type No(s). 0134, 0561.	137	693981	Gasket-Float Bowl			
117A	498978	Jet-Main (Standard)	146	690979	Key-Timing			
117B	697355	Jet-Main (Standard)	159	691753	Bracket-Air Cleaner Primer			
			163	272653	Gasket-Air Cleaner			
			187	791766	Line-Fuel (Cut to Required Length) (Used After Code Date 05063000). ----- Note ----- 691050 Line-Fuel (Cut to Required Length) (Used Before Code Date 05070100).			
			187A	791873	Line-Fuel (Molded) (Used After Code Date 05063000). ----- Note ----- 691371 Line-Fuel (Molded) (Used Before Code Date 05070100).			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊗ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5482-8

Assemblies include all parts shown in frames.

10/07/2005

125K00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
222	790143	Bracket-Control (Remote/Manual Friction)(Primer)	300	692038	Muffler (Super Lo Tone) ----- Note -----	309	695550	Motor-Starter
222C	692150	Bracket-Control (Variable Speed) (5 Postion Manual Choke)		790828	Muffler Used on Type No(s). 0133, 0139, 0389, 0448, 0449, 0487, 0515, 0542, 0562.	310	692327	Bolt (Starter Motor)
222D	692467	Bracket-Control (Fixed Speed) ----- Note ----- 791128 Bracket-Control (Fixed Speed) Used on Type No(s). 0133, 0139, 0389, 0448, 0449, 0487, 0542, 0546, 0548, 0561.	304	695892	Housing-Blower ----- Note ----- 493293 Housing-Blower Used on Type No(s). 0060, 0178, 0179, 0186, 0189, 0193, 0263, 0274, 0318, 0319, 0345, 0453, 0499, 0546.	332	690662	Nut (Flywheel)
227	690783	Lever-Governor Control		696298	Housing-Blower Used on Type No(s). 0266, 0286.	333	802574	Armature-Magneto ----- Note ----- 790817 Armature-Magneto Used on Type No(s). 0134, 0389, 0515, 0561, 0562.
231	691636	Screw (Choke Valve)		493294	Housing-Blower Used on Type No(s). 0005, 0129, 0130, 0131, 0132, 0137, 0138, 0140, 0187, 0188, 0194, 0195.	334	691061	Screw (Magneto Armature)
236	691826	Link-Lockout		790826	Housing-Blower Used on Type No(s). 0133, 0139, 0389, 0449, 0487, 0515, 0542.	337	802592	Plug-Spark (Resistor) ----- Note ----- 697451 Plug-Spark (EMS)
240	298090	Filter-Fuel		790983	Housing-Blower Used on Type No(s). 0448, 0560, 0562.	356	692390	Wire-Stop
265	690798	Clamp-Casing				356G	790704	Wire-Stop
267	691044	Screw (Casing Clamp)				356H	690791	Wire-Stop
268	691072	Casing-Control Wire (Cut to Required Length)	305	691108	Screw (Blower Housing)	358	497316	Gasket Set-Engine
269	691026	Wire-Control (Cut to Required Length)	306	690450	Shield-Cylinder	363	19069	Flywheel Puller
270	691027	Nut (Control Wire Casing)	306A	790836	Shield-Cylinder	365	691688	Screw (Carburetor)
271	691028	Lever-Control	307	690345	Screw (Cylinder Shield)	383	89838	Wrench-Spark Plug
276 ♦♦	271716	Washer-Sealing (Main Jet)				404	690272	Washer (Governor Crank)
287	690940	Screw (Dipstick Tube)				425A	690670	Screw (Air Cleaner Cover)
291	790830	Thermostat				443A	692523	Screw (Air Cleaner Primer Base)
						445A	491588	Filter-Air Cleaner Cartridge
						455	695161	Cup-Flywheel
						456	692299	Plate-Pawl Friction
						459	281505	Plate-Ratchet
						474	691991	Alternator
						497	690664	Screw (Stop Switch Bracket)
						505	691251	Nut (Governor Control Lever)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

♦ Included in Carburetor Gasket Set-Ref. No. 977.

⊗ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5482-9

Assemblies include all parts shown in frames.

10/07/2005

125K00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
510	494147	Drive-Starter	613	691340	Screw (Muffler)	742	93941	Retainer-E Ring
513	692358	Clutch-Drive			----- Note -----	745	691648	Screw (Brake)
523	495264	Dipstick			790833 Screw (Muffler)	783	691918	Gear-Pinion
524	★692296	Seal-Dipstick Tube			Used on Type No(s).	783A	691269	Gear-Pinion
525	495265	Tube-Dipstick			0133, 0139, 0389,	784	692341	Cover-Starter Gear
529	691923	Grommet			0448, 0449, 0487,	785	692352	Gasket-Starter Cover
544	690786	Armature-Starter			0515, 0542, 0562.	789B	696547	Harness-Wiring
545	492919	Washer Set				801	690782	Cap-Drive
562	92613	Bolt (Governor Control Lever)	615	690340	Retainer-Governor Shaft	802	695267	Cap-End
564	690664	Screw (Control Cover)	616	698801	Crank-Governor	803	695266	Housing-Starter
564A	691142	Screw (Control Cover)	617★◆270344		Seal-O Ring (Intake Manifold)	832	499034	Guard-Muffler
564B	698589	Screw (Control Cover)	621	692310	Switch-Stop	836	690664	Screw (Muffler Guard)
578	398153	Wire-Assembly	627	692872	Bracket-Stop Switch	842	★691031	Seal-O Ring (Dipstick Tube)
584	697734	Cover-Breather Passage	633 ◆◆691321		Seal-Choke/Throttle Shaft (Throttle)	843	691884	Sleeve-Lever (Speed Control)
585	★691879	Gasket-Breather Passage	633A ◆◆693867		Seal-Choke/Throttle Shaft (Choke)	843A	691895	Sleeve-Lever (Choke)
592	690800	Nut (Rewind Starter)	635	66538	Boot-Spark Plug	847	692017	Dipstick/Tube Assembly
597	691696	Screw (Pawl Friction Plate)	651	691660	Screw (Starter Gear Cover)	851	493880	Terminal-Spark Plug
601	95162	Clamp-Hose	668	★493823	Spacer	868	697338	Seal-Valve
601A	691038	Clamp-Hose	670	692294	Spacer-Fuel Tank	869	691155	Seat-Valve (Intake)
604	691757	Cover-Control	676	396548	Deflector-Muffler	870	690380	Seat-Valve (Exhaust)
604A	691344	Cover-Control	676C	493871	Deflector-Muffler	871	262001	Bushing-Valve Guide (Exhaust)
604B	790703	Cover-Control	677	690661	Screw (Muffler Deflector)			----- Note -----
608	497680	Starter-Rewind	684	690345	Screw (Breather Passage Cover)			63709 Bushing-Valve Guide (Intake)
		----- Note -----						883 ★Ø691881 Gasket-Exhaust
		791363 Starter-Rewind	689	691855	Spring-Friction	910	691094	Stud (Alternator)
		Used on Type No(s).	692	690572	Spring-Detent			
		0187, 0189, 0193,	697	691127	Screw (Drive Cap)	921A	695886	Cover-Blower Housing
		0194, 0195.				921B	692931	Cover-Blower Housing
			718	690959	Pin-Locating	921C	695889	Cover-Blower Housing
			741	790345	Gear-Timing (Use Without Woodruff Key)	921F	697343	Cover-Blower Housing
					----- Note -----	921G	790701	Cover-Blower Housing
					691830 Gear-Timing (Uses Woodruff Key)	921H	790037	Cover-Blower Housing
						921J	790036	Cover-Blower Housing
						921K	699984	Cover-Blower Housing
						921L	791026	Cover-Blower Housing

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5482-10

Assemblies include all parts shown in frames.

10/07/2005

125K00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
922	691831	Spring-Brake ----- Note ----- 692135 Spring-Brake Used on Type No(s). 0134, 0139, 0141, 0142, 0243, 0250, 0253, 0273, 0281, 0303, 0317, 0320, 0321, 0322, 0323, 0325, 0336, 0355, 0370, 0389, 0426, 0427, 0446, 0449, 0451, 0457, 0460, 0461, 0473, 0477, 0482, 0483, 0487, 0497, 0500, 0506, 0509, 0512, 0515, 0518, 0542, 0548, 0561.	937	691325	Spline-Starter	1019	694881	Kit-Label ----- Note ----- 790231 Kit-Label (Touch N Mow)
			957	397974	Cap-Fuel Tank (Plastic)			Label-Emission (Available From An Authorized Briggs & Statton Service Dealer)
			957B	699985	Cap-Fuel Tank (Plastic)	1036		
			966A	496116	Base-Air Cleaner Primer ----- Note ----- 792040 Base-Air Cleaner Primer Used on Type No(s). 0133, 0139, 0389, 0448, 0449, 0487, 0515, 0562.	1058	276171	Manual-Owner's ----- Note ----- 275054 Manual- Owner's (Touch N Mow)
			967A	493537	Filter-Pre Cleaner	1059	692311	Kit-Screw/Washer ----- Note ----- 696293 Kit-Screw/ Washer (Touch N Mow)
			968B	692298	Cover-Air Cleaner	1095	498528	Gasket Set-Valve
			969	690700	Screw (Blower Housing Cover)	1119	692979	Screw (Alternator)
923	691994	Brake ----- Note ----- 695891 Brake Used on Type No(s). 0134, 0139, 0141, 0142, 0243, 0250, 0253, 0273, 0281, 0303, 0317, 0320, 0321, 0322, 0323, 0325, 0336, 0355, 0370, 0389, 0426, 0427, 0446, 0449, 0451, 0457, 0460, 0461, 0473, 0477, 0482, 0483, 0487, 0497, 0500, 0506, 0509, 0512, 0515, 0518, 0542, 0548, 0561.	969A	691138	Screw (Blower Housing Cover)	1160	691627	Screw (Interlock Switch)
			970	691669	Screw (Air Cleaner Primer Bracket)	1210	498144	Pulley/Spring Assembly (Pulley)
			972	699392	Tank-Fuel (Plastic)	1211	498144	Pulley/Spring Assembly (Spring)
			972B	699374	Tank-Fuel (Plastic) ----- Note ----- 699387 Tank-Fuel (Plastic) Used on Type No(s). 0266, 0286.	1236	695959	Starter-Machanical (Touch N Mow) (Do Not Service Individual Parts, Only As A Whole)
			975	493640	Bowl-Float	1330	270962	Manual-Repair
			976	694395	Primer-Carburetor	1386	790848	Vane-Air (Autochoke System)
			977	498261	Gasket Set-Carburetor	1387	790849	Spring-Air Vane
930	691919	Guard-Rewind	990A	695951	Key Set	1388	790850	Screw (Air Vane)
930A	691345	Guard-Rewind	1005	691346	Fan-Flywheel			
935	499421	Switch-Interlock	1009	696255	Screw (Starter Motor)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊗ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5482-11

Assemblies include all parts shown in frames.

10/07/2005