

19F400

Illustrated Parts List

Model Series

19F400

TYPE NUMBERS
0043 through 1137.

TABLE OF CONTENTS

Air Cleaner	4
Alternator	8
Blower Housing/Shrouds	5
Cam	2
Carburetor	3
Controls	7
Crankcase Cover/Sump	2
Crankshaft	2
Cylinder Group	2
Electric Starter	6
Flywheel Group	6
Fuel Tank Group	7
Governor Spring	7
Head	2
Ignition	6
Kits/Gaskets-Carburetor	3
Kits/Gaskets-Valve	8
Muffler	4
Oil	2
Piston Group	2
Rewind	5
Valves	2


PRINTED IN U.S.A.

BRIGGS & STRATTON




COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.


19F400

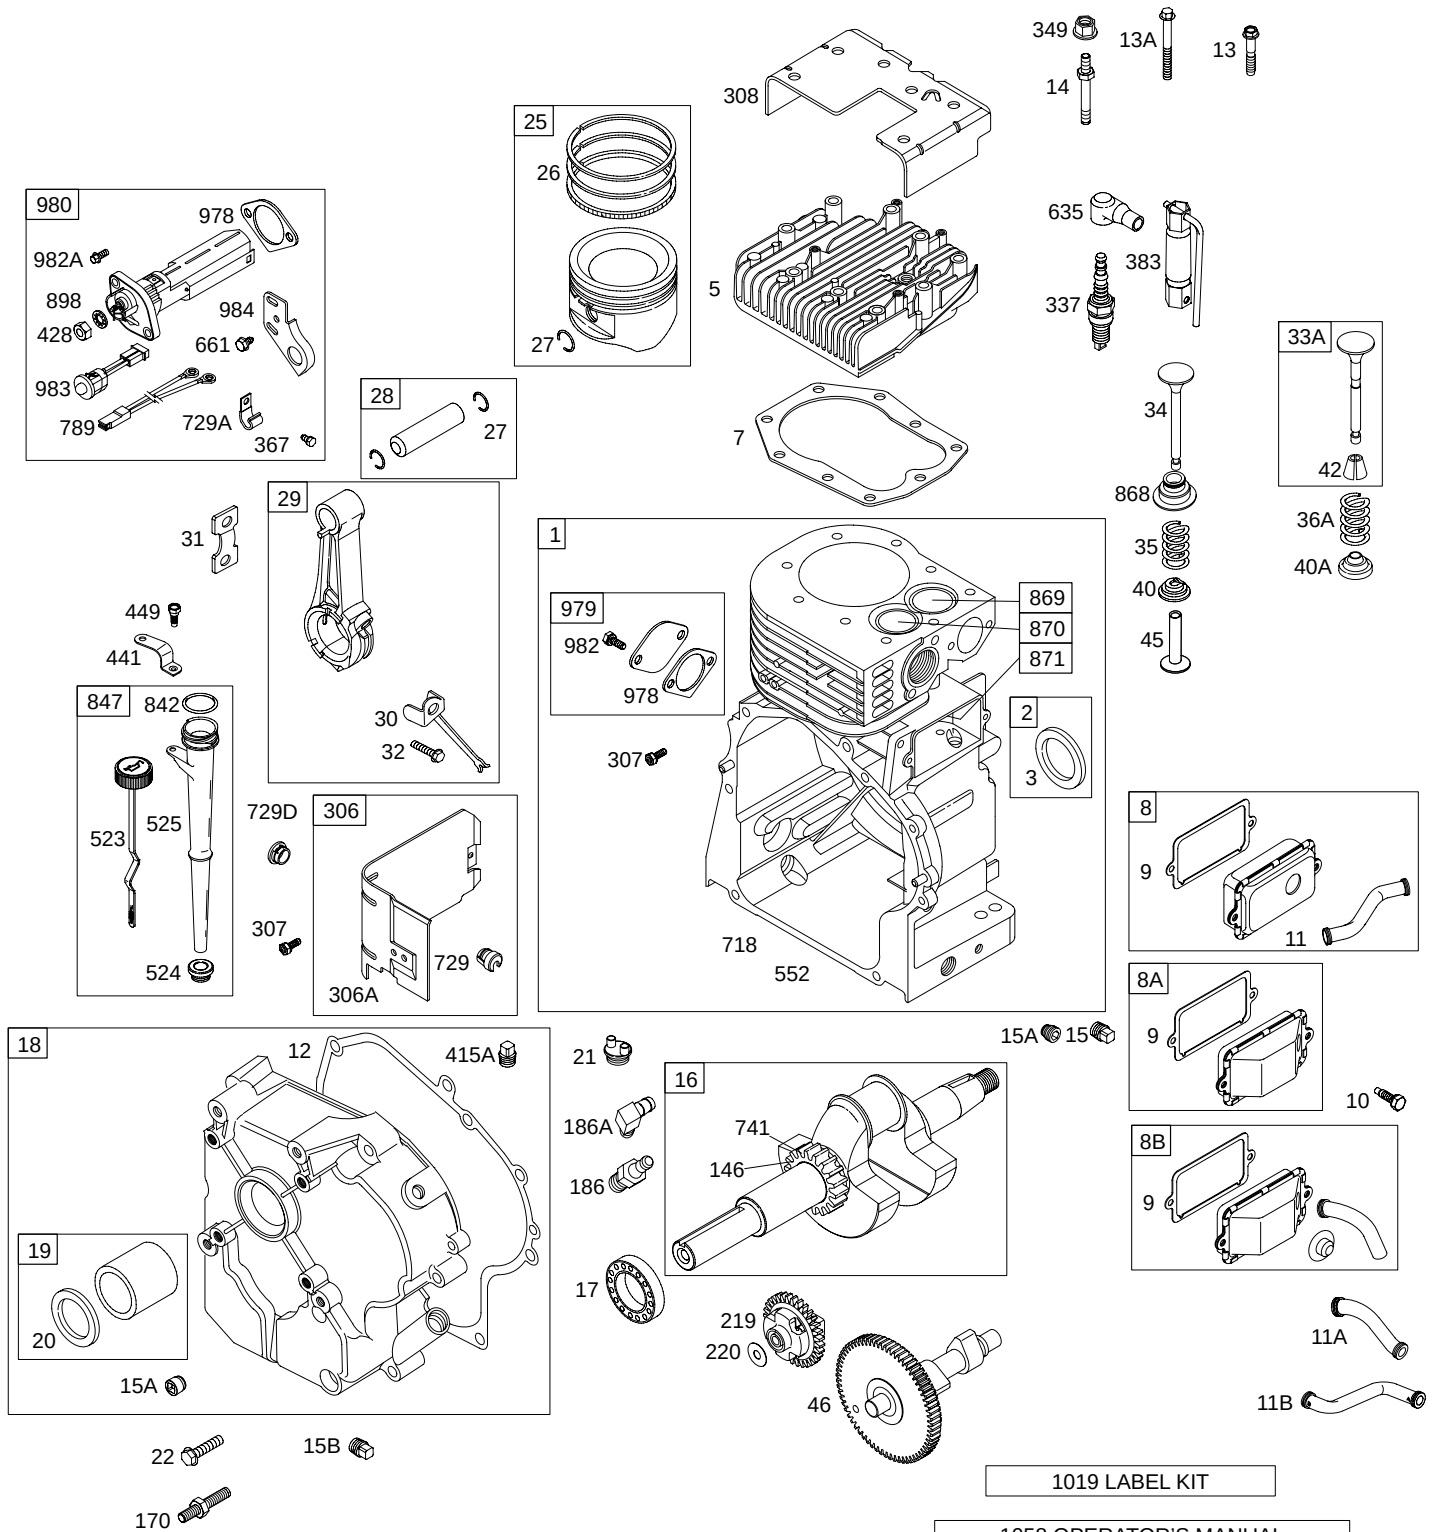

19F400




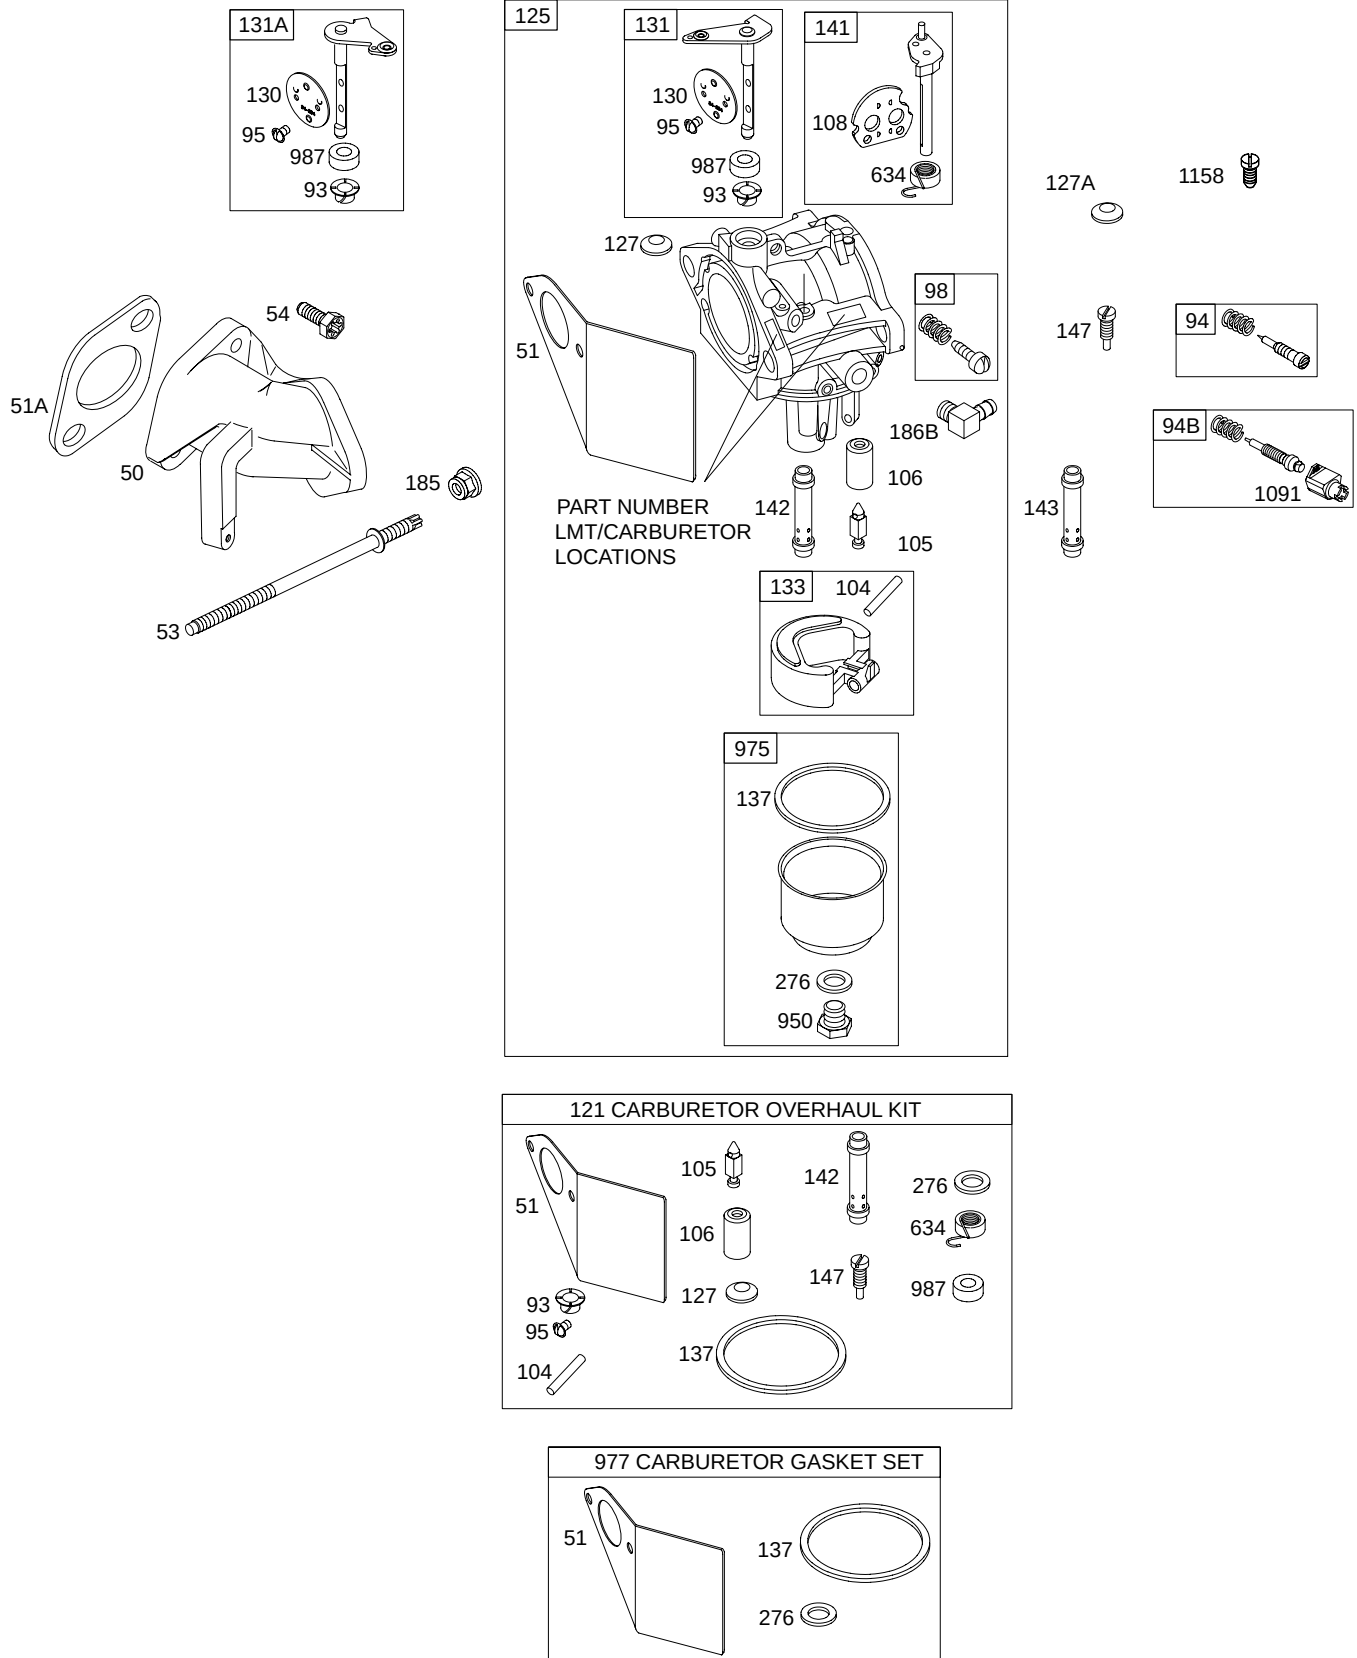


19F400




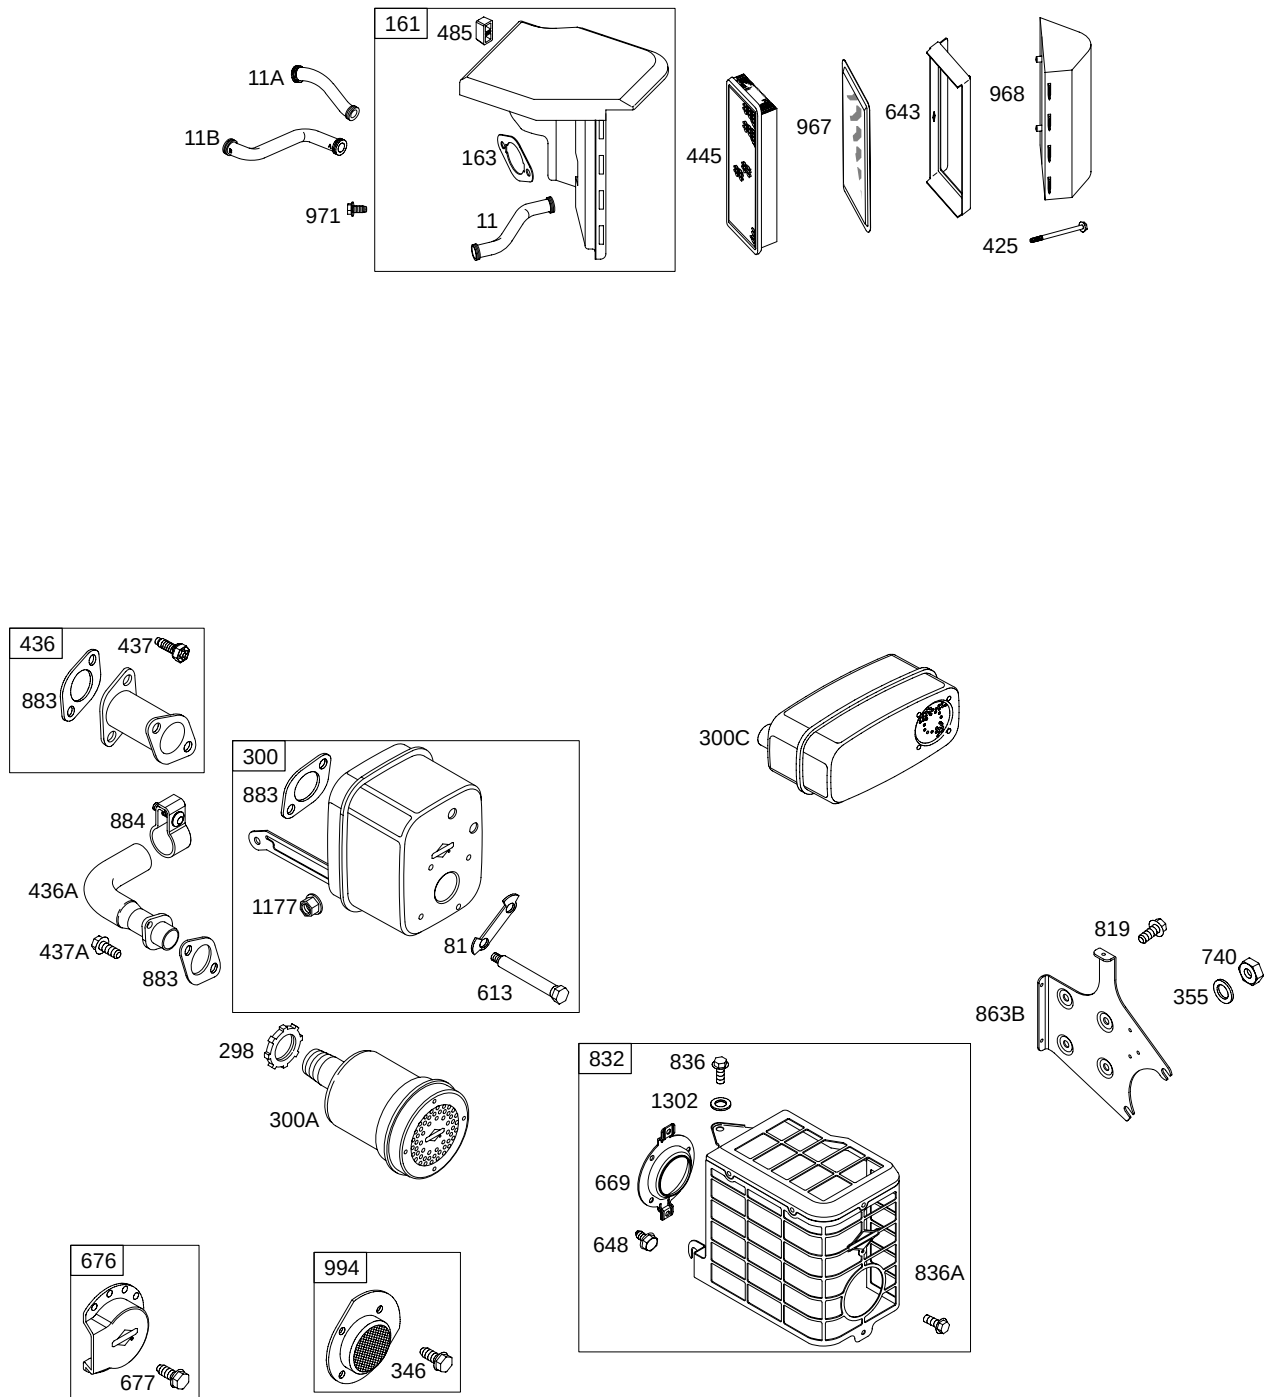


1036 EMISSION LABEL

 

 
305

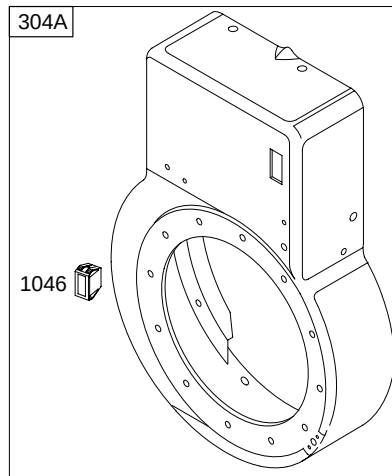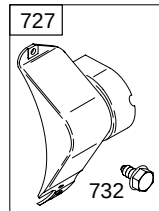


1046

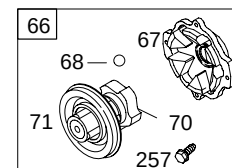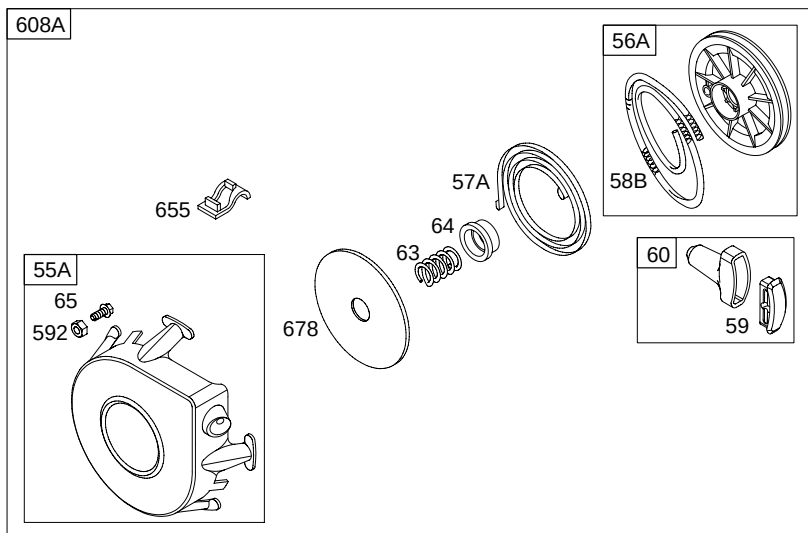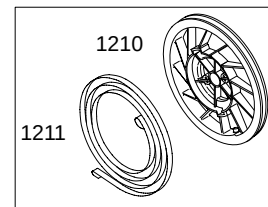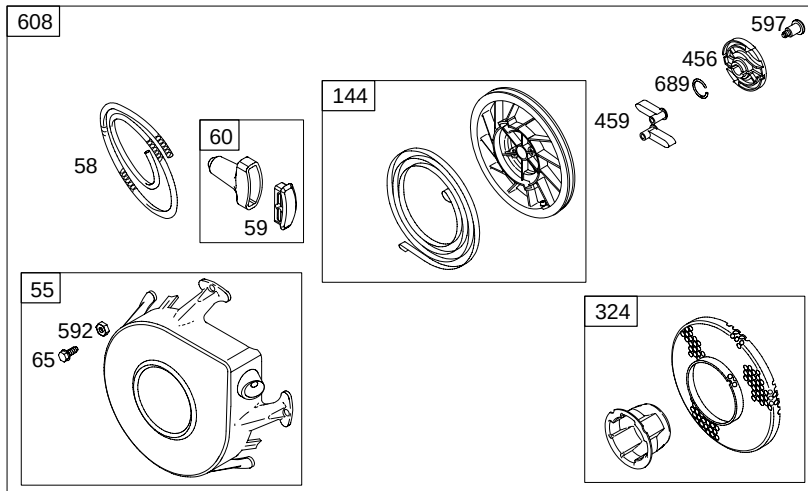

19F400

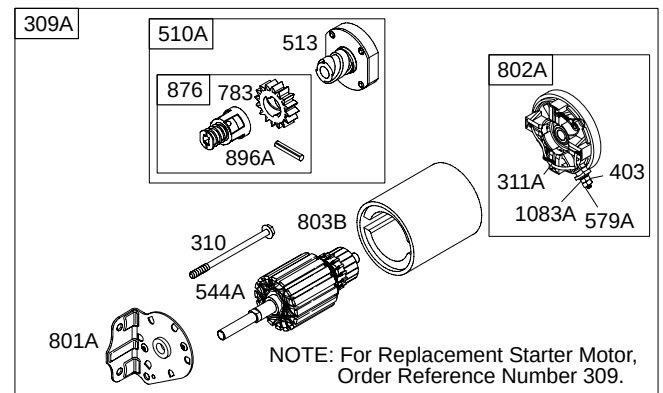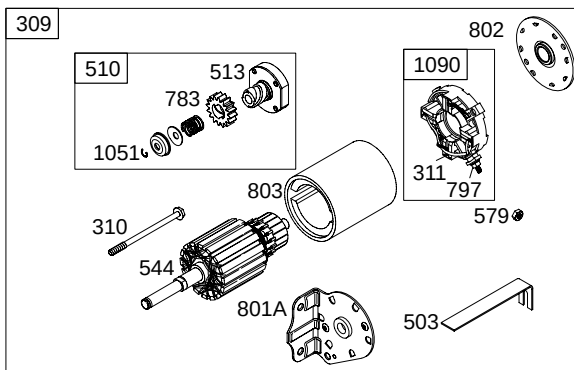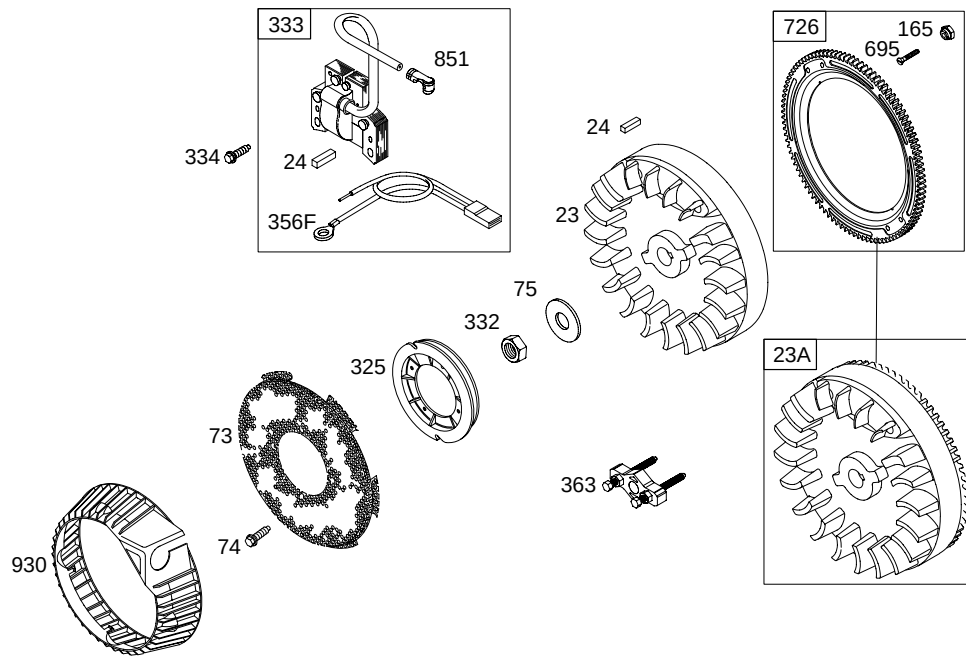







19F400

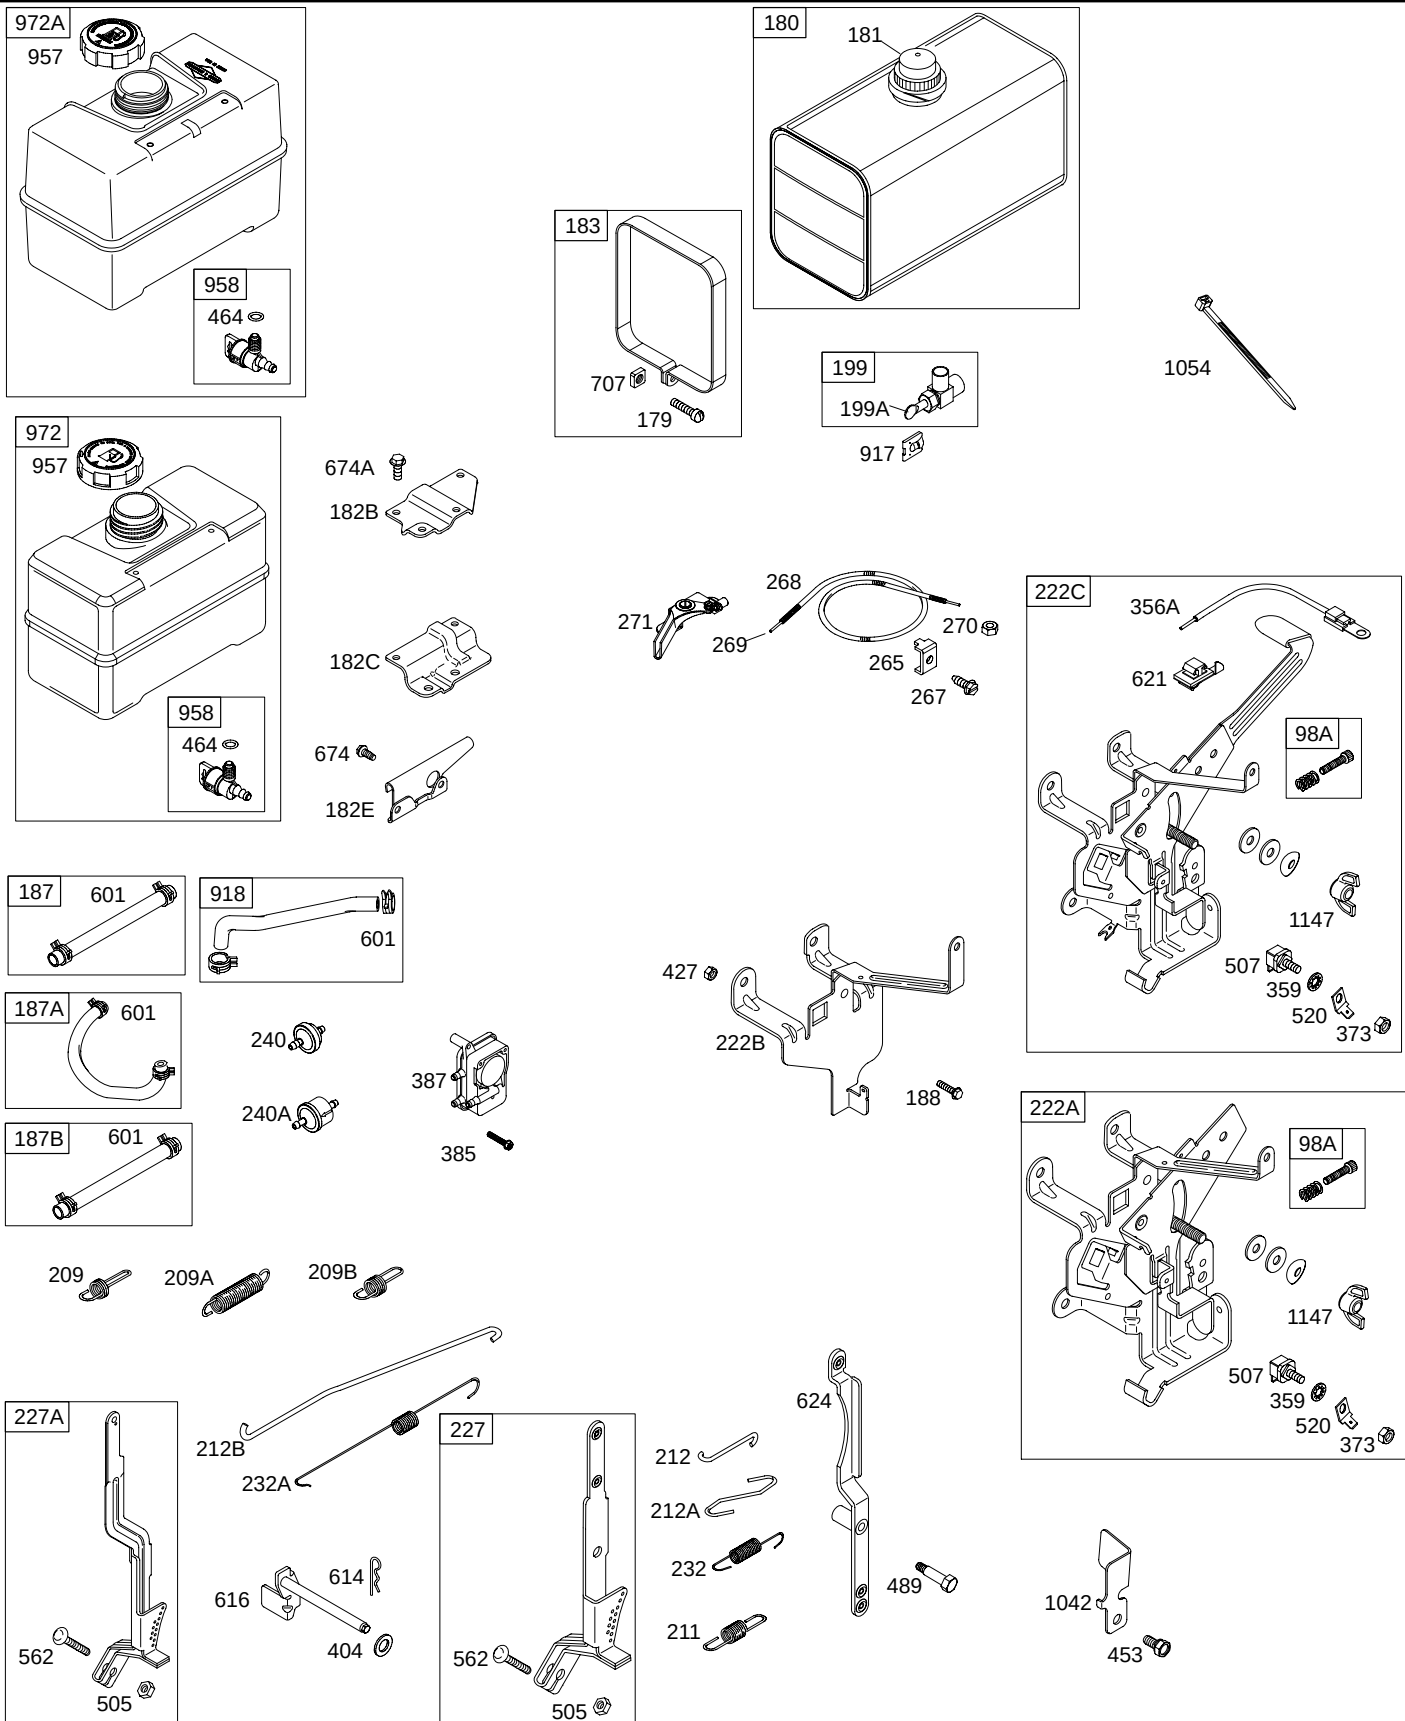

19F400

DC ONLY	DUAL CIRCUIT
SEE FLYWHEEL ASSEMBLY	SEE FLYWHEEL ASSEMBLY
474 877 	474A 877A 
1059 	1059 
578A 	878A 

  NOTE: ALL OLD STYLE STATORS USE
REFERENCE NUMBER 119 MOUNTING SCREW

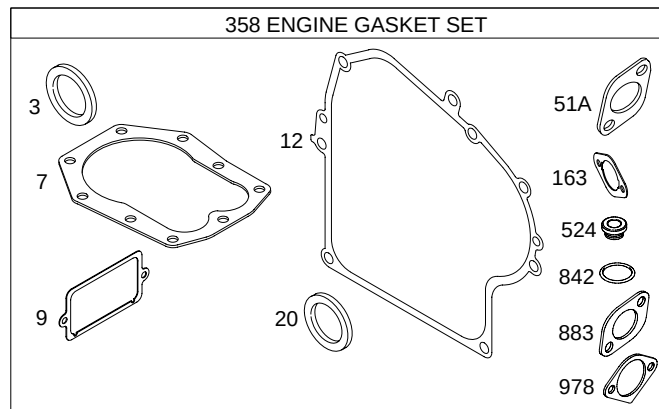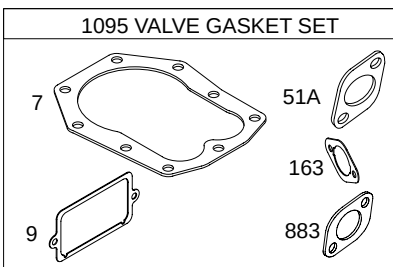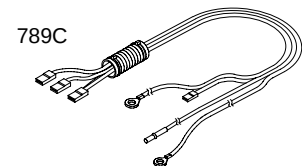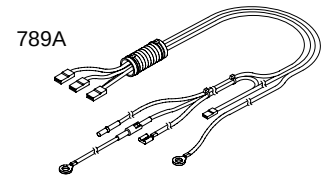

19F400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	495656	Cylinder Assembly	15	690946	Plug–Oil Drain (Opposite Side of Carburetor)	25	499960	Piston Assembly (Standard)
2	495657	Kit–Bushing/Seal (Magneto Side)			----- Note -----			----- Note -----
3	★391086	Seal–Oil (Magneto Side)			690289 Plug–Oil Drain (Magnetic)			499962 Piston Assembly (.020" Oversize)
5	691715	Head–Cylinder			(Carburetor Side)	26	690014	Ring Set (Standard)
7	★Ø272163	Gasket–Cylinder Head	15A	691680	Plug–Oil Drain (Square Socket)			----- Note -----
8	498038	Breather Assembly (Used After Code Date 95040200).	15B	691663	Plug–Oil Drain (Square Head)			299743 Ring Set (Standard)
8A	495736	Breather Assembly (Used After Code Date 95010100 and Before Code Date 95040300).	16	495790	Crankshaft			(Chrome)
8B	497710	Breather Assembly (Used Before Code Date 95010200).			----- Note -----			690016 Ring Set (.020" Oversize)
9	★Ø27803	Gasket–Breather			495884 Crankshaft Used on Type No(s). 0136, 0144, 1136.			690017 Ring Set (.030" Oversize)
10	691666	Screw (Breather Assembly)			497155 Crankshaft Used on Type No(s). 0112.	27	690975	Lock–Piston Pin (Used After Code Date 96102700).
11	691907	Tube–Breather (Used After Code Date 95040200).	17	691069	Bearing–Ball			----- Note -----
11A	691899	Tube–Breather (Used After Code Date 95010100 and Before Code Date 95040300).	18	496983	Cover–Crankcase Used on Type No(s). 0136, 0144, 1136.			691073 Lock– Piston Pin (Used Before Code Date 96102800).
11B	281426	Tube–Breather (Used Before Code Date 95010200).			----- Note -----	28	499302	Pin–Piston (Standard)
12	★692221	Gasket–Crankcase (.015" Standard)			496981 Cover– Crankcase Used on Type No(s). 0043, 1043, 1101, 1137.			----- Note -----
		----- Note -----	19	295964	Kit–Bushing/Seal (PTO Side)	29	390401	Pin–Piston (.005" Oversize)
		★27876 Gasket– Crankcase (.005")	20	★391086	Seal–Oil (PTO)			----- Note -----
		★27877 Gasket– Crankcase (.009")	21	281658	Cap–Oil Fill			390773 Rod– Connecting (.020" Undersize)
13	691651	Screw (Cylinder Head) (2 1/2" Long)	22	691625	Screw (Crankcase Cover/Sump)	30	691728	Dipper–Connecting Rod
13A	690904	Screw (Cylinder Head) (3" Long)			----- Note -----	31	222114	Lock–Rod Screw
14	691690	Stud (Cylinder Head) (3 1/3" Long)			691103 Screw (Crankcase Cover/Sump) (Used in Position 1) Used on Type No(s). 0043, 0144, 1043, 1101.	32	690352	Screw (Connecting Rod)
		----- Note -----	23	690615	Flywheel (Rewind Start)	33A	691794	Valve–Exhaust
		691109 Stud (Cylinder Head) (3 15/16" Long) (Used in Position 1) Used on Type No(s). 1137.	23A	691354	Flywheel (Electric Start)	34	261055	Valve–Intake
			24	222698	Key–Flywheel			

★ Engine Gasket Set – Reference Number 358
 ● Carburetor Overhaul Kit – Reference Number 121

◆ Carburetor Gasket Set – Reference Number 977
 Ø Valve Gasket Set – Reference Number 1095

19F400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
35	691605	Spring–Valve (Intake)	66	399671	Clutch–Starter	130	691750	Valve–Throttle
36A	691597	Spring–Valve (Exhaust)	67	394897	Housing–Clutch	131	497846	Kit–Throttle Shaft (Used After Code Date 94083100).
37	690411	Guard–Flywheel	68	691604	Ball–Clutch	131A	497159	Kit–Throttle Shaft (Used Before Code Date 94090100).
40	690656	Retainer–Valve (Intake)	70	691745	Ratchet–Clutch	133	494381	Float–Carburetor
40A	691939	Retainer–Valve (Exhaust)	71	691359	Cover–Ratchet	137	•497165	Gasket–Float Bowl
42	494553	Keeper–Valve	73	691754	Screen–Rotating	141	497160	Kit–Choke Shaft
45	691793	Tappet–Valve	74	691627	Screw (Rotating Screen)	142	691477	Nozzle–Carburetor (Standard) (LMT 172)
46	691167	Camshaft	75	690582	Washer (Flywheel)	----- Note -----		
50	691157	Manifold–Intake	78	690364	Screw (Flywheel Guard)	690128		Nozzle–Carburetor (Standard) (LMT 186)
51	•691886	Gasket–Intake (Manifold to Carburetor)	81	691729	Lock–Muffler Screw	•497564		Nozzle–Carburetor (Standard) (LMT 113, 114, 116)
51A	Ø691885	Gasket–Intake (Manifold to Engine)	93	•690602	Bushing–Throttle Shaft	497197		Nozzle–Carburetor (Standard) (LMT 102)
53	691672	Stud (Carburetor)	94	496589	Kit–Idle Mixture (LMT 172)	143	690129	Nozzle–Carburetor (High Altitude) (LMT 186)
54	93208	Screw (Intake Manifold)	----- Note -----			499032		Nozzle–Carburetor (High Altitude) (LMT 172)
55	693904	Housing–Rewind Starter (Used After Code Date 98111500).	94B	498836	Kit–Idle Mixture (LMT 141)	497848		Nozzle–Carburetor (High Altitude) (LMT 113, 114, 116)
55A	393576	Housing–Rewind Starter (Used Before Code Date 98111600).	95	•691636	Screw (Throttle Valve)	497198		Nozzle–Carburetor (High Altitude) (LMT 102)
56A	295871	Pulley–Starter (Used Before Code Date 98111600).	98	495800	Kit–Idle Speed (Carburetor)	144	697843	Pulley/Spring Assembly
57A	490179	Spring–Rewind Starter (Used Before Code Date 98111600).	98A	493280	Kit–Idle Speed (Control Bracket)	146	690979	Key–Timing
58	693389	Rope–Starter (70" Long)	104	•690525	Pin–Float Hinge	147	•497472	Jet–Pilot (LMT 102, 113, 114, 116)
58A	695002	Rope–Starter (99" Long) (Cut to Required Length)	105	•691782	Valve–Float Needle	161	498544	Base–Air Cleaner
58B	692188	Rope–Starter (63" Long)	106	•691780	Seat–Inlet	163	Ø692277	Gasket–Air Cleaner
59	490653	Insert–Grip	108	690467	Valve–Choke	165	693148	Nut (Ring Gear)
60	490652	Grip–Starter Rope	121	497849	Kit–Carburetor Overhaul (Used After Code Date 94062300).	170	691695	Stud (Crankcase Cover/Sump) (Used on Type No(s). 0132, 0133, 1132, 1133, 1137.
63	690547	Spring–Ratchet (Used Before Code Date 98111600).	----- Note -----					
64	691920	Adapter–Ratchet Spring (Used Before Code Date 98111600).	497166		Kit–Carburetor Overhaul (Used Before Code Date 94062400).			
65	690837	Screw (Rewind Starter)	125	499029	Carburetor (LMT 116, 141, 172)			
			----- Note -----					
					690115 Carburetor (LMT 186) (P/N 499403) Used on Type No(s). 1101, 1132, 1133, 1136, 1137.			
					497164 Carburetor (LMT 102, 113, 114)			
			127	694524	Plug–Welch			
			127A	695005	Plug–Welch (LMT 141)			

★ Engine Gasket Set – Reference Number 358
 ● Carburetor Overhaul Kit – Reference Number 121

◆ Carburetor Gasket Set – Reference Number 977
 Ø Valve Gasket Set – Reference Number 1095

19F400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
179	690280	Screw (Fuel Tank Strap)	209B	263054	Spring–Governor (Used Before Code Date 97042800). Used on Type No(s). 0043, 0112, 0132, 0133, 0136, 0144.	268	691025	Casing–Control Wire (Cut to Required Length)
180	291488	Tank–Fuel (6 Quart)				269	691026	Wire–Control
181	392305	Cap–Fuel Tank				270	691027	Nut (Control Wire Casing)
182B	691199	Bracket–Fuel Tank (Upper)	211	691307	Spring–Governed Idle (Used After Code Date 97042700). Used on Type No(s). 0136, 0144, 1136.	271	691028	Lever–Control
182C	695451	Bracket–Fuel Tank (Upper)				298	690453	Locknut–Muffler/Elbow
182E	690486	Bracket–Fuel Tank (Bottom)	212	691853	Link–Throttle (Linkage Lever to Throttle Shaft)	276	692255	Washer–Sealing
183	691937	Strap–Fuel Tank				300	497141	Muffler (Super Lo Tone) Used on Type No(s). 0112, 0136, 1136.
185	690958	Nut (Air Cleaner Base)	212A	691854	Link–Throttle (Governor Control Lever to Linkage Lever)	300A	692025	Muffler (Round Lo Tone)
186	691764	Connector–Hose (Straight)	212B	262970	Link–Throttle (Governor Control Lever to Throttle Shaft)	300C	498984	Muffler Used on Type No(s). 1137.
186A	691609	Connector–Hose (90 Degree))				304A	497143	Housing–Blower ----- Note -----
186B	692317	Connector–Hose (90 Degree)	215	691170	Guide–Air			497142 Housing– Blower
187	296004	Line–Fuel (Cut to Required Length)	219	496786	Gear–Governor			Used on Type No(s). 0043, 0112, 0133, 0136, 0144, 1043, 1101, 1133, 1136, 1137.
187A	497029	Line–Fuel (Molded)	220	691724	Washer (Governor Gear)	305	692198	Screw (Blower Housing)
187B	499167	Line–Fuel Used on Type No(s). 0136, 0144.	222A	691480	Bracket–Control (Used After Code Date 97042700).	306	496797	Shield–Cylinder
188	691693	Screw (Control Bracket)	222B	693606	Bracket–Control Used on Type No(s). 1043, 1101, 1137.	306A	224898	Shield–Cylinder
199	692302	Valve–Fuel Shut Off	222C	691478	Bracket–Control (Used After Code Date 97042700).	307	691003	Screw (Cylinder Shield)
199A	691940	Valve–Fuel Shut Off			----- Note -----	308	691201	Cover–Cylinder Head
209	692136	Spring–Governor (Yellow) (Used After Code Date 97042700). Used on Type No(s). 0043, 0112, 0132, 0133, 1043, 1101, 1132, 1133, 1137.			499722 Bracket– Control (Used Before Code Date 97042800).	309	693054	Motor–Starter
		----- Note -----	227	692143	Lever–Governor Control (Short Lever)	309A		Motor–Starter (For Replacement Starter Motor, See Ref 309)
		691309 Spring– Governor (Blue) (Used After Code Date 97042700). Used on Type No(s). 0136, 0144, 1136.	227A	496253	Lever–Governor Control (Long Lever)	310	690323	Bolt (Starter Motor)
209A	260723	Spring–Governor (Used Before Code Date 97042800). Used on Type No(s). 0112, 0132, 0133.	232	691848	Spring–Governor Link	311	497608	Brush Set
			232A	691846	Spring–Governor Link	311A	395538	Brush Set (3 5/8" Housing Length)
			240	394358	Filter–Fuel (White)	324	695160	Screen/Cup Assembly
			240A	691035	Filter–Fuel (Use with Fuel Pumps Only)	325	691903	Pulley–Rope Starter
						332	693899	Nut (Flywheel)
			257	691660	Screw (Starter Clutch)	333	398811	Armature–Magneto
			265	691024	Clamp–Casing	334	691061	Screw (Magneto Armature)
			267	690804	Screw (Casing Clamp)	337	496018	Plug–Spark
						346	690661	Screw (Spark Arrester)
						347	495098	Switch–Rocker

★ Engine Gasket Set – Reference Number 358
 ● Carburetor Overhaul Kit – Reference Number 121

◆ Carburetor Gasket Set – Reference Number 977
 Ø Valve Gasket Set – Reference Number 1095

19F400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
349	691105	Nut (Cylinder Head Cover)	474	696578	Alternator (DC Only)	614	691620	Pin–Cotter
355	690310	Washer (Muffler Bracket)	474A	696459	Alternator (Dual Circuit)	616	691405	Crank–Governor
356A	691408	Wire–Stop	485	692295	Knob–Control	621	692310	Switch–Stop
356B	398838	Wire–Stop	489	691776	Screw (Linkage Lever)	624	691415	Lever–Linkage
356D	491927	Wire–Stop	503	691532	Strap–Starter	634	●690802	Spring/Seal Assembly
356F	398808	Wire–Stop (Magneto Armature)	505	691251	Nut (Governor Control Lever)	635	66538	Boot–Spark Plug
358	497070	Gasket Set–Engine	510	696541	Drive–Starter	643	691926	Retainer–Air Filter
359	691077	Washer (Ground Terminal)	510A	696540	Drive–Starter	648	690661	Screw (Muffler Guard Bracket)
363	19203	Puller–Flywheel	513	692024	Clutch–Drive	655	691734	Anchor–Rewind Spring
367	691058	Screw (Wire Clip)	520	691084	Terminal–Ground	661	690661	Screw (OIL GARD® Light Bracket)
373	691612	Nut (Ground Terminal)	523	691386	Dipstick	669	691228	Bracket–Muffler Guard
383	89838	Wrench–Spark Plug	524	★281370	Seal–Dipstick Tube	674	691058	Screw (Fuel Tank Bracket)
385	691673	Screw (Fuel Pump)	525	691389	Tube–Dipstick	674A	690708	Screw (Fuel Tank Bracket)
387	692026	Pump–Fuel	544	497603	Armature–Starter	676	393761	Deflector–Muffler (Side Out) Used on Type No(s). 1137.
403	690288	Washer (End Cap)	544A	390837	Armature–Starter (3 5/8" Housing Length)	677	690661	Screw (Muffler Deflector)
404	691691	Washer (Governor Crank)	552	491986	Bushing–Governor Crank	678	490817	Spacer–Rewind
415A	690283	Plug (Square Head)	562	691119	Bolt (Governor Control Lever)	689	691855	Spring–Friction
425	691671	Screw (Air Cleaner Cover)	578A	692306	Wire Assembly (DC Only)	695	693109	Screw (Ring Gear)
427	690355	Nut (Control Bracket)	579	691029	Nut (Starter Cable)	697	690372	Screw (Drive Cap)
428	691612	Nut (OIL GARD® Kit)	579A	691626	Nut (Starter Cable)	707	690279	Nut (Fuel Tank Strap)
436	497140	Manifold–Exhaust	592	690800	Nut (Rewind–Starter)	718	690959	Pin–Locating
436A	690797	Manifold–Exhaust	597	691696	Screw (Pawl Friction Plate)	726	696537	Gear–Ring (Includes Mounting Hardware)
437	691665	Screw (Exhaust Manifold)	601	95162	Clamp–Hose	727	395405	Cover–Starter Drive
437A	690810	Screw (Exhaust Manifold)	608	693900	Starter–Rewind (70" Long) (Used After Code Date 98111500).	729	690603	Clip–Wire (Cylinder Shield)
441	690501	Bracket–Oil Fill	608A	390391	Starter–Rewind (63" Long) (Used Before Code Date 98111600).	729A	690430	Clip–Wire (OIL GARD® Kit)
445	691643	Filter–Air Cleaner Cartridge	613	691351	Screw (Muffler)	729B	224723	Clip–Wire (Strain Relief)
449	691130	Screw (Oil Fill Adapter)				729C	691224	Clip–Wire (Starter Motor)
453	691131	Screw (Electromagnetic Bracket)				729D	691336	Clip–Wire
456	692299	Plate–Pawl Friction				732	691097	Screw (Starter Drive Cover)
459	281505	Pawl–Ratchet				740	691105	Nut (Muffler Bracket)
464	691898	Seal–O Ring (Fuel Shut–Off Valve)				741	691288	Gear–Timing
						783	695708	Gear–Pinion

★ Engine Gasket Set – Reference Number 358
 ● Carburetor Overhaul Kit – Reference Number 121

◆ Carburetor Gasket Set – Reference Number 977
 Ø Valve Gasket Set – Reference Number 1095

19F400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
789	398661	Harness–Wiring (Oil GARD® Kit)	896A	691641	Pin–Drive Retainer			694313 Label–Emission
789A	691402	Harness–Wiring	898	691077	Washer (OIL GARD® Kit)			(Used Before Code Date 99100100 and After Code Date 98123100).
789C	691403	Harness–Wiring Used on Type No(s). 0043, 1043, 1101, 1137.	917	691737	Handle–Shut Off Valve			499354 Label–Emission
797	693167	Nut (Brush Retainer)	918	497457	Hose–Vacuum			(Used Before Code Date 98101100).
801A	691429	Cap–Drive (Used After Code Date 99081500).	930	691904	Guard–Rewind			Used on Type No(s). 1132, 1133, 1136.
802	691286	Cap–End	950	691657	Screw–Float Bowl	1042	691229	Bracket–Electromagnetic
802A	395537	Cap–End (3 5/8" Housing Length)	957	493988	Cap–Fuel Tank	1046	691337	Plug–Blower Housing
803	693757	Housing–Starter	958	698182	Valve–Fuel Shut Off	1051	691265	Ring–Retaining
803B	398159	Housing–Starter (3 5/8" Housing Length)	967	492889	Filter–Pre Cleaner	1054	280275	Tie–Cable
819	690297	Screw (Muffler Bracket)	968	691925	Cover–Air Cleaner	1058	274786	Operator's Manual
832	691447	Guard–Muffler	971	691003	Screw (Air Cleaner Base to Carburetor)	1059	698516	Kit–Screw/Washer
836	692198	Screw (Muffler Guard)	972	691993	Tank–Fuel (4 Quart)	1083A	690958	Nut (End Cap)
836A	692198	Screw (Muffler Guard)	972A	695164	Tank–Fuel (6 Quart)	1090	691293	Retainer–Brush
842	★691870	Seal–O Ring (Dipstick Tube)	975	495933	Bowl–Float	1091	691333	Cap–Limiter
847	399901	Dipstick/Tube Assembly	977	497069	Gasket Set–Carburetor	1095	498534	Gasket Set–Valve
851	493880	Terminal–Spark Plug	978	★273326	Gasket–Oil Gard®	1119	691183	Screw (Alternator)
863B	690454	Bracket–Muffler	979	691382	Cover–Oil Gard®	1147	690355	Nut (Control Bracket)
868	692036	Seal–Valve	980	398182	Kit–Oil Gard®	1158	695659	Screw (Carburetor Plug)
869	691703	Seat–Valve (Intake)	982	690351	Screw (Oil GARD® Cover)	1177	691105	Nut (Muffler)
870	691844	Seat–Valve (Exhaust)	982A	690350	Screw (Oil GARD® Kit)	1210	498144	Pulley/Spring Assembly (Pulley)
871	261961	Bushing–Valve Guide (Exhaust)	983	398660	Light–Indicator			(Used After Code Date 00082000 and Before Code Date 01051100).
		----- Note -----	984	692340	Bracket–Oil Gard® Light	1211	498144	Pulley/Spring Assembly (Spring)
		231218 Bushing–Valve Guide (Intake)	987	●691326	Seal–Throttle Shaft			(Used After Code Date 00082000 and Before Code Date 01051100).
876	696539	Kit–Pinion Spring	994	399541	Arrestor–Spark	1302	691113	Washer (Muffler Guard)
877	393814	Wire/Connector–Alternator (DC Only)	1019	497156	Kit–Label			
877A	393456	Wire/Connector–Alternator (Dual Circuit)	1036	696768	Label–Emission (Used After Code Date 01073000).			
878A	691237	Harness–Alternator			----- Note -----			
883	Ø★697815	Gasket–Exhaust			695696 Label–Emission			
884	691956	Clamp–Muffler			(Used Before Code Date 01073100 and After Code Date 00063000).			
					694988 Label–Emission			
					(Used Before Code Date 00070200 and After Code Date 99093000).			

★ Engine Gasket Set – Reference Number 358
 ● Carburetor Overhaul Kit – Reference Number 121

◆ Carburetor Gasket Set – Reference Number 977
 Ø Valve Gasket Set – Reference Number 1095