

200401 to 200466

Illustrated Parts List

MODEL SERIES

200401 to 200466

TYPE NUMBERS

0010 through 0060

0110 through 0200


TO FIND

**THE CORRECT NUMBER OF THE PART YOU NEED:
FOLLOW THE INSTRUCTIONS BELOW.**

- A. Refer to Engine Model, Type and Code Number (formerly Serial Number) that is stamped on the blower housing or name plate of engine. Engine type numbers such as 0147 01 are listed herein only as 0147. The two digits (01 or 02, etc.) to the right of the space are not needed for parts identification. Then use the Illustrated Parts List covering these Model Series.
- B. Refer to Illustrated Parts section and compare the old part with illustration. The number on the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames on which individual reference numbers are given can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical Parts List, where Reference and Master Part Numbers are listed. **THE MASTER PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE".**
- D. If a "Note" appears below the Master Part Number, this means that this part differs from the Master Part for certain types. If the Type Number is listed under "Note", order the part referred to.
- E. If the Engine Type Number does not appear after any part number listed under "Note", use the Master Part Number.
- F. For Type Numbers higher than those covered by this book, please refer to the factory if you are unable to identify the part by comparison.




200401 to 200466

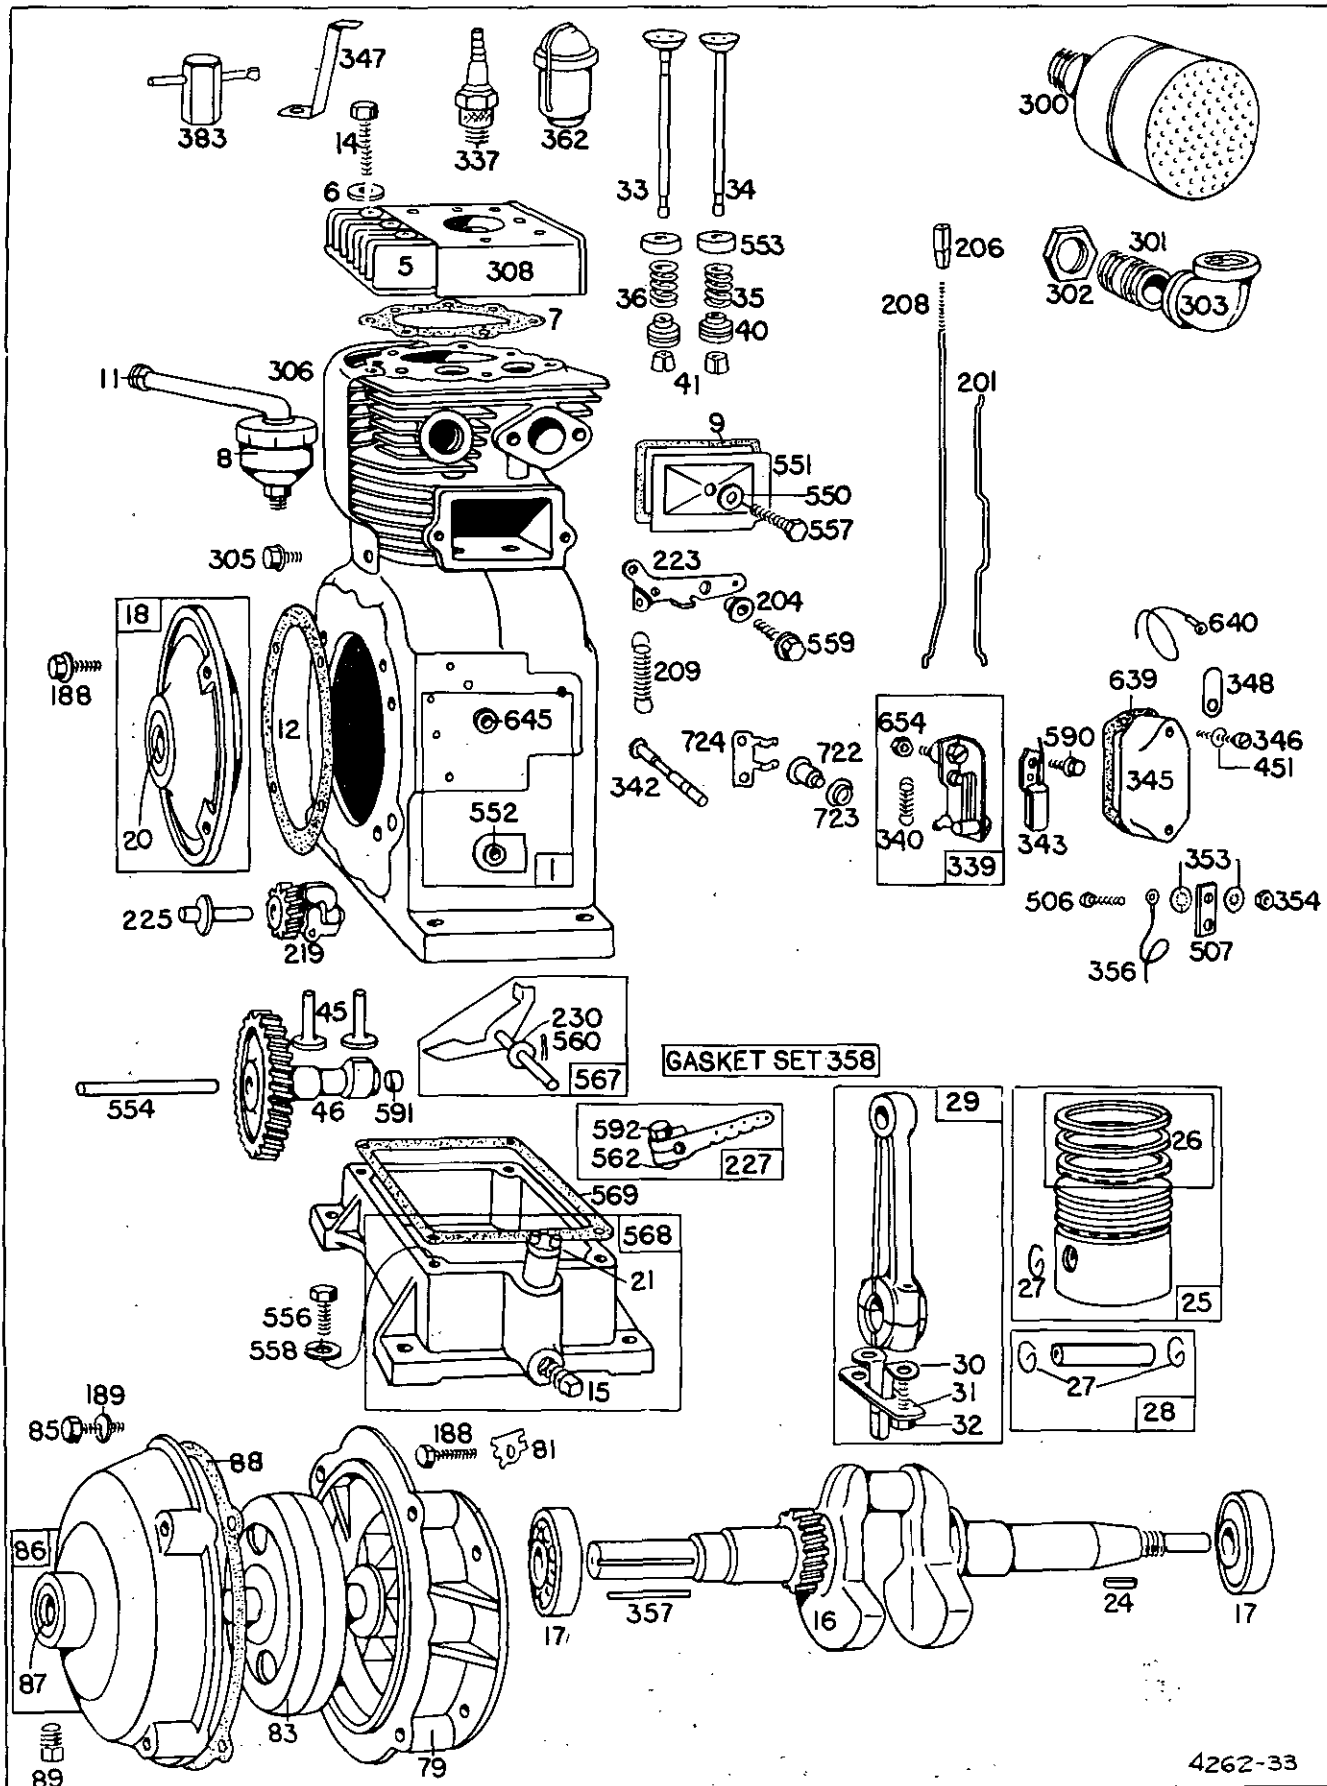

4262-33

Assemblies include all parts shown in frames.


200401 to 200466

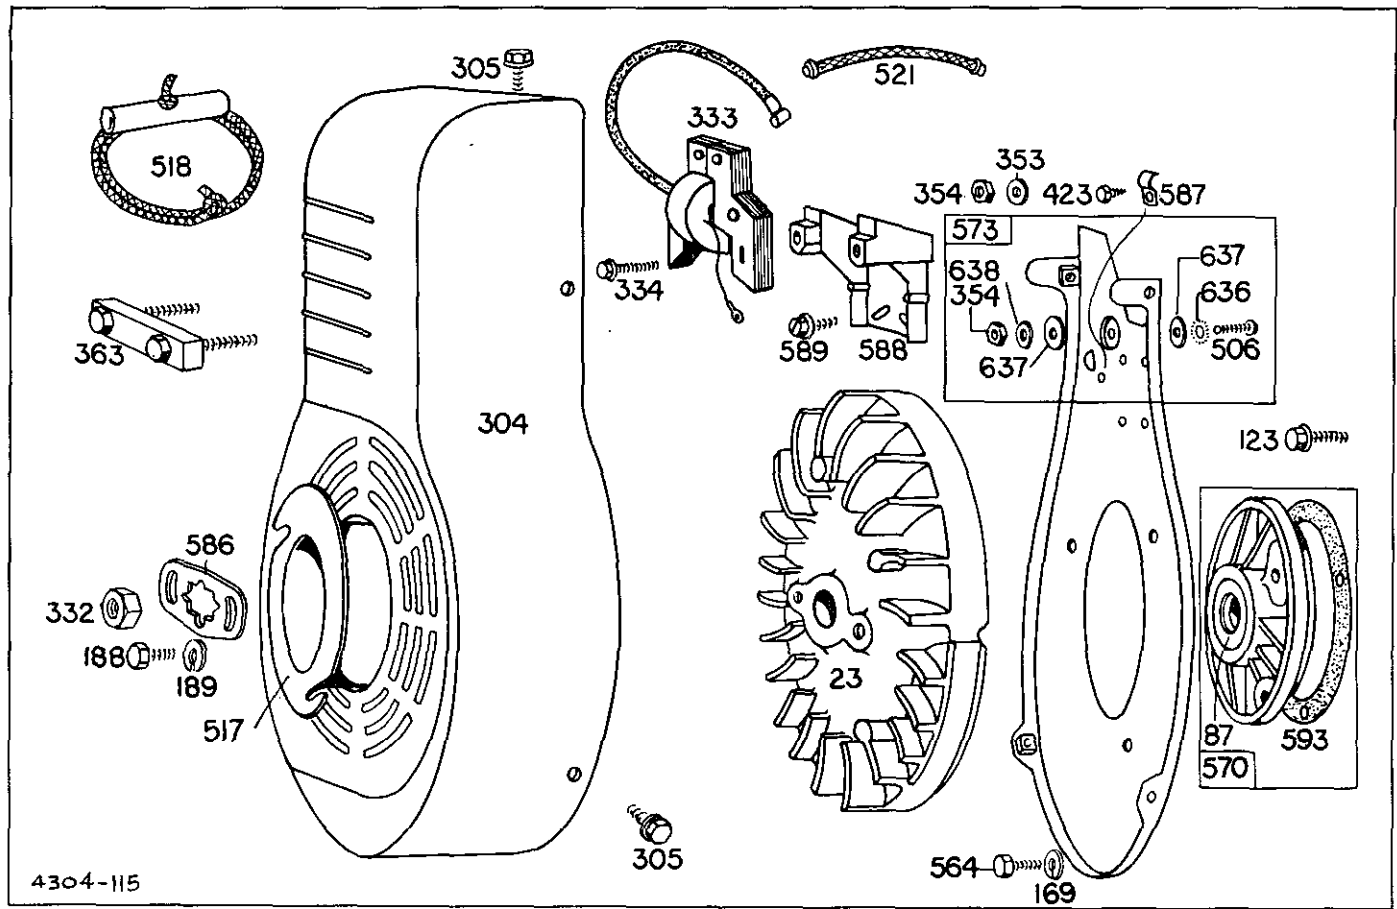

Assemblies include all parts shown in frames.



200401 to 200466

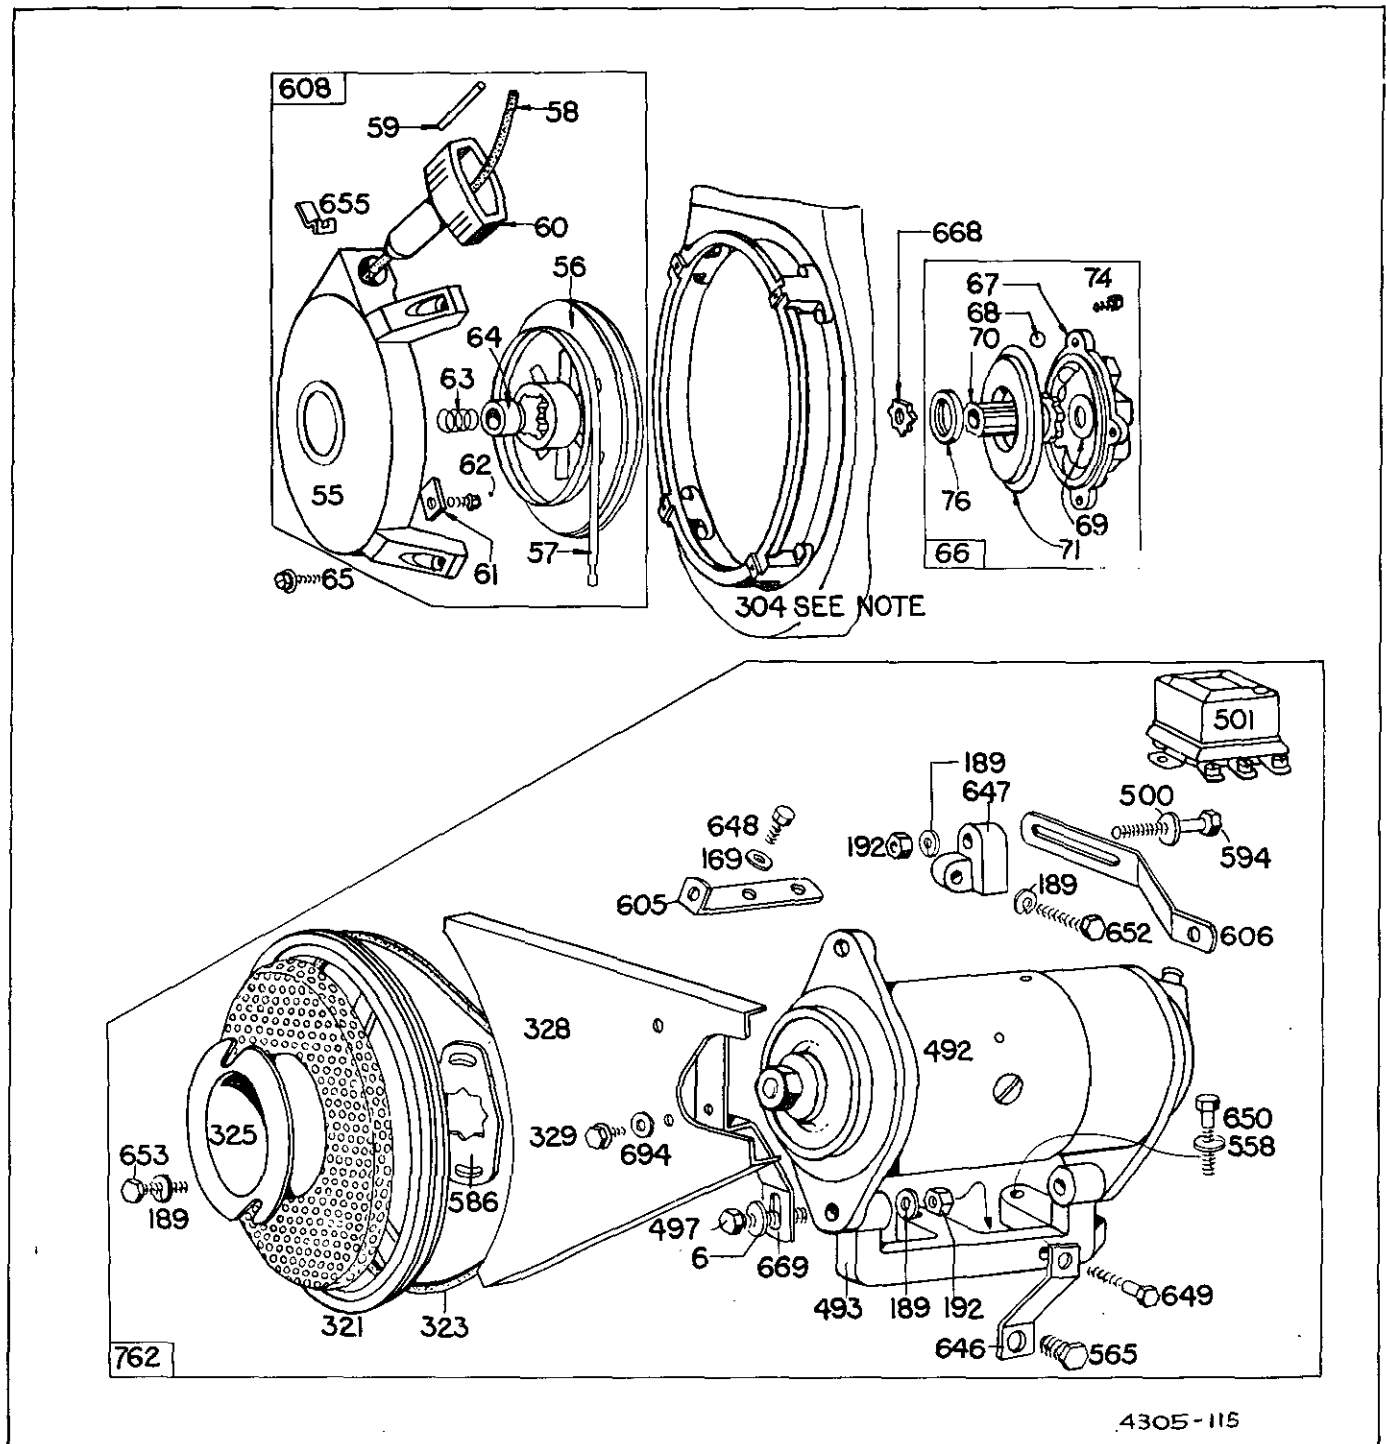

200401 to 200466 REF. NO. 1 - 25

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	298199	Cylinder Assembly		260944	Crankshaft	20	298423	Seal—Oil
	Note: 298563	Cylinder Assembly			Used on type Nos. 0021, 0112, 0131, 0159, 0165, 0166.	21	66768	Plug—Oil Filler
		Used on type Nos. 0023, 0135, 0142, 0143, 0149, 0150, 0153, 0155, 0165, 0166, 0168, 0185, 0186, 0188, 0195.		260945	Crankshaft		Note: 292495	Oil Filler Cap
5	210620	Head—Cylinder			Used on type Nos. 0020, 0022, 0113, 0120, 0124, 0125, 0130, 0136, 0137, 0138, 0145, 0146, 0148, 0155, 0160, 0161, 0171, 0177, 0179, 0182, 0187, 0195, 0199.			Uses: 65938
6	22963	Washer—Plain		260962	Crankshaft			Gasket—
7	*27752	Gasket—Cylinder Head			Used on type Nos. 0023, 0115, 0135, 0144, 0153, 0158, 0163, 0168, 0172, 0185.			Filler Cap
8	297704	Breather		260963	Crankshaft			Used on type No. 0143.
9	*66214	Gasket—Valve Cover			Used on type No. 0140.		299664	Cap and
11	67068	Tube—Breather		260965	Crankshaft			Dipstick—Oil Filler
12	*66224	Gasket—Crankcase Cover			Used on type Nos. 0143, 0188.			Uses: 299401 Tube—
14	91442	Screw—Cylinder Head		260966	Crankshaft			Filler
	Note: 93358	Screw—Cap, Hex. Head—			Used on type No. 0141.	23	298974	68838 Seal—
		5/16-18 x 3-1/2" (2)		260968	Crankshaft		Note: 220804	Filler
		230705 Spacer (2)			Used on type Nos. 0010, 0152, 0156.		220803	Tube to
		Used on type Nos. 0133, 0157, 0175, 0180, 0193.		261064	Crankshaft			Crankcase
		93583 Stud—Cylinder Head (6)			Used on type No. 0178.			Used on type Nos. 0126, 0127, 0175, 0176, 0180, 0193.
		Used on type No. 0194.		261090	Crankshaft			Flywheel—Magneto
15	91084	Plug—Pipe—3/8"			Used on type Nos. 0039, 0180, 0192, 0193.		Note: 220804	Screen
	Note: 92738	Plug—Oil Drain		261294	Crankshaft			Support
		Used on type No. 0142.			Used on type No. 0060.		220803	Spacer (4)
		92817 Plug—Oil Drain	17	29530	Bearing—Ball		230397	Screw (4)
		Used on type No. 0143.	18	290724	Cover Assy. — Crankcase (Plain Bearing)		93415	Washer (4)
					Used only on Model 200401 to 200406 engines.		67632	Used on type Nos. 0039, 0060, 0120, 0173, 0176, 0178, 0180, 0182, 0193, 0194.
16	260920	Crankshaft			Note: 291299			211555 Fan and
	Note: 260926	Crankshaft			Cover Assy. — Crankcase (Ball Bearing)			Pulley
		Used on type Nos. 0030, 0116, 0128, 0129, 0132, 0133, 0134, 0142, 0147, 0149, 0150, 0151, 0157, 0170, 0173, 0175, 0176, 0183, 0184, 0186, 0191, 0196, 0197, 0198, 0200.			Used only on Model 200431 to 200436 engines.		221851	Screen—
		260943 Crankshaft						Rotating
		Used on type Nos. 0111, 0194.						93521 Screw—Screen
								Mounting (4)
								91386 Screw—Fan to
								Flywheel Mounting (2)
								90366 Lockwasher—
								Fan to Flywheel
								Mounting (2)
								22906 Plate—Locking
								Used on type Nos. 0118, 0126, 0127, 0174.
						24	61760	Key—Flywheel
						25	294676	Piston Assembly—
								Standard
							294677	Piston Assembly—
								.010" O.S.
							294678	Piston Assembly—
								.020" O.S.
							294679	Piston Assembly—
								.030" O.S.

* Included in Gasket Set—
Part No. 294736.

REF. NO. 26 - 74

200401 to 200466

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
PISTON RING SETS					Top and Center, .030" O.S.			Used on type Nos. 0019, 0023, 0135, 0142, 0143, 0149, 0150, 0153, 0155, 0159, 0165, 0166, 0168, 0174, 0185, 0186, 0188, 0190, 0195.
		Note: For Chrome Piston Ring Set—standard size—order Part No. 298746.			61337			
26	292100	Ring Set—Piston—Standard. Includes: 210076 Ring—Piston, Comp., Top and Center, Standard 61292 Ring—Piston, Oil, Standard	27	68546	Lock—Piston Pin	41	68283	Collar—Valve Spring
			28	298401	Pin Assembly—Piston—Standard	45	63659	Tappet—Valve
				294681	Pin Assembly—Piston—.005" O.S.	46	211304	Gear—Cam
			29	299581	Rod Assembly—Connecting	50	21769	Elbow—Carburetor Intake
			30	221888	Dipper—Connecting Rod	51	† 65647	Gasket—Intake Elbow
			31	221887	Lock—Connecting Rod Screw	52	* 65647	Gasket—Intake Elbow Mounting
			32	92659	Screw—Connecting Rod	55	297663	Housing—Rewind Starter
			33	23835	Valve—Exhaust	56	295871	Pulley—Rewind Starter Includes 63" Rope
				Note: 26735	Valve—Exhaust	57	294303	Spring—Rewind Starter
					Used on type Nos. 0023, 0135, 0142, 0143, 0149, 0150, 0153, 0155, 0165, 0166, 0168, 0185, 0186, 0188, 0195.	58	66884	Rope—Rewind Starter (For use with Plastic Pulley)
			34	23836	Valve—Intake		Note: 66564	Rope—Rewind Starter (For use with Steel Pulley)
				Note: 23835	Valve	59	230228	Pin—Starter Grip
					Used on type Nos. 0023, 0135, 0142, 0143, 0149, 0150, 0153, 0155, 0165, 0166, 0168, 0185, 0186, 0188, 0195.	60	66728	Grip—Starter Rope
			35	65906	Spring—Intake Valve	61	68848	Bumper—Starter Pulley
			36	65906	Spring—Exhaust Valve	62	93254	Screw—Pulley Bumper Mounting Sem
				Note: 26828	Spring—Exhaust Valve	63	260414	Spring—Ratchet
					Used on type Nos. 0019, 0023, 0135, 0142, 0143, 0149, 0150, 0153, 0155, 0159, 0165, 0166, 0168, 0174, 0185, 0186, 0188, 0190, 0195.	64	230543	Adapter—Ratchet Spring
						65	93107	Screw—Rewind Starter Housing
								Mounting Sem
						66	298798	Clutch Assembly—Rewind Starter
						67	211383	Housing—Rewind Starter
						68	63770	Ball—Clutch
						69	66718	Washer—Starter Clutch Thrust
						70	298799	Ratchet—Rewind Starter Clutch
						71	221653	Washer—Retainer
								Uses: 93042 Screw—Retainer Washer (2)
			40	68293	Retainer—Valve Spring Collar	74	93042	Screw—Retainer
				Note: 292260	Rotocoil—Exhaust Valve			

* Included in Gasket Set—Part No. 294736.

† Included in Carburetor Overhaul Kit—Part No. 291763.

200401 to 200466 REF. NO. 76 - 170

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
76	68238	Seal—Ratchet Sealing	97	291300	Shaft Assembly—Throttle	111	26155	Spring—Choke Lever
79	291356	Case Assembly—Gear	98	91920	Screw—Machine, Fill. Hd. —8-32 x 5/8"	112	23123	Screw—Choke Lever
81	220790	Lock—Gear Case Mounting Screw	99	26157	Spring—Throttle Adjustment	113	† 390395	Nozzle—Carburetor
83	291762	Shaft Assembly—Drive	100	61967	Stop—Throttle	114	† 68667	Gasket—Nozzle
	Note:	292470 Shaft Assy. — Drive	101	93043	Pin—Throttle Lever	118	† 99525	Valve Assembly—Needle
		Used on type Nos. 0133, 0134, 0149, 0151, 0157, 0173, 0175, 0176, 0180, 0193.	102	† 27034	Gasket—Carburetor Body	119	90746	Screw—Machine, Fill. Head—10-32 x 5/8"
85	91386	Screw—Gear, Case Cover (2" long)	103	99333	Float—Carburetor	120	92290	Washer—Lock—No. 10 x 1/16 x 3/64"
86	291354	Cover Assembly—Gear Case	104	† 230896	Pin—Float Hinge	121	291763	Carburetor Overhaul Kit
87	298423	Seal—Oil	105	† 299096	Valve—Fuel Inlet	123	93415	Screw—Sem
88	27328	Gasket—Gear Case Cover	107	89915	Body Assembly—Lower Carburetor	158	27590	Filter—Carburetor Drain
89	91488	Plug—Square Head, 1/8", Pipe		Note:	291472 Body Assy. — Lower Carburetor	159	220521	Retainer—Carburetor Drain Filter
90	293950	Carburetor Assembly			Used on type Nos. 0153, 0172.	163	* 67247	Gasket—Air Cleaner Mounting
	Note:	294805 Carburetor Assembly			295860 Body Assy. — Lower Carburetor	164	291462	Pipe Assy. — Air Cleaner
		Used on type Nos. 0153, 0172.			Used on type Nos. 0019, 0121, 0164, 0167, 0181.		Note:	296036 Pipe Assy. — Air Cleaner
		296135 Carburetor Assembly			296573 Body Assy. — Lower Carburetor			Used on type Nos. 0019, 0121, 0126, 0127, 0133, 0134, 0157, 0173, 0175, 0176, 0180, 0193.
		Used on type Nos. 0019, 0121, 0164, 0167, 0181.	108	62872	Valve—Choke	165	92650	Nut—Wing
		296724 Carburetor Assembly		Note:	22954 Valve—Choke	166	230739	Stud—Air Cleaner
		Used on type No. 0158.			Used on type Nos. 0153, 0172.		Note:	23870 Stud—Air Cleaner
91	291655	Body Assembly—Upper Carburetor	109	89531	Shaft and Lever—Choke			Used on type Nos. 0136, 0146, 0171.
	Note:	296723 Body Assy. — Upper Carburetor		Note:	291440 Shaft, Vane and Lever Assy. — Automatic Choke			230768 Stud—Air Cleaner
		Used on type No. 0158.			291776 Lever Assy. — Automatic Choke			Used on type Nos. 0019, 0121, 0126, 0127, 0133, 0134, 0157, 0173, 0175, 0176, 0180, 0193.
92	99375	Body—Upper Carburetor			Includes: 90200	167	65978	Seal—"O" Ring
93	23108	Bushing—Throttle Shaft			Screw—Machine, Fil. Head—8-32 x 1/2"	168	22832	Strap—Air Cleaner Pipe
94	† 292681	Valve Assembly—Carburetor Idle			Used on type Nos. 0153, 0172.	169	90832	Washer—Lock—1/4 x 3/32 x 5/64"
95	93038	Screw—Choke and Throttle Valve Mtg. Sem			295374 Shaft and Lever—Choke		Note:	92778 Washer—Lock—Shakeproof
96	62940	Valve—Throttle.			Used on type Nos. 0019, 0121, 0164, 0167, 0181.			Used to mount Blower Housing on type Nos. 0142, 0143, 0153.
			110	62899	Washer—Choke Lever	170	91468	Screw—Cap, Hex. Head—1/4-20 x 3/8"

* Included in Gasket Set—Part No. 294736.

† Included in Carburetor Overhaul Kit—Part No. 291763.

REF. NO. 171 - 244 200401 to 200466

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
171	92129	Nut-Hex. 1/4-28	189	90366	Washer-Lock- 5/16 x 1/8 x 1/16"	230	22826	Washer-Governor Crank
180	291488	Tank Assembly- Fuel (6 Quart)	192	91397	Nut-Hex. -5/16-18	240	295984	Filter Assembly- Fuel
	Note:	290816 Tank Assy. - Fuel (4 Quart) Used on type Nos. 0120, 0121, 0134, 0141, 0143, 0149, 0150, 0152, 0168, 0172, 0188, 0194. 292415 Tank Assy. Fuel (8 Quart) Used on type Nos. 0132, 0140, 0179.	196	22907	Support-Upper Fuel Tank			Used with Flexible Fuel Pipe
181	69221	Cap-Fuel Tank	201	26674	Link-Throttle		Note:	99910 Filter Assembly-Fuel Used with Metal Fuel Pipe.
182	22813	Bracket-Fuel Tank	204	23849	Bushing-Control Lever			295977 Filter Assembly-Fuel Used on type Nos. 0133, 0157, 0175, 0180, 0193.
	Note:	221435 Bracket (Used between Tank Bracket and Crankcase) 93535 Screw-Sem (2) 22963 Washer- Flat (2) Used on type Nos. 0133, 0157, 0175, 0180, 0193.	206	21772	Nut-Governor Adjusting			297563 Outlet Assembly (at Tank) 298090 Filter (in Fuel Pipe) Used on type Nos. 0010, 0020, 0022, 0120, 0164, 0184, 0194.
183	291490	Strap Assy. - Fuel Tank	208	230039	Rod-Gov. Control	241	296005	Cover Assy. - Fuel Filter Used with Flexible Fuel Pipe.
	Note:	291367 Strap Assembly-Fuel Tank Used on type Nos. 0120, 0121, 0134, 0141, 0143, 0149, 0150, 0151, 0152, 0168, 0172, 0188, 0194.	209	26764	Spring-Governor		Note:	99909 Cover Assembly- Fuel Filter Used with Metal Fuel Pipe.
184	91257	Screw-Machine, Fill. Head- 1/4-20 x 1-1/4"		Note:	26643 Spring- Governor Used on type Nos. 0173, 0175, 0176, 0180, 0193.			296019 Cover Assembly- Fuel Filter Used on type Nos. 0133, 0157, 0175, 0180, 0193.
185	90970	Nut-Square- 1/4-20	219	291192	Gear Assembly- Governor	242	295913	Valve-Fuel Shut-Off
186	67218	Connector-Fuel Pipe (For Flexible Tubing)	223	22814	Lever-Governor Control		Note:	293934 Valve-Fuel Shut-Off, Used on type Nos. 0010, 0020, 0022, 0120, 0164, 0184.
186A	63377	Connector-Fuel Pipe (For Metal Fuel Pipe)		Note:	Governor Control Lever used on type Nos. 0133, 0134, 0157, 0173, 0175, 0176, 0180, 0193 is furnished by the equip- ment manufacturer.	243	22547	Screen-Fuel Filter
187	299942	Pipe-Fuel (Flexible Tubing)	225	291177	Shaft-Governor Gear	244	230318	Connector-Fuel Pipe
187A	29476	Pipe-Fuel (Metal)	227	291365	Lever Assy. - Governor		Note:	53029 Connector- Fuel Pipe Used with Metal Fuel Pipe
	Note:	296576 Pipe-Fuel Used on type No. 0158.		Note:	298399 Lever Assembly- Governor Used on type Nos. 0126, 0127.			
188	93535	Screw-Sem						

200401 to 200466 REF. NO. 244 - 337

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		67218 Connector—Fuel Pipe Elbow Used on type Nos. 0022, 0133, 0157, 0175, 0180, 0193.	294	92678	Screw—Set, Socket Head—6-32 x 5/16"			297237 Housing—Blower Used on type Nos. 0022, 0164, 0183, 0198.
245	*68477	Gasket—Fuel Filter Bowl	295	23954	Shaft—Thermostat			297579 Housing—Blower (with Rewind Starter Adapter Ring) Used on type Nos. 0039, 0060, 0111, 0180, 0192, 0193, 0194.
246	298683	Bowl—Fuel Filter	296	291044	Lever Assembly—Thermostat	305	93158	Screw—Sem
247	99665	Yoke Assembly—Fuel Filter	300	290933	Muffler—Exhaust	306	220861	Shield—Cylinder
266	291460	Control—Throttle	Note: 291519 Muffler—Exhaust Used on type Nos. 0199, 0200.			308	294683	Cover—Cylinder Head
268	65616	Casing—Control Wire—72" long Note: If longer casing is required, specify length in inches; if shorter casing is needed, order No. 65616 and cut to required length.	301	91416	Nipple—Exhaust, Pipe	321	211166	Pulley—V-Belt Starter
269	26633	Wire—Control—78" long Note: If longer wire is required, specify length in inches; if shorter wire is needed, order No. 26633 and cut to required length.	302	91310	Locknut—Muffler	323	66828	Belt—Vee Note: 68878 Belt—Vee Used on type Nos. 0118, 0127.
270	63426	Locknut—Control Wire Casing	303	91296	Elbow—Exhaust 90°, Pipe Note: 91308 Elbow—Exhaust, 90° Street Used on type No. 0148. 91415 Elbow—Exhaust, 45° Used on type Nos. 0175, 0176, 0180, 0182, 0193. 92130 Elbow—Exhaust, 45° Street Used on type Nos. 0123, 0134.	325	299308	Pulley and Screen—Electric Starter
271	290568	Lever Assembly—Control Note: 93469 Screw—Sem Used to mount Control Lever on type Nos. 0149, 0150, 0151, 0162, 0183, 0184, 0191.	304	291280	Housing—Blower Note: 294144 Housing—Blower Used on type Nos. 0142, 0143. 294742 Housing—Blower Used on type Nos. 0019, 0118, 0120, 0126, 0127, 0134, 0157, 0173, 0174, 0176, 0178, 0182. 295194 Housing—Blower Used on type No. 0141. Rewind Starters used on type No. 0141 are Model S-475, Type 69-K made and serviced by Fairbanks Morse & Co., Beloit, Wisconsin.	328	221531	Guard—Belt
285	26684	Link—Choke				329	93294	Screw—Belt Guard Mounting Sem
286	291445	Thermostat Assy.				332	230674	Nut—Flywheel Note: 23949 Nut—Flywheel Used on type No. 0188.
287	90050	Screw—Machine, Rod Head—6/32 x 1/4"				333	298968	Armature Assembly Note: 299700 Armature Assembly. Used on type Nos. 0142, 0143, 0153, 0188.
288	90362	Washer—Lock—No. 6 x 3/64 x 1/32"				334	93381	Screw—Armature to Mounting Bracket Sem Note: 92791 Washer—Lock—Shakeproof is used with 93381 Screw to secure Ground Wire to Armature on type Nos. 0142, 0143, 0153.
289	23886	Support—Thermostat				337	29693	Plug—Spark (with Gasket) Note: Spark Plugs 29693 and 293918 use Ignition Cable Terminal No. 221798.
290	291444	Tube Assembly—Thermostat						
291	26594	Thermostat						
292	23885	Support—Thermostat						
293	23884	Stop—Thermostat Shaft						

* Included in Gasket Set—Part No. 294736.

REF. NO. 337 - 557

200401 to 200466

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		291954 Plug-Spark Used on type Nos. 0142, 0143, 0153.	379	22984	Cover-Fuel Pump Hole	506	90200	Screw-Machine, Rd. Hd. -8-32 x 1/2"
		293918 Plug-Spark Used on type Nos. 0023, 0129, 0131, 0145, 0161, 0165, 0169.	383	89838	Wrench-Spark Plug		Note:	90072 Screw-Machine, Rd. Head-
339	298185	Breaker Assy. - Ignition	386	27314	Gasket-Fuel Pump Hole Cover			8-32 x 5/8" (2) Used on type Nos. 0142, 0143, 0153.
340	26018	Spring-Breaker Arm	400	230010	Wrench-Socket Screw	507	66895	Insulator
342	298123	Plunger-Contact	423	93410	Screw-Cable Clamp Mounting		Note:	299598 Insulator Used on type Nos. 0142, 0143, 0153, 0171, 0177, 0179, 0188.
343	298060	Condenser	451	90364	Washer-Lock- No. 8x 3/64 x 1/32"	508	93158	Screw-Sem
345	211327	Cover-Breaker		Note:	92791 Washer-Lock- Shakeproof (3) Used on type Nos. 0142, 0143, 0153.	517	22809	Pulley-Rope Starter
346	93400	Screw-Breaker Cover Mounting	492	390555	Starter-Generator (Delco-Remy No. 1101695) Uses: 296182 Pulley (Delco-Remy No. 1943222)	518	69932	Rope-Starter
	Note:	93550 Screw Used in upper hole in Breaker Cover for mounting Insulator on type Nos. 0142, 0143, 0153.		Note:	297779 Starter- Generator (Delco-Remy No. 1101864) Uses: 296182 Pulley (Delco-Remy No. 1949358)	521	291508	Shielding-Ignition Cable
347	220197	Switch-Stop					Note:	299554 Shielding- Ignition Cable Uses: 66298 Bushing- Spark Plug Terminal 92704 Terminal- Spark Plug Used on type Nos. 0142, 0143, 0153.
	Note:	29372 Switch-Stop Used on type Nos. 0180, 0193. 298927 Switch-Stop Used on type Nos. 0121, 0174.	493	211153	Bracket-Starter	535	270093	Element-Air Cleaner
348	221976	Switch-Stop		Note:	211786 Bracket- Starter Used after Serial No. 6810281 on type Nos. 0118, 0127. 211622 Bracket- Starter Used before Serial No. 6810251 on type Nos. 0118, 0127.	536	297869	Cleaner-Air
353	92791	Washer-Lock- Shakeproof (2)					Note:	291858 Cleaner Assembly-Air Uses: 27401 Gasket- Air Cleaner (Filter to Bowl) Used on type Nos. 0136, 0146, 0171.
354	90576	Nut-Lock (2)	497	91203	Screw-Cap, Hex. Head- 5/16-18 x 1-3/4"	550	*22353	Washer-Valve Cover
356	295413	Wire-Ground		Note:	91325 Washer-Plain	551	22795	Cover-Valve
	Note:	299579 Wire-Ground Used on type Nos. 0142, 0143, 0153. 299907 Wire-Ground Used on type Nos. 0171, 0187, 0188. 391115 Wire-Ground Used on type Nos. 0039, 0060, 0193, 0194, 0198.	500		90366 Washer-Lock Used with 91325 Washer on type No. 0127.	552	23837	Bushing-Governor Crank
357	91540	Key-Pulley Mtg.	501	295924	Regulator-Voltage (Delco-Remy No. 1118988)	553	62222	Cup-Valve Spring
358	294736	Gasket Set				554	66203	Shaft-Cam
362	291630	Shield-Spark Plug		Note:		556	90887	Screw-Cap, Hex. Head- 3/8-16 x 1-1/4"
	Note:	66538 Elbow-Spark Plug Used on type Nos. 0120, 0121, 0174.				557	92636	Screw-Cap, Hex. Head- 1/2-20 x 2"
363	19068	Puller-Flywheel (Optional Accessory)						

* Included in Gasket Set-
Part No. 294736.

200401 to 200466 REF. NO. 558 - 762

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
558	92268	Washer-Lock- 3/8 x 1/8 x 3/32"	569	*27293	Gasket-Engine Base	636	92864	Washer-Lock Note: 92791 Washer-Lock- Shakeproof (2) Used on type Nos. 0142, 0143, 0153.
	Note: 90366	Washer-Lock- 5/16" x 1/8 x 1/16" Used to mount Starter Bracket to Cylinder on type No. 0127.	570	291377	Support Assembly- Plain Bearing Note: 291378 Support Assembly-Ball Bearing Used only on Model 200431 through 200436 engines.	637	66154	Washer-Back Plate Terminal (2)
559	93294	Screw-Sem	572	291476	Guide-Front Air	638	26404	Washer-Back Plate Term.
560	91984	Pin-Cotter- 1/16 x 1/2" long	573	298863	Plate-Back Note: 299677 Plate-Back Used on type Nos. 0142, 0143, 0153.	639	270176	Gasket-Breaker Cover
562	92613	Bolt-Governor Lever	586	22906	Lock-Flywheel Nut	640	298141	Lead-Primary Note: 299580 Lead-Primary Used on type Nos. 0142, 0143, 0153.
563	92863	Screw-Self Tapping, Hex. Head- 1/4-20 x 5/8"	587	221340	Clamp-Cable	642	221468	Cover-Air Cleaner
564	92980	Screw-Cap, Hex. Head- 1/4-20 x 1/2"	588	211438	Bracket-Armature Mounting	643	280001	Cup-Air Cleaner
565	93142	Screw-Bracket to Base Mounting	589	93473	Screw-Armature Bracket to Cylinder Mounting Sem	644	221466	Base-Air Cleaner
566	99458	Idling Device Uses: 92747 Screw-Sem For mounting to Intake Elbow	590	93171	Screw-Breaker Mounting Sem	645	230775	Bushing-Plunger
567	291364	Crank Assembly- Governor	591	65932	Plug-Camshaft	646	221472	Brace-Bracket
568	290935	Base Assembly- Engine Note: Base used on type Nos. 0126, 0127 is furnished by the equipment manu- facturer 21897 Base-Engine Uses: 89859 Nipple- Oil Filler Used on type No. 0143. 294757 Base Assembly-Engine Used on type Nos. 0010, 0020, 0022, 0164, 0181, 0183, 0184, 0191, 0197, 0198. 297574 Base Assy. Engine. Used on type Nos. 0133, 0134, 0157, 0173, 0175, 0176, 0180, 0193.	592	231082	Nut-Hex. -10-24	647	211154	Anchor-Link
			593	*27295	Gasket-Plain or Ball Bearing Support- .020" thick *27296 Gasket Plain or Ball Bearing Support- .005" thick *27297 Gasket-Plain or Ball Bearing Support- .009" thick	648	91439	Screw-Cap, Hex. Head- 1/4-20 x 3/8"
			594	91449	Screw-Bracket Mounting Note: 92272 Screw-Cap, Hex. Head- 5/16-18 x 3/4" Used on type No. 0127 to mount Strap to Generator.	649	93123	Screw-Cap, Hex. Head- 5/16-18 x 1-1/4"
			601	93053	Clamp-Fuel Pipe (2)	650	91814	Screw-Cap, Hex. Head- 3/8-16 x 2" Note: 91162 Screw-Cap, Hex. Head Used on type No. to mount Starter Bracket to Cylinder.
			605	297171	Bracket-Support	652	91162	Screw-Link Anchor Mounting
			606	221471	Strap-Adjusting Note: 221934 Strap- Adjusting Used on type Nos. 0118, 0127.	653	91442	Screw-Pulley Mtg.
			608	297011	Starter-Assembly- Rewind	654	230783	Nut-Contact Point Adjusting Screw
						655	221014	Anchor-Spring
						668	260647	Spacer (used between end of Ratchet and Starter Pulley)
						669	297187	Bracket-Guard
						694	91324	Washer-Guard to Bracket Mounting
						722	68768	Seal-Plunger
						723	93516	Eyelet-Seal Retainer
						724	221873	Retainer-Plunger Seal
						762	297651	Electric Starter - Generator Kit- 12 Volt

* Included in Gasket Set-
Part No. 294736.