

28BH00

Illustrated Parts List Model Series 28BH00

TYPE NUMBERS
0101, 0105, 0114

TABLE OF CONTENTS


Air Cleaner	5
Alternator	7
Blower Housing	5
Camshaft	2
Carburetor	4
Controls	7
Engine Sump	2
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	7
Exhaust System	5
Flywheel	6
Fuel Supply	4
Gasket Set – Engine	2
Gasket Set – Valve	3
Governor Spring	7
Ignition	7
Intake Manifold	3
Kit – Carburetor Overhaul.	4
Lubrication	3
Piston, Rings, Connecting Rod	2
Rewind Starter	6
Valves	3

PRINTED IN U.S.A.




COPYRIGHT by BRIGGS & STRATTON CORPORATION
 All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

28BH00

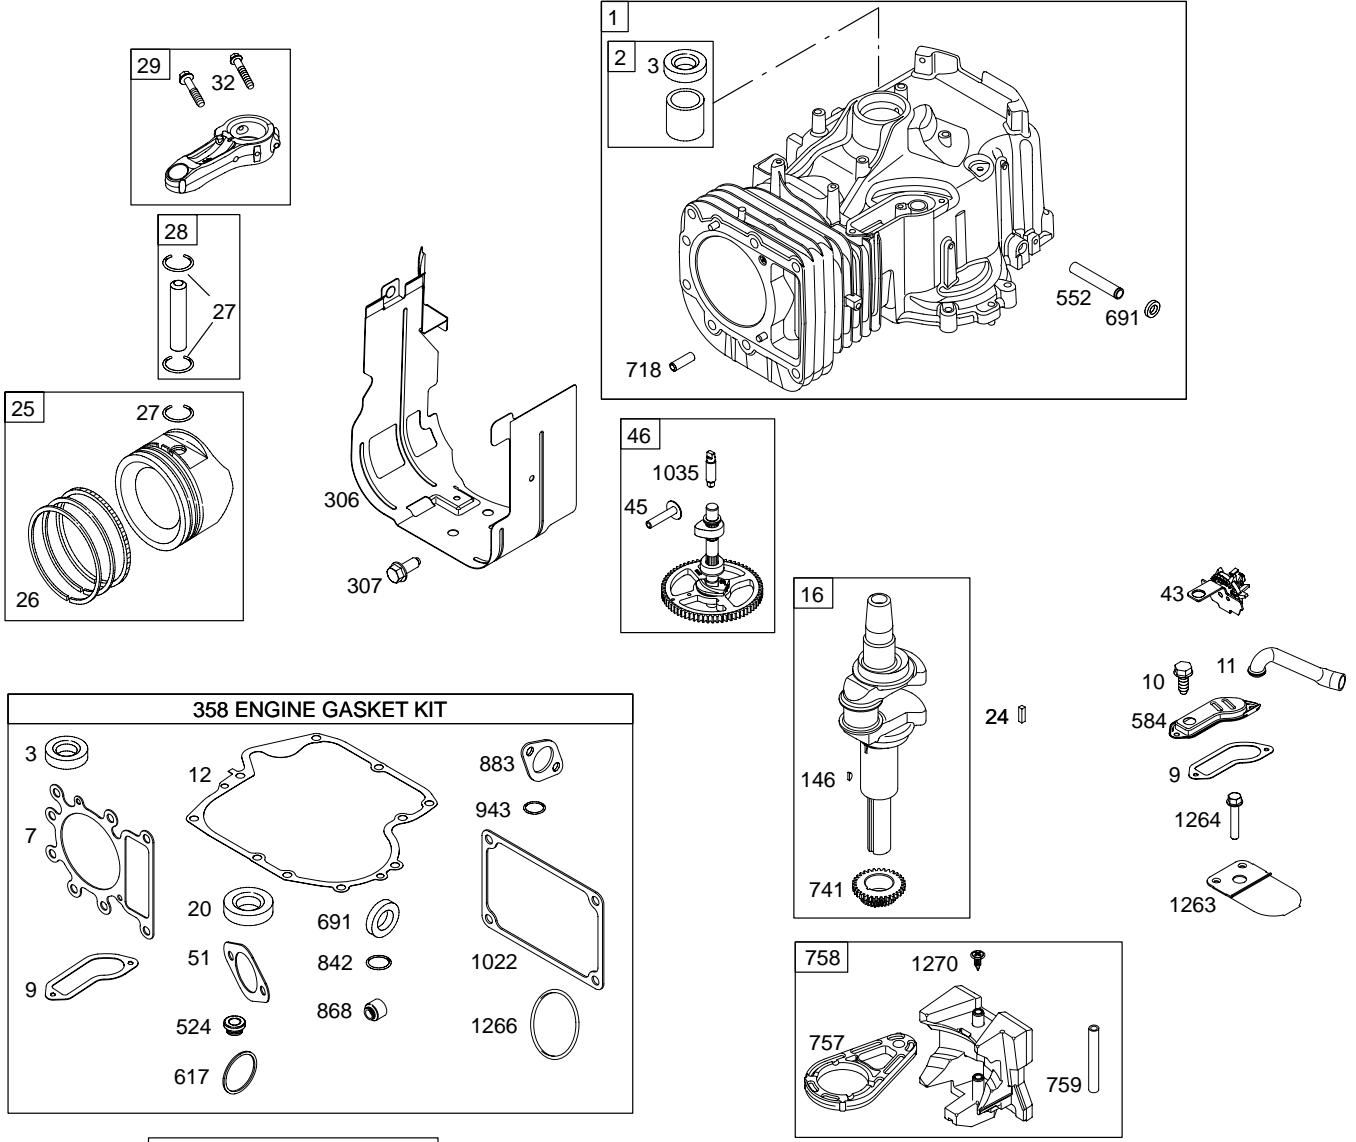


1019 LABEL KIT
1058 OWNER'S MANUAL

1330 REPAIR MANUAL





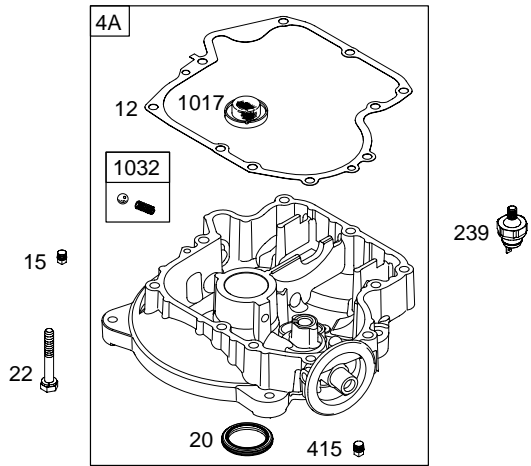


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5329-2 Assemblies include all parts shown in frames. 08/31/2004

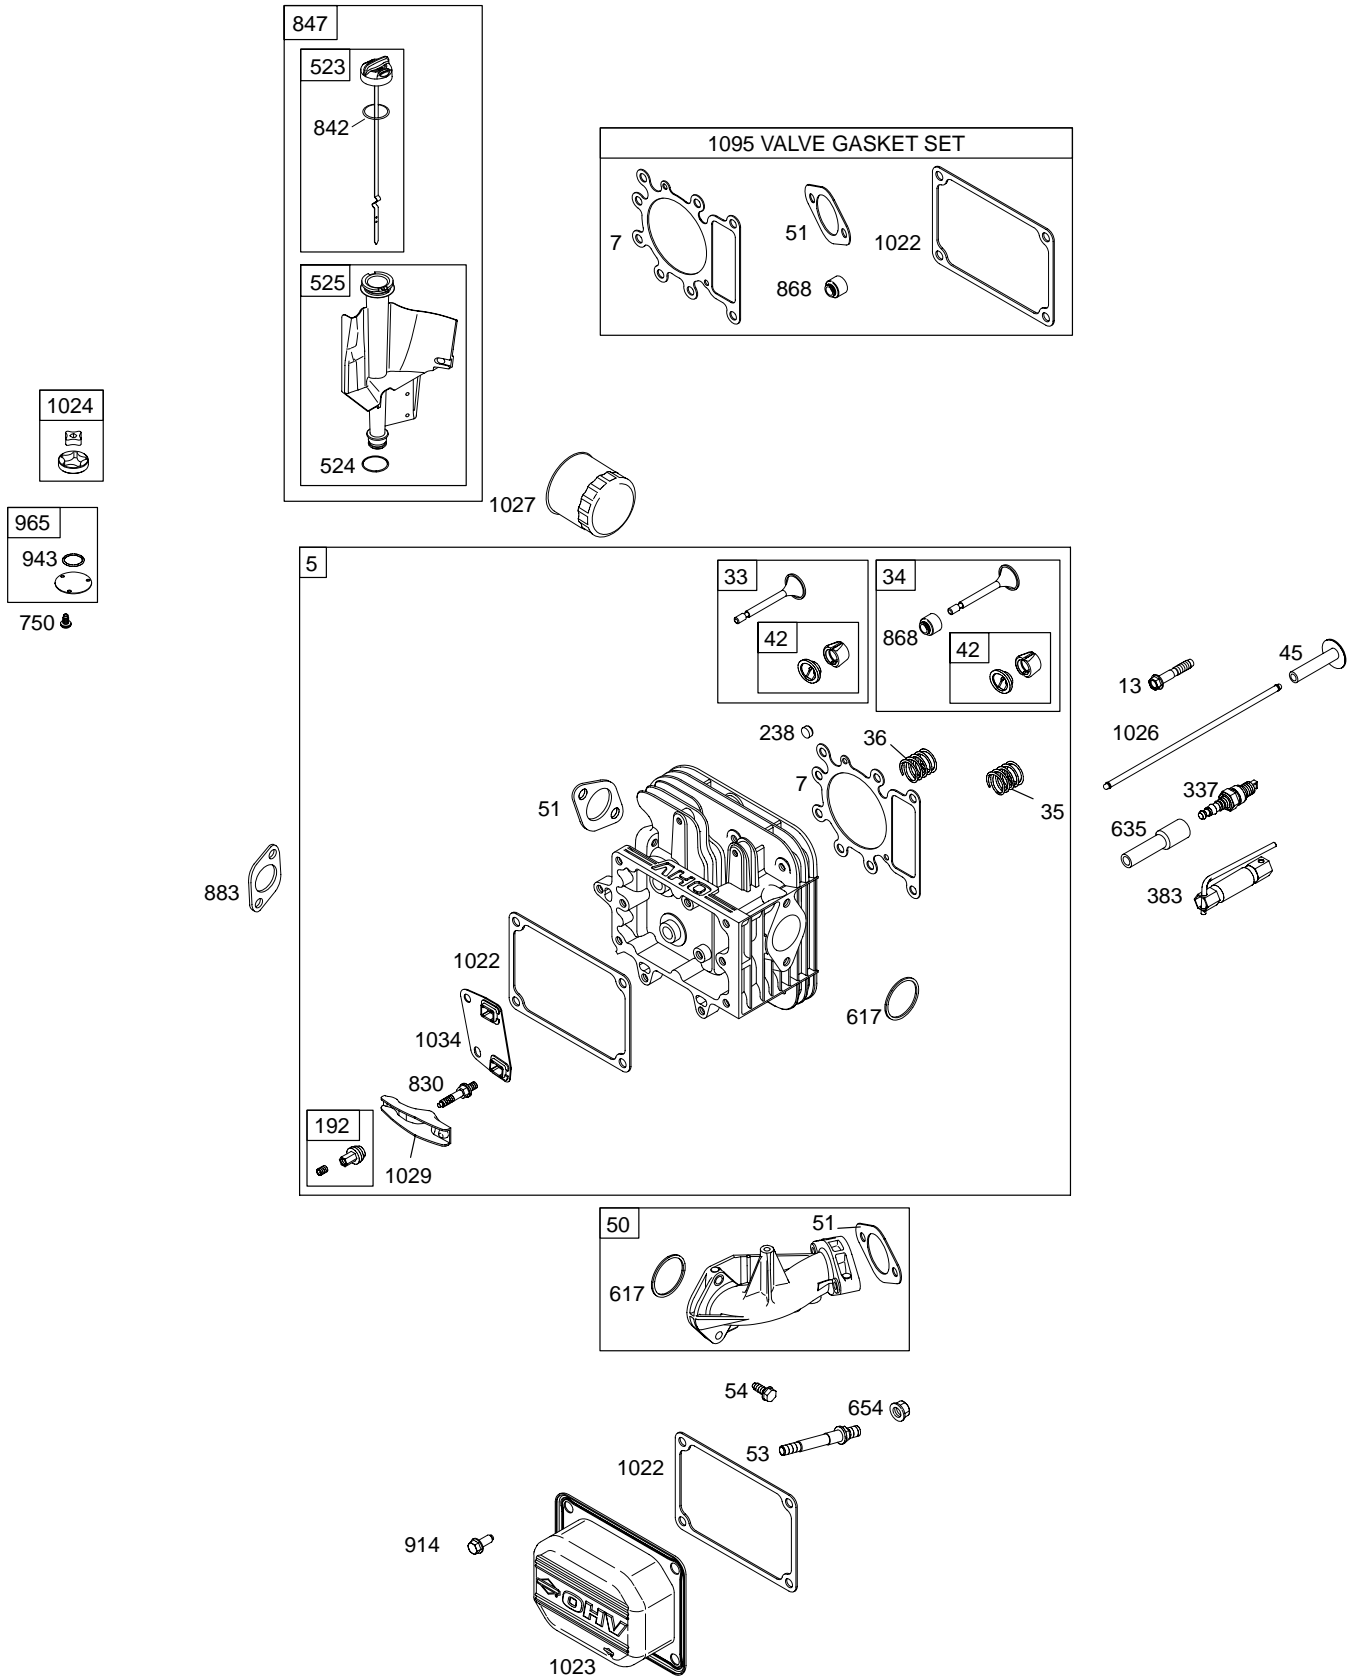


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5329-3 Assemblies include all parts shown in frames. 08/31/2004


28BH00

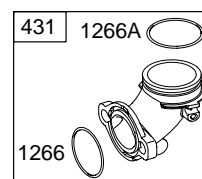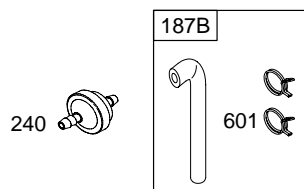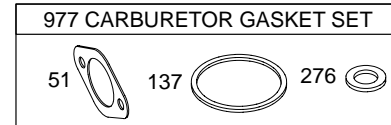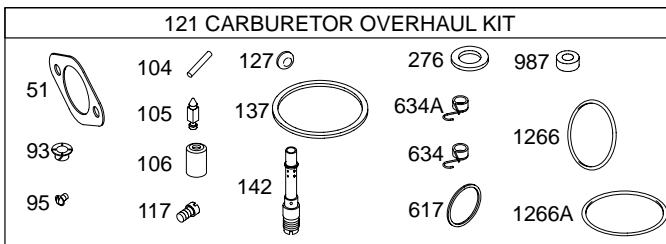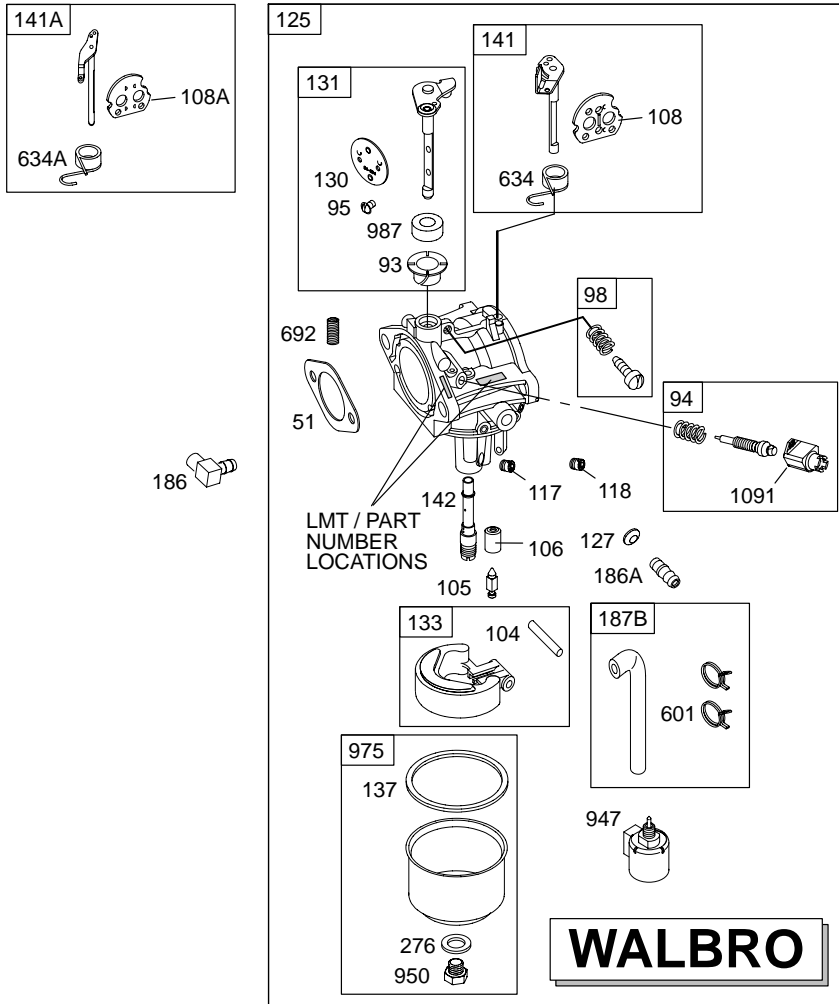

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 5329-4 Assemblies include all parts shown in frames. 08/31/2004

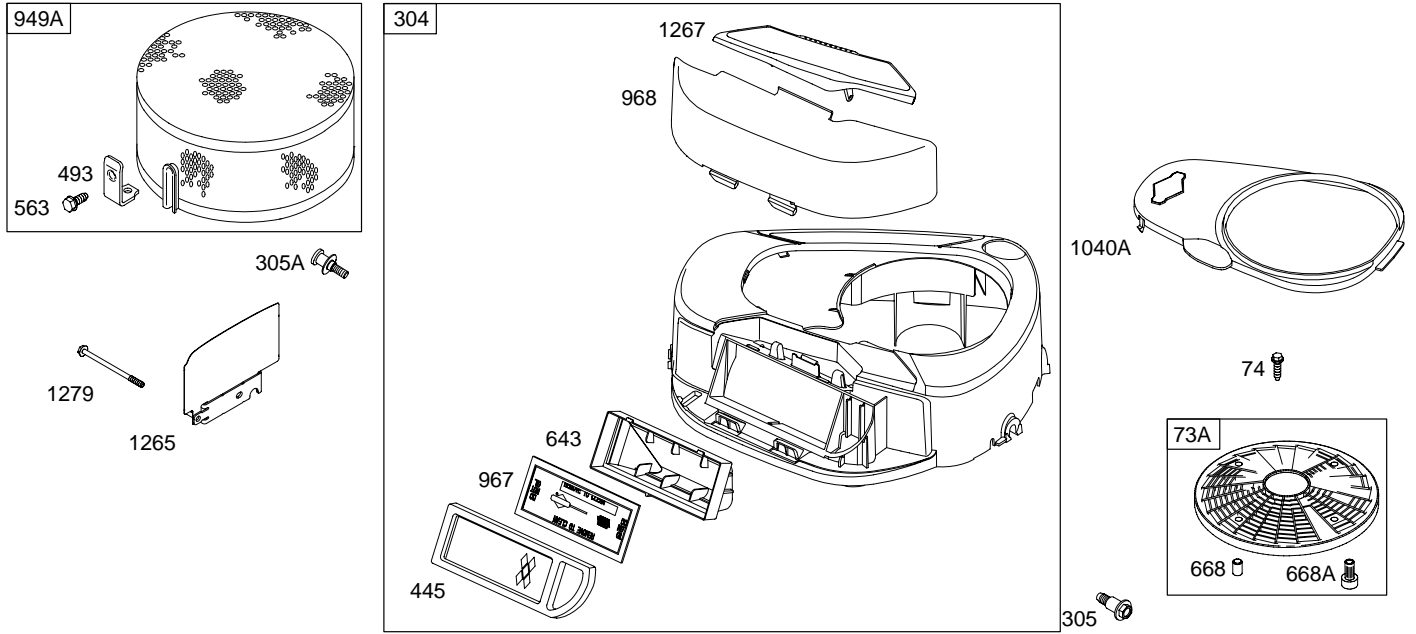



1036 EMISSION LABEL

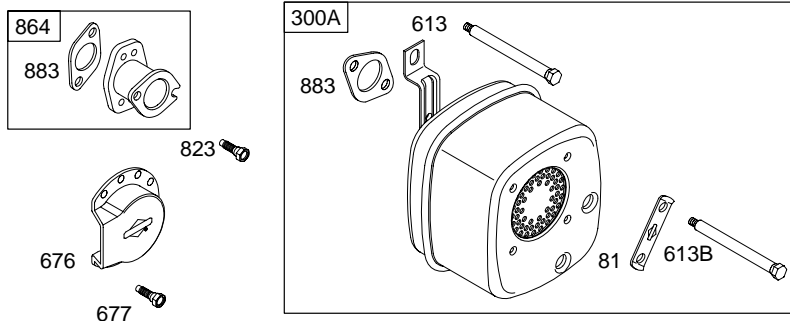

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5329-5 Assemblies include all parts shown in frames. 08/31/2004








28BH00

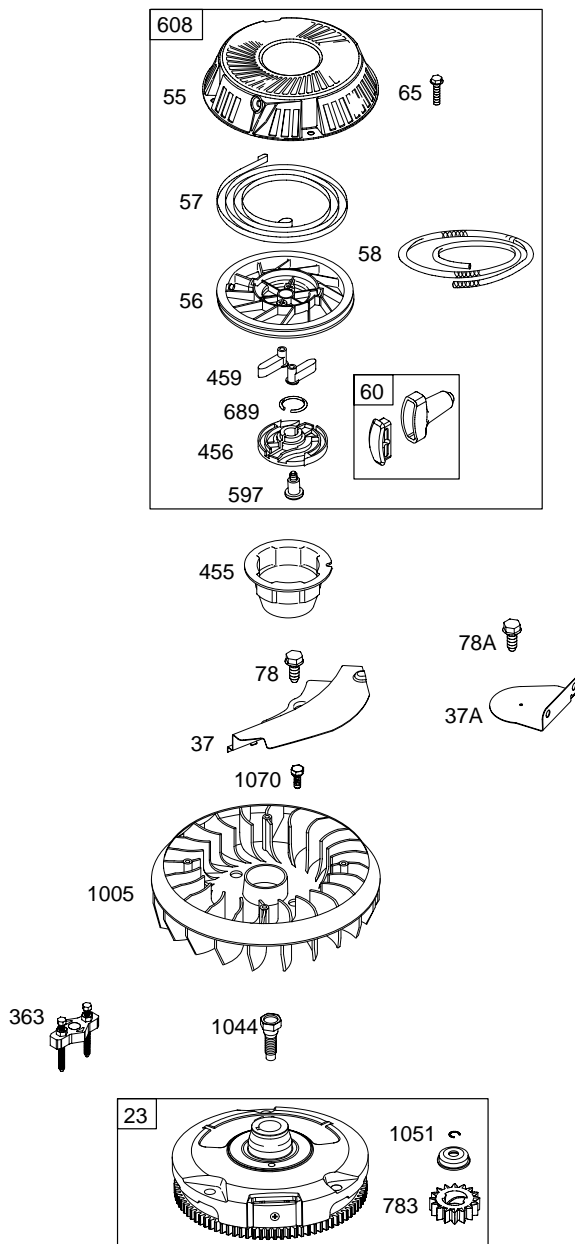

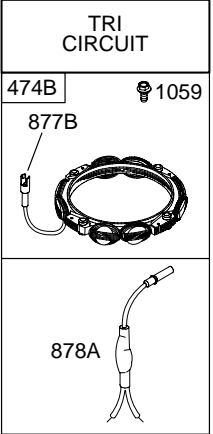

NOTE: All stators use a No. 1119 mounting screw.

  NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.

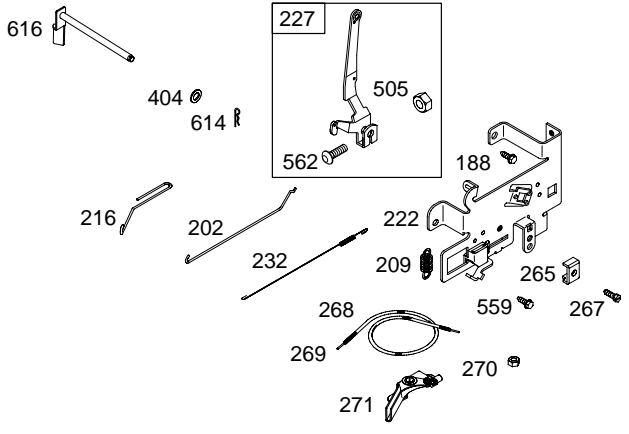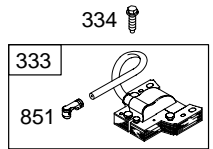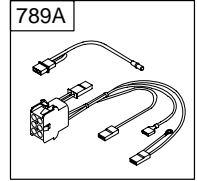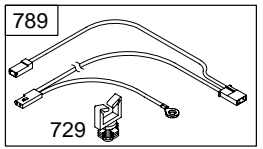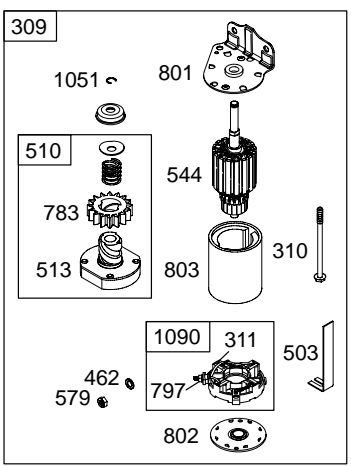

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5329-7 Assemblies include all parts shown in frames. 08/31/2004

28BH00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	697132	Cylinder Assembly	26	698389	Ring Set (Standard)	58	695132	Rope-Starter Used on Type No(s). 0114.
2	399265	Kit-Bushing/Seal (Magneto Side)			Note	60	494212	Grip-Starter Rope Used on Type No(s). 0114.
3	*391086	Seal-Oil (Magneto Side)			698396 Ring Set (.010" Oversize)	65	697725	Screw (Rewind Starter) Used on Type No(s). 0114.
4A	697188	Sump-Engine			698397 Ring Set (.020" Oversize)			
5	698404	Head-Cylinder			698398 Ring Set (.030" Oversize)			
7	*Δ273280	Gasket-Cylinder Head	27	698469	Lock-Piston Pin	73A	494439	Screen-Rotating Used on Type No(s). 0101, 0105.
9	*697109	Gasket-Breather	28	697099	Pin-Piston (Standard)	74	691674	Screw (Rotating Screen)
10	697157	Screw (Breather Assembly)	29	697518	Rod-Connecting (Standard)	78	691003	Screw (Flywheel Guard) Used on Type No(s). 0101, 0105.
11	697113	Tube-Breather			Note	78A	690364	Screw (Flywheel Guard) Used on Type No(s). 0114.
12	*697110	Gasket-Crankcase			697264 Rod-Connecting (.020" Undersize)	81	691178	Lock-Muffler Screw
13	690360	Screw (Cylinder Head)	32	692852	Screw (Connecting Rod)	93	●690602	Bushing-Throttle Shaft
15	690946	Plug-Oil Drain	33	698370	Valve-Exhaust	94	498030	Kit-Idle Mixture
16	697516	Crankshaft	34	695761	Valve-Intake	95	●691636	Screw (Throttle Valve)
20	*690947	Seal-Oil (PTO Side)	35	691279	Spring-Valve (Intake)	98	495800	Kit-Idle Speed
22	692125	Screw (Crankcase Cover/Sump)	36	691279	Spring-Valve (Exhaust)	104	●690525	Pin-Float Hinge
23	693556	Flywheel Used on Type No(s). 0101, 0114.	37	697108	Guard-Flywheel Used on Type No(s). 0101, 0105.	105	●231855	Valve-Float Needle
		Note	37A	697626	Guard-Flywheel Used on Type No(s). 0114.	106	●690577	Seat-Inlet (Gravity Feed)
		790835 Flywheel (Used After Code Date 04072900). Used on Type No(s). 0105.	42	499586	Keeper-Valve	108	690464	Valve-Choke (LMT 697204)
		693556 Flywheel (Used Before Code Date 04072900). Used on Type No(s). 0105.	43	691968	Slinger-Governor/Oil	108A	692344	Valve-Choke (LMT 696181, 697203)
24	222698	Key-Flywheel	44	690564	Tappet-Valve	117	●694352	Jet-Main (Standard)
25	698390	Piston Assembly (Standard)	45	698492	Camshaft	118	697228	Jet-Main (High Altitude)
		Note	50	690193	Manifold-Intake	121	697241	Kit-Carburetor Overhaul
		698393 Piston Assembly (.010" Oversize)	51*Δ◆692137	Gasket-Intake	125	698445	Carburetor (Gravity Feed)	
		698394 Piston Assembly (.020" Oversize)	53	690227	Stud (Carburetor)	127	●695005	Plug-Welch
		698395 Piston Assembly (.030" Oversize)	54	691148	Screw (Intake Manifold)	130	691750	Valve-Throttle
			55	695130	Housing-Rewind Starter Used on Type No(s). 0114.	131	494379	Kit-Throttle Shaft
			56	695129	Pulley-Starter Used on Type No(s). 0114.	133	494381	Float-Carburetor
			57	695131	Spring-Rewind Starter Used on Type No(s). 0114.	137	◆281165	Gasket-Float Bowl
						141	495097	Kit-Choke Shaft (LMT 697204)
						141A	495931	Kit-Choke Shaft (LMT 696181, 697203)

* Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Δ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

28BH00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
142	●697140	Nozzle-Carburetor (Standard)	271	691028	Lever-Control	445	697153	Filter-Air Cleaner Cartridge (Washable) Used on Type No(s). 0101, 0105.
146	691639	Key-Timing	276	◆692255	Washer-Sealing			
186	692317	Connector-Hose (90 Degree)	300A	698356	Muffler Used on Type No(s). 0114.			
186A	698174	Connector-Hose (Straight)	304	698420	Housing-Blower (Black) Used on Type No(s). 0101, 0105.			Note 698083 Filter-Air Cleaner Cartridge (Non Washable) Used on Type No(s). 0114.
187B	698417	Line-Fuel (Formed) (10-1/4 Inches Long) (Cut To Required Length)						
188	691693	Screw (Control Bracket)				455	695113	Cup-Flywheel Used on Type No(s). 0114.
192	691986	Adjuster-Rocker Arm				456	695128	Plate-Pawl Friction Used on Type No(s). 0114.
202	691841	Link-Mechanical Governor	305	697102	Screw (Blower Housing)	459	281505	Pawl-Ratchet Used on Type No(s). 0114.
209	692208	Spring-Governor (Green) Used on Type No(s). 0101.	305A	697103	Screw (Blower Housing)	462	691261	Washer (Starter Cable)
		Note 691795 Spring-Governor (Yellow) Used on Type No(s). 0105. 690480 Spring-Governor (Red) Used on Type No(s). 0114.	306	697107	Shield-Cylinder	474B	696457	Alternator (Tri Circuit)
			307	691003	Screw (Cylinder Shield)	493	695450	Bracket-Mounting Used on Type No(s). 0114.
			309	693551	Motor-Starter	501	691188	Regulator Used on Type No(s). 0101, 0105.
			310	690323	Screw (Starter Motor)			Note 698315 Regulator Used on Type No(s). 0114.
			311	497608	Brush Set	503	691532	Strap-Starter
			333	492341	Armature-Magneto	505	691251	Nut (Governor Control Lever)
			334	691061	Screw (Magneto Armature)	510	693699	Drive-Starter
			337	491055	Plug-Spark Used on Type No(s). 0101, 0114.	513	692024	Clutch-Drive
						523	699908	Dipstick
						524	★691032	Seal-Dipstick Tube
216	691840	Link-Choke				525	697184	Tube-Dipstick
222	694042	Bracket-Control				526	697088	Screw (Regulator) Used on Type No(s). 0101, 0105.
227	691374	Lever-Governor Control						Note 697348 Screw (Regulator) Used on Type No(s). 0114.
232	691842	Spring-Governor Link	356	697089	Wire-Stop			
238	691843	Cap-Valve	358	697151	Gasket Set-Engine			
239	491657	Switch-Oil Pressure	363	19203	Puller-Flywheel			
240	394358	Filter-Fuel (White, 75 Microns)	383	89838	Wrench-Spark Plug			
265	691024	Clamp-Casing	404	691691	Washer (Governor Crank)			
267	690804	Screw (Casing Clamp)	415	690283	Plug (.125-27 NPTF)			
268	691025	Casing-Control Wire (Cut To Required Length)	431	697122	Elbow-Intake			
269	691026	Wire-Control (Cut To Required Length)						
270	691027	Nut (Control Wire Casing)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

28BH00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
544	692034	Armature–Starter	718	690959	Pin–Locating	950	695407	Screw–Float Bowl (Bottom Of Bowl)
552	697144	Bushing–Governor Crank	729	691335	Clip–Wire (Wire Saddle)	965	499613	Cover–Oil Pump
559	697561	Screw (Remote Choke Stop)	729A	691224	Clip–Wire (Aluminum Coated Steel)	967	697015	Filter–Pre Cleaner
562	691119	Bolt (Governor Control Lever)	729B	694123	Clip–Wire (Nylon)	968	697574	Cover–Air Cleaner (Black) Used on Type No(s). 0101, 0105.
563	695449	Screw (Debris Screen Guard)	741	697128	Gear–Timing	———— Note ————		
579	691029	Nut (Starter Cable)	750	790832	Screw (Oil Pump Cover)	698403	Cover–Air Cleaner (Black) Used on Type No(s). 0114.	
584	697112	Cover–Breather Passage	757	697607	Link–Counterweight	975	495933	Bowl–Float
597	691696	Screw (Pawl Friction Plate) Used on Type No(s). 0114.	758	697134	Counterweight	977	690192	Gasket Set–Carburetor
601	95162	Clamp–Hose	759	697392	Pin–Counterweight	987	●691326	Seal–Throttle Shaft
608	695058	Starter–Rewind Used on Type No(s). 0114.	783	693713	Gear–Pinion	1005	697111	Fan–Flywheel Used on Type No(s). 0101, 0105.
613	691416	Screw (Muffler)	789	692037	Harness–Wiring Used on Type No(s). 0101.	———— Note ————		
613B	691678	Screw (Muffler)	789A	698329	Harness–Wiring Used on Type No(s). 0105, 0114.	699043	Fan–Flywheel Used on Type No(s). 0114.	
614	691620	Pin–Cotter	789B	790544	Harness–Wiring Used on Type No(s). 0105.	1017	690770	Screen–Oil Pump (Push In)
616	692012	Crank–Governor	797	693167	Nut (Brush Retainer)	1019	699196	Kit–Label
617	★●692138	Seal–O Ring (Intake Manifold)	801	691283	Cap–Drive	1022	★Δ272475	Gasket–Rocker Cover
634	●690801	Spring/Seal Assembly (LMT 697204)	802	691286	Cap–End	1023	692492	Cover–Rocker
634A	●690802	Spring/Seal Assembly (LMT 696181, 697203)	803	693757	Housing–Starter	1024	499054	Pump–Oil
635	691909	Boot–Spark Plug	823	698941	Screw (Muffler Adapter)	1026	692003	Rod–Push (Intake)
643	698401	Retainer–Air Filter	830	691095	Stud–Rocker Arm	———— Note ————		
654	690958	Nut (Carburetor)	842	★691031	Seal–O Ring (Dipstick Tube)	692011	Rod–Push (Exhaust)	
668	691215	Spacer	847	790442	Dipstick/Tube Assembly	1027	696854	Filter–Oil
668A	691500	Spacer	851	692424	Terminal–Spark Plug	1029	691751	Arm–Rocker
676	393761	Deflector–Muffler Used on Type No(s). 0114.	864	697346	Adapter–Muffler Used on Type No(s). 0114.	1032	491710	Ball–Oil Pump
677	690661	Screw (Muffler Deflector) Used on Type No(s). 0114.	868	★Δ690968	Seal–Valve	1034	690822	Guide–Push Rod
689	691855	Spring–Friction Used on Type No(s). 0114.	877B	393537	Wire/Connector– Alternator	1035	693784	Shaft–Pump
691	★692407	Seal–Governor Shaft	878A	691955	Harness–Alternator	1036	790464	Label–Emissions (Used After Code Date 04063000).
692	690572	Spring–Detent	883	★692236	Gasket–Exhaust	———— Note ————		
697	690372	Screw (Drive Cap)	914	691108	Screw (Rocker Cover)	695700	Label– Emissions (Used Before Code Date 04040100).	
			943	★690589	Seal–O Ring (Oil Pump Cover)	1040A	698470	Plate–Trim Used on Type No(s). 0101, 0105.
			947	694393	Solenoid–Fuel	1044	698139	Screw (Flywheel)
			949A	695448	Guard–Debris Screen Used on Type No(s). 0114.			

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

Δ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5329–10

Assemblies include all parts shown in frames.

08/31/2004

28BH00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1051	691265	Ring-Retaining	1265	697125	Support-Blower Housing	1270	697156	Plug-AVS Counterweight
1054	280275	Tie-Cable				1279	691108	Screw (Blower Housing Support)
1058	275935	Manual-Owner's	1266	★●691917	Seal-O Ring (Intake Elbow)			
1059	698516	Kit-Screw/Washer	1266A	●697123	Seal-O Ring (Intake Elbow)	1330	272147	Repair Manual
1070	690372	Screw (Flywheel Fan)						
1090	691293	Retainer-Brush	1267	697575	Latch-Blower Housing Used on Type No(s). 0101, 0105.			
1091	691333	Cap-Limiter						
1095	691581	Gasket Set-Valve						
1119	691183	Screw (Alternator)			Note			
1263	697124	Reed-Breather			697419 Latch-Blower Housing Used on Type No(s). 0114.			
1264	697104	Screw (Breather Reed)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.