

28M700

Illustrated Parts List

Model Series

28M700

TYPE NUMBERS
0026 through 1194.

TABLE OF CONTENTS

Air Cleaner	4
Alternator	8
Blower Housing/Shrouds	7
Cams	2
Carburetor	3
Controls	5
Crankcase Cover/Sump	2
Crankshaft	2
Cylinder	2
Electric Starter	9
Flywheel	6
Fuel Tank	5
Governor Spring	5
Head	2
Ignition	8
Kits/Gaskets-Carburetor	3
Kits/Gaskets-Valve	2
Muffler	4
Oil	2
Piston Group	2
Rewind	6
Valves	2


BRIGGS & STRATTON



PRINTED IN U.S.A.


COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

28M700




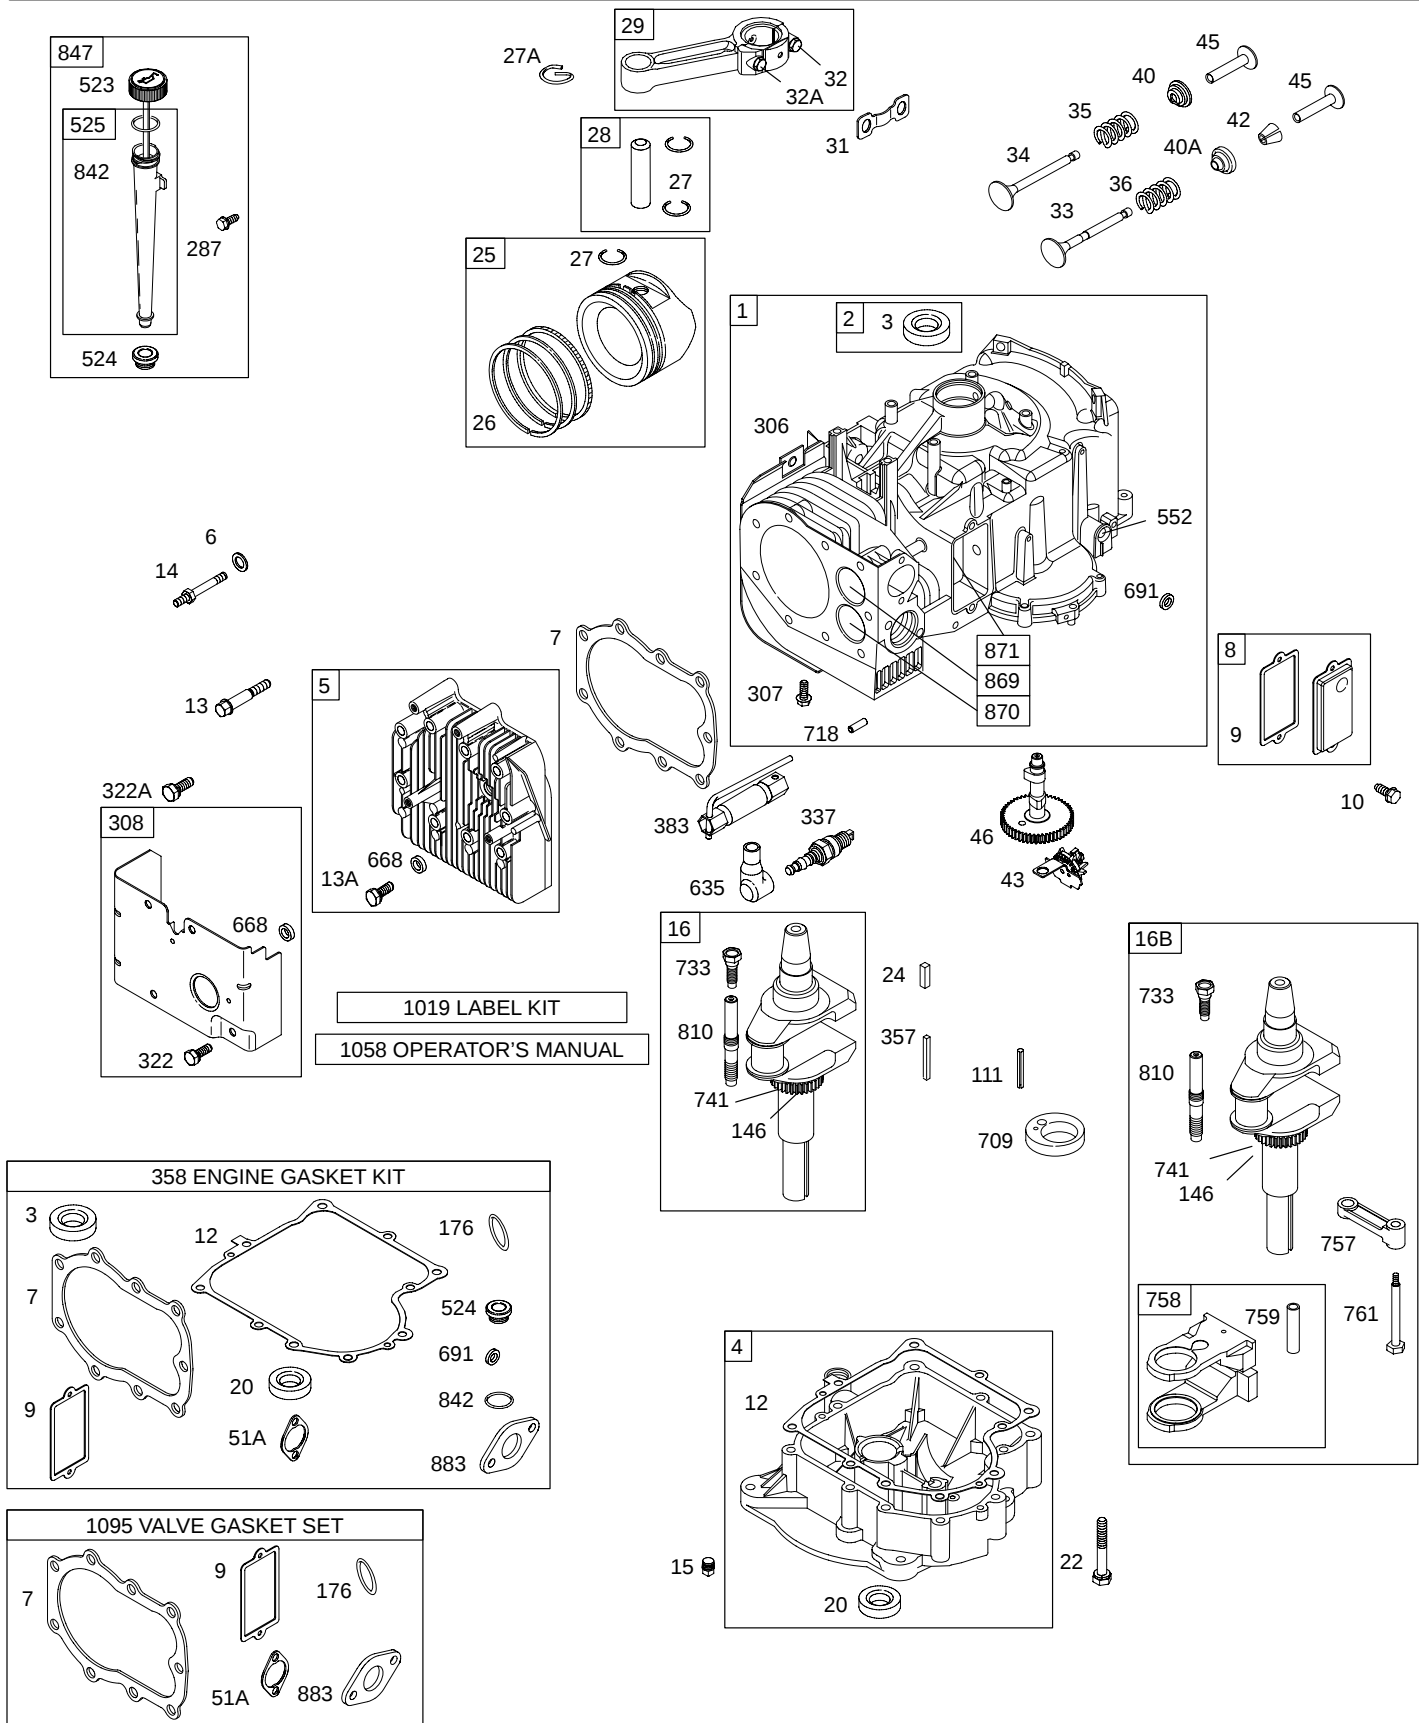


28M700

NIKKI

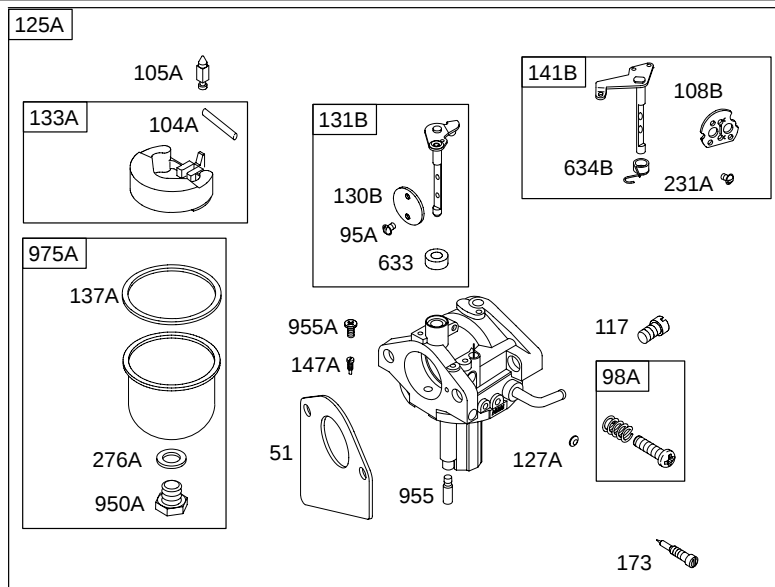



WALBRO

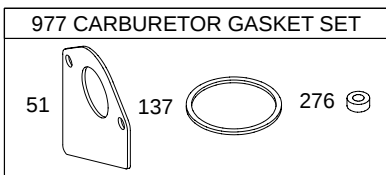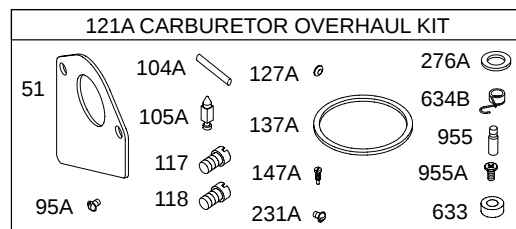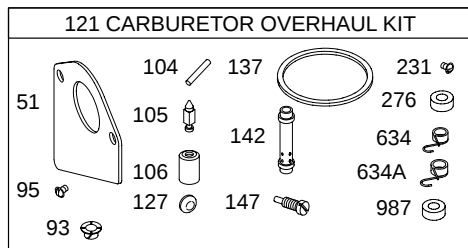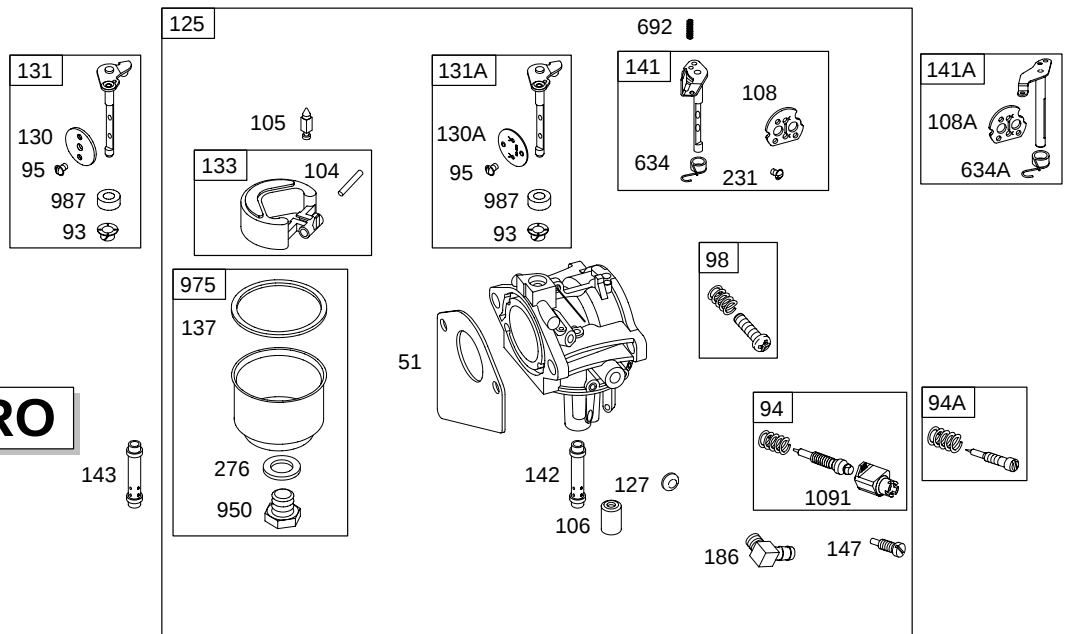







WALBRO




NIKKI

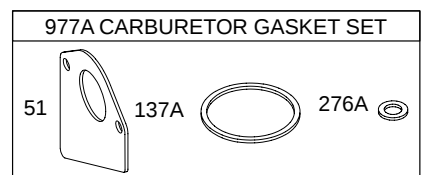

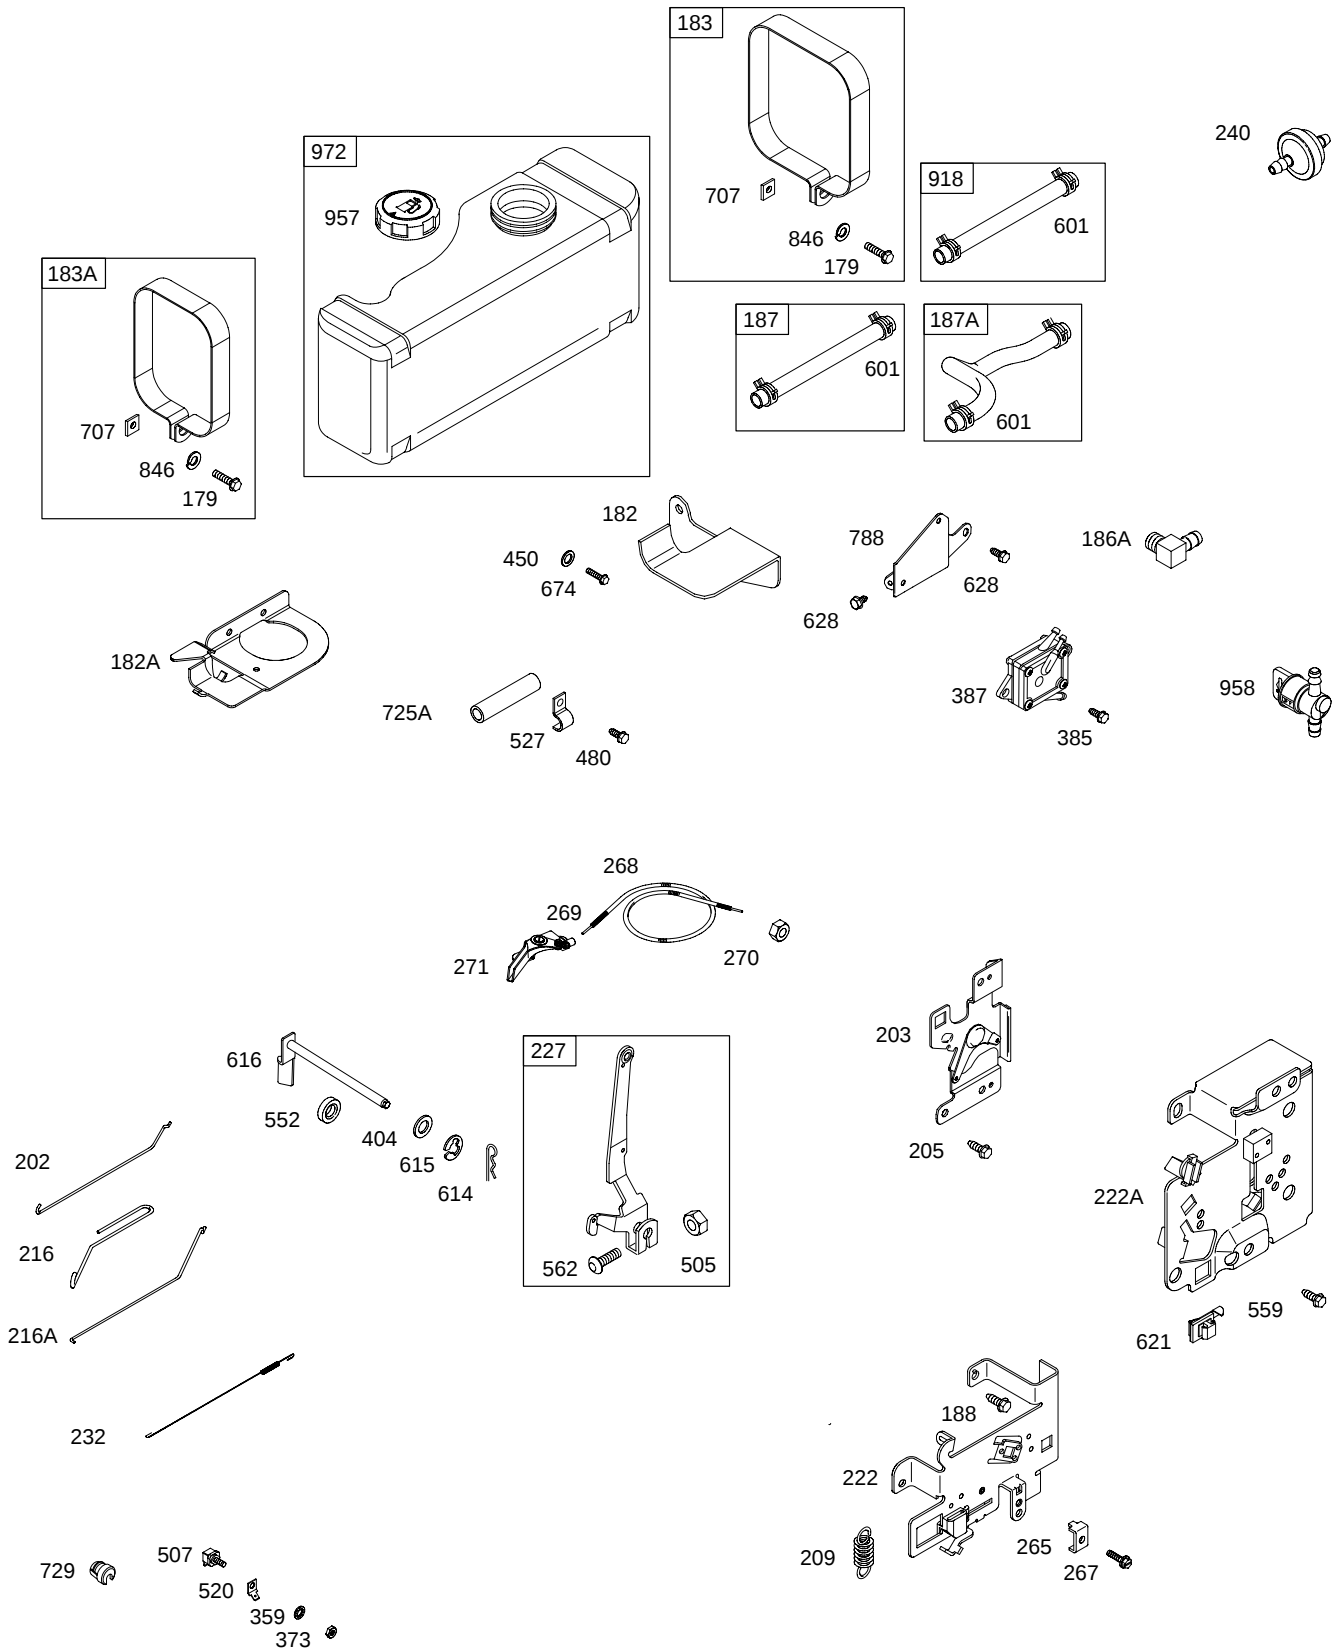


28M700

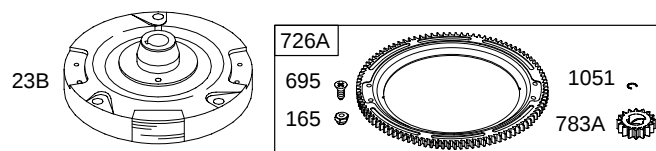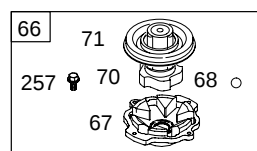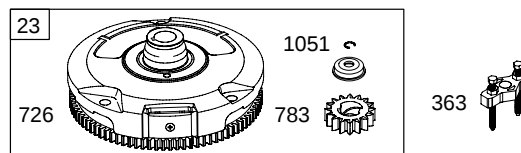
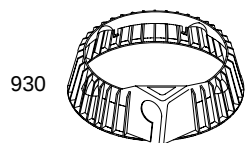
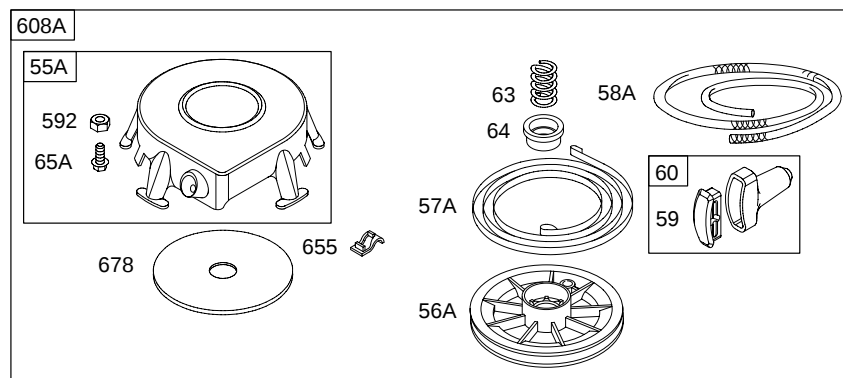
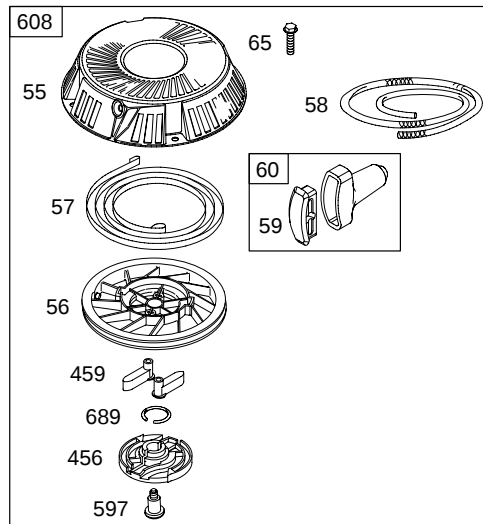


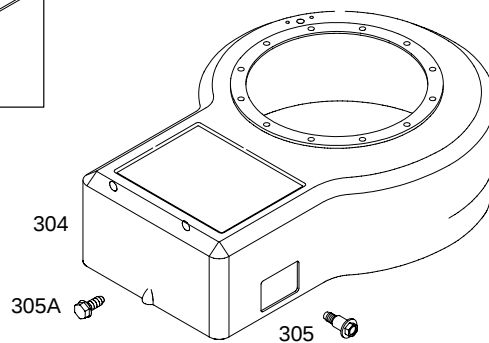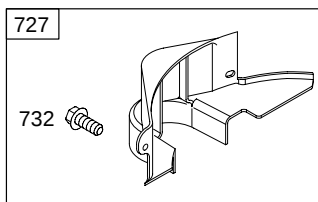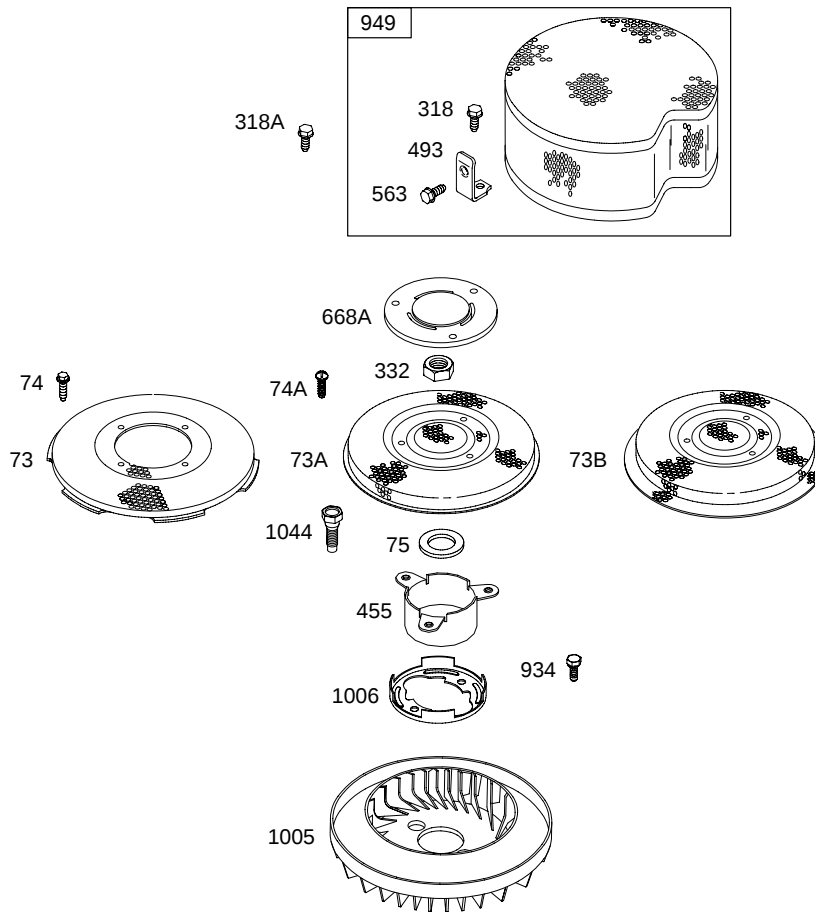








1036 EMISSIONS LABEL

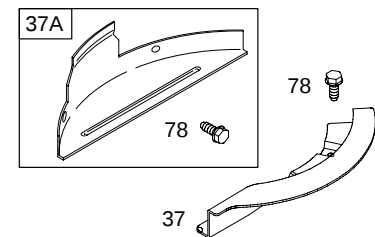


28M700

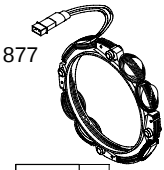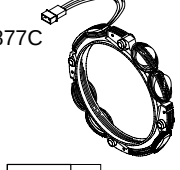  DC ONLY	DUAL CIRCUIT	TRI CIRCUIT	10/16 AMP
474 877A  1059 	474A 877  1059 	474B 877B  1059 	474C 877C  1059 
578 	878 	878A 	578 

  NOTE: All Stators Use Reference 1119 Mounting Screw.

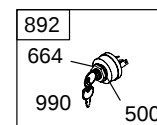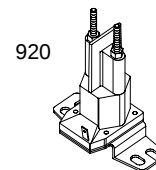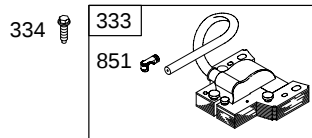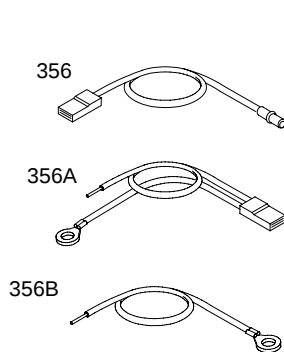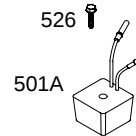

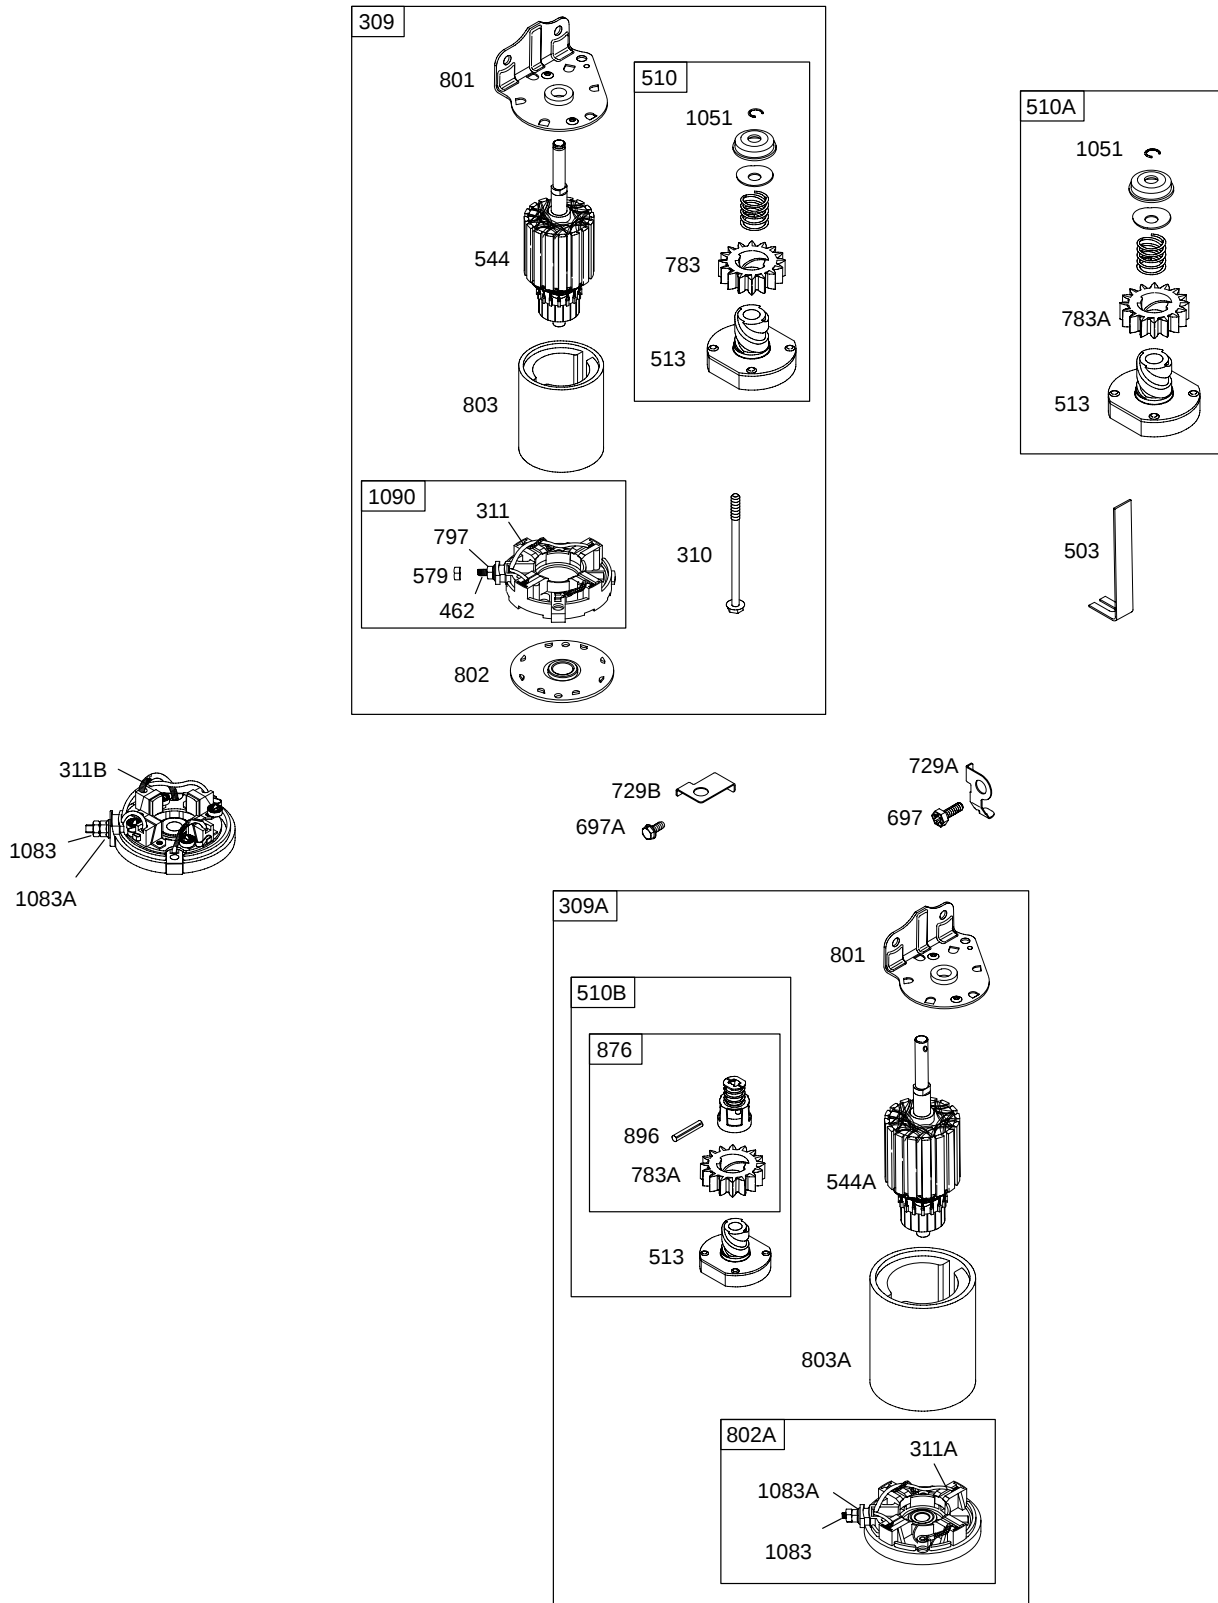

28M700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	496413	Cylinder Assembly	20	★291675	Seal-Oil (PTO Side)	26	696403	Ring Set (Standard)
2	399265	Kit-Bushing/Seal (Magneto Side)	22	692125	Screw (Crankcase Cover/Sump)			(Used After Code Date 01060600).
3	★391086	Seal-Oil (Magneto Side)	23	693557	Flywheel (Steel Ring Gear)			696404 Ring Set (.010" Oversize)
4	494238	Sump-Engine			----- Note -----			(Used After Code Date 01060600).
5	494240	Head-Cylinder			693556 Flywheel (Steel Ring Gear)			696405 Ring Set (.020" Oversize)
6	691075	Washer (Cylinder Head)			Used on Type No(s).			(Used After Code Date 01060600).
7	Ø★271866	Gasket-Cylinder Head			1031, 1036, 1039,			696406 Ring Set (.030" Oversize)
8	495735	Breather Assembly			1132, 1133, 1135,			(Used After Code Date 01060600).
		----- Note -----			1148, 1166, 1179,			696406 Ring Set (.030" Oversize)
		495734 Breather Assembly			1183, 1186, 1187,			(Used After Code Date 01060600).
		Used on Type No(s).			1192.			----- Note -----
		0115, 0143, 0146,	23B	693555	Flywheel (Rewind Start Engines)			499996 Ring Set (Standard)
		0615, 0647, 0660,	24	222698	Key-Flywheel			(Used Before Code Date 01060700).
		1162, 1189, 1190.	25	696397	Piston Assembly (Standard)			392331 Ring Set (Standard Chrome)
9	Ø★27803	Gasket-Breather			(Used After Code Date 01060600).			(Used Before Code Date 01060700).
10	691666	Screw (Breather Assembly)			696399 Piston Assembly			498998 Ring Set (.020" Oversize)
11	692253	Tube-Breather			(.020" Oversize)			(Used Before Code Date 01060700).
11A	691328	Tube-Breather			(Used After Code Date 01060600).			498998 Ring Set (.020" Oversize)
12	★662226	Gasket-Crankcase (.015" Thick)			(Used After Code Date 01060600).			(Used Before Code Date 01060700).
		(Standard)			696400 Piston Assembly			(Used Before Code Date 01060700).
		----- Note -----			(.030" Oversize)	27	691299	Lock-Piston Pin (Used After Code Date 95101500).
		★692405 Gasket- Crankcase			(Used After Code Date 01060600).	27A	691792	Lock-Piston Pin (Used Before Code Date 95101600).
		(.009" Thick)			----- Note -----			Pin-Piston (Standard)
		★692406 Gasket- Crankcase			499284 Piston Assembly			(Used After Code Date 95101500).
		(.005" Thick)			(Standard)			----- Note -----
13	690904	Screw (Cylinder Head)			(Used Before Code Date 01060700).	28	498319	Pin-Piston (Standard)
13A	691681	Screw (Cylinder Head)			499292 Piston Assembly			(Used After Code Date 95101500).
14	691109	Stud (Cylinder Head)			(.020" Oversize)			299691 Pin-Piston (Standard)
15	690946	Plug-Oil Drain			(Used Before Code Date 01060700).			(Used Before Code Date 95101600).
		----- Note -----						498320 Pin-Piston (.005" Oversize)
		691680 Plug-Oil Drain						(Used After Code Date 95101500).
		Used on Type No(s).						391286 Pin-Piston (.005" Oversize)
		0136.						(Used Before Code Date 95101600).
16	693944	Crankshaft (Used After Code Date 95073100).						
16B	693653	Crankshaft (Used Before Code Date 95080100).						

★ Engine Gasket Set-Reference 358
● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977
Ø Valve Gasket Set-Reference 1095

0152-10

Assemblies include all parts shown in frames.

05/23/2005

28M700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
29	494504	Rod-Connecting (Standard)	56	695129	Pulley-Starter (Used After Code Date 99102400).	70	691945	Ratchet-Clutch
		-----Note -----				71	691359	Cover-Ratchet
	495490	Rod-Connecting (.020" Undersize)	56A	295871	Pulley-Starter (Includes 63" Rope) (Used Before Code Date 99102500).	73	691191	Screen-Rotating
31	222299	Lock-Rod Screw				73A	691748	Screen-Rotating
32	690356	Screw (Connecting Rod) (1 7/8" Long)	57	695131	Spring-Rewind Starter (Used After Code Date 99102400).	73B	690492	Screen-Rotating
32A	690348	Screw (Connecting Rod) (1 5/8" Long)	57A	490179	Spring-Rewind Starter (Used Before Code Date 99102500).	74	691627	Screw (Rotating Screen)
33	262246	Valve-Exhaust				74A	691660	Screw (Rotating Screen)
34	262247	Valve-Intake	58	695132	Rope-Starter (59" Long) (Used After Code Date 99102400).	75	690582	Washer (Flywheel)
35	691605	Spring-Valve (Intake)				78	690661	Screw (Flywheel Guard)
36	691597	Spring-Valve (Exhaust)	58A	692188	Rope-Starter (63" Long) (Used Before Code Date 99102500).	93	●690602	Bushing-Throttle Shaft
37	690456	Guard-Flywheel				94	498030	Kit-Idle Mixture
37A	690806	Guard-Flywheel				94A	496589	Kit-Idle Mixture
40	690656	Retainer-Valve (Intake)				95	●691636	Screw (Throttle Valve)
40A	691939	Retainer-Valve (Exhaust)	59	490653	Insert-Grip	95A	●690718	Screw (Throttle Valve)
42	494553	Keeper-Valve	60	490652	Grip-Starter Rope	98	495800	Kit-Idle Speed
43	691968	Slinger-Governor/Oil	63	690547	Spring-Ratchet (Used Before Code Date 99102500).	98A	694907	Kit-Idle Speed
45	691811	Tappet-Valve	64	691920	Adapter-Ratchet Spring (Used Before Code Date 99102500).	104	●690525	Pin-Float Hinge
46	697668	Camshaft				104A	●694918	Pin-Float Hinge
50	691711	Manifold-Intake				105	●231855	Valve-Float Needle
51	●◆692298	Gasket-Intake				105A	●694922	Valve-Float Needle
51A	○★272554	Gasket-Intake	65	695453	Screw (Rewind Starter) (Used After Code Date 99102400).	106	●690577	Seat-Inlet (Gravity Feed)
53	690227	Stud (Carburetor)						----- Note -----
54	690953	Screw (Intake Manifold)	65A	690837	Screw (Rewind Starter) (Used Before Code Date 99102500).		●691780	Seat-Inlet (Pump Feed)
55	695130	Housing-Rewind Starter (Used After Code Date 99102400).				108	690464	Valve-Choke (Manual Choke)
55A	393576	Housing-Rewind Starter (Used Before Code Date 99102500).	66	399671	Clutch-Starter (Used Before Code Date 99102500).	108A	692344	Valve-Choke (Choke A Matic)
						108B	694923	Valve-Choke
			67	394897	Clutch-Housing	111	691679	Pin-Retainer
			68	691604	Ball-Clutch	117	●690880	Jet-Main (Standard)
						118	●694925	Jet-Main (High Altitude)

★ Engine Gasket Set-Reference 358
 ● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977
 ○ Valve Gasket Set-Reference 1095

0152-11

Assemblies include all parts shown in frames.

05/23/2005

28M700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION			
121	697884	Kit-Carburetor Overhaul (696160, 696162, 696164, 696166, 697212, 697213, 697214, 697906) ----- Note ----- 497481 Kit-Carburetor Overhaul (LMT 63, 64, 65, 66) 499220 Kit-Carburetor Overhaul (LMT 58, 59, 60, 61, 62, 92, 93, 94, 95, 96, 108, 111, 162, 165, 169) 499231 Kit-Carburetor Overhaul (LMT 133, 134, 135, 136, 166, 168) 497971 Kit-Carburetor Overhaul (LMT 97, 98, 99, 100, 133, 135, 136, 166, 167, 168) 497535 Kit-Carburetor Overhaul (LMT 1, 2, 3, 4, 5, 6, 7, 32, 37, 38, 39, 40, 41, 77, 78, 79, 80, 81)	127	●695005	Plug-Welch	143	499040	Nozzle-Carburetor (High Altitude) (LMT 165, 166, 167) ----- Note ----- 497567 Nozzle-Carburetor (High Altitude) (LMT 37, 39, 41, 77, 79, 81, 157, 159) 497737 Nozzle-Carburetor (High Altitude) (LMT 92, 93, 96) 497970 Nozzle-Carburetor (High Altitude) (LMT 97, 98) 498258 Nozzle-Carburetor High Altitude) (LMT 66, 100, 133, 134, 136)			
121A	694930	Kit-Carburetor Overhaul (Nikki Carburetor)	127A	●694916	Plug-Welch	146	691639	Key-Timing			
125	698171	Carburetor (696160, 696162, 696164, 696166, 697212, 697213, 697214, 697906) ----- Note ----- 498027 Carburetor (Gravity) (LMT 1, 2, 3, 4, 5, 6, 7, 32, 37, 38, 39, 40, 41, 63, 64, 65, 66, 77, 78, 79, 80, 81, 92, 93, 94, 95, 96, 97, 108, 111, 133, 134, 135, 136, 162, 163, 164, 165) 499158 Carburetor (Pump Feed) (LMT 166, 167, 168, 169)	130	690468	Valve-Throttle (LMT 111, 169)	147	●497472	Jet-Pilot (LMT 37, 39, 41, 77, 79, 81) ----- Note ----- 231983 Jet-Pilot (LMT 136)			
125A	694941	Carburetor (Nikki Carburetor)	130A	694917	Valve-Throttle	147A	●694927	Jet-Pilot			
			130B	691750	Valve-Throttle	165	693148	Nut (Ring Gear)			
			131	494885	Kit-Throttle Shaft (LMT 111, 169)	167	692297	Seal-Air Cleaner Nut			
			131A	494379	Kit-Throttle Shaft	173	694926	Valve-Idle Mixture			
			131B	694909	Kit-Throttle Shaft (Nikki Carburetor)	176	Ø★691917	Seal-O Ring (Air Cleaner Base)			
			133	494381	Float-Carburetor	179	692331	Screw (Fuel Tank Strap)			
			133A	694914	Float-Carburetor	182	690443	Bracket-Fuel Tank (Right Hand)			
			137	●♦281165	Gasket-Float Bowl	182A	692535	Bracket-Fuel Tank (Left Hand)			
			137A	●♦694920	Gasket-Float Bowl	183	698459	Strap-Fuel Tank (Right Hand)			
			141	495097	Kit-Choke Shaft (Manual Choke)	183A	692030	Strap-Fuel Tank (Left Hand)			
			141A	495931	Kit-Choke Shaft (Choke A Matic)						
			141B	694913	Kit-Choke Shaft						
			142	●697592	Nozzle-Carburetor (Standard) (696160, 696162, 696164, 696166, 697212, 697213, 697214, 697906) ----- Note ----- ●497568 Nozzle-Carburetor (Standard) (LMT 97, 99, 100) ●497860 Nozzle-Carburetor (Standard) (LMT 63, 65, 66, 133, 134, 135, 136) ●498545 Nozzle-Carburetor (Standard) (LMT 108, 111) ●499037 Nozzle-Carburetor (Standard) (LMT 162, 165, 169) ●499039 Nozzle-Carburetor (Standard) (LMT 166, 167, 168) ●691425 Nozzle-Carburetor (Standard) (LMT 37, 39, 41, 77, 79, 81, 157, 159) ●691434 Nozzle-Carburetor (Standard) (LMT 92, 93, 94, 96)						

★ Engine Gasket Set-Reference 358
● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977
Ø Valve Gasket Set-Reference 1095

28M700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
185	690958	Nut (Air Cleaner Base)			692208 Spring–Governor (Green) Used on Type No(s). 0114, 0148, 1148, 1150, 1193.	300	691874	Muffler
186	691609	Connector–Hose				300A	498984	Muffler
186A	692317	Connector–Hose				304	690847	Housing–Blower (Black)
187	499167	Line–Fuel (Cut to Required Length)						----- Note -----
187A	691936	Line–Fuel ----- Note ----- 499842 Line–Fuel Used on Type No(s). 0647, 1147, 1162.	216	691840	Link–Choke			690846 Housing–Blower (Black) Used on Type No(s). 0029, 0133, 0529, 1029, 1031, 1039, 1120, 1128, 1133, 1149, 1166, 1189, 1192.
188	691693	Screw (Control Bracket)	216A	690574	Link–Choke Used on Type No(s). 0128.			691399 Housing–Blower (Red) Used on Type No(s). 0026, 0036, 0101, 0102, 0118, 0123, 0124, 0126, 0129, 0130, 0136, 0137, 0142, 0143, 0146, 0178, 0179, 0526, 0604, 0633, 1026, 1036, 1102, 1123, 1124, 1129, 1130, 1136, 1137, 1161, 1178, 1179, 1183, 1184, 1193, 1194.
202	691841	Link–Mechanical Governor			691644 Bracket–Control (Used Before Code Date 99010800).			695065 Housing–Blower (Black) (Used After Code Date 99102400).
203	691381	Crank–Bell			222A	692002	Bracket–Control Used on Type No(s). 0128, 1128.	Used on Type No(s). 1029, 1031, 1039, 1120, 1128, 1133, 1149, 1166, 1189, 1192.
205	691693	Screw (Bell Crank)	227	691374	Lever–Governor Control			692198 Screw (Blower Housing)
209	690480	Spring–Governor (Red) ----- Note ----- 690576 Spring–Governor (Gold) Used on Type No(s). 1127, 1187. 691278 Spring–Governor (Platinum) Used on Type No(s). 0115, 0125, 0129, 0130, 0138, 0147, 0179, 0615, 0660, 1129, 1130, 1138, 1160, 1179, 1184, 1185, 1189, 1190, 1192. 691795 Spring–Governor (Yellow) Used on Type No(s). 0113, 0118, 1113, 1125, 1152, 1166, 1183, 1194. 691798 Spring–Governor (Brown) Used on Type No(s). 0029, 0112, 0124, 0126, 0132, 0140, 0180, 0529, 0647, 1029, 1031, 1039, 1040, 1124, 1132, 1147, 1148, 1162, 1166, 1180, 1186.	231	691636	Screw (Choke Valve)			692127 Screw (Blower Housing)
			231A	690718	Screw (Choke Valve)			
			232	691842	Spring–Governor Link			
			240	298090	Filter–Fuel (Red) ----- Note ----- 394358 Filter–Fuel (White)			
			257	691660	Screw (Starter Clutch)			
			265	691024	Clamp–Casing			
			267	690804	Screw (Casing Clamp)			
			268	691025	Casing–Control Wire (Cut To Required Length)			
			269	691026	Wire–Control (Cut To Required Length)	305	692198	Screw (Blower Housing)
			270	691027	Nut (Control Wire Casing)	305A	692127	Screw (Blower Housing)
			271	691028	Lever–Control			
			276	692255	Washer–Sealing			
			276A	690997	Washer–Sealing			
			287	691002	Screw (Dipstick Tube) ----- Note ----- 691143 Screw (Dipstick Tube) Used on Type No(s). 0647, 1147.			

★ Engine Gasket Set–Reference 358
● Carburetor Overhaul Kit–Reference 121

◆ Carburetor Gasket Set–Reference 977
⊗ Valve Gasket Set–Reference 1095

0152–13

Assemblies include all parts shown in frames.

05/23/2005

28M700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
306	698477	Shield-Cylinder	311	497608	Brush Set	459	281505	Pawl-Ratchet
307	691003	Screw	311A	395538	Brush Set			(Used After Code Date 99102400).
		(Cylinder Shield)			(3 5/8" Housing Length)	462	691261	Washer
308	491490	Cover-Cylinder Head	311B	490311	Brush Set			(Starter Cable)
309	693551	Motor-Starter			(4 9/16" Housing Length)	467	691668	Knob-Air Cleaner
		(Steel Ring Gear Only)	318	694476	Screw	474	696578	Alternator
		----- Note -----			(Mounting Bracket)			(DC Only)
		497595 Motor-Starter			(Debris Screen Guard)	474A	696459	Alternator
		(3 5/8" Housing Length)			(1 1/4" Long)			(Dual Circuit)
		(Plastic Ring Gear Only)	318A	691617	Screw	474B	696457	Alternator
		693054 Motor-Starter			(Mounting Bracket)			(Tri Circuit)
		(3 5/8" Housing Length)			(Debris Screen Guard)	474C	696458	Alternator
		(Aluminum Ring Gear Only)			(3/8" Long)			(10/16 Amp)
		693552 Motor-Starter	322	691681	Screw	480	690664	Screw
		(4 3/8" Housing Length)			(Cylinder Head Cover)			(Tube Clamp)
		(Steel Ring Gear Only)	322A	692198	Screw	493	692825	Bracket-Mounting
		497401 Motor-Starter			(Cylinder Head Cover)			(Debris Screen Guard)
		(4 3/8" Housing Length)	332	690662	Nut	500	691086	Washer
		(Plastic Ring Gear Only)			(Flywheel)			(Key Switch)
		499521 Motor-Starter	333	492341	Armature-Magneto	501	691185	Regulator
		(4 3/8" Housing Length)	334	691061	Screw	501A	691188	Regulator
		(Aluminum Ring Gear Only)			(Magneto Armature)	503	691532	Strap-Starter
309A		Motor-Starter	337	802592	Plug-Spark	505	691251	Nut
		(For Replacement Starter Motor,			(Resistor)			(Governor Control Lever)
		Order Reference 309)	344	693675	Screw	507	691972	Insulator
					(Cable Clamp)	510	693699	Drive-Starter
			346	690661	Screw			(Used With Steel Ring Gear)
					(Spark Arrestor)	510A	696541	Drive-Starter
			356	690799	Wire-Stop			(Used With Aluminum and Plastic Ring Gears)
			356A	398808	Wire-Stop	510B	696540	Drive-Starter
			356B	399222	Wire-Stop	513	692024	Clutch-Drive
			357	691483	Key-Drive Pulley	520	691084	Terminal-Ground
			358	494241	Gasket Set-Engine	523	692014	Dipstick
			359	691077	Washer			----- Note -----
					(Ground Terminal)			692013 Dipstick
310	690323	Screw	363	19203	Puller-Flywheel			Used on Type No(s).
		(Starter Motor)	373	691612	Nut			0126, 0132, 1148,
		(3 5/8" Housing Length)			(Ground Terminal)			1162, 1166.
		----- Note -----	383	89838	Wrench-Spark Plug			692992 Dipstick
		691263 Screw	385	692198	Screw			Used on Type No(s).
		(Starter Motor)			(Fuel Pump)			0647, 1147.
		(4 3/8" Housing Length)	387	808656	Pump-Fuel	524	★281370	Seal-Dipstick Tube
		692329 Screw	404	691691	Washer	525	691398	Tube-Dipstick
		(Starter Motor)			(Governor Crank)			----- Note -----
		(4 9/16" Housing Length)	445	496894	Filter-Air Cleaner			690841 Tube-Dipstick
					Cartridge			Used on Type No(s).
			450	690259	Washer			0126, 0132, 1162.
					(Fuel Tank Bracket)			691476 Tube-Dipstick
			455	691173	Cup-Flywheel			Used on Type No(s).
			456	695128	Plate-Pawl Friction			0647, 1147.
					(Used After Code Date 99102400).			

★ Engine Gasket Set-Reference 358
 ● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977
 ☼ Valve Gasket Set-Reference 1095

0152-14

Assemblies include all parts shown in frames.

05/23/2005

28M700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
526	692198	Screw (Regulator)	615	93307	Retainer-Governor Shaft	726		Gear-Ring (Steel)
526A	691202	Screw (Regulator)	616	692012	Crank-Governor			(See Reference 23 for Service)
527	690394	Clamp-Tube	621	692310	Switch-Stop	726A	696537	Gear-Ring (Aluminum)
544	692034	Armature-Starter (3 5/8" Housing Length)	628	690661	Screw (Fuel Pump Bracket)			(Services Plastic Ring Gear Only)
544A	390837	Armature-Starter (3 5/8" Housing Length)	633	●690998	Seal-Choke/Throttle Shaft	727	490324	Cover-Starter Drive
		----- Note -----	634	●690801	Spring/Seal Assembly (Manual Choke)	728	691416	Screw (Heat Shield)
		490309 Armature- Starter	634A	●690802	Spring/Seal Assembly (Choke A Matic)	729	690596	Clip-Wire
		(4 3/8" Housing Length)	634B	●694912	Spring/Seal Assembly	729A	691224	Clip-Wire
			635	66538	Boot-Spark Plug	729B	224723	Clip-Wire
			646	690460	Brace-Air Cleaner	732	691002	Screw (Starter Drive Cover)
			654	690958	Nut (Carburetor)	733	691658	Screw (Crankshaft Extension)
552	491986	Bushing-Governor Crank	655	691734	Anchor-Rewind Spring (Used Before Code Date 99102500).	741	691284	Gear-Timing
559	690661	Screw (Remote Choke Stop)				757	691714	Link-Counterweight
562	691119	Bolt (Governor Control Lever)	664	691087	Nut (Key Switch)	758	692423	Counterweight
563	690859	Screw (Debris Screen Guard)	668	690510	Spacer (Cylinder Head Cover)	759	691239	Pin-Counterweight
578	692306	Wire Assembly	668A	691323	Spacer (Rotating Screen)	761	691096	Screw (Counterweight)
579	691029	Nut (Starter Cable)	674	690341	Screw (Fuel Tank Bracket)	783	693713	Gear-Pinion (Steel Ring Gear Only)
592	690800	Nut (Rewind Starter)	676	397630	Deflector-Muffler	783A	695708	Gear-Pinion (Aluminum and Plastic Ring Gear)
597	691696	Screw (Pawl Friction Plate)	676A	393761	Deflector-Muffler	788	690458	Bracket-Fuel Pump
601	95162	Clamp-Hose	676B	396903	Deflector-Muffler	797	693167	Nut (Brush Retainer)
607	691693	Screw (Air Cleaner Brace)	677	690661	Screw (Muffler Deflector)	797A	690958	Nut (Brush Retainer)
607A	690703	Screw (Air Cleaner Brace)	678	490817	Spacer-Rewind	801	691283	Cap-Drive
608	695058	Starter-Rewind (Used After Code Date 99102400).	689	691855	Spring-Friction	802	691286	Cap-End
608A	390391	Starter-Rewind (Used Before Code Date 99102500).	691	★692407	Seal-Governor Shaft	802A	395537	Cap-End (3 5/8" Housing Length)
613	691416	Screw (Exhaust Muffler)	692	690572	Spring-Detent	803	693757	Housing-Starter (3 5/8" Housing Length)
613A	692198	Screw (Exhaust Muffler)	695	693109	Screw (Ring Gear)			----- Note -----
614	691620	Pin-Cotter	697	690372	Screw (Drive Cap)			(4 3/8" Housing Length, Serviced by Reference 309)
			697A	691058	Screw (Drive Cap)	803A	398159	Housing-Starter (3 5/8" Housing Length)
			707	690279	Nut (Fuel Tank Strap)			----- Note -----
			709	262243	Eccentric			494205 Housing- Starter
			718	690959	Pin-Locating			(4 3/8" Housing Length)
			725	690403	Shield-Heat (Muffler)			
			725A	690420	Shield-Heat			

★ Engine Gasket Set-Reference 358
● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977
⊗ Valve Gasket Set-Reference 1095

28M700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
810	691779	Extension-Crankshaft	920	692656	Solenoid-Starter	1006	690452	Retainer-Fan
842	★691870	Seal-O Ring (Dipstick/Tube)	930	691904	Guard-Rewind	1019	491252	Kit-Label
846	690371	Washer (Fuel Tank Strap)	934	691058	Screw (Fan Retainer)	1036	696770	Label-Emissions (Used After Code Date 01093000).
847	496415	Dipstick/Tube Assembly	949	397530	Guard-Debris Screen	----- Note -----		
		----- Note -----	950	691657	Screw-Float Bowl	695699	Label-	Emissions
		496367 Dipstick/Tube Assembly	950A	694919	Screw-Float Bowl			(Used After Code Date 00063000 and Before Code Date 01100100).
		Used on Type No(s). 0126, 0132, 1148, 1162, 1166.	955	●694924	Plug-Carburetor (Idle Chamber)	695036	Label-	Emissions
851	493880	Terminal-Spark Plug	955A	694921	Plug-Carburetor (Pilot Jet)			(Used After Code Date 99093000 and Before Code Date 00070100).
869	691802	Seat-Valve (Intake)	957	493988	Cap-Fuel Tank	694325	Label-	Emissions
870	691844	Seat-Valve (Exhaust)	958	698183	Valve-Fuel Shut Off			(Used After Code Date 99010300 and Before Code Date 99100100).
871	261961	Bushing-Valve Guide (Exhaust Valve)	967	272403	Filter-Pre Cleaner	499362	Label-	Emissions
		----- Note -----	968	691332	Cover-Air Cleaner			(Used After Code Date 97063000 and Before Code Date 99010400).
		231218 Bushing-Valve Guide			----- Note -----	499361	Label-	Emissions
		(Brass Intake Valve)			691916 Cover-Air Cleaner			(Used Before Code Date 97070100).
875	696129	Base-Air Cleaner (Nikki)			Used on Type No(s). 0112, 0113, 0128, 0133, 0529, 0647, 1029, 1031, 1039, 1040, 1113, 1120, 1121, 1128, 1133, 1135, 1141, 1147, 1149, 1166, 1167, 1189, 1192.	1044	691658	Screw (Flywheel)
875A	693670	Base-Air Cleaner (Walbro)	971	691108	Screw (Air Cleaner Base to Carburetor)	1051	691265	Ring-Retaining
876	696589	Kit-Pinion Spring	972	390225	Tank-Fuel	1054	280275	Tie-Cable
877	393456	Wire/Connector- Alternator	975	495933	Bowl-Float	1058	274787	Operator's Manual
877A	393814	Wire/Connector- Alternator	975A	694908	Bowl-Float	1059	698516	Kit-Screw/Washer (Alternator)
877B	393537	Wire/Connector- Alternator	977	690192	Gasket Set-Carburetor (Walbro)	1083	691626	Nut (End Cap)
877C	399916	Wire/Connector- Alternator	977A	694931	Gasket Set-Carburetor (Nikki)	1083A	690958	Nut (End Cap) (Serrated)
878	691237	Harness-Alternator	987	●691326	Seal-Throttle Shaft	1090	691293	Retainer-Brush
878A	691955	Harness-Alternator	990	691959	Key Set	1091	691333	Cap-Limiter
883	○★692236	Gasket-Exhaust	994	392390	Arrestor-Spark	1095	498539	Gasket Set-Valve
892	692318	Switch-Key	1005	695056	Fan-Flywheel (Used After Code Date 99102400).	1119	691183	Screw (Alternator)
896	691641	Pin-Drive Retainer			----- Note -----			
918	393815	Hose-Vacuum (Cut to Required Length)			691905 Fan-Flywheel (Used Before Code Date 99102500).			

★ Engine Gasket Set-Reference 358
● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977
○ Valve Gasket Set-Reference 1095