



295400

Illustrated Parts List

Model Series

295400

TYPE NUMBERS
0110 through 0132.

TABLE OF CONTENTS


Air Cleaner	7
Alternator	14
Blower Housings	11
Camshaft	2
Carburetor	6
Controls	9
Crankcase Cover	4
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	15
Flywheel	12
Fuel Supply	8
Gasket Set - Engine	2
Gasket Set - Valve	3
Governor Spring	9
Ignition	14
Intake Manifold	4
Kit - Carburetor Overhaul	6
Lubrication	5
Piston, Rings, Connecting Rod	2
Rewind Starter	13
Shrouds	10
Valves	3




PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

295400

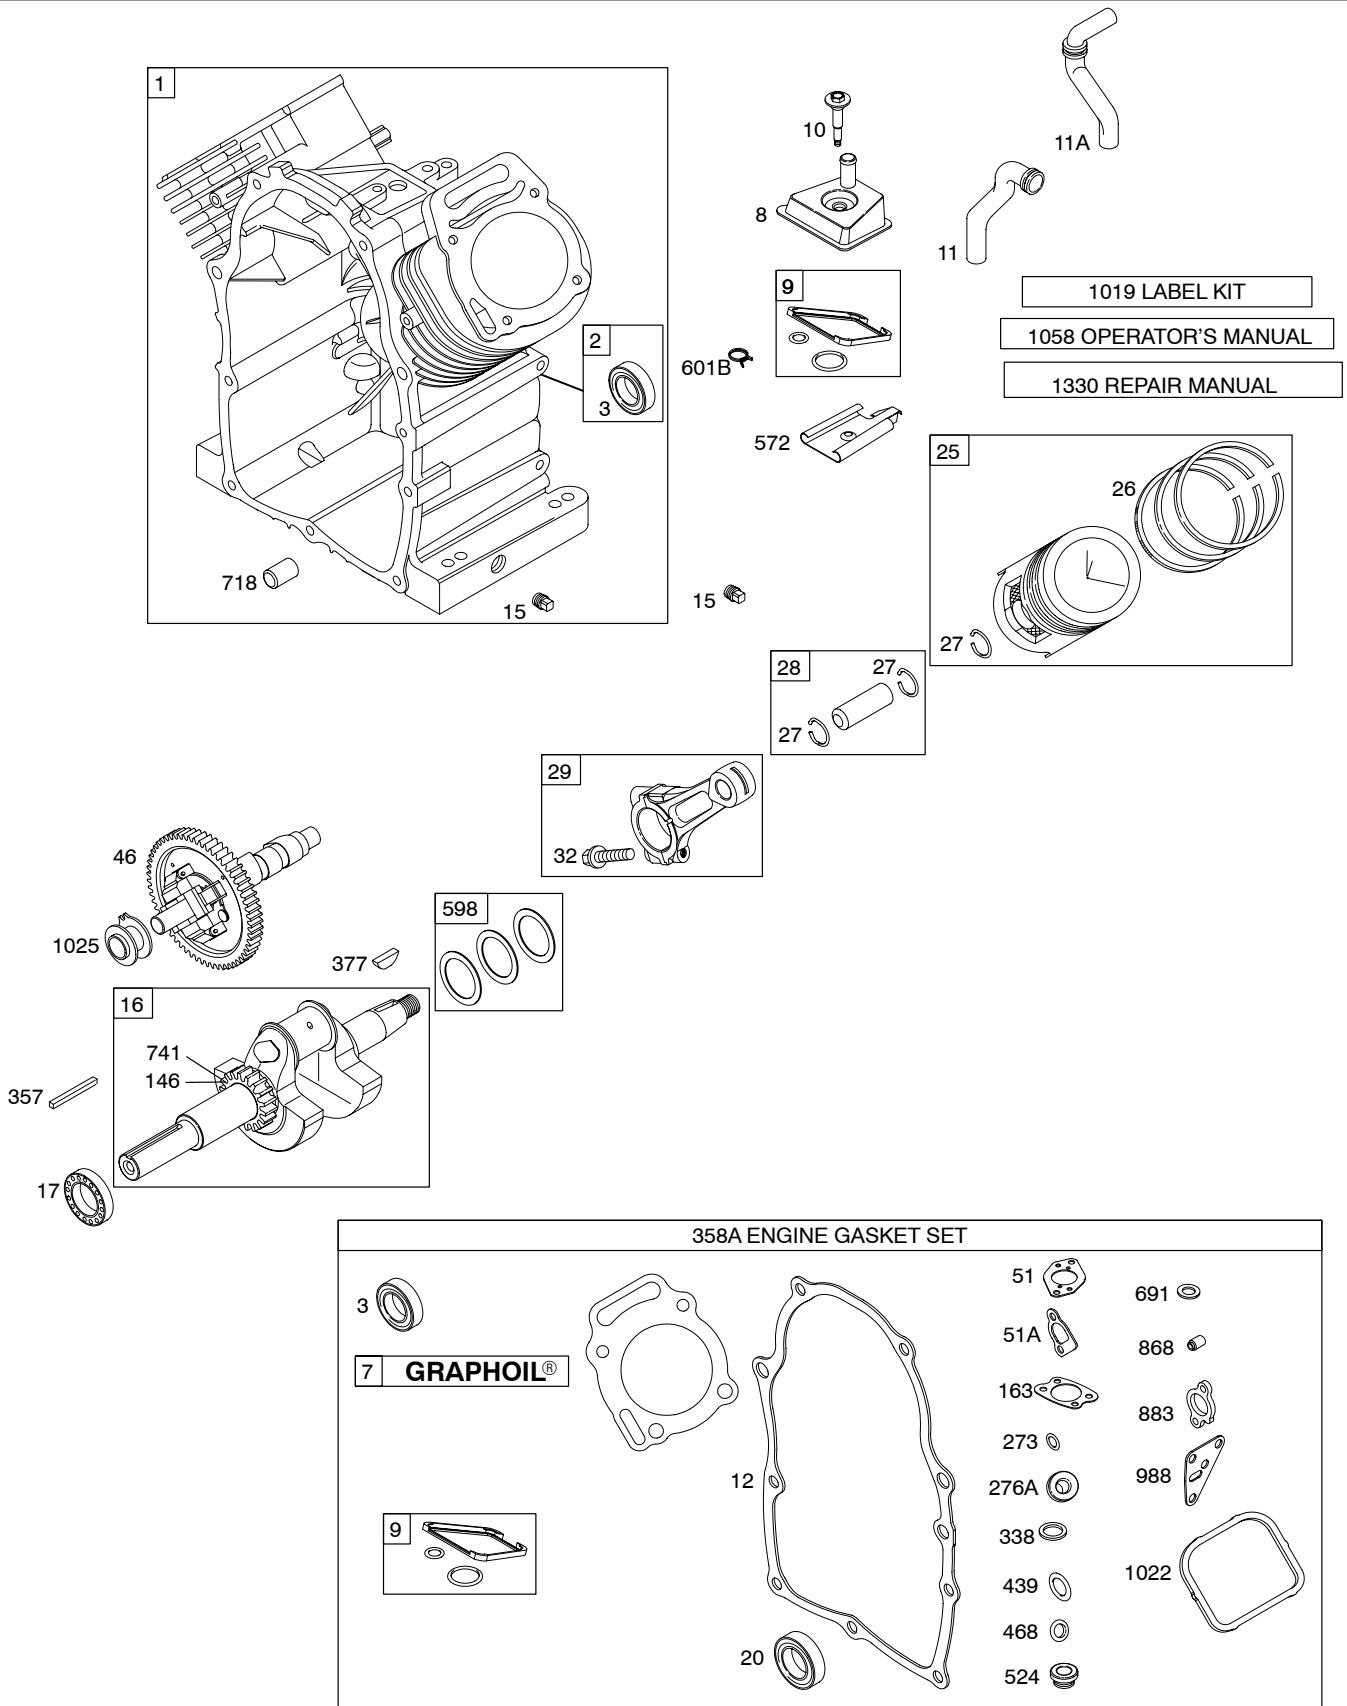

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 6160-2 Assemblies include all parts shown in frames. 12/16/2005

 

1095 VALVE GASKET SET

7 GRAPHOIL®

338
868
883
1022

51A
276A ©

1022
1023B
1023C
1023D
1023E

914
276A ©
1254

918
601A

5

 
1022
1100
830
276A ©
1029
36
35
40
871
868

7 GRAPHOIL®

33
42 ©
34
42 ©

830
1254
276A ©

192



5A

 
1022
1100
830
276A ©
1029
36
35
40
871
868

7 GRAPHOIL®

33
42 ©
34
42 ©




830
1254
276A ©

192




Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
6160-3 Assemblies include all parts shown in frames. **12/16/2005**

 295400

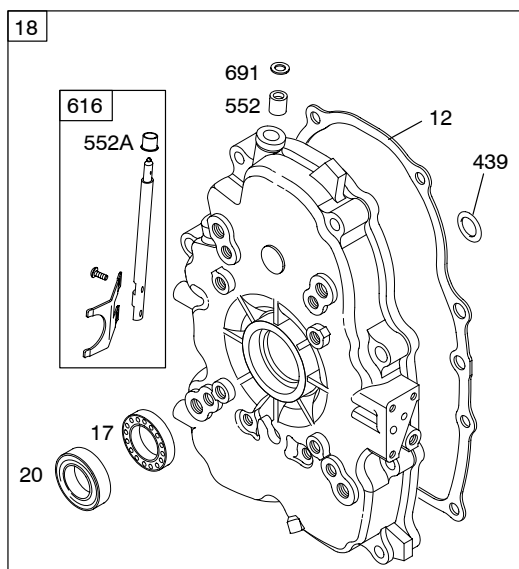
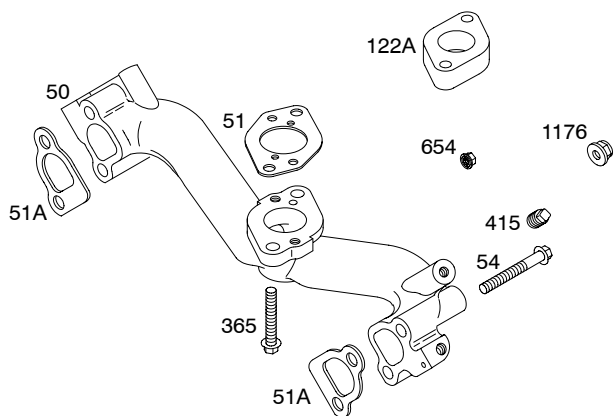


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 6160-4 Assemblies include all parts shown in frames. 12/16/2005

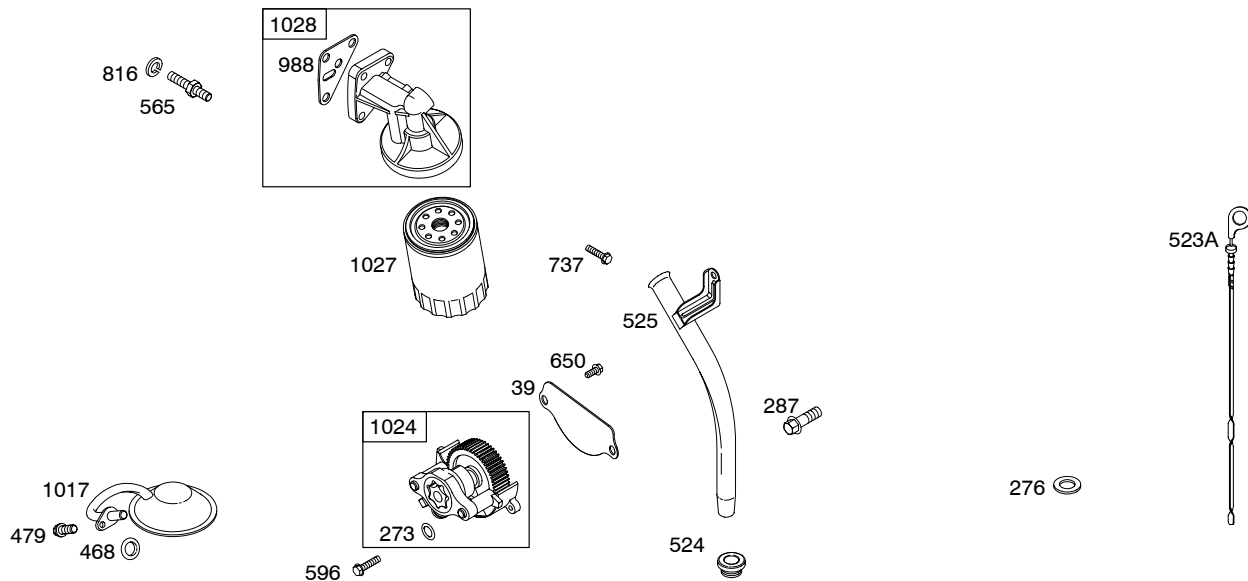


6160-5 *Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.* Assemblies include all parts shown in frames. 12/16/2005

295400

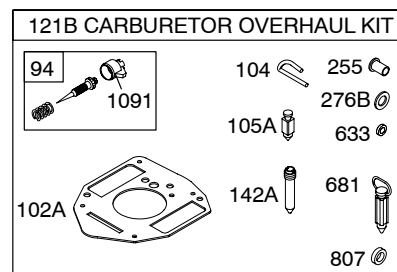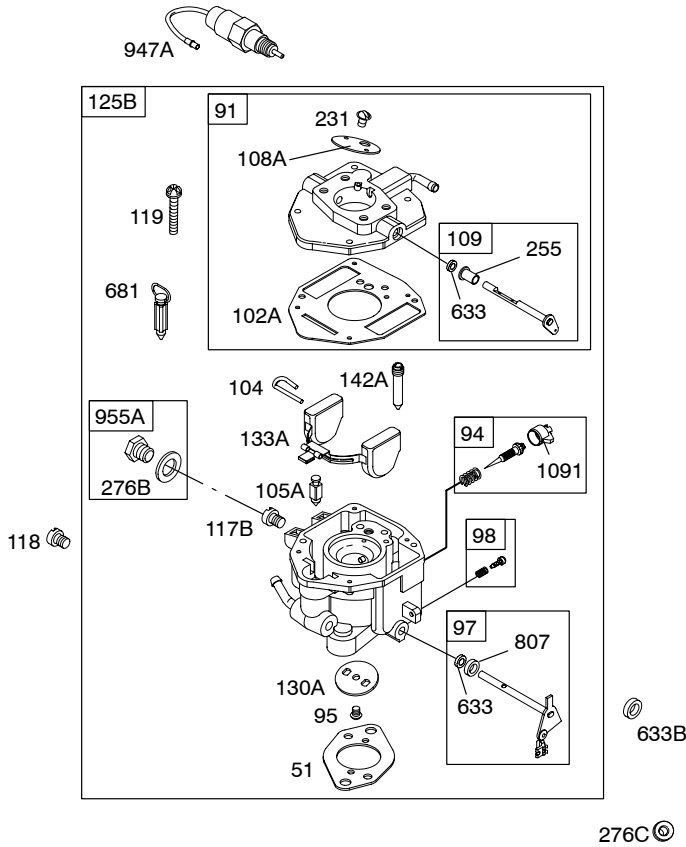


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 6160-6 Assemblies include all parts shown in frames. 12/16/2005

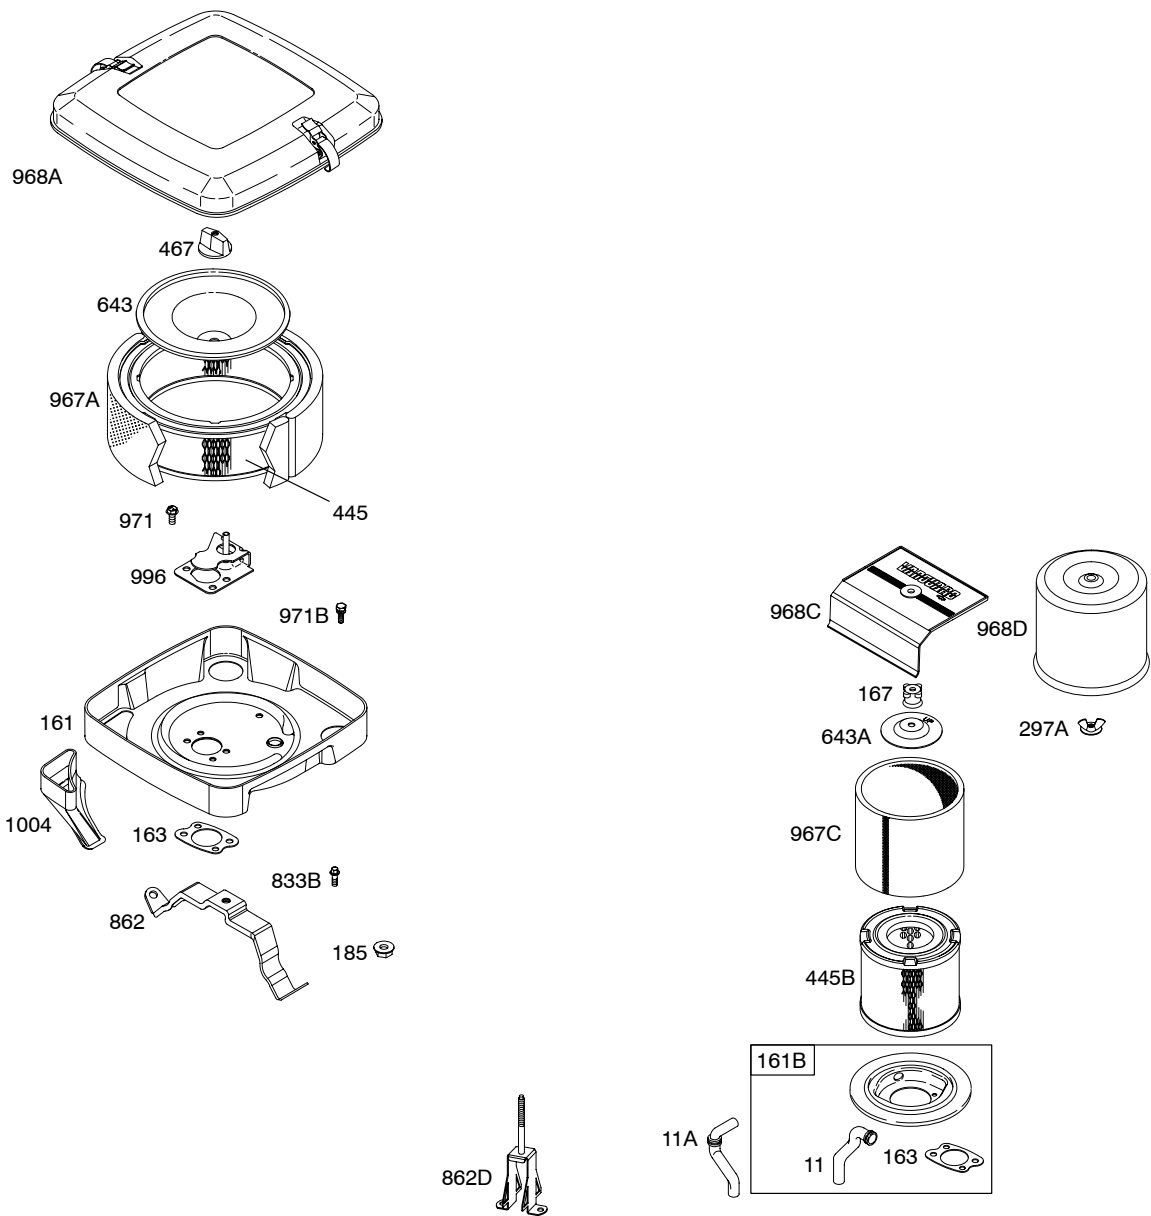


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
6160-7 Assemblies include all parts shown in frames. **12/16/2005**

295400

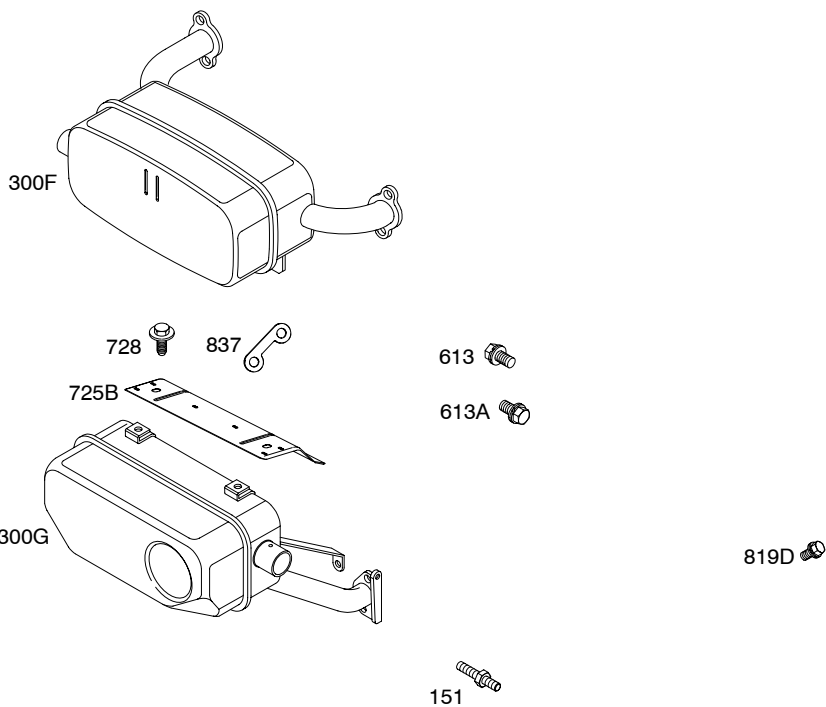


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.


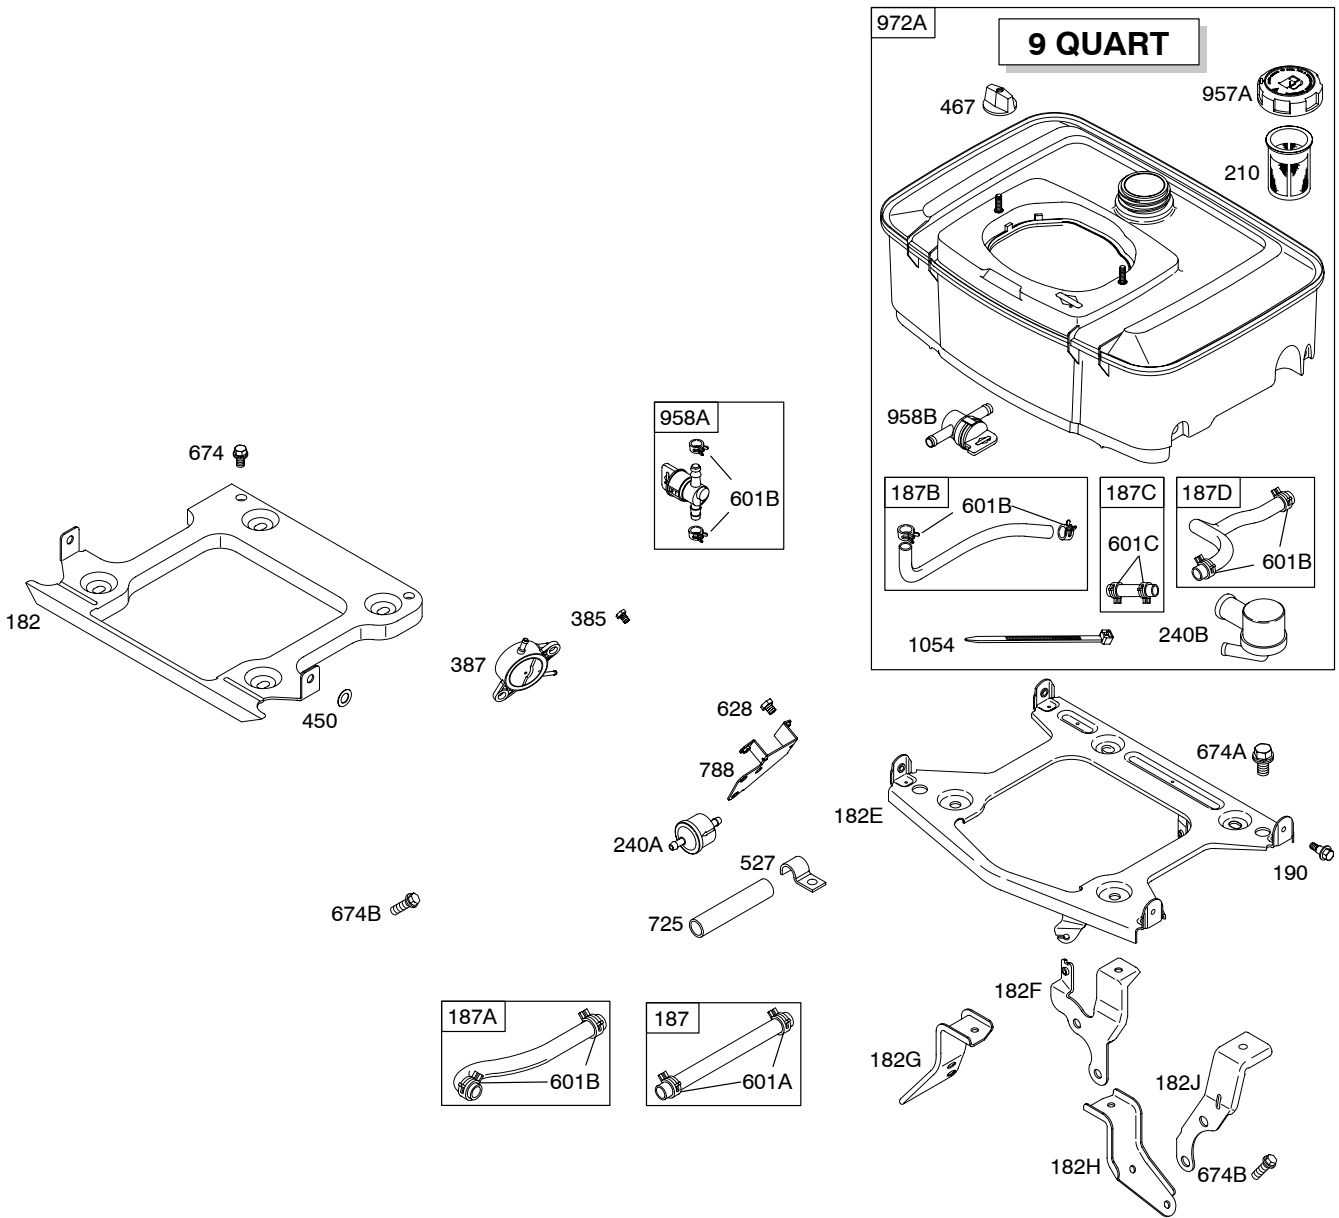


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 6160-9 Assemblies include all parts shown in frames. 12/16/2005

295400

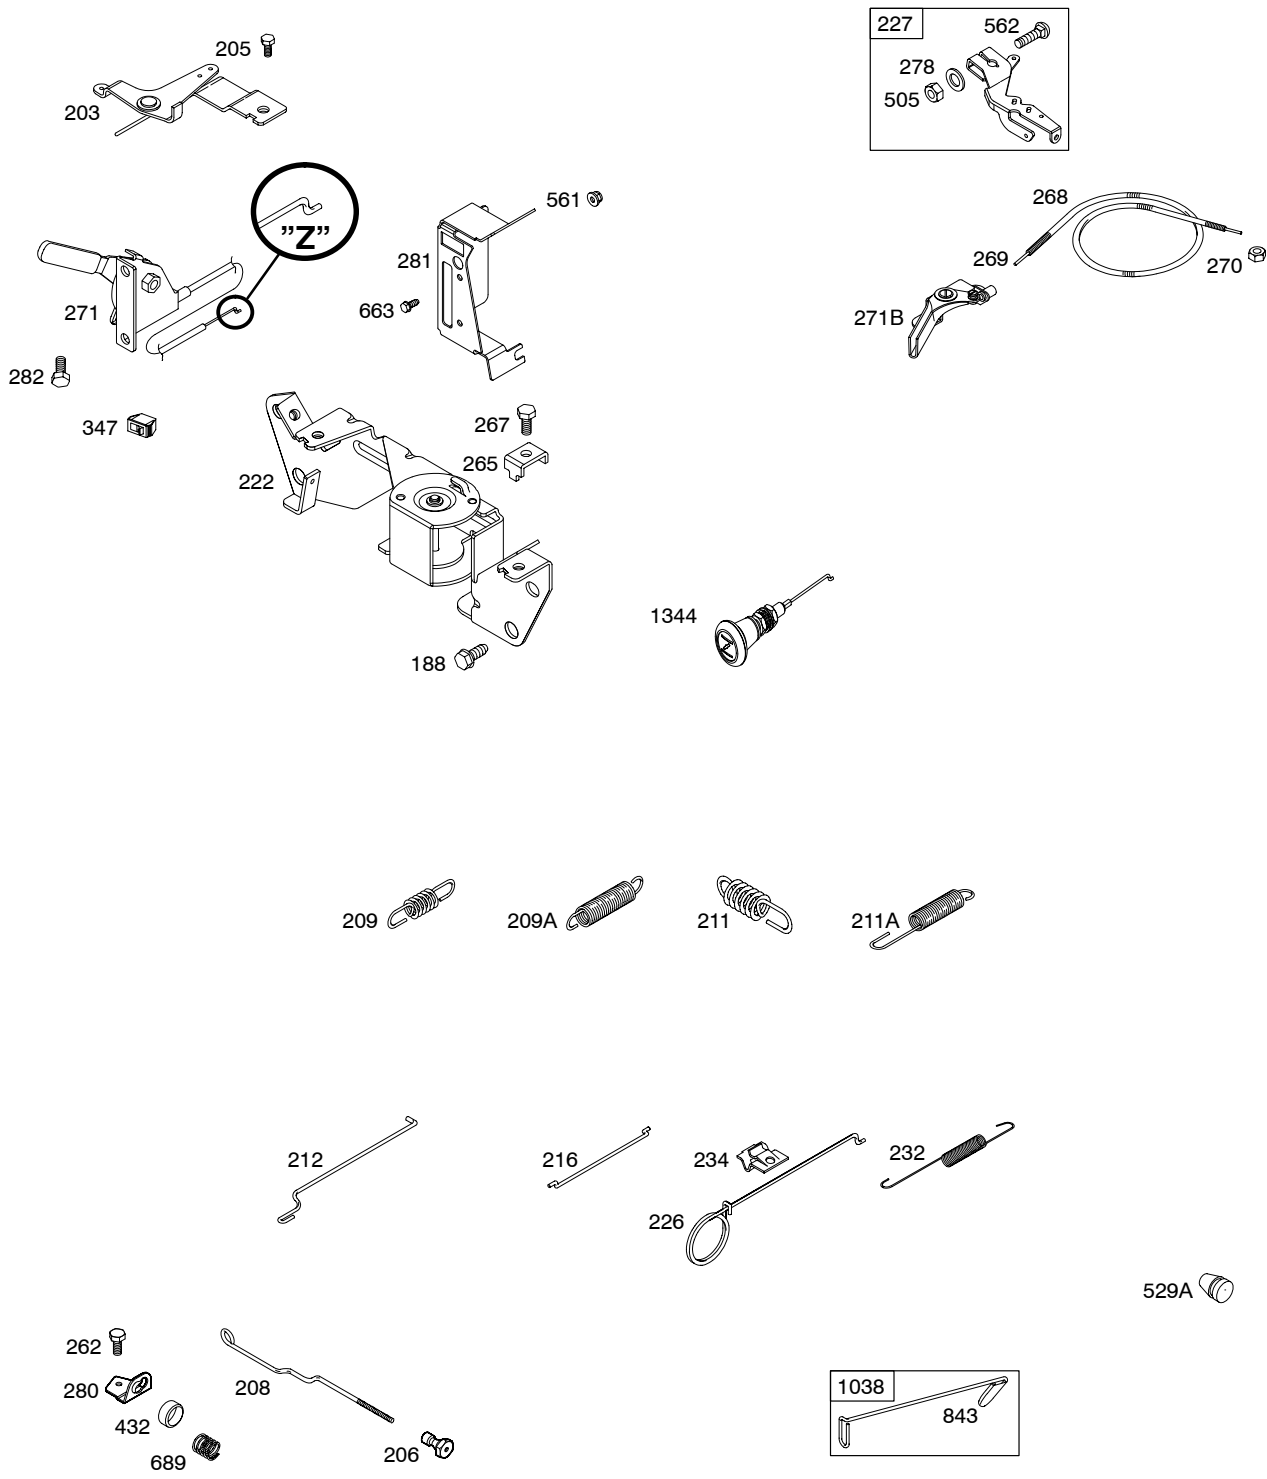


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 6160-10 Assemblies include all parts shown in frames. 12/16/2005


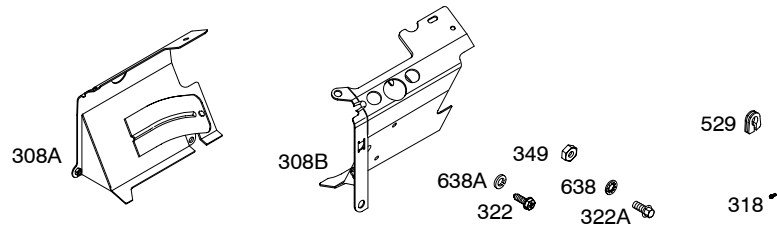
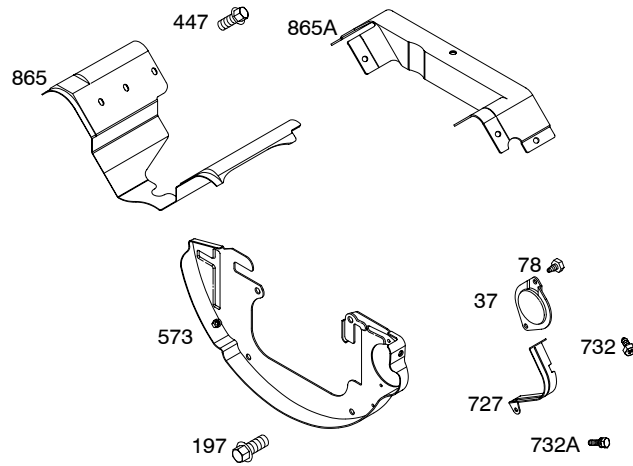


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
6160-11 Assemblies include all parts shown in frames. **12/16/2005**

295400

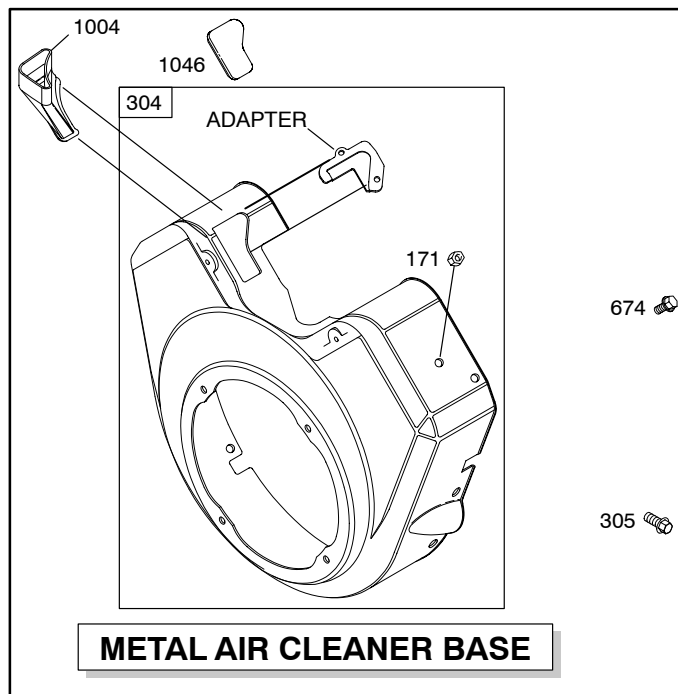


1036 EMISSION LABEL

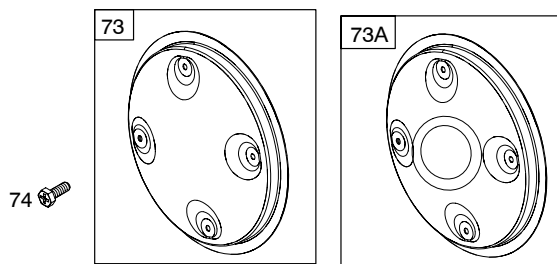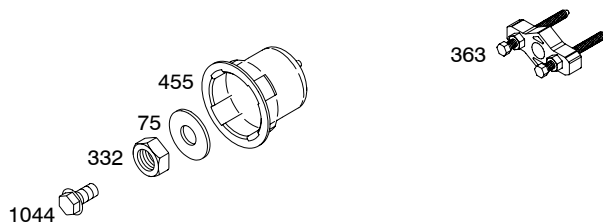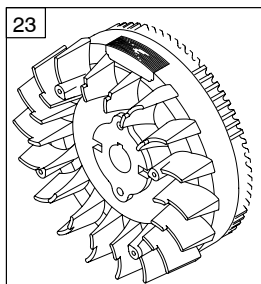
 
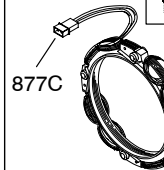
 

 





Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
6160-13 Assemblies include all parts shown in frames. 12/16/2005





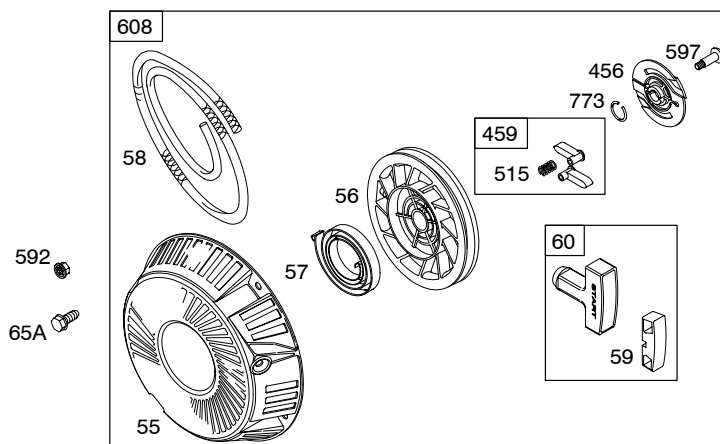
295400



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
6160-14 Assemblies include all parts shown in frames. 12/16/2005



DUAL CIRCUIT		10 - 16 AMP	
474B	1059	474D	1059
			
			
			

  NOTE: All stators use a No. 1119 mounting screw. 

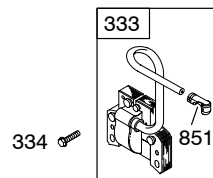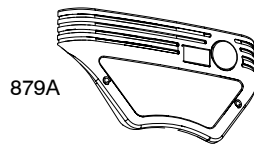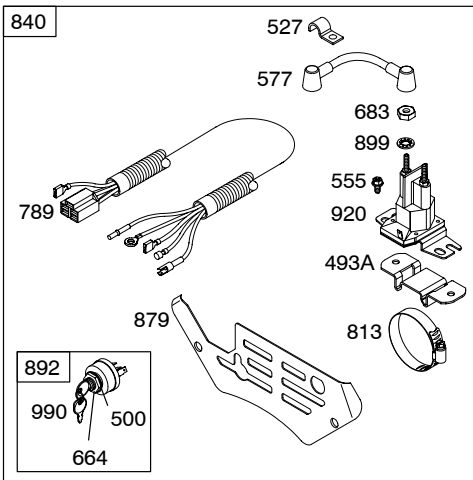

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 6160-15 Assemblies include all parts shown in frames. 12/16/2005

295400

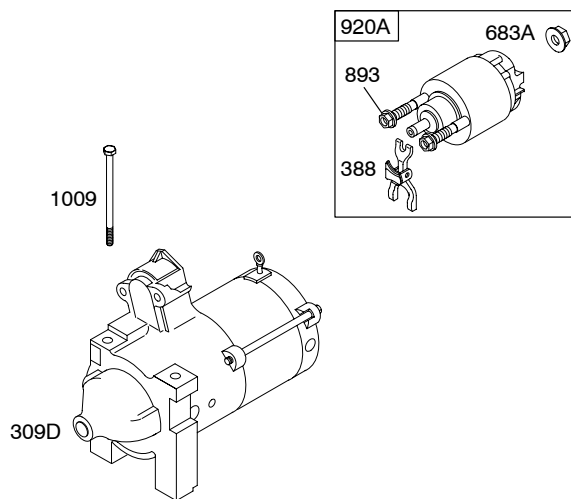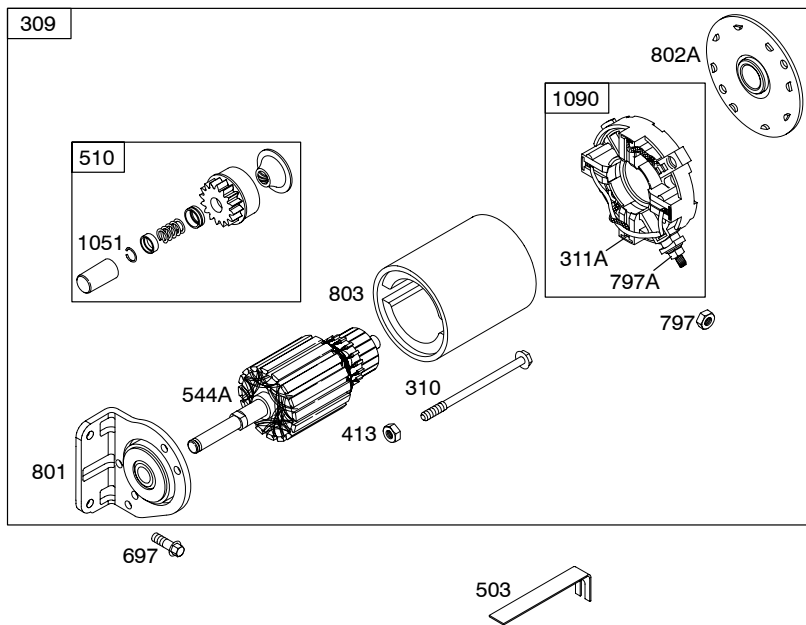

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

295400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	692178	Cylinder Assembly ----- Note ----- 841081 Cylinder Assembly Used on Type No(s). 0116, 0117.	25	807619	Piston Assembly ----- Note ----- 807809 Piston Assembly (.020" Oversize)	73A	841662	Screen-Rotating
2	808534	Kit-Bushing/Seal (Magneto Side)	26	807620	Ring Set ----- Note ----- 807810 Ring Set (.020" Oversize)	74	841441	Screw (Rotating Screen)
3	★805101s	Seal-Oil (Magneto Side)	27	690683	Lock-Piston Pin	75	691490	Washer (Flywheel)
5	809200	Head-Cylinder (Cylinder 1)	28	807621	Pin-Piston	78	690688	Screw (Flywheel Guard)
5A	809201	Head-Cylinder (Cylinder 2)	29	807900s	Rod-Connecting ----- Note ----- 807803 Rod-Connecting (.020" Undersize)	91	807919	Body-Upper Carburetor
7★△806085s		Gasket-Cylinder Head	32	690698	Screw (Connecting Rod)	94	●808257	Kit-Idle Mixture
8	808984	Breather Assembly	33	807681	Valve-Exhaust	95	690718	Screw (Throttle Valve)
9	★809094	Gasket-Breather	34	807680	Valve-Intake	97	809007	Shaft-Throttle
10	690751	Screw (Breather Assembly)	35	692084	Spring-Valve (Intake)	98	808177	Kit-Idle Speed
11	691556	Tube-Breather	36	692084	Spring-Valve (Exhaust)	102A	●692077	Gasket-Carburetor Body
11A	806083s	Tube-Breather	37	841309	Guard-Flywheel	104	●690723	Pin-Float Hinge
12	★691684	Gasket-Crankcase	39	690745	Deflector-Oil	105A	805620	Valve-Float Needle
13	692059	Screw (Cylinder Head)	40	692058	Retainer-Valve	108A	690719	Valve-Choke
15	690946	Plug-Oil Drain	42	807683	Keeper-Valve	109	809096	Shaft-Choke
16	692161	Crankshaft ----- Note ----- 692163 Crankshaft Used on Type No(s). 0111, 0112, 0126. 808740 Crankshaft Used on Type No(s). 0118.	45	690977	Tappet-Valve	117B	●806652	Jet-Main (Standard)
17	690752	Bearing-Ball	46	691557	Camshaft	118	690741	Jet-Main (High Altitude)
18	808847	Cover-Crankcase	50	690754	Manifold-Intake			----- Note ----- 842238 Jet-Main (High Altitude) Used on Type No(s). 0111, 0112, 0117, 0118, 0119, 0123.
20	★805049s	Seal-Oil (PTO Side)	51	★691694	Gasket-Intake (Manifold To Carburetor)	119	690720	Screw (Upper To Lower Carburetor Body)
22	807362	Screw (Crankcase Cover/Sump)	51A	★△692035	Gasket-Intake	121B	809021	Kit-Carburetor Overhaul
23	841908	Flywheel ----- Note ----- 841825 Flywheel Used on Type No(s). 0110, 0111, 0116, 0117, 0118, 0123, 0126, 0132. 841657 Flywheel Used on Type No(s). 0119.	54	690676	Screw (Intake Manifold)	122A	690691	Spacer-Carburetor
			55	691568	Housing-Rewind Starter	125B	809010	Carburetor ----- Note ----- 809008 Carburetor Used on Type No(s). 0111, 0112, 0117, 0118, 0119, 0123.
			56	692085	Pulley-Starter	130A	690726	Valve-Throttle
			57	692086	Spring-Rewind Starter	133A	806961	Float-Carburetor
			58	66574	Rope-Starter	142A	●690725	Nozzle-Carburetor (Standard)
			59	805957	Insert-Grip	146	691639	Key-Timing
			60	808167	Grip-Starter Rope	151	841185	Stud (Exhaust Manifold)
			65A	841233	Screw (Rewind Starter)			
			73	841440	Screen-Rotating Used on Type No(s). 0132.			

★ Included in Engine Gasket Set-Ref. No. 358A.

● Included in Carburetor Overhaul Kit-Ref. No. 121B.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

6160-17

Assemblies include all parts shown in frames.

12/16/2005

295400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION		
161	691561	Base–Air Cleaner (Metal)	206	691244	Nut–Governor Adjusting	240A	691035	Filter–Fuel		
161B	808414	Base–Air Cleaner (Metal) Used on Type No(s). 0113, 0116, 0130.	208	691549	Rod–Governor Control	240B	808116s	Filter–Fuel		
163	★692081	Gasket–Air Cleaner	209	692070	Spring–Governor ----- Note ----- 691507 Spring–Governor Used on Type No(s). 0118, 0123, 0132.	255	●690721	Bushing–Choke Shaft		
167	692297	Seal–Air Cleaner Nut			690710 Spring–Governor Used on Type No(s). 0126.	262	692083	Screw (Rod Bracket)		
171	810056	Nut (Air Cleaner)			691506 Spring–Governor Used on Type No(s). 0130.	265	691024	Clamp–Casing		
182	691523	Bracket–Fuel Tank			209A	690709	Spring–Governor Used on Type No(s). 0111, 0112.	267	692083	Screw (Casing Clamp)
182E	841601	Bracket–Fuel Tank			210	691370	Strainer–Fuel	268	691025	Casing–Control Wire (Cut To Required Length)
182F	691520	Bracket–Fuel Tank			211	692069	Spring–Governed Idle ----- Note ----- 691505 Spring–Governed Idle Used on Type No(s). 0118.	269	691026	Wire–Control (Cut To Required Length)
182G	841600	Bracket–Fuel Tank			211A	690707	Spring–Governed Idle Used on Type No(s). 0111, 0112.	270	691027	Nut (Control Wire Casing)
182H	691524	Bracket–Fuel Tank					692068 Spring–Governed Idle Used on Type No(s). 0126.	271	692541	Lever–Control
182J	691525	Bracket–Fuel Tank					271B	691028	Lever–Control	
185	690939	Nut (Air Cleaner Base)					273	★690681	Seal–O Ring (Oil Pump)	
187	791666	Line–Fuel (Used After Code Date 05063000). ----- Note ----- 691050 Line–Fuel (Used Before Code Date 05070100).					276	★△690704	Washer–Sealing (Governor Crank)	
187A	791801	Line–Fuel (Used After Code Date 05063000). ----- Note ----- 691049 Line–Fuel (Used Before Code Date 05070100).					276A	807085	Washer–Sealing (Rocker Cover)	
187B	692107	Line–Fuel					276B	690724	Washer–Sealing (Carburetor Plug)	
187C	692106	Line–Fuel					276C	●806137	Washer–Sealing (Solenoid)	
187D	692108	Line–Fuel					278	842122	Washer (Governor Control Lever)	
188	692056	Screw (Control Bracket)					280	691526	Bracket–Rod	
190	692199	Screw (Fuel Tank)					281	690742	Panel–Control	
192	807623	Adjuster–Rocker Arm					282	692083	Screw (Control Lever)	
197	807163	Screw (Back Plate)					287	692062	Screw (Dipstick Tube)	
203	690923	Crank–Bell					297A	691331	Nut (Air Filter Retainer)	
205	692083	Screw (Bell Crank)					300F	690931	Muffler Used on Type No(s). 0132.	
							300G	692464	Muffler Used on Type No(s). 0118.	

★ Included in Engine Gasket Set–Ref. No. 358A.

● Included in Carburetor Overhaul Kit–Ref. No. 121B.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

△ Included in Valve Gasket Set–Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

295400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
304	841658	Housing-Blower ----- Note ----- 841828 Housing-Blower Used on Type No(s). 0132.	358A	842722	Gasket Set-Engine	501	691185	Regulator
305	841233	Screw (Blower Housing)	359	691077	Washer (Ground Terminal)	503	691532	Strap-Starter
308	841232	Cover-Cylinder Head (Cylinder 1)(Black)	363	19203	Puller-Flywheel	505	690238	Nut (Governor Control Lever)
308A	841316	Cover-Cylinder Head (Cylinder 2)(Black)	365	690711	Screw (Carburetor)	506	807120	Screw (Carburetor Cover)
308B	841317	Cover-Cylinder Head (Cylinder 1)(Black)	373	691612	Nut (Ground Terminal)	507	691972	Insulator
308F	841182	Cover-Cylinder Head (Cylinder 2)(Black)	377	808095	Key-Woodruff	510	496881	Drive-Starter
309	691564	Motor-Starter	385	807084	Screw (Fuel Pump)	515	691528	Spring-Pawl
309D	808817	Motor-Starter Used on Type No(s). 0116, 0117.	387	808656	Pump-Fuel	520	691084	Terminal-Ground
310	496880	Screw (Starter Motor)	388	820799	Lever-Pinion Drive	522	491832	Plug-Dipstick/Fill
311A	497608	Brush Set	413	693587	Nut (Starter Motor)	523A	693175	Dipstick
318	841233	Screw (Mounting Bracket)	415	690283	Plug	524	△693172	Seal-Dipstick Tube
322	841233	Screw (Cylinder Head Cover)	432	691509	Cap-Spring	525	693174	Tube-Dipstick
322A	692067	Screw (Cylinder Head Cover)	437	691902	Screw (Exhaust Manifold)	526	692067	Screw (Regulator)
332	690887	Nut (Flywheel)	439	★692154	Seal-O Ring (Crankcase Cover/Sump)	527	690423	Clamp-Tube
333	492341	Armature-Magneto	445	394018s	Filter-Air Cleaner Cartridge	529	690744	Grommet
334	692066	Screw (Magneto Armature)	445B	393957s	Filter-Air Cleaner Cartridge	529A	691527	Grommet
337	491055s	Plug-Spark ----- Note ----- 792015 Plug-Spark Used on Type No(s). 0110, 0111, 0112, 0113, 0116, 0117, 0119, 0126, 0130, 0132.	447	841233	Screw (Air Guide Cover)	544A		Armature-Starter (For Replacement Armature, Order Reference 309)
338	△691312	Gasket-Dipstick	450	806497	Washer (Fuel Tank Bracket)	552	690701	Bushing-Governor Crank
347	691995	Switch-Rocker	455	841794	Cup-Flywheel	552A	806686	Bushing-Governor Crank
349	690238	Nut (Cylinder Head Cover)	456	691529	Plate-Pawl Friction	555	692067	Screw (Starter Solenoid)
356A	690809	Wire-Stop	459	808166	Pawl-Ratchet	561	690713	Nut (Control Lever)
357	691483	Key-Drive Pulley	467	691985	Knob-Air Cleaner	562	690239	Bolt (Governor Control Lever)
			468	★690690	Seal-O Ring (Oil Pump Screen)	565	690682	Stud (Oil Filter Adapter)
			474B	696459	Alternator (Dual Circuit) Used on Type No(s). 0119.	572	690686	Baffle-Breather
			474D	696458	Alternator (10-16 Amp Regulated)	573	841310	Plate-Back ----- Note ----- 841127 Plate-Back Used on Type No(s). 0116, 0117.
			479	807084	Screw (Oil Pump Screen)	577	690795	Cable-Starter
			493A	691177	Bracket-Mounting	578	692306	Wire Assembly
			500	691086	Washer (Key Switch)	578A	692319	Wire Assembly
						592	690939	Nut (Rewind Starter)

★ Included in Engine Gasket Set-Ref. No. 358A.

● Included in Carburetor Overhaul Kit-Ref. No. 121B.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

6160-19

Assemblies include all parts shown in frames.

12/16/2005

295400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
596	691492	Screw (Oil Pump)	674B	692062	Screw (Fuel Tank Bracket)	830	809157	Stud-Rocker Arm
597	690876	Screw (Pawl Friction Plate)	681	●808798	Kit-Needle/Seat	833B	691593	Screw (Air Cleaner Mounting Strap/Stud)
598	807625	Shim-End Play (Crankshaft or Camshaft Bearing)	683	691029	Nut (Starter Solenoid)	837	808085	Spacer-Muffler
601A	691038	Clamp-Hose	683A	820809	Nut (Starter Solenoid)	840	692096	Kit-Panel
601B	95162s	Clamp-Hose	689	691272	Spring-Friction	843	691322	Sleeve-Lever
601C	691522	Clamp-Hose	691	690680	Seal-Governor Shaft	851	493880s	Terminal-Spark Plug
608	841729	Starter-Rewind	697	692062	Screw (Drive Cap)	862	692153	Strap/Stud-Air Cleaner Mounting
613	691902	Screw (Muffler)	718	806469	Pin-Locating	862D	691565	Strap/Stud-Air Cleaner Mounting
613A	692328	Screw (Muffler)	725	280866	Shield-Heat			Used on Type No(s). 0113, 0116, 0130.
615B	691550	Retainer-Governor Shaft	725B	691498	Shield-Heat	865	807119	Cover-Air Guide
616	806685	Crank-Governor	727	841313	Cover-Starter Drive	865A	841319	Cover-Air Guide
628	806660	Screw (Fuel Pump Bracket)	728	691514	Screw (Heat Shield)	868	★△691963	Seal-Valve
633	●690722	Seal-Choke/Throttle Shaft	729	690586	Clip-Wire	871	692057	Bushing-Valve Guide
633B	806131	Seal-Choke/Throttle Shaft Used on Type No(s). 0111, 0112, 0117, 0118, 0119, 0123.	732	690688	Screw (Starter Drive Cover)	877	393456	Wire/Connector- Alternator (White Dual Socket) Used on Type No(s). 0119.
635	692076	Boot-Spark Plug	732A	841233	Screw (Starter Drive Cover)	877C	399916	Wire/Connector- Alternator
638	691551	Washer (Cylinder Head Cover)	737	690679	Screw (Oil Filter Adapter)	878	398661	Harness-Alternator
638A	690706	Washer (Cylinder Head Cover)	741	691530	Gear-Timing	879	690757	Cover-Carburetor ----- Note ----- 842123 Cover- Carburetor Used on Type No(s). 0116, 0130.
643	692079	Retainer-Air Filter	773	690875	Retainer	879A	807460	Cover-Carburetor ----- Note ----- 842124 Cover- Carburetor Used on Type No(s). 0110, 0111, 0117, 0118.
643A	690447	Retainer-Air Filter Used on Type No(s). 0113, 0116, 0130.	774	692067	Screw (Stop Wire)	883	★△691613	Gasket-Exhaust
650	692539	Screw (Oil Deflector)	788	691559	Bracket-Fuel Pump	892	692318	Switch-Key
654	690939	Nut (Carburetor)	789	691996	Harness-Wiring ----- Note ----- 841318 Harness- Wiring Used on Type No(s). 0116, 0117.	893	820805	Nut (Starter Solenoid)
663	692083	Screw (Control Panel)	797	691029	Nut (Brush Retainer)	899	691077	Washer (Starter Solenoid)
664	691087	Nut (Key Switch)	797A	693167	Nut (Brush Retainer)	914	807120	Screw (Rocker Cover)
674	692056	Screw (Fuel Tank Bracket)	801	808778	Cap-Drive	918	393815	Hose-Vacuum
674A	94536	Screw (Fuel Tank Bracket)	802A	691286	Cap-End			
			803	690854	Housing-Starter			
			807	●805557	Spacer-Throttle			
			813	690635	Clamp			
			816	690706	Washer (Oil Filter Adapter)			
			819D	692062	Screw (Muffler Bracket)			

★ Included in Engine Gasket Set-Ref. No. 358A.

● Included in Carburetor Overhaul Kit-Ref. No. 121B.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

295400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
920	691656	Solenoid-Starter	988	★692063	Gasket-Oil Adapter	1027	492932s	Filter-Oil
920A	825418	Solenoid-Starter	990	691959	Key Set	1028	808235	Adapter-Oil Filter
947A	692094	Solenoid-Fuel	996	691577	Shield-Carburetor	1029	807323	Arm-Rocker
955A	807723	Plug-Carburetor	1004	841656	Duct-Air	1036		Label-Emissions (Available from an Authorized Briggs & Stratton Service Dealer)
957A	493988s	Cap-Fuel Tank (Plastic)	1009	806474	Screw (Starter Motor)	1038	691567	Rod-Fuel Shut Off
958A	698183	Valve-Fuel Shut Off (Plastic) Used on Type No(s). 0119.	1017	690900	Screen-Oil Pump	1044	692056	Screw (Flywheel)
958B	692008	Valve-Fuel Shut Off (Plastic)	1022★△	806039s	Gasket-Rocker Cover	1046	692082	Plug-Blower Housing
967A	272490s	Filter-Pre Cleaner	1023B	691494	Cover-Rocker	1051	691124	Ring-Retaining
967C	271794s	Filter-Pre Cleaner Used on Type No(s). 0113, 0116, 0130.	1023C	690910	Cover-Rocker (Cylinder 1) (With Fuel Pump)	1054	280275	Tie-Cable
968A	699959	Cover-Air Cleaner	1023D	691558	Cover-Rocker (Used On Cylinder 1 Fuel Pump Applications)	1058	276343	Operator's Manual
968C	691910	Cover-Air Cleaner	1023E	691531	Cover-Rocker (Used On Engines Equipped With 9 Quart Fuel Tanks)	1059	698516	Kit-Screw/Washer
968D	691755	Cover-Air Cleaner	1024	693185	Pump-Oil	1090	691293	Retainer-Brush
971	807084	Screw (Air Cleaner Base to Carburetor)	1025	690689	Spool-Governor	1091	●691516	Cap-Limiter
971B	690699	Screw (Air Cleaner Base to Carburetor)	1026	691836	Rod-Push (Intake)(Steel) ----- Note ----- 691758 Rod-Push (Exhaust)(Aluminum)	1095	842723	Gasket Set-Valve
972A	690663	Tank-Fuel (Plastic)(9 Quart) Used on Type No(s). 0110, 0113, 0116, 0130.				1100	690973	Pivot-Rocker Arm
						1119	691552	Screw (Alternator)
						1176	842067	Nut (Exhaust Manifold)
						1254	807084	Screw (Rocker Cover Stud)
						1330	272144	Repair Manual
						1344	841129	Cable-Choke

★ Included in Engine Gasket Set-Ref. No. 358A.

● Included in Carburetor Overhaul Kit-Ref. No. 121B.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

6160-21

Assemblies include all parts shown in frames.

12/16/2005