



92200

Illustrated Parts List

Model Series

92200

TYPE NUMBERS
0007 through 1249.

TABLE OF CONTENTS

Air Cleaner	6
Blower Housing	8
Cam	2
Carburetor	4
Controls	5
Crankcase Cover/Sump	3
Crankshaft	2
Cylinder	2
Flywheel	7
Fuel Tank	4
Gear Reduction	3
Governor Spring	5
Head	2
Ignition	5
Kits/Gaskets-Carburetor	4
Kits/Gaskets-Valves	2
Muffler	6
Piston	2
Rewind Starter	7
Rewind Starter/Blower Housing	8
Valves	2





 



BRIGGS & STRATTON




PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.


92200

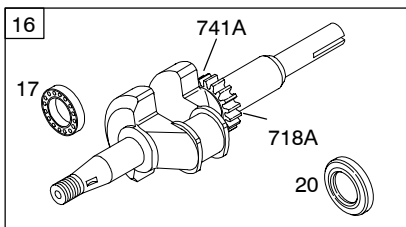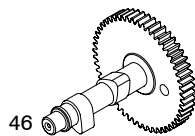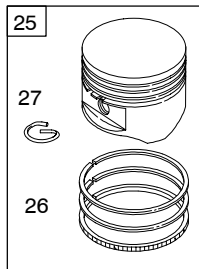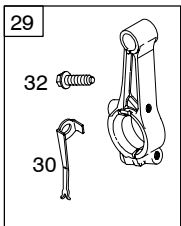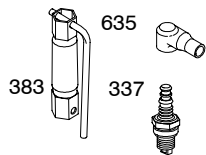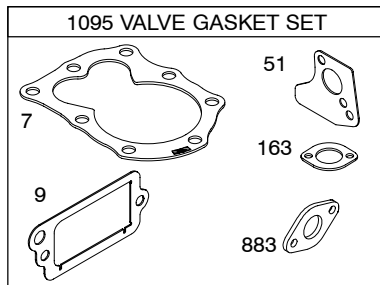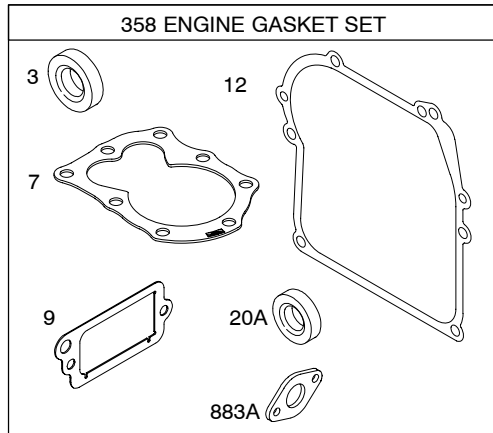


1330 REPAIR MANUAL

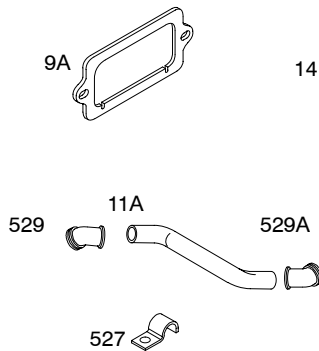

10

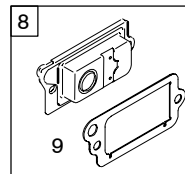





552

 


357

24




1058 OWNER'S MANUAL

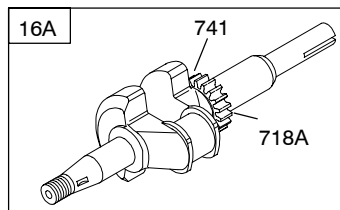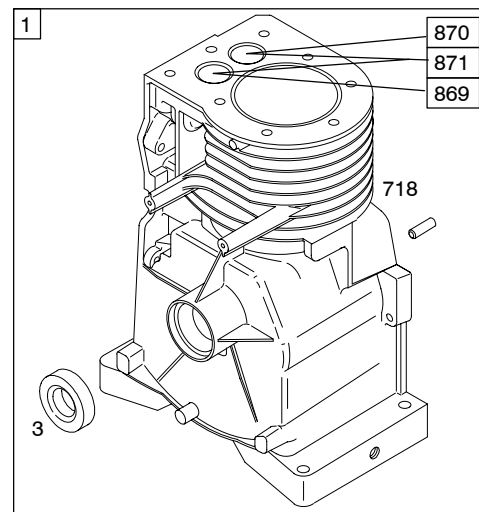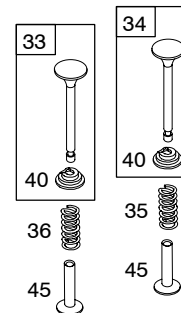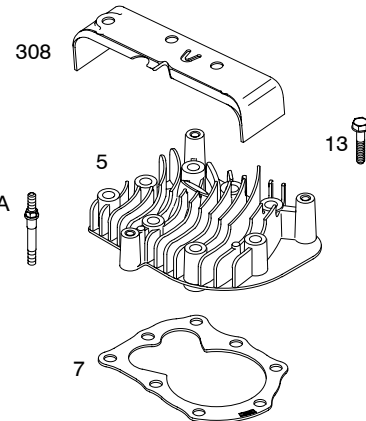








BALL BEARING

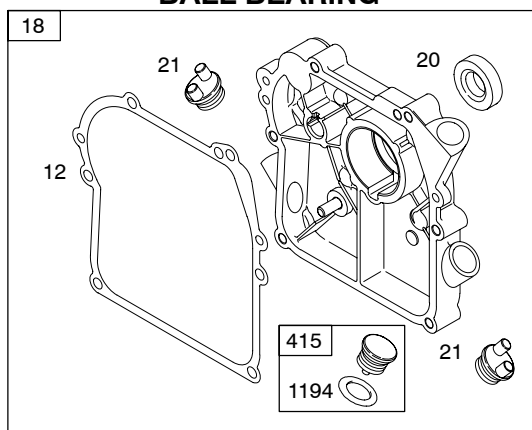


PLAIN BEARING








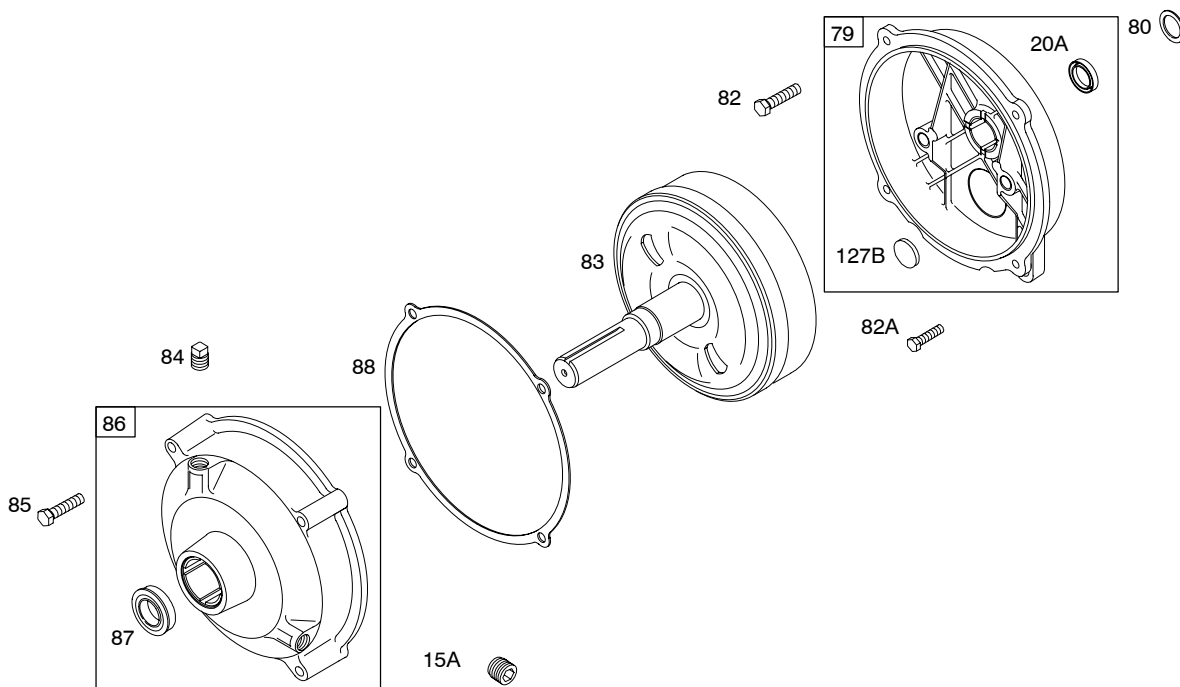
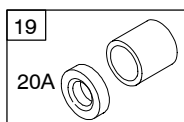
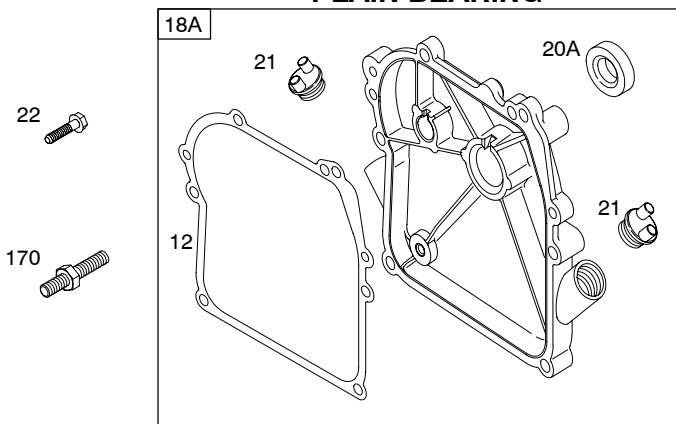











92200

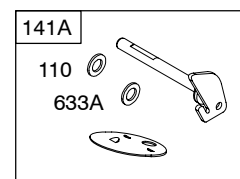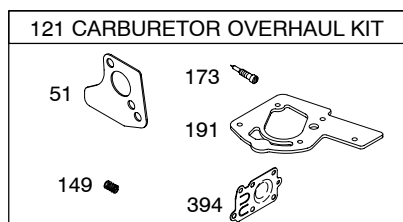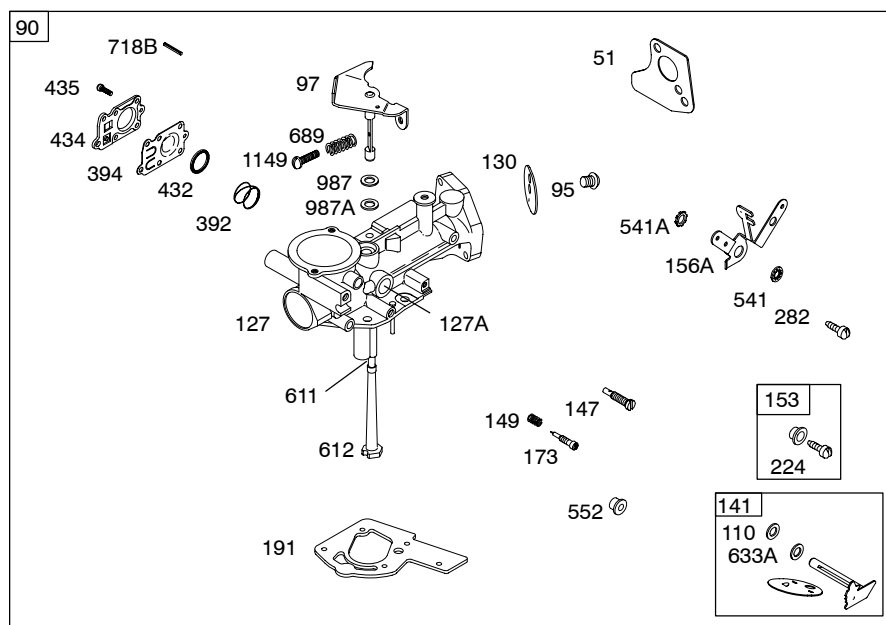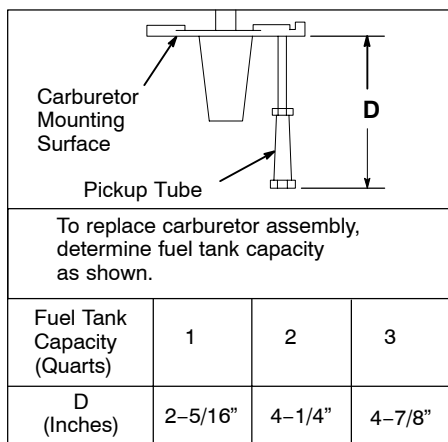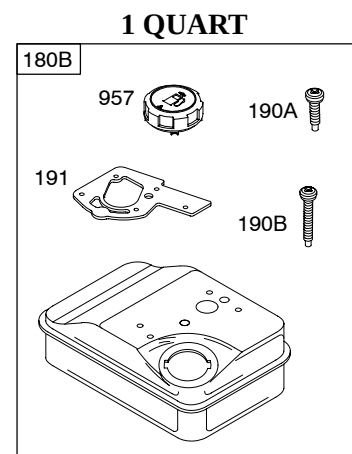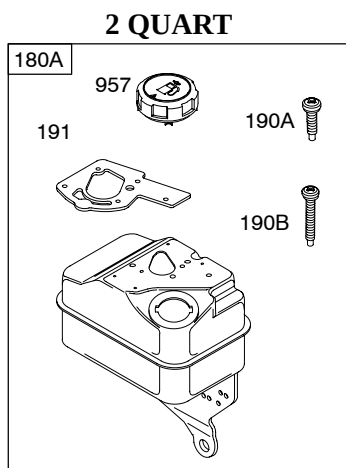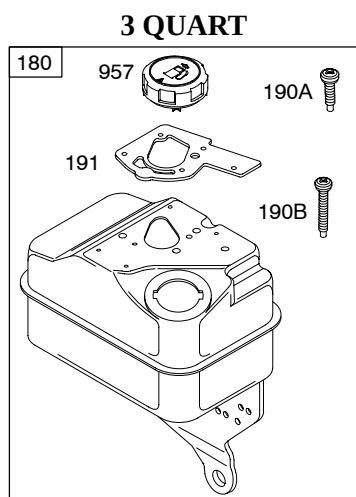

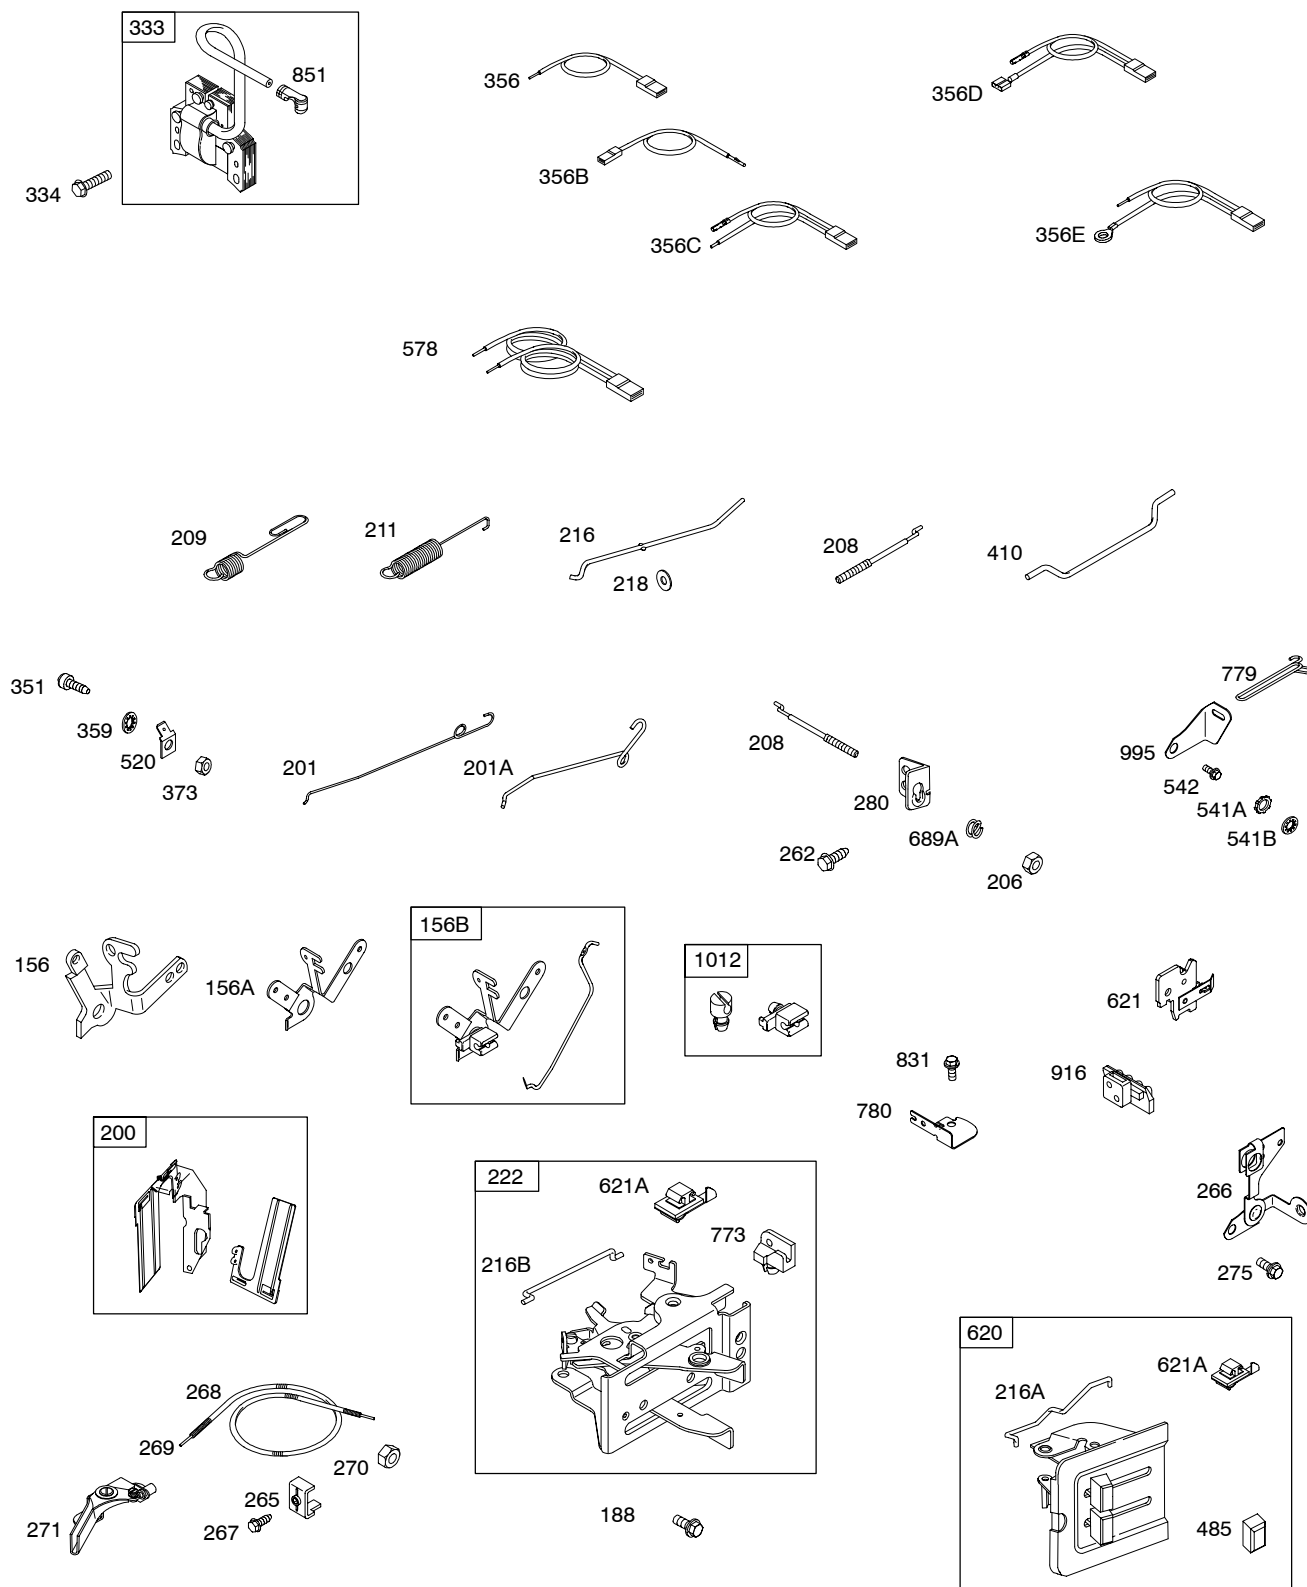



92200

   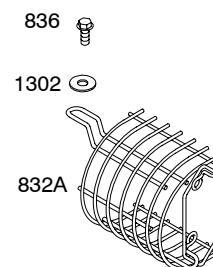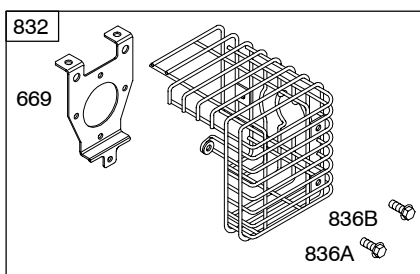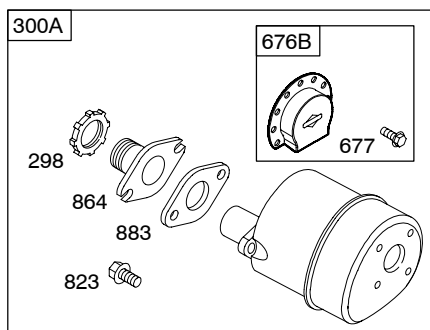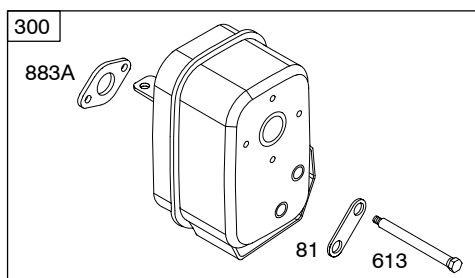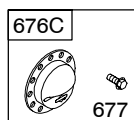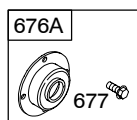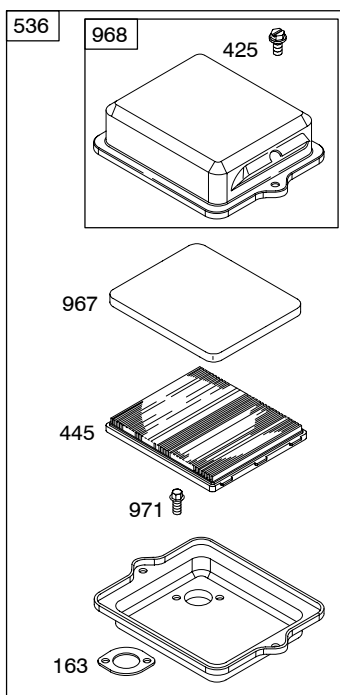

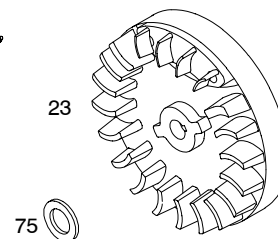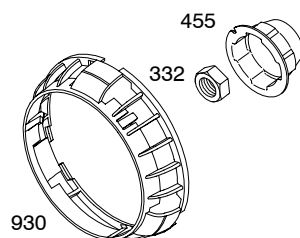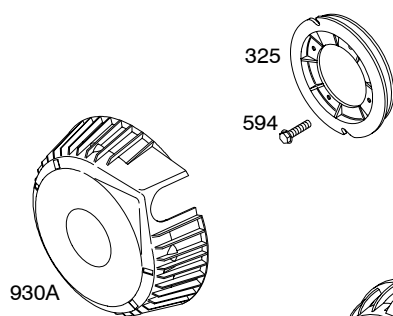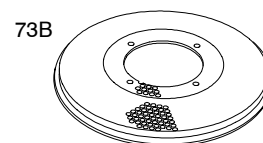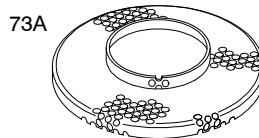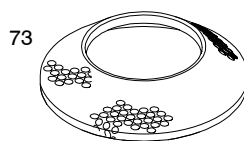
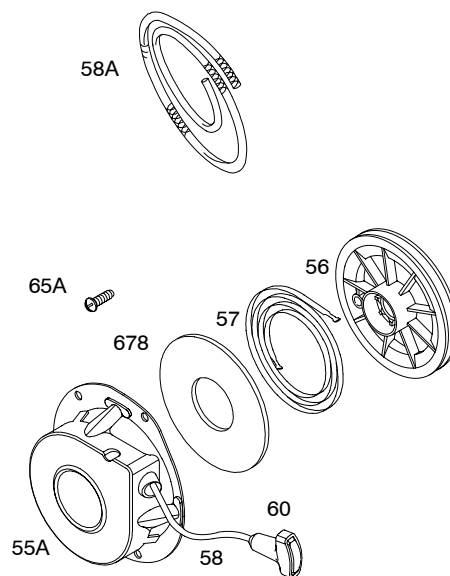
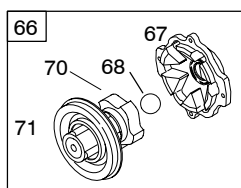
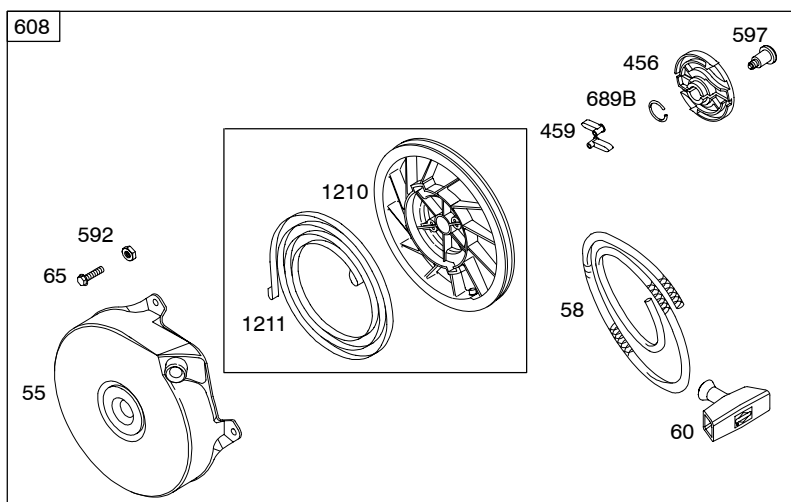


92200

1036 EMISSIONS LABEL

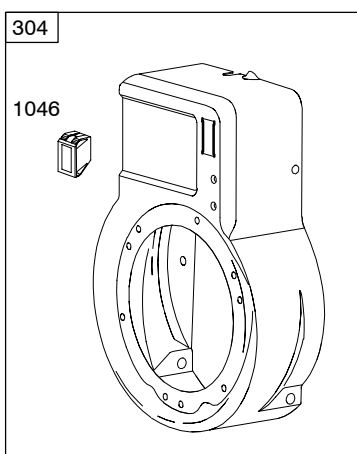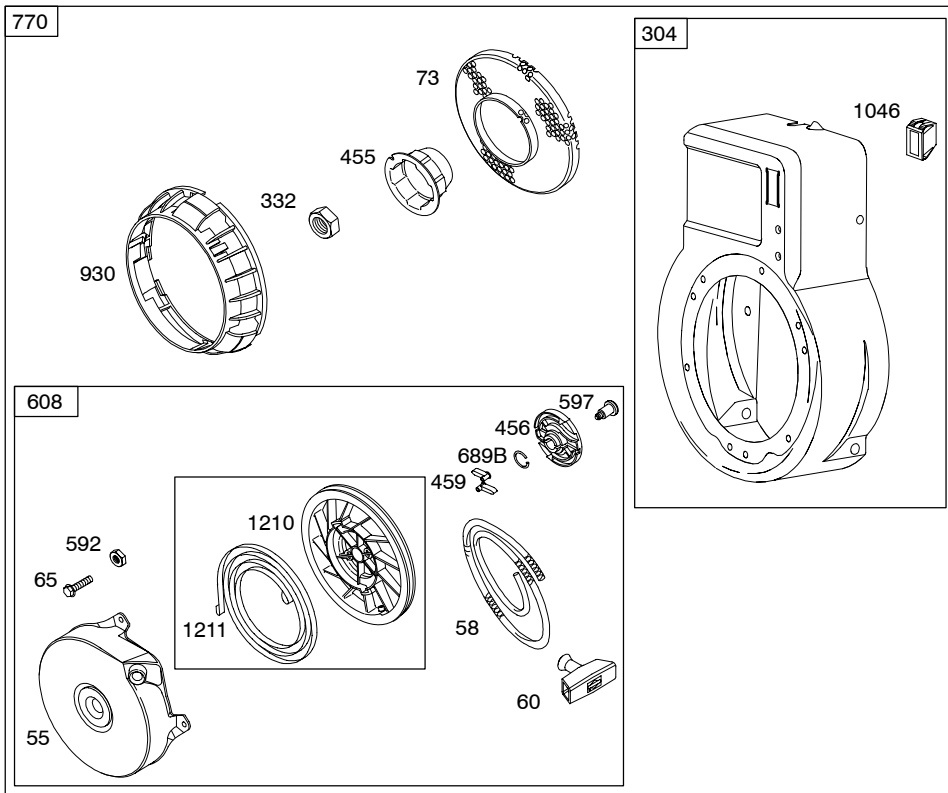

304A

 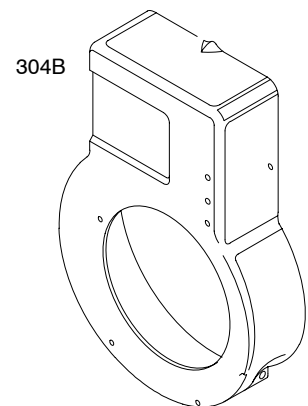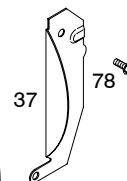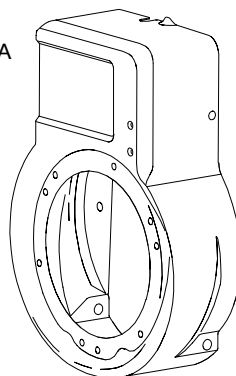

92200

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	695162	Cylinder Assembly (Used After Code Date 99103100). ----- Note ----- 497333 Cylinder Assembly (Used Before Code Date 99110100).			791418 Crankshaft (Used Before Code Date 05110900). Used on Type No(s). 1008, 1036, 1235. 791417 Crankshaft (Used Before Code Date 05110900). Used on Type No(s). 1040, 1200, 1218, 1238.	17	690824	Bearing-Ball
2	399269	Kit-Bushing/Seal (Magneto Side)				18	792232	Cover-Crankcase (Ball Bearing Cover) (Used After Code Date 05110800). ----- Note ----- 497502 Cover-Crankcase (Ball Bearing Cover) (Used Before Code Date 05110900).
3	299819s	Seal-Oil (Magneto Side)				18A	699406	Cover-Crankcase (Plain Bearing Cover) Used on Type No(s). 0142, 1242. ----- Note ----- 496679 Cover-Crankcase (Plain Bearing Cover) Used on Type No(s). 0049, 0127, 0129, 0133, 0137, 1049, 1227, 1229, 1237, 1246.
5	790169	Head-Cylinder	16A	791414	Crankshaft Used on Type No(s). 1246. ----- Note ----- 493599 Crankshaft Used on Type No(s). 0049, 0127, 0129, 0137. 495210 Crankshaft Used on Type No(s). 0008, 0036, 0123, 0135, 0136. 691474 Crankshaft Used on Type No(s). 1242. 690821 Crankshaft Used on Type No(s). 0007, 0035, 0121, 0122, 0128, 0130, 0134, 0139, 0140, 0141. 791422 Crankshaft Used on Type No(s). 1049, 1227, 1229, 1237. 792226 Crankshaft (Used After Code Date 05110800). Used on Type No(s). 1040, 1200, 1218, 1238. 792228 Crankshaft (Used After Code Date 05110800). Used on Type No(s). 1008, 1036. 792229 Crankshaft (Used After Code Date 05110800). Used on Type No(s). 1035, 1241, 1243, 1244, 1245, 1247, 1249.			
7	698717	Gasket-Cylinder Head				19	399269	Kit-Bushing/Seal (PTO Side) (Plain Bearing Cover)
8	791779	Breather Assembly				20	692020	Seal-Oil (PTO Side) (Plain Bearing Cover)
9	695890	Gasket-Breather (Used After Code Date 03031900).				20A	299819s	Seal-Oil (PTO Side) (Ball Bearing Covers)
9A	27549s	Gasket-Breather (Used Before Code Date 03032000).				21	281658s	Cap-Oil Fill
10	691666	Screw (Breather Assembly)				22	691129	Screw (Crankcase Cover/Sump) ----- Note ----- 693732 Screw (Crankcase Cover/Sump) (Used in Positions 1 and 6) Used on Type No(s). 1049, 1227, 1229, 1237, 1246. 691127 Screw (Crankcase Cover/Sump) (Used in Position 6) Used on Type No(s). 0049, 0127, 0129, 0133, 0137.
11A	692528	Tube-Breather						
12	692218	Gasket-Crankcase (.015" Thick) (Standard) ----- Note ----- 270895 Gasket-Crankcase (.005" Thick) 270896 Gasket-Crankcase (.009" Thick)						
13	691640	Screw (Cylinder Head)						
14	690361	Stud (Cylinder Head) (1 15/16" Long)						
14A	691120	Stud (Cylinder Head) (1 7/32" Long)						
15	691686	Plug-Oil Drain						
15A	691682	Plug-Oil Drain (Gear Reduction)						
16	497232	Crankshaft Used on Type No(s). 0040, 0100, 0118, 0133, 0138, 0142. ----- Note ----- 791421 Crankshaft (Used Before Code Date 05110900). Used on Type No(s). 1007, 1035, 1230, 1241, 1243, 1244, 1245, 1247, 1249.						

92200

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
23	690843	Flywheel ----- Note ----- 692009 Flywheel Used on Type No(s). 0135, 1235. 699573 Flywheel Used on Type No(s). 0133, 0138, 0141, 0142, 1238, 1241, 1242. 791119 Flywheel Used on Type No(s). 1238, 1241, 1242, 1249.	26	790909	Ring Set (Standard) (Used After Code Date 05051800). ----- Note ----- 695169 Ring Set (Standard) (Used After Code Date 96012800 and Before Code Date 05051900). 498680 Ring Set (Standard) (Used After Code Date 96012800 and Before Code Date 99110100). 399067 Ring Set (Standard) (Used Before Code Date 96012900). 695171 Ring Set (.010" Oversize) (Used After Code Date 99103100 and Before Code Date 05051900). 695172 Ring Set (.020" Oversize) (Used After Code Date 99103100 and Before Code Date 05051900). 498682 Ring Set (.020" Oversize) (Used After Code Date 96012800 and Before Code Date 99110100). 399015 Ring Set (.020" Oversize) (Used Before Code Date 96012900). 695173 Ring Set (.030" Oversize) (Used After Code Date 99103100 and Before Code Date 05051900). 498683 Ring Set (.030" Oversize) (Used After Code Date 96012800 and Before Code Date 99110100). 399016 Ring Set (.030" Oversize) (Used Before Code Date 96012900).	27	691588	Lock-Piston Pin
24	222698s	Key-Flywheel				28	699659	Pin-Piston (Standard) (Used After Code Date 05051800). ----- Note ----- 298909 Pin-Piston (Standard) (Used Before Code Date 05051900). 298908 Pin-Piston (.005" Oversize) (Used Before Code Date 05051900).
25	790908	Piston Assembly (Standard) (Used After Code Date 05051800). ----- Note ----- 498668 Piston Assembly (Standard) (Used After Code Date 96012800 and Before Code Date 05051900). 496869 Piston Assembly (Standard) (Used Before Code Date 96012900). 298906 Piston Assembly (.020" Oversize) (Used Before Code Date 96012900). 498671 Piston Assembly (.030" Oversize) (Used After Code Date 96012800 and Before Code Date 05051900). 298907 Piston Assembly (.030" Oversize) (Used Before Code Date 96012900).				29	699655	Rod-Connecting
						30	691719	Dipper-Connecting Rod
						32	691664	Screw (Connecting Rod)
						33	497871	Valve-Exhaust
						34	296677	Valve-Intake
						35	690520	Spring-Valve (Intake)
						36	690520	Spring-Valve (Exhaust)
						37	690463	Guard-Flywheel
						40	692194	Retainer-Valve
						45	691762	Tappet-Valve
						46	691998	Camshaft
						51	273113s	Gasket-Intake
						55	692144	Housing-Rewind Starter
						55A	393576	Housing-Rewind
						56	280439	Pulley-Starter
						57	490179	Spring-Rewind Starter
						58	691921	Rope-Starter (70" Long)
						58A	280406	Rope-Starter (82" Long)
						60	691915	Grip-Starter Rope
						65	690837	Screw (Rewind Starter) (1/4" Long)
						65A	690338	Screw (Rewind Starter) (3/8" Long)

92200

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION		
66	399671	Clutch–Starter (Used Before Code Date 97060600).	90	495459	Carburetor (2 Quart Tank) ----- Note -----	149	691592	Spring–Needle Valve		
67	394897	Housing–Clutch				153	490501	Kit–Collar/Screw		
68	691604	Ball–Clutch			499952 Carburetor (2 Quart Tank)	156	690439	Lever–Speed Adjuster		
70	691945	Ratchet–Clutch			Used on Type No(s).	156A	690438	Lever–Speed Adjuster		
71	691359	Cover–Ratchet			1007, 1035, 1036,	156B	492905	Lever–Speed Adjuster		
73	699850	Screen–Rotating (Used After Code Date 04032800).			1040, 1049, 1200, 1229, 1230, 1237, 1238, 1241, 1242, 1243, 1244, 1245, 1246, 1249.	163	271935s	Gasket–Air Cleaner		
73A	694018	Screen–Rotating (Used Before Code Date 04032900 and After Code Date 02060200).			495460 Carburetor (3 Quart Tank) Used on Type No(s).	170	691120	Stud (Crankcase Cover/Sump) (Used in Position 1) Used on Type No(s). 0035, 0036, 0040, 0130, 1035, 1036, 1040, 1230.		
73B	691725	Screen–Rotating			0008, 0118, 0123, 0127, 0135, 0136.	173	691777	Valve–Idle Mixture		
74	691627	Screw (Rotating Screen) (7/16" Long)			499953 Carburetor (3 Quart Tank) Used on Type No(s).	180	495388	Tank–Fuel (3 Quart) Used on Type No(s). 0008, 0127. ----- Note -----		
74A	691692	Screw (Rotating Screen) (1/2" Long) Used on Type No(s). 0007, 0122, 0137.			1008, 1218, 1227, 1235.			495391 Tank–Fuel (3 Quart) Used on Type No(s). 0118, 0123, 0135, 0136, 1008, 1218, 1227, 1235.		
75	691736	Washer (Flywheel) (Used Before Code Date 97063000).			499492 Carburetor (1 Quart Tank) Used on Type No(s). 1247.	180A	495376	Tank–Fuel (2 Quart) Used on Type No(s). 0007, 0035, 0036, 0040, 0049, 0128, 0130, 0137. ----- Note -----		
78	690364	Screw (Flywheel Guard)	95	691437	Screw (Throttle Valve)			495377 Tank–Fuel (2 Quart) Used on Type No(s). 0100, 0121, 0122, 0129, 0133, 0134, 0138, 0139, 0140, 0141, 0142, 1007, 1035, 1036, 1040, 1049, 1200, 1229, 1230, 1237, 1238, 1241, 1242, 1243, 1244, 1245, 1246, 1249.		
79	690605	Case–Gear Reduction	97	692018	Shaft–Throttle			180B	495370	Tank–Fuel (1 Quart) Used on Type No(s). 1247.
80	691602	Gasket–Gear Case	110	690401	Washer (Choke Shaft) (Brass)			188	692200	Screw (Control Bracket)
81	691179	Lock–Muffler Screw								
82	690369	Screw (Gear Reduction Case) (7/8" Long)	110A	691869	Washer (Choke Shaft) (Felt)					
82A	699164	Screw (Gear Reduction Case) (1 1/2" Long)	121	495606	Kit–Carburetor Overhaul					
83	690374	Shaft–Auxiliary Drive	127	691718	Plug–Welch (Carburetor Body)					
84	691121	Plug–Breather	127A	691742	Plug–Welch (Mixing Chamber)					
85	691127	Screw (Gear Cover to Gear Reduction Case)	127B	691585	Plug–Welch (Gear Reduction Case)					
86	690608	Cover–Gear	130	691743	Valve–Throttle					
87	691582	Seal–Gear Reduction	141	497230	Kit–Choke Shaft (Used After Code Date 94092500).					
88	691600	Gasket–Gear Reduction Cover	141A	491177	Kit–Choke Shaft (Used Before Code Date 94092600).					
			147	691250	Jet–Pilot (Standard) ----- Note ----- 499502 Jet–Pilot (High Altitude)					

92200

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
190	691685	Screw (Fuel Tank) (2/3" Long)			692911 Spring– Governor (Yellow)	269	691026	Wire–Control (78" Long) (Cut to Required Length)
190A	692200	Screw (Fuel Tank) (3/4" Long)			Used on Type No(s). 1036, 1218, 1227, 1235.	270	691027	Nut (Control Wire Casing)
190B	691687	Screw (Fuel Tank) (1 3/4" Long)			692613 Spring– Governor (Brown)	271	691028	Lever–Control
191	692241	Gasket–Fuel Tank			Used on Type No(s). 1244.	275	691683	Screw (Throttle Control)
200	498770	Blade–Governor	211	691289	Spring–Governed Idle	280	691184	Bracket–Rod ----- Note -----
201	691822	Link–Air Vane	216	690551	Link–Choke Used on Type No(s). 0118, 0121.			690424 Bracket–Rod Used on Type No(s). 0008, 0127.
201A	691305	Link–Air Vane				282	690320	Screw (Control Lever)
206	691771	Nut–Governor Adjusting	216A	691824	Link–Choke	298	691720	Locknut–Muffler/Elbow
208	691821	Rod–Governor Control	216B	692904	Link–Choke	300	691360	Muffler
209	692205	Spring–Governor (No Color) ----- Note ----- 690373 Spring– Governor (Stone Blue) Used on Type No(s). 0036, 0123, 0127, 0135, 0136, 0138. 691785 Spring– Governor (Yellow) Used on Type No(s). 0128, 0141. 691825 Spring– Governor (Red) Used on Type No(s). 0118, 0137. 690563 Spring– Governor (White) Used on Type No(s). 0008, 0133, 0142, 1008, 1238, 1242, 1246, 1249. 692612 Spring– Governor (Black) Used on Type No(s). 1241.	217	691815	Spring–Choke Return	300A	493288	Muffler
			218	691722	Washer (Choke Link)	304	692622	Housing–Blower
			222	699132	Bracket–Control Used on Type No(s). 1008, 1035, 1036, 1040, 1049, 1200, 1218, 1227, 1229, 1237, 1241, 1242, 1243, 1244, 1245, 1247, 1249.	304A	693004	Housing–Blower
			224	690320	Screw (Collar/Screw Kit)	304B	690665	Housing–Blower Used on Type No(s). 0007, 0122, 0137.
			262	690804	Screw (Rod Bracket)	305	692198	Screw (Blower Housing)
			265	691024	Clamp–Casing	306	690461	Shield–Cylinder
			266	691414	Control–Throttle	307	691660	Screw (Cylinder Shield)
			267	691082	Screw (Casing Clamp) (Carburetor) ----- Note ----- 692577 Screw (Casing Clamp) (3/4" Long) Used on Type No(s). 1243, 1245, 1247.	308	690462	Cover–Cylinder Head
			268	691025	Casing–Control Wire (72" Long) (Cut to Required Length) ----- Note ----- 691072 Casing– Control Wire (48" Long) (Cut to Required Length)	325	690590	Pulley–Starter Rope Used on Type No(s). 0007, 0122, 0137.
						332	690662	Nut (Flywheel)
						333	496914	Armature–Magneto
						334	691061	Screw (Magneto Armature)
						337	802592s	Plug–Spark ----- Note ----- 492167s Plug–Spark Used on Type No(s). 0121, 0142, 0133.
						347	691396	Switch–Rocker
						351	90200	Screw (Ground Terminal)

92200

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
356	692390	Wire-Stop	541B	691067	Washer (Speed Adjuster Lever) (Used In Place Of Stop Switch, Reference 621)	689	691783	Spring-Friction (Throttle Shaft)
356B	690791	Wire-Stop				689A	692522	Spring-Friction (Governor Control Rod)
356C	695283	Wire-Stop				689B	691855	Spring-Friction (Rewind Starter)
356D	691409	Wire-Stop	542	691683	Screw (Link Bracket)	692	690572	Spring-Detent
356E	490346	Wire-Stop	552	690508	Bushing-Governor Crank	718	690959	Pin-Locating (Cylinder)
357	692191	Key-Drive Pulley Used on Type No(s). 0128.	578	398153	Wire Assembly	718A	499047	Pin-Locating (Crankshaft)
358	699933	Gasket Set-Engine	592	690800	Nut (Rewind Starter)	718B	690296	Pin-Locating (Diaphragm Cover)
359	691077	Washer	594	691692	Screw (Starter Rope Pulley) Used on Type No(s). 0007, 0122, 0137.	741	791124	Gear-Timing (Non Ball Bearing Crankshafts)
363	19069	Puller-Flywheel (Ground Terminal)	597	691696	Screw (Pawl Friction Plate)	741A	691805	Gear-Timing (Ball Bearing Crankshafts)
365	690953	Screw (Carburetor)	608	690101	Starter-Rewind (70" Rope)	770	690098	Kit-Rewind/Blower Housing Used on Type No(s). 0007, 0122, 0137.
373	691612	Nut (Ground Terminal)	611	690507	Pipe-Fuel (2 Quart Tank) ----- Note ----- 691770 Pipe-Fuel (3 Quart Tank)	773	697325	Retainer
383	89838s	Wrench-Spark Plug	612	391813	Tube-Pick Up (2 And 3 Quart Tanks) (Includes Spring Clip) ----- Note ----- 297219s Tube-Pick Up (1 Quart Tank)	779	691828	Link-Bell Crank
392	691823	Spring-Pump Diaphragm	613	691632	Screw (Muffler)	780	691211	Anchor-Spring
393	691213	Screen-Carburetor	620	490649	Panel-Speed Control	823	692336	Screw (Muffler)
394	272538s	Diaphragm-Carburetor	621	691941	Switch-Stop	831	691099	Screw (Spring Anchor)
410	691274	Link-Control	621A	692310	Switch-Stop	832	490571	Guard-Muffler
415	691363	Plug (Crankcase Cover/Sump)	635	66538s	Boot-Spark Plug	832A	690789	Guard-Muffler
425	694515	Screw (Air Cleaner Cover)	648	690661	Screw (Muffler Guard Bracket) (13/32" Long)	836	690367	Screw (Muffler Guard) (19/32" Long)
432	690766	Spring-Cap	648A	690664	Screw (Muffler Guard Bracket) (13/32" Long)	836A	690661	Screw (Muffler Guard) (13/32" Long)
434	691713	Cover-Diaphragm	669	690427	Bracket-Muffler Guard	836B	691683	Screw (Muffler Guard) (1/3" Long)
435	691619	Screw (Diaphragm Cover)	669A	691194	Bracket-Muffler Guard	851	493880s	Terminal-Spark Plug
445	491588s	Filter-Air Cleaner Cartridge	676	393756	Deflector-Muffler	864	690776	Adapter-Muffler
455	691236	Cup-Flywheel	676A	397931	Deflector-Muffler	869	691701	Seat-Valve (Intake)
456	692299	Plate-Pawl Friction	676B	393760	Deflector-Muffler	870	691702	Seat-Valve (Exhaust)
459	281505	Pawl-Ratchet	676C	396548	Deflector-Muffler	871	262001	Bushing-Valve Guide (Exhaust) ----- Note ----- 63709 Bushing-Valve Guide (Intake)
485	692295	Knob-Control	677	690661	Screw (Muffler Deflector)			
520	691084	Terminal-Ground	678	490817	Spacer-Rewind			
527	691741	Clamp-Tube						
529	692189	Grommet (90 Degree)						
529A	692187	Grommet (45 Degree)						
536	494279	Air Cleaner						
541	690288	Washer (Speed Adjuster Lever) (Internal Teeth)						
541A	690299	Washer (Speed Adjuster Lever) (External Teeth)						

92200

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
883	★691314	Gasket-Exhaust	987	692279	Seal-Throttle Shaft	1149	691624	Screw
883A	★691880	Gasket-Exhaust	987A	270167	Seal-Throttle Shaft			(Throttle Shaft)
916	691900	Rack-Governor Gear	995	691756	Bracket-Link	1194	691876	Seal-O Ring
930	691348	Guard-Rewind	1012	490507	Retainer-Link			(Plug)
930A	690601	Guard-Rewind	1036		Label-Emissions	1210	499901	Pulley/Spring
957	494559	Cap-Fuel Tank			(Available from			Assembly
967	491435s	Filter-Pre Cleaner			Authorized			(Pulley)
968	692321	Cover-Air Cleaner			Briggs & Stratton	1211	499901	Pulley/Spring
971	690370	Screw			Service Dealer)			Assembly
		(Air Cleaner Base	1046	691337	Plug-Blower Housing			(Spring)
		to Carburetor)	1058	276346	Owner's Manual	1302	691186	Washer
			1095	699450	Gasket Set-Valve			(Muffler Guard)
						1330	270962	Repair Manual