

93900 to 93999

Illustrated Parts List

Model Series

93900 to 93999

Non-Compliance

TYPE NUMBERS

0100, 0101,
0115 through 0160
0200, 0201, 0215,
0216, 0217, 0223,
0224, 0225, 0226,
0229, 0230, 0231,
0232, 4001, 4002,
4004, 4005, 5500,
5501, 5505.

Compliance

TYPE NUMBERS

3100,
3111 through 3137
3177, 3178, 3201,
7001.

TO FIND

THE CORRECT NUMBER OF THE PART YOU NEED:

FOLLOW THE INSTRUCTIONS BELOW

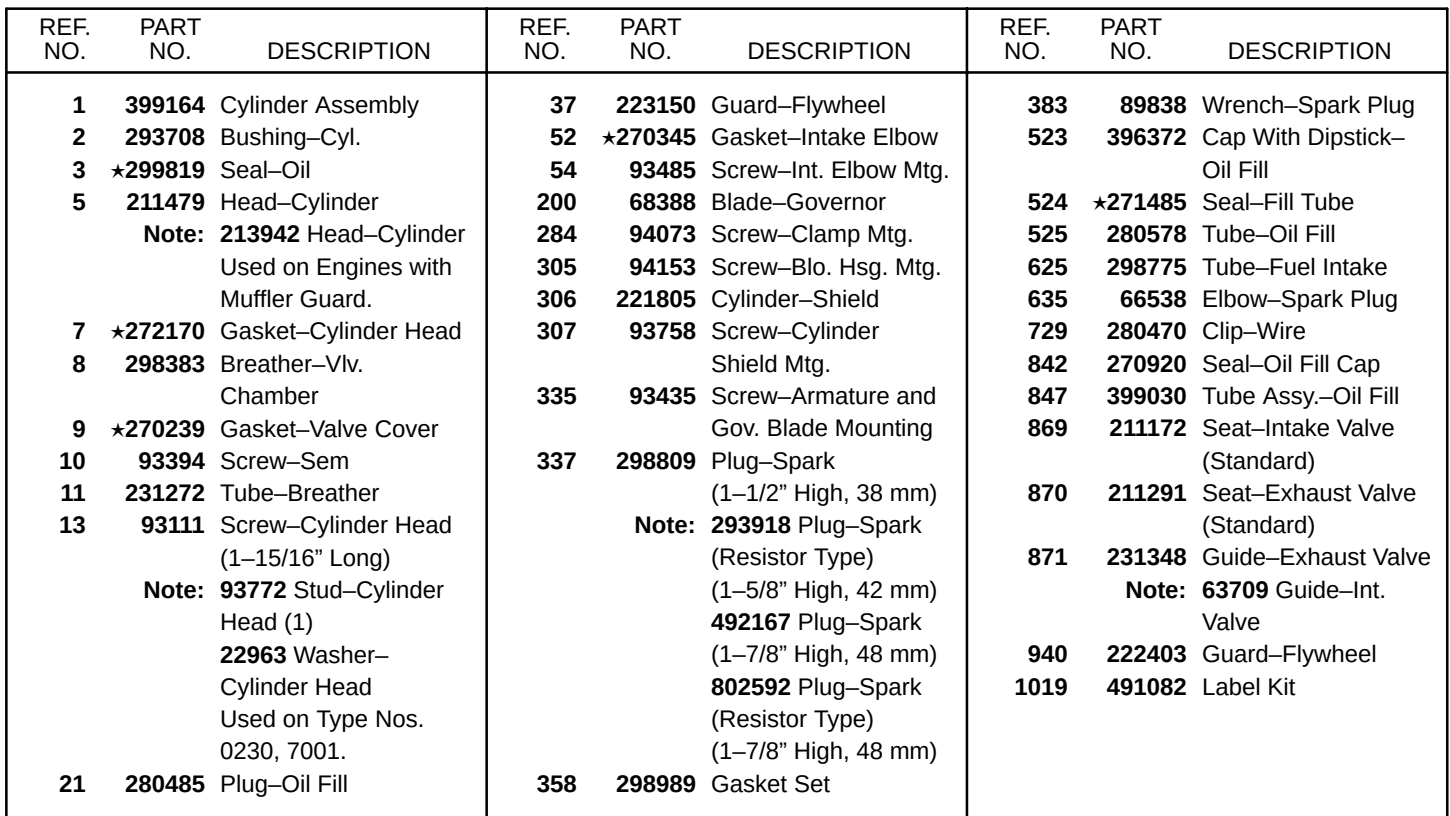
- A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number.
- B. Refer to the Illustrations and compare the original part with Illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE."
- D. If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note."
- E. If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number.
- F. For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply.

PRINTED IN U.S.A.

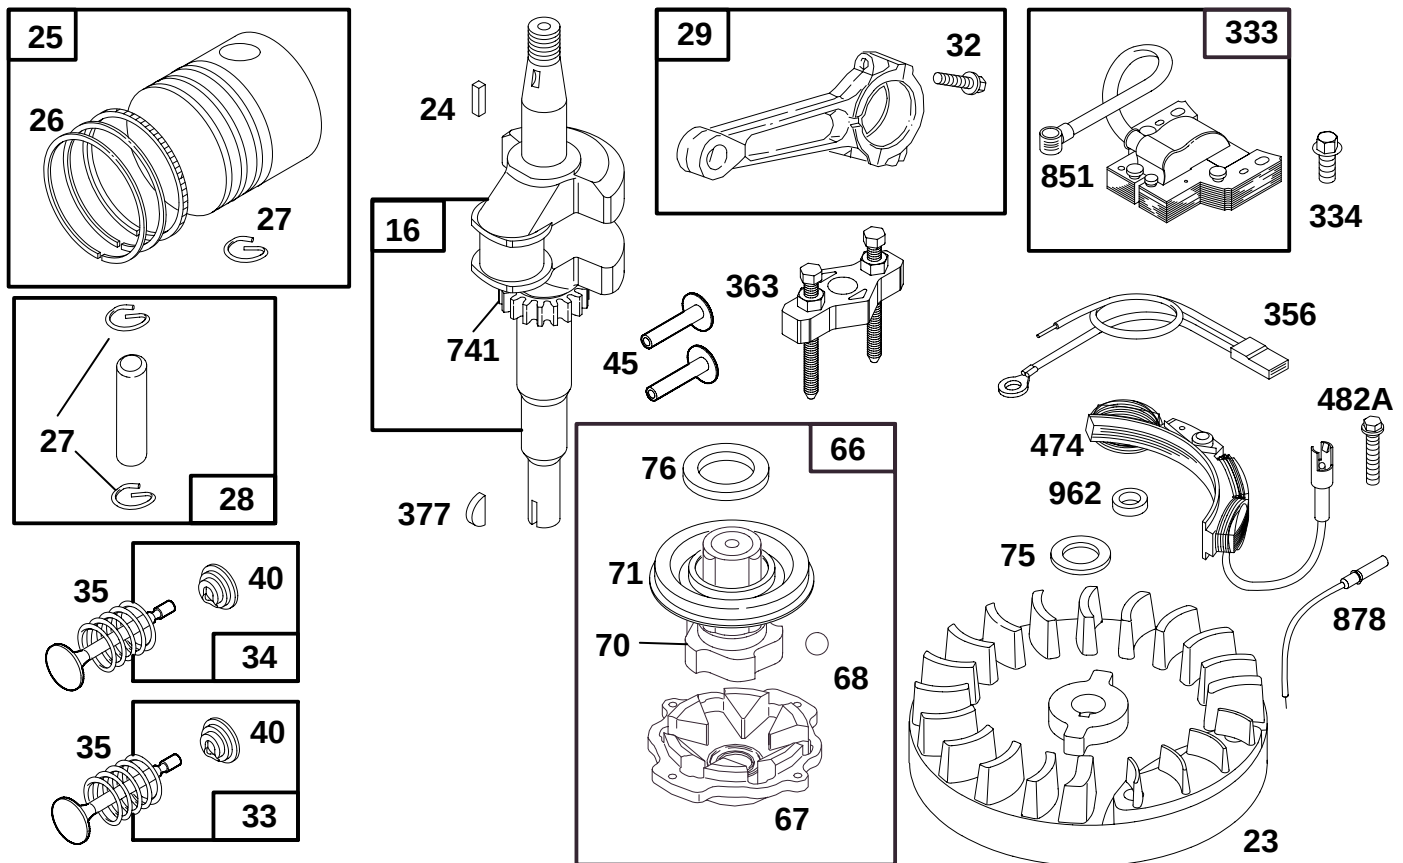
COPYRIGHT©

BRIGGS & STRATTON

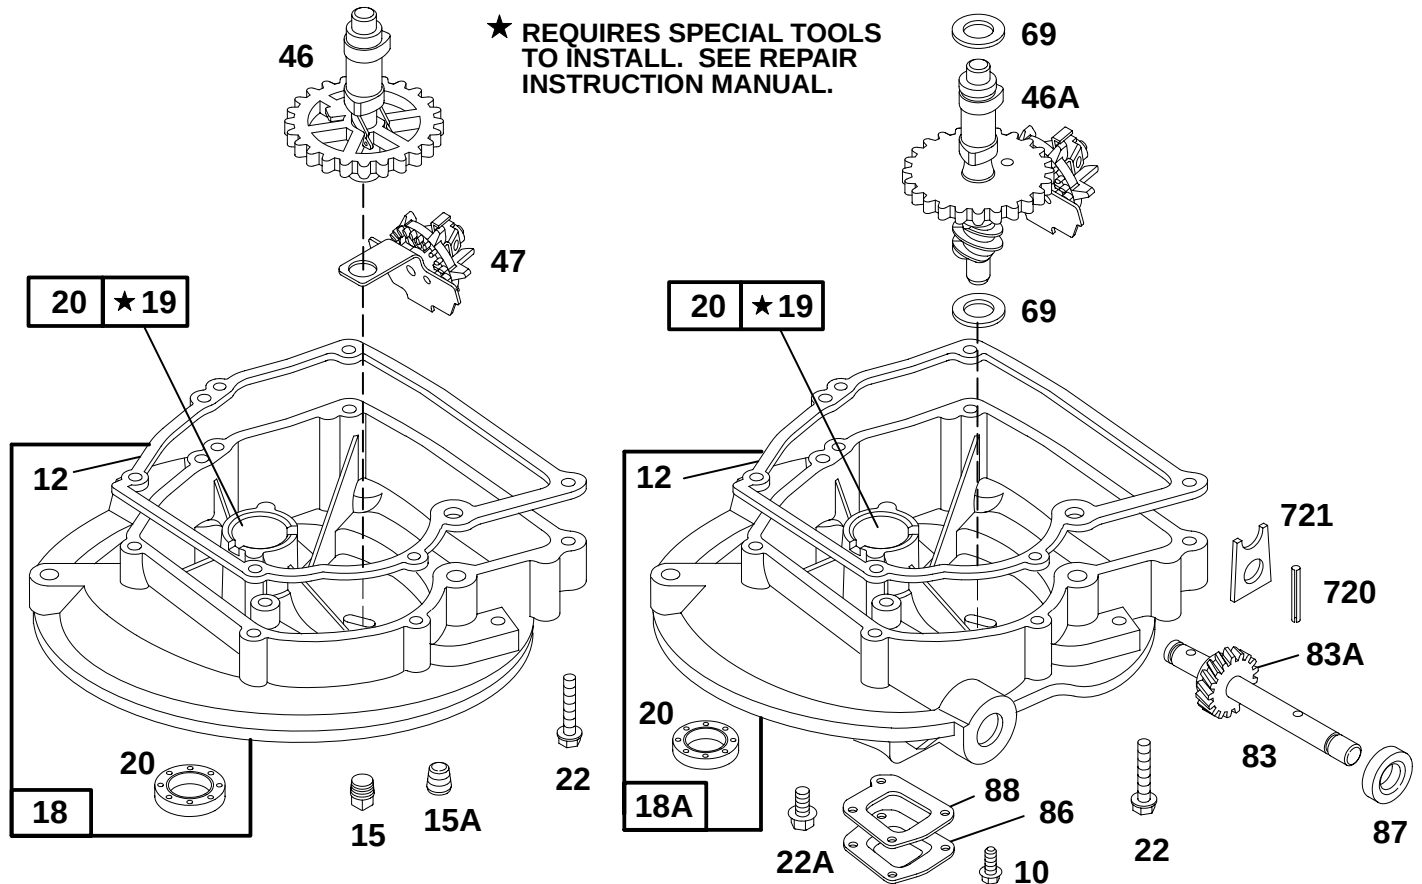
®



2

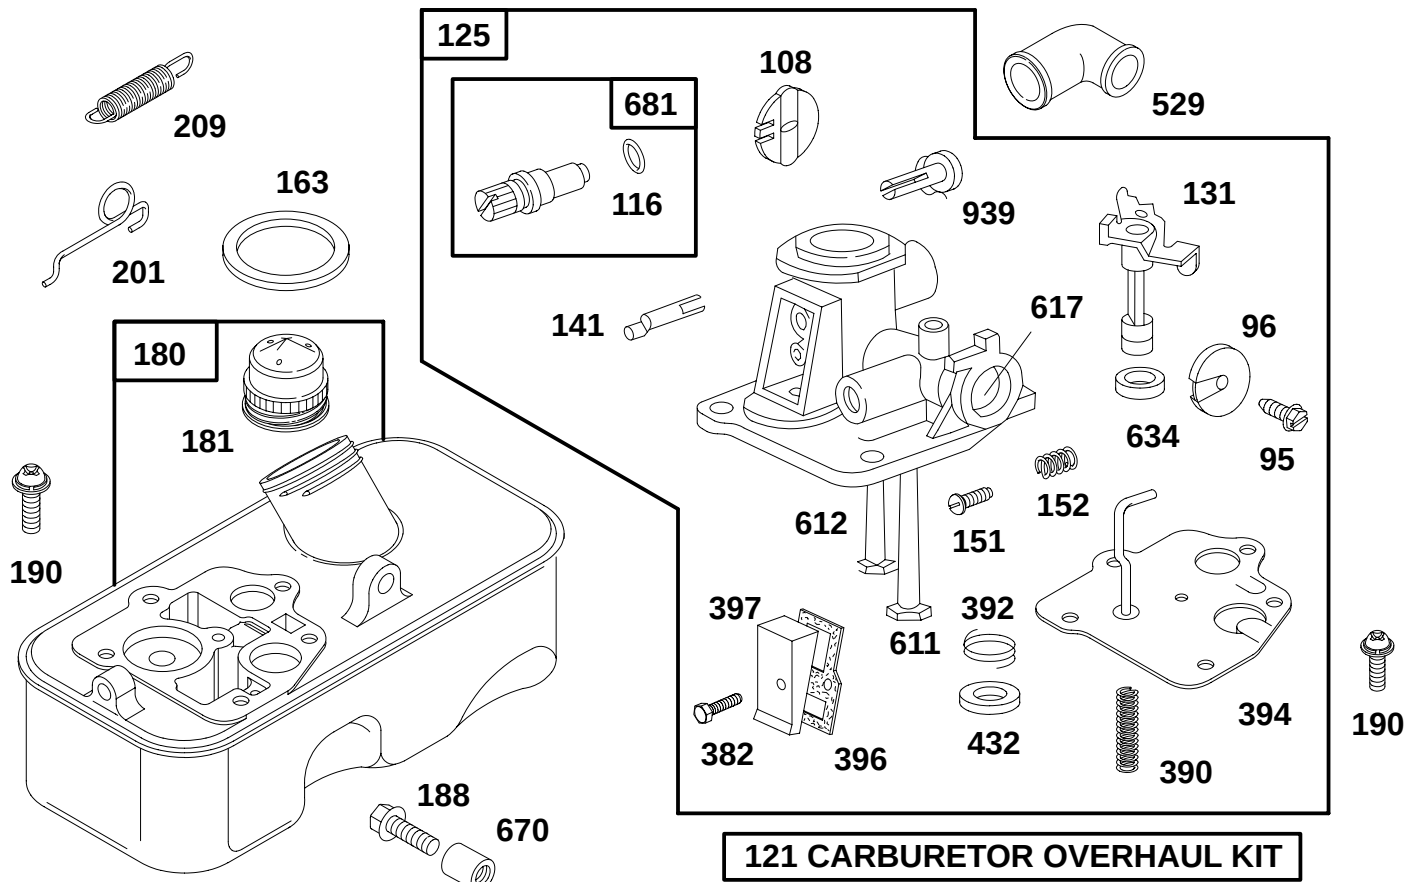
93900 to 93999

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
16		Crankshaft See Last Pages.	27	26026	Lock-Piston Pin	68	63770	Ball-Clutch
23		Flywheel-Magneto See Last Pages.	28	298909	Pin Assembly-Piston (Standard)	70	298799	Ratchet-Rewind Starter
24	222698	Key-Flywheel		298908	Pin Assembly-Piston (.005" O.S.)	71	394506	Washer-Clutch Ret.
25	298904	Piston Assy. (Standard)	29	294201	Rod Assy.-Connecting Note: For Connecting Rod with .020" Undersize Crankpin Bore-Order No. 296079.	75	223047	Washer-Spring
	298905	Piston Assy. (.010" O.S.)	32	94404	Screw-Connecting Rod	76	68238	Washer-Ratchet Sealing
	298906	Piston Assy. (.020" O.S.)	33	296676	Valve-Exhaust	333	398593	Armature-Magneto
	298907	Piston Assy. (.030" O.S.)	34	296677	Valve-Intake	334	93381	Screw-Arma. Mtg.
26	298982	Ring Set-Piston (Standard)	35	260552	Spring-Intake Valve	356	398808	Wire-Ground
	298983	Ring Set-Piston (.010" O.S.)	40	93312	Retainer-Valve Spring	363	19069	Puller-Flywheel
	298984	Ring Set-Piston (.020" O.S.)	45	230173	Tappet-Valve	377	93065	Key-Woodruff
	298985	Ring Set-Piston (.030" O.S.)	66	399671	Clutch Assembly-Rewind Starter	474	397880	Alternator Assy.
			67	394897	Housing-Starter Clutch	482A	94016	Screw-Hex. Head
						741	261533	Gear-Timing
						851	221798	Terminal-Ignition Cable
						878	393422	Wire Assy.-Alternator
						962	231277	Bushing-Brake Lever

93900 to 93999

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
10	93394	Screw—Sem	22A	93415	Screw—Mtg. Sem One Used in Auxiliary Drive Gear Sump on Model 93980 to 93989 Series Engines.	83	230831	Shaft—Drive Note: 230948 Shaft—Drive Used on Type Nos. 3115, 3123, 3124, 3126, 3128, 3132.
12	★270833	Gasket—Crankcase (.015" Thick, Standard)	46	491675	Gear—Cam Note: 493747 Gear—Cam Used on Type Nos. 0200, 0201, 0215, 0216, 0217, 0223, 0224, 0225, 0226, 0229, 0230, 0232, 3201.	83A	231278	Gear—Drive Note: 231279 Gear—Drive Used on Type Nos. 0231, 3115, 3123, 3124, 3126, 3128, 3132.
	★270895	Gasket—Crankcase (.005" Thick)	46A	396197	Cam—Cam See Last Pages.	86	221780	Cover—Sump
	★270896	Gasket—Crankcase (.009" Thick)	47	491688	Oil Slinger Gear and Bracket	87	391484	Seal—Oil
15	91084	Plug—Oil Drain (Square Head)	69	68938	Washer—Thrust	88	★270328	Gasket—Sump Cover
15A	93418	Plug—Oil Drain Hex. Socket				720	93474	Pin—Gear to Shaft
18	395384	Sump—Engine				721	221779	Stop—Drive Shaft
18A	395390	Sump—Engine Used on Model 93980 to 93989 Series Engines.						
19	293709	Bushing—Engine Sump						
20	★391483	Seal—Oil						
22	93032	Screw—Mtg. Sem						

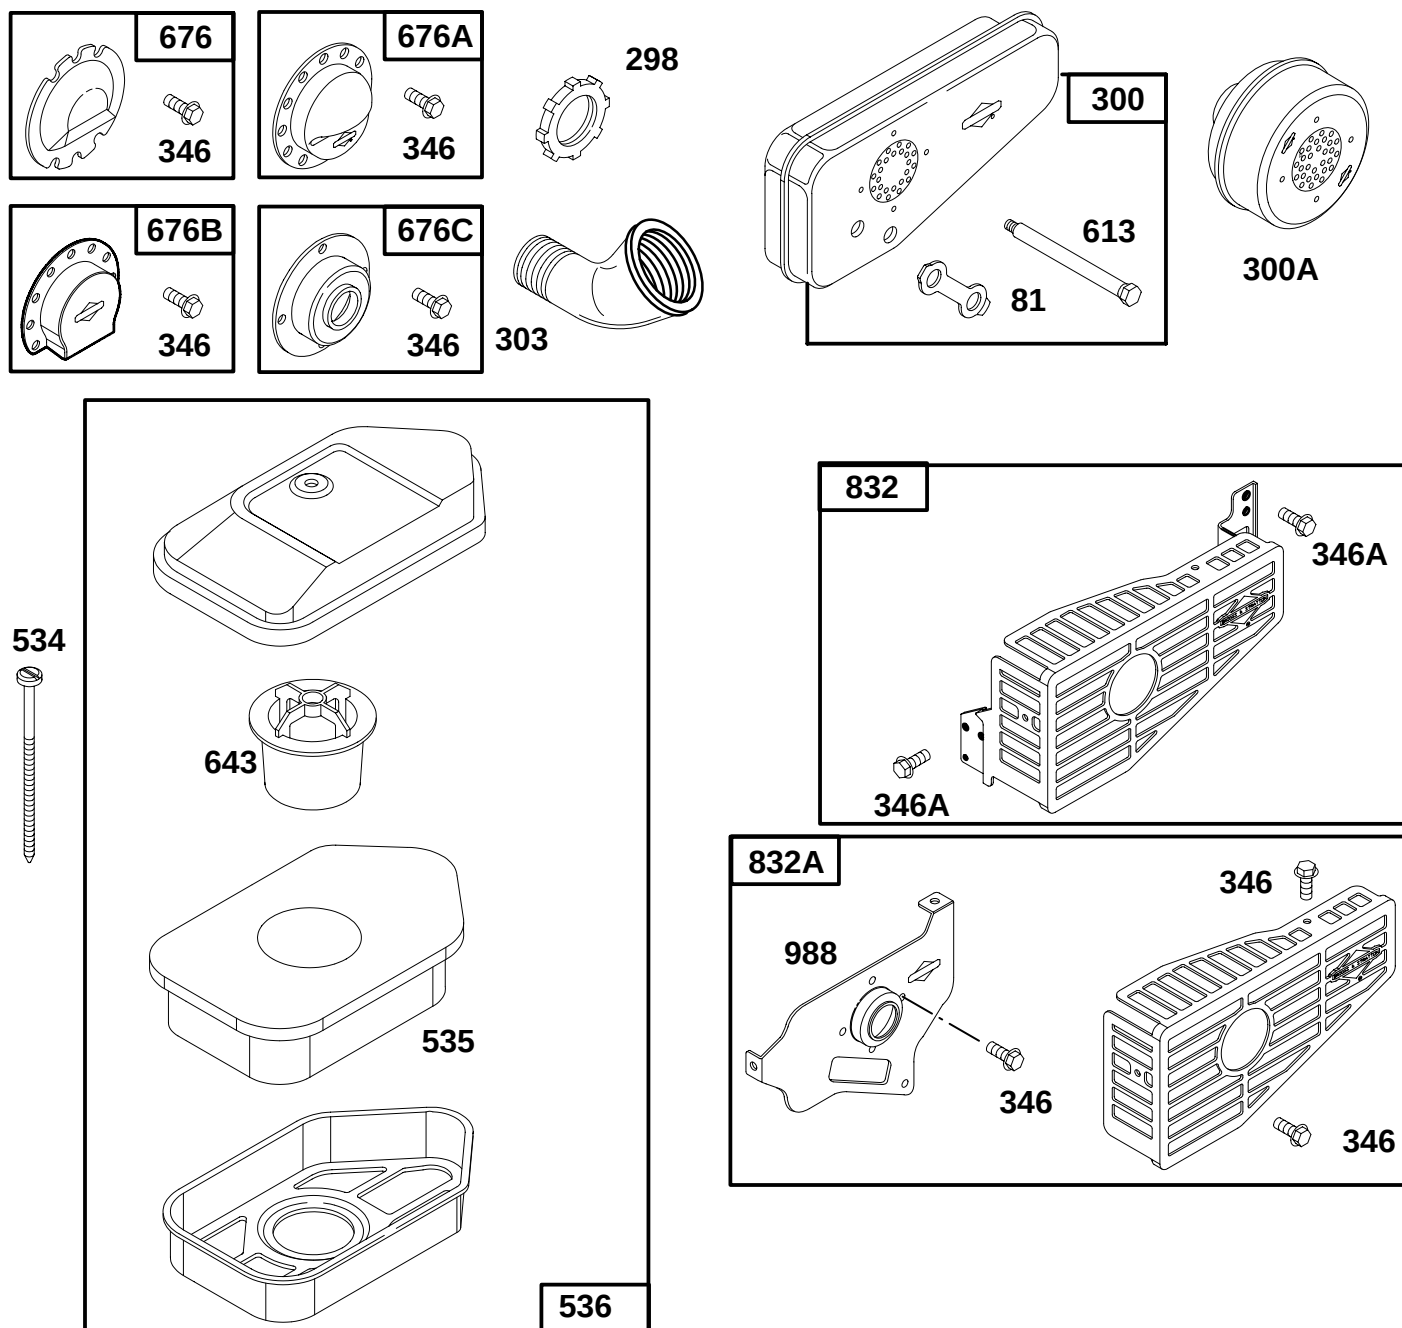
★ Included in Gasket Set—Part No. 298989.

93900 to 93999**121 CARBURETOR OVERHAUL KIT**

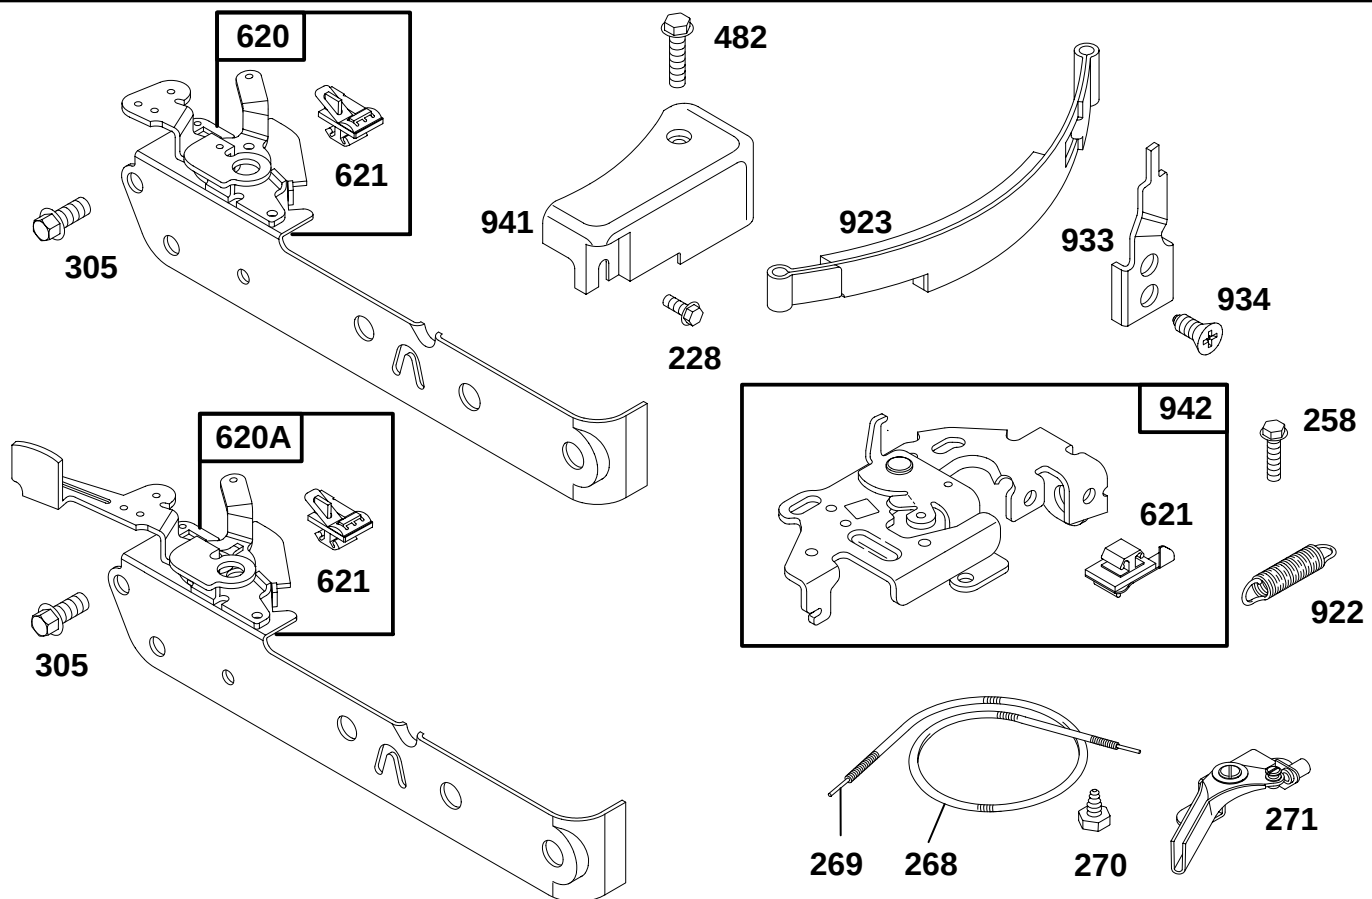
REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
95	93499	Screw–Thr. Vlv. Mtg.	201	261027	Link–Governor	397	211678	Cover–Choke Link
96	211237	Valve–Throttle		Note: 260878	Link–Gov.	432	221377	Cap–Spring
108	280370	Valve–Choke			Used on Type Nos.	529	280368	Grommet–Breather
116	●280203	O-Ring			0120, 0123, 0129,	611	297219	Pipe–Fuel (Long)
121	494623	Carburetor Overhaul Kit			0135, 0138, 0139,	612	296811	Pipe–Fuel (Short)
125	395957	Carburetor Assembly			0140, 0143, 0145,	617	●270344	Seal–Fuel Intake Tube
131	299977	Shaft and Lever–Thr.			0152, 0155, 0159,	634	270167	Washer–Throttle Shaft (Felt)
141	68908	Shaft–Choke			0217, 0223, 0224,	670	94047	Spacer–Fuel Tank
151	93524	Screw–Rd. Hd.			0226, 0229, 0230,			Used on Engines Without Band Brake.
152	260746	Spring–Throttle Adj.			3137, 4004, 4005.		Note: 94038	Spacer–Fuel Tank
163	★●271139	Gasket–Air Cleaner Mounting			See Last Pages.			Used on Engines With Band Brake.
180	396781	Tank Assembly–Fuel	209		Spring–Governor	681	●395508	Needle Valve Kit (Nylon Body)
181	298425	Cap–Fuel Tank				939	395665	Shaft Assembly–Choke
188	94102	Screw–Fuel Tank and Starter Mounting	382	93545	Screw–Choke Link Cover			
190	93440	Screw–Fuel Tank Mtg.	390	261249	Spring–Diaphragm			
			392	260455	Spring–Fuel Pump Diaphragm			
			394	●391681	Diaphragm–Carburetor			
			396	●270571	Gasket–Choke Link Cover			

● Included in Carburetor Overhaul Kit–Part No. 494623.

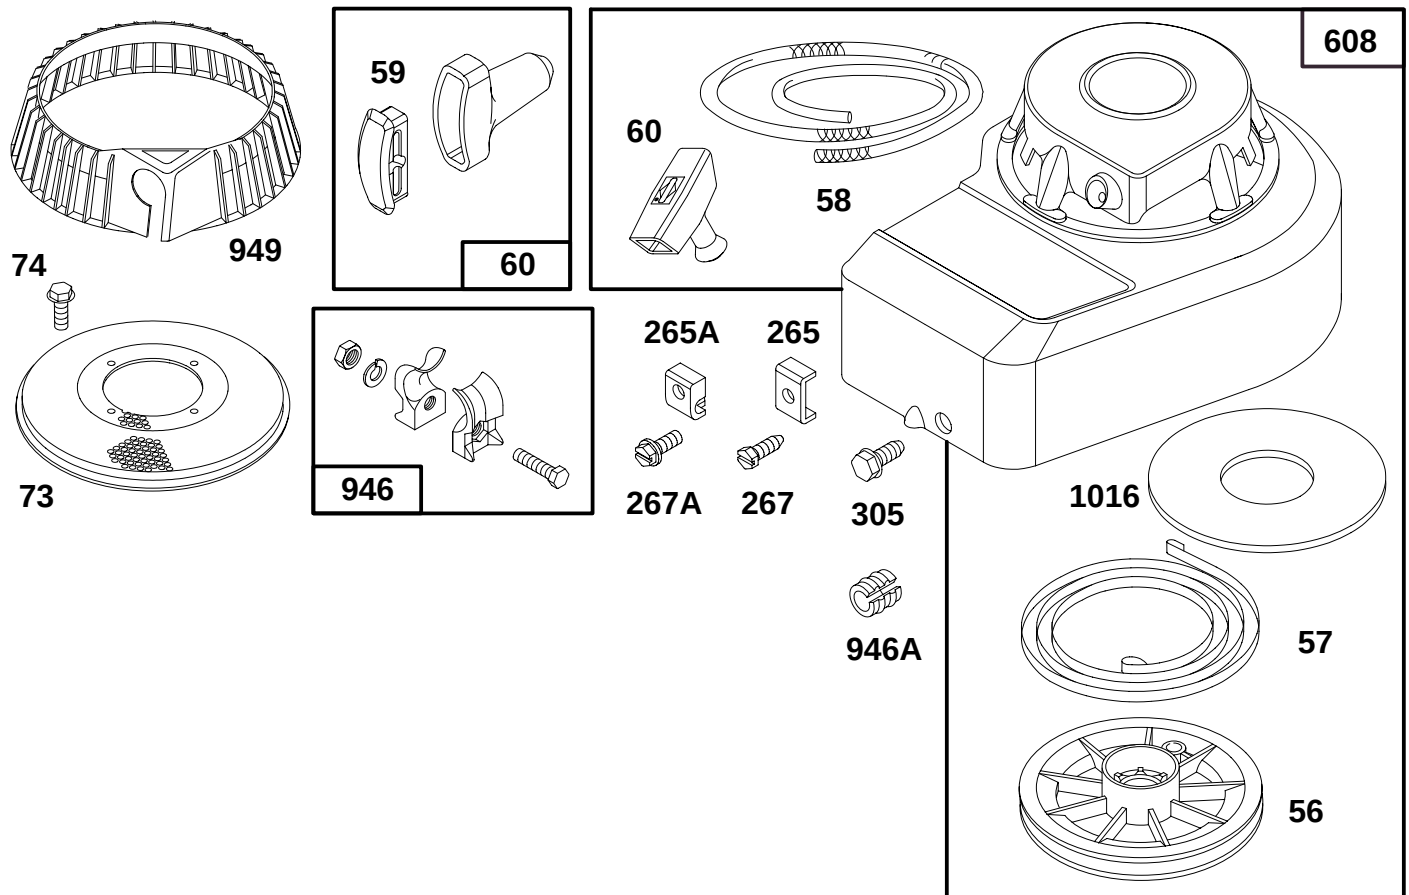
93900 to 93999



REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
81	223256	Lock-Muffler Screw	534	93865	Screw-Air Cleaner	676B	393760	Deflector-Muffler
298	220859	Locknut-Muffler	535	272235	Element-Air Cleaner	676C	397931	Deflector-Muffler
300	394644	Muffler-Exhaust	536	493492	Cleaner-Air	832	494896	Guard-Muffler
300A	394569	Muffler-Ex. (Lo-Tone)	613	93935	Screw-Muffler Mtg.	832A	493967	Guard-Muffler
303	92989	Elbow-Exhaust	643	280972	Cup-Air Cleaner	988	223600	Bracket-Muffler
346	93705	Screw-Hex. Head	676	393756	Deflector-Muffler			
346A	94602	Screw-Hex. Head	676A	396548	Deflector-Muffler			

93900 to 93999

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
228	93758	Screw—Hex. Head			Long)	482	93621	Screw—Sem
258	94018	Screw—Sem			Note: If Longer Wire is Needed, Specify	620	299974	Plate—Carburetor Control
		(Bracket to Cylinder)			Length in Inches; if	620A	299975	Plate—Carburetor Control
268	66986	Casing—Control Wire (48" Long)			Shorter Wire is Needed, Order No.	621	396847	Switch—Stop
		Note: If Longer Casing is Needed, Specify Length in Inches; if a Shorter Casing is Needed Order No.	270	63426	Locknut—Control Wire Casing	922	261647	Spring—Band Brake
		66986 and Cut to Required Length.	271	290568	Lever Assembly Control	923	394867	Brake Assembly—Band
269	26099	Wire Control (54"	305	94153	Screw—Blo. Hsg. Mtg.	933	223448	Pivot—Band Brake
						934	94037	Screw—Band Brake Pivot
						941	280395	Cover—Linkage
						942	493248	Bracket Assy.—Lever

93900 to 93999

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
56	280439	Pulley-Rewind Starter	73	221661	Screen-Rewind Starter			90832 Lockwasher
57	490179	Spring-Rewind Starter	74	93758	Screw-Sem			92278 Nut-Hex.
58	280406	Rope-Rewind Starter (81" Long)	265	22372	Clamp-Casing	946A	223294	Rope-Stop
		(For Intermediate Lengths, Cut to Required Size).	265A	213146	Clamp-Casing	949	281192	Guard-Rewind Starter (Used After Code Date 91080400).
		Note: If Longer Rope is Needed, Order No. 280399 and Cut to Required Length.	267	93469	Screw-Clamp Mtg.			Note: 280684 Guard-Rewind Starter (Used Before Code Date 91080500).
59	396892	Insert-Starter Rope	267A	94204	Screw-Clamp Mtg.	1016	490817	Spacer-Rewind Starter
60	393152	Grip-Starter Rope	305	94153	Screw-Blo. Hsg. Mtg.			
			608		Starter Assy.-Rewind			
					See Last Pages.			
			946	396526	Rope Guide Kit			
					Includes:			
					92636 Screw-Hex.			

93900 to 93999

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
16	492748	Crankshaft Note: To Replace Crankshaft Gear Pin, Order Part No. 230978 . 397224 Crankshaft Used on Type Nos. 3112, 3119, 3122, 3123, 3126, 3177, 3178, 492086 Crankshaft Used on Type Nos. 0118, 0119, 0121, 0122, 0123, 0124, 0126, 0135, 0138, 0143, 0145, 0146, 0147, 0148, 0149, 0154, 0155, 0157, 0159, 0201, 0215, 0216, 0217, 0223, 0226, 0229, 3111, 3116, 3117, 3118, 3120, 3124, 3132, 3201, 4002, 4005, 5501, 5505, 7001. 493618 Crankshaft Used on Type Nos. 0230, 3133. 493846 Crankshaft Used on Type Nos. 3121, 3125. 494564 Crankshaft (Used After Code Date 91063000). 494034 Crankshaft (Used Before Code Date 91070100). Used on Type Nos. 0129, 0140, 0150, 3127, 3131.	46A	396197	Gear–Cam (Clockwise) Note: 395317 Gear–Cam (Counterclockwise) Used on Type Nos. 0231, 3115, 3123, 3124, 3126, 3128, 3132. 209 260875 Spring–Governor Note: 260877 Spring–Gov. Used on Type Nos. 0100, 0115, 0116, 0117, 0128, 0130, 0131, 0136, 0138, 0144, 0145, 0147, 0160, 3100, 3111, 3129, 3133. 261034 Spring–Gov. Used on Type Nos. 0148, 0154, 0155, 0200, 0201, 0215, 0216, 0217, 0223, 0224, 0229, 0231, 3100, 3137, 3201, 5500, 5501, 5505. 261060 Spring–Gov. Used on Type Nos. 0118, 0119, 0120, 0122, 0126, 0127, 0129, 0135, 0142, 0143, 0150, 3116, 3119, 3178. 261105 Spring–Gov. Used on Type No. 0116. 261106 Spring–Gov. Used on Type Nos. 0124, 0133, 0146, 0230, 3112, 3113, 3114, 3115, 3117, 3118, 3120, 3121, 3122, 3123, 3124, 3125, 3127, 3128, 3130, 3131, 3132, 3134, 3136, 3177, 4001, 4002, 4004, 4005, 7001. 261320 Spring–Gov. Used on Type Nos. 0142, 0149, 3116.	608	261419 Spring–Gov. Used on Type Nos. 0225, 3135. 261948 Spring–Gov. Used on Type Nos. 0101, 0121, 0125, 0134, 0137, 0139, 0140, 0152, 0157, 0158, 3101, 3126. Starter Assy.–Rewind See Chart on Illustrated Page. Note: 493797 Starter Assy.–Rewind (1:30 o'clock, For Non-Band Brake) 493488 Starter Assy.–Rewind (3 o'clock, For Non-Band Brake) See Below For Specials. 494738 Starter Assy.–Rewind (3 o'clock, For Band Brake) 494571 Starter Assy.–Rewind (3 o'clock) Used on Type Nos. 0200, 0201, 0230, 0231, 0232. 494917 Starter Assy.–Rewind (3 o'clock) Used on Type No. 0217. 494143 Starter Assy.–Rewind (4 o'clock, For Non-Band Brake) 493479 Starter Assy.–Rewind (5 o'clock, For Band Brake) 494509 Starter Assy.–Rewind (5 o'clock, For Non-Band Brake) See Below For Specials. 493748 Starter Assy.–Rewind (5 o'clock) Used on Type Nos. 0135, 0143, 0229. 493596 Starter Assy.–Rewind (6 o'clock, For Band Brake)	
23	395653	Flywheel–Magneto Note: 394066 Flywheel–Magneto Used on Type Nos. 0120, 0123, 0129, 0135, 0138, 0139, 0140, 0143, 0145, 0150, 0152, 0155, 0159, 0217, 0223, 0224, 0226, 0229, 0230, 3137, 4004, 4005.						

93900 to 93999

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		493481 Starter Assy.– Rewind (6 o'clock, For Non-Band Brake) See Below For Specials. 493617 Starter Assy.– Rewind (6 o'clock) Used on Type Nos. 0123, 0159, 0223, 0226.			494123 Starter Assy.– Rewind (6 o'clock) Used on Type Nos. 0144, 0225. 493594 Starter Assy.– Rewind (8 o'clock, For Non-Band Brake) 493660 Starter Assy.– Rewind (8 o'clock, For Band Brake)			493493 Starter Assy.– Rewind (9 o'clock, For Band Brake) 493565 Starter Assy.– Rewind (9 o'clock, For Non-Band Brake) 493300 Starter Assy.– Rewind (12 o'clock, For Band Brake) 493469 Starter Assy.– Rewind (12 o'clock, For Non-Band Brake)