

110900 to 110999**SERVICE ENGINE****SALES MANUAL****MODEL 110900 SERIES ENGINES REPLACED WITH
STANDARD SERVICE ENGINES**

In most cases, the Original Type numbers shown may be replaced by a Service Type Number without making any changes. Necessary changes of engine parts such as crankshafts, reduction parts, blower housings, etc., are noted. Other differences, such as mufflers, elbows, deflectors, etc., are not listed but are very important for safety and engine performance. Be sure the exhaust system on the replacement engine duplicates the system originally selected by the equipment manufacturer. Parts that are suitable for additional use should be transferred. Before making any conversion, check the data shown in the column labeled "REMOVE, ADD and NOTE." See if the changes, which are shown, are actually necessary on the application in question. Often a standard service engine will be a WORKABLE replacement without converting to such things as a special fuel tank or starter position.

If the crankshaft number does not appear in the "Original Engine" column, consult the Illustrated Parts List for the correct service replacement crankshaft number.

Engine Replacement Notes:

NOTE 25: If the replacement engine supersedes to or is a Model 120000 series engine, refer to the illustrations located after the conversion data for this model series. The overall dimensions that differ, are shown in the illustrations. If after making a visual inspection and it is determined the Model 120000 series engine cannot be used because of equipment interference, the original engine should be repaired with individual parts.

NOTE 51: Replacement engine listed is not available in the State of California. Repair with individual parts.

Short Block Notes:

The SHORT BLOCK part number shown, is the assembly which can be used to rebuild the Original Type Number. If a letter appears after the short block number, it indicates the short block must be modified. The change denoted by each letter is as follows:

NOTE Y: Change Drive Shaft in Short Block. Remove 230831. Add 230870.

NOTE CC: Change Drive Shaft in Short Block. Remove 230831. Add 230952.

NOTE FF: Change Drive Shaft in Short Block. Remove 230948. Add 230831.

NOTE II: Change Drive Shaft in Short Block. Remove 230831. Add 230948.

NOTE LL: Change Drive Shaft in Short Block. Remove 230831. Add 230921.

NOTE PP: Change Drive Shaft in Short Block. Remove 230831. Add 231213.

110900 to 110999

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block		
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes	
0015	110908	261251	10M902	0015							All	3200			
0016	110908	261252	10M902	0016							All	3200			
0017	110908	261253	No Replacement Repair With Individual Parts.									All	3200		
0018	110908	261254	10M902	0018							All	3200			
0050	110988	261262	122K82	0050	1	690522	1	691778	25		All	3200			
0051	110988	261262	122K82	0051					25		All	3200			
0109	110905	261251	No Replacement Repair With Individual Parts.									All	3500		
0117	110908	261251	10M902	0015							All	3500			
0118	110908	261252	10M902	0016							All	3500			
0119	110908	261253	No Replacement Repair With Individual Parts.									All	3500		
0120	110908	261254	10M902	0018							All	3500			
0137	110988	261262	122K82	0050	1	690319	1	691778	25		All	3500			
					1	690522	1	691851							
0138	110988	261263	No Replacement Repair With Individual Parts.									All	3500		
0139	110988	261264	No Replacement Repair With Individual Parts.									All	3500		
0140	110988	261265	No Replacement Repair With Individual Parts.									All	3500		
0149	110998	261256	No Replacement Repair With Individual Parts.									All	3500		
0150	110998	261266	No Replacement Repair With Individual Parts.									All	3500		
0156	110908	261251	10M902	0015							All	3500			
0161	110988	261262	122K82	0050	1	690319	1	691778	25		All	3500			
					1	690522	1	691851							
0166	110998	261256	No Replacement Repair With Individual Parts.									All	3500		
0167	110908	261251	10M902	0015							All	3500			

110900 to 110999

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0170	110908	261253	No Replacement Repair With Individual Parts.									All	3100	
0171	110988	261264	No Replacement Repair With Individual Parts.									All	3100	
0172	110908	261254	10M902	0018							All	3100		
0173	110988	261262	No Replacement Repair With Individual Parts.									All	3100	
0174	110988	261262	122K82	0050	1	690522	1	691778	25		All	3100		
0175	110908	261253	No Replacement Repair With Individual Parts.									All	3000	
0176	110988	261262	122K82	0050	1	690522	1	691778	25		All	3000		
0177	110908	261251	10M902	0015							All	2900		
0178	110988	261262	No Replacement Repair With Individual Parts.									All	3200	
0179	110908	261252	10M902	0016							All	3000		
0180	110988	261265	No Replacement Repair With Individual Parts.									All	3500	
0181	110908	261252	10M902	0016							All	3200		
0182	110908	261254	10M902	0018							All	3000		
0183	110988	261262	No Replacement Repair With Individual Parts.									All	3000	
0184	110908	261254	10M902	0018							All	3000		
0185	110988	261263	No Replacement Repair With Individual Parts.									All	3200	
0186	110908	261252	10M902	0016							All	3100		
0187	110908	261251	10M902	0015							All	3100		
0188	110988	261262	122K82	0050	1	690522	1	691778	25		All	3300		
0189	110988	261265	No Replacement Repair With Individual Parts.									All	3100	
0190	110988	261265	No Replacement Repair With Individual Parts.									All	3200	
0191	110988	261262	No Replacement Repair With Individual Parts.									All	2900	
0192	110908	261254	No Replacement Repair With Individual Parts.									All	3300	
0193	110988	261265	No Replacement Repair With Individual Parts.									All	3500	
0194	110908	261252	10M902	0016					25		All	3100		
0195	110908	261254	10M902	0018							All	3500		
0196	110998	261266	No Replacement Repair With Individual Parts.									All	3300	
0197	110908	261254	10M902	0018							All	3100		
0198	110998	261266	No Replacement Repair With Individual Parts.									All	3300	
0199	110908	261280	No Replacement Repair With Individual Parts.									All	3500	
0200	110908	261251	10M902	0015							All	3000		
0201	110908	261281	10M902	0015							All	3100		
0202	110908	261252	10M902	0016					25		All	3500		
0203	110908	261251	10M902	0015							All	3500		
0204	110908	261251	10M902	0015							All	3500		
0205	110908	261252	10M902	0016							All	3500		
0206	110908	261252	10M902	0016							All	3500		
0207	110908	261252	10M902	0016							All	2900		
0208	110908	261252	10M902	0016							All	2900		
0209	110988	261262	122K82	0050					25		All	2900		
0210	110988	261263	No Replacement Repair With Individual Parts.									All	3300	
0211	110988	261263	No Replacement Repair With Individual Parts.									All	3500	
0212	110988	261263	No Replacement Repair With Individual Parts.									All	2900	
0213	110988	261263	No Replacement Repair With Individual Parts.									All	3300	
0214	110908	261251	10M902	0015							All	3500		
0215	110988	261262	No Replacement Repair With Individual Parts.									All	3500	
0216	110988	261262	122K82	0050	1	690319	1	691778	25		All	3500		
					1	690522	1	691851						
0217	110988	261262	No Replacement Repair With Individual Parts.									All	3500	
0218	110908	261251	10M902	0015					25		All	3500		
0219	110988	261262	122K82	0051	1	690319	1	691851	25		All	3500		
0220	110988	261265	No Replacement Repair With Individual Parts.									All	3000	
0221	110908	261254	10M902	0018							All	3000		
0222	110988	261262	No Replacement Repair With Individual Parts.									All	3000	
0223	110908	261253	No Replacement Repair With Individual Parts.									All	3100	

110900 to 110999

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0224	110988	261262	122K82	0050	1	690319	1	691851	25		All	3500		
0225	110908	261253	No Replacement Repair With Individual Parts.									All	3300	
0226	110908	261254	10M902	0018							All	3000		
0227	110908	261254	10M902	0018					25		All	3100		
0228	110985	261262	No Replacement Repair With Individual Parts.									All	3300	
0229	110985	261265	No Replacement Repair With Individual Parts.									All	3100	
0230	110908	261251	10M902	0015							All	3000		
0231	110988	261265	No Replacement Repair With Individual Parts.									All	3100	
0232	110988	261262	122K82	0051					25		All	3100		
0233	110988	261262	122K82	0050	1	690319	1	691778	25		All	3300		
					1	690522	1	691851						
0234	110985	261262	No Replacement Repair With Individual Parts.									All	3300	
0235	110988	261264	No Replacement Repair With Individual Parts.									All	3000	
0236	110988	261262	122K82	0051	1	690319	1	691778	25		All	3500		
					1	690522	1	691851						
0237	110908	261251	10M902	0015					25		All	2900		
0238	110908	261251	10M902	0015							All	2900		
0239	110988	261262	No Replacement Repair With Individual Parts.									All	2900	
0240	110985	261263	No Replacement Repair With Individual Parts.									All	3200	
0241	110908	261252	10M902	0016							All	3300		
0242	110908	261251	10M902	0015							All	3300		
0243	110985	261263	No Replacement Repair With Individual Parts.									All	3500	
0244	110988	261263	No Replacement Repair With Individual Parts.									All	3500	
0245	110988	261262	122K82	0050	1	690319	1	691778	25		All	3500		
					1	690522	1	691851						
0246	110908	261252	10M902	0016							All	3500		
0247	110908	261251	10M902	0015							All	3200		
0248	110905	261251	No Replacement Repair With Individual Parts.									All	3100	
0249	110988	261262	122K82	0050	1	690522	1	691778	25		All	2900		
0250	110908	261252	10M902	0016							All	3500		
0251	110908	261251	10M902	0015							All	3500		
0252	110995	261266	No Replacement Repair With Individual Parts.									All	3300	
0253	110908	261251	10M902	0015							All	3300		
0254	110908	261251	10M902	0015							All	3500		
0255	110908	261251	10M902	0015							All	4000		
0256	110985	261265	No Replacement Repair With Individual Parts.									All	3100	
0257	110988	261265	No Replacement Repair With Individual Parts.									All	3100	
0258	110908	261253	No Replacement Repair With Individual Parts.									All	3300	
0259	110908	261251	10M902	0015							All	3100		
0260	110908	261252	10M902	0016							All	2900		
0261	110908	261251	10M902	0015							All	3300		
0262	110908	261252	10M902	0016							All	3300		
0263	110908	261252	10M902	0016							All	3500		
0264	110988	261263	No Replacement Repair With Individual Parts.									All	3100	
0265	110988	261262	No Replacement Repair With Individual Parts.									All	3200	
0266	110908	261252	10M902	0016							All	2900		
0267	110988	261262	122K82	0051	1	690319	1	691778	25		All	3500		
					1	690522	1	691851						
0268	110905	261251	No Replacement Repair With Individual Parts.									All	3500	
0269	110988	261262	122K82	0051	1	690319	1	691778	25		All	3500		
					1	690522	1	691851						
0270	110908	261251	10M902	0015							All	3300		
0271	110908	261252	10M902	0016							All	3500		
0272	110985	261262	No Replacement Repair With Individual Parts.									All	3200	
0273	110908	261251	10M902	0015							All	3100		

110900 to 110999

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0274	110908	261252	10M902	0016							All	3500		
0275	110908	261253	No Replacement Repair With Individual Parts.								All	3300		
0276	110985	261265	No Replacement Repair With Individual Parts.								All	3100		
0277	110988	261265	No Replacement Repair With Individual Parts.								All	3100		
0278	110908	261253	No Replacement Repair With Individual Parts.								All	3300		
0279	110988	261265	No Replacement Repair With Individual Parts.								All	3100		
0280	110988	261262	122K82	0051	1	690522	1	691778	25		All	3100		
0281	110905	261251	No Replacement Repair With Individual Parts.								All	3500		
0282	110908	261254	10M902	0018							All	3300		
0283	110908	261251	10M902	0015							All	3300		
0284	110988	261262	122K82	0051	1	690522	1	691778	25		All	2900		
0285	110908	261252	10M902	0016							All	3300		
0286	110988	261262	122K82	0051					25		All	2900		
0287	110985	261263	No Replacement Repair With Individual Parts.								All	2900		
0288	110988	261263	No Replacement Repair With Individual Parts.								All	2900		
0289	110985	261265	No Replacement Repair With Individual Parts.								All	3200		
0290	110988	261265	No Replacement Repair With Individual Parts.								All	3200		
0291	110908	261254	10M902	0018							All	3500		
0292	110908	261252	10M902	0016							All	3500		
0293	110988	261262	122K82	0051	1	690522	1	691778	25		All	3200		
0294	110985	261262	No Replacement Repair With Individual Parts.								All	3200		
0295	110908	261251	10M902	0015							All	3300		
0296	110988	261262	122K82	0050	1	262665	1	691778	25		All	3500		
					1	690522	1	691851						
0297	110988	261262	No Replacement Repair With Individual Parts.								All	3700		
0298	110985	261263	No Replacement Repair With Individual Parts.								All	3100		
0299	110988	261263	No Replacement Repair With Individual Parts.								All	3100		
0300	110908	261252	10M902	0016							All	3500		
0301	110908	261254	10M902	0018							All	3300		
0302	110988	261262	No Replacement Repair With Individual Parts.								All	3000		
0303	110988	261262	122K82	0050	1	690319	1	691290	25		All	3700		
					1	690522	1	691778						
0304	110908	261251	10M902	0015							All	3500		
0305	110908	261254	10M902	0018							All	3500		
0306	110908	261252	10M902	0016							All	3500		
0307	110908	261251	10M902	0015							All	3100		
0308	110988	261262	122K82	0051	1	690522	1	691778	25		All	3100		
0309	110908	261251	10M902	0015							All	3200		
0310	110988	261262	No Replacement Repair With Individual Parts.								All	3000		
0311	110908	261253	No Replacement Repair With Individual Parts.								All	3100		
0312	110908	261251	10M902	0015							All	2900		
0313	110908	261252	10M902	0016							All	2900		
0314	110985	261262	No Replacement Repair With Individual Parts.								All	3300		
0315	110988	261262	122K82	0050	1	690319	1	691778	25		All	3300		
					1	690522	1	691851						
0316	110988	261262	No Replacement Repair With Individual Parts.								All	3700		
0317	110908	261251	10M902	0015							All	2900		
0318	110908	261252	10M902	0016							All	3000		
0319	110908	261252	10M902	0016							All	3300		
0320	110988	261262	122K82	0051	1	690522	1	691778	25		All	3500		
0321	110988	261262	122K82	0051	1	690319	1	691778	25		All	3500		
					1	690522	1	691851						
0322	110908	261252	10M902	0016							All	3500		
0323	110908	261252	10M902	0016							All	3500		
0324	110988	261262	122K82	0051	1	690522	1	691778	25		All	3200		

110900 to 110999

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0325	110985	261262	No Replacement Repair With Individual Parts.									All	3200	
0326	110908	261254	10M902	0018							All	3300		
0327	110988	261262	122K82	0050					25		All	3200		
0328	110908	261254	10M902	0018							All	3300		
0329	110908	261251	10M902	0015							All	3500		
0330	110908	261254	10M902	0018							All	3200		
0331	110985	261263	No Replacement Repair With Individual Parts.									All	3100	
0332	110908	261251	10M902	0015							All	3100		
0333	110908	261251	10M902	0015							All	3200		
0334	110908	261251	10M902	0015							All	3500		
0335	110988	261262	122K82	0051	1	690522	1	691778	25		All	3100		
0336	110908	261251	10M902	0015							All	3500		
0337	110988	261262	122K82	0051	1	690522	1	691778	25		All	3500		
0338	110905	261251	No Replacement Repair With Individual Parts.									All	3500	
0339	110988	261262	122K82	0050					25		All	3200		
0340	110908	261252	10M902	0016							All	3300		
0341	110908	261353	No Replacement Repair With Individual Parts.									All	2900	
0342	110988	261264	No Replacement Repair With Individual Parts.									All	3300	
0343	110908	261254	10M902	0018							All	3500		
0344	110988	261265	No Replacement Repair With Individual Parts.									All	3200	
0345	110985	261262	No Replacement Repair With Individual Parts.									All	3000	
0346	110988	261262	122K82	0051	1	690522	1	691778	25		All	3100		
0347	110988	261263	No Replacement Repair With Individual Parts.									All	3300	
0348	110988	261263	No Replacement Repair With Individual Parts.									All	3000	
0349	110988	261262	122K82	0051	1	690522	1	691778	25		All	3000		
0350	110988	261262	122K82	0051	1	690319	1	691778	25		All	3500		
					1	690522	1	691851						
0351	110988	261262	122K82	0051	1	690522	1	691778	25		All	3000		
0352	110908	261252	10M902	0016							All	3100		
0353	110908	261254	10M902	0018							All	2900		
0354	110908	261251	10M902	0015							All	3500		
0355	110908	261252	10M902	0016							All	3500		
0356	110908	261251	10M902	0015							All	3000		
0357	110905	261280	No Replacement Repair With Individual Parts.									All	3300	
0358	110908	261280	No Replacement Repair With Individual Parts.									All	3300	
0359	110908	261254	10M902	0018							All	3000		
0360	110988	261262	122K82	0050					25		All	3000		
0361	110908	261251	10M902	0015							All	3200		
0362	110988	261262	122K82	0051					25		All	3100		
0363	110908	261253	No Replacement Repair With Individual Parts.									All	3100	
0364	110908	261254	10M902	0018							All	3500		
0365	110988	261262	122K82	0050	1	690319	1	691851	25		All	3500		
0366	110908	261254	10M902	0018							All	3300		
0367	110908	261251	10M902	0015							All	3500		
0368	110988	261262	No Replacement Repair With Individual Parts.									All	3500	
0369	110908	261252	10M902	0016							All	3100		
0370	110908	261251	10M902	0015							All	2900		
0371	110905	261280	No Replacement Repair With Individual Parts.									All	3500	
0372	110908	261280	No Replacement Repair With Individual Parts.									All	3500	
0373	110908	261252	10M902	0016							All	3300		
0374	110908	261251	10M902	0015							All	3200		
0375	110908	261353	No Replacement Repair With Individual Parts.									All	2500	
0376	110908	261253	No Replacement Repair With Individual Parts.									All	3300	
0377	110988	261263	122K82	0051					25		All	3000		
0378	110988	261262	122K82	0050					25		All	3200		

110900 to 110999

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0379	110908	261251	10M902	0015							All	3200		
0380	110908	261353	No Replacement Repair With Individual Parts.								All	2600		
0381	110988	261262	122K82	0050	1	690522	1	691778	25		All	3100		
0382	110988	261262	No Replacement Repair With Individual Parts.								All	3500		
0383	110905	261251	No Replacement Repair With Individual Parts.								All	3200		
0384	110908	261251	10M902	0015							All	3100		
0385	110988	261262	122K82	0051	1	690319	1	691778	25		All	3500		
					1	690522	1	691851						
0386	110908	261251	10M902	0015							All	3200		
0387	110908	261252	10M902	0016							All	3500		
0388	110988	261262	122K82	0050					25		All	3100		
0389	110985	261252	No Replacement Repair With Individual Parts.								All	3100		
0390	110988	261262	No Replacement Repair With Individual Parts.								All	3100		
0391	110908	261252	10M902	0016							All	3500		
0392	110908	261252	10M902	0016							All	3100		
0393	110988	261262	No Replacement Repair With Individual Parts.								All	3000		
0394	110908	261251	10M902	0015							All	3500		
0395	110908	261251	10M902	0015							All	3100		
0396	110988	261262	122K82	0051	1	690522	1	691778	25		All	3100		
0397	110908	261251	10M902	0015							All	3100		
0398	110908	261251	10M902	0015							All	3100		
0399	110908	261251	10M902	0015							All	3300		
0400	110988	261262	122K82	0050	1	690319	1	691851	25		All	3300		
0401	110908	261251	10M902	0015							All	2900		
0402	110908	261252	10M902	0016							All	2900		
0403	110988	261263	No Replacement Repair With Individual Parts.								All	2900		
0404	110908	261251	10M902	0015							All	3300		
0405	110908	261253	No Replacement Repair With Individual Parts.								All	2600		
0406	110988	261263	122K82	0050	1	498565	1	498566	25		All	2900		
0407	110988	261262	No Replacement Repair With Individual Parts.								All	3000		
0408	110988	261263	No Replacement Repair With Individual Parts.								All	3100		
0409	110908	261251	10M902	0015					25		All	3500		
0410	110988	261262	122K82	0050	1	690319	1	691778	25		All	3500		
					1	690522	1	691851						
0411	110988	261263	122K82	0050	1	498565	1	498566	25		All	3300		
					1	690319	1	691778						
					1	690522	1	691851						
0412	110908	261251	10M902	0015							All	3500		
0413	110988	261262	No Replacement Repair With Individual Parts.								All	3000		
0414	110988	261262	122K82	0051					25		All	3100		
0415	110908	261251	10M902	0015							All	3500		
0416	110988	261263	No Replacement Repair With Individual Parts.								All	3100		
0417	110908	261252	10M902	0016							All	3100		
0418	110908	261252	10M902	0016							All	3700		
0419	110908	261251	10M902	0015							All	2900		
0420	110908	261252	10M902	0016							All	3200		
0421	110908	261254	10M902	0018							All	3100		
0422	110908	261254	10M902	0018							All	3500		
0423	110988	261262	122K82	0050					25		All	3100		
0424	110908	261253	No Replacement Repair With Individual Parts.								All	2600		
0425	110908	261253	No Replacement Repair With Individual Parts.								All	2500		
0426	110908	261252	10M902	0016							All	3500		
0427	110988	261262	122K82	0051	1	690522	1	691778	25		All	3000		
0428	110908	261280	No Replacement Repair With Individual Parts.								All	3100		
0429	110905	261280	No Replacement Repair With Individual Parts.								All	3100		

110900 to 110999

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0430	110908	261254	10M902	0018							All	3300		
0431	110988	261263	No Replacement Repair With Individual Parts.								All	3300		
0432	110905	261251	10M902	0015							All	3100		
0433	110908	261252	10M902	0016							All	3200		
0434	110908	261251	10M902	0015							All	3000		
0435	110988	261263	No Replacement Repair With Individual Parts.								All	3500		
0436	110988	261263	No Replacement Repair With Individual Parts.								All	2900		
0438	110908	261254	10M902	0018							All	3200		
0440	110908	261251	10M902	0015							All	3500		
0441	110908	261254	10M902	0018							All	3500		
0442	110985	261514	No Replacement Repair With Individual Parts.								All	3200		
0443	110988	261262	122K82	0050	1	690319	1	691290	25		All	3700		
0444	110988	261262	122K82	0051	1	690319	1	691778	25		All	3500		
					1	690522	1	691851						
0445	110988	261262	122K82	0051	1	690319	1	691778	25		All	3500		
					1	690522	1	691851						
0446	110988	261262	122K82	0051	1	690319	1	691290	25		All	3700		
0447	110988	261262	122K82	0051	1	690522	1	691778	25		All	3100		
0448	110908	261251	10M902	0015							All	3100		
0449	110988	261262	122K82	0051					25		All	3200		
0450	110988	261262	122K82	0051					25		All	3100		
0451	110988	261262	122K02	0050	1	690319	1	691778	25		All	3500		
					1	690522	1	691851						
0452	110908	261252	10M902	0016							All	3500		
0453	110988	261262	122K82	0051					25		All	3300		
0454	110988	261263	No Replacement Repair With Individual Parts.								All	2900		
0455	110988	261262	122K82	0051	1	690319	1	691851	25		All	3500		
0456	110908	261251	10M902	0015							All	3300		
0457	110988	261262	122K82	0051	1	690522	1	691778	25		All	2900		
0458	110908	261251	10M902	0015							All	2900		
0459	110908	261254	10M902	0018							All	3000		
0460	110985	261514	No Replacement Repair With Individual Parts.								All	3200		
0461	110988	261262	122K82	0050					25		All	3200		
0462	110988	261262	122K82	0050	1	690522	1	231711	25		All	3000		
0463	110908	261251	10M902	0015							All	3300		
0464	110988	261262	122K82	0051	1	690319	1	691778	25		All	3500		
					1	690522	1	691851						
0465	110908	261251	10M902	0015							All	3500		
0466	110988	261262	No Replacement Repair With Individual Parts.								All	3700		
0467	110908	261252	10M902	0016							All	3300		
0468	110988	261262	122K82	0050	1	690319	1	691778	25		All	3500		
					1	690522	1	691851						
0469	110988	261262	122K82	0051	1	690319	1	691851	25		All	3500		
0470	110988	261262	122K82	0051	1	690319	1	691778	25		All	3500		
					1	690522	1	691851						
0471	110908	261251	10M902	0015							All	3500		
0472	110908	261254	10M902	0018							All	3200		
0473	110905	261254	No Replacement Repair With Individual Parts.								All	3200		
0474	110988	261262	No Replacement Repair With Individual Parts.								All	3300		
0475	110908	261251	10M902	0015							All	3300		
0477	110985	261514	No Replacement Repair With Individual Parts.								All	3000		
0478	110908	261251	10M902	0015							All	3500		
0479	110908	261254	10M902	0018							All	3200		
0480	110908	261253	No Replacement Repair With Individual Parts.								All	3500		

110900 to 110999

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0481	110988	261262	122K82	0050					25		All	3200		
0482	110908	261251	10M902	0015							All	3300		
0483	110988	261262	122K82	0050					25		All	3300		
0484	110908	261251	10M902	0015							All	3500		
0485	110988	261262	122K82	0051	1	690319	1	691851	25		All	3500		
0486	110908	261251	10M902	0015							All	3300		
0487	110988	261262	No Replacement Repair With Individual Parts.								All	3000		
0488	110985	261262	No Replacement Repair With Individual Parts.								All	3000		
0489	110985	261262	No Replacement Repair With Individual Parts.								All	3100		
0490	110988	261262	No Replacement Repair With Individual Parts.								All	3300		
0491	110988	261262	No Replacement Repair With Individual Parts.								All	3700		
0492	110988	261353	No Replacement Repair With Individual Parts.								All	3000		
0493	110988	261262	122K82	0051	1	690319	1	691778	25		All	3500		
					1	690522	1	691851						
0494	110908	261251	10M902	0015							All	3200		
0495	110988	261262	122K82	0051	1	690522	1	691778	25		All	2900		
0496	110908	261251	10M902	0015							All	3200		
0497	110908	261252	10M902	0016							All	3200		
0498	110988	261262	122K82	0051	1	690522	1	691778	25		All	3000		
0499	110988	261263	No Replacement Repair With Individual Parts.								All	3500		
0500	110988	261262	122K82	0050	1	690522	1	691778	25		All	3200		
0501	110908	261253	No Replacement Repair With Individual Parts.								All	3500		
0502	110988	261262	122K82	0051	1	690522	1	691778	25		All	3000		
0503	110985	261514	No Replacement Repair With Individual Parts.								All	3000		
0504	110908	261252	10M902	0016							All	3500		
0505	110988	261262	122K82	0051	1	690522	1	691778	25		All	3300		
0506	110908	261252	10M902	0016							All	3500		
0507	110908	261252	10M902	0016							All	3300		
0508	110985	261262	No Replacement Repair With Individual Parts.								All	3100		
0509	110908	261252	10M902	0016							All	3100		
0510	110988	261263	No Replacement Repair With Individual Parts.								All	3100		
0511	110908	261254	10M902	0018							All	2900		
0512	110908	261251	10M902	0015							All	3500		
0513	110988	261262	No Replacement Repair With Individual Parts.								All	3000		
0514	110985	261514	No Replacement Repair With Individual Parts.								All	3000		
0515	110988	261262	122K82	0051	1	690319	1	691778	25		All	3500		
					1	690522	1	691851						
0516	110908	261251	10M902	0015							All	3500		
0517	110988	261262	122K82	0051	1	690522	1	691778	25		All	3300		
0518	110908	261252	10M902	0016							All	3100		
0519	110988	261262	122K82	0050	1	690319	1	691290	25		All	3700		
0520	110908	261251	10M902	0015							All	3300		
0521	110905	261254	No Replacement Repair With Individual Parts.								All	3200		
0522	110988	261262	122K82	0050					25		All	3200		
0523	110908	261251	10M902	0015							All	2900		
0524	110908	261251	10M902	0015							All	2900		
0525	110908	261251	10M902	0015							All	3500		
0526	110908	261252	10M902	0016					25		All	3100		
0527	110988	261263	No Replacement Repair With Individual Parts.								All	3000		
0528	110988	261262	122K82	0050					25		All	3100		
0529	110908	261641	No Replacement Repair With Individual Parts.								All	2600		
0530	110988	261262	No Replacement Repair With Individual Parts.								All	3000		
0531	110988	261649	No Replacement Repair With Individual Parts.								All	3100		
0532	110908	261648	No Replacement Repair With Individual Parts.								All	3100		
0533	110908	261252	10M902	0016							All	3700		

110900 to 110999

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0534	110985	261514	No Replacement Repair With Individual Parts.									All	3000	
0535	110908	261252	10M902	0016							All	3500		
0536	110908	261251	10M902	0015							All	3500		
0537	110908	261251	10M902	0015							All	3200		
0538	110908	261251	10M902	0015							All	3300		
0539	110988	261262	122K82	0050					25		All	3200		
0540	110905	261252	No Replacement Repair With Individual Parts.									All	3000	
0541	110908	261251	10M902	0015							All	3200		
0542	110908	261252	10M902	0016							All	3100		
0543	110988	261263	No Replacement Repair With Individual Parts.									All	2900	
0544	110988	261262	No Replacement Repair With Individual Parts.									All	3000	
0545	110908	261280	No Replacement Repair With Individual Parts.									All	3100	
0546	110988	261262	122K82	0051	1	231748	1	691778	25		All	3000		
0547	110988	261262	122K82	0051	1	231748	1	691778	25		All	3500		
					1	690319	1	691851						
0548	110988	261262	122K82	0051	1	231748	1	691778	25		All	3500		
					1	690319	1	691851						
0549	110988	261262	No Replacement Repair With Individual Parts.									All	3200	
0550	110908	261251	10M902	0015							All	3200		
0551	110908	261251	10M902	0015							All	3500		
0552	110908	261251	10M902	0015							All	3500		
0553	110988	261262	122K82	0051	1	231748	1	691778	25		All	3500		
					1	690319	1	691851						
0554	110908	261251	10M902	0015							All	3000		
0555	110908	261252	10M902	0016							All	4000		
0556	110988	261263	No Replacement Repair With Individual Parts.									All	3100	
0557	110988	261649	No Replacement Repair With Individual Parts.									All	3100	
0558	110908	261252	10M902	0016							All	3100		
0559	110988	261262	122K82	0051	1	231748	1	691778	25		All	3500		
					1	690319	1	691851						
0560	110988	261263	122K82	0051					25		All	3100		
0561	110988	261262	No Replacement Repair With Individual Parts.									All	3700	
0562	110988	261262	122K82	0050	1	231748	1	691778	25		All	3200		
0563	110908	261252	10M902	0016							All	3700		
0564	110988	261262	122K82	0051	1	231748	1	691290	25		All	4000		
					1	690319	1	691778						
0565	110988	261262	122K82	0050	1	231748	1	492893	25		All	3200		
					1	492177	1	691778						
0566	110988	261262	122K82	0051	1	231748	1	691778	25		All	3200		
0567	110908	261251	10M902	0015							All	3200		
0568	110908	261253	No Replacement Repair With Individual Parts.									All	3500	
0569	110908	261251	10M902	0015							All	3200		
0570	110908	261254	10M902	0018							All	3500		
0571	110908	261251	10M902	0015							All	3500		
0572	110988	261262	122K82	0050	1	231748	1	691778	25		All	3000		
0573	110988	261262	122K82	0051					25		All	3200		
0574	110908	261251	10M902	0015							All	3000		
0575	110908	261252	10M902	0016							All	3000		
0576	110908	261251	10M902	0015							All	3100		
0577	110908	261251	10M902	0015							All	3700		
0578	110908	261251	10M902	0015							All	2900		
0579	110905	261252	No Replacement Repair With Individual Parts.									All	3000	
0580	110988	261262	No Replacement Repair With Individual Parts.									All	3500	
0581	110908	261251	10M902	0015							All	3300		
0582	110908	261251	10M902	0015							All	3500		

110900 to 110999

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block		
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes	
0583	110988	261262	No Replacement Repair With Individual Parts.									All	3500		
0584	110908	261251	10M902	0015							All	3500			
0585	110908	261251	10M902	0015							All	3200			
0586	110988	261262	No Replacement Repair With Individual Parts.									All	3700		
1005	110908	492096	10M902	0015							All	3200			
1006	110908	492087	10M902	0016							All	3100			
1008	110908	492094	10M902	0018							All	3200			
1015	110908	492093	10M902	0015							All	3200			
1016	110908	492087	10M902	0016							All	3200			
1017	110908	490783	No Replacement Repair With Individual Parts.									All	3200		
1018	110908	492094	10M902	0018							All	3200			
1025	110902	492093	12J802	2905					25 51		All	3500			
1026	110902	492087	122K02	0516	1	492177	1	492893	25		All	3300			
1027	110902	490783	No Replacement Repair With Individual Parts.									All	3300		
1028	110902	492094	122K02	0518	1	492177	1	492893	25		All	4000			
					1	690319	1	691290							
1030	110988	261262	No Replacement Repair With Individual Parts.									All	2900		
1035	110902	261324	12J802	2905					25 51		All	3500			
1041	110908	261353	No Replacement Repair With Individual Parts.									All	2900		
1044	110902	492087	No Replacement Repair With Individual Parts.									All	3500		
1050	110988	492093	122K82	0050	1	231748	1	691778	25		All	3200			
1051	110988	492093	122K82	0051	1	231748	1	691778	25		All	3200			
1060	110988	492093	122K82	0050	1	231748	1	691778	25		All	3200	398224		
1061	110988	492093	122K82	0051	1	231748	1	691778	25		All	3200	398225	FF	
1117	110908	492096	10M902	0015							All	3500			
1118	110908	492087	10M902	0016							All	3500			
1119	110908	492097	No Replacement Repair With Individual Parts.									All	3500		
1120	110908	492094	10M902	0018							All	3500			
1123	110907	492096	No Replacement Repair With Individual Parts.									All	3500		
1137	110988	492093	122K82	0050	1	231748	1	231671	25		All	3500	398224		
					1	690319	1	691851							
1141	110988	492093	No Replacement Repair With Individual Parts.									All	3500		
1166	110908	492093	10M902	0015							All	3300			
1168	110908	490783	No Replacement Repair With Individual Parts.									All	3500		
1169	110908	492087	10M902	0016							All	3300			
1170	110907	261280	No Replacement Repair With Individual Parts.									All	3100		
1171	110908	492093	10M902	0015							All	3500			
1176	110988	492087	122K82	0050	1	231748	1	231671	25		All	3100			
1180	110902	492087	122K02	0516	1	492177	1	492893	25		All	3100			
1181	110987	492087	No Replacement Repair With Short Block and/or Individual Parts									All	3100	398227	
1183	110988	492087	No Replacement Repair With Short Block and/or Individual Parts									All	3100	398227	
1186	110907	492093	No Replacement Repair With Individual Parts.									All	3200		
1187	110902	492093	10M902	0015							All	3200			
1188	110908	492093	10M902	0015							All	3500			
1189	110902	492093	10M902	0015							All	3200			
1190	110988	492087	No Replacement Repair With Individual Parts.									All	3500		
1194	110908	492087	10M902	0016							All	3500			
1198	110908	492093	10M902	0015							All	3500			
1201	110908	492093	10M902	0015							All	3500			
1202	110902	492087	122K02	0516	1	492177	1	492893	25		All	3500			
					1	690319	1	691851							
1203	110908	492087	10M902	0016							All	3500			
1204	110908	261641	No Replacement Repair With Individual Parts.									All	2800		

110900 to 110999

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
1206	110988	492093	122K82	0051	1	690319	1	691290	25		All	3700	398225	CC
1207	110908	261353	No Replacement Repair With Individual Parts.								All	2500		
1209	110988	492087	No Replacement Repair With Individual Parts.								All	3000		
1210	110902	492087	12J802	2905					25 51		All	3500		
1211	110988	492087	No Replacement Repair With Individual Parts.								All	3300		
1212	110988	492093	122K82	0051					25		All	3200	398225	CC
1213	110908	492087	10M902	0016							All	3500		
1214	110908	492093	10M902	0015							All	3500		
1215	110908	492093	10M902	0015							All	3000		
1216	110908	492093	10M902	0015							All	3000		
1218	110988	492093	No Replacement Repair With Short Block and/or Individual Parts								All	3700	398224	
1219	110988	492093	122K82	0051	1	231748	1	231671	25		All	3500	398225	FF
						1 690319		1 691851						
1220	110908	492087	10M902	0016							All	3500		
1221	110988	492093	No Replacement Repair With Individual Parts.								All	3200		
1222	110988	492087	No Replacement Repair With Individual Parts.								All	3100		
1223	110908	492087	10M902	0016							All	3100		
1224	110908	492087	10M902	0016							All	3700		
1225	110908	492093	10M902	0015							All	3000		
1226	110907	492087	No Replacement Repair With Individual Parts.								All	3000		
1227	110902	492087	10M902	0016							All	3500		
1228	110982	492094	No Replacement Repair With Individual Parts.								All	3500		
1229	110908	492094	10M902	0018							All	3500		
1230	110908	492093	10M902	0015							All	3700		
1231	110988	492093	122K82	0051	1	231748	1	231671	25		All	3100	398225	
1232	110902	492087	10M902	0016							All	3500		
1233	110988	492093	No Replacement Repair With Individual Parts.								All	3500		
1234	110988	492093	122K82	0051	1	231748	1	231671	25		All	3200	398225	FF
1235	110902	492094	122K02	0518	1	492177	1	492893	25		All	3000		
1236	110908	490783	No Replacement Repair With Individual Parts.								All	3500		
1237	110988	492093	122K82	0051	1	231748	1	231671	25		All	3500	398225	FF
						1 690319		1 691851						
1238	110988	492093	No Replacement Repair With Individual Parts.								All	3200		
1239	110988	492093	122K82	0051	1	231748	1	231671	25		All	3000	399225	FF
1240	110908	492093	10M902	0015							All	3200		
1241	110908	492093	10M902	0015							All	3300		
1242	110988	492093	122K82	0051					25		All	3300	398225	
1243	110902	492087	122K02	0516	1	492177	1	492893	25		All	3500		
						1 690319		1 691851						
1244	110988	492093	122K82	0050	1	231748	1	231671	25		All	3200	398224	CC
1245	110908	492093	10M902	0015							All	3200		
1246	110988	492093	122K82	0051	1	231748	1	231671	25		All	3500	398225	FF
						1 690319		1 691851						
1247	110988	492093	No Replacement Repair With Short Block and/or Individual Parts								All	3700	398224	Y
1248	110988	492093	122K82	0051					25		All	2900	398225	
1249	110988	492093	122K82	0051	1	231748	1	231671	25		All	3500	398225	FF
						1 690319		1 691851						
1250	110908	492094	10M902	0018							All	3300		
1251	110902	492093	12J802	2905					25 51		All	3000		
1252	110988	492093	122K82	0051					25		All	2900	398225	
1253	110987	492093	No Replacement Repair With Individual Parts.								All	3200		
1254	110988	492093	122K82	0051	1	231748	1	231671	25		All	3500	398225	FF
						1 690319		1 691851						

110900 to 110999

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block		
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes	
1255	110988	492093	No Replacement Repair With Individual Parts.									All	3500		
1256	110902	492087	122K02	0516	1	492177	1	492893	25		All	3500			
					1	690319	1	691851							
1257	110988	492093	122K82	0050	1	690319	1	691290	25		All	3700	398224	CC	
1258	110908	492093	10M902	0015							All	3700			
1259	110908	492094	10M902	0018							All	3200			
1260	110907	492093	No Replacement Repair With Individual Parts.									All	3100		
1261	110908	492087	No Replacement Repair With Individual Parts.									All	3100		
1262	110988	492093	No Replacement Repair With Individual Parts.									All	3500		
1263	110907	492093	No Replacement Repair With Individual Parts.									All	3100		
1264	110988	492093	No Replacement Repair With Individual Parts.									All	3700		
1265	110988	492087	No Replacement Repair With Individual Parts.									All	3000		
1266	110908	492087	10M902	0016							All	3000			
1267	110988	492093	122K82	0051					25		All	3200	398225		
1268	110988	492093	122K82	0051	1	231748	1	231671	25		All	3000	398225	FF	
1269	110988	492093	122K82	0051					25		All	3200	398225		
1270	110988	492093	No Replacement Repair With Individual Parts.									All	3200		
1271	110988	492093	122K82	0051	1	231748	1	231671	25		All	3500	398225	FF	
					1	690319	1	691851							
1272	110988	492093	122K82	0051	1	231748	1	231671	25		All	3500	398225	FF	
					1	690319	1	691851							
1273	110988	492093	No Replacement Repair With Short Block and/or Individual Parts									All	3700	398224	Y
1274	110988	492093	122K82	0051	1	690319	1	691290	25		All	3700	398225	CC	
1275	110988	492093	No Replacement Repair With Individual Parts.									All	3700		
1276	110907	492094	No Replacement Repair With Individual Parts.									All	3500		
1277	110908	492093	10M902	0015							All	3500			
1278	110908	492087	10M902	0016							All	3500			
1279	110907	492087	No Replacement Repair With Individual Parts.									All	3000		
1280	110988	492087	No Replacement Repair With Individual Parts.									All	3100		
1281	110902	492087	10M902	0015							All	3100			
1282	110907	492087	No Replacement Repair With Individual Parts.									All	3100		
1283	110908	492093	10M902	0015							All	3300			
1284	110988	492093	122K82	0051	1	231748	1	231671	25		All	3700	398224	CC	
					1	690319	1	691290							
1285	110907	261280	No Replacement Repair With Individual Parts.									All	3100		
1286	110988	492087	No Replacement Repair With Individual Parts.									All	3000		
1287	110908	492087	10M902	0016							All	3000			
1288	110902	262028	No Replacement Repair With Individual Parts.									All	3100		
1289	110908	492087	10M902	0016							All	3300			
1290	110902	492093	10M902	0015							All	2900			
1291	110988	492093	122K82	0051	1	231748	1	231671	25		All	3300	399225		
1292	110902	492087	122K02	0516	1	492177	1	492893	25		All	3500			
					1	690319	1	691851							
1293	110902	262032	No Replacement Repair With Individual Parts.									All	3700		
1294	110988	492093	122K82	0051					25		All	3200	398225	CC	
1295	110987	492093	No Replacement Repair With Short Block and/or Individual Parts									All	3200	398225	CC
1296	110907	492087	No Replacement Repair With Individual Parts.									All	3500		
1297	110908	492087	10M902	0016							All	3500			
1298	110907	492087	No Replacement Repair With Individual Parts.									All	3500		
1299	110902	492093	12J802	2905					25 51		All	3500			
1300	110908	492093	10M902	0015							All	4000			
1301	110902	492087	122K02	0516	1	492177	1	492893	25		All	3500			
					1	690319	1	691851							
1302	110902	492087	10M902	0016							All	3200			

110900 to 110999

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block		
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes	
1303	110907	262028	No Replacement Repair With Individual Parts.									All	3100		
1304	110988	492093	122K82	0051	1	231748	1	231671	25		All	3000	398225		
1305	110988	492093	122K82	0051	1	231748	1	231671	25		All	3000	398225	CC	
1306	110902	490783	No Replacement Repair With Individual Parts.									All	3100		
1307	110902	492087	10M902	0016							All	3500			
1308	110908	492087	10M902	0016							All	3500			
1309	110902	262028	No Replacement Repair With Individual Parts.									All	3100		
1310	110988	492093	122K82	0050	1	690319	1	691290	25		All	3700	398224	CC	
1311	110908	492093	10M902	0015							All	3300			
1312	110902	492087	122K02	0516	1	492177	1	492893	25		All	3500			
					1	690319	1	691851							
1313	110902	490783	No Replacement Repair With Individual Parts.									All	3300		
1314	110902	492087	122K02	0516	1	492177	1	492893	25		All	3700			
					1	690319	1	691290							
1315	110902	492093	12J802	2905					25		All	3500			
									51						
1316	110908	490783	No Replacement Repair With Individual Parts.									All	3100		
1317	110908	492093	10M902	0015							All	3300			
1318	110988	492093	122K82	0051					25		All	3100	398225	CC	
1319	110988	492093	122K82	0051	1	231748	1	231671	25		All	3100	398225	FF	
1320	110908	492087	10M902	0016							All	3500			
1321	110988	492093	No Replacement Repair With Short Block and/or Individual Parts									All	3000	398225	
3015	110902	492093	10M902	0015							All	3100			
3016	110902	492087	10M902	0016							All	3100			
3017	110902	490783	No Replacement Repair With Individual Parts.									All	3100		
3018	110902	492094	10M902	0018							All	3100			
3050	110982	492093	122K82	0050	1	231748	1	231671	25		All	3100	398224		
3051	110982	492093	122K82	0051					25		All	3100	398225	II	
3052	110982	492087	No Replacement Repair With Short Block and/or Individual Parts									All	3100	398227	
3053	110982	492087	No Replacement Repair With Short Block and/or Individual Parts									All	3100	398226	
3081	110907	492093	No Replacement Repair With Individual Parts.									All	3100		
3082	110907	492087	No Replacement Repair With Individual Parts.									All	3100		
3088	110987	492093	No Replacement Repair With Short Block and/or Individual Parts									All	3100	398225	II
3107	110907	492093	No Replacement Repair With Individual Parts.									All	3500		
3108	110987	492093	No Replacement Repair With Short Block and/or Individual Parts									All	3500	398224	
3110	110987	492093	No Replacement Repair With Short Block and/or Individual Parts									All	3500	398225	FF
3111	110902	492093	10M902	0015							All	3500			
3112	110902	492087	10M902	0016							All	3500			
3113	110902	490783	No Replacement Repair With Individual Parts.									All	3500		
3114	110902	492094	10M902	0018							All	3500			
3120	110907	492093	No Replacement Repair With Individual Parts.									All	3500		
3125	110982	492093	122K82	0050	1	231748	1	231671	25		All	3500	398224		
					1	690319	1	691851							
3168	110902	492093	10M902	0015							All	3300			
3169	110982	492093	122K82	0051					25		All	3300	398225		
3170	110907	261280	No Replacement Repair With Individual Parts.									All	3100		
3171	110987	492093	No Replacement Repair With Individual Parts.									All	3000		
3172	110902	490783	No Replacement Repair With Individual Parts.									All	3100		
3173	110902	492093	10M902	0015							All	3100			
3174	110902	492093	10M902	0015							All	2900			
3175	110982	492093	122K82	0051					25		All	2900	398225		
3176	110902	492093	10M902	0015							All	3200			
3178	110987	492093	No Replacement Repair With Short Block and/or Individual Parts									All	3000	398225	FF
3179	110902	492093	10M902	0015							All	3300			
3180	110902	490783	10M902	0018							All	3100			

110900 to 110999

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
3181	110902	492093	10M902	0015							All	3300		
3182	110982	492093	122K82	0050	1	231748	1	231671	25		All	3300	398224	
3183	110982	492093	No Replacement Repair With Individual Parts.								All	3000		
3184	110902	492093	10M902	0015							All	3100		
3185	110902	492093	10M902	0015							All	3200		
3186	110907	492093	No Replacement Repair With Individual Parts.								All	3200		
3187	110902	492093	10M902	0015							All	3200		
3188	110987	492093	No Replacement Repair With Short Block and/or Individual Parts								All	3100	398225	FF
3189	110902	492093	10M902	0015							All	3200		
3191	110987	492087	No Replacement Repair With Individual Parts.								All	3100		
3192	110987	492087	No Replacement Repair With Short Block and/or Individual Parts								All	3100	398227	
3193	110902	492087	10M902	0016							All	3100		
3194	110982	492093	122K82	0051	1	231748	1	231671	25		All	3000	398225	FF
3195	110987	490783	No Replacement Repair With Short Block and/or Individual Parts								All	3100	398227	
3196	110982	492087	No Replacement Repair With Short Block and/or Individual Parts								All	3100	398227	II
3197	110902	492087	10M902	0016							All	3100		
3198	110908	490783	No Replacement Repair With Individual Parts.								All	3100		
3199	110902	492094	10M902	0018							All	3000		
3200	110982	492093	122K82	0050	1	231748	1	231711	25		All	3000	398224	PP
3201	110982	492093	122K82	0051	1	231748	1	231671	25		All	3000	398225	FF
3202	110902	492093	12J802	2905					25 51		All	3300		
3203	110902	492094	10M902	0018							All	3000		
3204	110902	492093	10M902	0015							All	3500		
3205	110902	492087	10M902	0016							All	3000		
3206	110908	492087	10M902	0016							All	3000		
3207	110902	492094	10M902	0018							All	3000		
3208	110902	492094	122K02	0518	1	492177	1	492893	25		All	3000		
3209	110902	492094	No Replacement Repair With Individual Parts.								All	3500		
3210	110902	490783	No Replacement Repair With Individual Parts.								All	3100		
3211	110982	492087	No Replacement Repair With Individual Parts.								All	3100		
3212	110902	492087	10M902	0016							All	2900		
3213	110902	492087	10M902	0016							All	3200		
3214	110982	492093	No Replacement Repair With Short Block and/or Individual Parts								All	2900	398224	Y
3215	110902	492093	10M902	0015							All	2900		
3216	110902	492093	10M902	0015							All	2900		
3217	110987	492093	No Replacement Repair With Short Block and/or Individual Parts								All	3000	398225	FF
3218	110987	492093	No Replacement Repair With Short Block and/or Individual Parts								All	2900	398225	
3219	110907	492087	No Replacement Repair With Individual Parts.								All	2900		
3220	110907	492093	No Replacement Repair With Individual Parts.								All	3200		
3221	110902	492093	10M902	0015							All	3000		
3222	110907	492093	No Replacement Repair With Individual Parts.								All	3200		
3223	110902	492093	10M902	0015							All	3200		
3224	110907	492093	No Replacement Repair With Individual Parts.								All	3200		
3225	110987	492087	No Replacement Repair With Individual Parts.								All	3100		
3226	110982	492093	122K82	0051					25		All	3100	398225	
3227	110982	492093	No Replacement Repair With Short Block and/or Individual Parts								All	3000	398225	LL
3228	110902	420783	10M902	0018							All	3200		
3229	110987	492093	No Replacement Repair With Individual Parts.								All	3000		
3230	110907	492093	No Replacement Repair With Individual Parts.								All	3200		
3231	110987	492093	No Replacement Repair With Short Block and/or Individual Parts								All	3100	398225	Y
3232	110907	261280	No Replacement Repair With Individual Parts.								All	3100		
3233	110982	492093	122K82	0051	1	231748	1	261711	25		All	3000	398225	PP
3234	110902	262028	No Replacement Repair With Individual Parts.								All	3100		
3235	110902	492093	10M902	0015							All	3100		

110900 to 110999

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
3236	110902	492087	10M902	0016							All	3100		
3237	110982	492093	122K82	0051					25		All	3100	398225	
3238	110907	261280	No Replacement Repair With Individual Parts.								All	3100		
3239	110902	492094	10M902	0018							All	3000		
3240	110902	492093	10M902	0015							All	3300		
3241	110902	492087	10M902	0016							All	3500		
3242	110908	492087	10M902	0016							All	3500		
3243	110902	490783	No Replacement Repair With Individual Parts.								All	3000		
3244	110902	492087	10M902	0016							All	3000		
3245	110907	262028	No Replacement Repair With Individual Parts.								All	3100		
3246	110907	262028	No Replacement Repair With Individual Parts.								All	3100		
3247	110907	262028	No Replacement Repair With Individual Parts.								All	3100		
3248	110902	492093	10M902	0015							All	3500		
3249	110902	492087	10M902	0016							All	3100		
3250	110982	492093	122K82	0051	1	231748	1	231671	25		All	3500	398224	FF
					1	690319	1	691851						
3251	110987	492093	No Replacement Repair With Short Block and/or Individual Parts								All	3100	398224	
3252	110908	492093	10M902	0015							All	3200		
3253	110902	492093	10M902	0015							All	3200		
3254	110902	492093	10M902	0015							All	3500		
3255	110902	262028	No Replacement Repair With Individual Parts.								All	3100		
3256	110988	492093	No Replacement Repair With Short Block and/or Individual Parts								All	3100	398224	Y
3257	110902	490783	No Replacement Repair With Individual Parts.								All	3100		
3258	110902	492093	10M902	0015							All	3200		
3259	110902	492087	10M902	0016							All	3100		
3260	110982	492093	122K82	0051	1	231748	1	231711	25		All	3100	398225	PP
3911	110902	492093	10M902	0015							All	3200		
3912	110902	492093	10M902	0015							All	3300		
3913	110907	492093	No Replacement Repair With Individual Parts.								All	3300		
3914	110902	492093	10M902	0015							All	3300		
3915	110902	492093	10M902	0015							All	3300		
3916	110907	492093	No Replacement Repair With Individual Parts.								All	3300		
3975	110902	492093	10M902	0015							All	3300		
5911	110908	261353	No Replacement Repair With Individual Parts.								All	3000		
5912	110982	492093	No Replacement Repair With Individual Parts.								All	3300		