

**130200 to 130299**

**SERVICE ENGINE**



**SALES MANUAL**

**MODEL 130200 SERIES ENGINES REPLACED WITH  
 STANDARD SERVICE ENGINES**

In most cases, the Original Type numbers shown may be replaced by a Service Type Number without making any changes. Necessary changes of engine parts such as crankshafts, reduction parts, blower housings, etc., are noted. Other differences, such as mufflers, elbows, deflectors, etc., are not listed but are very important for safety and engine performance. Be sure the exhaust system on the replacement engine duplicates the system originally selected by the equipment manufacturer. Parts that are suitable for additional use should be transferred. Before making any conversion, check the data shown in the column labeled "REMOVE, ADD and NOTE." See if the changes, which are shown, are actually necessary on the application in question. Often a standard service engine will be a WORKABLE replacement without converting to such things as a special fuel tank or starter position.

If the crankshaft number does not appear in the "Original Engine" column, consult the Illustrated Parts List for the correct service replacement crankshaft number.

**Engine Replacement Notes:**

- NOTE 11:** Drill and tap end of PTO 3/8-24 (15/16" deep).
- NOTE 15:** For all Go-Karts use only a Model 136200 series engine as a replacement, regardless of the original Model.
- NOTE 16:** Gear Red. @ 12 o'clock.
- NOTE 17:** Gear Red. @ 3 o'clock.
- NOTE 22:** If the gear reduction parts are suitable for additional service, use model 121412 type no. 0014 and transfer the reduction parts from the original engine.
- NOTE 25:** If the replacement engine supersedes to or is a Model 120000 series engine, refer to the illustrations located after the conversion data for this model series. The overall dimensions that differ, are shown in the illustrations. If after making a visual inspection and it is determined the Model 120000 series engine cannot be used because of equipment interference, the original engine should be repaired with individual parts.
- NOTE 113:** Gear Red. @ 6 o'clock.

**Short Block Notes:**

The SHORT BLOCK part number shown, is the assembly which can be used to rebuild the Original Type Number. If a letter appears after the short block number, it indicates the short block must be modified. The change denoted by each letter is as follows:

**130200 to 130299**

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0015	130202	260938	126332	0036					15 25		All	4000		
0016	130202	260938	126332	0036					15 25		01	4000		
0017	130202	260938	No Replacement Repair With Individual Parts.						15		01	4000		
0020	130202	261299	No Replacement Repair With Individual Parts.						15		01	3500	491150	
0023	130212	260938	126312	0023					15 25		01	4000		
0024	130212	260987	121312	0014					15 25		01	4000	491149	
0025	130207	261142	121337	0050					15 25		01	4000		
0035	130232	260939	126332	0035					15 25		All	4000	491147	
0036	130232	260958	126332	0036					15 25		All	4000		
0037	130232	260941	No Replacement Repair With Individual Parts.						15		All	4000		
0038	130232	260942	121332	0033					15 25		All	3700	491148	
0039	130232	261234	No Replacement Repair With Individual Parts.						15		All	3300		
0040	130232	260942	121332	0033					15 25		All	3700	491148	
0049	130252	260987	126352	0049					15 22 25		All	4000	491149	

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0070	130292	260938	No Replacement Repair With Individual Parts.					15			01	4000		
0071	130292	260938	No Replacement Repair With Individual Parts.					15			01	4000		
0075	130202	260938	126332	0036					15		01	3600		
									25					
0110	130201	260938	126332	0036					15		All	3600		
									25					
0111	130202	260938	126332	0036					15		01	3600		
									25					
0112	130232	260939	126332	0035					15		01	3600	491147	
									25		02	3600		
											03	3600		
											04	3600		
											05	3600		
											06	3600		
											07	3600		
											08	3300		
											09	3600		
											10	3600		
											11	3600		
											12	3600		
											13	3600		
0113	130232	260958	126332	0036					15		01	3600		
									25		02	3600		
											03	3300		
											04	3600		
											05	4000		
											06	3400		
											07	3600		
											08	3600		
											09	3600		
											10	3600		
											11	3600		
											12	3600		
											13	3600		
											14	3000		
											15	3600		
											16	3600		
											17	3000		
											18	3600		
											19	3600		
0114	130232	260941	No Replacement Repair With Individual Parts.					15			01	3600		
											02	3600		
											03	3000		
											04	4000		
											05	3600		
											06	3600		
0115	130232	260942	121432	0033					15		01	3600	491148	
									25		02	3600		
											03	3600		
											04	3600		
											05	3600		
											06	3000		
0116	130252	260987	126352	0049					15		01	3600	491149	
									22		02	2400		
									25		03	3600		
											04	3600		
											05	3300		
0117	130292	260938	No Replacement Repair With Individual Parts.					15			01	3600		
0119	130203	261118	No Replacement Repair With Individual Parts.					15			01	3600		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0120	130252	260987	126352	0049					15 22 25		01	3600		
0121	130205	261118	No Replacement Repair With Individual Parts.						15		01	3600		
0122	130292	260938	No Replacement Repair With Individual Parts.						15		01	3600		
0123	130207	261118	121337	0050					15 25		01	3600		
0124	130232	260958	126332	0036					15 25		01	3600		
0125	130292	260938	No Replacement Repair With Individual Parts.						15		01 02 03 04 05 06 07	3800 3600 3600 3600 4000 3800 3800		
0126	130292	260938	No Replacement Repair With Individual Parts.						15		01	4000		
0127	130202	260938	126332	0036					15 25		All	3600		
0128	130232	260958	126332	0036					15 25		01 02 03 04	4000 4000 3600 3400		
0129	130202	260938	No Replacement Repair With Individual Parts.						15		01	4000		
0130	130232	260958	No Replacement Repair With Individual Parts.						15		All	3800		
0131	130232	260958	126332	0036					15 25		01 02 03 04 05	3600 3600 3600 3400 3200		
0132	130202	260938	126332	0036					15 25		01 02 03 04 05 06 07	4000 4000 3600 3600 3600 3600 4000		
0133	130202	260938	126332	0036					15 25		01	4000		
0134	130231	260958	126332	0036					15 25		All	3600		
0135	130202	260938	126332	0036					15 25		01 02 03 04 05 06 07 08 09 10 11	3600 4000 4000 4000 4000 4000 3600 4000 4000 4000 3600		
0136	130202	260938	126332	0036					15 25		01 02	4000 3800		
0137	130202	260938	126332	0036					15 25		01	4000		
0138	130232	260958	126332	0036					15 25		01 02	4000 3400		
0139	130232	260942	121332	0033					15 25		01	3300	491148	

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0140	130202	260938	126332	0036					15 25		01 02 03	3800 4000 3800		
0141	130292	260938	No Replacement Repair With Individual Parts.						15		01 02 03 04 05 06 07 08 10 11	3600 4000 3800 3600 3600 3600 3600 3600 3600 3600		
0142	130202	260938	126332	0036					15 25		01 02	3000 3600		
0143	130202	260938	126332	0036					15 25		01	3600		
0144	130202	260938	126332	0036					15 25		01	4000		
0145	130202	260938	126332	0036					15 25		01	3600		
0146	130202	260938	126332	0036					15 25		01	4000		
0147	130202	260938	126332	0036					15 25		01	3600		
0148	130212	260938	126312	0023					15 25		01	3600		
0149	130212	260938	126312	0023					15 25		All	3600		
0150	130231	260958	126332	0036					15 25		01	3600		
0151	130202	260938	126332	0036					15 25		01	4000		
0152	130202	260938	126332	0036					15 25		01	4100		
0153	130202	260938	126332	0036					15 25		01 02 03 04	4000 4000 3600 3800		
0154	130232	260958	126332	0036					15 25		01	3600		
0155	130202	260938	126332	0036					15 25		01	3000		
0156	130231	260939	126332	0035					15 25		All	3600	491147	
0157	130231	260942	121332	0033					15 25		01	3600	491148	
0158	130202	260938	126332	0036					15 25		All	3600		
0159	130292	260938	No Replacement Repair With Individual Parts.						15		01 02 03 04 05 06 07 08 09	3500 3500 4000 4000 4000 3600 4000 3500 3800		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0160	130232	260942	121332	0033					15 25		01	3000	491148	
0161	130202	260938	126332	0036					15 25		01 02 03	3600 3600 3000		
0162	130202	260938	126332	0036					15 25		All	4000		
0163	130202	260938	126332	0036					15 25		01 02 03	4000 4000 3600		
0164	130232	260958	126332	0036					15 25		All	3600		
0165	130202	260938	126332	0036					15 25		01 02 03	3600 4000 3000		
0166	130232	260958	126332	0036					15 25		01	3600		
0167	130202	260938	126332	0036					15 25		01	2900		
0168	130202	260938	126332	0036					15 25		01	4000		
0169	130232	260942	121332	0033					15 25		01	3600	491148	
0170	130232	260958	126332	0036					15 25		All	3600		
0171	130232	260939	126332	0035					15 25		01	3600	491147	
0172	130202	260938	126332	0036					15 25		01	4000		
0173	130202	260938	126332	0036					15 25		01	4000		
0174	130232	260941	No Replacement Repair With Individual Parts.						15		01 02 03 04 05 06 07	3600 3600 4100 4000 3600 3600 3600		
0175	130202	260938	126332	0036					15 25		01	3600		
0176	130231	260941	No Replacement Repair With Individual Parts.						15		01	3600		
0177	130202	260938	126332	0036					15 25		01	4000		
0178	130232	260939	126332	0035					15 25		01	3900	491147	
0179	130231	260939	126332	0035					15 25		01	3600	491147	
0180	130232	260941	No Replacement Repair With Individual Parts.						15		01 02 03	3600 3600 4000		
0181	130252	260987	No Replacement Repair With Individual Parts.						15		01	4000	491149	
0182	130231	260939	126332	0035					15 25		All	3600	491147	
0183	130231	260942	121332	0033					15 25		01	3600	491148	
0184	130202	260938	126332	0036					15 25		All	3600		
0185	130202	260938	No Replacement Repair With Individual Parts.						15		All	4000		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0186	130232	260958	126332	0036					15 25		01	4000		
0187	130202	260938	126332	0036					15 25		01 02	3600 3000		
0188	130202	260938	126332	0036					15 25		01	4000		
0189	130212	260938	126312	0023					15 25		01	3600		
0190	130202	260938	126332	0036					15 25		01	3600		
0191	130201	260938	126332	0036					15 25		01	3600		
0192	130232	260958	126332	0036					15 25		All	4000		
0193	130252	260987	126352	0049					15 22 25		01	4000	491149	
0194	130202	260938	126332	0036					15 25		01	3600		
0195	130202	260938	126332	0036					15 25		01	4000		
0196	130202	260938	No Replacement Repair With Individual Parts.						15		All	4000		
0197	130231	260942	121332	0033					15 25		01	3600	491148	
0198	130202	260938	126332	0036					15 25		01 02 03 04 05 06	4000 4000 3600 4000 3600 4000		
0199	130202	260938	126332	0036					15 25		01 02	4000 3000		
0200	130202	260938	126332	0036					15 25		01 02 03 04 05	4000 3600 3600 3600 3600		
0201	130232	260942	121332	0033					15 25		01	3700	491148	
0202	130251	260987	126352	0049					15 16 22 25		01	3600	491149	
0203	130232	260958	No Replacement Repair With Individual Parts.						15		01	2800		
0204	130202	260938	126332	0036					15 25		01	4000		
0205	130202	260938	No Replacement Repair With Individual Parts.						15		01	3600		
0206	130232	260958	126332	0036					15 25		01	4000		
0207	130202	260938	126332	0036					15 25		01	2900		
0208	130292	260938	No Replacement Repair With Individual Parts.						15		01	4000		
0209	130202	260938	126332	0036					15 25		All	4000		
0210	130232	260958	126332	0036					15 25		01	3600		
0211	130202	260938	126332	0036					15 25		All	4000		
0212	130232	260958	No Replacement Repair With Individual Parts.						15		01	3600		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0213	130231	260941	No Replacement Repair With Individual Parts.						15		All	3600		
0214	130252	260987	No Replacement Repair With Individual Parts.						15		01	4000	491149	
0215	130202	260938	126332	0036					15		All	4000		
									25					
0216	130202	260938	126332	0036					15		01	4000		
									25					
0217	130231	260941	No Replacement Repair With Individual Parts.						15		All	3600		
0218	130202	260938	126332	0036					15		01	4000		
									25					
0219	130232	260942	121332	0033					15		01	3600	491148	
									25					
0220	130231	260958	126332	0036					15		All	3600		
									25					
0221	130232	260958	No Replacement Repair With Individual Parts.						15		01	3600		
0222	130232	260958	126332	0036					15		01	4000		
									25					
0223	130202	260938	126332	0036					15		01	4000		
									25					
0224	130292	260938	No Replacement Repair With Individual Parts.						15		01	4000		
0225	130202	260938	126332	0036					15		All	4000		
									25					
0226	130202	260938	126332	0036					15		01	4000		
									25		02	4000		
											03	3600		
											04	3600		
0227	130252	260987	No Replacement Repair With Individual Parts.						15		01	3300	491149	
0228	130232	260958	126332	0036					15		01	3600		
									25		02	3400		
0229	130212	260938	No Replacement Repair With Individual Parts.						15		01	3600		
0230	130232	261046	No Replacement Repair With Individual Parts.						15		01	4000		
0231	130202	260938	126332	0036					15		01	4000		
									25					
0232	130212	260938	126312	0023					15		All	3600		
									25					
0233	130212	260938	No Replacement Repair With Individual Parts.						15		01	3600		
0234	130292	260938	No Replacement Repair With Individual Parts.						15		01	3500		
0235	130202	260938	No Replacement Repair With Individual Parts.						15		01	4000		
											02	3600		
0236	130202	260938	126332	0036					15		01	4000		
									25					
0237	130202	260938	No Replacement Repair With Individual Parts.						15		All	4000		
0238	130232	260958	126332	0036					15		All	4000		
									25					
0239	130232	260958	No Replacement Repair With Individual Parts.						15		01	3600		
0240	130232	260958	126332	0036					15		01	4000		
									25					
0241	130202	260938	126332	0036					15		01	4000		
									25					
0242	130202	260938	126332	0036					15		01	4000		
									25					
0243	130202	260938	126332	0036					15		01	4000		
									25					
0244	130202	260938	126332	0036					15		01	4000		
									25					
0245	130232	260958	No Replacement Repair With Individual Parts.						15		All	4000		
0246	130232	260942	121332	0033					15		01	3300	491148	
									25		02	3200		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0247	130202	260938	126332	0036					15 25		01	3600		
0248	130232	260958	126332	0036					15 25		01	3600		
0249	130292	260938	No Replacement Repair With Individual Parts.						15		01	3500		
0250	130202	260938	126332	0036					15 25		01	4000		
0251	130231	260958	126332	0036					15 25		01	3600		
0252	130202	260938	126332	0036					15 25		01	4000		
0253	130202	260938	126332	0036					15 25		01	4000		
0254	130202	260938	126332	0036					15 25		All	4000		
0255	130232	260958	No Replacement Repair With Individual Parts.						15		01	3600		
0256	130232	260958	126332	0036					15 25		01	3400		
0257	130232	260958	126332	0036					15 25		01	4000		
0258	130232	260942	121332	0033					15 25		01	3800	491148	
0259	130232	260958	No Replacement Repair With Individual Parts.						15		01	4000		
0260	130202	260938	126332	0036					15 25		01	4000		
0261	130202	260938	126332	0036					15 25		01	4000		
0262	130232	260958	126332	0036					15 25		All	3600		
0263	130202	260938	126332	0036					15 25		All	4000		
0264	130202	260938	126332	0036					15 25		01	4000		
0265	130231	260939	126332	0035					15 25		All	3600	491147	
0266	130202	260938	No Replacement Repair With Individual Parts.						15		01	4000		
0267	130232	260958	No Replacement Repair With Individual Parts.						15		01	4000		
0268	130232	260958	126332	0036					15 25		01	3800		
0269	130232	260958	No Replacement Repair With Individual Parts.						15		01	4000		
0270	130231	260958	126332	0036					15 25		01	3800		
0271	130202	260938	126332	0036					15 25		All	4000		
0272	130202	260938	126332	0036					15 25		01	4000		
0273	130232	260958	126332	0036					15 25		All	3500		
0274	130202	260938	126332	0036					15 25		01	4000		
0275	130202	260938	126332	0036					15 25		01	4000		
0276	130202	260938	No Replacement Repair With Individual Parts.						15		01	4000		
0277	130202	260938	No Replacement Repair With Individual Parts.						15		01	4000		
0278	130202	260938	No Replacement Repair With Individual Parts.						15		01	3600		
0279	130202	260938	126332	0036					15 25		01	4000		



130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0280	130202	260938	126332	0036					15 25		01	4000		
0281	130202	260938	126332	0036					15 25		01	3600		
0282	130212	260938	No Replacement Repair With Individual Parts.						15		01	3600		
0283	130202	260938	No Replacement Repair With Individual Parts.						15		01	4000		
0284	130232	260958	No Replacement Repair With Individual Parts.						15		01	4000		
0285	130212	260938	No Replacement Repair With Individual Parts.						15		01	4000		
0286	130212	260938	No Replacement Repair With Individual Parts.						15		01	3600		
0287	130232	260958	No Replacement Repair With Individual Parts.						15		01	3400		
0288	130202	260938	No Replacement Repair With Individual Parts.						15		01	4000		
0289	130202	260938	No Replacement Repair With Individual Parts.						15		01	4000		
0290	130232	260958	No Replacement Repair With Individual Parts.						15		01	3600		
0291	130231	260942	121332	0033					15 25		01	3600	491148	
0292	130232	260958	126332	0036					15 25		01	3600		
0293	130232	260958	No Replacement Repair With Individual Parts.						15		01	4000		
0294	130232	260958	No Replacement Repair With Individual Parts.						15		01	4000		
0295	130232	260942	121332	0033					15 25		01	3700	491148	
0296	130202	260938	No Replacement Repair With Individual Parts.						15		01	4000		
0297	130202	260938	No Replacement Repair With Individual Parts.						15		01	4000		
0298	130232	260958	No Replacement Repair With Individual Parts.						15		01	3400		
0299	130212	260938	No Replacement Repair With Individual Parts.						15		01	4000		
0300	130232	260958	126332	0036					15 25		01	3600		
0301	130292	260938	No Replacement Repair With Individual Parts.						15		01	4000		
0303	130232	260958	No Replacement Repair With Individual Parts.						15		01	4000		
0304	130232	260958	No Replacement Repair With Individual Parts.						15		01	4000		
0305	130232	260958	No Replacement Repair With Individual Parts.						15		01	4000		
0306	130212	260938	No Replacement Repair With Individual Parts.						15		01	4000		
0307	130202	260938	No Replacement Repair With Individual Parts.						15		01	4000		
0308	130202	260938	No Replacement Repair With Individual Parts.						15		01	4000		
0309	130232	260939	126332	0036					15 25		01	3600	491147	
0310	130202	260938	126332	0036					15 25		01	4000		
0311	130232	260958	126332	0036					15 25		01	3600		
0312	130232	260958	126332	0036					15 25		01	3600		
0313	130202	260938	126332	0036					15 25		All	4000		
0314	130232	260958	126332	0036					15 25		All	3600		
0316	130232	260939	126332	0035					15 25		01	3600	491147	
0317	130202	260938	126332	0036					15 25		01	3000		
0318	130202	260938	126332	0036					15 25		01	3600		
0319	130202	260938	126332	0036					15 25		01	4000		
0320	130202	260938	126332	0036					15 25		01	4000		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0321	130202	260938	126332	0036					15 25		01	3000		
0322	130252	260987	126352	0049					15 22 25		01	4000	491149	
0323	130232	260958	126332	0036					15 25		01 02	3800 4000		
0324	130232	260939	No Replacement Repair With Individual Parts.						15		01	3600	491147	
0325	130252	260987	126352	0049					15 22 25		01	2800	491149	
0326	130202	260938	No Replacement Repair With Individual Parts.						15		01	4000		
0327	130252	260987	126352	0049					15 22 25		01	3600	491149	
0328	130212	260938	126312	0023					15 25		01	3600		
0329	130232	260958	126332	0036					15 25		01	3600		
0330	130202	260938	126332	0036					15 25		All	4000		
0331	130202	260938	126332	0036					15 25		01	4000		
0332	130231	260941	No Replacement Repair With Individual Parts.						15		01	3600		
0333	130202	260938	No Replacement Repair With Individual Parts.						15		01	4000		
0334	130212	260938	126312	0023					15 25		01	4000		
0335	130202	260938	126332	0036					15 25		01 02	3600 3800		
0336	130212	260938	126312	0023					15 25		01	3600		
0337	130232	260939	126332	0035					15 25		01	4000	491147	
0338	130202	261148	126332	0036					11 15 25		01	3500		
0339	130202	260938	126332	0036					15 25		All	3600		
0340	130232	260939	126332	0035					15 25		01	3600	491147	
0341	130232	260939	126332	0035					15 25		01	3600	491147	
0342	130232	260942	121332	0033					15 25		01	3100	491148	
0343	130202	260938	126332	0036					15 25		01	4000		
0344	130202	260938	No Replacement Repair With Individual Parts.						15		01	4000		
0345	130203	261118	No Replacement Repair With Individual Parts.						15		01	4000		
0346	130212	260938	126312	0023					15 25		01	4000		
0347	130202	261148	No Replacement Repair With Individual Parts.						15		01	4000		
0348	130231	260939	126332	0035					15 25		All	3600	491147	
0349	130232	260942	121332	0033					15 25		01	3100	491148	
0350	130252	260987	No Replacement Repair With Individual Parts.						15		01 02 03	3600 4000 4000	491149	

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0351	130253	261150	No Replacement Repair With Individual Parts.						15		01	3600		
0352	130252	261150	No Replacement Repair With Individual Parts.						15		01	4000		
0353	130203	261118	No Replacement Repair With Individual Parts.						15		All	4000		
0354	130202	260938	126332	0036					15		01	3600		
									25		02	4000		
0355	130252	260987	No Replacement Repair With Individual Parts.						15		01	3600	491149	
0356	130232	260958	126332	0036					15		01	3600		
									25					
0357	130212	260938	No Replacement Repair With Individual Parts.						15		All	4000		
0358	130207	261165	No Replacement Repair With Individual Parts.						15		01	4000		
0359	130292	260938	No Replacement Repair With Individual Parts.						15		All	3600		
0360	130231	260958	126332	0036					15		All	3600		
									25					
0361	130233	261141	No Replacement Repair With Individual Parts.						15		01	3600		
0362	130202	260938	126332	0036					15		01	4000		
									25					
0363	130232	260942	121332	0033					11		All	3100	491148	
									15					
									25					
0364	130232	260939	126332	0035					15		All	4000	491147	
									25					
0365	130202	260938	126332	0036					15		01	3900		
									25		02	3900		
											03	3800		
											04	3600		
0366	130202	260938	126332	0036					15		All	3600		
									25					
0367	130202	260938	126332	0036					15		01	4000		
									25					
0368	130202	261148	126332	0036					11		01	3500		
									15					
									25					
0369	130292	261148	No Replacement Repair With Individual Parts.						15		01	4000		
0370	130202	260938	126332	0036					15		All	4000		
									25					
0371	130292	260938	No Replacement Repair With Individual Parts.						15		01	3600		
0372	130202	260938	126332	0036					15		01	4000		
									25					
0373	130206	261142	No Replacement Repair With Individual Parts.						15		01	4000		
0374	130202	260938	126332	0036					15		01	4000		
									25					
0375	130212	260938	126312	0023					15		01	4000		
									25					
0376	130232	260958	126332	0036					15		01	3700		
									25					
0377	130202	260938	126332	0036					15		All	3600		
									25					
0378	130232	260958	126332	0036					15		01	3600		
									25					
0379	130212	261148	126312	0023					11		01	3600		
									15					
									25					
0380	130202	260938	126332	0036					15		01	4000		
									25					
0381	130202	260938	No Replacement Repair With Individual Parts.						15		01	4000		
0382	130232	260939	126332	0035					15		All	4000	491147	
									25					

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0383	130202	260938	126332	0036					15 25		01	2400		
0384	130202	261148	126332	0036					11 15 25		01	3500		
0385	130212	260938	No Replacement Repair With Individual Parts.						15		01 02	4000 3600		
0386	130232	260942	121332	0033					15 25		All	3100	491148	
0387	130202	260938	126332	0036					15 25		01	3600		
0388	130237	261141	No Replacement Repair With Individual Parts.						15		01	3600		
0389	130232	260958	No Replacement Repair With Individual Parts.						15		01	3600		
0390	130232	260942	121332	0033					15 25		01	3600	491148	
0391	130206	261142	121337	0050					15 25		01	3600		
0392	130206	261142	No Replacement Repair With Individual Parts.						15		01	4000		
0393	130232	260958	126332	0036					15 25		01	3100		
0394	130202	260938	126332	0036					15 25		01	3200		
0395	130212	260938	126312	0023					15 25		01	4000		
0396	130202	260938	126332	0036					15 25		01	3300		
0397	130232	260958	126332	0036					15 25		All	3600		
0398	130202	260938	126332	0036					15 25		01 02	3600 4000		
0399	130232	260941	No Replacement Repair With Individual Parts.						15		All	3600		
0400	130206	261142	121337	0050					15 25		01	3600		
0401	130232	260958	126332	0036					15 25		01	3600		
0402	130207	261118	121337	0050					15 25		01	3600		
0403	130232	260942	121332	0033					15 25		01 02	3800 3100	491148	
0404	130202	260938	126332	0036					15 25		01	4000		
0405	130202	260938	126332	0036					15 25		01	3800		
0406	130253	261150	No Replacement Repair With Individual Parts.						15		01	4000		
0407	130231	260958	126332	0036					15 25		01	3300		
0408	130202	260938	126332	0036					15 25		01	3800		
0409	130202	261118	No Replacement Repair With Individual Parts.						15		01	3800		
0410	130202	260938	126332	0036					15 25		01	3800		
0411	130207	261142	121337	0050					15 25		01	3800		
0412	130252	260987	126352	0049					15 22 25		01	3200	491149	
0413	130232	260942	121332	0033					15 25		01	3800	491148	

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0414	130202	260938	No Replacement Repair With Individual Parts.						15		All	4000		
0415	130232	260942	121332	0033					15 25		01	3200	491148	
0416	130251	260987	126352	0049					15 22 25		01	2800	491149	
0417	130202	261118	No Replacement Repair With Individual Parts.						15		All	3800		
0418	130202	261118	No Replacement Repair With Individual Parts.						15		01	3700		
0419	130203	261118	No Replacement Repair With Individual Parts.						15		01	3700		
0420	130252	260987	No Replacement Repair With Individual Parts.						15		All	3600	491149	
0421	130202	260938	126332	0036					15 25		01	4000		
0422	130232	260958	No Replacement Repair With Individual Parts.						15		01	3400		
0423	130202	261216	No Replacement Repair With Individual Parts.						15		All	4000		
0424	130253	261150	No Replacement Repair With Individual Parts.						15		All	3600		
0425	130202	261118	No Replacement Repair With Individual Parts.						15		01	4000		
0426	130202	261216	No Replacement Repair With Individual Parts.						15		All	4000		
0427	130235	261227	No Replacement Repair With Individual Parts.						15		01	3300		
0428	130202	260938	126332	0036					15 25		01	3600		
0429	130202	260938	126332	0036					15 25		01	4000		
0430	130292	260938	No Replacement Repair With Individual Parts.						15		01	4000		
0431	130252	260987	No Replacement Repair With Individual Parts.						15		01	4000	491149	
0432	130202	260938	126332	0036					15 25		01	3600		
0433	130232	260942	121332	0033					15 25		All	3100	491148	
0434	130202	260938	126332	0036					15 25		01	3800		
0435	130202	260938	126332	0036					15 25		01	3600		
0436	130202	261118	No Replacement Repair With Individual Parts.						15		All	3800		
0437	130232	260942	121332	0033					15 25		01 02 03 04	3100 3600 3300 3600	491148	
0438	130202	261147	No Replacement Repair With Individual Parts.						15		01	3800		
0439	130232	260958	126332	0036					15 25		01 02	3600 3000		
0440	130232	260958	126332	0036					15 25		All	3600		
0441	130232	260958	126332	0036					15 25		All	3500		
0442	130202	260938	126332	0036					15 25		01	3600		
0443	130252	260987	126352	0049					15 17 22 25		01 02 03	3200 4000 3600	491149	
0444	130202	260938	126332	0036					15 25		01	4000		
0445	130232	260958	126332	0036					15 25		01	3600		
0446	130202	260938	126332	0036					15 25		01	3600		
0447	130292	260938	No Replacement Repair With Individual Parts.						15		01	3600		
0448	130292	260938	No Replacement Repair With Individual Parts.						15		All	3600		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0449	130232	260958	126332	0036					15 25		01	3600		
0450	130206	261142	121337	0050					15 25		01	3600		
0451	130232	260939	126332	0035					15 25		01	3600	491147	
0452	130202	260938	126332	0036					15 25		01	3600		
0453	130232	260939	126332	0035					15 25		01	3600	491147	
0454	130202	260938	126332	0036					15 25		01	3600		
0455	130292	260938	No Replacement Repair With Individual Parts.						15		01	3600		
0456	130232	260942	121332	0033					15 25		01	3750	491148	
0457	130232	260958	126332	0036					15 25		01 02	3600 4000		
0458	130232	260939	126332	0035					15 25		01 02 03 04 05	3600 3600 3600 4000 3600	491147	
0459	130232	260942	121332	0033					15 25		All	3700	491148	
0460	130202	260938	126332	0036					15 25		01	4000		
0461	130232	260958	126332	0036					15 25		01 02 03 04 05	4000 3600 4000 3600 3600		
0462	130252	260987	126352	0049					15 22 25		01	4000	491149	
0463	130202	260938	126332	0036					15 25		All	4000		
0464	130212	260938	126312	0023					15 25		01	3600		
0465	130232	260958	126332	0036					15 25		01	3600		
0466	130232	260942	121332	0033					15 25		01	3100	491148	
0467	130202	260938	126332	0036					15 25		01	4000		
0468	130232	260942	121332	0033					15 25		01	3600	491148	
0469	130232	260942	121332	0033					15 25		01	3700	491148	
0470	130202	260938	No Replacement Repair With Individual Parts.						15		01	4000		
0471	130232	260958	126332	0036					15 25		01	3400		
0472	130231	260941	No Replacement Repair With Individual Parts.						15		All	3600		
0473	130232	260958	126332	0036					15 25		All	3600		
0474	130232	260958	126332	0036					15 25		01	4000		
0475	130232	260942	121332	0033					15 25		01	3750	491148	

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0476	130232	260942	121332	0033					15 25		01	3800	491148	
0477	130232	260942	121332	0033					15 25		01	3800	491148	
0478	130202	260938	No Replacement Repair With Individual Parts.						15		All	4000		
0479	130232	260941	No Replacement Repair With Individual Parts.						15		All	3600		
0480	130212	260938	126312	0023					15 25		01	3600		
0481	130252	260987	126352	0049					15 25		01	3600	491149	
0482	130232	260942	121332	0033					15 25		01 02	3600 3300	491148	
0483	130236	261228	No Replacement Repair With Individual Parts.						15		01	4000		
0484	130232	260492	121332	0033					15 25		01	3100	491148	
0485	130232	260958	126332	0036					15 25		All	3600		
0486	130201	260938	126332	0036					15 25		01	4000		
0487	130232	260958	126332	0036					15 25		01	4000		
0488	130232	260958	126332	0036					15 25		01	3600		
0489	130232	260958	126332	0036					15 25		01	4000		
0490	130202	261118	No Replacement Repair With Individual Parts.						15		01	4000		
0491	130232	260958	126332	0036					15 25		All	3600		
0492	130202	260938	126332	0036					15 25		01	3500		
0493	130207	261118	No Replacement Repair With Individual Parts.						15		01	3800		
0494	130202	260938	126332	0036					15 25		01	3800		
0495	130202	260938	126332	0036					15 25		01	4000		
0496	130236	261227	No Replacement Repair With Individual Parts.						15		01	4000		
0497	130232	260958	126332	0036					15 25		01	3600		
0498	130232	260958	No Replacement Repair With Individual Parts.						15		01	3600		
0499	130232	261234	No Replacement Repair With Individual Parts.						15		01	3700		
0500	130202	260938	126332	0036					15 25		01	3600		
0501	130212	260938	No Replacement Repair With Individual Parts.						15		01	4000		
0502	130232	260958	126332	0036					15 25		01	4000		
0503	130232	260958	126332	0035					15 25		01	3100		
0504	130232	260958	126332	0035					15 25		All	3600		
0505	130232	260958	126332	0036					15 25		01	3600		
0506	130232	260958	126332	0036					15 25		01	3600		
0507	130232	260942	121332	0033					15 25		01	3750	491148	
0508	130232	260958	126332	0036					15 25		01	3600		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0509	130202	260938	126332	0036					15 25		01	4000		
0510	130212	260938	126312	0023					15 25		01	3300		
0511	130203	261118	No Replacement Repair With Individual Parts.						15		01	3600		
0512	130212	260938	126312	0023					15 25		01	3600		
0513	130231	260958	126332	0036					15 25		01	3600		
0514	130252	260987	126352	0049					15 16 22 25		01	4000	491149	
0515	130202	260938	126332	0036					15 25		01	3300		
0516	130202	260938	126332	0036					15 25		01	4000		
0517	130202	260938	126332	0036					15 25		01	3600		
0518	130232	260942	121332	0033					15 25		01	3600	491148	
0519	130251	260987	126352	0049					15 22 25		All	3600	491149	
0520	130232	260958	126332	0036					15 25		01	3600		
0521	130212	260938	126312	0023					15 25		All	3600		
0522	130202	260938	126332	0036					15 25		01	4000		
0523	130202	261299	No Replacement Repair With Individual Parts.						15		All	3500	491150	
0524	130292	260938	No Replacement Repair With Individual Parts.						15		01	3500		
0525	130232	260958	126332	0036					15 25		01	3600		
0526	130202	260938	126332	0036					15 25		01	3300		
0527	130232	260958	126332	0036					15 25		01	3600		
0528	130202	260938	126332	0036					15 25		01	3600		
0529	130232	260958	126332	0036					15 25		01	3400		
0530	130292	260938	No Replacement Repair With Individual Parts.						15		All	3600		
0531	130232	260958	No Replacement Repair With Individual Parts.						15		01	3600		
0532	130212	260938	126312	0023					15 25		01	3600		
0533	130212	261216	126312	0060					15 25		01	4000		
0534	130232	260942	121332	0033					15 25		01	3700	491148	
0535	130232	260958	126332	0036					15 25		All	3300		
0536	130232	260958	126332	0036					15 25		01	4000		
0537	130202	260938	126332	0036					15 25		01	3600		
0538	130232	260958	126332	0036					15 25		01	3100		



130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0539	130203	261118	No Replacement Repair With Individual Parts.						15		01	3600		
0540	130292	261118	No Replacement Repair With Individual Parts.						15		01	3800		
0541	130232	260942	121332	0033					15 25		01	3100	491148	
0542	130212	261216	126312	0060					15 25		01	3600		
0543	130231	260958	126332	0036					15 25		01	3600		
0544	130232	260958	126332	0036					15 25		01	3600		
0545	130232	260942	121332	0033					15 25		01	3700	491148	
0546	130232	260958	126332	0036					15 25		01	3600		
0547	130202	260938	126332	0036					15 25		01	4000		
0548	130231	260958	126332	0036					15 25		01	3600		
0549	130202	260938	126332	0036					15 25		01	3600		
0550	130232	260958	126332	0036					15 25		01	3600		
0551	130252	260987	126352	0049					15 22 25		01	3600	491149	
0552	130232	260958	126332	0036					15 25		01	3600		
0553	130232	260958	126332	0036					15 25		01	3300		
0554	130237	261141	No Replacement Repair With Individual Parts.						15		01	3300		
0555	130232	260942	121332	0033					15 25		01	3600	491148	
0556	130202	260938	126332	0036					15 25		01	4000		
0557	130202	260938	126332	0036					15 25		All	3600		
0558	130232	260939	126332	0035					15 25		01	3300	491147	
0559	130232	260942	121332	0033					15 25		01	3800	491148	
0560	130232	260958	126332	0036					15 25		01 02 03 04	3600 3600 3100 3600		
0561	130232	260942	121332	0033					15 25		01	3100	491148	
0562	130252	260987	126352	0049					15 22 25		01	3600	491149	
0563	130252	260987	126352	0049					15 22 25		01	4000	491149	
0564	130232	260958	126332	0036					15 25		All	3600		
0565	130212	260938	126312	0023					15 25		All	3900		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0566	130252	260987	126352	0049					15 22 25 113		01	4000	491149	
0567	130252	260987	126352	0049					15 16 22 25		01	3000	491149	
0568	130252	260987	126352	0049					15 22 25		All	3300	491149	
0569	130202	260938	126332	0036					15 25		01	3600		
0570	130232	260942	121332	0033					15 25		All	3800	491148	
0571	130202	260938	126332	0036					15 25		01	4000		
0572	130232	260942	121332	0033					15 25		01	3600	491148	
0573	130252	260987	126352	0049					15 22 25		01	4000	491149	
0574	130232	260942	121332	0033					15 25		01	3700	491148	
0575	130232	260942	121332	0033					15 25		27	3600	491148	
0576	130202	260938	126332	0036					15 25		01	3600		
0577	130232	261234	No Replacement Repair With Individual Parts.						15		01	3600		
0578	130252	260987	126352	0049					15 22 25		01 02 03	4000 3200 3600	491149	
0579	130232	260942	121332	0033					15 25		01	3300	491148	
0580	130202	260938	126332	0036					15 25		01	3600		
0581	130232	260942	121332	0033					15 25		01	3700	491148	
0582	130232	260942	121332	0033					15 25		01	3100	491148	
0583	130232	260958	126332	0036					15 25		01	3600		
0584	130232	260958	126332	0036					15 25		01	3600		
0585	130232	260939	126332	0035					15 25		01	3600	491147	
0586	130232	260958	126332	0036					15 25		01	3600		
0587	130231	260958	126332	0036					15 25		01	3300		
0588	130232	260958	126332	0036					15 25		01 02	4000 3000		
0589	130202	260938	126332	0036					15 25		All	3300		
0590	130232	260941	No Replacement Repair With Individual Parts.						15		01	3100		
0591	130202	260938	No Replacement Repair With Individual Parts.						15		01	4000		
0592	130202	261118	No Replacement Repair With Individual Parts.						15		All	4000		
0593	130203	261118	No Replacement Repair With Individual Parts.						15		01	4000		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0594	130232	260958	126332	0036					15 25		01 02 03 04 05 06 07 08	3600 3600 3600 3600 3600 3600 3700 3800		
0595	130202	260938	126332	0036					15 25		01	4000		
0596	130232	261234	No Replacement Repair With Individual Parts.						15		01	3700		
0597	130232	260958	126332	0036					15 25		01	3300		
0598	130253	261150	No Replacement Repair With Individual Parts.						15		01 02	3400 3600		
0599	130252	260987	No Replacement Repair With Individual Parts.						15		01 02 03	4000 3600 3600	491149	
0600	130202	260938	126332	0036					15 25		01	3500		
0601	130202	260938	126332	0036					15 25		01	3600		
0602	130252	260987	126352	0049					15 17 22 25		01 02 03 04	3200 3200 3200 3600	491149	
0603	130232	260958	126332	0036					15 25		01	3100		
0604	130202	261299	No Replacement Repair With Individual Parts.						15		01	3500	491150	
0605	130232	260958	126332	0036					15 25		01	4000		
0606	130232	260958	126332	0036					15 25		01	3600		
0607	130231	260958	126332	0036					15 25		01	3600		
0608	130231	260941	No Replacement Repair With Individual Parts.						15		01	3600		
0609	130201	260938	126332	0036					15 25		01	4000		
0610	130202	260938	126332	0036					15 25		All	3500		
0611	130292	260938	No Replacement Repair With Individual Parts.						15		01	3800		
0612	130232	260958	126332	0036					15 25		01	3600		
0613	130292	260938	No Replacement Repair With Individual Parts.						15		01	4000		
0614	130292	260938	No Replacement Repair With Individual Parts.						15		All	3500		
0615	130202	260938	126332	0036					15 25		All	4000		
0616	130202	260938	126332	0036					15 25		01	4000		
0617	130292	260938	No Replacement Repair With Individual Parts.						15		01	4000		
0618	130232	260942	No Replacement Repair With Individual Parts.						15		01	3100	491148	
0619	130232	260958	126332	0036					15 25		All	3600		
0620	130232	260939	126332	0035					15 25		01	3800	694195	
0621	130212	260938	126312	0023					15 25		01	4000		
0622	130202	261216	No Replacement Repair With Individual Parts.						15		01	4000		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0623	130232	260958	126332	0036					15 25		01	3600		
0624	130252	260987	126352	0049					15 17 22 25		01	3200	491149	
0625	130232	260942	121332	0033					15 25		All	3700	491148	
0626	130232	260942	121332	0033					15 25		01 02	3800 3600	491148	
0627	130232	260942	121332	0033					15 25		01	3700	491148	
0628	130232	261234	No Replacement Repair With Individual Parts.						15		01	3600		
0629	130232	260942	121332	0033					15 25		All	3600	491148	
0630	130232	260941	No Replacement Repair With Individual Parts.						15		01 02 03	3900 3600 3600		
0631	130202	261299	No Replacement Repair With Individual Parts.						15		01	3500	491150	
0632	130231	260958	126332	0036					15 25		01	3600		
0633	130202	260938	126332	0036					15 25		01	3400		
0634	130252	260987	126352	0049					15 22 25		01	3600	491149	
0635	130212	261216	126312	0060					15 25		01	3600		
0636	130232	260958	126332	0036					15 25		01	3600		
0637	130232	260942	121332	0033					15 25		01	3600	491148	
0638	130202	260938	126332	0036					15 25		01	3600		
0639	130252	260987	126352	0049					15 22 25		01	3600	491149	
0640	130202	260938	No Replacement Repair With Individual Parts.						15		All	4000		
0641	130203	261118	No Replacement Repair With Individual Parts.						15		01	4000		
0642	130202	260938	126332	0036					15 25		01	3600		
0643	130232	260958	126332	0036					15 25		All	3600		
0644	130252	260987	126352	0049					15 16 22 25		01	3200	491149	
0645	130232	260958	126332	0036					15 25		01	4000		
0646	130292	260938	No Replacement Repair With Individual Parts.						15		01	3600		
0647	130292	260938	No Replacement Repair With Individual Parts.						15		01	3600		
0648	130231	260958	126332	0036					15 25		01	3600		
0649	130232	260939	No Replacement Repair With Individual Parts.						15		01	3600		
0650	130232	260958	126332	0036					15 25		All	3500		
0651	130292	260938	No Replacement Repair With Individual Parts.						15		01	4000		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0652	130202	260938	126332	0036					15 25		01	3700		
0653	130252	260987	126352	0049					15 22 25		01	3300		
0654	130232	260958	126332	0036					15 25		01	3600		
0655	130232	260958	126332	0036					15 25		01	3600		
0656	130232	260942	121332	0033					15 25		01	3100	694196	
0657	130232	260958	126332	0036					15 25		01	3600		
0658	130252	260987	126352	0049					15 22 25		All	3600	491149	
0659	130212	260938	126312	0023					15 25		01	3400		
0660	130202	261118	No Replacement Repair With Individual Parts.						15		01	3600		
0661	130232	260958	126332	0036					15 25		01	3600		
0662	130232	260942	121332	0033					15 25		All	3600	491148	
0663	130232	260941	No Replacement Repair With Individual Parts.						15		01	3600		
0664	130252	260987	126352	0049					15 22 25		01	3600	491149	
0665	130232	260958	126332	0036					15 25		01	3600		
0666	130202	260938	126332	0036					15 25		01	3600		
0667	130202	260938	No Replacement Repair With Individual Parts.						15		All	4000		
0668	130232	260942	121332	0033					15 25		01	3000	491148	
0669	130232	260942	121332	0033					15 25		All	3100	491148	
0670	130202	261118	No Replacement Repair With Individual Parts.						15		01	3800		
0671	130202	260938	126332	0036					15 25		01	4000		
0672	130232	260942	121332	0033					15 25		01 02 03 04 05	3700 3700 3600 3700 3600	491148	
0673	130202	260938	126332	0036					15 25		01	3600		
0674	130231	261234	No Replacement Repair With Individual Parts.						15		01	3300		
0675	130232	260958	126332	0036					15 25		All	3600		
0676	130232	261396	No Replacement Repair With Individual Parts.						15		01	3300		
0677	130232	260958	126332	0036					15 25		01	3500		
0678	130292	260938	No Replacement Repair With Individual Parts.						15		01	3600		
0679	130232	260958	126332	0036					15 25		01	3600		
0680	130232	260942	121332	0033					15 25		01	3100	491148	
0681	130202	260938	No Replacement Repair With Individual Parts.						15		01	4000		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0682	130202	260938	126332	0036					15 25		01	3800		
0683	130232	260958	126332	0036					15 25		01	3100		
0684	130232	261234	No Replacement Repair With Individual Parts.						15		01	3300		
0685	130202	261299	No Replacement Repair With Individual Parts.						15		All	3600	491150	
0686	130202	260938	126332	0036					15 25		01	3600		
0687	130232	260958	126332	0036					15 25		01	3000		
0688	130232	260939	126332	0035					15 25		01	4000	491147	
0689	130212	261399	No Replacement Repair With Individual Parts.						15		01	3800	496821	
0690	130232	260958	126332	0036					15 25		01	3600		
0691	130231	260958	126332	0036					15 25		01	3600		
0692	130232	260958	126332	0036					15 25		01	3600		
0693	130202	260938	No Replacement Repair With Individual Parts.						15		01	3600		
0694	130202	261118	No Replacement Repair With Individual Parts.						15		01	3800		
0695	130212	260938	126312	0023					15 25		01	3600		
0696	130232	260958	126332	0036					15 25		All	3600		
0697	130232	260958	126332	0036					15 25		01	3600		
0698	130202	260938	126332	0036					15 25		01	3800		
0699	130202	260938	126332	0036					15 25		01	3800		
0700	130202	260938	126332	0036					15 25		01	3700		
0701	130232	260958	126332	0036					15 25		01	3600		
0702	130212	261399	No Replacement Repair With Individual Parts.						15		01	3800	496821	
0703	130202	260938	126332	0036					15 25		01	3600		
0704	130232	260958	126332	0036					15 25		01	3600		
0705	130202	260938	126332	0036					15 25		01	3900		
0706	130292	260938	No Replacement Repair With Individual Parts.						15		All	3600		
0707	130232	260958	126332	0036					15 25		01	3100		
0708	130202	260938	126332	0036					15 25		01	3700		
0709	130292	260938	No Replacement Repair With Individual Parts.						15		01	3400		
0710	130252	260987	125352	0049					15 22 25		01	3600	491149	
0711	130292	260938	No Replacement Repair With Individual Parts.						15		01	3500		
0712	130252	260987	126352	0049					15 17 22 25		01	3200	491149	
0713	130232	260958	126332	0036					15 25		01	3100		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0714	130212	260938	No Replacement Repair With Individual Parts.						15		01	4000		
0715	130202	260938	126332	0036					15 25		01	3800		
0716	130202	260938	126332	0036					15 25		All	3800		
0717	130231	260958	126332	0036					15 25		All	3600		
0718	130232	260939	126332	0035					15 25		01	3600	491147	
0719	130252	260987	126352	0049					15 22 25 113		01	4000	491149	
0720	130232	260958	126332	0036					15 25		01	3600		
0721	130202	260938	126332	0036					15 25		01	3000		
0722	130292	260938	No Replacement Repair With Individual Parts.						15		01	3000		
0723	130292	260938	No Replacement Repair With Individual Parts.						15		01	3600		
0724	130232	260958	No Replacement Repair With Individual Parts.						15		01	4000		
0725	130207	261142	121337	0050					15 25		01	4000		
0726	130232	260958	126332	0036					15 25		01	3400		
0727	130202	260938	126332	0036					15 25		01	3500		
0728	130292	260938	No Replacement Repair With Individual Parts.						15		All	3600		
0729	130232	260958	126332	0036					15 25		01	3600		
0730	130232	260958	126332	0036					15 25		01	3600		
0731	130231	260958	126332	0036					15 25		01	3600		
0732	130232	260958	126332	0036					15 25		01	4000		
0733	130207	261142	121337	0050					15 25		01	3600		
0734	130232	260958	126332	0036					15 25		01	3600		
0735	130212	261216	126312	0060					15 25		All	3500		
0736	130202	261299	No Replacement Repair With Individual Parts.						15		01	3600	491150	
0737	130292	260938	No Replacement Repair With Individual Parts.						15		01	3700		
0738	130232	260942	121332	0033					15 25		01	3600	694196	
0739	130212	260938	126312	0023					15 25		01	3600		
0740	130232	260939	126332	0035					15 25		01	3600	491147	
0741	130292	260938	No Replacement Repair With Individual Parts.						15		01	3600		
0742	130232	260958	126332	0036					15 25		01	3600		
0743	130202	260938	126332	0036					15 25		01	3000		
0744	130232	260958	126332	0036					15 25		01	3600		
0745	130232	260942	121332	0033					15 25		01	3100	491148	

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0746	130252	260987	126352	0049					15 17 22 25		01	3200	491149	
0747	130232	260958	126332	0036					15 25		01	3600		
0748	130202	260938	126332	0036					15 25		01	3800		
0749	130252	260987	126352	0049					15 22 25		01 02	3600 4000	491149	
0750	130202	260938	126332	0036					15 25		01	3600		
0751	130231	260958	126332	0036					15 25		All	3600		
0752	130232	260958	126332	0036					15 25		01	3600		
0753	130202	260938	126332	0036					15 25		01	4000		
0754	130232	260941	No Replacement Repair With Individual Parts.						15		01	3600		
0755	130252	260987	126352	0049					15 22 25		01	3600	491149	
0756	130252	260987	126352	0049					15 22 25		01	3600	491149	
0757	130232	260958	126332	0036					15 25		01	3500		
0758	130232	260942	121332	0033					15 25		01	3700	694196	
0759	130232	260942	121332	0033					15 25		01	3200	694196	
0760	130202	260938	126332	0036					15 25		01	3600		
0761	130232	260942	121332	0033					15 25		01	3100	491148	
0762	130232	260958	126332	0036					15 25		All	3600		
0763	130212	260938	126332	0036					15 25		01	3500		
0764	130212	261147	No Replacement Repair With Individual Parts.						15		01	3500		
0765	130252	261150	No Replacement Repair With Individual Parts.						15		01	3400		
0766	130292	260938	No Replacement Repair With Individual Parts.						15		01	3500		
0767	130202	261299	No Replacement Repair With Individual Parts.						15		01	3800	491150	
0768	130202	260938	126332	0036					15 25		01	3600		
0769	130212	260938	126312	0023					15 25		01	4000		
0770	130202	261216	No Replacement Repair With Individual Parts.						15		01	4000		
0771	130232	261234	No Replacement Repair With Individual Parts.						15		01	3600		
0772	130232	260942	121332	0033					15 25		01	3800	491148	
0773	130232	260958	126332	0036					15 25		01	3200		
0774	130232	260958	126332	0036					15 25		01	3600		



130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0775	130252	260987	126352	0049					15 22 25		All	3600	491149	
0776	130292	261118	No Replacement Repair With Individual Parts.						15		01	3700		
0777	130212	260938	126312	0023					15 25		01	2600		
0778	130292	260938	No Replacement Repair With Individual Parts.						15		All	3800		
0779	130232	260942	121332	0033					15 25		All	3100	491148	
0780	130232	260942	121332	0033					15 25		All	3100	491148	
0781	130232	260958	126332	0036					15 25		01	3600		
0782	130297	261118	No Replacement Repair With Individual Parts.						15		All	3500		
0783	130232	260942	121332	0033					15 25		01	3100	491148	
0784	130232	260942	121332	0033					15 25		01	3600	491148	
0785	130232	260958	126332	0036					15 25		01	3600		
0786	130232	260942	121332	0033					15 25		All	3700	694196	
0787	130212	260938	No Replacement Repair With Individual Parts.						15		01	4000		
0788	130202	260938	126332	0036					15 25		01	4000		
0789	130292	260938	No Replacement Repair With Individual Parts.						15		01	3800		
0790	130202	260938	126332	0036					15 25		01	3600		
0791	130232	260958	126332	0036					15 25		01	3600		
0792	130292	260938	No Replacement Repair With Individual Parts.						15		01	3600		
0793	130292	260938	No Replacement Repair With Individual Parts.						15		All	3500		
0794	130292	260938	No Replacement Repair With Individual Parts.						15		01	3600		
0795	130231	260958	126332	0036					15 25		01	3600		
0796	130232	260942	121332	0033					15 25		01	3600	491148	
0797	130252	260987	121352	0049					15 22 25		01	3600	491149	
0798	130201	260938	126332	0036					15 25		01	3600		
0799	130252	260987	126352	0049					15 16 22 25		01	3300	491149	
0800	130232	260942	121332	0033					15 25		All	3100	491148	
0801	130202	260938	126332	0036					15 25		All	3500		
0802	130217	261142	No Replacement Repair With Individual Parts.						15		01	3600		
0803	130292	260938	No Replacement Repair With Individual Parts.						15		All	3600		
0804	130212	260938	126312	0023					15 25		01	3600		
0805	130232	260958	126332	0036					15 25		01	3600		
0806	130212	261216	126312	0060					15 25		01	4000		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0808	130202	260938	126332	0036					15 25		01	3500		
0809	130232	260958	126332	0036					15 25		01	3600		
0810	130202	260938	126332	0036					15 25		01	3000		
0811	130232	260958	126332	0036					15 25		All	3600		
0812	130232	260958	126332	0036					15 25		01	3300		
0813	130202	261299	No Replacement Repair With Individual Parts.						15		01	3500	491150	
0815	130202	261148	126332	0036					11 15 25		All	3500		
0816	130202	260938	126332	0036					15 25		01	3800		
0817	130231	260941	No Replacement Repair With Individual Parts.						15		01	3300		
0818	130202	260938	126332	0036					15 25		01	3600		
0819	130212	260938	126312	0023					15 25		01 02 03	3600 3100 3600		
0821	130202	260938	126332	0036					15 25		01	3800		
0822	130202	260938	126332	0036					15 25		All	4000		
0823	130202	260938	126332	0036					15 25		01	3600		
0824	130231	260958	126332	0036					15 25		01	3600		
0825	130212	261399	No Replacement Repair With Individual Parts.						15		01	3800	496821	
0826	130212	260938	126312	0023					15 25		01	4000		
0827	130231	260958	126332	0036					15 25		01	3600		
0828	130232	260941	No Replacement Repair With Individual Parts.						15		01	4000		
0829	130202	260938	126332	0036					15 25		01	3600		
0830	130202	261299	No Replacement Repair With Individual Parts.						15		All	3600	491150	
0831	130232	260958	126332	0036					15 25		01	3600		
0832	130232	260942	121332	0033					15 25		01	3100	491148	
0834	130232	260958	126332	0036					15 25		01	3600		
0835	130202	260938	125332	0036					15 25		01	4000		
0836	130232	260942	121332	0033					15 25		01	3600	491148	
0837	130232	260941	No Replacement Repair With Individual Parts.						15		01	4000		
0838	130232	260958	126332	0036					15 25		01	3600		
0839	130231	261234	No Replacement Repair With Individual Parts.						15		01	3300		
0840	130232	260942	121332	0033					15 25		01	3000	491148	
0841	130232	260958	126332	0036					15 25		01	3600		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0842	130202	260938	126332	0036					15 25		01	3600		
0843	130232	260939	126332	0035					15 25		01	3600	694195	
0844	130202	260938	126332	0036					15 25		01	4000		
0845	130232	260942	121332	0033					15 25		01	3800	491148	
0846	130212	260938	126312	0023					15 25		01	3600		
0847	130231	260939	126332	0035					15 25		01	4000	491147	
0848	130232	260939	126332	0035					15 25		01	4000	491147	
0849	130232	260942	121332	0033					15 25		01	3700	694196	
0850	130202	260938	126332	0036					15 25		01	3200		
0851	130202	260938	126332	0036					15 25		01	3600		
0852	130232	260939	126332	0035					15 25		01	3700	491147	
0853	130202	260938	126332	0036					15 25		01	3600		
0854	130232	260941	No Replacement Repair With Individual Parts.						15		01	3600		
0855	130232	260958	126332	0036					15 25		01	3600		
0856	130232	260941	No Replacement Repair With Individual Parts.						15		All	3000		
0857	130232	260942	121332	0033					15 25		01	3100	491148	
0858	130232	260958	126332	0036					15 25		01	3600		
0859	130232	260958	126332	0036					15 25		01	3600		
0860	130232	260942	121332	0033					15 25		01	3100	694196	
0861	130231	260958	126332	0036					15 25		01	3600		
0862	130202	261118	No Replacement Repair With Individual Parts.						15		All	4000		
0863	130232	260942	121332	0033					15 25		01	3200	694196	
0864	130212	261399	No Replacement Repair With Individual Parts.						15		01	3800	496821	
0865	130231	260939	126332	0035					15 25		01	3600	491147	
0866	130231	260958	126332	0035					15 25		01	3600		
0867	130231	260958	126332	0036					15 25		01	3600		
0869	130202	260938	126332	0036					15 25		01	4000		
0870	130232	260958	126332	0036					15 25		01	4000		
0871	130232	260958	121332	0036					15 25		01	4000		
0872	130252	261150	No Replacement Repair With Individual Parts.						15		01	4000		
0873	130292	261118	No Replacement Repair With Individual Parts.						15		01	3700		
0874	130232	260958	126332	0036					15 25		01	4000		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0875	130232	260942	121332	0033					15 25		01	3600	694196	
0876	130212	260938	126312	0023					15 25		01	3600		
0877	130202	260938	126332	0036					15 25		01	4000		
0878	130202	260938	126332	0036					15 25		All	3600		
0879	130252	260987	126352	0049					15 17 22 25		01	3600	491149	
0880	130252	260987	126352	0049					15 22 25		01	3600	491149	
0881	130202	260938	126332	0036					15 25		01	3600		
0882	130252	260987	126352	0049					15 17 22 25		01	3600		
0883	130232	260958	126332	0036					15 25		01 02	3000 4000		
0884	130232	260958	No Replacement Repair With Individual Parts.						15		01	4000		
0885	130252	260987	126352	0049					15 22 25		01	3600		
0886	130232	260942	121332	0033					15 25		01	3800	694196	
0887	130232	260942	121332	0033					15 25		01	3700	491148	
0888	130232	260941	No Replacement Repair With Individual Parts.						15		01	3600		
0889	130252	260987	126352	0049					15 22 25		01	3600	491149	
0890	130232	260958	126332	0036					15 25		01	3600		
0891	130232	260958	126332	0036					15 25		01	3600		
0892	130202	260938	No Replacement Repair With Individual Parts.						15		01	4000		
0893	130202	260938	126332	0036					15 25		01	3600		
0894	130252	260987	126352	0049					15 17 22 25		01	3600	491149	
0895	130292	260938	No Replacement Repair With Individual Parts.						15		01	3600		
0896	130232	260958	126332	0036					15 25		01	3600		
0897	130202	260938	126332	0036					15 25		01	4000		
0898	130231	260958	126332	0036					15 25		01	3600		
0899	130232	260958	126332	0036					15 25		01	3600		
0900	130202	260938	126332	0036					15 25		01	3300		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0901	130252	260987	126352	0049					15 22 25 113		01	4000	491149	
0902	130202	261148	126332	0036					11 15 25		All	3500		
0903	130252	260987	126352	0049					15 17 22 25		01	3600		
0904	130232	260942	121332	0033					15 25		01	3100	491148	
0905	130232	260942	121332	0033					15 25		01	3100	491148	
0906	130252	260987	126352	0049					15 22 25		01	3600	491149	
0907	130232	260958	126332	0036					15 25		01	3600		
0908	130232	260958	126332	0036					15 25		01	3600		
0909	130232	260942	121332	0033					15 25		01	3800	491148	
0910	130212	260938	126312	0023					15 25		01	3600		
0911	130202	260938	126332	0036					15 25		01	3500		
0912	130232	260942	121332	0033					15 25		01	3600	491148	
0913	130202	260938	126332	0036					15 25		01	3600		
0914	130232	260958	126332	0036					15 25		01	3600		
0915	130202	260938	126332	0036					15 25		All	3600		
0916	130232	260942	121332	0033					15 25		01	3600	694196	
0917	130292	260938	No Replacement Repair With Individual Parts.						15		01	3300		
0918	130232	260958	126332	0036					15 25		01	3600		
0919	130232	260958	121332	0036					15 25		01	4000		
0920	130232	260958	121332	0036					15 25		01	3600		
0921	130212	261399	No Replacement Repair With Individual Parts.						15		All	3700	496821	
0922	130232	260958	126332	0036					15 25		01	3600		
0923	130232	260958	126332	0036					15 25		01	3600		
0924	130232	260941	No Replacement Repair With Individual Parts.						15		01	3000		
0925	130202	260938	126332	0036					15 25		01	3800		
0926	130202	260938	126332	0036					15 25		01	3000		
0927	130232	260958	126332	0036					15 25		01	3600		
0928	130212	260938	126312	0023					15 25		01	4000		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0929	130232	260939	126332	0035					15 25		01 02 03	3600 3600 4000	491147	
0930	130202	260938	126332	0036					15 25		01	3800		
0931	130212	260938	No Replacement Repair With Individual Parts.						15		01	4000		
0932	130232	260942	121332	0033					15 25		01	3100	491148	
0934	130232	260942	121332	0033					15 25		01	3600	491148	
0935	130232	260942	126332	0035					15 25		01	3600	491148	
0936	130231	260939	126332	0035					15 25		All	3600	491147	
0937	130232	260958	126332	0036					15 25		01	3600		
0938	130232	260942	121332	0033					15 25		01	3100	491148	
0939	130232	260958	126332	0036					15 25		01	3100		
0940	130202	260938	126332	0036					15 25		01	3500		
0941	130292	260938	No Replacement Repair With Individual Parts.						15		All	3600		
0942	130232	260958	126332	0036					15 25		01	3700		
0943	130202	260938	126332	0036					15 25		01	3600		
0944	130252	260987	126352	0049					15 22 25		01	3600	491149	
0945	130202	260938	126332	0036					15 25		01	3600		
0946	130252	260987	126352	0049					15 22 25		01	3200	491149	
0947	130232	260942	121332	0033					15 25		01	3600	491148	
0948	130232	260958	126332	0036					15 25		01	3600		
0949	130231	260939	126332	0035					15 25		01	3600	491147	
0950	130232	260939	126332	0035					15 25		01	3600	491147	
0951	130232	260942	121332	0033					15 25		01	3100	491148	
0952	130252	260987	126352	0049					15 16 22 25		01	4000	491149	
0953	130232	260958	126332	0036					15 25		01	3600		
0954	130232	260942	121332	0033					15 25		All	3700	694196	
0955	130252	260987	126352	0049					15 22 25		01	3600	491149	
0956	130202	260938	126332	0036					15 25		01	3600		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0957	130232	260958	126332	0036					15 25		01	3300		
0958	130232	260958	126332	0036					15 25		01	3600		
0959	130232	260942	121332	0033					15 25		01	3600	491148	
0960	130232	260958	126332	0036					15 25		01	3600		
0961	130292	260938	No Replacement Repair With Individual Parts.						15		01	3600		
0962	130252	260987	126352	0049					15 22 25		01	4000	491149	
0963	130232	260942	121332	0033					15 25		01	3100	491148	
0964	130212	261142	No Replacement Repair With Individual Parts.						15		All	3500		
0965	130232	260942	121332	0033					15 25		01	3600	694196	
0966	130212	261142	No Replacement Repair With Individual Parts.						15		01	3300		
0967	130232	260941	No Replacement Repair With Individual Parts.						15		01	4000		
0968	130202	260938	126332	0036					15 25		All	3500		
0969	130202	260938	126332	0036					15 25		01	3600		
0970	130212	261142	No Replacement Repair With Individual Parts.						15		01	3300		
0971	130203	261142	No Replacement Repair With Individual Parts.						15		01	3600		
0972	130292	261142	No Replacement Repair With Individual Parts.						15		01	3400		
0973	130202	261142	No Replacement Repair With Individual Parts.						15		01	3400		
0974	130231	260958	126332	0036					15 25		All	3600		
0975	130232	260958	126332	0036					15 25		01	3600		
0976	130232	260942	121332	0033					15 25		01	3700	694196	
0977	130231	260941	No Replacement Repair With Individual Parts.						15		All	3600		
0978	130202	260938	126332	0036					15 25		01	2900		
0979	130232	260942	121332	0033					15 25		01	3100	694196	
0980	130202	261142	No Replacement Repair With Individual Parts.						15		01	4000		
0981	130212	260938	126312	0023					15 25		01	3600		
0982	130232	260939	126332	0035					15 25		01	3000	694195	
0983	130232	260942	121332	0033					15 25		01	3100	491148	
0984	130212	260938	No Replacement Repair With Individual Parts.						15		01	4000		
0985	130202	260938	126332	0036					15 25		01	3200		
0986	130232	260958	126332	0036					15 25		01	3600		
0987	130202	260938	No Replacement Repair With Individual Parts.						15		01	3600		
0988	130212	260938	126312	0023					15 25		01	3500		
0989	130212	261544	No Replacement Repair With Individual Parts.						15		01	3800		
0990	130212	261216	126312	0060					15 25		01	4000		
0991	130202	260938	126332	0036					15 25		01	3600		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0992	130202	260938	126332	0036					15 25		01	3800		
0993	130202	260938	126332	0036					15 25		01 02	3000 3500		
0994	130232	260942	121332	0033					15 25		01	3100	491148	
0995	130202	260938	126332	0036					15 25		01	3400		
0996	130232	260942	121332	0033					15 25		01	3600	694196	
0997	130212	260938	126312	0023					15 25		01	4000		
0998	130232	260958	126332	0036					15 25		01	4000		
0999	130232	260942	121332	0033					15 25		01	3100	491148	
1000	130232	260939	126332	0035					15 25		01	3600	491147	
1001	130212	261544	No Replacement Repair With Individual Parts.						15		All	3800		
1002	130232	260942	121332	0033					15 25		All	3100	491148	
1003	130212	261216	126312	0060					15 25		01	3600		
1004	130232	260942	121332	0033					15 25		All	3100	491148	
1005	130232	260942	121332	0033					15 25		01	3100	491148	
1006	130212	260938	126312	0023					15 25		01	3600		
1007	130202	260938	No Replacement Repair With Individual Parts.						15		01	4000		
1008	130252	260987	126352	0049					15 22 25		01	3200	491149	
1009	130292	260938	No Replacement Repair With Individual Parts.						15		01	3500		
1010	130202	260938	No Replacement Repair With Individual Parts.						15		01	4000		
1011	130212	260938	126312	0023					15 25		01	4000		
1012	130232	260958	126332	0035					15 25		01	3600		
1013	130232	260958	126332	0036					15 25		01	3600		
1014	130212	260938	126312	0023					15 25		01	3600		
1015	130232	260939	126332	0035					15 25		01	3000	491147	
1016	130232	260942	121332	0033					15 25		01	3600	491148	
1017	130232	260958	126332	0036					15 25		01	3600		
1018	130202	261216	No Replacement Repair With Individual Parts.						15		01	4000		
1019	130252	260987	126352	0049					15 22 25		01	3600	694197	
1020	130232	260958	126332	0036					15 25		01	3600		
1021	130232	260958	126332	0036					15 25		01	3150		



130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
1022	130232	260939	126332	0035					15 25		All	3600	491147	
1023	130207	261142	No Replacement Repair With Individual Parts.						15		01	3600		
1024	130202	260938	126332	0036					15 25		01	3000		
1025	130292	260938	No Replacement Repair With Individual Parts.						15		01	3600		
1026	130232	260958	126332	0036					15 25		01	3600		
1027	130232	260958	126332	0036					15 25		01	3600		
1028	130232	260939	126332	0035					15 25		01	3600	491147	
1029	130252	260987	126352	0049					15 17 22 25		01	3600		
1030	130252	260987	126352	0049					15 17 22 25		01	3600		
1031	130232	260942	121332	0033					15 25		01	3100	491148	
1032	130212	261544	No Replacement Repair With Individual Parts.						15		01	3800		
1033	130202	260938	126332	0036					15 25		All	3500		
1034	130202	260938	126332	0036					15 25		01	3000		
1035	130202	260938	126332	0036					15 25		01	3500		
1036	130232	260958	126332	0036					15 25		01	3600		
1037	130232	260958	126332	0036					15 25		01	3600		
1038	130202	260938	126332	0036					15 25		01	3600		
1039	130232	260941	No Replacement Repair With Individual Parts.						15		01	3000		
1040	130252	260987	126352	0049					15 22 25		01	3600	491149	
1041	130232	260939	126332	0035					15 25		01	3600	694195	
1042	130232	260958	126332	0036					15 25		01	3800		
1043	130202	260938	126332	0036					15 25		01	2900		
1044	130232	260958	126332	0036					15 25		01	3600		
1045	130253	261150	No Replacement Repair With Individual Parts.						15		01	3400		
1046	130202	261142	No Replacement Repair With Individual Parts.						15		01	3400		
1047	130252	261150	No Replacement Repair With Individual Parts.						15		01	3400		
1048	130232	260958	126332	0036					15 25		01	3600		
1049	130212	260938	126312	0023					15 25		01	3600		
1050	130292	260938	No Replacement Repair With Individual Parts.						15		01	3600		
1051	130212	261142	No Replacement Repair With Individual Parts.						15		01	3800		
1052	130232	260958	126332	0036					15 25		01	3600		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
1053	130232	260939	126332	0035					15 25		01	3000	491147	
1054	130232	261234	No Replacement Repair With Individual Parts.						15		01	3600		
1055	130292	260938	No Replacement Repair With Individual Parts.						15		01	3600		
1056	130212	261544	No Replacement Repair With Individual Parts.						15		01	3800		
1057	130232	260958	126332	0035					15 25		01	3800		
1058	130232	261234	No Replacement Repair With Individual Parts.						15		01	4000		
1059	130232	260942	121332	0033					15 25		01	3600	491148	
1060	130231	260939	126332	0035					15 25		01	4000	491147	
1061	130292	261142	No Replacement Repair With Individual Parts.						15		All	3600		
1062	130292	261142	No Replacement Repair With Individual Parts.						15		01	3600		
1063	130202	261142	No Replacement Repair With Individual Parts.						15		All	4000		
1064	130232	260958	126332	0036					15 25		01	3600		
1065	130232	260939	126332	0035					15 25		01	3600	491147	
1066	130231	260958	126332	0036					15 25		01	3600		
1067	130231	260939	126332	0035					15 25		01	3600	491147	
1068	130252	260987	126352	0049					15 25		01	3600	491149	
1069	130232	260958	126332	0036					15 25		01	4000		
1070	130232	260958	126332	0036					15 25		01	3600		
1071	130202	260938	126332	0036					15 25		01	3500		
1072	130202	260938	126332	0036					15 25		01	4000		
1073	130232	260942	121332	0033					15 25		01	3150	491148	
1074	130212	260938	No Replacement Repair With Individual Parts.						15		01	4000		
1075	130232	260942	121332	0033					15 25		01	3150	491148	
1076	130232	260942	121332	0033					15 25		01	3200	491148	
1077	130212	261142	No Replacement Repair With Individual Parts.						15		01	3500		
1078	130232	261234	No Replacement Repair With Individual Parts.						15		01	3600		
1079	130251	260987	126352	0049					15 17 22 25		01	2800	491149	
1080	130232	260958	126332	0036					15 25		01	3600		
1081	130232	260958	126332	0036					15 25		01 02	3400 3600		
1082	130232	260958	126332	0036					15 25		01	3800		
1083	130232	260939	126332	0035					15 25		01	4000	491147	
1084	130232	261234	No Replacement Repair With Individual Parts.						15		01	3600		
1085	130232	260958	126332	0036					15 25		01	3150		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
1086	130232	260939	126332	0035					15 25		01	3800	491147	
1087	130232	260958	121332	0036					15 25		01	3150		
1088	130202	260938	No Replacement Repair With Individual Parts.						15		01	3600		
1089	130202	261142	No Replacement Repair With Individual Parts.						15		01	3600		
1090	130232	260958	126332	0036					15 25		01	3600		
1091	130202	260938	126332	0036					15 25		01	3800		
1092	130292	260938	No Replacement Repair With Individual Parts.						15		01	3800		
1093	130202	260938	No Replacement Repair With Individual Parts.						15		01	4000		
1094	130202	261142	No Replacement Repair With Individual Parts.						15		01	4000		
1095	130232	260939	126332	0035					15 25		01	4000	491147	
1096	130232	260941	No Replacement Repair With Individual Parts.						15		01	3600		
1097	130202	260938	126332	0036					15 25		01	3600		
1098	130212	261142	No Replacement Repair With Individual Parts.						15		01	3500		
1099	130232	260958	126332	0036					15 25		01	4000		
1100	130232	260939	126332	0035					15 25		01	4000	491147	
1101	130292	261142	No Replacement Repair With Individual Parts.						15		01	3600		
1102	130232	260958	126332	0036					15 25		01	3600		
1103	130202	260938	126332	0036					15 25		01	3600		
1104	130232	261544	No Replacement Repair With Individual Parts.						15					
1105	130232	260958	126332	0036					15 25		01	3600		
1106	130202	260938	126332	0036					15 25		01	2900		
1107	130232	260942	121332	0033					15 25		All	3750	491148	
1108	130232	260958	126332	0036					15 25		01	3600		
1109	130232	260942	121332	0033					15 25		All	3150	491148	
1110	130232	260958	126332	0036					15 25		01	3600		
1111	130232	260958	126332	0036					15 25		01	3600		
1112	130232	260942	121332	0033					15 25		All	3700	491148	
1113	130212	260938	No Replacement Repair With Individual Parts.						15		01	4000		
1114	130232	260958	126332	0036					15 25		01	3350		
1115	130212	260938	126312	0023					15 25		01	3300		
1116	130232	260958	126332	0036					15 25		01	3400		
1117	130202	261299	No Replacement Repair With Individual Parts.						15		01	3600		
1118	130212	260938	126312	0023					15 25		01	3600		
1119	130252	260987	126352	0049					15 25		01	2600	491149	

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
1120	130212	260938	126312	0023					15 25		01	3300		
1121	130232	260958	126312	0036					15 25		01	3600		
1122	130232	260958	126332	0036					15 25		01	3600		
1123	130232	260958	126332	0036					15 25		01	3400		
1124	130232	260942	121332	0033					15 25		All	3750	491148	
1125	130252	260987	126352	0049					15 22 25		01	4000	491149	
1126	130232	260942	121332	0033					15 25		01	3150	491148	
1127	130232	260958	126332	0036					15 25		01	3600		
1128	130232	260958	126332	0036					15 25		01	3600		
1129	130212	261399	No Replacement Repair With Individual Parts.						15		01	3100	496821	
1130	130202	260938	126332	0036					15 25		01	3300		
1131	130292	260938	No Replacement Repair With Individual Parts.						15		01	4000		
1132	130232	261234	No Replacement Repair With Individual Parts.						15		01	4100		
1133	130232	260942	121332	0033					15 25		01	3100	491148	
1134	130212	261399	No Replacement Repair With Individual Parts.						15		01	3700	496821	
1135	130232	260958	126332	0036					15 25		01	2700		
1136	130251	260987	126332	0049					15 22 25		01	3600	491149	
1137	130212	261142	No Replacement Repair With Individual Parts.						15		01	3500		
1138	130212	261142	No Replacement Repair With Individual Parts.						15		01	3300		
1139	130292	260938	No Replacement Repair With Individual Parts.						15		01	3500		
1140	130297	261142	No Replacement Repair With Individual Parts.						15		01	3500		
1141	130202	260938	126332	0036					15 25		01	3600		
1142	130232	260958	No Replacement Repair With Individual Parts.						15		01	4000		
1143	130212	260938	126312	0023					15 25		01	3600		
1144	130232	260958	126332	0036					15 25		01	3800		
1145	130232	260942	121332	0033					15 25		01	3200	491148	
1146	130202	260938	126332	0036					15 25		01	3700		
1147	130202	261216	No Replacement Repair With Individual Parts.						15		01	3600		
1148	130232	260942	121332	0033					15 25		01	3750	491148	
1149	130232	260942	121332	0033					15 25		01	3100	491148	
1150	130202	260938	126332	0036					15 25		01	3700		
1151	130231	260941	No Replacement Repair With Individual Parts.						15		01	3600		
1152	130231	261234	No Replacement Repair With Individual Parts.						15		01	3600		
1153	130212	260938	126312	0023					15 25		All	3200		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
1154	130232	260942	121332	0033					15 25		01	3750	491148	
1155	130232	260958	126332	0036					15 25		01	3600		
1156	130252	260987	126352	0049					15 22 25		01	3600	491149	
1157	130232	260958	126332	0036					15 25		01	3600		
1158	130252	260987	126352	0049					15 22 25		01	4000	491149	
1159	130232	260958	126332	0036					15 25		01	2700		
1160	130232	260958	126332	0036					15 25		01	3800		
1161	130251	260987	126352	0049					15 22 25		01	3600	491149	
1162	130232	260958	126332	0036					15 25		01	3800		
1163	130232	260958	126332	0036					15 25		01	3200		
1164	130232	260942	121332	0033					15 25		01	3750	491148	
1165	130232	260958	126332	0036					15 25		01	3150		
1166	130202	260938	126332	0036					15 25		01	3600		
1167	130202	260938	126332	0036					15 25		01	3400		
1168	130252	260987	126352	0049					15 22 25		01	4000	491149	
1169	130202	260938	126332	0036					15 25		01	3600		
1170	130212	260938	126312	0023					15 25		01	3600		
1171	130231	260939	126332	0033					15 25		01	3600	491147	
1172	130232	260942	121332	0033					15 25		01	3150	491148	
1173	130232	260958	126332	0036					15 25		01	3200		
1174	130232	260942	121332	0033					15 25		01	3150	491148	
1175	130212	261142	No Replacement Repair With Individual Parts.						15		01	3300		
1176	130212	261399	No Replacement Repair With Individual Parts.						15		01	3700	496821	
1177	130212	260938	126312	0023					15 25		01	3200		
1178	130202	260938	126332	0036					15 25		01	3000		
1179	130212	260938	No Replacement Repair With Individual Parts.						15		01	4000		
1180	130232	260958	126332	0036					15 25		01	3600		
1181	130232	260958	No Replacement Repair With Individual Parts.						15		All	3200		
1182	130232	260958	126332	0036					15 25		01	3600		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
1183	130212	261544	No Replacement Repair With Individual Parts.						15		01	3500		
1184	130232	260939	126332	0035					15		01	3600	491147	
									25					
1185	130232	260942	121332	0033					15		01	3100	491148	
									25					
1186	130292	260938	No Replacement Repair With Individual Parts.						15		01	3600		
1187	130232	260958	126332	0036					15		01	4000		
									25					
1188	130252	260987	126352	0049					15		01	4000	491149	
									22					
									25					
1189	130202	260938	126332	0036					15		01	3600		
									25					
1190	130212	260938	126312	0023					15		All	3600		
									25					
1191	130232	260958	126332	0036					15		01	3800		
									25					
1192	130232	260942	121332	0033					15		01	3700	491148	
									25					
1193	130232	260958	126332	0036					15		01	3800		
									25					
1194	130252	260987	126352	0049					15		01	3600	491149	
									22					
									25					
1195	130202	260938	126332	0036					15		01	3800		
									25					
1196	130292	260938	No Replacement Repair With Individual Parts.						15		01	3600		
1197	130212	261339	No Replacement Repair With Individual Parts.						15		01	3600	496821	
1198	130207	261142	No Replacement Repair With Individual Parts.						15		01	3600		
1199	130232	260942	121332	0033					15		01	3100	491148	
									25					
1200	130202	260938	126332	0036					15		01	3500		
									25					
1201	130232	260958	126332	0036					15		01	3200		
									25					
1202	130232	260939	126332	0035					15		01	3800	491147	
									25					
1203	130212	260938	126312	0023					15		01	3600		
									25					
1204	130232	260939	126332	0035					15		01	3600	491147	
									25					
1503	130202	492926	No Replacement Repair With Individual Parts.						15		01	4000		
1506	130202	492088	No Replacement Repair With Individual Parts.						15		01	3800		
1515	130202	492088	126332	0036					15		All	4000		
									25					
1516	130202	492088	126332	0036					15		01	4000		
									25					
1518	130202	397096	No Replacement Repair With Individual Parts.						15		01	4000		
1519	130202	397096	No Replacement Repair With Individual Parts.						15		01	4000		
1520	130202	397103	No Replacement Repair With Individual Parts.						15		01	3500	491150	
1523	130212	492088	126312	0023					15		01	4000		
									25					
1524	130212	397095	121312	0014					15		01	4000	491149	
									25					
1525	130207	397096	121337	0050					15		01	4000		
									25					
1535	130232	397087	126332	0035					15		All	4000	491147	
									25					

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
1536	130232	493290	126332	0036					15 25		All	4000		
1537	130232	397089	No Replacement Repair With Individual Parts.						15		01	4000		
1538	130232	492090	121332	0033					15 25		All	3800	491148	
1539	130232	493015	No Replacement Repair With Individual Parts.						15		All	3300		
1540	130232	492090	121332	0033					15 25		All	3700	491148	
1541	130232	493290	No Replacement Repair With Individual Parts.						15		01	4000		
1543	130232	493290	126332	0036					15 25		01	4000		
1549	130252	397095	126352	0049					15 22 25		All	4000	491149	
1570	130292	492088	No Replacement Repair With Individual Parts.						15		01	4000		
1571	130292	492088	No Replacement Repair With Individual Parts.						15		01	4000		
1601	130202	492088	No Replacement Repair With Individual Parts.						15		01	3600		
1610	130201	492088	126332	0036					15 25		01	3600		
1611	130202	492088	126332	0036					15 25					
1612	130232	397087	126332	0035					15 25		01	3600	491147	
1613	130232	493290	126332	0036					15 25		01	3600		
1616	130252	397095	126352	0049					15 22 25		01	3600	491149	
1617	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
1630	130212	397096	No Replacement Repair With Individual Parts.						15		01	3300		
1631	130212	397096	No Replacement Repair With Individual Parts.						15		01	3500		
1632	130232	397087	126332	0035					15 25		01	3600	491147	
1633	130202	492088	126332	0036					15 25		01	3600		
1634	130202	492088	126332	0036					15 25		01	3500		
1635	130292	492088	No Replacement Repair With Individual Parts.						15		01	3200		
1636	130292	397096	No Replacement Repair With Individual Parts.						15		All	3600		
1637	130212	397096	No Replacement Repair With Individual Parts.						15		01	3800		
1638	130232	493290	126332	0036					15 25		01 02 03 04 05	3500 3600 3600 4000 3300		
1639	130202	492088	126332	0036					15 25		01	3600		
1640	130202	492088	126332	0036					15 25		01	3500		
1641	130232	493290	126332	0036					15 25		01	3400		
1642	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
1643	130232	492090	121332	0033					15 25		01	3150	491148	
1644	130292	492088	No Replacement Repair With Individual Parts.						15		01	3800		
1645	130232	493290	No Replacement Repair With Individual Parts.						15		All	3200		
1646	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
1647	130232	493290	126332	0036					15 25		01	3600		
1648	130232	493290	126332	0036					15 25		01	3350		
1649	130202	492088	126332	0036					15 25		01	3600		
1650	130202	397103	No Replacement Repair With Individual Parts.						15		01	3500	491150	
1651	130202	492088	126332	0036					15 25		01	3800		
1652	130202	492926	No Replacement Repair With Individual Parts.						15		01	4000		
1653	130202	492088	126332	0036					15 25		01	4000		
1654	130202	492088	126332	0036					15 25		01	3500		
1655	130202	492088	126332	0036					15 25		01	4200		
1656	130202	492088	126332	0036					15 25		All	3500		
1657	130212	492088	126312	0023					15 25		01	3600		
1658	130232	493290	126332	0036					15 25		01	3800		
1659	130232	493290	126332	0036					15 25		01	3700		
1660	130232	492090	121332	0033					15 25		01	3100	491148	
1661	130232	492090	121332	0033					15 25		01	3100	491148	
1662	130232	493290	126332	0036					15 25		01	4000		
1663	130212	492088	126312	0023					15 25		01	3800		
1664	130292	492088	No Replacement Repair With Individual Parts.						15		01	3500		
1665	130297	397096	No Replacement Repair With Individual Parts.						15		01	3500		
1666	130202	492088	126332	0036					15 25		01	3600		
1667	130202	492926	No Replacement Repair With Individual Parts.						15		01	4000		
1668	130202	492088	126332	0036					15 25		01	4000		
1669	130292	492088	No Replacement Repair With Individual Parts.						15		01	4000		
1670	130202	492926	No Replacement Repair With Individual Parts.						15		01	4000		
1671	130292	492088	No Replacement Repair With Individual Parts.						15		All	3600		
1672	130202	492088	126332	0036					15 25		All	3600		
1673	130292	492088	No Replacement Repair With Individual Parts.						15		01	3800		
1674	130296	397096	No Replacement Repair With Individual Parts.						15		01	3600		
1675	130297	397096	No Replacement Repair With Individual Parts.						15		01	3600		
1676	130212	492088	126312	0023					15 25		01	3600		
1677	130232	493290	126332	0036					15 25		01	3600		
1678	130232	492090	121332	0033					15 25		01	3150	491148	
1679	130202	492088	126332	0036					15 25		01	3700		
1680	130232	493290	126332	0036					15 25		01	4000		



130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
1681	130202	492088	126332	0036					15 25		01	3600		
1682	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
1683	130232	493290	126332	0036					15 25		01	3800		
1684	130232	493290	126332	0036					15 25		01	3800		
1685	130202	492088	126332	0036					15 25		01	3600		
1686	130202	492088	126332	0036					15 25		01 02 03	3200 3500 3400		
1687	130232	397087	121332	0035					15 25		All	4000	491147	
1688	130232	492090	121332	0033					15 25		01	3700	491148	
1689	130202	492088	126332	0036					15 25		01	2900		
1690	130202	492088	126332	0036					15 25		01	3600		
1691	130252	397095	126352	0049					15 22 25		01	4000	491149	
1692	130232	492090	121332	0033					15 25		01	3100	491148	
1693	130232	493290	126332	0036					15 25		01	3600		
1694	130232	492090	121332	0033					15 25		All	3100	491148	
1695	130202	492088	126332	0036					15 25		All	3600		
1696	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
1697	130232	493290	126332	0036					15 25		01	3600		
1698	130232	493015	No Replacement Repair With Individual Parts.						15		01	3700		
1699	130232	493290	126332	0036					15 25		01	3600		
1700	130202	492088	126332	0036					15 25		01	3600		
1701	130232	493290	126332	0036					15 25		01	3400		
1702	130232	492090	121332	0033					15 25		All	3750		
1703	130212	492088	121312	0023					15 25		01	3600		
1704	130202	492088	126332	0036					15 25		01	3600		
1705	130232	492090	121332	0033					15 25		01	3750	491148	
1706	130202	397103	No Replacement Repair With Individual Parts.						15		01	3600	491150	
1707	130232	492090	121332	0033					15 25		01	3150	491148	
1708	130212	492088	126312	0023					15 25		01	3200		
1709	130232	493290	126332	0036					15 25		01	3200		
1710	130232	493290	126332	0036					15 25		01	2800		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
1711	130232	493290	126332	0036					15 25		01	4000		
1712	130232	493290	126332	0036					15 25		01	3500		
1713	130232	397087	126332	0035					15 25		All	3600	491147	
1714	130202	492088	126332	0036					15 25		01	3700		
1715	130202	492088	No Replacement Repair With Individual Parts.						15		01	4000		
1716	130252	397095	126352	0049					15 22 25		01	3200	491149	
1717	130212	397104	No Replacement Repair With Individual Parts.						15		01	3600	496821	
1718	130212	492088	No Replacement Repair With Individual Parts.						15		01	3900		
1719	130232	493290	126332	0036					15 25		01	3600		
1720	130231	397087	126332	0035					15 25		01	3600	491147	
1721	130232	492090	121332	0033					15 25		01	3150	491148	
1722	130202	492088	No Replacement Repair With Individual Parts.						15		01	4000		
1723	130202	492088	126332	0036					15 25		01	3300		
1724	130212	492088	126312	0023					15 25		All	4000		
1725	130292	492088	No Replacement Repair With Individual Parts.						15		01	3400		
1726	130232	492090	121332	0033					15 25		01	3100	491148	
1727	130232	493290	126332	0036					15 25		01	3600		
1728	130232	492090	121332	0033					15 25		01	3100	491148	
1729	130232	493290	126332	0036					15 25		01	3000		
1730	130231	397087	126332	0035					15 25		01	3600	491147	
1731	130212	492926	126312	0060					15 25		01	3500		
1732	130232	493290	126332	0036					15 25		01	3600		
1733	130212	492088	No Replacement Repair With Individual Parts.						15		01	4000		
1734	130212	492088	No Replacement Repair With Individual Parts.						15		01	4000		
1735	130212	492926	126312	0060					15 25		01	4000		
1736	130232	493290	126332	0036					15 25		01	3600		
1737	130252	397095	126352	0049					15 17 22 25		01	3600	491148	
1738	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
1739	130232	493290	126332	0036					15 25		01 02	3600 4000		
1740	130212	492088	126312	0023					15 25		01	3400		
1741	130202	492088	126332	0036					15 25		01	3800		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
1742	130232	492090	121332	0033					15 25		01 02	3700 3600	491148	
1743	130232	493290	126332	0036					15 25		All	3500		
1744	130252	397095	126352	0049					15 22 25		01	3300	491149	
1745	130232	397087	No Replacement Repair With Individual Parts.						15		01	3800		
1746	130232	397104	121332	0033					15 25		01	3700	491148	
1747	130232	493290	126332	0036					15 25		01	3600		
1748	130212	397105	No Replacement Repair With Individual Parts.						15		All	3700	496821	
1749	130232	492090	121332	0033					15 25		01	3100	491148	
1750	130232	493015	No Replacement Repair With Individual Parts.						15		01	4100		
1751	130232	493290	No Replacement Repair With Individual Parts.						15		01	4000		
1752	130232	493290	126332	0036					15 25		01	3600		
1753	130232	397087	126332	0035					15 25		01	4000	491147	
1754	130292	492088	No Replacement Repair With Individual Parts.						15		01	3300		
1755	130212	492088	126312	0023					15 25		01	3300		
1756	130232	493290	126332	0036					15 25		01	3600		
1757	130212	397104	No Replacement Repair With Individual Parts.						15		01	3700	496821	
1758	130232	493290	121332	0036					15 25		01	3600		
1759	130231	493290	126332	0036					15 25		01	3600		
1760	130231	397087	126332	0035					15 25		01	3600	491147	
1761	130212	492088	126312	0023					15 25		01	3600		
1762	130212	492926	126312	0060					15 25		01	4000		
1763	130202	492088	No Replacement Repair With Individual Parts.						15		01	4000		
1764	130212	397105	No Replacement Repair With Individual Parts.						15		01	3800		
1765	130202	492088	126332	0036					15 25		01	3500		
1766	130202	492088	126332	0036					15 25		01	3500		
1767	130232	493290	126332	0036					15 25		01	3600		
1768	130202	492088	126332	0036					15 25		01	3200		
1769	130202	397103	126332	0036					15 25		01	3600	491150	
1770	130212	492090	No Replacement Repair With Individual Parts.						15		01	3800	496821	
1771	130232	397087	126332	0035					15 25		01	3600	491147	
1772	130202	492088	126332	0036					15 25		01	3600		
1773	130232	493290	No Replacement Repair With Individual Parts.						15		01	4000		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
1774	130252	397095	126352	0049					15 22 25 113		01	4000	491149	
1775	130252	397095	126352	0049					15 17 22 25		01	3200	491149	
1776	130252	397095	126352	0049					15 22 25		01	4000	491149	
1777	130252	397095	126352	0049					15 17 22 25		01	3200	491149	
1778	130202	492088	126332	0036					15 25		01	3500		
1779	130232	493290	126332	0036					15 25		01	3600		
1780	130202	492088	126332	0036					15 25		01	3600		
1781	130232	493290	126332	0036					15 25		01	4000		
1782	130292	492088	No Replacement Repair With Individual Parts.						15		01	3500		
1783	130201	492088	126332	0036					15 25		01	4000		
1784	130232	492090	121332	0033					15 25		01	3600	491148	
1785	130292	492088	No Replacement Repair With Individual Parts.						15		01	3500		
1786	130232	493290	126332	0036					15 25		01	3350		
1787	130202	492088	126332	0036					15 25		01	3800		
1788	130252	397095	126352	0049					15 22 25		01	3600	491149	
1789	130202	492088	126332	0036					15 25		All	3800		
1790	130232	397087	126332	0035					15 25		01	3600	491147	
1791	130232	493290	126332	0036					15 25		01	3600		
1792	130252	397095	126352	0049					15 17 22 25		01	3200	491149	
1793	130232	493290	126332	0036					15 25		01	4000		
1794	130212	397104	No Replacement Repair With Individual Parts.						15		01	3700	496821	
1795	130202	492088	126332	0036					15 25		01	3600		
1796	130202	492088	126332	0036					15 25		01	3600		
1797	130202	492088	126332	0036					15 25		All	3800		
1798	130232	492090	121332	0033					15 25		01	3750	491148	
1799	130232	493290	126332	0036					15 25		01	3800		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
1800	130202	492088	126332	0036					15 25		01	3600		
1801	130212	397096	No Replacement Repair With Individual Parts.						15		01	3500		
1802	130252	397097	No Replacement Repair With Individual Parts.						15		01	3400		
1803	130231	493290	126332	0036					15 25		01	3600		
1804	130232	493290	126332	0036					15 25		01	3600		
1805	130232	397087	126332	0035					15 25		01	3600	491147	
1806	130232	397087	126332	0035					15 25		01	4000	491147	
1807	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
1808	130232	493290	126332	0036					15 25		01	3800		
1809	130232	492090	121332	0033					15 25		01	3100	491148	
1810	130252	397095	126352	0049					15 16 22 25		01	3000	491149	
1811	130232	493290	126332	0036					15 25		01	3600		
1812	130232	493290	126332	0036					15 25		01	3600		
1813	130207	397096	121337	0050					15 25		01	3600		
1814	130202	492088	126332	0036					15 25		01	3600		
1815	130212	492088	126312	0023					15 25		01	3600		
1816	130232	492090	121332	0033					15 25		01	3200	491148	
1817	130202	492088	126332	0036					15 25		01	4000		
1818	130232	493290	126332	0036					15 25		01	3600		
1819	130202	492088	126332	0036					15 25		01	3500		
1820	130212	397096	No Replacement Repair With Individual Parts.						15		All	3500		
1821	130212	492088	126312	0023					15 25		01	3600		
1822	130232	492090	121332	0033					15 25		01	3100	491148	
1823	130202	397096	No Replacement Repair With Individual Parts.						15		01	3400		
1824	130232	493290	126332	0036					15 25		01	4000		
1825	130252	397095	126352	0049					15 22 25		01	4000	491149	
1826	130202	492926	No Replacement Repair With Individual Parts.						15		01	4000		
1827	130212	492088	126312	0023					15 25		01	3600		
1828	130202	492088	126332	0036					15 25		01	3300		
1829	130232	493290	126332	0036					15 25		01	3800		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
1830	130232	397087	126332	0035					15 25		01	3800	491147	
1831	130232	493290	126332	0036					15 25		01	3350		
1832	130202	492088	126332	0036					15 25		01	3600		
1833	130232	493290	126332	0036					15 25		01	3600		
1834	130232	493290	126332	0036					15 25		01	3300		
1835	130232	493290	126332	0036					15 25		01	3500		
1836	130212	492926	126312	0060					15 25		01	4000		
1837	130202	492088	No Replacement Repair With Individual Parts.						15		01	4000		
1838	130232	493290	126332	0036					15 25		01	3600		
1839	130232	397087	126332	0035					15 25		01	3750	491147	
1840	130252	397095	126352	0049					15 22 25		01	3200		
1841	130232	397100	No Replacement Repair With Individual Parts.						15		01	3700		
1842	130202	492088	126332	0036					15 25		01	4000		
1843	130202	492088	126332	0036					15 25		01	3600		
1844	130202	397103	No Replacement Repair With Individual Parts.						15		01	3600	491150	
1845	130202	397103	No Replacement Repair With Individual Parts.						15		01	3600	491150	
1846	130202	492088	126332	0036					15 25		01	3600		
1847	130232	492090	121332	0033					15 25		01	3000	491147	
1848	130212	492088	No Replacement Repair With Individual Parts.						15		01	3600		
1849	130292	492088	No Replacement Repair With Individual Parts.						15		01	3500		
1850	130232	492090	121332	0033					15 25		01	3600	491148	
1851	130252	397095	126352	0049					15 17 22 25		01	3600	491149	
1852	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
1853	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
1854	130202	492088	126332	0036					15 25		01 02	3600 4000		
1855	130202	492088	126332	0036					15 25		01	3600		
1856	130212	492088	126312	0023					15 25		01	3600		
1857	130232	492090	121332	0033					15 25		01	3150	491148	
1858	130202	492088	126332	0036					15 25		01	3600		
1859	130202	492088	126332	0036					15 25		01 02 03	3600 3200 3600		
1860	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
1861	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
1862	130292	492088	No Replacement Repair With Individual Parts.						15		All	3600		
1864	130292	492088	No Replacement Repair With Individual Parts.						15		All	3800		
1865	130292	492088	No Replacement Repair With Individual Parts.						15		01	3300		
1866	130292	492088	No Replacement Repair With Individual Parts.						15		01	3500		
1867	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
1868	130292	492088	No Replacement Repair With Individual Parts.						15		All	3600		
1869	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
1870	130232	493290	126332	0036					15		01	3400		
									25					
1871	130252	397095	126352	0049					15		01	3600	491149	
									22					
									25					
1872	130202	492088	126332	0036					15		01	3200		
									25					
1873	130232	493290	126332	0036					15		01	3700		
									25					
1874	130252	397095	126352	0049					15		01	3600	491149	
									22					
									25					
1875	130202	492088	126332	0036					15		01	3800		
									25					
1876	130232	493290	126332	0036					15		01	3600		
									25					
1877	130212	492088	121312	0023					15		01	3700		
									25					
1878	130202	492088	126332	0036					15		01	3600		
									25					
1879	130232	493290	126332	0036					15		01	3150		
									25					
1880	130202	492088	126332	0036					15		01	3500		
									25					
1881	130202	397096	No Replacement Repair With Individual Parts.						15		01	3500		
1882	130292	492088	No Replacement Repair With Individual Parts.						15		01	3700		
1883	130212	492088	No Replacement Repair With Individual Parts.						15		01	4000		
1884	130237	397100	No Replacement Repair With Individual Parts.						15		01	3000		
1885	130232	493290	126332	0036					15		01	3400		
									25					
1886	130212	492088	No Replacement Repair With Individual Parts.						15		01	3900		
1887	130212	492088	126312	0023					15		01	3600		
									25					
1888	130202	492088	126332	0036					15		01	3600		
									25					
1889	130232	493290	126332	0036					15		01	3600		
									25					
1890	130202	397096	No Replacement Repair With Individual Parts.						15		01	3500		
1891	130202	492088	126332	0036					15		01	3600		
									25					
1892	130202	397096	No Replacement Repair With Individual Parts.						15		01	3500		
1893	130202	397096	No Replacement Repair With Individual Parts.						15		01	3600		
1894	130292	397096	No Replacement Repair With Individual Parts.						15		All	3600		
1895	130232	397100	No Replacement Repair With Individual Parts.						15		01	3700		
1896	130232	493290	126332	0036					15		01	3600		
									25					
1897	130212	397104	No Replacement Repair With Individual Parts.						15		All	3600	496821	
1898	130202	492926	No Replacement Repair With Individual Parts.						15		All	3500		
1899	130212	492088	126312	0023					15		All	3400		
									25					
1900	130292	492088	No Replacement Repair With Individual Parts.						15		All	3600		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
1901	130297	397096	No Replacement Repair With Individual Parts.						15		All	3600		
1902	130232	492090	121332	0033					15 25		01	3100	491148	
1903	130232	493290	126332	0036					15 25		01	3800		
1904	130232	493290	126332	0036					15 25		01	3600		
1905	130202	397103	No Replacement Repair With Individual Parts.						15		01	3200	491150	
1906	130202	397103	No Replacement Repair With Individual Parts.						15		01	3600	491150	
1907	130202	397103	No Replacement Repair With Individual Parts.						15		01	3200	491150	
1908	130202	397103	No Replacement Repair With Individual Parts.						15		01	3600	491150	
1909	130202	492088	126332	0036					15 25		01	3700		
1910	130202	492088	126332	0036					15 25		01	3200		
1911	130232	492090	121332	0033					15 25		All	3750	491148	
1912	130212	492088	126312	0023					15 25		01	3600		
1913	130232	397087	126332	0035					15 25		All	4000	491147	
1914	130232	492090	121332	0033					15 25		01	3100	491148	
1915	130202	397103	No Replacement Repair With Individual Parts.						15		01	3500	491150	
1916	130292	492088	No Replacement Repair With Individual Parts.						15		01	3500		
1917	130202	492088	126332	0036					15 25		01	3600		
1918	130232	397087	126332	0035					15 25		01	3600	491147	
1919	130212	492088	No Replacement Repair With Individual Parts.						15		01	3900		
1920	130212	492088	126312	0023					15 25		01	3600		
1921	130212	492088	126312	0023					15 25		01	4000		
1922	130202	492088	126332	0036					15 25		01	3600		
1923	130202	492088	126332	0036					15 25		01	3500		
1924	130202	492088	126332	0036					15 25		01	4000		
1925	130232	492090	121332	0033					15 25		01	3750	491148	
1926	130212	397104	No Replacement Repair With Individual Parts.						15		01	3600	496821	
1927	130252	397095	126352	0049					15 22 25		01	4000	491149	
1928	130206	397096	No Replacement Repair With Individual Parts.						15		01	3500		
1929	130293	397096	No Replacement Repair With Individual Parts.						15		01	3600		
1930	130203	397096	No Replacement Repair With Individual Parts.						15		01	3600		
1931	130292	492088	No Replacement Repair With Individual Parts.						15		01	3500		
1932	130232	493290	126332	0036					15 25		01	3400		
1933	130292	397096	No Replacement Repair With Individual Parts.						15		01	3600		
1935	130293	397096	No Replacement Repair With Individual Parts.						15		01	3600		
1936	130202	492088	126332	0036					15 25		01	3200		
1937	130212	397104	No Replacement Repair With Individual Parts.						15		01	3600	496821	



130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
1938	130212	492088	126312	0023					15 25		01	4000		
2015	130202	493290	121332	0036					15 25		01	4000		
2035	130232	397087	121332	0035					15 25		All	4000	694195	
2036	130232	493290	121332	0036					15 25		01	4000		
2038	130232	492090	121332	0033					15 25		All	3600	694196	
2039	130232	493015	No Replacement Repair With Individual Parts.						15		All	3600		
2049	130252	397095	126352	0049					15 22 25		All	4000		
2100	130232	397087	126332	0035					15 25		99	3600	491147	
2101	130232	493290	121332	0036					15 25		99	3600		
2102	130212	492088	121312	0023					15 25		01	3650		
2103	130232	493290	121332	0033					15 25		01	3600	491147	
2104	130252	397095	126352	0049					15 17 22 25		01	3600		
2105	130232	492090	121332	0033					15 25		01	3100	491148	
2106	130232	493290	126332	0036					15 25		01	3600		
2107	130232	492090	121332	0033					15 25		01	3150	491148	
2108	130232	492090	121332	0033					15 25		All	3150	491148	
2109	130232	493290	126332	0036					15 25		01	3400		
2110	130202	492088	126332	0036					15 25		01	3600		
2111	130212	492088	No Replacement Repair With Individual Parts.						15		01	3900		
2112	130207	397096	121337	0050					15 25		01	3600		
2113	130232	492090	121332	0033					15 25		01	3100	491148	
2114	130202	492088	126432	0036					15 25		01	3300		
2115	130232	492090	121332	0033					15 25		01	3100	491148	
2116	130212	397104	No Replacement Repair With Individual Parts.						15		01	3600	496821	
2117	130202	492088	126332	0036					15 25		01	3600		
2118	130232	492090	121332	0033					15 25				694196	
2119	130212	492088	126312	0023					15 25		01	3600		
2120	130202	492088	126332	0036					15 25		01	3500		
2121	130202	492088	126332	0036					15 25		All	3600		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
2122	130212	492088	126312	0023					15 25		01	3600		
2123	130232	397087	126332	0035					15 25		01	3600	491147	
2124	130232	493290	126332	0036					15 25		01	3600		
2125	130232	493290	126332	0036					15 25		01	3600		
2126	130232	493290	126332	0036					15 25		01	3200		
2127	130292	492088	No Replacement Repair With Individual Parts.						15		All	3600		
2128	130232	493290	126332	0036					15 25		01	3500		
2129	130232	397087	126332	0035					15 25		01	4000	491147	
2130	130232	493290	126332	0036					15 25		01	3200	491147	
2131	130232	492090	121332	0033					15 25		01	3150	491148	
2132	130232	397087	126332	0035					15 25		01	3600	491147	
2133	130202	492088	126332	0036					15 25		01	3600		
2134	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
2135	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
2136	130232	493290	121332	0036					15 25					
2137	130231	493290	126332	0036					15 25		01	3600		
2138	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
2139	130292	492088	No Replacement Repair With Individual Parts.						15		01	3800		
2140	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
2141	130212	492088	126312	0023					15 25		01	3600		
2142	130202	492088	126332	0036					15 25		01	3600		
2143	130212	492088	126312	0023					15 25		01	3900		
2144	130202	492088	126332	0036					15 25		01	3600		
2145	130207	397096	121337	0050					15 25		01	3600		
2147	130232	397087	126332	0035					15 25		01	4000	491147	
2148	130232	493290	126332	0036					15 25		01	4000		
2150	130232	493290	126332	0036					15 25		01	3600		
2151	130202	397095	No Replacement Repair With Individual Parts.						15		01	3500		
2152	130202	492088	126332	0036					15 25		01	3500		
2153	130202	397103	No Replacement Repair With Individual Parts.						15		01	3500	491150	
2154	130202	492088	126332	0036					15 25		01	3600		
2156	130232	492090	121332	0033					15 25		01	3100	491148	
2157	130202	492088	126332	0036					15 25		01	3600		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
2158	130232	492090	121332	0033					15 25		01	3150	491148	
2159	130212	397104	No Replacement Repair With Individual Parts.						15		01	3750	496821	
2160	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
2161	130231	397087	126332	0035					15 25		01	3300	491147	
2162	130232	493290	126332	0036					15 25		01	3600		
2163	130212	492088	No Replacement Repair With Individual Parts.						15		01	3900		
2164	130232	493290	No Replacement Repair With Individual Parts.						15		01	3600		
2165	130212	492088	126312	0023					15 25		01	3600		
2166	130232	493290	126332	0036					15 25		01	3600		
2167	130232	492090	121332	0033					15 25		01	3750	491148	
2168	130202	397096	No Replacement Repair With Individual Parts.						15		01	4000		
2169	130212	492088	No Replacement Repair With Individual Parts.						15		01	4000		
2170	130202	492088	126332	0036					15 25		01	3600		
2171	130232	492090	121332	0033					15 25		01	3750	491148	
2172	130212	492088	126312	0023					15 25		01	4000		
2173	130202	492088	126332	0036					15 25		01	4000		
2174	130202	492088	126332	0036					15 25		01	3200		
2175	130252	397095	126352	0049					15 25		01	3400	491149	
2176	130232	493290	126332	0036					15 25		01	3600		
2177	130202	492088	126332	0036					15 25		01	3200		
2178	130202	492088	126332	0036					15 25		01	4000		
2179	130292	492088	No Replacement Repair With Individual Parts.						15		01	3800		
2180	130232	493290	126332	0036					15 25		01	3150		
2181	130202	492088	126332	0036					15 25		01	3600		
2182	130232	492090	121332	0033					15 25		01	3150	491148	
2183	130232	492090	121332	0033					15 25		01	3100	491148	
2184	130232	493290	126332	0036					15 25		01	3600		
2185	130202	492926	No Replacement Repair With Individual Parts.						15		01	4000		
2186	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
2187	130202	492088	126332	0036					15 25		01	3200		
2188	130292	492088	No Replacement Repair With Individual Parts.						15		01	4000		
2189	130232	492090	121332	0033					15 25		01	3750	491148	
2190	130232	493290	126332	0036					15 25		01	2900		
2191	130232	492090	121332	0033					15 25		01	3700	491148	

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
2192	130202	492088	No Replacement Repair With Individual Parts.						15		01	4000		
2193	130252	397095	126352	0049					15		01	4000	491149	
									17					
									22					
									25					
2194	130232	493290	126332	0036					15		01	3800		
									25					
2195	130202	492088	No Replacement Repair With Individual Parts.						15		01	4000		
2196	130212	492088	126312	0023					15		01	3500		
									25					
2197	130232	493290	126332	0036					15		01	3600		
									25		02	4000		
2198	130202	492926	No Replacement Repair With Individual Parts.						15		01	3600		
2199	130202	397096	No Replacement Repair With Individual Parts.						15		01	3600		
2200	130297	397096	No Replacement Repair With Individual Parts.						15		01	4000		
2201	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
2202	130202	492088	No Replacement Repair With Individual Parts.						15		01	3600		
2203	130212	492088	No Replacement Repair With Individual Parts.						15		01	3600		
2204	130202	397085	No Replacement Repair With Individual Parts.						15		01	3600		
2206	130297	397096	No Replacement Repair With Individual Parts.						15		01	4000		
2207	130296	397096	No Replacement Repair With Individual Parts.						15		01	4000		
2208	130297	397096	No Replacement Repair With Individual Parts.						15		01	4000		
2903	130202	492926	No Replacement Repair With Individual Parts.						15		01	4000		
2915	130202	492088	126332	0036					15		All	4000		
									25					
2916	130202	492088	126332	0036					15		01	4000		
									25					
2920	130202	397103	No Replacement Repair With Individual Parts.						15		01	3500		
2923	130212	492088	126312	0023					15		01	4000		
									25					
2924	130212	397095	121312	0014					15		01	4000	491149	
									25					
2925	130207	397096	121337	0050					15		01	4000		
									25					
2934	130232	492090	121332	0033					15		01	3150	491148	
									25					
2935	130232	397087	126332	0035					15		All	4000	491147	
									25					
2936	130232	493290	126332	0036					15		All	4000		
									25					
2937	130232	397089	No Replacement Repair With Individual Parts.						15		01	4000		
2938	130232	492090	121332	0033					15		All	3700	491148	
									25					
2939	130232	493015	No Replacement Repair With Individual Parts.						15		All	3300		
2943	130232	493290	126332	0036					15		01	4000		
									25					
2949	130252	397095	126352	0049					15		All	4000	491149	
									22					
									25					
2970	130292	492088	No Replacement Repair With Individual Parts.						15		01	4000		
2971	130292	492088	No Replacement Repair With Individual Parts.						15		01	4000		
3001	130202	492088	126332	0036					15		01	3600		
									25					
3002	130232	493290	126332	0036					15		01	3600		
									25					
3003	130252	397095	126352	0049					15		01	3600	491149	
									22					
									25					

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
3004	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
3010	130202	492088	126332	0036					15		01	3600		
									25					
3011	130202	397103	No Replacement Repair With Individual Parts.						15		01	3200	491150	
3012	130202	397103	No Replacement Repair With Individual Parts.						15		01	3600	491150	
3013	130202	492088	126332	0036					15		01	3200		
									25					
3014	130232	493290	126332	0036					15		01	3600		
									25					
3015	130297	397096	No Replacement Repair With Individual Parts.						15		01	3600		
3016	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
3017	130232	493290	No Replacement Repair With Individual Parts.						15		01	3600		
											02	3600		
											03	4000		
3018	130232	397087	126332	0035					15		01	4000	491147	
									25					
3019	130252	397095	126352	0049					15		01	4000	491149	
									22					
									25					
3020	130232	493290	126332	0036					15		01	4000		
									25					
3021	130202	492088	No Replacement Repair With Individual Parts.						15		01	3800		
3022	130232	493290	126332	0036					15		01	3800		
									25					
3023	130232	397087	126332	0035					15		01	3600	491147	
									25					
3024	130232	397087	126332	0035					15		All	4000	491147	
									25					
3025	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
3026	130202	492088	126332	0036					15		01	3500		
									25					
3027	130252	397095	126352	0049					15		01	4000	491149	
									17					
									22					
									25					
3028	130202	492088	126332	0036					15		01	3600		
									25					
3029	130232	493290	126332	0036					15		01	3600		
									25					
3030	130232	493290	126332	0036					15		01	3750		
									25					
3031	130232	492090	121332	0033					15		01	4000	491148	
									25					
3032	130212	492088	No Replacement Repair With Individual Parts.						15		01	4000		
3033	130202	492088	126332	0036					15		01	4000		
									25					
3034	130202	492088	126332	0036					15		01	3600		
									25					
3035	130202	492088	126332	0036					15		01	3600		
									25					
3036	130202	492088	126332	0036					15		All	3600		
									25					
3037	130202	492088	126332	0036					15		All	3200		
									25					
3038	130202	492088	126332	0036					15		01	3200		
									25					
3039	130292	492088	No Replacement Repair With Individual Parts.						15		All	3600		
3040	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
3041	130212	397104	No Replacement		Repair With Individual Parts.				15		01	3600	496821	
3042	130202	492088	126332	0036					15 25		01	3200		
3043	130202	492088	126332	0036					15 25		01	3400		
3044	130202	492088	126332	0036					15 25		01	3100		
3045	130292	492088	No Replacement		Repair With Individual Parts.				15		01	3300		
3046	130212	492088	126312	0023					15 25		01	3300		
3047	130292	492088	No Replacement		Repair With Individual Parts.				15		01	3800		
3048	130217	397096	No Replacement		Repair With Individual Parts.				15		01	3000		
3049	130202	492088	No Replacement		Repair With Individual Parts.				15		01	3600		
3050	130202	492926	No Replacement		Repair With Individual Parts.				15		01	4000		
3051	130202	492088	No Replacement		Repair With Individual Parts.				15		01	3600		
3052	130232	492090	121332	0033					15 25		01	3150	491148	
3053	130202	492088	126332	0036					15 25		01	3800		
3054	130232	493290	126332	0036					15 25		01	4000		
3055	130232	493290	126332	0036					15 25		01	4000		
3056	130202	492088	126332	0036					15 25		01	3300		
3057	130252	397095	126352	0049					15 22 25		01	3300	491149	
3058	130232	493290	126332	0036					15 25		01	3800		
3059	130232	493290	126332	0036					15 25		01	3600		
3060	130292	492088	No Replacement		Repair With Individual Parts.				15		All	3600		
3061	130292	492088	No Replacement		Repair With Individual Parts.				15		01	3700		
3062	130202	492088	126332	0036					15 25		01	3200		
3063	130202	492088	126332	0036					15 25		01	4000		
3064	130212	492926	126312	0060					15 25		01	4000		
3065	130202	492088	126332	0036					15 25		01	3800		
3066	130202	492088	126332	0036					15 25		01	4000		
3067	130232	493290	126332	0036					15 25		01	3600		
3068	130232	493290	126332	0036					15 25		01	3600		
3069	130232	493290	121332	0036					15 25		01	3600		
3070	130232	493290	126332	0036					15 25		01	4000		
3071	130232	493290	126332	0036					15 25		01	3600		
3072	130232	492090	121332	0033					15 25		01	3150	491148	

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
3073	130252	397095	126352	0049					15 22 25		01	3600	491149	
3074	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
3075	130232	493290	126332	0036					15 25		01	3600		
3076	130232	492090	121332	0033					15 25		01	3750	491148	
3077	130212	492088	126312	0023					15 25		01	3200		
3078	130232	493290	No Replacement Repair With Individual Parts.						15		01	3200		
3079	130232	492090	121332	0033					15 25		01	3150	491148	
3080	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
3081	130232	397087	126332	0035					15 25		01	3750	491147	
3082	130232	493290	126332	0036					15 25		01	3600		
3083	130207	397096	121337	0050					15 25		01	3600		
3084	130232	492090	121332	0033					15 25		01	3150	491148	
3085	130232	397087	126332	0035					15 25		01	4000	491147	
3086	130252	397095	126352	0049					15 22 25		01	4000	491149	
3087	130202	492088	126332	0036					15 25		01	3600		
3088	130232	493015	No Replacement Repair With Individual Parts.						15		01	4000		
3089	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
3090	130232	493290	126332	0036					15 25		01	3200		
3091	130232	493290	126332	0036					15 25		01	3150		
3092	130212	492926	126312	0060					15 25		01	4000		
3093	130232	493290	126332	0036					15 25		01	3000		
3094	130202	492088	126332	0036					15 25		01	3700		
3095	130232	397087	126332	0035					15 25		01	4000	491147	
3096	130232	492090	121332	0033					15 25		01	3150	491148	
3097	130232	493290	126332	0036					15 25		01	3400		
3098	130232	493290	126332	0036					15 25		01	3300		
3099	130232	493290	126332	0036					15 25		01	3600		
3100	130232	493290	126332	0036					15 25		01	3600		
3101	130232	493290	126332	0036					15 25		01	4000		
3102	130202	492088	126332	0036					15 25		01	3800		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
3103	130202	492088	126332	0036					15 25		01	3600		
3104	130202	492926	No Replacement Repair With Individual Parts.						15		01	4000		
3105	130232	492090	121332	0033					15 25		01	3150	491148	
3106	130202	492088	126332	0036					15 25		01	3600		
3107	130202	492088	126332	0036					15 25		01	3200		
3108	130232	493290	126332	0036					15 25		01	4000		
3109	130202	492926	No Replacement Repair With Individual Parts.						15		01	4000		
3110	130212	397104	No Replacement Repair With Individual Parts.						15		01	3600	496821	
3111	130292	492088	No Replacement Repair With Individual Parts.						15		01	3500		
3112	130212	492926	126312	0060					15 25		01	3500		
3113	130202	397103	No Replacement Repair With Individual Parts.						15		01	3500		
3114	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600	491150	
3115	130232	493290	121332	0033					15 25		01	3150	491148	
3116	130202	397103	No Replacement Repair With Individual Parts.						15		01	3500		
3117	130232	492090	121332	0033					15 25		01	3150	491148	
3118	130212	492088	121312	0023					15 25		01	3600		
3119	130212	492088	121312	0023					15 25		01	3500		
3120	130212	492088	121312	0023					15 25		01	3700		
3121	130202	492088	126332	0036					15 25		01	3400		
3122	130202	492926	No Replacement Repair With Individual Parts.						15		01	4000		
3123	130232	493290	126332	0036					15 25		01	3600		
3124	130217	397096	No Replacement Repair With Individual Parts.						15		01	3600		
3125	130202	492088	126332	0036					15 25		01	3600		
3126	130202	492088	No Replacement Repair With Individual Parts.						15		01	4000		
3127	130212	492088	No Replacement Repair With Individual Parts.						15		01	3000		
3128	130202	492088	126332	0036					15 25		01	3000		
3129	130202	397103	No Replacement Repair With Individual Parts.						15		01	3600	491150	
3130	130202	397103	No Replacement Repair With Individual Parts.						15		01	3200	491150	
3131	130202	492088	126332	0036					15 25		01	3400		
3132	130252	397095	126352	0049					15 17 22 25		01	4000	491149	
3133	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
3134	130202	492088	No Replacement Repair With Individual Parts.						15		01	3600		
3135	130212	492088	126312	0023					15 25		01	3600		
3136	130202	492088	No Replacement Repair With Individual Parts.						15		01	4000		
3137	130202	492088	No Replacement Repair With Individual Parts.						15		01	3600		
3138	130217	397096	No Replacement Repair With Individual Parts.						15		01	3600		



130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
3139	130252	397095	126352	0049					15 22 25		01	4000	491149	
3140	130232	493290	126332	0036					15 25		01	4000		
3141	130232	492090	121332	0033					15 25		01	3150	491148	
3142	130202	492088	126332	0036					15 25		01	3600		
3143	130202	492088	126332	0036					15 25		All	3200		
3144	130202	492088	126332	0036					15 25		01	3600		
3145	130202	492088	126332	0036					15 25		01	3600		
3146	130232	493290	126332	0036					15 25		01	3500		
3147	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
3148	130212	492088	No Replacement Repair With Individual Parts.						15		01	3600		
3149	130202	492088	126332	0036					15 25		01	3200		
3150	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
3151	130202	492088	126332	0036					15 25		01	3600		
3152	130202	492926	No Replacement Repair With Individual Parts.						15		All	3600		
3153	130217	397096	No Replacement Repair With Individual Parts.						15		01	4000		
3154	130207	397096	121337	0050					15 25		01	2900		
3155	130232	492090	121332	0033					15 25		01	3700	491148	
3156	130202	492088	126332	0036					15 25		01	2950		
3157	130232	493290	126332	0036					15 25		01	4000		
3158	130202	492088	126332	0036					15 25		01	3600		
3159	130212	492926	126312	0060					15 25		01	4000		
3160	130202	492088	No Replacement Repair With Individual Parts.						15		01	3600		
3161	130202	492088	No Replacement Repair With Individual Parts.						15		01	3600		
3162	130232	493290	126332	0036					15 25		01	3600		
3163	130202	492088	126332	0036					15 25		01	3200		
3164	130232	493290	126332	0036					15 25		01	3600 4000		
3165	130232	493290	126332	0036					15 25		01	3600		
3166	130202	397103	No Replacement Repair With Individual Parts.						15		01	3500	491150	
3167	130212	492088	No Replacement Repair With Individual Parts.						15		01	3600		
3168	130292	492088	No Replacement Repair With Individual Parts.						15		01	4000		
3169	130212	492088	No Replacement Repair With Individual Parts.						15		01	3600		
3170	130202	492088	126332	0036					15 25		01	3800		
3171	130292	492088	No Replacement Repair With Individual Parts.						15		01	3500		
3172	130202	397103	No Replacement Repair With Individual Parts.						15		01	3500		
3173	130202	492088	126332	0036					15 25		01	3600		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
3174	130232	493015	No Replacement Repair With Individual Parts.						15		01	3700		
3175	130232	493290	126332	0036					15 25		01	3600		
3176	130232	493290	126332	0036					15 25		01	3500		
3177	130202	492088	126332	0036					15 25		01	3600		
3178	130212	492088	126312	0023					15 25		01	3000		
3179	130252	397095	126352	0049					15 16 22		01	3600	491149	
3180	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
3181	130231	397087	121332	0035					15 25		01	3600	491147	
3182	130212	397104	No Replacement Repair With Individual Parts.						15		01	3750	496821	
3183	130231	493290	121332	0036					15 25		01	3600		
3184	130292	492088	No Replacement Repair With Individual Parts.						15		01	4000		
3185	130232	492090	121332	0033					15 25		01	3700	491148	
3186	130212	492926	126312	0060					15 25		01	4000		
3187	130212	492088	126332	0023					15 25		01	3750		
3188	130232	493290	126332	0036					15 25		01	3400		
3189	130232	493015	No Replacement Repair With Individual Parts.						15		01	3700		
3190	130212	492088	126312	0023					15 25		01	3600		
3191	130232	493290	126332	0036					15 25		01	3600		
3192	130202	492088	126332	0036					15 25		01	3200		
3193	130232	397087	126332	0035					15 25		01	3600	491147	
3194	130232	493290	126332	0036					15 25		01	3800		
3195	130232	493290	126332	0036					15 25		All	3800		
3196	130212	492088	No Replacement Repair With Individual Parts.						15		01	3600		
3197	130232	397104	121332	0033					15 25		01	3150	491148	
3198	130212	492088	No Replacement Repair With Individual Parts.						15		01	4000		
3199	130212	492088	No Replacement Repair With Individual Parts.						15		01	3600		
3200	130202	492088	No Replacement Repair With Individual Parts.						15		01	3600		
3201	130292	492088	No Replacement Repair With Individual Parts.						15		All	3600		
3202	130202	397103	No Replacement Repair With Individual Parts.						15		01	3200	491150	
3203	130232	493290	126332	0036					15 25		01	3000		
3204	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
3205	130202	492088	126332	0036					15 25		01	3600		
3206	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
3207	130202	492088	No Replacement Repair With Individual Parts.						15		01	4000		
3208	130232	492090	121332	0033					15 25		01	3700	491148	

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
3210	130232	493290	126332	0036					15 25		01	3500		
3211	130202	492088	126332	0036					15 25		01	3400		
3212	130232	493290	No Replacement Repair With Individual Parts.						15		01	3200		
3213	130292	492088	No Replacement Repair With Individual Parts.						15		01	3700		
3214	130202	492088	126332	0036					15 25		01	3500		
3215	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
3216	130202	492088	126332	0036					15 25		01	3600		
3217	130212	492088	126312	0023					15 25		All	3600		
3218	130212	492926	126312	0060					15 25		01	4000		
3219	130202	492926	No Replacement Repair With Individual Parts.						15		01	4000		
3220	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
3221	130297	397096	No Replacement Repair With Individual Parts.						15		01	3600		
3222	130212	492926	126312	0060					15 25		01	4000		
3223	130212	492088	126312	0023					15 25		01	3600		
3224	130212	397104	No Replacement Repair With Individual Parts.						15		01	3750	496821	
3225	130252	397095	126352	0049					15 22 25 113		01	3600	491149	
3226	130202	492088	126332	0036					15 25		01	3600		
3227	130212	492088	126312	0023					15 25		01	3600		
3228	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
3229	130212	492088	126312	0023					15 25		01	3400		
3230	130232	492090	121332	0033					15 25		01	3750	491148	
3231	130212	492088	126312	0023					15 25		01	3400		
3232	130297	397096	No Replacement Repair With Individual Parts.						15		01	3700		
3233	130212	492088	No Replacement Repair With Individual Parts.						15		01	3600		
3234	130202	492088	No Replacement Repair With Individual Parts.						15		01	3600		
3235	130292	492088	No Replacement Repair With Individual Parts.						15		01	3700		
3236	130292	492088	No Replacement Repair With Individual Parts.						15		01	3700		
3237	130297	397096	No Replacement Repair With Individual Parts.						15		01	3700		
3238	130202	492088	126332	0036					15 25		01	3500		
3239	130202	492088	126332	0036					15 25		01	3800		
3240	130232	493290	126332	0036					15 25		01	3400		
3241	130212	492088	126312	0023					15 25		01	2600		
3242	130202	492088	126332	0036					15 25		01	3600		
3243	130212	492088	126312	0023					15 25		01	3600		
3244	130297	397096	No Replacement Repair With Individual Parts.						15		01	3700		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
3245	130212	492926	126312	0060					15 25		01	3600		
3246	130212	397104	No Replacement Repair With Individual Parts.						15		01	3750	496821	
3247	130212	397104	No Replacement Repair With Individual Parts.						15		01	3750	496821	
3248	130203	494413	No Replacement Repair With Individual Parts.						15		01	4000		
3249	130202	492088	126332	0036					15 25		01	3600		
3250	130212	492926	126312	0060					15 25		01	3500		
3251	130297	397096	No Replacement Repair With Individual Parts.						15		01	3600		
3252	130232	493290	126332	0036					15 25		01	3600		
3253	130217	397096	No Replacement Repair With Individual Parts.						15		01	2900		
3254	130292	492088	No Replacement Repair With Individual Parts.						15		01	3400		
3255	130202	494413	No Replacement Repair With Individual Parts.						15		01	4000		
3256	130202	397103	No Replacement Repair With Individual Parts.						15		02	3200	491150	
3257	130232	492090	121332	0033					15 25		01	3150	491148	
3258	130232	493290	126332	0036					15 25		01	3400		
3259	130202	492088	126332	0036					15 25		01	3600		
3260	130232	493290	126332	0036					15 25		01	3600		
3261	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
3262	130232	493290	No Replacement Repair With Individual Parts.						15		01	3800		
3263	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
3264	130232	493290	126332	0036					15 25		01	3600		
3265	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
3266	130232	493290	126332	0036					15 25		01	3800		
3267	130217	397095	No Replacement Repair With Individual Parts.						15		01	3600		
3268	130232	493290	126332	0036					15 25		01	3800		
3270	130202	492088	126332	0036					15 25		01	3400		
3271	130212	397104	No Replacement Repair With Individual Parts.						15		01	3750	496821	
3272	130232	493290	126332	0036					15 25		01	3800		
3273	130202	492088	126332	0036					15 25		01	3600		
3274	130212	492926	126312	0060					15 25		01	3600		
3275	130232	493290	126332	0036					15 25		01	3400		
3276	130212	492926	126312	0060					15 25		01	3800		
3277	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
3278	130232	493290	126332	0036					15 25		All	3600		
3279	130212	493290	126312	0023					15 25		All	3600		
3280	130202	492088	126332	0036					15 25		01	3200		
3281	130232	493290	126332	0036					15 25		01	4000		
3283	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
3284	130212	492088	126312	0023					15 25		01	3600		
3285	130202	492088	126332	0036					15 25		01	3300		
3286	130202	492088	126332	0036					15 25		01	3600		
3287	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
3288	130232	493290	126332	0036					15 25		01	3600		
3289	130212	492926	126312	0060					15 25		01	3800		
3290	130212	492926	126312	0060					15 25		01	3800		
3291	130212	492088	126312	0023					15 25		01	3600		
3292	130232	493290	126332	0036					15 25		01	3600		
3293	130232	493290	126332	0036					15 25		01	3800		
3294	130232	493290	126332	0036					15 25		01	4000		
3295	130232	493290	126332	0036					15 25		01	3700		
3296	130212	492926	126312	0060					15 25		01	3800		
3297	130212	492926	126312	0060					15 25		01	4000		
3298	130212	492926	121312	0060					15 25		01	3400		
3299	130212	492926	121312	0060					15 25		01	3600		
4001	130202	492088	No Replacement Repair With Individual Parts.						15		01	3600		
4002	130202	492088	126332	0036					15 25		01	3600		
4003	130202	492926	No Replacement Repair With Individual Parts.						15		01 02 03 04	4000 4000 3600 3600		
4004	130202	492088	126332	0036					15 25		01	3600		
4005	130202	492088	126332	0036					15 25		All	3600		
4006	130212	492088	No Replacement Repair With Individual Parts.						15		01	3600		
4007	130212	492926	126312	0060					15 25		01 02 03	4000 4000 3750		
4008	130232	493290	126332	0036					15 25		01 02 03 05 06 07 08	4000 4000 4000 4000 3600 3600 3600		
4009	130232	493290	126332	0036					15 25		01	4000		
4010	130232	492090	121332	0036					15 25		01	3150	491148	
4011	130297	397095	No Replacement Repair With Individual Parts.						15		01	3600		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
4012	130212	492088	126312	0023					15 25		01	3750		
4013	130217	397095	No Replacement Repair With Individual Parts.						15		01	3600		
4014	130202	492088	126332	0036					15 25		All	3600		
4015	130202	492088	126332	0036					15 25		All	3600		
4016	130202	492088	126332	0036					15 25		01	3500		
4017	130232	493290	126332	0036					15 25		01	4000		
4018	130232	493290	126332	0036					15 25		All	3000		
4019	130232	493290	126332	0036					15 25		01	3600		
4020	130202	397103	No Replacement Repair With Individual Parts.						15		01	3500	491150	
4021	130212	492088	126312	0023					15 25		All	3600		
4022	130232	493290	126332	0036					15 25		All	3400		
4023	130212	492088	126312	0023					15 25		01 02 03	3600 3600 4000		
4025	130207	494071	121337	0050					15 25		01	3600		
4026	130212	492088	126332	0023					15 25		01	3600		
4027	130232	493290	126332	0036					15 25		All	3500		
4028	130202	492088	126332	0036					15 25		All	3600		
4029	130232	493290	126332	0036					15 25		01	3300		
4030	130202	492088	126332	0036					15 25		01	3000		
4031	130232	493290	126332	0036					15 25		01	3300		
4032	130232	493290	126332	0036					15 25		01	3400		
4033	130232	493290	126332	0036					15 25		01	3300		
4034	130292	492088	No Replacement Repair With Individual Parts.						15		01	3600		
4035	130232	397087	126332	0035					15 25		01 03 04	4000 4000 3600	491147	
4036	130232	493290	126332	0036					15 25		All	3800		
4038	130232	492090	121332	0033					15 25		All	3750	491148	
4043	130232	493290	126332	0036					15 25		All	4000		
4049	130252	397095	126352	0049					15 22 25		All	3600	491149	
4050	130252	397095	126352	0049					15 22 25		01	3600	491149	

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
4051	130252	397095	126352	0049					15 22 25		01	3600	491149	
4070	130292	492088	No Replacement Repair With Individual Parts.						15		01 02	4000 3800		
4071	130292	492088	No Replacement Repair With Individual Parts.						15		01 02 03	4000 3800 3800		
4072	130232	492090	121332	0033					15 25		01	3150	694196	
4073	130202	492088	126332	0036					15 25		01	3600		
5101	130232	493898	No Replacement Repair With Individual Parts.						15		01	3600		
5102	130232	493898	No Replacement Repair With Individual Parts.						15		01	3600		
5111	130232	493290	No Replacement Repair With Individual Parts.						15		01	4000		
5112	130232	493290	No Replacement Repair With Individual Parts.						15		01	4000		
5130	130232	397090	121332	0033					15 25		All	3750	694196	
5131	130252	397094	121352	0049					15 25		01	4000		
5132	130232	397090	121332	0033					15 25		01	3150	694196	
5133	130232	397090	121332	0033					15 25		01	3150	694196	
5134	130232	397090	121332	0033					15 25		01	3150	694196	
5135	130232	493898	121332	0036					15 25		01	3600		
5136	130232	493898	121332	0036					15 25		01	3600		
5137	130232	397090	121332	0033					15 25		01	3800	694196	
5138	130232	493898	121332	0036					15 25		01	3600		
5139	130232	397090	121332	0033					15 25		01	3100	694196	
5140	130232	397090	121332	0033					15 25		01	3750	694196	
5141	130252	397094	121352	0049					15 22 25		01	4000		
5142	130232	397090	121332	0033					15 25		01	3100	694196	
5143	130232	492089	121332	0035					15 25		01	4000	694195	
5144	130232	397090	121332	0033					15 25		01	3100	694196	
5145	130232	397090	121332	0033					15 25		All	3100	694196	
5146	130232	397090	121332	0033					15 25		01	3600	694196	
5147	130232	492089	121332	0035					15 25		01	3600	694195	
5148	130237	397099	No Replacement Repair With Individual Parts.						15		01	3700		
5149	130232	397099	No Replacement Repair With Individual Parts.						15		01	3700		
5150	130232	397090	121332	0033					15 25		01	3800	694196	
5151	130237	397099	No Replacement Repair With Individual Parts.						15		01	3700		

130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
5200	130232	397090	121332	0033					15 25		01	3150	694196	
5201	130232	397090	121332	0033					15 25		01	3150	694196	
5202	130252	397094	126352	0049					15 25		01	4000		
5203	130232	492089	121332	0035					15 25		01	3600	694195	
5204	130232	397090	121332	0033					15 25		01	3750	694196	
5205	130232	397090	121332	0033					15 25		01	3600	694196	
5206	130232	397090	121332	0033					15 25		01	3150	694196	
5207	130232	492089	121332	0035					15 25		01	4000	694195	
5208	130232	397090	121332	0033					15 25		01	3800	694196	
5209	130232	397090	121332	0033					15 25		01	3150	694196	
5210	130232	397101	No Replacement Repair With Individual Parts.						15		01	4000		
5211	130232	492089	121332	0035					15 25		01	4000	694195	
5212	130232	493898	121332	0036					15 25		01	4000		
5213	130232	493898	121332	0036					15 25		01	3600		
5214	130232	397090	121332	0033					15 25		01	3150	694196	
5215	130232	492089	126332	0035					15 25		01	3750	694195	
5216	130232	397090	121332	0033					15 25		01	3150	694196	
5217	130232	492089	No Replacement Repair With Individual Parts.						15		01	4000		
5218	130232	397101	No Replacement Repair With Individual Parts.						15		01	4000		
5219	130232	397090	121332	0033					15 25		01	3100	694196	
5220	130232	492089	No Replacement Repair With Individual Parts.						15		01	4000		
5221	130232	397101	No Replacement Repair With Individual Parts.						15		01	4000		
5222	130252	397094	126352	0049					15 16 22 25		01	4000	694197	
5223	130232	397090	121332	1038					15 25		01	3150	694196	
5224	130232	493898	121332	0036					15 25		01	4000		
5225	130232	397090	121332	0033					15 25		01	3150	694196	
5226	130232	397090	121332	0033					15 25		01	3150	694196	
5227	130232	397090	121332	0033					15 25		01	3150	694196	
5228	130232	397090	121332	0033					15 25		01	3150	694196	
5229	130232	397090	121332	0033					15 25		All	3150	694196	



130200 to 130299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
5230	130252	397094	126352	0049	1	211293			15 16 22 25		01	2750	694197	
5231	130232	492089	No Replacement Repair With Individual Parts.						15		01	3600		
5232	130232	397090	121332	0033					15 25		01	3150	694196	
5233	130232	397090	121332	0033					15 25		01	3150	694196	
5234	130232	397090	121332	0033					15 25		01	3150	694196	
5235	130232	397090	121332	0033					15 25		01	3150	694196	
5236	130232	397090	121332	0033					15 25		01	3750	694196	
5237	130212	493980	No Replacement Repair With Individual Parts.						15		01	3750	496821	
5238	130232	397090	121332	0033					15 25		01	3750	694196	
5239	130212	493980	No Replacement Repair With Individual Parts.						15		01	3750	496821	
5240	130232	397090	121332	0033					15 25		01	3150	694196	
5241	130232	493898	No Replacement Repair With Individual Parts.						15		01	3600		
5242	130237	493290	No Replacement Repair With Individual Parts.						15		01	3150		
5243	130212	493980	No Replacement Repair With Individual Parts.						15		01	3750	496821	
5244	130232	397090	121332	0033					15 25		01	3150	694196	
5245	130297	494071	No Replacement Repair With Individual Parts.						15		01	3600		
5246	130212	494035	No Replacement Repair With Individual Parts.						15		01	3750	496821	
5247	130212	494035	No Replacement Repair With Individual Parts.						15		01	3750	496821	
5501	130232	397090	121332	0033					15 25		All	3750	694196	
5502	130232	397090	121332	0033					15 25		01	3750	694196	
5503	130232	397090	121332	0033					15 25		All	3150	694196	
5504	130232	492089	121332	0035					15 25		01	4000	694195	
5505	130232	493898	121332	0036					15 25		01	3600		
5506	130232	493898	121332	0036					15 25		01	4000		
5507	130232	397090	121332	0033					15 25		01	3150	694196	
5508	130232	397090	121332	0033					15 25		All	3150	694196	
5509	130232	397090	121332	0033					15 25		01	3150	694196	
5510	130232	493015	No Replacement Repair With Individual Parts.						15		01	4000		