FORM MS-0380-3/01 REPLACES FORM MS-0380-7/00 FILE IN SECT. 2B OF SERVICE ENGINE SALES MANUAL

133700 to 133799



MODEL 133700 SERIES ENGINES REPLACED WITH STANDARD SERVICE ENGINES

In most cases, the Original Type numbers shown may be replaced by a Service Type Number without making any changes. Necessary changes of engine parts such as crankshafts, reduction parts, blower housings, etc., are noted. Other differences, such as mufflers, elbows, deflectors, etc., are not listed but are very important for safety and engine performance. Be sure the exhaust system on the replacement engine duplicates the system originally selected by the equipment manufacturer. Parts that are suitable for additional use should be transferred. Before making any conversion, check the data shown in the column labeled "REMOVE, ADD and NOTE." See if the changes, which are shown, are actually necessary on the application in question. Often a standard service engine will be a WORKABLE replacement without converting to such things as a special fuel tank or starter position.

If the crankshaft number does not appear in the "Original Engine" column, consult the Illustrated Parts List for the correct service replacement crankshaft number.

Engine Replacement Notes:

Short Block Notes:

The SHORT BLOCK part number shown, is the assembly which can be used to rebuild the Original Type Number. If a letter appears after the short block number, it indicates the short block must be modified. The change denoted by each letter is as follows:

133700 to 133799

Original Engine			Make From		Remove Add				Change			Short Block		
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #	Note	to Type	Trim	RPM	Part #	Notes
0002	133702	493410	No Re	placement	Repai	r With Indi	ividual F	Parts.			All	3000	497152	
0007	133702	493410	No Re	placement	Repai	r With Indi	ividual F	Parts.			All	3600	497152	
0015	133702	397109	No Re	placement	Repai	r With Indi	ividual F	Parts.			All	3200	497150	
0016	133702	492091	No Re	placement	Repai	r With Indi	ividual F	Parts.			All	3200	497151	
0017	133702	493410	No Re	placement	Repai	r With Indi	ividual F	Parts.			All	3500	497152	
0027	133702	493410	No Re	placement	Repai	r With Indi	ividual F	⊃arts.			All	3200	497152	
0117	133702	493410	No Re	placement	Repai	r With Indi	ividual F	⊃arts.			All	3200	497152	
0124	133702	493410	No Re	placement	Repai	r With Indi	ividual F	Parts.			All	2900	497152	
0125	133702	397109	No Re	placement	Repai	r With Indi	ividual F	Parts.			All	3500	497150	
0126	133702	397109	No Re	placement	Repai	r With Indi	ividual F	Parts.			All	3300	497150	
0127	133702	493410	No Re	placement	Repai	r With Indi	ividual F	Parts.			All	3500	497152	
0129	133702	493410	No Re	placement	Repai	r With Indi	ividual F	Parts.			All	2900	497152	
0130	133702	493410	No Re	placement	Repai	r With Indi	ividual F	Parts.			All	3500	497152	
0131	133702	492091	No Re	placement	Repai	r With Indi	ividual F	Parts.			All	3500	497151	
0132	133702	492091	No Re	placement	Repai	r With Indi	ividual F	⊃arts.			All	3500	497151	
0133	133702	493410	No Re	placement	Repai	r With Indi	ividual F	⊃arts.			All	3600	497152	
0134	133702	493410	No Re	placement	Repai	r With Indi	ividual F	Parts.			All	3600	497152	
0135	133702	493410	No Re	placement	Repai	r With Indi	ividual F	⊃arts.			All	3500	497152	
0136	133702	493410	No Re	placement	Repai	r With Indi	ividual F	⊃arts.			All	3500	497152	
0137	133702	492091	No Re	placement	Repai	r With Indi	ividual F	⊃arts.			All	3500	497151	
0138	133702	492092	No Re	placement	Repai	r With Indi	ividual F	⊃arts.			All	4000		
0139	133702	397109	No Re	placement	Repai	r With Indi	ividual F	⊃arts.			All	3500	497150	
0140	133702	496842	No Re	placement	Repai	r With Indi	ividual F	Parts.			All	3500	497153	
0141	133702	493410	No Re	placement	Repai	r With Indi	ividual F	Parts.			All	3200	497152	
0142	133702	493410	No Re	placement	Repai	r With Indi	ividual F	⊃arts.			All	3500	497152	
0143	133702	397109	No Rep	placement	Repai	r With Indi	ividual F	Parts.			All	3500	497150	
0144	133702	493410	No Rep	placement	Repai	r With Indi	ividual F	Parts.			All	3000	497152	
0145	133702	495479	No Rep	placement	Repai	r With Indi	ividual F	Parts.			All	3200		
0146	133702	496842	No Rep	placement	Repai	r With Indi	ividual F	Parts.			All	3000	497153	
0147	133702	493410	No Re	placement	Repai	r With Indi	ividual F	Parts.			All	3200	497152	
0148	133702	495479	No Rep	placement	Repai	r With Indi	ividual F	Parts.			All	3600		

For Briggs & Stratton Discount Parts Call 606-678-9623 or 606-561-4983

133700 to 133799

Original Engine			Make From		Remove		Add			Change			Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #	Note	to Type	Trim	RPM	Part #	Notes
0150	133702	498234	No Re	placement	Repa	r With Indi	ividual	Parts.	-		All	3000		
0153	133702	496842	No Re	placement	Repa	r With Indi	ividual	Parts.			All	3100	497153	
0158	133702	496842	No Re	placement	Repa	ir With Indi	ividual	Parts.			All	3200	497153	
0170	133702	496842	No Re	placement	Repa	ir With Indi	ividual	Parts.			All	3100	497153	
0180	133702	493410	No Re	placement	Repa	ir With Indi	ividual	Parts.			All	3500	497152	
0181	133702	492091	No Re	placement	Repa	ir With Indi	ividual	Parts.			All	3100	497151	