


1170 S/N 1H019H - 1H310H
42" Cutting Deck Assembly

Page 1 of 48

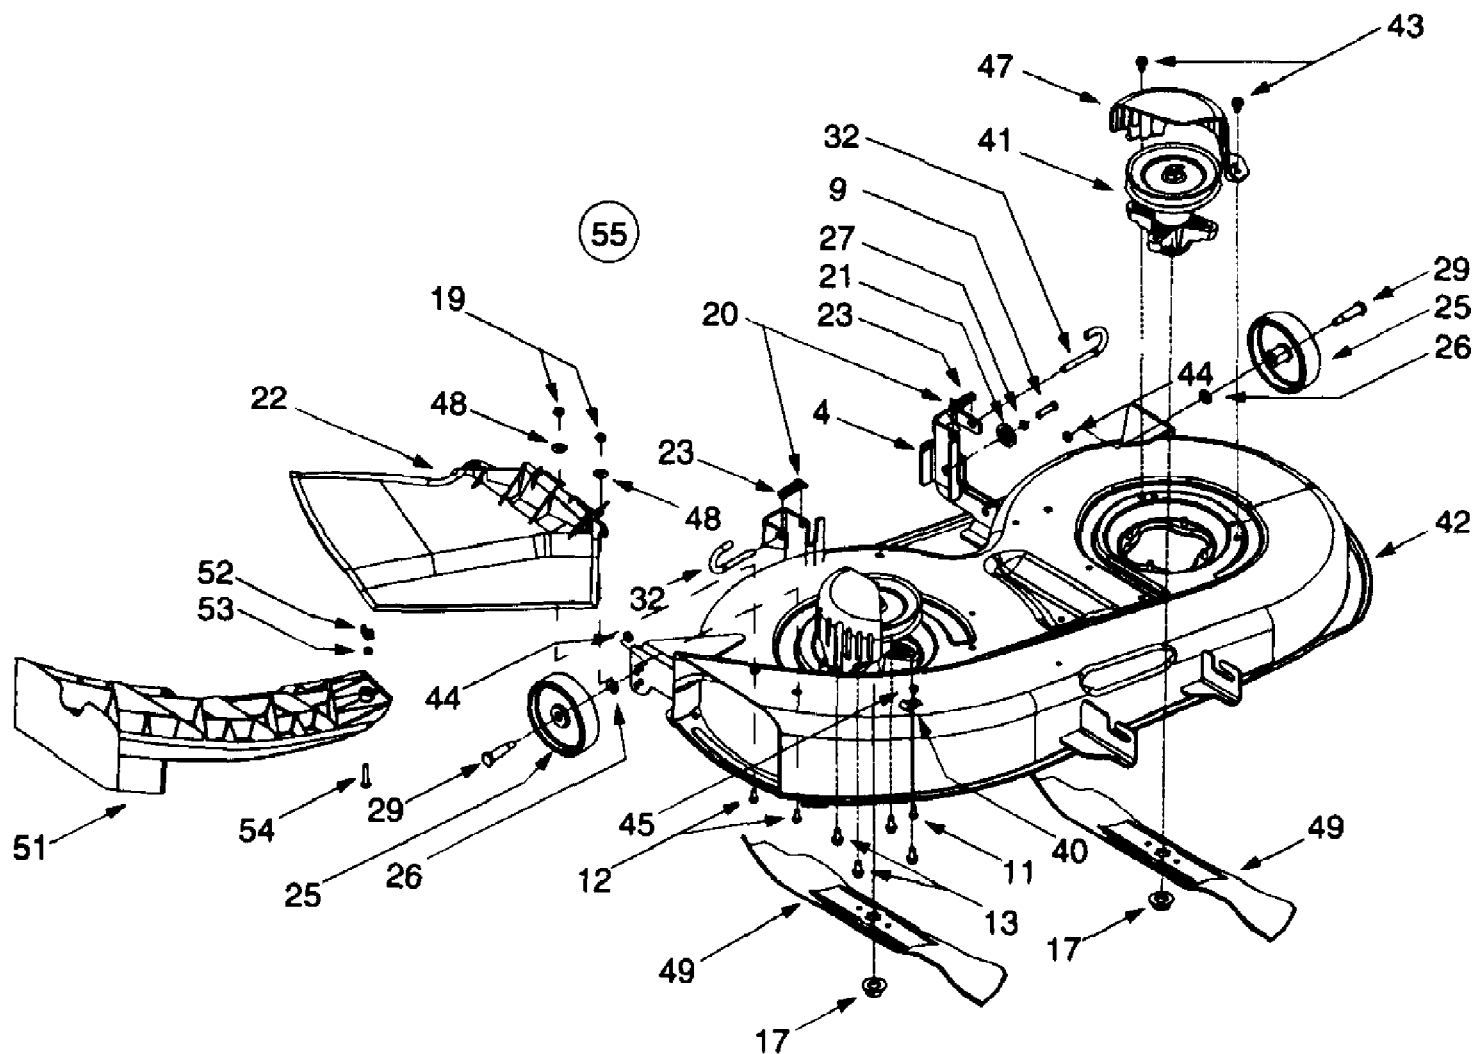


1170 S/N 1H019H - 1H310H
42" Cutting Deck Assembly

Page 2 of 48

Ref #	Part Number	Qty	S/P/F	Description
4	683-0254	1	S	Deck Adjustment Bracket w/ Weld Nut
9	710-0528	1	/P	Hex Cap Screw, 5/16-18 x 1.25
11	710-0650	1	/P	Self Tapping Screw, 5/16-18 x .875
12	710-0751	1	/P	Hex Cap Screw, 1/4-20 x .62
13	710-1260A	1	/P	Self Tapping Screw, 5/16-18 x .75
17	712-0417A	1	/P	Hex Flange Nut, 5/8-18
19	712-3027	1	S	Hex Flange Lock Nut, 1/4-20
20	714-0104	1	S	Internal Cotter Pin, .072 x 1.12
21	717-1553A	1	S	Deck Adjustment Gear
22	731-1032B	1	S	Side Discharge Chute Assembly
23	732-0306	1	S	Compression Spring, .406 x .531 x 1.75
25	734-0973	1	/P	Deck Wheel, 5 x 1.38
26	736-0105	1	/P	Bell Washer, .401 x .87 x .063
27	736-0119	1	S	Lock Washer, 5/16
29	738-0373	1	S	Shoulder Spacer, .498 x 1.53
32	747-1116	1	/P	Deck Release Pin
40	16606	1	S	Retainer Hook
41	618-0427	1	S	Spindle Assembly w/ Fitting, 5.75 Dia
42	683-0198B	1	S	42-inch Deck Shell
43	710-0604A	1	/P	Self Tapping Screw, 5/16-18 x .625
44	712-0181	1	S	Top Lock Jam Nut, 3/8-16
45	712-0271	1	/P	Hex Sems Nut, 1/4-20
46	712-3006	1	/P	Hex Nut, 1/4-20
47	731-2231	1	S	Belt Cover
48	736-0270	1	/P	Bell Washer, .265 x .75 x .062
49	742-0616	1	S	Three-in-one Blade, Star Center, 21.23
51	731-1643A	1	S	Mulch Plug, 42-inch Decks
52	712-3087	1	/P	Wing Nut, 1/4-20
53	712-0291	1	S	Center Lock Nut, 1/4-20
54	710-0106	1	/P	Hex Cap Screw, 1/4-20 x 1.25
55	753-0873	1	/P	42-inch Deck Assembly Complete (w/o mulch kit)

1170 S/N 1H019H - 1H310H
Briggs & Stratton Industrial Plus Single

Page 3 of 48

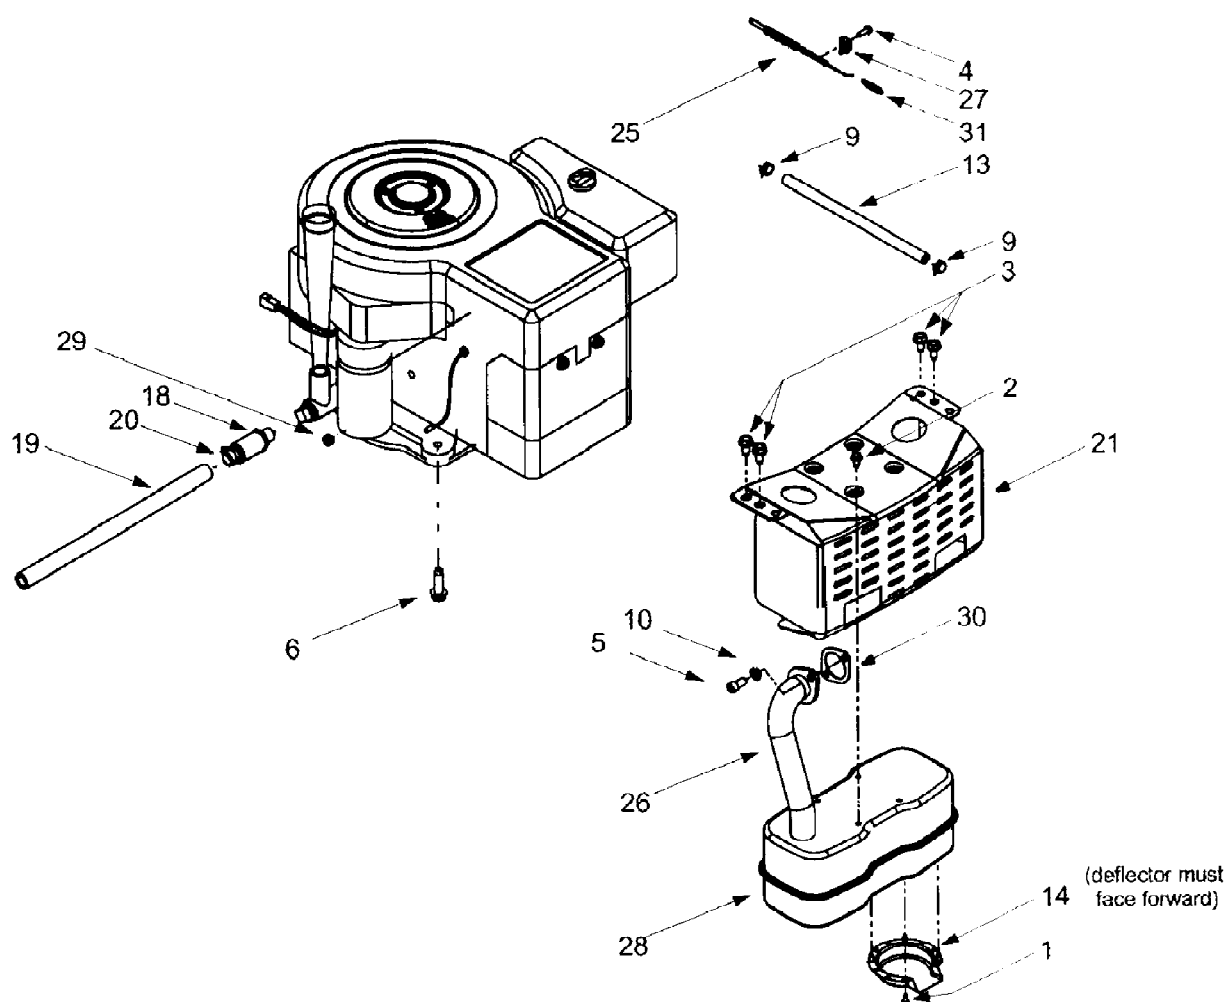


1170 S/N 1H019H - 1H310H
Briggs & Stratton Industrial Plus Single

Page 4 of 48

Ref #	Part Number	Qty	S/P/F	Description
1	710-0227	1	/P	Self-tapping Screw, #8-18 x.5
2	710-0599	1	/P	Self-tapping Screw, 1/4-20 x.5
3	710-0604A	1	/P	Self-tapping Screw, 5/16-18 x .625
4	710-1237	1		Screw, #10-32 x .625
5	710-1314	1	S	Socket Cap Screw, 5/16-18 x .625
6	710-1315	1	/P	Self-tapping Screw, 3/8-16 x 1.25
9	726-0205	1	/P	Hose Clamp
10	736-0119	1	S	Lock Washer, 5/16
13	751-0535	1		Fuel Line Hose
14	751-0564	1	S	Muffler Deflector
18	751-3140	1	S	Oil Drain Valve
19	751-3141	1	S	Oil Drain Hose
20	751-3142	1		Oil Drain Cap
21	783-0615	1	S	Muffler Heat Shield
25	746-1084	1	S	Throttle/Choke Cable (Industrial Plus Single)
26	751-0619	1	S	Exhaust Pipe (Industrial Plus Single)
27	751B213146	1	/P	Casing Clamp
28	751-0617	1	S	Muffler, Single Inlet
29	712-0271	1	/P	Hex Sems Nut, 1/4-20 (For starter cable)
30	721-0208	1	S	Exhaust Gasket (Industrial Plus Single)
31	732-0966	1		Extension Spring, .275 x 1.25

1170 S/N 1H019H - 1H310H
Briggs & Stratton Industrial Plus Twin

Page 5 of 48

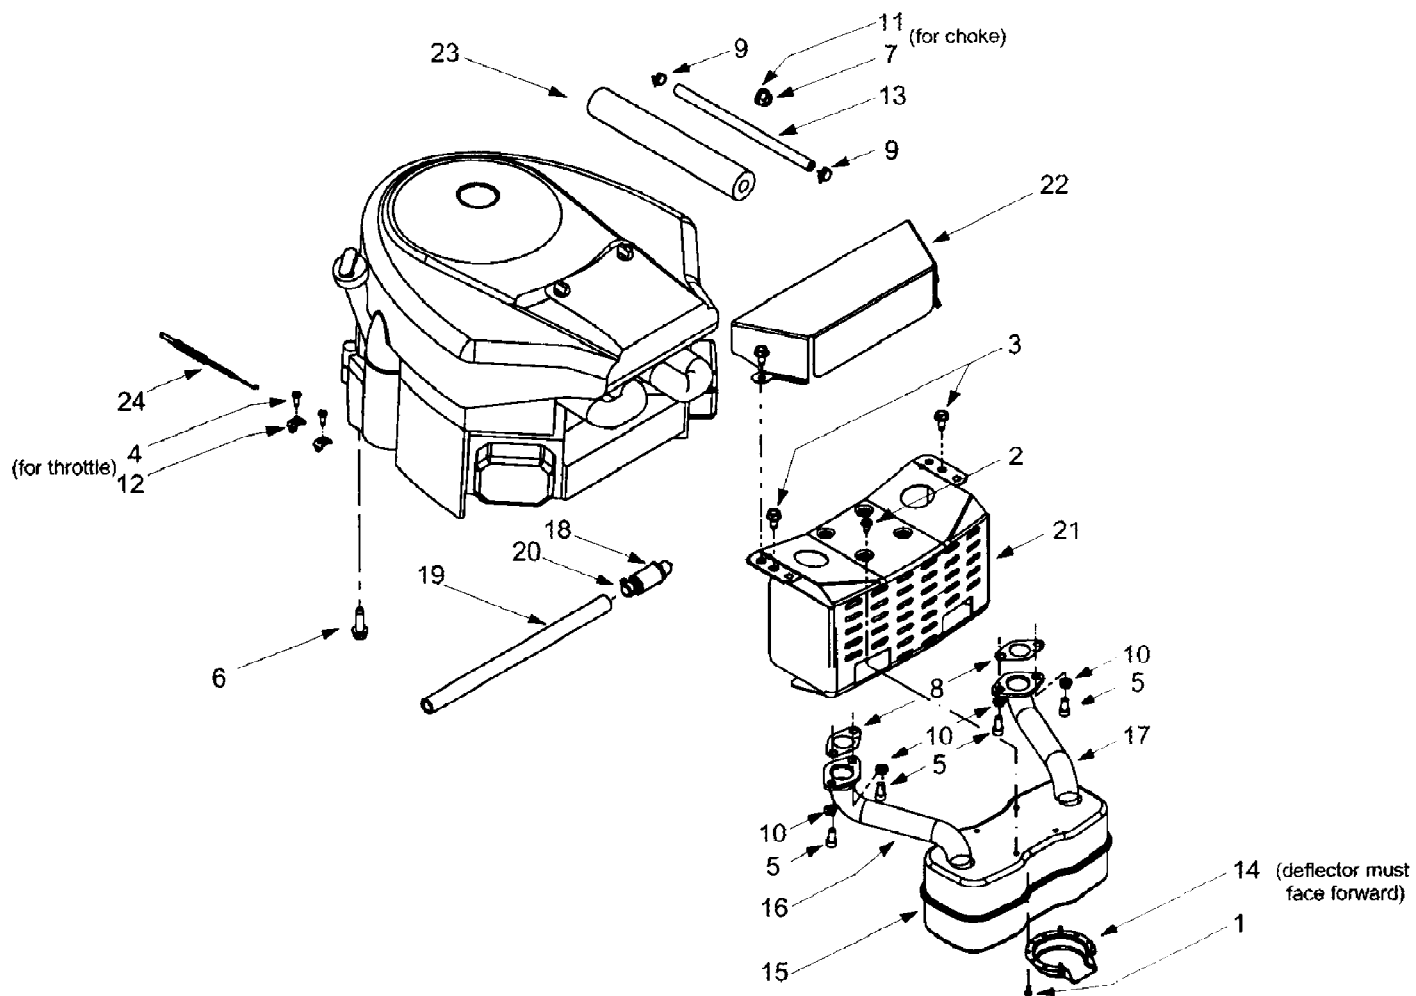


1170 S/N 1H019H - 1H310H
Briggs & Stratton Industrial Plus Twin

Page 6 of 48

Ref #	Part Number	Qty	S/P/F	Description
1	710-0227	1	/P	Self-tapping Screw, #8-18 x.5
2	710-0599	1	/P	Self-tapping Screw, 1/4-20 x.5
3	710-0604A	1	/P	Self-tapping Screw, 5/16-18 x .625
4	710-1237	1		Screw, #10-32 x .625
5	710-1314	1	S	Socket Cap Screw, 5/16-18 x .625
6	710-1315	1	/P	Self-tapping Screw, 3/8-16 x 1.25
7	712-3017	1	S	Hex Nut, 3/8-16
8	721-0460	1		Exhaust Gasket (Industrial Plus Twin)
9	726-0205	1	/P	Hose Clamp
10	736-0119	1	S	Lock Washer, 5/16
11	736-0300	1	S	Flat Washer, .406 x 875 x .059
12	751B221535	1	/P	Casing Clamp
13	751-0535	1		Fuel Line Hose
14	751-0564	1	S	Muffler Deflector
15	751-0616	1	S	Muffler, Twin Inlet
16	751-0650	1	S	RH Exhaust Pipe (Industrial Plus Twin)
17	751-0651	1	S	LH Exhaust Pipe (Industrial Plus Twin)
18	751-3140	1	S	Oil Drain Valve
19	751-3141	1	S	Oil Drain Hose
20	751-3142	1		Oil Drain Cap
21	783-0615	1	S	Muffler Heat Shield
22	783-0625B	1	S	Engine Heat Shield
23	722-0263	1	S	Foam (Fits over fuel line)
24	746-1086	1	S	Throttle Cable (Industrial Plus Twin)

1170 S/N 1H019H - 1H310H
Drive System & Rear Wheels

Page 7 of 48

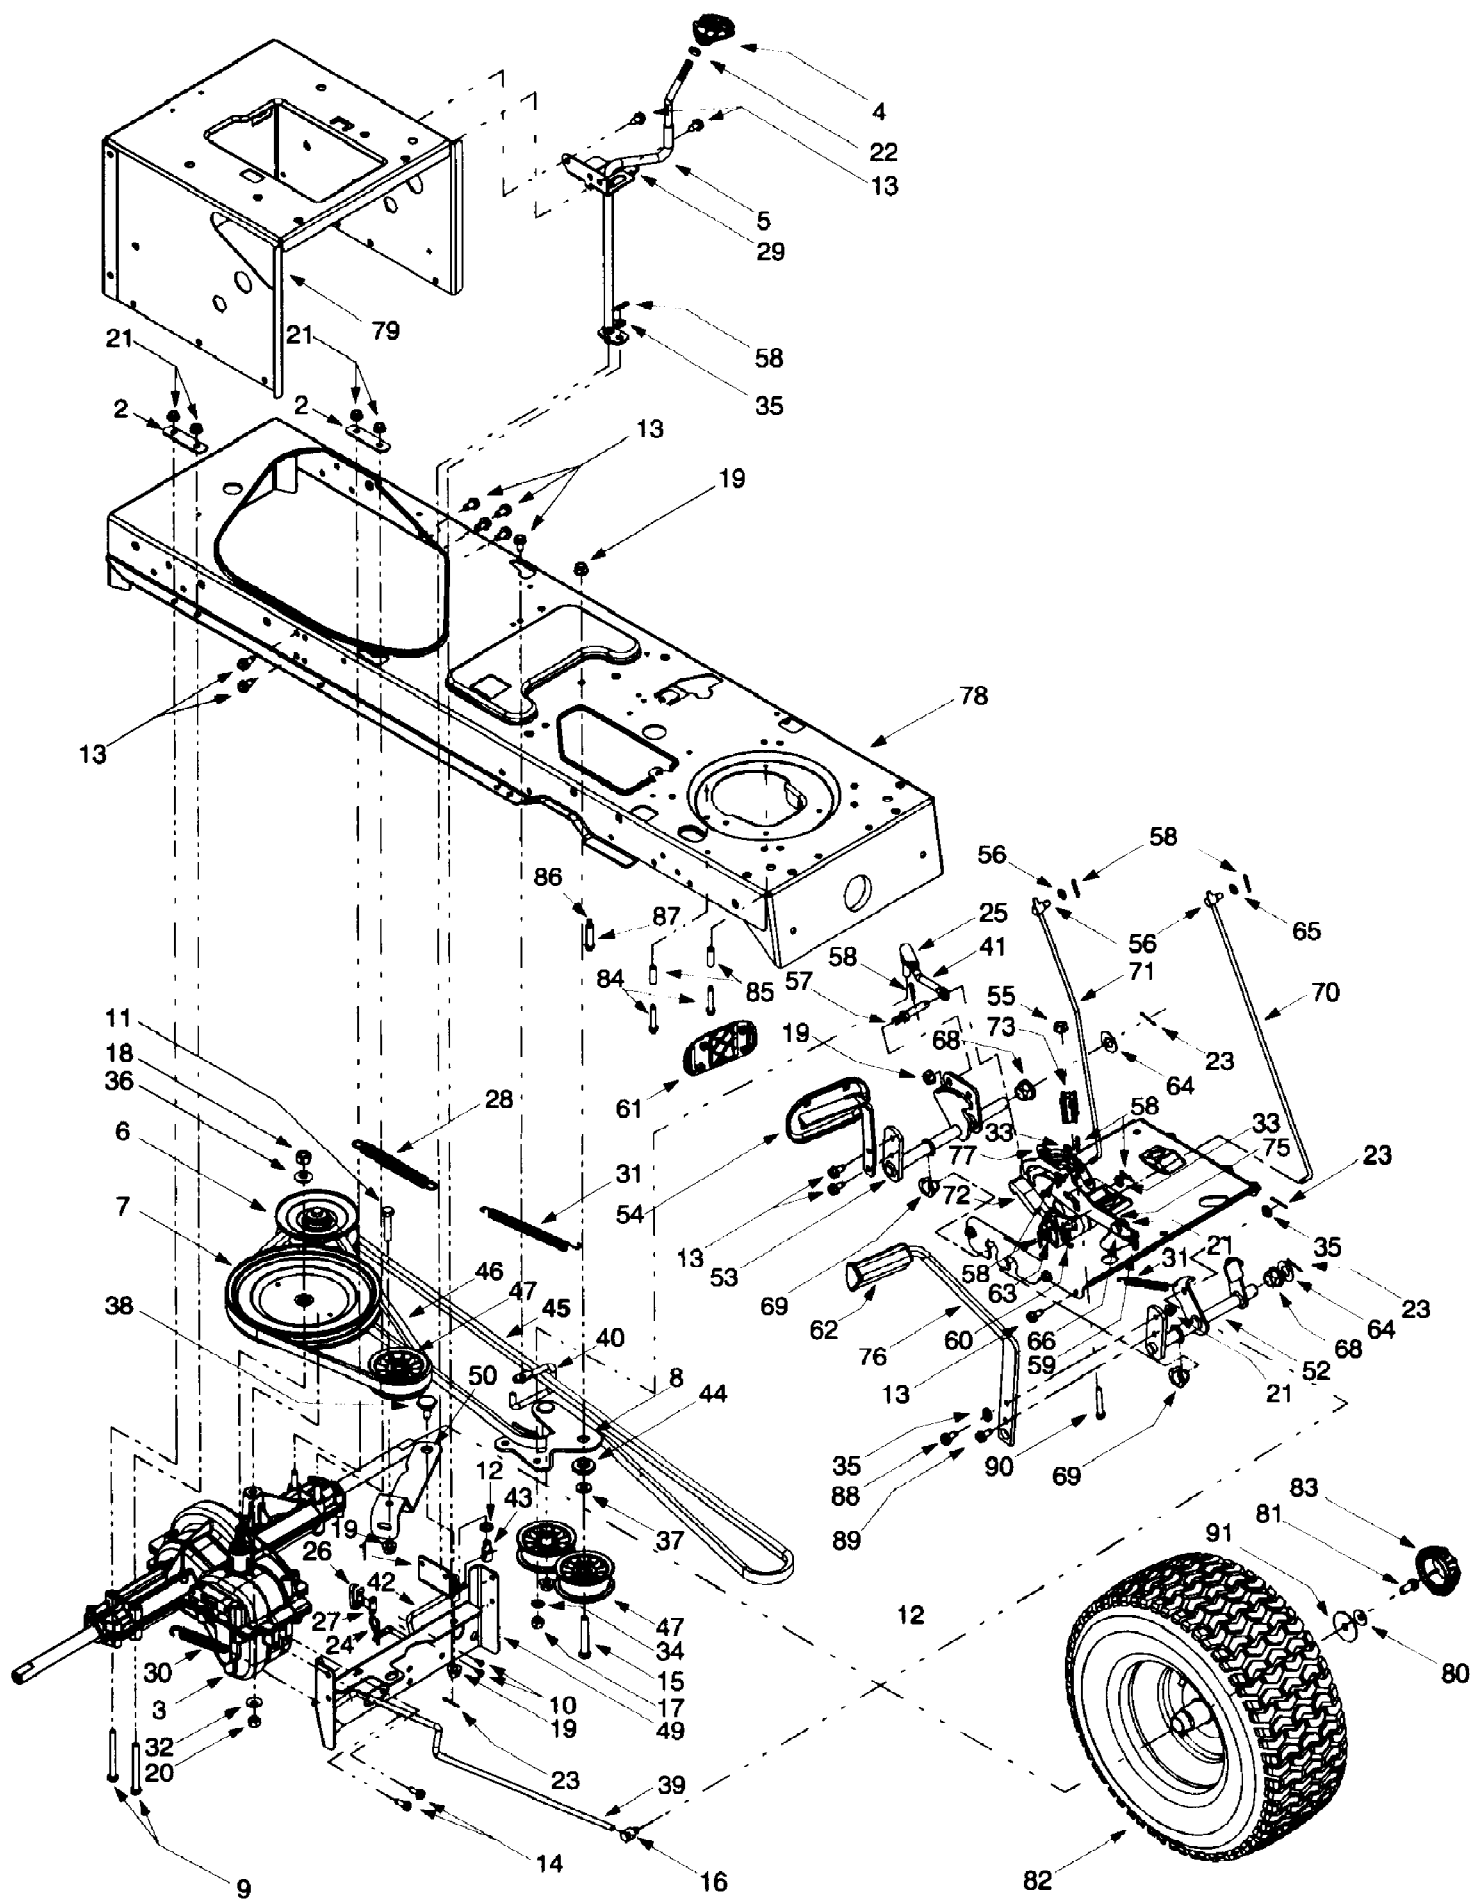

1170 S/N 1H019H - 1H310H
Drive System & Rear Wheels

Page 8 of 48

Ref #	Part Number	Qty	S/P/F	Description
1	783-1015	1	S	Shift Lever Support
2	17840	1	S	Transaxle Mounting Bracket
3	618-0307C	1	S	Single-speed Transmission Assembly
4	631-0009	1	S	Shifter Knob
5	647-0045	1		Shift Lever
6	656-0048	1	S	Variable-speed Pulley Assembly
7	656-0051A	1	/P	Transmission Pulley, 8.5 x .5-36
8	683-0251	1		Double-idler Bracket
9	710-0189	1	/P	Hex Cap Screw, 5/16-18 x 3
10	710-0227	1	/P	Self-tapping Screw, #8-18 x .5
11	710-0347	1	/P	Hex Cap Screw, 3/8-16 x 1.75
12	736-0272	1	S	Flat Washer, .51 x 1.0 x .060
13	710-0604A	1	/P	Self-tapping Screw, 5/16-18 x .625
14	710-0642	1	/P	Self-tapping Screw, 1/4-20 x .75
15	710-3011	1	/P	Hex Cap Screw, 3/8-16 x 2.25
16	711-0677	1	S	Ferrule, 5/16-18
17	712-0241	1	/P	Hex Nut, 3/8-24
18	712-0378	1	/P	Hex Nut, 7/16-20
19	712-0431	1	S	Flange Lock Nut, 3/8-16
20	712-0798	1	/P	Hex Nut, 3/8-16
21	712-3004A	1	/P	Flange Lock Nut, 5/16-18
22	712-3008	1	S	Jam Nut, 3/8-16
23	714-0111	1	S	Cotter Pin
24	714-0149B	1	S	Internal Cotter Pin
25	723-3018	1	S	Ball Joint
26	725-1644	1		Short Spring Switch
27	726-0320	1	S	Insulator Nut Plate
28	732-0384	1	S	Extension Spring, .62 Dia. x 6.12
29	732-0525	1		Compression Spring Clip
30	732-0716	1	S	Extension Spring, .59 OD x 4
31	732-0963	1		Extension Spring, .50 Dia. x 6.37 (hooks to flange, 783-0650, in frame)
32	736-0105	1	/P	Bell Washer, .401 x .87 x .063
33	736-0140	1	S	Flat Washer, .385 x .62 x .063
34	736-0169	1	S	Lock Washer, 3/8
35	736-0275	1	S	Flat Washer, 5/16
36	736-0407	1		Bell Washer, .45 x 1.0 x .602
37	736-3010	1	/P	Flat Washer, .407 x .812 x .135
38	738-0322	1	S	Shoulder Screw, .625 x .217
39	747-1122	1		Brake Rod
40	747-1123A	1	/P	Belt Guard
41	747-1127	1		Idler Adjustment Rod, 3/8
42	747-1156	1	S	Shift Rod Refer to 753-0868
42	783-0637	1	S	Shift Lever Support Not shown, Refer to 753-0868
42	783-0714	1	S	Adjustable Shift Bracket Not shown, Refer to 753-0868
43	711-0736	1	/P	Adjustment Ferrule, 1/4-20 x 1.0
44	748-0372	1		Shoulder Spacer, .38 ID
45	754-0467	1	S	Variable-speed Belt
46	754-0468	1	S	Drive Belt
47	756-0981	1	S	Flat Idler, 2.05 OD


1170 S/N 1H019H - 1H310H
Drive System & Rear Wheels

Page 9 of 48

Ref #	Part Number	Qty	S/P/F	Description
49	783-0667A	1	S	Transmission Torque Bracket
50	783-0669	1	S	Idler Bracket
52	647-0031	1	S	Brake Control Assembly
53	647-0032	1	S	Speed Control Assembly
54	683-0266	1		Drive Pedal Assembly
55	712-0431	1	S	Flange Lock Nut, 3/8-16
56	711-0736	1	/P	Ferrule, 1/4-20
57	711-1363	1		Pin, 3/8-16 x 2.43
58	714-0104	1	S	Cotter Pin
59	732-0437	1		Compression Spring, .34 OD x 1.0
60	732-0955	1		Extension Spring, .50 OD x 1.41
61	735-0662	1		Drive Pedal Pad
62	735-3049	1	S	Brake Pedal Pad
63	736-0140	1	S	Flat Washer, .281 x .5 x .0625
64	736-0187	1	/P	Flat Washer, .64 x 1.24 x .06
65	736-0204	1	/P	Flat Washer, .344 x .062 x .03
66	738-0155	1	S	Shoulder Screw, .437 x 1.62
67	738-0507B	1	S	Shoulder Screw, .5 x .434
68	741-0225	1	S	Hex Flange Bearing
69	741-3065A	1	S	Split Hex Flange Bearing
70	747-1137	1		Cruise Control Rod
71	747-1138	1		Brake Lock Control Rod
72	748-0413	1		Cruise Latch
73	748-0415A	1	S	Spacer, 5/16 x 1.54
75	783-0732	1	S	Drive Lockout Bracket
76	783-0773	1		Brake Pedal
77	783-0780A	1	S	Neutral Return Bracket
78	683-0304	1	S	Lower Frame Assembly
79	783-1031	1		Hitch Plate
80	736-0242	1	/P	Bell Washer, .34 x .872
81	710-0627	1	/P	Hex Cap Screw, 5/16-24 x .75
82	634-0177	1	/P	Wheel Assembly Complete 20 x 10 x 8
82	734-1675	1		Wheel Assembly Complete 20 x 8 x 8
82	634-0070	1	/P	Rim Only Not Shown
82	734-0255	1	S	Air Valve Not Shown
82	734-1873	1		Tire Only Not Shown, 20 x 10 x 8, Square Shoulder
82	734-1730	1		Tire Only Not Shown, 20 x 8 x 8, Square Shoulder
83	731-2290A	1	/P	Hub Cap Not Shown
84	710-0778	1	/P	Self-tapping Screw, 1/4-20 x 1.5
85	750-0556	1		Spacer
86	710-1026	1	/P	Self-tapping Screw, 1/4-20 x 1.75
87	750-0768	1		Spacer
88	710-1260A	1	/P	Self-tapping Screw, 5/16-18 x .75
89	710-1650	1	/P	Self-tapping Screw, 5/16-18 x .875
90	710-0859	1	/P	Hex Cap Screw, 3/8-16 x 2.5
91	736-0430	1	/P	Flat Washer, .350 x 1.59 x .062
	783-0653B	1	S	Steering Support Bracket Not shown
	OEM-190-916	1	S	Tire Chains For 20 x 10 x 8 tire (must be used on this model); Not Shown

1170 S/N 1H019H - 1H310H
Electrical

Page 10 of 48

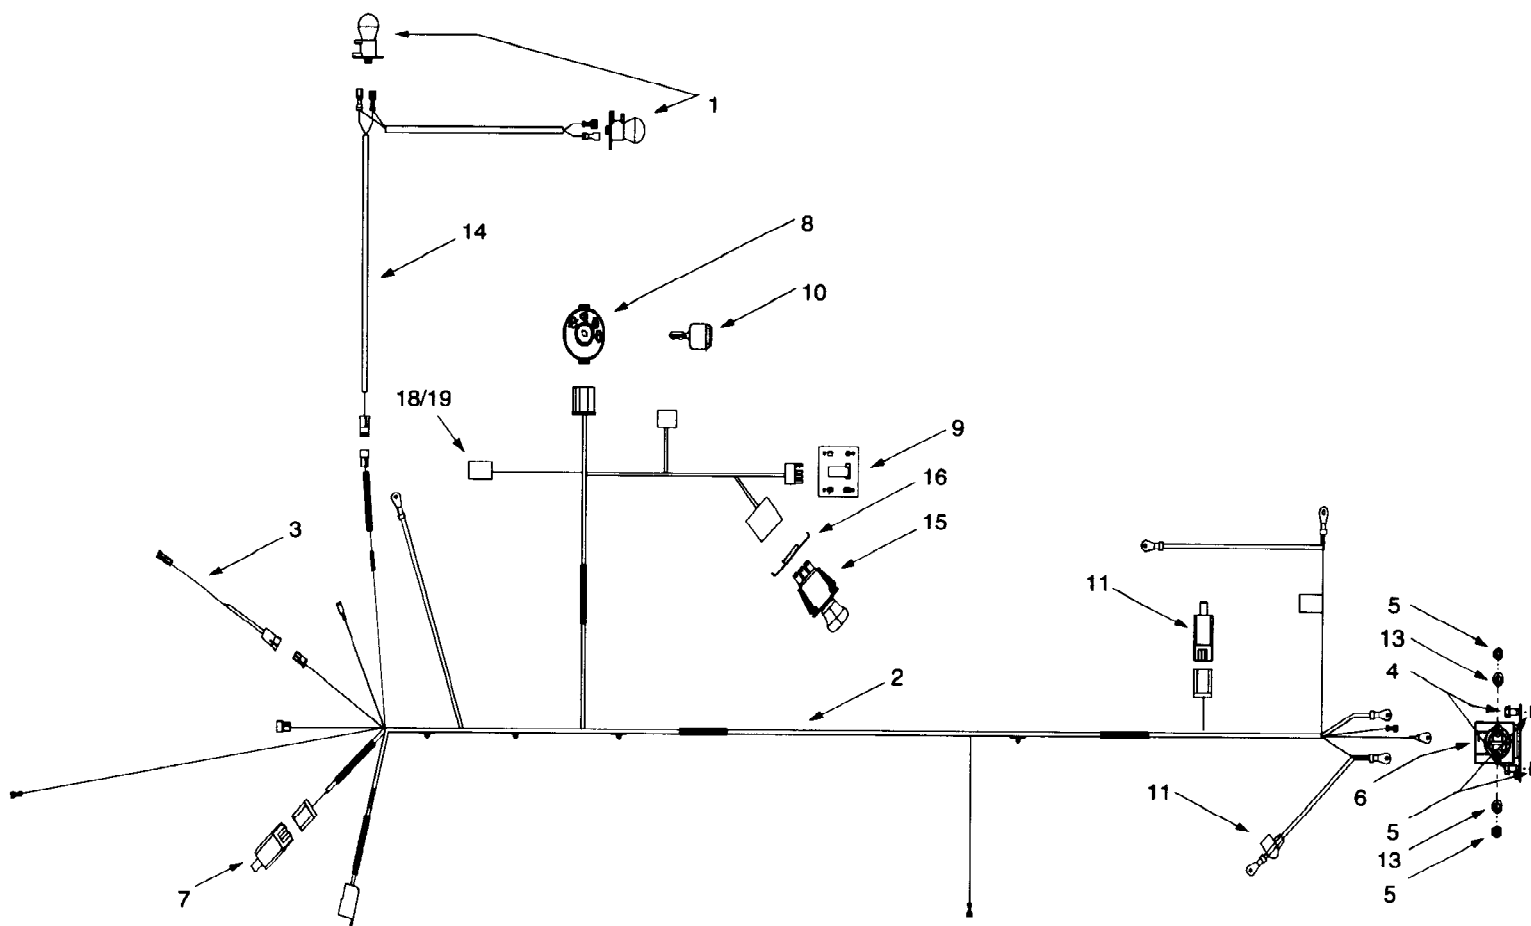


1170 S/N 1H019H - 1H310H
Electrical

Page 11 of 48


Ref #	Part Number	Qty	S/P/F	Description
1	625-0051	1	S	Bulb/Socket Headlight Assembly
2	629-0939	1		Wiring Harness w/o Ref. 14
3	629-0126	1		Harness Adapter, #18 x 5
4	710-0599	1	/P	Self-Tapping Screw, 1/4-20x.5
5	712-3006	1	/P	Hex Nut, 1/4-20
6	725-1426	1	S	Solenoid, 12-volt, 100 Amp
7	725-1657A	1	S	Snap Mount Safety Interlock Switch (Brake)
8	725-1741	1	S	Ignition Switch
9	725-1743	1	S	Indicator Monitor / Hour Meter
10	725-1745	1	S	Ignition Key
11	725-1747	1	S	Safety Plunger Switch (Seat)
?12	736-0222	1	S	External Lock Washer, 1/4
13	736-0329	1	S	Lock Washer, 1/4
14	629-0309	1	S	Headlight Harness
15	725-1752	1	S	Electric PTO Switch
16	783-0462	1	/P	Retainer Bracket
?17	725-3007A	1	/P	Positive Terminal Cover (Boot)
18	729-0357	1		Fuse Holder
19	725-1381	1	S	20-amp Fuse

1170 S/N 1H019H - 1H310H
Engine (Single) Assembly (Model 1170)

Page 12 of 48

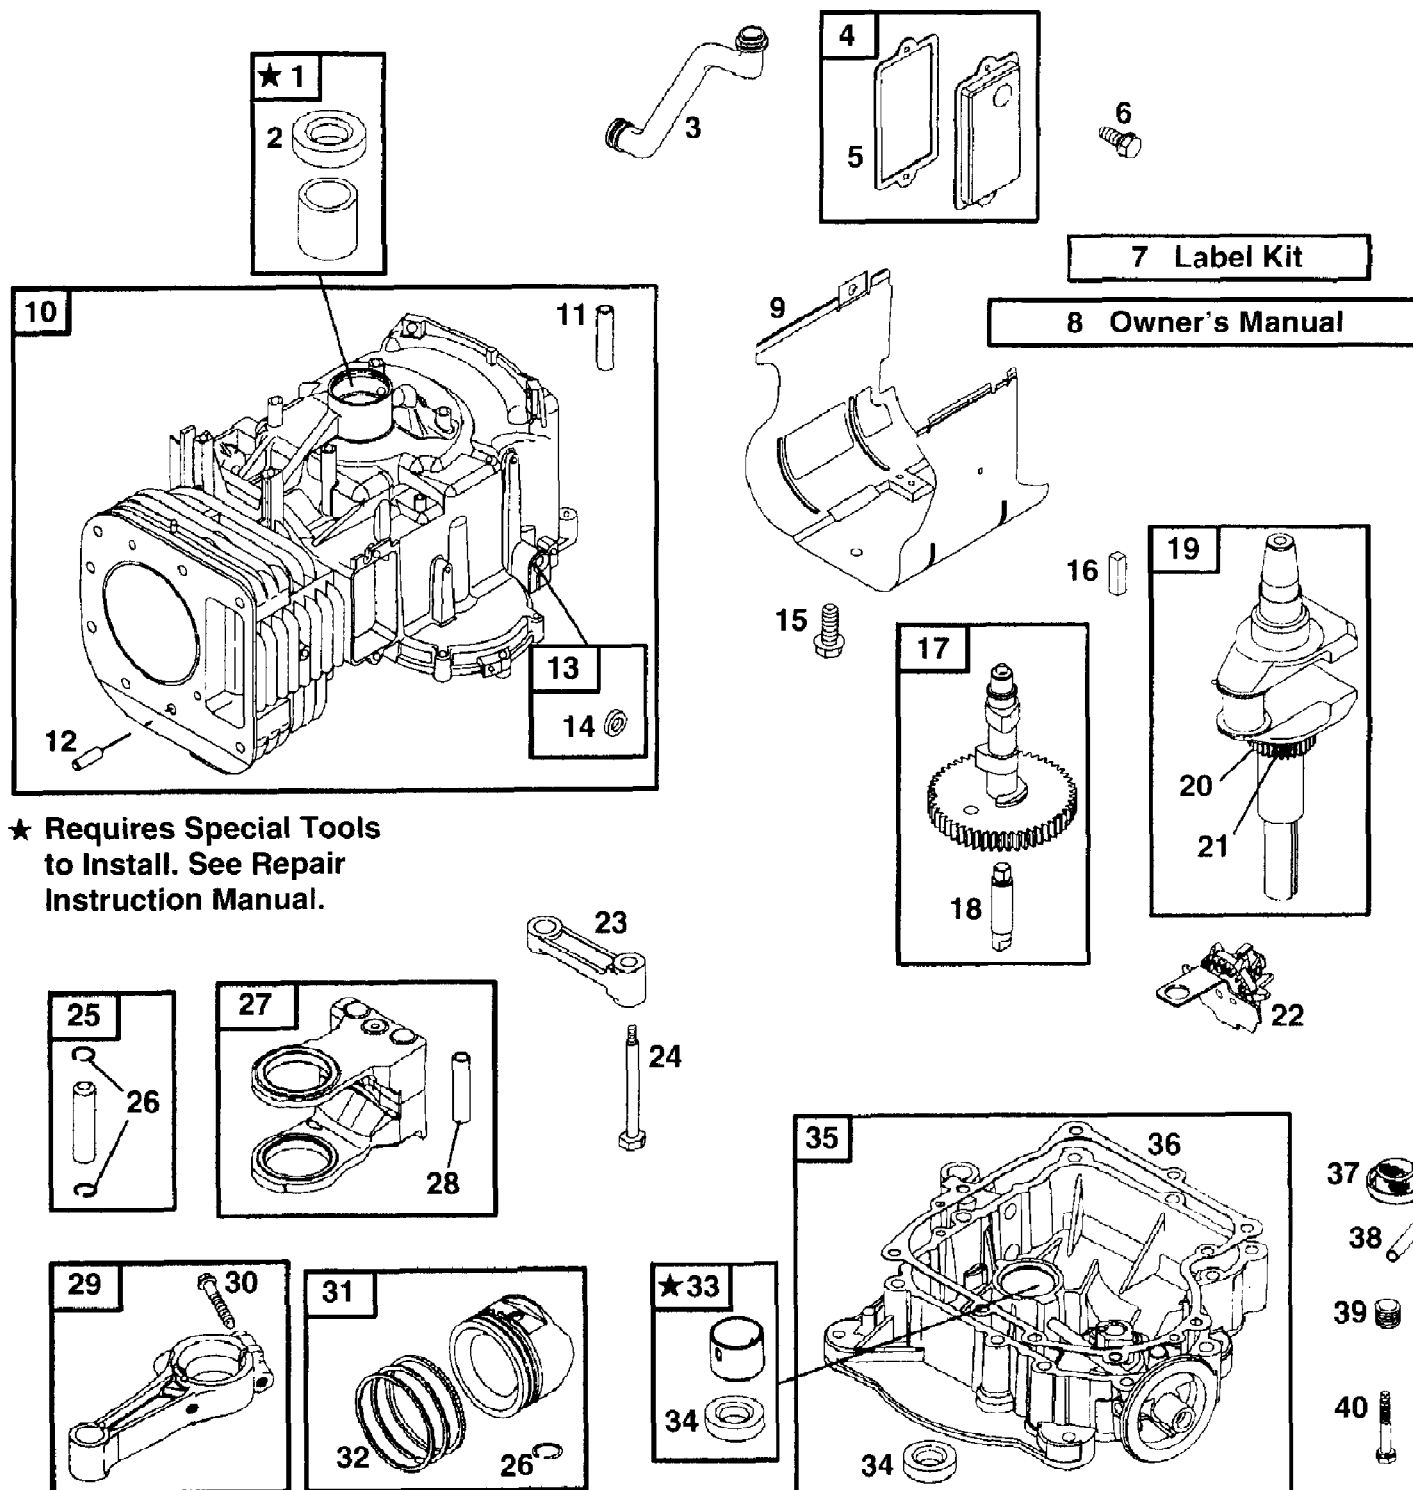

41 Engine Gasket Set

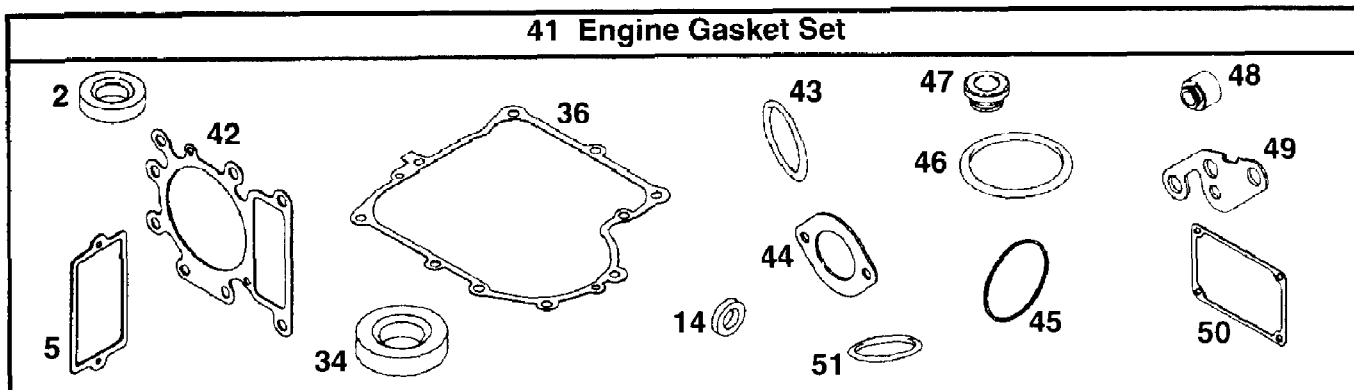

Assemblies Include All Parts Shown In Frames

www.mymowerparts.com

1170 S/N 1H019H - 1H310H
Engine (Single) Assembly (Model 1170)

Page 13 of 48

Ref #	Part Number	Qty	S/P/F	Description
1	BS-399265	1	/P	Bushing/Seal Kit (Magneto Side)
2	BS-391086	1	S	Oil Seal
3	BS-691328	1	/P	Breather Tube
4	BS-495735	1	/P	Breather Assembly
5	BS-27803	1	S	Breather Gasket
6	BS-691666	1	/P	Screw (Breather Assembly)
7	BS-690180	1		Label Kit
8	BS-274271	1		Owner's Manual
9	BS-690499	1		Cylinder Shield
10	BS-690156	1		Cylinder Assembly
11	BS-691239	1	/P	Counterweight Pin
12	BS-690959	1	/P	Locating Pin
13	BS-491986	1	/P	Governor Crank Bushing
14	BS-692407	1	/P	Governor Shaft Seal
15	BS-691003	1	/P	Screw (Cylinder Shield)
16	BS-222698	1	S	Flywheel Key
17	BS-693450	1	S	Camshaft
18	BS-693784	1		Pump Shaft
19	BS-690136	1		Crankshaft
20	BS-691284	1	/P	Timing Gear
21	BS-691639	1		Timing Key
22	BS-691968	1	/P	Governor/Oil Slinger
23	BS-691714	1		Counterweight Link
24	BS-691096	1		Screw (Counterweight)
25	BS-498319	1		Piston Pin (Standard)
	BS-498320	1		Piston Pin (.005 O.S.)
26	BS-691299	1	/P	Piston Pin Lock
27	BS-692423	1		Counterweight
28	BS-691239	1	/P	Counterweight Pin
29	BS-692419	1		Connecting Rod (Standard)
	BS-692420	1		Connecting Rod (.020 O.S.)
30	BS-692852	1	S	Screw (Connecting Rod)
31	BS-692271	1		Piston Assembly (Standard)
	BS-692272	1		Piston Assembly (.010 O.S.)
	BS-692273	1		Piston Assembly (.020 O.S.)
	BS-692274	1		Piston Assembly (.030 O.S.)
32	BS-690162	1	S	Ring Set (Standard)
	BS-690164	1		Ring Set (.010 O.S.)
	BS-690166	1		Ring Set (.020 O.S.)
	BS-690168	1		Ring Set (.020 O.S.)
33	BS-490666	1		Bushing/Seal Kit (PTO Side)
34	BS-291675	1	S	Oil Seal
35	BS-693582	1		Engine Sump
36	BS-692226	1	/P	Crankcase Gasket (.015 Thick, Std)
	BS-692406	1	/P	Crankcase Gasket (.005 Thick)
	BS-692405	1	/P	Crankcase Gasket (.009 Thick)
37	BS-690770	1		Oil Pump Screen
38	BS-690528	1	/P	Oil Pump Tube
39	BS-691680	1	/P	Oil Drain Plug
40	BS-692125	1	/P	Screw (Engine Sump)
41	BS-690189	1		Engine Gasket Set
42	BS-692410	1	S	Cylinder Head Gasket
43	BS-691917	1	/P	O-Ring Seal (Air Cleaner Base)



1170 S/N 1H019H - 1H310H
Engine (Single) Assembly (Model 1170)

Page 14 of 48

Ref #	Part Number	Qty	S/P/F	Description
44	BS-692137	1	/P	Intake Gasket
45	BS-692138	1		O-Ring Seal (Intake Manifold)
46	BS-690589	1	/P	O-Ring Seal (Oil Pump Cover)
47	BS-281370	1	S	Dipstick Tube Seal
48	BS-690868	1		Valve Seal
49	BS-691317	1		Oil Adapter Gasket
50	BS-272475	1	S	Rocker Cover Gasket
51	BS-691870	1	/P	Dipstick/Tube Seal
	BS-692707	1	S	Short Block

1170 S/N 1H019H - 1H310H
Engine (Single) Carburetor & Head (Model 1170)

Page 15 of 48

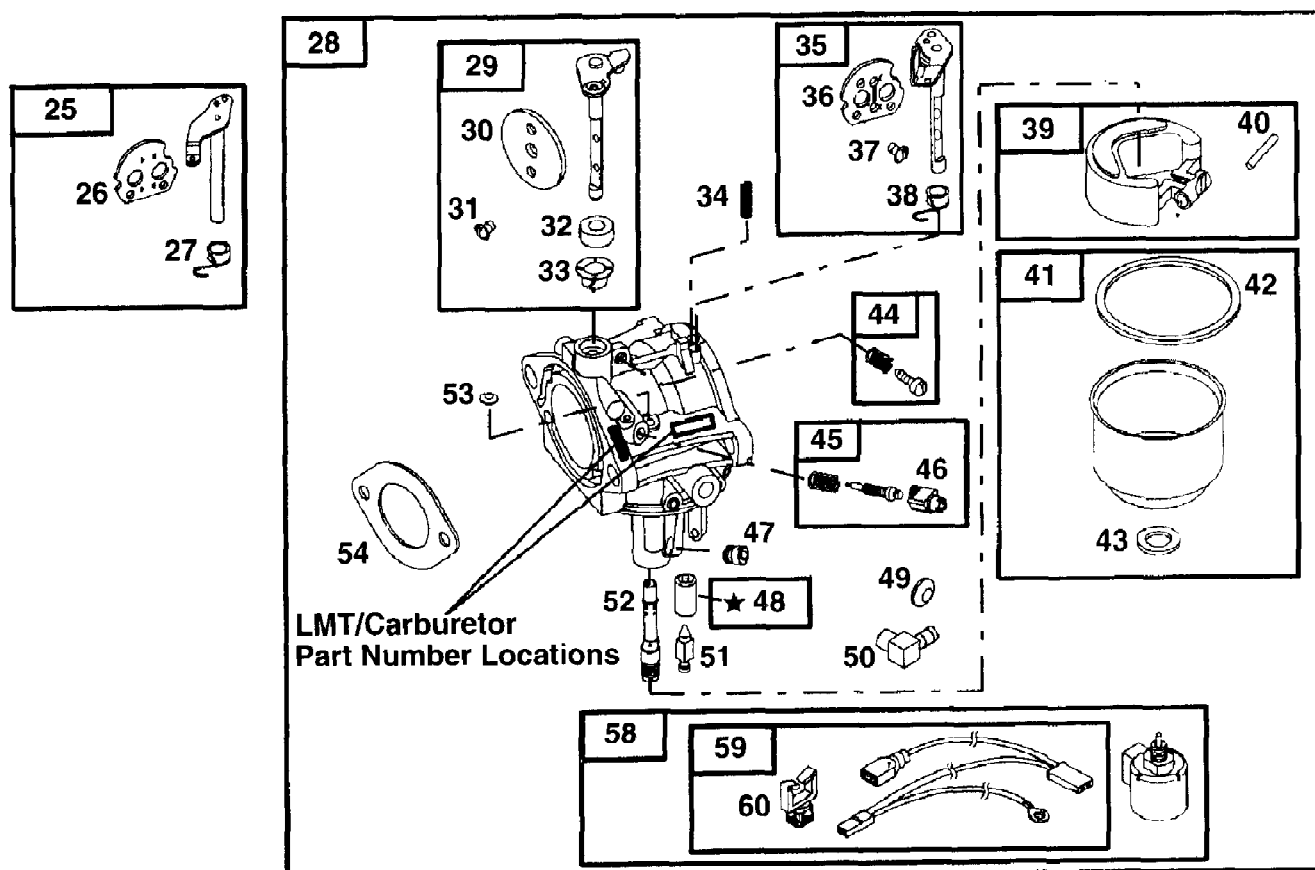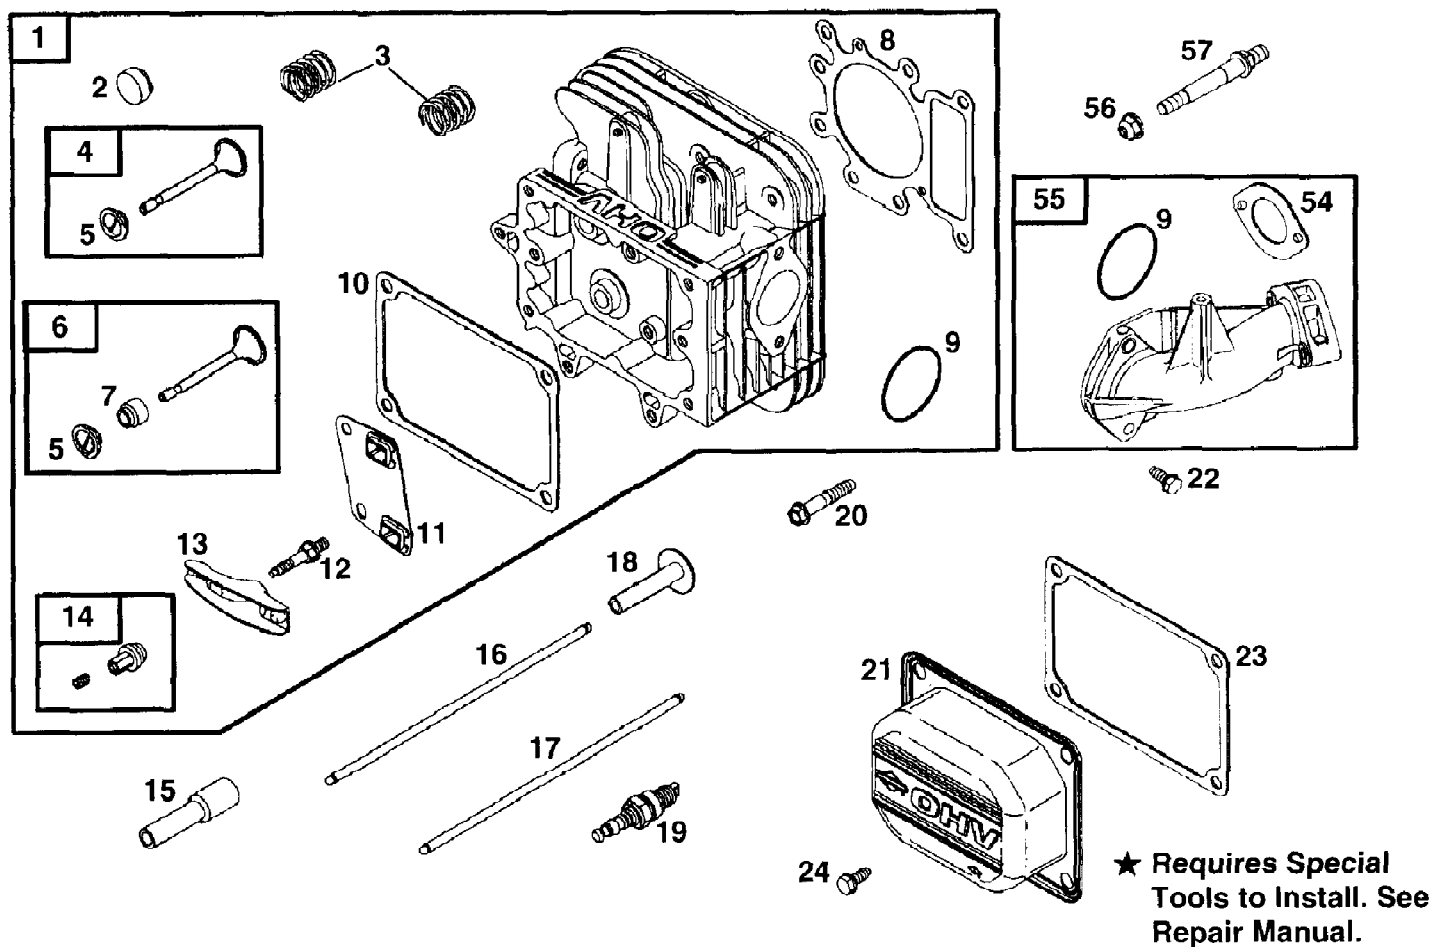

Assemblies Include All Parts Shown In Frames

1170 S/N 1H019H - 1H310H

Page 16 of 48

Engine (Single) Carburetor & Head (Model 1170)

Ref #	Part Number	Qty	S/P/F	Description
1	BS-690188	1	S	Cylinder Head
2	BS-691843	1	/P	Valve Cap
3	BS-691279	1	/P	Valve Spring
4	BS-495856	1	S	Exhaust Valve
5	BS-691752	1	S	Valve Retainer
6	BS-495857	1	S	Intake Valve
7	BS-690868	1		Valve Seal
8	BS-692410	1	S	Cylinder Head Gasket
9	BS-692138	1		O-Ring Seal (Intake Manifold)
10	BS-272475	1	S	Rocker Cover Gasket
11	BS-690822	1	/P	Push Rod Guide
12	BS-691095	1	/P	Stud (Rocker Arm)
13	BS-691751	1	/P	Rocker Arm
14	BS-691986	1	/P	Rocker Arm Adjuster
15	BS-691909	1	/P	Sparkplug Boot
16	BS-692003	1	/P	Pushrod (Intake)
17	BS-692011	1	/P	Pushrod (Exhaust)
18	BS-690564	1		Valve Tappet
19	BS-491055	1	S	Sparkplug
20	BS-690360	1	/P	Screw (Cylinder Head)
21	BS-692492	1	S	Rocker Arm Cover
22	BS-691148	1		Screw (Intake Manifold)
23	BS-272475	1	S	Rocker Cover Gasket
24	BS-690960	1	S	Screw (Rocker Arm Cover)
25	BS-495931	1	S	Choke Shaft Kit (LMT 153, 154)
26	BS-692344	1		Choke Valve (LMT 153, 154)
27	BS-690802	1	/P	Spring/Seal Assy (Choke A Matic)
28	BS-690194	1	S	Carburetor
29	BS-494379	1	S	Throttle Shaft Kit
30	BS-691750	1		Throttle Valve
31	BS-691636	1	/P	Screw (Throttle Valve)
32	BS-691326	1	/P	Throttle Shaft Seal
33	BS-690602	1		Throttle Shaft Bushing
34	BS-690372	1	S	Screw (Drive Cap)
35	BS-495097	1	S	Choke Shaft Kit (LMT 155, 156)
36	BS-690464	1		Choke Valve (LMT 155, 156)
37	BS 691636	1		Screw (Choke Valve)
38	BS-690801	1		Spring/Seal Assy (LMT 155, 156)
39	BS-494381	1	/P	Carburetor Float
40	BS-690525	1	/P	Float Hinge Pin
41	BS-495933	1	/P	Float Bowl
42	BS-281165	1	S	Float Bowl Gasket
43	BS-692255	1	/P	Sealing Washer
44	BS-495800	1		Idle Speed Kit
45	BS-498030	1		Idle Mixture Kit
46	BS-691333	1	/P	Limiter Cap
47	BS-692408	1	/P	Main Jet (Standard)
	BS-692411	1	/P	Main Jet (High Altitude)
48	BS-690577	1	/P	Inlet Seat (Gravity Feed)
	BS-691780	1	/P	Inlet Seat (Pump Feed)
49	BS-695005	1		Welch Plug
50	BS-692317	1	/P	Hose Connector
51	BS-231855	1	S	Float Needle Valve

1170 S/N 1H019H - 1H310H
Engine (Single) Carburetor & Head (Model 1170)



Page 17 of 48

Ref #	Part Number	Qty	S/P/F	Description
52	BS-692412	1	/P	Carburetor Nozzle
53	BS-695005	1		Welch Plug
54	BS-692137	1	/P	Intake Gasket
55	BS-690193	1		Intake Manifold
56	BS-690958	1	/P	Nut (Carburetor)
57	BS-690227	1		Stud (Carburetor)
58	BS-497672	1	S	Fuel Solenoid
59	BS-692037	1	/P	Wiring Harness
60	BS-691335	1		Wire Clip

1170 S/N 1H019H - 1H310H

Page 18 of 48

Engine (Single) Carburetor, Gasket & Starter (Model 1170)

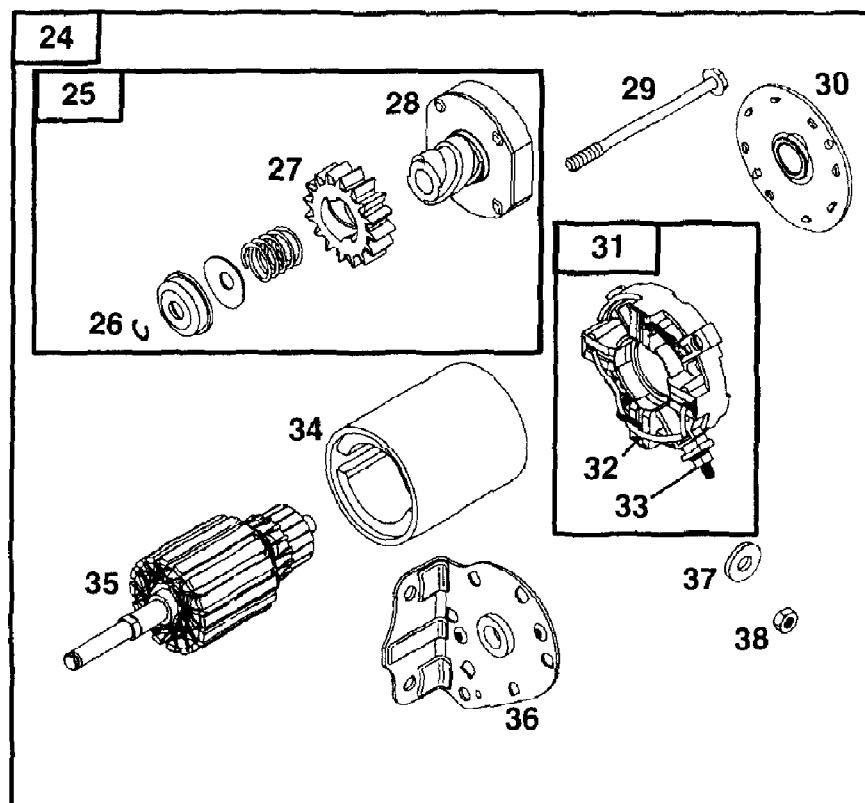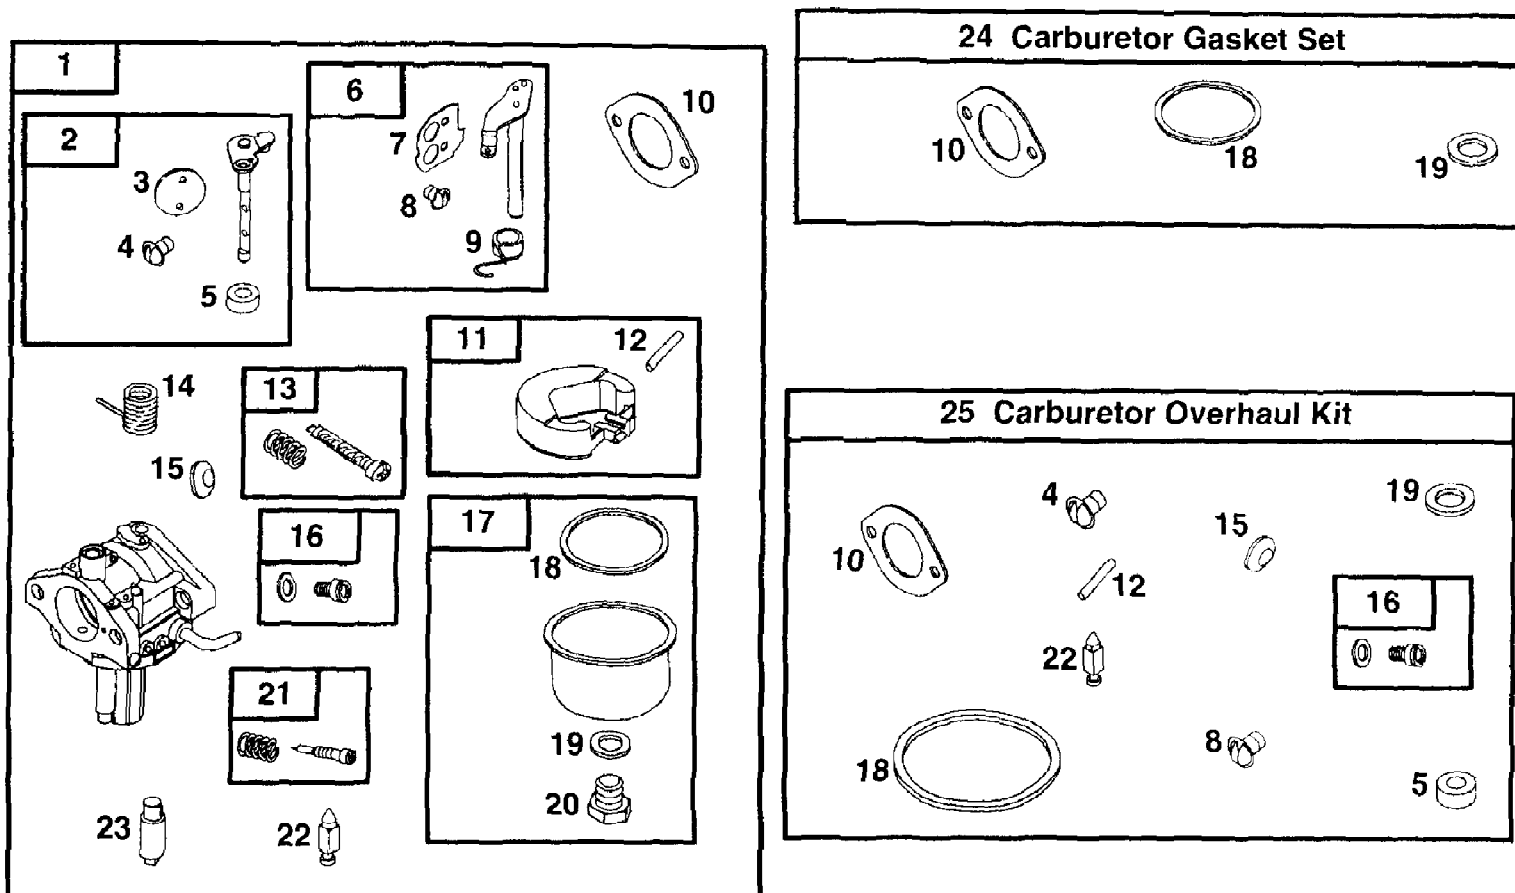

Assemblies Include All Parts Shown In Frames

www.mymowerparts.com

1170 S/N 1H019H - 1H310H

Page 19 of 48


Engine (Single) Carburetor, Gasket & Starter (Model 1170)

Ref #	Part Number	Qty	S/P/F	Description
1	BS-695412	1		Carb (choke-a-matic and manual choke)
2	BS-695421	1		Throttle Shaft Kit
3	BS-695418	1		Throttle Valve
4	BS-690718	1		Screw (Throttle Valve)
5	BS-690998	1		Throttle Shaft Seal
6	BS-695420	1		Choke Shaft Kit
7	BS-695419	1		Choke Valve
8	BS-690718	1		Screw (Choke Valve)
9	BS-695414	1		Choke/Throttle Shaft Seal
10	BS-692137	1	/P	Intake Gasket
11	BS-694914	1		Carburetor Float
12	BS-694918	1		Float Hinge Pin
13	BS-695408	1		Idle Speed Kit
14	BS-695409	1		Choke Return Spring
15	BS-690727	1	/P	Welch Plug
16	BS-695415	1		Main Jet
	BS-695416	1		Main Jet (High Altitude)
17	BS-695417	1		Float Bowl
18	BS-695426	1		Float Bowl Gasket
19	BS-695410	1		Sealing Washer
20	BS-695407	1		Float Bowl Screw
21	BS-695425	1		Idle Mixture Kit
22	BS-695424	1	S	Float Needle Valve
23	BS-695423	1	S	Fuel Solenoid
24	BS-693551	1	/P	Starter Motor
25	BS-693699	1		Starter Drive
26	BS-691265	1	/P	Retaining Ring
27	BS-693713	1		Pinion Gear
28	BS-692024	1	/P	Drive Clutch
29	BS-690323	1		Bolt (Starter Motor)
30	BS-691286	1	/P	End Cap
31	BS-691293	1	/P	Brush Retainer
32	BS-497608	1	/P	Brush Set
33	BS-693167	1		Nut (Brush Retainer)
34	BS-691427	1		Starter Housing
35	BS-692034	1	/P	Starter Armature
36	BS-691429	1	/P	Drive Cap
37	BS-691261	1		Washer (Starter Cable)
38	BS-691029	1		Nut (Brush Retainer)
39	BS-690372	1	S	Screw (Drive Cap)

1170 S/N 1H019H - 1H310H

Page 20 of 48

Engine (Single) Filters & General Assembly (Model 1170)

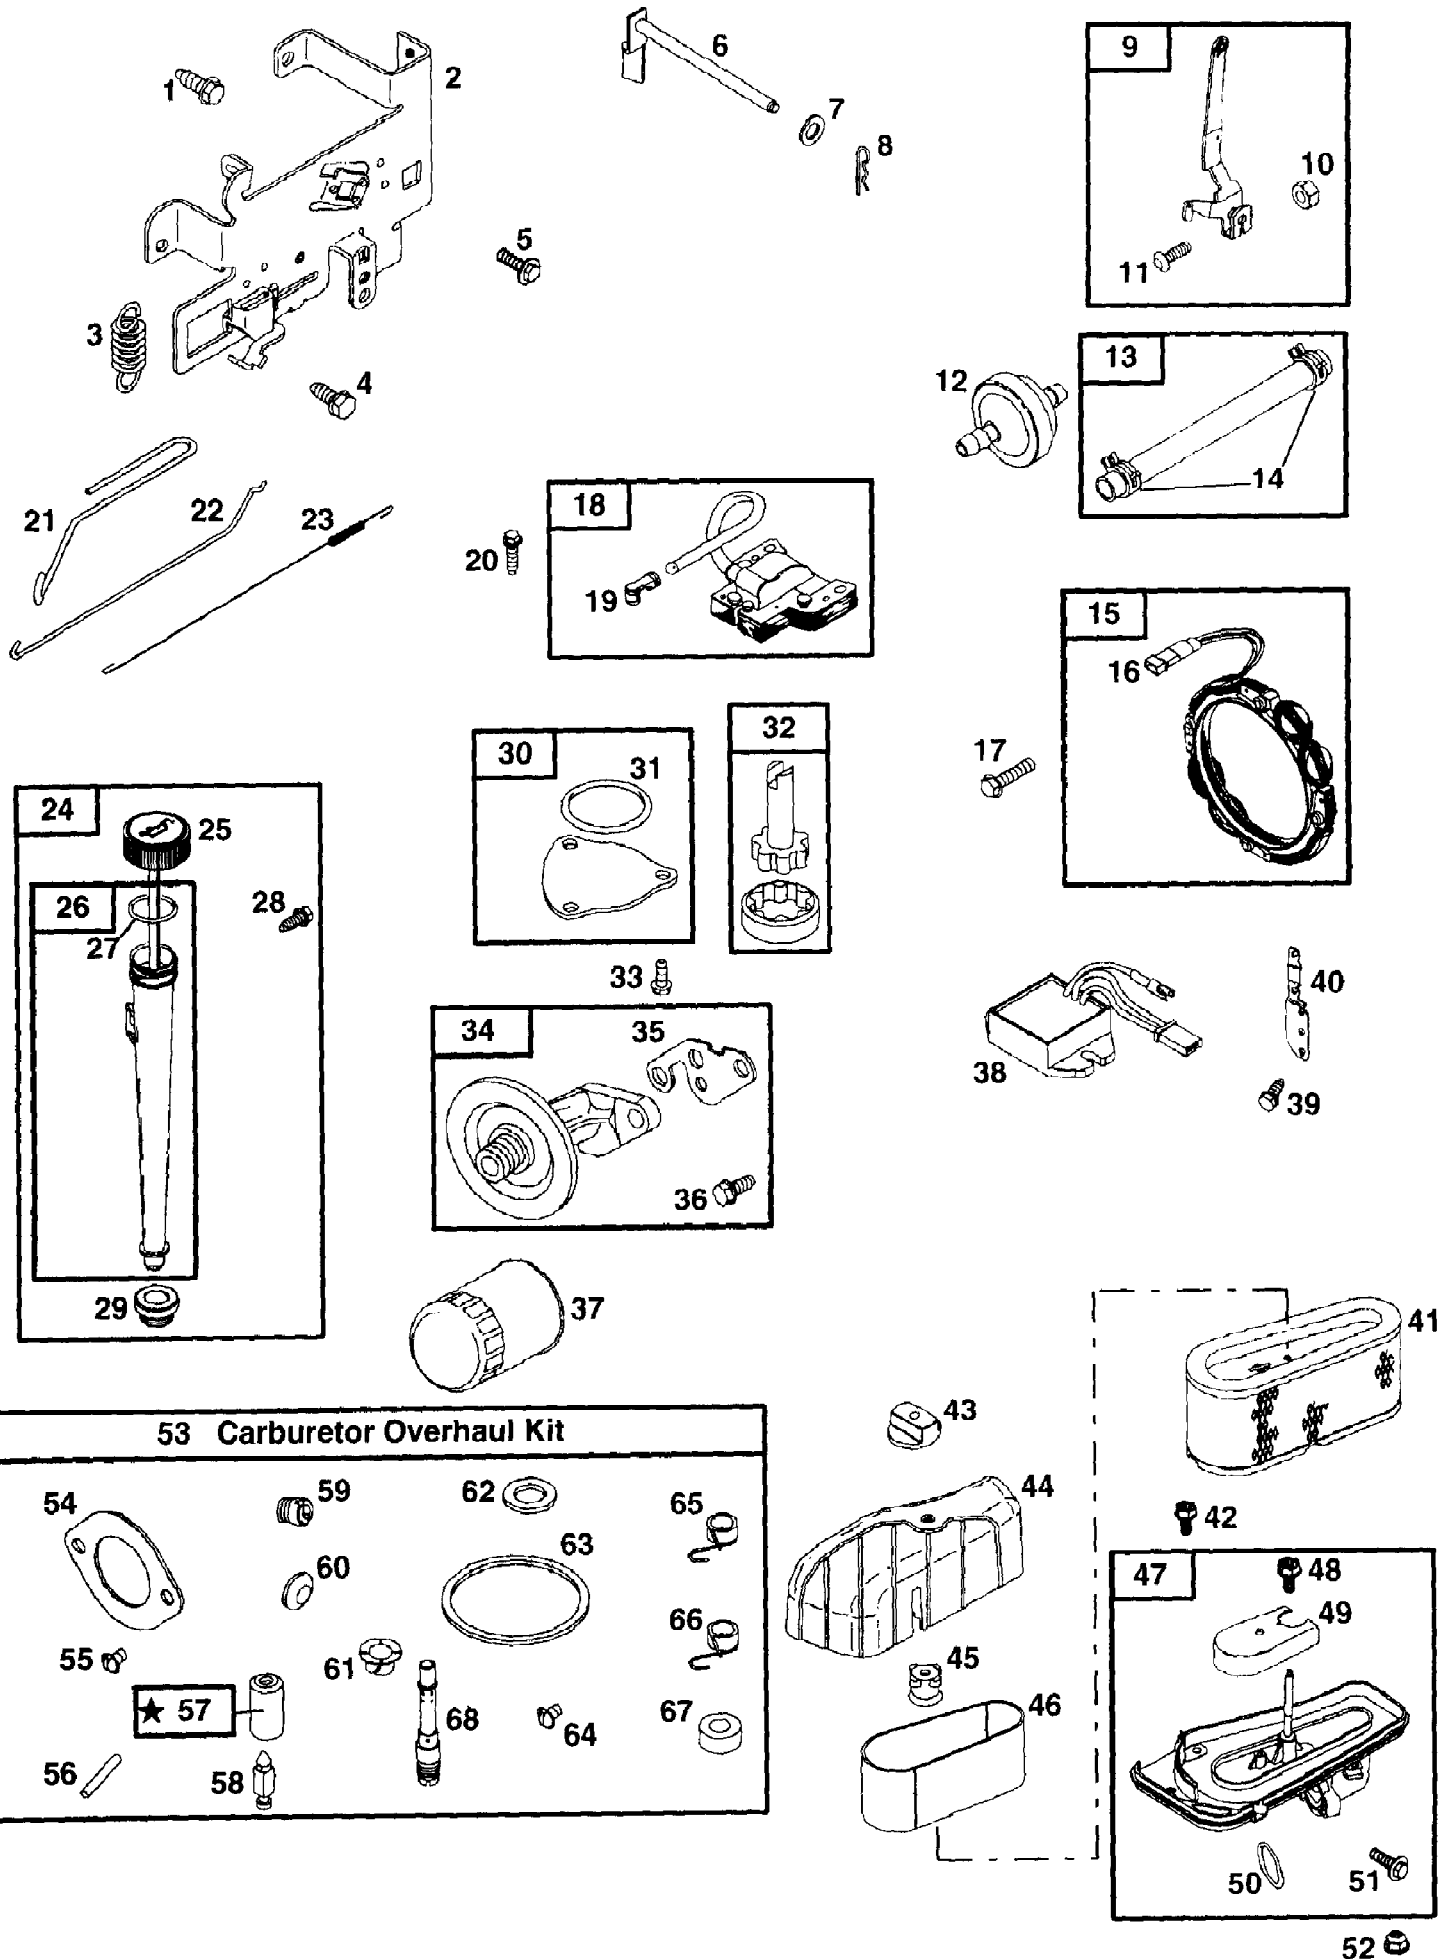

Assemblies Include All Parts Shown In Frames

1170 S/N 1H019H - 1H310H

Page 21 of 48

Engine (Single) Filters & General Assembly (Model 1170)

Ref #	Part Number	Qty	S/P/F	Description
1	BS-691693	1	/P	Screw (Control Bracket)
2	BS-694042	1	/P	Control Bracket
3	BS-692208	1	S	Governor Spring
4	BS-690661	1	/P	Screw (Remote Choke Stop)
5	BS-693675	1		Screw (Remote Choke Stop)
6	BS-692012	1	/P	Governor Crank
7	BS-691691	1		Washer (Governor Crank)
8	BS-691620	1	S	Cotter Pin
9	BS-691374	1		Governor Control Lever
10	BS-691251	1		Nut (Governor Control Lever)
11	BS-691119	1		Bolt (Governor Control Lever)
12	BS-298090	1	S	Fuel Filter
13	BS-691050	1	S	Fuel Line (Cut to Required Length)
14	BS-95162	1	S	Hose Clamp
15	BS-691064	1	S	Alternator
16	BS-399916	1		Alternator Wire
17	BS-691183	1	S	Screw (Alternator)
18	BS-495859	1	S	Magneto Armature
19	BS-692424	1		Sparkplug Terminal
20	BS-691061	1		Screw (Magneto Armature)
21	BS-691840	1	/P	Choke Link
22	BS-691841	1	/P	Mechanical Governor Link
23	BS-691842	1	/P	Governor Link Spring
24	BS-496415	1		Dipstick/Tube Assembly
25	BS-692014	1	/P	Dipstick
26	BS-691398	1		Dipstick Tube
27	BS-691870	1	/P	Dipstick/Tube Seal
28	BS-691002	1	/P	Screw (Dipstick Tube)
29	BS-281370	1	S	Dipstick Tube Seal
30	BS-499613	1		Oil Pump Cover
31	BS-690589	1	/P	O-Ring Seal (Oil Pump Cover)
32	BS-499054	1	S	Oil Pump
33	BS-691033	1		Screw (Oil Pump Cover)
34	BS-496744	1		Oil Filter Adapter
35	BS-691317	1		Oil Adapter Gasket
36	BS-691118	1		Screw (Oil Filter Adapter)
37	BS-492932	1	S	Oil Filter
38	BS-691185	1	S	Regulator
39	BS-692598	1		Screw (Mounting Bracket)
40	BS-694475	1		Mounting Bracket
41	BS-496894	1	S	Air Cleaner Cartridge Filter
42	BS-692129	1		Screw (Air Cleaner Base)
43	BS-691668	1	/P	Air Cleaner Knob
44	BS-692502	1		Air Cleaner Cover
45	BS-692297	1	/P	Air Cleaner Stud Seal
46	BS-272403	1	S	Pre-Cleaner Filter
47	BS-693686	1	S	Air Cleaner Base
48	BS-690703	1	/P	Screw (Carburetor Shield)
49	BS-690678	1		Carburetor Shield
50	BS-691917	1	/P	O-Ring Seal (Air Cleaner Base)
51	BS-693675	1		Screw (Cable Clamp)
52	BS-690958	1	/P	Nut (Air Cleaner Base)
53	BS-690191	1	/P	Carburetor Overhaul Kit

1170 S/N 1H019H - 1H310H

Page 22 of 48

Engine (Single) Filters & General Assembly (Model 1170)

Ref #	Part Number	Qty	S/P/F	Description
54	BS-692137	1	/P	Intake Gasket
55	BS-691636	1	/P	Screw (Throttle Valve)
56	BS-690525	1	/P	Float Hinge Pin
57	BS-690577	1	/P	Inlet Seat (Gravity Feed)
	BS-691780	1	/P	Inlet Seat (Pump Feed)
58	BS-231855	1	S	Float Needle Valve
59	BS-692408	1	/P	Main Jet (Standard)
	BS-692411	1	/P	Main Jet (High Altitude)
60	BS-695005	1		Welch Plug
61	BS-690602	1		Throttle Shaft Bushing
62	BS-692255	1	/P	Sealing Washer
63	BS-281165	1	S	Float Bowl Gasket
64	BS-691636	1	/P	Screw (Choke Valve)
65	BS-690801	1		Spring/Seal Assy (LMT 155, 156)
66	BS-690802	1	/P	Spring/Seal Assy (LMT 153, 154)
67	BS-691326	1	/P	Throttle Shaft Seal
68	BS-692412	1	/P	Carburetor Nozzle

1170 S/N 1H019H - 1H310H
Engine (Single) Flywheel & Gasket (Model 1170)

Page 23 of 48

6 Emissions Label

1

2

4

5

3

14

15

16

17

18

12

13

10

11

9

8

29

28

27

20

21

22

23 Carburetor Gasket Set

24

25

26

30 Valve Gasket Set

31

32

33

24

19

Assemblies Include All Parts Shown In Frames


1170 S/N 1H019H - 1H310H
Engine (Single) Flywheel & Gasket (Model 1170)

Page 24 of 48

Ref #	Part Number	Qty	S/P/F	Description
1	BS-691674	1	/P	Screw (Rotating Screen)
2	BS-494439	1	/P	Rotating Screen
3	BS-691500	1	/P	Spacer
4	BS-490324	1		Starter Drive Cover
5	BS-691002	1	/P	Screw (Starter Drive Cover)
6	BS-694997	1		Emissions Label
7	BS-690494	1		Mounting Bracket
8	BS-690497	1	/P	Blower Housing
9	BS-690960	1	S	Screw (Blower Housing)
10	BS-690661	1	/P	Screw (Flywheel Guard)
11	BS-690456	1		Flywheel Guard
12	BS-690493	1	/P	Mounting Bracket
13	BS-692127	1		Screw (Mounting Bracket)
14	BS-691658	1	/P	Screw (Crankshaft Extension)
15	BS-690582	1		Washer (Flywheel)
16	BS-691058	1		Screw (Fan Retainer)
17	BS-690452	1	/P	Fan Retainer
18	BS-691927	1	S	Flywheel Fan
19	BS-690868	1		Valve Seal
20	BS-693556	1	/P	Flywheel
21	BS-691265	1	/P	Retaining Ring
22	BS-693713	1		Pinion Gear
23	BS-690192	1	S	Carburetor Gasket Set
24	BS-692137	1	/P	Intake Gasket
25	BS-281165	1	S	Float Bowl Gasket
26	BS-692255	1	/P	Sealing Washer
27	BS-690960	1	S	Screw (Blower Housing Cover)
28	BS-692679	1		Blower Housing Cover
29	BS-690365	1		Screw (Blower Housing Cover)
30	BS-690190	1	S	Valve Gasket Set
31	BS-692410	1	S	Cylinder Head Gasket
32	BS-692138	1		O-Ring Seal (Intake Manifold)
33	BS-272475	1	S	Rocker Cover Gasket

1170 S/N 1H019H - 1H310H
Engine (Twin) Assembly

Page 25 of 48

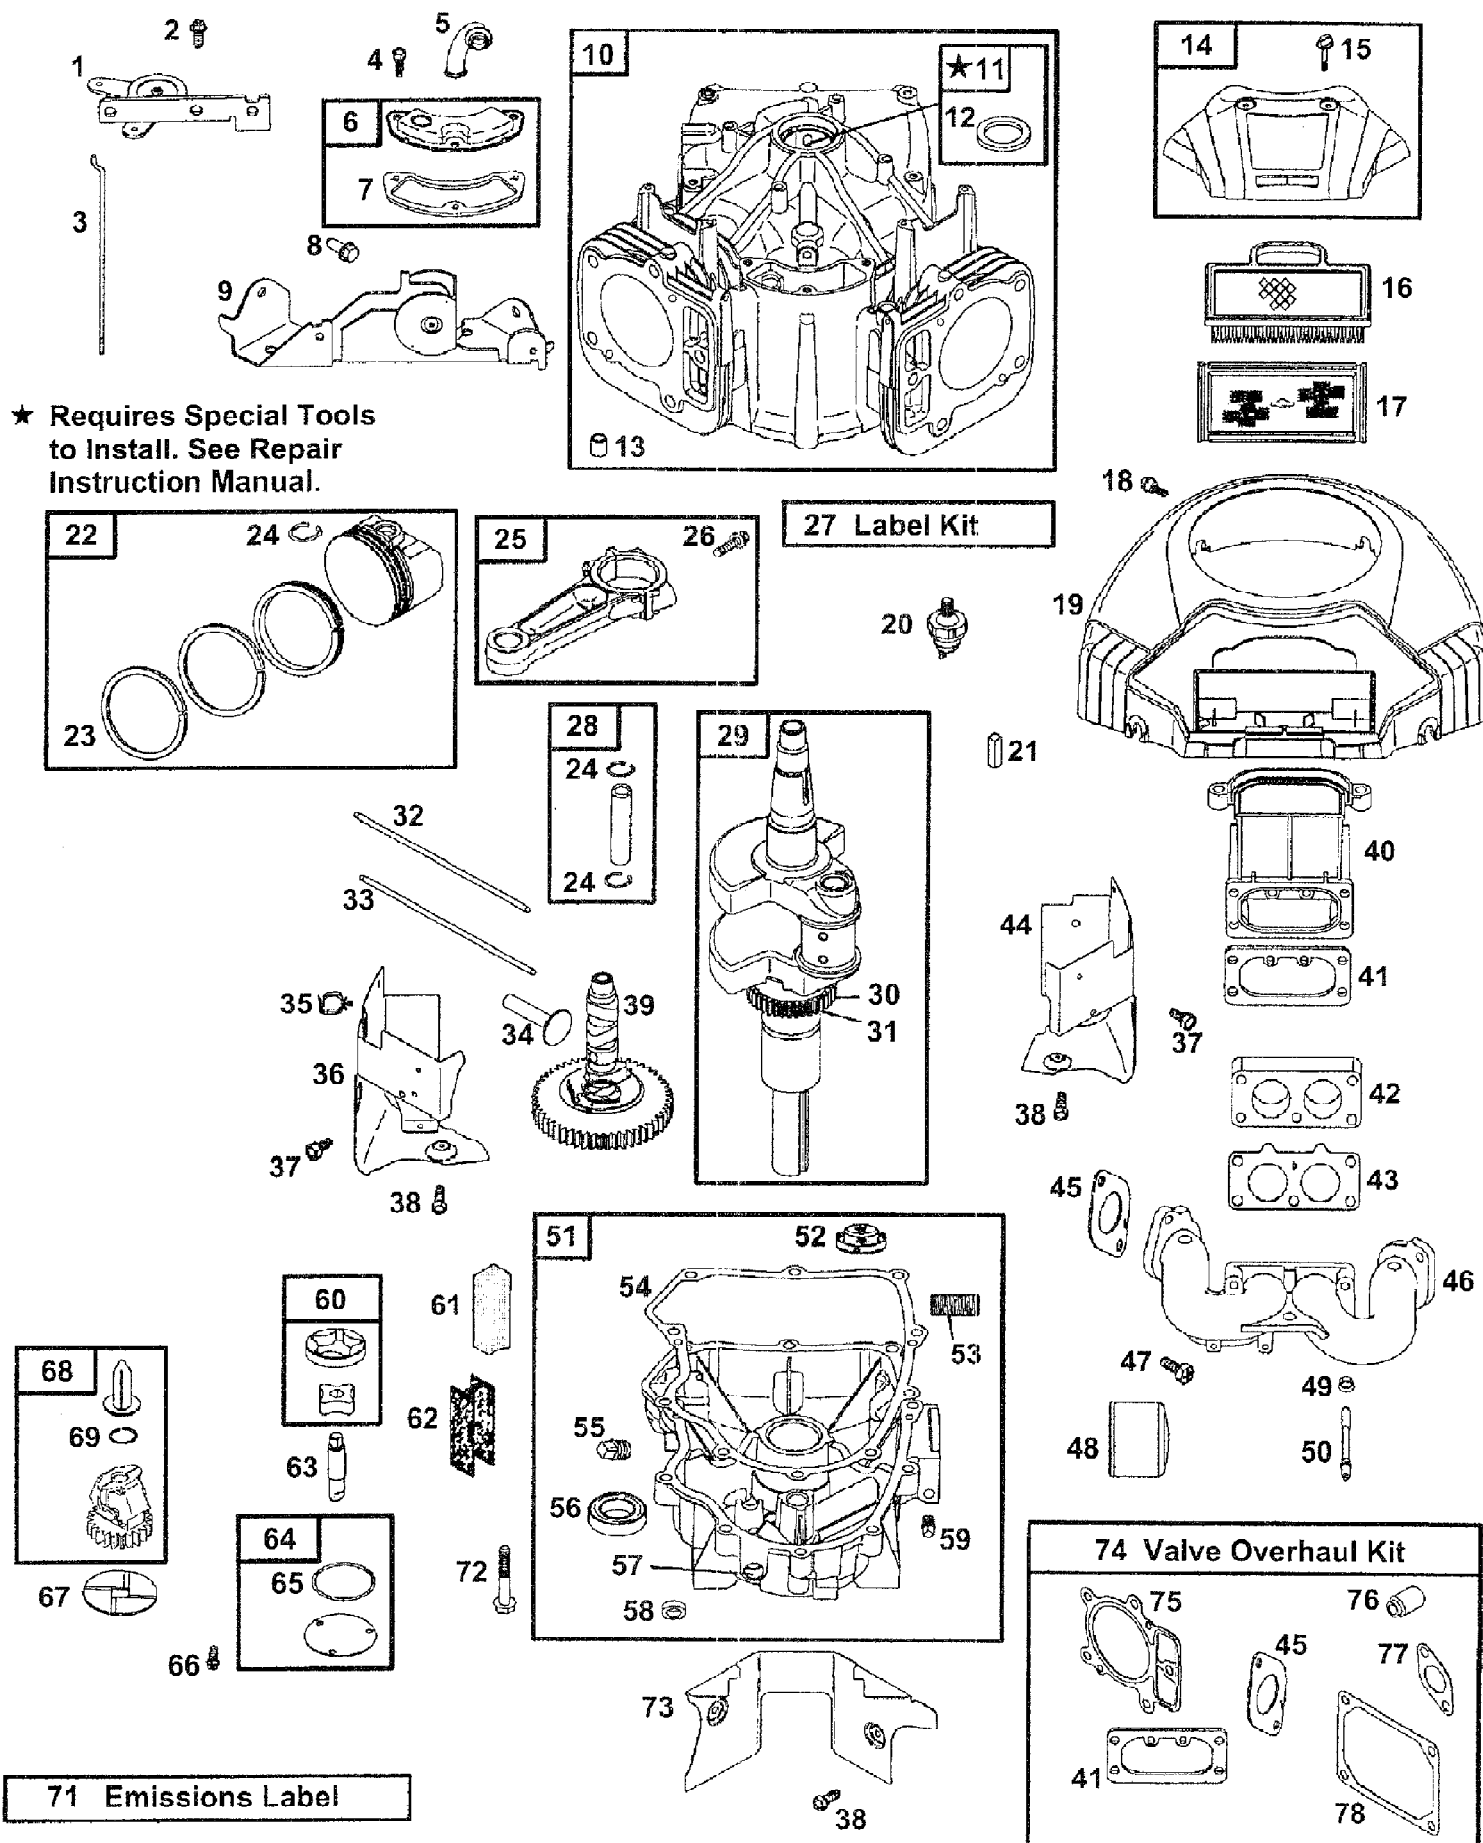

Assemblies Include All Parts Shown In Frames

1170 S/N 1H019H - 1H310H
Engine (Twin) Assembly

Page 26 of 48

Ref #	Part Number	Qty	S/P/F	Description
1	BS-691021	1		Choke Control Bracket
2	BS-94930	1	S	Screw (Choke Control Bracket)
3	BS-691022	1		Choke Link
4	BS-690960	1	S	Screw (Breather Assembly)
5	BS-690942	1	S	Breather Tube
6	BS-499601	1	S	Breather Assembly
7	BS-690937	1		Breather Gasket
8	BS-690960	1	S	Screw (Control Bracket)
9	BS-691023	1		Control Bracket
10	BS-690231	1		Cylinder Assembly
11	BS-499585	1	F	Bushing/Seal Kit (Magneto Side)
12	BS-391086	1	S	Oil Seal (Magneto Side)
13	BS-230192	1	S	Locating Pin
14	BS-499788	1	S	Air Cleaner Cover
15	BS-691008	1		Air Cleaner Knob
16	BS-499486S	1	/P	Air Cleaner Cartridge Filter
17	BS-273638S	1	/P	Pre-Cleaner Filter
18	BS-691005	1		Screw (Blower Housing)
19	BS-691004	1		Blower Housing
20	BS-491657	1	S	Oil Pressure Switch
21	BS-222698	1	S	Flywheel Key
22	BS-499588	1	S	Piston Assembly (Standard)
	BS-499589	1		Piston Assy. (.010 Oversize)
	BS-499590	1	S	Piston Assy. (.020 Oversize)
	BS-499591	1		Piston Assy. (.030 Oversize)
23	BS-499604	1		Ring Set (Standard)
	BS-499605	1		Ring Set (.010 Oversize)
	BS-499606	1		Ring Set (.020 Oversize)
	BS-499607	1		Ring Set (.030 Oversize)
24	BS-263181	1		Piston Pin Lock
25	BS-499583	1		Connecting Rod
26	BS-690976	1		Screw (Connecting Rod)
27	BS-690103	1		Label Kit
28	BS-690229	1		Piston Pin
29	BS-691046	1	S	Crankshaft
30	BS-94388	1	S	Timing Key
31	BS-690980	1		Timing Gear
32	BS-690981	1	/P	Rod-Push (Steel)
33	BS-690982	1	/P	Rod-Push (Aluminum)
34	BS-262679	1	S	Valve Tappet
35	BS-691010	1		Clip
36	BS-691012	1		Air Guide Cover (Cylinder #1)
37	BS-94930	1	S	Screw (Air Guide Cover)
38	BS-690960	1	S	Screw (Air Guide Cover)
39	BS-690978	1		Camshaft
40	BS-691011	1		Air Adapter
41	BS-691001	1		Air Cleaner Gasket
42	BS-690952	1		Carburetor Spacer
43	BS-690950	1		Intake Gasket
44	BS-691014	1		Air Guide Cover (Cylinder #2)
45	BS-690949	1		Intake Gasket
46	BS-693996	1		Intake Manifold
47	BS-94913	1	S	Screw (Intake Manifold)


1170 S/N 1H019H - 1H310H
Engine (Twin) Assembly

Page 27 of 48

Ref #	Part Number	Qty	S/P/F	Description
48	BS-492932	1	S	Oil Filter
49	BS-94010	1	S	Nut (Carburetor)
50	BS-690951	1		Stud (Carburetor)
51	BS-690069	1		Engine Sump
52	BS-690770	1		Oil Pump Screen
53	BS-690954	1	/P	Oil Filter Nipple
54	BS-690945	1	S	Crankcase Gasket
55	BS-94239	1	S	Oil Drain Plug
56	BS-690947	1	S	Oil Seal (PTO Side)
57	BS-690552	1		Governor Crank Bushing
58	BS-690657	1		Governor Shaft Seal
59	BS-690283	1		Oil Plug
60	BS-499054	1	S	Oil Pump
61	BS-690956	1		Oil Collector
62	BS-690957	1		Breather Retainer
63	BS-691042	1		Pump Shaft
64	BS-499613	1		Oil Pump Cover
65	BS-690589	1	/P	O-Ring Seal (Oil Pump Cover)
66	BS-691033	1		Screw (Oil Pump Cover)
67	BS-690412	1	/P	Washer (Governor Gear)
68	BS-394348	1	S	Governor Gear
69	BS-690317	1	S	Governor Shaft Retainer
71	BS-695104	1		Emissions Label
72	BS-690308	1	S	Screw (Engine Sump)
73	BS-691015	1		Air Guide Cover
74	BS-499890	1	S	Valve Overhaul Kit
75	BS-690962	1	S	Cylinder Head Gasket
76	BS-690968	1	/P	Valve Seal
77	BS-690970	1	/P	Exhaust Gasket
78	BS-690971	1	/P	Rocker Cover Gasket
	BS-692714	1	S	Short Block

1170 S/N 1H019H - 1H310H
Engine (Twin) Carburetor & Head

Page 28 of 48

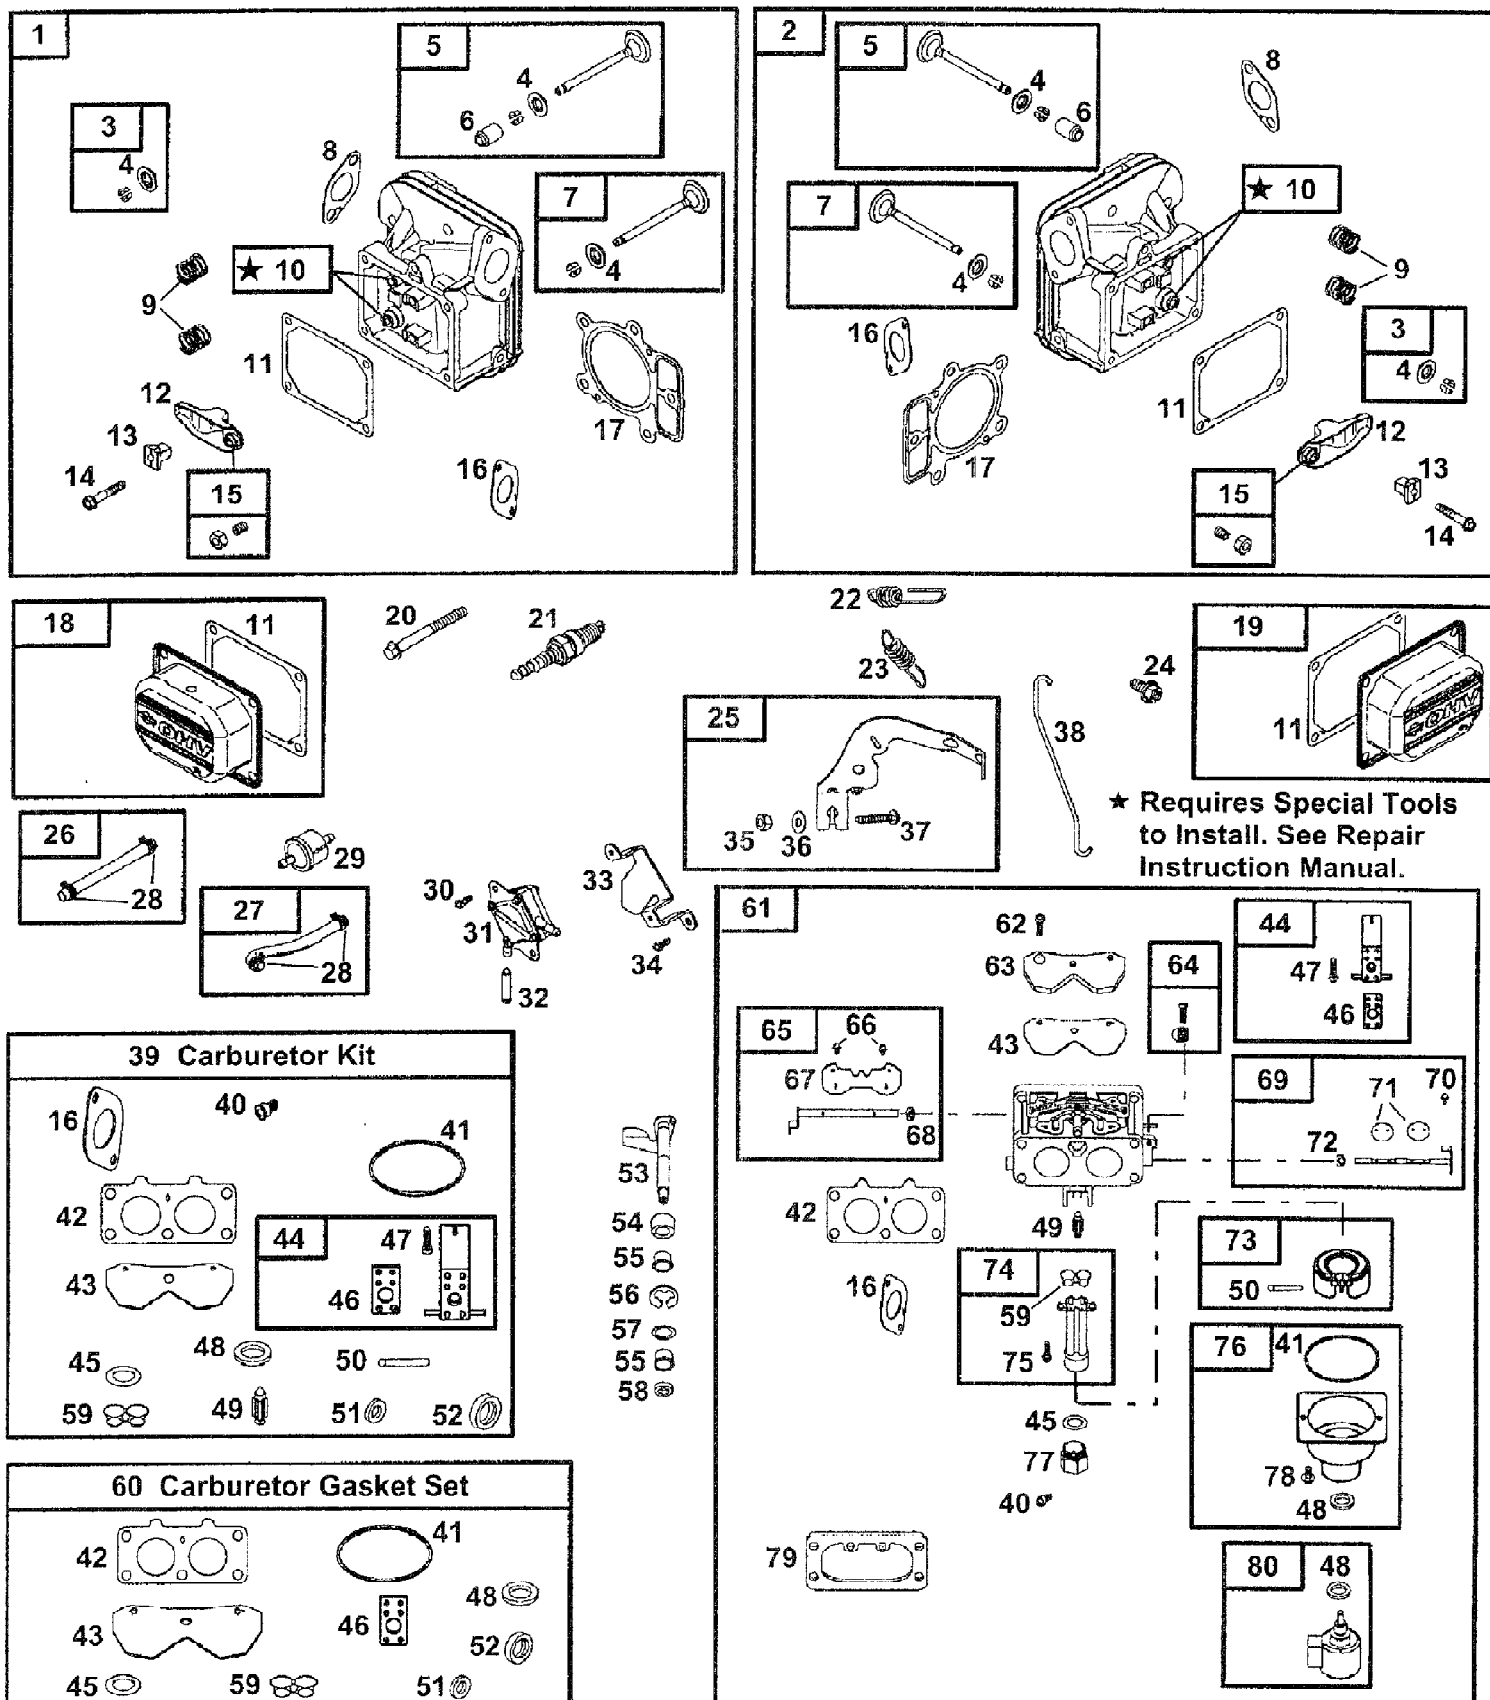

Assemblies Include All Parts Shown In Frames

1170 S/N 1H019H - 1H310H
Engine (Twin) Carburetor & Head

Page 29 of 48

Ref #	Part Number	Qty	S/P/F	Description
1	BS-499587	1		Cylinder Head (Cylinder #1)
2	BS-499595	1	S	Cylinder Head (Cylinder #2)
3	BS-499586	1	/P	Valve Keeper
4	BS-690964	1	S	Valve Retainer
5	BS-499597	1	S	Intake Valve
6	BS-690968	1	/P	Valve Seal
7	BS-499596	1		Exhaust Valve
8	BS-690970	1	/P	Exhaust Gasket
9	BS-690963	1		Valve Spring
10	BS-262835	1	F	Guide Bushing
11	BS-690971	1	/P	Rocker Cover Gasket
12	BS-690972	1		Rocker Arm
13	BS-806038	1	S	Rocker Arm Pivot
14	BS-690967	1		Screw (Rocker Arm)
15	BS-690083	1		Rocker Arm Adjuster
16	BS-690949	1		Intake Gasket
17	BS-690962	1	S	Cylinder Head Gasket
18	BS-499599	1		Cover-Rocker (Cylinder #11)
19	BS-499600	1		Cover-Rocker (Cylinder #2)
20	BS-690360	1	/P	Screw (Cylinder Head)
21	759-3336	1	/P	Sparkplug
22	BS-691019	1		Governed Idle Spring
23	BS-691018	1		Governor Spring
24	BS-690960	1	S	Screw (Rocker Cover)
25	BS-691048	1	S	Governor Control Lever
26	BS-298049	1	S	Fuel Line (Cut to Required Length)
27	BS-691049	1		Fuel Line (Molded)
28	BS-95162	1	S	Hose Clamp
29	BS-493629	1	S	Fuel Filter
30	BS-690960	1	S	Screw (Fuel Pump)
31	BS-691034	1	S	Fuel Pump
32	BS-691040	1	S	Vacuum Hose
33	BS-691039	1		Fuel Pump Bracket
34	BS-690960	1	S	Screw (Fuel Pump Bracket)
35	BS-92278	1	S	Nut (Governor Control Lever)
36	BS-94942	1		Washer (Governor Control Lever)
37	BS-93853	1		Bolt (Governor Control Lever)
38	BS-691020	1		Throttle Link
39	BS-499811	1	S	Carburetor Kit
40	BS-690232	1		Main Jet
	BS-690989	1		Main Jet (High Altitude)
41	BS-690994	1		Float Bowl Gasket
42	BS-690950	1		Intake Gasket
43	BS-690234	1		Carburetor Cover Plate Gasket
44	BS-499808	1		Carburetor Nozzle
45	BS-499599	1		Cover-Rocker (Cylinder #1)
46	BS-690995	1		Nozzle Gasket
47	BS-690990	1		Screw (Carburetor Nozzle)
48	BS-690997	1		Sealing Washer
49	BS-690985	1	S	Float Needle Valve
50	BS-690984	1		Float Hinge Pin
51	BS-690998	1		Choke Shaft Seal
52	BS-691000	1		Throttle Shaft Seal


1170 S/N 1H019H - 1H310H
Engine (Twin) Carburetor & Head

Page 30 of 48

Ref #	Part Number	Qty	S/P/F	Description
53	BS-691045	1		Governor Crank
54	BS-690552	1		Governor Crank Bushing
55	BS-690553	1		Governor Crank Bushing
56	BS-690328	1	/P	E-Ring Retainer
57	BS-690442	1		Washer (Governor Crank)
58	BS-690657	1		Governor Shaft Seal
59	BS-690988	1		O-Ring Seal (Fuel Transfer Tube)
60	BS-499812	1	S	Carburetor Gasket Set
61	BS-499804	1	S	Carburetor
62	BS-690990	1		Screw (Cover Plate)
63	BS-690999	1		Cover Plate
64	BS-499802	1		Idle Speed Kit
65	BS-499807	1		Choke Shaft Kit
66	BS-805538	1		Screw (Choke Shaft)
67	BS-690986	1		Choke Valve
68	BS-690998	1		Choke Shaft Seal
69	BS-499805	1		Throttle Shaft Kit
70	BS-805538	1		Screw (Throttle Valve)
71	BS-690993	1		Throttle Valve
72	BS-691000	1		Throttle Shaft Seal
73	BS-499806	1		Carburetor Float
74	BS-499803	1		Fuel Transfer Tube
75	BS-690991	1		Screw (Fuel Transfer Tube)
76	BS-499810	1		Float Bowl
77	BS-690996	1		Solenoid Retainer
78	BS-690992	1		Screw (Float Bowl)
79	BS-691001	1		Air Cleaner Gasket
80	BS-499809	1		Fuel Solenoid

1170 S/N 1H019H - 1H310H
Engine (Twin) Flywheel, Gasket & Starter

Page 31 of 48

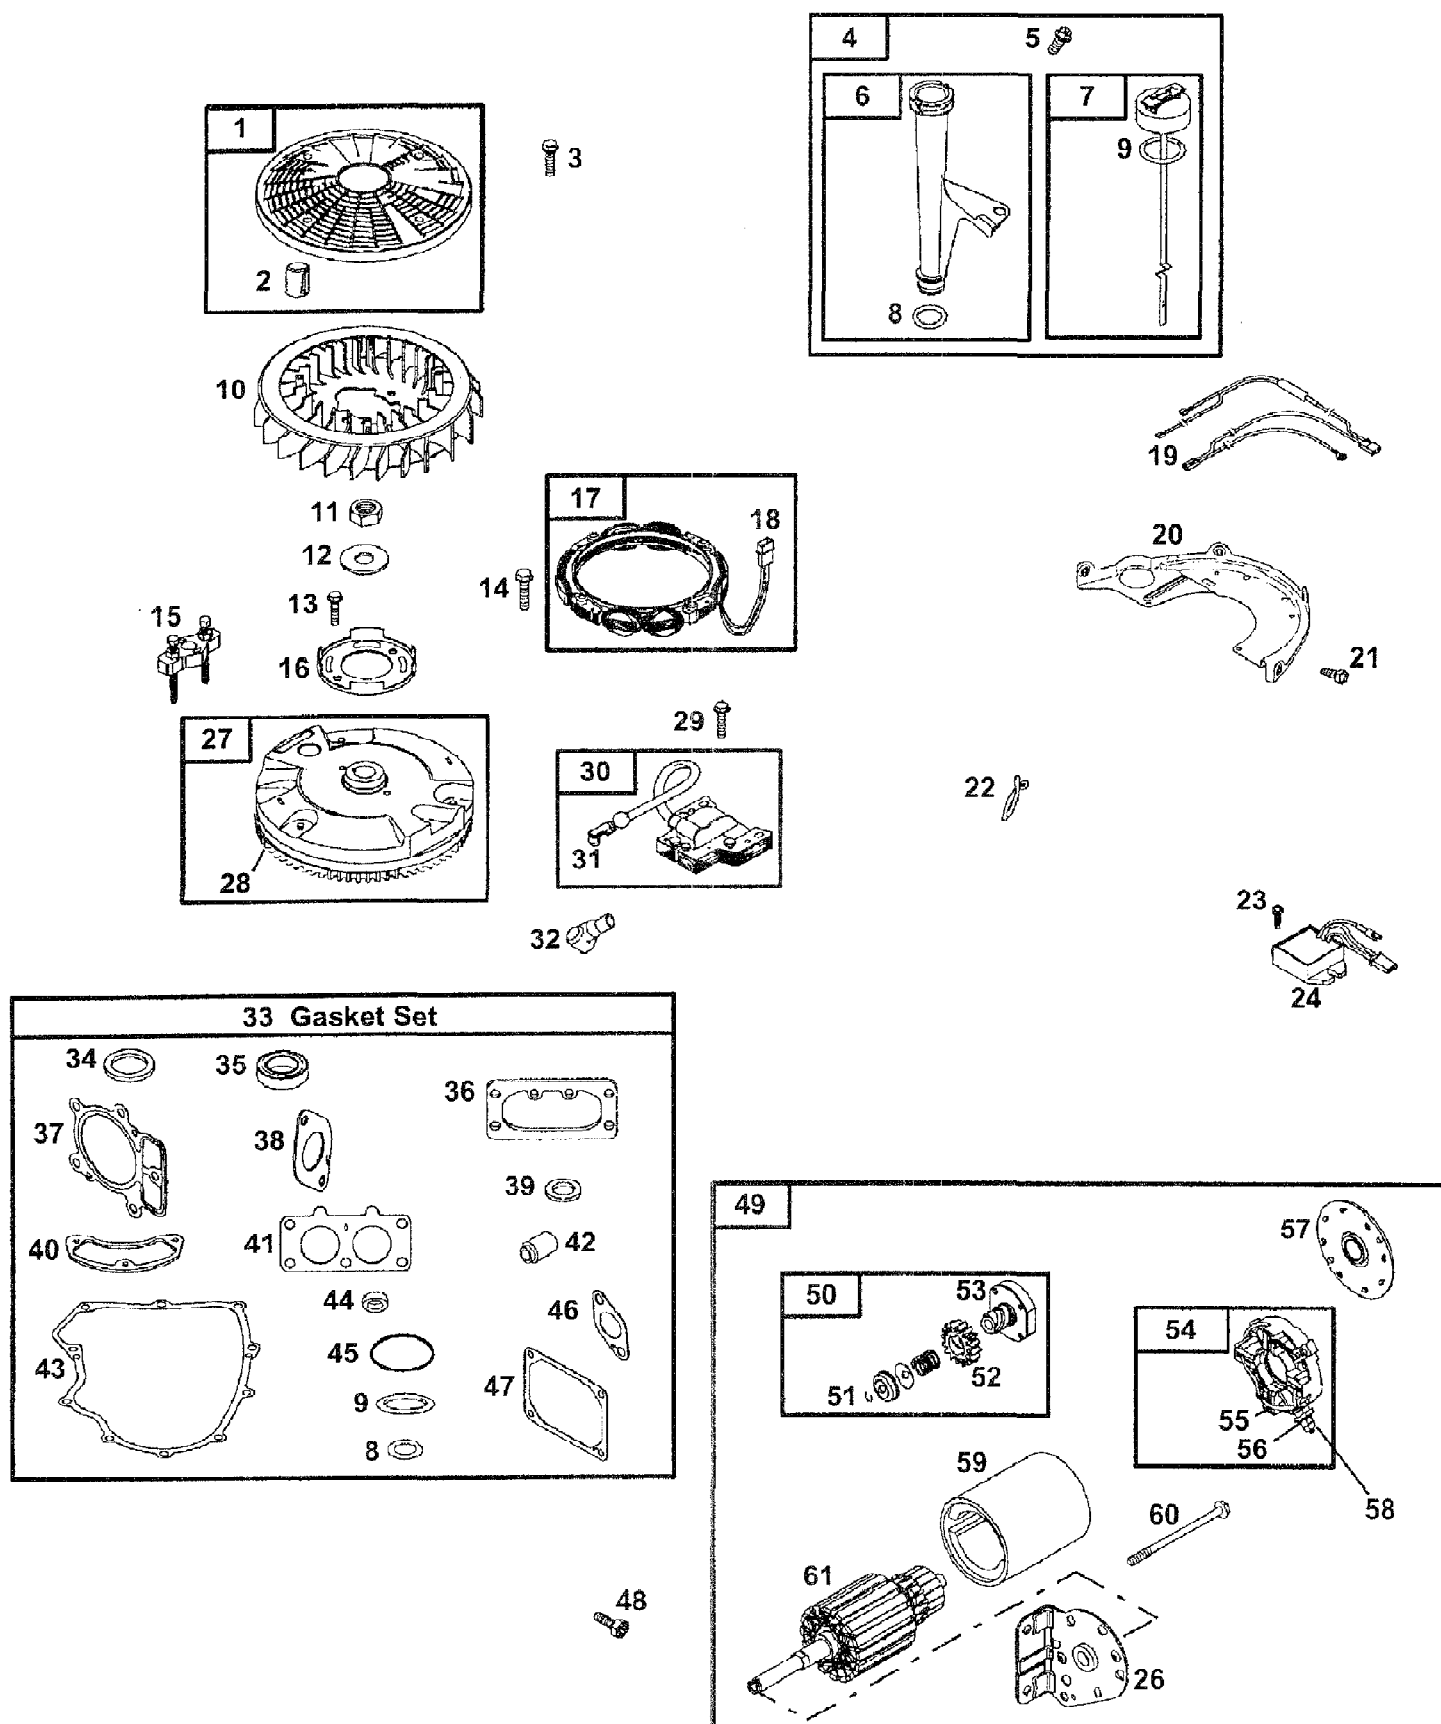

Assemblies Include All Parts Shown In Frames

1170 S/N 1H019H - 1H310H
Engine (Twin) Flywheel, Gasket & Starter

Page 32 of 48

Ref #	Part Number	Qty	S/P/F	Description
1	BS-691055	1	S	Rotating Screen
2	BS-691215	1		Spacer
3	BS-691057	1		Screw (Rotating Screen)
4	BS-499602	1		Dipstick/Tube Assembly
5	BS-690960	1	S	Screw (Dipstick Tube)
6	BS-691037	1		Dipstick Tube
7	BS-691036	1		Dipstick
8	BS-691032	1		Dipstick Tube Seal
9	BS-499602	1		Dipstick/Tube Seal
10	BS-691243	1		Flywheel Fan
11	BS-691059	1		Nut (Flywheel)
12	BS-691056	1		Washer (Flywheel)
13	BS-94627	1		Screw (Fan-Retainer)
14	BS-93621	1	/P	Screw (Alternator)
15	BS-19203	1		Flywheel Puller
16	BS-691247	1		Fan Retainer
17	BS-393295	1	S	Alternator (Dual Circuit)
18	BS-393456	1		Alternator Connector/Wire
19	BS-691220	1		Wiring Harness
20	BS-691009	1		Back Plate
21	BS-690960	1	S	Screw (Back Plate)
22	BS-694123	1		Wire Clip
23	BS-690960	1	S	Screw (Regulator)
24	BS-394890	1	S	Regulator (Regulated-16 Amp)
26	BS-691283	1		Drive Cap
27	BS-691053	1		Flywheel
28	BS-499612	1		Gear-Ring
29	BS-94731	1		Screw (Magneto Armature)
30	BS-691060	1	/P	Magneto Armature
31	BS-493880	1	S	Sparkplug Terminal
32	BS-66538	1	S	Sparkplug Boot
33	BS-499889	1	S	Engine Gasket Set
34	BS-391086	1	S	Oil Seal (Magneto Side)
35	BS-690947	1	S	Oil Seal (PTO Side)
36	BS-691001	1		Air Cleaner Gasket
37	BS-690962	1	S	Cylinder Head Gasket
38	BS-690949	1		Intake Gasket
39	BS-690997	1		Sealing Washer
40	BS-690937	1		Breather Gasket
41	BS-690950	1		Intake Gasket
42	BS-690968	1	/P	Valve Seal
43	BS-690945	1	S	Crankcase Gasket
44	BS-690657	1		Governor Shaft Seal
45	BS-690589	1	/P	O-Ring Seal (Oil Pump Cover)
46	BS-690970	1	/P	Exhaust Gasket
47	BS-690971	1	/P	Rocker Cover Gasket
48	BS-94951	1	S	Screw (Drive Cap)
49	BS-691262	1	S	Starter Motor
50	BS-497606	1	S	Starter Drive
51	BS-263080	1	S	Retaining Ring
52	BS-693058	1	S	Pinion Gear
53	BS-398003	1	S	Drive Clutch
54	BS-497605	1	S	Brush Retainer


1170 S/N 1H019H - 1H310H
Engine (Twin) Flywheel, Gasket & Starter

Page 33 of 48

Ref #	Part Number	Qty	S/P/F	Description
55	BS-497608	1	/P	Brush Set
56	BS-693167	1		Nut (Brush Retainer)
57	BS-497607	1	S	End Cap
58	BS-92278	1	S	Nut (Brush Retainer)
59	BS-691262	1	S	Housing-Starter
60	BS-95035	1		Bolt (Starter Motor)
61		1		Armature (Serviced By Starter Only)

1170 S/N 1H019H - 1H310H
Labels

Page 34 of 48

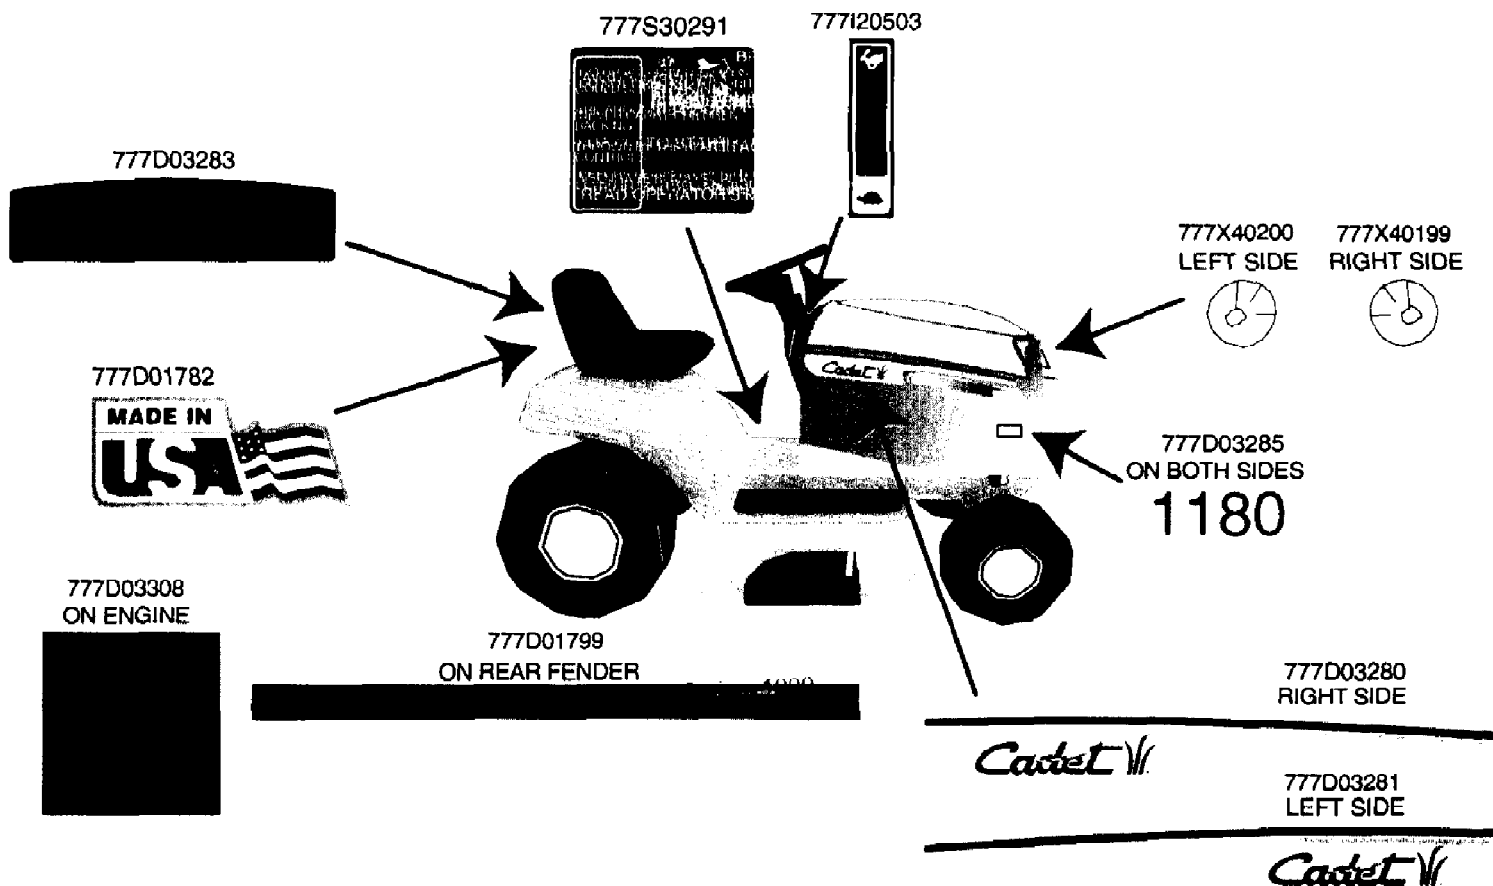


1170 S/N 1H019H - 1H310H
Labels

Page 35 of 48

Ref #	Part Number	Qty	S/P/F	Description
777D03283	777D03283	1		LABEL-REFLECTIVE
777D01782	777D01782	1	/P	LABEL-MADE IN USA
777S30291	777S30291	1		LABEL-FLOORBOARD W
777I20503	777I20503	1		LABEL
777X40200	777X40200	1		LABEL-LH LIGHT RFL
777X40199	777X40199	1		LABEL-RH LIGHT RFL
777D03285	777D03285	1		No Longer Available LABEL-SD PNL 1180
777D03280	777D03280	1		LABEL-RH SIDE PANE
777D03281	777D03281	1		LABEL-LH SIDE PANE
777D01799	777D01799	1	S	USE 777D06088 LABEL-REAR FEND
777D03308	777D03308	1		No Longer Available LABEL-18HP IND PLU

1170 S/N 1H019H - 1H310H
Lift Assembly/Seat/Fender

Page 36 of 48

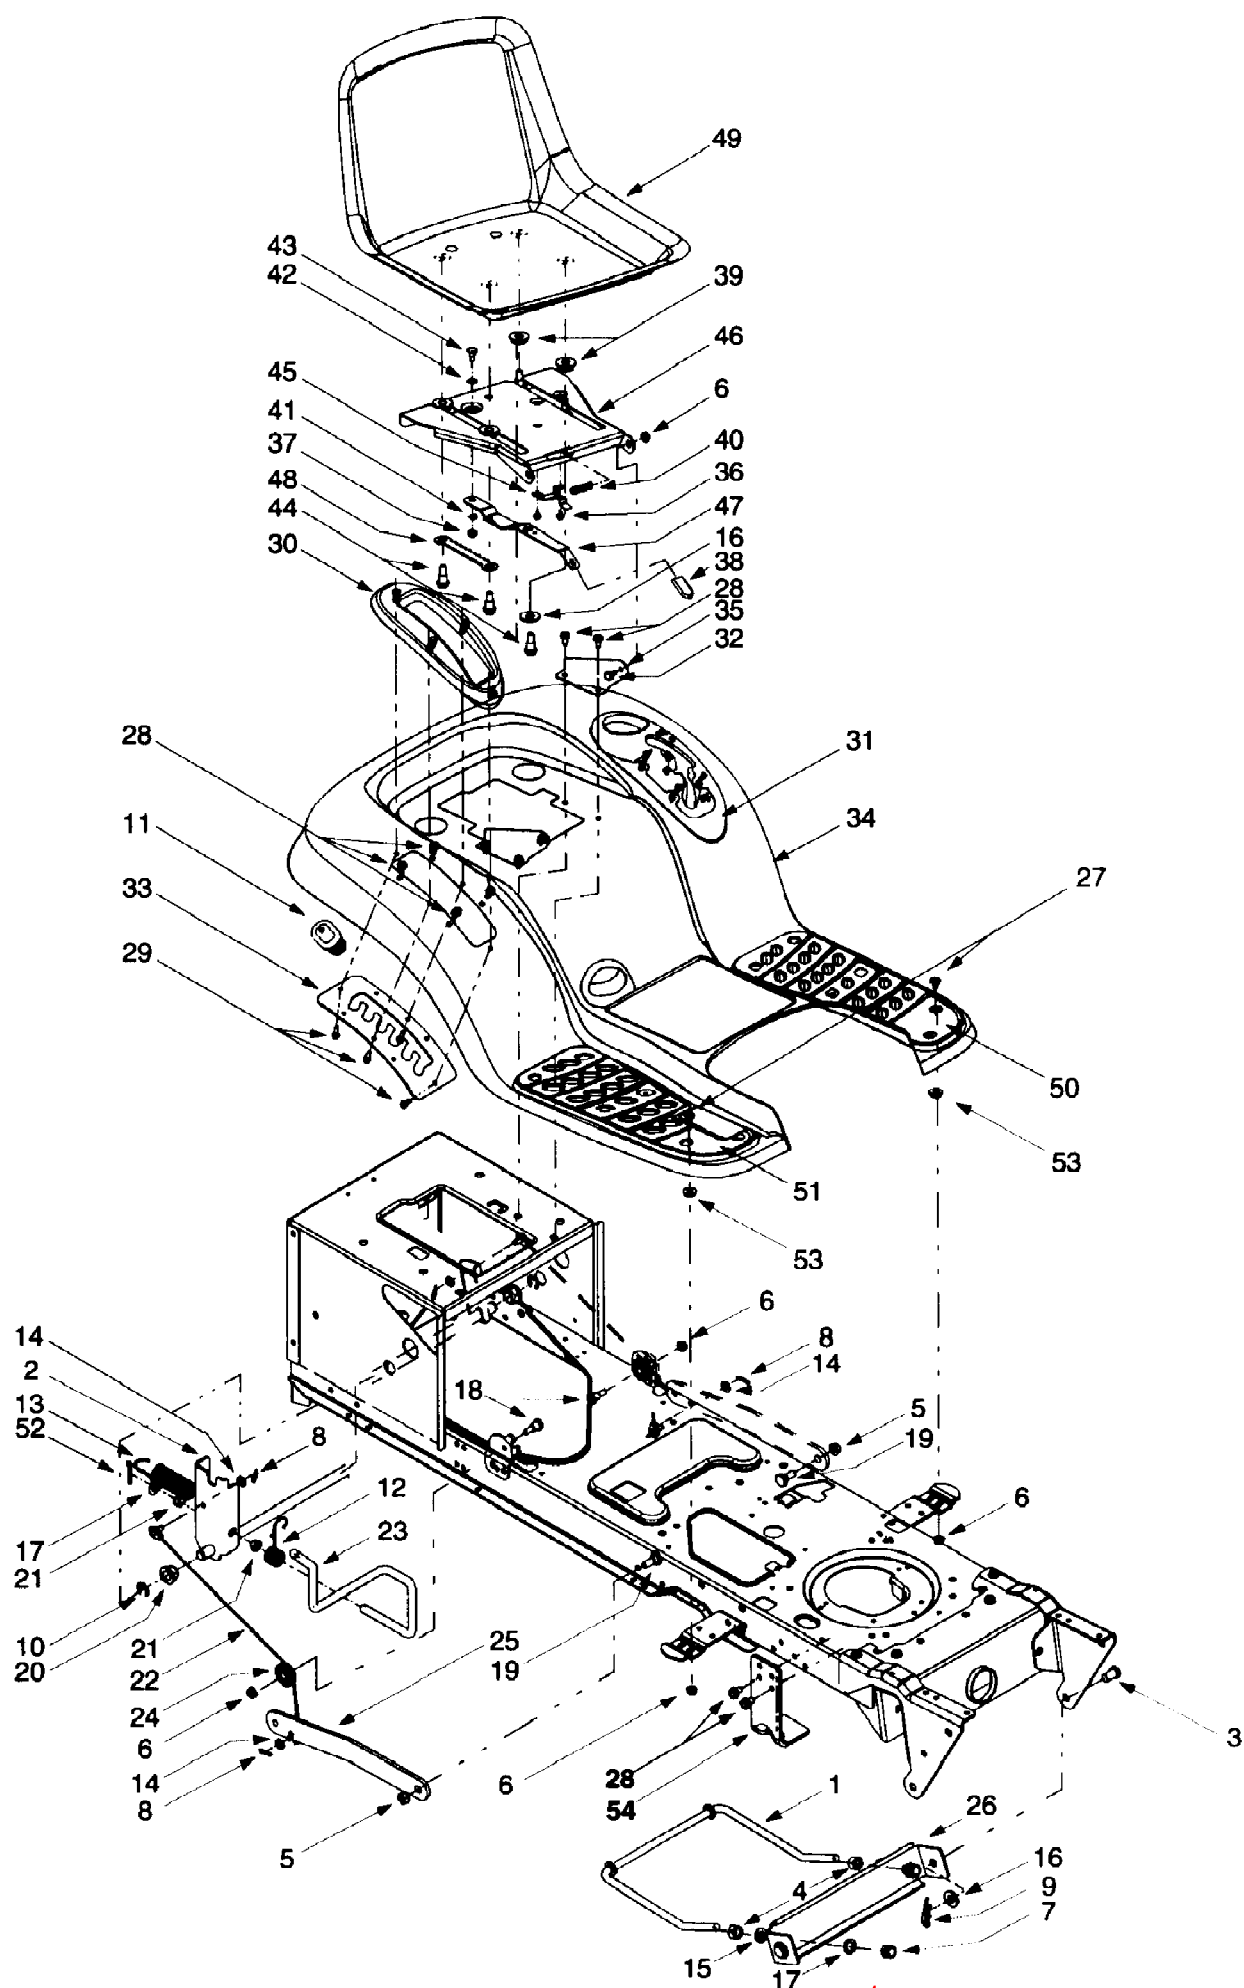

1170 S/N 1H019H - 1H310H
Lift Assembly/Seat/Fender

Page 37 of 48

Ref #	Part Number	Qty	S/P/F	Description
1	747-1130	1	S	Deck Stabilizer Rod
2	683-0197	1	S	Lift Shaft Assembly
3	711-0332	1	S	Clevis Pin, .5 x .78
4	712-0206	1	S	Hex Nut, 1/2-13
5	712-0431	1	S	Flange Lock Nut, 3/8-16
6	712-3004A	1	/P	Flange Lock Nut, 5/16-18
7	712-3083	1	/P	Hex Nut, 1/2-13
8	714-0104	1	S	Internal Cotter Pin
9	714-0145	1	S	Internal Cotter Pin
10	716-0106	1	/P	E-ring
11	720-0311	1		Handle Grip
12	732-0874	1	/P	Torsion Spring
13	732-0934	1		Lift-assist Spring, 1.15 x 5.99 (Found on Model 1180 Only)
14	736-0275	1	S	Flat Washer, 5/16
15	736-0921	1	S	Lock Washer, 1/2
16	736-3019	1		Flat Washer, .31 x 1.062 x .134
17	736-3084	1	/P	Flat Washer, .51 x 1.12 x .06
18	738-0138	1	S	Hex Cap Screw, 5/16-18 x .62
19	738-0143	1	/P	Shoulder Screw, 3/8-16
20	741-0225	1	S	Hex Flange Bearing
21	741-0715	1	S	Snap Flange Bearing
22	746-0968	1		Lift Cable, 16.16
23	747-1111	1	S	Lift Handle
24	756-1154	1		Roller Pulley
25	783-0678	1	S	Arm Lift
26	783-0720A	1	S	Deck Stabilizer Bracket
27	710-0805	1	/P	Carriage Bolt, 5/16-18 x 1.5
28	710-0604A	1	/P	Self-tapping Screw, 5/16-18 x .625
29	710-0895	1		Self-tapping Screw, 1/4-15 x .75
30	731-1990	1		Lift Lever Cover
31	731-2104A	1	S	Shift Lever Cover w/ Cup Holder
32	738-0155	1	S	Shoulder Screw, .437 x 1.62
33	783-0677	1	S	Lift Adjustment Bracket
34	783-0685A	1	S	Fender
35	783-0715	1	S	Seat Mounting Bracket
36	710-1268	1	/P	Screw, #10-16 x .375
37	712-3027	1	S	Hex Flange Lock Nut, 1/4-20
38	720-0309A	1	/P	Seat Adjuster Grip
39	731-1989	1		Spacer
40	732-0499	1		Compression Spring, .41 x 1.5
41	736-0175	1	S	Spring Washer, .265 x .562 x .025
42	736-0204	1	/P	Flat Washer, .344 x .62 x .03
43	738-0137A	1	S	Shoulder Screw, .340 x .285, 1/4-20
44	738-1007	1		Shoulder Screw, .50 x .50, 3/8-16
45	783-0611	1		Seat Stop
46	783-0738	1	S	Seat Pivot Bracket
47	783-0739	1		Seat Adjustment Lever
48	783-0753	1		Seat Adjustment Selector
49	757-0380	1	S	Seat, Medium Back Black
50	735-0657	1		LH Foot Pad
51	735-0656	1		RH Foot Pad


1170 S/N 1H019H - 1H310H
Lift Assembly/Seat/Fender

Page 38 of 48

Ref #	Part Number	Qty	S/P/F	Description
	726-3046	1	/P	Foot Pad Clips (Not Shown)
52		1		UNKNOWN
53		1		UNKNOWN
54		1		UNKNOWN

1170 S/N 1H019H - 1H310H
Power Take Off System/Battery

Page 39 of 48

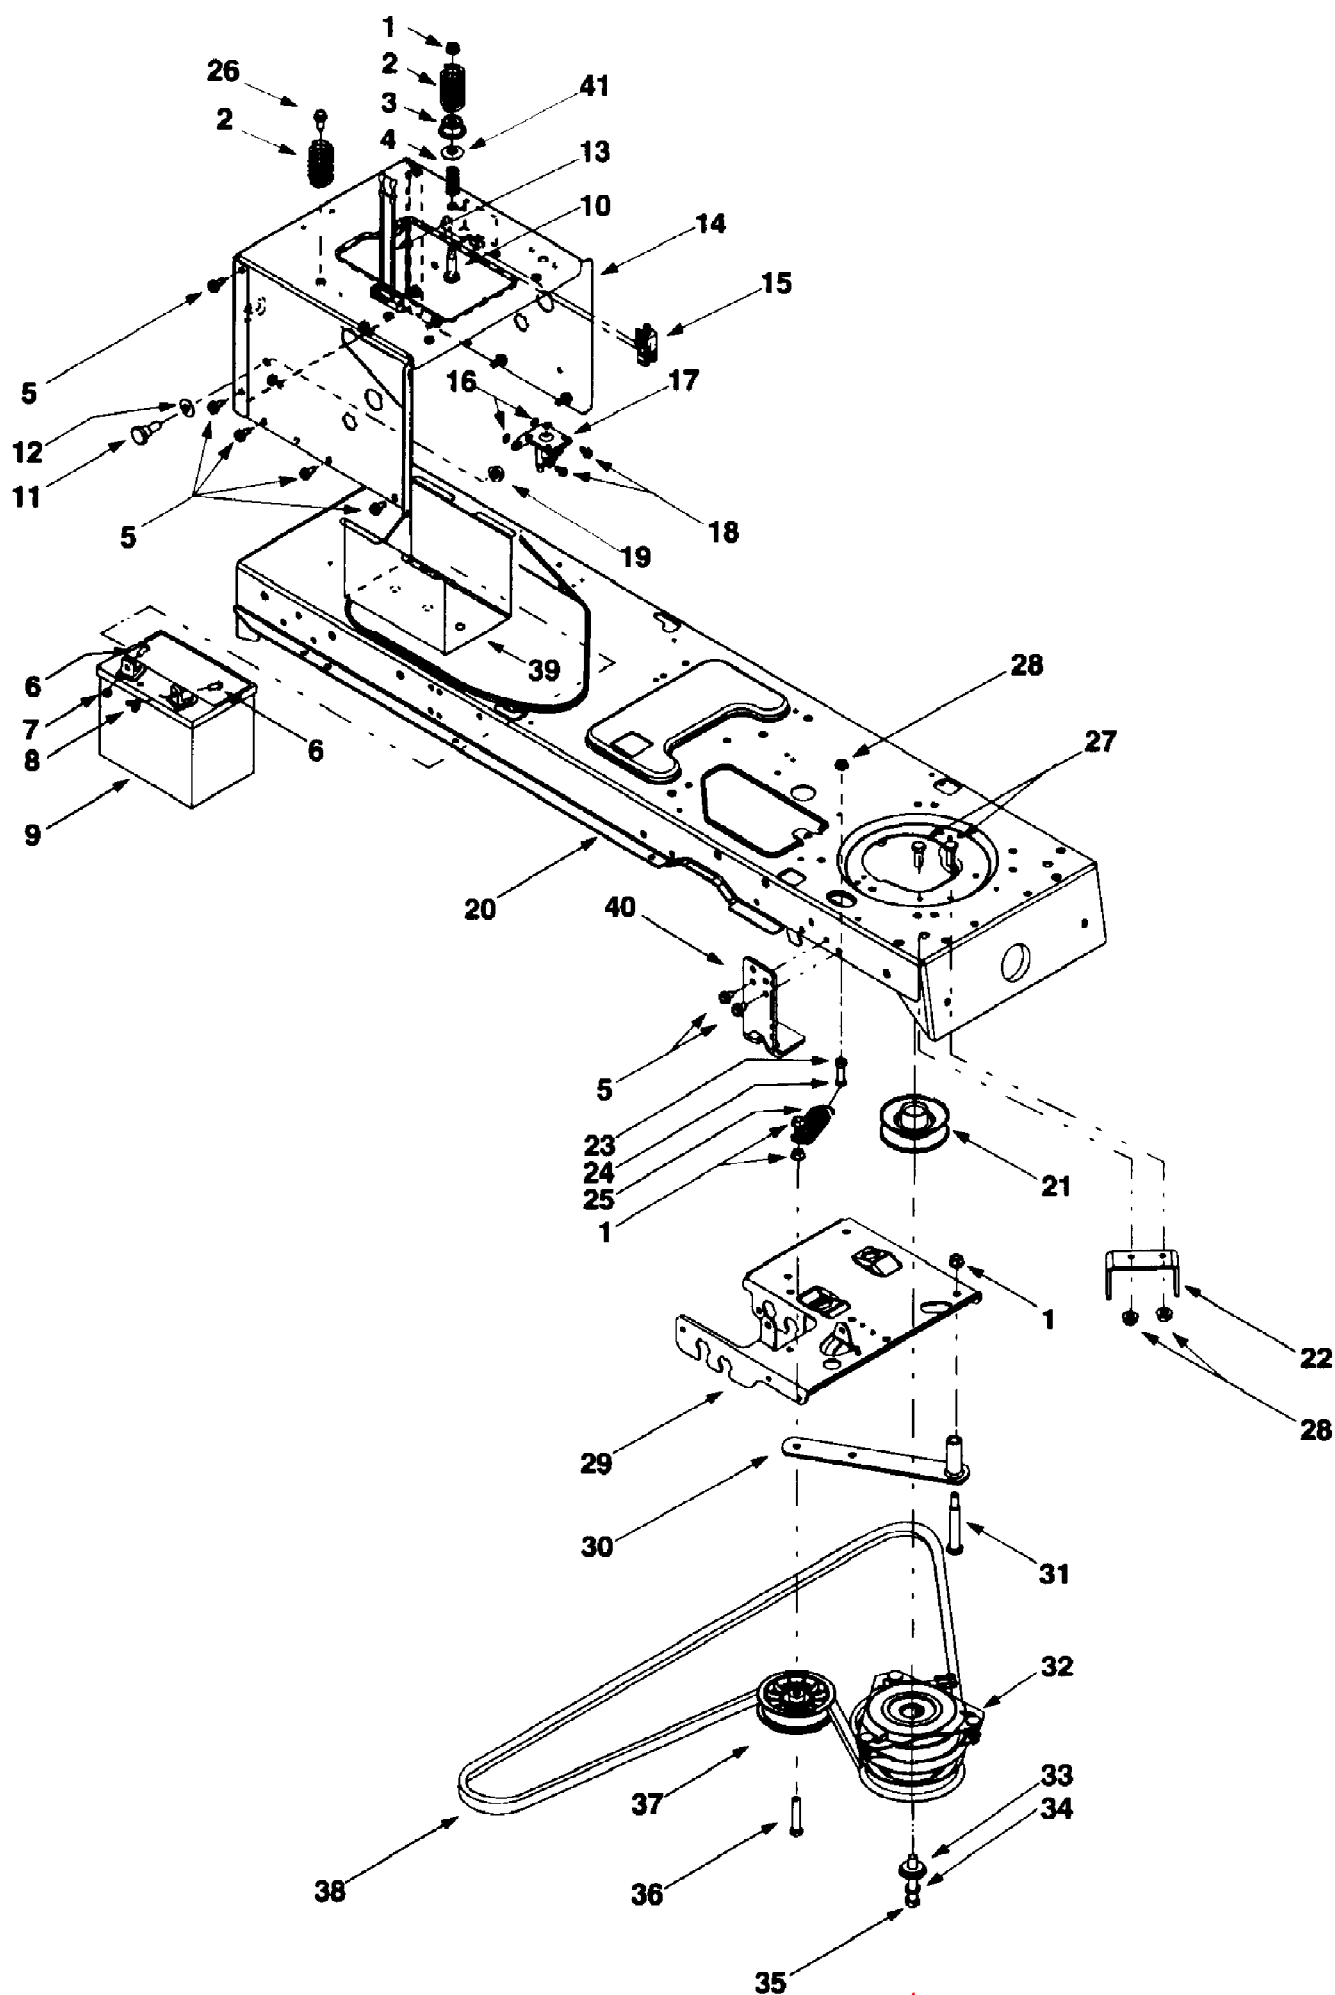


1170 S/N 1H019H - 1H310H
Power Take Off System/Battery

Page 40 of 48

Ref #	Part Number	Qty	S/P/F	Description
1	712-0431	1	S	Flange Lock Nut, 3/8-16
2	732-0735	1	/P	Compression Spring, 1.318 x 2.37
3	783-0733	1		Spacer Cup, 1.5 OD
4	732-0956	1		Compression Spring, .66 OD x 1.5
5	710-0604A	1	/P	Self Tapping Screw, 5/16-18 x .625
6	710-0751	1	/P	Hex Cap Screw, 1/4-20 x .62
7	712-0271	1	/P	Hex Sems Nut, 1/4-20
8	712-3044	1		Wing Nut, 1/4-20
9	725-1706	1	S	12-volt Battery, 270 CCA
10	738-1014	1	/P	Shoulder Screw, .5 x 1.25, 3/8-16
11	738-1020	1		Shoulder Screw, .625 x .5, 7/16-20
12	736-0407	1		Bell Washer, .45 x 1.0 x .062
13	723-0444	1		Battery Strap
14	783-1031	1		Hitch Plate
15	725-1747	1	S	Safety Interlock Plunger Switch
16	736-0222	1	S	Lock Washer, 1/4
17	725-1426	1	S	Solenoid, 12-Volt, 100 Amp
18	710-0599	1	/P	Self Tapping Screw, 1/4-20 x .5
19	712-0459	1	/P	Flange Lock Nut, 7/16-20
20	683-0304	1	S	Lower Frame Assembly
21	756-0639A	1	/P	Engine Pulley, 3.56 OD
22	783-1003	1	S	PTO Clutch Bracket
23	712-3010	1	S	Hex Nut, 5/16-18
24	710-3180	1	/P	Hex Cap Screw, 5/16-18 x 1.75 (Grade 5)
25	732-0978	1		Extension Spring, 1.2 OD x 3.638
26	710-1650	1	/P	Self-tapping Screw, 5/16-18 x .875
27	710-3025	1	/P	Hex Cap Screw, 5/16-18 x .625
28	712-3004A	1	/P	Flange Lock Nut, 5/16-18
29	783-0653B	1	S	Steering Support Bracket
30	683-0293	1	S	Idler Bracket Assembly (42-inch Decks)
	683-0297	1	S	Idler Bracket Assembly (46-inch Decks)
31	738-3056	1	S	Shoulder Screw, 1/2 Diameter x 2.5
32	717-1708	1	S	Electric PTO Clutch
33	738-0785	1	S	Shoulder Spacer, 1.38 x .445 x .36
34	736-0171	1	S	Lock Washer, 7/16
35	710-3157	1	S	Hex Cap Screw, 7/16-20 x 3.25 (Grade 5)
36	710-3011	1	/P	Hex Cap Screw, 3/8-16 x 2.25 (Grade 5)
37	756-0627	1	S	Flat Idler Pulley, 3.5 OD
38	754-0472	1	S	PTO Belt (42-inch Decks)
	754-0474	1	S	PTO Belt (46-inch Decks)
39	783-0349	1		Battery Tray
40	783-0891	1	S	Deck Stop
41	736-0105	1	/P	Bell Washer, .401 x .87 x .063

1170 S/N 1H019H - 1H310H
Single Speed Transmission

Page 41 of 48

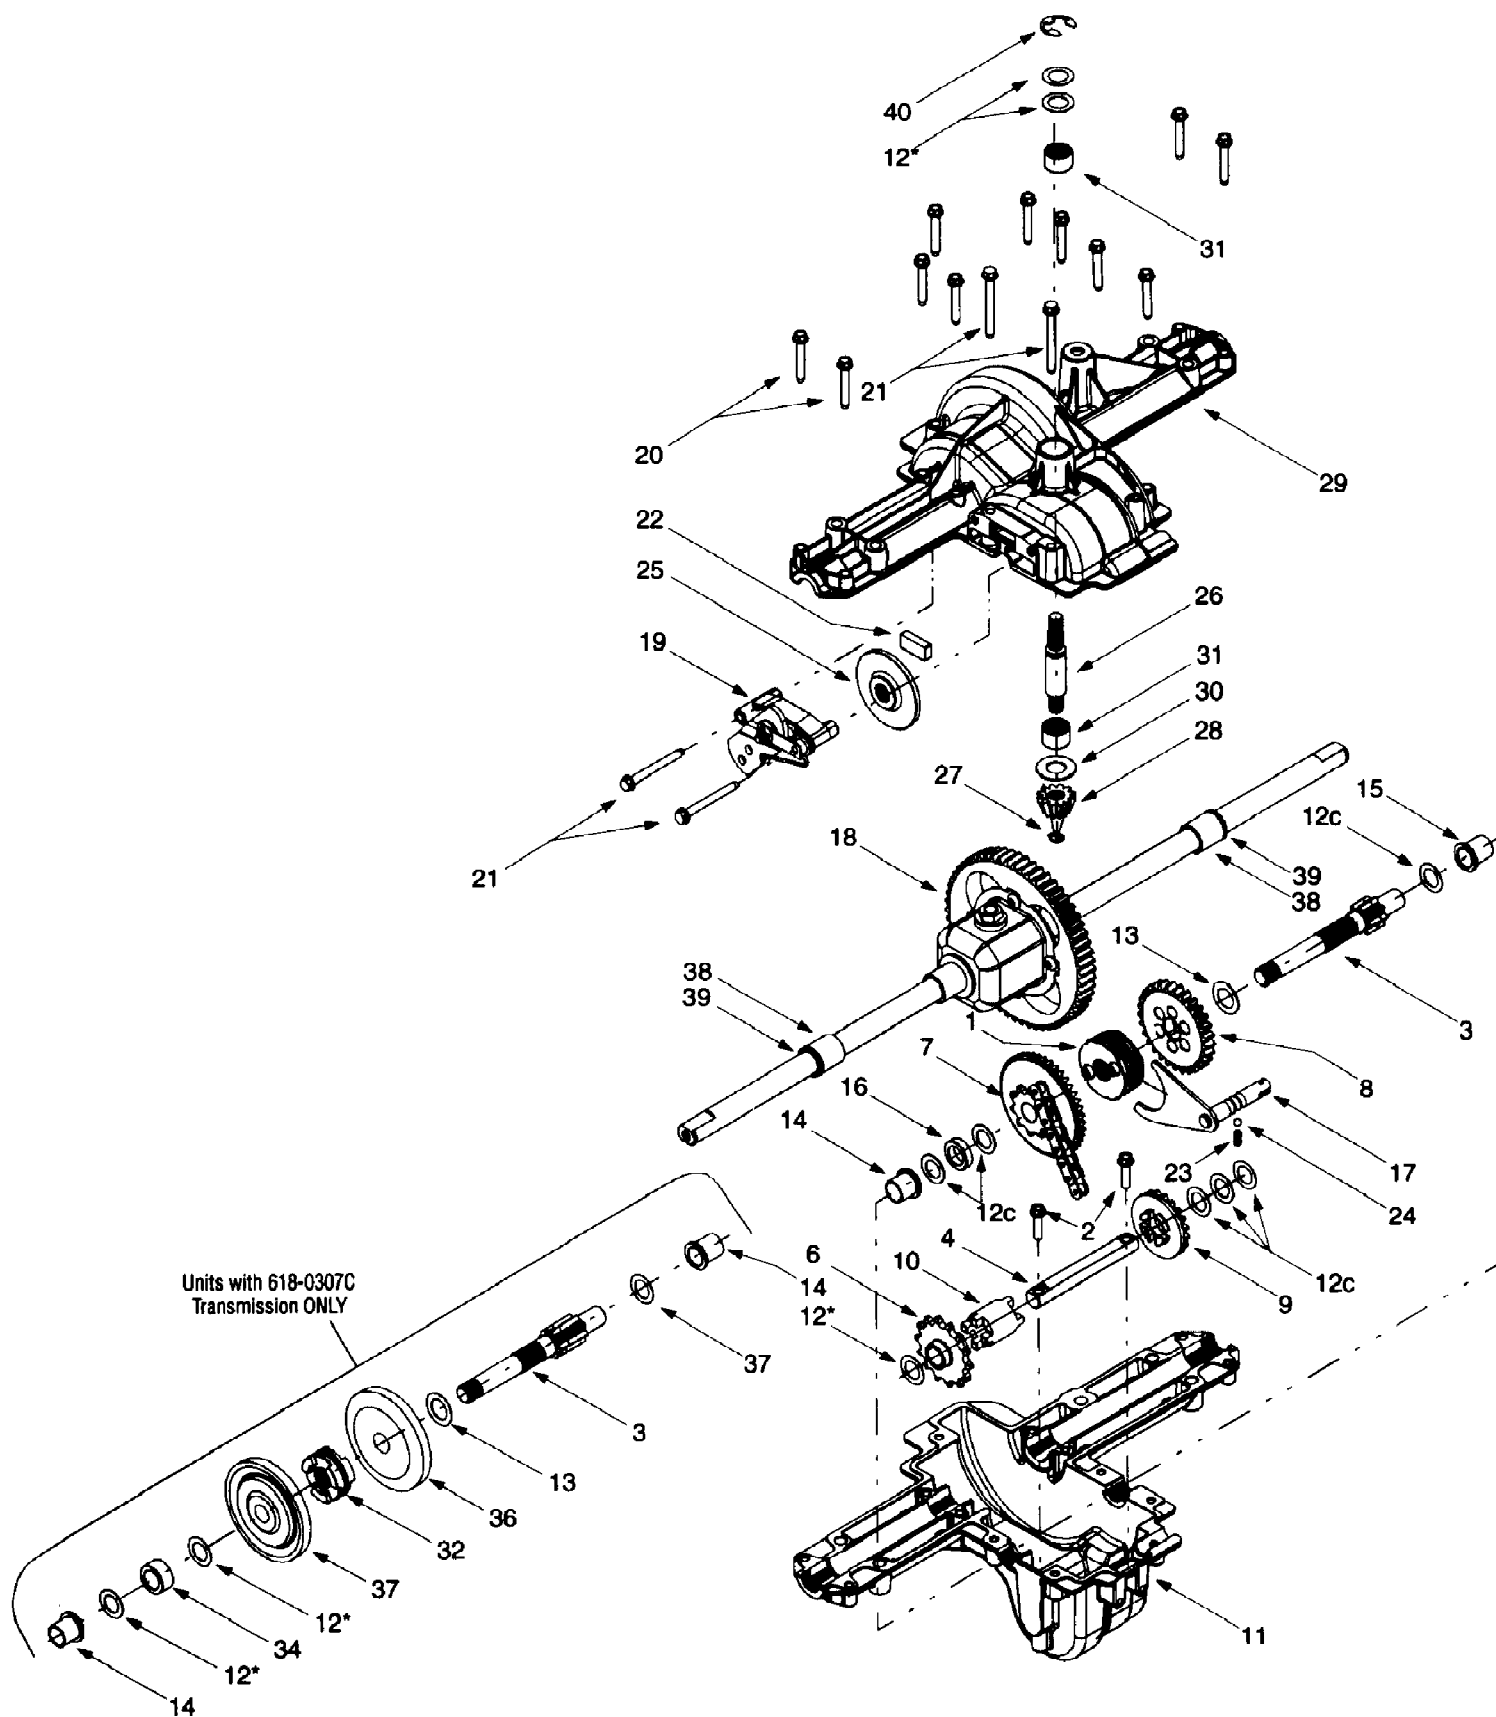

1170 S/N 1H019H - 1H310H
Single Speed Transmission

Page 42 of 48

Ref #	Part Number	Qty	S/P/F	Description
1	618-0318	1		Clutch Collar Used on Single-speed transmission 618-0307B ONLY.
2	710-0788	1	/P	Self-tapping Screw, 1/4-20 x 1.0
3	711-1274	1		Drive Shaft
4	711-1280	1		Counter Shaft
5	713-0474	1		22-link Chain, #420
6	713-0478	1		14-tooth Sprocket
7	717-1422	1		Sprocket Bevel Gear, 42/10
8	717-1565	1		29-tooth Spur Gear
9	717-1569	1		20-tooth Spur Gear
10	718-0652	1		Counter Shaft Coupling
11	719-0394	1		Lower Housing
12		1		UNKNOWN
12A	736-0336	1	S/F	Flat Washer, 5/8 x 1.0 x .030
12B	736-0337	1	S/F	Flat Washer, 5/8 x 1.0 x .040
12C	736-0349	1	S/F	Flat Washer, 5/8 x 1.0 x .020
13	736-0519	1	S	Flat Washer, .70 x 1.125 x .031
14	741-0336	1	S	Flange Bearing, 5/8 x 3/4 x 3/4
15	741-0337	1	S	Flange Bearing, 5/8 x 3/4 x 15/16
16	750-1238	1		Spacer, .635 x 1.0 x .27
17	611-0112	1		Detent Shaft Assembly Used on Single-speed transmission 618-0307B ONLY.
	611-0133	1		Detent Shaft Assembly Used on Single-speed transmission 618-0307C ONLY.
18	618-0369	1		Differential Assembly Used on Single-speed transmission 618-0307B ONLY.
	618-0424	1	S	Differential Assembly Used on Single-speed transmission 618-0307C ONLY.
19	661-0006	1	S	Brake Assembly
20	710-1325	1	/P	Self-tapping Screw, 1/4-20 x 1.625
21	710-1206	1	/P	Self-tapping Screw, 1/4-20 x 2.375
22	717-0678	1	S	Brake Pad
23	732-0863	1	S	Compression Spring
24	741-0862	1	/P	Detent Ball
25	761-0202	1		Brake Disc
26	711-1331	1		Input Shaft Used on Single-speed transmission 618-0307B ONLY.
	711-1430	1		Input Shafts Used on Single-speed transmission 618-0307C ONLY.
27	716-0385	1		Retaining Ring, .394 Used on Single-speed transmission 618-0307B ONLY.
	716-0108	1	S	Retaining Ring, .437 Used on Single-speed transmission 618-0307C ONLY.
28	717-1571	1		12-tooth Bevel Pinion Used on Single-speed transmission 618-0307B ONLY.
	717-1464	1		14-tooth Bevel Pinion Used on Single-speed transmission 618-0307C ONLY.
29	719-0391A	1	S	Upper Housing

1170 S/N 1H019H - 1H310H
Single Speed Transmission

Page 43 of 48

Ref #	Part Number	Qty	S/P/F	Description
30	736-0335	1	S	Thrust Washer, .63 x 1.24 x .062 Used on Single-speed transmission 618-0307B ONLY.
	736-0723	1	S	Thrust Washer, .635 x 1.25 x .042 Used on Single-speed transmission 618-0307C ONLY.
31	741-0525	1	S	Needle Bearing, .625 x .875
32	718-0228	1		Clutch Collar Used on Single-speed transmission 618-0307C ONLY.
33	711-1431	1		Drive Shafts Used on Single-speed transmission 618-0307C ONLY.
34	750-1234	1		Spacer, .633 x 1.0 x .513
35	717-1362	1	S	42-tooth Bevel Gear Used on Single-speed transmission 618-0307C ONLY.
36	717-1363	1	S	42-tooth Bevel Gear Used on Single-speed transmission 618-0307C ONLY.
37	736-0495	1	S	Thrust Washer, 1.0 x .632 x .0
38	741-0340	1	S	Sleeve Bearing, .75 x .1.0 x 1.0
39	721-0338	1	S	Seal, .75 x 1.0 x .125
40	716-0231	1	S	E-ring..75
	618-0307C	1	S	Trans Complete

1170 S/N 1H019H - 1H310H
Steering Assembly & Lower Frame

Page 45 of 48

Ref #	Part Number	Qty	S/P/F	Description
1	683-0304	1	S	Lower Frame Assembly
2	710-0604A	1	/P	Self-tapping Screw, 16-18 x .625
3	783-0726A	1	S	RH Pivot Support Bracket
4	783-0727	1	S	LH Pivot Support Bracket
5	783-0728	1		Pivot Bar Bracket
6	710-0514	1	/P	Hex Cap Screw, 3/8-16 x 1 (Grade 5)
7	711-1409	1	S	LH Drag Link
8	711-1408	1		RH Drag Link
9	712-0240	1	S	Jam Nut, 7/16-20 (Grade 2)
10	712-0241	1	/P	Hex Nut, 3/8-24 (Grade 2)
11	712-0431	1	S	Flange Lock Nut, 3/8-16
12	712-0459	1	/P	Flange Lock Nut, 7/16-20
13	712-3004A	1	/P	Flange Lock Nut, 5/16-18
14	717-1550A	1	S	Steering Gear, 11/90 Ratio
15	717-1554	1		Steering Pinion Gear
16	723-0448A	1	S	Ball Joint, 7/16-20
17	736-0169	1	S	Lock Washer, 3/8
18	736-3084	1	/P	Flat Washer, .51 x 1.12 x .06
19	738-1001A	1	/P	Steering Shaft, .625 OD x 24.4
20	741-0475	1	S	Plastic Bushing, .38 ID
21	741-0656	1	S	Hex Flange Bearing, 5/8
22	738-0372	1	S	Shoulder Spacer, .38 ID
23	731-2295	1	S	Soft Touch Steering Wheel
24	731-2296	1		Steering Wheel Insert
25	638-0019	1	S	LH Axle Assembly, .625 Diameter Model 1170 has axles with a .625 diameter.
	638-0021	1	S	LH Axle Assembly, .625/.750 Diameter Model 1180 has axles with a .625 1.750 diameter.
26	638-0020	1	S	RH Axle Assembly, .625 Diameter Model 1170 has axles with a .625 diameter.
	638-0022	1	S	RH Axle Assembly, .625/.750 Diameter Model 1180 has axles with a .625 1.750 diameter.
27	719-0399A	1	S	Cast Iron Pivot Bar (Model 1170); Model 1170 has axles with a .625 diameter.
	919-0525B	1	S	Cast Iron Pivot Bar (Model 1180); Model 1180 has axles with a .625 1.750 diameter.
28	712-0431	1	S	Flange Lock Nut, 3/8-16
29	714-0470	1	S	Cotter Pin
30	726-0214	1	/P	Push Cap, .625
	726-0341	1	/P	Push Cap, .750
31	736-0162	1	/P	Flat Washer, .64 x 1.0 x .12
32	736-0187	1	/P	Flat Washer, .64 x 1.24 x .06
	736-0316	1	S	Flat Washer, .78 x 1.59 x .06
33	736-0285	1	/P	Flat Washer, .635 x 1.589 x .06
34	738-1011	1	S	Shoulder Screw, .5 x 2.2, 3/8-16
35	737-3000	1	S	Lube Fitting, 3/16
36	634-0115	1		Wheel Assembly Complete, 15 x 6 x 6
	634-0051	1	S	Rim Only w/ Ball Bearing
	734-0255	1	S	Air Valve (Not Shown)
	734-1731	1		Tire Only Square Shoulder


1170 S/N 1H019H - 1H310H
Steering Assembly & Lower Frame

Page 46 of 48

Ref #	Part Number	Qty	S/P/F	Description
37	731-2290A	1	/P	Hub Cap
38	783-0653A	1	S	Steering Support Bracket
39	738-0143	1	/P	Shoulder Screw, 3/8-16
40	736-0331	1	/P	Bell Washer, .39 x 1.13 x .062
41	738-0140	1	S	Shoulder Screw, .435 x .178, 5/16 x .56
42	736-0242	1	/P	Bell Washer, .34 x.872
43	710-0643	1	/P	Hex Bolt, 5/16-18 X 1

1170 S/N 1H019H - 1H310H
Tractor Body/Fuel Tank/Hood

Page 47 of 48

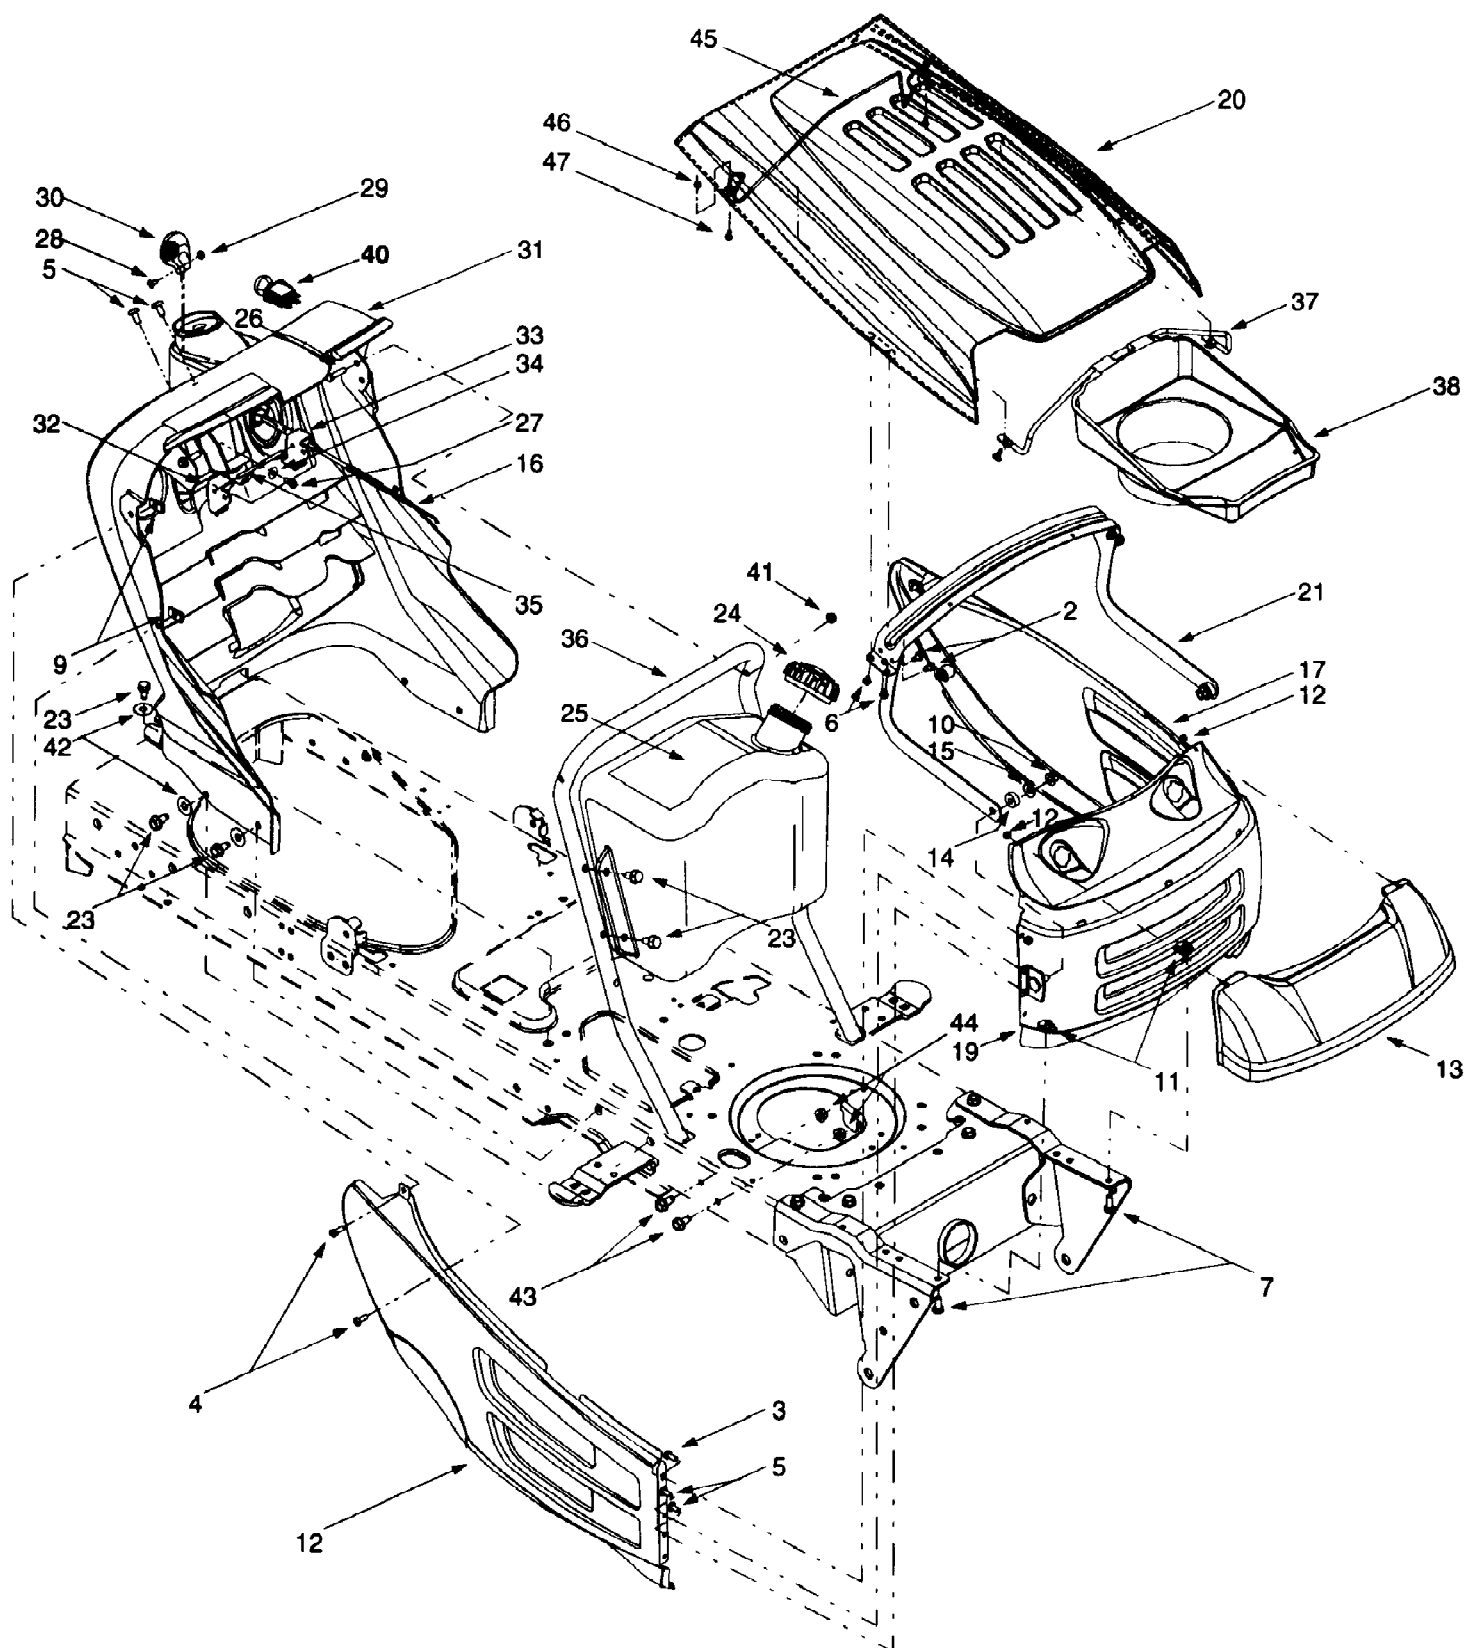

1170 S/N 1H019H - 1H310H
Tractor Body/Fuel Tank/Hood

Page 48 of 48

Ref #	Part Number	Qty	S/P/F	Description
?1	683-0195	1		Bracket Assembly (8-style)
2	710-0599	1	/P	Self-tapping Screw, 1/4-20 x .5
3	710-0751	1	/P	Hex Cap Screw, 1/4-20 x .62
4	710-0924	1	/P	Phillips Pan Screw, 1/4-20 x .75
5	710-1017	1	/P	Truss Phillips Screw, 1/4-20 x .625
6	710-1268	1	/P	Screw, #10-16 x .375
7	710-3008	1	/P	Hex Cap Screw, 5/16-18 x .75
?8	712-0271	1	/P	Hex Sems Nut, 1/4-20
9	712-0292	1	/P	U-type Speed Nut, 1/4-20
10	712-0431	1	S	Flange Lock Nut, 3/8-16
11	726-0211	1	S	U-nut, 5/16-18
12	726-0293	1		Retainer Nut, 3/8
13	731-1854	1	S	Headlight Lens (8-style)
14	735-0126	1	S	Rubber Washer, .87 x .33
15	736-0105	1	/P	Bell Washer, .401 x .87 x .063
16	746-1085	1	S/F	Choke Knob/Cable (Model 1180)
17	783-0475	1	S	LH Side Panel (8-style)
?18	783-0476A	1		RH Side Panel (8-style)
19	783-0477	1	S	Grill (8-style)
20	783-0478A	1	S	Hood (8-style)
21	783-0551	1		Hood Hinge Bracket
?22	783-0553A	1	S	Hood Support Bracket
23	710-0604A	1	/P	Self-tapping Screw, 5/16-18x.625
24	751-0603	1	S	Fuel Cap
25	751-0659	1	S	Fuel Tank
26	710-0809	1		Self-tapping Screw, 1/4-20 x 1.25
27	710-0895	1		Self-tapping Screw, 1/4-15 x .75
28	710-3217	1	/P	Truss Phillips Screw, #8-32 x .375
29	712-0142	1	/P	Hex Nut, #8-32
30	731-1857	1		Throttle Control Knob
31	731-2225	1	S	Dash Panel (8-style)
32	731-2226	1		Cruise Control Button
33	731-2227	1		Parking Brake Button
34	736-0142	1	S	Flat Washer, 9/32 x 1/2 x 1/16
35	747-1196	1		Brake/Cruise Pivot Rod
36	749-1087	1	S	Dash Support Tube
37	747-1184	1		Heat Shield Support Rod
38	731-2245	1		Heat Shield (8-style)
?39	726-3046	1	/P	Ratchet Clip
40	725-1752	1	S	Electric PTO Switch
41	712-3027	1	S	Hex Flange Lock Nut, 1/4-20
42	736-3078	1	/P	Flat Washer, .349 x 1.0 x .063
43	710-1238	1	/P	Screw, 5/16-18 x .875 (Grade 5)
44	712-3004A	1	/P	Hex Nut, 5/16-18
45	747-1215	1		Hood Latch (8-style)
46	712-0349	1	/P	Hex Nut, #10-32
47	710-0473	1	/P	Machine Screw, #10-24