


LT1042 Tractor (2008 & after)
Adjustable Seat

Page 1 of 71

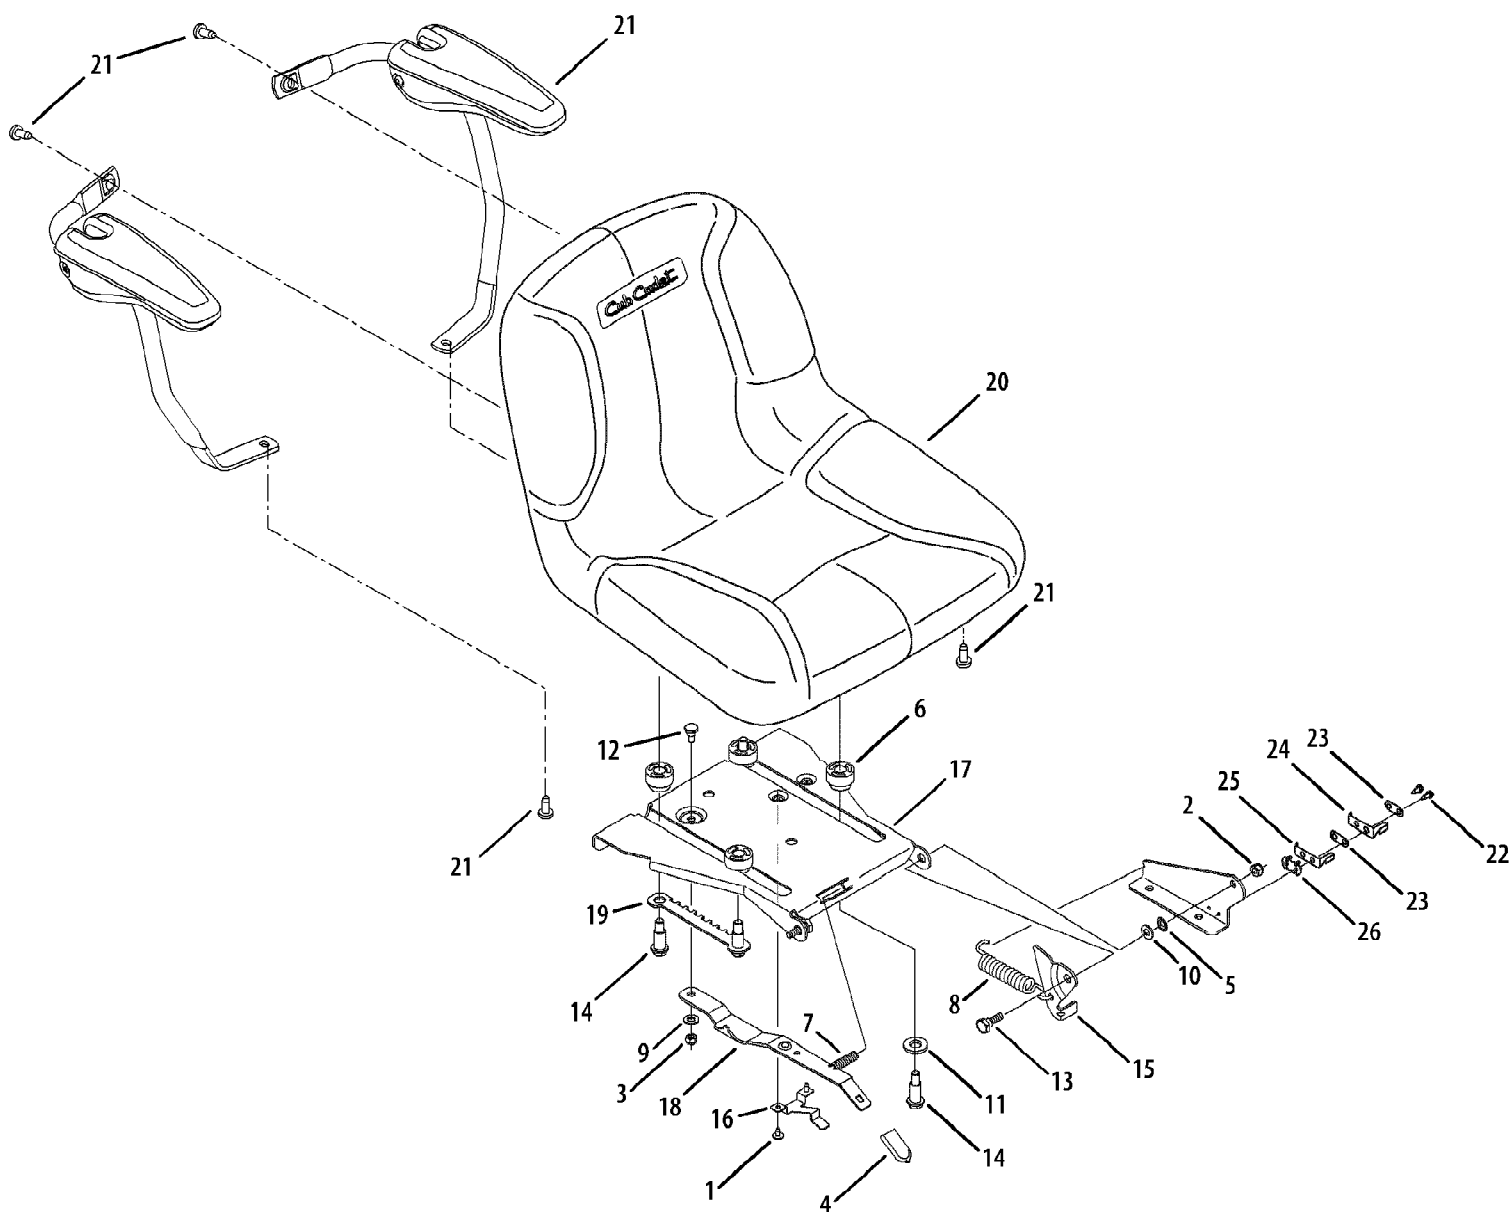


LT1042 Tractor (2008 & after)
Adjustable Seat

Page 2 of 71

Ref #	Part Number	Qty	S/P/F	Description
1	710-1268	1	/P	Screw, #10-16, 0.375
2	712-04063	1	/P	Nut, Nylon Lock, 5/16-18, Gr5
3	712-04064	1	/P	Nut, Nylon Lock, 1/4-20 GrF
4	720-0309A	1	/P	Grip, Seat, Adjustment
5	726-0201	1		Nut, Speed, .3125 ID
6	731-04074	1		Spacer, Seat, Adjustment
7	732-0499	1		Spring, Compression .41 x 1.50
8	732-1184	1	/P	Spring, Extension, .80 Dia x 4.6
9	736-0204	1	/P	Washer, Flat, .344 x .620 x .033
10	736-0242	1	/P	Washer, Flat, .340 x .872 x .060
11	736-3019	1		Washer, Flat, .531 x 1.062 x .134
12	738-0137A	1	S	Screw, Shlder, .340 x .285, 1/4-20
13	738-0296	1	S	Shoulder, Screw .437 x .286 Lg
14	738-0966A	1	/P	Screw, Shoulder, .50 x.925, 3/8-16
15	783-0209D	1	/P	LH Bracket, Seat Lift
16	783-0611	1		Stop, Seat, Adjustment
17	783-0738D	1	/P	Bracket, Seat Pivot
18	783-0739A	1	S	Lever, Seat, Adjustment
19	783-0753	1		Selector, Seat, Adjustment
20	757-04053	1		Seat, Cub Cadet, High Back
20	757-04058	1		Seat, Cub Cadet, High Back Arm Rest capable, order separately. LT1050 Only.
21	757-04073	1		Arm Rest Kit (incl. screws, RH & LH) Use with 757-04058. LT1050 Only
22	710-0227	1	/P	Screw, #8-18 x .50
23	726-0279	1		Plate, Insulator
24	725-1303	1	S	Spring Switch, Outer
25	725-1439	1		Spring Switch, Inner
26	726-0278	1		Plate, Insulator Boss

LT1042 Tractor (2008 & after)
Dash Assembly, Battery & Solenoid


Page 3 of 71

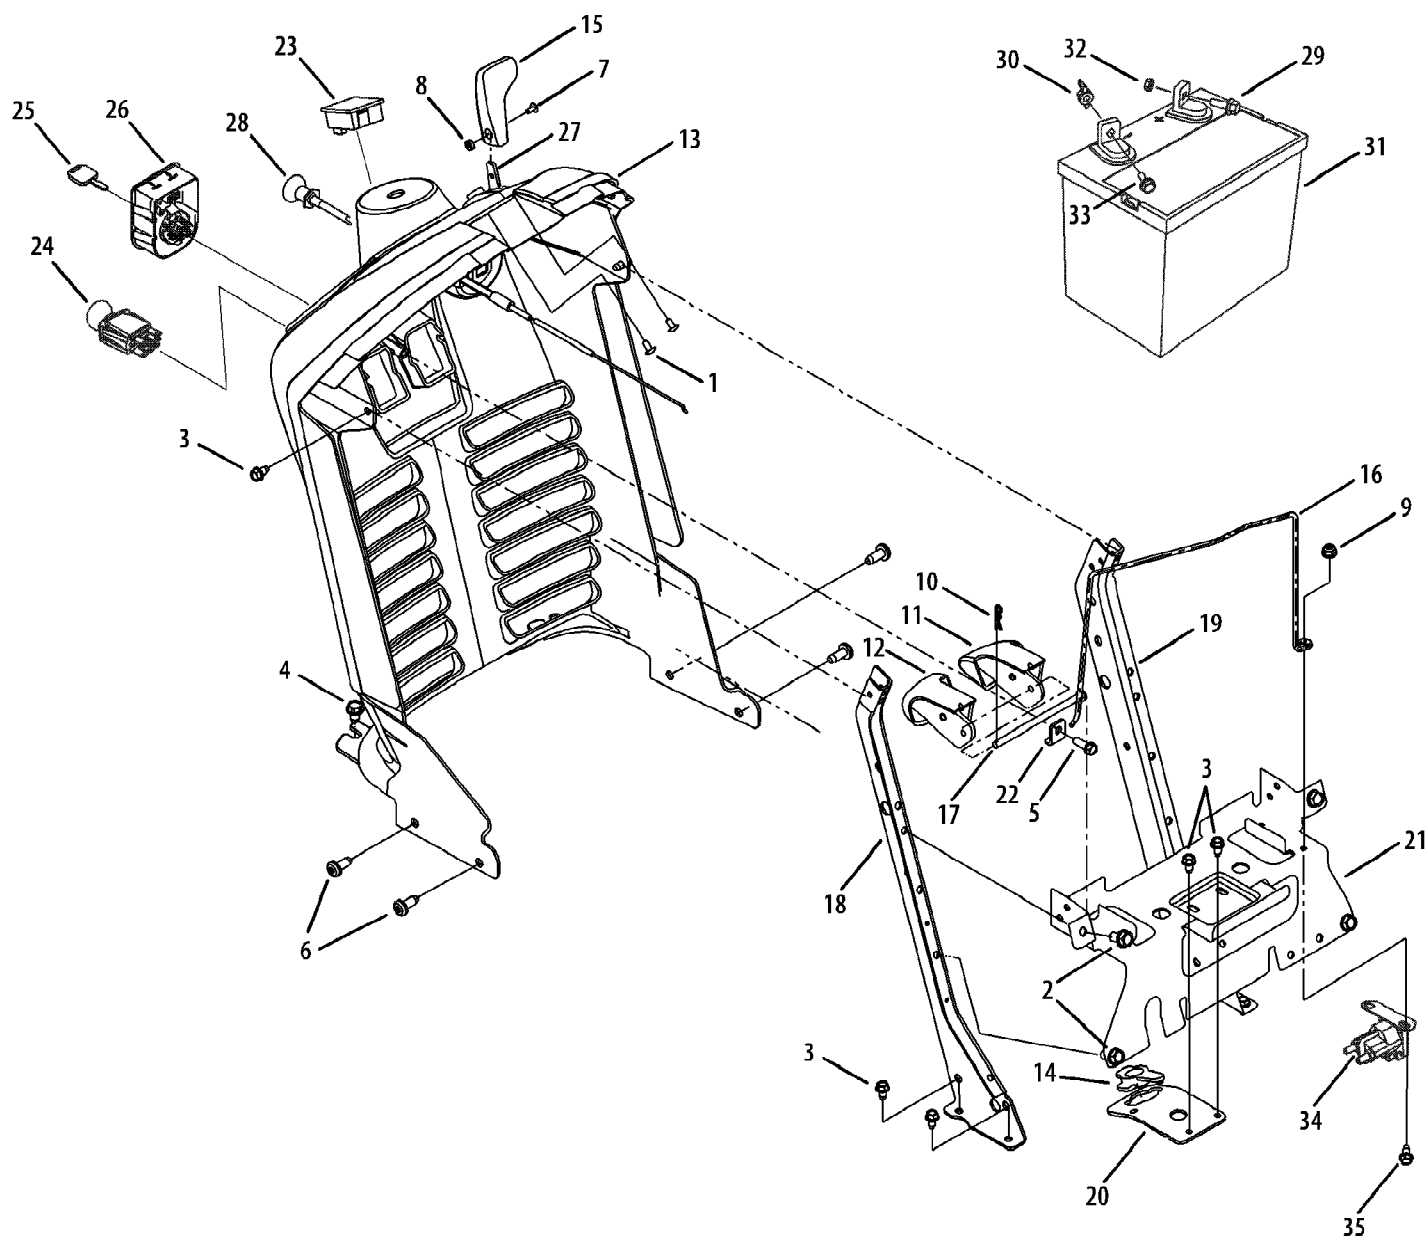

LT1042 Tractor (2008 & after)
Dash Assembly, Battery & Solenoid

Page 4 of 71

Ref #	Part Number	Qty	S/P/F	Description
1	710-0192	1	/P	Screw, #10-24 x .375
2	710-04484	1		Screw, Hex, 5/16-18 x .750
3	710-0599	1	/P	Screw, Self-tapping, 1/4-20, 0.500
4	710-0607	1	/P	Screw, Hex, 5/16-18 x .500
5	710-0895	1		Screw, 1/4-15, 0.750
6	710-1611B	1	/P	Screw, Torx Hd. Tapp. 5/16-18 x .75
7	710-3217	1	/P	Screw, Machine, #8-32, 0.375
8	712-0142	1	/P	Nut, 8-32
9	712-04064	1	/P	Nut, Nylon Lock, 1/4-20
10	714-0104	1	S	Internal Cotter Pin, .072 x 1.13
11	731-04293A	1	/P	Lever, Dash, Brake
12	731-04294A	1		Lever, Dash, Cruise
13	731-05004	1	S	Dash
14	731-05659	1		Steering Colume Bearing
15	731-3161A	1	S	Knob, Throttle Control
16	747-04215	1	S	Hold-down Rod, Battery
17	747-1323A	1		Rod, .250 Dia x 4.25 Lg.
18	783-04285E	1	S	Dash Support, RH
19	783-04323D	1		Dash Support, LH
20	783-05240A	1		Bracket, Steering Support
21	783-05469	1		Bracket, Support, Battery
22	783-1499	1	S	Bracket, Rod, Dash
23	725-04022B	1	S	Monitor, Sys. Indicator / Hour Meter
24	725-04258	1	/P	Switch, PTO, Yellow
25	725-2054	1	S	Ignition Key, Plastic
25	725-1744	1	S	Ignition Key, Metal Not Shown
26	725-04227B	1	S	Switch Module, Ignition
27	746-1087	1	S	Throttle, 27.4 (LT1042 & LT1045)
27	746-04352	1		Throttle, 38.0 (LT1046 & LT1050)
28	746-04121	1		Choke, 24.0 (LT1042 & LT1045)
28	746-04120	1		Choke, 37.5 (LT1046 & LT1050)
29	738-1132	1		Shoulder Screw, .250 x .150, 1/4-20
30	712-3087	1	/P	Wing Nut, 1/4-20
31	725-1737A	1	S	Battery, 190 CCA (LT1042 & LT1045)
31	725-1750A	1	S	Battery, 235 CCA (LT1046 & LT1050)
32	712-0271	1	/P	Nut, Sems, 1/4-20
33	710-04666	1		Screw, Flange, 1/4-20, .75,
34	725-04439	1		Solenoid, 12V, 100 Amp
35	710-0642	1	/P	Screw, 1/4-20, .750
	725-04402A	1	S	Wire Harness Not Shown

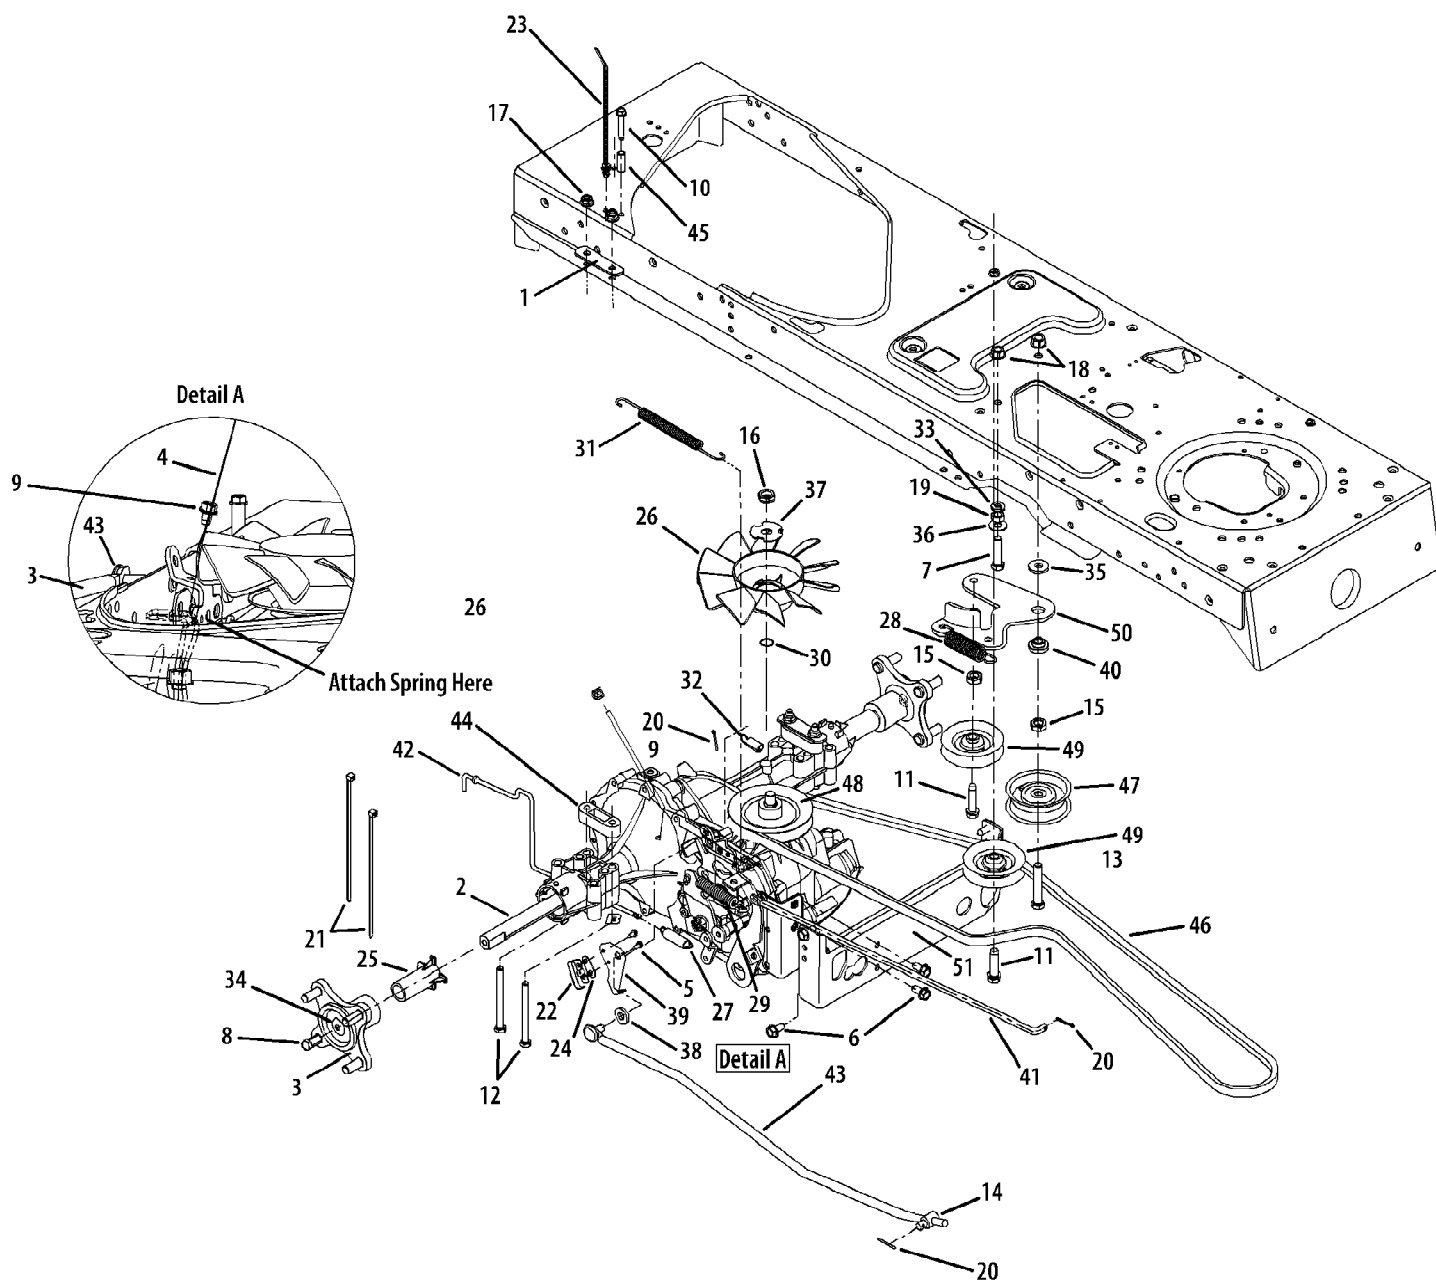


LT1042 Tractor (2008 & after)
Drive System

Page 6 of 71

Ref #	Part Number	Qty	S/P/F	Description
1	17840	1	S	Bracket, Mounting, Transaxle
2	618-0319	1	S	Transmission, Hydrostatic
3	618-04228	1	S	Hub Assembly, Wheel
4	629-04124	1		Harness Assembly, Grnd. & Rev.
5	710-0227	1	/P	Screw, #8-18, 0.500
6	710-04484	1		Screw, 5/16-12, 0.75
7	710-0520	1	/P	Hex Cap Screw, 3/8-16, 1.50, Gr5
8	710-0627	1	/P	Hex Cap Screw, 5/16-24 x .750
9	710-0653	1	/P	Screw, 1/4-20 x .375
10	710-0778	1	/P	Hex Cap Screw, 1/4-20, 1.5, Gr5
11	710-1007	1	/P	Screw, 3/8-16, x 1.50
12	710-1266	1	/P	Hex Cap Screw, 5/16-18, 3.5, Gr5
13	710-3011	1	/P	Hex Cap Screw, 3/8-16, 2.25, Gr5
14	711-0832	1	S	Ferrule, 3/8-24 x .375 Dia
15	712-0240	1	S	Nut, Jam, 7/16-20, Gr2
16	712-0346	1	S	Nut, Jam Lock, 1/2-20, Gr5
17	712-04063	1	/P	Nut, Hex Nylon Lock, 5/16-18
18	712-0431	1	S	Nut, Flange Lock, 3/8-16
19	712-3017	1	S	Nut, Hex, 3/8-16, Gr8
20	714-0111	1	S	Pin, Cotter, 3/32, 1.0
21	725-0157	1	/P	Cable, Tie, 3/16 x .05 x 7.4
22	725-1644	1		Switch, Spring, Short
23	726-0154	1	S	Tie, Cable, Push Mount 7.5 Lg
24	726-0320	1	S	Plate, Insulator Nut
25	731-05300	1		Sleeve, 2.4"
26	731-06098	1		Fan, Blade
27	732-0209	1	S	Spring, .48 OD x 2.03 Extension
28	732-04323B	1	/P	Spring, Extension, .563 Dia x 3.72 Lg
29	732-0716C	1	S	Spring, Extension, .59 OD x 4.00 Lg
30	732-0729	1	/P	Ring, Wire
31	732-0994	1		Spring, Extension, .500 Dia x 7.0
32	732-3118	1		Spring, Extension, 3/8 OD x 1.44
33	736-0169	1	S	Washer, Lock, 3/8, Regular Duty
34	736-0242	1	/P	Bell Washer
35	736-0258	1	/P	Washer, Flat, .385 x 1.0 x .135
36	736-0300	1	S	Washer, Flat, .406 x .875 x .059
37	736-04263	1		Washer, Lock, Hydro
38	736-3010	1	/P	Washer, Flat, .407 x .812 x .135
39	783-1019B	1	/P	Bracket, Actuator, Switch
40	738-0372B	1	/P	Spacer, Shoulder, 1.00 x .38 x .38
41	747-04139	1		Rod, Brake, Hydro
42	747-1149	1		Rod, Hydro Bypass
43	747-1151	1		Rod, Control, Hydro
44	748-0334	1	S	Spacer, T-axle .68
45	750-0566A	1	/P	Spacer, 1"
46	754-04165	1	S	Belt, V Type, Poly
47	756-04224	1	/P	Pulley, Idler, Flat 2.75 OD
48	756-04308	1		Pulley, Engine, 4.13 Dia.
49	756-04325	1	/P	Pulley, Idler, V Type x 3.06 Dia
50	783-04442	1		Bracket Assembly, Idler, Center Dbl
51	783-0810B	1	S	Bracket, Transmission, Torque

LT1042 Tractor (2008 & after) Engine Accessories


Page 7 of 71

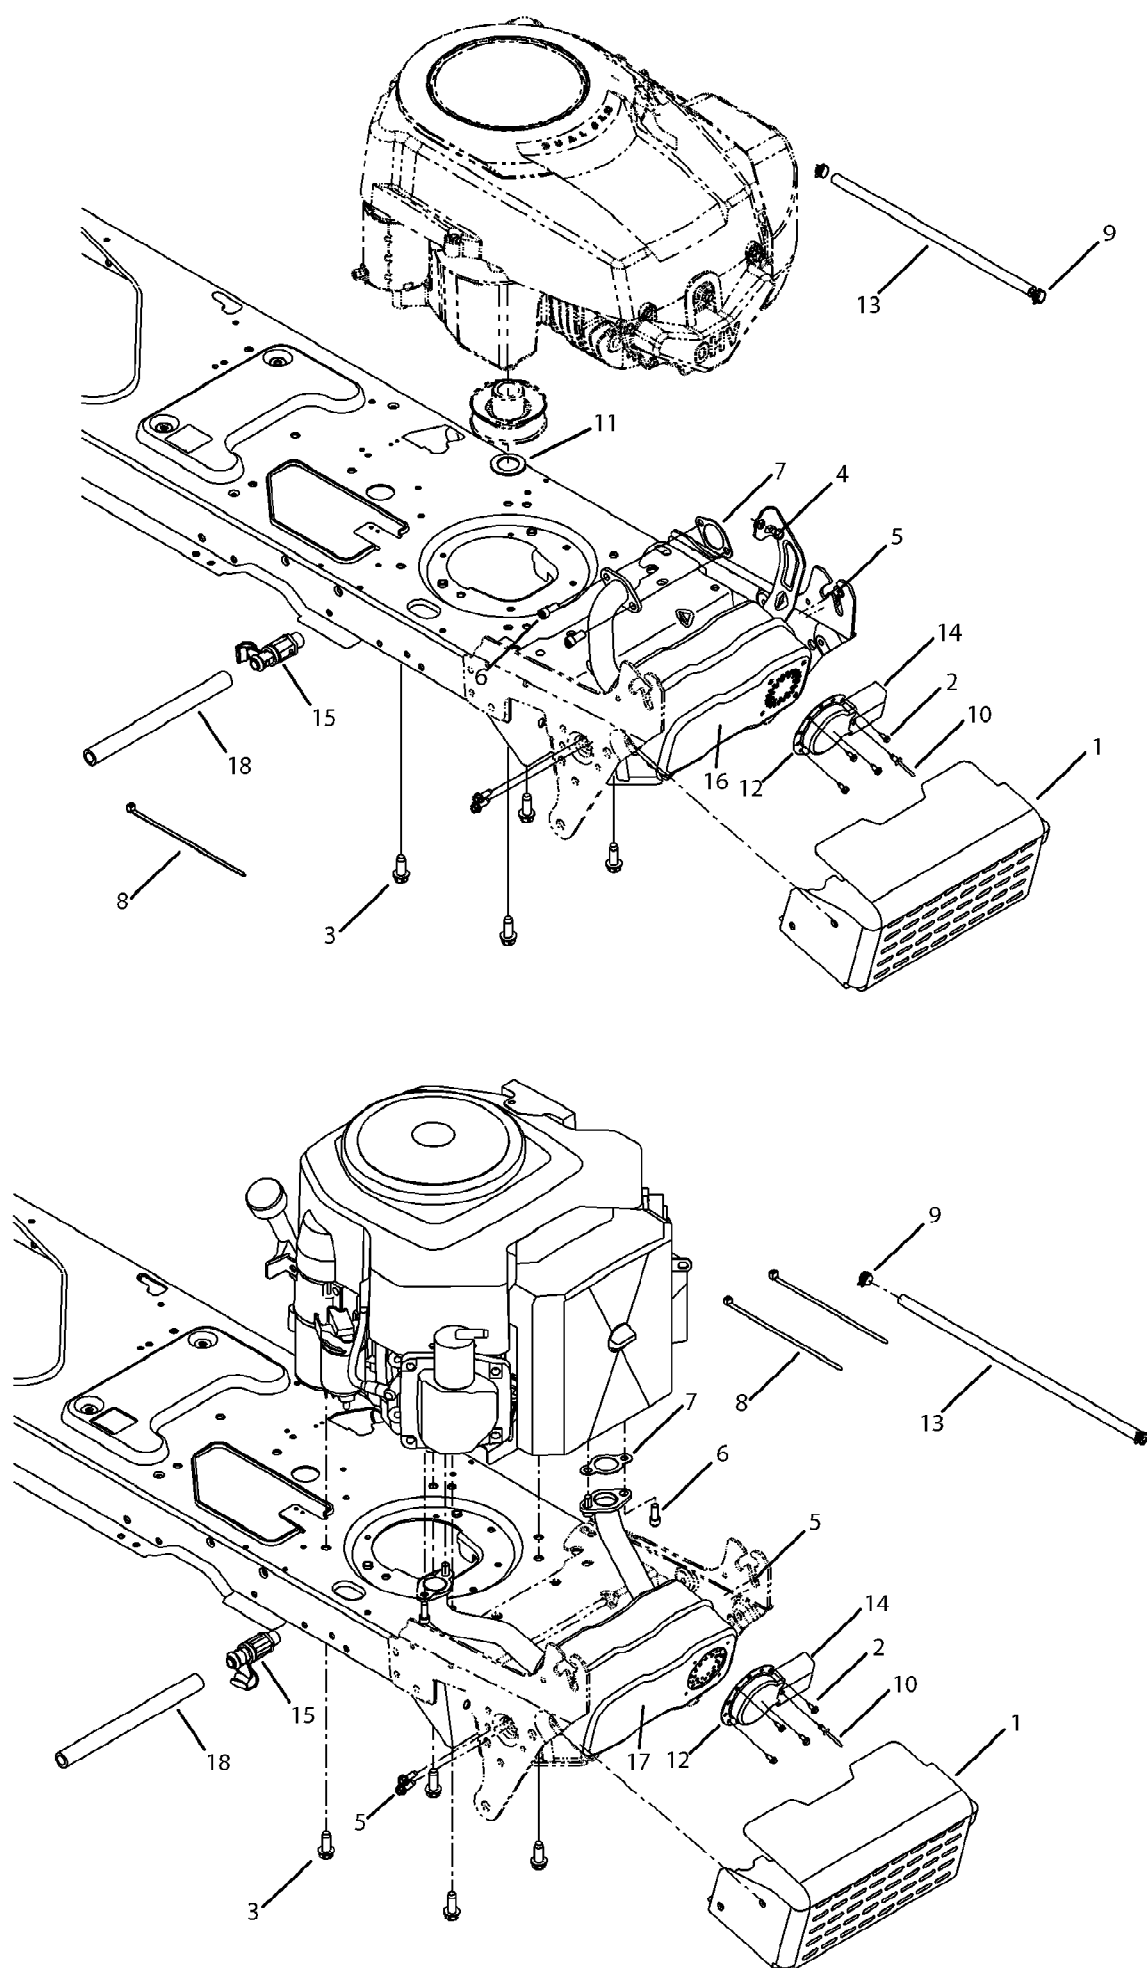


LT1042 Tractor (2008 & after)
Engine Accessories

Page 8 of 71

Ref #	Part Number	Qty	S/P/F	Description
1	683-04370	1	S	Shield, Muffler
2	710-0227	1	/P	Screw, #8-18, 0.500
3	710-04683	1		Screw, Hex, 3/8-16 x 1.00
4	710-0599	1	/P	Screw, Hex, 1/4-20, 0.500
5	710-0642	1	/P	Screw, Hex, 1/4-20, 0.750
6	710-1314A	1	/P	Screw, 5/16-18, 0.75
7	721-0208	1	S	Exhaust Gasket
8	725-0157	1	/P	Cable, Tie, 3/16 x .05 x 7.4
9	726-0205	1	/P	Hose Clamp
10	728-04000	1		Rivet, Pop, .188 x .325
11	736-0277	1		Flat Washer, 1.031 x 1.620 x .095
12	751-0564B	1	/P	Deflector, Muffler
13	751-10349	1		Fuel Line, Low Permeation
14	751-10353	1		Extension, Deflector
15	751-10517	1	S	Drain, Oil
16	751-10529	1	S	Muffler, Single Inlet
17	751-10528	1	S	Muffler, Dual Inlet
18	751-3141	1	S	Extension Hose, Oil Drain

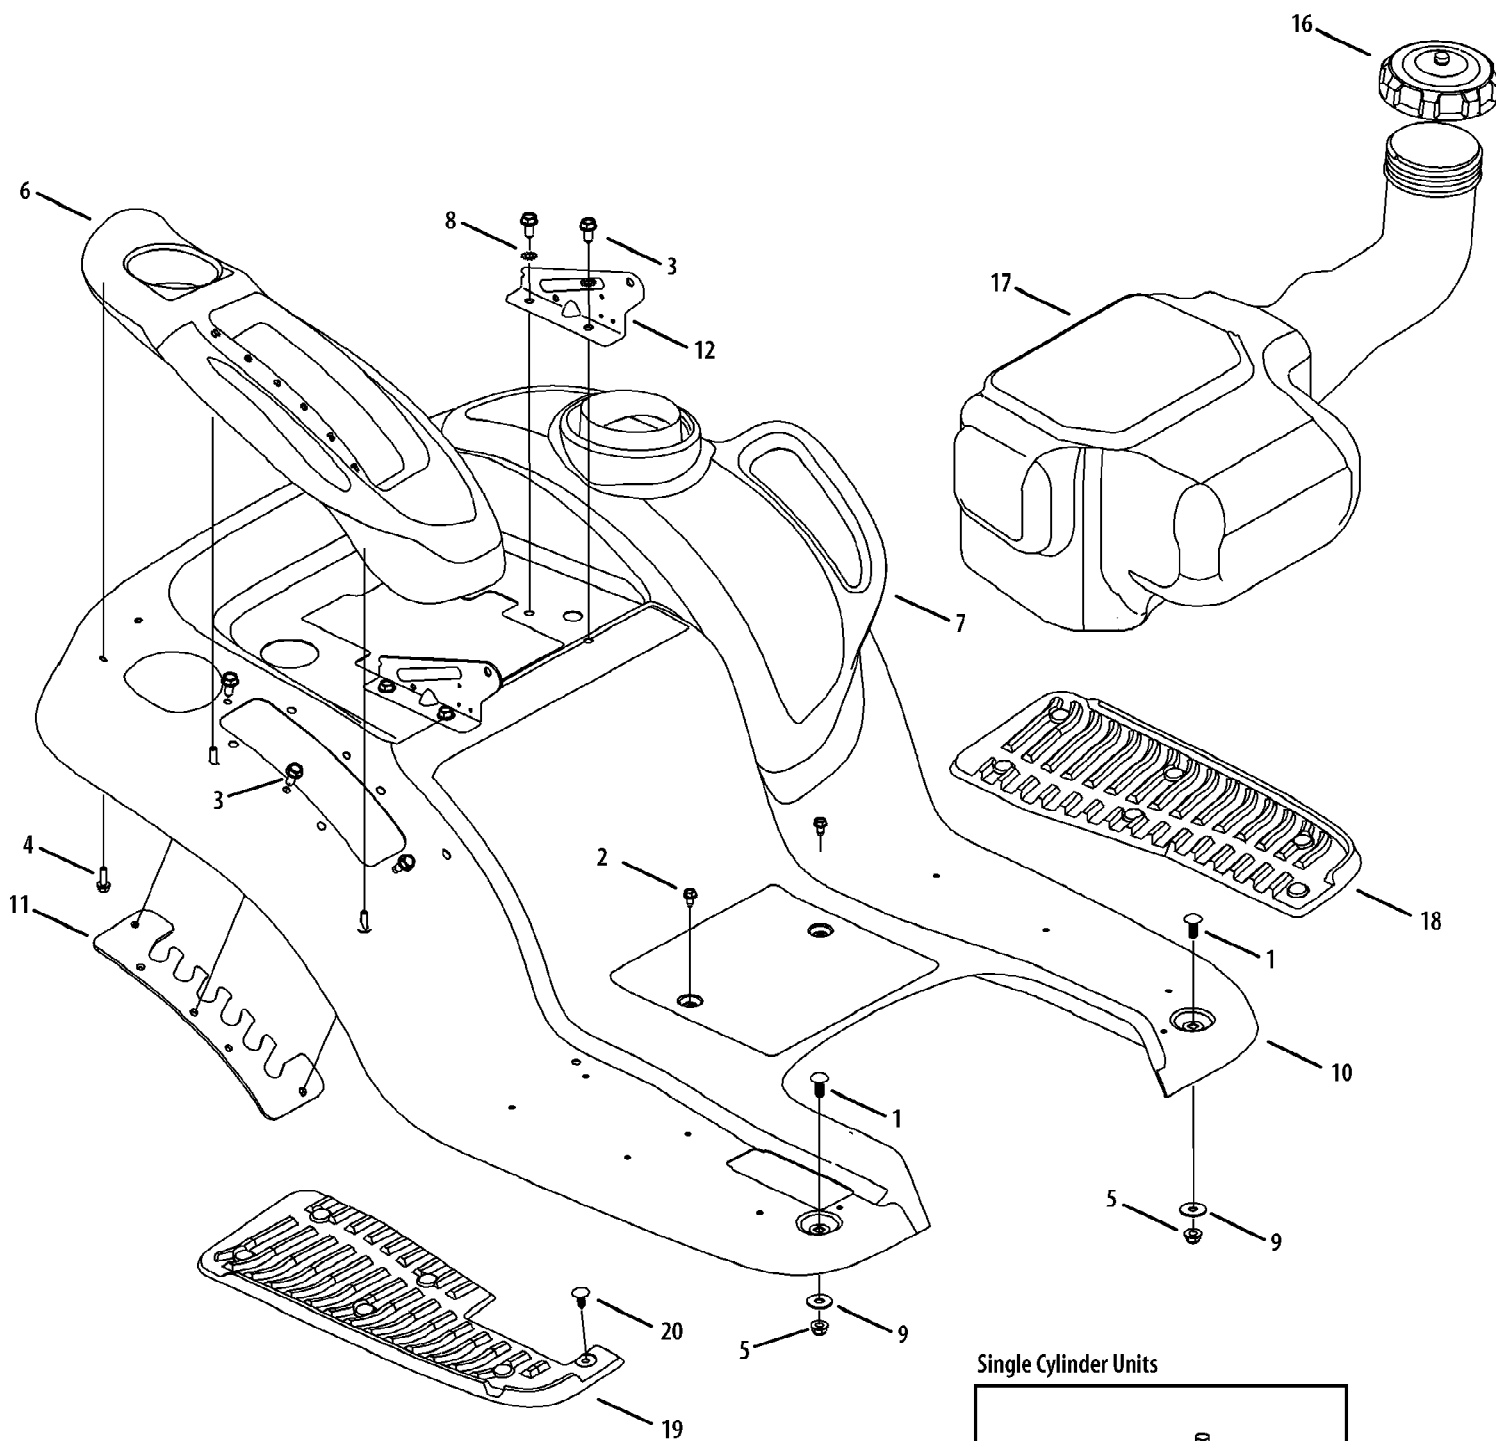


Single Cylinder Units

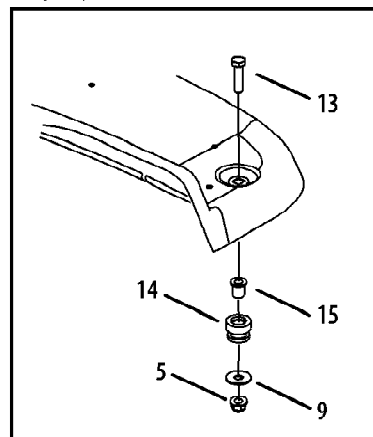


LT1042 Tractor (2008 & after)
Fender & Fuel Tank

Page 10 of 71


Ref #	Part Number	Qty	S/P/F	Description
1	710-0451	1	/P	Bolt, Carriage, 5/16-18 x .750
2	710-0599	1	/P	Screw, Self-tapping, 1/4-20, 0.500
3	710-04484	1		Screw, 5/16-12, 0.75
4	710-0895	1		Screw, 1/4-15, 0.750
5	712-04063	1	/P	Nut, Nylon Lock, 5/16-18
6	731-2616A	1	S	Cover, Fender, RH
7	731-2617	1		Cover, Fender, LH
8	736-0607	1	/P	Washer, Lock, 5/16 External Tooth
9	736-3078	1	/P	Washer, Flat, .349 x 1.00 x .063
10	783-04477A	1	/P	Fender
11	783-0677B	1		Bracket, Lift, Adjustment
12	783-1489C	1		Bracket, Seat, Mount
13	710-0528	1	/P	Screw, 5/16-18 x 1.25
14	735-0690	1		Grommet
15	750-3310	1		Flange Spacer, .3125 x .4375 x .625
16	751-3124D	1	S	Cap, Fuel
17	751-0819B	1	S	Tank, Fuel
18	735-0697A	1		Pad, Foot, LH
19	735-0698B	1		Pad, Foot, RH
20	726-3046	1	/P	Clip, Ratchet, .250 Dia

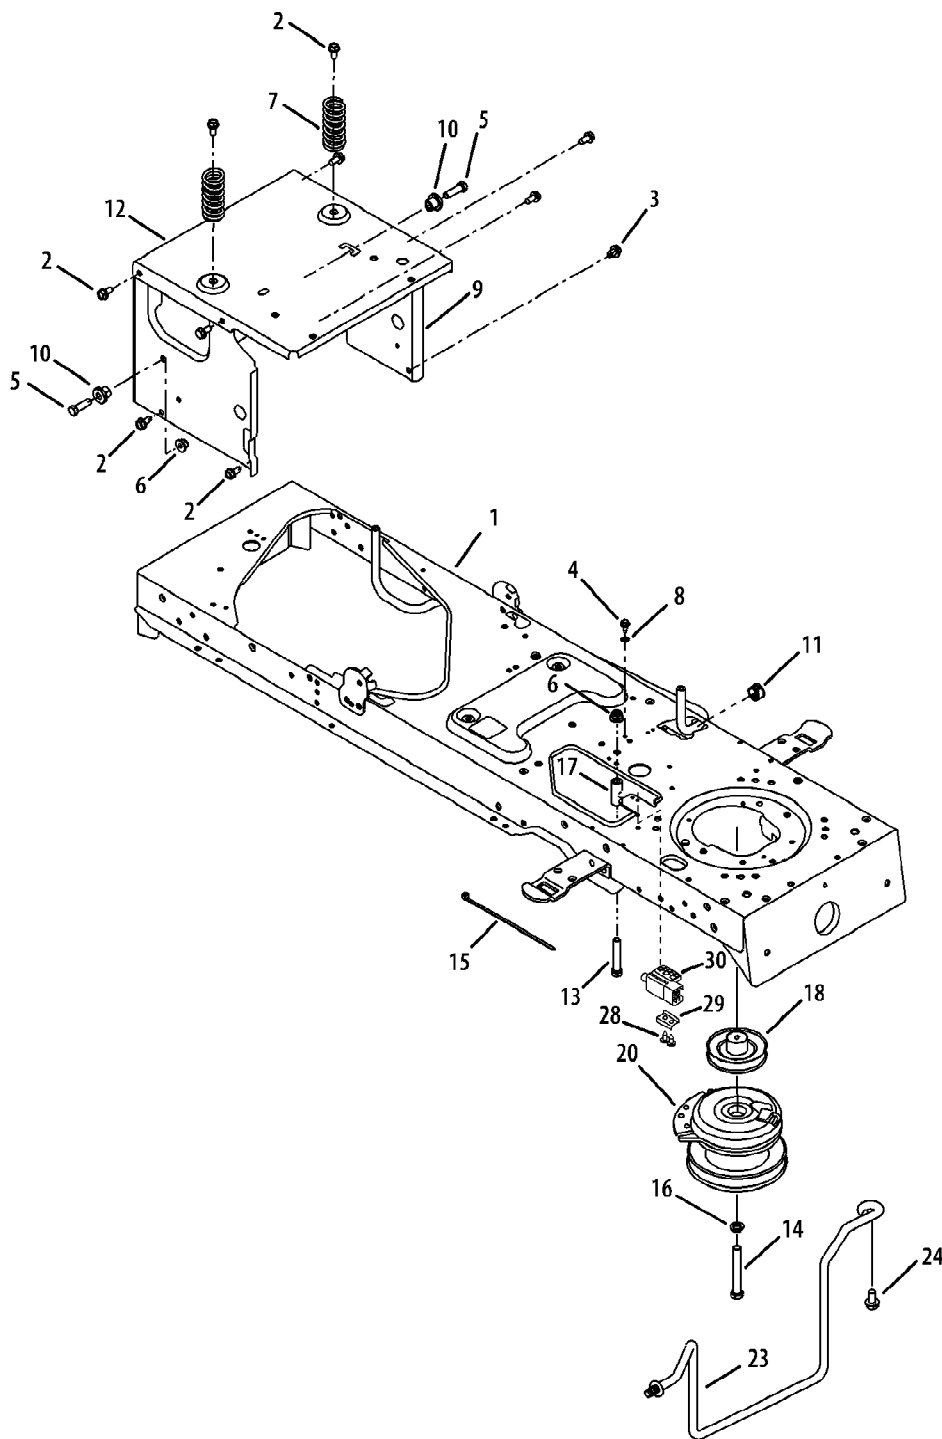

50" Frame

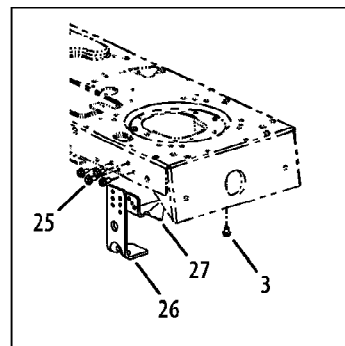

46/50" Deck

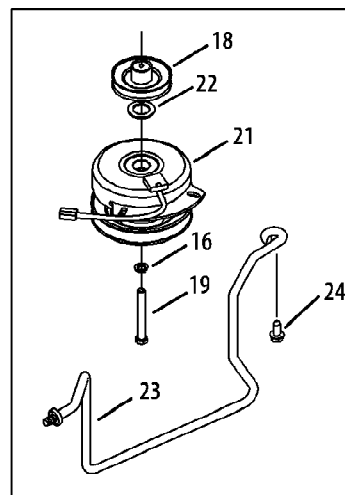


LT1042 Tractor (2008 & after)
Frame & Electric PTO Clutch

Page 12 of 71

Ref #	Part Number	Qty	S/P/F	Description
1	683-04173B	1		Frame Assembly, Lower
2	710-0726	1	/P	Screw, Self-tapping, 5/16-18, 0.75
3	710-0607	1	/P	Screw, Hex Wash. Tapp, 5/16-18 x .5
4	710-1652	1	/P	Screw, Hex Wash. Hd. Tapp, 1/4-20 x 0.625
5	710-3005	1	/P	Hex Screw 3/8-16 x 1.25
6	712-04065	1	/P	Nut, Nylon Lock, 3/8-16
7	732-04035	1		Spring, Compression, 1.28 OD x 3.125
8	736-0222	1	S	Washer, Lock, Ext. 1/4
9	783-04810C	1	S	Frame, Upper
10	738-04058	1		Shoulder Spacer
11	741-04092	1		Snap Bushing
12	783-04746	1		Bracket, Frame, Seat
13	710-3011	1	/P	Screw, 3/8-16 x 2.25 GR5
14	710-3157A	1	/P	Screw, Hex Cap, 7/16-20 x 3.25 GR5 (Model LT1042)
15	725-0157	1	/P	Cable, Tie, 3/16 x .05 x 7.4
16	736-0171	1	S	Washer, Lock, 7/16, Regular Duty
17	748-0415B	1	/P	Spacer, 3/8 x 1.54
18	756-0978B	1	/P	Electric PTO Engine Pulley
19	710-04379A	1		Screw, Hex Cap , 7/16-20 x 3.5 GR5
20	717-04163	1	S	Clutch, PTO (Model LT1042)
21	717-04174A	1	S	Clutch, PTO (Model LT1045, LT1046 & LT1050)
22	736-0277	1		Washer, Flat, 1.031 x 1.62 x .095
23	683-04443	1	S	Rod, Belt Keeper (Model 1042)
23	747-04685A	1	/P	Rod, Belt Keeper (Model LT1045 & LT1046)
24	710-1260A	1	/P	Screw, 5/16-18, .75
25	710-04484	1		Screw, 5/16-12, 0.75
26	783-04467	1		Deck Stop (Model LT1050)
27	783-04419B	1	S	Bracket, Clutch (Model LT1050)
28	710-0224	1	S	Screw, #10 - 16, x .500
29	17962	1		Switch Mounting Plate
30	725-04039	1	S	Interlock Switch

LT1042 Tractor (2008 & after)
Hood & Grille


Page 13 of 71

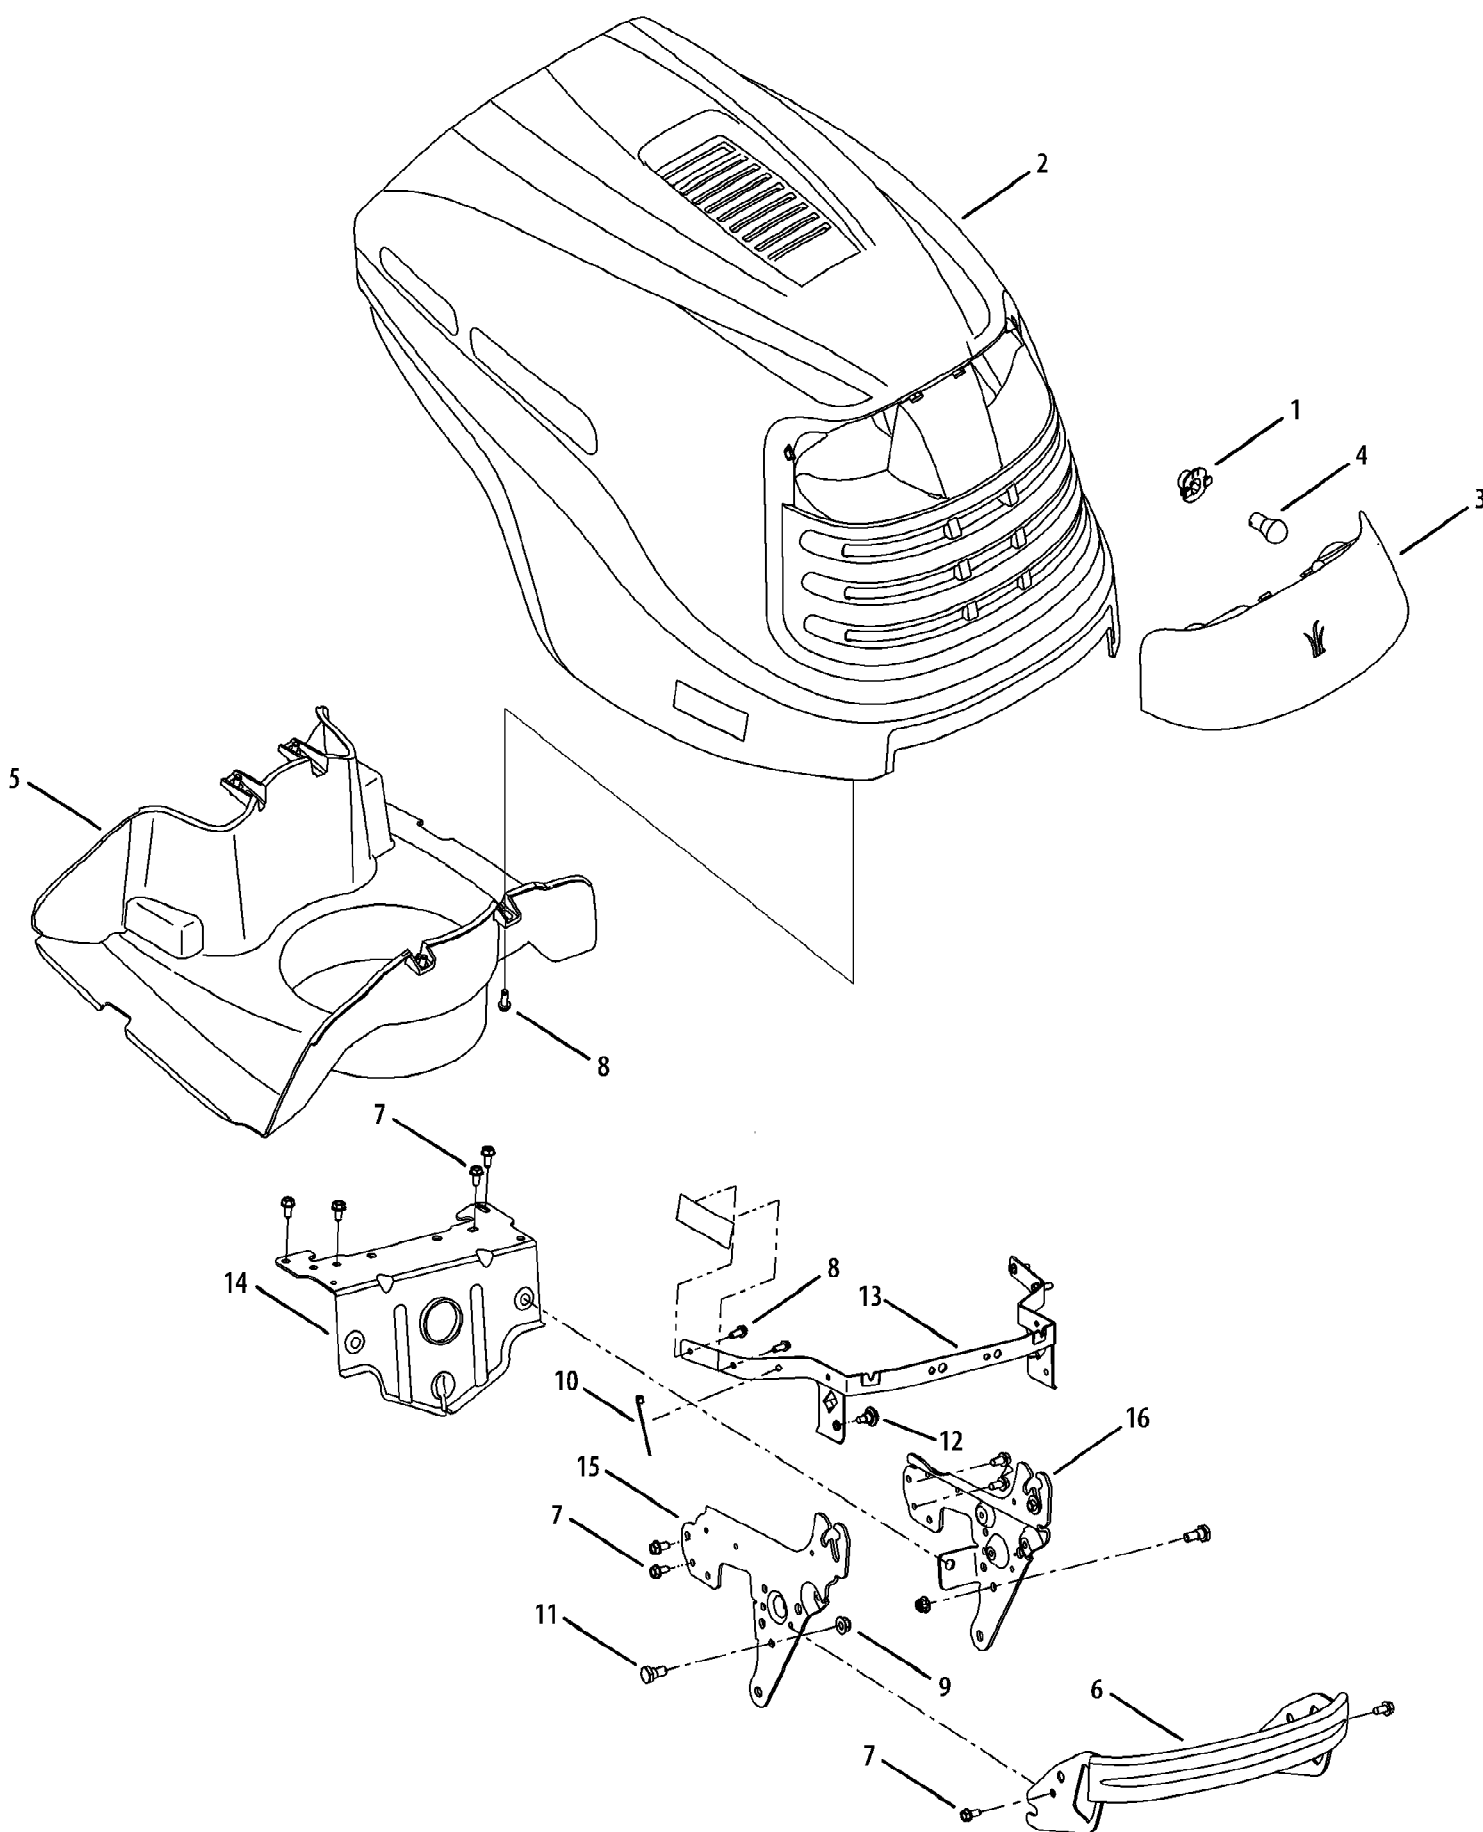

LT1042 Tractor (2008 & after)
Hood & Grille

Page 14 of 71

Ref #	Part Number	Qty	S/P/F	Description
1	725-1649	1	S	Lamp Socket
2	731-04567A	1	S	Hood
3	731-04577	1	S	Headlight Lens
3	777X41562	1		Headlight Lens Reflector, RH Not Shown
3	777X41563	1		Headlight Lens Reflector, LH Not Shown
3	629-04083	1	S	Headlight Harness Not Shown
4	725-0963	1	S	Miniature Lamp, 12 V
5	731-04569A	1	/P	Hood Plenum (LT1042 & LT1045)
5	731-04679A	1	/P	Hood Plenum (LT1046 & LT1050)
6	683-04238	1	S	Bumper Assembly
7	710-04484	1		Screw, 5/16-18 x .750
8	710-0895	1		Screw, 1/4-15 x .75
9	712-04065	1	/P	Flange Lock Nut, 3/8-16, Grf
10	725-0157	1	/P	Cable Tie
11	738-0143	1	/P	Shoulder Screw, .496 x .336, 3/8-16
12	738-04091A	1	/P	Shoulder Screw, .43 x .29 x 5/16-18
13	783-04606B	1		Pivot Bracket
14	783-05326	1	S	Pivot Bar Bracket
15	783-05418	1		Pivot Bracket, Hood, RH
16	783-05417	1		Pivot Bracket, Hood, LH

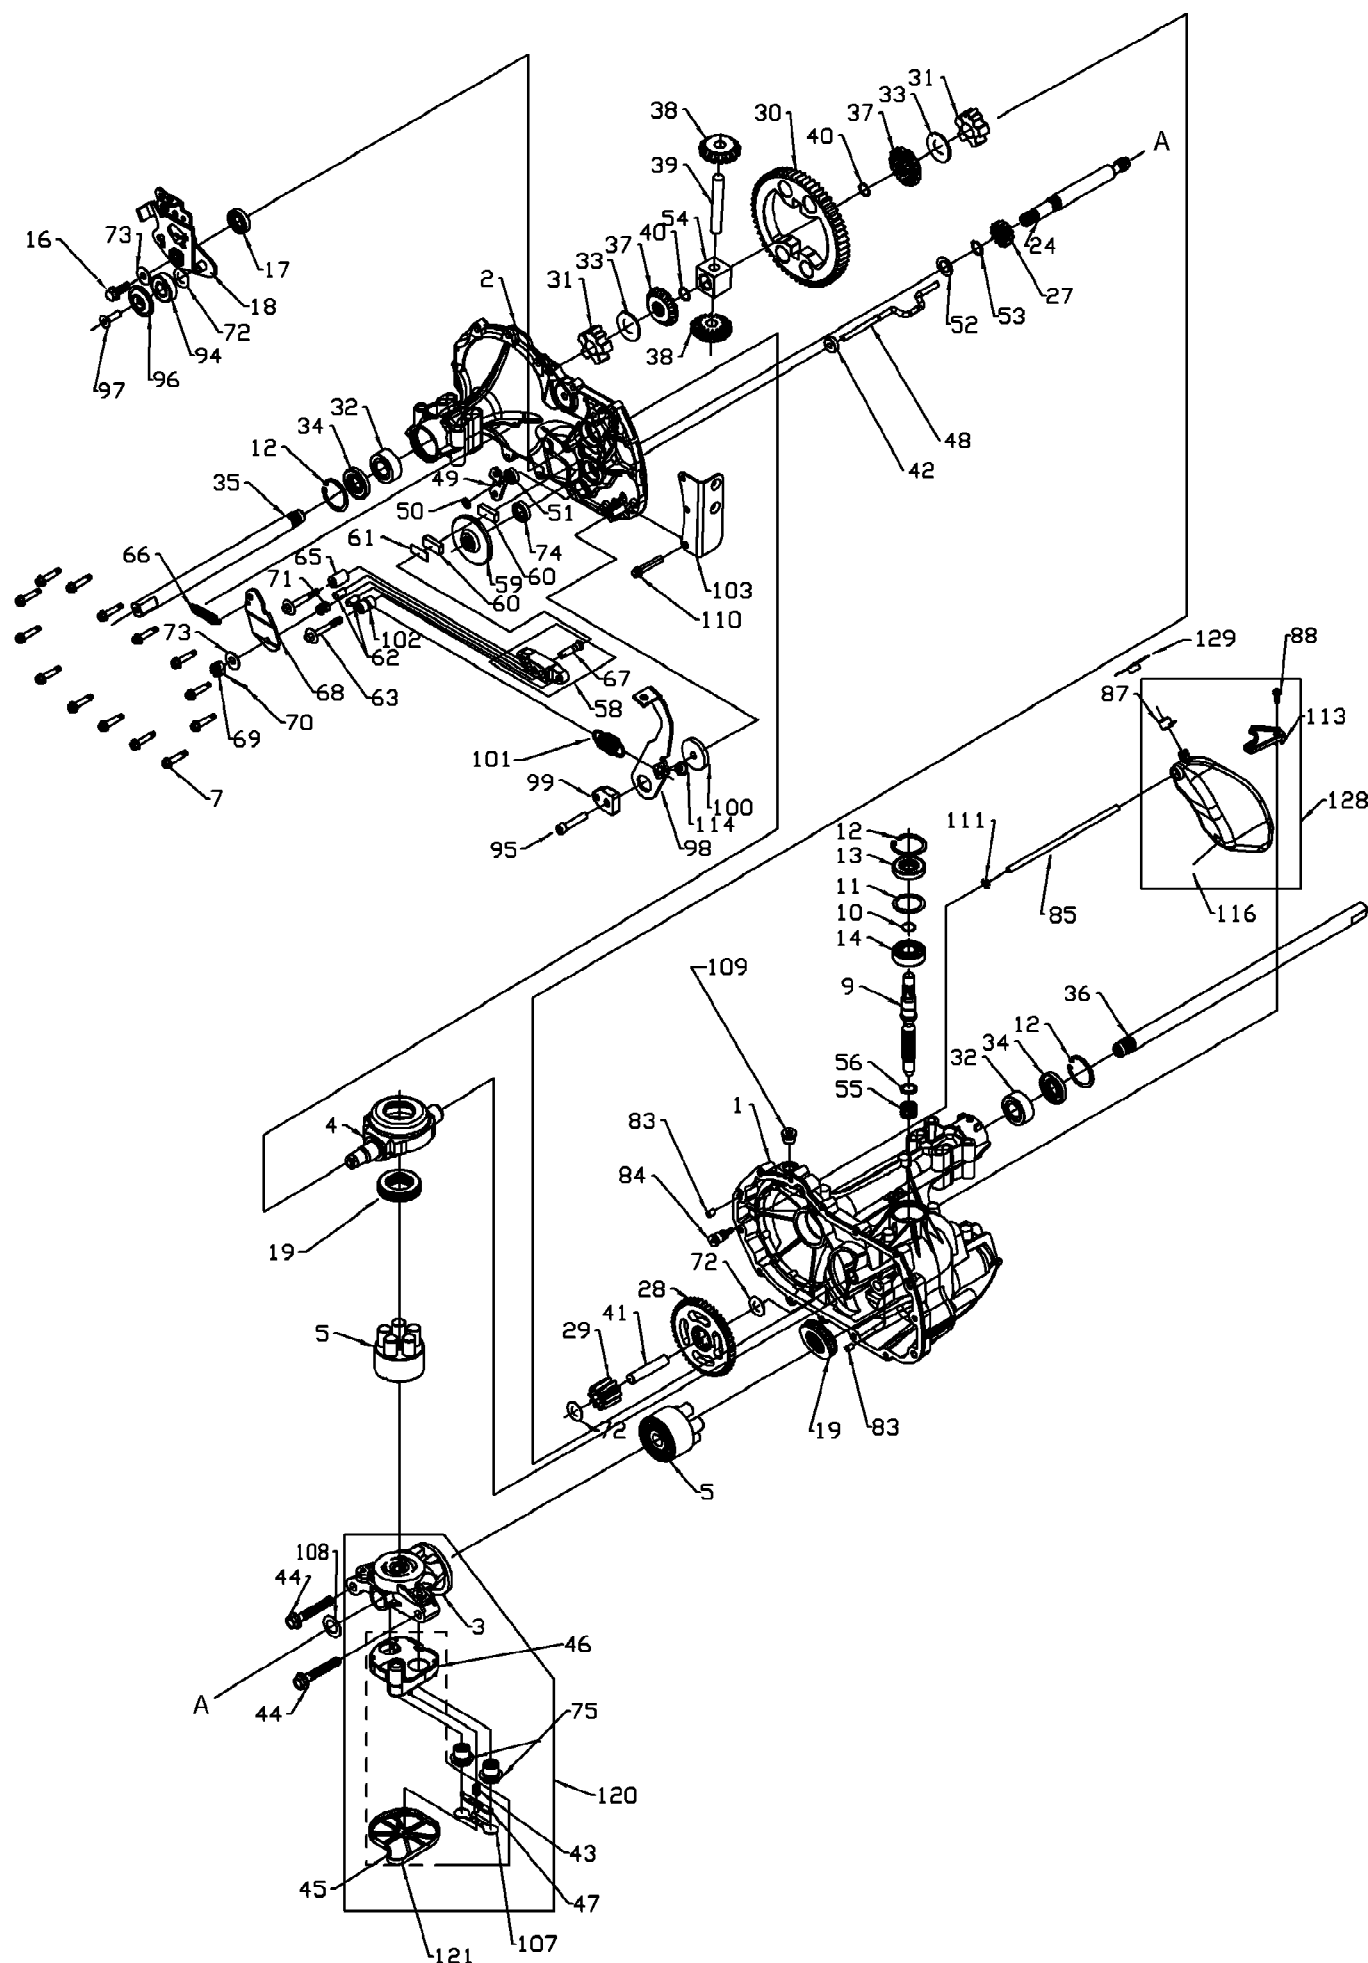

LT1042 Tractor (2008 & after)
Hydrostatic Transmission

Page 16 of 71

Ref #	Part Number	Qty	S/P/F	Description
1	HG-70467	1		MAIN HOUSING, ASSEMBLY WITH BUSHING
2	HG-70483	1	/P	SIDE HOUSING, ASSEMBLY WITH BUSHINGS
3		1		CENTER SECTION, ASSEMBLY WITH BUSHING (ORDER CENTER SECTION)
4	HG-51048	1	/P	SWASHPLATE, TRUNNION MACHINED
5	HG-70331	2	/P	BLOCK - ASSEMBLY WITH PISTONS, COMPRESSIONS SPRINGS & THRUST WASHERS
6		1		SEALANT (PURCHASE LOCALLY)
7	HG-51190	14	/P	HEX FLANGE SCREW 1/4-20 X 1.25
9	HG-51062	1	/P	SHAFT, INPUT
10	HG-2000022	1	/P	RING - RETAINING
11	HG-50951	1	/P	SPACER
12	HG-50329	3	/P	RING - RETAINING
13	HG-51161	1	/P	SEAL, LIP .67 X 1.58 X .276
14	HG-50315	1		BALL BRG 17 MM ID X 40MM OD X 12MM
16	HG-51064	1		BOLT, HEX FLANGE HEAD 5/16-24 X .94 (PATCH)
17	HG-51140	1	/P	LIP SEAL 18 X 32 X 7
18	HG-51119	1	/P	ARM, CONTROL
19	HG-50551	2	S	BEARING, 30 X 52 X 13 THRUST
24	HG-50966	1		SHAFT, MOTOR
27	HG-51130	1		GEAR - PINNION, 13T
28	HG-51129	1		10T / 48T GEAR
29	HG-51043	1	/P	GEAR, 10T JACKSHAFT
30	HG-51044	1		60T BULL GEAR
31	HG-51088	2	/P	SLEEVE BEARING .75 X 1.750 X .625
32	HG-51089	2	/P	SLEEVE BEARING (OUTBOARD) .75 X 1.575 X .625
33	HG-44875	2	/P	WASHER, 3/4 ID X 1 1/2 OD X .13 THK
34	HG-51066	2	/P	LIP SEAL AXLE SEAL
35	HG-51079	1	/P	SHAFT, AXLE .75 X 11.39 (DD, R.H.)
36	HG-51078	1	/P	SHAFT, AXLE .75 X 17.99 (DD, L.H.)
37	HG-44096	2	S	MITER GEAR (SPLINED)
38	HG-44097	2		MITER GEAR 15T (0.5 ID)
39	HG-50146	1		SHAFT
40	HG-44871	2	/P	RING, SPIRAL RETAINING
41	HG-51083	1		PIN, JACKSHAFT
42	HG-51100	1		MAGNET, RING
43	HG-51136	1		SPRING, BYPASS
44	HG-50016	2		HYDRO MTG SCREW 3/8-24 X 2.5 LONG
45		1		BOTTOM, FILTER (ORDER FILTER ASSEMBLY)
46		1		BASE, FILTER W/POPPET (ORDER FILTER ASSEMBLY)
47	HG-51091	1		ACTUATOR, BYPASS
48	HG-51098	1		ROD, BYPASS ACTUATOR

LT1042 Tractor (2008 & after)
Hydrostatic Transmission

Page 17 of 71

Ref #	Part Number	Qty	S/P/F	Description
49	HG-51135	1		ARM, BYPASS
50	HG-51116	1	/P	RETAINING RING 0, 250 EXTERNAL
51	HG-51081	1	/P	SEAL, LIP .741 X .250 X .250 TC
52	HG-44371	1	/P	FLAT WASHER, 5/8 ID X 1.0 OD X .05 THK
53	HG-44145	1		RETAINING RING
54	HG-51071	1		BEARING, CENTER BLOCK
55	HG-2003014	1	/P	SPRING - HELICAL COMPRESSION
56	HG-2003017	1	/P	WASHER
57	737-3121	1	/P	FLUID-DRIVE SYSTEM, quart
58	HG-62589	1	/P	BRAKE YOKE KIT, WITH SQ. HD. 5/16 BOLT RIBBED
59	HG-51072	1	/P	ROTOR, BRAKE
60	HG-44132	2	S	BRAKE PUCK
61	HG-44134	1	S	PUCK PLATE
62	HG-44127	2	S	BRAKE ACTUATING PIN
63	HG-51146	2		HFHCS 1/4-20 X 2 W/PATCH, SPECIAL FLANGE
65	HG-23711	1		SPACER
66	HG-70896	1		KIT, SPRING
67	HG-44138	1		SQ. HD. BOLT 5/16-24 RIBBED
68	HG-44094	1	/P	ARM, BRAKE
69	HG-44142	1	S	SLOTTED HEX NUT 5/16-24
70	HG-44101	1	S	COTTER PIN 3/32 X 3/4
71	HG-50919	1	/P	COMPRESSION SPRING BRAKE ANTI-DRAG
72	HG-50132	3	/P	WASHER, HT. .5 ID X 1 OD X .032
73	HG-44130	2	S	FLAT-WASHER 11/32 I.D. X 7/8 O.D.
74	HG-70719	1	/P	SEAL KIT, WITH OIL SEAL (.625X1.0X.25), RET-STAR WASHER RING, SHAFT SEAL
75	HG-51084	2	/P	CHECK PLUG ASSEMBLY, .027, WASHER
83	HG-9004800-2506	2	/P	PIN, STANDARD HEADLESS
84	HG-51143	1	/P	FITTING, 5/16 SAE 5/32 TUBE
85	HG-51147	1		HOSE, EXPANSION TANK
87	HG-51251	1		CAP, VENT
88	HG-50653	1	/P	BOLT, SELF TAPPING 10-32 X 1/2
94	HG-44147	1		BALL BEARING .62 I.D X 1.38 X .44
95	HG-50837	1		SOCKET HEAD CAP SCREW, 5/16-24 X 1 1/2
96	HG-51200	1		SPACER, LOCATING
97	HG-50870	1		SCREW, SFHCS
98	HG-51120	1		ARM, RETURN
99	HG-51097	1		PUCK, ADJUSTING
100	HG-51122	1		WASHER, .325 OD X 1.60 ID X .150 W
101	HG-51131	1	/P	SPRING, EXTENSION
102	HG-51123	1		SPACER, .560 OD X .260 ID X .087
103	HG-51223	1		BRACKET, TORQUE
107	HG-51134	1		DEFLECTOR
108	HG-51069	1		WASHER, MOTOR SHAFT .71 ID X 1.15 OD X .030 THK
109	HG-9005110-5600	1	/P	PLUG, SAE #6

LT1042 Tractor (2008 & after)
Hydrostatic Transmission


Page 18 of 71

Ref #	Part Number	Qty	S/P/F	Description
110	HG-50868	1		TORX HEARD SCREW, 5/16-18 T.F.
111	HG-51144	1		O-RING .07 X .301 ID
113	HG-51179	1		BRACKET, SUPPORT EXPANSION TANK
114	HG-51184	1	/P	SPRING GRUIDE
116		1		SILICON SPONGE (ORDER KIT)
120	HG-70759	1		CENTER SECTION W/ FILTER BASE, BOTTOM FILTER, CHECK PLUGS, SPRING, ACTUATOR, DEFLECTOR, BUSHING
121	HG-70756	1	/P	FILTER ASSEMBLY W/ FILTER BASE, BOTTOM FILTER, SPRING, ACTUATOR, DEFLECTOR
122	HG-70463	1	/P	SEAL - O-RING KIT
128	HG-70503	1	/P	EXPANSION TANK KIT W/TANK, VENT CAP, SELF-TAPPING BOLT, BRACKET, SILICON SPONGE
129		1		CAP, EXPANSION TANK SHIPPING (NOT USED)

LT1042 Tractor (2008 & after)

Page 19 of 71

Kohler SV590-0003 & SV600-0009 Air Intake & Filtration

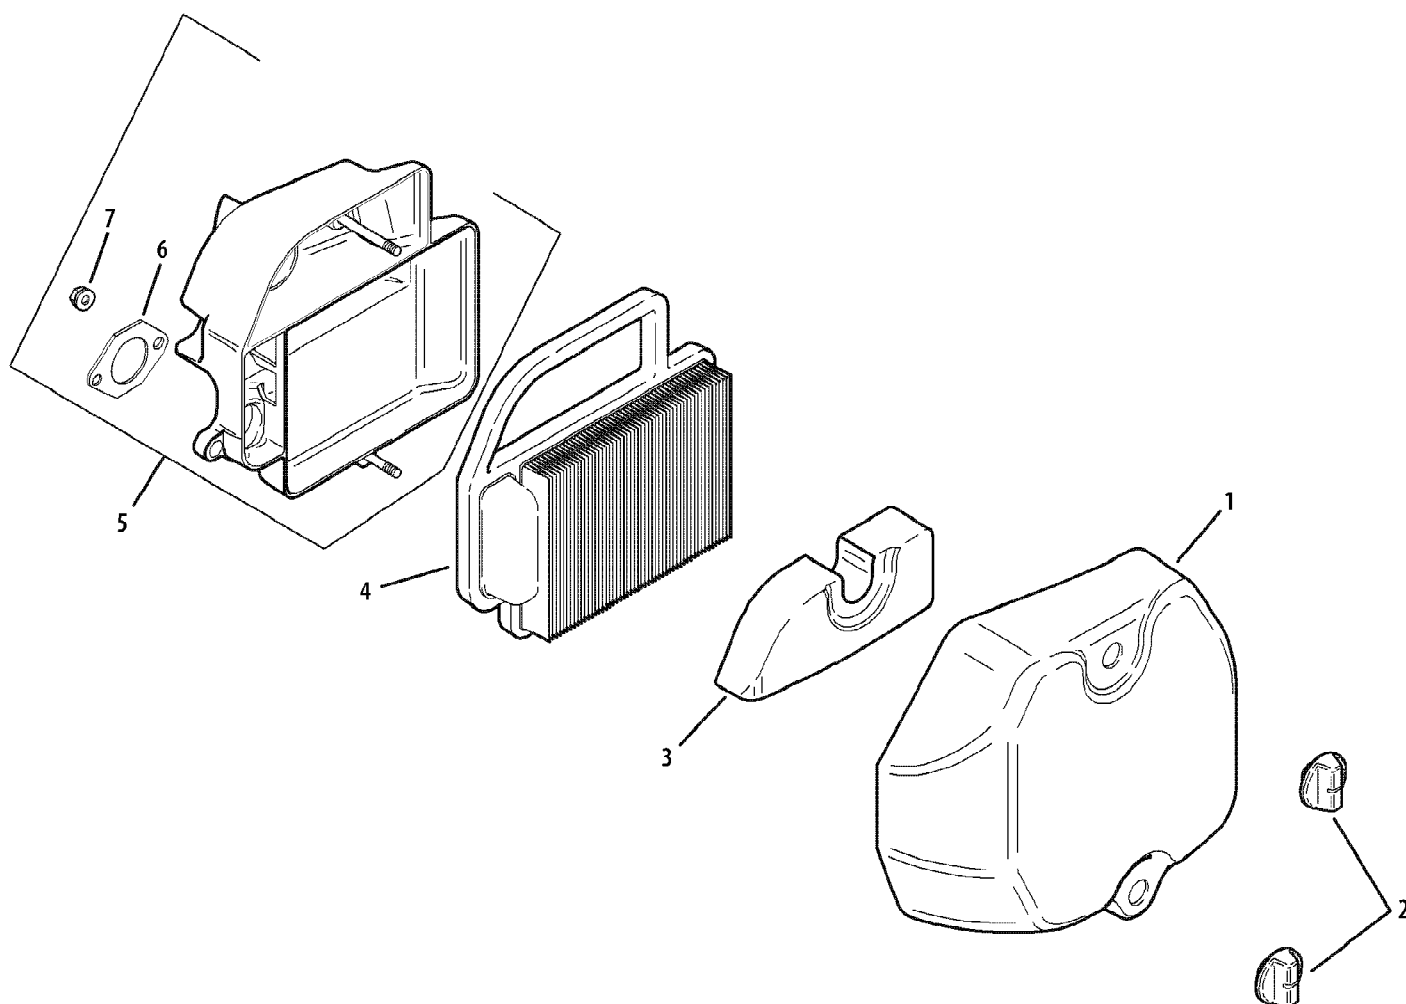

LT1042 Tractor (2008 & after)


Page 20 of 71

Kohler SV590-0003 & SV600-0009 Air Intake & Filtration

Ref #	Part Number	Qty	S/P/F	Description
1	KH-20-096-04-S	1		Cover, air cleaner
2	KH-25-341-05-S	1		Knob, cover
3	KH-20-083-03-S	1	S	Element, precleaner
4	KH-20-083-02-S	1	S	Element, air cleaner
5	KH-20-094-01-S	1	S	Kit, air cleaner base (Includes 6 & 7)
6	KH-12-041-02	1	/P	Gasket, air cleaner base
7	KH-M-641060-S	1	/P	Nut, hex, Flange M6 x 1.0

LT1042 Tractor (2008 & after)
Kohler SV590-0003 & SV600-0009 Controls

Page 21 of 71

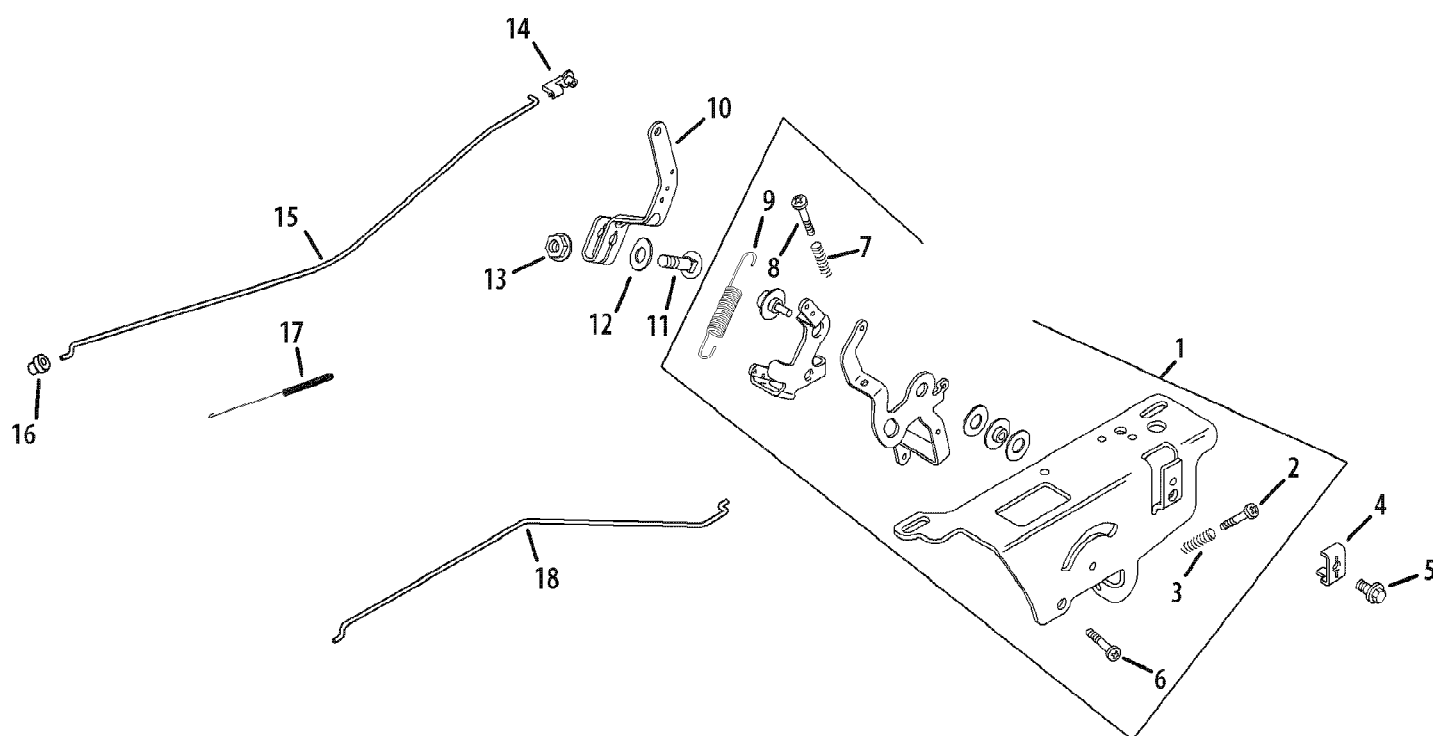

LT1042 Tractor (2008 & after)
Kohler SV590-0003 & SV600-0009 Controls

Page 22 of 71

Ref #	Part Number	Qty	S/P/F	Description
1	KH-20-536-05-S	1	/P	Control Assbly., speed (Incl. 2,3, 6, 7)
2	KH-20-086-10-S	1		Screw, Thread Forming M4x 0.7 x 25
2	KH-20-086-18-S	1		Screw, Thread Forming M4x 0.7 x 38
3	KH-12-089-11	1	S	Spring, Speed Control (Short)
3	KH-20-089-12-S	1		Spring, Speed Control (Long)
4	KH-12-237-01	1		Clamp, cable
5	KH-M-545016-S	1	/P	Screw, hex flange
6	KH-M-664020-S	1		Screw, 6 lobed socket
7	KH-12-089-11	1	S	Spring, Speed Control (Short)
8	KH-20-086-10-S	1		Screw, thread forming M4x0.7x25
9	KH-20-089-11-S	1	/P	Spring, speed control
10	KH-20-090-02-S	1	S	Lever, governor
11	KH-52-211-04	1		Bolt, round head square neck
12	KH-X-22-11	1		Washer, internal tooth lock 1/4"
13	KH-12-100-07	1		Nut, hex. flange 1/4-20"
14	KH-25-158-11	1	/P	Bushing, throttle linkage
15	KH-20-079-04-S	1	S	Linkage, throttle
16	KH-25-158-08	1	/P	Bushing, linkage retaining
17	KH-20-089-10-S	1		Spring, Linkage
18	KH-20-079-05-S	1		Linkage, Choke

LT1042 Tractor (2008 & after)


Page 24 of 71

Kohler SV590-0003 & SV600-0009 Crankshaft & Crankcase

Ref #	Part Number	Qty	S/P/F	Description
1	KH-20-522-01	1	S	Crankcase - Use Short Block
2	KH-25-139-57-S	1	/P	Plug, sq. hd. pipe 3/8"
3	KH-20-032-01-S	1	/P	Seal, oil
4	KH-20-067-04-S	1	S	Rod, connecting
5	KH-20-874-01-S	1		Piston w/ Ring Set (Includes 6,7)
6	KH-20-108-01-S	1	S	Ring Set (89 mm)
7	KH-20-018-04-S	1		Retainer, piston pin
8	KH-20-123-02-S	1		Tube, drainback
9	KH-20-755-04-S	1		Kit, balance weight (Includes 10,11)
10	KH-20-380-16-S	1		Kit, screw/guide pin
11	KH-20-423-02-S	1		Shoe, guide
12	KH-12-154-05	1		Clip, hitch pin
13	KH-M-631015	1	/P	Washer, plain
14	KH-X-25-102-S	1	/P	Washer, plain
15	KH-20-144-02-S	1		Shaft, governor cross
16	KH-20-393-02-S	1		Pump assembly, oil (Includes 17-18)
17	KH-20-112-02-S	1		Spacer, oil pump screw
18	KH-20-086-13-S	1		Screw, oil pump
19	KH-20-144-06-S	1	S	Shaft center, cam - Exhaust
20	KH-20-468-01-S	1		Washer, thrust
21	KH-20-090-01-S	2		Lever assembly, cam (Includes 22)
22	KH-20-086-06-S	1	/P	Screw, shoulder
23	KH-20-010-04-S	1	/P	Gear assembly, cam (Includes 24-26)
24	KH-20-089-06-S	1		Spring, ACR
25	KH-20-044-16-S	1		Weight, ACR
26	KH-20-468-03-S	1		Washer, thrust - ACR
27	KH-20-010-04-S	1	/P	Camshaft Assembly Kit (Includes 28)
28	KH-20-468-03-S	1		Thrust Washer - ACR
29	KH-20-014-20-S	1		Crankshaft Kit Includes:
29	KH-25-340-02-S	1		Key, Straight Flywheel Not Shown
29	KH-25-139-27-S	1		Plug, Cup Not Shown
30	KH-X-42-15	1	/P	Key 3/16"
31	KH-20-043-12-S	1		Gear, crankshaft
	KH-SV590-0003	1	S	Engine, Complete LT1042 Not Shown
	KH-SV600-0009	1	S	Engine, Complete LT1045 Not Shown

LT1042 Tractor (2008 & after)
Kohler SV590-0003 & SV600-0009 Cylinder Head


Page 25 of 71

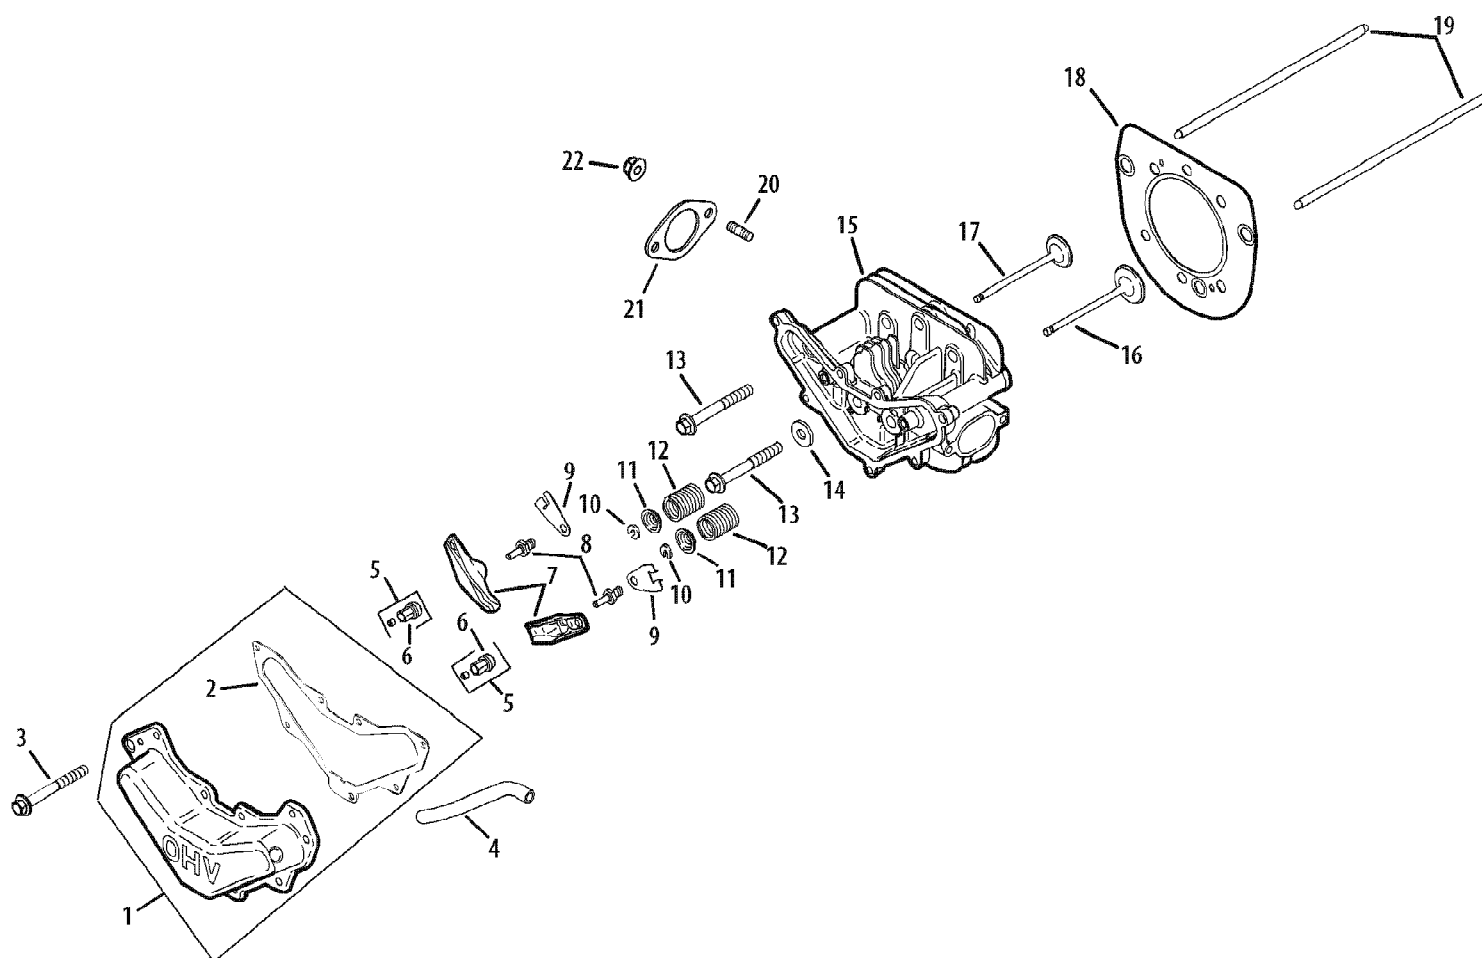

LT1042 Tractor (2008 & after)
Kohler SV590-0003 & SV600-0009 Cylinder Head

Page 26 of 71


Ref #	Part Number	Qty	S/P/F	Description
1	KH-20-096-07-S	1	S	Kit, valve cover (Includes 2)
2	KH-20-041-13-S	1	/P	Gasket, valve cover
3	KH-M-645020-S	1	/P	Screw, hex. flange M6x1.0x20
4	KH-20-326-20-S	1	/P	Hose, breather
5	KH-20-599-01-S	1	S	Rocker Arm Kit (Includes 6)
6	KH-20-086-04-S	1		Screw, Set
7	KH-20-186-01-S	1		Arm, rocker
8	KH-20-072-08-S	1	/P	Stud, rocker
9	KH-20-146-03-S	1		Plate, push rod guide
10	KH-20-062-01-S	1	/P	Lock, retainer
11	KH-20-173-01-S	1	/P	Cap, valve spring
12	KH-20-089-03-S	1		Spring, valve
13	KH-20-086-02-S	1	/P	Screw, hex. flange M10x1.5x37
14	KH-12-468-05	1		Washer, flat 1/2"
15	KH-20-318-07-S	1	S	Head, cylinder
16	KH-20-016-01-S	1	/P	Valve, exhaust
17	KH-20-017-01-S	1		Valve, intake
18	KH-20-841-01-S	1	/P	Kit, head gasket, (Incl. 2, 13 & 14)
19	KH-20-411-04-S	1	/P	Rod, push
20	KH-25-072-04	1	/P	Stud, exhaust
21	KH-24-041-49-S	1	/P	Gasket
22	KH-M-0841080	1	S	Nut, hex flange M8x1.25

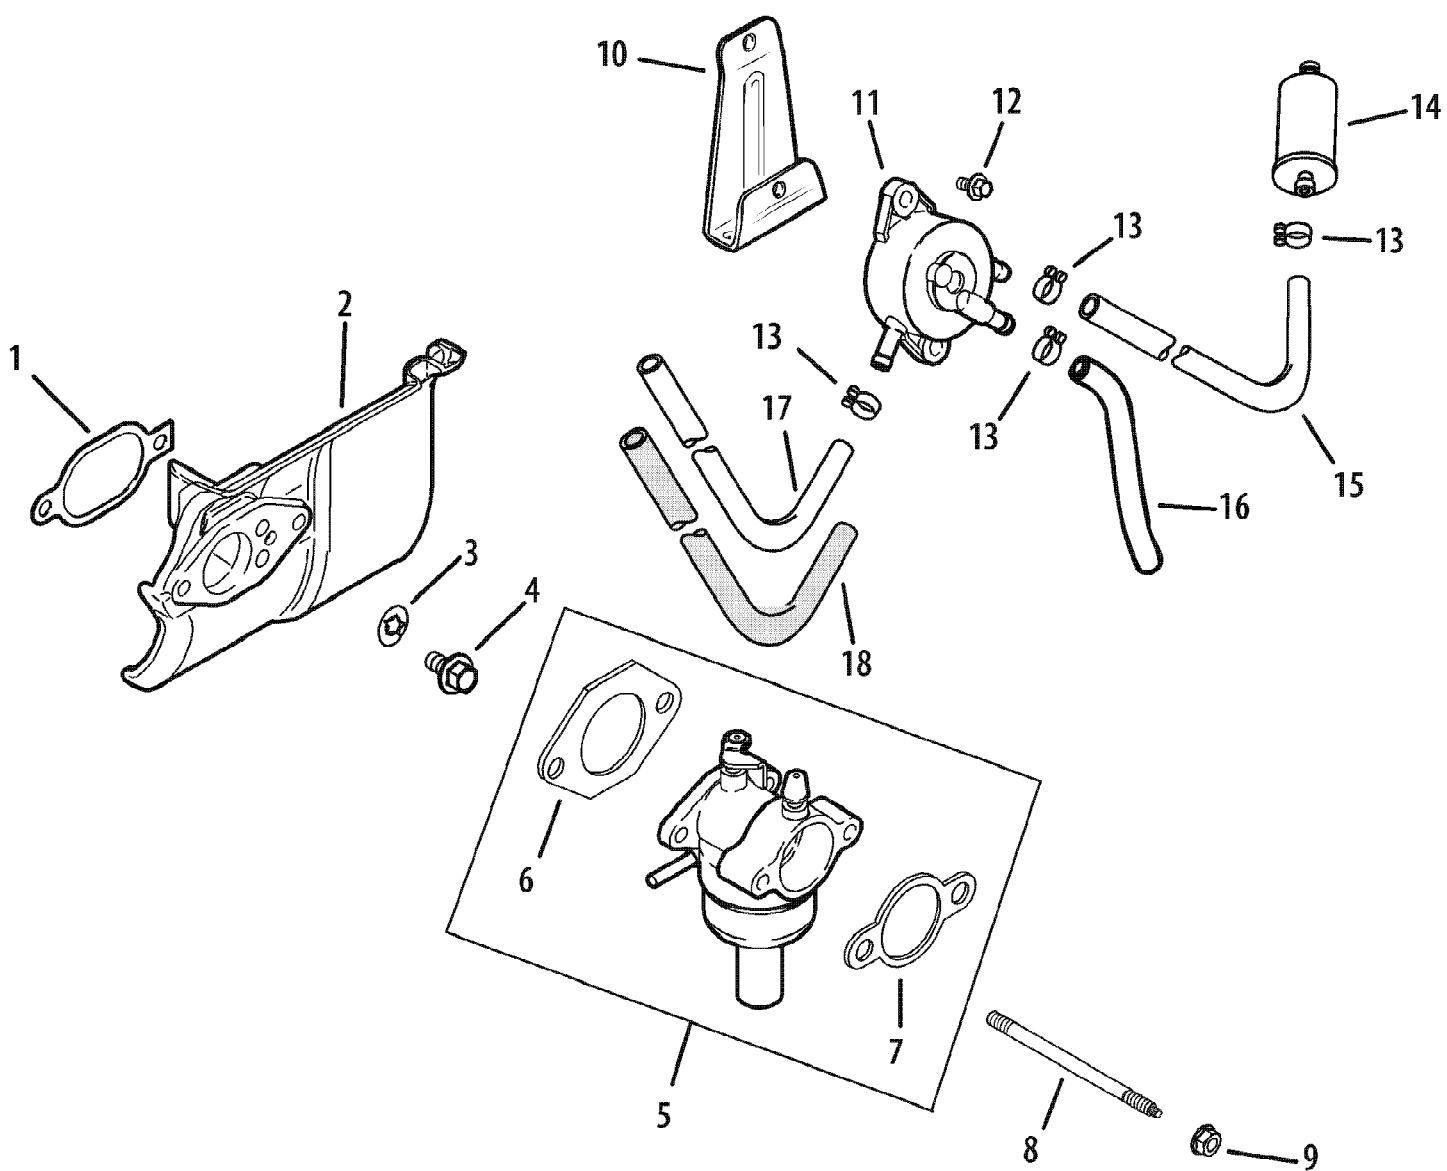

LT1042 Tractor (2008 & after)
Kohler SV590-0003 & SV600-0009 Fuel System

Page 28 of 71

Ref #	Part Number	Qty	S/P/F	Description
1	KH-20-041-07-S	1	S	Gasket, heat deflector
2	KH-20-265-01-S	1	S	Deflector, heat
3	KH-X-22-11	1		Washer, Int. Tooth Lock, 1/4" (SV590)
4	KH-M-651020-S	1		Screw, hex. flange M6x1.0x20
5	KH-20-853-14-S	1	S	Carburetor w/gaskets (Includes 6, 7)
6	KH-12-041-01	1	/P	Gasket, carburetor
7	KH-12-041-02	1	/P	Gasket, air cleaner
8	KH-20-072-05-S	1		Stud, carburetor mounting
9	KH-M-641060-S	1	/P	Nut, hex. flange M6x1.0
10	KH-20-126-02-S	1		Bracket, fuel pump mounting
11	KH-24-393-16	1	/P	Pump, fuel
12	KH-M-545010	1	S	Screw, hex. flange
13	KH-25-237-14-S	1	/P	Clamp, hose
14	KH-25-050-22-S	1	S	Filter, fuel
15	KH-25-353-06-S	1		Line, fuel 15.75" (pump to filter)
16	KH-20-353-01-S	1		Line, fuel 4" (pump to carb)
17	KH-52-353-20	1	S	Line, fuel 10" (pulse to fitting)
18	KH-20-431-02-S	1		Sleeve, Anti-Abrasion (SV590)
	KH-12-755-110-S	1		Kit, choke shaft Not Shown
	KH-12-757-02	1	/P	Kit, float Not Shown
	KH-12-757-03	1	/P	Kit, carburetor repair Not Shown
	KH-12-757-33	1	/P	Kit, solenoid repair Not Shown
	KH-12-757-37-S	1		Kit, bowl replacement w/gaskets Not Shown
	KH-20-755-06-S	1		Kit, High Altitude (5K ft) (Inc. 5,6) Not Shown
	KH-20-755-07-S	1		Kit, High Altitude (10K ft) (Incl. 5,6) Not Shown

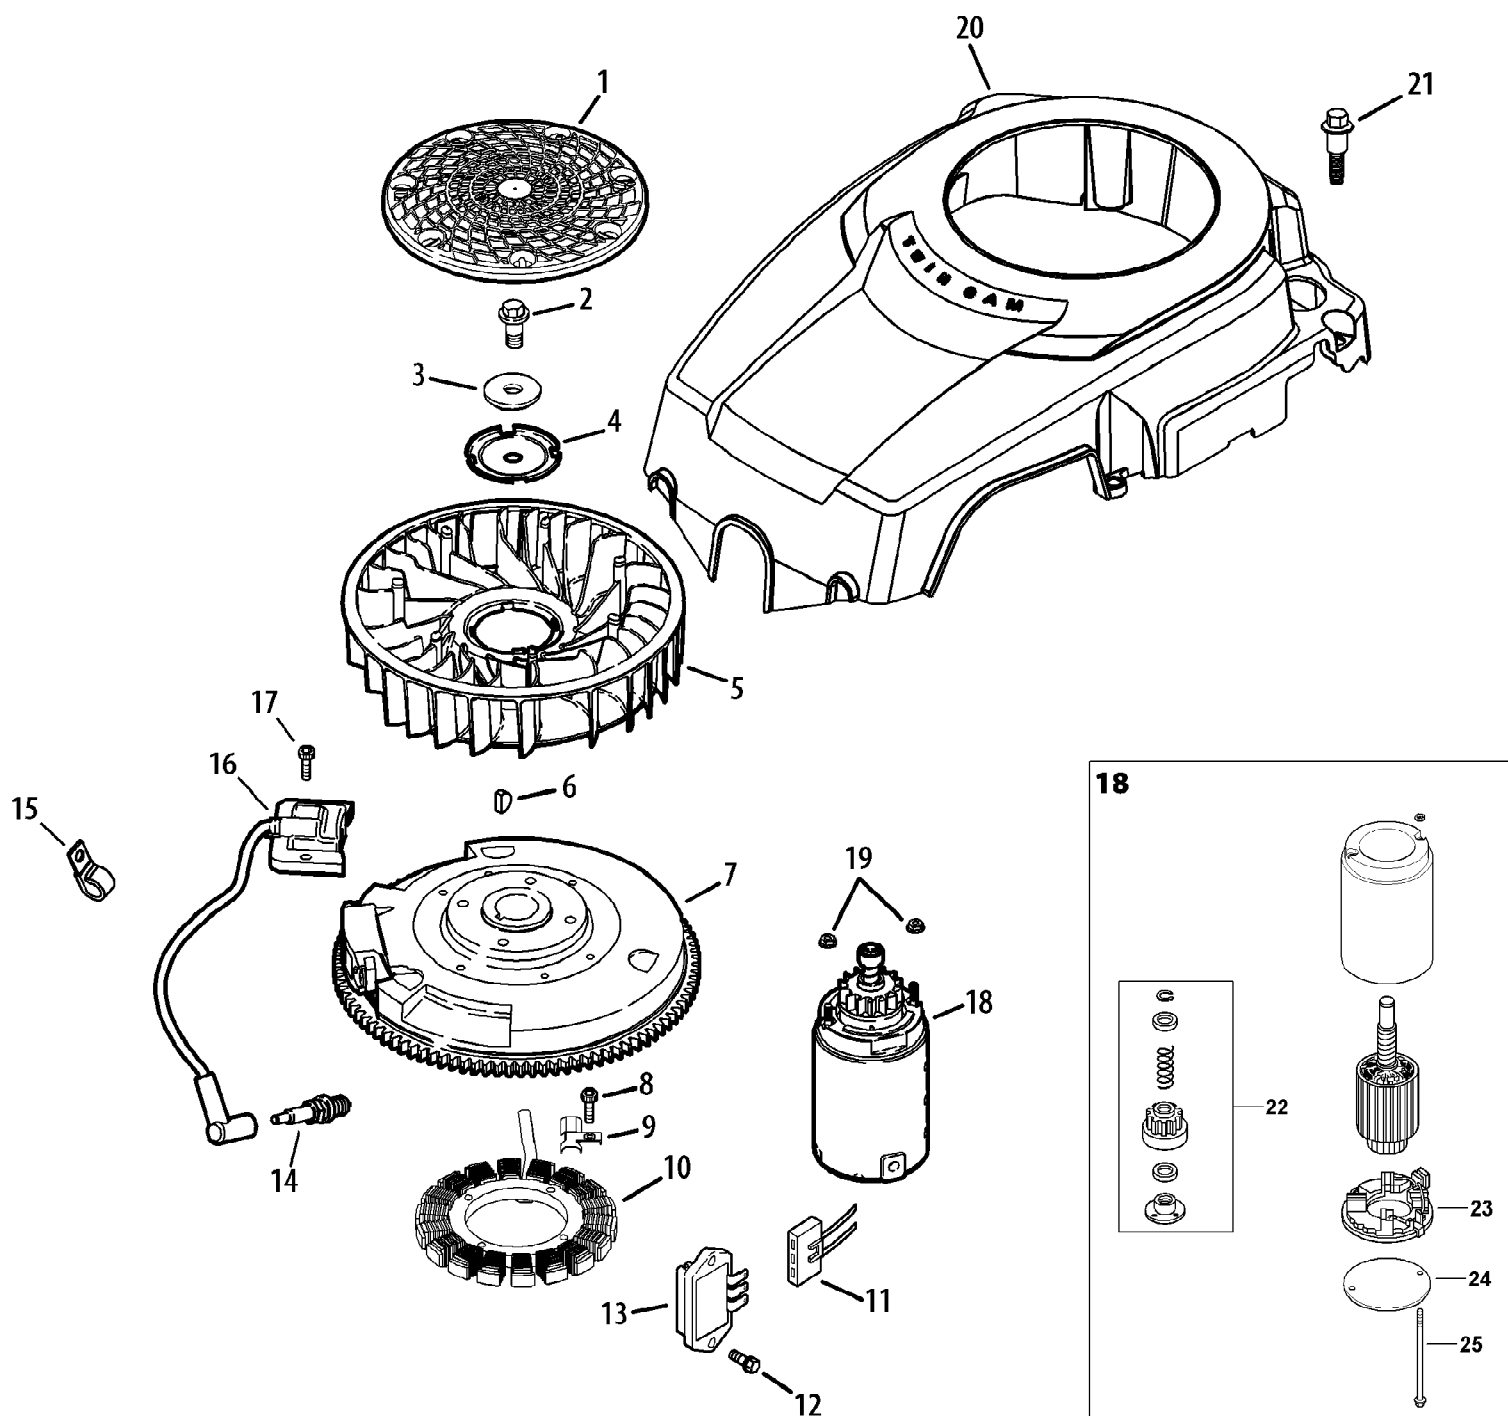


LT1042 Tractor (2008 & after)

Page 30 of 71

Kohler SV590-0003 & SV600-0009 Ignition & Electrical

Ref #	Part Number	Qty	S/P/F	Description
1	KH-20-162-02-S	1		Screen, grass
2	KH-25-086-125-S	1		Screw, hex. flange M10-1.5 x 46
3	KH-25-468-09-S	1		Washer, flat
4	KH-20-146-05-S	1	/P	Plate, fan mounting
5	KH-20-157-01-S	1		Fan
6	KH-X-42-15	1	/P	Key, woodruff
7	KH-20-025-40-S	1	/P	Flywheel
8	KH-20-086-22-S	1	S	Screw, hex. socket M5-0.8 x 25
9	KH-20-154-04-S	1		Clip, wire
10	KH-237878	1	/P	Kit, stator
11	KH-25-155-41-S	1	/P	Connector, body (3 contact)
12	KH-M-545020-S	1		Screw, hex. flange M5-0.8 x 20
13	KH-41-403-10-S	1	/P	Rectifier-regulator
14	KH-12-132-02	1	S	Plug, spark
15	KH-20-237-01-S	1		Clip, cable
16	KH-20-584-03-S	1	/P	Module, ignition
17	KH-M-561025-S	1		Screw, hex socket M5 x 0.8 x 25
18	KH-20-098-05-S	1	S	Starter Ass'y, inertia drive
19	KH-25-100-31-S	1		Nut, hex. serrated flange #10-24
20	KH-20-027-07-S	1	/P	Housing, blower
21	KH-20-086-06-S	1	/P	Screw, shoulder
22	KH-20-755-12-S	1		Drive Kit (J.E.)
23	KH-12-221-02-S	1		Brush Kit
24	KH-20-227-01-S	1		Drive End Cap (J.E.)
25	KH-20-211-02-S	1		Thru Bolt
	KH-20-176-09-S	1		Harness, wiring Not shown

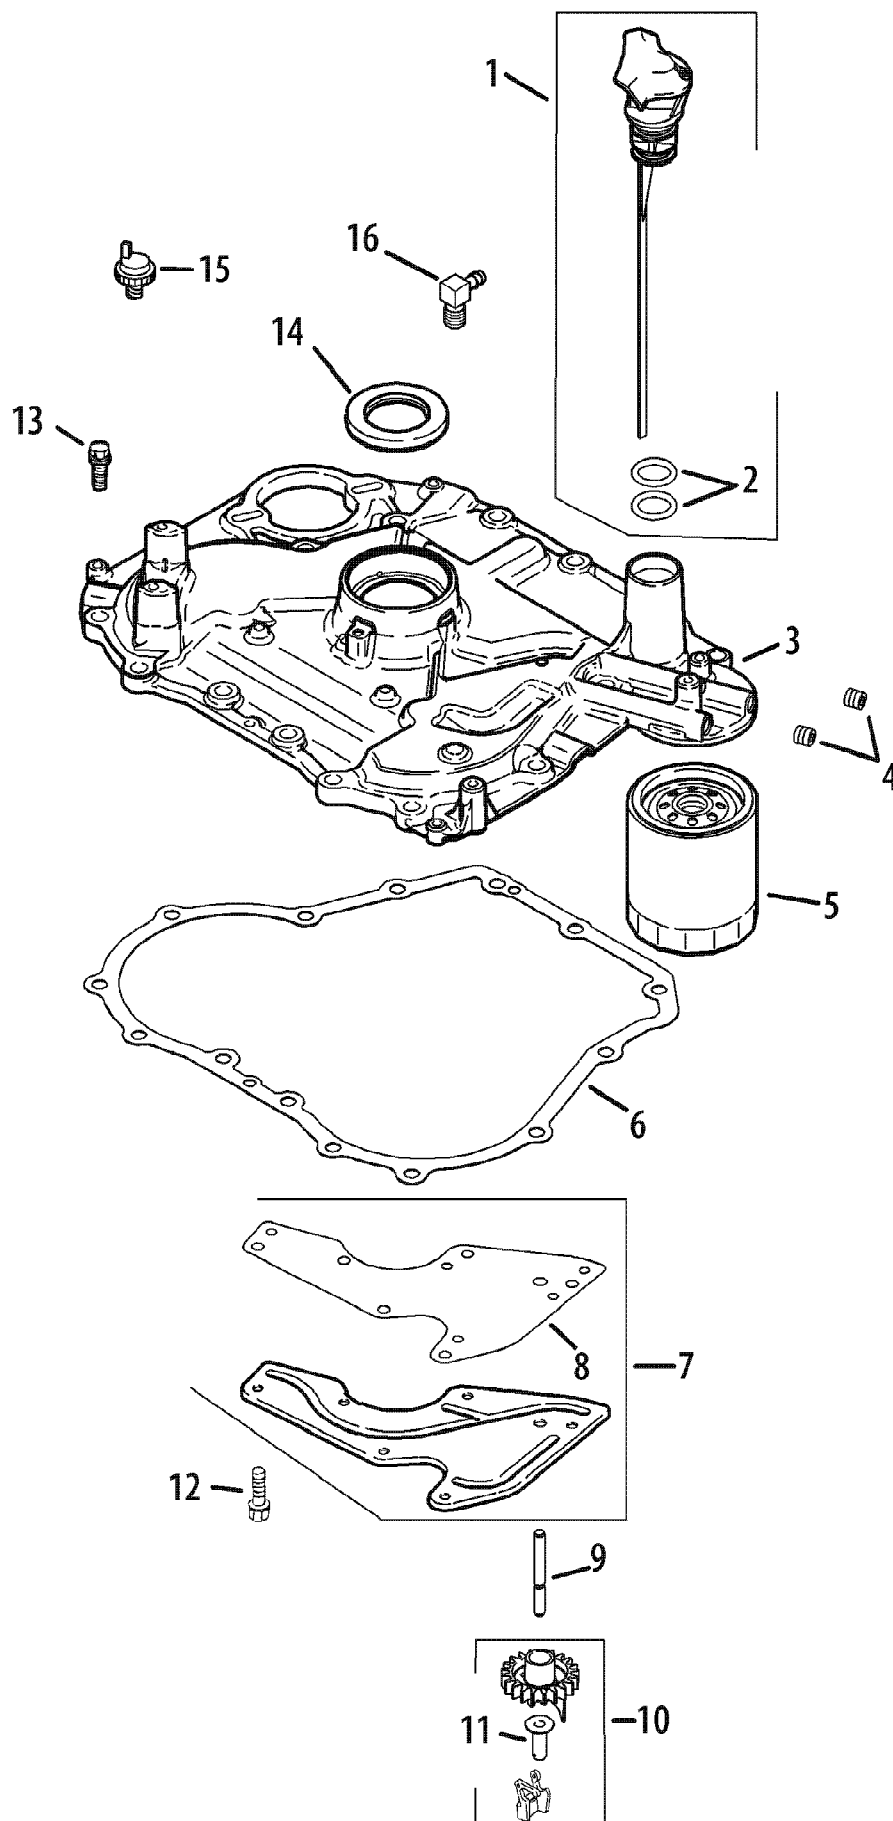

LT1042 Tractor (2008 & after)


Page 32 of 71

Kohler SV590-0003 & SV600-0009 Oil Pan & Lubrication

Ref #	Part Number	Qty	S/P/F	Description
1	KH-20-040-03-S	1	S	Kit, dipstick assembly (Includes 2)
2	KH-20-153-01-S	1		O-Ring, dipstick
3	KH-20-009-21-S	1		Plate assembly, closure (Incl. 4,10,11)
4	KH-25-139-60-S	1	/P	Plug, pipe
5	KH-52-050-02-S	1	/P	Filter, oil
6	KH-20-041-01-S	1	/P	Gasket, closure plate
7	KH-20-096-02-S	1		Kit, oil passage cover (Includes 8)
8	KH-20-041-02-S	1		Gasket, oil passage
9	KH-20-144-03-S	1		Shaft, governor gear
10	KH-25-310-01-S	1	S	Kit, gear & weight assembly (Incl. 11)
11	KH-12-380-01	1	/P	Pin, governor regulating
12	KH-M-545013-S	1		Screw, hex. flange M5x0.8x13
13	KH-25-086-127-S	1		Screw, hex. flange M8x1.25x30
14	KH-20-032-01-S	1	/P	Seal, oil
15	KH-25-099-27-S	1	/P	Switch, pressure
16	KH-25-054-13-S	1		Elbow, street

LT1042 Tractor (2008 & after)
Kohler SV600-0217 Air Intake & Filtration

Page 33 of 71

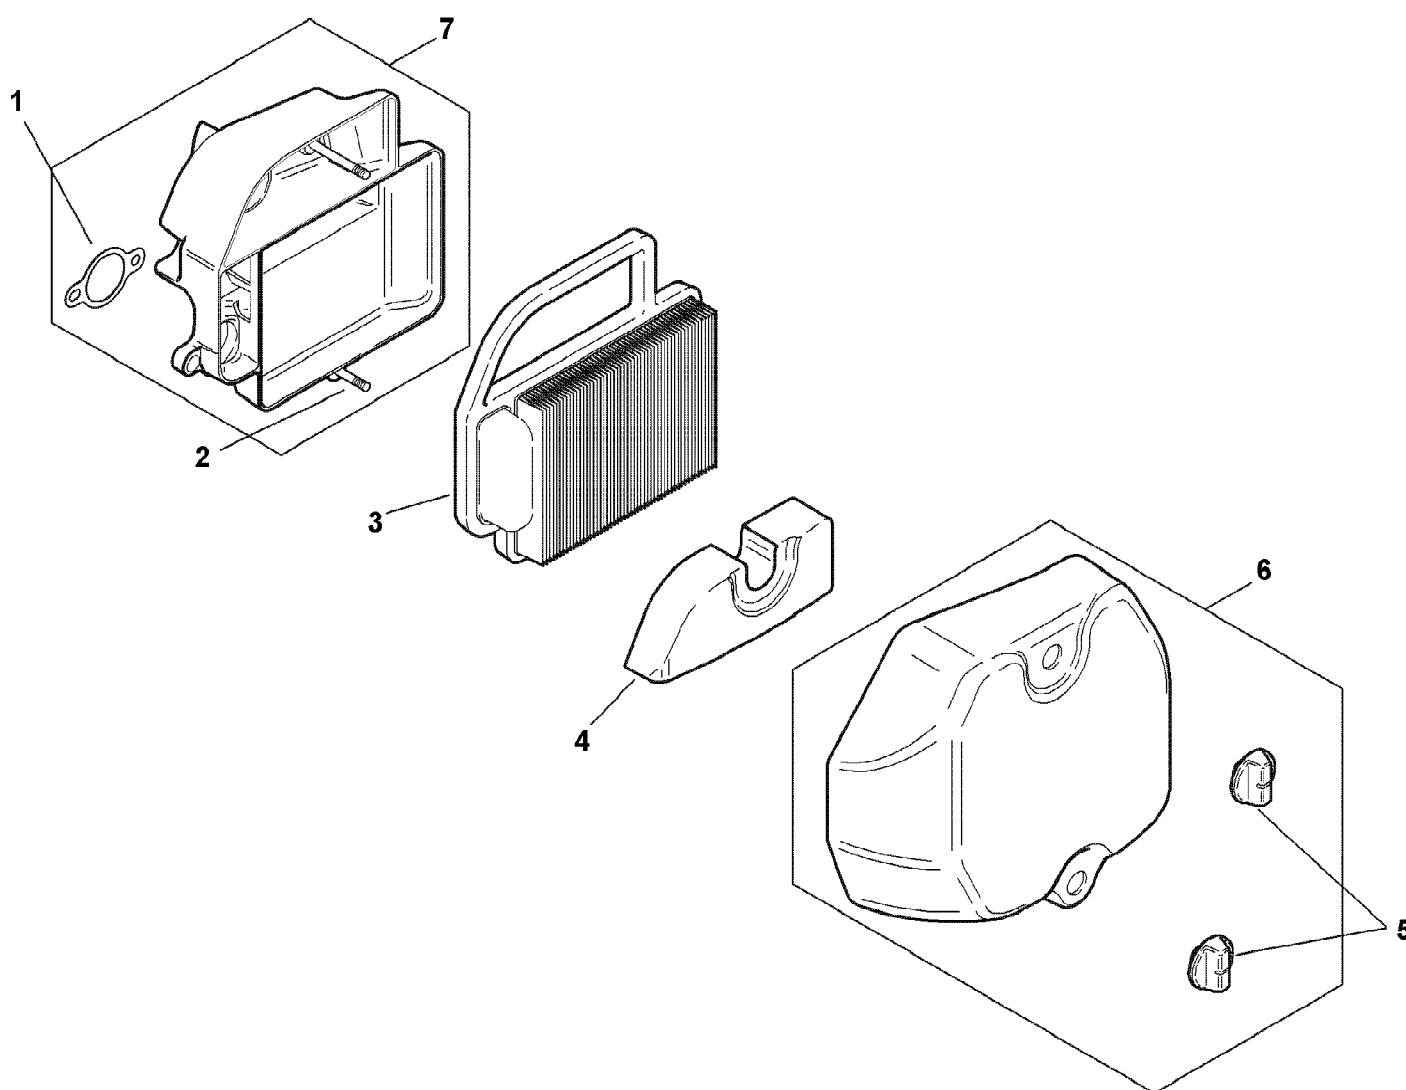


LT1042 Tractor (2008 & after)
Kohler SV600-0217 Air Intake & Filtration

Page 34 of 71

Ref #	Part Number	Qty	S/P/F	Description
1	KH-12-041-02	1	/P	Gasket, Air Cleaner Base
2	KH-20-072-04-S	2		Stud, Air Cleaner Base
3	KH-20-883-02-S1	1	/P	Element, Air Cleaner
4	KH-20-883-02-S1	1	/P	Pre-Cleaner Element (Dry)
5	KH-25-341-05-S	2		Knob, Cover
6	KH-20-094-04-S	1	/P	Air Clnr Base (Incl. Ref No. 5)
7	KH-20-096-04-S	1		Kit, Air Cleaner Cover (Incl. Ref No. 1 & 2)

LT1042 Tractor (2008 & after)
Kohler SV600-0217 Blower Housing

Page 35 of 71

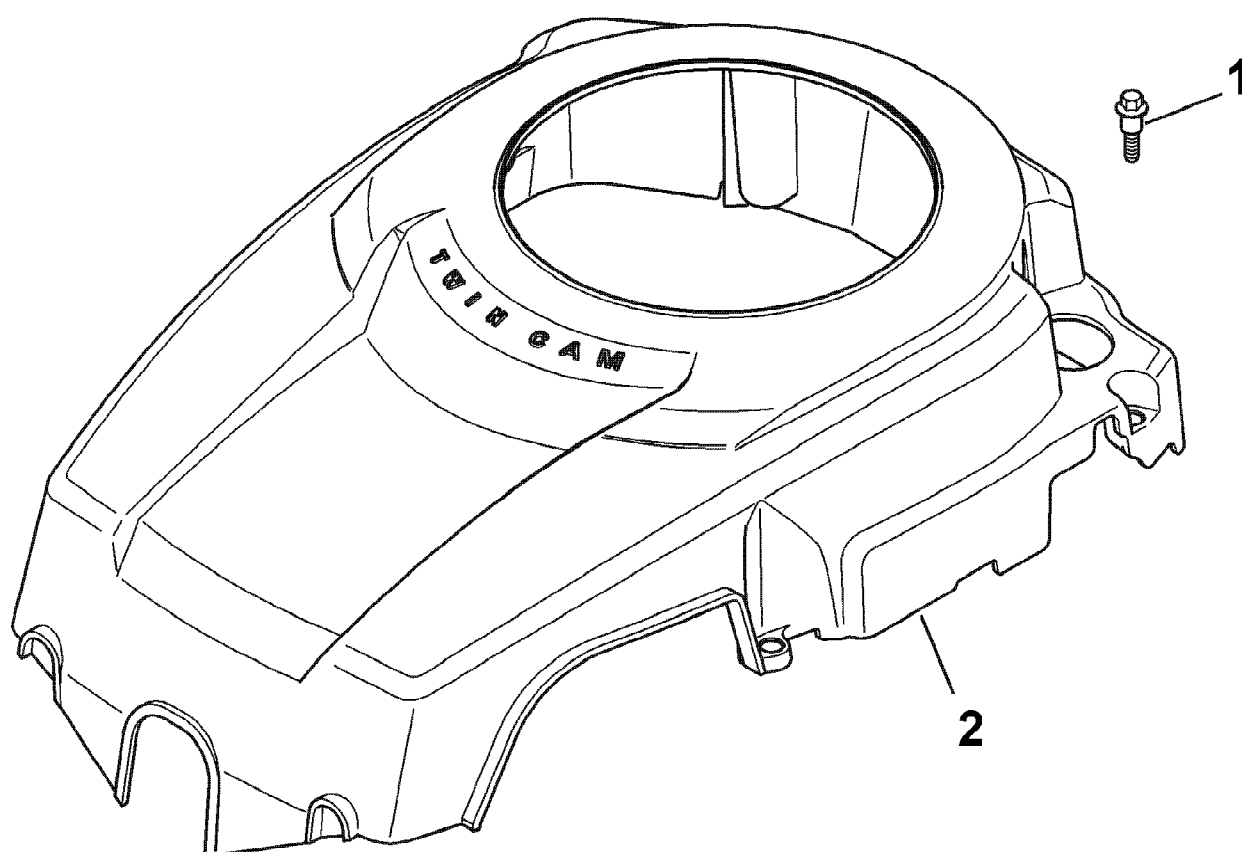


LT1042 Tractor (2008 & after)
Kohler SV600-0217 Blower Housing

Page 36 of 71

Ref #	Part Number	Qty	S/P/F	Description
1	KH-20-086-06-S	4	/P	Screw, Shd Thd Frm M6X1X26 (Incl. KH-41-037-10-S)
2	KH-20-027-07-S	1	/P	Kit, Blower Housing
	KH-41-037-10-S	1		Nameplate, Service Not Illustrated

LT1042 Tractor (2008 & after)
Kohler SV600-0217 Crankcase


Page 37 of 71

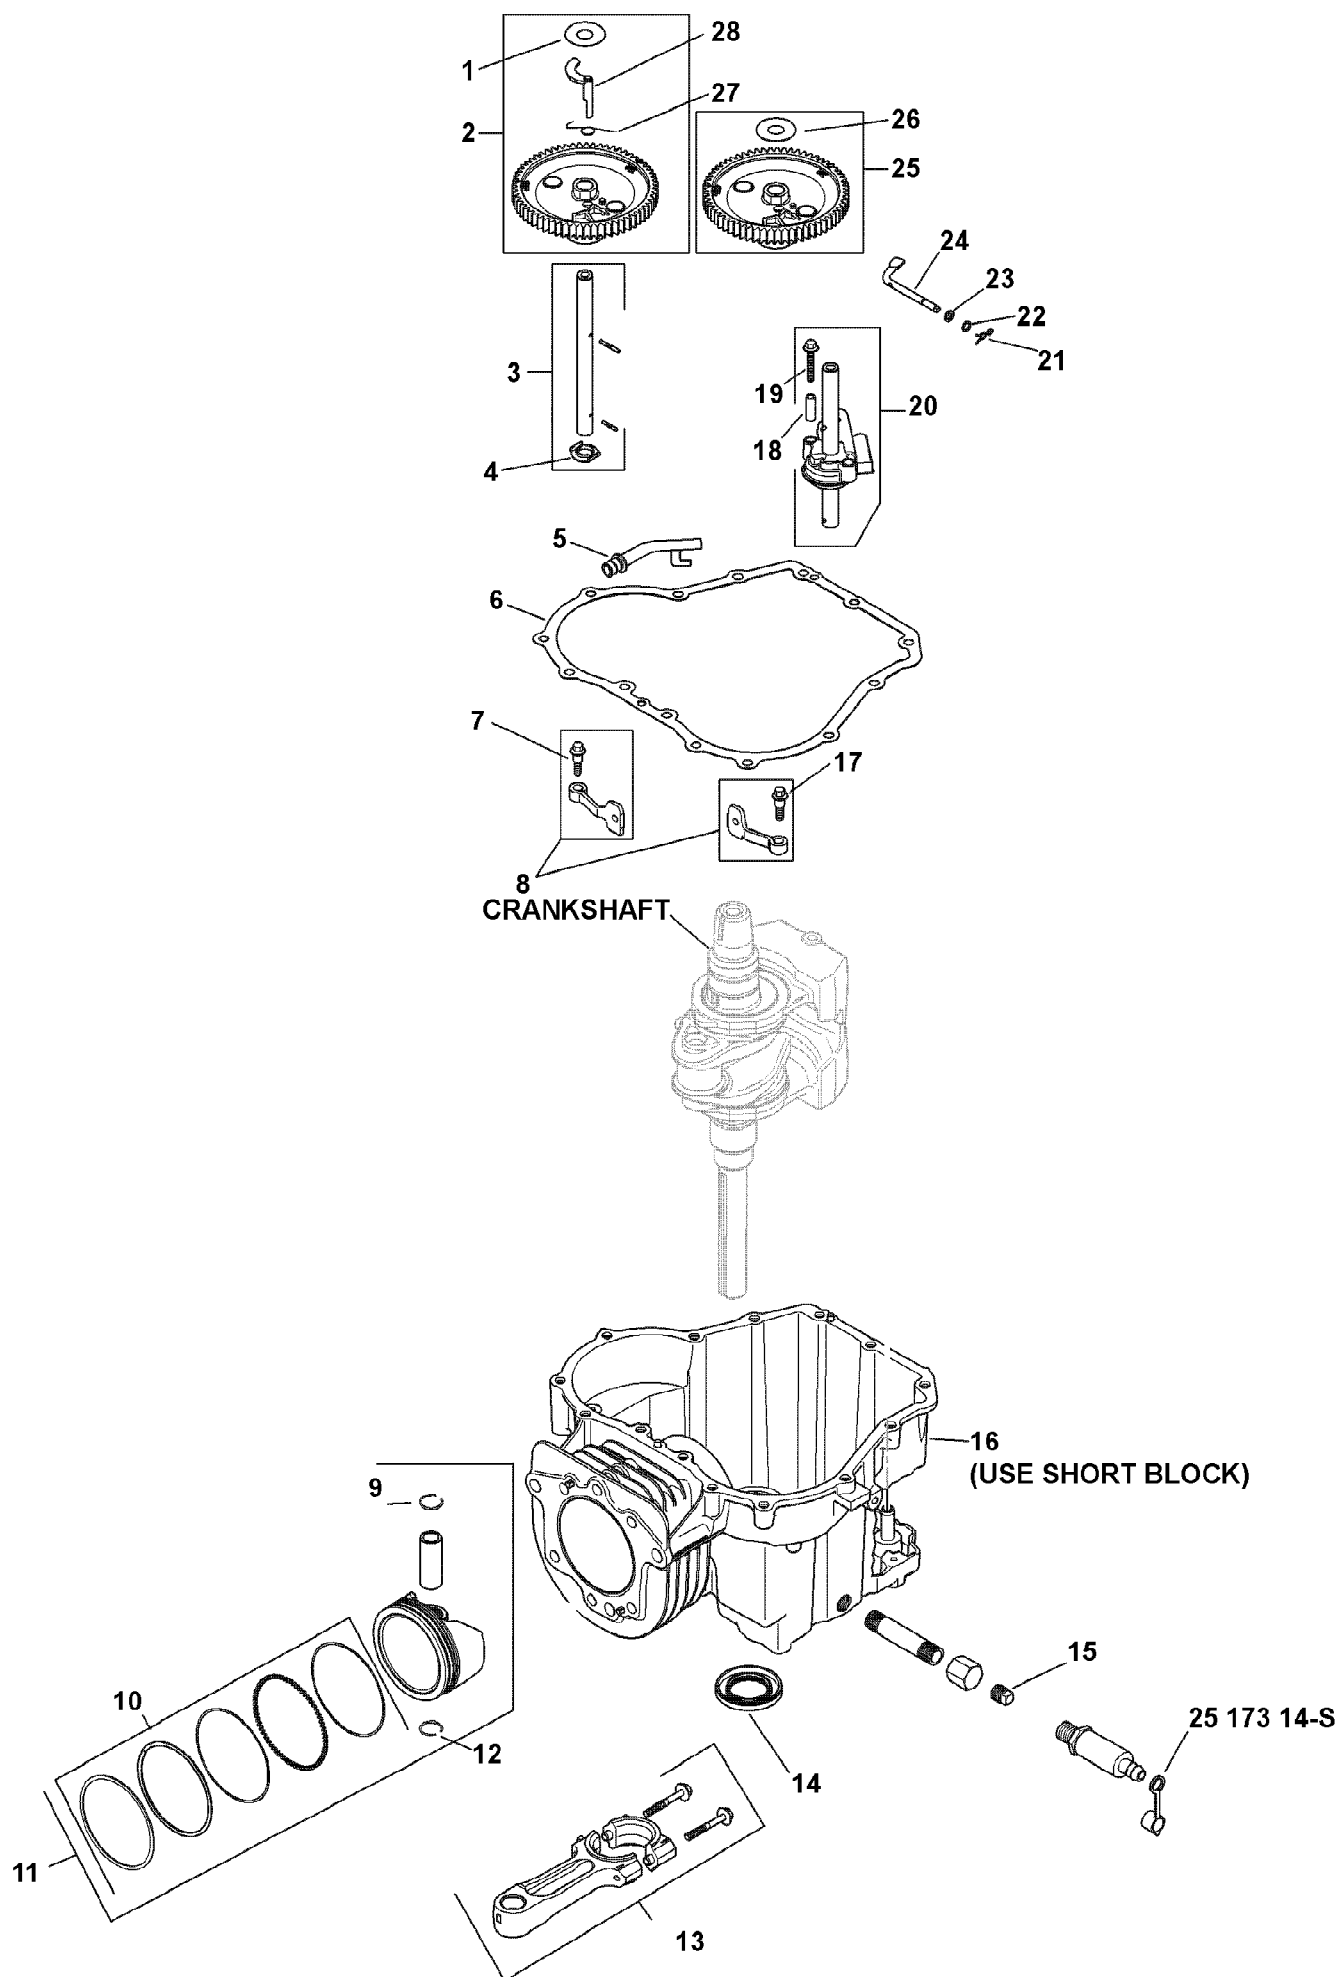

LT1042 Tractor (2008 & after)
Kohler SV600-0217 Crankcase

Page 38 of 71


Ref #	Part Number	Qty	S/P/F	Description
1	KH-20-468-03-S	1		Washer, Thrust -Acr
2	KH-20-010-04-S	1	/P	Kit, Camshaft Assembly (Incl. Ref No. 1, 27 & 28)
3	KH-20-144-11-S	1	/P	Kit,Cam Center Shaft (Exhaust)
4	KH-20-468-08-S	1		Washer, Thrust (Incl. Ref No. 4)
5	KH-20-123-02-S	1		Tube, Drainback
6	KH-20-041-01-S	1	/P	Gasket, Closure Plate
7	KH-20-086-06-S	2	/P	Screw, Shd Thd Frm M6X1X26
8	KH-20-090-01-S	2		Kit, Cam Lever Assembly (Incl. Ref No. 7 & 17)
9	KH-62-018-04-S	2		Retainer, Piston Pin
10	KH-20-108-04-S	1	/P	Ring Set (94Mm)
11	KH-20-874-09-S	1		Kit, Piston W/Ring Set (94Mm) (Incl. Ref No. 9, 10 & 12)
12	KH-62-018-04-S	1		Retainer, Piston Pin
13	KH-20-067-05-S	1		Rod, Connecting Assembly
14	KH-20-032-01-S	1	/P	Seal, Oil
15	KH-25-139-57-S	1	/P	Plug, Sq Hd Pipe 3/8"
16	N/A	1		Crankcase (Use Short Block)
16	KH-20-522-05	1	/P	Short Block
17	KH-20-086-06-S	1	/P	Screw, Shd Thd Frm M6X1X26
18	KH-20-112-02-S	2		Spacer, Oil Pump Screw
19	KH-20-086-13-S	2		Screw, Oil Pump
20	KH-20-393-02-S	1		Kit, Oil Pump Assembly (Incl. Ref No. 18 & 19)
21	KH-12-154-05	1		Clip, Hitch Pin
22	KH-X-25-102-S	1	/P	Washer, Flat 1/4"
23	KH-M-631015	1	/P	Washer, Flat 6 Mm
24	KH-20-144-02-S	1		Shaft, Governor Cross
25	KH-20-010-04-S	1	/P	Kit, Camshaft Assembly (Incl. Ref No. 26)
26	KH-20-468-03-S	1		Washer, Thrust -ACR
27	KH-20-089-06-S	1		Spring, ACR
28	KH-20-044-16-S	1		Weight, ACR
	KH-20-755-05-S	1	/P	Overhaul Gasket Kit Not Shown

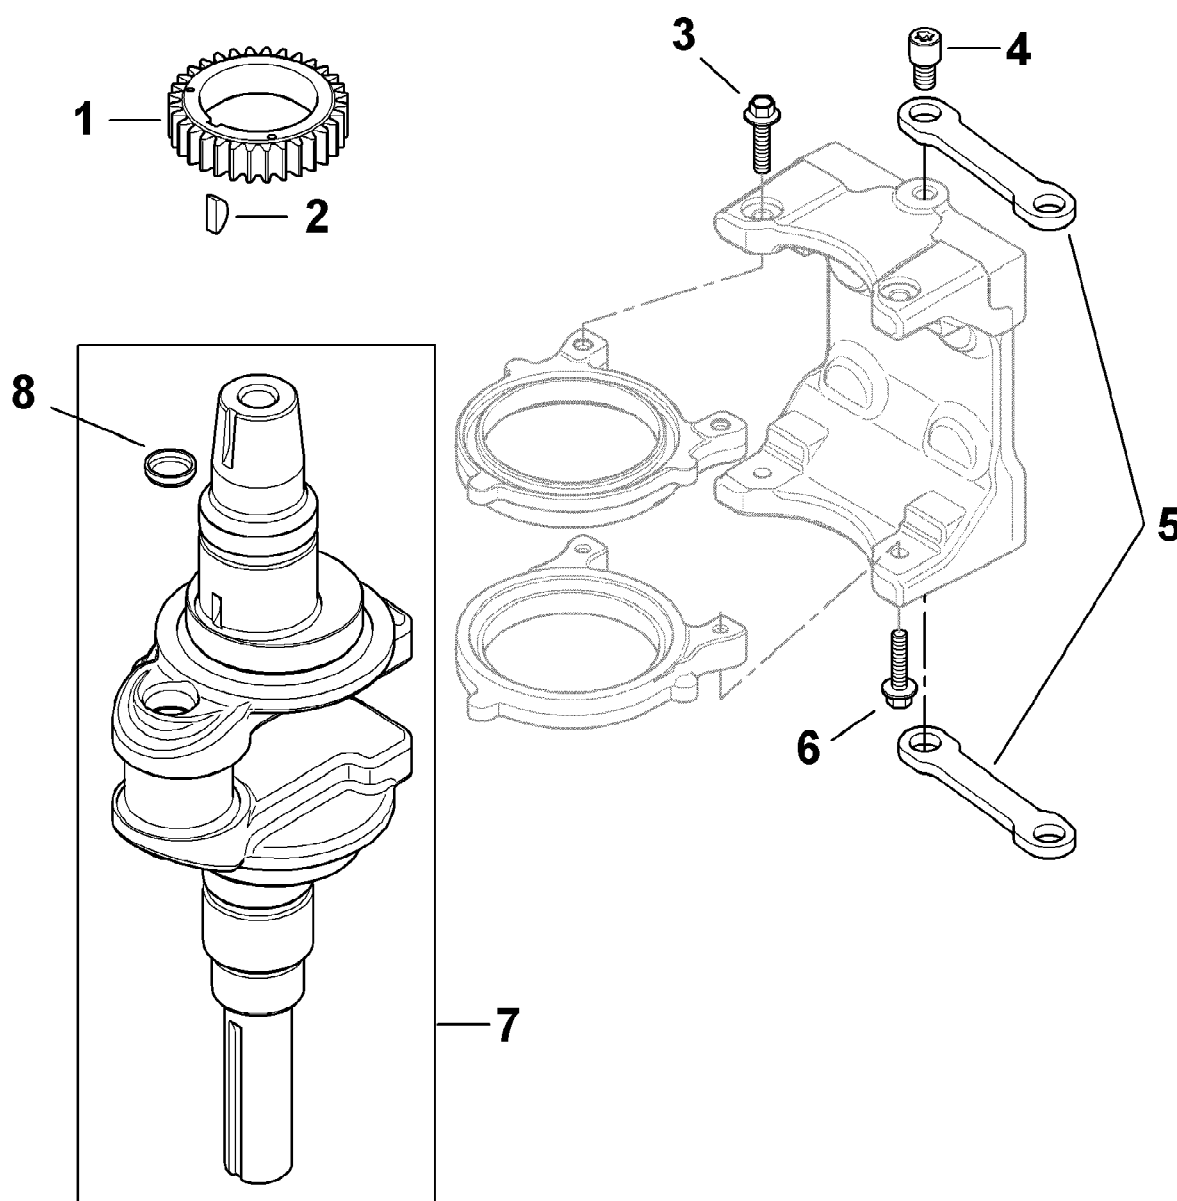

LT1042 Tractor (2008 & after)
Kohler SV600-0217 Crankshaft

Page 40 of 71


Ref #	Part Number	Qty	S/P/F	Description
1	KH-20-043-15-S	1		Gear, Crankshaft
2	KH-X-42-15	1	/P	Key, 3/16" X 5/8"
3	KH-25-086-137-S	4		Screw, Flg M6X1.0X25 - Discontinued
4	KH-25-086-214-S	1		Screw, Link Pivot
5	KH-20-186-04-S	2	/P	Linkage, Balance Weight
6	KH-25-086-213-S	1		Screw, Shoulder
7	KH-20-014-38-S	1	/P	Kit, Crankshaft Assembly (Incl. Ref No. 8)
8	KH-25-139-27-S	1		Plug, Cup

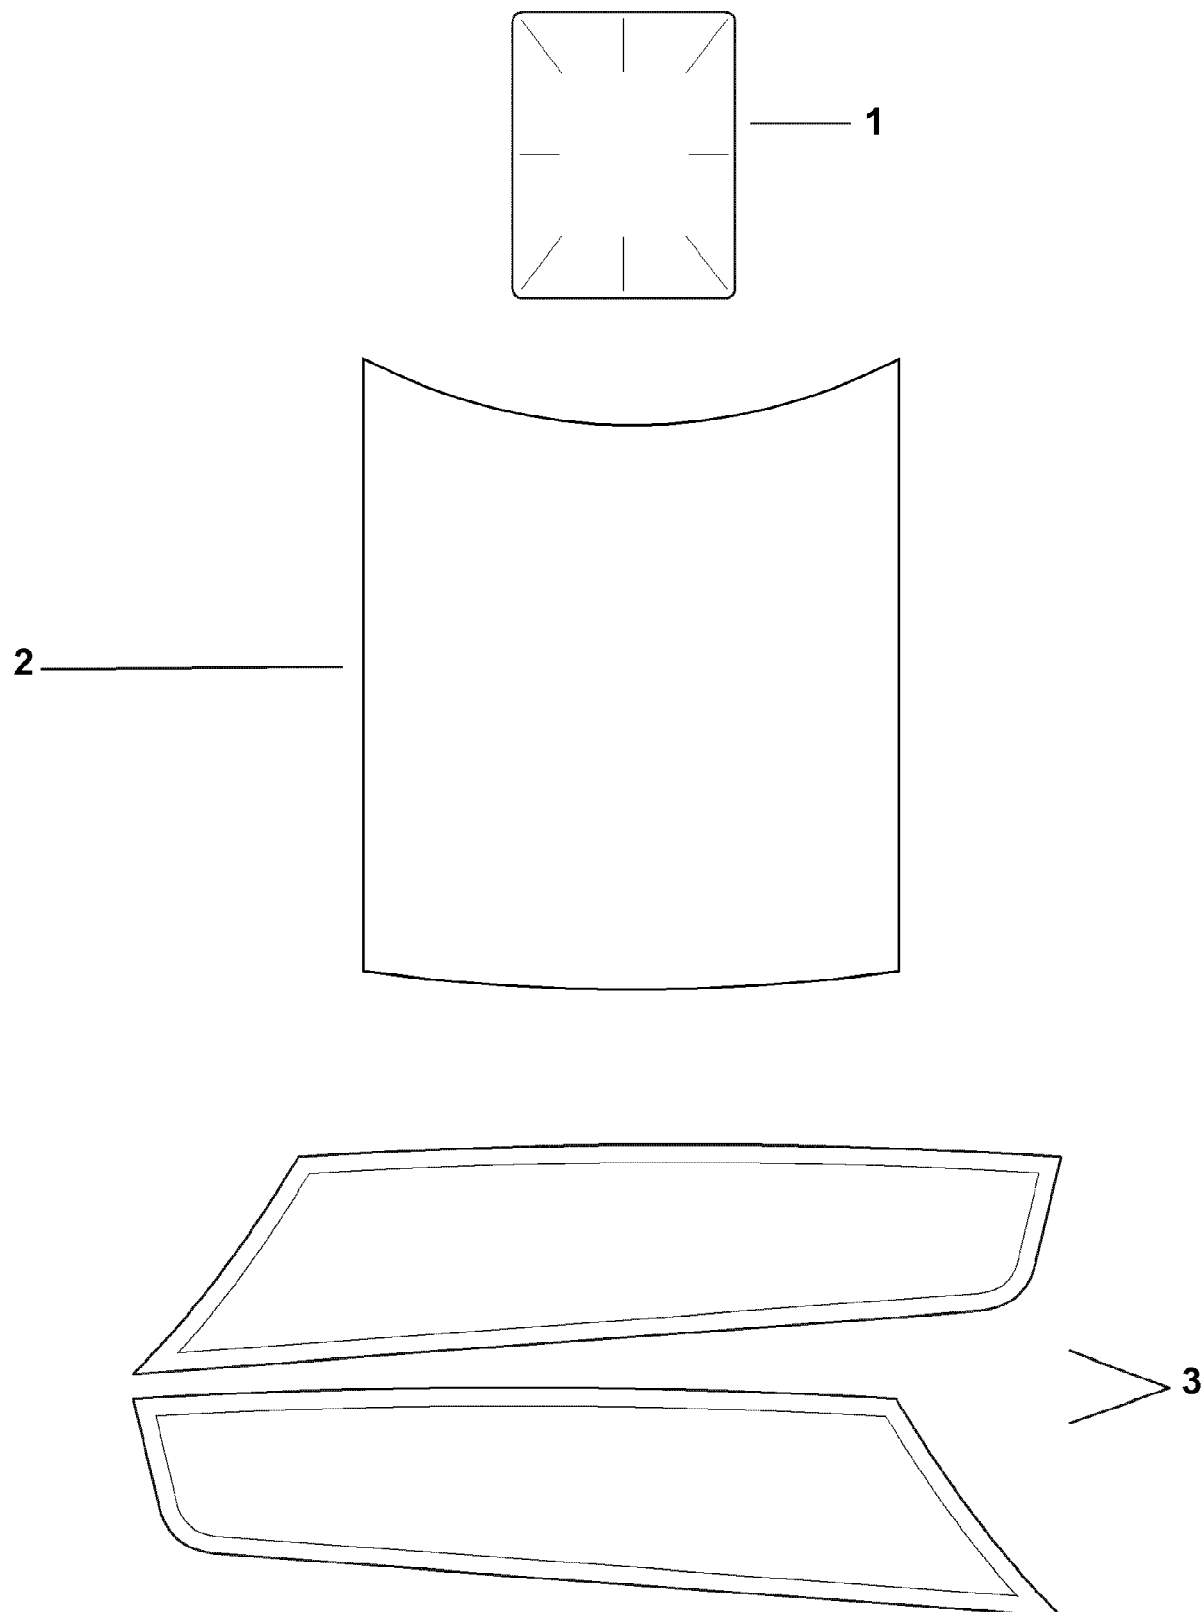

LT1042 Tractor (2008 & after)
Kohler SV600-0217 Decals

Page 42 of 71

Ref #	Part Number	Qty	S/P/F	Description
1	KH-25-113-39-S	1		Decal, Clear Laminate
2	KH-20-113-53-S	1		Decal, 20Hp
3	KH-20-113-54-S	1	/P	Decal, Wing Set

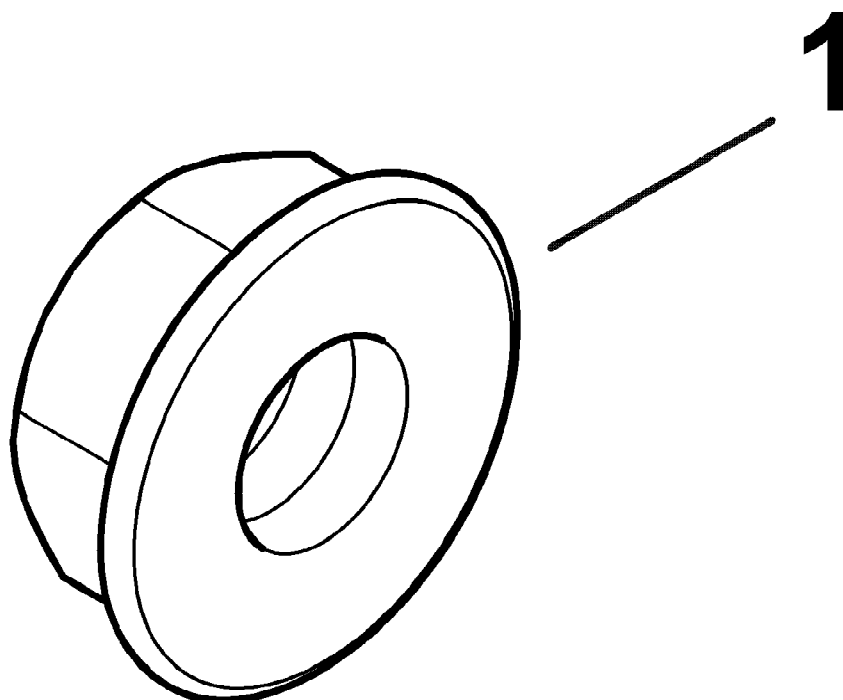


LT1042 Tractor (2008 & after)
Kohler SV600-0217 Engine Accessories

Page 44 of 71

Ref #	Part Number	Qty	S/P/F	Description
1	KH-12-100-07	1		Nut, Hex Flg 1/4-20"
	KH-SV600-0217	1	/P	Engine Assembly Not shown

LT1042 Tractor (2008 & after)
Kohler SV600-0217 Engine Controls


Page 45 of 71

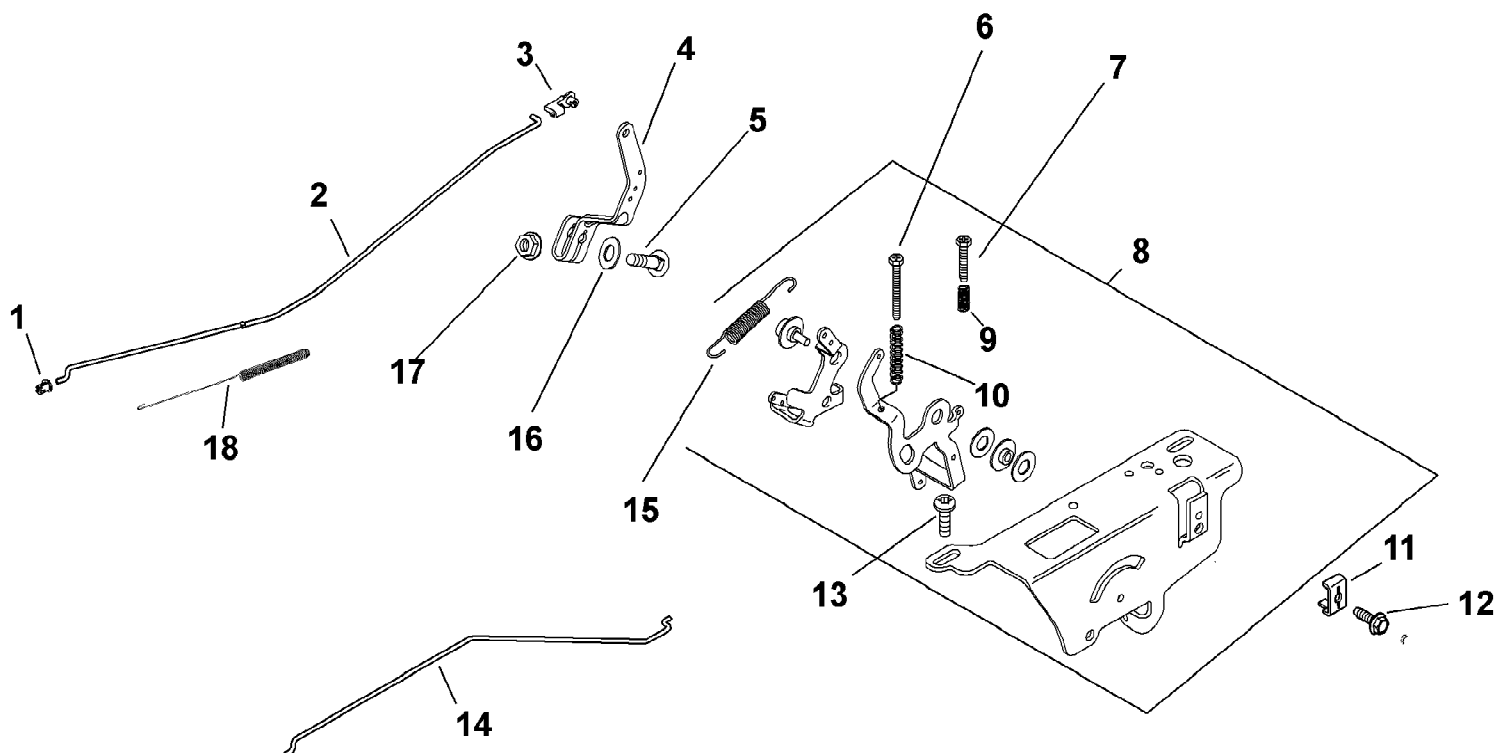

LT1042 Tractor (2008 & after)
Kohler SV600-0217 Engine Controls

Page 46 of 71

Ref #	Part Number	Qty	S/P/F	Description
1	KH-25-158-08	1	/P	Bushing, Linkage Retaining
2	KH-20-079-07-S	1	/P	Linkage
3	KH-25-158-11	1	/P	Bushing, Throttle Linkage
4	KH-20-090-02-S	1	S	Lever, Governor - Use 20 090 11-S
5	KH-52-211-04	1		Bolt, Rd Hd Sq Nck 1/4-20X1"
6	KH-20-086-18-S	1		Screw, Phl Thd Frm M4X0.7X38
7	KH-20-086-10-S	1		Screw, Phl Thd Frm M4X0.7X25
8	KH-20-536-06-S	1		Kit, Speed Control Assembly (Incl. Ref No. 6,7,9,10,13 & 15)
9	KH-12-089-11	1	S	Spring, Speed Control (Short)
10	KH-20-089-12-S	1		Spring, Speed Control (Long)
11	KH-12-237-01	1		Clamp, Cable
12	KH-M-545016-S	1	/P	Screw, Flg Thd Frm M5X0.8X16
13	KH-M-664020-S	1		Screw, Lbd Skt M6X1.0X20
14	KH-20-079-05-S	1		Linkage, Choke
15	KH-20-089-11-S	1	/P	Spring, Governor
16	KH-X-22-11	1		Washer, Int Tooth Lock 1/4"
17	KH-12-100-07	1		Nut, Hex Flg 1/4-20"
18	KH-20-089-10-S	1		Spring, Linkage

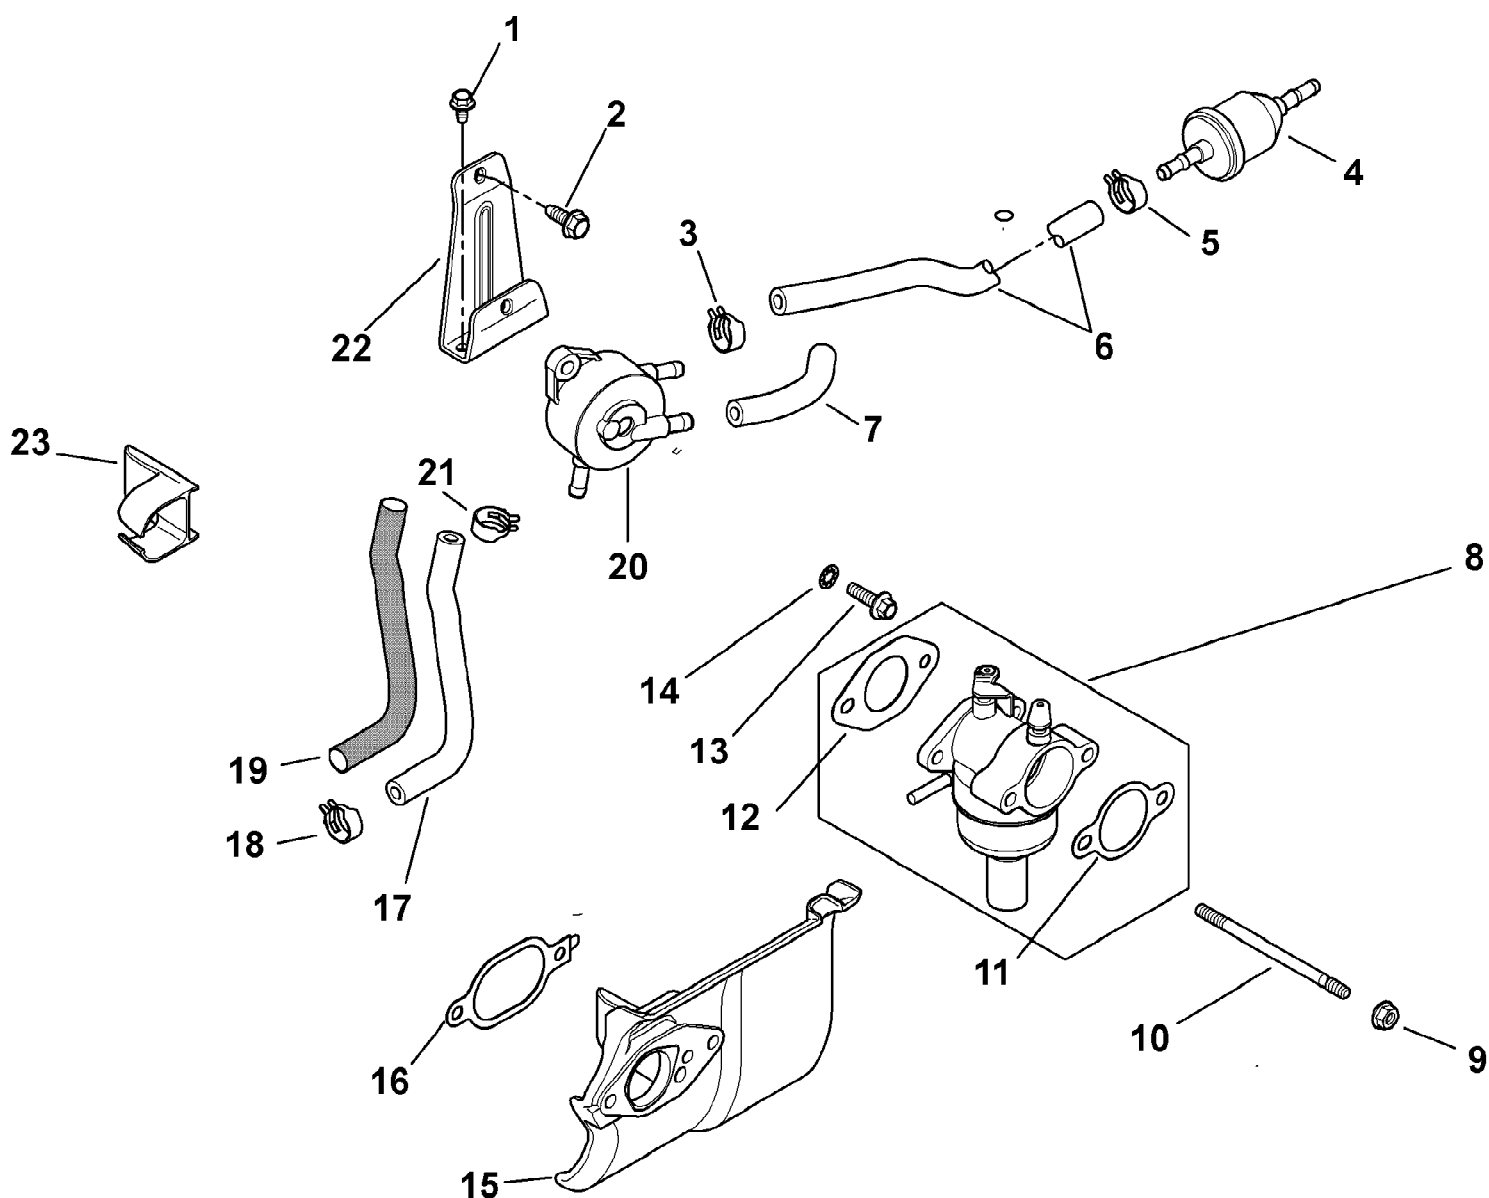


LT1042 Tractor (2008 & after)
Kohler SV600-0217 Fuel System

Page 48 of 71

Ref #	Part Number	Qty	S/P/F	Description
1	KH-M-0545010	2	/P	Screw, Flg Thd Frm M5X.8X10
2	KH-M-645016-S	2	/P	Screw, Flg Thd Frm M6X1.0X16
3	KH-25-237-14-S	6	/P	Clamp, Hose 1/2"
4	KH-25-050-22-S1	1	/P	Filter, Fuel
5	KH-25-237-14-S	6	/P	Clamp, Hose 1/2"
6	KH-25-111-34-S	2		Line, Fuel (24"-Cut To Length)
7	KH-25-111-34-S	2		Line, Fuel (24"-Cut To Length)
8	KH-20-853-33-S	1	/P	Carb Kit (Incl. Ref No. 11 & 12)
9	KH-M-641060-S	2	/P	Nut, Flg M6X1.0
10	KH-20-072-05-S	2		Stud, M6X1.0X100
11	KH-12-041-02	1	/P	Gasket, Air Cleaner Base
12	KH-12-041-01	1	/P	Gasket, Carburetor
13	KH-M-651020-S	1		Screw, Flg M6X1.0X20
14	KH-X-22-11	1		Washer, Int Tooth Lock 1/4"
15	KH-20-265-09-S	1	/P	Heat Kit
16	KH-20-041-17-S	1	/P	Gasket
17	KH-25-111-34-S	2		Line, Fuel (24"-Cut To Length)
18	KH-25-237-14-S	6	/P	Clamp, Hose 1/2"
19	KH-25-431-12-S	1		Sleeve, Fuel Line
20	KH-24-393-16	1	/P	Pump, Fuel
21	KH-25-237-14-S	6	/P	Clamp, Hose 1/2"
22	KH-20-126-02-S	1		Bracket, Fuel Pump Mounting
23	KH-20-332-01-S	1		Insert, Intake Port
	KH-25-454-05-S	1		Tie Not Shown

LT1042 Tractor (2008 & after)
Kohler SV600-0217 Head, Valve & Breather

Page 49 of 71

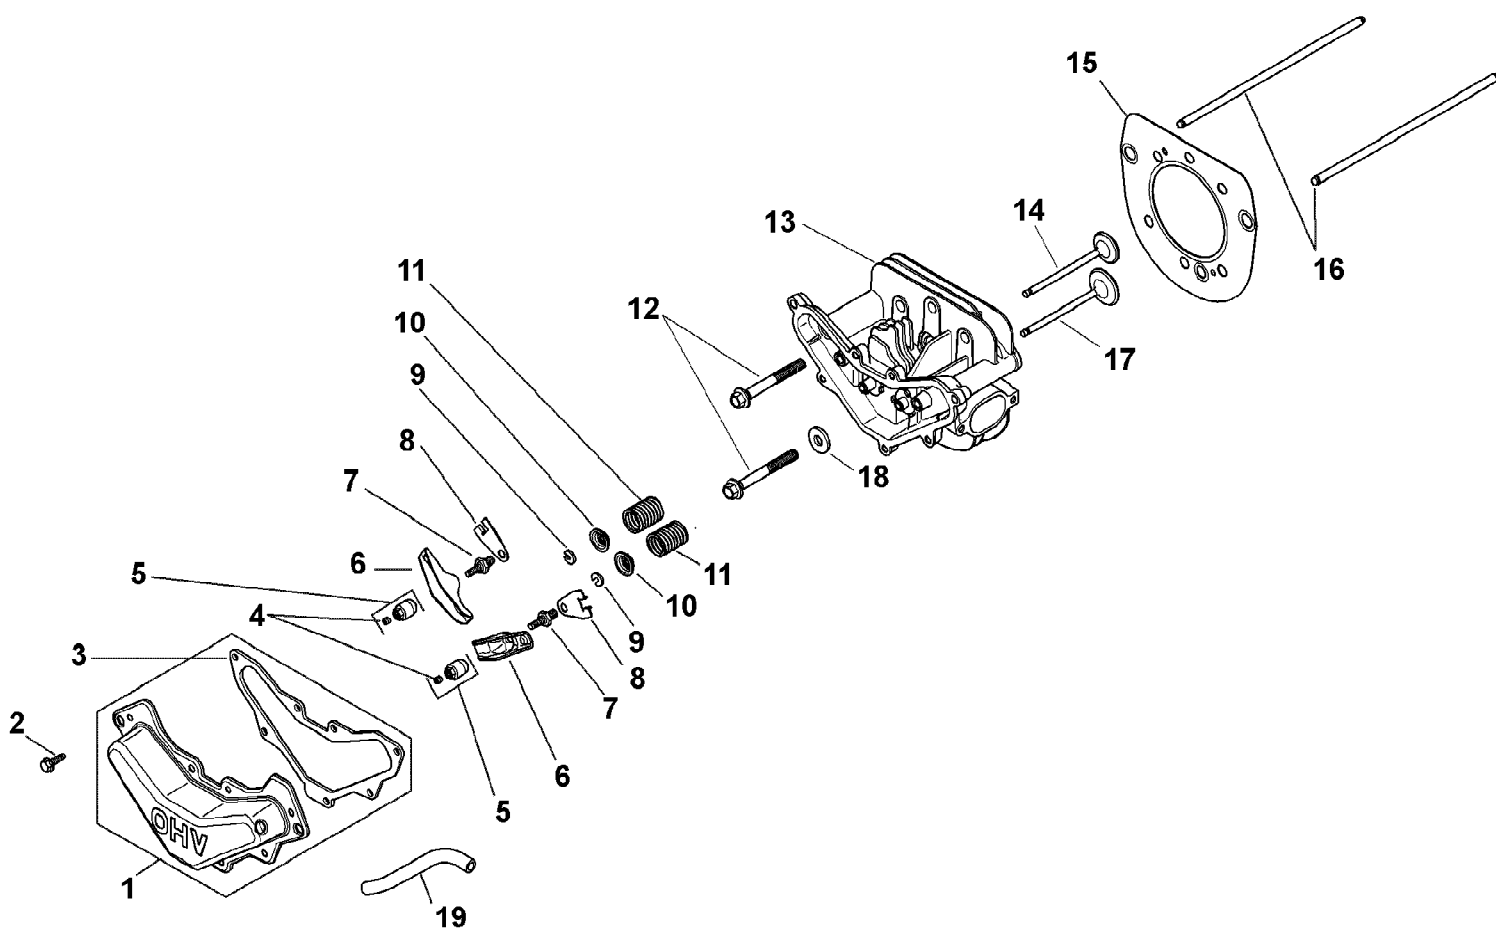


LT1042 Tractor (2008 & after)
Kohler SV600-0217 Head, Valve & Breather

Page 50 of 71

Ref #	Part Number	Qty	S/P/F	Description
1	KH-20-096-07-S	1	S	Kit, Valve Cover (Incl. Ref No. 3)
2	KH-M-645020-S	1	/P	Screw, Flg Thd Frm M6X1.0X20
3	KH-20-041-13-S	1	/P	Gasket, Valve Cover
4	KH-20-086-04-S	1		Screw, Set
5	KH-20-599-04-S	1	/P	Rocker Pivot Assembly (Incl. Ref No. 4)
5	KH-20-599-04-S	1	/P	Kit Pivot, Rocker Arm (Incl. Ref No. 4)
6	KH-20-186-01-S	1		Arm, Rocker
7	KH-20-072-08-S	1	/P	Stud, Rocker
8	KH-20-146-03-S	1		Plate, Push Rod Guide
9	KH-20-062-01-S	1	/P	Lock, Retainer
10	KH-20-173-01-S	1	/P	Cap, Valve Spring
11	KH-20-089-03-S	1		Spring, Valve
12	KH-20-086-02-S	1	/P	Screw, Flg M10X1.5X80
13	KH-20-318-11-S	1	/P	Kit, Cylinder Head (Incl. KH-25-086-87-S, KH-X-21-1-S - Not Shown)
14	KH-20-016-01-S	1	/P	Valve, Exhaust
15	KH-20-841-01-S	1	/P	Kit, Cylinder Head Gasket (Incl. Ref No. 3, 12, 18 & All items Not Shown Below)
16	KH-20-411-04-S	1	/P	Rod, Push
17	KH-20-017-01-S	1		Valve, Intake
18	KH-12-468-05	1		Washer, Flat 13/32"
19	KH-20-326-20-S	1	/P	Hose, Breather
	KH-12-041-01	1	/P	Gasket, Carburetor Not Shown, Included in Ref No. 15
	KH-12-041-02	1	/P	Gasket, Air Cleaner Base Not Shown, Included in Ref No. 15
	KH-20-041-12-S	1	/P	Gasket, Exhaust Not Shown, Included in Ref No. 15
	KH-20-041-17-S	1	/P	Gasket, Heat Deflector Not Shown, Included in Ref No. 15
	KH-20-041-18-S	1		Gasket, Heat Deflector Not Shown, Included in Ref No. 15
	KH-25-086-87-S	1	/P	Screw, Hex Socket Head Cap Not Shown, Included in Ref No. 15
	KH-X-21-1	1		Washer, Spring Lock 5/16" Not Shown, Included in Ref No. 15

LT1042 Tractor (2008 & after)
Kohler SV600-0217 Ignition & Electrical


Page 51 of 71

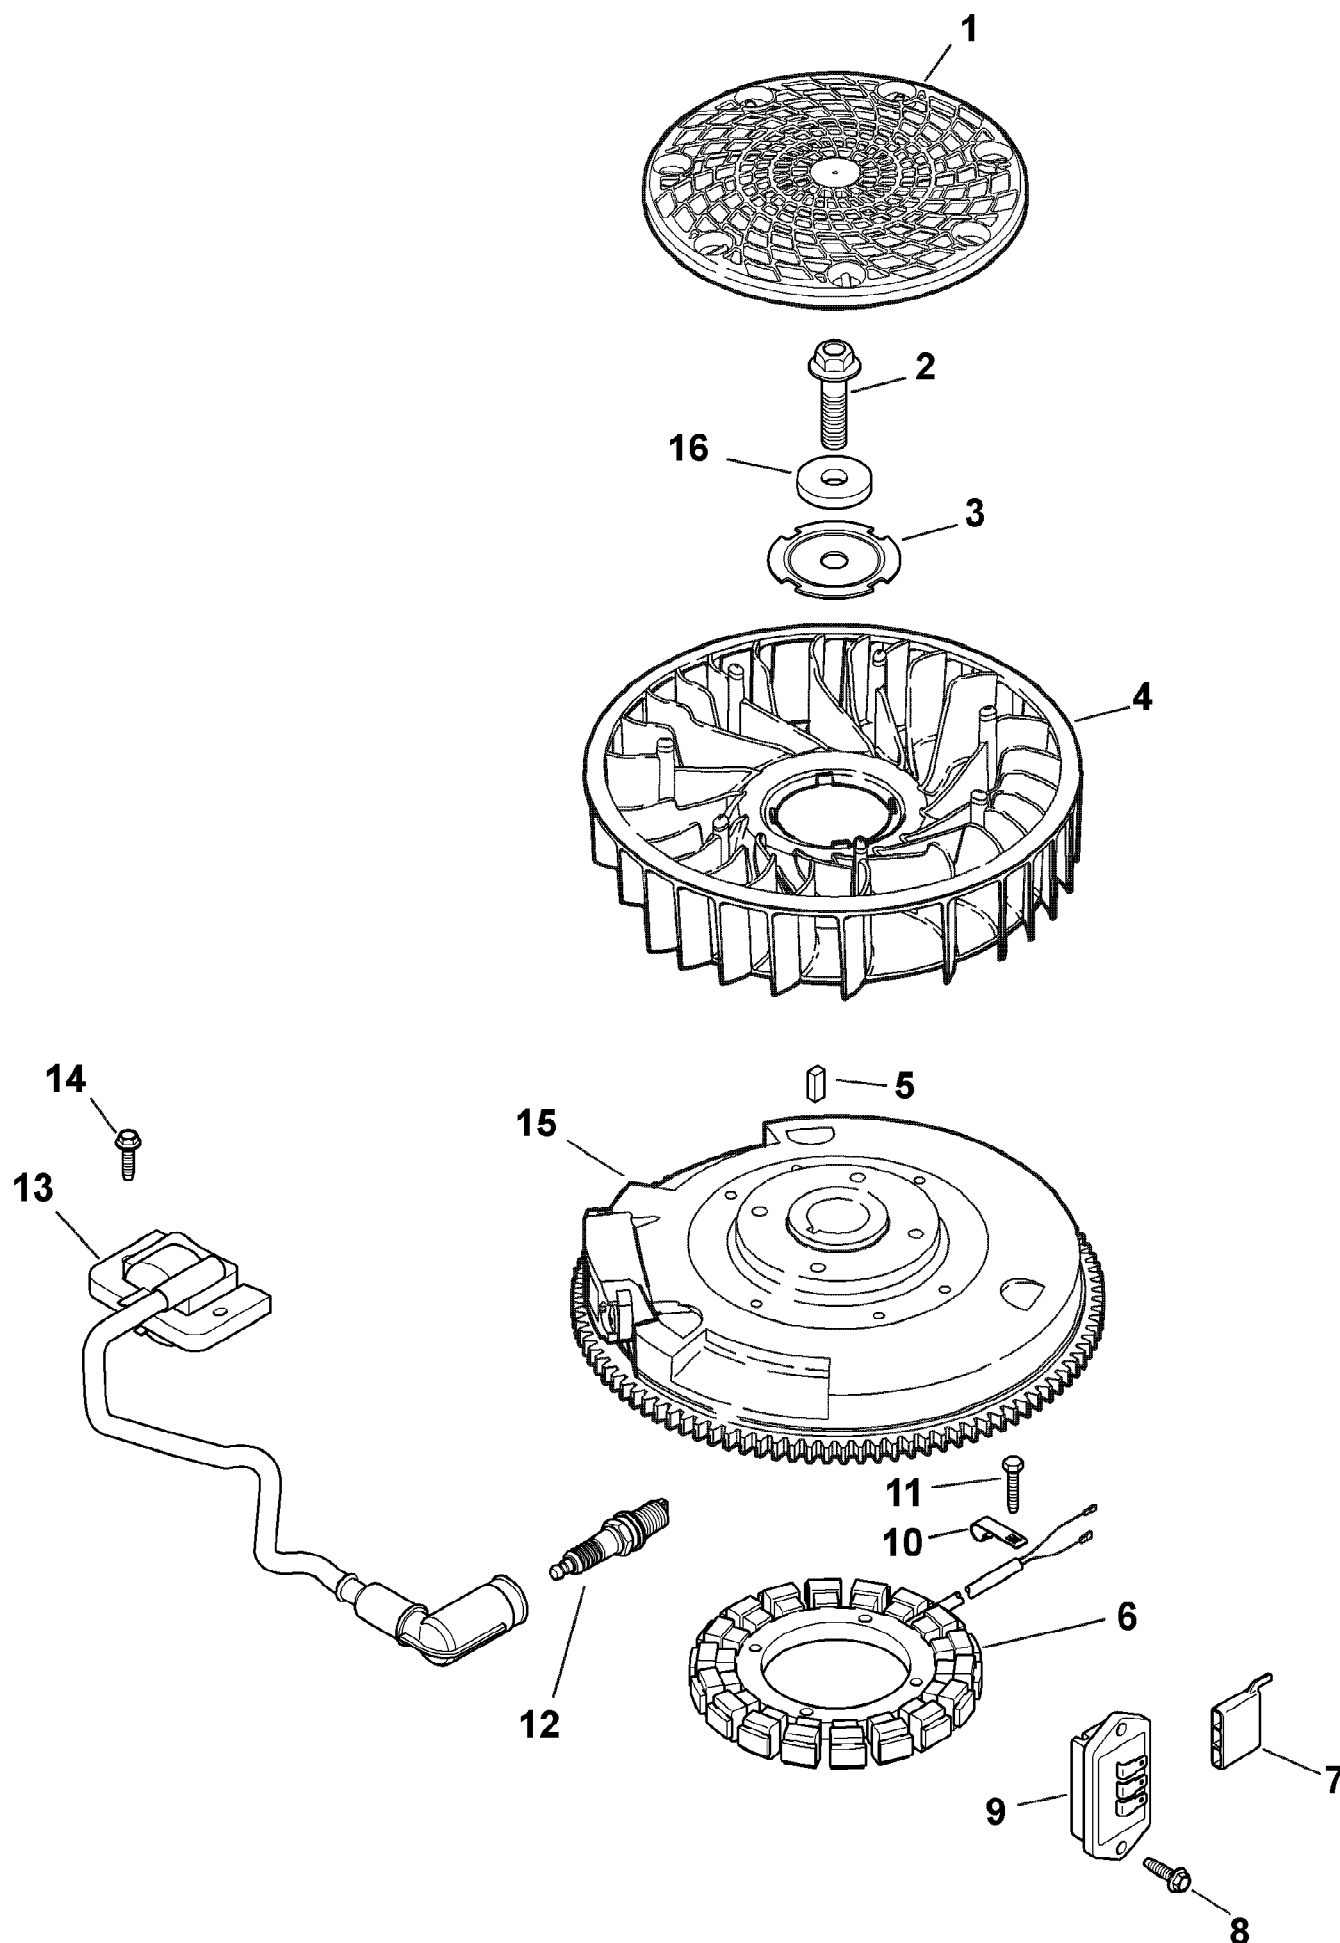

LT1042 Tractor (2008 & after)
Kohler SV600-0217 Ignition & Electrical

Page 52 of 71


Ref #	Part Number	Qty	S/P/F	Description
1	KH-20-162-02-S	1		Screen, Grass
2	KH-25-086-125-S	1		Screw, Hex Flange
3	KH-20-146-05-S	1	/P	Plate, Fan Mounting
4	KH-20-157-01-S	1		Fan
5	KH-25-340-02-S	1		Key, Straight Flywheel
6	KH-237878	1	/P	Kit, 15 Amp Stator (Incl. KH-25-452-01-S - Not Shown)
7	KH-25-155-41-S	1	/P	Connect0R
8	KH-M-545020-S	4		Screw, Flg Thd Frm M5X.8X20
9	KH-41-403-10-S	1	/P	Regulator/Rectifier
10	KH-20-154-04-S	1		Clip, Wire
11	KH-M-548025-S	2	/P	Screw, Thd Frm M5X0.8X25
12	759-3336	1	/P	Plug, Spark (Std)
13	KH-20-584-03-S	1	/P	Module, Ignition (Cdi Fixed)
14	KH-M-545020-S	4		Screw, Flg Thd Frm M5X.8X20
15	KH-20-025-40-S	1	/P	Flywheel
16	KH-25-468-09-S	1		Washer, Flat
	KH-20-176-16-S	1		Harness, Wiring Not Shown
	KH-25-452-01-S	2		Terminal Not Shown
	KH-25-454-05-S	1		Tie Not Shown
	KH-20-237-01-S	1		Clamp, Cable Not Shown

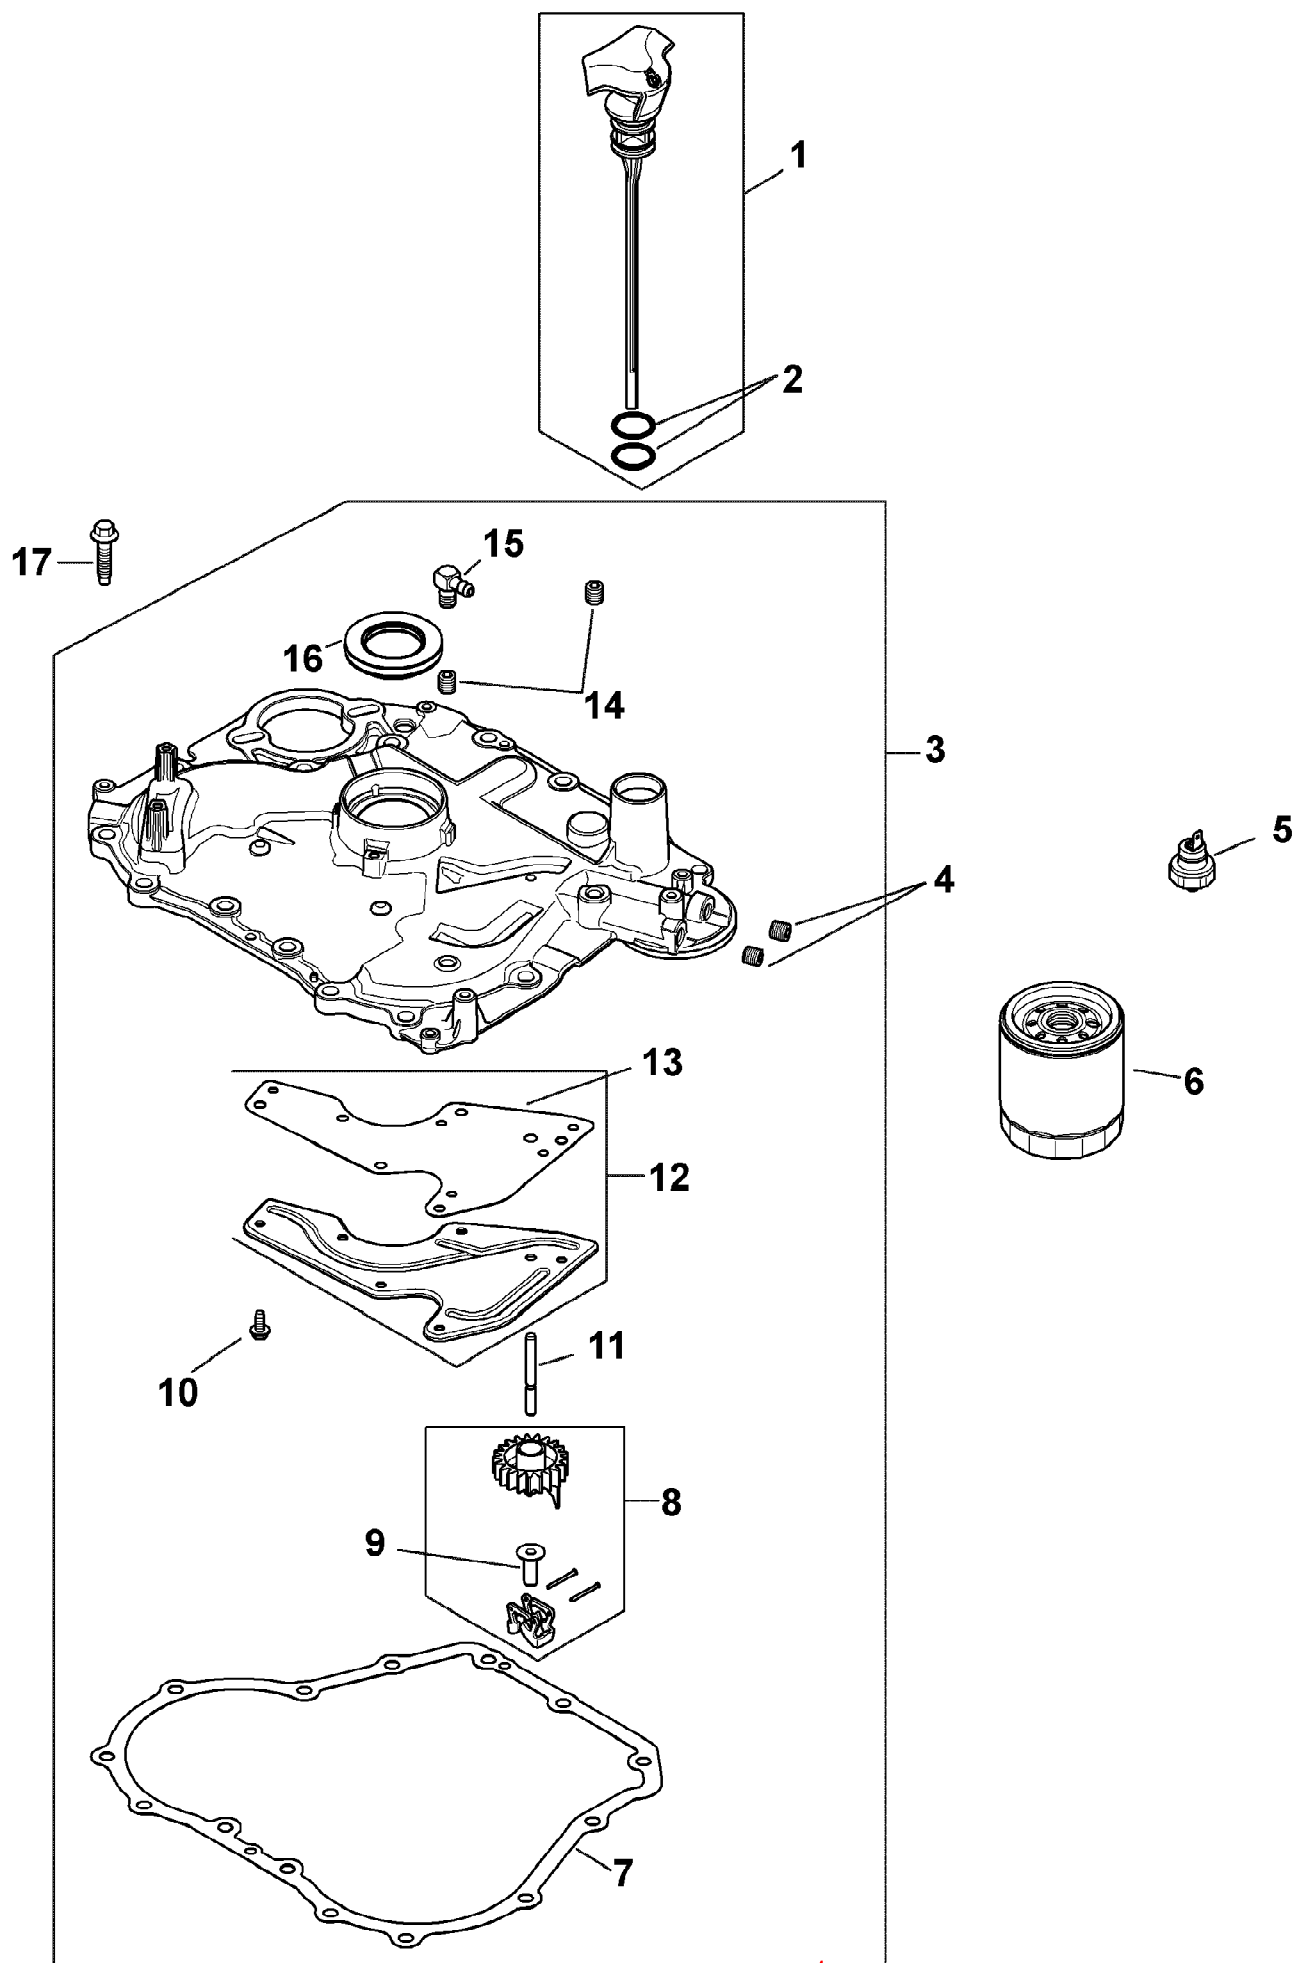

LT1042 Tractor (2008 & after)
Kohler SV600-0217 Oil Pan & Lubrication

Page 54 of 71

Ref #	Part Number	Qty	S/P/F	Description
1	KH-20-040-07-S	1	S	Dipstick Assembly-Gold (Incl. Ref No. 2)
2	KH-20-153-01-S	1		O-Ring
3	KH-20-009-10-S	1	/P	Kit, Closure Plate Assembly (Before S/N 3531400001) (Incl. Ref No. 7,8,9,10,11,12,13,14,15 & 16)
3	KH-20-009-30-S	1		Closure Plate Assembly (After S/N 3531400011) (Incl. Ref No. 7,8,9,10,11,12,13,14,15 & 16)
4	KH-25-139-60-S	1	/P	Plug, Ctsk Pipe 1/8"
5	KH-25-099-27-S	1	/P	Switch, Oil Pressure
6	KH-25-050-25-S	1	/P	Filter, Oil
7	KH-20-041-01-S	1	/P	Gasket, Closure Plate
8	KH-25-310-07-S	1	/P	Governor Gear Assembly (Incl. Ref No. 9)
9	KH-12-380-01	1	/P	Pin, Governor Regulating
10	KH-M-545013-S	1		Screw, Flg Thd Frm M5X0.8X13
11	KH-20-144-03-S	1		Shaft, Governor Cross
12	KH-20-096-02-S	1		Kit, Oil Passage Cover (Incl. Ref No. 13)
13	KH-20-041-02-S	1		Gasket, Oil Passage
14	KH-25-139-60-S	1	/P	Plug, Ctsk Pipe 1/8"
15	KH-25-155-02	1	/P	Connector, 90° Hose
16	KH-20-032-01-S	1	/P	Seal, Oil
17	KH-25-086-127-S	1		Hex Flange Screw, 1/2 Dog Point

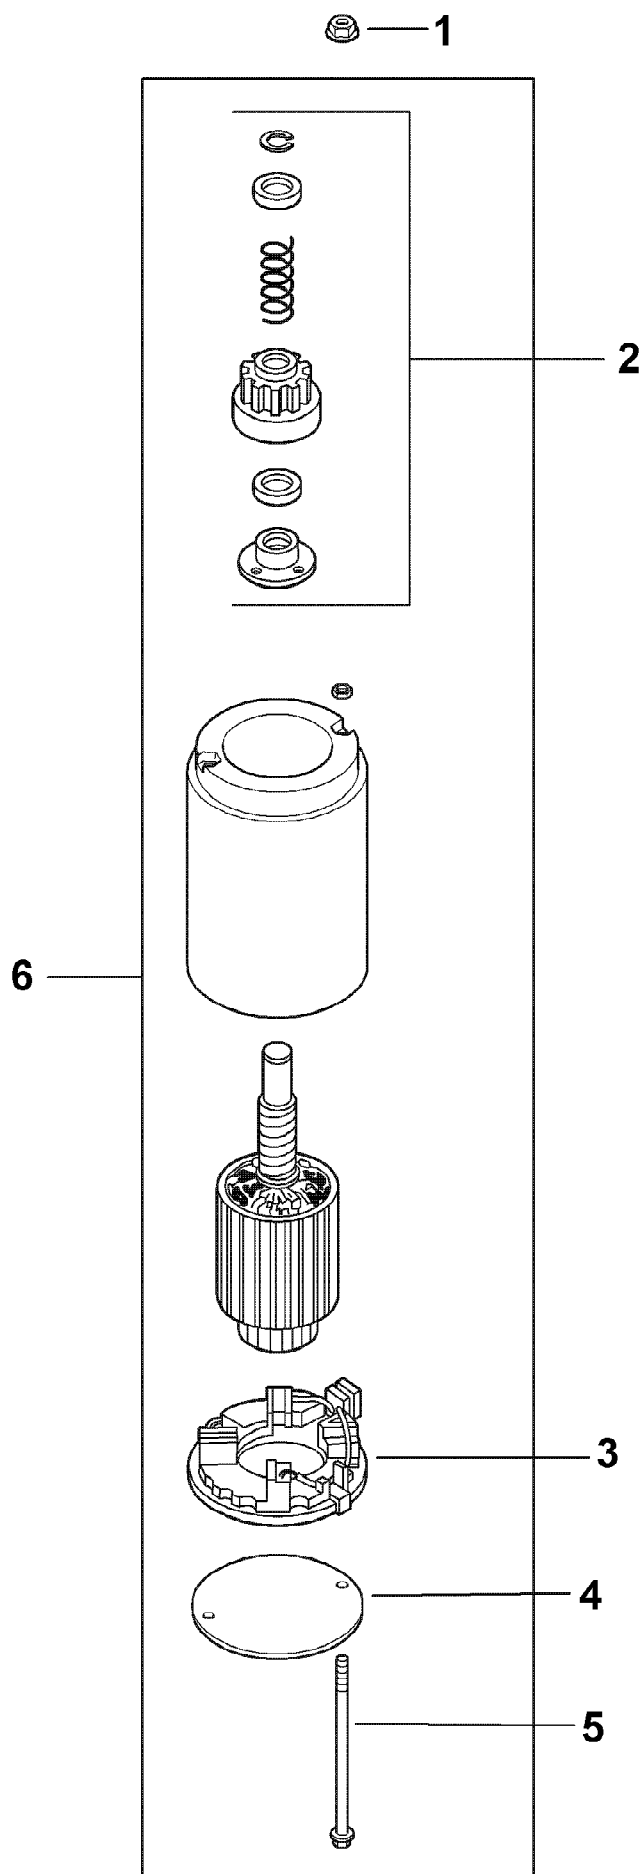

LT1042 Tractor (2008 & after)
Kohler SV600-0217 Starting System

Page 56 of 71

Ref #	Part Number	Qty	S/P/F	Description
1	KH-25-100-31-S	2		Nut, Free Spinning Flg #10-24
2	KH-20-755-12-S	1		Kit, Drive (J.E.)
3	KH-12-221-02-S	1		Brush Kit
4	KH-20-227-01-S	1		Cap, Drive End (J.E.)
5	KH-20-211-02-S	1		Bolt, Thru
6	KH-20-098-05-S	1	S	Starter Assembly (Incl. Ref No. 2,3,4 & 5)


LT1042 Tractor (2008 & after)
Label Map LT1042

Page 58 of 71

Ref #	Part Number	Qty	S/P/F	Description
1	777D10624	1		LABEL-RIDER:DECK WASH CUB
2	777S30018	1	/P	LABEL-DECK SAFETY
3	777I22643	1		LABEL-DECK BELT ROUTE 42"
4	777D11854	1		LABEL-RIDER DECK 42" CUB BLUE
5	777S30503	1	/P	LABEL-DANGER CHUTE
6	777D08730	2		LABEL-MODEL LT1042
7	777X42978	1		LABEL-PARTS LIST LT1042
8	777I22679	1		LABEL-CHECK ENG OIL
9	777I22240	1		LABEL-HYDRO ENGAGE
10	777D10279	1		LABEL-REAR FENDER
11	777I20310	1		LABEL-SEAT ADJUSTE
12	777S32531	1		LABEL-FRAME COVER
13	777I22452	1		LABEL-DASH PANEL
14	777I22241	1		LABEL-FUEL LEVEL
15	777D09704	1		LABEL-RGT SIDE HOOD
16	777D09703	1		LABEL-LFT SIDE HOOD

LT1042 Tractor (2008 & after) Lift Assembly

Page 59 of 71

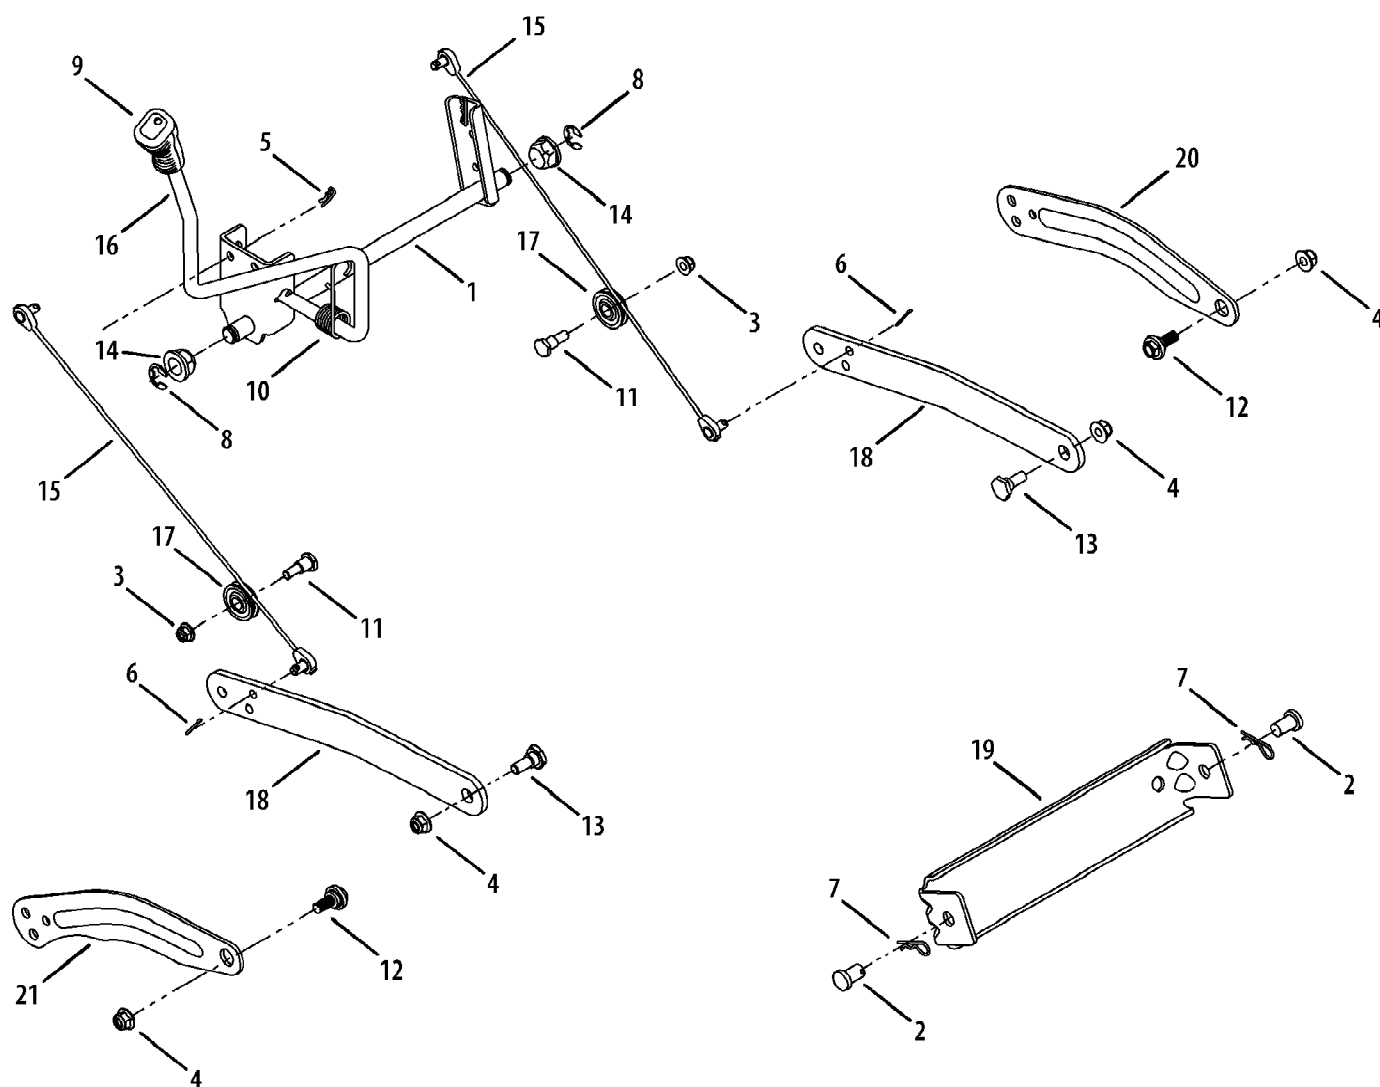


LT1042 Tractor (2008 & after)
Lift Assembly

Page 60 of 71

Ref #	Part Number	Qty	S/P/F	Description
1	683-04223	1	S	Shaft Assembly, Lift
2	711-0332	1	S	Pin, Clevis, .50 Dia x .78 Lg
3	712-04063	1	/P	Nut, Nylon Lock, 5/16-18, Gr5
4	712-04065	1	/P	Nut, Nylon Lock, 3/8-16
5	714-0104	1	S	Pin, Cotter, .072 Dia. x 1.13 Lg
6	714-0111	1	S	Pin, Cotter, 3/32, 1.0
7	714-04023	1	S	Pin, Click, .092 x 1.64 Lg
8	716-0106A	1		E-ring, .625 Dia. Shaft
9	720-0311	1		Grip, Handle
10	732-0874	1	/P	Spring, Torsion
11	738-0138A	1	/P	Screw, Hex Cap, 5/16-18x.620 Gr2
12	738-04130	1		Shoulder Screw, 3/8-16 (42-inch Deck)
13	738-0380	1	S	Shldr. Screw, 3/8-16 (46 & 50-inch Deck)
14	741-0225	1	S	Bearing, Hex Flange
15	746-0968	1		Cable, Lift, 16.16 Lg
16	747-04447	1		Handle, Lift
17	756-1154	1		Pulley, Roller
18	783-05546	1	S	Arm, Lift (46- and 50-inch Decks)
19	783-0720A	1	S	Bracket, Deck (50-inch Decks)
20	783-04711	1		LH Arm, Lift (42-inch Deck)
21	783-04494	1		RH Arm, Lift (42-inch Deck)

LT1042 Tractor (2008 & after)
Mower Deck 42-Inch

Page 61 of 71

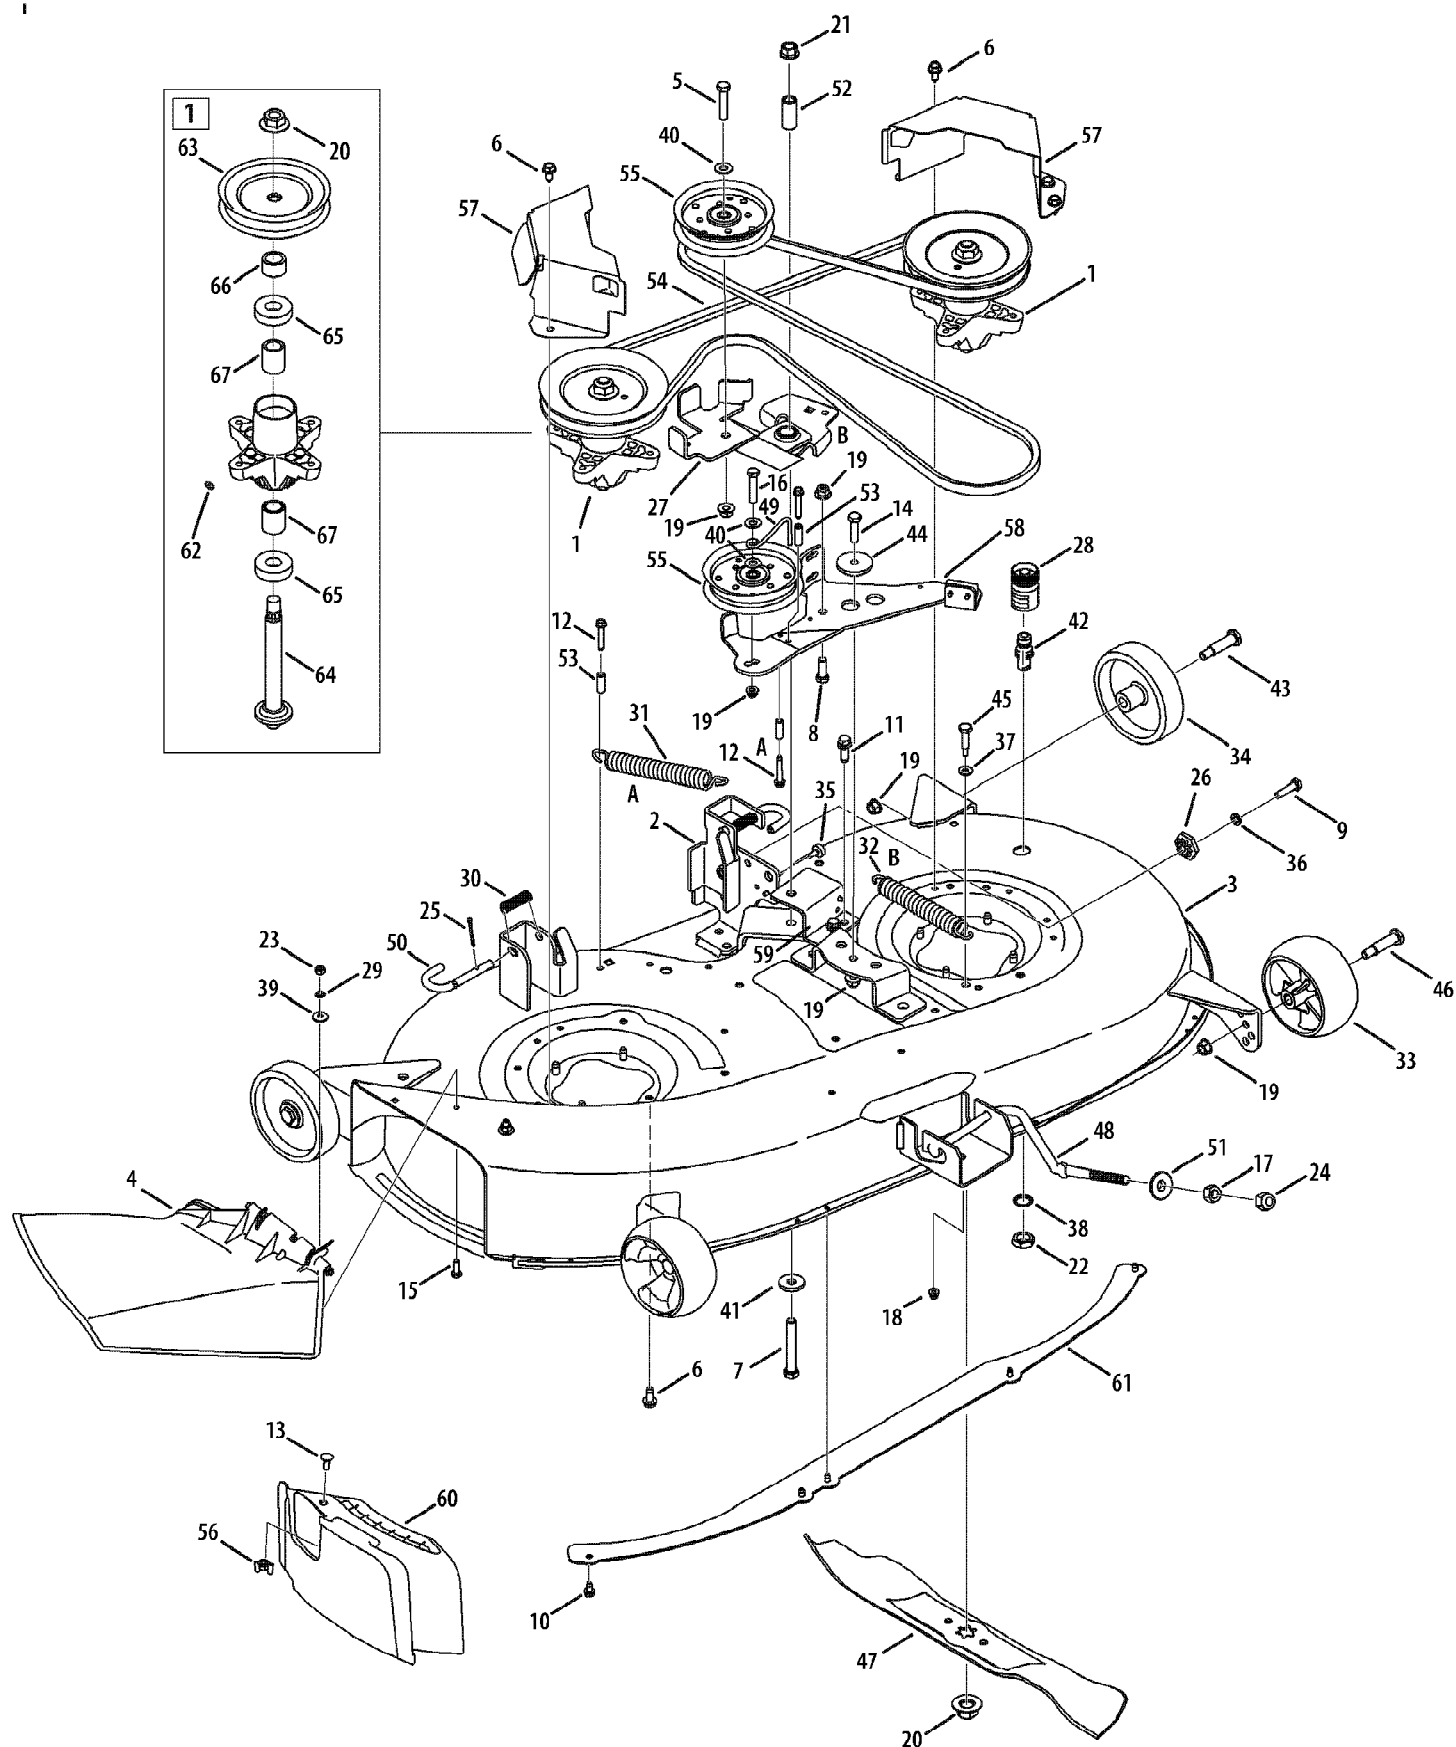

LT1042 Tractor (2008 & after)
Mower Deck 42-Inch

Page 62 of 71

Ref #	Part Number	Qty	S/P/F	Description
1	618-04461	1	S	Spindle Assembly
2	683-0254B	1	/P	Bracket, Deck Hanger LH
3	683-04262	1		Deck Weldment, 42-inch
4	731-1032B	1	S	Chute Assembly, Side Discharge
5	710-0347	1	/P	Screw, 3/8-16, 1.75
6	710-04484	1		Screw, Self-tapping, 5/16-18 x .750
7	710-0510	1	/P	Screw, Hex Cap, 7/16-20, 3.0
8	710-0514	1	/P	Screw, Hex Cap, 3/8-16, 1.0
9	710-0528	1	/P	Screw, Self-tapping, 5/16-18 x 1.25
10	710-0599	1	/P	Screw, Self-tapping, 1/4-20 x .50
11	710-0623	1	/P	Screw, Self-tapping, 3/8-16 x .75
12	710-0778	1	/P	Screw, Self-tapping, 1/4-20 x 1.50
13	710-0134	1	/P	Carriage Screw, 1/4-20, .62
14	710-3005	1	/P	Screw, 3/8-16, 1.25
15	710-3015	1	/P	Screw, Hex Cap, 1/4-20, .750, Gr5
16	710-3144	1	/P	Screw, 3/8-16, 2.0
17	712-0206	1	S	Nut, Hex, 1/2-13, Gr5
18	712-04064	1	/P	Nut, Hx. Nylon Lock, 1/4-20
19	712-04065	1	/P	Nut, Hx. Nylon Lock, 3/8-16
20	712-0417A	1	/P	Nut, Flange, 5/8-18
21	712-0459	1	/P	Nut, Flange Lock, 7/16-20
22	712-0641	1	S	Nut, Hex, M16-1.5
23	712-3006	1	/P	Nut, Hex, 1/4-20, Gr5
24	712-3083	1	/P	Nut, Hex Lock, 1/2-13
25	714-0470	1	S	Pin, Cotter, 1/8 x 1.25
26	717-04074	1	S	Adjustment Gear, Deck
27	719-04233	1	S	Idler Bracket, Cast
28	721-04041	1	S	Coupler, Hose
29	726-0233	1	/P	Nut, Push, .25 ID x .50 OD
30	732-0306A	1	S	Spring, Extension, .531 x 1.75
31	732-04391	1		Spring, Extension .94 x 7.57
32	732-0459C	1	/P	Spring, Extension .94 x 6.74
33	734-04155	1		Wheel Deck 5.0
34	734-0973	1	/P	Wheel Deck 5.0 x 1.38
35	735-0271A	1	/P	Bumper, Rubber
36	736-0119	1	S	Washer, Lock, 5/16, Regular Duty
37	736-0173	1	/P	Washer, Flat, .28 x .74 x .063
38	736-0225	1	/P	Washer, Lock, Internal Tooth
39	736-0270	1	/P	Washer, Belleville, .265 x .75 x .062
40	736-0300	1	S	Washer, Flat, .406 x .875 x .059
41	736-0322	1	/P	Washer, Flat, .450 x 1.25 x .164
42	737-04003C	1	S	Port, Water
43	738-0373	1	S	Screw, Shoulder, .498 x 1.53, 3/8-16
44	738-04162A	1	/P	Spacer, Shoulder, .8840 x .190
45	738-04272	1		Screw, Shoulder, .374 x 1.16
46	738-3056	1	S	Screw, Shoulder, .498 x 2.50, 3/8-16
47	742-04126	1	S	Blade, 21.20 Lg, 3-in-1
48	747-04269A	1	/P	Rod, Deck, .448" Dia. (42-inch)
49	747-04530	1		Keeper Rod, Belt
50	747-1116	1	/P	Rod, Handle, Deck Release .375
51	748-04069	1		Pivot Cup
52	750-04637A	1	/P	Spacer, .455 x .697 x 1.585
53	750-0566A	1	/P	Spacer, .260 x .372 x 1.030


LT1042 Tractor (2008 & after)
Mower Deck 42-Inch

Page 63 of 71

Ref #	Part Number	Qty	S/P/F	Description
54	754-04045	1	S	Belt, V-Type
55	756-04129	1	S	Pulley, Idler, 4.25 Dia.
56	712-3087	1	/P	Wing Nut, 1/4-20
57	783-04327B	1		Cover, Belt
58	783-04491D	1		Idler Bracket, Pivot
59	783-05490	1		Support Bracket, Pivot
60	731-2363	1	/P	Baffle, Mulch
61	783-1146A	1	S	Skirt, Deck
62	737-3000	1	S	Lube Fitting, 3/16
63	756-1227	1	S	Pulley, 6.3 Dia.
64	738-04241	1	S	Shaft, Spindle, 5.5
65	741-0919	1	S	Ball Bearing, .787 x 1.85 x .551
66	750-04739	1		Spacer, .820 x 1.15 x .480
67	750-1000	1		Spacer, 1.322

LT1042 Tractor (2008 & after)
Pedal Assembly

Page 64 of 71

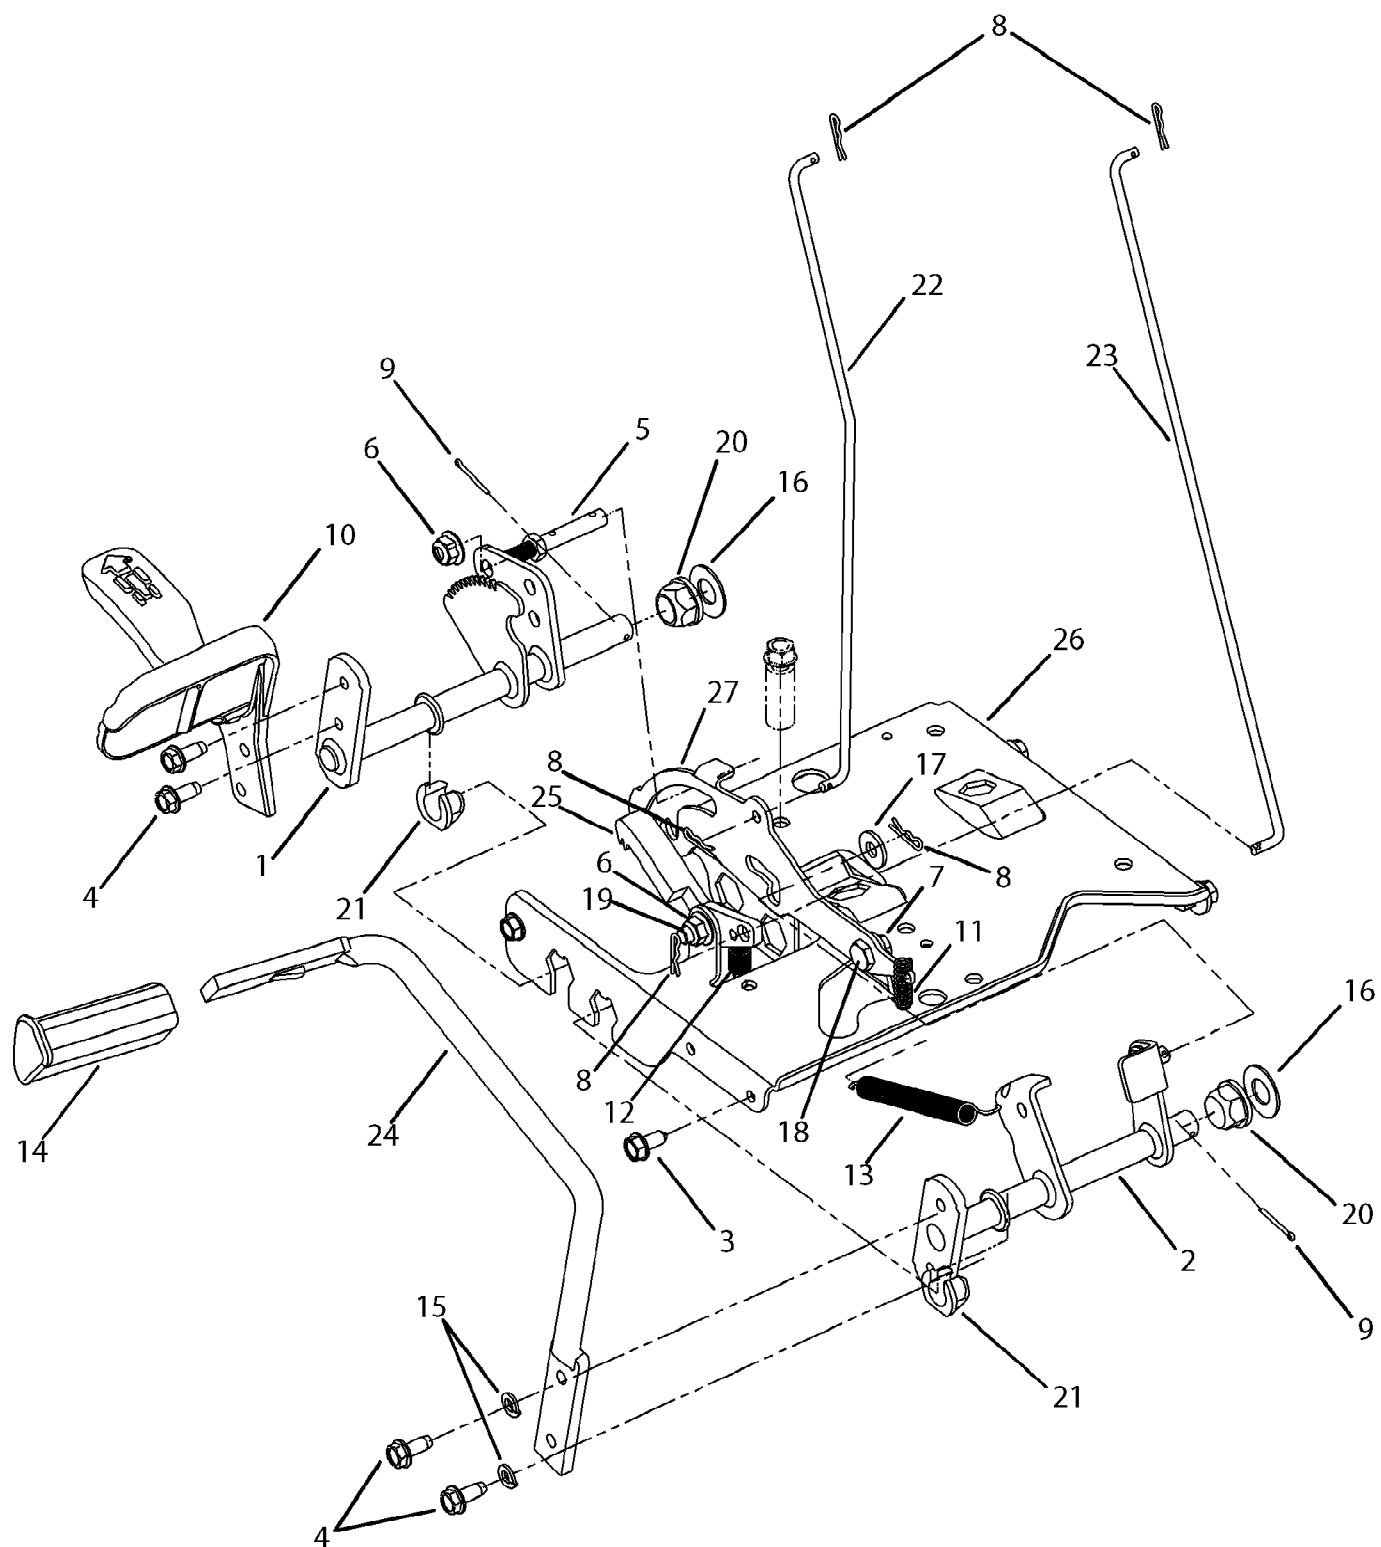

LT1042 Tractor (2008 & after)
Pedal Assembly

Page 65 of 71

Ref #	Part Number	Qty	S/P/F	Description
1	647-0049A	1	S	Control Assembly, Hydro
2	647-04100	1	S	Control Assembly, Brake
3	710-04484	1		Screw, Self-tapping, 5/16-18, 0.75
4	710-1260A	1	/P	Screw, Self-tapping, 5/16-18, 0.75
5	711-04159B	1		Pin, 3/8-16, 3/8 x 2.68
6	712-04065	1	/P	Nut, Nylon Lock, 3/8-16
7	712-3004A	1	/P	Nut, Flange Lock, 5/16-18, Gr5
8	714-0104	1	S	Pin, Cotter, .072 Dia. x 1.13 Lg
9	714-0111	1	S	Pin, Cotter, 3/32, 1.0
10	719-0584B	1	S	Pedal, Hydro Control
11	732-0335	1		Spring, Compression, .405 x 1.17
12	732-0955	1		Spring, Extension, .50 OD x 1.41 Lg
13	732-0963	1		Spring, Extension, .50 Dia x 6.37 Lg
14	735-3049A	1	/P	Pad, Brake, Control
15	736-0119	1	S	Washer, Lock, 5/16
16	736-0187	1	/P	Washer, Flat .64 x 1.24 x .06
17	736-0262	1	/P	Washer, Flat, .385 x .870 x .092
18	738-0155	1	S	Shoulder, Screw .437
19	738-0380	1	S	Shoulder, Screw 3/8-16
20	741-0225	1	S	Bearing, Hex Flange
21	741-3065B	1	/P	Bearing, Hex Flange, .628 ID, Split
22	747-04093A	1		Rod, Control, Brake Lock
23	747-04096	1		Rod, Control, Cruise
24	747-04641A-0637	1	/P	Pedal, Brake
25	748-04039C	1		Latch, Cruise
26	783-04612	1	S	Bracket, Support, Stearing
27	783-0663E	1	/P	Bracket, Lockout, Hydro




LT1042 Tractor (2008 & after)
Quick Reference LT1042

Page 67 of 71

Ref #	Part Number	Qty	S/P/F	Description
	759-3336	1	/P	Spark Plug
	KH-20-883-02-S1	1	/P	Air Filter & Pre-Cleaner
	KH-52-050-02-S	1	/P	Oil Filter
	KH-25-050-22-S1	1	/P	Fuel Filter
	KH-20-584-03-S	1	/P	Ignition Module
	KH-41-403-09	1	S	Voltage Regulator
	KH-24-393-16	1	/P	Fuel Pump
	KH-12-757-03	1	/P	Carb Kit
	KH-12-757-33	1	/P	Carburetor Solenoid
	N/A	1		Drive Belt (Upper)
	N/A	1		Drive Belt (Lower)
	954-04165	1	/P	Drive Belt (Hydo Trans)
	954-04045	1	/P	P.T.O. & Deck Belt
	942-04126	1	/P	Blades
	712-0417A	1	/P	Blade Nut
	918-04461	1	S	Spindle Assy. w/Pulley
	734-04155	1		Deck Wheels (Front)
	734-0973	1	/P	Deck Wheels (Back)
	921-04041	1	/P	Water Nozzle Adapter
	923-0448A	1	/P	Ball Joints
	925-04039	1	/P	Brake Switch
	951-3124D	1	S	Fuel Cap
	725-04439	1		Solenoid
	725-2054	1	S	Ignition Key
	925-04227B	1	/P	Ignition Switch Module
	725-04258	1	/P	P.T.O. Switch
	725-1648	1	S	P.T.O. Relay
	721-0342	1	S	Gasket use with 725-1648
	917-04163A	1	/P	P.T.O. Clutch
	OEM-190-916	1	S	Tire Chains, 20" x 10" accessory
	490-900-0041	1		Deck Leveling Guage accessory

LT1042 Tractor (2008 & after)
Steering


Page 68 of 71

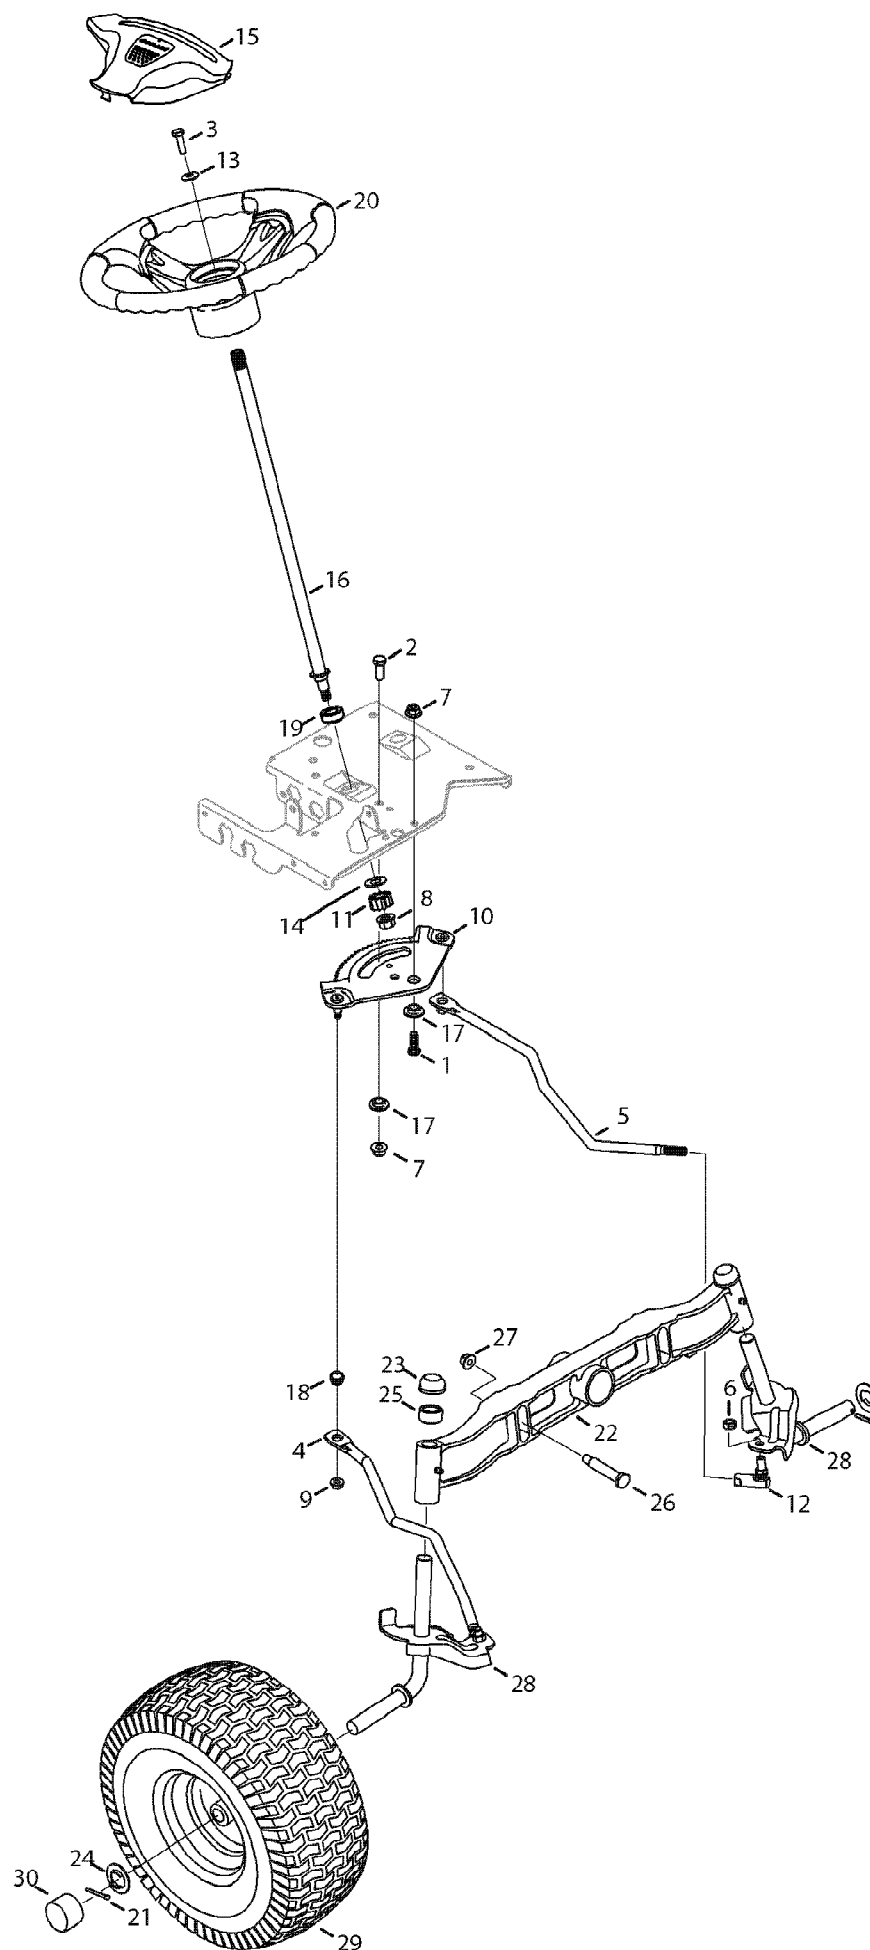

LT1042 Tractor (2008 & after)
Steering

Page 69 of 71

Ref #	Part Number	Qty	S/P/F	Description
1	710-04095	1		Hex Cap Screw, 3/8-16, 1.00
2	710-0514	1	/P	Hex Cap Screw, 3/8-16, 1.00, Gr5, Std
3	710-0650	1	/P	Self-tapping Screw, 5/16-18 x .75
4	711-1408	1		Link, Drag, RH
5	711-1409A	1	/P	Link, Drag, LH
6	712-0214	1	S	Nut, Hex, 3/8-24, Gr5
7	712-04065	1	/P	Nut, Nylon Lock, 3/8-16
8	712-0459	1	/P	Nut, Flange Lock, 7/16-20
9	712-3004A	1	/P	Nut, Flange Lock, 5/16-18
10	717-1550E	1	S	Gear, Steering, 11/90 Ratio
11	717-1554	1		Gear, Pinion, Steering
12	723-0448A	1	S	Ball Joint, 7/16-20
13	736-3004	1	S	Washer, Flat, .406 x .875 x .105
14	736-3084	1	/P	Washer, Flat, .510 x 1.120 x .060
15	731-04532A	1	/P	Cover, Steering Wheel
16	738-04262	1		Shaft, Steering, .625 OD x 25.00 Lg
17	738-04154	1		Spacer, Shoulder, 1.00 x .38 x .38
18	741-0475	1	S	Bushing, Plastic, .380 ID
19	741-04237	1		Bearing, Hex Flange, 5/8
20	631-04008A	1	/P	Wheel, Steering, Three Spoke
21	714-0162	1	/P	Pin, Cotter, 5/32, 1.25
22	719-04177A	1		Axle, Pivot Bar, Cast
22	737-3000	1	S	Fitting, Lube, 3/16 Drive Type Not Shown
22	737-0475	1	/P	Fitting, Lube, M6 Threaded Type Not Shown
23	726-0341	1	/P	Push Cap, .75
24	736-04228A	1		Washer, Flat, .781 x 1.590
25	748-04068	1		Spacer, .71 x .125 x .56
26	738-04128	1		Screw, Shoulder, .500 x 2.38, 3/8-16
27	712-04065	1	/P	Nut, Jam, 3/8-16, Grf.
28	638-04003A	1	S	Axle Ass'y, LH .750 Dia (LT1045, LT 1046 & LT 1050)
28	638-04005	1	S	Axle Ass'y, LH .750 Dia (LT1042)
28	638-04004A	1	S	Axle Ass'y, RH .750 Dia (LT1045, LT 1046 & LT 1050)
28	638-04006	1	S	Axle Ass'y, RH .750 Dia (LT1042)
29	734-1731	1		Tire, 15 x 6 x 6 Square Shoulder
30	731-05674	1	/P	Hub Cap

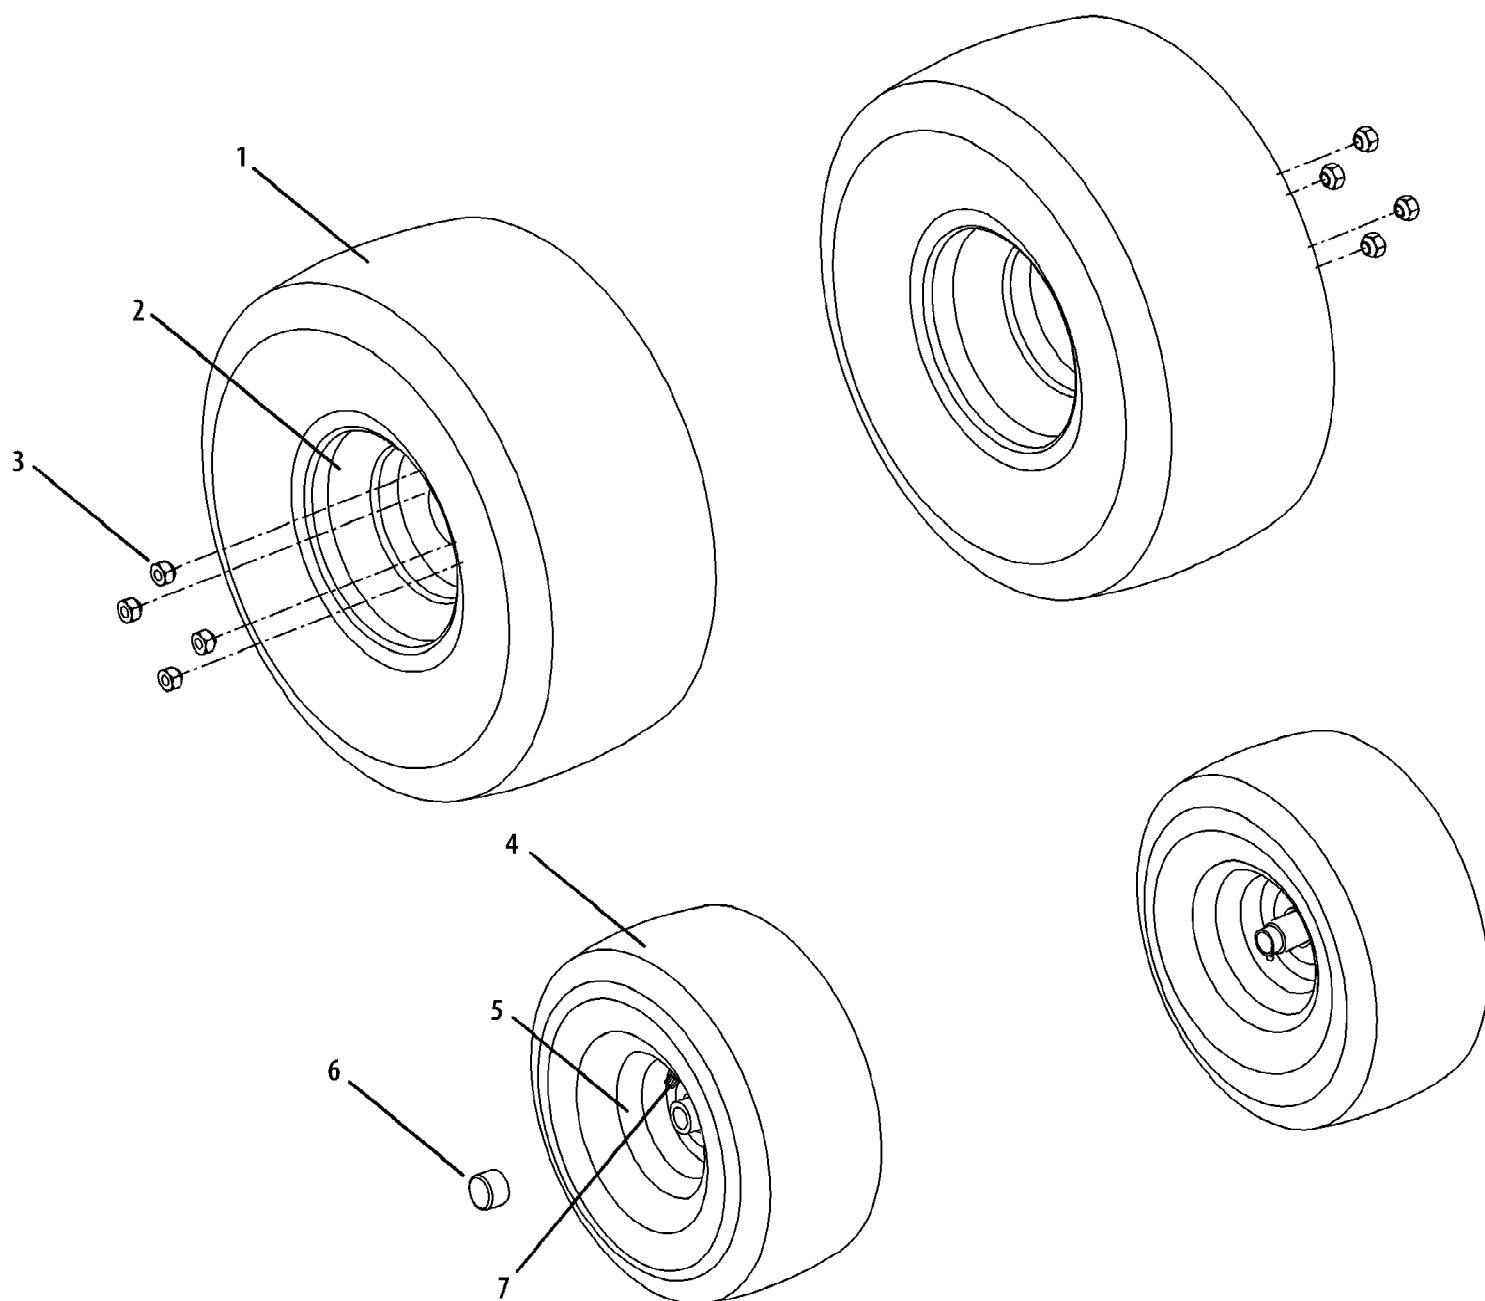

LT1042 Tractor (2008 & after)
Wheel Assembly

Page 71 of 71

Ref #	Part Number	Qty	S/P/F	Description
1	734-1873	1		Tire, 20 x 10 x 8 Square Shoulder
2	634-0246A	1	S	Rim Assembly, 8.0 x 6.19 (4-Lug)
2	734-0255	1	S	Valve, Tubeless Air (not shown)
3	712-3050	1	/P	Lug Nut, 7/16-14
4	734-1731	1		Tire, 15 x 6 x 6 Square Shoulder
5	634-04405	1		Rim Assembly, 6 x 4.5 (Includes Flange Bearings and Valve)
5	741-0990B	1	/P	Bearing, Flange .760 ID w/ Grease Ftg. (not shown)
5	741-0516B	1	/P	Bearing, Flange .760 x 1.00 x 1.20 Lg. (not shown)
6	734-0255	1	S	Valve, Tubeless Air
7	731-05674	1	/P	Hub Cap