


LT1046 Tractor (2007 & before) Adjustable Seat


Page 1 of 109

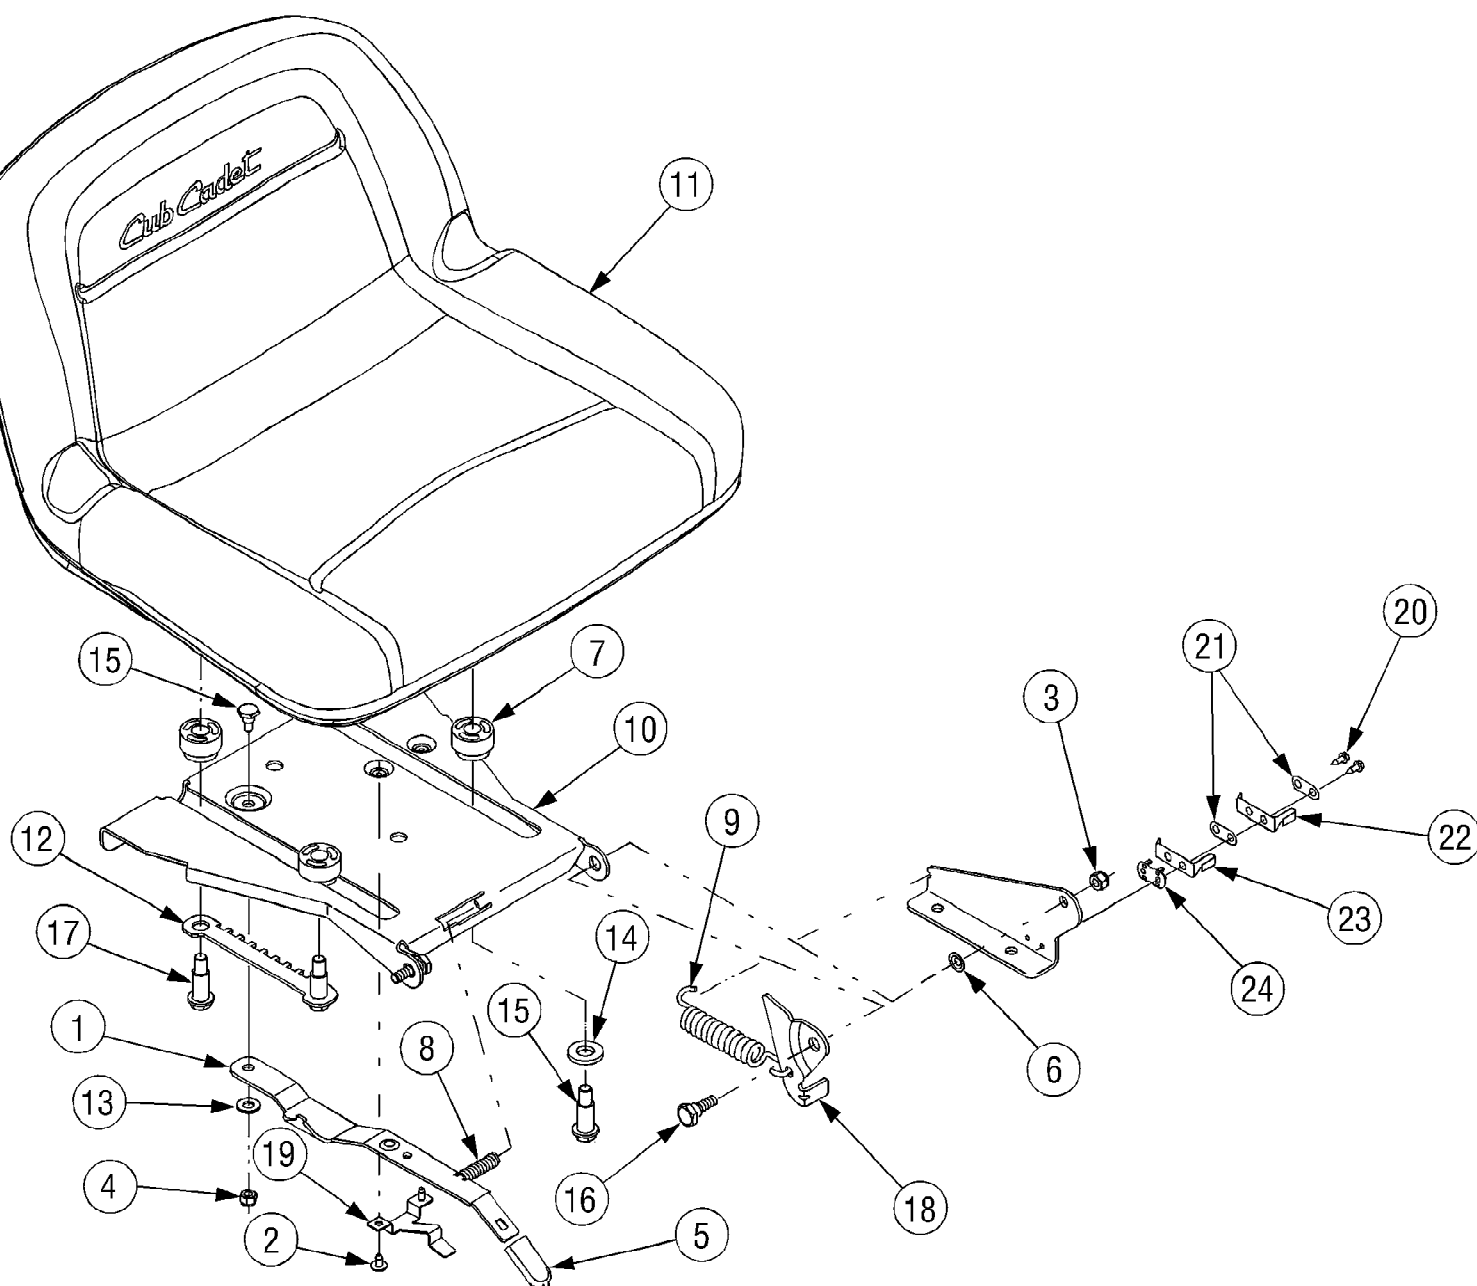

LT1046 Tractor (2007 & before)
Adjustable Seat

Page 2 of 109


Ref #	Part Number	Qty	S/P/F	Description
1	783-0739A	1	S	Lever, Seat, Adjustment
2	710-1268	2	/P	Screw, #10-16, 0.375
3	712-04063	2	/P	Nut, Nylon Lock, 5/16-18, Gr5
4	712-04064	1	/P	Nut, Nylon Lock, 1/4-20 GrF
5	720-0433	1		Grip, Seat, Adjustment (Yellow)
6	726-0201	2		Nut, Speed, .3125 ID
7	731-04074	4		Spacer, Seat, Adjustment
8	732-0499	1		Spring, Compression .41 x 1.50
9	732-1184	1	/P	Spring, Extension, .80 Dia x 4.6
10	783-0738D	1	/P	Bracket, Seat Pivot
11	757-04053	1		Seat, Cub Cadet, High Back Tractors manufactured after September 14, 2006
11	757-04035	1		Seat, Cub Cadet, High Back, Bead
11	757-04004	1	S	Seat, Cub Cadet, Medium Back, Bead
11	757-04003	1	S	Seat, High Back, Black
12	783-0753	1		Selector, Seat, Adjustment
13	736-0204	1	/P	Washer, Flat, .344 x .620 x .033
14	736-3019	2		Washer, Flat, .531 x 1.062 x .134
15	738-0137A	1	S	Screw, Shlder, .340 x .285, 1/4-20
16	738-0296	2	S	Shoulder, Screw .437 x .286 Lg
17	738-0966A	4	/P	Screw, Shoulder, .50 x .925, 3/8-16
18	783-0209D	1	/P	LH Bracket, Seat Lift
19	783-0611	1		Stop, Seat, Adjustment
20	710-0227	2	/P	Screw, #8-18 x .50
21	726-0279	2		Plate, Insulator
22	725-1303	1	S	Spring Switch, Outer
23	725-1439	1		Spring Switch, Inner
24	726-0278	1		Plate, Insulator Boss

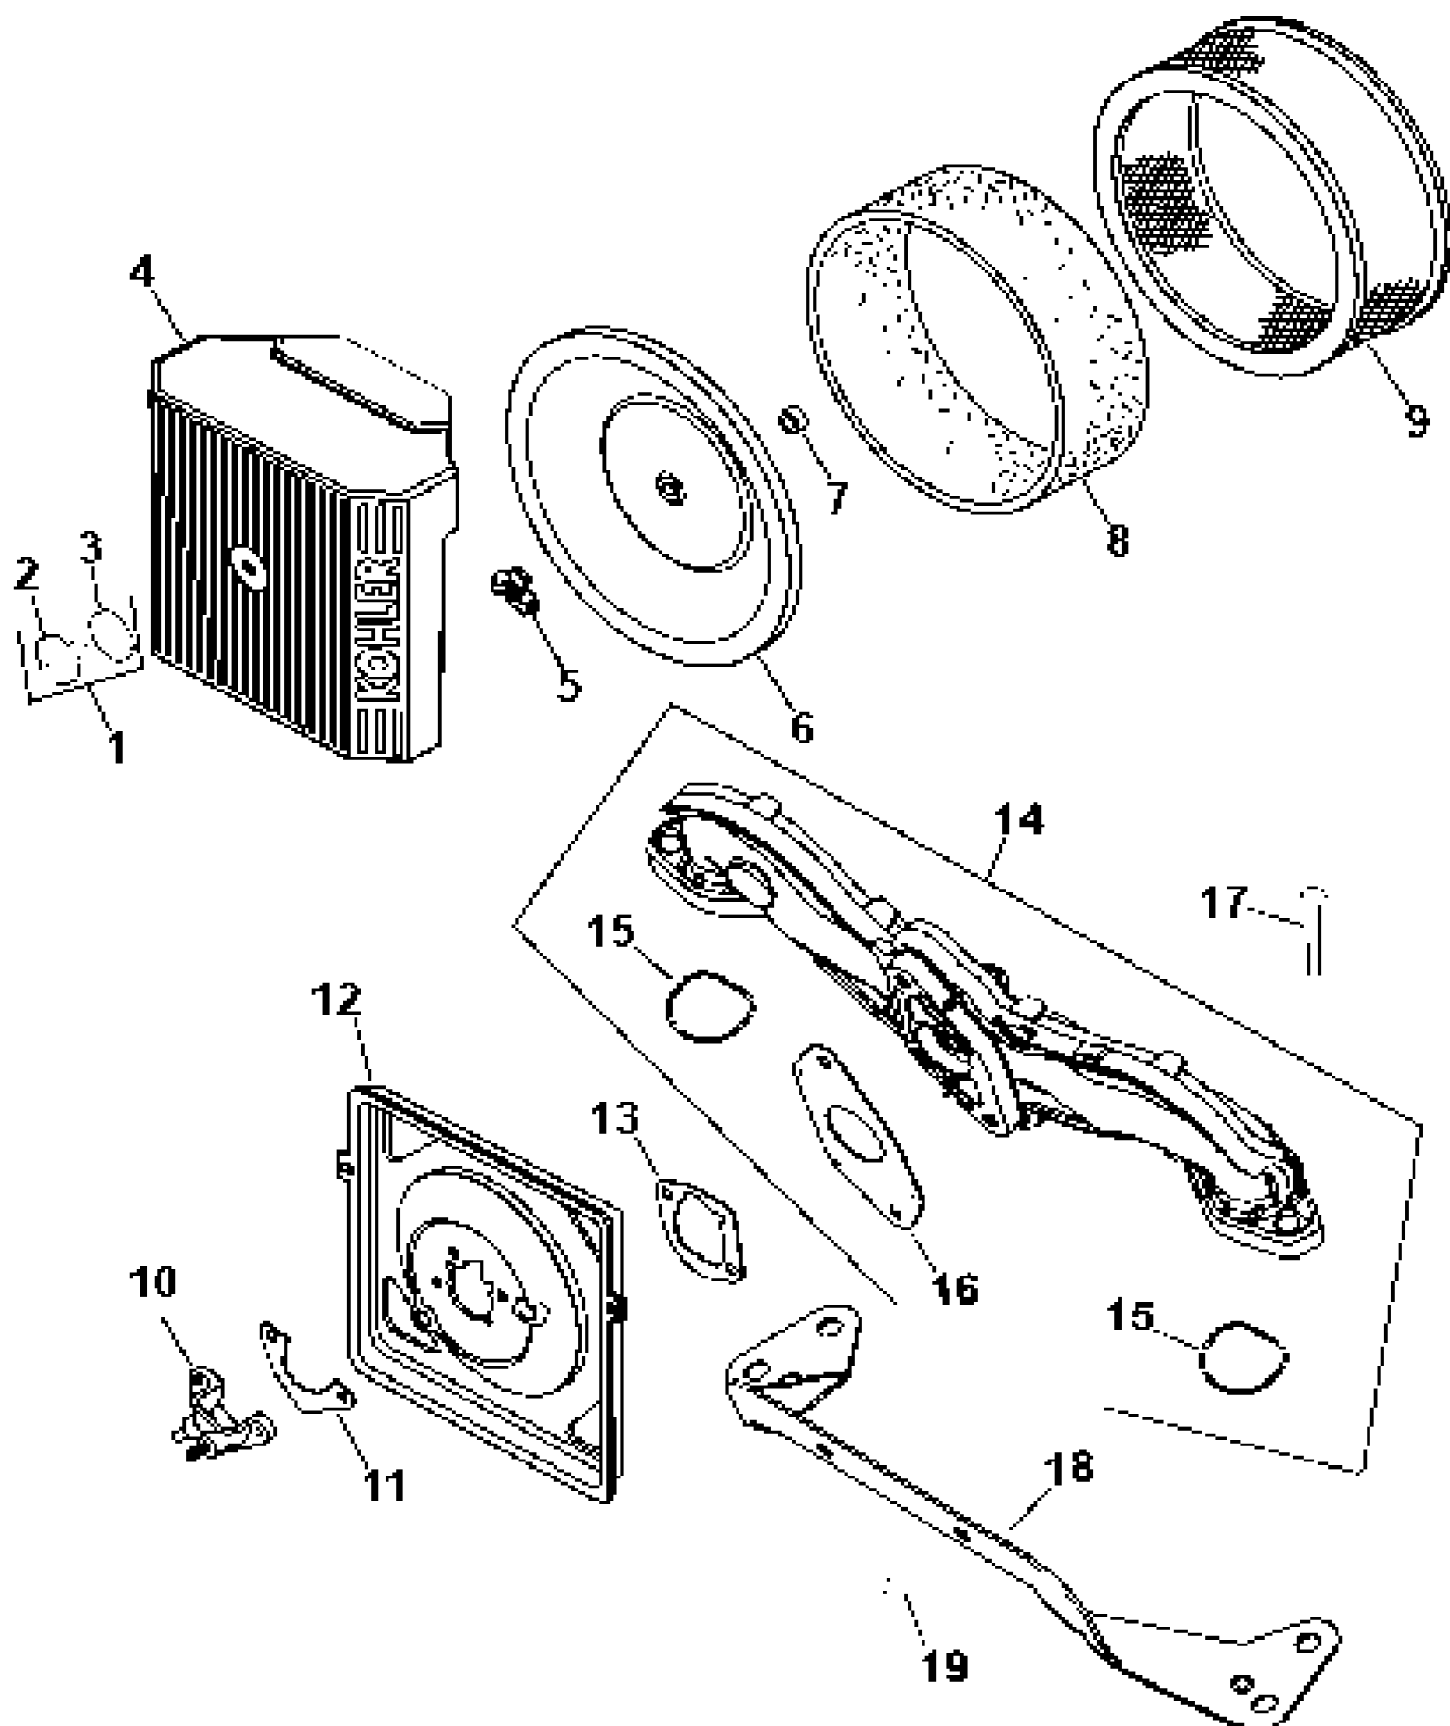

LT1046 Tractor (2007 & before)
Command Engine Air Intake Filtration

Page 4 of 109


Ref #	Part Number	Qty	S/P/F	Description
1	KH-54-755-01-S	1	/P	Knob With Seal Kit
2	KH-25-341-04-S	1	/P	Cover Knob
3	KH-24-153-20-S	1		O-Ring
4	KH-24-096-67-S	1	/P	Air Cleaner Cover
5	KH-12-100-01	1	/P	Wing Nut
6	KH-24-096-01	1	/P	Inner Air Cleaner Cover
7	KH-24-032-03	1	/P	Inner Air Cleaner Seal
8	KH-24-083-02	1	S	Precleaner Element
9	KH-47-883-03-S1	1	/P	Air Cleaner Element
10	KH-24-109-30-S	1		Spit Back Cup w/o Nipple
11	KH-24-041-13-S	1		Spit Back Cup Gasket
12	KH-24-094-43-S	1		Air Cleaner Base
13	KH-24-041-14	1	/P	Air Cleaner Gasket
14	KH-24-164-51-S	1	S	Intake Manifold
15	KH-24-153-27-S	2	/P	Intake Port O-Ring
16	KH-24-041-52-S	1	/P	Carburetor Gasket
17	KH-M-651040-S	4		Hex Flange Screw (M6 x 1.0 x 40)
18	KH-24-126-130-S	1		Air Cleaner Bracket
19	KH-M-0545010	2	/P	Hex Flange Screw (M5 x .8 x 10)
	KH-24-743-05	1	/P	Air Cleaner Cover Kit (not illustrated)

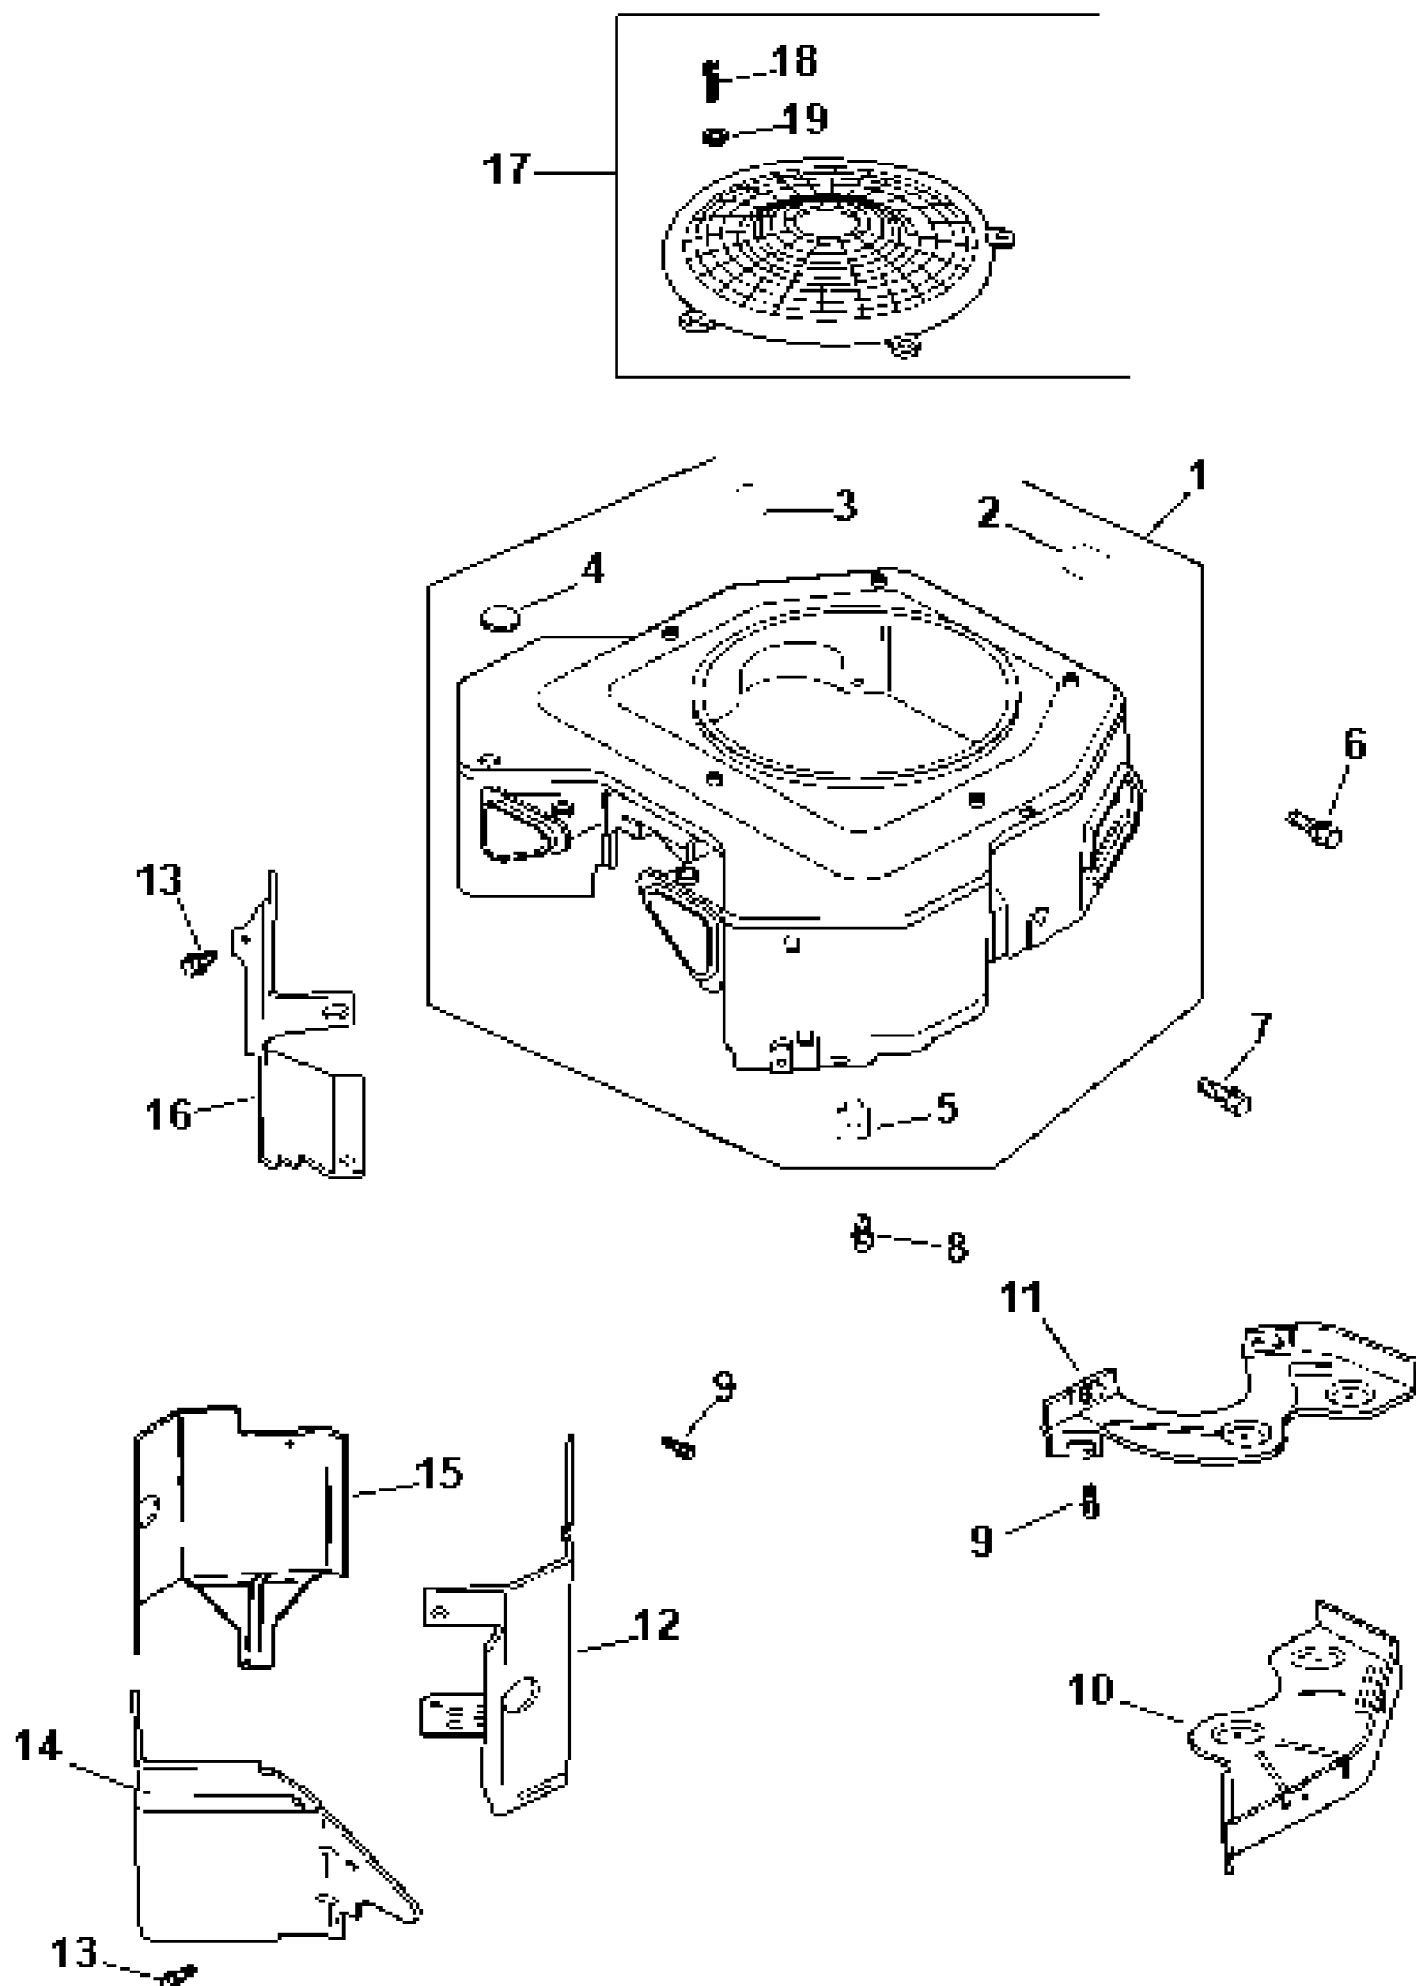

LT1046 Tractor (2007 & before)
Command Engine Blower Housing & Baffles

Page 6 of 109


Ref #	Part Number	Qty	S/P/F	Description
1	KH-24-027-114-S	1		Blower Housing
2	KH-24-100-01	3		Plastic Nut
3	KH-25-086-91-S	1	/P	Tapping Screw
4	KH-25-139-16	1		9/16 Button Plug
5	KH-24-100-02	2		Plastic Nut
6	KH-M-545016-S	3	/P	Screw
7	KH-M-551016-S	1		Screw
8	KH-M-545020-S	4		Screw
9	KH-M-645016-S	6	/P	Screw
10	KH-24-146-16-S	1	/P	Backing Plate # 2
11	KH-24-146-20-S	1	/P	Backing Plate # 1
12	KH-24-063-39-S	1	S	Cylinder Barrel Baffle # 2 Side
13	KH-M-0545010	2	/P	Screw
14	KH-24-063-69-S	1		Valley Baffle # 2 Side
15	KH-24-063-58-S	1	S	Cylinder Barrel Baffle # 1 Side
16	KH-24-063-60-S	1		Valley Baffle # 1 Side
17	KH-24-755-81-S	1		Fixed Guard Kit
18	KH-24-086-35-S	5		Pan Head Screw
19	KH-24-468-10	5		Flat Washer
	KH-24-096-85-S	1		Blower Housing Cover (not illustrated)

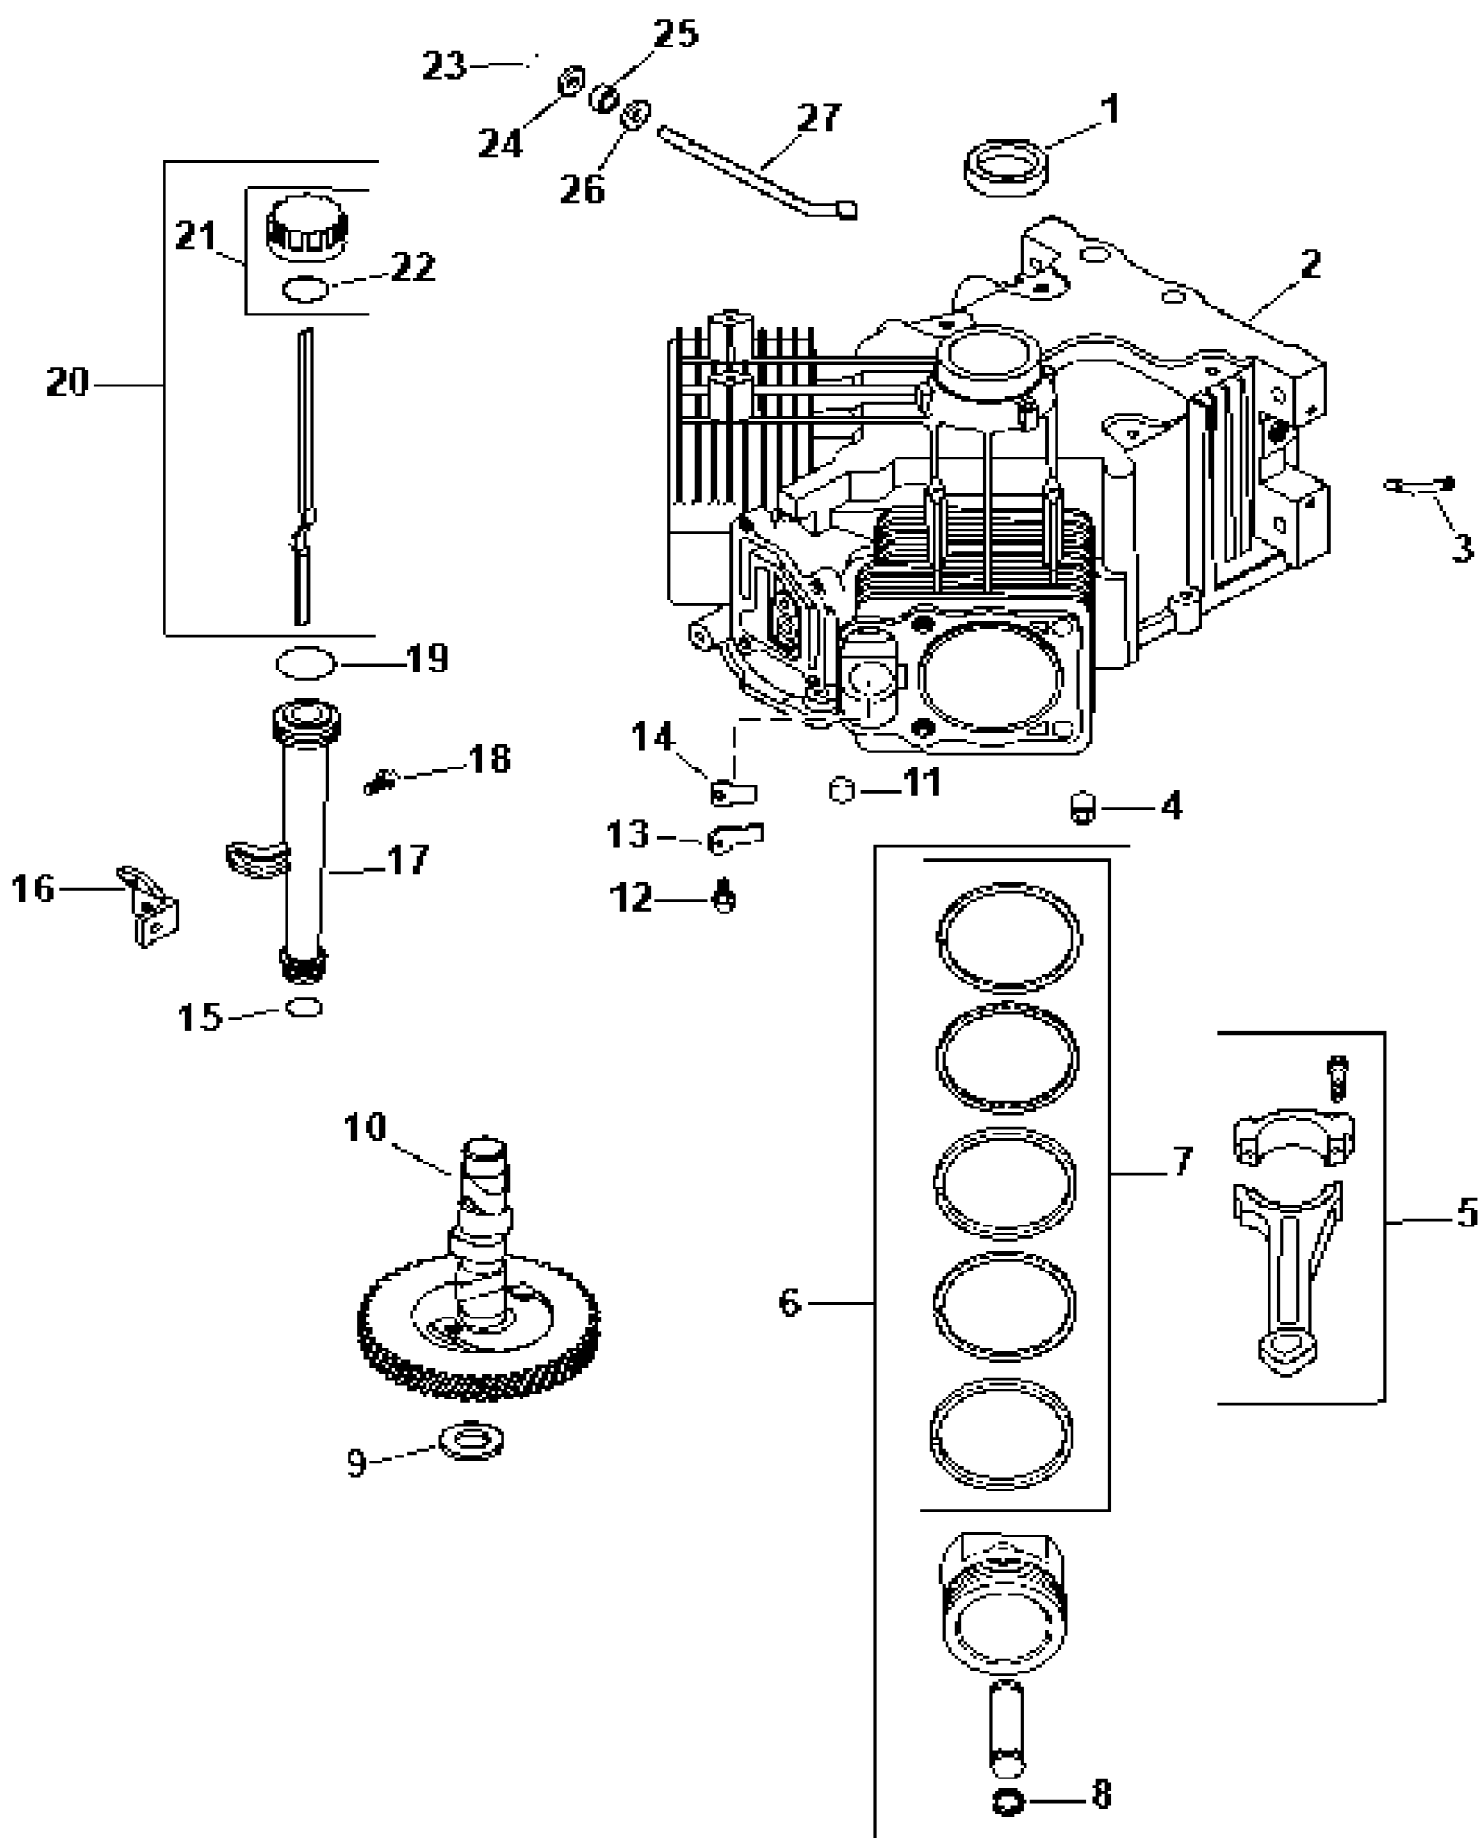

LT1046 Tractor (2007 & before)
Command Engine Crankcase

Page 8 of 109


Ref #	Part Number	Qty	S/P/F	Description
1	KH-24-032-01-S	1	S	Oil Seal
2	KH-24-522-126	1		Short Block
2	KH-24-782-14	1		Miniblock
3	KH-24-294-13	6	/P	Fitting
4	KH-24-380-13-S	2	S	Split Dowel Pin
5	KH-24-067-13-S	2	S	Connecting Rod (Std.)
5	KH-24-067-14	2		Connecting Rod (.25)
6	KH-24-874-09-S	2	S	Piston w/Ring Set Kit (Std.)
6	KH-24-874-15	2		Piston w/Ring Set Kit (.08.)
6	KH-24-874-10	2	S	Piston w/Ring Set Kit (.25.)
6	KH-24-874-11	2		Piston w/Ring Set Kit (.50.)
7	KH-24-108-08-S	4		Ring Set (Std. & .08)
8	KH-24-018-01	1	S	Piston Pin Retainer AR
9	KH-12-422-07	1	S	Shim (White) AR
9	KH-12-422-08	1	S	Shim (Blue) AR
9	KH-12-422-09	1	S	Shim (Red) AR
9	KH-12-422-10	1	S	Shim (Yellow) AR
9	KH-12-422-11	1	S	Shim (Green) AR
9	KH-12-422-12	1	S	Shim (Gray) AR
9	KH-12-422-13	1	S	Shim (Black)
10	KH-24-012-10-S	1	/P	Camshaft Kit
11	KH-52-139-09	2	S	Cup Plug
12	KH-M-0545010	2	/P	Screw
13	KH-24-018-04	2		Reed Retainer
14	KH-24-402-05-S	1	/P	Breather Reed
15	KH-12-153-01-S	1	/P	O-Ring
16	KH-24-126-19	1		Oil Fill Tube Bracket
17	KH-12-123-04	1	S	Oil Fill Tube
18	KH-M-545016-S	1	/P	Screw
19	KH-12-153-03	1		O-Ring Upper Fill Tube
20	KH-24-038-04-S	1	/P	Dipstick
21	KH-24-755-46	1	/P	Oil Fill Cap Kit
22	KH-12-153-02-S	1	/P	O-Ring
23	KH-24-018-09-S	1		Ring Retainer
24	KH-M-931010-S	1		Plain 9mm washer
25	KH-28-032-09-S	1		Oil Governor Shaft Seal
26	KH-24-468-15-S	1		Flat Washer
27	KH-24-144-38-S	1	/P	Governor Cross Shaft

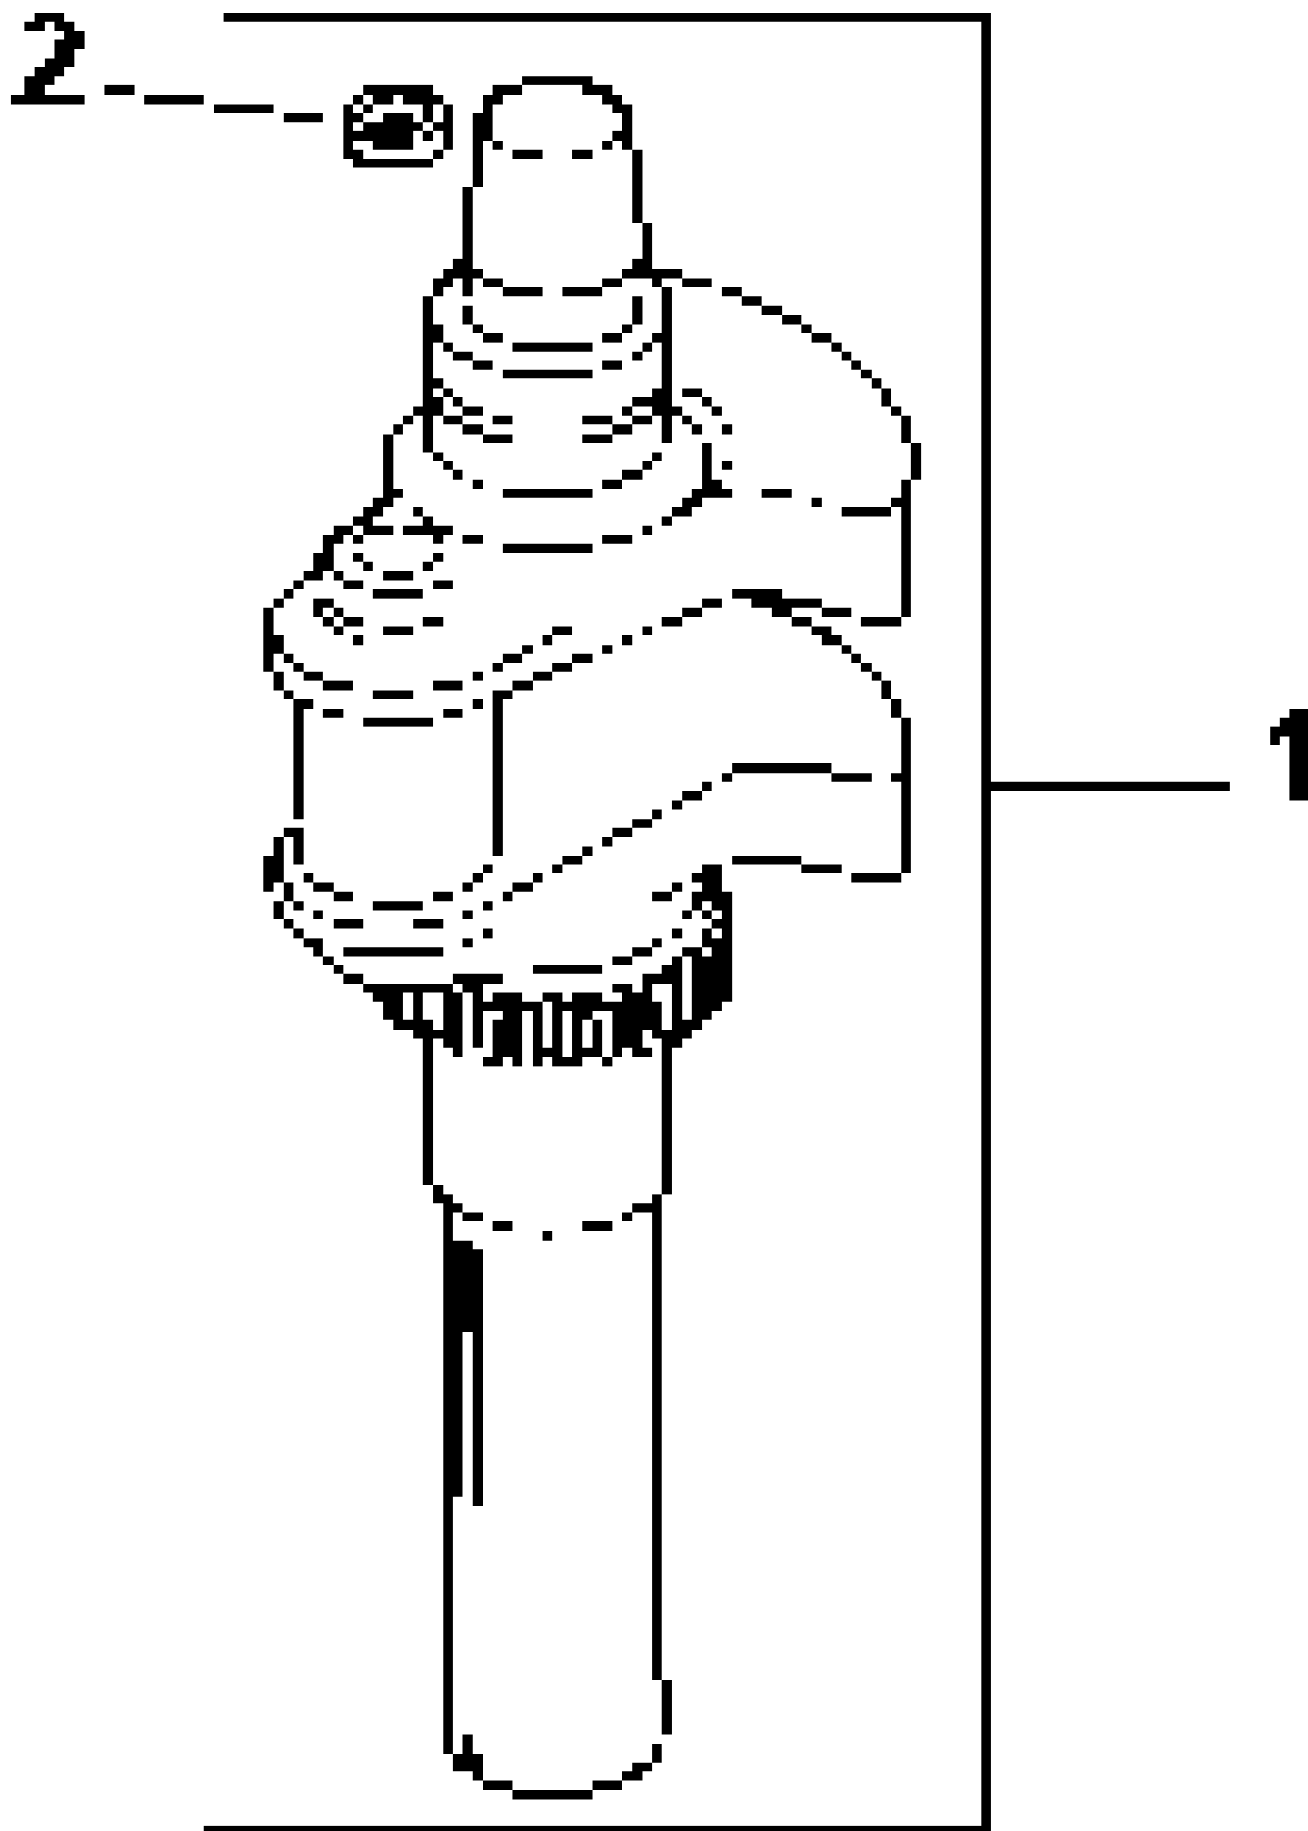

LT1046 Tractor (2007 & before)
Command Engine Crankshaft

Page 10 of 109


Ref #	Part Number	Qty	S/P/F	Description
1	KH-24-014-42	1	S	Crankshaft (Includes Ref.# 2)
2	KH-52-139-09	1	S	Cup Plug

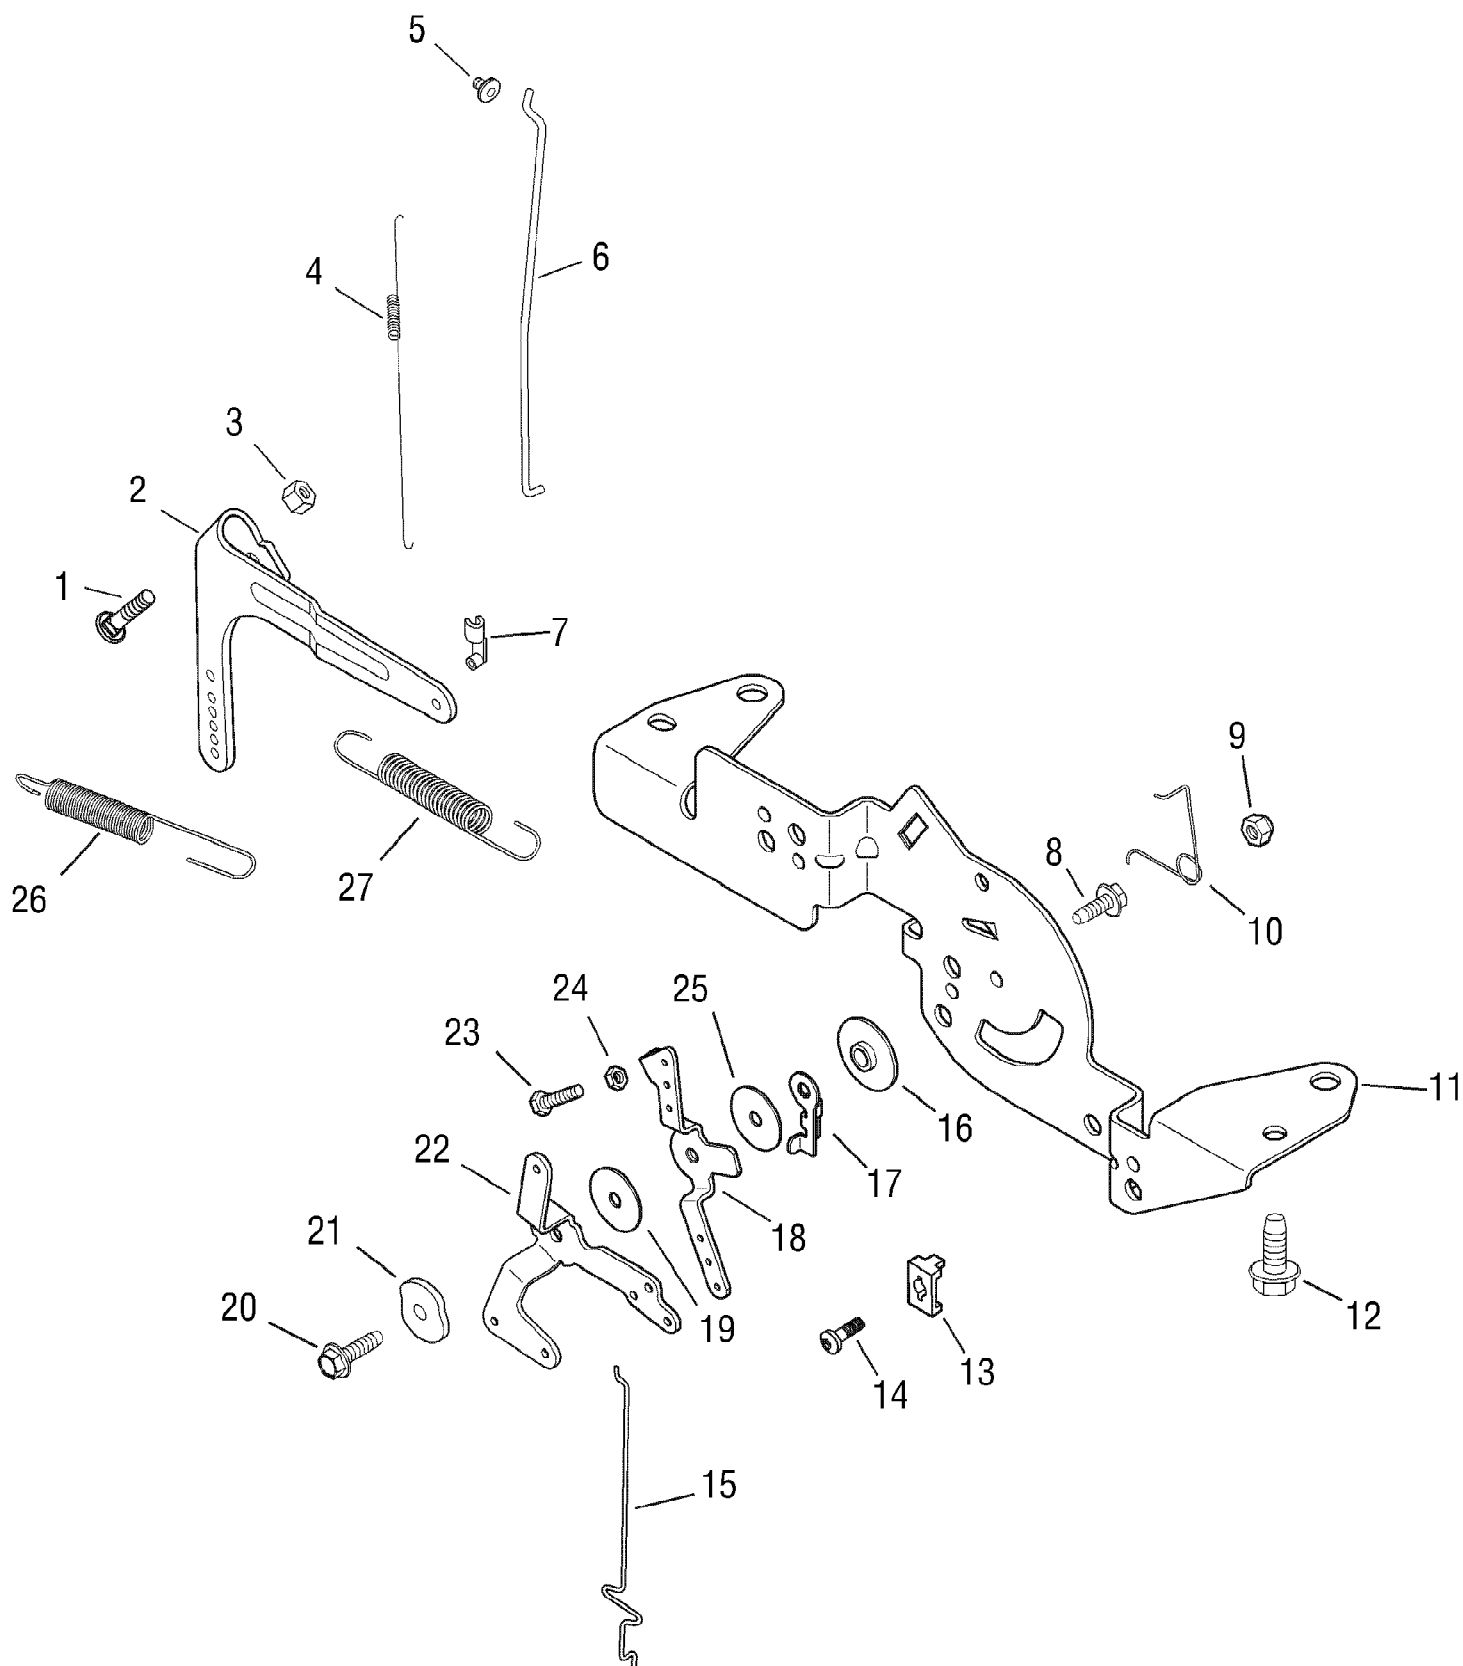

LT1046 Tractor (2007 & before)
Command Engine Engine Controls

Page 12 of 109


Ref #	Part Number	Qty	S/P/F	Description
1	KH-24-211-03-S	1		Bolt, round hd square neck
2	KH-24-090-33-S	1	S	Lever, governor
3	KH-M-641060-S	1	/P	Nut, hex. flange M6x1.0
4	KH-24-089-01	1		Spring, linkage
5	KH-25-158-08	1	/P	Bushing, linkage retaining
6	KH-24-079-04	1		Linkage, throttle
7	KH-25-158-11	1	/P	Bushing, throttle linkage
8	KH-M-545016-S	1	/P	Screw, hex. Flange M5x0.8x16
9	KH-M-547050-S	1		Nut, hex. lock M5x0.8
10	KH-24-089-03	1		Spring, choke return
11	KH-24-126-161-S	1	S	Bracket, control
12	KH-M-645016-S	4	/P	Screw, hx. flange M6x1.0x16
13	KH-47-237-02	1	S	Clamp, dual conduit
14	KH-24-086-43-S	1		Screw, thread forming
15	KH-24-079-22-S	1		Linkage, choke
16	KH-24-112-27-S	1		Spacer, control assembly
17	KH-24-090-47-S	1		Lever, throttle actuator
18	KH-24-090-13	1		Lever, throttle control
19	KH-24-468-01	1		Washer, plain 5.5 mm
20	KH-M-545020-S	1		Screw, hx. flange M5x0.8x20
21	KH-41-468-03	1		Washer, spring 1/4"
22	KH-24-090-05	1		Lever, choke
23	KH-M-403025	1		Screw, hex. head cap
24	KH-M-446030-S	1	/P	Nut, hex. M4x0.7
25	KH-24-468-20-S	1		Washer, plain
26	KH-24-089-25-S	1	/P	Spring, governor
27	KH-24-089-55-S	1		Spring, governor

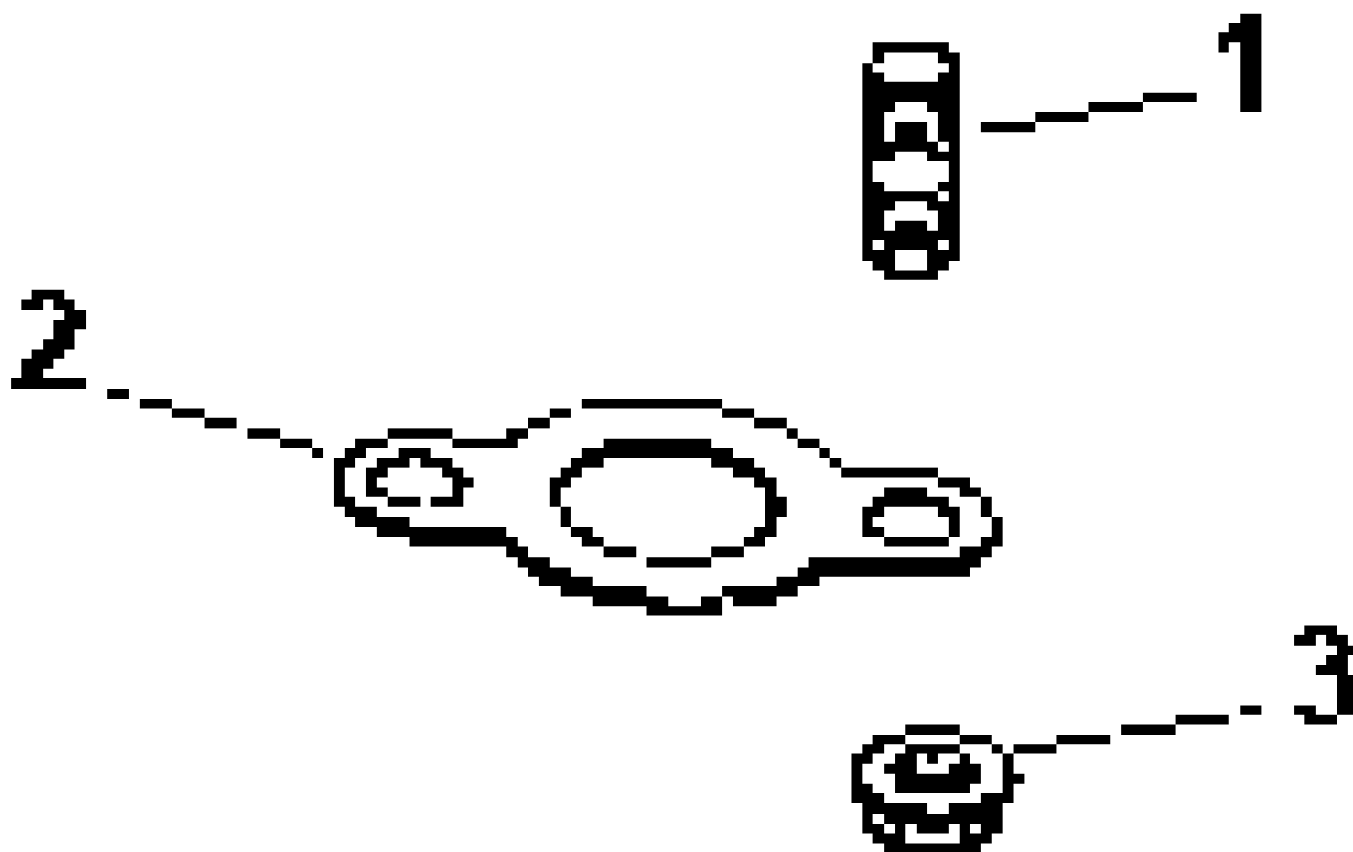

LT1046 Tractor (2007 & before)
Command Engine Exhaust

Page 14 of 109


Ref #	Part Number	Qty	S/P/F	Description
1	KH-25-072-04	4	/P	Stud (M8 x 1.25 x 33)
2	KH-24-041-49-S	2	/P	Exhaust Gasket
3	KH-M-0841080	4	S	Muffler Mounting Nut (M8 x 1.25)
	KH-24-113-18-S	1		Grass Screen Decal (not illustrated)
	KH-24-113-81-S	1		23 HP Decal (not illustrated)
	KH-25-113-05	1		Oil Sentry Decal (not illustrated)
	KH-25-113-39-S	1		Clear Lamination Label (not illustrated)
	KH-24-454-05-S	1		Tie (not illustrated)
	KH-PA-75593	1		Complete Engine (not illustrated)
	KH-24-522-126	1		Short Block (not illustrated)
	KH-24-782-14	1		Miniblock (not illustrated)
	KH-24-755-108-S	1		Gasket Set (not illustrated)

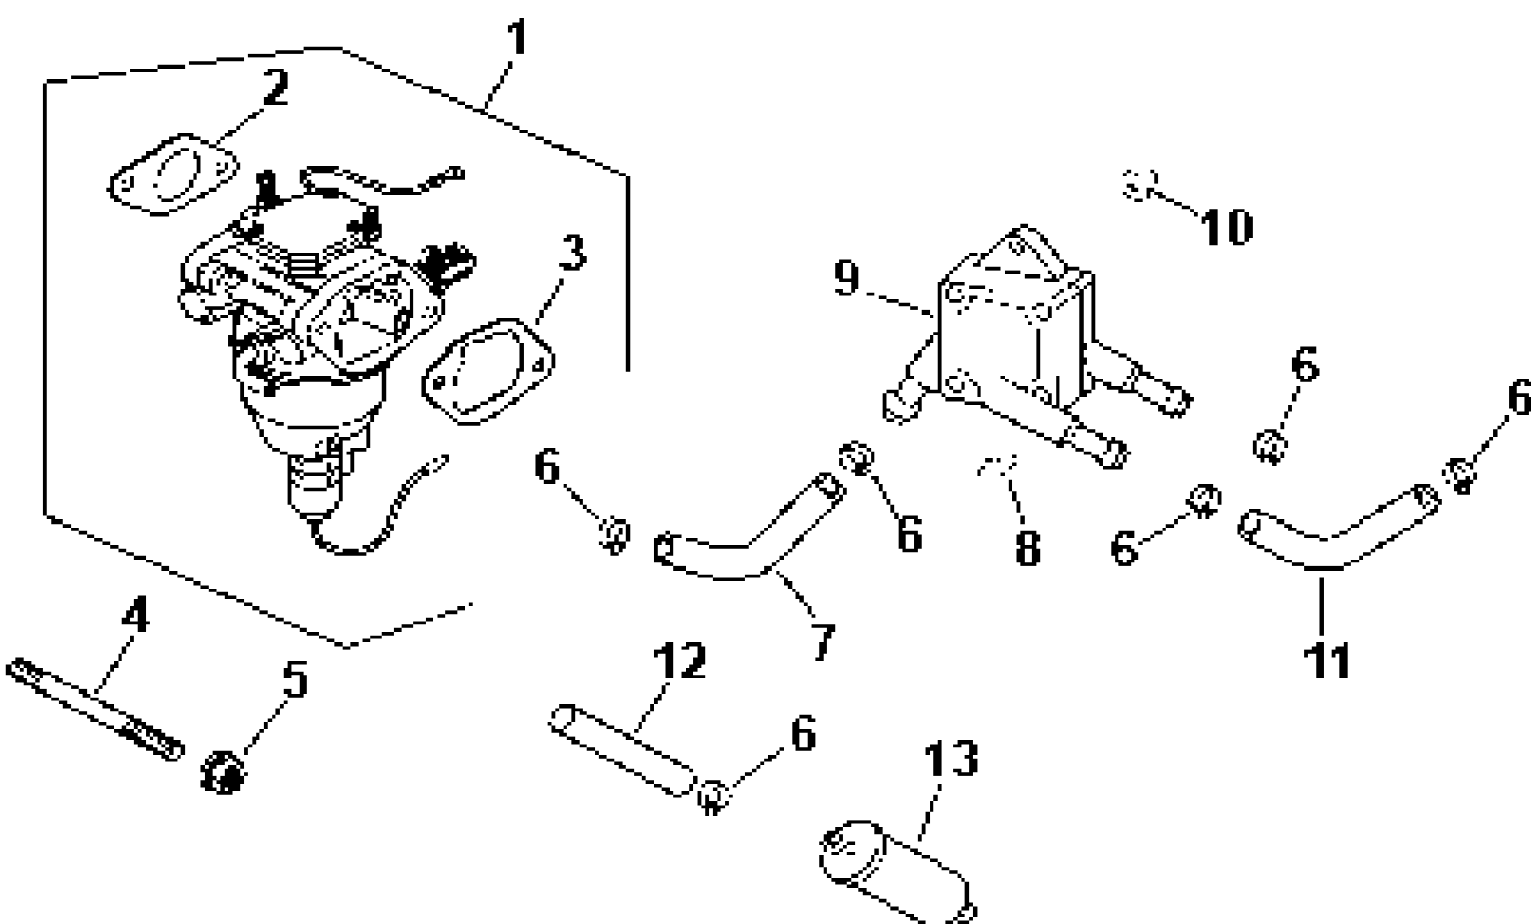

LT1046 Tractor (2007 & before)
Command Engine Fuel System

Page 16 of 109


Ref #	Part Number	Qty	S/P/F	Description
1	KH-24-853-61-S	1	S	Carburetor w/Gaskets
2	KH-24-041-52-S	1	/P	Carburetor Gasket
3	KH-24-041-14	1	/P	Air Cleaner Base Gasket
4	KH-M-629095-S	2		Intake Manifold Stud
5	KH-M-641060-S	2	/P	Nut
6	KH-25-237-14-S	6	/P	Hose Clamp
7	KH-52-353-22-S	1		Fuel line 12.5"
8	KH-24-086-12	2		Screw
9	KH-24-393-16	1	/P	Fuel Pump
10	KH-24-100-01	2		Plastic Nut
11	KH-24-353-12	1		Fuel Line 11"
12	KH-15-353-04-S	1		Fuel Line 11.5"
13	KH-24-050-10-S	1	S	Fuel Filter
	KH-24-063-51-S	1		Spitback Cup Baffle (not illustrated)
	KH-24-431-01-S	1		Insulating Sleeve (not illustrated)
	KH-47-154-01-S	1	/P	Clip (not illustrated)
	KH-24-757-38-S	1		Gasket Kit (not illustrated)
	KH-24-757-36-S	1		Choke Repair Kit w/Gaskets (not illustrated)
	KH-24-757-44-S	1		Float Kit (not illustrated)
	KH-24-757-45-S	1	/P	Solenoid Replacement Kit (not illustrated)
	KH-24-757-46-S	1	/P	Overhaul Kit w/Gaskets (not illustrated)

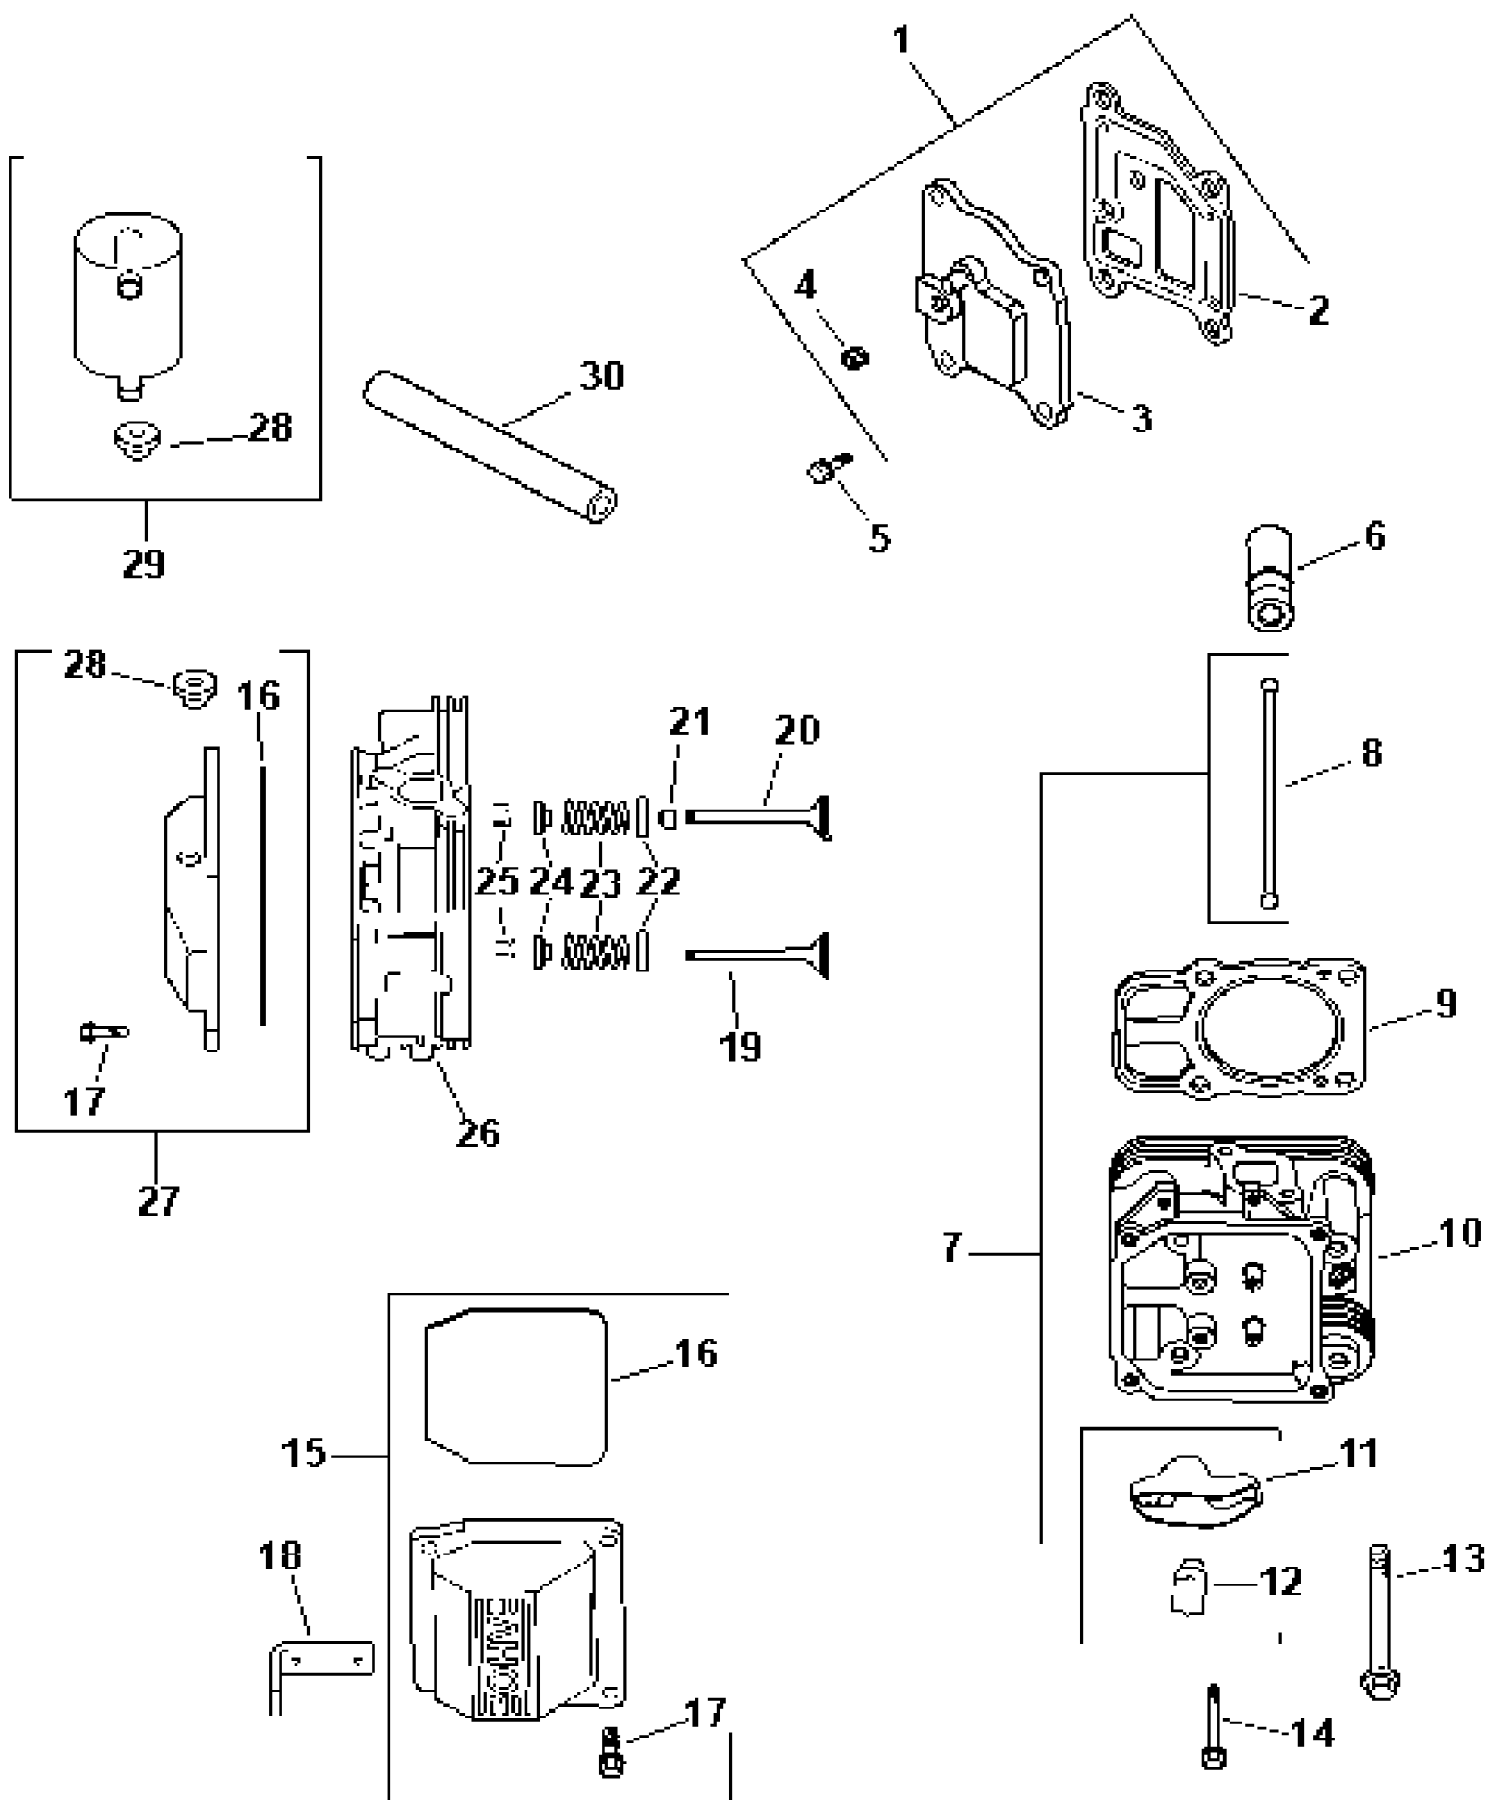

LT1046 Tractor (2007 & before)
Command Engine Head Valve Breather

Page 18 of 109


Ref #	Part Number	Qty	S/P/F	Description
1	KH-24-033-03	1		Breather Cover Kit
2	KH-24-041-51-S	1	S	Breather Gasket
3	KH-24-096-87-S	1		Breather Cover
4	KH-25-139-60-S	1	/P	1/8" Pipe Plug
5	KH-M-645020-S	4	/P	Hex Flange Screw
6	KH-25-351-01	4	S	Valve Lifter
7	KH-24-755-66	1	/P	Valve TrainKit
8	KH-24-411-05	4	/P	Push Rod
9	KH-24-841-02-S	2	/P	Cylinder Head Gasket
10	KH-24-318-70-S	1	S	Cylinder Head Assembly #2
11	KH-25-186-01	4	/P	Rocker Arm
12	KH-24-599-01	4	S	Rocker Arm Pivot
13	KH-12-086-16	8	S	Hex Flange Screw
14	KH-66-086-07-S	4	S	Rocker Arm Pivot Screw
15	KH-24-755-141-S	1	/P	Rocker Cover Kit
16	KH-24-153-28-S	2	S	O-Ring
17	KH-M-651030-S	4		Hex Flange Screw
18	KH-24-445-01-S	1		Lifting Strap
19	KH-24-016-01	2	/P	Exhaust Valve
19	KH-24-016-02	2		Exhaust Valve (.25)
20	KH-24-017-01	2	/P	Intake Valve
20	KH-24-017-02	2		Intake Valve (.25)
21	KH-66-032-05-S	2	/P	Valve Stem Seal
22	KH-235011-S	4	/P	Retainer
23	KH-24-089-02	4	/P	Valve Spring
24	KH-12-173-01	4	/P	Valve Spring Retainer
25	KH-12-755-03	8	/P	Retainer Kit
26	KH-24-318-67-S	1	S	Cylinder Head Assembly #1
27	KH-24-755-142-S	1	/P	Rocker Cover (Separator) Kit
28	KH-25-313-03-S	1	/P	Rubber Grommet
29	KH-24-755-57-S	1	/P	Breather Separator Kit
30	KH-24-326-74-S	1	S	Breather Hose
	KH-24-755-147-S	2		Cylinder Head Hardware Kit (not illustrated)

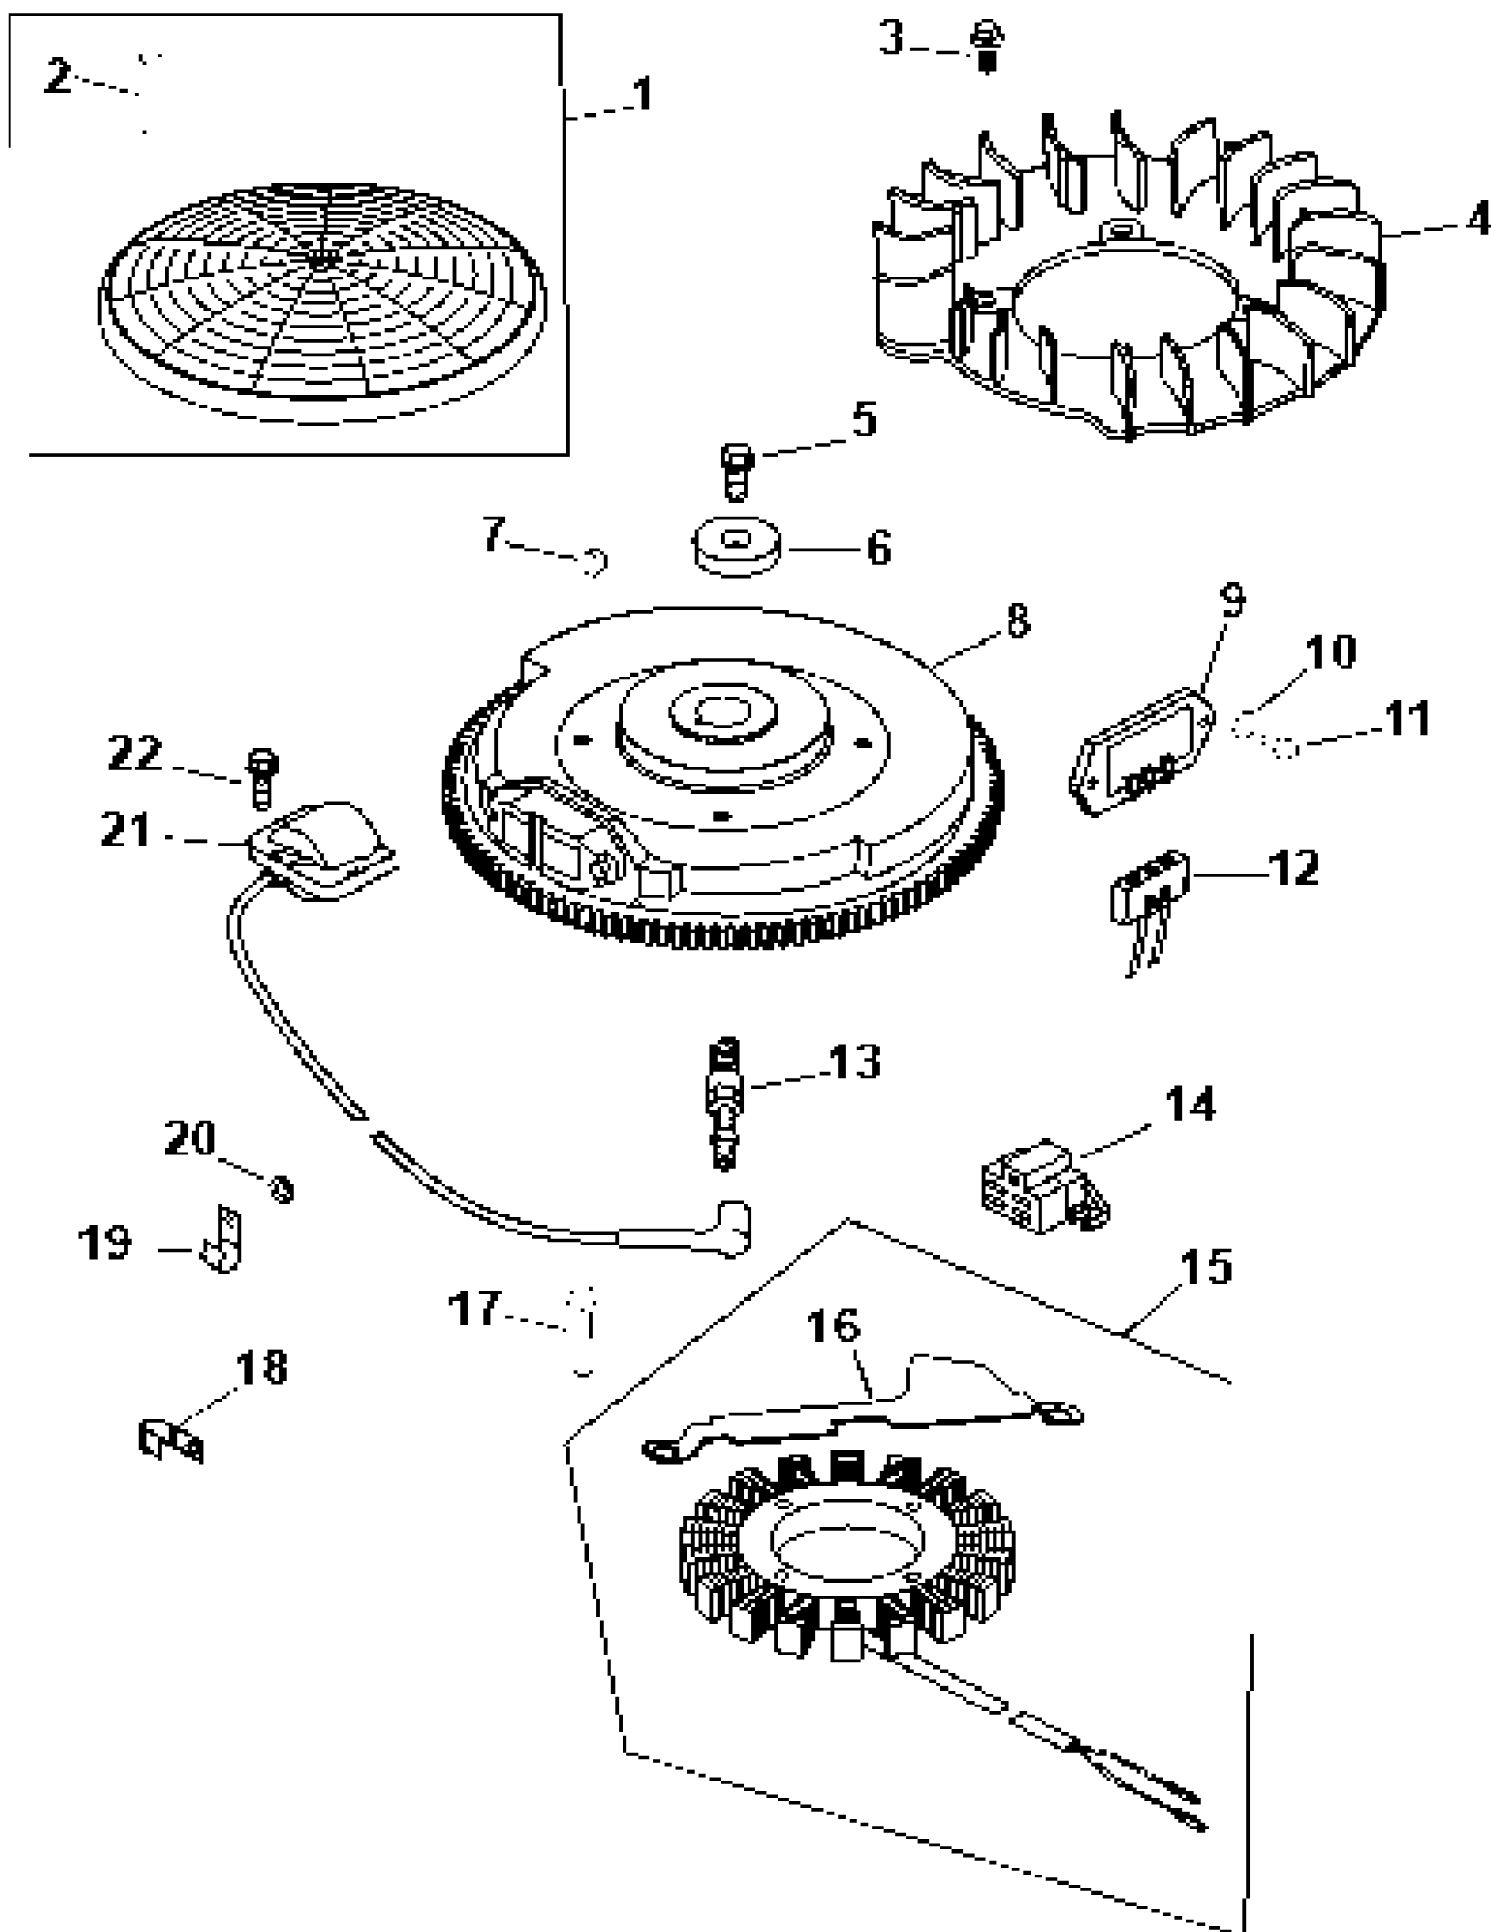

LT1046 Tractor (2007 & before)
Command Engine Ignition Electrical

Page 20 of 109


Ref #	Part Number	Qty	S/P/F	Description
1	KH-54-755-15	1	/P	Grass Screen Kit
2	KH-25-086-117-S	4		Sems Screw
3	KH-25-086-47	4	/P	Shoulder Bolt
4	KH-24-157-08-S	1		Fan
5	KH-12-086-14	1		Hex Flange Screw
6	KH-12-468-03	1	/P	Washer
7	KH-X-42-15	1	/P	Key
8	KH-24-025-04	1	S	Flywheel
9	KH-41-403-09	1	S	Regulator Rectifier
10	KH-X-25-92	2		Washer
11	KH-24-086-18	2		Hex Head Screw
12	KH-236602-S	1	S	Connector
13	759-3336	2	/P	Spark Plug
14	KH-25-155-06	1		Connector
15	KH-54-755-09-S	1	S	15 amp Stator
16	KH-24-126-139-S	1		Stator Wire Bracket
17	KH-M-548025-S	2	/P	Hex Head Screw
18	KH-235173	1		Cable Clip
19	KH-48-154-02	1		Clip
20	KH-X-25-63	1	/P	Washer
21	KH-24-584-01	2	S	Ignition Module
22	KH-M-545020-S	4		Screw
	KH-24-126-137-S	1		Ground Strap Bracket (not illustrated)
	KH-25-468-07-S	1		Flat Washer (not illustrated)
	KH-24-176-82-S	1		Wiring Harness (not illustrated)
	KH-47-154-01-S	1	/P	Clip (not illustrated)
	KH-25-454-03-S	2		Tie (not illustrated)

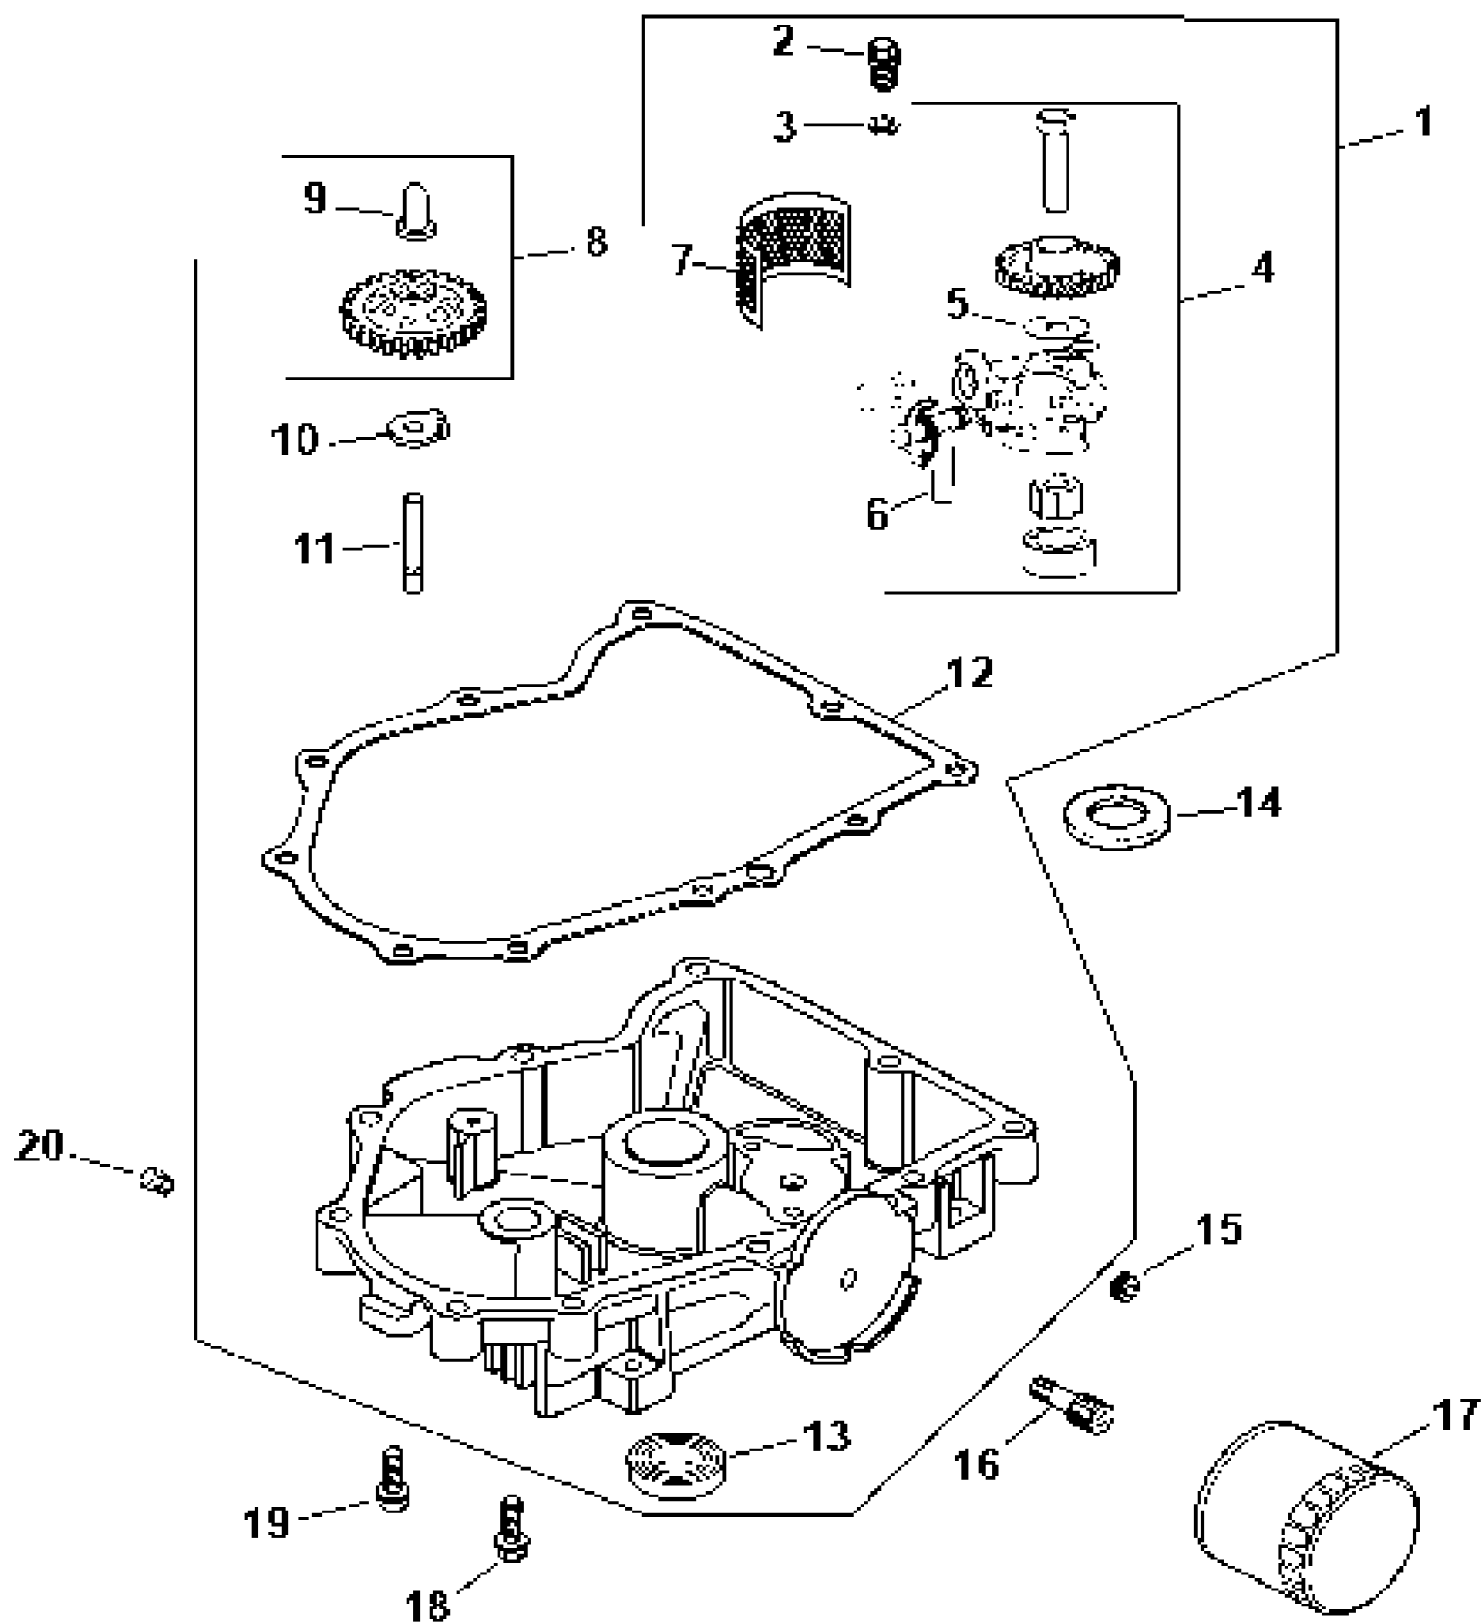

LT1046 Tractor (2007 & before)
Command Engine Oil Pan Lubrication

Page 22 of 109


Ref #	Part Number	Qty	S/P/F	Description
1	KH-24-199-07	1		Oil Pan w/Gasket Kit
2	KH-M-645025-S	2	/P	Screw
3	KH-M-631005	2	/P	Washer
4	KH-24-393-37-S	1	S	Oil Pump Kit
5	KH-24-153-01	1	/P	O-Ring
6	KH-24-381-11-S	1		Oil Pickup Tube
7	KH-24-162-26-S	1		Oil Screen
8	KH-24-043-12	1	/P	Governor Gear w/Pin Kit
9	KH-12-380-01	1	/P	Pin
10	KH-24-448-02-S	1		Locking Tab
11	KH-12-144-02	1		Governor Gear Shaft
12	KH-24-041-54-S	1	/P	Oil Pan Gasket
13	KH-52-032-08-S	1	S	Seal
14	KH-24-422-03-S	1		Thrust Shim
15	KH-25-139-62-S	1	/P	Pipe Plug
16	KH-24-136-01	1		Oil Filter Nipple
17	KH-12-050-08	1	S	Oil Filter
18	KH-24-086-17-S	1	/P	Hex Flange Screw
19	KH-24-086-16-S	9	S	Hex Flange Screw (M6 x 1.0 x 25)
20	KH-52-139-02	1	/P	Plug
	KH-25-099-24-S	1	S	Oil Pressure Switch (not illustrated)

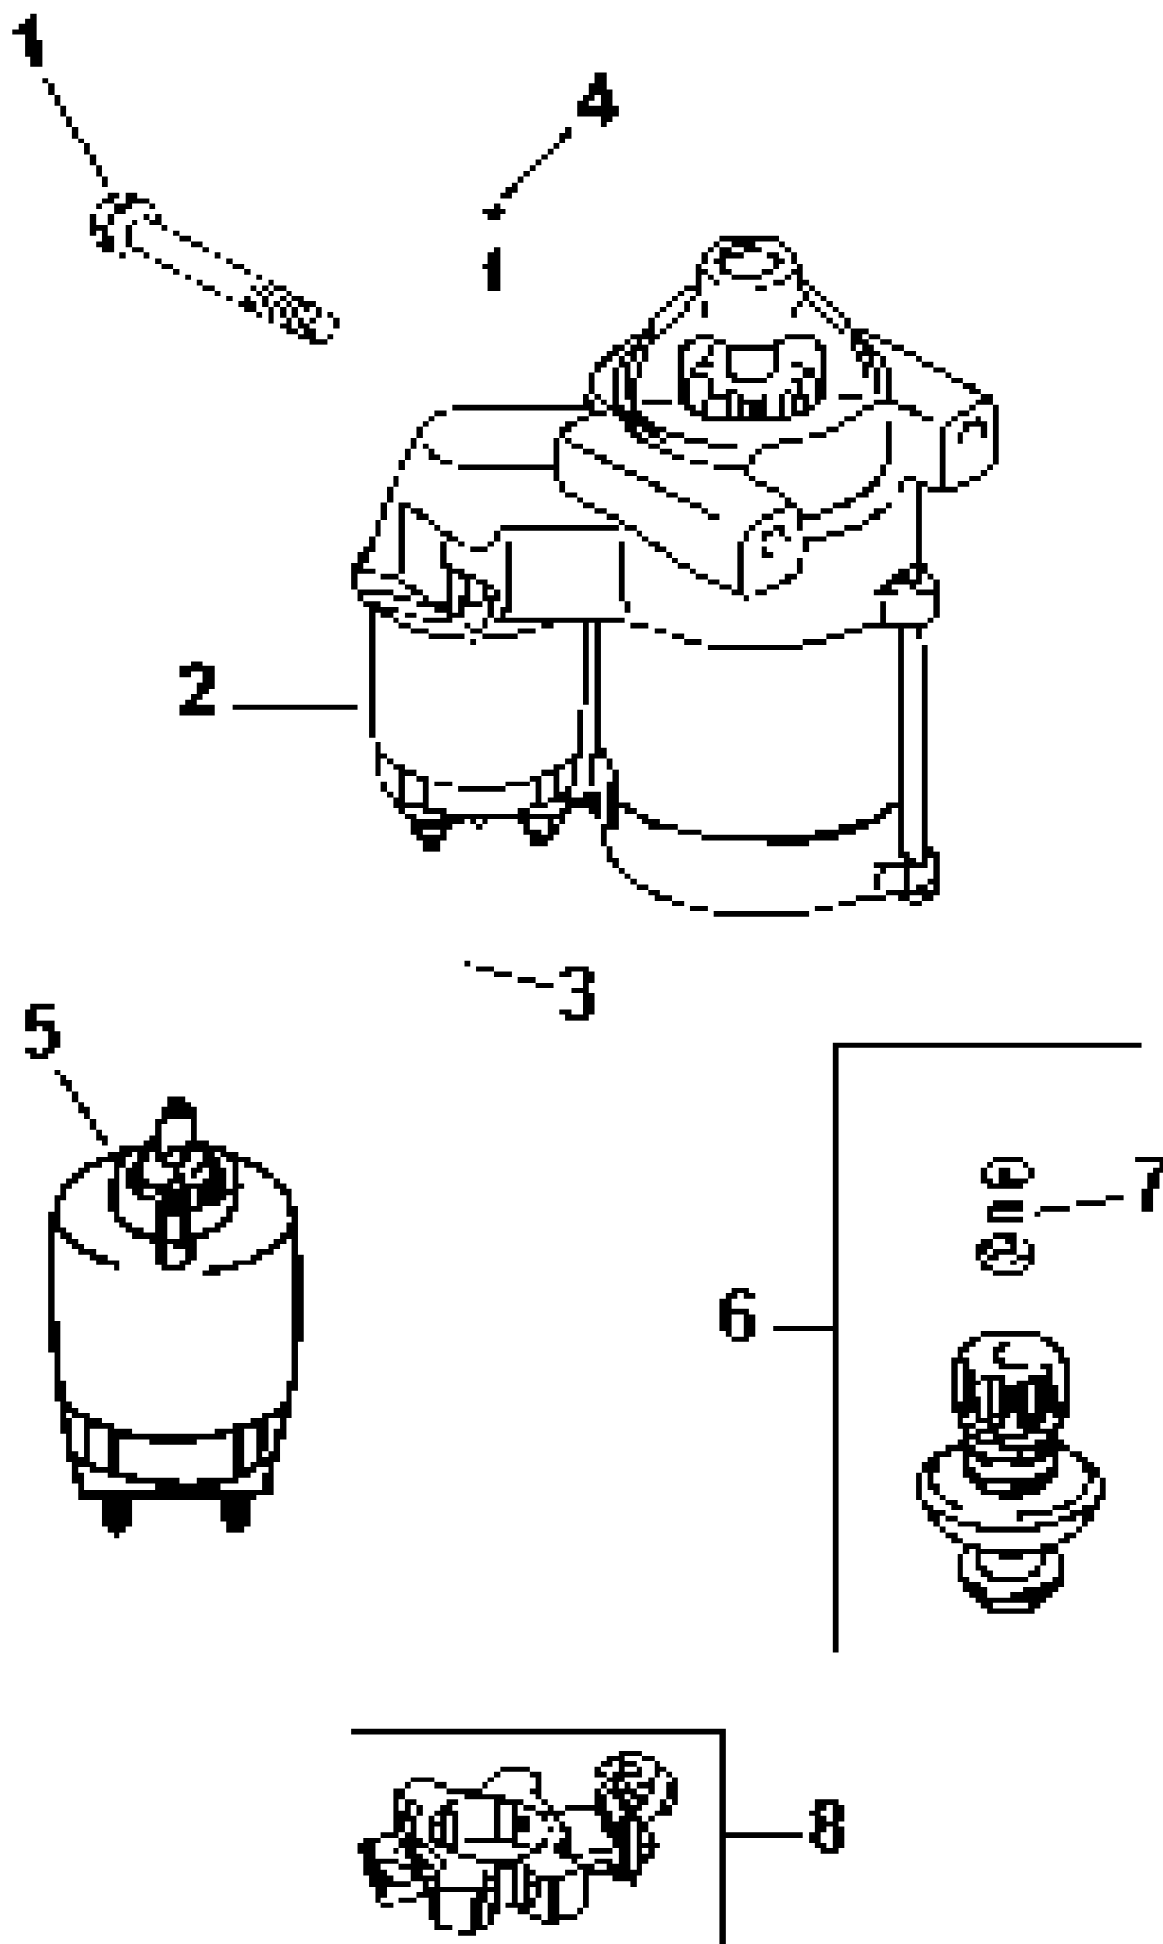

LT1046 Tractor (2007 & before)
Command Engine Starting System

Page 24 of 109


Ref #	Part Number	Qty	S/P/F	Description
1	KH-M-839080	2	S	Hex Flange Screw (M8 x 1.25 x 80)
2	KH-25-098-09-S	1	S	Solenoid Shift Starter
3	KH-M-0841080	1	S	Hex Flange Nut (M8 x 1.25)
4	KH-25-086-113-S	3		External Torx Head Screw
5	KH-25-435-05-S	1	S	Solenoid Kit
6	KH-25-755-33-S	1		Starter Pinion Kit
7	KH-25-141-05-S	1		Ring
8	KH-25-221-01-S	1		Brush Kit

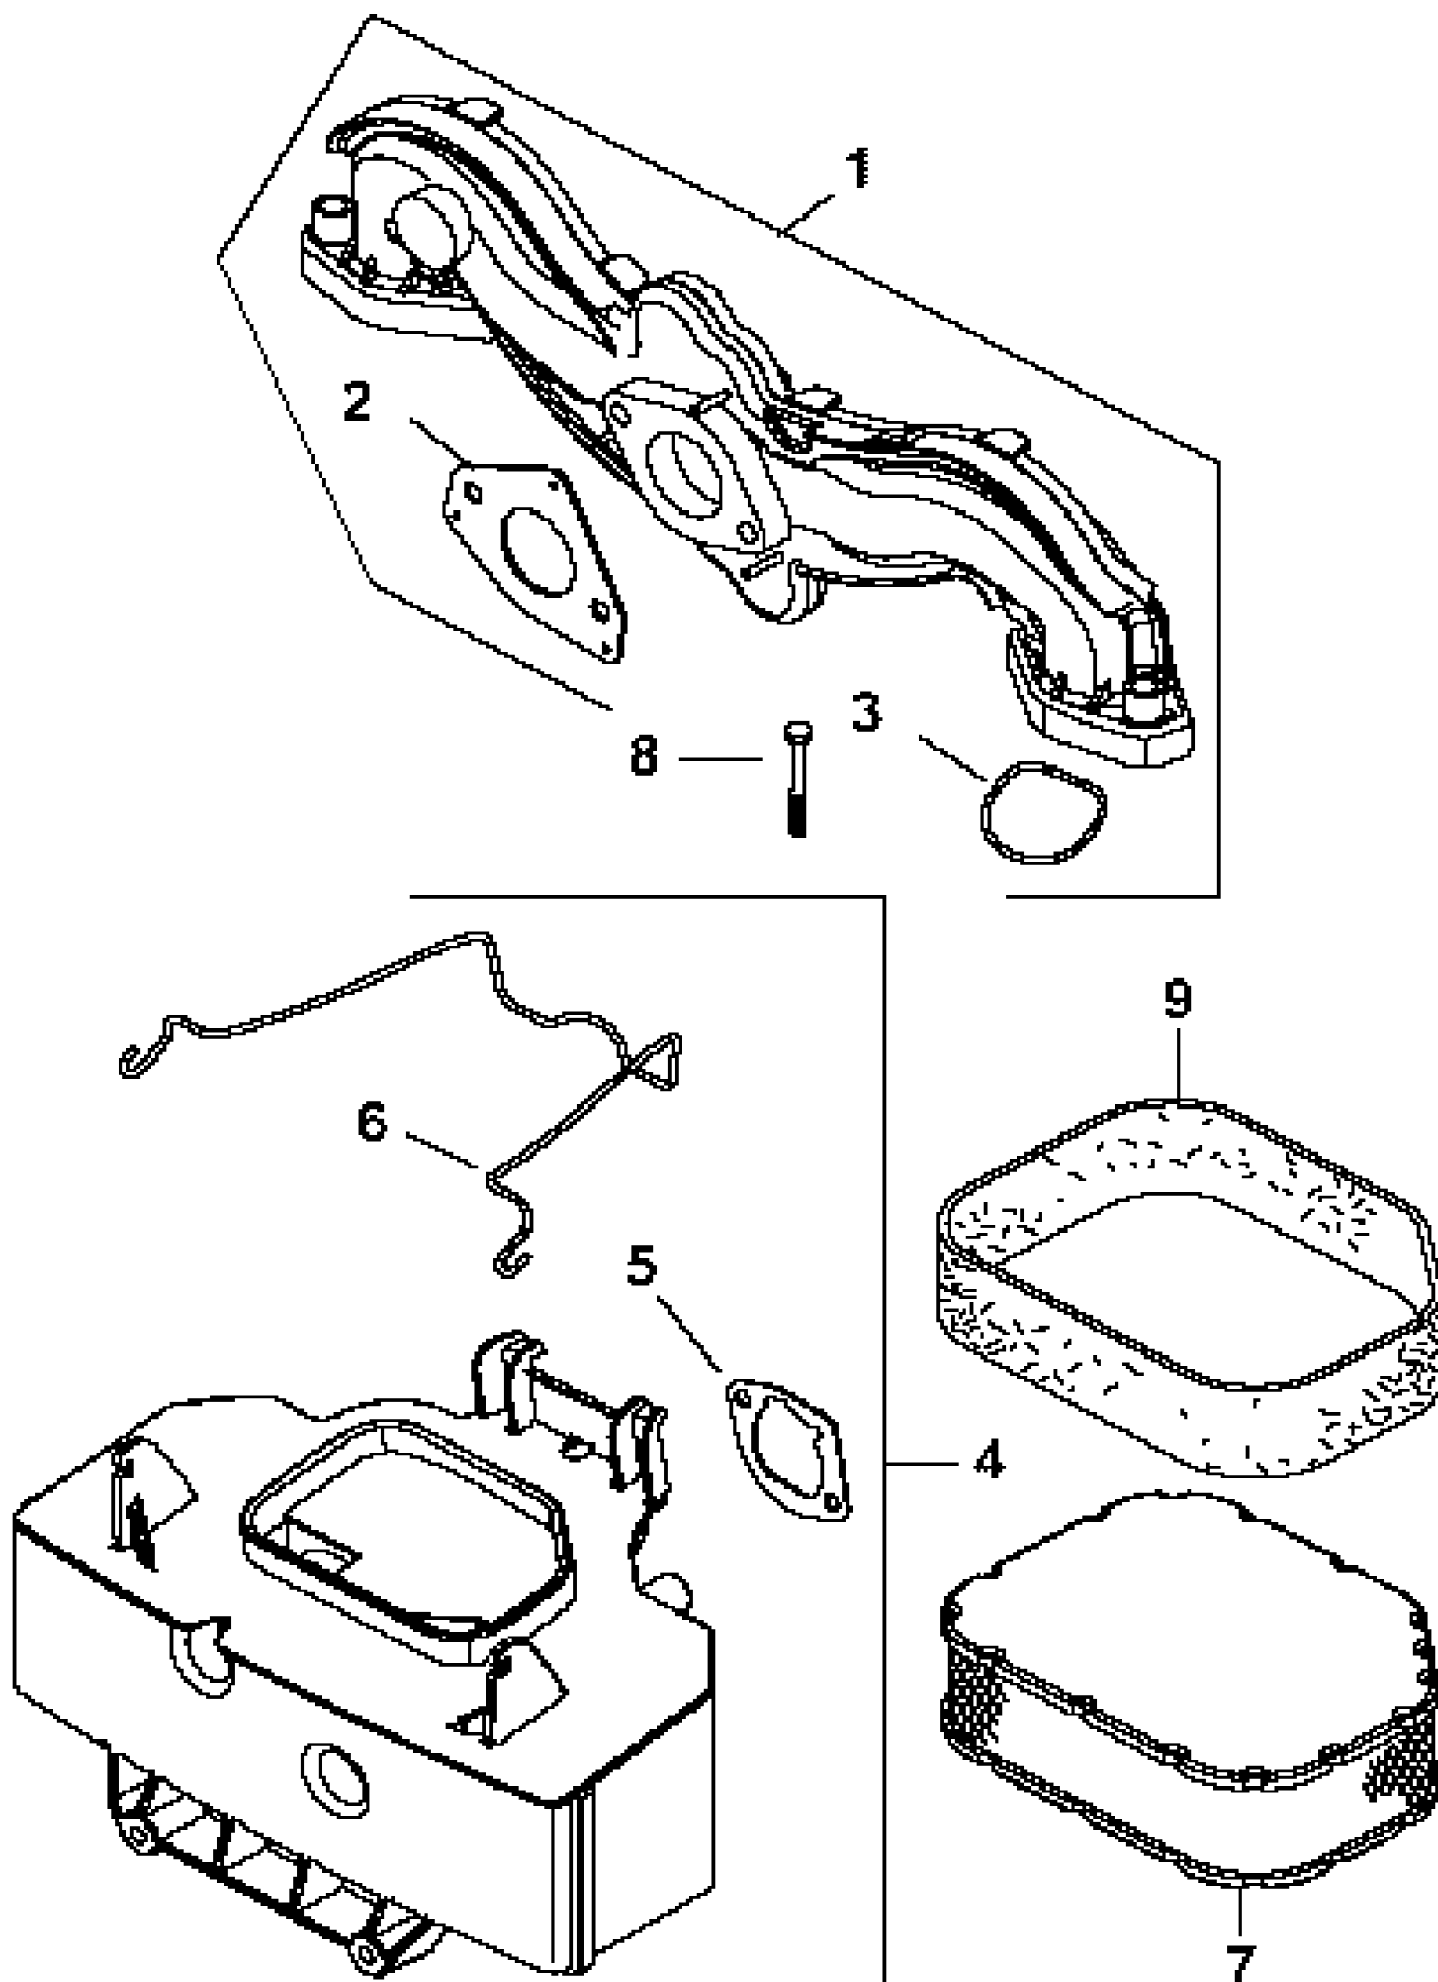

LT1046 Tractor (2007 & before)
 Courage Engine Air Filtration

Page 26 of 109


Ref #	Part Number	Qty	S/P/F	Description
1	KH-24-164-51-S	1	S	Intake Manifold
2	KH-24-041-52-S	1	/P	Carburetor Gasket
3	KH-24-153-27-S	2	/P	Intake Port O-Ring
4	KH-32-094-03-S	1	S	Air Cleaner Base
5	KH-24-041-14	1	/P	Air Cleaner Base Gasket
6	KH-32-344-02-S	1		Air Cleaner Element Latch
7	KH-32-083-03-S	1	S	Air Filter Element
8	KH-M-651040-S	4		Hex Flange Screw
9	KH-32-083-05-S	1	S	Pre Filter

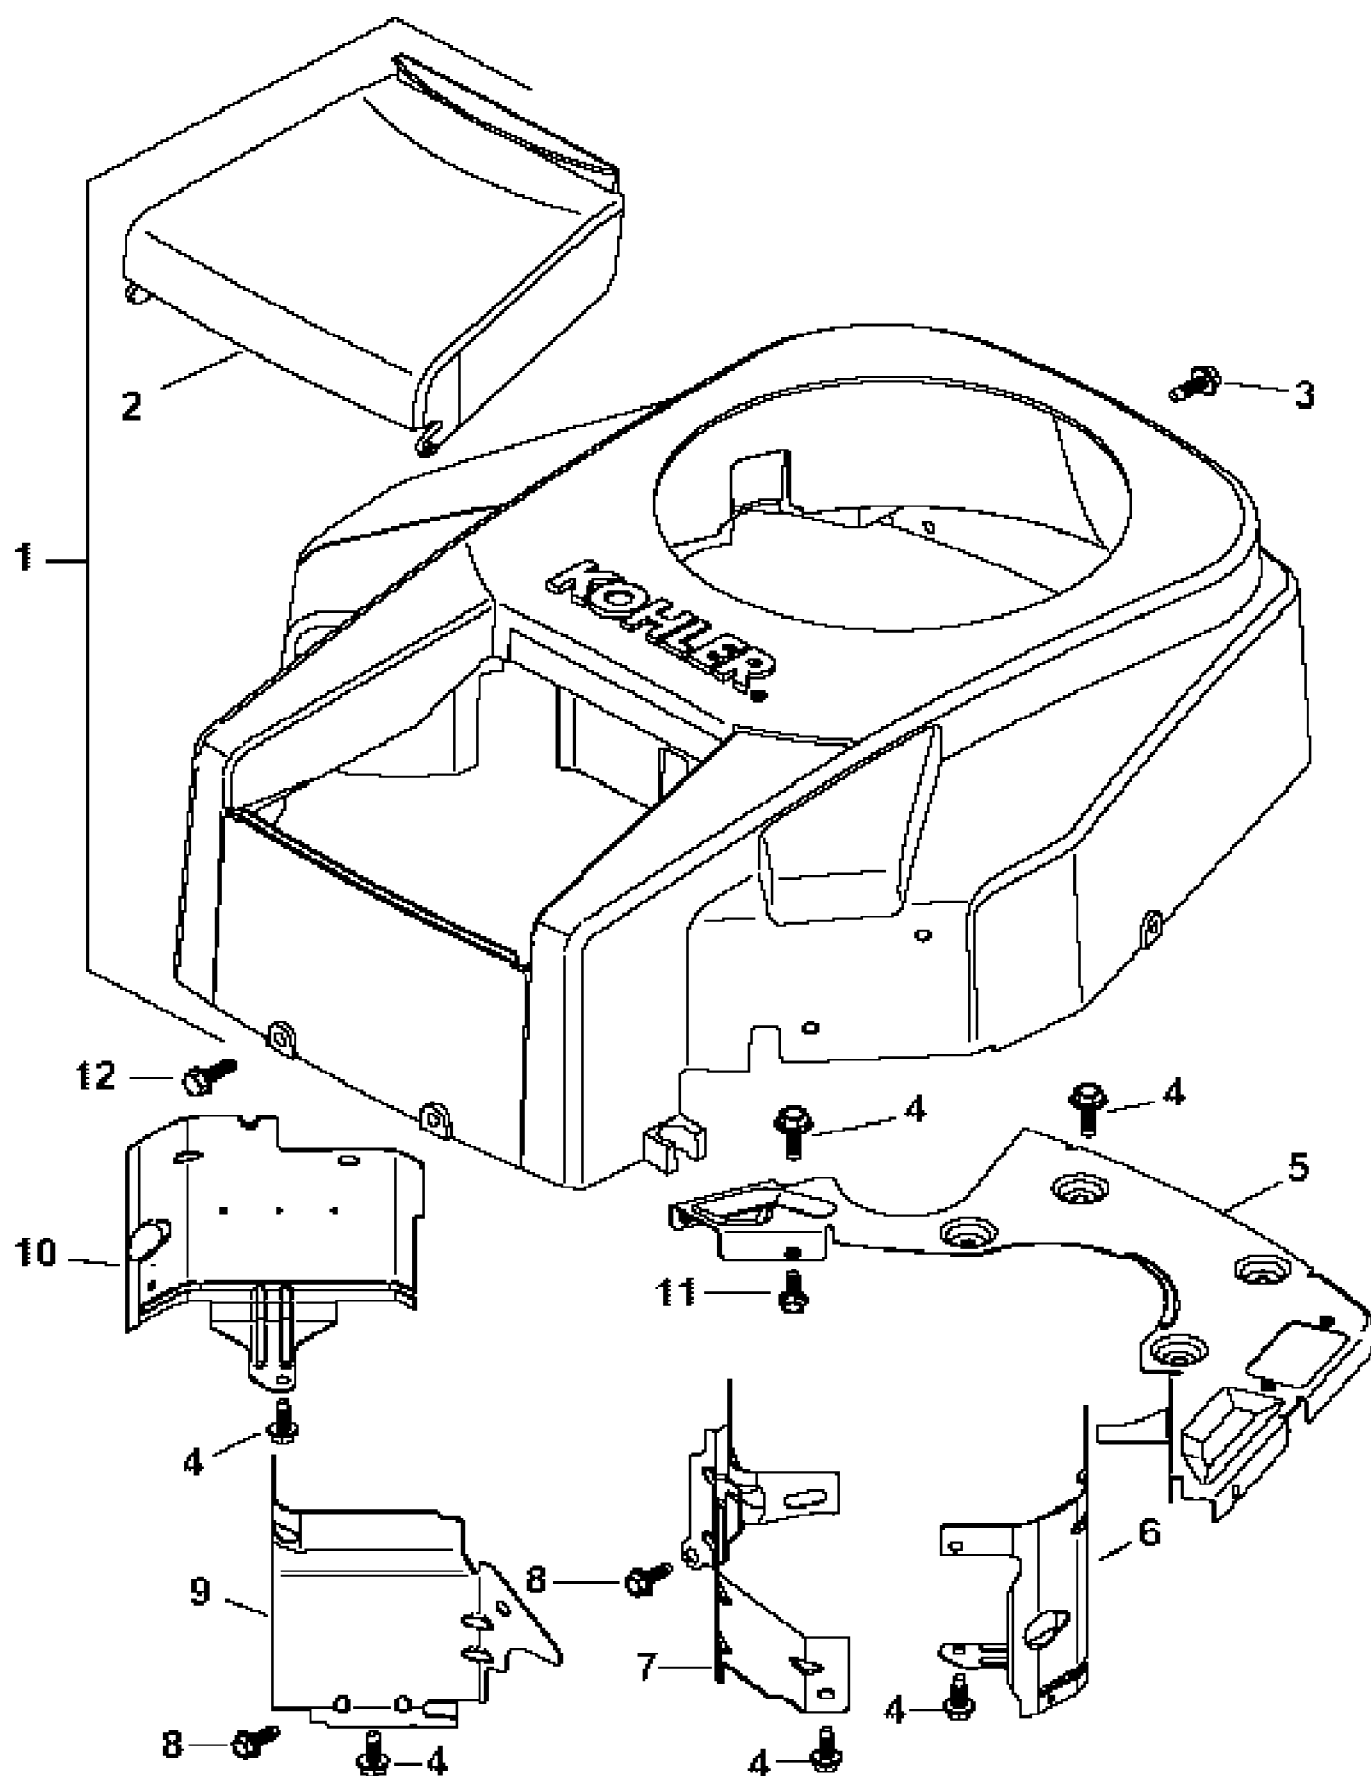


LT1046 Tractor (2007 & before)
 Courage Engine Blower

Page 28 of 109

Ref #	Part Number	Qty	S/P/F	Description
1	KH-32-027-03-S	1		Blower Housing
2	KH-32-096-08-S	1		Air Cleaner Cover
3	KH-M545016-S	4		Hex Flange Screw
4	KH-M-645016-S	8	/P	Hex Flange Screw
5	KH-32-146-05-S	1		Backing Plate (Regulator Opening)
6	KH-32-063-05-S	1		Cylinder Barrel Baffle # 2
7	KH-32-063-02-S	1		Valley Baffle # 2
8	KH-M-0545010	2	/P	Hex Flange Screw
9	KH-32-063-03-S	1		Valley Baffle # 1
10	KH-32-063-06-S	1		Cylinder Barrel Baffle # 1
11	KH-M-545020-S	2		Hex Flange Screw
12	KH-24-086-12	2		Hex Cap Screw
	KH-41-037-10-S	1		Service Nameplate

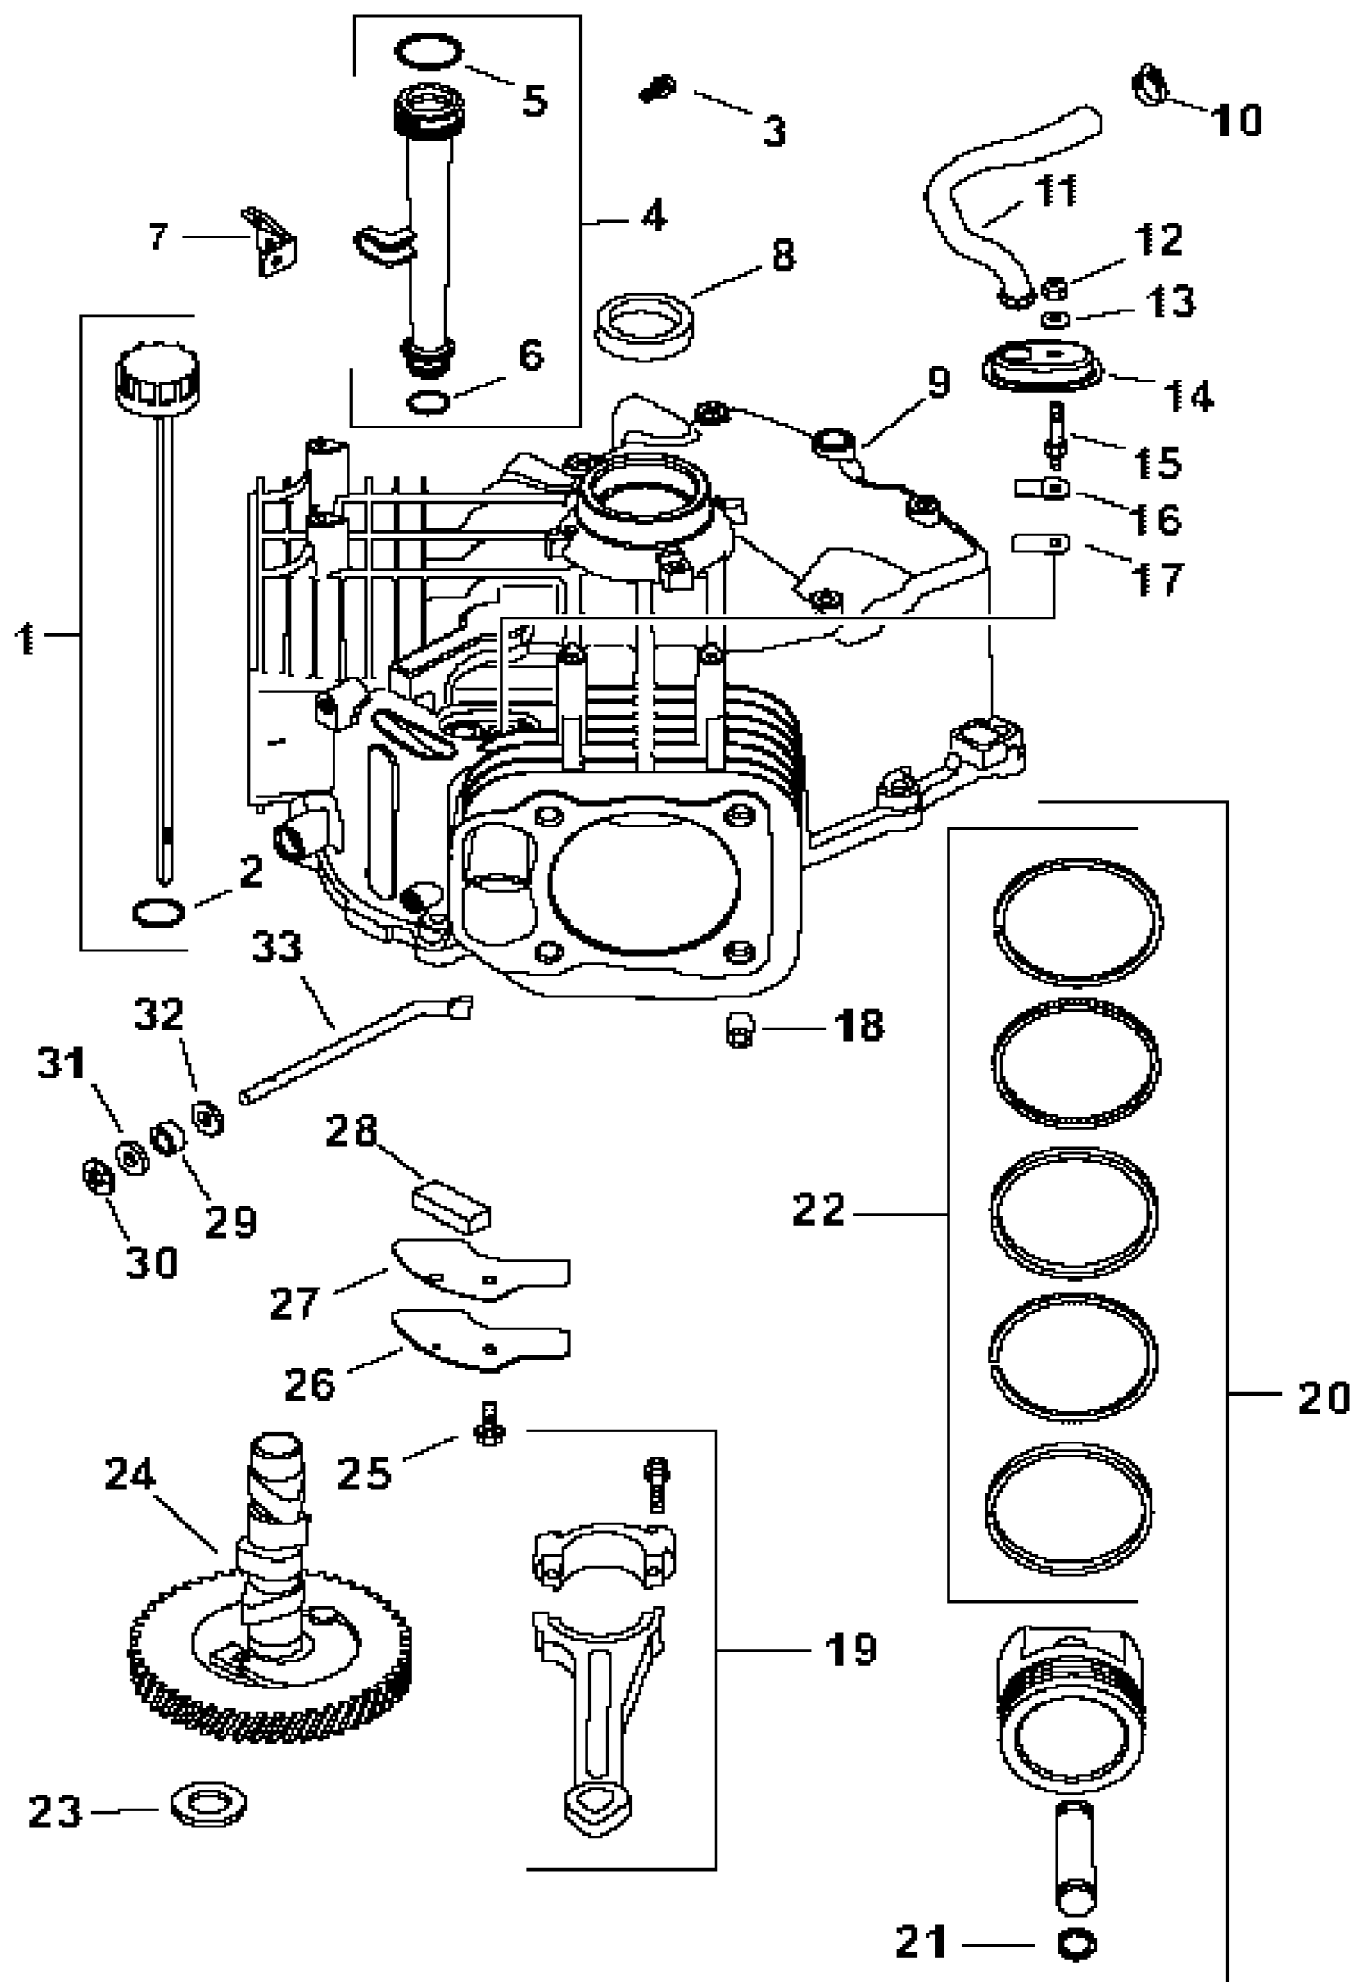


Ref #	Part Number	Qty	S/P/F	Description
1	KH-32-038-01-S	1	S	Dipstick Kit
2	KH-12-153-03	1		O-Ring
3	KH-M-545016-S	1	/P	Hex Flange Screw
4	KH-12-123-04	1	S	Oil Fill Tube
5	KH-12-153-02-S	1	/P	Upper Oil Fill Tube O-Ring
6	KH-12-153-01-S	1	/P	Lower Oil Fill Tube O-Ring
7	KH-24-126-19	1		Oil Fill Tube Bracket
8	KH-24-032-01-S	1	S	Oil Seal
9		1		Use Short Block
10	KH-25-237-14-S	1	/P	Hose Clamp
11	KH-32-326-04-S	1		Breather Hose
12	KH-M-547050-S	1		Hex Lock Nut
13	KH-32-468-01-S	1		Sealing Washer
14	KH-32-081-02-S	1		Breather Housing
15	KH-32-072-02-S	2		Breather Cover Stud
16	KH-24-018-04	2		Breather Reed Retainer
17	KH-24-402-05-S	2	/P	Breather Reed
18	KH-24-380-16-S	6	/P	Locating Pin
19	KH-24-067-13-S	2	S	Connecting Rod (Std.)
20	KH-32-874-06-S	2		Piston With Ring Set (Std.)
21	KH-24-018-01	4	S	Piston Pin Retainer
22	KH-24-108-05-S	2	/P	Ring Set (Std.)
22	KH-24-108-06-S	2	S	Ring Set (.25)
23	KH-12-422-07	1	S	Camshaft Shim (White) A/R
23	KH-12-422-08	1	S	Camshaft Shim (Blue) A/R
23	KH-12-422-09	1	S	Camshaft Shim (Red) A/R
23	KH-12-422-10	1	S	Camshaft Shim (Yellow) A/R
23	KH-12-422-11	1	S	Camshaft Shim (Green) A/R
23	KH-12-422-12	1	S	Camshaft Shim (Gray) A/R
23	KH-12-422-13	1	S	Camshaft Shim (Black) A/R
24	KH-32-012-01-S	1		Camshaft Kit
25	KH-M-645016-S	1	/P	Hex Flange Screw
26	KH-32-096-04-S	1		Breather Cover
27	KH-32-041-01-S	1		Breather Cover Gasket
28	KH-32-050-01-S	1		Breather Filter
29	KH-28-032-09-S	1		Governor Cross Shaft Seal
30	KH-24-018-09-S	1		Retainer Ring
31	KH-M-931010-S	1		Plain Washer 8 mm
32	KH-24-468-15-S	1		Flat Washer 1/4"
33	KH-24-144-38-S	1	/P	Governor Cross Shaft
	KH-SV720-0010	1		Complete Engine
	KH-32-522-03	1		Short Block
	KH-32-755-01-S	1		Overhaul Kit
	KH-20-755-04-S	1	F	Balance Weight Kit NLA, order short block

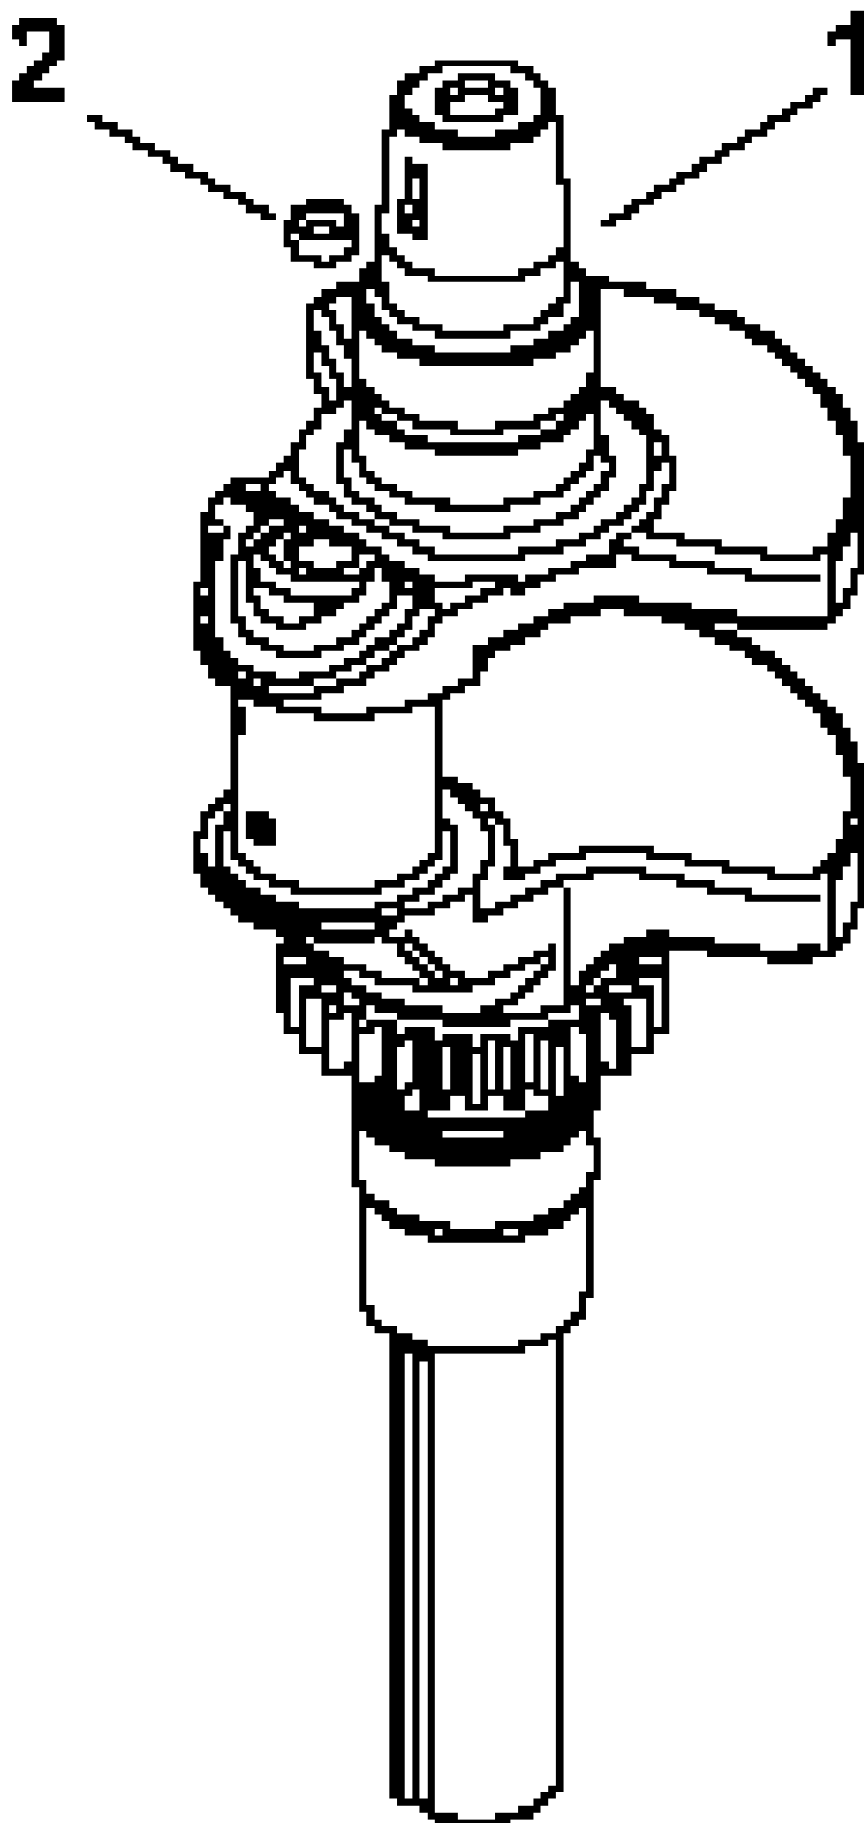

LT1046 Tractor (2007 & before)
Courage Engine Crankshaft

Page 32 of 109


Ref #	Part Number	Qty	S/P/F	Description
1	KH-32-014-02-S	1		Crankshaft (Includes Ref.# 2)
2	KH-52-139-09	1	S	Cup Plug

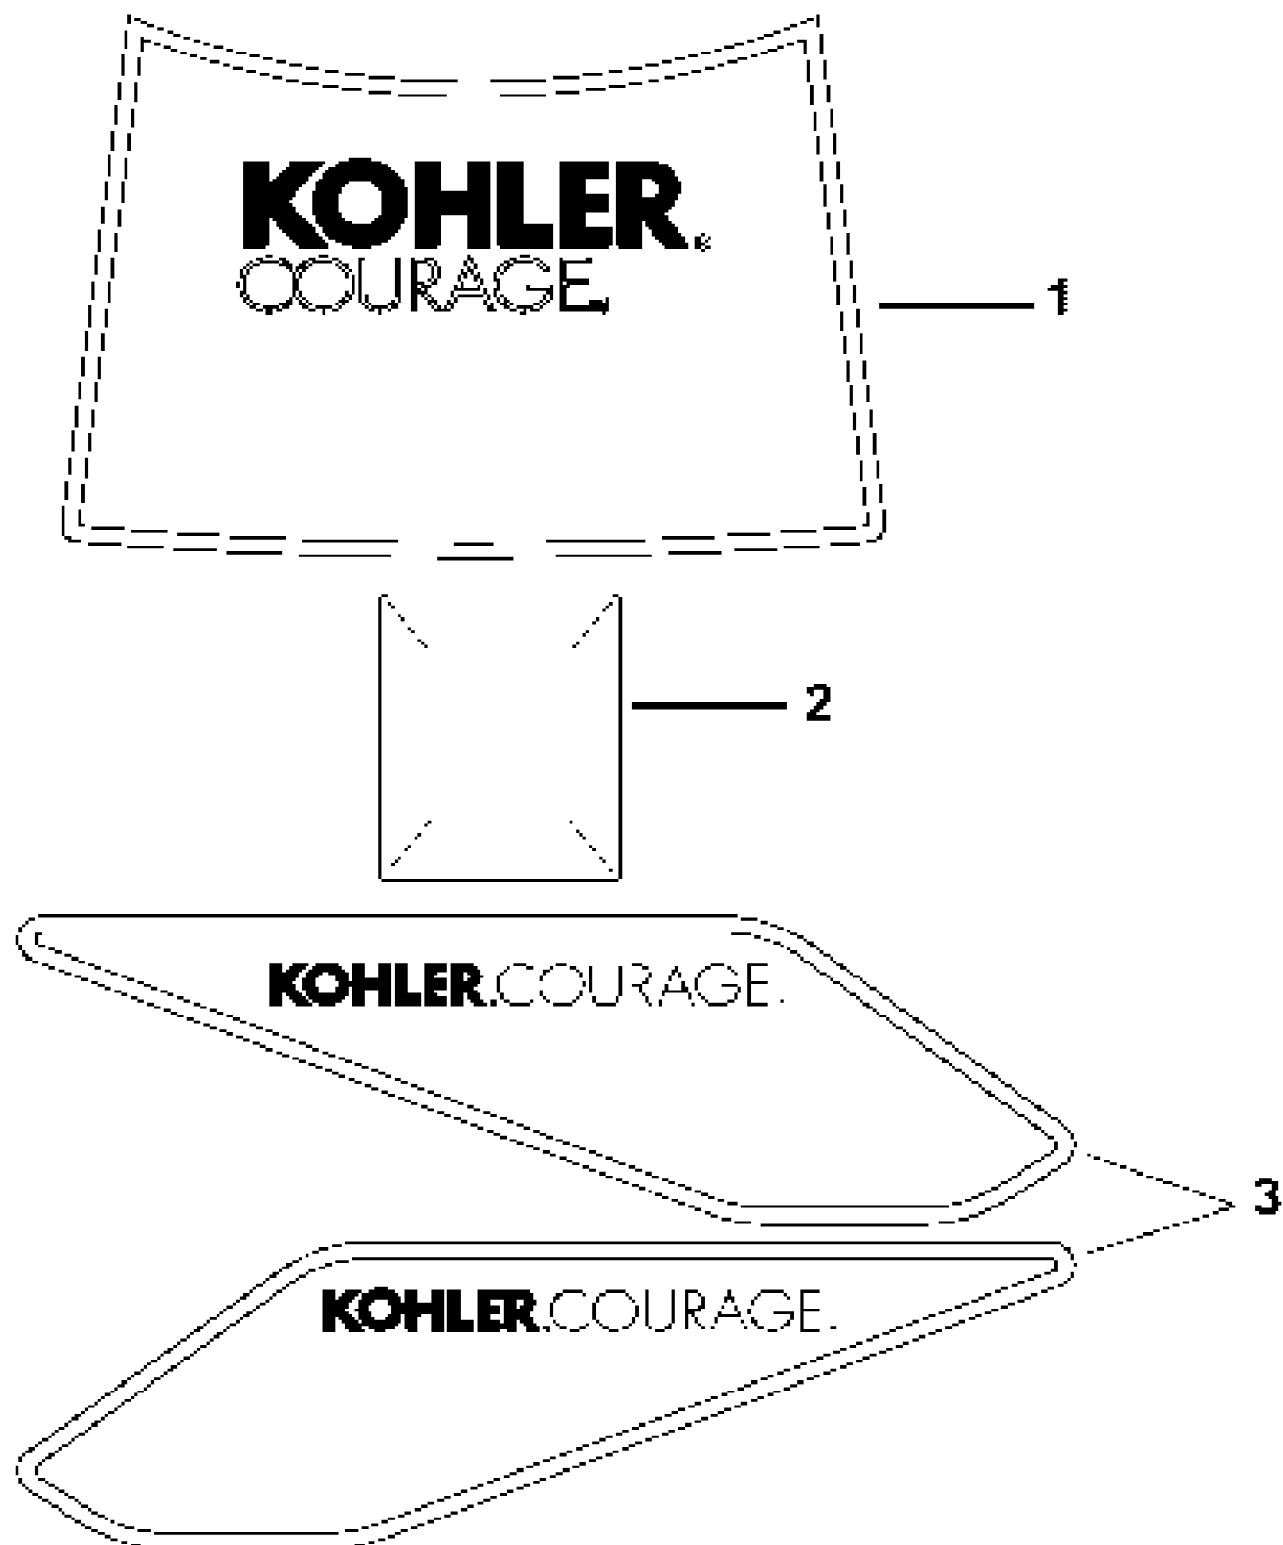

LT1046 Tractor (2007 & before)
Courage Engine Decals

Page 34 of 109


Ref #	Part Number	Qty	S/P/F	Description
1	KH-32-113-17-S	1		23 HP Decal
2	KH-25-113-39-S	1		Clear Laminate Decal
3	KH-32-113-20-S	1		2-Piece Wing Set

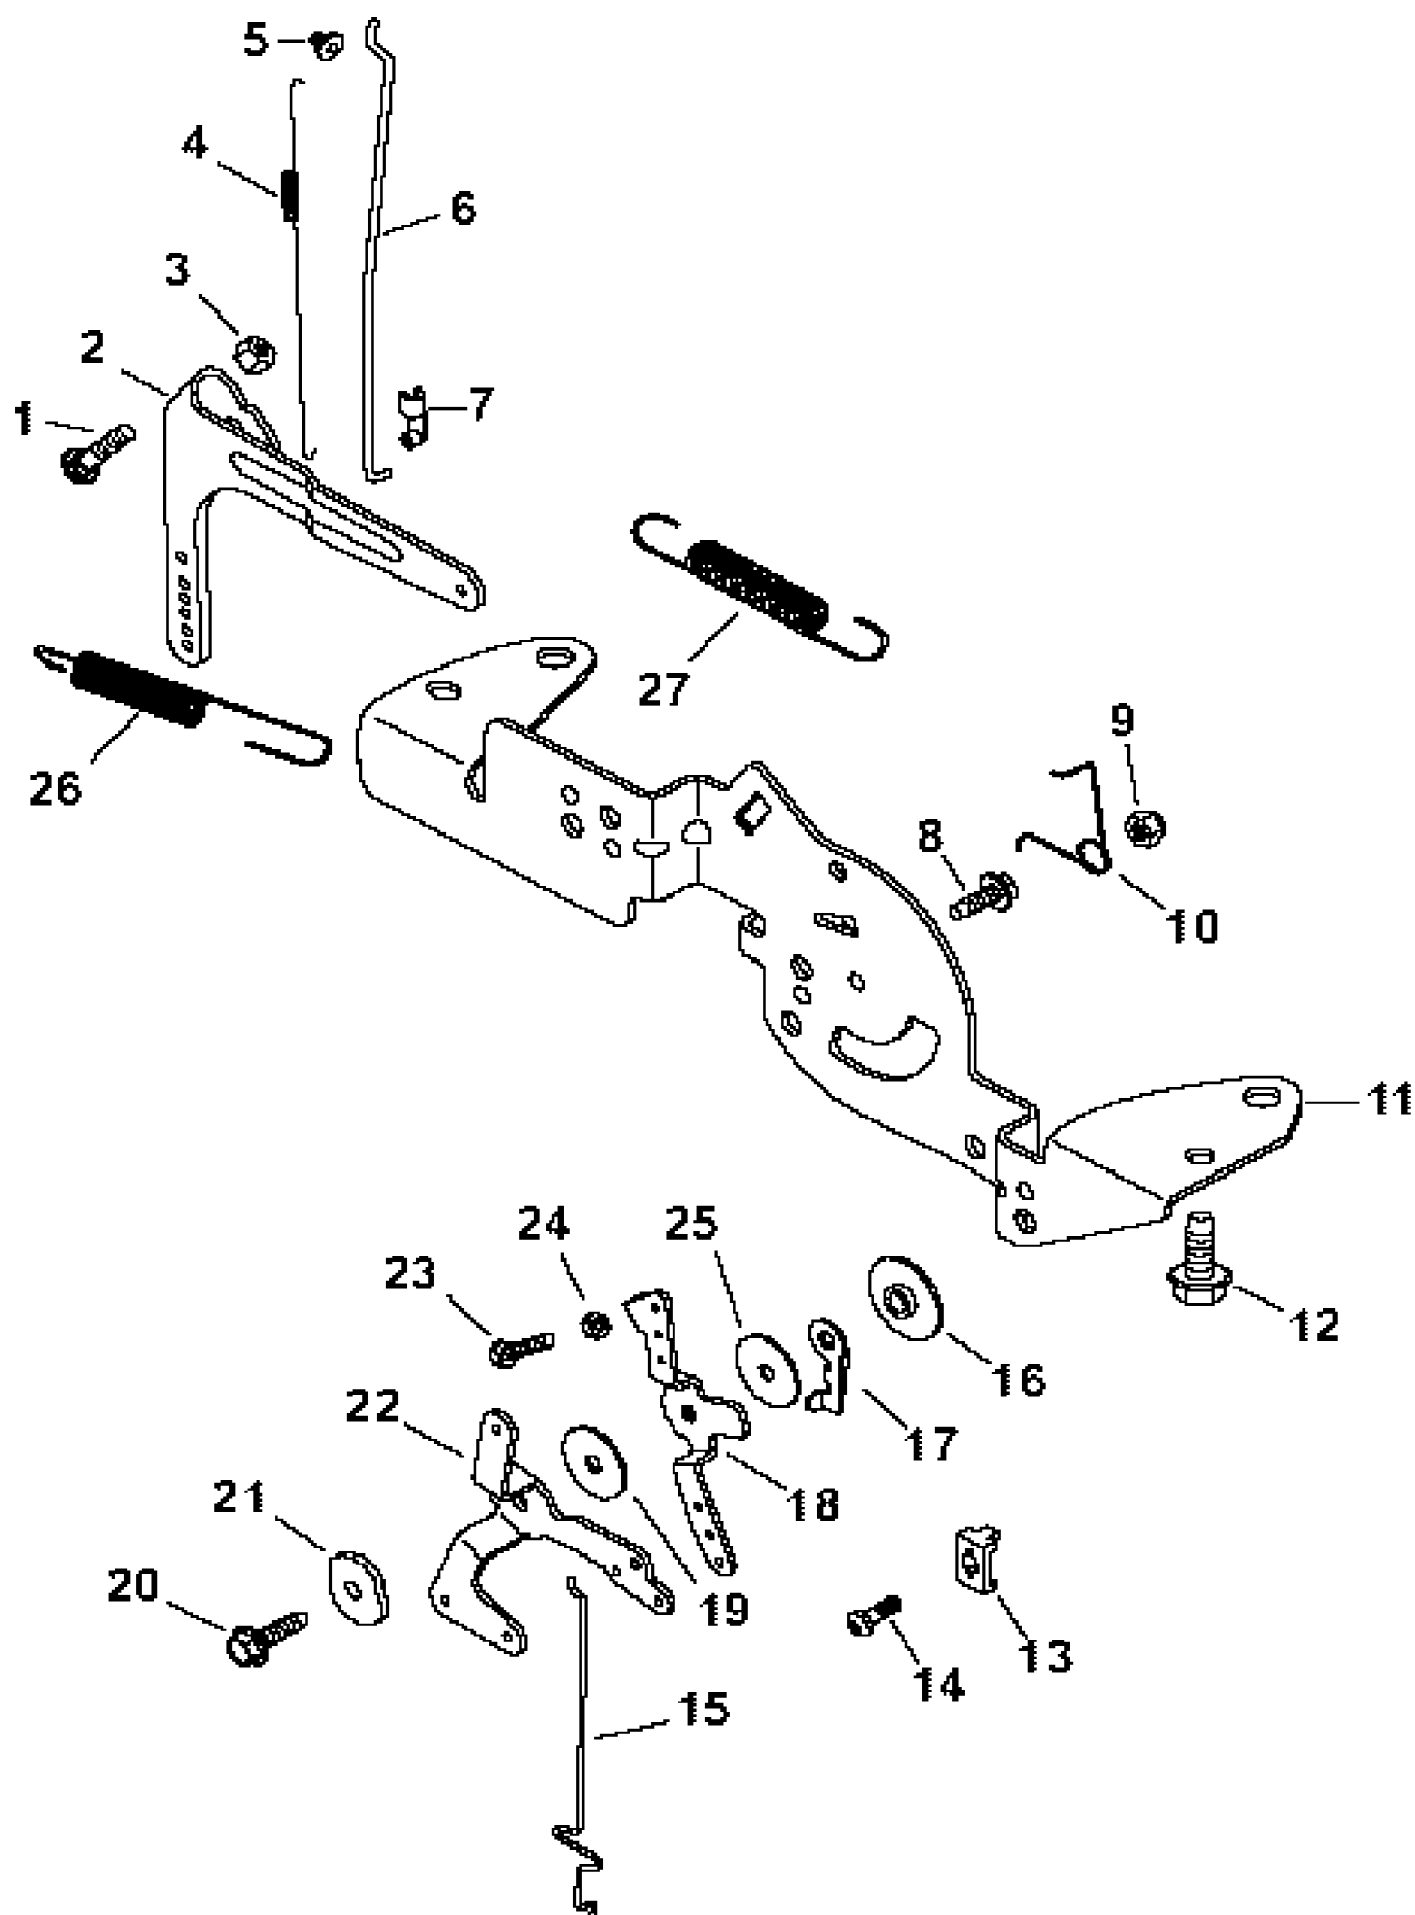

LT1046 Tractor (2007 & before)
 Courage Engine Engine Controls

Page 36 of 109


Ref #	Part Number	Qty	S/P/F	Description
1	KH-24-211-03-S	1		Round Head Square Neck Bolt
2	KH-24-090-33-S	1	S	Governor Lever
3	KH-M-641060-S	1	/P	Hex Flange Nut
4	KH-24-089-01	1		Linkage Spring
5	KH-25-158-08	1	/P	Linkage Retaining Bushing
6	KH-24-079-04	1		Throttle Linkage
7	KH-25-158-11	1	/P	Throttle Linkage Bushing
8	KH-M-545016-S	1	/P	Hex Flange Screw
9	KH-M-547050-S	1		Hex Lock Nut
10	KH-24-089-03	1		Choke Return Spring
11	KH-24-126-161-S	1	S	Control Bracket
12	KH-M-645016-S	4	/P	Hex Flange Screw
13	KH-47-237-02	1	S	Dual Conduit Clamp
14	KH-24-086-43-S	1		Thread Forming Screw
15	KH-24-079-22-S	1		Choke Linkage
16	KH-24-112-27-S	1		Control Assembly Spacer
17	KH-24-090-47-S	1		Throttle Actuator Lever
18	KH-24-090-13	1		Throttle Control Lever
19	KH-24-468-01	1		Plain Washer 5.5mm
20	KH-M-545020-S	1		Hex Flange Screw
21	KH-41-468-03	1		Spring Washer 1/4"
22	KH-24-090-05	1		Choke Lever
23	KH-M-403025	1		Hex Head Cap Screw
24	KH-M-446030-S	1	/P	Hex Nut
25	KH-24-468-20-S	1		Plain Washer
26	KH-24-089-25-S	1	/P	Governor Spring
27	KH-24-089-55-S	1		Governor Spring

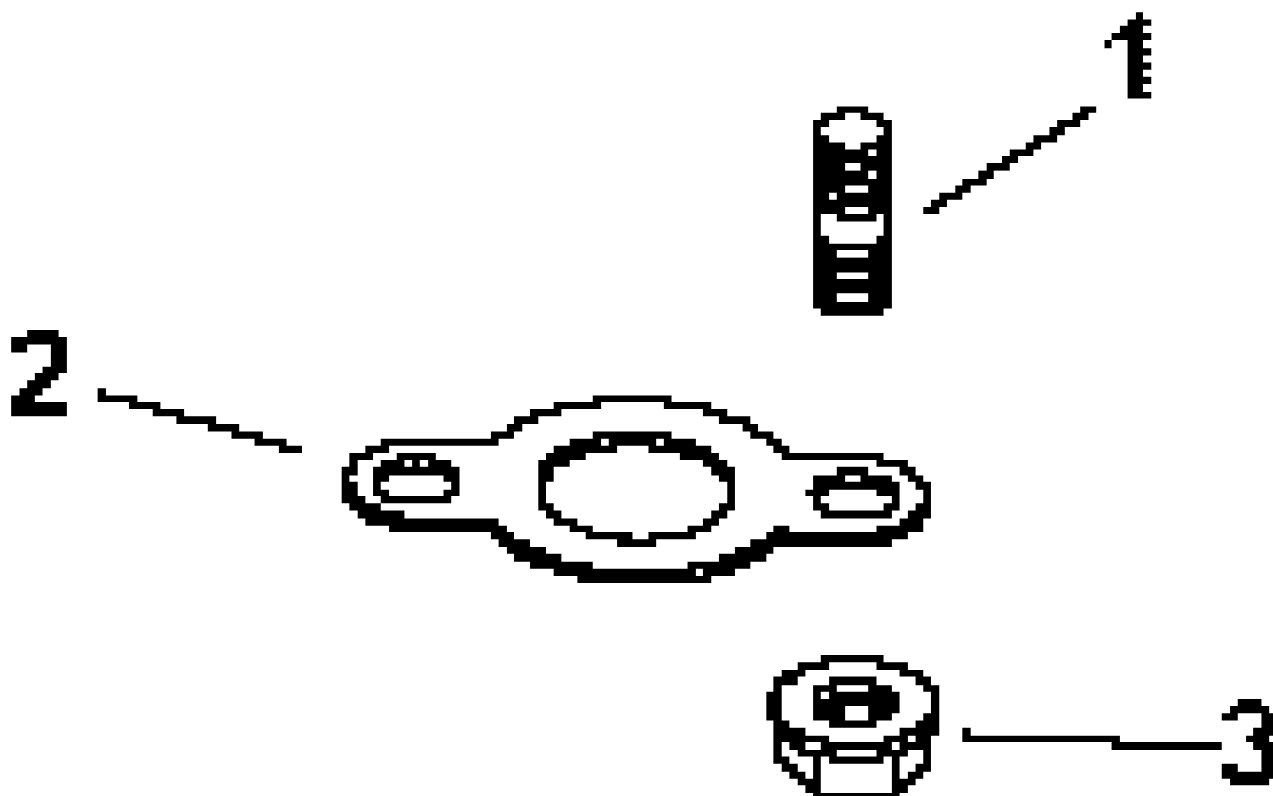

LT1046 Tractor (2007 & before)
Courage Engine Exhaust

Page 38 of 109


Ref #	Part Number	Qty	S/P/F	Description
1	KH-25-072-04	4	/P	Exhaust Stud
2	KH-24-041-49-S	1	/P	Exhaust Gasket
3	KH-M-0841080	4	S	Hex Flange Nut

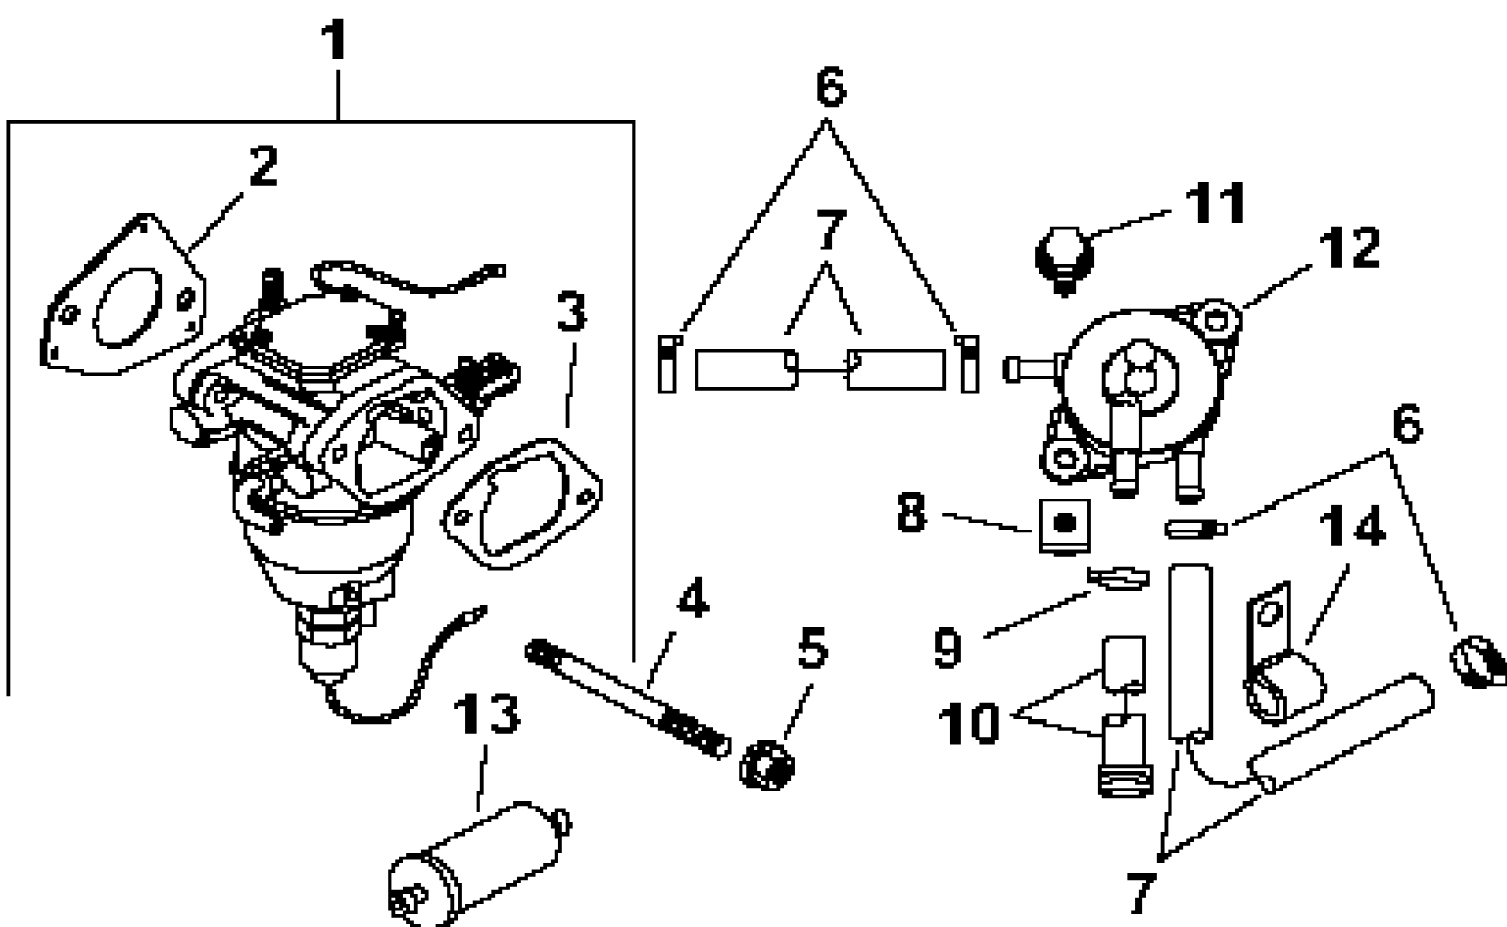

LT1046 Tractor (2007 & before)
 Courage Engine Fuel System

Page 40 of 109


Ref #	Part Number	Qty	S/P/F	Description
1	KH-32-853-03-S	1	S	Carburetor Kit w/Gaskets
2	KH-24-041-52-S	1	/P	Carburetor Gaskets
3	KH-24-041-14	1	/P	Air Cleaner Base Gasket
4	KH-M-629105-S	2		Carburetor Stud
5	KH-M-641060-S	2	/P	Hex Flange Nut
6	KH-25-237-14-S	4	/P	Hose Clamp
7	KH-25-111-34-S	2		Fuel Line
8	KH-24-100-01	2		Plastic Nut
9	KH-25-237-01-S	1		Hose Clamp
10	KH-32-326-02-S	1	S	Fuel Pump Hose
11	KH-24-086-12	2		Hex Cap Screw
12	KH-24-393-16	1	/P	Pulse Fuel Pump
13	KH-25-050-22-S	1	S	Fuel Filter
14	KH-47-154-01-S	1	/P	Cable Clip
	KH-24-757-36-S	1		Choke Repair Kit
	KH-24-757-38-S	1		Gasket Repair Kit
	KH-24-757-44-S	1		Float Kit w/Gaskets
	KH-24-757-45-S	1	/P	Solenoid Kit w/Gaskets
	KH-24-757-46-S	1	/P	Overhaul Kit w/Gaskets

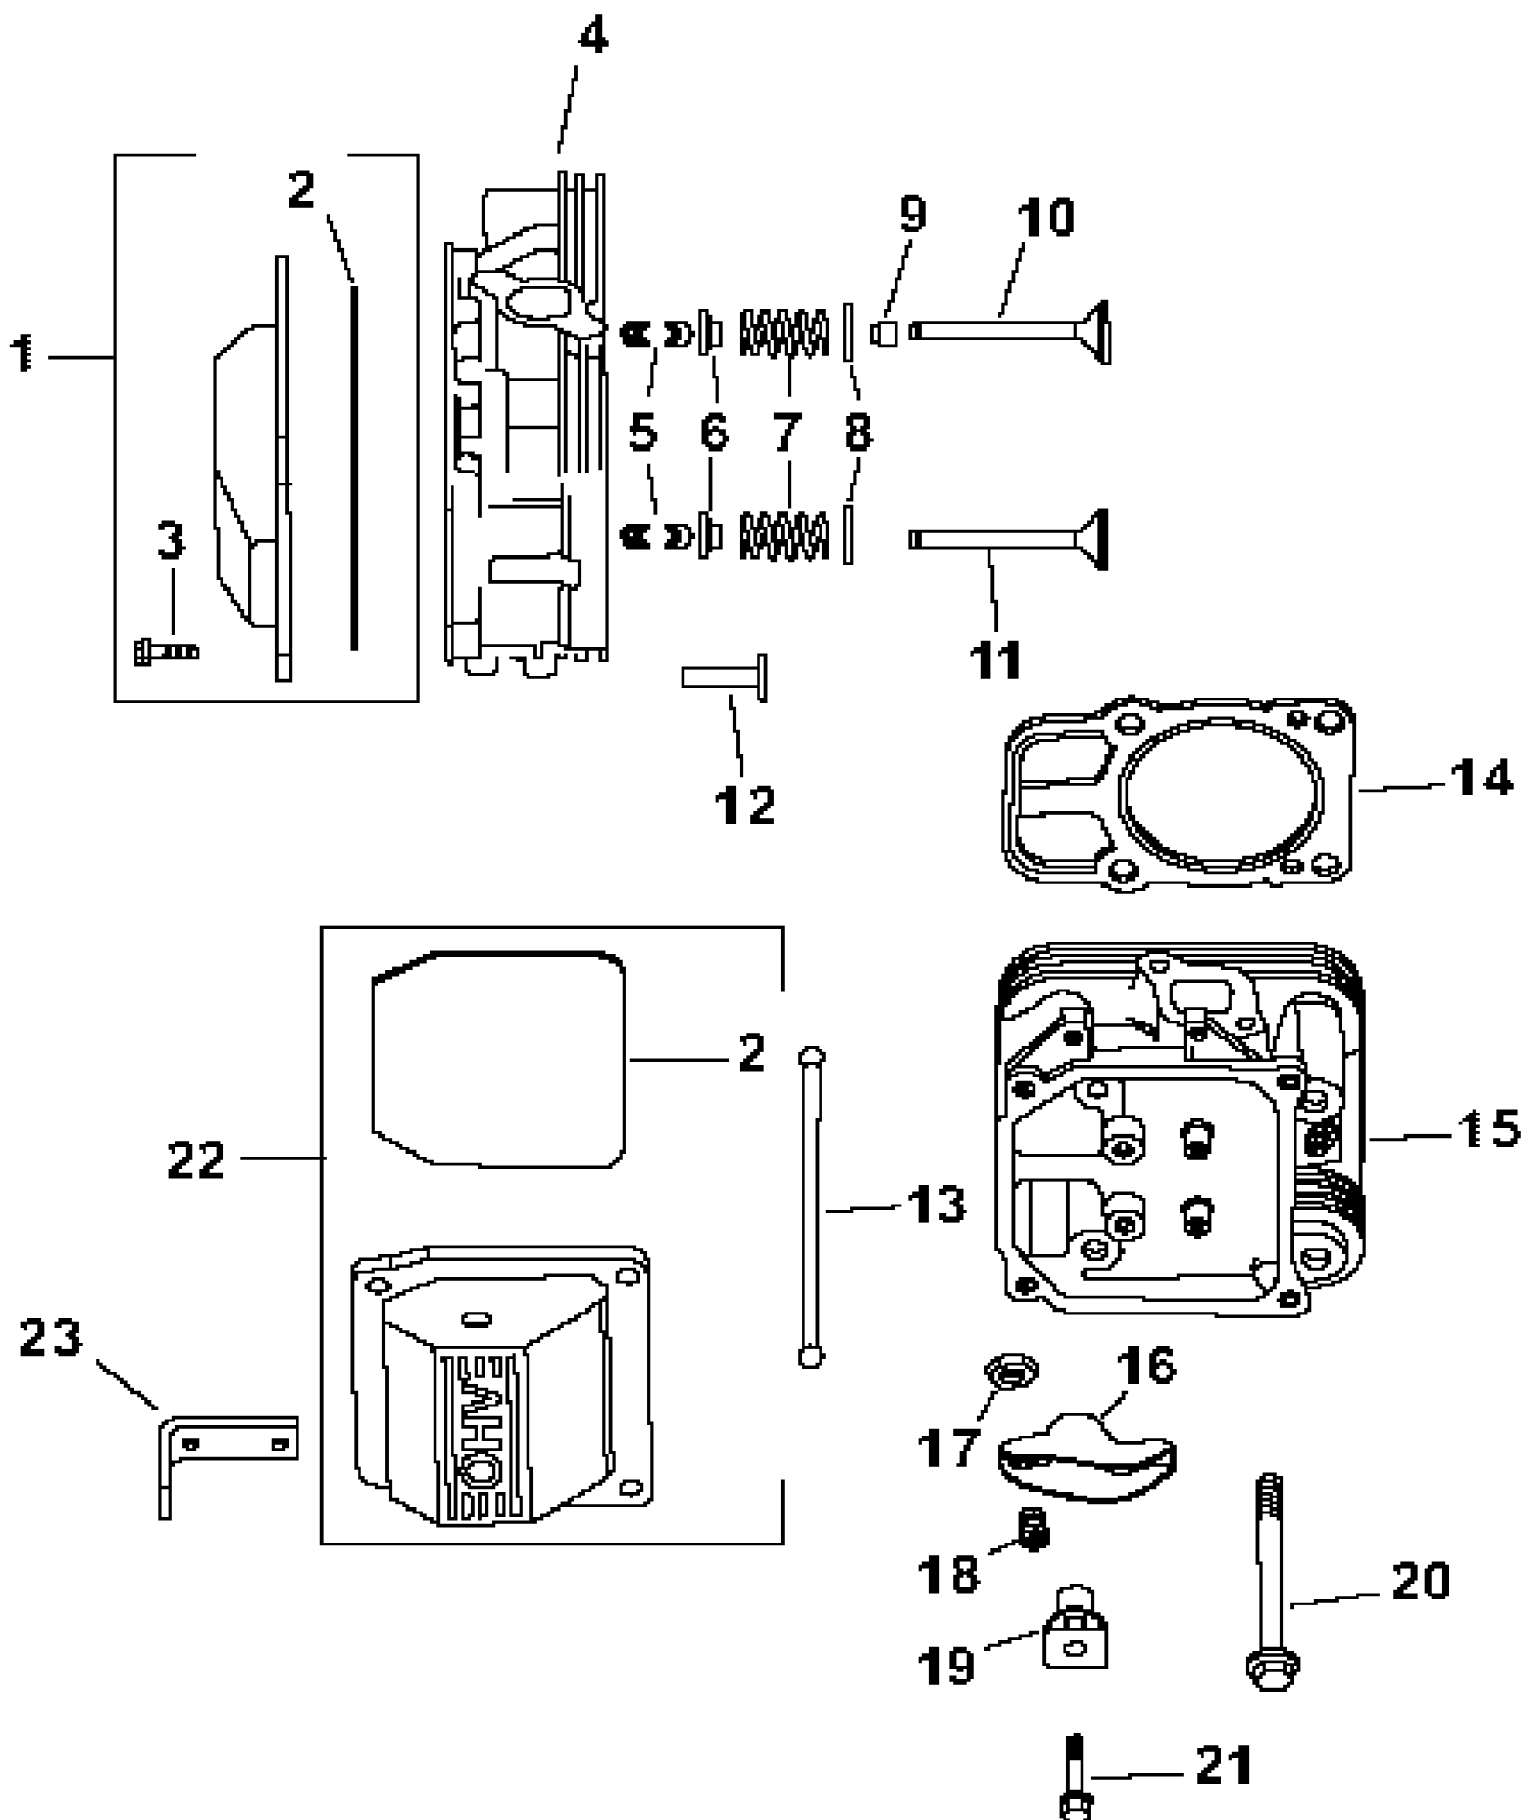

LT1046 Tractor (2007 & before)
 Courage Engine Head Group

Page 42 of 109


Ref #	Part Number	Qty	S/P/F	Description
1	KH-24-755-141-S	1	/P	Valve Cover Kit
2	KH-24-153-28-S	1	S	O-Ring
3	KH-M-651030-S	4		Hex Flange Screw
4	KH-32-318-01-S	1	S	Head Assembly # 1 Cylinder
5	KH-12-755-03	4	/P	Retainer Kit
6	KH-12-173-01	2	/P	Valve Spring Cap
7	KH-24-089-02	2	/P	Valve Spring
8	KH-235011-S	2	/P	Spring Retainer
9	KH-66-032-05-S	1	/P	Valve Stem Seal
10	KH-24-017-01	1	/P	Intake Valve (Std.)
10	KH-24-017-02	1		Intake Valve (.25)
11	KH-24-016-01	1	/P	Exhaust Valve (Std.)
11	KH-24-016-02	1		Exhaust Valve (.25)
12	KH-32-019-01-S	4	S	Tappet
13	KH-32-411-02-S	2	/P	Push Rod
14	KH-24-841-03-S	2	/P	Cylinder Head Gasket Kit
15	KH-32-318-02-S	1	S	Head Assembly # 2 Cylinder
16	KH-32-186-02-S	2	S	Rocker Arm
17	KH-32-100-04-S	4		Hex Nut
18	KH-32-086-03-S	4		Set Screw
19	KH-32-599-02-S	2	S	Rocker Arm Pivot
20	KH-12-086-16	4	S	Hex Flange Screw
21	KH-M-651045-S	4	S	Hex Flange Screw
22	KH-32-096-06-S	1		Valve Cover Breather Kit
23	KH-24-445-01	1	S	Lifting Strap
	KH-24-041-49-S	1	/P	Exhaust Gasket
	KH-24-153-27-S	1	/P	O-Ring (Intake Port)

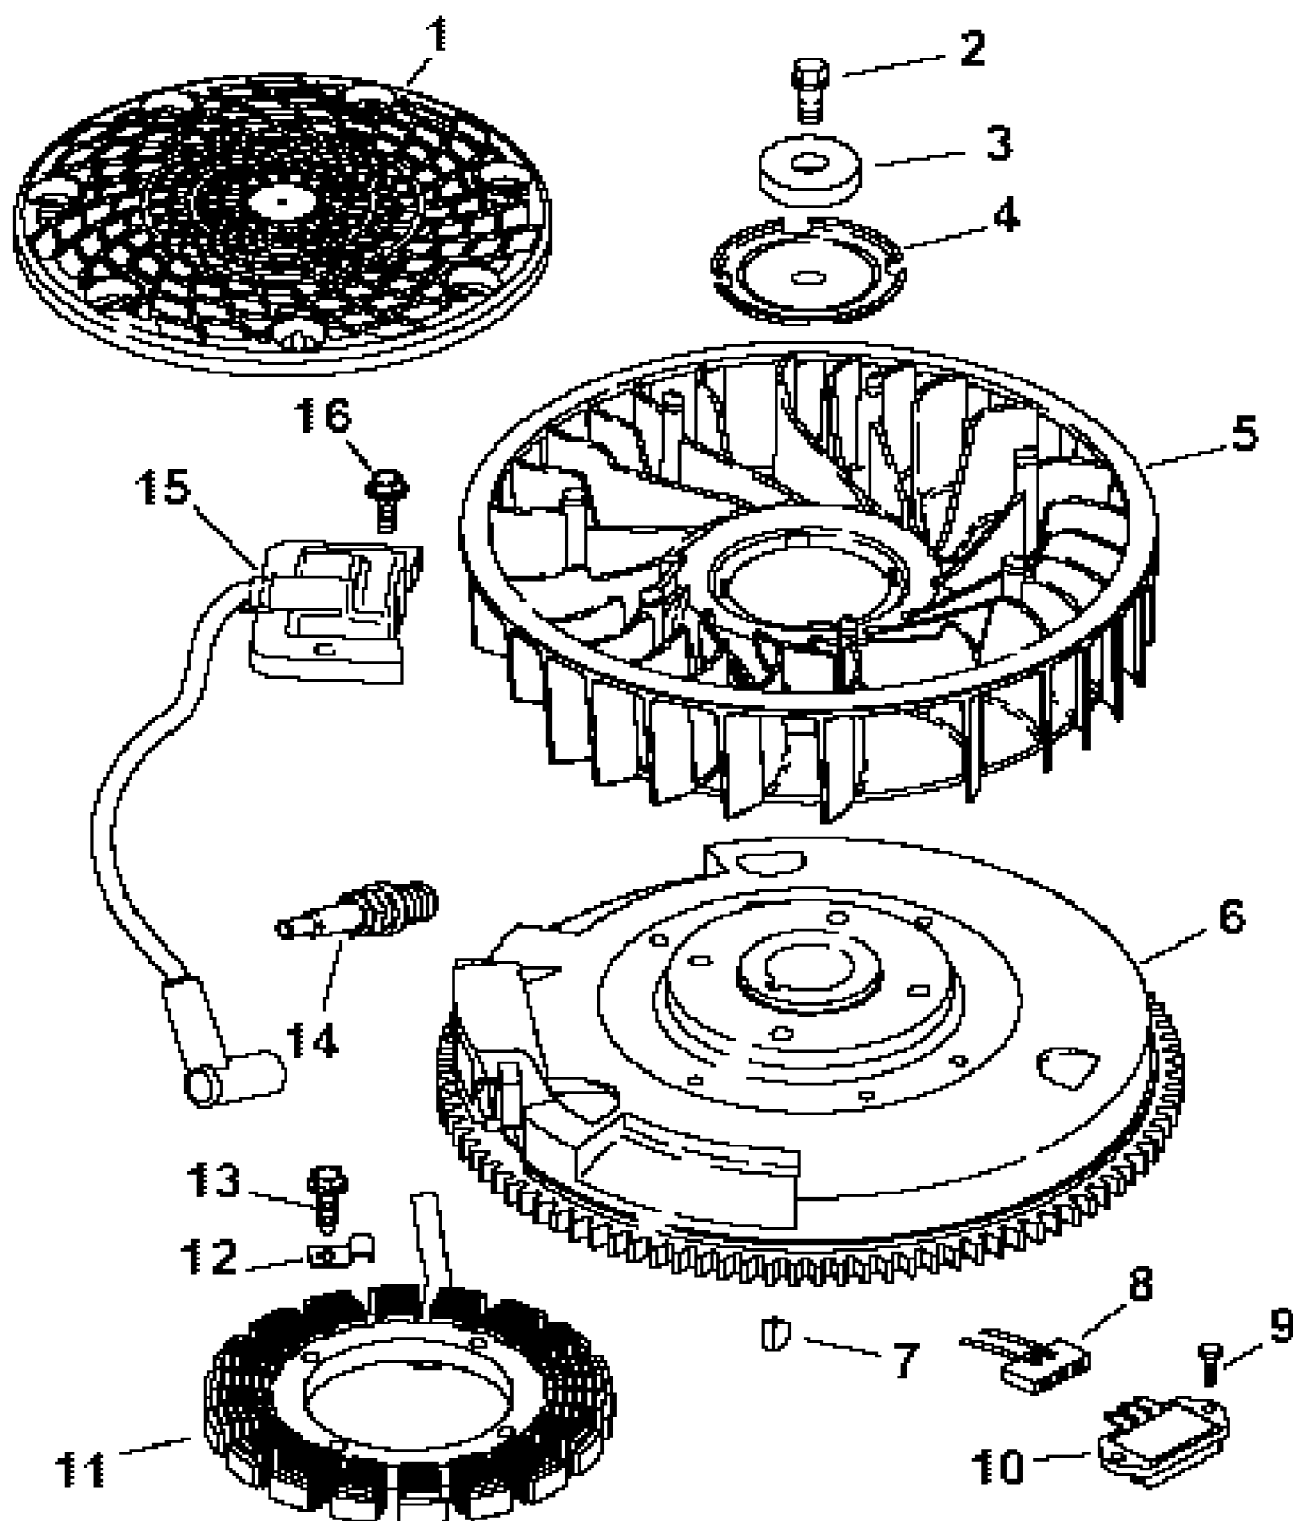

LT1046 Tractor (2007 & before)
 Courage Engine Ignition

Page 44 of 109


Ref #	Part Number	Qty	S/P/F	Description
1	KH-32-162-03-S	1		Grass Screen
2	KH-12-086-14	1		Hex Flange Screw
3	KH-12-468-03	1	/P	Plain Washer 3/8"
4	KH-20-146-02-S	1	S	Fan Mounting Plate
5	KH-32-157-01-S	1		Fan
6	KH-32-025-06-S	1	S	Flywheel
7	KH-X-42-15	1	/P	Flywheel Key
8	KH-41-403-09	1	S	Voltage Regulator
9	KH-236602-S	1	S	Connector
10	KH-M-551016-S	2		Heavy Hex Flange Screw
12	KH-235173	1		Cable Clip
13	KH-M-548025-S	2	/P	Hex Screw
14	759-3336	2	/P	Spark Plug
15	KH-24-584-01-S	2		Ignition Module
16	KH-M-545020-S	4		Hex Flange Screw
	KH-32-176-02-S	1	S	Wiring Harness
	KH-25-454-03-S	2		Wire Tie

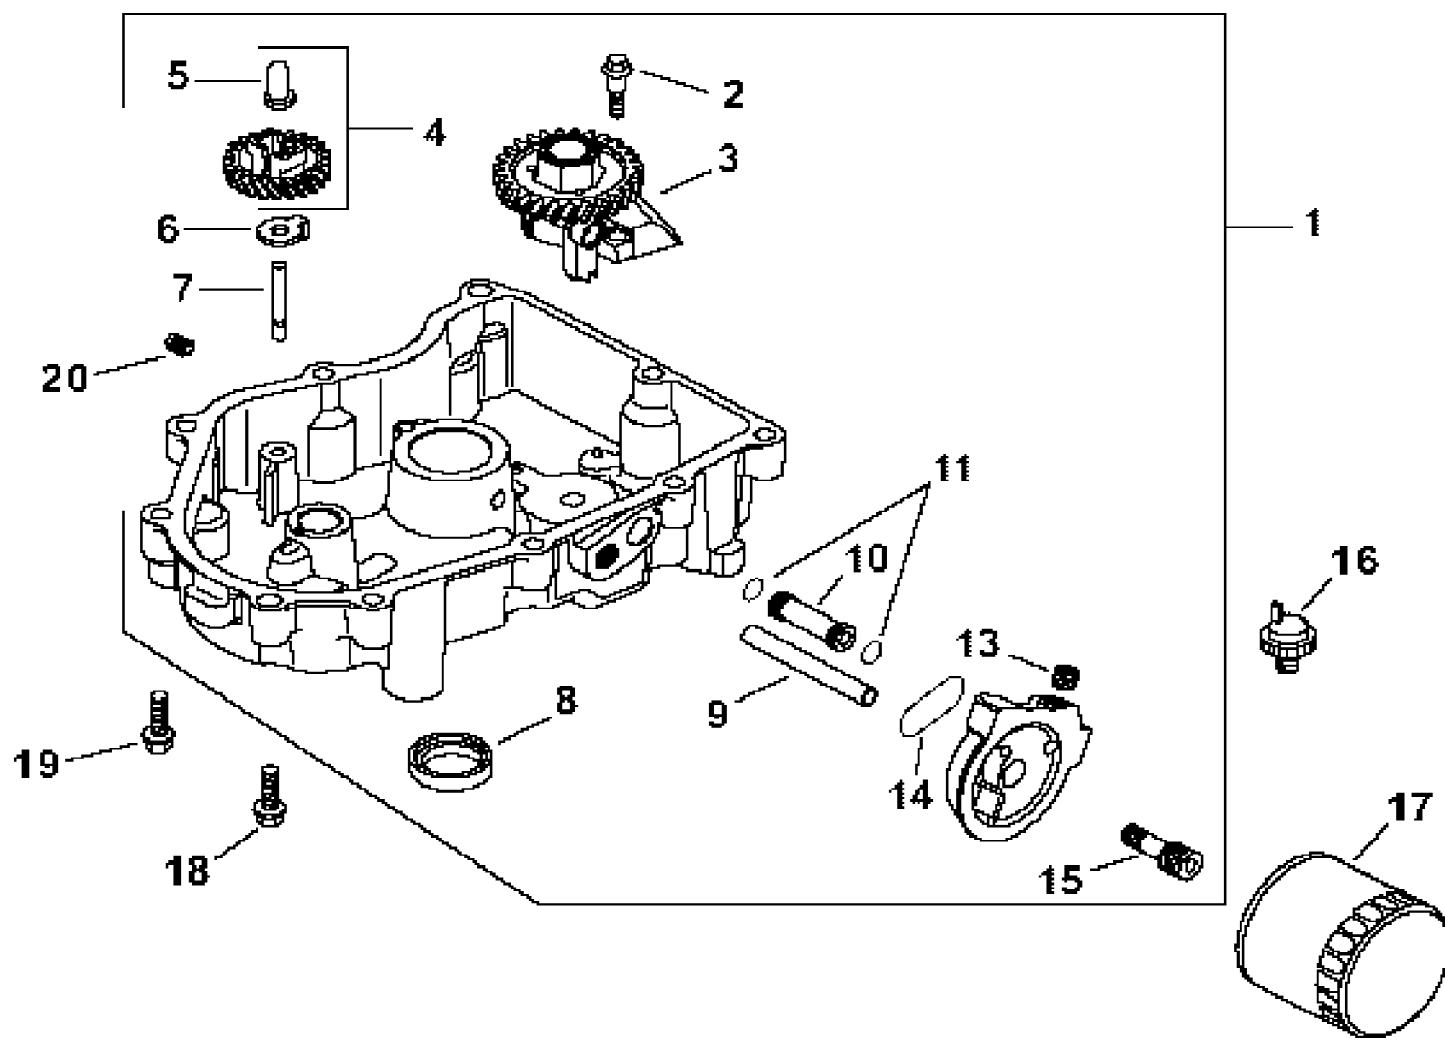

LT1046 Tractor (2007 & before)
 Courage Engine Oil Pan

Page 46 of 109

Ref #	Part Number	Qty	S/P/F	Description
1	KH-32-199-02-S	1	S	Dipstick Assembly Kit
2	KH-32-086-01-S	2		Dipstick O-Ring
3	KH-32-393-08-S	1	S	Closure Plate Assembly
4	KH-24-043-12	2	/P	Pipe Plug
5	KH-12-380-01	1	/P	Oil Filter
6	KH-24-448-02-S	1		Closure Plate Gasket
7	KH-12-144-02	1		Governor Gear Shaft
8	KH-52-032-08-S	1	S	Oil Seal (PTO End)
9	KH-32-123-01-S	1		Oil Feed Tube (Filter To Oil Pan)
10	KH-32-123-03-S	1		Oil Feed Tube (Oil Pan To Filter)
11	KH-24-153-01	2	/P	O-Ring
13	KH-25-139-60-S	1	/P	Hex Plug ctsk. 1/8"
14	KH-32-153-02-S	1		O-Ring
15	KH-32-136-03-S	1		Oil Filter Nipple
16	KH-25-099-24-S	1	S	Pressure Switch
17	KH-52-050-02	1	S	Oil Filter
18	KH-24-086-17-S	1	/P	Hex Flange Screw
19	KH-24-086-16-S	9	S	Hex Flange Screw
20	KH-25-139-57-S	1	/P	Square Plug

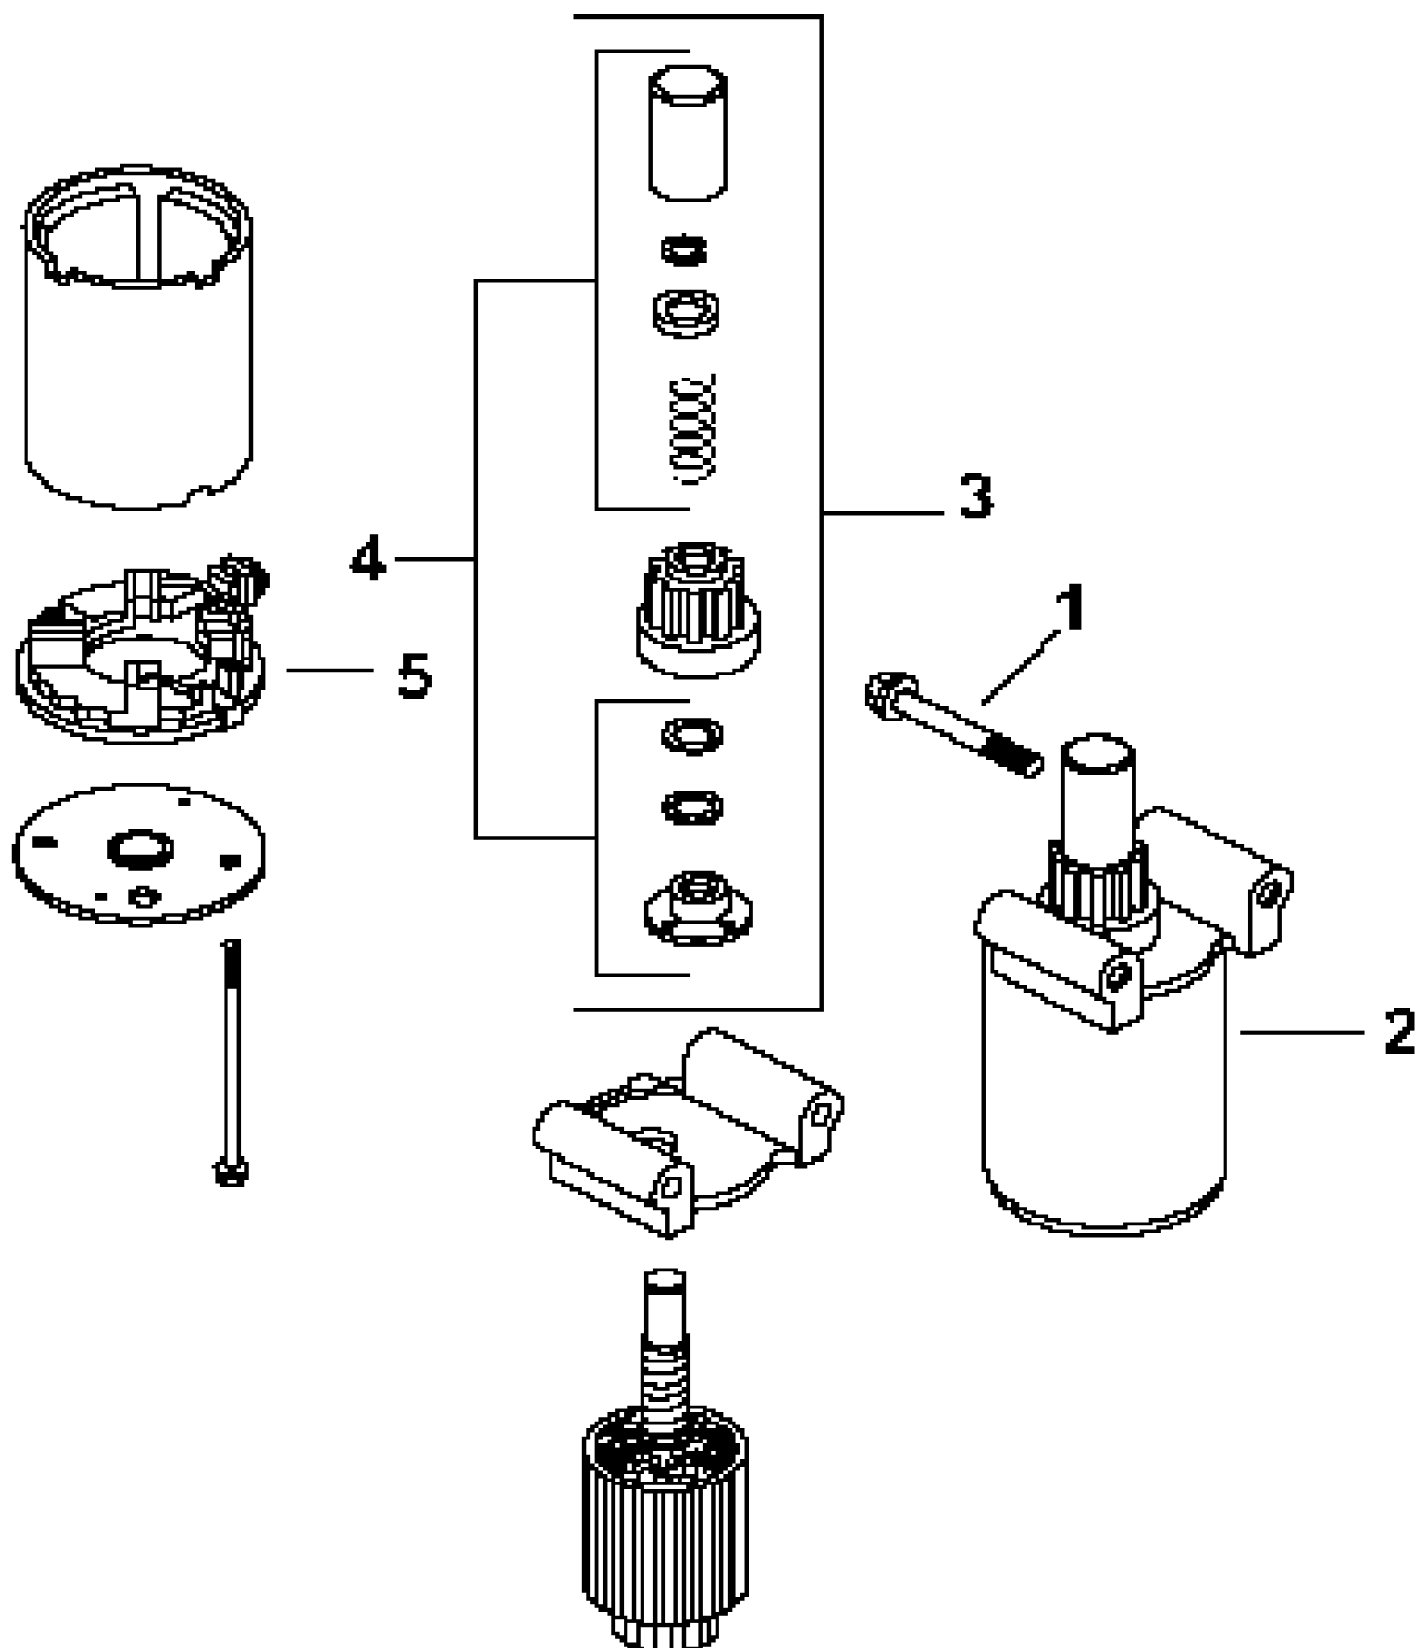


LT1046 Tractor (2007 & before)
Courage Engine Starter

Page 48 of 109

Ref #	Part Number	Qty	S/P/F	Description
1	KH-M-839080	2	S	Hex Flange Screw (M8 x 1.25 x 80)
2	KH-32-098-01-S	1	S	Starter Assembly
3	KH-12-755-39-S	1		Drive Kit
4	KH-12-755-38-S	1		Drive Parts kit
5	KH-12-243-04-S	1		End Cap Commutator

LT1046 Tractor (2007 & before)
Dash Panel 1I135H & before

Page 49 of 109

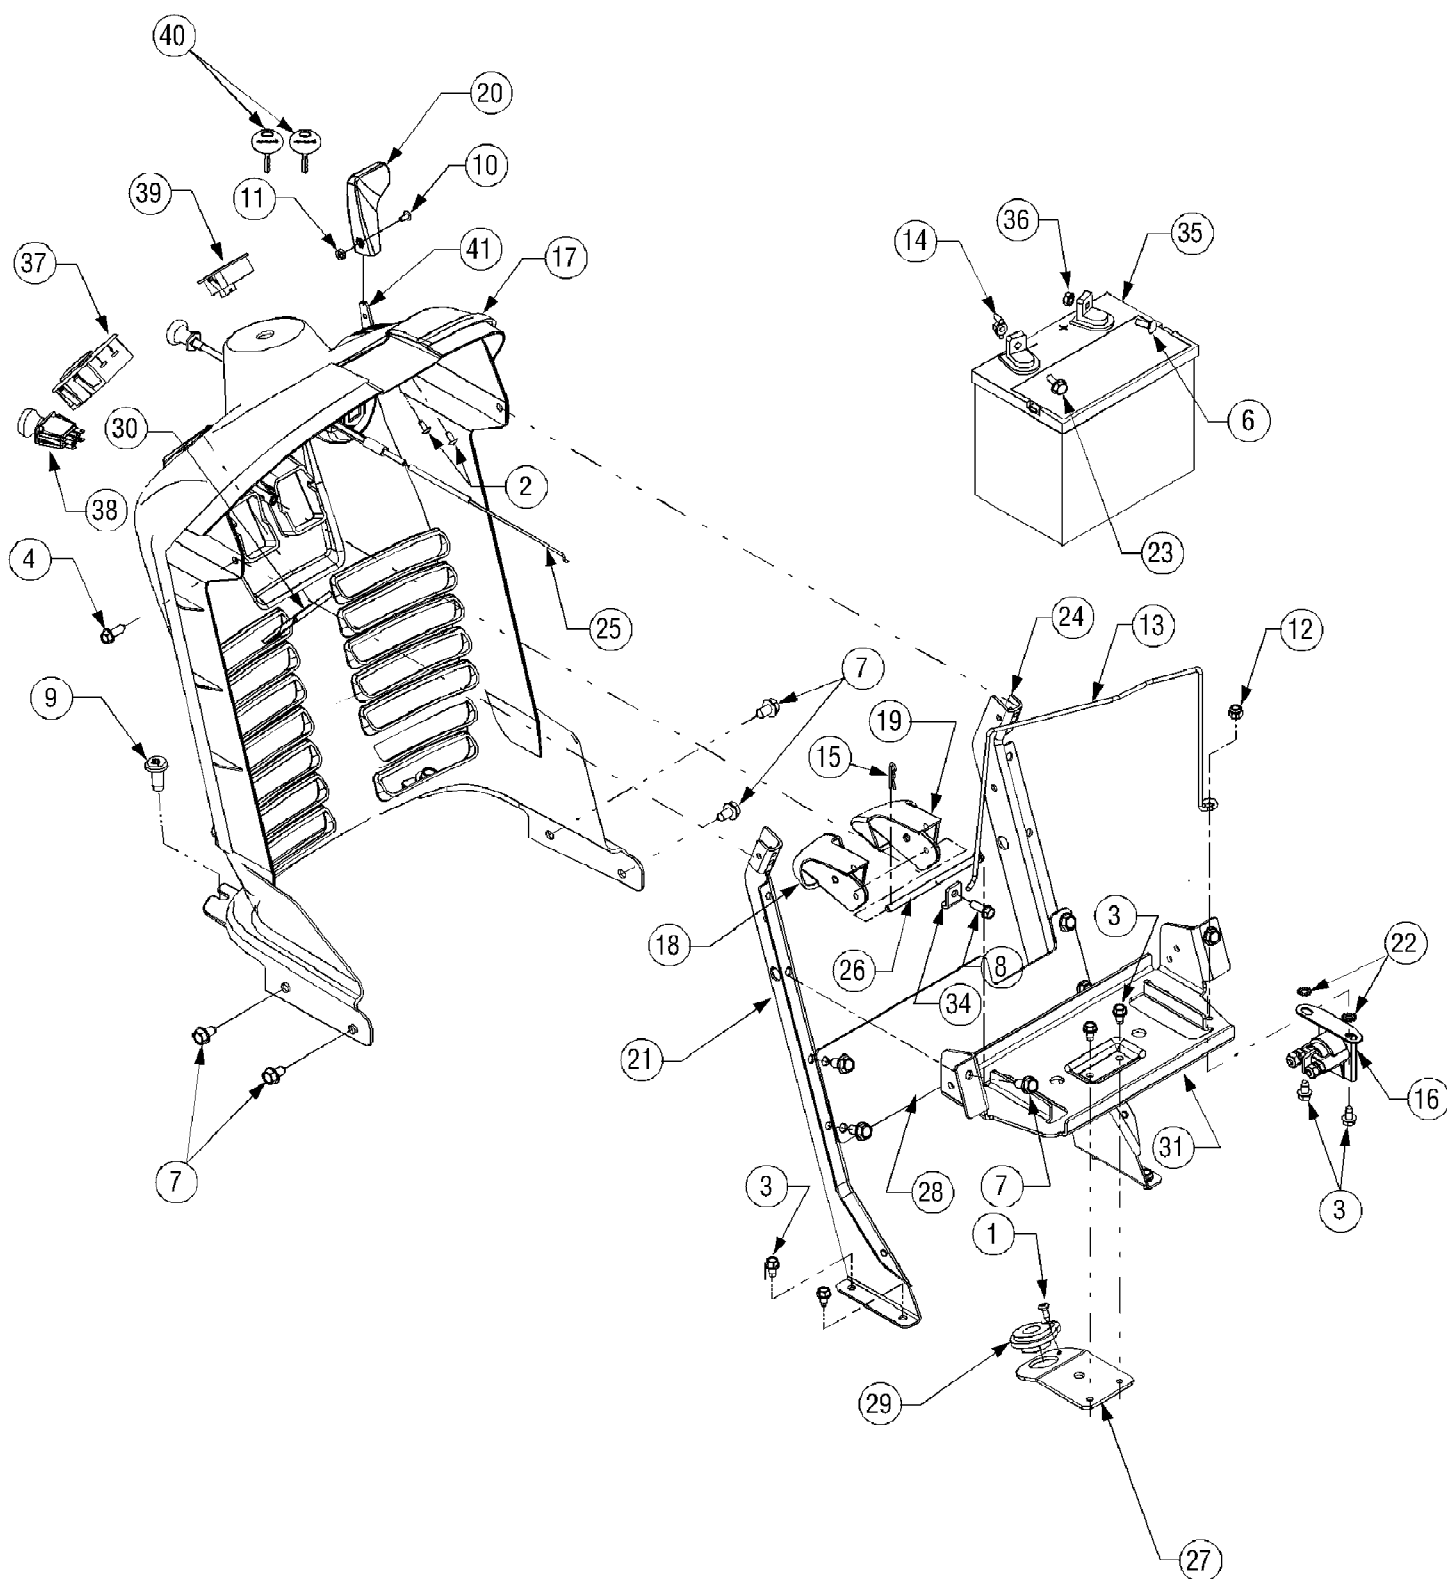


LT1046 Tractor (2007 & before)
Dash Panel 1I135H & before

Page 50 of 109

Ref #	Part Number	Qty	S/P/F	Description
1	710-0837	1		Screw, #10-16 x .625
2	710-0192	2	/P	Screw, #10-24 x .375
3	710-0599	6	/P	Screw, Self-tapping, 1/4-20, 0.500
4	710-0642	2	/P	Screw, Hex. 1/4-20 x .75
5	710-0650	4	/P	Screw, Hex, 5/16-18, .875 Gr5
6	710-0703	1	/P	Screw, Carriage, 1/4-20, .75,
7	710-0726	6	/P	Screw, Hex, 5/16-12 x .75
8	710-0895	1		Screw, 1/4-15, 0.750
9	710-1611B	2	/P	Screw, Torx Hd. Tapp. 5/16-18 x .75
10	710-3217	1	/P	Screw, Machine, #8-32, 0.375, Trus Phillips
11	712-0142	1	/P	Nut, 8-32
12	712-0324	1	/P	Nut, Nylon Lock, 1/4-20
13	747-04215	1	S	Strap, Battery
14	712-3087	1	/P	Nut, Wing, 1/4-20
15	714-0104	1	S	Internal Cotter Pin, .072 x 1.13
16	725-1426	1	S	Solenoid, 12V, 100 Amp
17	731-05004	1	S	Dash
18	731-04294A	1		Lever, Dash, Cruise
19	731-04293A	1	/P	Lever, Dash, Brake
20	731-3161	1	S	Knob, Throttle Control
21	783-04285B	1	S	Dash Support, RH
22	736-0222	2	S	Washer, External Lock, 1/4
23	738-1132	1		Screw, Shoulder, 1/4-20, .25 x .15
24	783-04323B	1	S	Dash Support, LH
25	746-04121	1		Control, Choke, 24.0 (LT1042 & LT1045)
	746-1085A	1	S	Control, Choke, 37.5 (LT1046 & LT1050)
26	747-1323A	1		Rod, .250 Dia x 4.25 Lg.
27	783-04475	1	S	Bracket, Steering Support
28	783-04506A	1	S	Plate, Dash Support
29	741-0587	1		Steering Colume Bearing
30	783-0462	1	/P	Bracket, PTO Switch Retainer
31	783-1447A	1	S	Bracket, Support, Battery
34	783-1499	1	S	Bracket, Rod, Dash
35	725-1737A	1	S	Battery, 190 CCA (LT1042 & LT1045)
	725-1750A	1	S	Battery, 235 CCA (LT1046 & LT1050)
36	712-0324	1	/P	Nut, Sems, 1/4-20
37	725-04227	1	S	Switch Module, Ignition
38	725-04258	1	/P	Switch, PTO, Yellow (LT1042 & LT1045)
	725-04175	1	S	Switch, PTO, Yellow (LT1046 & LT1050)
39	725-04022	1	S	Monitor, Systems Indicator / Hour Meter
40	725-2054	2	S	Ignition Key, Plastic
41	746-1087	1	S	Control, Throttle, 27.4 (LT1042 & LT1045)
	746-1100	1	S	Control, Throttle, 38.0 (LT1046 & LT1050)
	629-04106	1	/P	Wire Harness (LT1042 & LT1045)
	629-04136	1	S	Wire Harness (T1046 & LT1050)

LT1046 Tractor (2007 & before)
Dash Panel 1I145H - 1I136H

Page 51 of 109

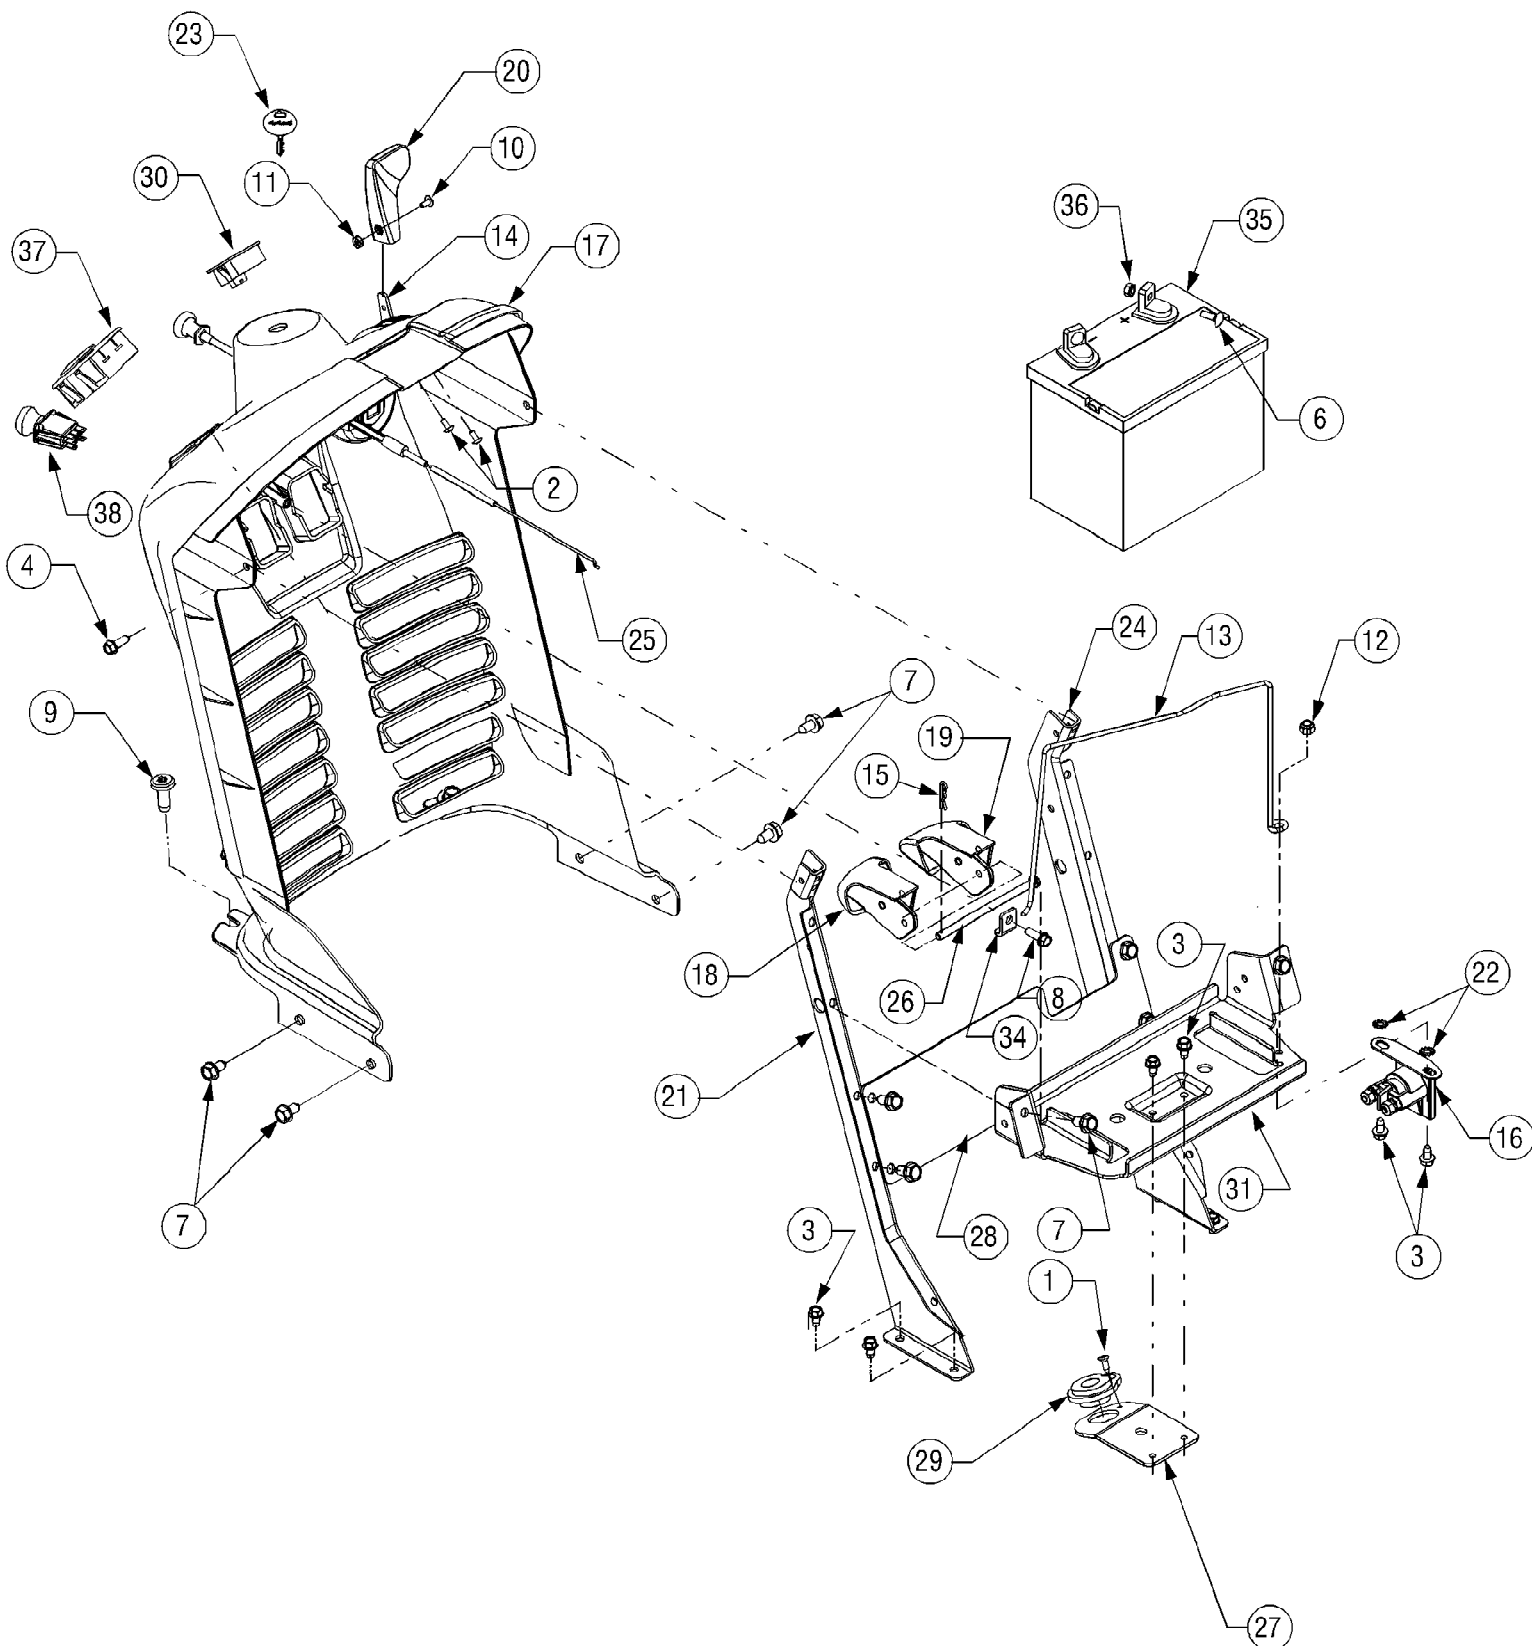


LT1046 Tractor (2007 & before)
Dash Panel 1I145H - 1I136H

Page 52 of 109

Ref #	Part Number	Qty	S/P/F	Description
1	710-0837	1		Screw, #10-16 x .625
2	710-0192	2	/P	Screw, #10-24 x .375
3	710-0599	6	/P	Screw, Self-tapping, 1/4-20, 0.500
4	710-0642	2	/P	Screw, Hex. 1/4-20 x .75
5	710-0650	4	/P	Screw, Hex, 5/16-18, .875 Gr5
6	710-0703	1	/P	Screw, Carriage, 1/4-20, .75,
7	710-0726	6	/P	Screw, Hex, 5/16-12 x .75
8	710-0895	1		Screw, 1/4-15, 0.750
9	710-1611B	2	/P	Screw, Torx Hd. Tapp. 5/16-18 x .75
10	710-3217	1	/P	Screw, Machine, #8-32, 0.375, Trus Phillips
11	712-0142	1	/P	Nut, 8-32
12	712-04064	1	/P	Nut, Nylon Lock, 1/4-20
13	747-04121A	1		Hold-down Rod, Battery
14	746-1087	1	S	Control, Throttle, 27.4 (LT1042 & LT1045)
14	746-1100	1	S	Control, Throttle, 38.0 (LT1046 & LT1050)
15	714-0104	1	S	Internal Cotter Pin, .072 x 1.13
16	725-1426A	1	S	Solenoid, 12V, 100 Amp
17	731-05004	1	S	Dash
18	731-04294A	1		Lever, Dash, Cruise
19	731-04293A	1	/P	Lever, Dash, Brake
20	731-3161	1	S	Knob, Throttle Control
21	783-04908	1	S	Dash Support, RH
22	736-0222	2	S	Washer, External Lock, 1/4
23	725-2054	1	S	Ignition Key, Plastic
23	725-1744	1	S	Ignition Key, Metal
24	783-04909	1	S	Dash Support, LH
25	746-04121	1		Control, Choke, 24.0 (LT1042 & LT1045)
25	746-1085A	1	S	Control, Choke, 37.5 (LT1046 & LT1050)
26	747-1323A	1		Rod, .250 Dia x 4.25 Lg.
27	783-04475	1	S	Bracket, Steering Support
28	783-04506A	1	S	Plate, Dash Support
29	741-0587	1		Steering Colume Bearing
30	725-04022A	1	S	Monitor, Systems Indicator / Hour Meter
31	783-1447A	1	S	Bracket, Support, Battery
34	783-1499	1	S	Bracket, Rod, Dash
35	725-1737A	1	S	Battery, 190 CCA (LT1042 & LT1045)
35	725-1750A	1	S	Battery, 235 CCA (LT1046 & LT1050)
36	712-0324	1	/P	Nut, Sems, 1/4-20
37	725-04227	1	S	Switch Module, Ignition
38	725-04258	1	/P	Switch, PTO, Yellow
	725-04337	1	S	Wire Harness (LT1042 & LT1045) not shown
	629-04136	1	S	Wire Harness (LT1046 & LT1050) not shown

LT1046 Tractor (2007 & before)
Dash Panel 1I146H & after


Page 53 of 109

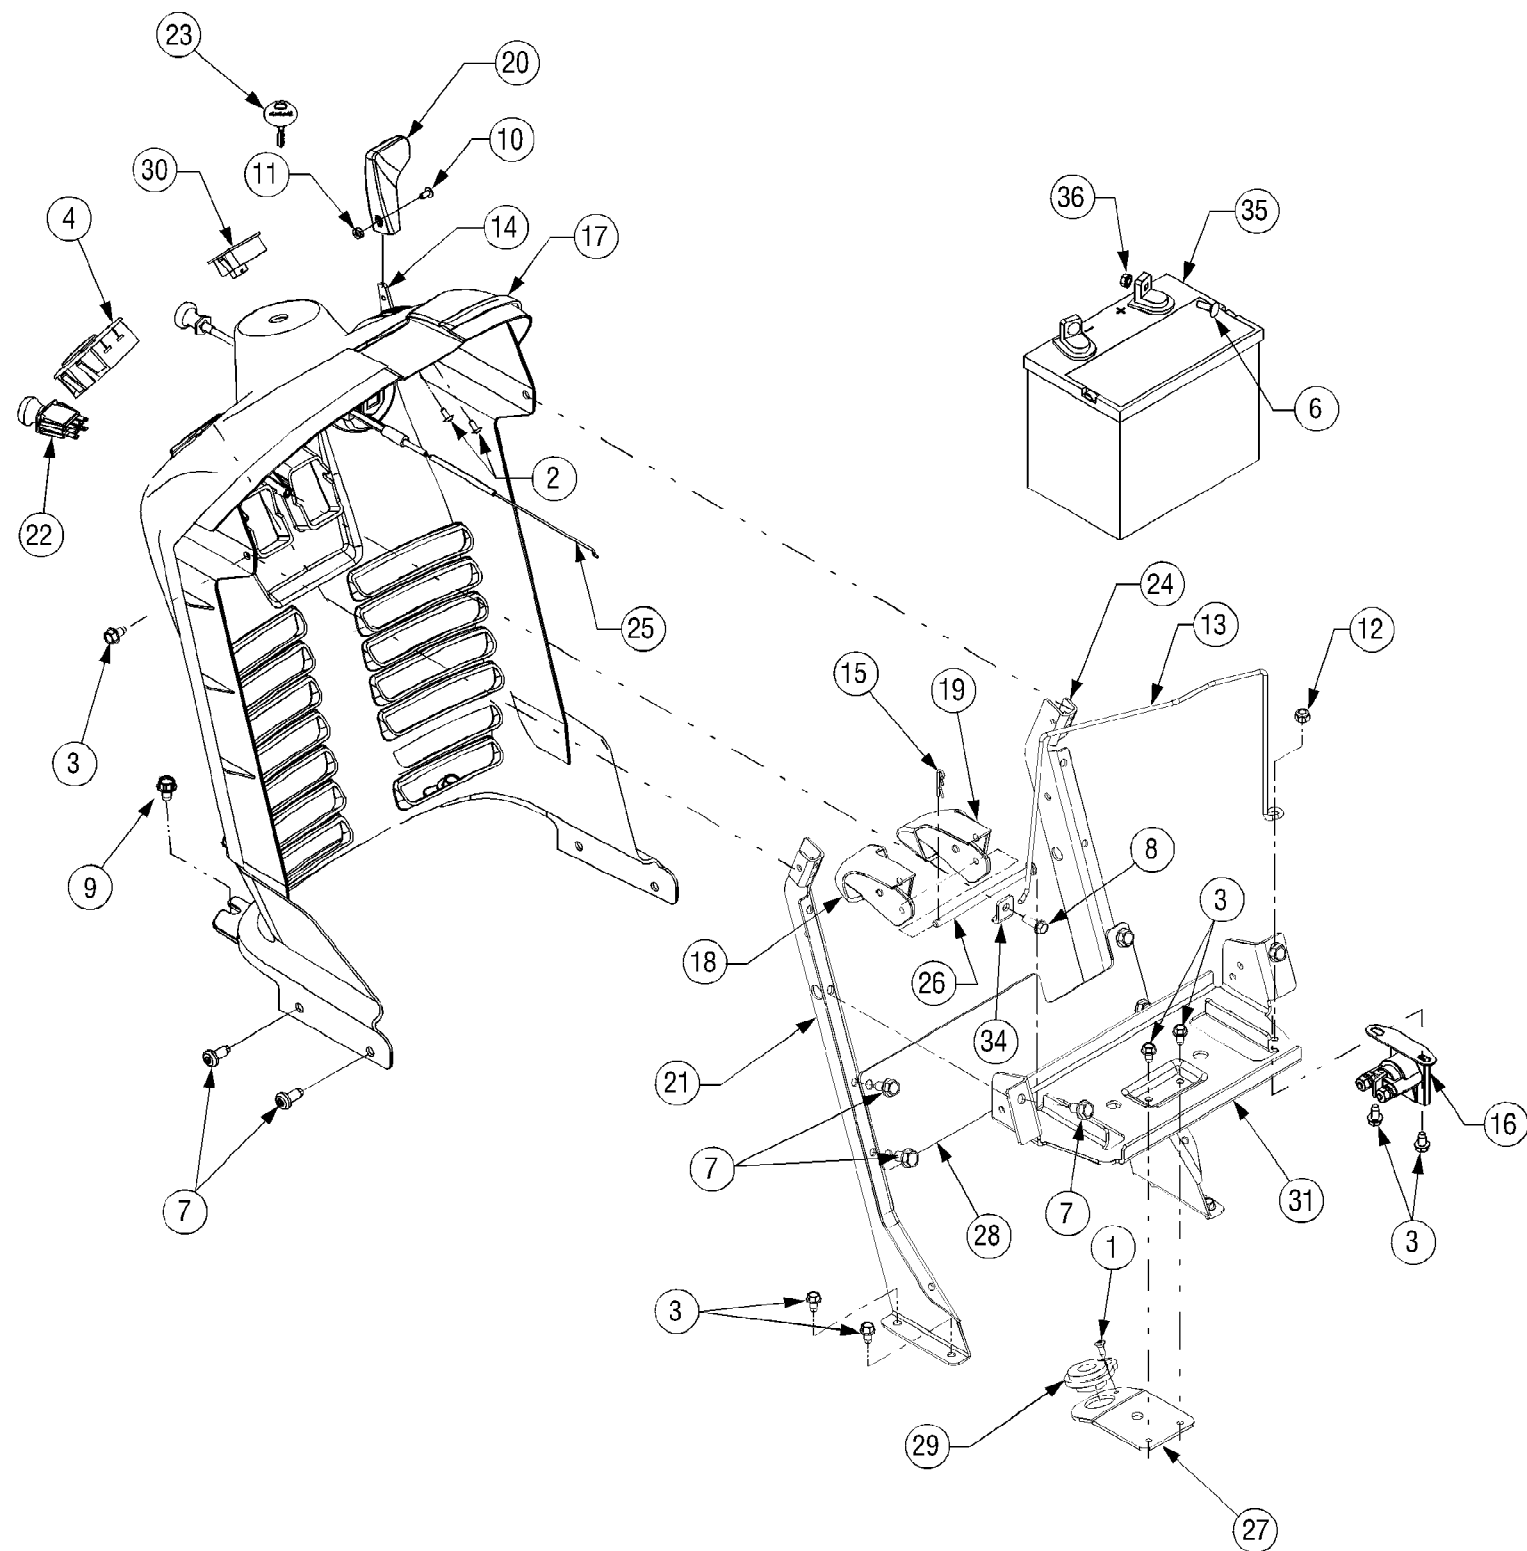

LT1046 Tractor (2007 & before)
Dash Panel 1I146H & after

Page 54 of 109

Ref #	Part Number	Qty	S/P/F	Description
1	710-0351	1	/P	Screw, #10-16 x .5
2	710-0192	2	/P	Screw, #10-24 x .375
3	710-0599	8	/P	Screw, Self-tapping, 1/4-20, 0.500
4	725-04227B	1	S	Switch Module, Ignition
6	710-04666	2		Screw, Flange, 1/4-20, .75,
7	710-0726	10	/P	Screw, Hex, 5/16-12 x .75
8	710-0895	1		Screw, 1/4-15, 0.750
9	710-1611B	2	/P	Screw, Torx Hd. Tapp. 5/16-18 x .75
10	710-3217	1	/P	Screw, Machine, #8-32, 0.375, Trus Phillips
11	712-0142	1	/P	Nut, 8-32
12	712-04064	1	/P	Nut, Nylon Lock, 1/4-20
13	747-04215	1	S	Hold-down Rod, Battery
14	746-1087	1	S	Control, Throttle, 27.4 (LT1042 & LT1045)
14	746-04352	1		Control, Throttle, 38.0 (LT1046 & LT1050)
15	714-0104	1	S	Internal Cotter Pin, .072 x 1.13
16	725-04439	1		Solenoid, 12V, 100 Amp
17	731-05004	1	S	Dash
18	731-04294A	1		Lever, Dash, Cruise
19	731-04293A	1	/P	Lever, Dash, Brake
20	731-3161	1	S	Knob, Throttle Control
21	783-04285E	1	S	Dash Support, RH
22	725-04258	1	/P	Switch, PTO, Yellow
23	725-2054	1	S	Ignition Key, Plastic
23	725-1744	1	S	Ignition Key, Metal
24	783-04323D	1		Dash Support, LH
25	746-04121	1		Control, Choke, 24.0 (LT1042 & LT1045)
25	746-04120	1		Control, Choke, 37.5 (LT1046 & LT1050)
26	747-1323A	1		Rod, .250 Dia x 4.25 Lg.
27	783-04475	1	S	Bracket, Steering Support
28	783-04506B	1	S	Plate, Dash Support
29	741-0587	1		Steering Colume Bearing
30	725-04022B	1	S	Monitor, Systems Indicator / Hour Meter
31	783-1447B	1		Bracket, Support, Battery
34	783-1499	1	S	Bracket, Rod, Dash
35	725-1737A	1	S	Battery, 190 CCA (LT1042 & LT1045)
35	725-1750A	1	S	Battery, 235 CCA (LT1046 & LT1050)
36	712-0271	2	/P	Nut, Sems, 1/4-20
	725-04402	1	S	Wire Harness (LT1042 & LT1045) not shown
	629-04139	1		Wire Harness (LT1046 & LT1050) not shown

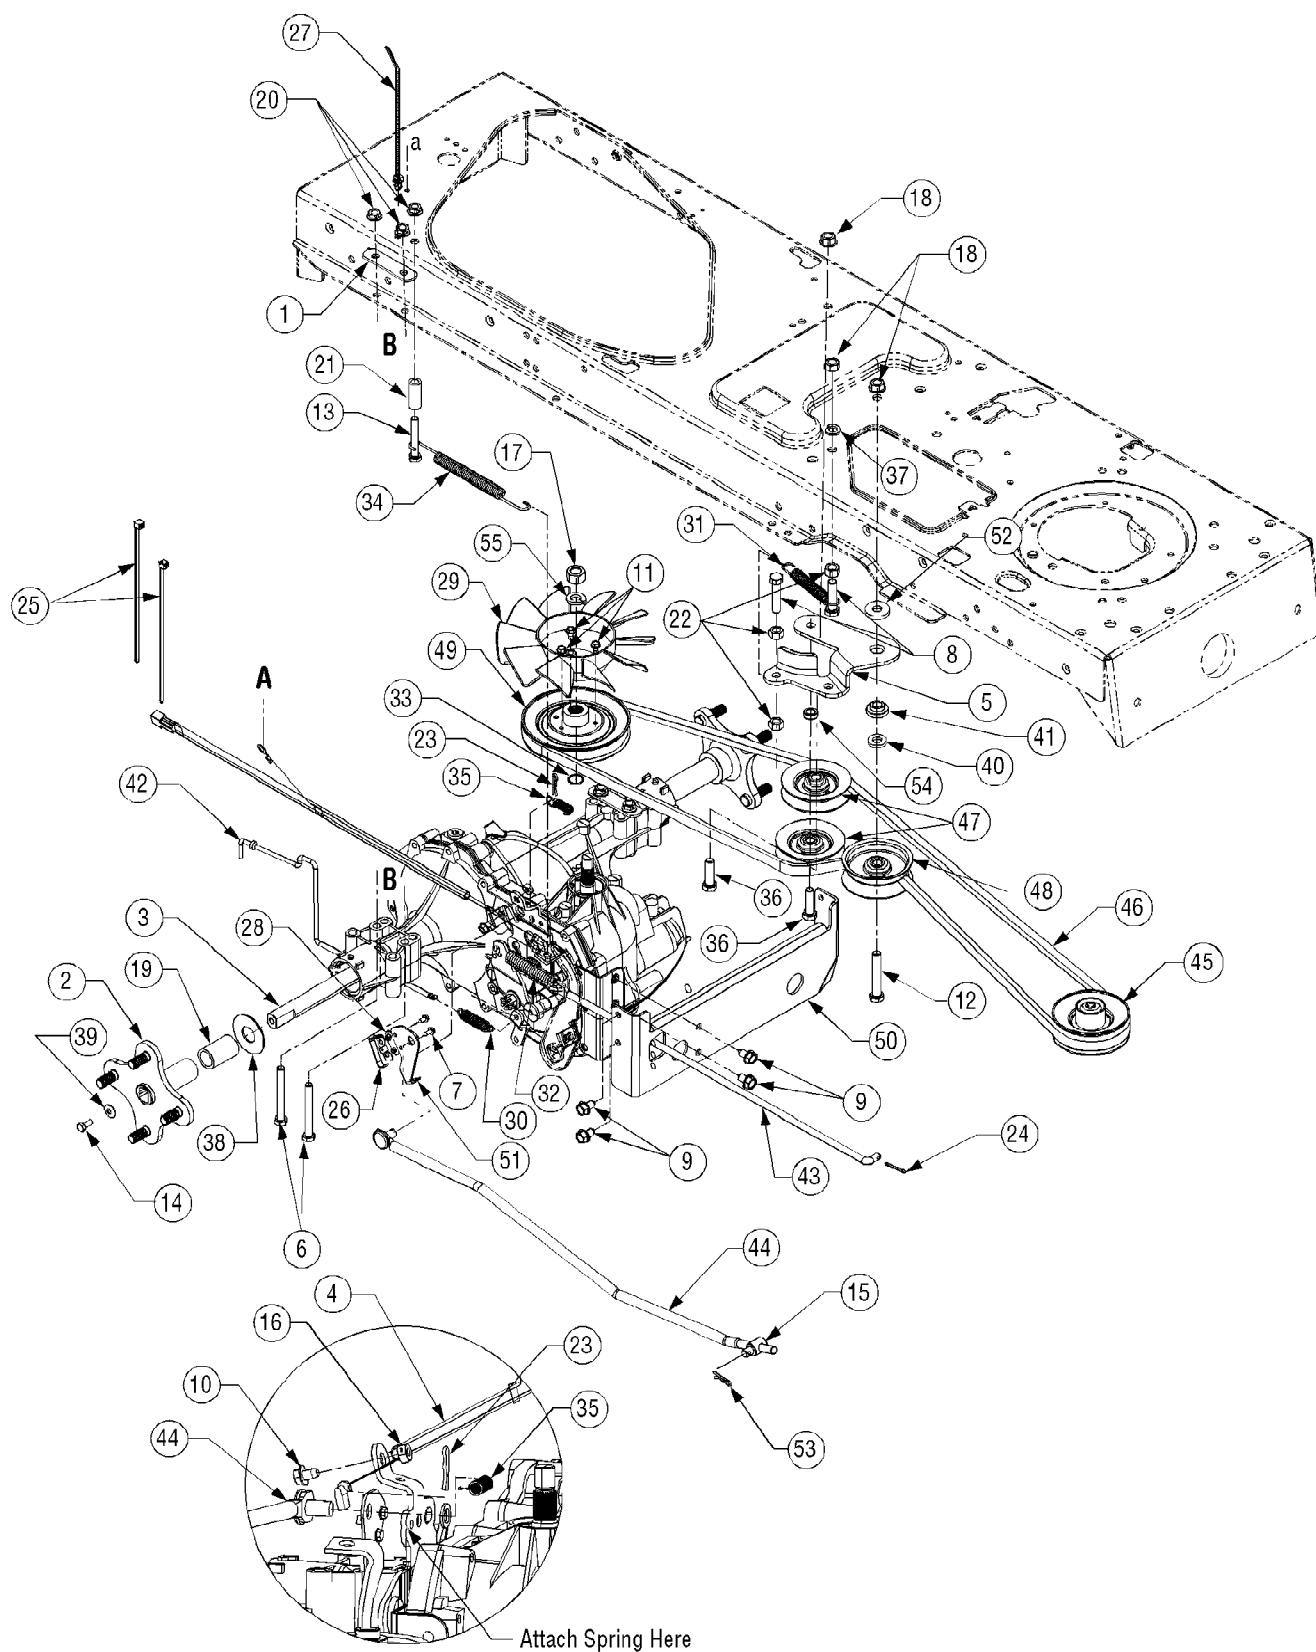

LT1046 Tractor (2007 & before)
Drive System 11136H & before

Page 56 of 109

Ref #	Part Number	Qty	S/P/F	Description
1	17840	2	S	Bracket, Mounting, Transaxle
2	618-04228	2	S	Hub Assembly, Wheel
3	618-0319	1	S	Transmission, Hydrostatic
	618-04269	1	S	Transmission, Hydrostatic w/ Drain
4	629-04124	1		Harness Assembly, Ground & Reverse
5	783-04442	1		Bracket Assembly, Idler, Center Dbl
6	710-1266	4	/P	Hex Cap Screw, 5/16-18, 3.5, Gr5
7	710-0227	2	/P	Screw, #8-18, 0.500
8	710-0344	3	/P	Hex Cap Screw, 3/8-16, 1.50, Gr5
9	710-0726	6	/P	Screw, 5/16-12, 0.75
10	710-0599	1	/P	Screw, 1/4-20, 0.5
11	710-3007	3	/P	Screw, #12-24, 0.375
12	710-3011	1	/P	Hex Cap Screw, 3/8-16, 2.25, Gr5
13	710-0809	1		Hex Cap Screw, 5/16-18, 1.25, Gr5
14	710-0627	2	/P	Hex Cap Screw, 5/16-24 x .750
15	711-0832	1	S	Ferrule, 3/8-24 x .375 Dia
16	712-0291	1	S	Nut, Hex Lock, 1/4-20
17	712-3066	1	S	Nut, Hex, 1/2-20, Gr5
18	712-04065	4	/P	Nut, Nylon Lock, 3/8-16
19	731-05130	2		Sleeve, 2.4"
20	712-04052	5		Nut, Nylon Lock, 5/16-18, Gr5
21	750-0566	1	S	Spacer, 1"
22	712-3017	3	S	Nut, Hex, 3/8-16, Gr8
23	714-0104	2	S	Pin, Cotter, .072 Dia. x 1.13 Lg
24	714-0111	1	S	Pin, Cotter, 3/32, 1.0
25	725-0157	2	/P	Cable, Tie, 3/16 x .05 x 7.4
26	725-1644	1		Switch, Spring, Short
27	726-0154	1	S	Tie, Cable, Push Mount 7.5 Lg
28	726-0320	1	S	Plate, Insulator Nut
29	731-1449A	1	S	Fan, Blade, 10"
30	732-0209	1	S	Spring, .48 OD x 2.03 Extension
31	732-0429A	1	S	Spring, Extension, .50 Dia x 3.97 Lg
32	732-0716	1	S	Spring, Extension, .59 OD x 4.00 Lg
33	732-0729	1	/P	Ring, Wire
34	732-0994	1		Spring, Extension, .500 Dia x 7.0
35	732-3118	1		Spring, Extension, 3/8 OD x 1.44
36	710-0502A	1	/P	Screw, 3/8-16, 1.25
37	736-0169	1	S	Washer, Lock, 3/8, Regular Duty
38	736-0866	2		Washer, Flat, .755 x 1.92 x .060
39	736-0242	2	/P	Belle Washer
40	736-3010	1	/P	Washer, Flat, .407 x .812 x .135
41	738-0372B	1	/P	Spacer, Shoulder, 1.00 x .38 x .38
42	747-1149	1		Rod, Hydro Bypass
43	747-04139	1		Rod, Brake, Hydro
44	747-1151	1		Rod, Control, Hydro
45	756-0978A	1	S	Pulley, Engine, 3.56 Dia.
46	754-0461	1	S	Belt, V Type, Poly
47	756-0116A	2	S	Pulley, Idler, V Type x 3.06 Dia
48	756-0981B	1	S	Pulley, Idler, Flat 2.75 OD
49	756-04111	1		Pulley, Engine, 4.11Dia.
50	783-0810B	1	S	Bracket, Transmission, Torque Hydro
51	783-1019	1	S	Bracket, Actuator, Switch
52	736-0320	1	/P	Washer, Flat, .38 x 1.92 x .060


LT1046 Tractor (2007 & before)
Drive System 11136H & before

Page 57 of 109

Ref #	Part Number	Qty	S/P/F	Description
53	714-0507	1	S	Pin, Cotter, 3/32, .750
54	750-0535	1	S	Spacer, .38 x .625 x .21
55	736-0921	1	S	Washer, Lock, 1/2

LT1046 Tractor (2007 & before)
Drive System 11146H & after

Page 58 of 109

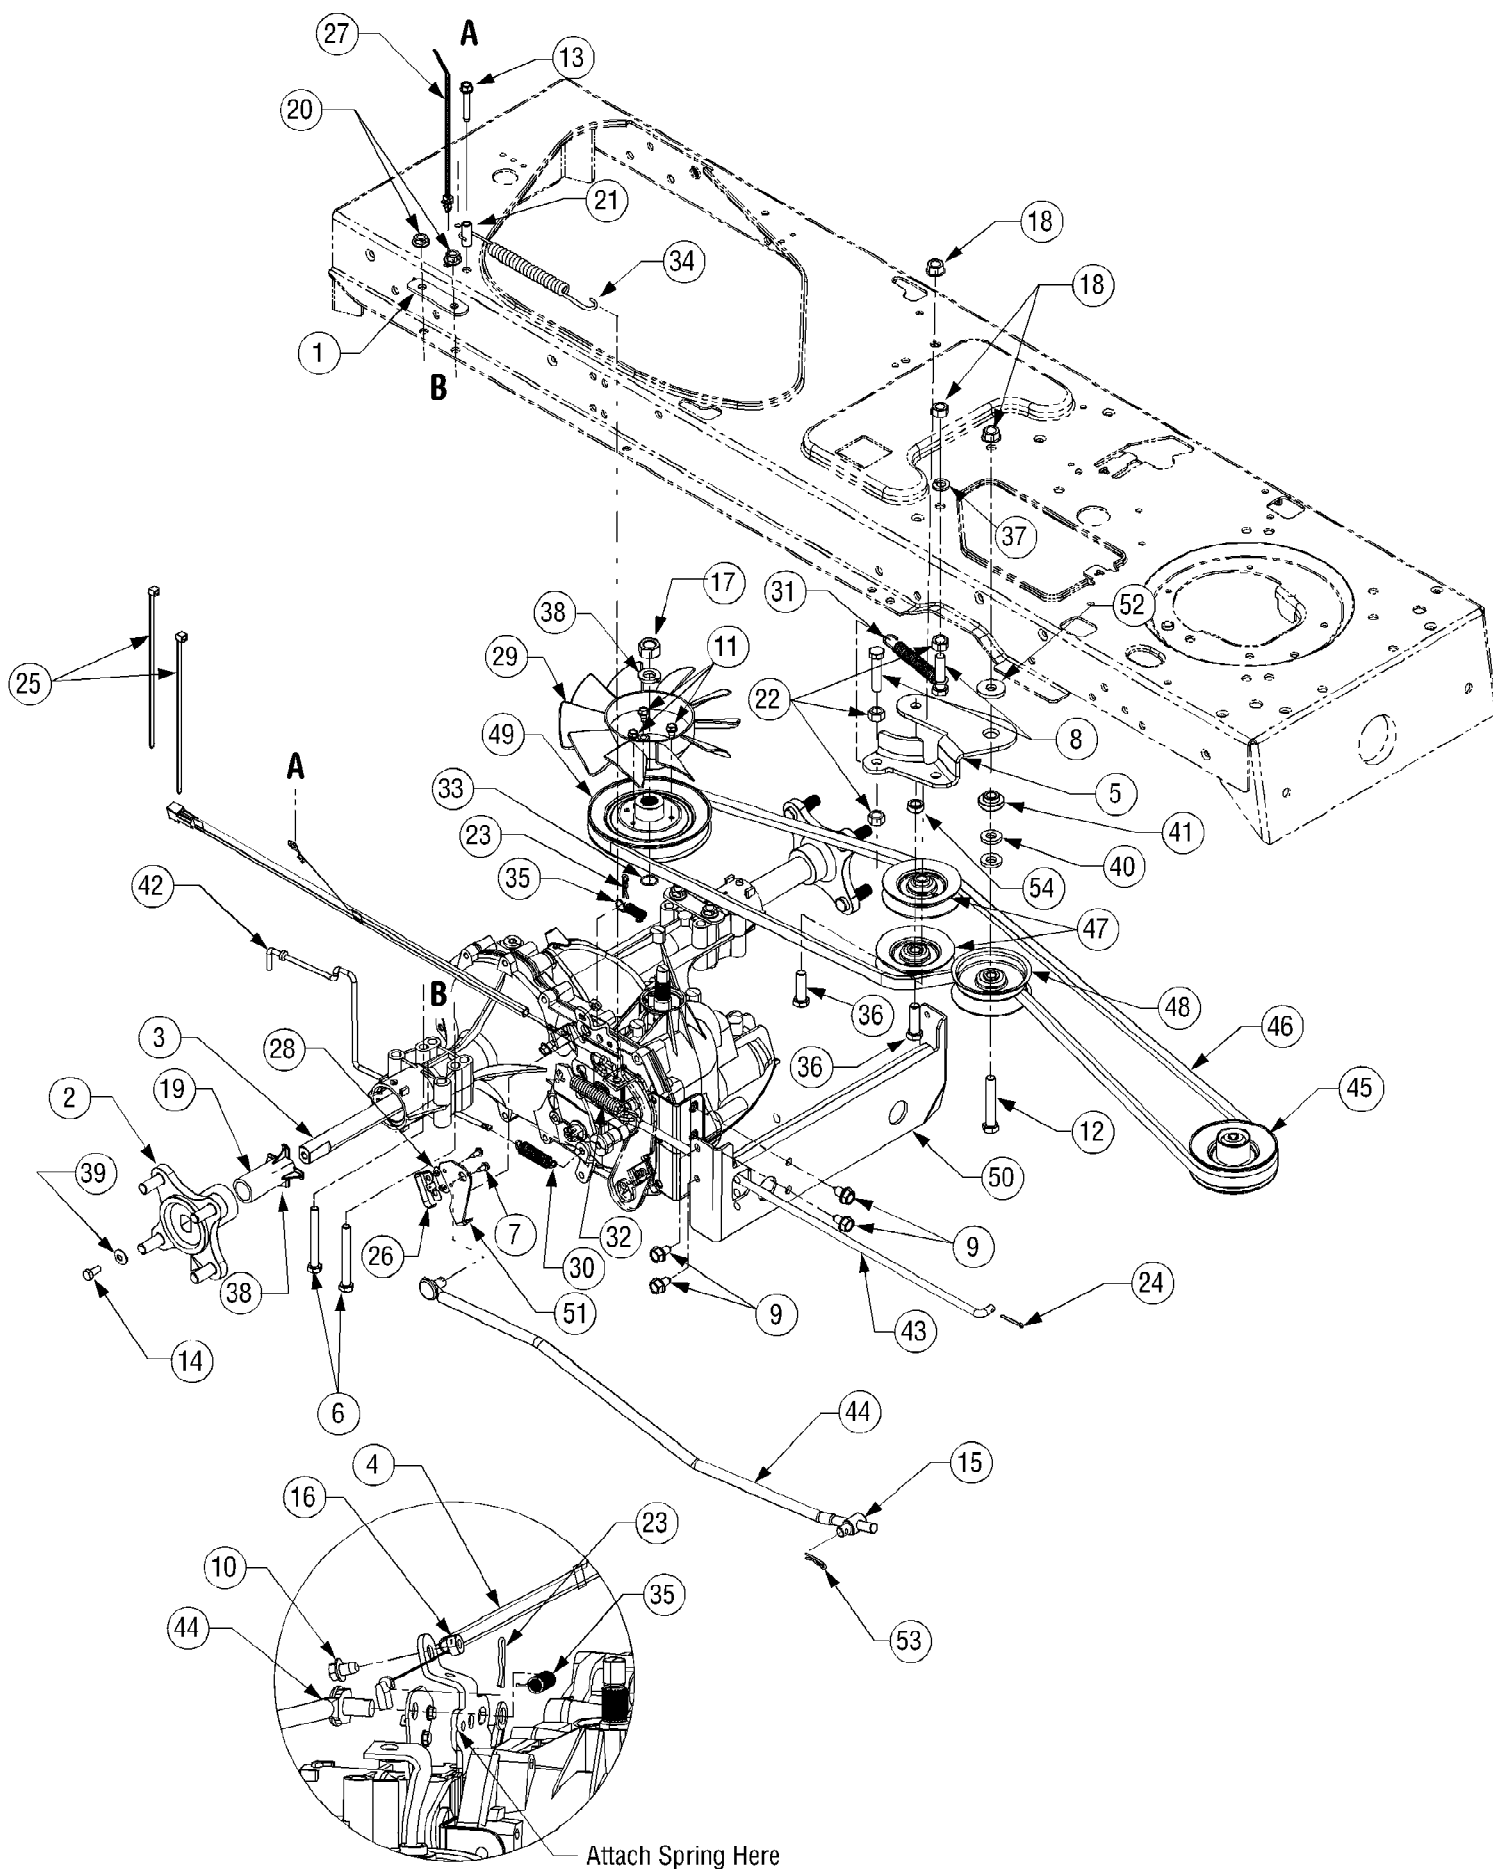

LT1046 Tractor (2007 & before)
Drive System 11146H & after

Page 59 of 109

Ref #	Part Number	Qty	S/P/F	Description
1	17840	2	S	Bracket, Mounting, Transaxle
2	618-04228	2	S	Hub Assembly, Wheel
3	618-0319	1	S	Transmission, Hydrostatic
3	618-04269A	1	S	Transmission, Hydrostatic w/ Drain
4	629-04124	1		Harness Assembly, Ground & Reverse
5	783-04442	1		Bracket Assembly, Idler, Center Dbl
6	710-1266	4	/P	Hex Cap Screw, 5/16-18,3.5, Gr5
7	710-0227	2	/P	Screw, #8-18, 0.500
8	710-0344	3	/P	Hex Cap Screw, 3/8-16, 1.50, Gr5
9	710-0726	6	/P	Screw, 5/16-12, 0.75
10	710-0599	1	/P	Screw, 1/4-20, 0.5
11	710-3007	3	/P	Screw, #12-24, 0.375
12	710-3011	1	/P	Hex Cap Screw, 3/8-16, 2.25, Gr5
13	710-0778	1	/P	Hex Cap Screw, 1/4-20, 1.5, Gr5
14	710-0627	2	/P	Hex Cap Screw, 5/16-24 x .750
15	711-0832	1	S	Ferrule, 3/8-24 x .375 Dia
16	712-04064	1	/P	Nut, Hex Nylon Lock, 1/4-20
17	712-3066	1	S	Nut, Hex, 1/2-20, Gr5
18	712-04065	4	/P	Nut, Nylon Lock, 3/8-16
19	731-05300	2		Sleeve, 2.4"
20	712-04052	5		Nut, Nylon Lock, 5/16-18, Gr5
21	750-0566A	1	/P	Spacer, 1"
22	712-3017	3	S	Nut, Hex, 3/8-16, Gr8
23	714-0104	2	S	Pin, Cotter, .072 Dia. x 1.13 Lg
24	714-0111	1	S	Pin, Cotter, 3/32, 1.0
25	725-0157	2	/P	Cable, Tie, 3/16 x .05 x 7.4
26	725-1644	1		Switch, Spring, Short
27	726-0154	2	S	Tie, Cable, Push Mount 7.5 Lg
28	726-0320	1	S	Plate, Insulator Nut
29	731-1449A	1	S	Fan, Blade, 10"
30	732-0209	1	S	Spring, .48 OD x 2.03 Extension
31	732-04323B	1	/P	Spring, Extension, .563 Dia x 3.72 Lg
32	732-0716C	1	S	Spring, Extension, .59 OD x 4.00 Lg
33	732-0729	1	/P	Ring, Wire
34	732-0994	1		Spring, Extension, .500 Dia x 7.0
35	732-3118	1		Spring, Extension, 3/8 OD x 1.44
36	710-0502A	1	/P	Screw, 3/8-16, 1.25
37	736-0169	1	S	Washer, Lock, 3/8, Regular Duty
38	736-0921	1	S	Washer, Lock, 1/2
39	736-0242	2	/P	Bell Washer
40	736-3010	3	/P	Washer, Flat, .407 x .812 x .135
41	738-0372B	1	/P	Spacer, Shoulder, 1.00 x .38 x .38
42	747-1149	1		Rod, Hydro Bypass
43	747-04139	1		Rod, Brake, Hydro
44	747-1151	1		Rod, Control, Hydro
45	756-0978B	1	/P	Pulley, Engine
46	754-0461	1	S	Belt, V Type, Poly
47	756-0116A	2	S	Pulley, Idler, V Type x 3.06 Dia
48	756-04224	1	/P	Pulley, Idler, Flat 2.75 OD
49	756-04111	1		Pulley, Engine, 4.11Dia.
50	783-0810B	1	S	Bracket, Transmission, Torque Hydro
51	783-1019B	1	/P	Bracket, Actuator, Switch
52	736-0320	1	/P	Washer, Flat, .38 x 1.92 x .060


LT1046 Tractor (2007 & before)
Drive System 11146H & after

Page 60 of 109

Ref #	Part Number	Qty	S/P/F	Description
53	714-0507	1	S	Pin, Cotter, 3/32, .750
54	750-0535	1	S	Spacer, .38 x .625 x .21

LT1046 Tractor (2007 & before)
Engine Accessories 1I135H & before

Page 61 of 109

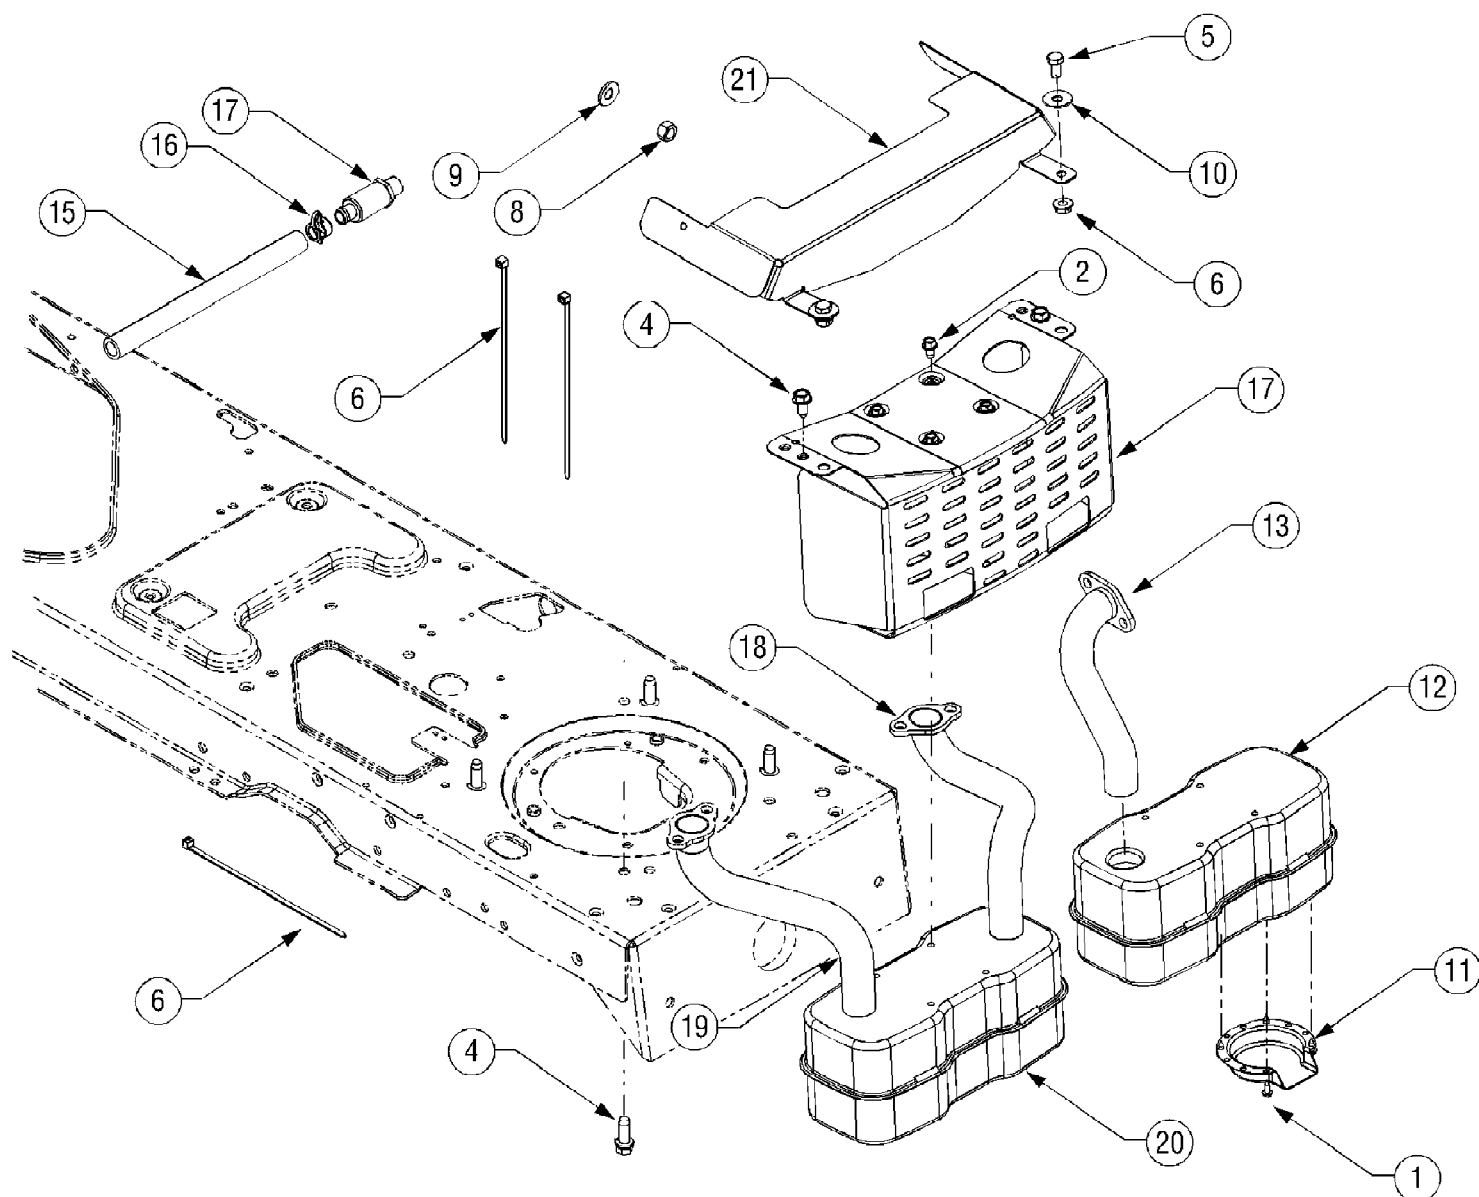


LT1046 Tractor (2007 & before)
Engine Accessories 1I135H & before

Page 62 of 109

Ref #	Part Number	Qty	S/P/F	Description
1	710-0227	4	/P	Screw, #8-18, 0.500
2	710-0599	4	/P	Screw, Hex, 1/4-20, 0.500
4	710-0726	4	/P	Screw, Hex, 5/16-12 x .75
4	710-0654A	4	/P	Screw, Hex, 3/8-16 x 1.00 (LT1042 & LT1045)
4	710-1315	4	/P	Screw, Hex, 3/8-16 x 1.25 (LT1046 & LT1050)
5	710-3025	2	/P	Screw, Hex, 5/16-18 x .625 (LT1046 & LT1050)
6	725-0157	2	/P	Cable, Tie, 3/16 x .05 x 7.4
7	712-3004A	2	/P	Nut, Flange Lock, 5/16-18 (LT1046 & LT1050)
8	712-3017	1	S	Hex Nut, 3/8-16 (LT1046 & LT1050)
9	736-0300	1	S	Lock Washer,.406 x.875 x.059 (LT1046 & LT1050)
10	736-3078	2	/P	Washer, Flat, .349 x 1.00 x .063 (LT1046 & LT1050)
11	751-0564A	1	S	Deflector, Muffler
12	751-0617A	1	S	Muffler, Single Inlet (LT1042 & LT1045)
13	751-10047	1		Pipe, Exhaust (LT1042 & LT1045)
15	751-3141	1	S	Extension Hose, Oil Drain
16	751-3142	1		Cap, Oil Drain
17	783-0615D	1	S	Bracket, Muffler
17	751-3140	1	S	Drain, Oil
18	751-0644B	1	/P	Pipe, Exhaust, LH (LT1046 & LT1050)
19	751-0645A	1	/P	Pipe, Exhaust, RH (LT1046 & LT1050)
20	751-0805	1	S	Muffler, Dual Inlet (LT1046 & LT1050)
21	783-0881	1		Shield, Heat (LT1046 & LT1050)

LT1046 Tractor (2007 & before)
Engine Accessories 1I145H & after

Page 63 of 109

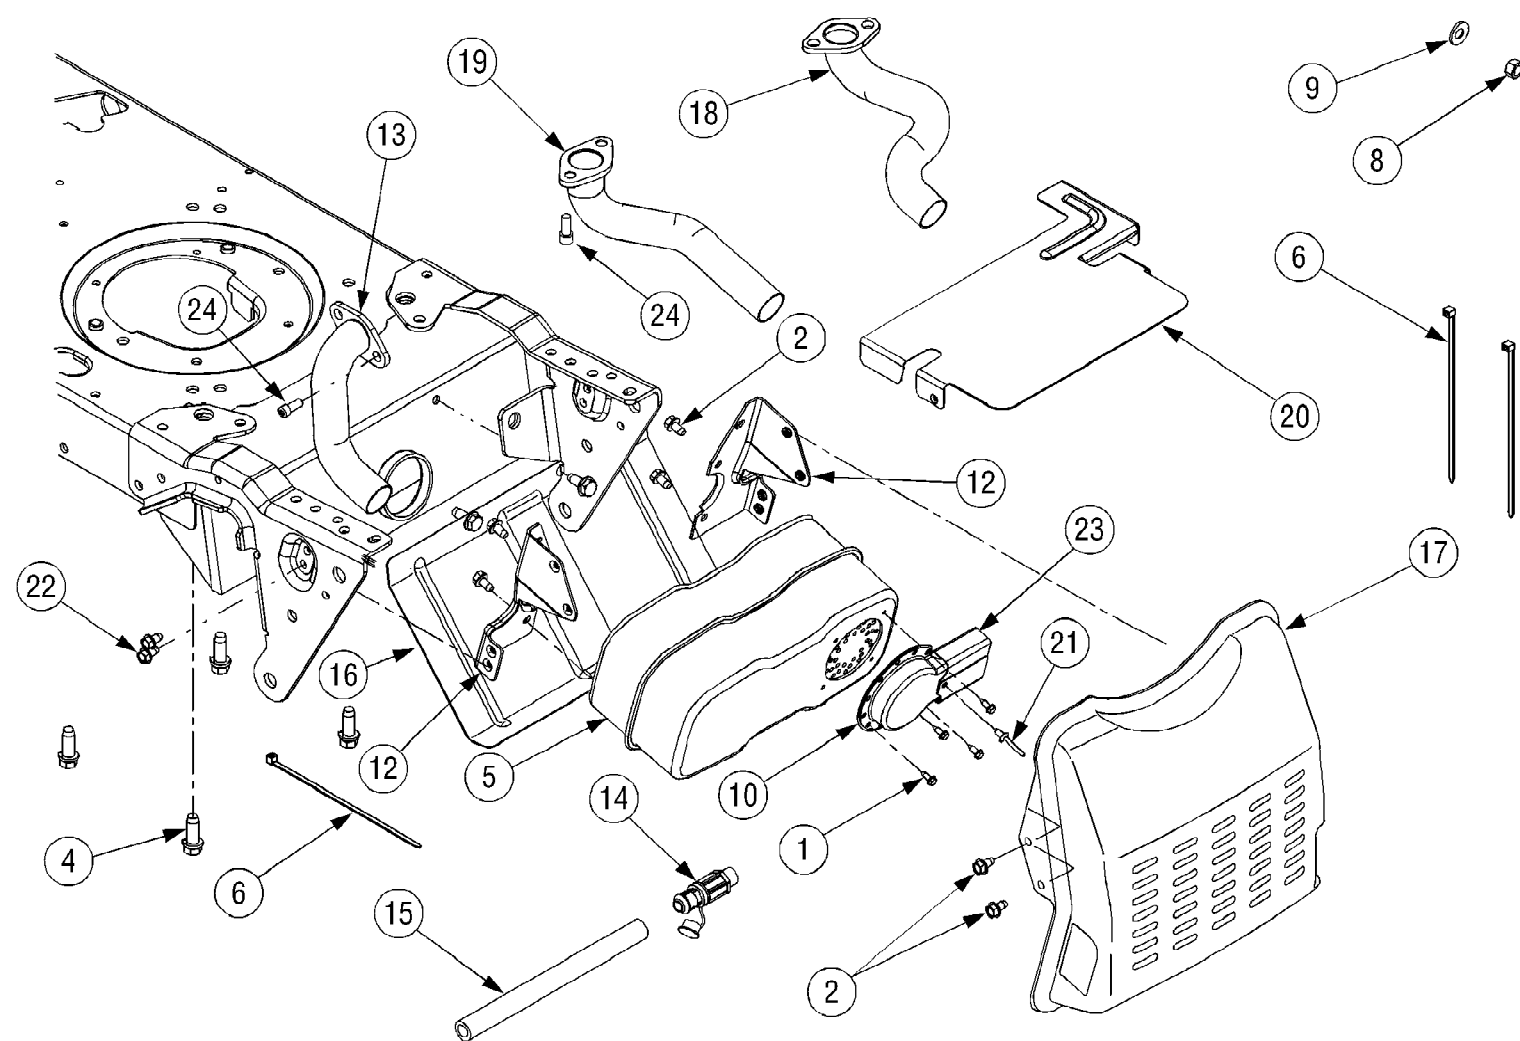


LT1046 Tractor (2007 & before)
Engine Accessories 1I145H & after

Page 64 of 109

Ref #	Part Number	Qty	S/P/F	Description
1	710-0227	4	/P	Screw, #8-18, 0.500
2	710-0599	8	/P	Screw, Hex, 1/4-20, 0.500
3	710-0726	2	/P	Screw, Hex, 5/16-12 x .75
4	710-0654A	4	/P	Screw, Hex, 3/8-16 x 1.00 (LT1042 & LT1045)
4	710-1315	4	/P	Screw, Hex, 3/8-16 x 1.25 (LT1046 & LT1050)
5	751-0617A	1	S	Muffler, Single Inlet (LT1042 & LT1045)
5	751-10161	1	F	Muffler, Dual Inlet (LT1046 & LT1050)
6	725-0157	2	/P	Cable, Tie, 3/16 x .05 x 7.4
7	712-3004A	2	/P	Nut, Flange Lock, 5/16-18 (LT1046 & LT1050)
8	712-3005	1	S	Hex Flange Nut, 3/8-16 (LT1046 & LT1050)
9	736-0300	1	S	Lock Washer,.406 x.875 x.059 (LT1046 & LT1050)
10	751-0564A	1	S	Deflector, Muffler
11	783-04573	1		Muffler Bracket, LH
12	783-04574	1		Muffler Bracket, RH
13	751-10017	1		Pipe, Exhaust (LT1042 & LT1045)
14	751-10517	1	S	Drain, Oil
15	751-3141	1	S	Extension Hose, Oil Drain
16	783-05410	1		Heat Shield, Lower Tractors manufactured after September 14, 2006
17	683-04256-0637	1	/P	Shield, Muffler (LT1046 & LT1050)
18	751-10007	1		Pipe, Exhaust, LH (LT1046 & LT1050)
19	751-10006	1		Pipe, Exhaust, RH (LT1046 & LT1050)
20	783-04783	1	S	Heat Shield, Upper (LT1046 & LT1050)
21	728-04000	1		Rivet, Pop, .188 x .325
22	710-0642	4	/P	Screw, Hex, 1/4-20, 0.750
23	751-10353	1		Extension, Deflector
24	710-1314A	2	/P	Screw, 5/16-18, 0.75

LT1046 Tractor (2007 & before)
Fender & Fuel Tank 11136H & before

Page 65 of 109

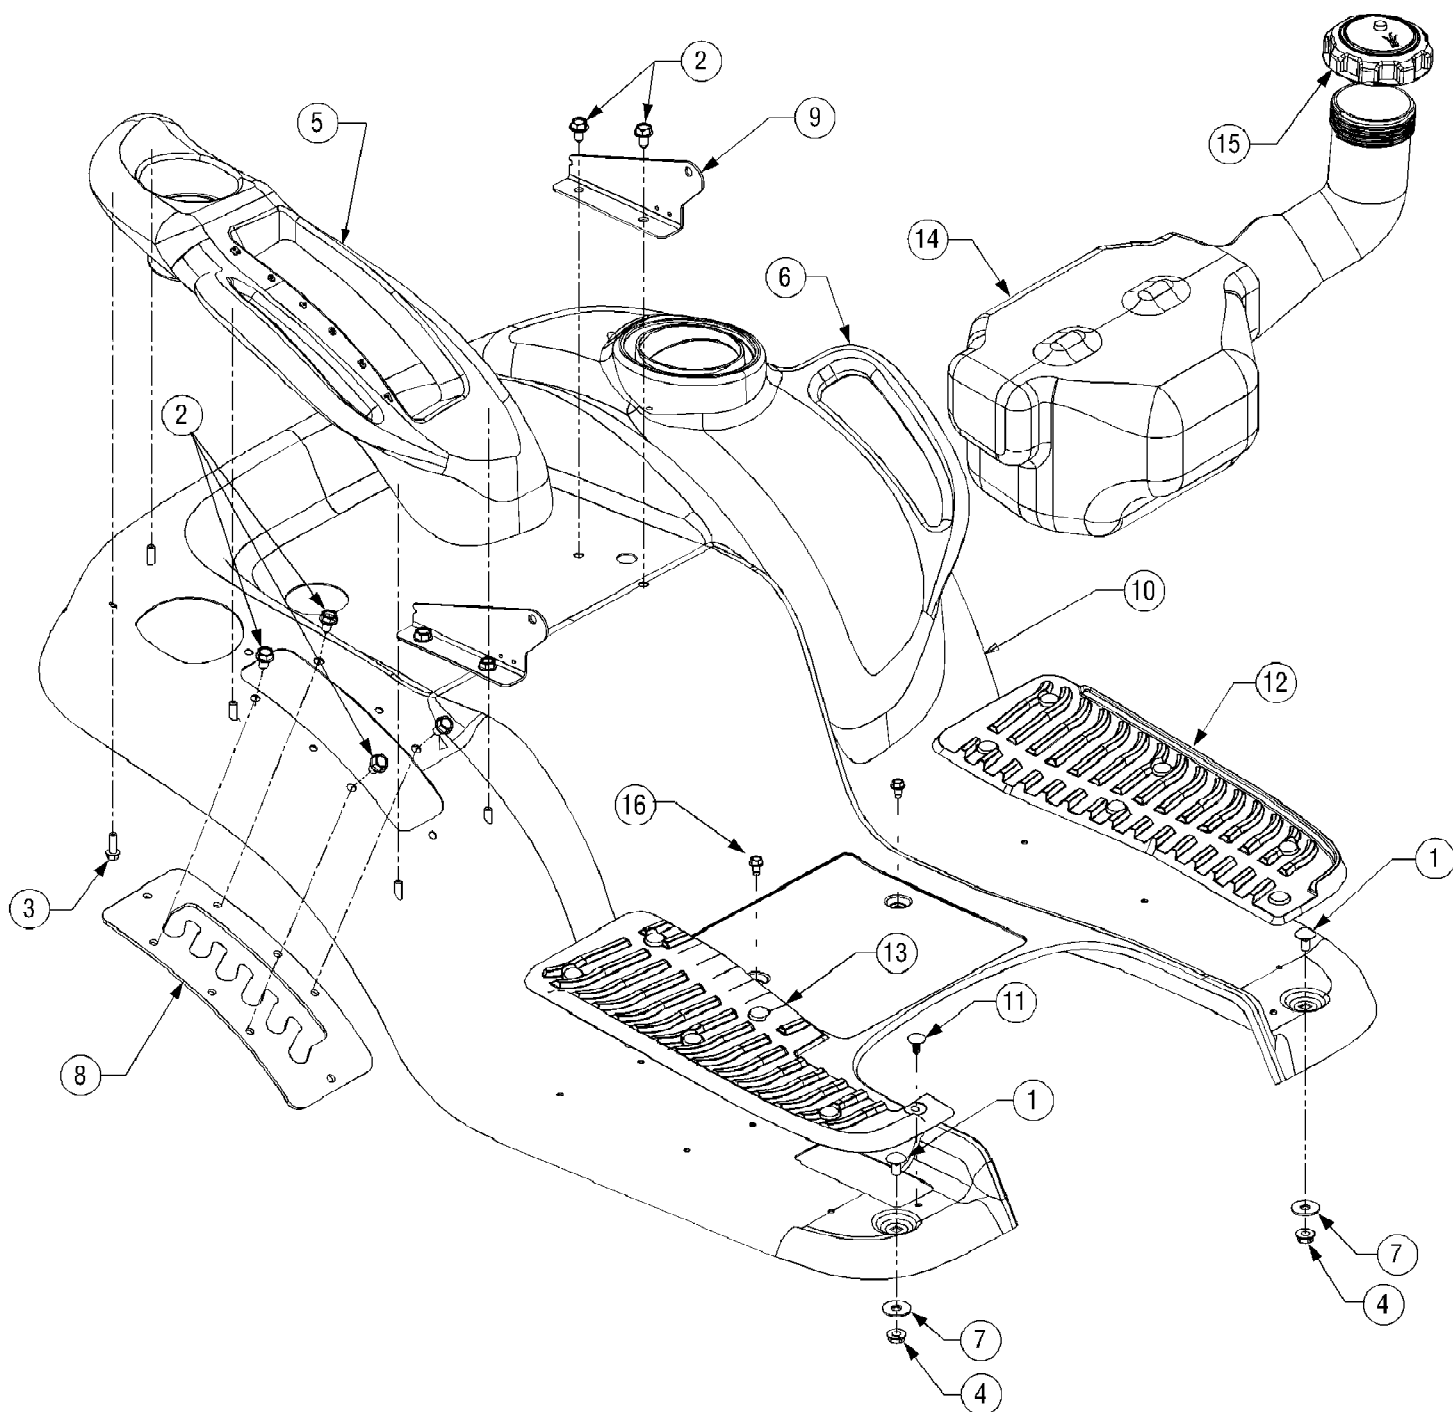


LT1046 Tractor (2007 & before)
Fender & Fuel Tank 11136H & before

Page 66 of 109

Ref #	Part Number	Qty	S/P/F	Description
1	710-0260A	2	/P	Bolt, Carriage, 5/16-18 x .62 Lg
2	710-0726	8	/P	Screw, 5/16-12, 0.75
3	710-0895	9		Screw, 1/4-15, 0.750
4	712-04063	2	/P	Nut, Nylon Lock, 5/16-18
5	731-2616A	1	S	Cover, Fender, RH
6	731-2617	1		Cover, Fender, LH
7	736-3078	2	/P	Washer, Flat, .349 x 1.00 x .063
8	783-0677	1	S	Bracket, Lift, Adjustment
9	783-1489A	2	/P	Bracket, Seat, Mount
10	783-04398A	1	S	Fender
11	726-3046	12	/P	Clip, Ratchet, .250 Dia
12	735-0697A	1		Pad, Foot, LH
13	735-0698B	1		Pad, Foot, RH
14	751-0819A	1	S	Tank, Fuel
15	751-3124B	1	S	Cap, Fuel
16	710-0599	2	/P	Screw, Self-tapping, 1/4-20, 0.500

LT1046 Tractor (2007 & before)
Fender & Fuel Tank 11146H & after

Page 67 of 109

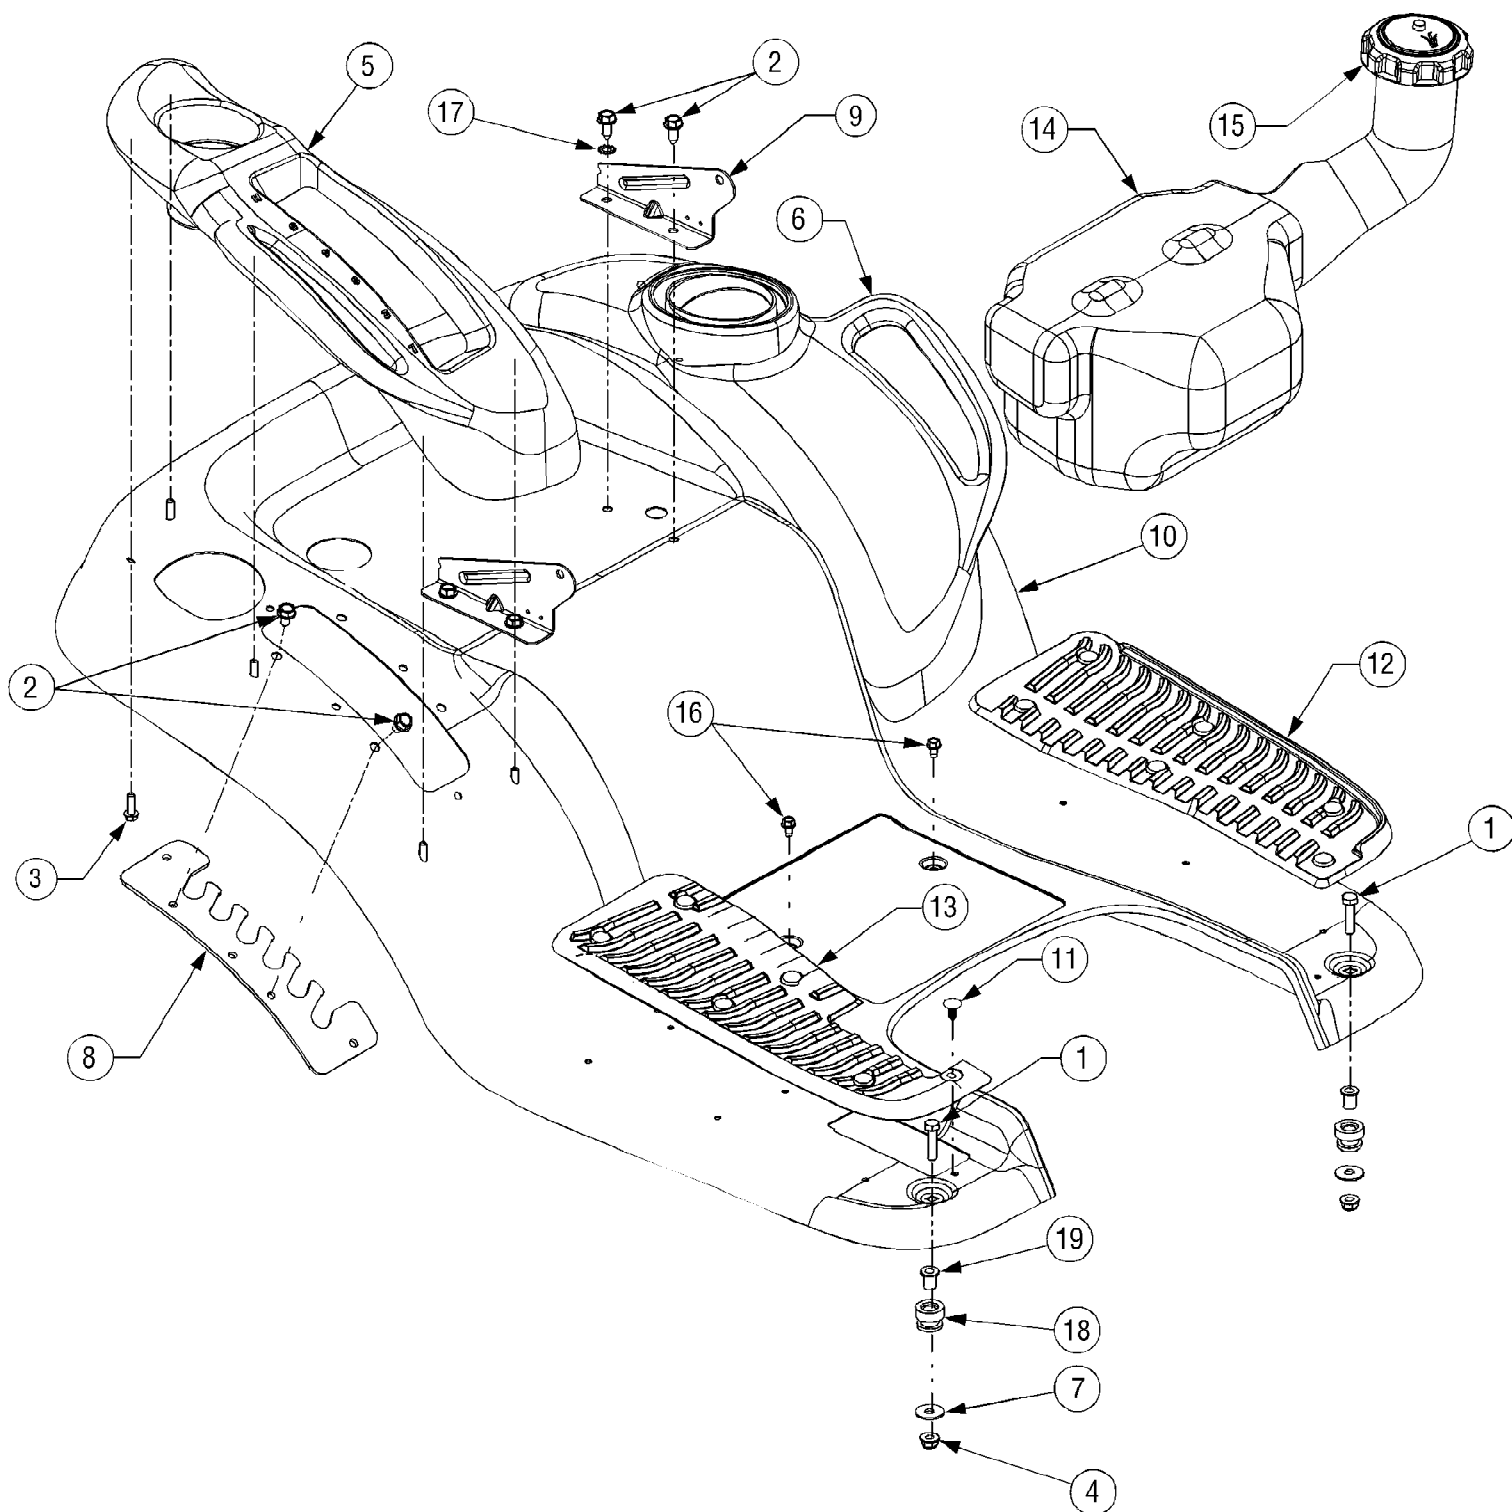


LT1046 Tractor (2007 & before)
Fender & Fuel Tank 11146H & after

Page 68 of 109

Ref #	Part Number	Qty	S/P/F	Description
1	710-0528	2	/P	Screw, 5/16-18 x 1.25
2	710-0406A	6		Screw, 5/16-12, 0.625
3	710-0895	9		Screw, 1/4-15, 0.750
4	712-04063	2	/P	Nut, Nylon Lock, 5/16-18
5	731-2616A	1	S	Cover, Fender, RH
6	731-2617	1		Cover, Fender, LH
7	736-3078	2	/P	Washer, Flat, .349 x 1.00 x .063
8	783-0677B	1		Bracket, Lift, Adjustment
9	783-1489C	2		Bracket, Seat, Mount
10	783-04477A	1	/P	Fender
11	726-3046	12	/P	Clip, Ratchet, .250 Dia
12	735-0697A	1		Pad, Foot, LH
13	735-0698B	1		Pad, Foot, RH
14	751-0819B	1	S	Tank, Fuel
15	751-3124D	1	S	Cap, Fuel
16	710-0599	2	/P	Screw, Self-tapping, 1/4-20, 0.500
17	736-0607	1	/P	Washer, Lock, 5/16 External Tooth
18	735-0690	2		Grommet
19	750-3310	2		Flange Spacer, .3125 x .4375 x .625

LT1046 Tractor (2007 & before)
Frame 1I135H & before

Page 69 of 109

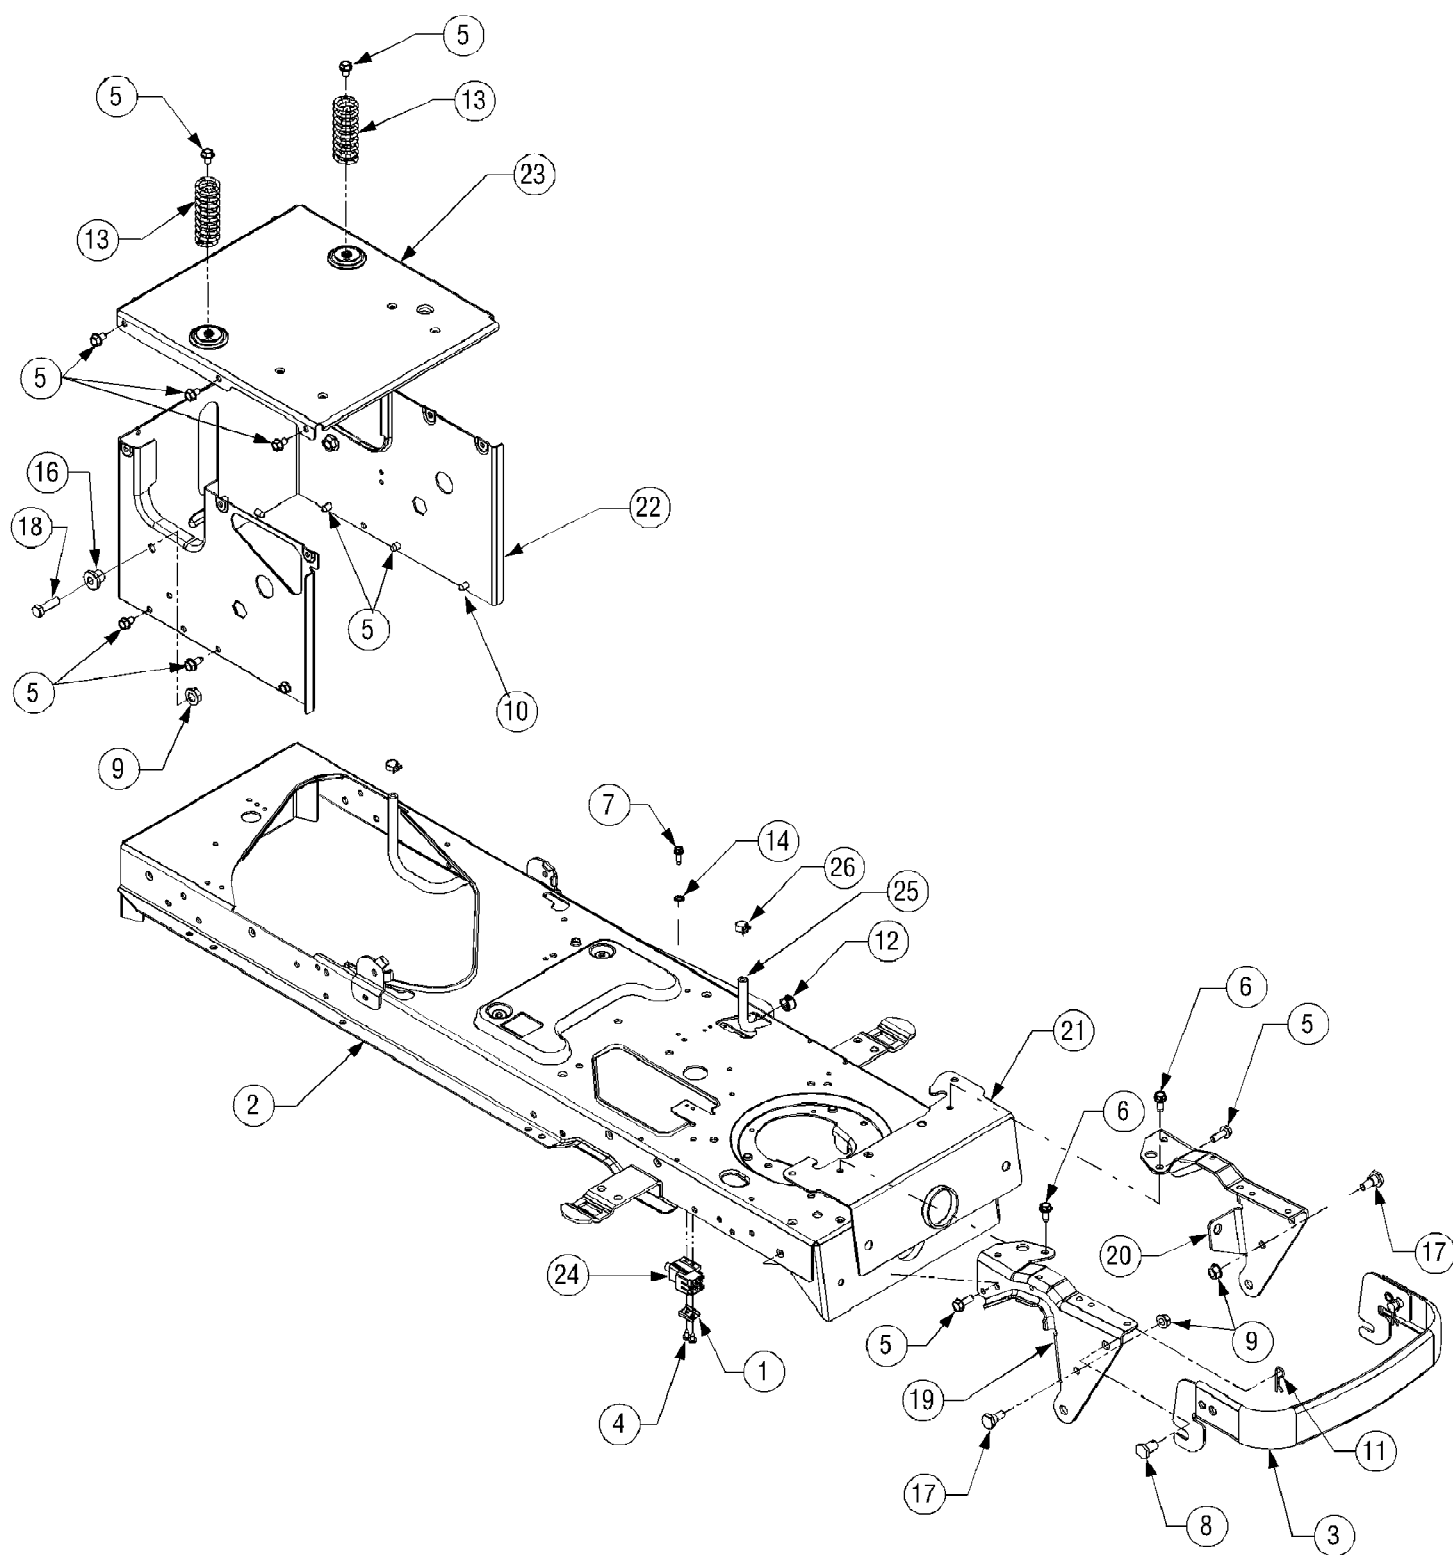


LT1046 Tractor (2007 & before)
Frame 1I135H & before

Page 70 of 109

Ref #	Part Number	Qty	S/P/F	Description
1	17962	1		Plate, Switch
2	683-04173	1	S	Frame Assembly, Lower
3	683-0612	1		Bumper Assembly
4	710-0224	2	S	Screw, Hex Wash. Hd. Tapp, 10-16 x .5
5	710-0726	13	/P	Screw, Self-tapping, 5/16-18, 0.75
6	710-1260A	2	/P	Screw, 5/16-18, 0.750
7	710-1652	1	/P	Screw, Hex Wash. Hd. Tapp, 1/4-20 x 0.625
8	711-0332	2	S	Pin, Clevis, .50 Dia x .78 Lg
9	712-04065	2	/P	Nut, Nylon Lock, 3/8-16
10	710-0607	1	/P	Screw, Hex Wash. Tapp, 5/16-18 x .5
11	714-04023	2	S	Pin, Internal Cotter
12	741-04092	1		Snap Bushing
13	732-04035	2		Spring, Compression, 1.28 OD x 3.125 Lg
14	736-0222	2	S	Washer, Lock, Ext 1/4
16	738-04058	2		Shoulder Spacer
17	738-0143	2	/P	Shoulder Screw, 3/8-16
18	710-3005	2	/P	Hex Screw 3/8-16 x 1.25
19	783-0726D	1	/P	Bracket, Pivot, Support RH
20	783-0727C	1	/P	Bracket, Pivot, Support LH
21	783-0728	1		Bracket, Pivot, Bar
22	783-04330A	1	S	Frame, Upper
23	783-04329A	1		Bracket, Frame, Seat
24	725-04039	1	S	Switch, Interlock
25	751-0535	1		Fuel Line
26	726-0205	2	/P	Clamp, Hose, .490 Dia.

LT1046 Tractor (2007 & before)
Frame 1L145H & after

Page 71 of 109

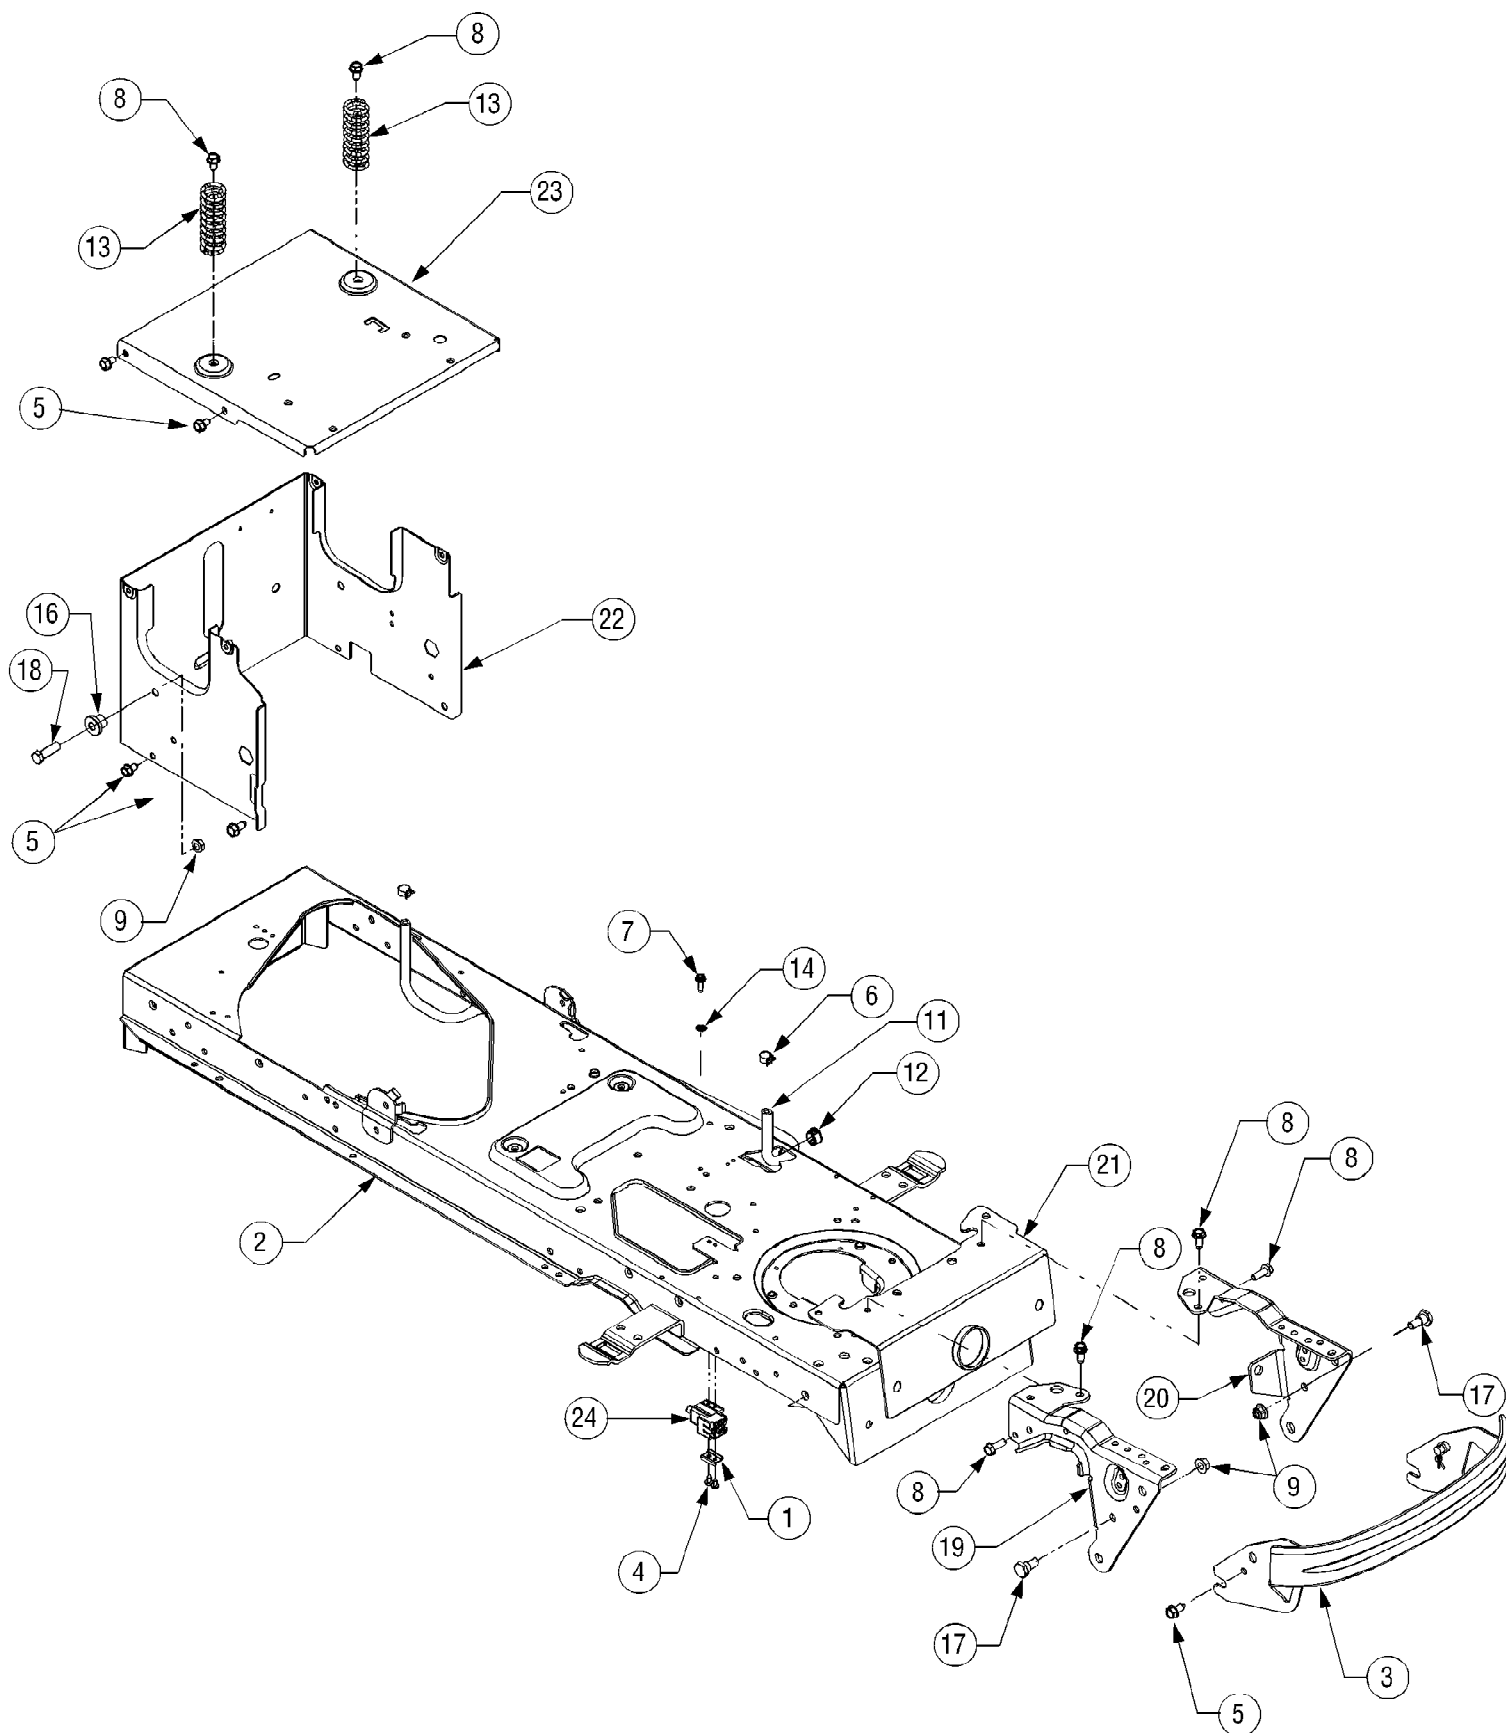


LT1046 Tractor (2007 & before)
Frame 1I145H & after

Page 72 of 109

Ref #	Part Number	Qty	S/P/F	Description
1	17962	1		Plate, Switch
2	683-04173B	1		Frame Assembly, Lower
3	683-04238	1	S	Bumper Assembly
4	710-0224	2	S	Screw, Hex Head, 10-16 x .5
5	710-0726	7	/P	Screw, Self-tapping, 5/16-18, 0.75
6	726-0205	2	/P	Clamp, Hose, .490 Dia.
7	710-1652	1	/P	Screw, Hex Wash. Hd. Tapp, 1/4-20 x 0.625
8	710-1260A	6	/P	Screw, Self-tapping, 5/16-12, 0.75
9	712-04065	2	/P	Nut, Nylon Lock, 3/8-16
10	710-0607	1	/P	Screw, Hex Wash. Tapp, 5/16-18 x .5
11	751-10349	1		Fuel Line, Low Permeation, 29"
12	741-04092	1		Snap Bushing
13	732-04035	2		Spring, Compression, 1.28 OD x 3.125
14	736-0222	2	S	Washer, Lock, Ext 1/4
16	738-04058	2		Shoulder Spacer
17	738-0143	2	/P	Shoulder Screw, 3/8-16
18	710-3005	2	/P	Hex Screw 3/8-16 x 1.25
19	783-0726E	1	/P	Bracket, Pivot, Support RH
20	783-0727D	1		Bracket, Pivot, Support LH
21	783-0728B	1		Bracket, Pivot, Bar
22	783-04810D	1		Frame, Upper
23	783-04746	1		Bracket, Frame, Seat
24	725-04039	1	S	Switch, Interlock

LT1046 Tractor (2007 & before)
Hood and Grille 11135H & before

Page 73 of 109

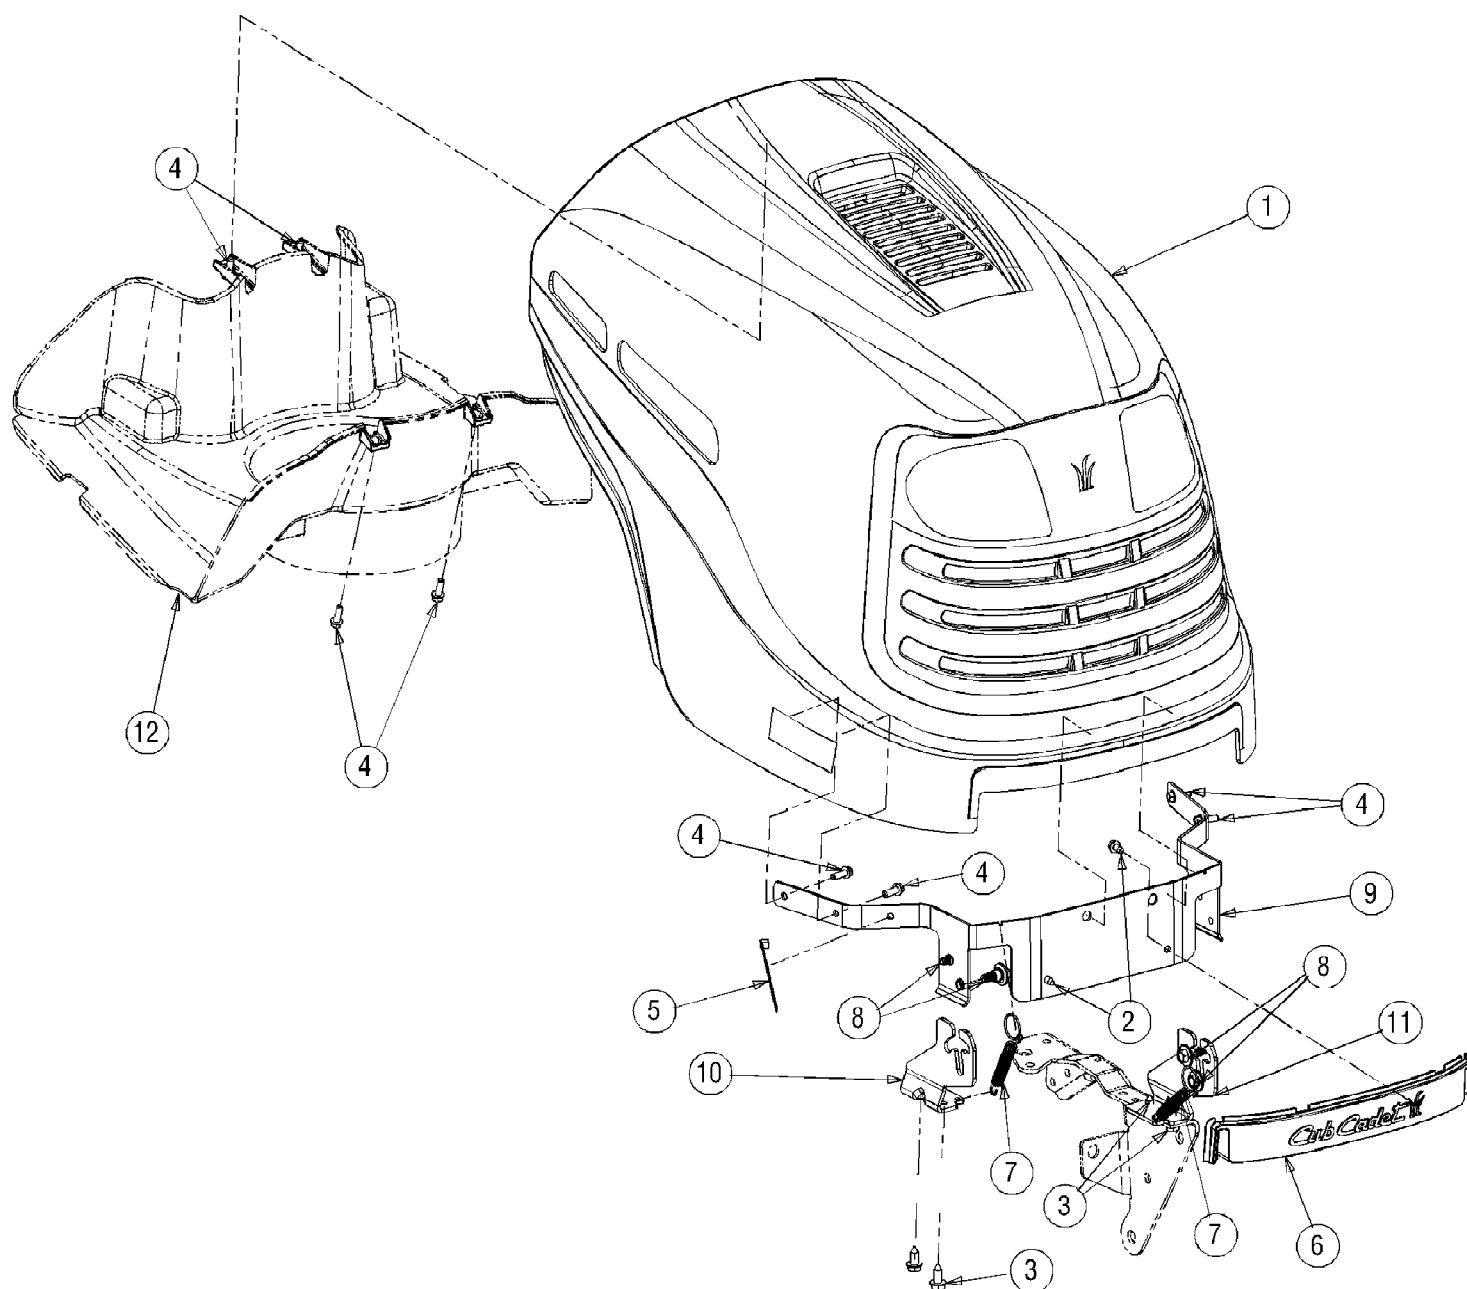


LT1046 Tractor (2007 & before)
Hood and Grille 11135H & before

Page 74 of 109

Ref #	Part Number	Qty	S/P/F	Description
1		1		Hood Asssembly:
	629-04083	1	S	Headlight Harness
	725-0963	2	S	Minirature Lamp, 12 V
	725-1649	2	S	Lamp Socket
	731-04567A	1	S	Hood
	731-04577	1	S	Headlight Lens
	777X41562	1		Headlight Lens Reflector, RH
	777X41563	1		Headlight Lens Reflector, RH
2	710-0599	2	/P	Screw, Hex Wash, Hd,Tapp 1/4-20 x .5
3	710-0726	4	/P	Self-tapping Screw, 5/16-18 x.625
4	710-0895	8		Screw, 1/4-15 x .75
5	725-0157	1	/P	Cable Tie
6	731-04687A	1	S	Cover, Front Hood
7	732-04189B	2	/P	Spring, .46 x 4.12
8	738-04091	4	S	Shoulder Screw, .43 x .29 x 5/16-18
9	783-04428	1		Pivot Bracket
10	783-04464B	1	S	Pivot Bracket, Hood, RH
11	783-04465A	1	S	Pivot Bracket, Hood, LH
12	731-04569	1	S	Hood Plenum (LT1042 & LT1045)
	731-04679	1	S	Hood Plenum (LT1046 & LT1050)

LT1046 Tractor (2007 & before)
Hood and Grille 11145H & after

Page 75 of 109

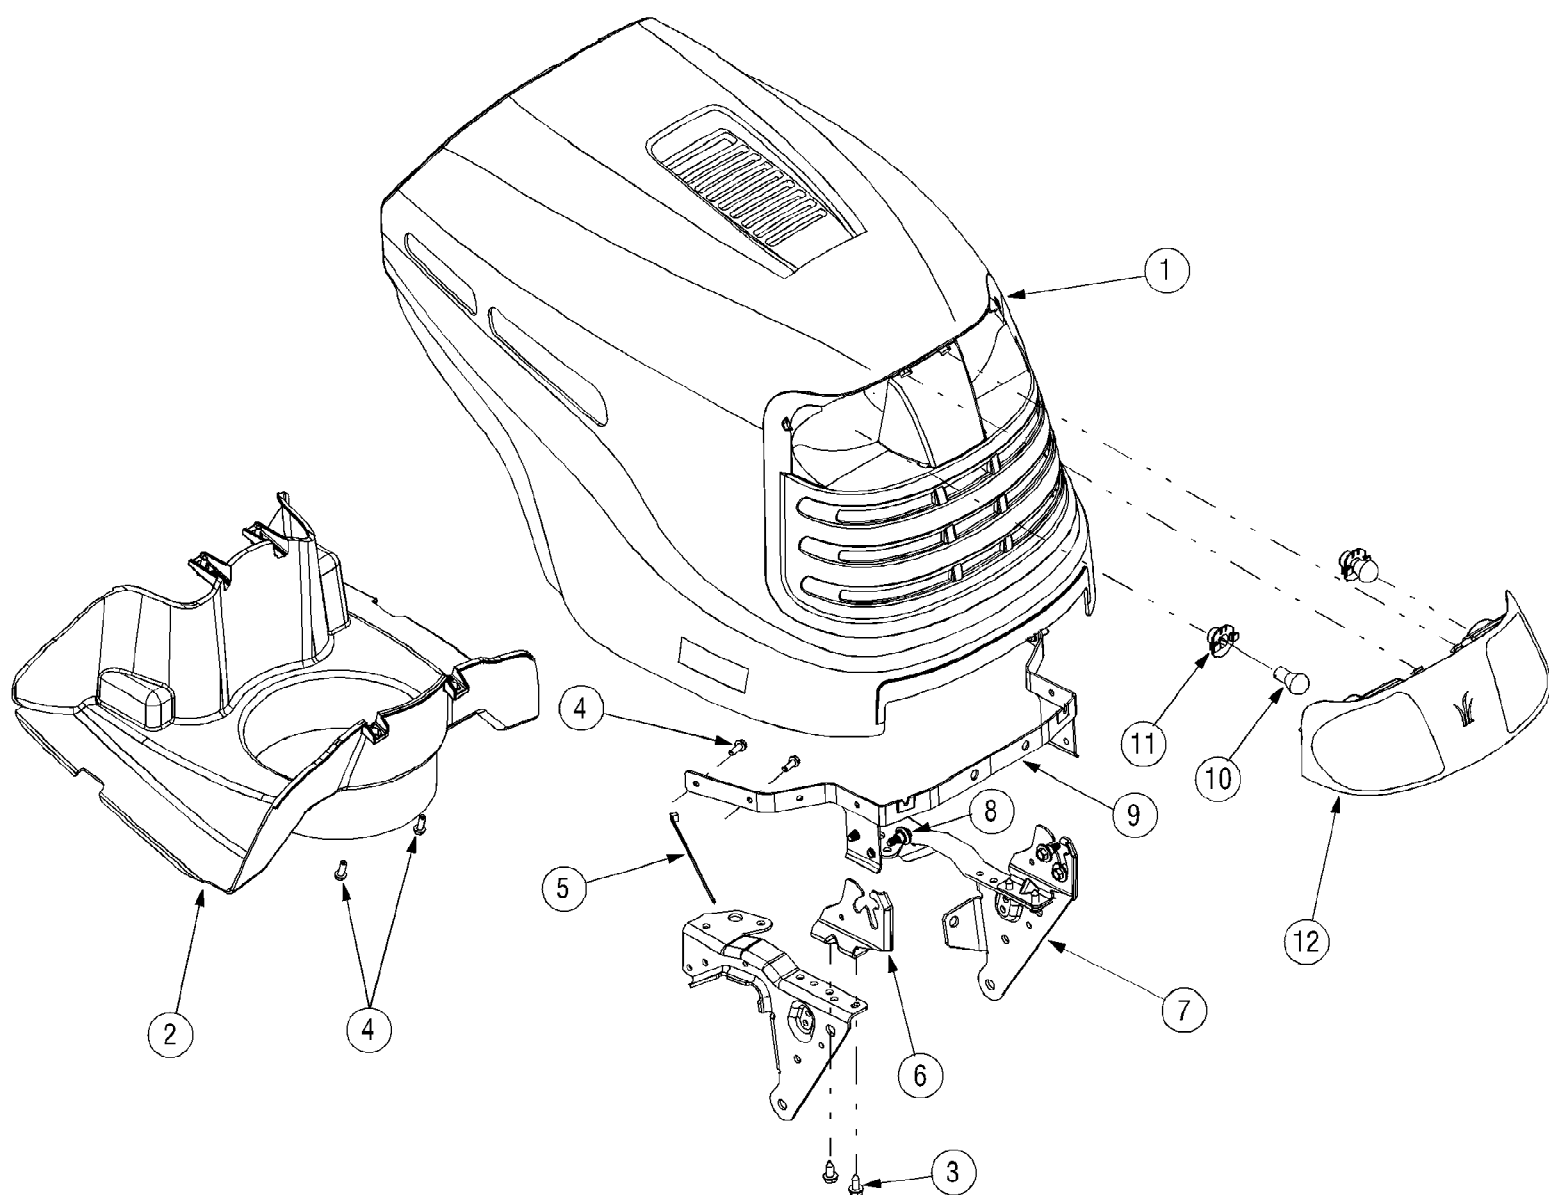

LT1046 Tractor (2007 & before)
Hood and Grille 11145H & after

Page 76 of 109

Ref #	Part Number	Qty	S/P/F	Description
1	731-04567A	1	S	Hood
2	731-04569	1	S	Hood Plenum (LT1042 & LT1045)
2	731-04579A	1		Hood Plenum (LT1046 & LT1050)
3	710-0726	4	/P	Self-tapping Screw, 5/16-18 x.625
4	710-0895	8		Screw, 1/4-15 x .75
5	725-0157	1	/P	Cable Tie
6	783-04840	1		Pivot Bracket, Hood, RH
7	783-04841	1		Pivot Bracket, Hood, LH
8	738-04091	4	S	Shoulder Screw, .43 x .29 x 5/16-18
9	783-04606A	1		Pivot Bracket
10	725-0963	2	S	Miniature Lamp, 12 V
11	725-1649	2	S	Lamp Socket
12	731-04577	1	S	Headlight Lens
	777X41562	1		Headlight Lens Reflector, RH
	777X41563	1		Headlight Lens Reflector, LH
	629-04083	1	S	Headlight Harness (not shown)

LT1046 Tractor (2007 & before)

Label Map

Page 77 of 109

Under Seat On Fender Visible With Seat Lowered To The Left Of 777X42179

EMISSIONS LABEL
FROM BJ LABEL



777I22679
Engine In Position
On Correct Engine



**"B.J." LABEL (MODEL PLATE)
UNDER SEAT PLATE**

777X42598
UNDER HOOD

MODEL LT 1046 REPLACEMENT PARTS			
Model	1046-01	1046-02	1046-03
Accessories	1046-04	1046-05	1046-06
1046-07	1046-08	1046-09	1046-10
1046-11	1046-12	1046-13	1046-14
1046-15	1046-16	1046-17	1046-18
1046-19	1046-20	1046-21	1046-22
1046-23	1046-24	1046-25	1046-26
1046-27	1046-28	1046-29	1046-30
1046-31	1046-32	1046-33	1046-34
1046-35	1046-36	1046-37	1046-38
1046-39	1046-40	1046-41	1046-42
1046-43	1046-44	1046-45	1046-46
1046-47	1046-48	1046-49	1046-50
1046-51	1046-52	1046-53	1046-54
1046-55	1046-56	1046-57	1046-58
1046-59	1046-60	1046-61	1046-62
1046-63	1046-64	1046-65	1046-66
1046-67	1046-68	1046-69	1046-70
1046-71	1046-72	1046-73	1046-74
1046-75	1046-76	1046-77	1046-78
1046-79	1046-80	1046-81	1046-82
1046-83	1046-84	1046-85	1046-86
1046-87	1046-88	1046-89	1046-90
1046-91	1046-92	1046-93	1046-94
1046-95	1046-96	1046-97	1046-98
1046-99	1046-100	1046-101	1046-102
1046-103	1046-104	1046-105	1046-106
1046-107	1046-108	1046-109	1046-110
1046-111	1046-112	1046-113	1046-114
1046-115	1046-116	1046-117	1046-118
1046-119	1046-120	1046-121	1046-122
1046-123	1046-124	1046-125	1046-126
1046-127	1046-128	1046-129	1046-130
1046-131	1046-132	1046-133	1046-134
1046-135	1046-136	1046-137	1046-138
1046-139	1046-140	1046-141	1046-142
1046-143	1046-144	1046-145	1046-146
1046-147	1046-148	1046-149	1046-150
1046-151	1046-152	1046-153	1046-154
1046-155	1046-156	1046-157	1046-158
1046-159	1046-160	1046-161	1046-162
1046-163	1046-164	1046-165	1046-166
1046-167	1046-168	1046-169	1046-170
1046-171	1046-172	1046-173	1046-174
1046-175	1046-176	1046-177	1046-178
1046-179	1046-180	1046-181	1046-182
1046-183	1046-184	1046-185	1046-186
1046-187	1046-188	1046-189	1046-190
1046-191	1046-192	1046-193	1046-194
1046-195	1046-196	1046-197	1046-198
1046-199	1046-200	1046-201	1046-202
1046-203	1046-204	1046-205	1046-206
1046-207	1046-208	1046-209	1046-210
1046-211	1046-212	1046-213	1046-214
1046-215	1046-216	1046-217	1046-218
1046-219	1046-220	1046-221	1046-222
1046-223	1046-224	1046-225	1046-226
1046-227	1046-228	1046-229	1046-230
1046-231	1046-232	1046-233	1046-234
1046-235	1046-236	1046-237	1046-238
1046-239	1046-240	1046-241	1046-242
1046-243	1046-244	1046-245	1046-246
1046-247	1046-248	1046-249	1046-250
1046-251	1046-252	1046-253	1046-254
1046-255	1046-256	1046-257	1046-258
1046-259	1046-260	1046-261	1046-262
1046-263	1046-264	1046-265	1046-266
1046-267	1046-268	1046-269	1046-270
1046-271	1046-272	1046-273	1046-274
1046-275	1046-276	1046-277	1046-278
1046-279	1046-280	1046-281	1046-282
1046-283	1046-284	1046-285	1046-286
1046-287	1046-288	1046-289	1046-290
1046-291	1046-292	1046-293	1046-294
1046-295	1046-296	1046-297	1046-298
1046-299	1046-300	1046-301	1046-302
1046-303	1046-304	1046-305	1046-306
1046-307	1046-308	1046-309	1046-310
1046-311	1046-312	1046-313	1046-314
1046-315	1046-316	1046-317	1046-318
1046-319	1046-320	1046-321	1046-322
1046-323	1046-324	1046-325	1046-326
1046-327	1046-328	1046-329	1046-330
1046-331	1046-332	1046-333	1046-334
1046-335	1046-336	1046-337	1046-338
1046-339	1046-340	1046-341	1046-342
1046-343	1046-344	1046-345	1046-346
1046-347	1046-348	1046-349	1046-350
1046-351	1046-352	1046-353	1046-354
1046-355	1046-356	1046-357	1046-358
1046-359	1046-360	1046-361	1046-362
1046-363	1046-364	1046-365	1046-366
1046-367	1046-368	1046-369	1046-370
1046-371	1046-372	1046-373	1046-374
1046-375	1046-376	1046-377	1046-378
1046-379	1046-380	1046-381	1046-382
1046-383	1046-384	1046-385	1046-386
1046-387	1046-388	1046-389	1046-390
1046-391	1046-392	1046-393	1046-394
1046-395	1046-396	1046-397	1046-398
1046-399	1046-400	1046-401	1046-402
1046-403	1046-404	1046-405	1046-406
1046-407	1046-408	1046-409	1046-410
1046-411	1046-412	1046-413	1046-414
1046-415	1046-416	1046-417	1046-418
1046-419	1046-420	1046-421	1046-422
1046-423	1046-424	1046-425	1046-426
1046-427	1046-428	1046-429	1046-430
1046-431	1046-432	1046-433	1046-434
1046-435	1046-436	1046-437	1046-438
1046-439	1046-440	1046-441	1046-442
1046-443	1046-444	1046-445	1046-446
1046-447	1046-448	1046-449	1046-450
1046-451	1046-452	1046-453	1046-454
1046-455	1046-456	1046-457	1046-458
1046-459	1046-460	1046-461	1046-462
1046-463	1046-464	1046-465	1046-466
1046-467	1046-468	1046-469	1046-470
1046-471	1046-472	1046-473	1046-474
1046-475	1046-476	1046-477	1046-478
1046-479	1046-480	1046-481	1046-482
1046-483	1046-484	1046-485	1046-486
1046-487	1046-488	1046-489	1046-490
1046-491	1046-492	1046-493	1046-494
1046-495	1046-496	1046-497	1046-498
1046-499	1046-500	1046-501	1046-502
1046-503	1046-504	1046-505	1046-506
1046-507	1046-508	1046-509	1046-510
1046-511	1046-512	1046-513	1046-514
1046-515	1046-516	1046-517	1046-518
1046-519	1046-520	1046-521	1046-522
1046-523	1046-524	1046-525	1046-526
1046-527	1046-528	1046-529	1046-530
1046-531	1046-532	1046-533	1046-534
1046-535	1046-536	1046-537	1046-538
1046-539	1046-540	1046-541	1046-542
1046-543	1046-544	1046-545	1046-546
1046-547	1046-548	1046-549	1046-550
1046-551	1046-552	1046-553	1046-554
1046-555	1046-556	1046-557	1046-558
1046-559	1046-560	1046-561	1046-562
1046-563	1046-564	1046-565	1046-566
1046-567	1046-568	1046-569	1046-570
1046-571	1046-572	1046-573	1046-574
1046-575	1046-576	1046-577	1046-578
1046-579	1046-580	1046-581	1046-582
1046-583	1046-584	1046-585	1046-586
1046-587	1046-588	1046-589	1046-590
1046-591	1046-592	1046-593	1046-594
1046-595	1046-596	1046-597	1046-598
1046-599	1046-600	1046-601	1046-602
1046-603	1046-604	1046-605	1046-606
1046-607	1046-608	1046-609	1046-610
1046-611	1046-612	1046-613	1046-614
1046-615	1046-616	1046-617	1046-618
1046-619	1046-620	1046-621	1046-622
1046-623	1046-624	1046-625	1046-626
1046-627	1046-628	1046-629	1046-630
1046-631	1046-632	1046-633	1046-634
1046-635	1046-636	1046-637	1046-638
1046-639	1046-640	1046-641	1046-642
1046-643	1046-644	1046-645	1046-646
1046-647	1046-648	1046-649	1046-650
1046-651	1046-652	1046-653	1046-654
1046-655	1046-656	1046-657	1046-658
1046-659	1046-660	1046-661	1046-662
1046-663	1046-664	1046-665	1046-666
1046-667	1046-668	1046-669	1046-670
1046-671	1046-672	1046-673	1046-674
1046-675	1046-676	1046-677	1046-678
1046-679	1046-680	1046-681	1046-682
1046-683	1046-684	1046-685	1046-686
1046-687	1046-688	1046-689	1046-690
1046-691	1046-692	1046-693	1046-694
1046-695	1046-696	1046-697	1046-698
1046-699	1046-700	1046-701	1046-702
1046-703	1046-704	1046-705	1046-706
1046-707	1046-708	1046-709	1046-710
1046-711	1046-712	1046-713	1046-714
1046-715	1046-716	1046-717	1046-718
1046-719	1046-720	1046-721	1046-722
1046-723	1046-724	1046-725	1046-726
1046-727	1046-728	1046-729	1046-730
1046-731	1046-732	1046-733	1046-734
1046-735	1046-736	1046-737	1046-738
1046-739	1046-740	1046-741	1046-742
1046-743	1046-744	1046-745	1046-746
1046-747	1046-748	1046-749	1046-750
1046-751	1046-752	1046-753	1046-754
1046-755	1046-756	1046-757	1046-758
1046-759	1046-760	1046-761	1046-762
1046-763	1046-764	1046-765	1046-766
1046-767	1046-768	1046-769	1046-770
1046-771	1046-772	1046-773	1046-774
1046-775	1046-776	1046-777	1046-778
1046-779	1046-780	1046-781	1046-782
1046-783	1046-784	1046-785	1046-786
1046-787	1046-788	1046-789	1046-790
1046-791	1046-792	1046-793	1046-794
1046-795	1046-796	1046-797	1046-798
1046-799	1046-800	1046-801	1046-802
1046-803	1046-804	1046-805	1046-806
1046-807	1046-808	1046-809	1046-810
1046-811	1046-812	1046-813	1046-814
1046-815	1046-816	1046-817	1046-818
1046-819	1046-820	1046-821	1046-822
1046-823	1046-824	1046-825	1046-826
1046-827	1046-828	1046-829	1046-830
1046-831	1046-832	1046-833	1046-834
1046-835	1046-836	1046-837	1046-838
1046-839	1046-840	1046-841	1046-842
1046-843	1046-844	1046-845	1046-846
1046-847	1046-848	1046-849	1046-850
1046-851	1046-852	1046-853	1046-854
1046-855	1046-856	1046-857	1046-858
1046-859	1046-860	1046-861	1046-862
1046-863	1046-864	1046-865	1046-866
1046-867	1046-868	1046-869	1046-870
1046-871	1046-872	1046-873	1046-874
1046-875	1046-876	1046-877	1046-878
1046-879	1046-880	1046-881	1046-882
1046-883	1046-884	1046-885	1046-886
1046-887	1046-888	1046	

777|22240
Upper Right Side
Rear Hitch Plate



777D10279
Centered On Rear Fender
Keep Off Curves



777|20310



777S32531

 


777I22452
Place On Dash Inlay Align
With Hour Meter



Place Labels Bottom Corner
Over The Rear Of The Plenum
Align Label With Plenum

777122241
Place Die Shape Around Gas
Gauge On Rear Hitch Plate




777D10633
On Running Board Middle Centered



(QTY2) 777D08732
ON BOTH SIDES

 777D09702 (Heat Transfer Label)
If Plants Need To Order A Lexan
Label Use Label 777D09704
Right Side



777D09701 (Heat Transfer Label)
If Plants Need To Order A Lexan
Label Use Label 777D09703
Left Side



777D10640
Front Of Deck Next To Wheel




777S30503




(QTY 2)777D10624
Place Around Spouts Unless
You Are Unable Then On
Shield In Position Near Spouts



 777122615




777S30018

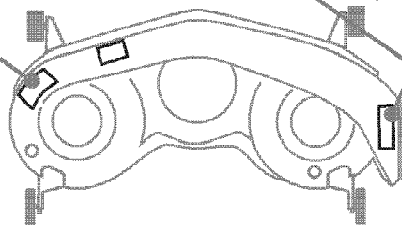

LT1046 Tractor (2007 & before)
Label Map

Page 78 of 109

Ref #	Part Number	Qty	S/P/F	Description
777X42179	777X42179	1		LABEL-CUB HOTLINE
777I22240	777I22240	1		LABEL-HYDRO ENGAGE
777I22679	777I22679	1		LABEL-CHECK ENG OIL
777X42598	777X42598	1		LABEL-PARTS LIST LT1046
777S30018	777S30018	1	/P	LABEL-DECK SAFETY
777I22615	777I22615	1		LABEL-BELT ROUTE
777D10640	777D10640	1		LABEL-46" CUT BLUE
777S30503	777S30503	1	/P	LABEL-DANGER CHUTE
777D10624	777D10624	1		LABEL-RIDER:DECK WASH CUB
777D10633	777D10633	1		LABEL-CYCLO CUT
777D08732	777D08732	1		LABEL-MODEL LT1046
777D09703	777D09703	1		LABEL-LFT SIDE HOOD
777D09704	777D09704	1		LABEL-RGT SIDE HOOD
777I22241	777I22241	1		LABEL-FUEL LEVEL
777I22452	777I22452	1		LABEL-DASH PANEL
777S32531	777S32531	1		LABEL-FRAME COVER
777I20310	777I20310	1		LABEL-SEAT ADJUSTE
777D10279	777D10279	1		LABEL-REAR FENDER

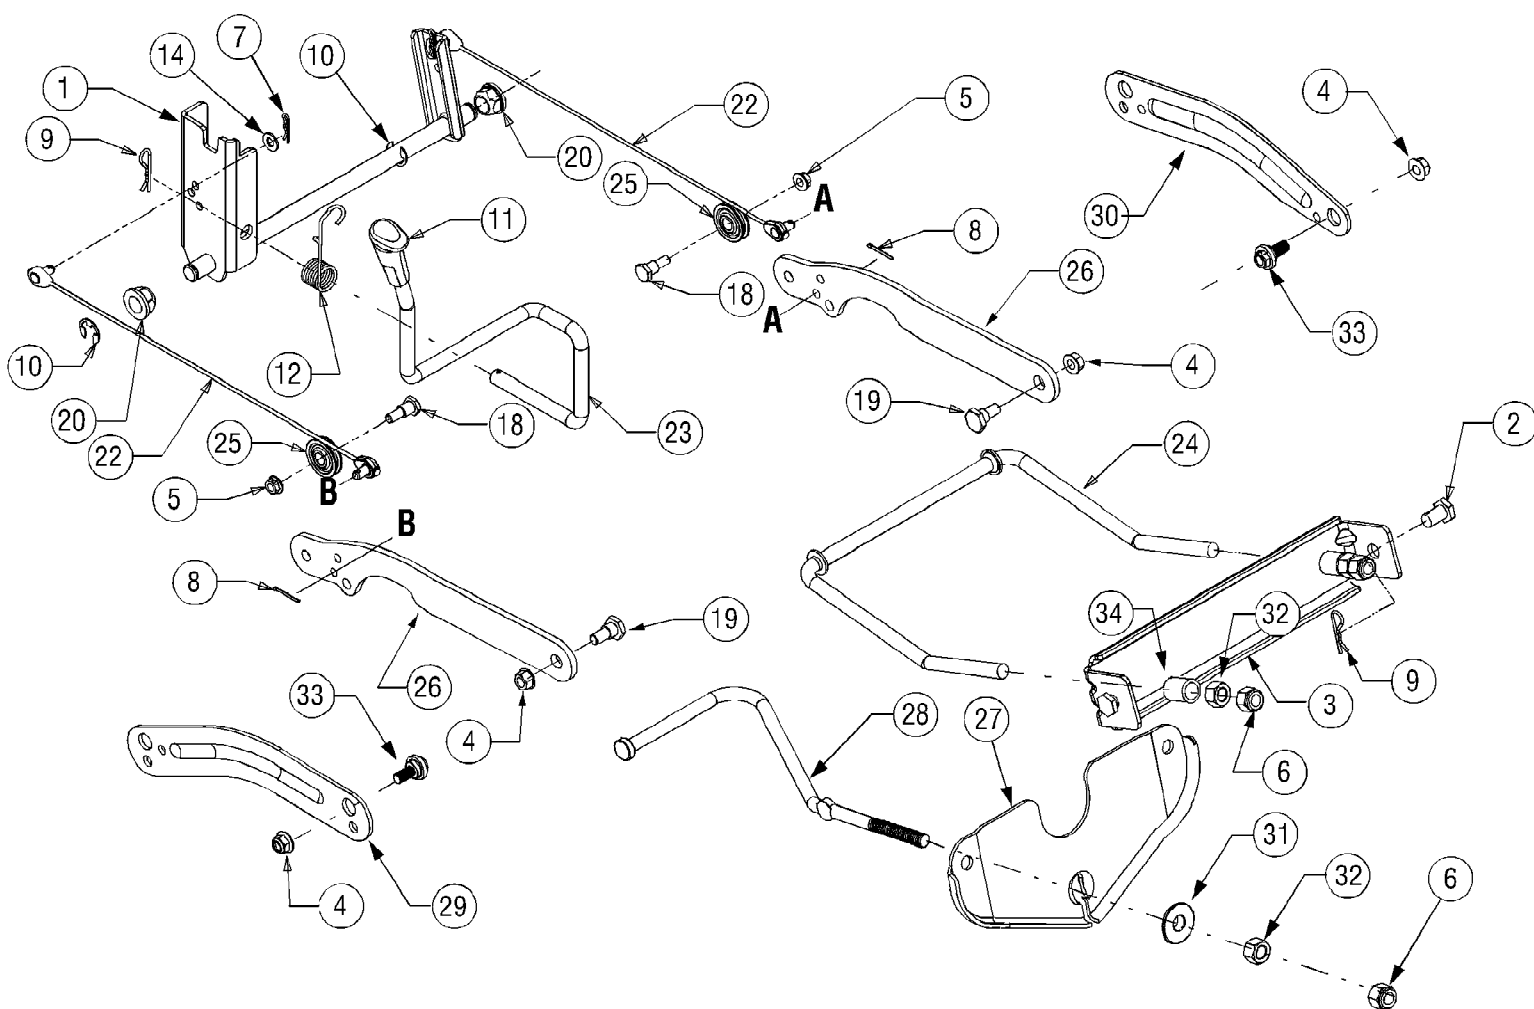


LT1046 Tractor (2007 & before)
Lift Assembly

Page 80 of 109

Ref #	Part Number	Qty	S/P/F	Description
1	753-06260	1	/P	Shaft Assembly, Lift Replaces 683-04079, Tractors manufactured before September 13, 2006
1	683-04223	1	S	Shaft Assembly, Lift Tractors manufactured after September 14, 2006
2	711-0332	2	S	Pin, Clevis, .50 Dia x .78 Lg
3	783-0720A	1	S	Bracket, Deck (46- and 50-inch Decks)
4	712-04065	2	/P	Nut, Nylon Lock, 3/8-16
5	712-04063	2	/P	Nut, Nylon Lock, 5/16-18, Gr5
6	712-3083	2	/P	Nut, Hex Lock, 1/2-13, Gr8, Nylon
7	714-0104	2	S	Pin, Cotter, .072 Dia. x 1.13 Lg
8	714-0111	2	S	Pin, Cotter, 3/32, 1.0
9	714-04023	2	S	Pin, Click, .092 x 1.64 Lg
10	716-0106A	2		E-ring, .625 Dia. Shaft
11	720-0311	1		Grip, Handle
12	732-0874	1	/P	Spring, Torsion
18	738-0138A	2	/P	Screw, Hex Cap, 5/16-18x.620 Gr2
19	738-0143	2	/P	Shoulder Screw, 3/8-16
20	741-0225	2	S	Bearing, Hex Flange
22	746-0968	2		Cable, Lift, 16.16 Lg
23	747-04155	1		Handle, Lift Tractors manufactured before September 13, 2006
23	747-04447	1		Handle, Lift Tractors manufactured after September 14, 2006
24	747-1130B	1	/P	Rod, Deck .5" Dia. (46-inch Decks)
24	747-1324	1		Rod, Deck .5" Dia. (50-inch Decks)
25	756-1154	2		Pulley, Roller
26	783-0678B	2	S	Arm, Lift (46- and 50-inch Decks)
27	783-04568	1		Hanger Bracket, Deck (42-inch Decks)
28	747-04269A	1	/P	Rod, Deck, .448" Dia. (42-inch Decks)
29	783-04494	1		RH Arm, Lift (42-inch Deck)
30	783-04711	1		LH Arm, Lift (42-inch Deck)
31	748-04069	1		Pivot Cup
32	712-0206	2	S	Nut, Hex, 1/2-13 some tractors used 4 nuts
33	738-04130	2		Shoulder Screw, 3/8-16
34	750-0151	2	S	Spacer, .55 x .75 x 1.125 (50-inch Decks)

LT1046 Tractor (2007 & before)
Mower Deck 46 inch 618-04123B spindle

Page 81 of 109

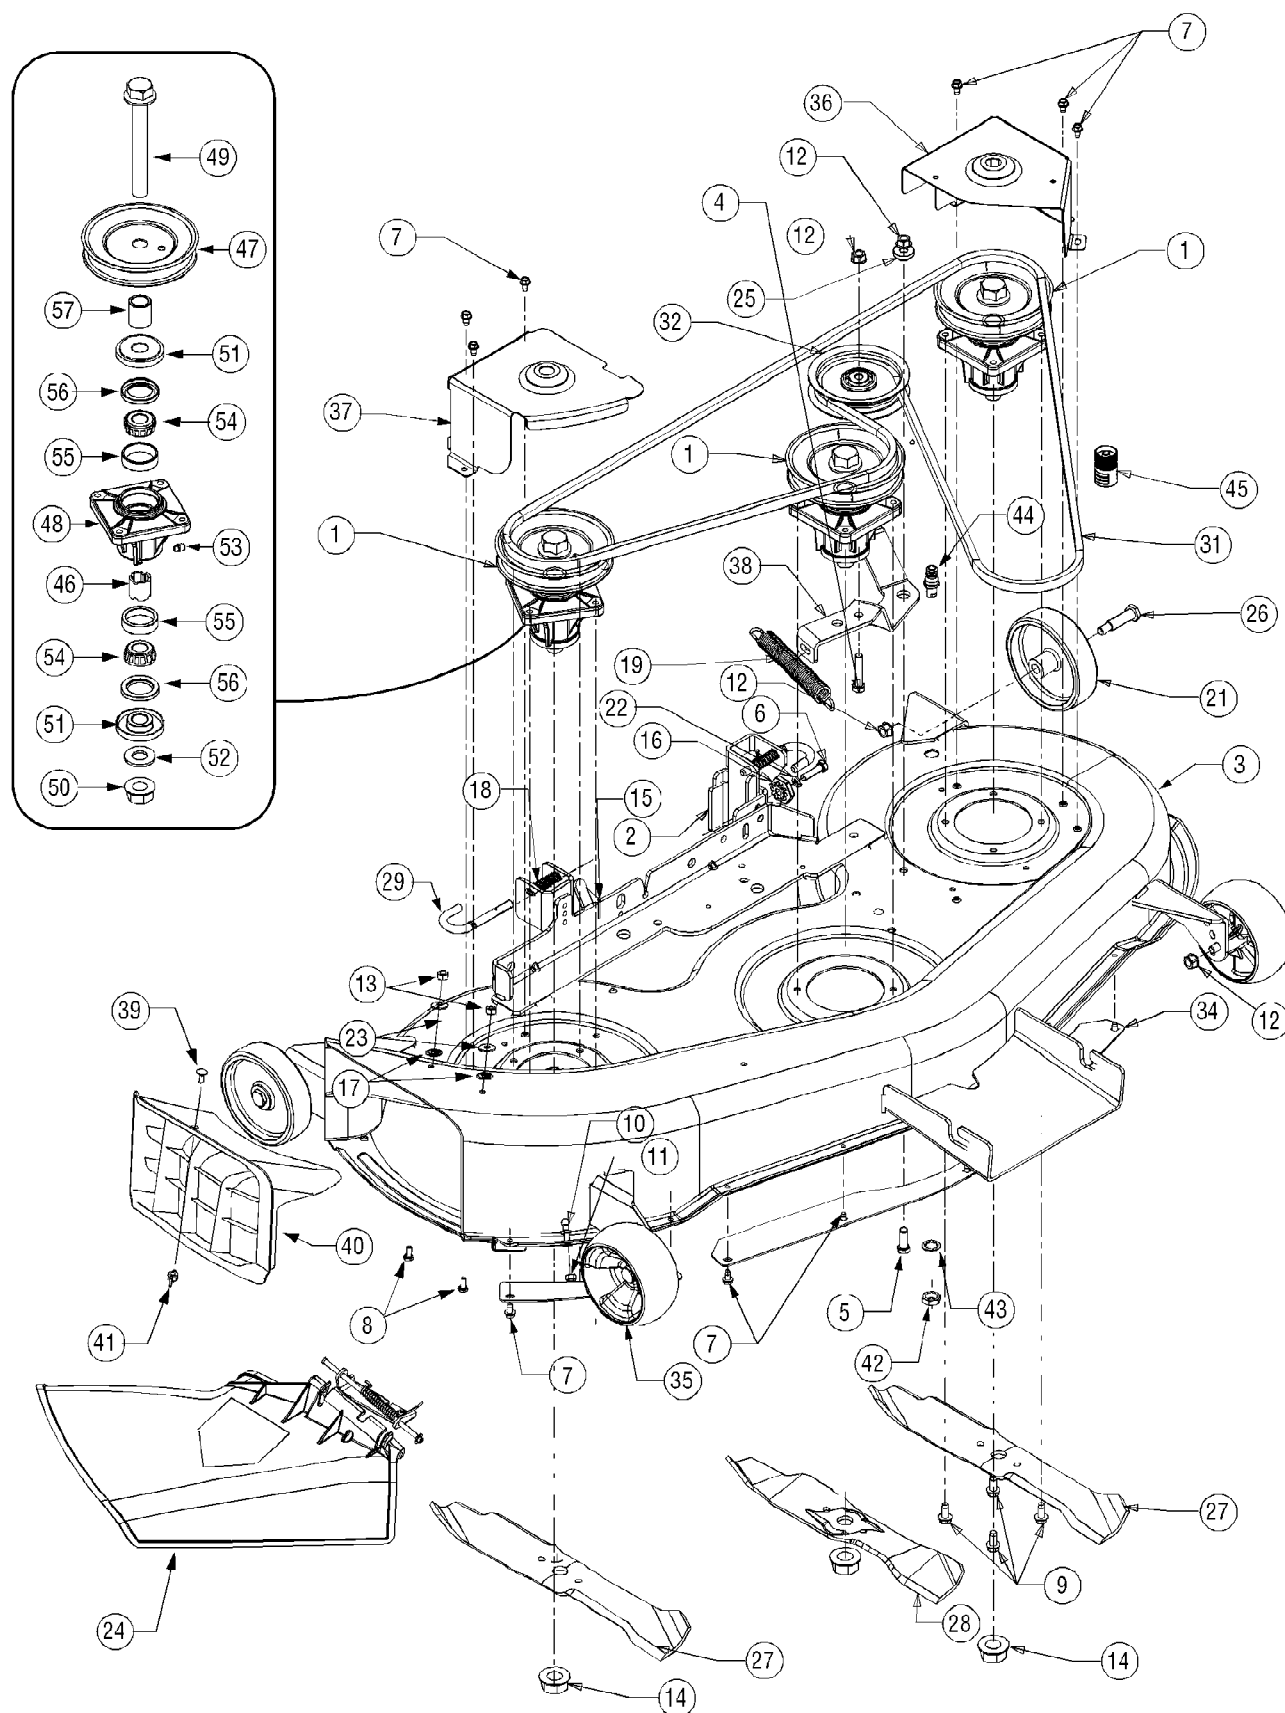

LT1046 Tractor (2007 & before)
Mower Deck 46 inch 618-04123B spindle

Page 82 of 109

Ref #	Part Number	Qty	S/P/F	Description
1	618-04123B	3	S	Spindle Assembly
2	683-0254B	1	/P	Bracket Assembly, Deck Hanger
3	683-04172	1	S	Deck Weldment, 46-inch
4	710-0347	1	/P	Screw, 3/8-16, 1.75
5	710-0514	1	/P	Hex Cap Screw, 3/8-16, 1.00, Gr5, Std
6	710-0528	1	/P	Screw, 5/16-18, 1.25, Gr5
7	710-0599	13	/P	Screw, Hx. Wash. Hd. Tapp, 1/4-20, 0.5
8	710-3015	2	/P	Screw, Hex Cap, 1/4-20, .750, Gr5
9	710-1260A	12	/P	Self-tapping Screw, 5/16-18 x .75
10	711-04069	1	S	Pin, Grasscatcher
11	712-04064	1	/P	Nut, Nylon Lock, 1/4-20
12	712-0431	6	S	Flange Lock Nut, 3/8-16
13	712-3006	2	/P	Nut, Hex, 1/4-20, Gr5
14	712-3078	3	/P	Nut, Hx. Flange, 3/4-16
15	714-0111	2	S	Cotter Pin, 1.0
16	717-04074	1	S	Deck Adjustment Gear
17	726-0233	2	/P	Push Nut
18	732-0306A	2	S	Compression Spring, 1.75
19	732-0594A	1	S	Extension Spring, 7.33
20	734-04039	2	S	Deck Wheel, 5.0
21	734-0973	2	/P	Deck Wheel,
22	736-0119	1	S	Washer, Lock, 5/16, Regular Duty
23	736-0270	2	/P	Washer, Belleville, .265 x .75 x .062
24	731-1032B	1	S	Chute Assembly, Side Discharge
25	738-0372B	1	/P	Spacer, Shoulder, 1.00 x .38 x .38
26	738-0373	4	S	Shoulder Screw
27	742-04015	2	S	Blade, 16.28
28	742-04016	1	S	Blade, 14.88
29	747-1116	2	/P	Rod, Handle, Deck Release .375 Dia
31	754-04033	1	S	Belt, V-Type
32	756-04129	1	S	Idler Pulley, 4.25
34	783-0141	1		Deck Skirt, Center
35	783-0142	1	S	Deck Skirt, RH
36	783-0747B	1	/P	Belt Cover, LH
37	783-0805C	1	/P	Belt Cover, RH
38	783-1421A	1	S	Bracket, Idler
39	710-0134	1	/P	Carriage Screw, 1/4-20, .62
40	731-05264	1		Mulch Plug
41	712-3087	1	/P	Nut, Wing, 1/4-20
42	712-0641	2	S	Nut, Hex, M16-1.5
43	736-0760	2	S	Washer, Lock
44	737-04003C	2	S	Port, Water
45	721-04041	1	S	Coupler, Hose
46	750-3190A	3	/P	Spacer, Bearing, .780 x 10 x 1.0425
47	756-04085A	3		Pulley, 6.3 Dia.
48		1		Housing, Spindle (order assembly)
49	710-04226	3	/P	Bolt, Spindle, 3/4-16, 5.85
50	712-3078	3	/P	Nut, Flange Lock, 3/4-16
51	748-3065	6	S	Spacer, Spindle
52	736-0315	3	/P	Washer, Flat, .760 x 1.5 x .120
53	737-3000	3	S	Lube Fitting, 3/16
54	741-04129	6	S	Cone Bearing, Tapered Roller, .750
55	741-04130	6	S	Cone Cup, Tapered Roller, .750

LT1046 Tractor (2007 & before)
Mower Deck 46 inch 618-04123B spindle


Page 83 of 109

Ref #	Part Number	Qty	S/P/F	Description
56	721-3018A	6	S	Seal, Oil
57	750-1000	3		Spacer, 1.322
58	750-3190A	2	/P	Spacer, Bearing, .780 x 10 x 1.0425
59	756-04085A	3		Pulley, 6.3 Dia.

LT1046 Tractor (2007 & before)

Page 84 of 109

Mower Deck 46 inch 618-0660 spindle SN 1A257H & before

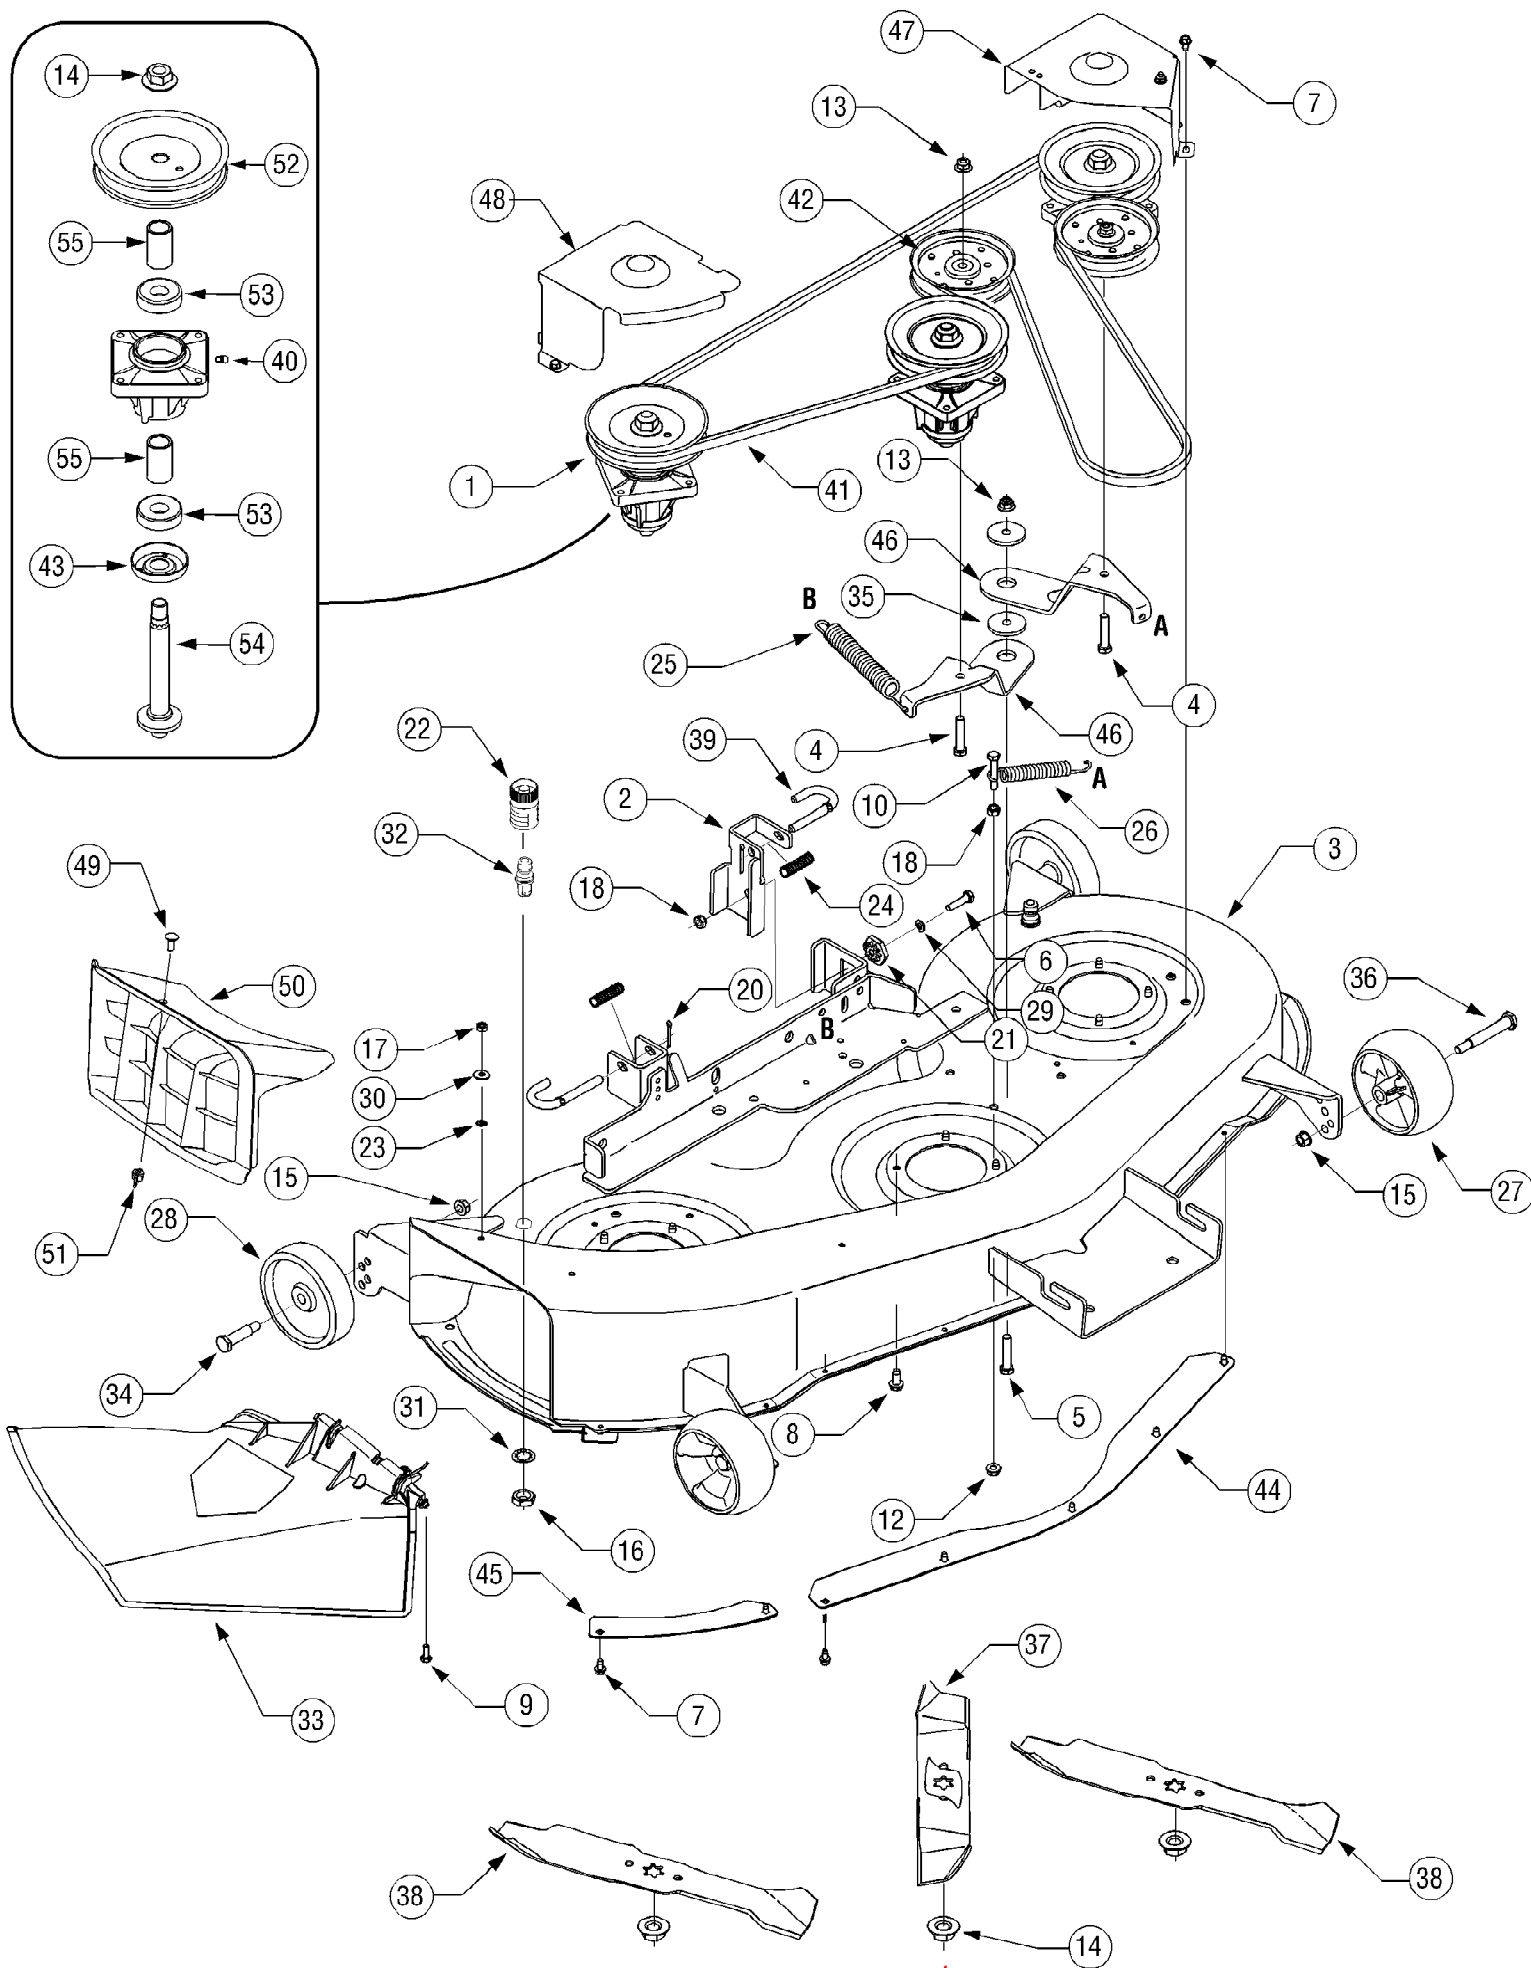

LT1046 Tractor (2007 & before)

Page 85 of 109

Mower Deck 46 inch 618-0660 spindle SN 1A257H & before

Ref #	Part Number	Qty	S/P/F	Description
1	618-0660	3	S	Spindle Assembly, Pulley 5.75 Dia. w/Fitting
2	683-0254B	1	/P	Deck Hanger Bracket Assembly, LH
3	683-04172	1	S	Deck Weldment
4	710-0347	2	/P	Screw, 3/8-16, 1.75, Gr5
5	710-0520	1	/P	Screw, 3/8-16, 1.50, Gr5
6	710-0528	1	/P	Screw, 5/16-18, 1.25, Gr5
7	710-0599	13	/P	Screw, 1/4-20, 0.500
8	710-1260A	12	/P	Screw, 5/16-18, 0.750
9	710-3015	2	/P	Screw, 1/4-20, .75, Gr5
10	710-3180	1	/P	Screw, 5/16-18, 1.75, Gr5
11	712-0206	2	S	Nut, Hex, 1/2-13, Gr5
12	712-04063	1	/P	Nut, Flange Lock, 5/16-18, GrF, Nylon
13	712-04065	3	/P	Nut, Flange Lock, 3/8-16, GrF, Nylon
14	712-0417A	3	/P	Nut, Flange, 5/8-18
15	712-0431	4	S	Nut, Flange Lock, 3/8-16, GrF, Top Lk
16	712-0641	2	S	Nut, Hex, M16-1.5
17	712-3006	2	/P	Nut, Hex, 1/4-20, Gr5
18	712-3010	1	S	Nut, Hex, 5/16-18, Gr5
19	712-3083	2	/P	Nut, Hex Lock, 1/2-13, Gr8, Nylon
20	714-0111	2	S	Pin, Cotter, 3/32, 1.0
21	717-04074	1	S	Adjustment Gear, Deck
22	721-04041	1	S	Coupler, Hose
23	726-0233	2	/P	Nut, Push, .25 Id x .50 OD
24	732-0306A	2	S	Spring, Compression, .531 OD x 1.75
25	732-0594A	1	S	Spring, Extension, .91 Dia. x 7.33
26	732-0826	1	S	Spring, Extension, .865 OD x 4.68
27	734-04155	2		Wheel, Deck, 5.0, Ball
28	734-0973	2	/P	Wheel, Deck 5.0 x 1.38
29	736-0119	1	S	Washer, Lock, 5/16, Regular Duty
30	736-0270	2	/P	Washer, Bell, .265 x .75 x .062
31	736-0760	2	S	Washer, Lock, 17 x 23.8 x 1.95
32	737-04003C	2	S	Port, Water
33	731-1032B	1	S	Chute Assembly, Side Discharge
34	738-0373	2	S	Screw, Shoulder, .498 x 1.53, 3/8-16
35	738-04162A	2	/P	Spacer, Shoulder, .8840 x .190
36	738-3056	2	S	Screw, Shoulder, 1/2 Dia x 2.50
37	742-04124	1	S	Blade, 14.88", Star 3-in-1
38	742-04125	2	S	Blade, 16.28", Star 3-in-1
39	747-1116	2	/P	Handle Rod, Deck Release .375 Dia
40	737-3000	3	S	Lube Fitting, 3/16
41	754-04118	1	S	Belt, V-Type
42	756-04129	2	S	Pulley, Idler, 4.25"Dia.
43	17983	3		Bearing Shield
44	783-0141	1		Deck Skirt, Center
45	783-0142	1	S	Deck Skirt, RH
46	783-05118-0637	2	S	Bracket, Idler Replaces 783-05002
47	783-0747B	1	/P	Belt Cover, LH
48	783-0805C	1	/P	Belt Cover, RH
49	710-0134	1	/P	Carriage Screw, 1/4-20, .62
50	731-05264	1		Mulch Plug
51	712-3087	1	/P	Nut, Wing, 1/4-20
52	756-1188	3		Pulley, 5.75 Dia.
53	741-0919	6	S	Ball Bearing, 787 x 1.85 x .551

LT1046 Tractor (2007 & before)

Page 86 of 109


Mower Deck 46 inch 618-0660 spindle SN 1A257H & before

Ref #	Part Number	Qty	S/P/F	Description
54	753-06348	1	/P	Shaft, Spindle, 6.11 Lg Replaces 738-1186 6.05 Lg
55	750-0952	6		Spacer, 1.8

LT1046 Tractor (2007 & before)

Page 87 of 109

Mower Deck 46 inch 618-0660 spindle SN 1A267H & after

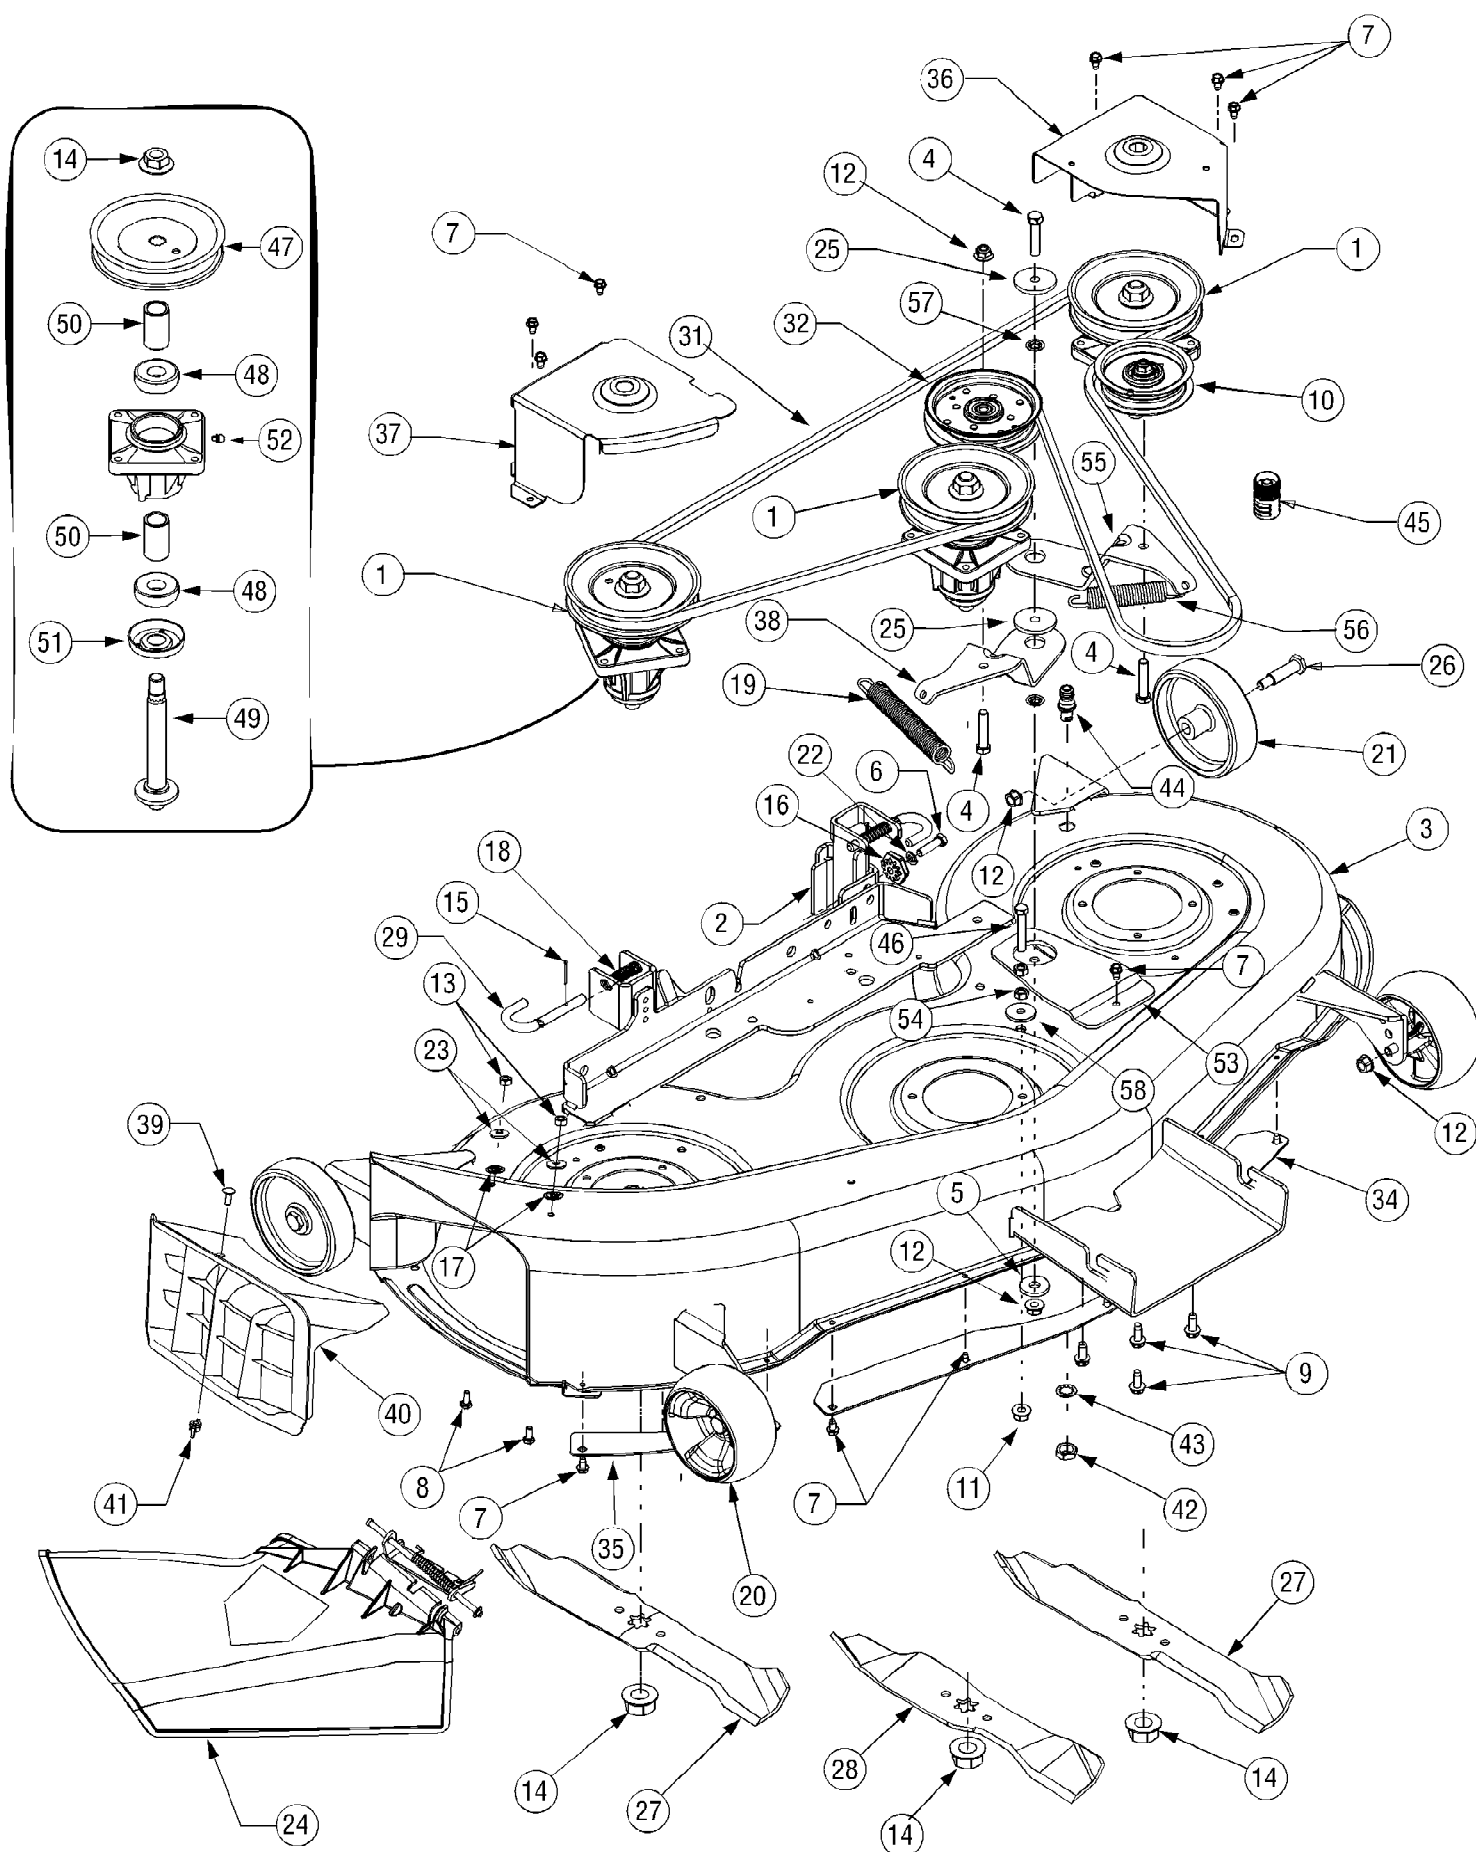

LT1046 Tractor (2007 & before)

Page 88 of 109

Mower Deck 46 inch 618-0660 spindle SN 1A267H & after

Ref #	Part Number	Qty	S/P/F	Description
1	618-0660	3	S	Spindle Assembly
2	683-0254B	1	/P	Bracket Assembly, Deck Hanger
3	683-04172	1	S	Deck Weldment, 46-inch
4	710-0347	1	/P	Screw, 3/8-16, 1.75
5	736-0322	1	/P	Washer, Flat, .450 x 1.25 x .164
6	710-0528	1	/P	Screw, 5/16-18, 1.25, Gr5
7	710-0599	13	/P	Screw, Hex. Wash, 1/4-20, 0.5
8	710-3015	2	/P	Screw, Hex Cap, 1/4-20, .750, Gr5
9	710-1260A	12	/P	Self-tapping Screw, 5/16-18 x .75
10	756-0627D	1	/P	Pulley, Idler, 3.5"
11	712-04063	1	/P	Nut, Nylon Lock, 5/16-18
12	712-04065	7	/P	Nut, Nylon Lock, 3/8-16
13	712-3006	2	/P	Nut, Hex, 1/4-20, Gr5
14	712-0417A	6	/P	Nut, Hex. Flange, 5/8-18
15	714-0111	2	S	Cotter Pin, 1.0
16	717-04074	1	S	Deck Adjustment Gear
17	726-0233	2	/P	Push Nut
18	732-0306A	2	S	Compression Spring, 1.75
19	732-0594A	1	S	Extension Spring, 7.33
20	734-04155	2		Deck Wheel, 5.0
21	734-0973	2	/P	Deck Wheel,
22	736-0119	1	S	Washer, Lock, 5/16, Regular Duty
23	736-0270	2	/P	Washer, Belle, .265 x .75 x .062
24	731-1032B	1	S	Chute Assembly, Side Discharge
25	738-04162A	2	/P	Spacer, Shoulder, .884 x .190
26	738-0373	4	S	Shoulder Screw
27	742-04125	2	S	Blade, 16.28 Star Blades 3-in 1
28	742-04124	1	S	Blade, 14.88 Star Blades 3-in 1
29	747-1116	2	/P	Rod, Handle, Deck Release
31	754-04153	1		Belt, V-Type
32	756-04129	1	S	Idler Pulley, 4.25"
34	783-0141	1		Deck Skirt, Center
35	783-0142	1	S	Deck Skirt, RH
36	783-0747B	1	/P	Belt Cover, LH
37	783-0805C	1	/P	Belt Cover, RH
38	783-05118	1	/P	Bracket, Idler
39	710-0134	1	/P	Carriage Screw, 1/4-20, .62
40	731-05264	1		Mulch Plug
41	712-3087	1	/P	Nut, Wing, 1/4-20
42	712-0641	2	S	Nut, Hex, M16-1.5
43	736-0225	2	/P	Washer, Lock, Internal Tooth
44	737-04003C	2	S	Port, Water
45	721-04041	1	S	Coupler, Hose
46	710-3103	1	/P	Hex Screw, 5/16-18 x 2.0
47	756-1188	3		Pulley, 5.75 Dia.
48	741-0919	6	S	Ball Bearing, .787 x 1.85 x .551
49	753-06348	1	/P	Shaft, Spindle, 6.11 Lg Replaces 738-1186 6.05 Lg
50	750-0952	6		Spacer, 1.8
51	17983	3		Bearing Shield
52	737-3000	3	S	Lube Fitting, 3/16
53	783-05463	1		Support Bracket, Idler

LT1046 Tractor (2007 & before)


Page 89 of 109

Mower Deck 46 inch 618-0660 spindle SN 1A267H & after

Ref #	Part Number	Qty	S/P/F	Description
54	712-3010	2	S	Hex Nut, 5/16-18
55	783-05118	1	/P	Bracket, Idler
56	732-0826A	1	/P	Extension Spring, .865 x 4.68
57	712-0229	1		Push Nut, 3/8
58	736-0343	1	/P	Washer, Flat, .330 x 1.25 x .120

LT1046 Tractor (2007 & before)
Pedal Assembly 1I136H & before

Page 90 of 109

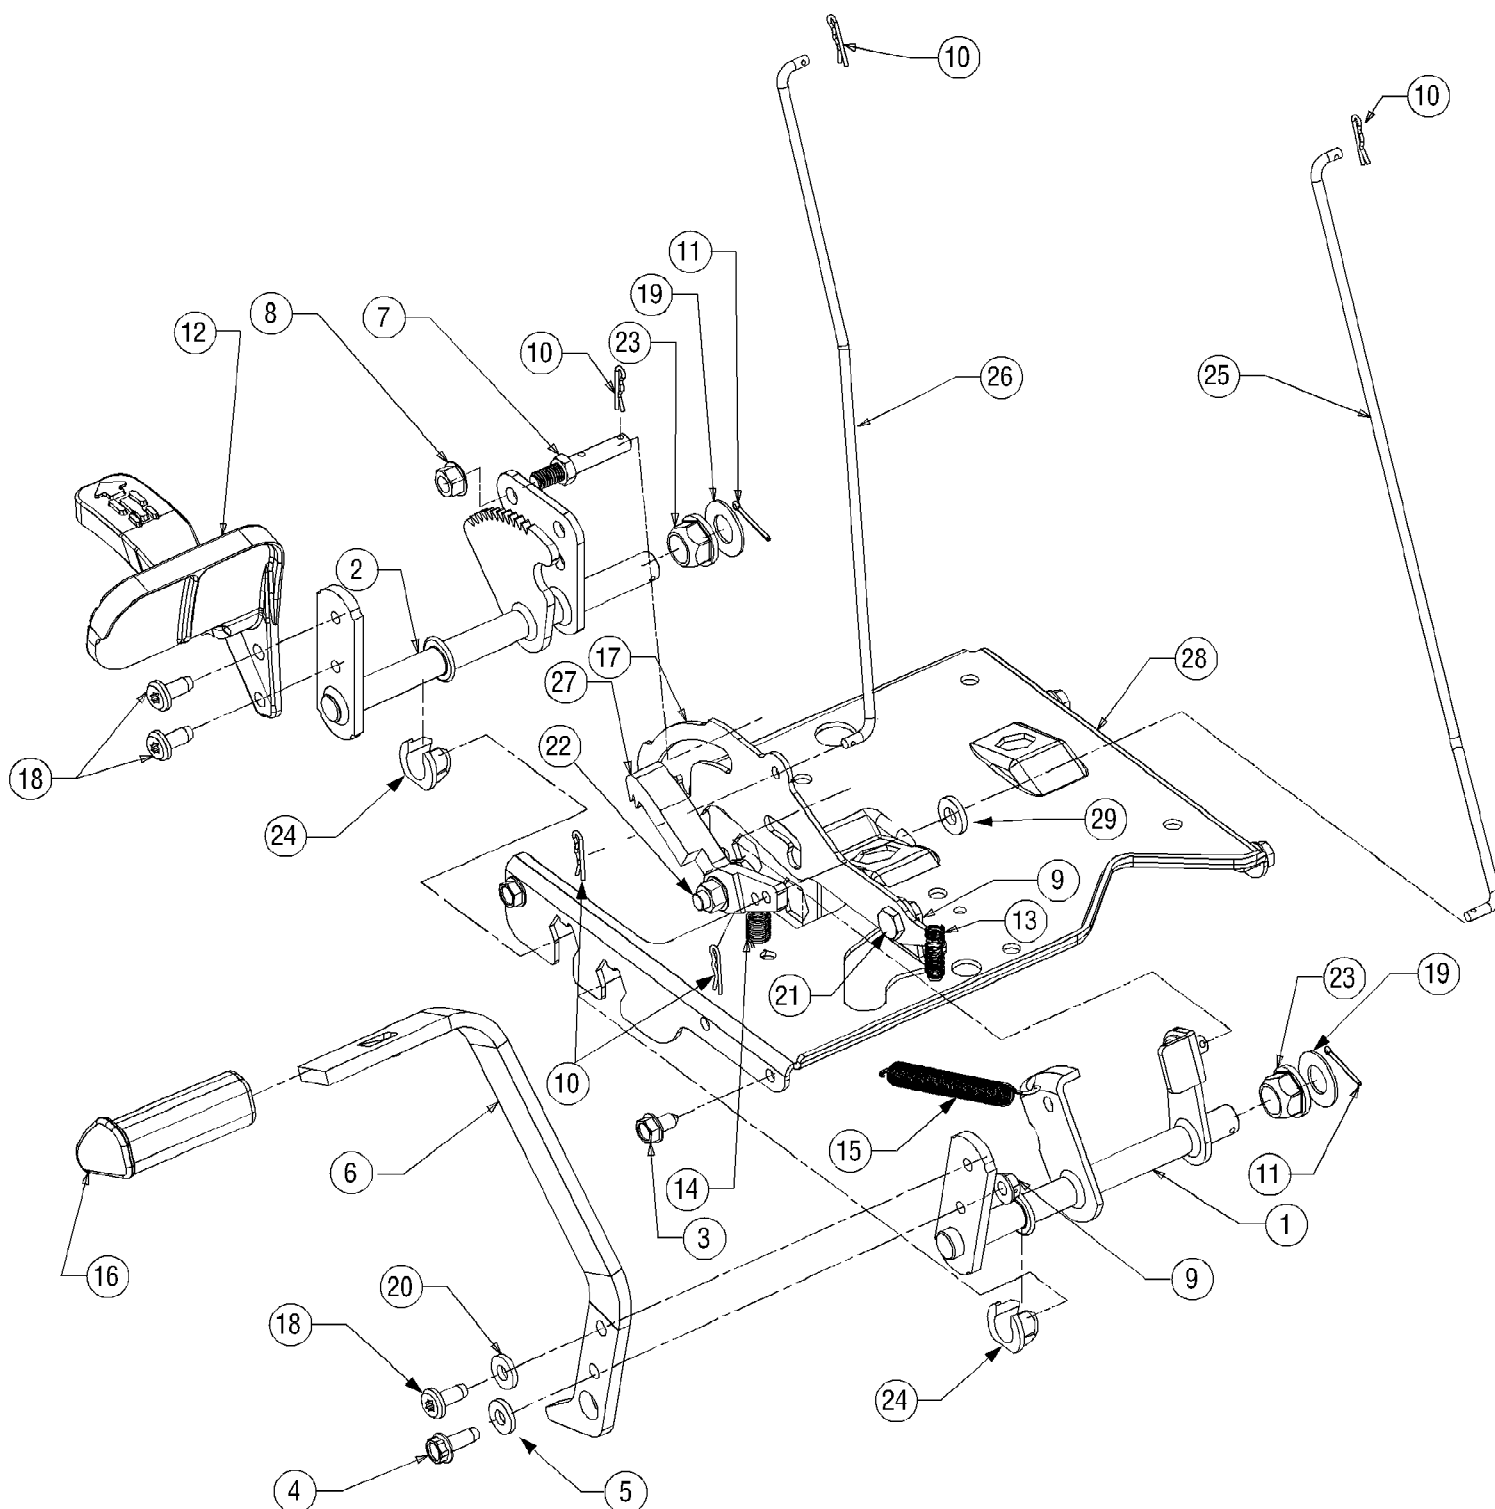


LT1046 Tractor (2007 & before)
Pedal Assembly 11136H & before

Page 91 of 109

Ref #	Part Number	Qty	S/P/F	Description
1	647-0031B	1	S	Control Assembly, Brake
2	647-0049A	1	S	Control Assembly, Hydro
3	710-0726	4	/P	Screw, Self-tapping, 5/16-12, 0.75
4	710-0650	1	/P	Screw, Self-tapping, 5/16-18, 0.875
5	736-0119	1	S	Washer, Lock, 5/16
6	783-0773A	1		Pedal, Brake
7	711-04159B	1		Pin, 3/8-16, 3/8 x 2.68
8	712-04065	2	/P	Nut, Nylon Lock, 3/8-16
9	712-3004A	1	/P	Nut, Flange Lock, 5/16-18, Gr5
10	714-0104	5	S	Pin, Cotter, .072 Dia. x 1.13 Lg
11	714-0111	2	S	Pin, Cotter, 3/32, 1.0
12	719-0584A	1	S	Pedal, Hydro Control
13	732-0335	1		Spring, Compression, .405 x 1.17
14	732-0955	1		Spring, Extension, .50 OD x 1.41 Lg
15	732-0963	1		Spring, Extension, .50 Dia x 6.37 Lg
16	735-3049	1	S	Pad, Brake, Control
17	783-0663E	1	/P	Bracket, Lockout, Hydro
18	710-1611B	3	/P	Screw, Torx Hd. Tapp. 5/16-18 x .75
19	736-0187	2	/P	Washer, Flat .64 ID x 1.24 x .06
20	736-3008	1	S	Washer, Flat, .344 x .750 x .120
21	738-0155	1	S	Shoulder, Screw .437
22	738-0380	1	S	Shoulder, Screw 3/8-16
23	741-0225	2	S	Bearing, Hex Flange
24	741-3065B	2	/P	Bearing, Hex Flange, .628 ID, Split
25	747-04096	1		Rod, Control, Cruise
26	747-04093	1		Rod, Control, Brake Lock
27	748-04039B	1	/P	Latch, Cruise
28	783-04612	1	S	Bracket, Support, Stearing
29	736-0300	1	S	Lock Washer, .406 x .875 x .059

LT1046 Tractor (2007 & before)
Pedal Assembly 1I146H & after


Page 92 of 109

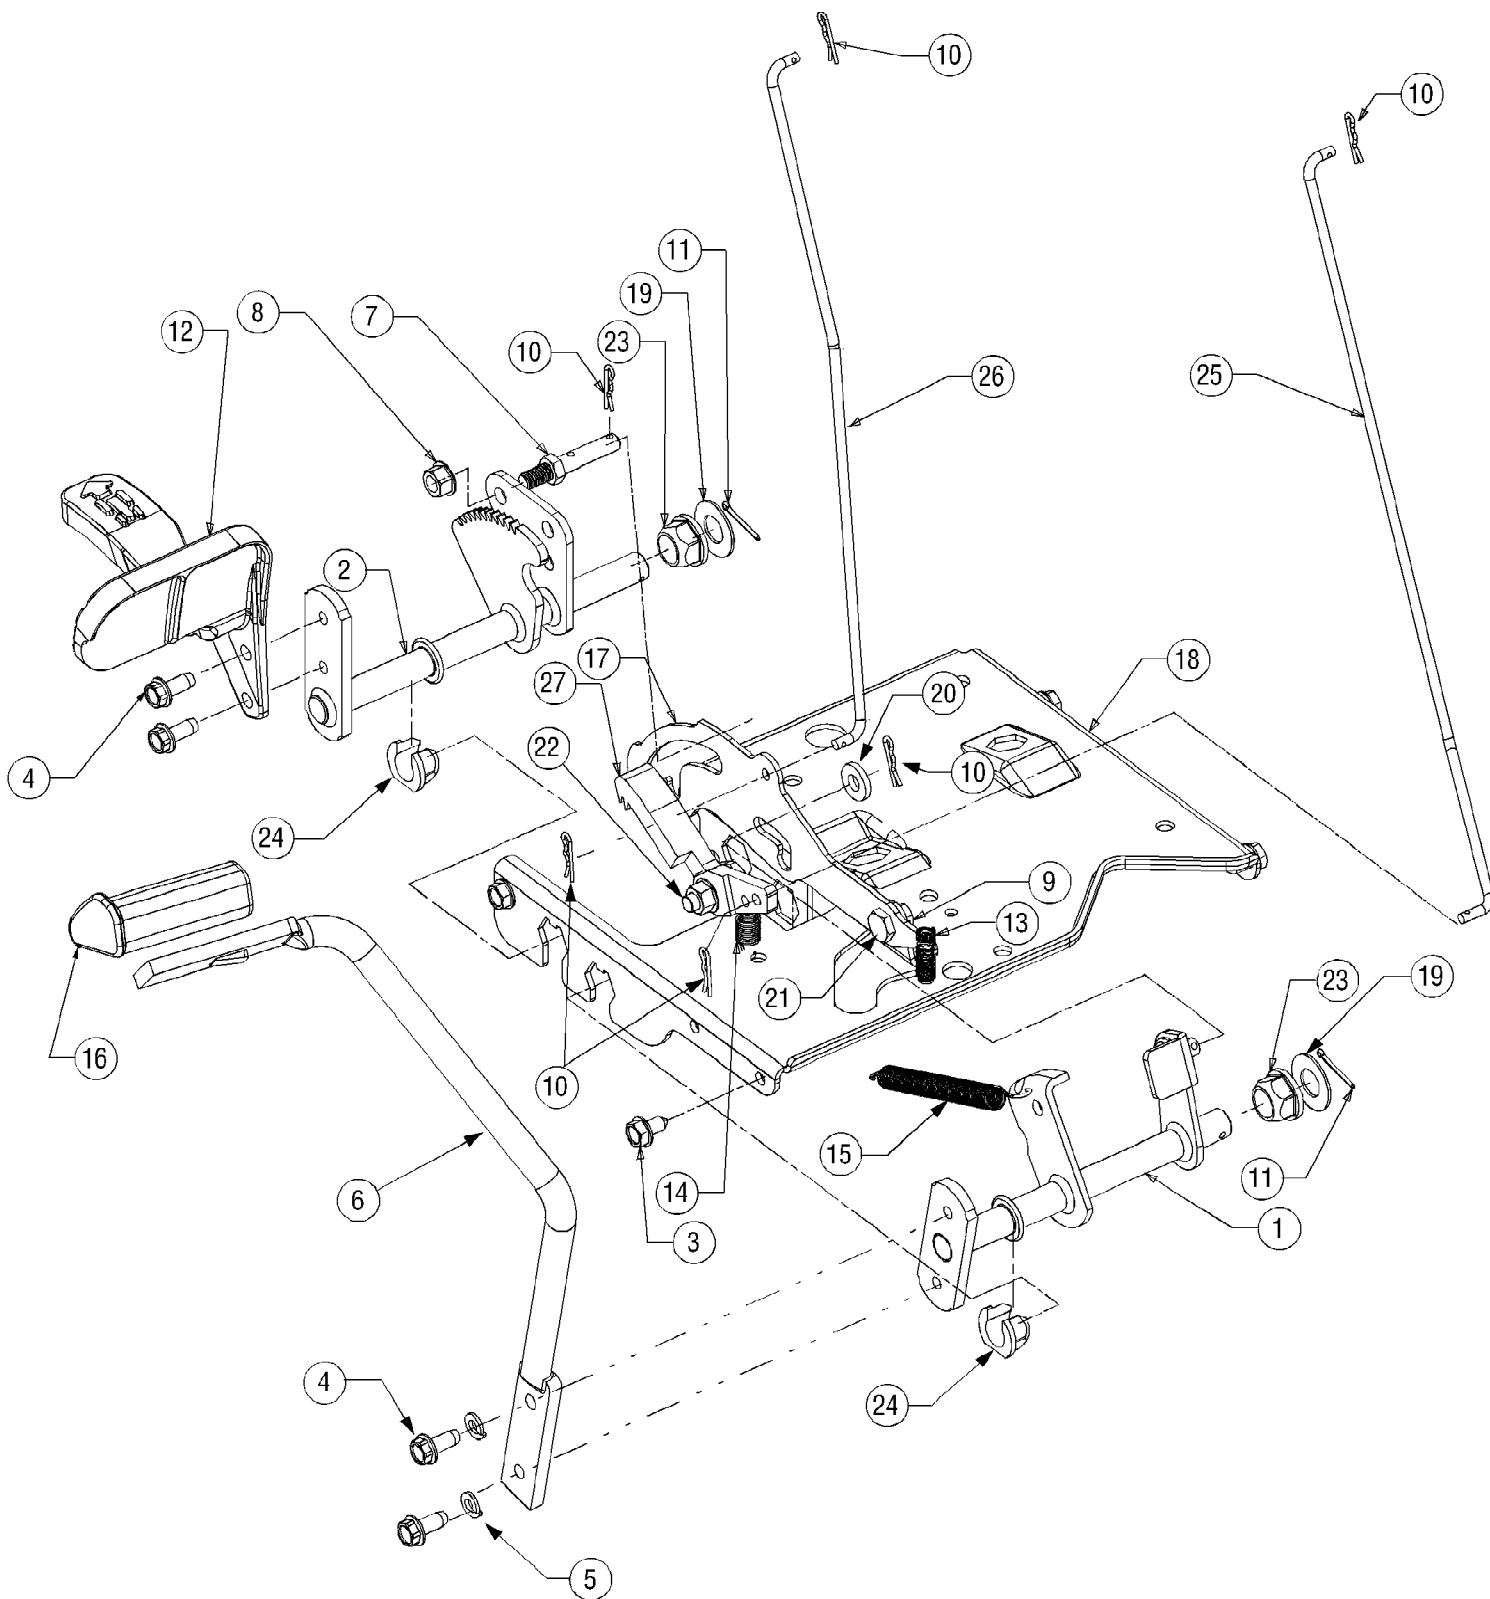

LT1046 Tractor (2007 & before)
Pedal Assembly 1I146H & after

Page 93 of 109

Ref #	Part Number	Qty	S/P/F	Description
1	647-04100	1	S	Control Assembly, Brake
2	647-0049A	1	S	Control Assembly, Hydro
3	710-0726	4	/P	Screw, Self-tapping, 5/16-12, 0.75
4	710-1260A	1	/P	Screw, Self-tapping, 5/16-18, 0.75
5	736-0119	1	S	Washer, Lock, 5/16
6	783-04641	1	S	Pedal, Brake
7	711-04159B	1		Pin, 3/8-16, 3/8 x 2.68
8	712-04065	2	/P	Nut, Nylon Lock, 3/8-16
9	712-3004A	1	/P	Nut, Flange Lock, 5/16-18, Gr5
10	714-0104	5	S	Pin, Cotter, .072 Dia. x 1.13 Lg
11	714-0111	2	S	Pin, Cotter, 3/32, 1.0
12	719-0584B	1	S	Pedal, Hydro Control
13	732-0335	1		Spring, Compression, .405 x 1.17
14	732-0955	1		Spring, Extension, .50 OD x 1.41 Lg
15	732-0963	1		Spring, Extension, .50 Dia x 6.37 Lg
16	735-3049A	1	/P	Pad, Brake, Control
17	783-0663E	1	/P	Bracket, Lockout, Hydro
18	783-04612	1	S	Bracket, Support, Stearing
19	736-0187	2	/P	Washer, Flat .64 x 1.24 x .06
20	736-0262	1	/P	Washer, Flat, .385 x .870 x .092
21	738-0155	1	S	Shoulder, Screw .437
22	738-0380	1	S	Shoulder, Screw 3/8-16
23	741-0225	2	S	Bearing, Hex Flange
24	741-3065B	2	/P	Bearing, Hex Flange, .628 ID, Split
25	747-04096	1		Rod, Control, Cruise
26	747-04093A	1		Rod, Control, Brake Lock
27	748-04039C	1		Latch, Cruise

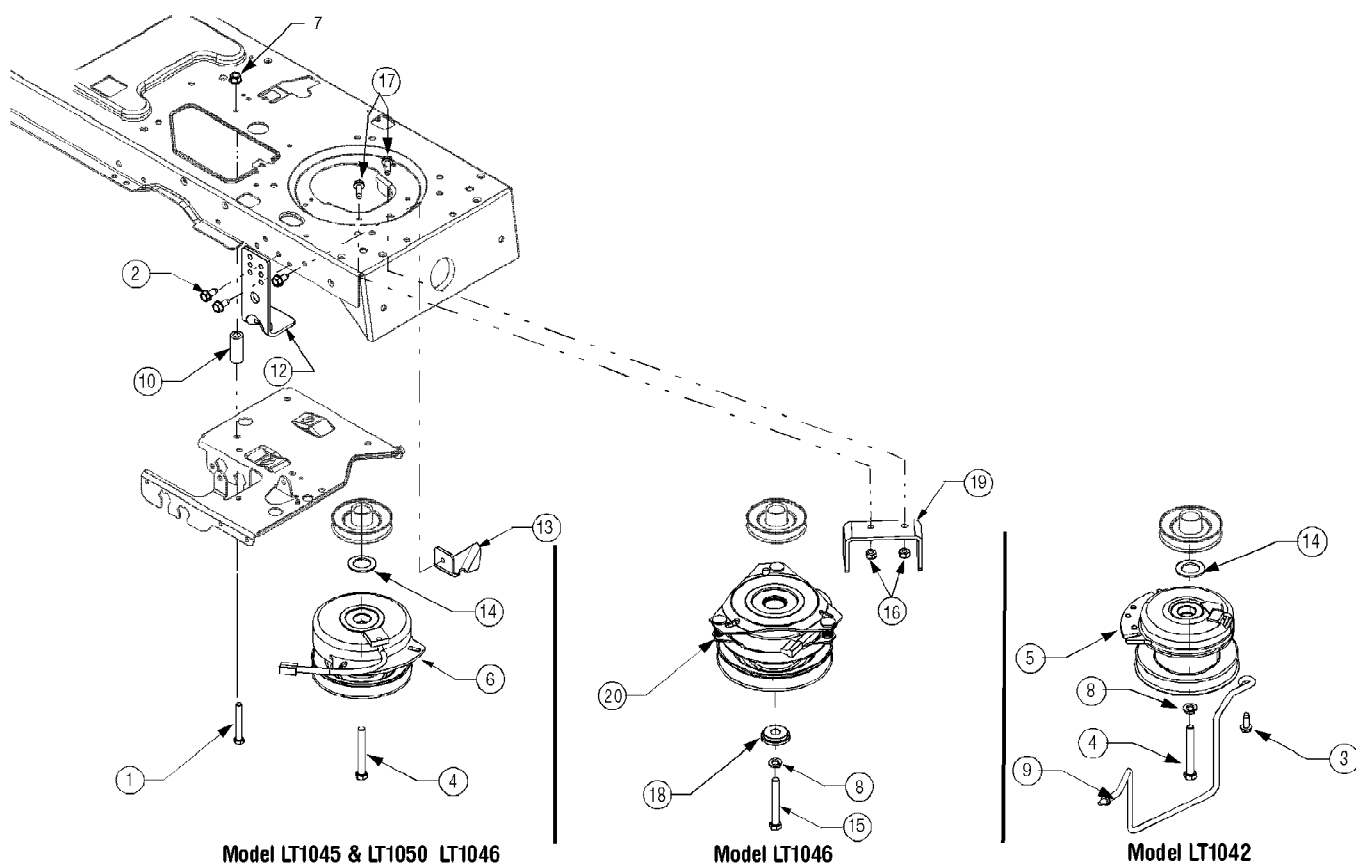

LT1046 Tractor (2007 & before)
Power Take-Off (PTO) System

Page 95 of 109

Ref #	Part Number	Qty	S/P/F	Description
1	710-0859	1	/P	Screw, 3/8-16 x 2.5 GR5
2	710-0726	3	/P	Screw, 5/16-12, .75
3	710-0650	1	/P	Screw, 5/16-18, .875
4	710-3157	1	S	Screw, Hex Cap, 7/16-20 x 3.25 GR5
4	710-04379A	1		Screw, Hex Cap, Lock, 7/16-20 x 3.5 GR5 use with Ref 8
5	717-04163	1	S	Clutch, PTO (Model LT1042)
6	717-04174A	1	S	Clutch, PTO (Model LT1045, LT1046 & LT1050)
7	712-04065	1	/P	Nut, Hx. Nylon Lock, 3/8-16
8	736-0171	1	S	Washer, Lock, 7/16, Regular Duty
9	747-04307	1	S	Rod, Belt Keeper (Model LT1042, LT1045, LT1046 If equipped)
10	748-0415B	1	/P	Spacer, 3/8 x 1.54
11	736-0277	1		Washer, Flat, 1.031 x 1.62 x .095
12	783-04467	1		Deck Stop
13	783-04419B	1	S	Bracket, Clutch
14	736-0277	1		Washer, Flat, 1.031 x 1.62 x .095
15	710-0561	1	/P	Screw, Hex Cap, 7/16-20 x 2.50 GR5
16	712-0429	2	S	Nut, Lock, Hex, 5/16-18
17	710-3025	2	/P	Screw, Hex Cap, 5/16-18 x.625 GR5
18	738-0785	1	S	Shoulder Spacer, 1.38 x.445 x.36
19	783-1003	1	S	Bracket, Clutch (Model LT1046)
20	717-04080	1	S	Clutch, PTO (Model LT1046)



LT1046 Tractor (2007 & before)
Quick Reference

Page 97 of 109

Ref #	Part Number	Qty	S/P/F	Description
	759-3336	1	/P	Spark Plug
	KH-47-883-03-S1	1	/P	Air Filter & Pre-Cleaner Command Engine
	KH-32-883-03-S1	1	/P	Air Filter & Pre-Cleaner Courage Engine
	KH-12-050-01-S	1	/P	Oil Filter Command Engine
	KH-52-050-02-S	1	/P	Oil Filter Courage Engine
	KH-24-050-10-S	1	S	Fuel Filter Command Engine
	KH-25-050-22-S1	1	/P	Fuel Filter Courage Engine
	KH-24-584-45-S	1	/P	Ignition Module
	KH-41-403-09	1	S	Voltage Regulator
	KH-24-393-16	1	/P	Fuel Pump
	KH-24-757-46-S	1	/P	Carb Kit
	KH-24-757-45-S	1	/P	Carburetor Solenoid
	754-0461	1	S	Drive Belt (Trans)
	754-04153	1		P.T.O. & Deck Belt Refer to Mower Deck 46 inch 618-0660 spindle SN 1A267H & after
	754-04118	1	S	P.T.O. & Deck Belt Refer to Mower Deck 46 inch 618-0660 spindle SN 1A257H & before
	754-04033	1	S	P.T.O. & Deck Belt Deck w/ Spindle 618-04123B
	742-04125	1	S	Blades (Outside) Deck w/ Spindle 618-0660
	742-04015	1	S	Blades (Outside) Deck w/ Spindle 618-04123B
	742-04124	1	S	Blade (Center) Deck w/ Spindle 618-0660
	742-04016	1	S	Blade (Center) Deck w/ Spindle 618-04123B
	712-0417A	1	/P	Blade Nut Deck w/ Spindle 618-0660
	712-3078	1	/P	Blade Nut Deck w/ Spindle 618-04123B
	618-0660	1	S	Spindle Assy. w/Pulley Deck w/ 3 Pulleys & 2 Idler Pulleys
	618-04123B	1	S	Spindle Assy. w/Pulley Deck w/ 3 Pulleys & 1 Idler Pulley
	734-04155	1		Deck Wheels (Front)
	734-04039	1	S	Deck Wheels (Front) Deck w/ Spindle 618-04123B
	734-0973	1	/P	Deck Wheels (Back)
	725-04227B	1	S	Ignition Switch Module
	725-04258	1	/P	P.T.O. Switch
	725-1648	1	S	P.T.O. Relay
	721-0342	1	S	Gasket use with 725-1648
	717-04174A	1	S	P.T.O. Clutch
	KH-25-357-05-S	1	S	Engine Oil
	737-3121	1	/P	Transmission Fluid
	490-900-0041	1		Leveling Gauge Accessory


LT1046 Tractor (2007 & before)
Steering 1I135H & before

Page 99 of 109

Ref #	Part Number	Qty	S/P/F	Description
1	710-0514	1	/P	Hex Cap Screw, 3/8-16, 1.00, Gr5, Std
2	711-1408	1		Link, Drag, RH
3	711-1409A	1	/P	Link, Drag, LH
4	710-1260	1	S	Self-tapping Screw, 5/16-18 x .75
5	712-0240	2	S	Nut, Jam, 7/16-20, Gr2
6	712-0214	2	S	Nut, Hex, 3/8-24, Gr5
7	712-04065	4	/P	Nut, Nylon Lock, 3/8-16
8	712-0459	1	/P	Nut, Flange Lock, 7/16-20
9	712-3004A	2	/P	Nut, Flange Lock, 5/16-18
10	717-1550E	1	S	Gear, Steering, 11/90 Ratio
11	717-1554	1		Gear, Pinion, Steering
12	723-0448A	2	S	Ball Joint, 7/16-20
13	710-04095	1		Hex Cap Screw, 3/8-16, 1.00
14	736-3004	1	S	Washer, Flat, .406 x .875 x .105
15	736-3084	1	/P	Washer, Flat, .510 x 1.120 x .060
16	737-3007	1		Grease, Alvania Ep 2
17	738-04154	2		Spacer, Shoulder, 1.00 x .38 x .38
18	759-04186	1	/P	Shaft, Steering, .625 OD x 25.00 Lg
19	741-0475	2	S	Bushing, Plastic, .380 ID
20	741-0656A	1	S	Bearing, Hex Flange, 5/8
21	683-04101	1	S	Axle Assembly, LH .750 Dia
22	683-04102	1	S	Axle Assembly, RH .750 Dia
23	712-0417A	2	/P	Nut, Hex, Flange, 5/8-18
24	714-04039	2		Pin, Cot, 5/32, 1.25
25	719-04105	1	/P	Axle, Pivot, Cast .750 Dia
25	737-3000	1	S	Fitting, Grease, 3/16 Drive Type Not Shown
26	736-0866	2		Washer, Flat, .755 x 1.92 x .060
27	738-1011A	2	/P	Screw, Shoulder, .500 x 2.230, 3/8-16
28	631-04008	1	S	Wheel, Steering, Three Spoke
29	731-04532	1	S	Cover, Steering Wheel

LT1046 Tractor (2007 & before)
Steering 1I145H & after

Page 100 of 109

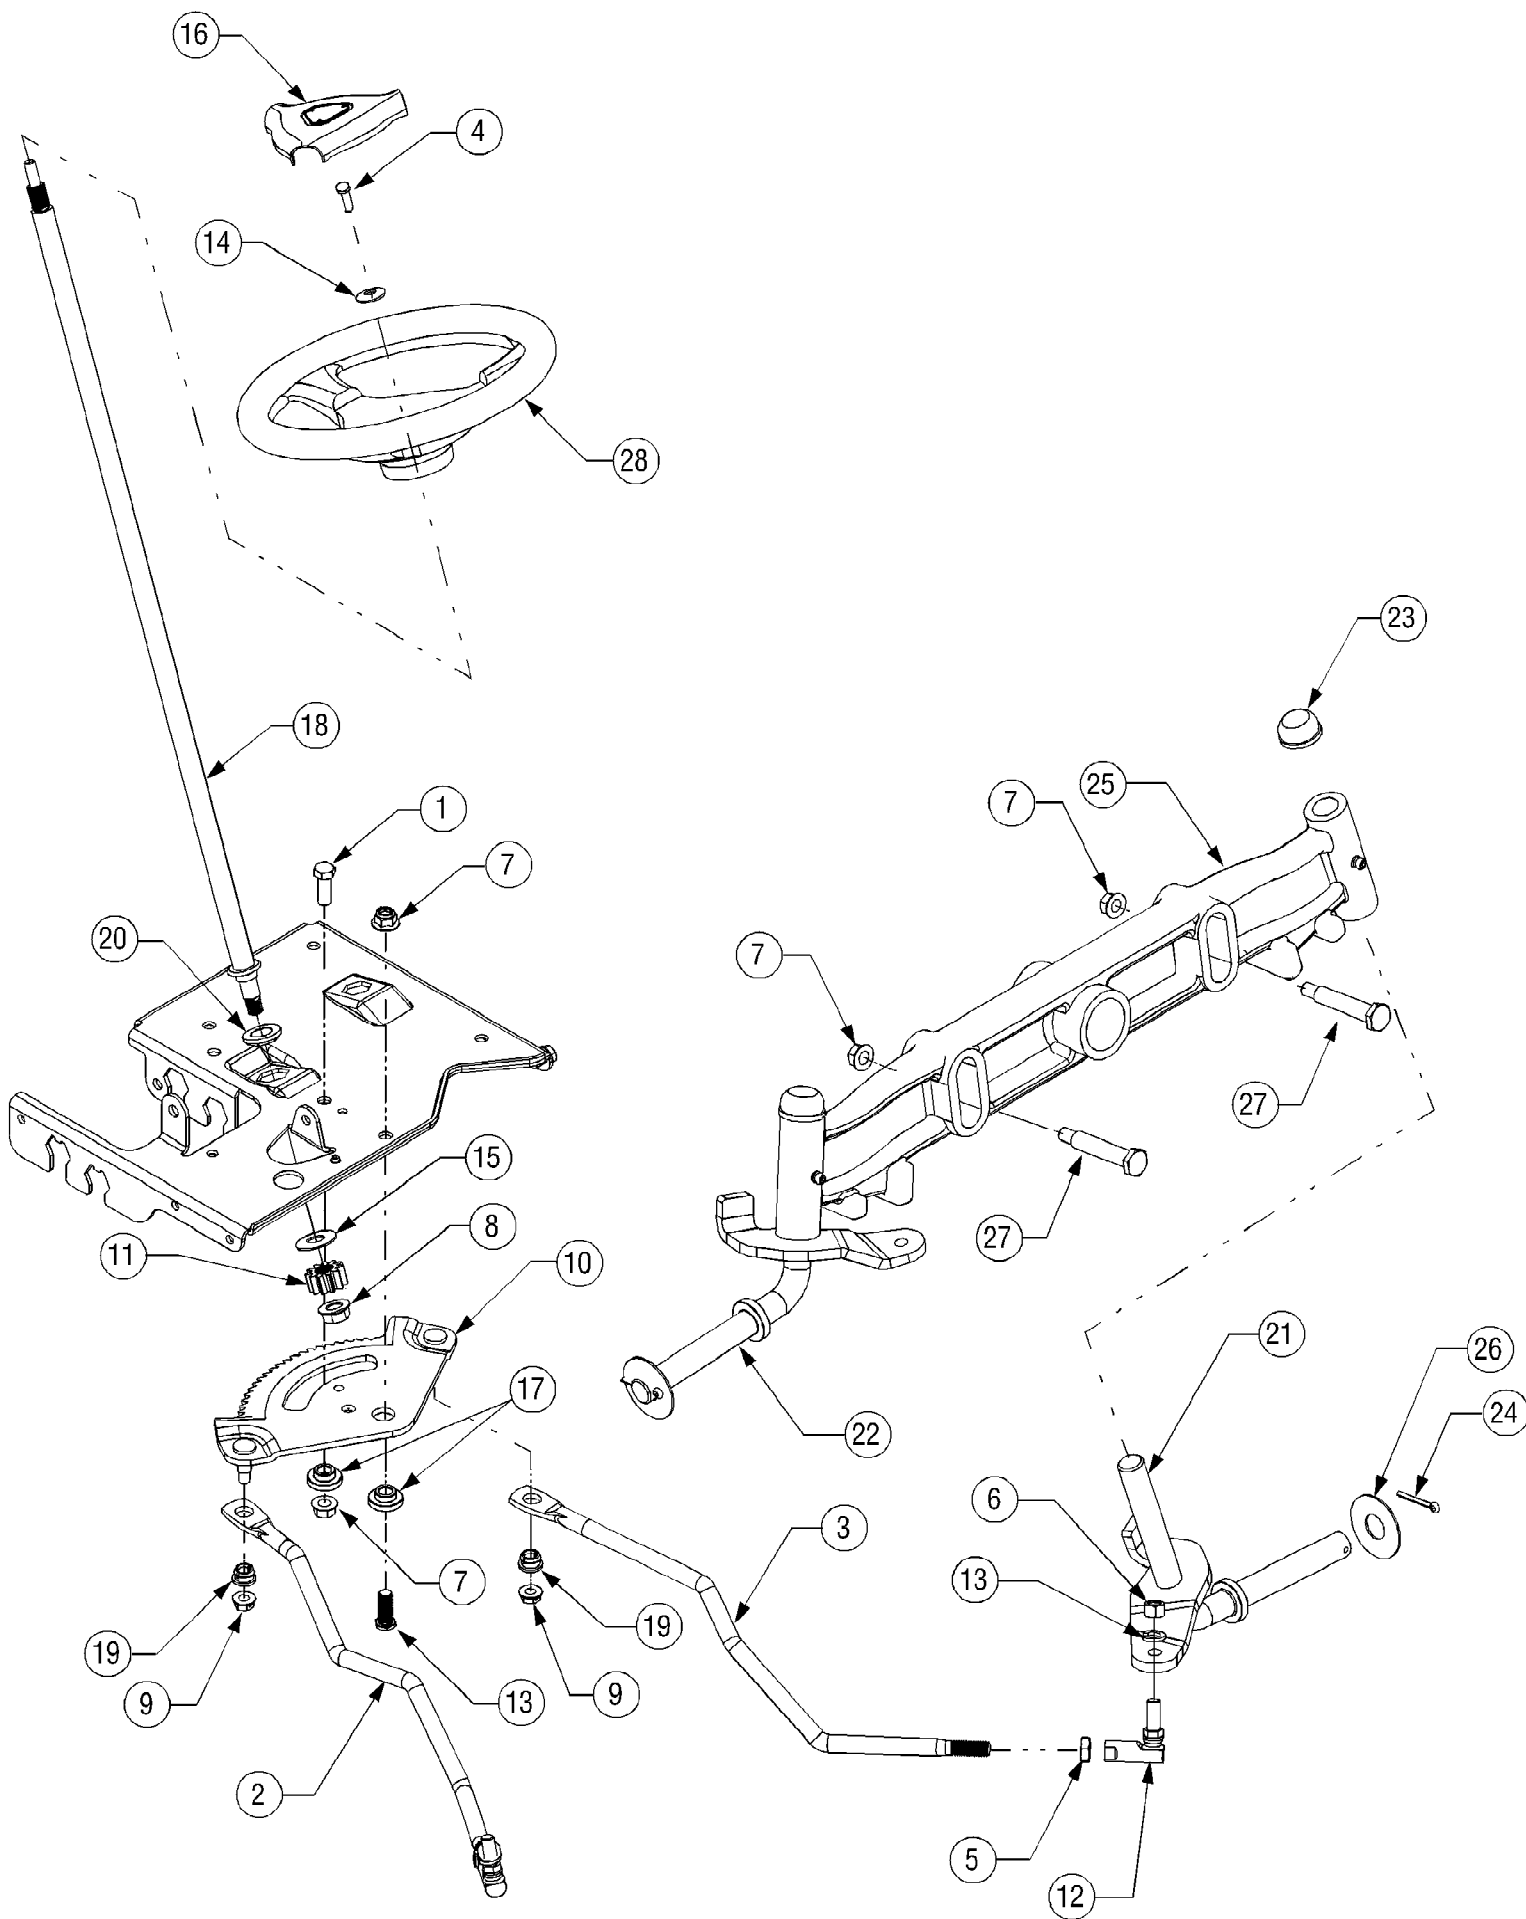


LT1046 Tractor (2007 & before)
Steering 11145H & after

Page 101 of 109

Ref #	Part Number	Qty	S/P/F	Description
1	710-0514	1	/P	Hex Cap Screw, 3/8-16, 1.00, Gr5, Std
2	711-1408	1		Link, Drag, RH
3	711-1409A	1	/P	Link, Drag, LH
4	710-1260	1	S	Self-tapping Screw, 5/16-18 x .75
5	712-0240	2	S	Nut, Jam, 7/16-20, Gr2
6	712-0214	2	S	Nut, Hex, 3/8-24, Gr5
7	712-04065	4	/P	Nut, Nylon Lock, 3/8-16
8	712-0459	1	/P	Nut, Flange Lock, 7/16-20
9	712-3004A	2	/P	Nut, Flange Lock, 5/16-18
10	717-1550E	1	S	Gear, Steering, 11/90 Ratio
11	717-1554	1		Gear, Pinion, Steering
12	723-0448A	2	S	Ball Joint, 7/16-20
13	710-04095	1		Hex Cap Screw, 3/8-16, 1.00
14	736-3004	1	S	Washer, Flat, .406 x .875 x .105
15	736-3084	1	/P	Washer, Flat, .510 x 1.120 x .060
16	731-04532	1	S	Cover, Steering Wheel
17	738-04154	2		Spacer, Shoulder, 1.00 x .38 x .38
18	759-04186	1	/P	Shaft, Steering, .625 OD x 25.00 Lg
19	741-0475	2	S	Bushing, Plastic, .380 ID
20	741-0656A	1	S	Bearing, Hex Flange, 5/8
21	638-04003	1	S	Axle Ass'y, LH .750 Dia (LT1045, LT 1046 & LT 1050) use with ref 23
21	638-04006	1	S	Axle Ass'y, LH .750 Dia (LT1042) use with ref 23
22	638-04004	1	S	Axle Ass'y, RH .750 Dia (LT1045, LT 1046 & LT 1050) use with ref 23
22	638-04005	1	S	Axle Ass'y, RH .750 Dia (LT1042) use with ref 23
23	726-0341	2	/P	Push Cap, .75
24	714-04039	2		Pin, Cot, 5/32, 1.25
25	719-04105	1	/P	Axle, Pivot, Cast .750 Dia
25	737-3000	1	S	Fitting, Grease, 3/16 Drive Type Not Shown
26	736-0866	2		Washer, Flat, .755 x 1.92 x .060
27	738-1011A	2	/P	Screw, Shoulder, .500 x 2.230, 3/8-16
28	631-04008A	1	/P	Wheel, Steering, Three Spoke

LT1046 Tractor (2007 & before)
Transmission

Page 102 of 109

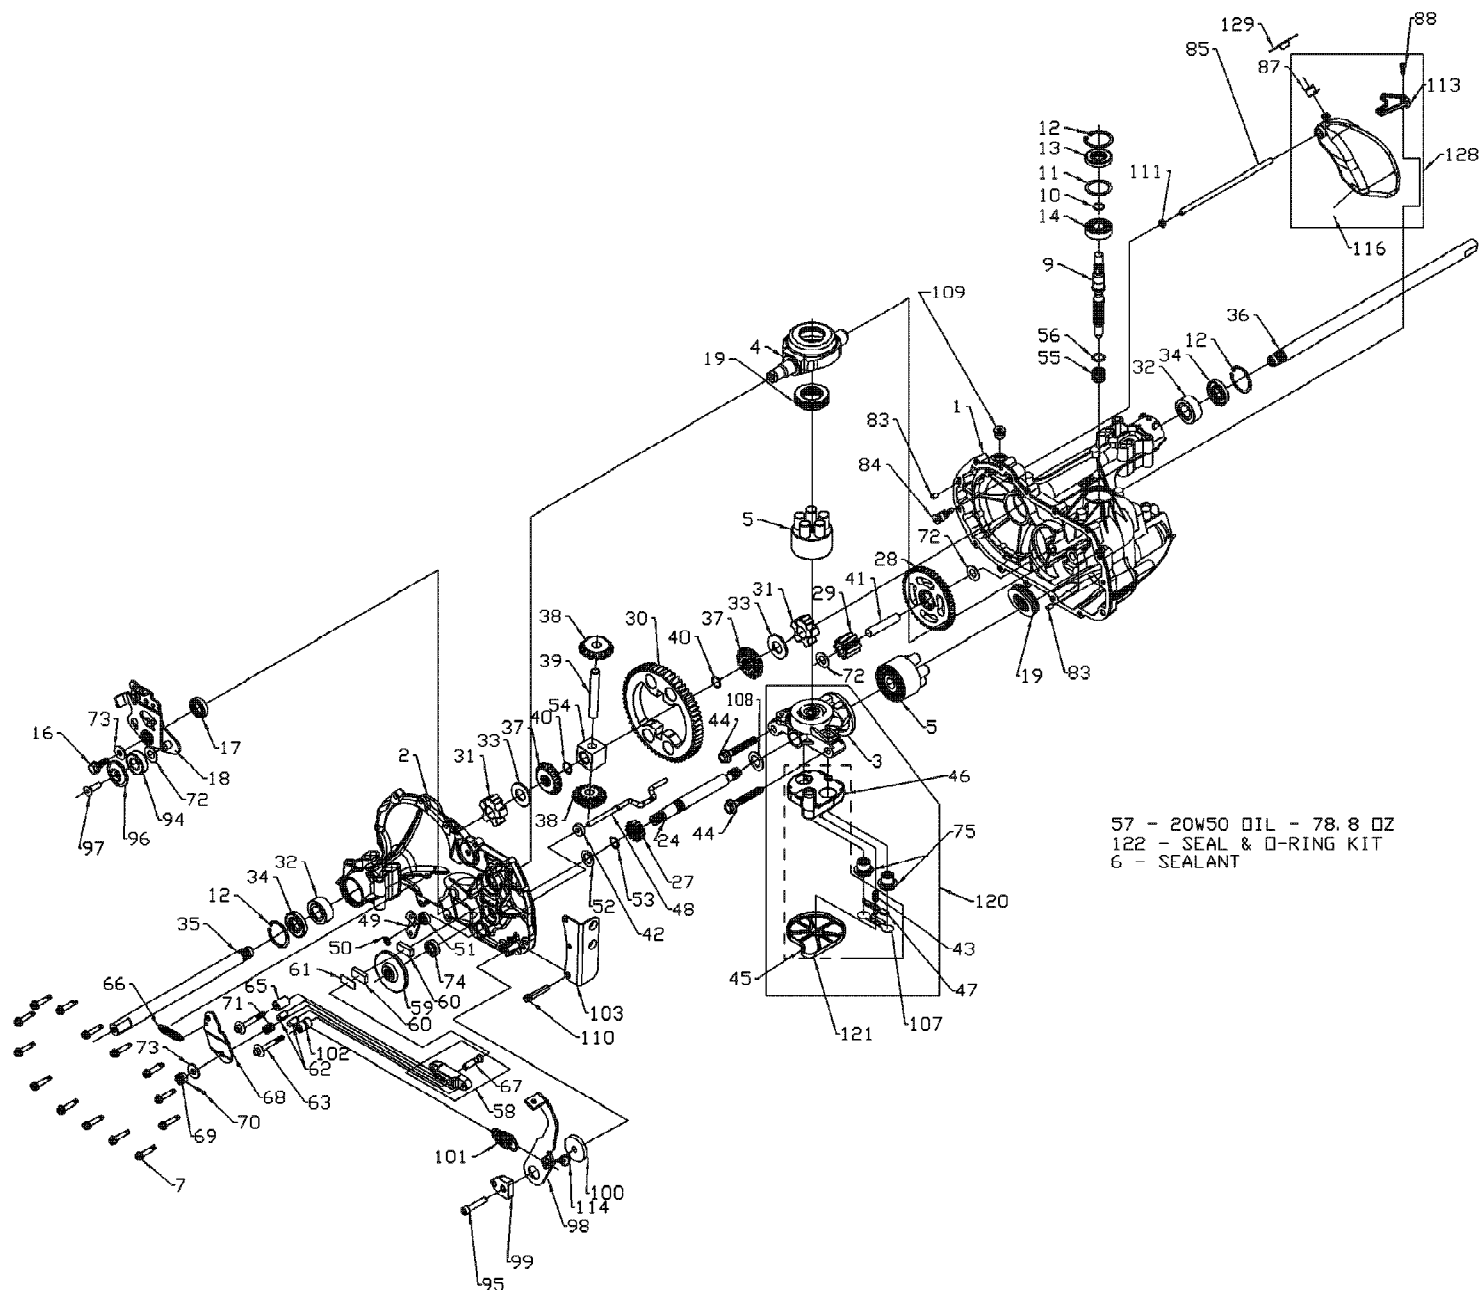

LT1046 Tractor (2007 & before)
Transmission

Page 103 of 109

Ref #	Part Number	Qty	S/P/F	Description
1	HG-70467	1		MAIN HOUSING, ASSEMBLY WITH BUSHING
2	HG-70483	1	/P	SIDE HOUSING, ASSEMBLY WITH BUSHINGS
3		1		CENTER SECTION, ASSEMBLY WITH BUSHING (ORDER CENTER SECTION)
4	HG-51048	1	/P	SWASHPLATE, TRUNNION MACHINED
5	HG-70331	2	/P	BLOCK - ASSEMBLY WITH PISTONS, COMPRESSIONS SPRINGS & THRUST WASHERS
6		1		SEALANT (PURCHASE LOCALLY)
7	HG-51190	14	/P	HEX FLANGE SCREW 1/4-20 X 1.25
9	HG-51062	1	/P	SHAFT, INPUT
10	HG-2000022	1	/P	RING - RETAINING
11	HG-50951	1	/P	SPACER
12	HG-50329	3	/P	RING - RETAINING
13	HG-51161	1	/P	SEAL, LIP .67 X 1.58 X .276
14	HG-50315	1		BALL BRG 17 MM ID X 40MM OD X 12MM
16	HG-51064	1		BOLT, HEX FLANGE HEAD 5/16-24 X .94 (PATCH)
17	HG-51140	1	/P	LIP SEAL 18 X 32 X 7
18	HG-51119	1	/P	ARM, CONTROL
19	HG-50551	2	S	BEARING, 30 X 52 X 13 THRUST
24	HG-50966	1		SHAFT, MOTOR
27	HG-51130	1		GEAR - PINNION, 13T
28	HG-51129	1		10T / 48T GEAR
29	HG-51043	1	/P	GEAR, 10T JACKSHAFT
30	HG-51044	1		60T BULL GEAR
31	HG-51088	2	/P	SLEEVE BEARING .75 X 1.750 X .625
32	HG-51089	2	/P	SLEEVE BEARING (OUTBOARD) .75 X 1.575 X .625
33	HG-44875	2	/P	WASHER, 3/4 ID X 1 1/2 OD X .13 THK
34	HG-51066	2	/P	LIP SEAL AXLE SEAL
35	HG-51079	1	/P	SHAFT, AXLE .75 X 11.39 (DD, R.H.)
36	HG-51078	1	/P	SHAFT, AXLE .75 X 17.99 (DD, L.H.)
37	HG-44096	2	S	MITER GEAR (SPLINED)
38	HG-44097	2		MITER GEAR 15T (0.5 ID)
39	HG-50146	1		SHAFT
40	HG-44871	2	/P	RING, SPIRAL RETAINING
41	HG-51083	1		PIN, JACKSHAFT
42	HG-51100	1		MAGNET, RING
43	HG-51136	1		SPRING, BYPASS
44	HG-50016	2		HYDRO MTG SCREW 3/8-24 X 2.5 LONG
45		1		BOTTOM, FILTER (ORDER FILTER ASSEMBLY)
46		1		BASE, FILTER W/POPPET (ORDER FILTER ASSEMBLY)
47	HG-51091	1		ACTUATOR, BYPASS
48	HG-51098	1		ROD, BYPASS ACTUATOR

LT1046 Tractor (2007 & before)
Transmission

Page 104 of 109

Ref #	Part Number	Qty	S/P/F	Description
49	HG-51135	1		ARM, BYPASS
50	HG-51116	1	/P	RETAINING RING 0, 250 EXTERNAL
51	HG-51081	1	/P	SEAL, LIP .741 X .250 X .250 TC
52	HG-44371	1	/P	FLAT WASHER, 5/8 ID X 1.0 OD X .05 THK
53	HG-44145	1		RETAINING RING
54	HG-51071	1		BEARING, CENTER BLOCK
55	HG-2003014	1	/P	SPRING - HELICAL COMPRESSION
56	HG-2003017	1	/P	WASHER
57		1		20W-50 OIL (PURCHASE LOCALLY) APPROXIMATELY 76 OUNCES
58	HG-62589	1	/P	BRAKE YOKE KIT, WITH SQ. HD. 5/16 BOLT RIBBED
59	HG-51072	1	/P	ROTOR, BRAKE
60	HG-44132	2	S	BRAKE PUCK
61	HG-44134	1	S	PUCK PLATE
62	HG-44127	2	S	BRAKE ACTUATING PIN
63	HG-51146	2		HFHCS 1/4-20 X 2 W/PATCH, SPECIAL FLANGE
65	HG-23711	1		SPACER
66	HG-70896	1		KIT, SPRING
67	HG-44138	1		SQ. HD. BOLT 5/16-24 RIBBED
68	HG-44094	1	/P	ARM, BRAKE
69	HG-44142	1	S	SLOTTED HEX NUT 5/16-24
70	HG-44101	1	S	COTTER PIN 3/32 X 3/4
71	HG-50919	1	/P	COMPRESSION SPRING BRAKE ANTI-DRAW
72	HG-50132	3	/P	WASHER, HT. .5 ID X 1 OD X .032
73	HG-44130	2	S	FLAT-WASHER 11/32 I.D. X 7/8 O.D.
74	HG-70719	1	/P	SEAL KIT, WITH OIL SEAL (.625X1.0X.25), RET-STAR WASHER RING, SHAFT SEAL
75	HG-51084	2	/P	CHECK PLUG ASSEMBLY, .027, WASHER
83	HG-9004800-2506	2	/P	PIN, STANDARD HEADLESS
84	HG-51143	1	/P	FITTING, 5/16 SAE 5/32 TUBE
85	HG-51147	1		HOSE, EXPANSION TANK
87	HG-51251	1		CAP, VENT
88	HG-50653	1	/P	BOLT, SELF TAPPING 10-32 X 1/2
94	HG-44147	1		BALL BEARING .62 I.D X 1.38 X .44
95	HG-50837	1		SOCKET HEAD CAP SCREW, 5/16-24 X 1 1/2
96	HG-51200	1		SPACER, LOCATING
97	HG-50870	1		SCREW, SFHCS
98	HG-51120	1		ARM, RETURN
99	HG-51097	1		PUCK, ADJUSTING
100	HG-51122	1		WASHER, .325 OD X 1.60 ID X .150 W
101	HG-51131	1	/P	SPRING, EXTENSION
102	HG-51123	1		SPACER, .560 OD X .260 ID X .087
103	HG-51223	1		BRACKET, TORQUE
107	HG-51134	1		DEFLECTOR
108	HG-51069	1		WASHER, MOTOR SHAFT .71 ID X 1.15 OD X .030 THK


LT1046 Tractor (2007 & before)
Transmission

Page 105 of 109

Ref #	Part Number	Qty	S/P/F	Description
109	HG-9005110-5600	1	/P	PLUG, SAE #6
110	HG-50868	1		TORX HEARD SCREW, 5/16-18 T.F.
111	HG-51144	1		O-RING .07 X .301 ID
113	HG-51179	1		BRACKET, SUPPORT EXPANSION TANK
114	HG-51184	1	/P	SPRING GRUIDE
116		1		SILICON SPONGE (ORDER KIT)
120	HG-70759	1		CENTER SECTION W/ FILTER BASE, BOTTOM FILTER, CHECK PLUGS, SPRING, ACTUATOR, DEFLECTOR, BUSHING
121	HG-70756	1	/P	FILTER ASSEMBLY W/ FILTER BASE, BOTTOM FILTER, SPRING, ACTUATOR, DEFLECTOR
122	HG-70463	1	/P	SEAL - O-RING KIT
128	HG-70503	1	/P	EXPANSION TANK KIT W/TANK, VENT CAP, SELF-TAPPING BOLT, BRACKET, SILICON SPONGE
129		1		CAP, EXPANSION TANK SHIPPING (NOT USED)

LT1046 Tractor (2007 & before)
Wheels, Ball Bearings

Page 106 of 109

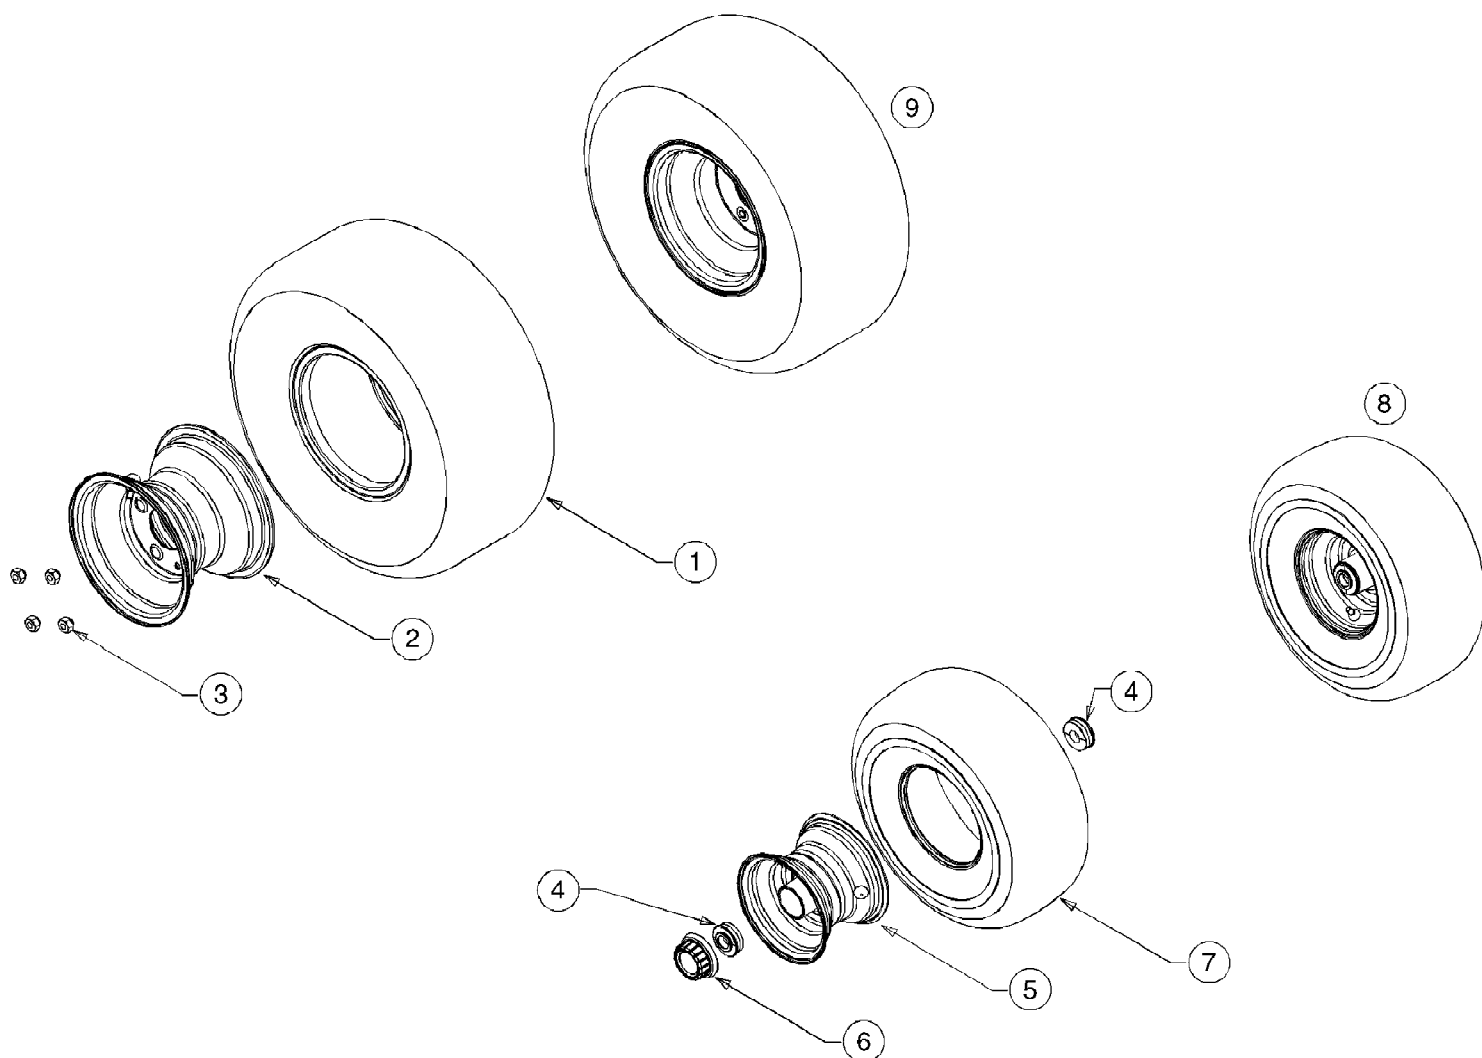


LT1046 Tractor (2007 & before)
Wheels, Ball Bearings

Page 107 of 109

Ref #	Part Number	Qty	S/P/F	Description
1	734-04139	2	S	Tire, Turf Saver Tread, Cub Cadet 20 x 9 x 8
2	634-0246A	2	S	Rim Assembly, 8.0 x 6.19 (4-Lug)
3	712-3050	8	/P	Lug Nut, 7/16-14
4	741-3032	4	S	Bearing, Ball, .75 ID x 1.75 OD
5	634-04104A-0499	2	S	Rim Assembly, 6 x 4.5 (Included, Bearings, Spacer and Valve)
	750-04219	2		Spacer (Not shown)
6	731-3020	2	S	Hub Cap
7	734-04140	2	S	Tire, Turf Saver Tread, Cub Cadet 15 x 6 x 6
8	N/A	2		Wheel Assembly,Cub Cadet 15 x 6 x 6 (assembly not available)
9	N/A	2		Wheel Assembly,Cub Cadet 20 x 9 x 8 (assembly not available)
	737-0224	2		Grease Fitting (Not Shown)
	734-0255	4	S	Valve, Tubeless Air (Not Shown)

LT1046 Tractor (2007 & before)
Wheels, Flange Bearings

Page 108 of 109

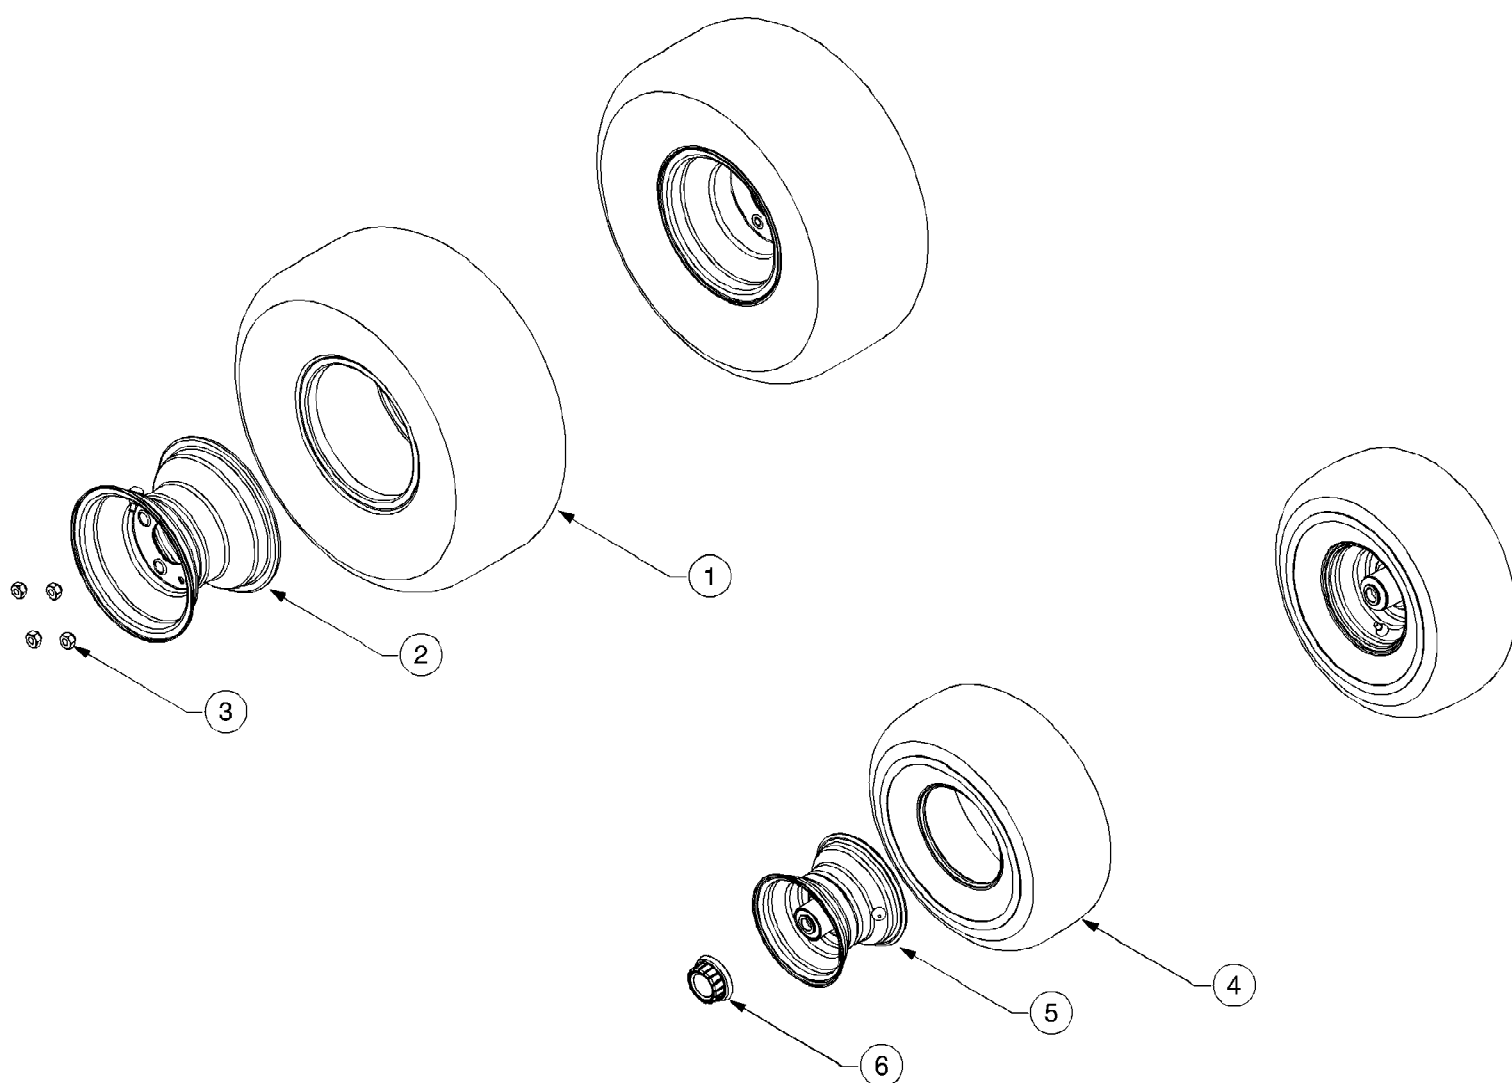

LT1046 Tractor (2007 & before)
Wheels, Flange Bearings

Page 109 of 109

Ref #	Part Number	Qty	S/P/F	Description
1	734-04139	2	S	Tire, Turf, Cub Cadet 20 x 10 x 8
2	634-0246A	2	S	Rim Assembly, 8.0 x 6.19 (4-Lug)
3	712-3050	8	/P	Lug Nut, 7/16-14
4	734-04140	2	S	Tire, Turf, Cub Cadet 15 x 6 x 6
5	634-04081	2	S	Rim Assembly, 6 x 4.5 (Includes Flange Bearings and Valve)
	741-0516B	2	/P	Bearing, Flange (not shown)
	741-0990B	2	/P	Bearing, Flange w/zerk (not shown)
6	731-3020	2	S	Hub Cap
	734-0255	4	S	Valve, Tubeless Air (not shown)