 


LTX1046VT Tractor (2010 & After)
Drive System

Page 1 of 62

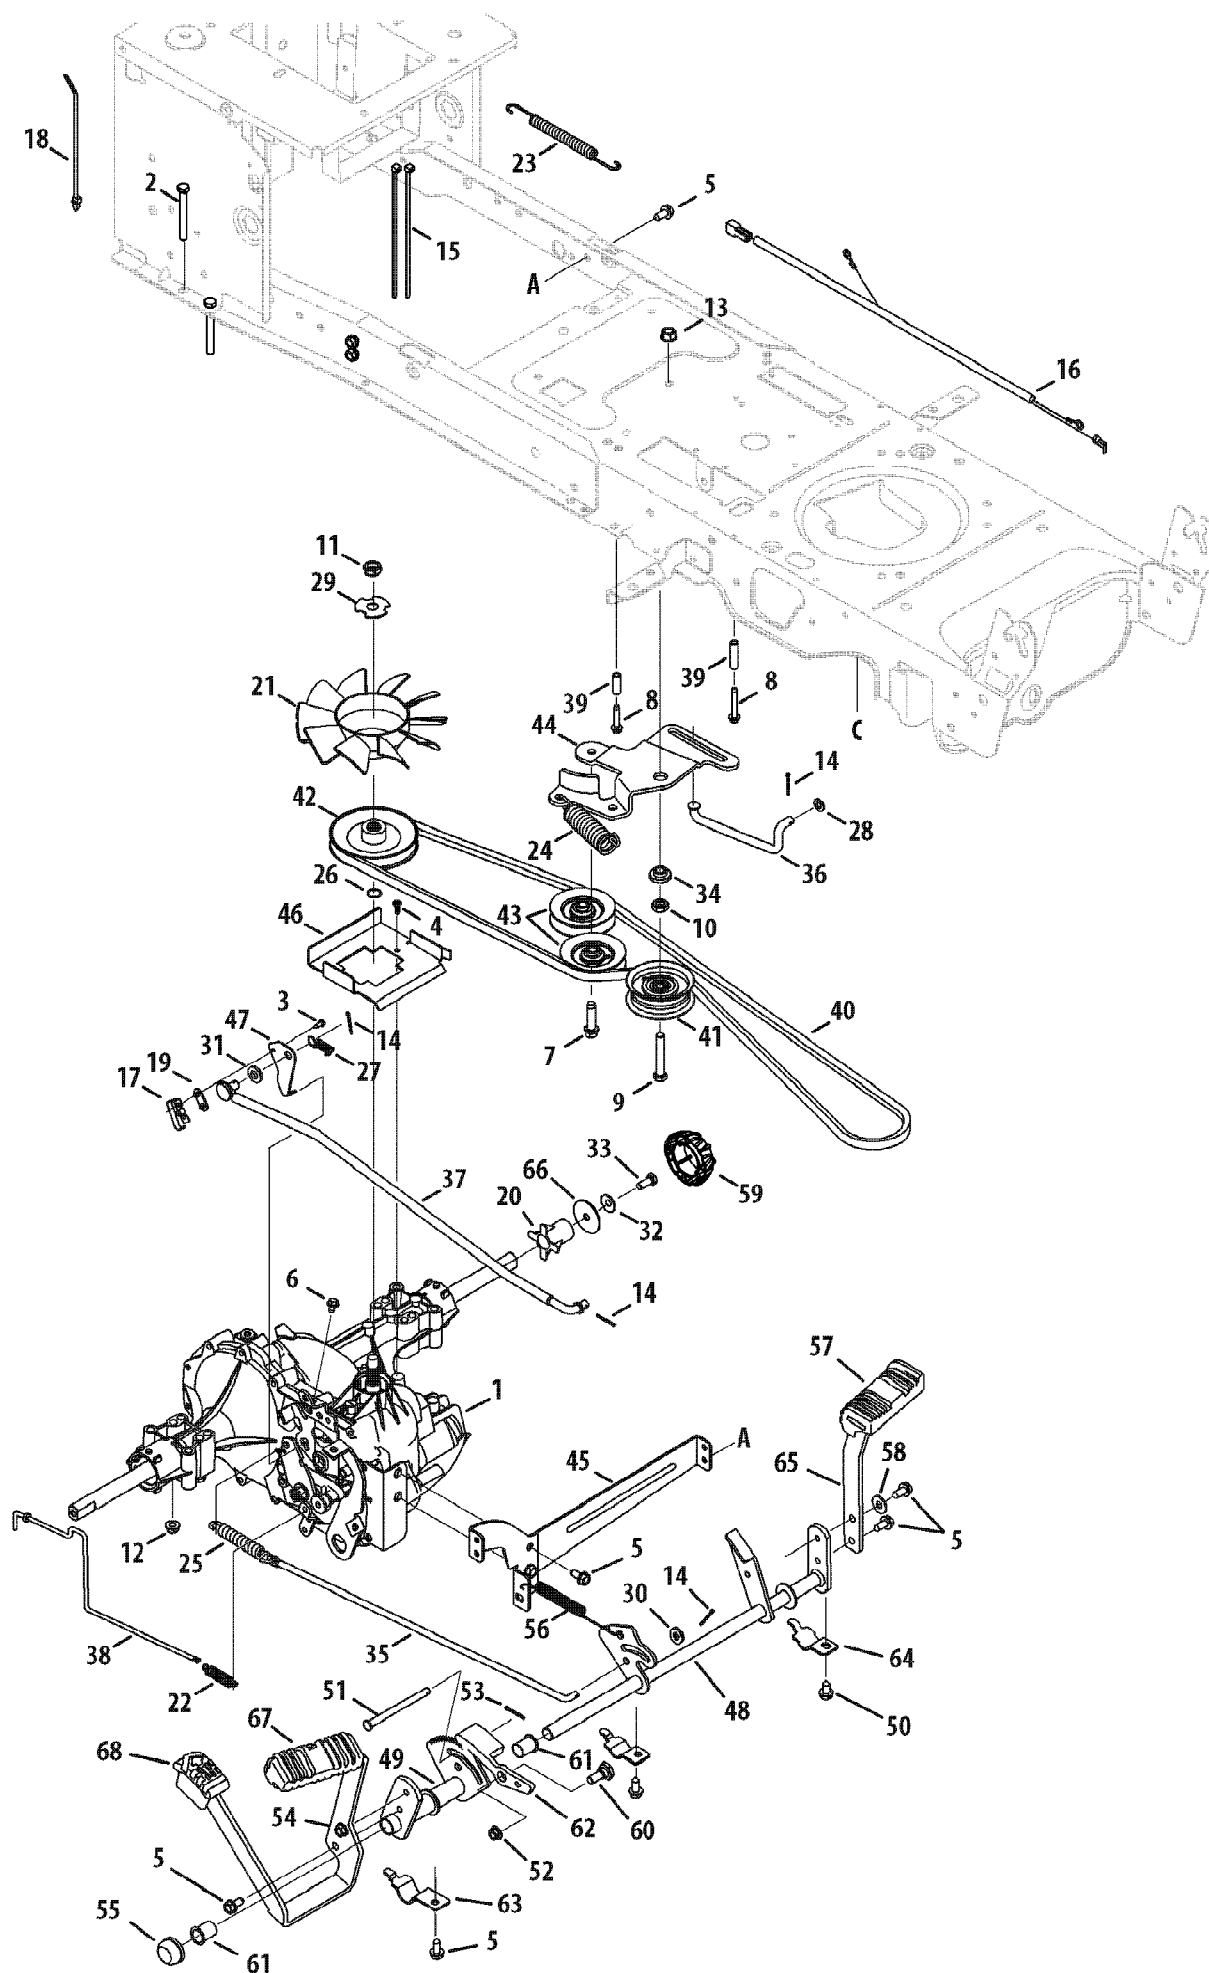

LTX1046VT Tractor (2010 & After)
Drive System

Page 2 of 62

Ref #	Part Number	Qty	S/P/F	Description
1	918-0319	1	/P	Transmission, Hydro-Gear 0510
2	710-0176	1	/P	Hex Screw, 5/16-18, 2.75, Gr5, Std
3	710-0227	1	/P	Screw, #8-18, 0.500,
4	710-0351	1	/P	Screw, #10-16, 0.500
5	710-04484	1		Screw, Self-tapping, 5/16-18, .750
6	710-0653	1	/P	Screw, Self-tapping, 1/4-20, 0.375
7	710-1007	1	/P	Screw, Self-tapping, 3/8-16, 1.500
8	710-1325	1	/P	Screw, Self-tapping, 1/4-20, 1.625
9	710-3011	1	/P	Hex Screw, 3/8-16, 2.25, Gr5
10	912-0240	1	/P	Nut, Jam, 7/16-20, Gr2
11	912-0346	1	/P	Nut, Jam Lock, 1/2-20, Gr5, Nylon
12	712-04063	1	/P	Nut, Flange Lock, 5/16-18, Nylon
13	912-0431	1	/P	Nut, Flange Lock, 3/8-16
14	914-0111	1	/P	Pin, Cotter, 3/32, 1.0
15	725-0157	1	/P	Cable, Tie, 3/16 x .05 x 7.4
16	725-04791A	1		Jumper Harness, Ground & Reverse
17	725-1644	1		Switch, Spring, Short
18	926-0154	1	/P	Tie, Cable, Push Mount 7.5
19	926-0320	1	/P	Plate, Insulator Nut
20	731-05299A	1		Sleeve, .765 Id x 1.500
21	731-06098	1		Fan, Hydro
22	932-0209	1	/P	Spring, Extension, .48 Od x 2.03
23	732-04606	1		Spring, Extension, .500 Dia x 12.6
24	732-04624	1		Spring, Extension, 1.00 Dia x 4.75
25	732-0716D	1	/P	Spring, Extension, .59 Od x 4.00
26	732-0729	1	/P	Ring, Wire
27	732-3118	1		Spring, Extension, .375 Od x 1.44
28	936-0264	1	/P	Washer, Flat, .330 x .630 x .0635
29	736-04263	1		Washer, Lock, Transmission Hydro
30	936-3008	1	/P	Washer, Flat, .344 x .750 x .120
31	736-3010	1	/P	Washer, Flat, .407x.812x.135, Ht
32	736-0242	1	/P	Washer, Bell, .340 x .872 x .060
33	710-0627	1	/P	Hex Screw, 5/16-24, .750, Gr5, Lock
34	738-04420	1		Spacer, Shoulder, 1.375 x .380 x .183
35	747-04139	1		Rod, Brake, LT Hydro
36	747-04957A	1		Rod, Transmission, Bypass
37	747-04979	1		Rod, Control, Hydro
38	747-04991	1		Rod, Hydro Bypass
39	750-04456	1		Spacer, .260 x .372 x 1.420
40	954-04207	1	/P	Belt, V-Type
41	756-04224	1	/P	Pulley, Idler, Flat 2.75 OD
42	756-04308	1		Pulley, Input, 4.13 Dia
43	756-04325	1	/P	Pulley, Idler, V-Type x 3.06
44	783-06027A	1		Bracket, Idler, Center Double
45	783-06133-0637	1		Bracket, Mount, Hydro
46	783-06260-0637	1		Bracket, Support, Belt Disengage
47	783-1019B	1	/P	Bracket, Actuator, Switch
48	647-04152A	1		Control Assembly, Brake
49	683-04537	1		Bracket Assembly, Pedal, Hydro
50	710-0604A	1	/P	Screw, Self-tapping, 5/16-18, 0.625,
51	711-05068	1		Pin, Clevis, 5/16 x 3.985
52	712-04065	1	/P	Nut, Flange Lock, 3/8-16, Nylon
53	714-04040	1	/P	Pin, Cotter, Bow-Tie 72


LTX1046VT Tractor (2010 & After)
Drive System


Page 3 of 62

Ref #	Part Number	Qty	S/P/F	Description
54	783-06059-0637	1		Bracket, Pedal, Hydro
55	726-0214	1	/P	Cap, Push 5/8
56	732-04587	1		Spring, Extension, .63 Dia x 4.95
57	735-04136	1		Pad, Pedal, Brake
58	736-0242	1	/P	Washer, Bell, .340 x .872 x .060
59	731-2290A	1	/P	Cap, Hub
60	938-0380	1	/P	Bolt, Shoulder, .500 x .270, 3/8-16
61	741-0495	1	/P	Bearing, Flange, .630 x .695 x .60
62	748-04203	1		Latch, Cruise
63	783-05914	1		Bracket, Support, Pedal Strap
64	783-05940	1		Bracket, Support, Pedal Strap 5/8
65	783-06103A-0637	1		Bracket, Pedal, Brake
66	736-0430	1	/P	Washer, Flat, .350 x 1.59 x .062
67	735-04118A	1	/P	Pad, Pedal, Forward
68	735-04135	1		Pad, Pedal, Reverse

LTX1046VT Tractor (2010 & After)
Electrical Schematic

  Page 4 of 62

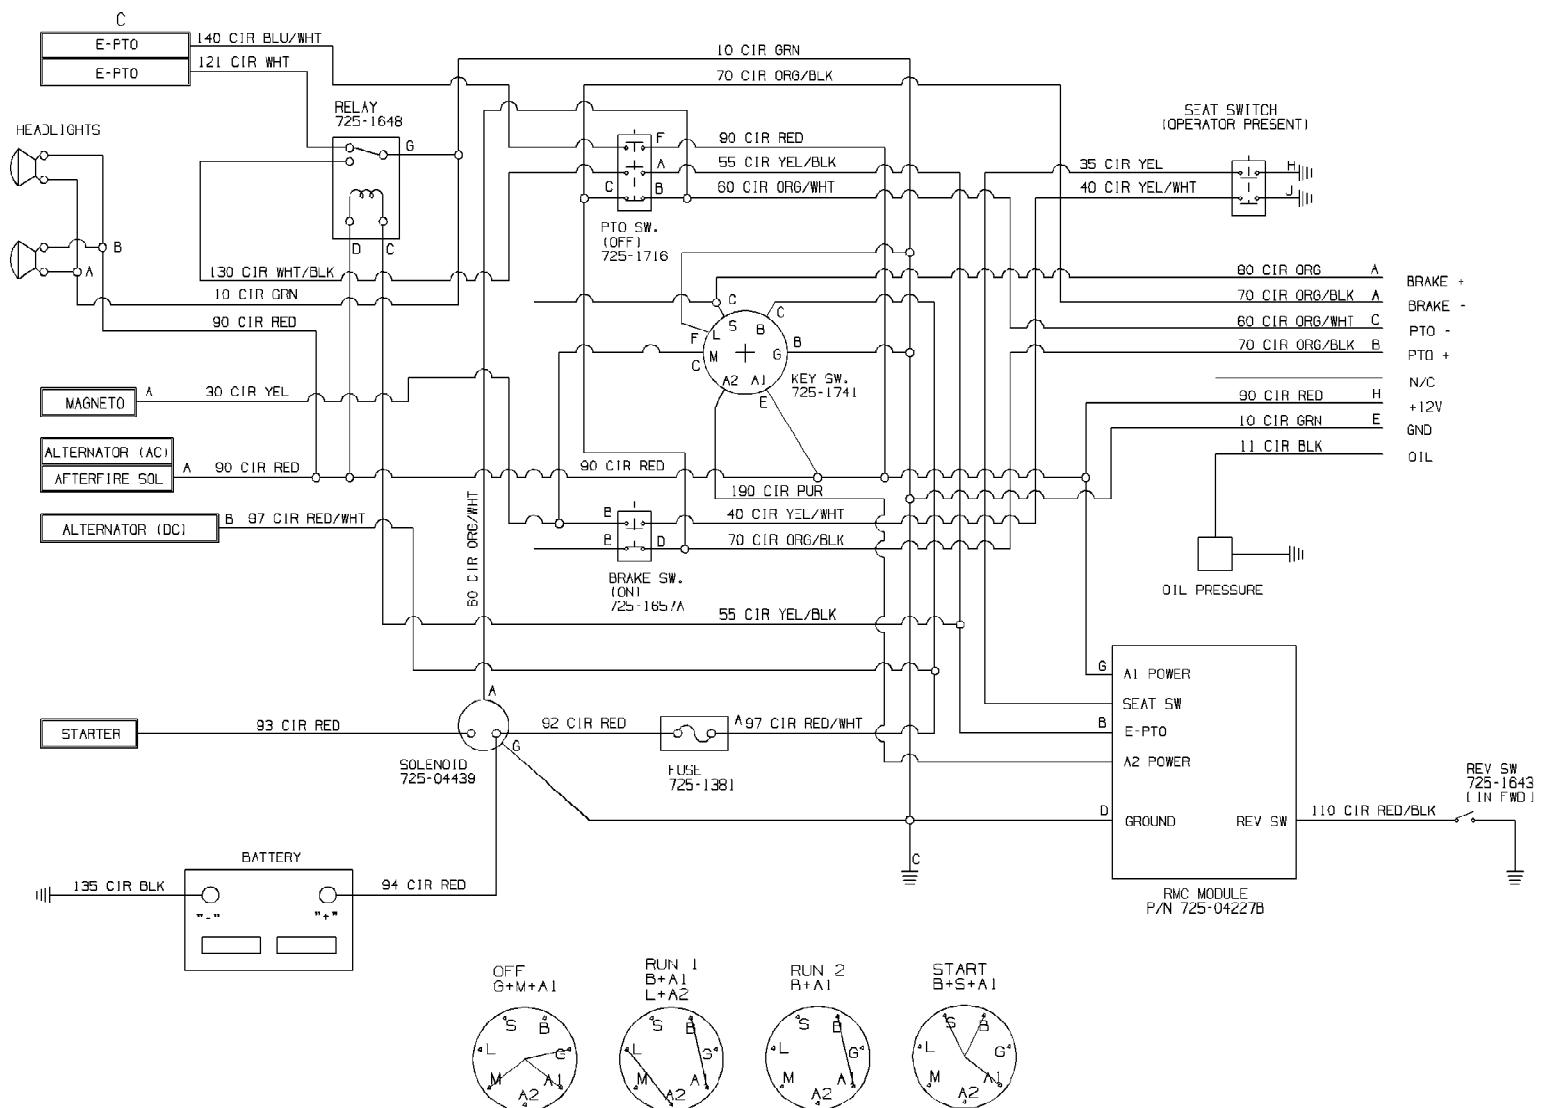

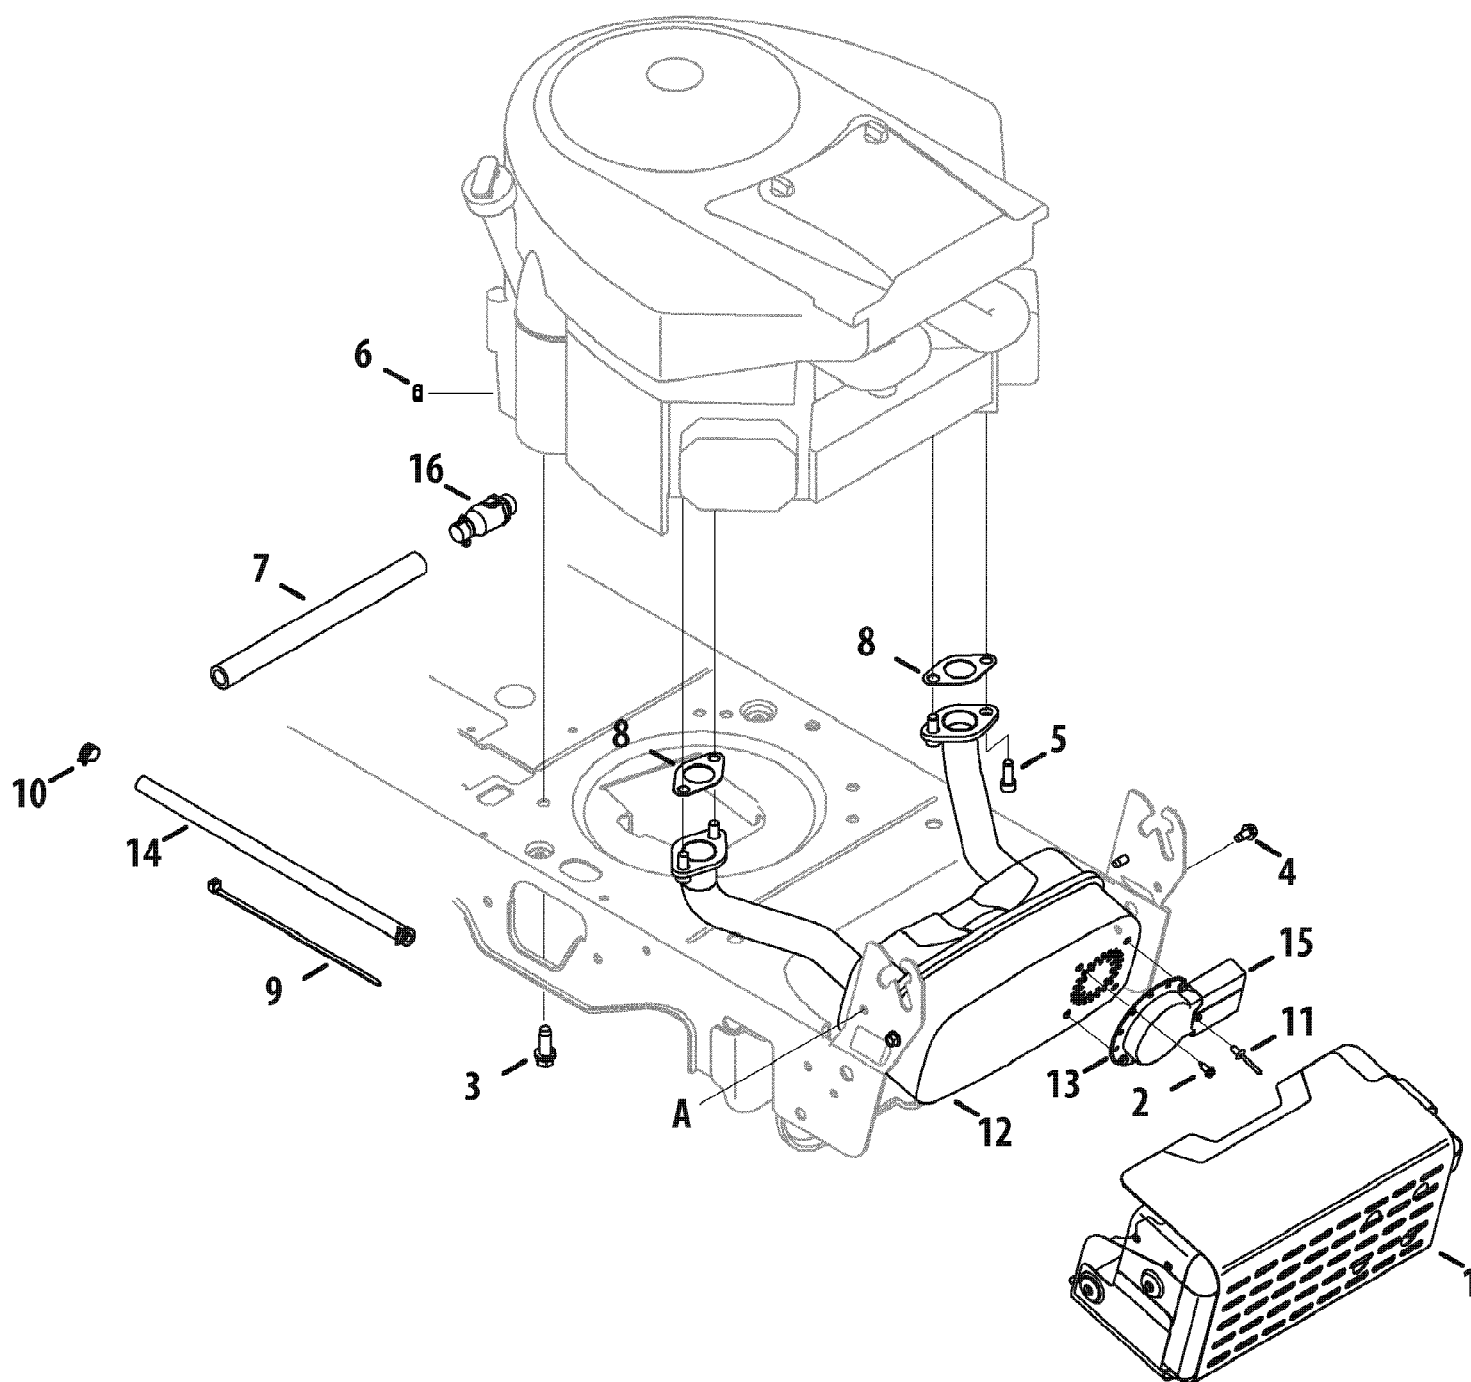


LTX1046VT Tractor (2010 & After)
Engine Accessories

Page 6 of 62

Ref #	Part Number	Qty	S/P/F	Description
1	683-04549-0637	1	/P	Shield Ass'y, Muffler
2	710-0227	1	/P	Screw, Ab, #8-18, 0.500,
3	710-04683	1		Screw, Self-tapping, 3/8-16, 1.000,
4	710-0599	1	/P	Screw, Self-tapping, 1/4-20, 0.500,
5	710-1314A	1	/P	Screw, Socket Head, 5/16-18, .750
6	712-0271	1	/P	Nut, Sems, 1/4-20
7	751-3141-14	1	/P	Hose, Extension, Oil Drain
8	721-0460	1		Gasket, Exhaust
9	725-0157	1	/P	Cable, Tie, 3/16 x .05 x 7.4
10	726-0205	1	/P	Clamp, Hose, .490 Dia.
11	728-04000	1		Rivet, Pop, .188 Dia x .300
12	751-10542A	1		Muffler, Intek Twin
13	751-0564B	1	/P	Deflector, Muffler
14	751-10349	1		Hose, Fuel, Low Permeation, 1/4
15	751-10353	1		Deflector, Muffler, Long
16	951-10517A	1	/P	Drain, Oil

LTX1046VT Tractor (2010 & After)
Engine B&S 44L777 & 44M777 1

 Page 7 of 62

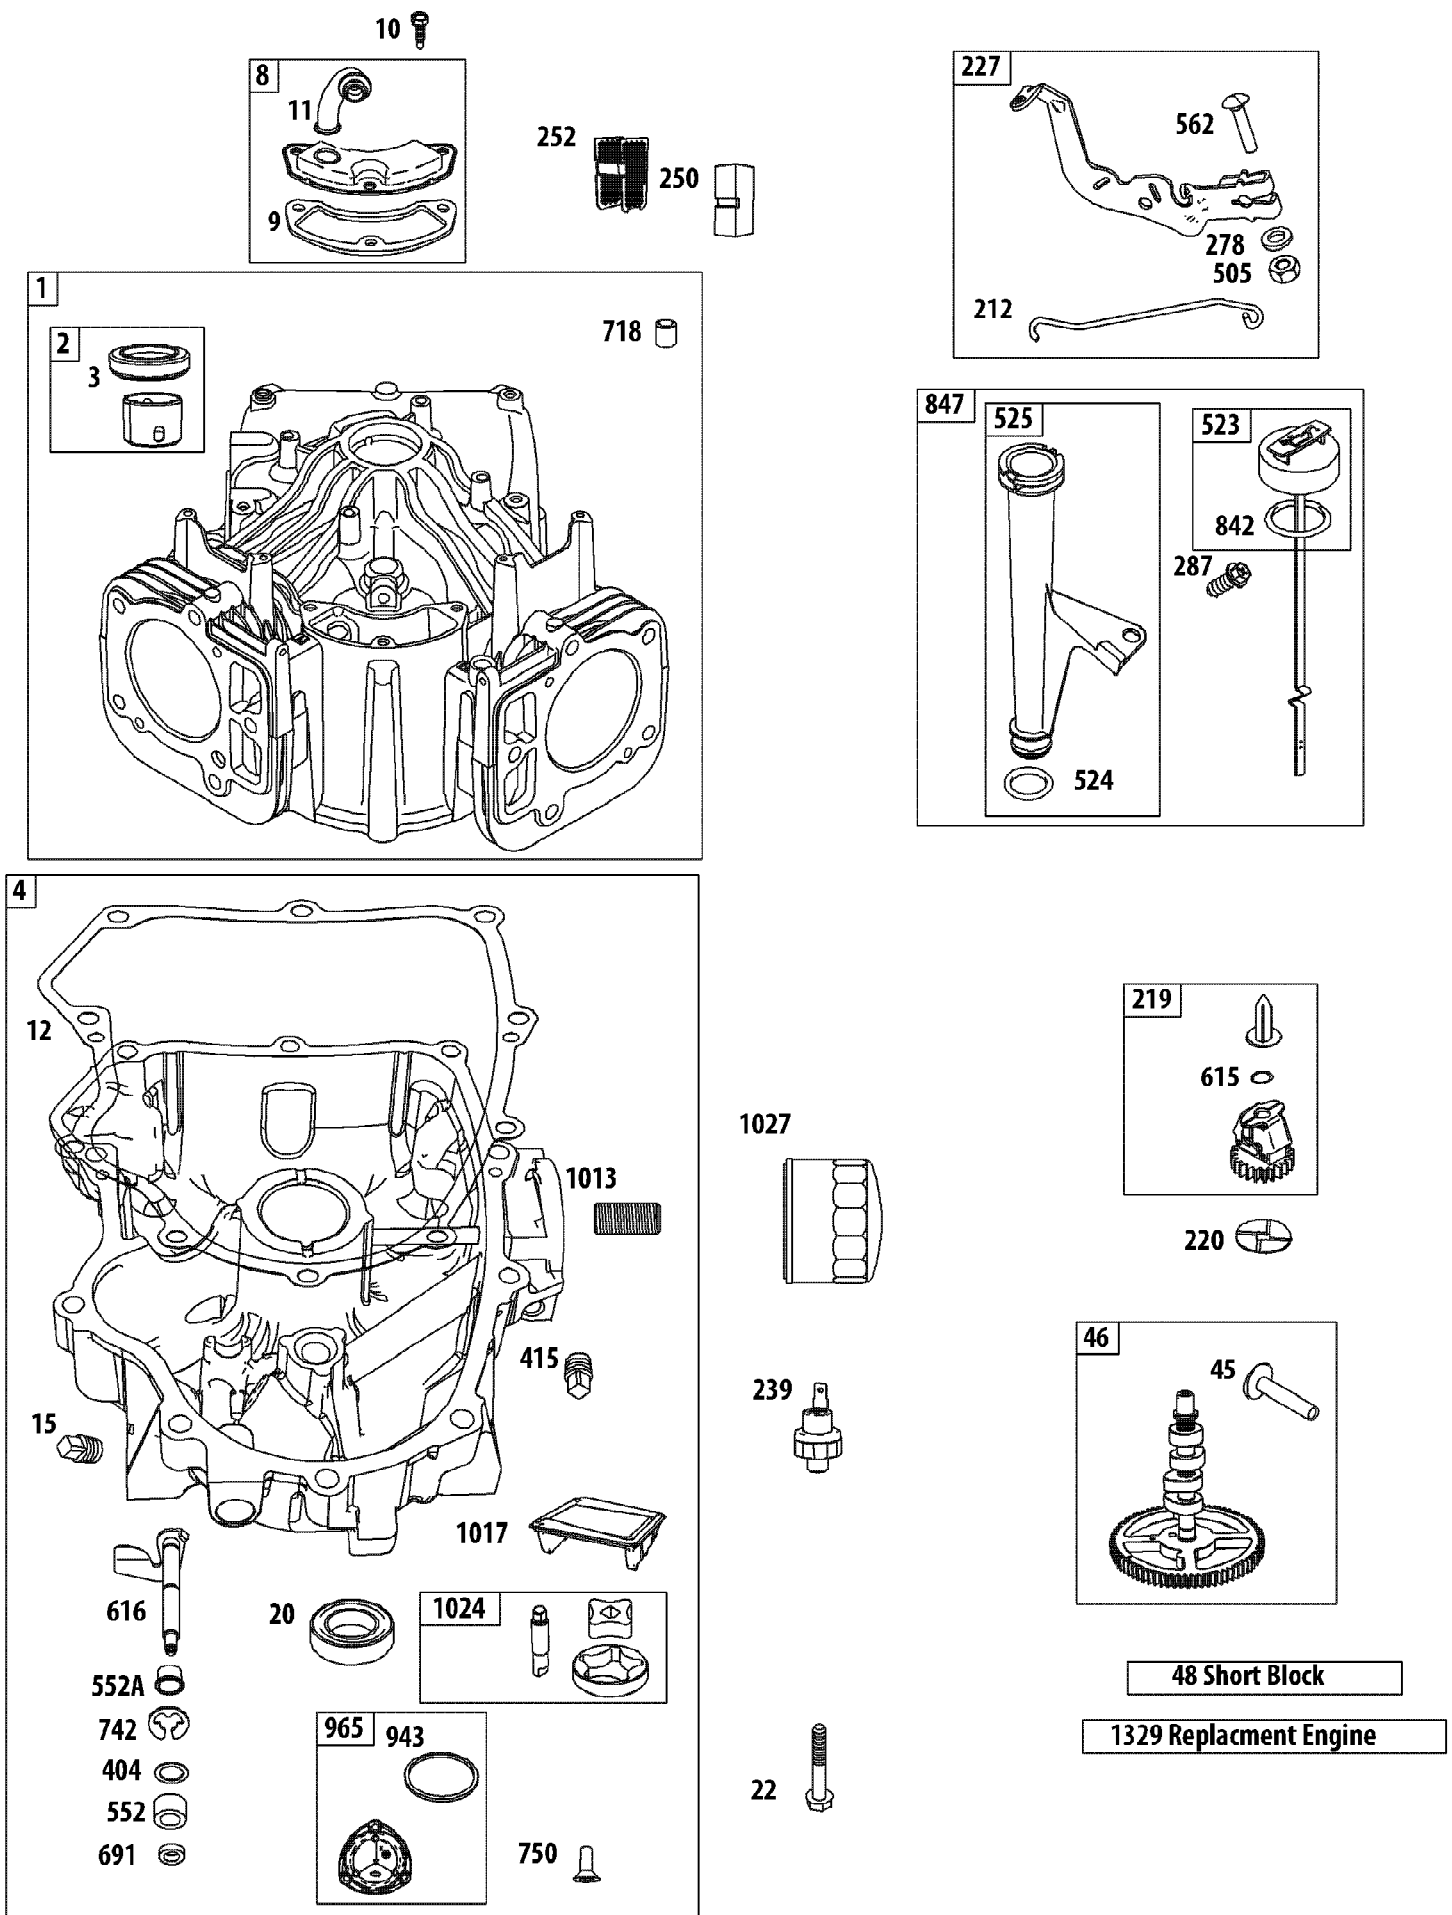

LTX1046VT Tractor (2010 & After)
Engine B&S 44L777 & 44M777 1

Page 8 of 62

Ref #	Part Number	Qty	S/P/F	Description
1	BS-793564	1		Cylinder Assembly
2	BS-499585	1		Kit-Bushing/Seal (Magneto Side)
3	BS-391086S	1	/P	Seal-Oil (Magneto Side)
4	BS-796307	1	/P	Sump-Engine
5	BS-796231	1	/P	Head-Cylinder (Cylinder #1)
5A	BS-796232	1	/P	Head-Cylinder (Cylinder #2)
7	BS-693997	1	/P	Gasket-Cylinder Head
8	BS-792185	1	/P	Breather Assembly
9	BS-690937	1		Gasket-Breather
10	BS-697551	1		Screw (Breather Assembly)
11	BS-792184	1	/P	Tube-Breather
12	BS-697227	1	/P	Gasket-Crankcase
13	BS-793988	1		Screw (Cylinder Head)
15	BS-690946	1	/P	Plug-Oil Drain
16	BS-796540	1		Crankshaft
20	BS-795387	1	/P	Seal-Oil (PTO Side)
22	BS-694966	1	/P	Screw (Crankcase Cover/ Sump)
23	BS-691053	1		Flywheel
24	BS-222698S	1	/P	Key-Flywheel
25	BS-792023	1	/P	Piston Assembly (Standard)
25	BS-792072	1		Piston Assembly (020" Oversize)
26	BS-793561	1		Ring Set (Standard)
26	BS-792073	1		Ring Set (.020" Oversize)
27	BS-690975	1		Lock-Piston Pin
28	BS-696581	1		Pin-Piston
29	BS-796209	1	/P	Rod-Connecting
32	BS-690976	1		Screw (Connecting Rod)
33	BS-697576	1		Valve-Exhaust
34	BS-792200	1	/P	Valve-Intake
35	BS-694865	1		Spring-Valve (Intake)
36	BS-694865	1		Spring-Valve (Exhaust)
42	BS-499586	1	/P	Keeper-Valve
45	BS-690977	1	/P	Tappet-Valve
46	BS-796853	1		Gear-Cam (44L777)
46	BS-797242	1		Gear-Cam (44M777)
48	BS-797093	1		Short Block
50	BS-695241	1	/P	Manifold-Intake
51	BS-795123	1		Gasket-Intake
51A	BS-690950	1		Gasket-Intake
51B	BS-690949	1		Gasket-Intake
53	BS-690951	1		Stud (Carburetor)
54	BS-699816	1		Screw (Intake Manifold)
73	BS-494439	1	/P	Screen-Rotating
74	BS-698425	1		Screw (Rotating Screen)
75	BS-691056	1		Washer (Flywheel)
95	BS-690718	1		Screw (Throttle Valve)
98	BS-699721	1		Kit-Idle Speed
104	BS-694918	1		Pin-Float Hinge
105	BS-698537	1		Valve-Float Needle
108	BS-699723	1		Valve-Choke
117	BS-842630	1		Jet-Main (Standard)
118	BS-797477	1		Jet-Main (High Altitude)

LTX1046VT Tractor (2010 & After)
Engine B&S 44L777 & 44M777 1

Page 9 of 62

Ref #	Part Number	Qty	S/P/F	Description
121	BS-792455	1	S	Kit-Carburetor Overhaul (Incl. Ref No. 104,137,163,276,633)
125	BS-796997	1		Carburetor
130	BS-690993	1		Valve-Throttle
131	BS-499805	1		Kit-Throttle Shaft
133	BS-699724	1		Float-Carburetor
135	BS-699729	1		Tube-Fuel Transfer
137	BS-690994	1		Gasket-Float Bowl
141	BS-796228	1		Kit-Choke Shaft
142	BS-699726	1		Nozzle-Carburetor
146	BS-690979	1	/P	Key-Timing
150	BS-690995	1		Gasket-Nozzle
163	BS-691001	1		Gasket-Air Cleaner
165	BS-693148	1		Nut (Ring Gear)
186	BS-795985	1		Connector-Hose
187	751-10349-16	1	/P	Line-Fuel Cut as required
188	BS-697551	1		Screw (Control Bracket)
192	BS-690083	1		Adjuster-Rocker Arm
197	BS-697820	1		Screw (Back Plate)
209	BS-796658	1		Spring-Governor (Yellow/Brown)
211	BS-796225	1		Spring-Governed Idle (Orange)
212	BS-695238	1		Link-Throttle
216	BS-796229	1		Link-Choke
217	BS-695409	1		Spring-Choke Return
219	BS-793338	1	/P	Gear-Governor
220	BS-690412	1	/P	Washer (Governor Gear)
221	BS-841026	1		Cup-Governor
222	BS-796226	1		Bracket-Control
227	BS-796223	1		Lever-Governor Control
231	BS-690718	1		Screw (Choke Valve)
239	BS-792028	1		Switch-Oil Pressure
240	BS-691035	1	/P	Filter-Fuel
250	BS-690957	1		Retainer-Breather
252	BS-794389	1		Collector-Oil
265	BS-691024	1	/P	Clamp-Casing
267	BS-695134	1		Screw (Casing Clamp)
276	BS-695410	1		Washer-Sealing
278	BS-792651	1		Washer (Governor Control Lever)
287	BS-697551	1		Screw (Dipstick Tube)
304	BS-797407	1	/P	Housing-Blower
305	BS-691005	1		Screw (Blower Housing)
305A	BS-790690	1		Screw (Blower Housing to Intake Elbow)
306	BS-796541	1		Shield-Cylinder (Cylinder #2)
306A	BS-796852	1		Shield-Cylinder (Cylinder #1)
307	BS-697551	1		Screw (Cylinder Shield)
309	BS-497595	1	/P	Motor-Starter
310	BS-690323	1		Screw (Starter Motor)
332	BS-691059	1		Nut (Flywheel)
333	BS-691060	1	/P	Armature-Magneto
334	BS-691061	1		Screw (Magneto Armature)
337	759-3336	1	/P	Plug-Spark

LTX1046VT Tractor (2010 & After)
Engine B&S 44L777 & 44M777 1

Page 10 of 62

Ref #	Part Number	Qty	S/P/F	Description
358	BS-694012	1	/P	Gasket Set-Engine (Incl. Ref No. 3.7,9,12,20,51,163,524,668,691868,883)
385	BS-797409	1		Screw (Fuel Pump)
387	BS-808656	1	/P	Pump-Fuel
404	BS-690442	1		Washer (Governor Crank)
415	BS-794903	1		Plug (Oil Pressure Switch Hole)
418	BS-795912	1		Plate-Carburetor
431	BS-792297	1		Elbow-Intake
445	BS-792105	1	/P	Filter-Air Cleaner Cartridge
447	BS-691003	1	/P	Screw (Air Guide Cover)
467	BS-790697	1		Knob-Air Cleaner
474	BS-696457	1	/P	Alternator
501	BS-794360	1	/P	Regulator
503	BS-691532	1	/P	Strap-Starter
505	BS-691029	1		Nut (Governor Control Lever)
510	BS-696541	1	/P	Drive-Starter
513	BS-692024	1	/P	Clutch-Drive
523	BS-691036	1		Dipstick
524	BS-691032	1		Seal-Dipstick Tube
525	BS-691037	1		Tube-Dipstick
526	BS-691129	1	/P	Screw (Regulator)
544	N/A	1		Armature-Starter (Service with Starter Motor BS-497595)
552	BS-796638	1		Bushing-Governor Crank
552A	BS-690553	1		Bushing-Governor Crank
562	BS-690311	1		Screw (Governor Control Lever)
573	BS-790444	1		Plate-Back
579	BS-691029	1		Nut (Starter Cable)
601	BS-691038	1		Clamp-Hose (Black)
615	BS-698290	1	/P	Retainer-Governor Shaft
616	BS-691045	1		Crank-Governor
617	BS-697891	1		Seal-O Ring (Intake Manifold) (Red)
633	BS-699813	1		Seal-Choke/Throttle Shaft
634	BS-698779	1		Spring/Seal Assembly
635	BS-66538s	1	/P	Boot-Spark Plug
654	BS-690958	1	/P	Nut (Carburetor)
668	BS-691215	1		Spacer (Rotating Screen)
668A	BS-691500	1	/P	Spacer (Rotating Screen)
672	BS-690234	1		Gasket-Carburetor Plate
691	BS-790574	1		Seal-Governor Shaft
695	BS-693149	1		Screw (Ring Gear)
697	BS-791680	1	/P	Screw (Drive Cap)
703	BS-691010	1		Clip
718	BS-690959	1	/P	Pin-Locating
726	BS-499612	1		Gear-Ring
729	BS-694123	1		Clip-Wire
741	BS-690980	1		Gear-Timing
742	BS-690328	1	/P	Retainer-E Ring (Governor Crank)
750	BS-796208	1		Screw (Oil Pump Cover)
783	BS-695708	1	/P	Gear-Pinion
789	BS-797460	1		Harness-Wiring
798	BS-697890	1		Screw (Rocker Arm)






LTX1046VT Tractor (2010 & After)
Engine B&S 44L777 & 44M777 1

Page 11 of 62

Ref #	Part Number	Qty	S/P/F	Description
801	BS-691283	1		Cap-Drive
802	BS-691286	1	/P	Cap-End
803	N/A	1		Housing-Starter (Service with Starter Motor BS-497595)
842	BS-691031	1	/P	Seal-O Ring (Dipstick Tube)
847	BS-499602	1		Dipstick/Tube Assembly
851	BS-493880S	1	/P	Terminal-Spark Plug
865	BS-792286	1		Cover-Air Guide (Valley)
868	BS-690968	1	/P	Seal-Valve
883	BS-690970	1	/P	Gasket-Exhaust
914	BS-691127	1	/P	Screw (Rocker Cover)
918	BS-797408	1		Hose-Vacuum
929	BS-695239	1		Screw (Choke Control Bracket)
943	BS-796222	1		Seal-O Ring (Oil Pump Cover)
947	BS-841546	1		Solenoid-Fuel
965	BS-796221	1		Cover-Oil Pump
967	BS-792303	1	/P	Filter-Pre Cleaner
968	BS-795120	1	/P	Cover-Air Cleaner
975	BS-793592	1		Bowl-Float
987	BS-691000	1		Seal-Throttle Shaft
1005	BS-791236	1		Fan-Flywheel
1013	BS-690954	1	/P	Nipple-Oil Filter
1017	BS-796214	1		Screen-Oil Pump
1022	BS-690971	1	/P	Gasket-Rocker Cover
1023	BS-793146	1		Cover-Rocker (Cylinder #1)
1023A	BS-499600	1		Cover-Rocker (Cylinder #2)
1024	BS-796220	1		Pump-Oil
1026	BS-690981	1	/P	Rod-Push (Exhaust)
1026A	BS-690982	1	/P	Rod-Push (Intake)
1027	BS-696854	1	/P	Filter-Oil
1029	BS-690972	1		Arm-Rocker
1036		1		Label-Emissions (Available from a Briggs & Stratton)
1040	BS-791237	1		Plate-Trim
1051	BS-691265	1	/P	Ring-Retaining (Starter Drive)
1054	BS-280275	1		Tie-Cable
1059	BS-698516	1		Kit-Screw/Washer (Alternator)
1070	BS-791680	1	/P	Screw (Flywheel Fan)
1090	BS-691293	1	/P	Retainer-Brush
1095	BS-694013	1	/P	Gasket Set-Valve (Incl. Ref No. 7,883)
1100	BS-791959	1		Pivot-Rocker Arm
1119	BS-93621	1	/P	Screw (Alternator)
1124	BS-841653	1		Seal-O Ring(Fuel Transfer Tube)
1124A	BS-690988	1		Seal-O Ring(Fuel Transfer Tube)
1126	BS-690991	1		Screw (Fuel Transfer Tube)
1127	BS-695407	1		Screw (Fuel Bowl)
1128	BS-690990	1		Screw (Carburetor Nozzle)
1169	BS-690990	1		Screw (Carburetor Plate)
1329	BS-44L777-0137	1		Replacement Engine (44L777)
1329	BS-44Q777-0137	1	/P	Replacement Engine (44M777)

LTX1046VT Tractor (2010 & After)
Engine B&S 44L777 & 44M777 2

     Page 12 of 62

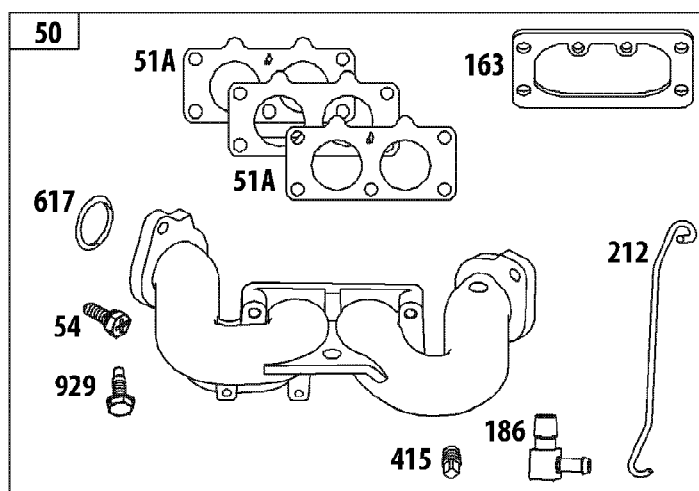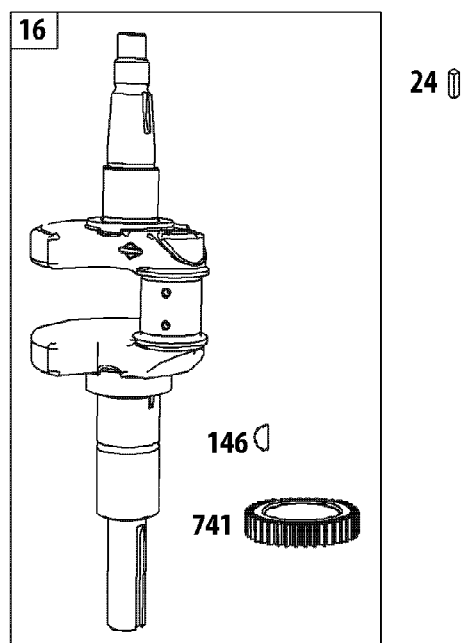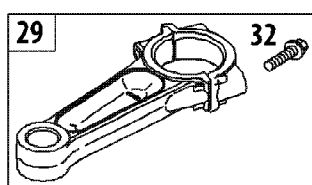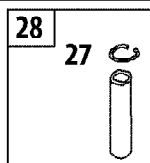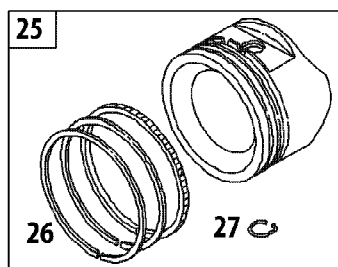

LTX1046VT Tractor (2010 & After)
Engine B&S 44L777 & 44M777 2

Page 13 of 62

Ref #	Part Number	Qty	S/P/F	Description
1	BS-793564	1		Cylinder Assembly
2	BS-499585	1		Kit-Bushing/Seal (Magneto Side)
3	BS-391086S	1	/P	Seal-Oil (Magneto Side)
4	BS-796307	1	/P	Sump-Engine
5	BS-796231	1	/P	Head-Cylinder (Cylinder #1)
5A	BS-796232	1	/P	Head-Cylinder (Cylinder #2)
7	BS-693997	1	/P	Gasket-Cylinder Head
8	BS-792185	1	/P	Breather Assembly
9	BS-690937	1		Gasket-Breather
10	BS-697551	1		Screw (Breather Assembly)
11	BS-792184	1	/P	Tube-Breather
12	BS-697227	1	/P	Gasket-Crankcase
13	BS-793988	1		Screw (Cylinder Head)
15	BS-690946	1	/P	Plug-Oil Drain
16	BS-796540	1		Crankshaft
20	BS-795387	1	/P	Seal-Oil (PTO Side)
22	BS-694966	1	/P	Screw (Crankcase Cover/ Sump)
23	BS-691053	1		Flywheel
24	BS-222698S	1	/P	Key-Flywheel
25	BS-792023	1	/P	Piston Assembly (Standard)
25	BS-792072	1		Piston Assembly (020" Oversize)
26	BS-793561	1		Ring Set (Standard)
26	BS-792073	1		Ring Set (.020" Oversize)
27	BS-690975	1		Lock-Piston Pin
28	BS-696581	1		Pin-Piston
29	BS-796209	1	/P	Rod-Connecting
32	BS-690976	1		Screw (Connecting Rod)
33	BS-697576	1		Valve-Exhaust
34	BS-792200	1	/P	Valve-Intake
35	BS-694865	1		Spring-Valve (Intake)
36	BS-694865	1		Spring-Valve (Exhaust)
42	BS-499586	1	/P	Keeper-Valve
45	BS-690977	1	/P	Tappet-Valve
46	BS-796853	1		Gear-Cam (44L777)
46	BS-797242	1		Gear-Cam (44M777)
48	BS-797093	1		Short Block
50	BS-695241	1	/P	Manifold-Intake
51	BS-795123	1		Gasket-Intake
51A	BS-690950	1		Gasket-Intake
51B	BS-690949	1		Gasket-Intake
53	BS-690951	1		Stud (Carburetor)
54	BS-699816	1		Screw (Intake Manifold)
73	BS-494439	1	/P	Screen-Rotating
74	BS-698425	1		Screw (Rotating Screen)
75	BS-691056	1		Washer (Flywheel)
95	BS-690718	1		Screw (Throttle Valve)
98	BS-699721	1		Kit-Idle Speed
104	BS-694918	1		Pin-Float Hinge
105	BS-698537	1		Valve-Float Needle
108	BS-699723	1		Valve-Choke
117	BS-842630	1		Jet-Main (Standard)
118	BS-797477	1		Jet-Main (High Altitude)

LTX1046VT Tractor (2010 & After)
Engine B&S 44L777 & 44M777 2

Page 14 of 62

Ref #	Part Number	Qty	S/P/F	Description
121	BS-792455	1	S	Kit-Carburetor Overhaul (Incl. Ref No. 104,137,163,276,633)
125	BS-796997	1		Carburetor
130	BS-690993	1		Valve-Throttle
131	BS-499805	1		Kit-Throttle Shaft
133	BS-699724	1		Float-Carburetor
135	BS-699729	1		Tube-Fuel Transfer
137	BS-690994	1		Gasket-Float Bowl
141	BS-796228	1		Kit-Choke Shaft
142	BS-699726	1		Nozzle-Carburetor
146	BS-690979	1	/P	Key-Timing
150	BS-690995	1		Gasket-Nozzle
163	BS-691001	1		Gasket-Air Cleaner
165	BS-693148	1		Nut (Ring Gear)
186	BS-795985	1		Connector-Hose
187	751-10349-16	1	/P	Line-Fuel Cut as required
188	BS-697551	1		Screw (Control Bracket)
192	BS-690083	1		Adjuster-Rocker Arm
197	BS-697820	1		Screw (Back Plate)
209	BS-796658	1		Spring-Governor (Yellow/Brown)
211	BS-796225	1		Spring-Governed Idle (Orange)
212	BS-695238	1		Link-Throttle
216	BS-796229	1		Link-Choke
217	BS-695409	1		Spring-Choke Return
219	BS-793338	1	/P	Gear-Governor
220	BS-690412	1	/P	Washer (Governor Gear)
221	BS-841026	1		Cup-Governor
222	BS-796226	1		Bracket-Control
227	BS-796223	1		Lever-Governor Control
231	BS-690718	1		Screw (Choke Valve)
239	BS-792028	1		Switch-Oil Pressure
240	BS-691035	1	/P	Filter-Fuel
250	BS-690957	1		Retainer-Breather
252	BS-794389	1		Collector-Oil
265	BS-691024	1	/P	Clamp-Casing
267	BS-695134	1		Screw (Casing Clamp)
276	BS-695410	1		Washer-Sealing
278	BS-792651	1		Washer (Governor Control Lever)
287	BS-697551	1		Screw (Dipstick Tube)
304	BS-797407	1	/P	Housing-Blower
305	BS-691005	1		Screw (Blower Housing)
305A	BS-790690	1		Screw (Blower Housing to Intake Elbow)
306	BS-796541	1		Shield-Cylinder (Cylinder #2)
306A	BS-796852	1		Shield-Cylinder (Cylinder #1)
307	BS-697551	1		Screw (Cylinder Shield)
309	BS-497595	1	/P	Motor-Starter
310	BS-690323	1		Screw (Starter Motor)
332	BS-691059	1		Nut (Flywheel)
333	BS-691060	1	/P	Armature-Magneto
334	BS-691061	1		Screw (Magneto Armature)
337	759-3336	1	/P	Plug-Spark

LTX1046VT Tractor (2010 & After)
Engine B&S 44L777 & 44M777 2

Page 15 of 62

Ref #	Part Number	Qty	S/P/F	Description
358	BS-694012	1	/P	Gasket Set-Engine (Incl. Ref No. 3.7,9,12,20,51,163,524,668,691868,883)
385	BS-797409	1		Screw (Fuel Pump)
387	BS-808656	1	/P	Pump-Fuel
404	BS-690442	1		Washer (Governor Crank)
415	BS-794903	1		Plug (Oil Pressure Switch Hole)
418	BS-795912	1		Plate-Carburetor
431	BS-792297	1		Elbow-Intake
445	BS-792105	1	/P	Filter-Air Cleaner Cartridge
447	BS-691003	1	/P	Screw (Air Guide Cover)
467	BS-790697	1		Knob-Air Cleaner
474	BS-696457	1	/P	Alternator
501	BS-794360	1	/P	Regulator
503	BS-691532	1	/P	Strap-Starter
505	BS-691029	1		Nut (Governor Control Lever)
510	BS-696541	1	/P	Drive-Starter
513	BS-692024	1	/P	Clutch-Drive
523	BS-691036	1		Dipstick
524	BS-691032	1		Seal-Dipstick Tube
525	BS-691037	1		Tube-Dipstick
526	BS-691129	1	/P	Screw (Regulator)
544	N/A	1		Armature-Starter (Service with Starter Motor BS-497595)
552	BS-796638	1		Bushing-Governor Crank
552A	BS-690553	1		Bushing-Governor Crank
562	BS-690311	1		Screw (Governor Control Lever)
573	BS-790444	1		Plate-Back
579	BS-691029	1		Nut (Starter Cable)
601	BS-691038	1		Clamp-Hose (Black)
615	BS-698290	1	/P	Retainer-Governor Shaft
616	BS-691045	1		Crank-Governor
617	BS-697891	1		Seal-O Ring (Intake Manifold) (Red)
633	BS-699813	1		Seal-Choke/Throttle Shaft
634	BS-698779	1		Spring/Seal Assembly
635	BS-66538s	1	/P	Boot-Spark Plug
654	BS-690958	1	/P	Nut (Carburetor)
668	BS-691215	1		Spacer (Rotating Screen)
668A	BS-691500	1	/P	Spacer (Rotating Screen)
672	BS-690234	1		Gasket-Carburetor Plate
691	BS-790574	1		Seal-Governor Shaft
695	BS-693149	1		Screw (Ring Gear)
697	BS-791680	1	/P	Screw (Drive Cap)
703	BS-691010	1		Clip
718	BS-690959	1	/P	Pin-Locating
726	BS-499612	1		Gear-Ring
729	BS-694123	1		Clip-Wire
741	BS-690980	1		Gear-Timing
742	BS-690328	1	/P	Retainer-E Ring (Governor Crank)
750	BS-796208	1		Screw (Oil Pump Cover)
783	BS-695708	1	/P	Gear-Pinion
789	BS-797460	1		Harness-Wiring
798	BS-697890	1		Screw (Rocker Arm)






LTX1046VT Tractor (2010 & After)
Engine B&S 44L777 & 44M777 2

Page 16 of 62

Ref #	Part Number	Qty	S/P/F	Description
801	BS-691283	1		Cap-Drive
802	BS-691286	1	/P	Cap-End
803	N/A	1		Housing-Starter (Service with Starter Motor BS-497595)
842	BS-691031	1	/P	Seal-O Ring (Dipstick Tube)
847	BS-499602	1		Dipstick/Tube Assembly
851	BS-493880S	1	/P	Terminal-Spark Plug
865	BS-792286	1		Cover-Air Guide (Valley)
868	BS-690968	1	/P	Seal-Valve
883	BS-690970	1	/P	Gasket-Exhaust
914	BS-691127	1	/P	Screw (Rocker Cover)
918	BS-797408	1		Hose-Vacuum
929	BS-695239	1		Screw (Choke Control Bracket)
943	BS-796222	1		Seal-O Ring (Oil Pump Cover)
947	BS-841546	1		Solenoid-Fuel
965	BS-796221	1		Cover-Oil Pump
967	BS-792303	1	/P	Filter-Pre Cleaner
968	BS-795120	1	/P	Cover-Air Cleaner
975	BS-793592	1		Bowl-Float
987	BS-691000	1		Seal-Throttle Shaft
1005	BS-791236	1		Fan-Flywheel
1013	BS-690954	1	/P	Nipple-Oil Filter
1017	BS-796214	1		Screen-Oil Pump
1022	BS-690971	1	/P	Gasket-Rocker Cover
1023	BS-793146	1		Cover-Rocker (Cylinder #1)
1023A	BS-499600	1		Cover-Rocker (Cylinder #2)
1024	BS-796220	1		Pump-Oil
1026	BS-690981	1	/P	Rod-Push (Exhaust)
1026A	BS-690982	1	/P	Rod-Push (Intake)
1027	BS-696854	1	/P	Filter-Oil
1029	BS-690972	1		Arm-Rocker
1036		1		Label-Emissions (Available from a Briggs & Stratton)
1040	BS-791237	1		Plate-Trim
1051	BS-691265	1	/P	Ring-Retaining (Starter Drive)
1054	BS-280275	1		Tie-Cable
1059	BS-698516	1		Kit-Screw/Washer (Alternator)
1070	BS-791680	1	/P	Screw (Flywheel Fan)
1090	BS-691293	1	/P	Retainer-Brush
1095	BS-694013	1	/P	Gasket Set-Valve (Incl. Ref No. 7,883)
1100	BS-791959	1		Pivot-Rocker Arm
1119	BS-93621	1	/P	Screw (Alternator)
1124	BS-841653	1		Seal-O Ring(Fuel Transfer Tube)
1124A	BS-690988	1		Seal-O Ring(Fuel Transfer Tube)
1126	BS-690991	1		Screw (Fuel Transfer Tube)
1127	BS-695407	1		Screw (Fuel Bowl)
1128	BS-690990	1		Screw (Carburetor Nozzle)
1169	BS-690990	1		Screw (Carburetor Plate)
1329	BS-44L777-0137	1		Replacement Engine (44L777)
1329	BS-44Q777-0137	1	/P	Replacement Engine (44M777)

LTX1046VT Tractor (2010 & After)
Engine B&S 44L777 & 44M777 3

     Page 17 of 62

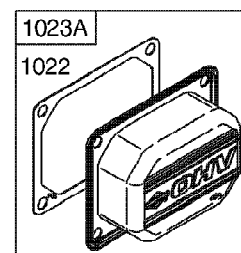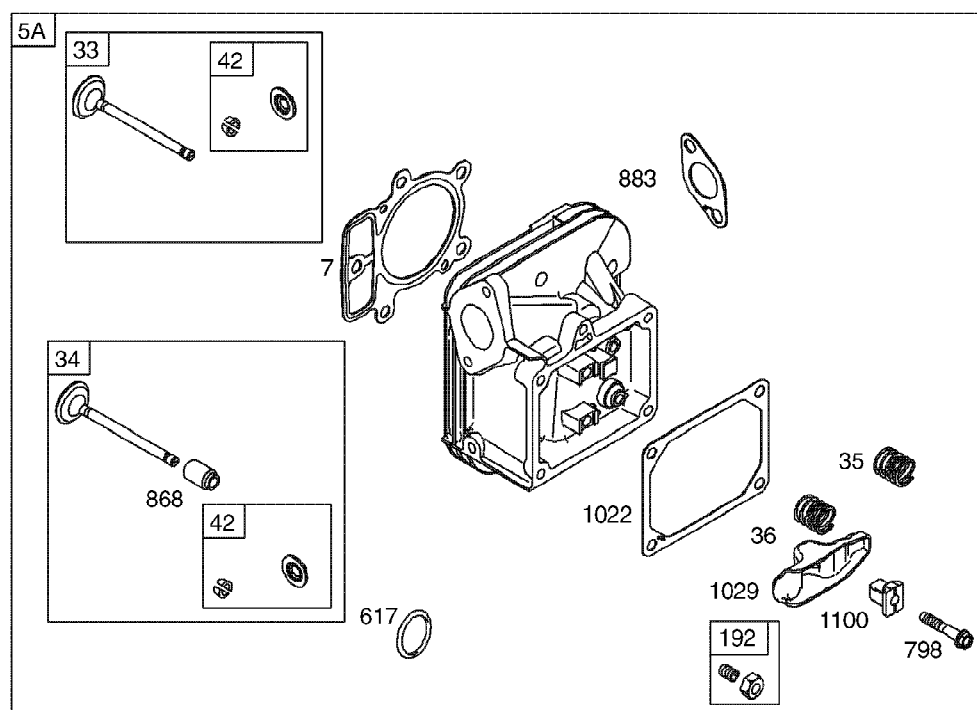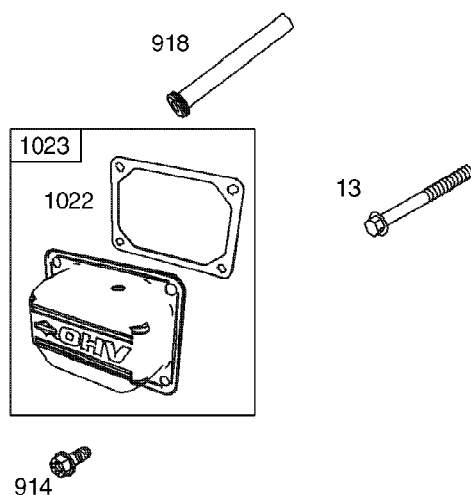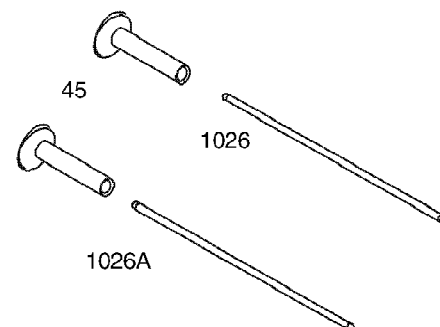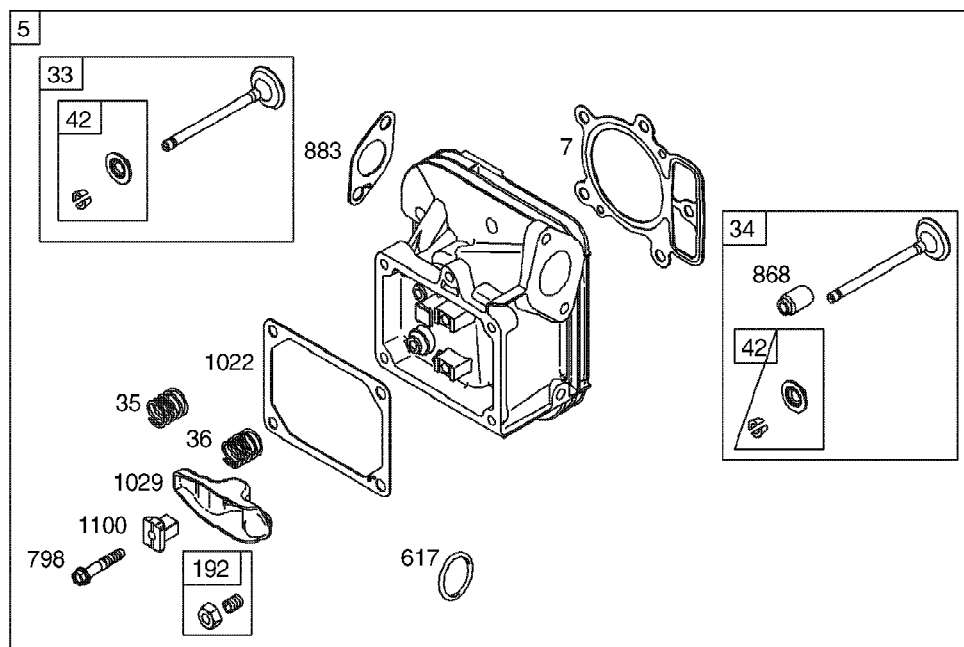

914

LTX1046VT Tractor (2010 & After)
Engine B&S 44L777 & 44M777 3

Page 18 of 62

Ref #	Part Number	Qty	S/P/F	Description
1	BS-793564	1		Cylinder Assembly
2	BS-499585	1		Kit-Bushing/Seal (Magneto Side)
3	BS-391086S	1	/P	Seal-Oil (Magneto Side)
4	BS-796307	1	/P	Sump-Engine
5	BS-796231	1	/P	Head-Cylinder (Cylinder #1)
5A	BS-796232	1	/P	Head-Cylinder (Cylinder #2)
7	BS-693997	1	/P	Gasket-Cylinder Head
8	BS-792185	1	/P	Breather Assembly
9	BS-690937	1		Gasket-Breather
10	BS-697551	1		Screw (Breather Assembly)
11	BS-792184	1	/P	Tube-Breather
12	BS-697227	1	/P	Gasket-Crankcase
13	BS-793988	1		Screw (Cylinder Head)
15	BS-690946	1	/P	Plug-Oil Drain
16	BS-796540	1		Crankshaft
20	BS-795387	1	/P	Seal-Oil (PTO Side)
22	BS-694966	1	/P	Screw (Crankcase Cover/ Sump)
23	BS-691053	1		Flywheel
24	BS-222698S	1	/P	Key-Flywheel
25	BS-792023	1	/P	Piston Assembly (Standard)
25	BS-792072	1		Piston Assembly (020" Oversize)
26	BS-793561	1		Ring Set (Standard)
26	BS-792073	1		Ring Set (.020" Oversize)
27	BS-690975	1		Lock-Piston Pin
28	BS-696581	1		Pin-Piston
29	BS-796209	1	/P	Rod-Connecting
32	BS-690976	1		Screw (Connecting Rod)
33	BS-697576	1		Valve-Exhaust
34	BS-792200	1	/P	Valve-Intake
35	BS-694865	1		Spring-Valve (Intake)
36	BS-694865	1		Spring-Valve (Exhaust)
42	BS-499586	1	/P	Keeper-Valve
45	BS-690977	1	/P	Tappet-Valve
46	BS-796853	1		Gear-Cam (44L777)
46	BS-797242	1		Gear-Cam (44M777)
48	BS-797093	1		Short Block
50	BS-695241	1	/P	Manifold-Intake
51	BS-795123	1		Gasket-Intake
51A	BS-690950	1		Gasket-Intake
51B	BS-690949	1		Gasket-Intake
53	BS-690951	1		Stud (Carburetor)
54	BS-699816	1		Screw (Intake Manifold)
73	BS-494439	1	/P	Screen-Rotating
74	BS-698425	1		Screw (Rotating Screen)
75	BS-691056	1		Washer (Flywheel)
95	BS-690718	1		Screw (Throttle Valve)
98	BS-699721	1		Kit-Idle Speed
104	BS-694918	1		Pin-Float Hinge
105	BS-698537	1		Valve-Float Needle
108	BS-699723	1		Valve-Choke
117	BS-842630	1		Jet-Main (Standard)
118	BS-797477	1		Jet-Main (High Altitude)

LTX1046VT Tractor (2010 & After)
Engine B&S 44L777 & 44M777 3

Page 19 of 62

Ref #	Part Number	Qty	S/P/F	Description
121	BS-792455	1	S	Kit-Carburetor Overhaul (Incl. Ref No. 104,137,163,276,633)
125	BS-796997	1		Carburetor
130	BS-690993	1		Valve-Throttle
131	BS-499805	1		Kit-Throttle Shaft
133	BS-699724	1		Float-Carburetor
135	BS-699729	1		Tube-Fuel Transfer
137	BS-690994	1		Gasket-Float Bowl
141	BS-796228	1		Kit-Choke Shaft
142	BS-699726	1		Nozzle-Carburetor
146	BS-690979	1	/P	Key-Timing
150	BS-690995	1		Gasket-Nozzle
163	BS-691001	1		Gasket-Air Cleaner
165	BS-693148	1		Nut (Ring Gear)
186	BS-795985	1		Connector-Hose
187	751-10349-16	1	/P	Line-Fuel Cut as required
188	BS-697551	1		Screw (Control Bracket)
192	BS-690083	1		Adjuster-Rocker Arm
197	BS-697820	1		Screw (Back Plate)
209	BS-796658	1		Spring-Governor (Yellow/Brown)
211	BS-796225	1		Spring-Governed Idle (Orange)
212	BS-695238	1		Link-Throttle
216	BS-796229	1		Link-Choke
217	BS-695409	1		Spring-Choke Return
219	BS-793338	1	/P	Gear-Governor
220	BS-690412	1	/P	Washer (Governor Gear)
221	BS-841026	1		Cup-Governor
222	BS-796226	1		Bracket-Control
227	BS-796223	1		Lever-Governor Control
231	BS-690718	1		Screw (Choke Valve)
239	BS-792028	1		Switch-Oil Pressure
240	BS-691035	1	/P	Filter-Fuel
250	BS-690957	1		Retainer-Breather
252	BS-794389	1		Collector-Oil
265	BS-691024	1	/P	Clamp-Casing
267	BS-695134	1		Screw (Casing Clamp)
276	BS-695410	1		Washer-Sealing
278	BS-792651	1		Washer (Governor Control Lever)
287	BS-697551	1		Screw (Dipstick Tube)
304	BS-797407	1	/P	Housing-Blower
305	BS-691005	1		Screw (Blower Housing)
305A	BS-790690	1		Screw (Blower Housing to Intake Elbow)
306	BS-796541	1		Shield-Cylinder (Cylinder #2)
306A	BS-796852	1		Shield-Cylinder (Cylinder #1)
307	BS-697551	1		Screw (Cylinder Shield)
309	BS-497595	1	/P	Motor-Starter
310	BS-690323	1		Screw (Starter Motor)
332	BS-691059	1		Nut (Flywheel)
333	BS-691060	1	/P	Armature-Magneto
334	BS-691061	1		Screw (Magneto Armature)
337	759-3336	1	/P	Plug-Spark

LTX1046VT Tractor (2010 & After)
Engine B&S 44L777 & 44M777 3

Page 20 of 62

Ref #	Part Number	Qty	S/P/F	Description
358	BS-694012	1	/P	Gasket Set-Engine (Incl. Ref No. 3.7,9,12,20,51,163,524,668,691868,883)
385	BS-797409	1		Screw (Fuel Pump)
387	BS-808656	1	/P	Pump-Fuel
404	BS-690442	1		Washer (Governor Crank)
415	BS-794903	1		Plug (Oil Pressure Switch Hole)
418	BS-795912	1		Plate-Carburetor
431	BS-792297	1		Elbow-Intake
445	BS-792105	1	/P	Filter-Air Cleaner Cartridge
447	BS-691003	1	/P	Screw (Air Guide Cover)
467	BS-790697	1		Knob-Air Cleaner
474	BS-696457	1	/P	Alternator
501	BS-794360	1	/P	Regulator
503	BS-691532	1	/P	Strap-Starter
505	BS-691029	1		Nut (Governor Control Lever)
510	BS-696541	1	/P	Drive-Starter
513	BS-692024	1	/P	Clutch-Drive
523	BS-691036	1		Dipstick
524	BS-691032	1		Seal-Dipstick Tube
525	BS-691037	1		Tube-Dipstick
526	BS-691129	1	/P	Screw (Regulator)
544	N/A	1		Armature-Starter (Service with Starter Motor BS-497595)
552	BS-796638	1		Bushing-Governor Crank
552A	BS-690553	1		Bushing-Governor Crank
562	BS-690311	1		Screw (Governor Control Lever)
573	BS-790444	1		Plate-Back
579	BS-691029	1		Nut (Starter Cable)
601	BS-691038	1		Clamp-Hose (Black)
615	BS-698290	1	/P	Retainer-Governor Shaft
616	BS-691045	1		Crank-Governor
617	BS-697891	1		Seal-O Ring (Intake Manifold) (Red)
633	BS-699813	1		Seal-Choke/Throttle Shaft
634	BS-698779	1		Spring/Seal Assembly
635	BS-66538s	1	/P	Boot-Spark Plug
654	BS-690958	1	/P	Nut (Carburetor)
668	BS-691215	1		Spacer (Rotating Screen)
668A	BS-691500	1	/P	Spacer (Rotating Screen)
672	BS-690234	1		Gasket-Carburetor Plate
691	BS-790574	1		Seal-Governor Shaft
695	BS-693149	1		Screw (Ring Gear)
697	BS-791680	1	/P	Screw (Drive Cap)
703	BS-691010	1		Clip
718	BS-690959	1	/P	Pin-Locating
726	BS-499612	1		Gear-Ring
729	BS-694123	1		Clip-Wire
741	BS-690980	1		Gear-Timing
742	BS-690328	1	/P	Retainer-E Ring (Governor Crank)
750	BS-796208	1		Screw (Oil Pump Cover)
783	BS-695708	1	/P	Gear-Pinion
789	BS-797460	1		Harness-Wiring
798	BS-697890	1		Screw (Rocker Arm)


LTX1046VT Tractor (2010 & After)
Engine B&S 44L777 & 44M777 3

Page 21 of 62

Ref #	Part Number	Qty	S/P/F	Description
801	BS-691283	1		Cap-Drive
802	BS-691286	1	/P	Cap-End
803	N/A	1		Housing-Starter (Service with Starter Motor BS-497595)
842	BS-691031	1	/P	Seal-O Ring (Dipstick Tube)
847	BS-499602	1		Dipstick/Tube Assembly
851	BS-493880S	1	/P	Terminal-Spark Plug
865	BS-792286	1		Cover-Air Guide (Valley)
868	BS-690968	1	/P	Seal-Valve
883	BS-690970	1	/P	Gasket-Exhaust
914	BS-691127	1	/P	Screw (Rocker Cover)
918	BS-797408	1		Hose-Vacuum
929	BS-695239	1		Screw (Choke Control Bracket)
943	BS-796222	1		Seal-O Ring (Oil Pump Cover)
947	BS-841546	1		Solenoid-Fuel
965	BS-796221	1		Cover-Oil Pump
967	BS-792303	1	/P	Filter-Pre Cleaner
968	BS-795120	1	/P	Cover-Air Cleaner
975	BS-793592	1		Bowl-Float
987	BS-691000	1		Seal-Throttle Shaft
1005	BS-791236	1		Fan-Flywheel
1013	BS-690954	1	/P	Nipple-Oil Filter
1017	BS-796214	1		Screen-Oil Pump
1022	BS-690971	1	/P	Gasket-Rocker Cover
1023	BS-793146	1		Cover-Rocker (Cylinder #1)
1023A	BS-499600	1		Cover-Rocker (Cylinder #2)
1024	BS-796220	1		Pump-Oil
1026	BS-690981	1	/P	Rod-Push (Exhaust)
1026A	BS-690982	1	/P	Rod-Push (Intake)
1027	BS-696854	1	/P	Filter-Oil
1029	BS-690972	1		Arm-Rocker
1036		1		Label-Emissions (Available from a Briggs & Stratton)
1040	BS-791237	1		Plate-Trim
1051	BS-691265	1	/P	Ring-Retaining (Starter Drive)
1054	BS-280275	1		Tie-Cable
1059	BS-698516	1		Kit-Screw/Washer (Alternator)
1070	BS-791680	1	/P	Screw (Flywheel Fan)
1090	BS-691293	1	/P	Retainer-Brush
1095	BS-694013	1	/P	Gasket Set-Valve (Incl. Ref No. 7,883)
1100	BS-791959	1		Pivot-Rocker Arm
1119	BS-93621	1	/P	Screw (Alternator)
1124	BS-841653	1		Seal-O Ring(Fuel Transfer Tube)
1124A	BS-690988	1		Seal-O Ring(Fuel Transfer Tube)
1126	BS-690991	1		Screw (Fuel Transfer Tube)
1127	BS-695407	1		Screw (Fuel Bowl)
1128	BS-690990	1		Screw (Carburetor Nozzle)
1169	BS-690990	1		Screw (Carburetor Plate)
1329	BS-44L777-0137	1		Replacement Engine (44L777)
1329	BS-44Q777-0137	1	/P	Replacement Engine (44M777)

LTX1046VT Tractor (2010 & After)
Engine B&S 44L777 & 44M777 4

 Page 22 of 62

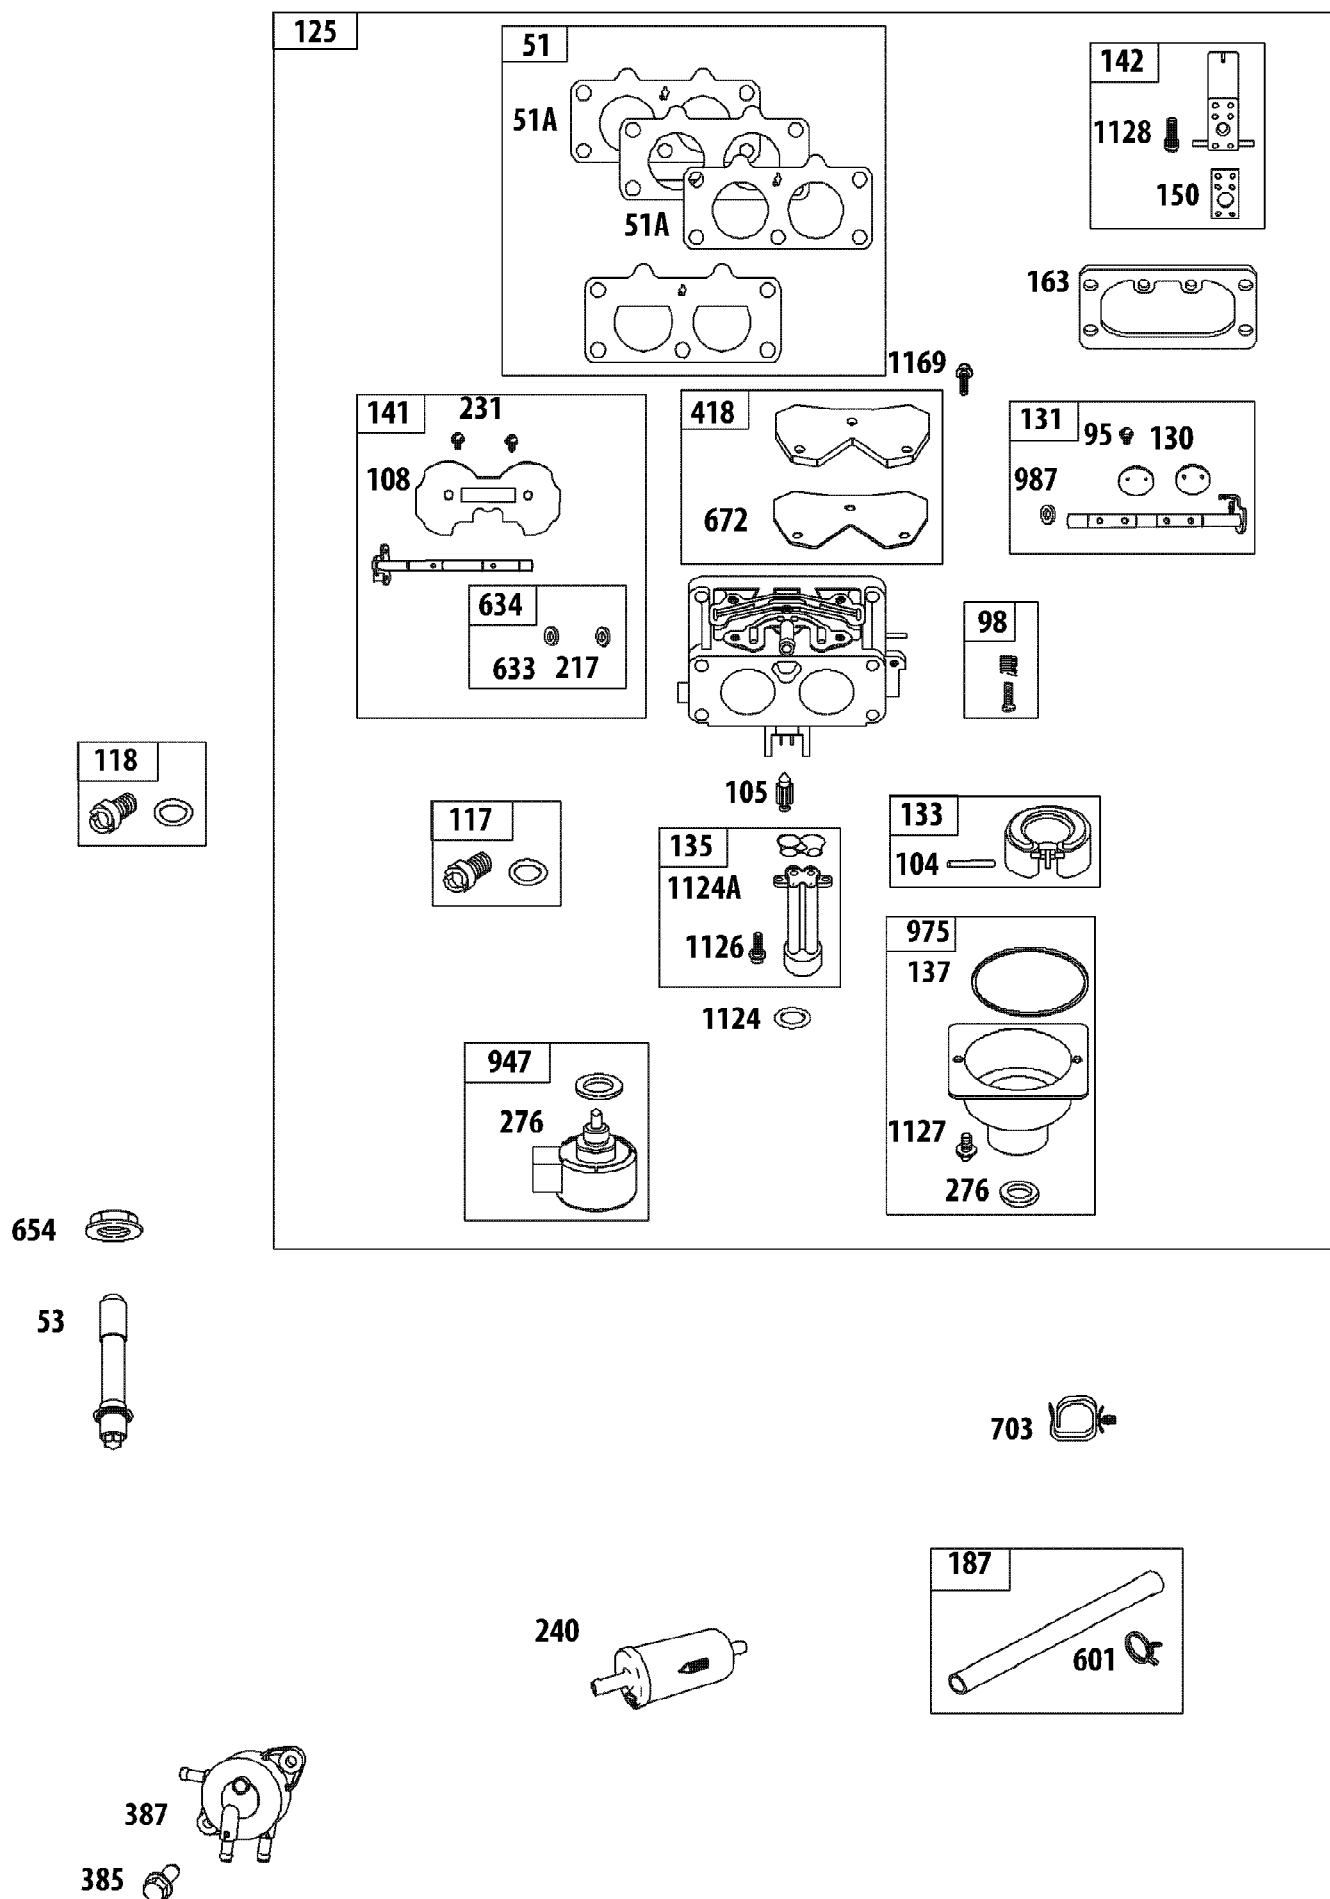

LTX1046VT Tractor (2010 & After)
Engine B&S 44L777 & 44M777 4

Page 23 of 62

Ref #	Part Number	Qty	S/P/F	Description
1	BS-793564	1		Cylinder Assembly
2	BS-499585	1		Kit-Bushing/Seal (Magneto Side)
3	BS-391086S	1	/P	Seal-Oil (Magneto Side)
4	BS-796307	1	/P	Sump-Engine
5	BS-796231	1	/P	Head-Cylinder (Cylinder #1)
5A	BS-796232	1	/P	Head-Cylinder (Cylinder #2)
7	BS-693997	1	/P	Gasket-Cylinder Head
8	BS-792185	1	/P	Breather Assembly
9	BS-690937	1		Gasket-Breather
10	BS-697551	1		Screw (Breather Assembly)
11	BS-792184	1	/P	Tube-Breather
12	BS-697227	1	/P	Gasket-Crankcase
13	BS-793988	1		Screw (Cylinder Head)
15	BS-690946	1	/P	Plug-Oil Drain
16	BS-796540	1		Crankshaft
20	BS-795387	1	/P	Seal-Oil (PTO Side)
22	BS-694966	1	/P	Screw (Crankcase Cover/ Sump)
23	BS-691053	1		Flywheel
24	BS-222698S	1	/P	Key-Flywheel
25	BS-792023	1	/P	Piston Assembly (Standard)
25	BS-792072	1		Piston Assembly (020" Oversize)
26	BS-793561	1		Ring Set (Standard)
26	BS-792073	1		Ring Set (.020" Oversize)
27	BS-690975	1		Lock-Piston Pin
28	BS-696581	1		Pin-Piston
29	BS-796209	1	/P	Rod-Connecting
32	BS-690976	1		Screw (Connecting Rod)
33	BS-697576	1		Valve-Exhaust
34	BS-792200	1	/P	Valve-Intake
35	BS-694865	1		Spring-Valve (Intake)
36	BS-694865	1		Spring-Valve (Exhaust)
42	BS-499586	1	/P	Keeper-Valve
45	BS-690977	1	/P	Tappet-Valve
46	BS-796853	1		Gear-Cam (44L777)
46	BS-797242	1		Gear-Cam (44M777)
48	BS-797093	1		Short Block
50	BS-695241	1	/P	Manifold-Intake
51	BS-795123	1		Gasket-Intake
51A	BS-690950	1		Gasket-Intake
51B	BS-690949	1		Gasket-Intake
53	BS-690951	1		Stud (Carburetor)
54	BS-699816	1		Screw (Intake Manifold)
73	BS-494439	1	/P	Screen-Rotating
74	BS-698425	1		Screw (Rotating Screen)
75	BS-691056	1		Washer (Flywheel)
95	BS-690718	1		Screw (Throttle Valve)
98	BS-699721	1		Kit-Idle Speed
104	BS-694918	1		Pin-Float Hinge
105	BS-698537	1		Valve-Float Needle
108	BS-699723	1		Valve-Choke
117	BS-842630	1		Jet-Main (Standard)
118	BS-797477	1		Jet-Main (High Altitude)

LTX1046VT Tractor (2010 & After)
Engine B&S 44L777 & 44M777 4

Page 24 of 62

Ref #	Part Number	Qty	S/P/F	Description
121	BS-792455	1	S	Kit-Carburetor Overhaul (Incl. Ref No. 104,137,163,276,633)
125	BS-796997	1		Carburetor
130	BS-690993	1		Valve-Throttle
131	BS-499805	1		Kit-Throttle Shaft
133	BS-699724	1		Float-Carburetor
135	BS-699729	1		Tube-Fuel Transfer
137	BS-690994	1		Gasket-Float Bowl
141	BS-796228	1		Kit-Choke Shaft
142	BS-699726	1		Nozzle-Carburetor
146	BS-690979	1	/P	Key-Timing
150	BS-690995	1		Gasket-Nozzle
163	BS-691001	1		Gasket-Air Cleaner
165	BS-693148	1		Nut (Ring Gear)
186	BS-795985	1		Connector-Hose
187	751-10349-16	1	/P	Line-Fuel Cut as required
188	BS-697551	1		Screw (Control Bracket)
192	BS-690083	1		Adjuster-Rocker Arm
197	BS-697820	1		Screw (Back Plate)
209	BS-796658	1		Spring-Governor (Yellow/Brown)
211	BS-796225	1		Spring-Governed Idle (Orange)
212	BS-695238	1		Link-Throttle
216	BS-796229	1		Link-Choke
217	BS-695409	1		Spring-Choke Return
219	BS-793338	1	/P	Gear-Governor
220	BS-690412	1	/P	Washer (Governor Gear)
221	BS-841026	1		Cup-Governor
222	BS-796226	1		Bracket-Control
227	BS-796223	1		Lever-Governor Control
231	BS-690718	1		Screw (Choke Valve)
239	BS-792028	1		Switch-Oil Pressure
240	BS-691035	1	/P	Filter-Fuel
250	BS-690957	1		Retainer-Breather
252	BS-794389	1		Collector-Oil
265	BS-691024	1	/P	Clamp-Casing
267	BS-695134	1		Screw (Casing Clamp)
276	BS-695410	1		Washer-Sealing
278	BS-792651	1		Washer (Governor Control Lever)
287	BS-697551	1		Screw (Dipstick Tube)
304	BS-797407	1	/P	Housing-Blower
305	BS-691005	1		Screw (Blower Housing)
305A	BS-790690	1		Screw (Blower Housing to Intake Elbow)
306	BS-796541	1		Shield-Cylinder (Cylinder #2)
306A	BS-796852	1		Shield-Cylinder (Cylinder #1)
307	BS-697551	1		Screw (Cylinder Shield)
309	BS-497595	1	/P	Motor-Starter
310	BS-690323	1		Screw (Starter Motor)
332	BS-691059	1		Nut (Flywheel)
333	BS-691060	1	/P	Armature-Magneto
334	BS-691061	1		Screw (Magneto Armature)
337	759-3336	1	/P	Plug-Spark

LTX1046VT Tractor (2010 & After)
Engine B&S 44L777 & 44M777 4

Page 25 of 62

Ref #	Part Number	Qty	S/P/F	Description
358	BS-694012	1	/P	Gasket Set-Engine (Incl. Ref No. 3.7,9,12,20,51,163,524,668,691868,883)
385	BS-797409	1		Screw (Fuel Pump)
387	BS-808656	1	/P	Pump-Fuel
404	BS-690442	1		Washer (Governor Crank)
415	BS-794903	1		Plug (Oil Pressure Switch Hole)
418	BS-795912	1		Plate-Carburetor
431	BS-792297	1		Elbow-Intake
445	BS-792105	1	/P	Filter-Air Cleaner Cartridge
447	BS-691003	1	/P	Screw (Air Guide Cover)
467	BS-790697	1		Knob-Air Cleaner
474	BS-696457	1	/P	Alternator
501	BS-794360	1	/P	Regulator
503	BS-691532	1	/P	Strap-Starter
505	BS-691029	1		Nut (Governor Control Lever)
510	BS-696541	1	/P	Drive-Starter
513	BS-692024	1	/P	Clutch-Drive
523	BS-691036	1		Dipstick
524	BS-691032	1		Seal-Dipstick Tube
525	BS-691037	1		Tube-Dipstick
526	BS-691129	1	/P	Screw (Regulator)
544	N/A	1		Armature-Starter (Service with Starter Motor BS-497595)
552	BS-796638	1		Bushing-Governor Crank
552A	BS-690553	1		Bushing-Governor Crank
562	BS-690311	1		Screw (Governor Control Lever)
573	BS-790444	1		Plate-Back
579	BS-691029	1		Nut (Starter Cable)
601	BS-691038	1		Clamp-Hose (Black)
615	BS-698290	1	/P	Retainer-Governor Shaft
616	BS-691045	1		Crank-Governor
617	BS-697891	1		Seal-O Ring (Intake Manifold) (Red)
633	BS-699813	1		Seal-Choke/Throttle Shaft
634	BS-698779	1		Spring/Seal Assembly
635	BS-66538s	1	/P	Boot-Spark Plug
654	BS-690958	1	/P	Nut (Carburetor)
668	BS-691215	1		Spacer (Rotating Screen)
668A	BS-691500	1	/P	Spacer (Rotating Screen)
672	BS-690234	1		Gasket-Carburetor Plate
691	BS-790574	1		Seal-Governor Shaft
695	BS-693149	1		Screw (Ring Gear)
697	BS-791680	1	/P	Screw (Drive Cap)
703	BS-691010	1		Clip
718	BS-690959	1	/P	Pin-Locating
726	BS-499612	1		Gear-Ring
729	BS-694123	1		Clip-Wire
741	BS-690980	1		Gear-Timing
742	BS-690328	1	/P	Retainer-E Ring (Governor Crank)
750	BS-796208	1		Screw (Oil Pump Cover)
783	BS-695708	1	/P	Gear-Pinion
789	BS-797460	1		Harness-Wiring
798	BS-697890	1		Screw (Rocker Arm)


LTX1046VT Tractor (2010 & After)
Engine B&S 44L777 & 44M777 4

Page 26 of 62







Ref #	Part Number	Qty	S/P/F	Description
801	BS-691283	1		Cap-Drive
802	BS-691286	1	/P	Cap-End
803	N/A	1		Housing-Starter (Service with Starter Motor BS-497595)
842	BS-691031	1	/P	Seal-O Ring (Dipstick Tube)
847	BS-499602	1		Dipstick/Tube Assembly
851	BS-493880S	1	/P	Terminal-Spark Plug
865	BS-792286	1		Cover-Air Guide (Valley)
868	BS-690968	1	/P	Seal-Valve
883	BS-690970	1	/P	Gasket-Exhaust
914	BS-691127	1	/P	Screw (Rocker Cover)
918	BS-797408	1		Hose-Vacuum
929	BS-695239	1		Screw (Choke Control Bracket)
943	BS-796222	1		Seal-O Ring (Oil Pump Cover)
947	BS-841546	1		Solenoid-Fuel
965	BS-796221	1		Cover-Oil Pump
967	BS-792303	1	/P	Filter-Pre Cleaner
968	BS-795120	1	/P	Cover-Air Cleaner
975	BS-793592	1		Bowl-Float
987	BS-691000	1		Seal-Throttle Shaft
1005	BS-791236	1		Fan-Flywheel
1013	BS-690954	1	/P	Nipple-Oil Filter
1017	BS-796214	1		Screen-Oil Pump
1022	BS-690971	1	/P	Gasket-Rocker Cover
1023	BS-793146	1		Cover-Rocker (Cylinder #1)
1023A	BS-499600	1		Cover-Rocker (Cylinder #2)
1024	BS-796220	1		Pump-Oil
1026	BS-690981	1	/P	Rod-Push (Exhaust)
1026A	BS-690982	1	/P	Rod-Push (Intake)
1027	BS-696854	1	/P	Filter-Oil
1029	BS-690972	1		Arm-Rocker
1036		1		Label-Emissions (Available from a Briggs & Stratton)
1040	BS-791237	1		Plate-Trim
1051	BS-691265	1	/P	Ring-Retaining (Starter Drive)
1054	BS-280275	1		Tie-Cable
1059	BS-698516	1		Kit-Screw/Washer (Alternator)
1070	BS-791680	1	/P	Screw (Flywheel Fan)
1090	BS-691293	1	/P	Retainer-Brush
1095	BS-694013	1	/P	Gasket Set-Valve (Incl. Ref No. 7,883)
1100	BS-791959	1		Pivot-Rocker Arm
1119	BS-93621	1	/P	Screw (Alternator)
1124	BS-841653	1		Seal-O Ring(Fuel Transfer Tube)
1124A	BS-690988	1		Seal-O Ring(Fuel Transfer Tube)
1126	BS-690991	1		Screw (Fuel Transfer Tube)
1127	BS-695407	1		Screw (Fuel Bowl)
1128	BS-690990	1		Screw (Carburetor Nozzle)
1169	BS-690990	1		Screw (Carburetor Plate)
1329	BS-44L777-0137	1		Replacement Engine (44L777)
1329	BS-44Q777-0137	1	/P	Replacement Engine (44M777)

LTX1046VT Tractor (2010 & After)
Engine B&S 44L777 & 44M777 5

 Page 27 of 62

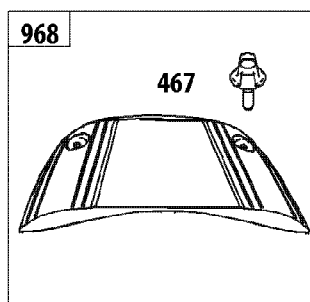

1036 Emissions Label

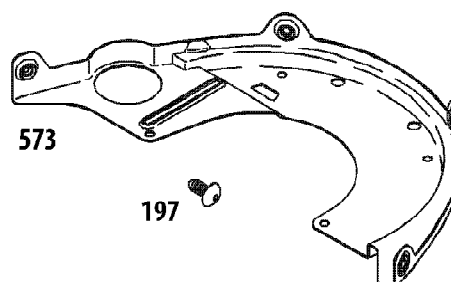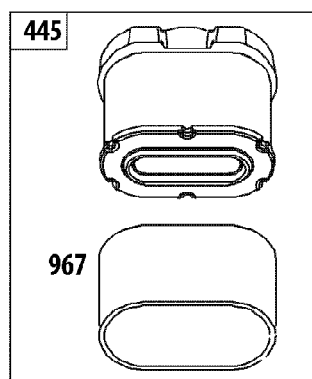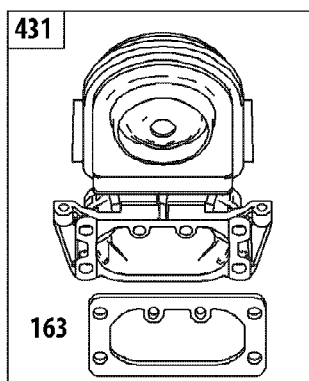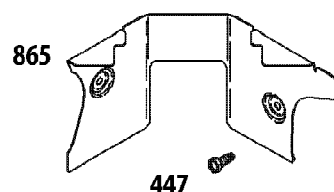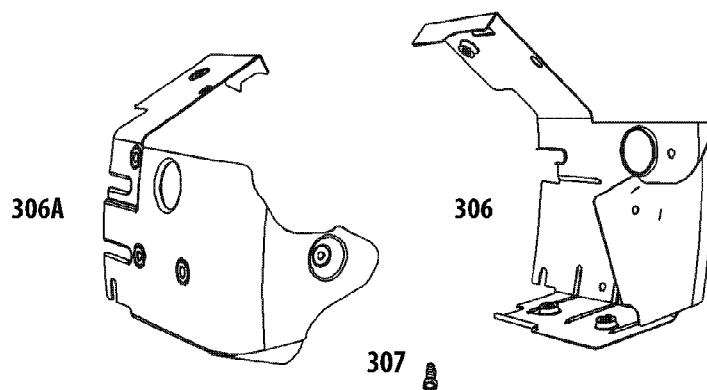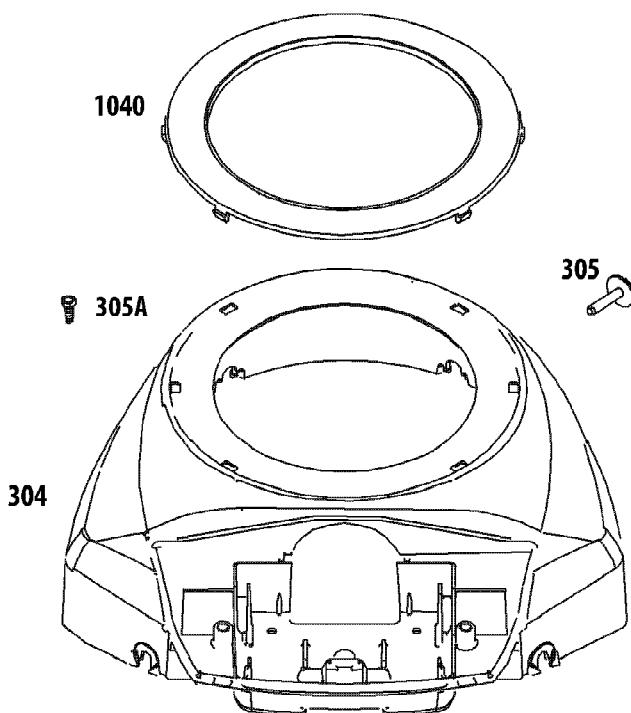      

LTX1046VT Tractor (2010 & After)
Engine B&S 44L777 & 44M777 5

Page 28 of 62

Ref #	Part Number	Qty	S/P/F	Description
1	BS-793564	1		Cylinder Assembly
2	BS-499585	1		Kit-Bushing/Seal (Magneto Side)
3	BS-391086S	1	/P	Seal-Oil (Magneto Side)
4	BS-796307	1	/P	Sump-Engine
5	BS-796231	1	/P	Head-Cylinder (Cylinder #1)
5A	BS-796232	1	/P	Head-Cylinder (Cylinder #2)
7	BS-693997	1	/P	Gasket-Cylinder Head
8	BS-792185	1	/P	Breather Assembly
9	BS-690937	1		Gasket-Breather
10	BS-697551	1		Screw (Breather Assembly)
11	BS-792184	1	/P	Tube-Breather
12	BS-697227	1	/P	Gasket-Crankcase
13	BS-793988	1		Screw (Cylinder Head)
15	BS-690946	1	/P	Plug-Oil Drain
16	BS-796540	1		Crankshaft
20	BS-795387	1	/P	Seal-Oil (PTO Side)
22	BS-694966	1	/P	Screw (Crankcase Cover/ Sump)
23	BS-691053	1		Flywheel
24	BS-222698S	1	/P	Key-Flywheel
25	BS-792023	1	/P	Piston Assembly (Standard)
25	BS-792072	1		Piston Assembly (020" Oversize)
26	BS-793561	1		Ring Set (Standard)
26	BS-792073	1		Ring Set (.020" Oversize)
27	BS-690975	1		Lock-Piston Pin
28	BS-696581	1		Pin-Piston
29	BS-796209	1	/P	Rod-Connecting
32	BS-690976	1		Screw (Connecting Rod)
33	BS-697576	1		Valve-Exhaust
34	BS-792200	1	/P	Valve-Intake
35	BS-694865	1		Spring-Valve (Intake)
36	BS-694865	1		Spring-Valve (Exhaust)
42	BS-499586	1	/P	Keeper-Valve
45	BS-690977	1	/P	Tappet-Valve
46	BS-796853	1		Gear-Cam (44L777)
46	BS-797242	1		Gear-Cam (44M777)
48	BS-797093	1		Short Block
50	BS-695241	1	/P	Manifold-Intake
51	BS-795123	1		Gasket-Intake
51A	BS-690950	1		Gasket-Intake
51B	BS-690949	1		Gasket-Intake
53	BS-690951	1		Stud (Carburetor)
54	BS-699816	1		Screw (Intake Manifold)
73	BS-494439	1	/P	Screen-Rotating
74	BS-698425	1		Screw (Rotating Screen)
75	BS-691056	1		Washer (Flywheel)
95	BS-690718	1		Screw (Throttle Valve)
98	BS-699721	1		Kit-Idle Speed
104	BS-694918	1		Pin-Float Hinge
105	BS-698537	1		Valve-Float Needle
108	BS-699723	1		Valve-Choke
117	BS-842630	1		Jet-Main (Standard)
118	BS-797477	1		Jet-Main (High Altitude)

LTX1046VT Tractor (2010 & After)
Engine B&S 44L777 & 44M777 5

Page 29 of 62

Ref #	Part Number	Qty	S/P/F	Description
121	BS-792455	1	S	Kit-Carburetor Overhaul (Incl. Ref No. 104,137,163,276,633)
125	BS-796997	1		Carburetor
130	BS-690993	1		Valve-Throttle
131	BS-499805	1		Kit-Throttle Shaft
133	BS-699724	1		Float-Carburetor
135	BS-699729	1		Tube-Fuel Transfer
137	BS-690994	1		Gasket-Float Bowl
141	BS-796228	1		Kit-Choke Shaft
142	BS-699726	1		Nozzle-Carburetor
146	BS-690979	1	/P	Key-Timing
150	BS-690995	1		Gasket-Nozzle
163	BS-691001	1		Gasket-Air Cleaner
165	BS-693148	1		Nut (Ring Gear)
186	BS-795985	1		Connector-Hose
187	751-10349-16	1	/P	Line-Fuel Cut as required
188	BS-697551	1		Screw (Control Bracket)
192	BS-690083	1		Adjuster-Rocker Arm
197	BS-697820	1		Screw (Back Plate)
209	BS-796658	1		Spring-Governor (Yellow/Brown)
211	BS-796225	1		Spring-Governed Idle (Orange)
212	BS-695238	1		Link-Throttle
216	BS-796229	1		Link-Choke
217	BS-695409	1		Spring-Choke Return
219	BS-793338	1	/P	Gear-Governor
220	BS-690412	1	/P	Washer (Governor Gear)
221	BS-841026	1		Cup-Governor
222	BS-796226	1		Bracket-Control
227	BS-796223	1		Lever-Governor Control
231	BS-690718	1		Screw (Choke Valve)
239	BS-792028	1		Switch-Oil Pressure
240	BS-691035	1	/P	Filter-Fuel
250	BS-690957	1		Retainer-Breather
252	BS-794389	1		Collector-Oil
265	BS-691024	1	/P	Clamp-Casing
267	BS-695134	1		Screw (Casing Clamp)
276	BS-695410	1		Washer-Sealing
278	BS-792651	1		Washer (Governor Control Lever)
287	BS-697551	1		Screw (Dipstick Tube)
304	BS-797407	1	/P	Housing-Blower
305	BS-691005	1		Screw (Blower Housing)
305A	BS-790690	1		Screw (Blower Housing to Intake Elbow)
306	BS-796541	1		Shield-Cylinder (Cylinder #2)
306A	BS-796852	1		Shield-Cylinder (Cylinder #1)
307	BS-697551	1		Screw (Cylinder Shield)
309	BS-497595	1	/P	Motor-Starter
310	BS-690323	1		Screw (Starter Motor)
332	BS-691059	1		Nut (Flywheel)
333	BS-691060	1	/P	Armature-Magneto
334	BS-691061	1		Screw (Magneto Armature)
337	759-3336	1	/P	Plug-Spark

LTX1046VT Tractor (2010 & After)
Engine B&S 44L777 & 44M777 5

Page 30 of 62

Ref #	Part Number	Qty	S/P/F	Description
358	BS-694012	1	/P	Gasket Set-Engine (Incl. Ref No. 3.7,9,12,20,51,163,524,668,691868,883)
385	BS-797409	1		Screw (Fuel Pump)
387	BS-808656	1	/P	Pump-Fuel
404	BS-690442	1		Washer (Governor Crank)
415	BS-794903	1		Plug (Oil Pressure Switch Hole)
418	BS-795912	1		Plate-Carburetor
431	BS-792297	1		Elbow-Intake
445	BS-792105	1	/P	Filter-Air Cleaner Cartridge
447	BS-691003	1	/P	Screw (Air Guide Cover)
467	BS-790697	1		Knob-Air Cleaner
474	BS-696457	1	/P	Alternator
501	BS-794360	1	/P	Regulator
503	BS-691532	1	/P	Strap-Starter
505	BS-691029	1		Nut (Governor Control Lever)
510	BS-696541	1	/P	Drive-Starter
513	BS-692024	1	/P	Clutch-Drive
523	BS-691036	1		Dipstick
524	BS-691032	1		Seal-Dipstick Tube
525	BS-691037	1		Tube-Dipstick
526	BS-691129	1	/P	Screw (Regulator)
544	N/A	1		Armature-Starter (Service with Starter Motor BS-497595)
552	BS-796638	1		Bushing-Governor Crank
552A	BS-690553	1		Bushing-Governor Crank
562	BS-690311	1		Screw (Governor Control Lever)
573	BS-790444	1		Plate-Back
579	BS-691029	1		Nut (Starter Cable)
601	BS-691038	1		Clamp-Hose (Black)
615	BS-698290	1	/P	Retainer-Governor Shaft
616	BS-691045	1		Crank-Governor
617	BS-697891	1		Seal-O Ring (Intake Manifold) (Red)
633	BS-699813	1		Seal-Choke/Throttle Shaft
634	BS-698779	1		Spring/Seal Assembly
635	BS-66538s	1	/P	Boot-Spark Plug
654	BS-690958	1	/P	Nut (Carburetor)
668	BS-691215	1		Spacer (Rotating Screen)
668A	BS-691500	1	/P	Spacer (Rotating Screen)
672	BS-690234	1		Gasket-Carburetor Plate
691	BS-790574	1		Seal-Governor Shaft
695	BS-693149	1		Screw (Ring Gear)
697	BS-791680	1	/P	Screw (Drive Cap)
703	BS-691010	1		Clip
718	BS-690959	1	/P	Pin-Locating
726	BS-499612	1		Gear-Ring
729	BS-694123	1		Clip-Wire
741	BS-690980	1		Gear-Timing
742	BS-690328	1	/P	Retainer-E Ring (Governor Crank)
750	BS-796208	1		Screw (Oil Pump Cover)
783	BS-695708	1	/P	Gear-Pinion
789	BS-797460	1		Harness-Wiring
798	BS-697890	1		Screw (Rocker Arm)


LTX1046VT Tractor (2010 & After)
Engine B&S 44L777 & 44M777 5

Page 31 of 62

Ref #	Part Number	Qty	S/P/F	Description
801	BS-691283	1		Cap-Drive
802	BS-691286	1	/P	Cap-End
803	N/A	1		Housing-Starter (Service with Starter Motor BS-497595)
842	BS-691031	1	/P	Seal-O Ring (Dipstick Tube)
847	BS-499602	1		Dipstick/Tube Assembly
851	BS-493880S	1	/P	Terminal-Spark Plug
865	BS-792286	1		Cover-Air Guide (Valley)
868	BS-690968	1	/P	Seal-Valve
883	BS-690970	1	/P	Gasket-Exhaust
914	BS-691127	1	/P	Screw (Rocker Cover)
918	BS-797408	1		Hose-Vacuum
929	BS-695239	1		Screw (Choke Control Bracket)
943	BS-796222	1		Seal-O Ring (Oil Pump Cover)
947	BS-841546	1		Solenoid-Fuel
965	BS-796221	1		Cover-Oil Pump
967	BS-792303	1	/P	Filter-Pre Cleaner
968	BS-795120	1	/P	Cover-Air Cleaner
975	BS-793592	1		Bowl-Float
987	BS-691000	1		Seal-Throttle Shaft
1005	BS-791236	1		Fan-Flywheel
1013	BS-690954	1	/P	Nipple-Oil Filter
1017	BS-796214	1		Screen-Oil Pump
1022	BS-690971	1	/P	Gasket-Rocker Cover
1023	BS-793146	1		Cover-Rocker (Cylinder #1)
1023A	BS-499600	1		Cover-Rocker (Cylinder #2)
1024	BS-796220	1		Pump-Oil
1026	BS-690981	1	/P	Rod-Push (Exhaust)
1026A	BS-690982	1	/P	Rod-Push (Intake)
1027	BS-696854	1	/P	Filter-Oil
1029	BS-690972	1		Arm-Rocker
1036		1		Label-Emissions (Available from a Briggs & Stratton)
1040	BS-791237	1		Plate-Trim
1051	BS-691265	1	/P	Ring-Retaining (Starter Drive)
1054	BS-280275	1		Tie-Cable
1059	BS-698516	1		Kit-Screw/Washer (Alternator)
1070	BS-791680	1	/P	Screw (Flywheel Fan)
1090	BS-691293	1	/P	Retainer-Brush
1095	BS-694013	1	/P	Gasket Set-Valve (Incl. Ref No. 7,883)
1100	BS-791959	1		Pivot-Rocker Arm
1119	BS-93621	1	/P	Screw (Alternator)
1124	BS-841653	1		Seal-O Ring(Fuel Transfer Tube)
1124A	BS-690988	1		Seal-O Ring(Fuel Transfer Tube)
1126	BS-690991	1		Screw (Fuel Transfer Tube)
1127	BS-695407	1		Screw (Fuel Bowl)
1128	BS-690990	1		Screw (Carburetor Nozzle)
1169	BS-690990	1		Screw (Carburetor Plate)
1329	BS-44L777-0137	1		Replacement Engine (44L777)
1329	BS-44Q777-0137	1	/P	Replacement Engine (44M777)

LTX1046VT Tractor (2010 & After)
Engine B&S 44L777 & 44M777 6

 Page 32 of 62

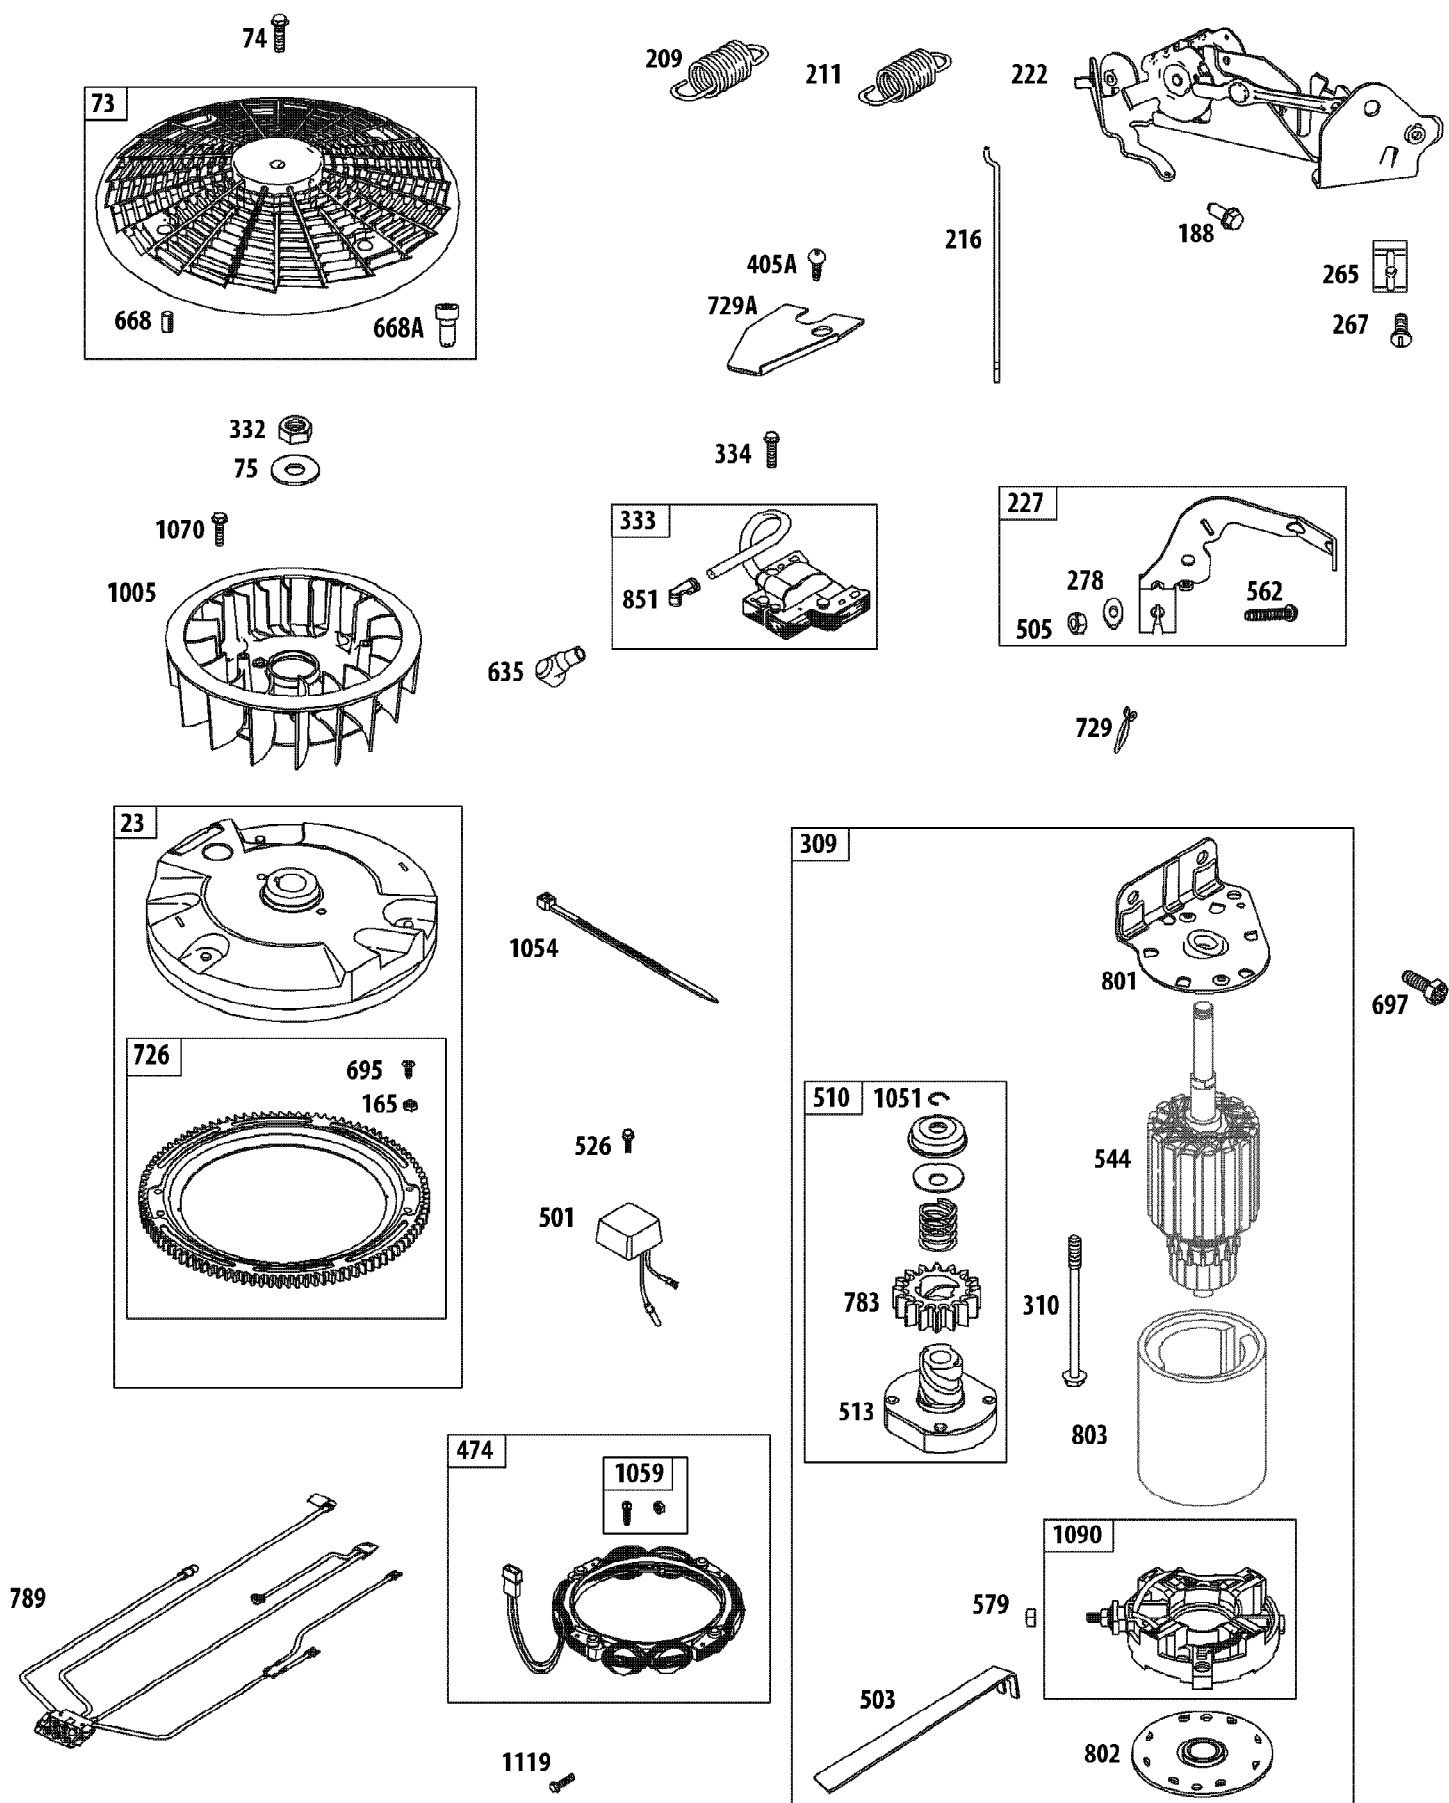

LTX1046VT Tractor (2010 & After)
Engine B&S 44L777 & 44M777 6

Page 33 of 62

Ref #	Part Number	Qty	S/P/F	Description
1	BS-793564	1		Cylinder Assembly
2	BS-499585	1		Kit-Bushing/Seal (Magneto Side)
3	BS-391086S	1	/P	Seal-Oil (Magneto Side)
4	BS-796307	1	/P	Sump-Engine
5	BS-796231	1	/P	Head-Cylinder (Cylinder #1)
5A	BS-796232	1	/P	Head-Cylinder (Cylinder #2)
7	BS-693997	1	/P	Gasket-Cylinder Head
8	BS-792185	1	/P	Breather Assembly
9	BS-690937	1		Gasket-Breather
10	BS-697551	1		Screw (Breather Assembly)
11	BS-792184	1	/P	Tube-Breather
12	BS-697227	1	/P	Gasket-Crankcase
13	BS-793988	1		Screw (Cylinder Head)
15	BS-690946	1	/P	Plug-Oil Drain
16	BS-796540	1		Crankshaft
20	BS-795387	1	/P	Seal-Oil (PTO Side)
22	BS-694966	1	/P	Screw (Crankcase Cover/ Sump)
23	BS-691053	1		Flywheel
24	BS-222698S	1	/P	Key-Flywheel
25	BS-792023	1	/P	Piston Assembly (Standard)
25	BS-792072	1		Piston Assembly (020" Oversize)
26	BS-793561	1		Ring Set (Standard)
26	BS-792073	1		Ring Set (.020" Oversize)
27	BS-690975	1		Lock-Piston Pin
28	BS-696581	1		Pin-Piston
29	BS-796209	1	/P	Rod-Connecting
32	BS-690976	1		Screw (Connecting Rod)
33	BS-697576	1		Valve-Exhaust
34	BS-792200	1	/P	Valve-Intake
35	BS-694865	1		Spring-Valve (Intake)
36	BS-694865	1		Spring-Valve (Exhaust)
42	BS-499586	1	/P	Keeper-Valve
45	BS-690977	1	/P	Tappet-Valve
46	BS-796853	1		Gear-Cam (44L777)
46	BS-797242	1		Gear-Cam (44M777)
48	BS-797093	1		Short Block
50	BS-695241	1	/P	Manifold-Intake
51	BS-795123	1		Gasket-Intake
51A	BS-690950	1		Gasket-Intake
51B	BS-690949	1		Gasket-Intake
53	BS-690951	1		Stud (Carburetor)
54	BS-699816	1		Screw (Intake Manifold)
73	BS-494439	1	/P	Screen-Rotating
74	BS-698425	1		Screw (Rotating Screen)
75	BS-691056	1		Washer (Flywheel)
95	BS-690718	1		Screw (Throttle Valve)
98	BS-699721	1		Kit-Idle Speed
104	BS-694918	1		Pin-Float Hinge
105	BS-698537	1		Valve-Float Needle
108	BS-699723	1		Valve-Choke
117	BS-842630	1		Jet-Main (Standard)
118	BS-797477	1		Jet-Main (High Altitude)

LTX1046VT Tractor (2010 & After)
Engine B&S 44L777 & 44M777 6

Page 34 of 62

Ref #	Part Number	Qty	S/P/F	Description
121	BS-792455	1	S	Kit-Carburetor Overhaul (Incl. Ref No. 104,137,163,276,633)
125	BS-796997	1		Carburetor
130	BS-690993	1		Valve-Throttle
131	BS-499805	1		Kit-Throttle Shaft
133	BS-699724	1		Float-Carburetor
135	BS-699729	1		Tube-Fuel Transfer
137	BS-690994	1		Gasket-Float Bowl
141	BS-796228	1		Kit-Choke Shaft
142	BS-699726	1		Nozzle-Carburetor
146	BS-690979	1	/P	Key-Timing
150	BS-690995	1		Gasket-Nozzle
163	BS-691001	1		Gasket-Air Cleaner
165	BS-693148	1		Nut (Ring Gear)
186	BS-795985	1		Connector-Hose
187	751-10349-16	1	/P	Line-Fuel Cut as required
188	BS-697551	1		Screw (Control Bracket)
192	BS-690083	1		Adjuster-Rocker Arm
197	BS-697820	1		Screw (Back Plate)
209	BS-796658	1		Spring-Governor (Yellow/Brown)
211	BS-796225	1		Spring-Governed Idle (Orange)
212	BS-695238	1		Link-Throttle
216	BS-796229	1		Link-Choke
217	BS-695409	1		Spring-Choke Return
219	BS-793338	1	/P	Gear-Governor
220	BS-690412	1	/P	Washer (Governor Gear)
221	BS-841026	1		Cup-Governor
222	BS-796226	1		Bracket-Control
227	BS-796223	1		Lever-Governor Control
231	BS-690718	1		Screw (Choke Valve)
239	BS-792028	1		Switch-Oil Pressure
240	BS-691035	1	/P	Filter-Fuel
250	BS-690957	1		Retainer-Breather
252	BS-794389	1		Collector-Oil
265	BS-691024	1	/P	Clamp-Casing
267	BS-695134	1		Screw (Casing Clamp)
276	BS-695410	1		Washer-Sealing
278	BS-792651	1		Washer (Governor Control Lever)
287	BS-697551	1		Screw (Dipstick Tube)
304	BS-797407	1	/P	Housing-Blower
305	BS-691005	1		Screw (Blower Housing)
305A	BS-790690	1		Screw (Blower Housing to Intake Elbow)
306	BS-796541	1		Shield-Cylinder (Cylinder #2)
306A	BS-796852	1		Shield-Cylinder (Cylinder #1)
307	BS-697551	1		Screw (Cylinder Shield)
309	BS-497595	1	/P	Motor-Starter
310	BS-690323	1		Screw (Starter Motor)
332	BS-691059	1		Nut (Flywheel)
333	BS-691060	1	/P	Armature-Magneto
334	BS-691061	1		Screw (Magneto Armature)
337	759-3336	1	/P	Plug-Spark

LTX1046VT Tractor (2010 & After)
Engine B&S 44L777 & 44M777 6

Page 35 of 62

Ref #	Part Number	Qty	S/P/F	Description
358	BS-694012	1	/P	Gasket Set-Engine (Incl. Ref No. 3.7,9,12,20,51,163,524,668,691868,883)
385	BS-797409	1		Screw (Fuel Pump)
387	BS-808656	1	/P	Pump-Fuel
404	BS-690442	1		Washer (Governor Crank)
415	BS-794903	1		Plug (Oil Pressure Switch Hole)
418	BS-795912	1		Plate-Carburetor
431	BS-792297	1		Elbow-Intake
445	BS-792105	1	/P	Filter-Air Cleaner Cartridge
447	BS-691003	1	/P	Screw (Air Guide Cover)
467	BS-790697	1		Knob-Air Cleaner
474	BS-696457	1	/P	Alternator
501	BS-794360	1	/P	Regulator
503	BS-691532	1	/P	Strap-Starter
505	BS-691029	1		Nut (Governor Control Lever)
510	BS-696541	1	/P	Drive-Starter
513	BS-692024	1	/P	Clutch-Drive
523	BS-691036	1		Dipstick
524	BS-691032	1		Seal-Dipstick Tube
525	BS-691037	1		Tube-Dipstick
526	BS-691129	1	/P	Screw (Regulator)
544	N/A	1		Armature-Starter (Service with Starter Motor BS-497595)
552	BS-796638	1		Bushing-Governor Crank
552A	BS-690553	1		Bushing-Governor Crank
562	BS-690311	1		Screw (Governor Control Lever)
573	BS-790444	1		Plate-Back
579	BS-691029	1		Nut (Starter Cable)
601	BS-691038	1		Clamp-Hose (Black)
615	BS-698290	1	/P	Retainer-Governor Shaft
616	BS-691045	1		Crank-Governor
617	BS-697891	1		Seal-O Ring (Intake Manifold) (Red)
633	BS-699813	1		Seal-Choke/Throttle Shaft
634	BS-698779	1		Spring/Seal Assembly
635	BS-66538s	1	/P	Boot-Spark Plug
654	BS-690958	1	/P	Nut (Carburetor)
668	BS-691215	1		Spacer (Rotating Screen)
668A	BS-691500	1	/P	Spacer (Rotating Screen)
672	BS-690234	1		Gasket-Carburetor Plate
691	BS-790574	1		Seal-Governor Shaft
695	BS-693149	1		Screw (Ring Gear)
697	BS-791680	1	/P	Screw (Drive Cap)
703	BS-691010	1		Clip
718	BS-690959	1	/P	Pin-Locating
726	BS-499612	1		Gear-Ring
729	BS-694123	1		Clip-Wire
741	BS-690980	1		Gear-Timing
742	BS-690328	1	/P	Retainer-E Ring (Governor Crank)
750	BS-796208	1		Screw (Oil Pump Cover)
783	BS-695708	1	/P	Gear-Pinion
789	BS-797460	1		Harness-Wiring
798	BS-697890	1		Screw (Rocker Arm)




LTX1046VT Tractor (2010 & After)
Engine B&S 44L777 & 44M777 6

Page 36 of 62

Ref #	Part Number	Qty	S/P/F	Description
801	BS-691283	1		Cap-Drive
802	BS-691286	1	/P	Cap-End
803	N/A	1		Housing-Starter (Service with Starter Motor BS-497595)
842	BS-691031	1	/P	Seal-O Ring (Dipstick Tube)
847	BS-499602	1		Dipstick/Tube Assembly
851	BS-493880S	1	/P	Terminal-Spark Plug
865	BS-792286	1		Cover-Air Guide (Valley)
868	BS-690968	1	/P	Seal-Valve
883	BS-690970	1	/P	Gasket-Exhaust
914	BS-691127	1	/P	Screw (Rocker Cover)
918	BS-797408	1		Hose-Vacuum
929	BS-695239	1		Screw (Choke Control Bracket)
943	BS-796222	1		Seal-O Ring (Oil Pump Cover)
947	BS-841546	1		Solenoid-Fuel
965	BS-796221	1		Cover-Oil Pump
967	BS-792303	1	/P	Filter-Pre Cleaner
968	BS-795120	1	/P	Cover-Air Cleaner
975	BS-793592	1		Bowl-Float
987	BS-691000	1		Seal-Throttle Shaft
1005	BS-791236	1		Fan-Flywheel
1013	BS-690954	1	/P	Nipple-Oil Filter
1017	BS-796214	1		Screen-Oil Pump
1022	BS-690971	1	/P	Gasket-Rocker Cover
1023	BS-793146	1		Cover-Rocker (Cylinder #1)
1023A	BS-499600	1		Cover-Rocker (Cylinder #2)
1024	BS-796220	1		Pump-Oil
1026	BS-690981	1	/P	Rod-Push (Exhaust)
1026A	BS-690982	1	/P	Rod-Push (Intake)
1027	BS-696854	1	/P	Filter-Oil
1029	BS-690972	1		Arm-Rocker
1036		1		Label-Emissions (Available from a Briggs & Stratton)
1040	BS-791237	1		Plate-Trim
1051	BS-691265	1	/P	Ring-Retaining (Starter Drive)
1054	BS-280275	1		Tie-Cable
1059	BS-698516	1		Kit-Screw/Washer (Alternator)
1070	BS-791680	1	/P	Screw (Flywheel Fan)
1090	BS-691293	1	/P	Retainer-Brush
1095	BS-694013	1	/P	Gasket Set-Valve (Incl. Ref No. 7,883)
1100	BS-791959	1		Pivot-Rocker Arm
1119	BS-93621	1	/P	Screw (Alternator)
1124	BS-841653	1		Seal-O Ring(Fuel Transfer Tube)
1124A	BS-690988	1		Seal-O Ring(Fuel Transfer Tube)
1126	BS-690991	1		Screw (Fuel Transfer Tube)
1127	BS-695407	1		Screw (Fuel Bowl)
1128	BS-690990	1		Screw (Carburetor Nozzle)
1169	BS-690990	1		Screw (Carburetor Plate)
1329	BS-44L777-0137	1		Replacement Engine (44L777)
1329	BS-44Q777-0137	1	/P	Replacement Engine (44M777)

LTX1046VT Tractor (2010 & After)
Engine B&S 44L777 & 44M777 7

   Page 37 of 62

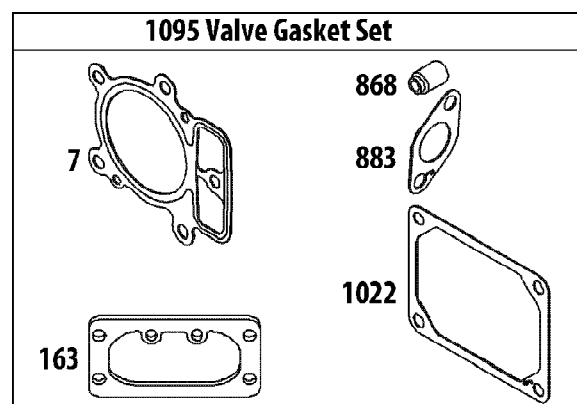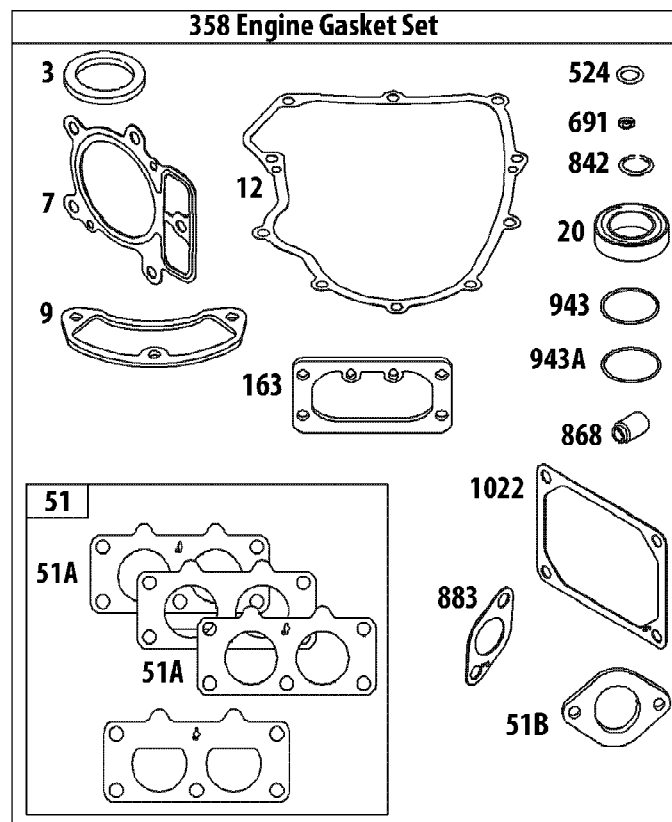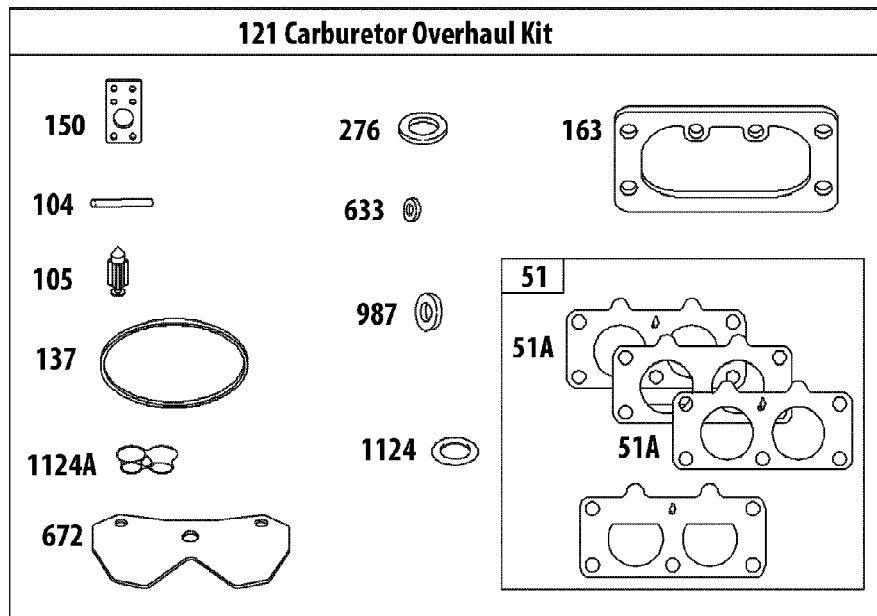

LTX1046VT Tractor (2010 & After)
Engine B&S 44L777 & 44M777 7

Page 38 of 62

Ref #	Part Number	Qty	S/P/F	Description
1	BS-793564	1		Cylinder Assembly
2	BS-499585	1		Kit-Bushing/Seal (Magneto Side)
3	BS-391086S	1	/P	Seal-Oil (Magneto Side)
4	BS-796307	1	/P	Sump-Engine
5	BS-796231	1	/P	Head-Cylinder (Cylinder #1)
5A	BS-796232	1	/P	Head-Cylinder (Cylinder #2)
7	BS-693997	1	/P	Gasket-Cylinder Head
8	BS-792185	1	/P	Breather Assembly
9	BS-690937	1		Gasket-Breather
10	BS-697551	1		Screw (Breather Assembly)
11	BS-792184	1	/P	Tube-Breather
12	BS-697227	1	/P	Gasket-Crankcase
13	BS-793988	1		Screw (Cylinder Head)
15	BS-690946	1	/P	Plug-Oil Drain
16	BS-796540	1		Crankshaft
20	BS-795387	1	/P	Seal-Oil (PTO Side)
22	BS-694966	1	/P	Screw (Crankcase Cover/ Sump)
23	BS-691053	1		Flywheel
24	BS-222698S	1	/P	Key-Flywheel
25	BS-792023	1	/P	Piston Assembly (Standard)
25	BS-792072	1		Piston Assembly (020" Oversize)
26	BS-793561	1		Ring Set (Standard)
26	BS-792073	1		Ring Set (.020" Oversize)
27	BS-690975	1		Lock-Piston Pin
28	BS-696581	1		Pin-Piston
29	BS-796209	1	/P	Rod-Connecting
32	BS-690976	1		Screw (Connecting Rod)
33	BS-697576	1		Valve-Exhaust
34	BS-792200	1	/P	Valve-Intake
35	BS-694865	1		Spring-Valve (Intake)
36	BS-694865	1		Spring-Valve (Exhaust)
42	BS-499586	1	/P	Keeper-Valve
45	BS-690977	1	/P	Tappet-Valve
46	BS-796853	1		Gear-Cam (44L777)
46	BS-797242	1		Gear-Cam (44M777)
48	BS-797093	1		Short Block
50	BS-695241	1	/P	Manifold-Intake
51	BS-795123	1		Gasket-Intake
51A	BS-690950	1		Gasket-Intake
51B	BS-690949	1		Gasket-Intake
53	BS-690951	1		Stud (Carburetor)
54	BS-699816	1		Screw (Intake Manifold)
73	BS-494439	1	/P	Screen-Rotating
74	BS-698425	1		Screw (Rotating Screen)
75	BS-691056	1		Washer (Flywheel)
95	BS-690718	1		Screw (Throttle Valve)
98	BS-699721	1		Kit-Idle Speed
104	BS-694918	1		Pin-Float Hinge
105	BS-698537	1		Valve-Float Needle
108	BS-699723	1		Valve-Choke
117	BS-842630	1		Jet-Main (Standard)
118	BS-797477	1		Jet-Main (High Altitude)

LTX1046VT Tractor (2010 & After)
Engine B&S 44L777 & 44M777 7

Page 39 of 62

Ref #	Part Number	Qty	S/P/F	Description
121	BS-792455	1	S	Kit-Carburetor Overhaul (Incl. Ref No. 104,137,163,276,633)
125	BS-796997	1		Carburetor
130	BS-690993	1		Valve-Throttle
131	BS-499805	1		Kit-Throttle Shaft
133	BS-699724	1		Float-Carburetor
135	BS-699729	1		Tube-Fuel Transfer
137	BS-690994	1		Gasket-Float Bowl
141	BS-796228	1		Kit-Choke Shaft
142	BS-699726	1		Nozzle-Carburetor
146	BS-690979	1	/P	Key-Timing
150	BS-690995	1		Gasket-Nozzle
163	BS-691001	1		Gasket-Air Cleaner
165	BS-693148	1		Nut (Ring Gear)
186	BS-795985	1		Connector-Hose
187	751-10349-16	1	/P	Line-Fuel Cut as required
188	BS-697551	1		Screw (Control Bracket)
192	BS-690083	1		Adjuster-Rocker Arm
197	BS-697820	1		Screw (Back Plate)
209	BS-796658	1		Spring-Governor (Yellow/Brown)
211	BS-796225	1		Spring-Governed Idle (Orange)
212	BS-695238	1		Link-Throttle
216	BS-796229	1		Link-Choke
217	BS-695409	1		Spring-Choke Return
219	BS-793338	1	/P	Gear-Governor
220	BS-690412	1	/P	Washer (Governor Gear)
221	BS-841026	1		Cup-Governor
222	BS-796226	1		Bracket-Control
227	BS-796223	1		Lever-Governor Control
231	BS-690718	1		Screw (Choke Valve)
239	BS-792028	1		Switch-Oil Pressure
240	BS-691035	1	/P	Filter-Fuel
250	BS-690957	1		Retainer-Breather
252	BS-794389	1		Collector-Oil
265	BS-691024	1	/P	Clamp-Casing
267	BS-695134	1		Screw (Casing Clamp)
276	BS-695410	1		Washer-Sealing
278	BS-792651	1		Washer (Governor Control Lever)
287	BS-697551	1		Screw (Dipstick Tube)
304	BS-797407	1	/P	Housing-Blower
305	BS-691005	1		Screw (Blower Housing)
305A	BS-790690	1		Screw (Blower Housing to Intake Elbow)
306	BS-796541	1		Shield-Cylinder (Cylinder #2)
306A	BS-796852	1		Shield-Cylinder (Cylinder #1)
307	BS-697551	1		Screw (Cylinder Shield)
309	BS-497595	1	/P	Motor-Starter
310	BS-690323	1		Screw (Starter Motor)
332	BS-691059	1		Nut (Flywheel)
333	BS-691060	1	/P	Armature-Magneto
334	BS-691061	1		Screw (Magneto Armature)
337	759-3336	1	/P	Plug-Spark

LTX1046VT Tractor (2010 & After)
Engine B&S 44L777 & 44M777 7

Page 40 of 62

Ref #	Part Number	Qty	S/P/F	Description
358	BS-694012	1	/P	Gasket Set-Engine (Incl. Ref No. 3.7,9,12,20,51,163,524,668,691868,883)
385	BS-797409	1		Screw (Fuel Pump)
387	BS-808656	1	/P	Pump-Fuel
404	BS-690442	1		Washer (Governor Crank)
415	BS-794903	1		Plug (Oil Pressure Switch Hole)
418	BS-795912	1		Plate-Carburetor
431	BS-792297	1		Elbow-Intake
445	BS-792105	1	/P	Filter-Air Cleaner Cartridge
447	BS-691003	1	/P	Screw (Air Guide Cover)
467	BS-790697	1		Knob-Air Cleaner
474	BS-696457	1	/P	Alternator
501	BS-794360	1	/P	Regulator
503	BS-691532	1	/P	Strap-Starter
505	BS-691029	1		Nut (Governor Control Lever)
510	BS-696541	1	/P	Drive-Starter
513	BS-692024	1	/P	Clutch-Drive
523	BS-691036	1		Dipstick
524	BS-691032	1		Seal-Dipstick Tube
525	BS-691037	1		Tube-Dipstick
526	BS-691129	1	/P	Screw (Regulator)
544	N/A	1		Armature-Starter (Service with Starter Motor BS-497595)
552	BS-796638	1		Bushing-Governor Crank
552A	BS-690553	1		Bushing-Governor Crank
562	BS-690311	1		Screw (Governor Control Lever)
573	BS-790444	1		Plate-Back
579	BS-691029	1		Nut (Starter Cable)
601	BS-691038	1		Clamp-Hose (Black)
615	BS-698290	1	/P	Retainer-Governor Shaft
616	BS-691045	1		Crank-Governor
617	BS-697891	1		Seal-O Ring (Intake Manifold) (Red)
633	BS-699813	1		Seal-Choke/Throttle Shaft
634	BS-698779	1		Spring/Seal Assembly
635	BS-66538s	1	/P	Boot-Spark Plug
654	BS-690958	1	/P	Nut (Carburetor)
668	BS-691215	1		Spacer (Rotating Screen)
668A	BS-691500	1	/P	Spacer (Rotating Screen)
672	BS-690234	1		Gasket-Carburetor Plate
691	BS-790574	1		Seal-Governor Shaft
695	BS-693149	1		Screw (Ring Gear)
697	BS-791680	1	/P	Screw (Drive Cap)
703	BS-691010	1		Clip
718	BS-690959	1	/P	Pin-Locating
726	BS-499612	1		Gear-Ring
729	BS-694123	1		Clip-Wire
741	BS-690980	1		Gear-Timing
742	BS-690328	1	/P	Retainer-E Ring (Governor Crank)
750	BS-796208	1		Screw (Oil Pump Cover)
783	BS-695708	1	/P	Gear-Pinion
789	BS-797460	1		Harness-Wiring
798	BS-697890	1		Screw (Rocker Arm)


LTX1046VT Tractor (2010 & After)
Engine B&S 44L777 & 44M777 7

Page 41 of 62

Ref #	Part Number	Qty	S/P/F	Description
801	BS-691283	1		Cap-Drive
802	BS-691286	1	/P	Cap-End
803	N/A	1		Housing-Starter (Service with Starter Motor BS-497595)
842	BS-691031	1	/P	Seal-O Ring (Dipstick Tube)
847	BS-499602	1		Dipstick/Tube Assembly
851	BS-493880S	1	/P	Terminal-Spark Plug
865	BS-792286	1		Cover-Air Guide (Valley)
868	BS-690968	1	/P	Seal-Valve
883	BS-690970	1	/P	Gasket-Exhaust
914	BS-691127	1	/P	Screw (Rocker Cover)
918	BS-797408	1		Hose-Vacuum
929	BS-695239	1		Screw (Choke Control Bracket)
943	BS-796222	1		Seal-O Ring (Oil Pump Cover)
947	BS-841546	1		Solenoid-Fuel
965	BS-796221	1		Cover-Oil Pump
967	BS-792303	1	/P	Filter-Pre Cleaner
968	BS-795120	1	/P	Cover-Air Cleaner
975	BS-793592	1		Bowl-Float
987	BS-691000	1		Seal-Throttle Shaft
1005	BS-791236	1		Fan-Flywheel
1013	BS-690954	1	/P	Nipple-Oil Filter
1017	BS-796214	1		Screen-Oil Pump
1022	BS-690971	1	/P	Gasket-Rocker Cover
1023	BS-793146	1		Cover-Rocker (Cylinder #1)
1023A	BS-499600	1		Cover-Rocker (Cylinder #2)
1024	BS-796220	1		Pump-Oil
1026	BS-690981	1	/P	Rod-Push (Exhaust)
1026A	BS-690982	1	/P	Rod-Push (Intake)
1027	BS-696854	1	/P	Filter-Oil
1029	BS-690972	1		Arm-Rocker
1036		1		Label-Emissions (Available from a Briggs & Stratton)
1040	BS-791237	1		Plate-Trim
1051	BS-691265	1	/P	Ring-Retaining (Starter Drive)
1054	BS-280275	1		Tie-Cable
1059	BS-698516	1		Kit-Screw/Washer (Alternator)
1070	BS-791680	1	/P	Screw (Flywheel Fan)
1090	BS-691293	1	/P	Retainer-Brush
1095	BS-694013	1	/P	Gasket Set-Valve (Incl. Ref No. 7,883)
1100	BS-791959	1		Pivot-Rocker Arm
1119	BS-93621	1	/P	Screw (Alternator)
1124	BS-841653	1		Seal-O Ring(Fuel Transfer Tube)
1124A	BS-690988	1		Seal-O Ring(Fuel Transfer Tube)
1126	BS-690991	1		Screw (Fuel Transfer Tube)
1127	BS-695407	1		Screw (Fuel Bowl)
1128	BS-690990	1		Screw (Carburetor Nozzle)
1169	BS-690990	1		Screw (Carburetor Plate)
1329	BS-44L777-0137	1		Replacement Engine (44L777)
1329	BS-44Q777-0137	1	/P	Replacement Engine (44M777)

LTX1046VT Tractor (2010 & After)
Frame, Electrical & PTO

 Page 42 of 62

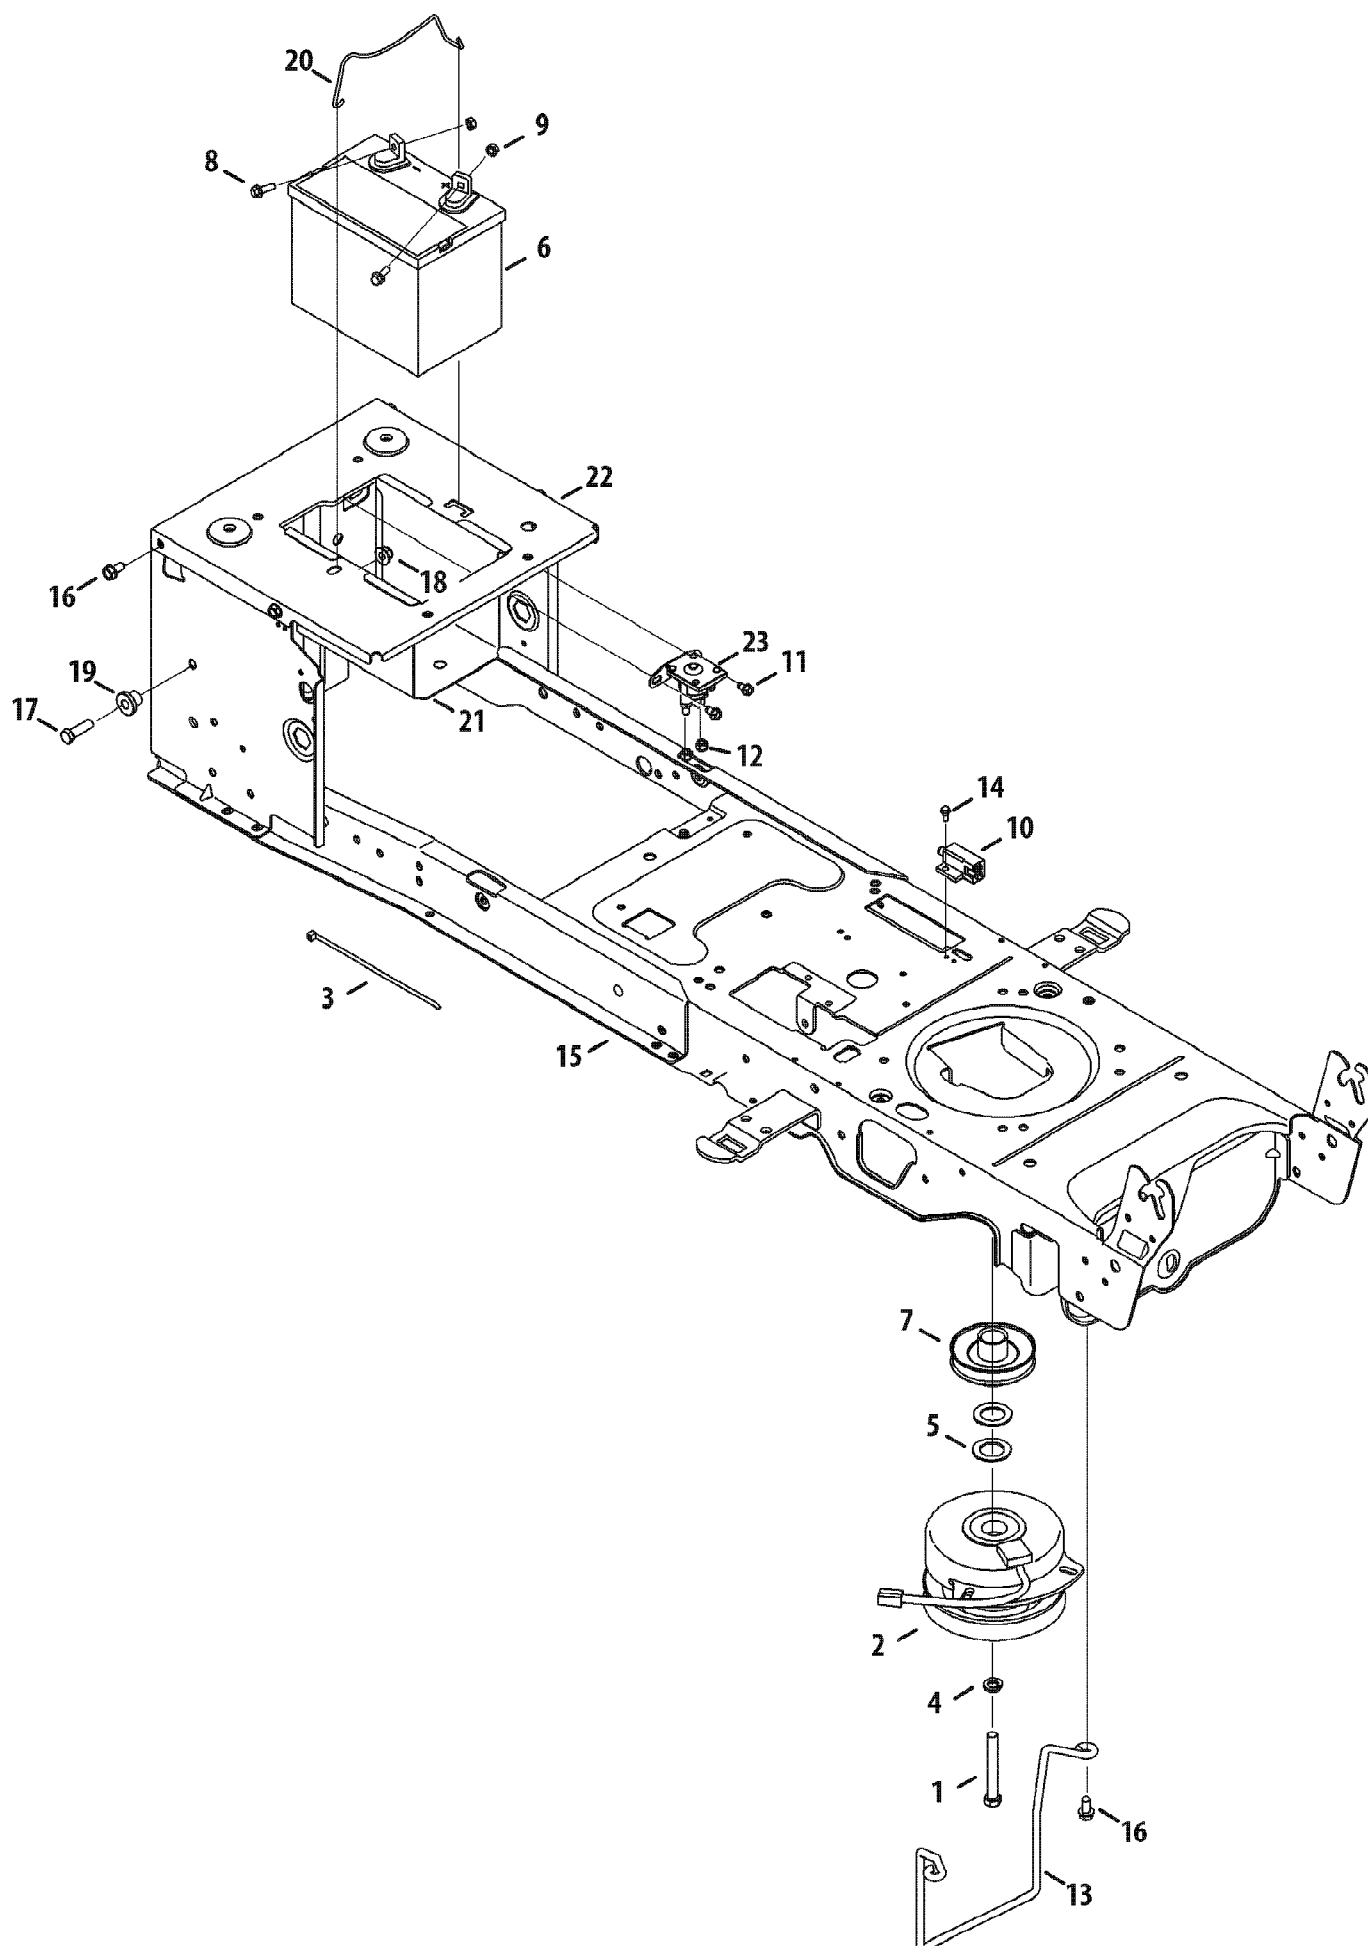


LTX1046VT Tractor (2010 & After)
Frame, Electrical & PTO

Page 43 of 62

Ref #	Part Number	Qty	S/P/F	Description
1	710-04379A	1		Hex Screw, 7/16-20, 3.50, Gr5, Lock
2	917-04552	1	/P	Clutch, Electric PTO (46")
2	917-04174A	1	/P	Clutch, Electric PTO (50")
3	725-0157	1	/P	Cable, Tie, 3/16 X .05 X 7.4
4	736-0171	1	S	Washer, Lock, 7/16 , Regular Duty
5	736-0277	1		Washer, Flat, 1.031 X1.620 X.095
6	925-1707D	1	/P	Battery
7	756-0978B	1	/P	Engine Pulley, Electric PTO
8	710-04666	1		Hex Flange Screw, 1/4-20, .75, Gr5
9	712-0271	1	/P	Nut, Sems, 1/4-20
10	725-04363	1		Switch, Interlock
11	710-0653	1	/P	Screw, Self-tapping, 1/4-20, 0.375
12	712-04064	1	/P	Nut, Flange Lock, 1/4-20, Nylon
13	747-05171	1		Rod, Keeper (46")
13	747-05195	1		Rod, Keeper (50")
14	738-04237A	1		Screw, Shoulder, #10-32, .50
15	683-04469A-0637	1		Frame Assembly, Lower
16	710-04484	1		Screw, Self-tapping, 5/16-18, .750
17	710-3005	1	/P	Hex Screw, 3/8-16, 1.25, Gr5, Std
18	712-04065	1	/P	Nut, Flange Lock, 3/8-16, Nylon
19	738-04058	1		Spacer, Shoulder, .38 X 1.0 X .70
20	747-04121A	1		Rod, Battery
21	783-0349-0637	1		Tray, Battery
22	783-06089-0637	1		Bracket, Frame, Seat
23	725-04439	1		Solenoid, 12V, 100 Amp, 4 term
	925-04093	1	/P	Harness Assembly, Main Not Shown

LTX1046VT Tractor (2010 & After)
Fuel Tank, Hood & Dash

 Page 44 of 62

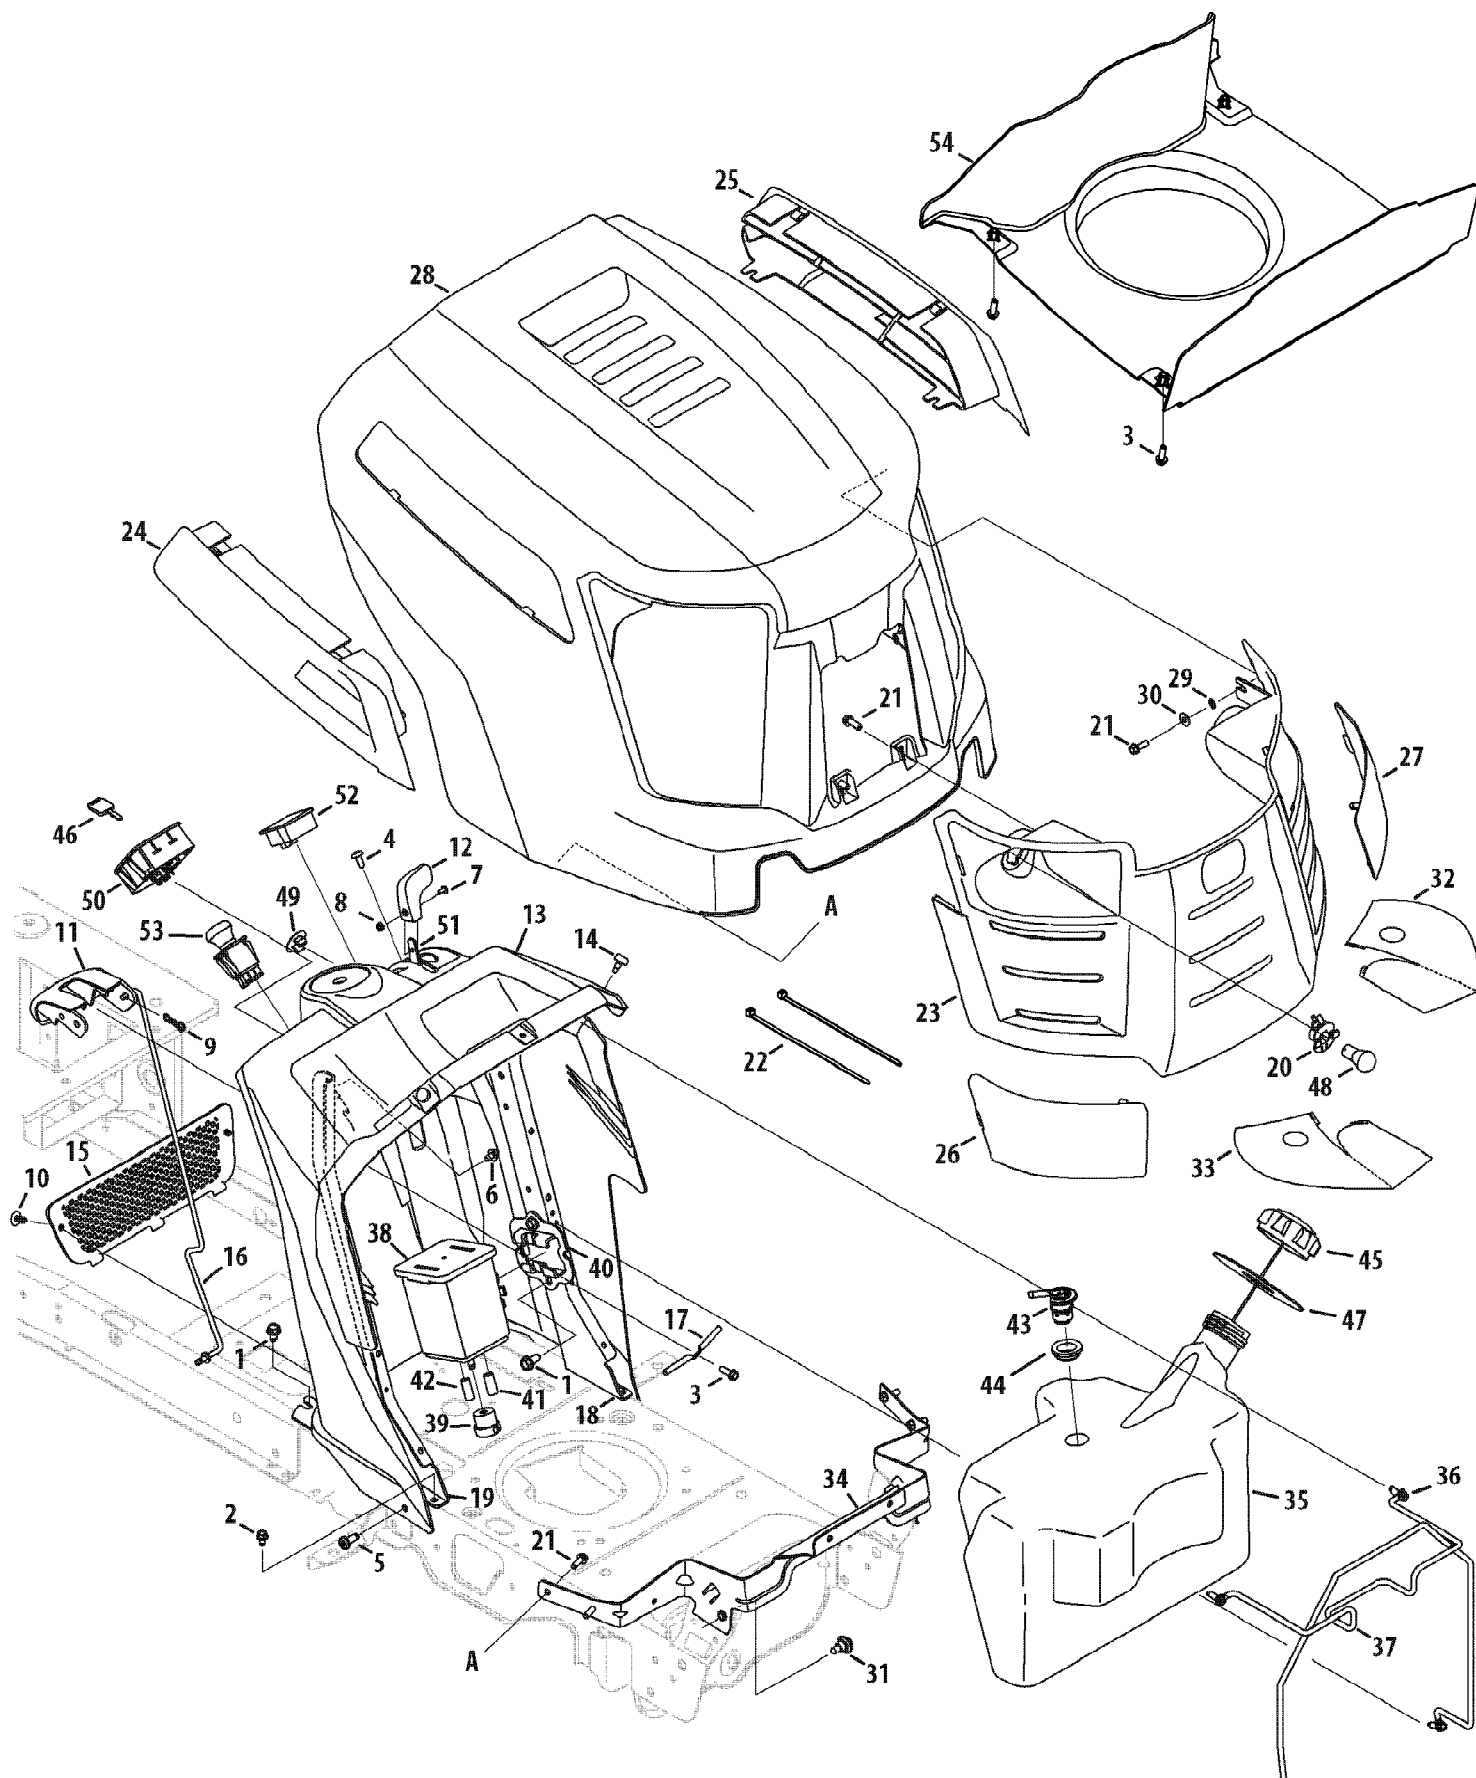

LTX1046VT Tractor (2010 & After)
Fuel Tank, Hood & Dash

Page 45 of 62

Ref #	Part Number	Qty	S/P/F	Description
1	710-04484	1		Screw, Self-tapping, 5/16-18, .750
2	710-0599	1	/P	Screw, Self-tapping, 1/4-20, 0.500
3	710-0895	1		Screw, HL, 1/4-15, 0.750
4	710-1017	1	/P	Screw, Ab, 1/4-14, 0.625,
5	710-1611B	1	/P	Screw, Self-tapping, 5/16-18, 0.750,
6	710-1652	1	/P	Screw, Self-tapping, 1/4-20 x .625
7	710-3217	1	/P	Screw, Mach, #8-32, 0.375
8	712-0142	1	/P	Nut, Hex, #8-32
9	714-04040	1	/P	Pin, Cotter, Bow-Tie 72
10	726-3046	1	/P	Clip, Ratchet, .250 Dia
11	731-05447A	1		Lever, Dash, Cruise/Brake
12	731-06593	1		Knob, Throttle
13	931-06554	1	/P	Dash Panel, A-Style, NO LGT SW
14	735-0271A	1	/P	Bumper, .62 Dia X .3
15	735-04076	1		Net
16	747-05009A	1		Rod, Control, Latch Cub
17	747-1196	1		Rod, Lever, Bent
18	783-06098-0637	1		Support, Dash, Plate LH
19	783-06099-0637	1		Support, Dash, Plate RH
20	925-1649	1	/P	Socket, Lamp
21	710-05108	1		Screw, 1/4 Dia, .750
22	926-0154	1	/P	Tie, Cable, Push Mount 7.5 Lg
23	931-04322	1	/P	Grille Ass'y (Incl. 26, 27, 32 & 33)
24	931-06542	1	/P	Scoop, Hood, RH A-Style
25	931-06543	1	/P	Scoop, Hood, LH A-Style
26	931-06558	1	/P	Lens, Hood, RH A-Style
27	931-06559	1	/P	Lens, Hood, LH A-Style
28	931-06634	1	/P	Hood, A-Style
29	936-0222	1	/P	Washer, Lock, 1/4, External
30	936-3020	1	/P	Washer, Flat, .271, .630, .065
31	738-04091A	1	/P	Screw, Shoulder, .43x.29, 5/16-18
32	777X44055	1		Reflector, Cub A Style, LH
33	777X44056	1		Reflector, Cub A Style, RH
34	783-06114-0637	1		Bracket, Pivot, Hood A-Style
35	751-10879	1		Tank, Fuel, 3.75 Gal.
35	751-10906	1		Tank, Fuel, 3.30 Gal. (CA)
36	710-1652	1	/P	Screw, Self-tapping, 1/4-20, .625
36	710-0642	1	/P	Screw, Self-tapping, 1/4-20, .75 (CA)
37	747-05040A	1	/P	Rod, Support, Fuel Tank
38	951-10589	1	/P	Cnstr, Carbon, 5 Gallon (CA)
39	951-10590	1	/P	Filter, Vent, Canister (CA)
40	951-10610	1	/P	Bracket, Adapter, Canister (CA)
41	751-10749	1		Hose, Fuel, Low Perm, 3/16 Wht (CA)
42	751-10750-28	1		Hose, Fuel, Low Perm, 7/32 Yel (CA)
43	751-10441	1		Valve, Rollover Grommet (CA)
44	735-04081	1		Grommet, Rubber, 23.0 ID (CA)
45	751-0603A	1	/P	Cap, Fuel
45	951-10947	1	/P	Cap, Fuel (CA) California models (CA)
46	925-2054A	1	/P	Key, Ignition
47	735-04170	1		Gasket, Fuel Tank
48	925-0963	1	/P	Lamp, 12v
49	731-1999	1		Plug, Choke
50	925-04227B	1	/P	Module Switch, Ignition

LTX1046VT Tractor (2010 & After)
Fuel Tank, Hood & Dash


Page 46 of 62

Ref #	Part Number	Qty	S/P/F	Description
51	946-04617	1	/P	Cable, Throttle/Choke, 28"
52	925-04022B	1	/P	Meter, Indicator
53	725-04258	1	/P	Switch, Electric PTO, Yellow
54	731-06936	1		Plenum, A-Style, B&S Intek Twin


LTX1046VT Tractor (2010 & After)
Label Map LTX1046VT

Page 47 of 62

 
777D13207

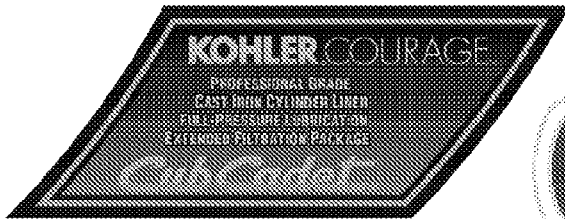

777D12864

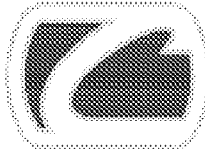 

777D13208

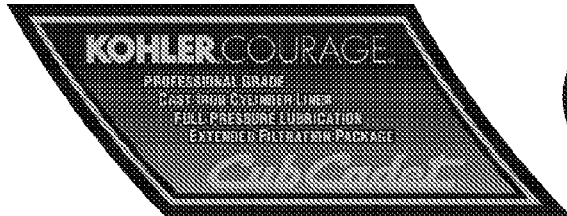 

777I22679



 
777I23293




777D12928




777S33233

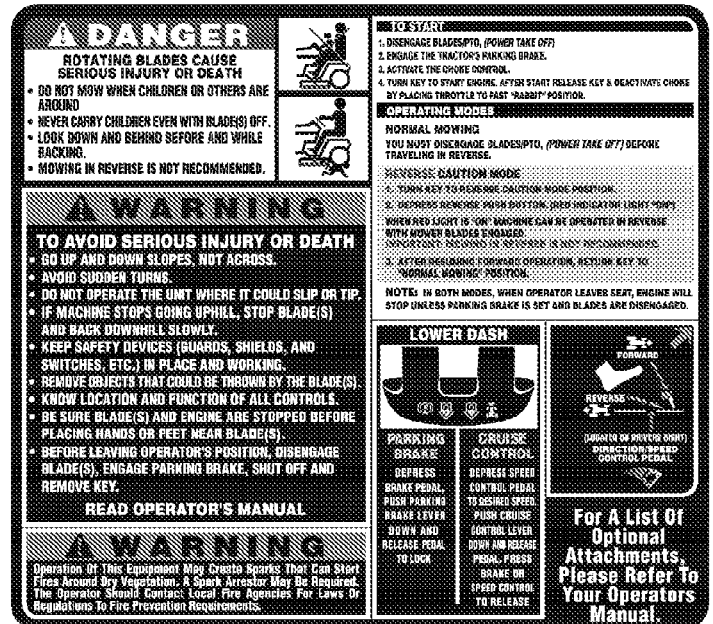


777D12929

 


777D13983

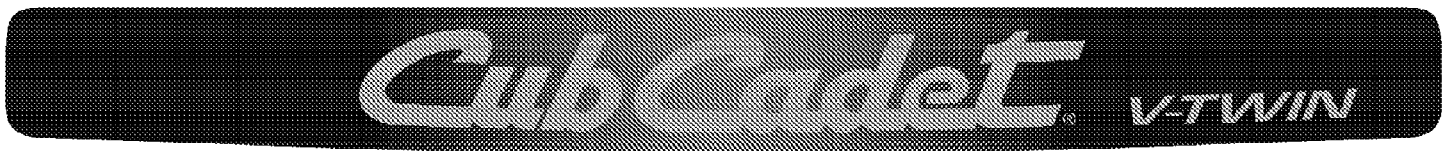 


777I23292

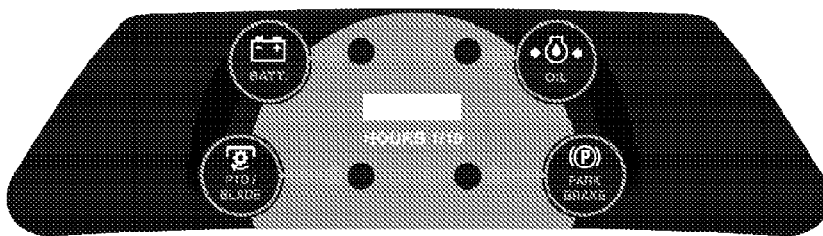 

777I23294

 

777D14076

 


777D14077




777S30018



 777I22481

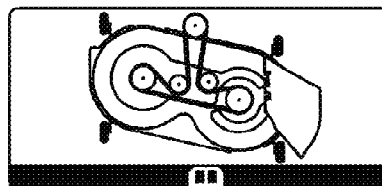

777S23132

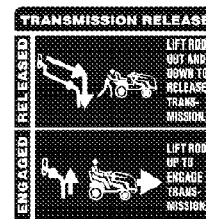 

777D13924



777I23133



777X44232

MODEL LTX 1046VT REPLACEMENT PARTS			
Use only Cub Cadet genuine factory parts			
Blades	949-0424A (2)	Oil Filter	95-09034
Lower Drive Belt	954-04267	Air Filter	95-79235
Engine To Deck Belt	954-04219	Pre-Cleaner	95-792303
Deck Spindles	919-01626	Spark Plug	799-3336
Ignition Key	725-20544	Fuel Filter	95-591035
Solenoid	725-04430	Oil Capacity	92.0 oz

777X43873



777S30503




LTX1046VT Tractor (2010 & After)
Label Map LTX1046VT

Page 48 of 62

Ref #	Part Number	Qty	S/P/F	Description
777D13207	777D13207	1		LBL-KOHLER ENG LH CUB CADET
777D13208	777D13208	1		LBL-KOHLER ENG RH CUB CADET
777D12864	777D12864	1		LABEL-C LOGO GRILLE C CADET
777I22679	777I22679	1		LABEL-CHECK ENG OIL
777I23293	777I23293	1		LBL-DECK HEIGHT
777D12928	777D12928	1		LABEL-LFT SIDE HOOD SCOOP
777S33233	777S33233	1		LBL-FLOORBRD SAFETY HYDRO
777D12929	777D12929	1		LABEL-RGT SIDE HOOD SCOOP
777D13983	777D13983	1		LBL-FENDER REAR V-TWN C CADET
777I23292	777I23292	1		LBL-A STY DASH PNL
777I23294	777I23294	1		LBL-THROTTLE/CHOKE
777D14076	777D14076	1		LBL-LTX 1046VT HYDRO TWN LH
777D14077	777D14077	1		LBL-LTX 1046VT HYDRO TWN RH
777I23133	777I23133	1		LABEL-FUEL LEVEL
777D13924	777D13924	1		LBL-DECK WASH SYSTEM
777X43873	777X43873	1		LBL-OVERLAP BLADE 46 OFFSET
777S23132	777I23132	1		LABEL-HYDRO RELEASE
777X44232	777X44232	1		LBL-PARTS LIST LTX 1046VT
777I22481	777I22481	1		LABEL-BELT ROUTING
777I23292	777I23292	1		LBL-A STY DASH PNL
777S30018	777S30018	1	/P	LABEL-DECK SAFETY
777S30503	777S30503	1	/P	LABEL-DANGER CHUTE

LTX1046VT Tractor (2010 & After)
Mower Deck 46-Inch

 
Page 49 of 62

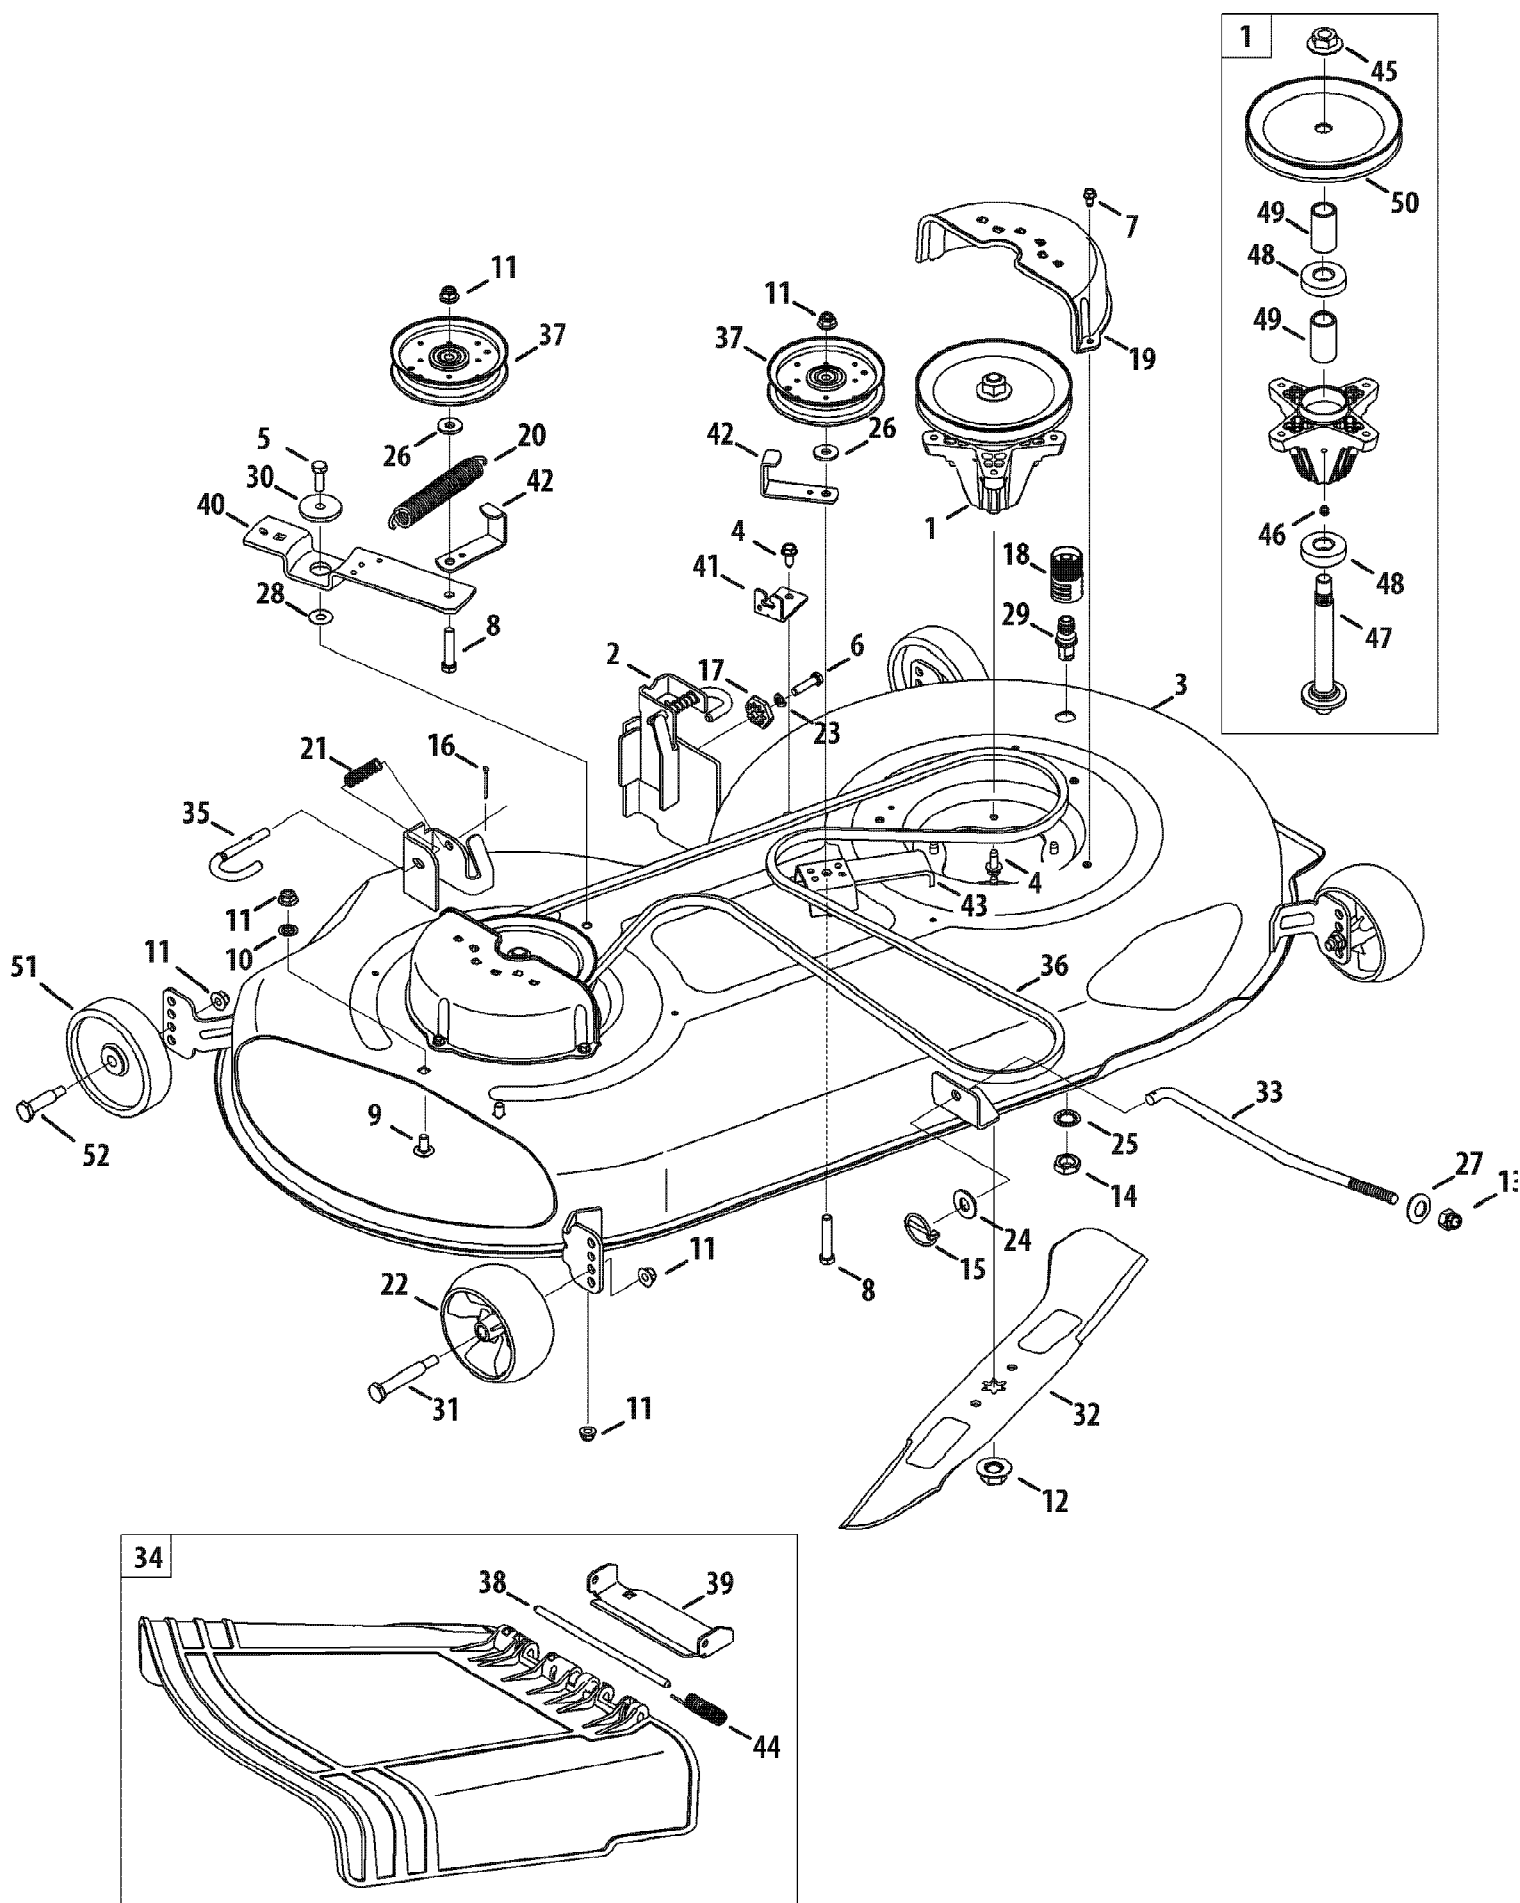

LTX1046VT Tractor (2010 & After)
Mower Deck 46-Inch

Page 50 of 62

Ref #	Part Number	Qty	S/P/F	Description
1	918-04636A	1	/P	Spindle Assembly, Pulley 6.93 Dia.
2	683-0254B-4021	1		Bracket Assembly, Deck, Hanger LH
3	983-04468-4021	1	/P	Deck Assembly, Offset, 46"
4	710-04484	1		Screw, Self-tapping, 5/16-18, .750,
5	710-0514	1	/P	Hex Screw, 3/8-16, 1.00, Gr5, Std
6	710-0528	1	/P	Hex Screw, 5/16-18, 1.25, Gr5, Std
7	710-0599	1	/P	Screw, Self-tapping, 1/4-20, 0.500,
8	710-3144	1	/P	Hex Screw, 3/8-16, 2.00, Gr5, Std
9	710-3178	1	/P	Bolt, Carriage, 3/8-16, 0.75, Gr1
10	712-0229	1		Nut, Push, 3/8
11	712-04065	1	/P	Nut, Flange Lock, 3/8-16, Nylon
12	712-0417A	1	/P	Nut, Flange, 5/8-18
13	712-04243	1		Nut, 1/2-13
14	712-0641	1	S	Nut, Hex, M16-1.5 Din 936
15	753-04070	1	/P	Pin, Lynch, .1875
16	914-0470	1	/P	Pin, Cotter, 1/8 X 1.25
17	917-04074	1	/P	Gear, Deck, Adj
18	921-04041	1	/P	Adapter, Water
19	731-06496	1		Cover, Belt, Universal
20	732-0459C	1	/P	Spring, Extension, .94 Dia. X 6.74
21	732-04652	1		Spring, Compression, .535 OD X 1.75
22	734-04155	1		Wheel, Deck, 5.0 Dia. Ball
23	936-0119	1	/P	Washer, Lock, 5/16, Regular Duty
24	936-0179	1	/P	Washer, Flat, .531 X 1.25 X .100
25	736-0225	1	/P	Washer, Lock, 5/8, Int. Tooth
26	736-0262	1	/P	Washer, Flat, .385 X .870 X .092
27	736-0317	1	/P	Washer, Bell, .63 X 1.25 X .18
28	936-0344	1	/P	Washer, Flat, .385 X 1.0 X .030
29	737-04003D	1	/P	Port, Water
30	738-04162A	1	/P	Spacer, Shoulder, .8840 X .190
31	938-3056	1	/P	Bolt, Shoulder, .496 X 2.50, 3/8-16
32	942-04244A	1	/P	Blade, Cut, 23.25" 2-In-1, Cub
33	747-04944A	1	S	Rod, Lift, Deck, Front, 13.7
34	631-04288	1	/P	Chute Assembly, 46" Deck
35	747-1116	1	/P	Rod, Deck Release .375 Dia.
36	954-04219	1	/P	Belt, V-Type, A Sec
37	756-04129B	1	/P	Pulley, Idler, 4.25" Dia.
38	711-04847A	1	S	Pin, Hinge, 7.96
39	783-06074	1		Bracket, Chute
40	783-05946	1		Bracket, Idler, Pivot
41	783-06243-0637	1		Bracket, Cable, Deck Engage
42	783-06368-0637	1	S	Bracket, Guard, Belt, 4.25 Pulley
43	783-06643-0637	1		Bracket, Support, Stationary Idler
44	732-04372	1		Spring, Torsion, .44 I.D. X 2.0
45	712-0417A	1	/P	Nut, Flange, 5/8-18
46	937-3000	1	/P	Lube Fitting, 3/16
47	738-1186A	1		Shaft, Spindle, 6.11
48	941-0919	1	/P	Bearing, Ball, .787 X 1.85 x.551
49	750-04936	1		Spacer, .792 X 1.060 X 1.860
50	756-04356	1		Pulley, Deck, 6.93 Dia.
51	734-0973	1	/P	Wheel, Deck 5.0 x 1.38
52	938-0373	1	/P	Bolt, Shoulder, .496 x 1.525, 3/8-16

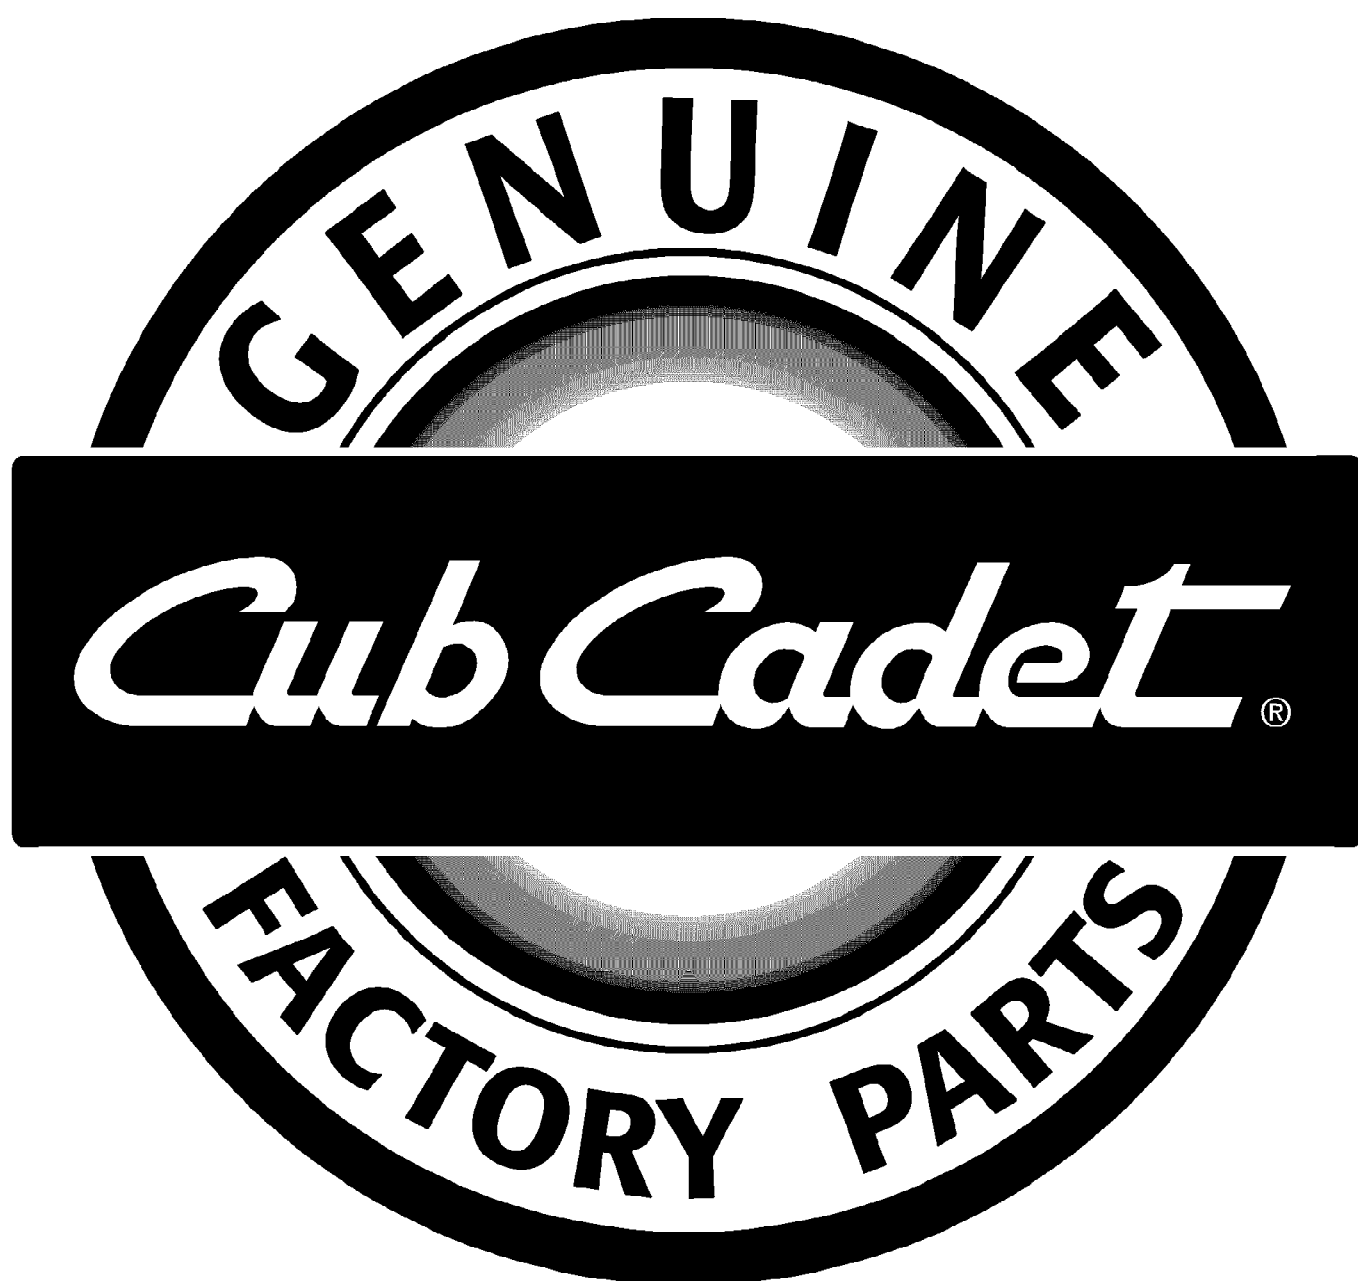 


LTX1046VT Tractor (2010 & After)
Quick Reference LTX1046VT

Page 52 of 62

Ref #	Part Number	Qty	S/P/F	Description
	759-3336	1	/P	Spark Plug
	BS-792303	1	/P	Pre-Cleaner
	BS-792105	1	/P	Air Filter
	BS-492932S	1	/P	Oil Filter
	BS-691035	1	/P	Fuel Filter
	BS-691060	1	/P	Ignition Module
	BS-794360	1	/P	Voltage Regulator
	BS-808656	1	/P	Fuel Pump
	BS-792455	1	S	Carb Repair Kit
	BS-841546	1		Carburetor Solenoid
	954-04207	1	/P	Drive Belt (Trans)
	954-04219	1	/P	P.T.O. / Deck Belt
	942-04244A	1	/P	Blades
	712-0417A	1	/P	Blade Nut
	918-04636A	1	/P	Spindle Assy. w/Pulley
	734-04155	1		Deck Wheels (Front)
	734-0973	1	/P	Deck Wheels (Back)
	921-04041	1	/P	Water Nozzle Adapter
	923-0448A	1	/P	Ball Joints
	725-04363	1		Brake Switch
	751-0603A	1	/P	Fuel Cap
	725-04439	1		Solenoid
	925-2054A	1	/P	Ignition Keys
	925-04227B	1	/P	Ignition Switch Module
	725-04258	1	/P	P.T.O. Switch
	917-04552	1	/P	P.T.O. Clutch
	19A30003100	1		Bagger Attachment
	19A30005100	1		Mulch Attachment
	190-679-101	1		Bumper Attachment

LTX1046VT Tractor (2010 & After)
Seat, Fender & Lift

 Page 53 of 62

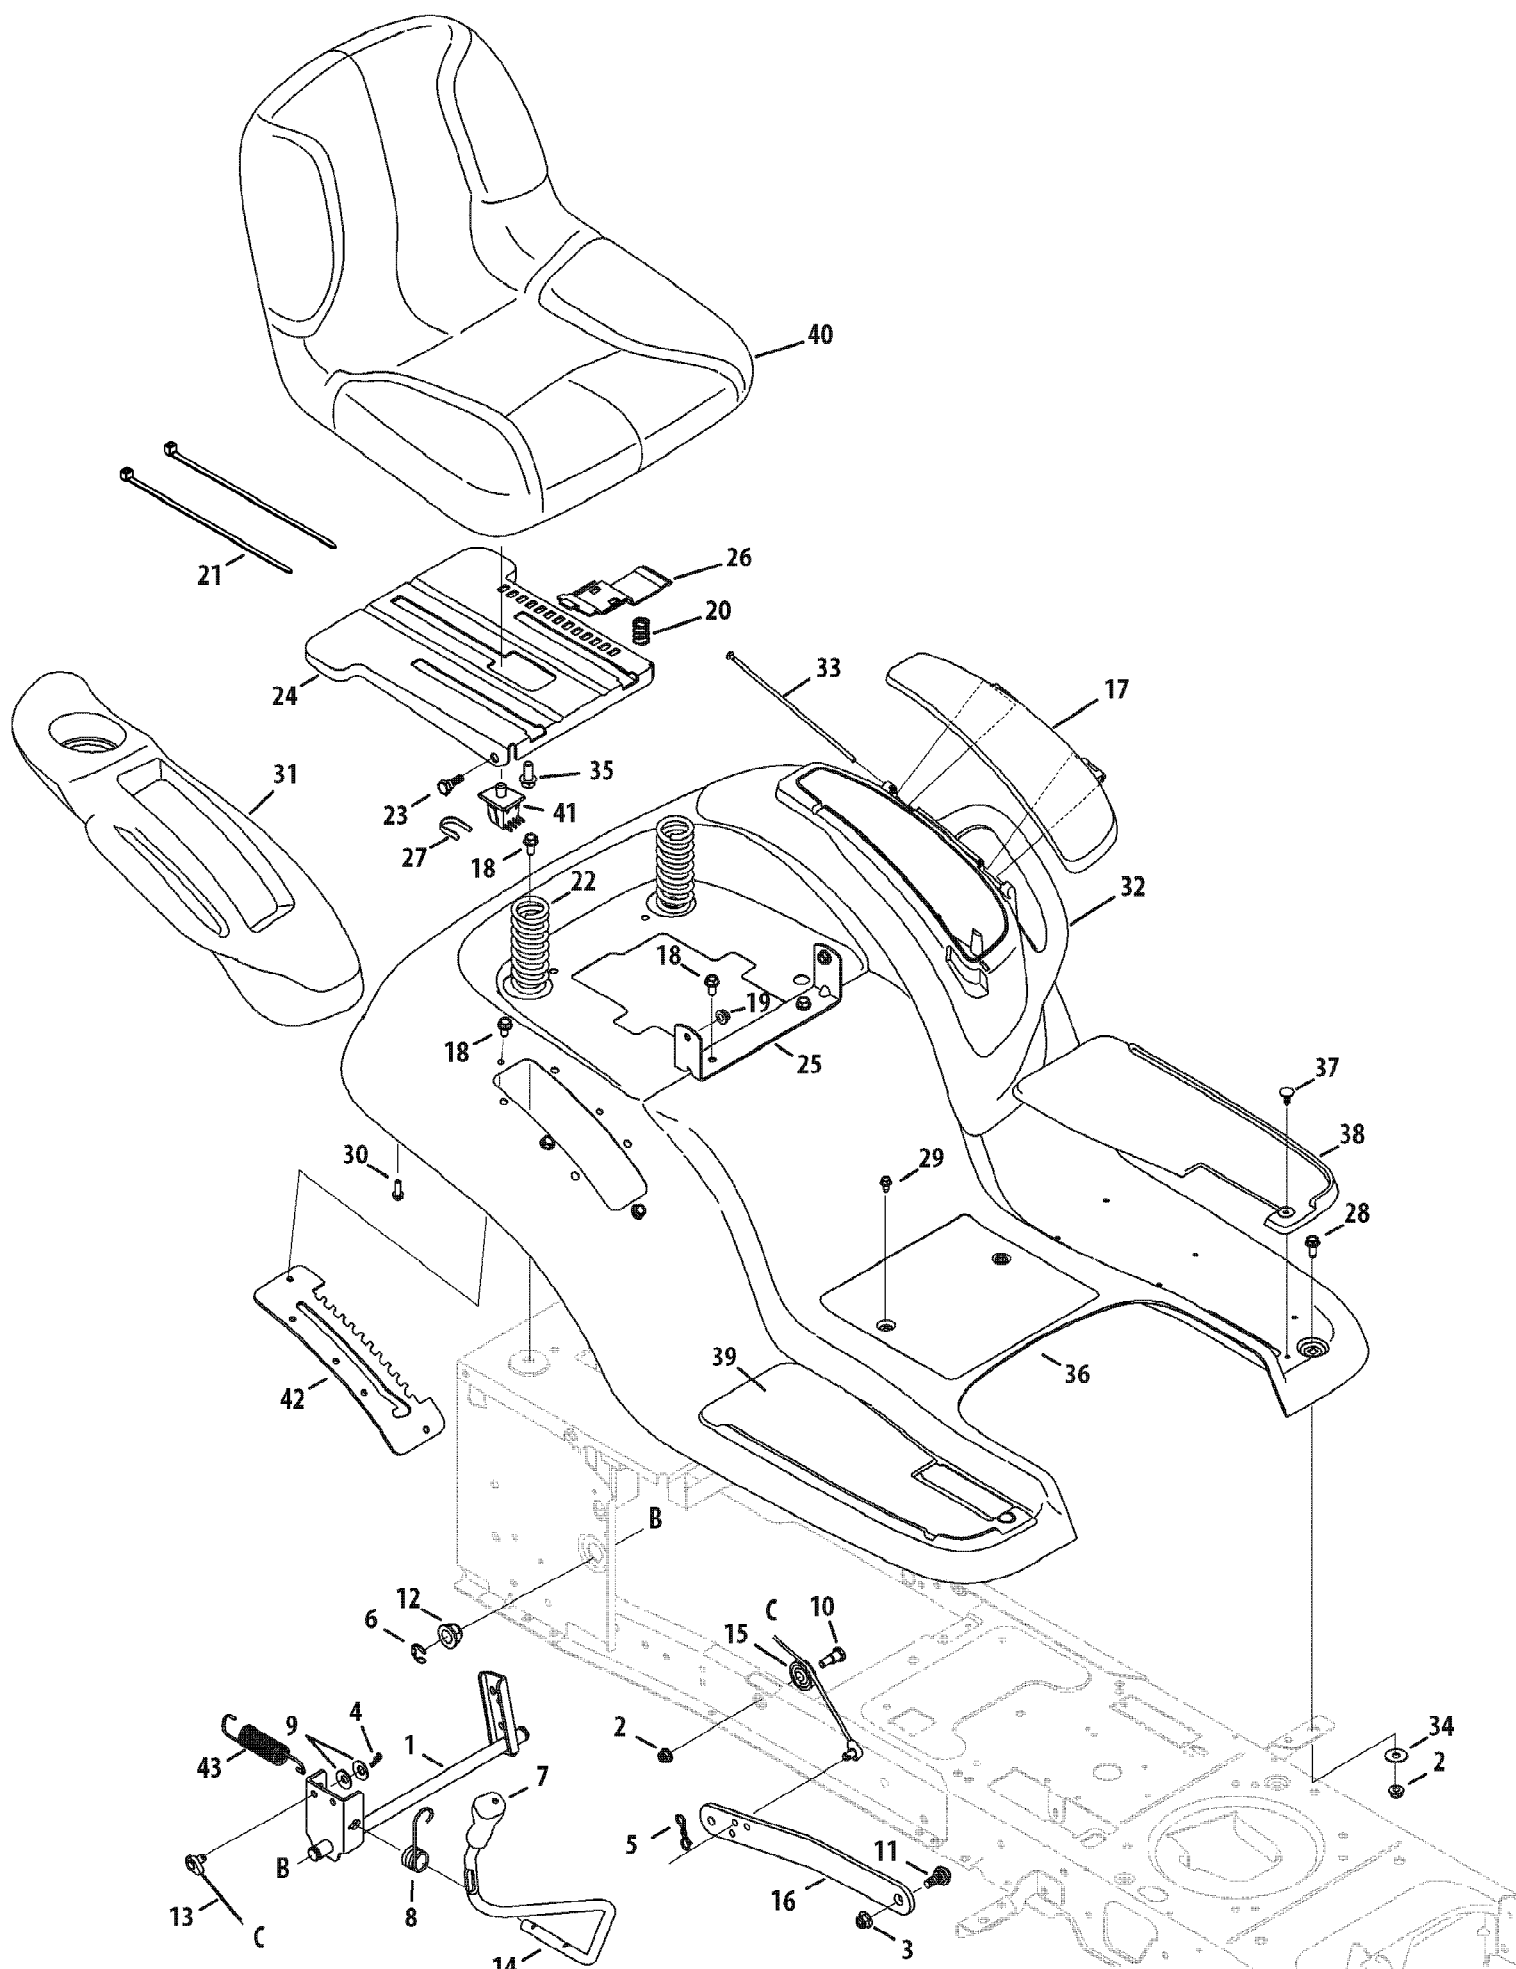

LTX1046VT Tractor (2010 & After)
Seat, Fender & Lift


Page 54 of 62

Ref #	Part Number	Qty	S/P/F	Description
1	683-04223-0637	1	/P	Shaft Ass'y, Lift
2	712-04063	1	/P	Nut, Flange Lock, 5/16-18, Grf
3	712-04065	1	/P	Nut, Flange Lock, 3/8-16, Grf
4	914-0104	1	/P	Pin, Cotter, .072 Dia. x 1.13
5	714-04040	1	/P	Pin, Cotter, Bow-Tie 72
6	716-0106A	1		Ring, E Type, .625 Dia. Shaft
7	720-04139	1		Grip, Handle, Cub, .50 ID
8	732-0874	1	/P	Spring, Torsion
9	736-0105	1	/P	Washer, Spring, .401 x .870 x .063
10	738-0138A	1	/P	Screw, Shoulder, .437 x .470, 5/16-18
11	938-0380	1	/P	Bolt, Shoulder, .50, 3/8-16
12	941-0225	1	/P	Bearing, Hex Flange
13	746-0968	1		Cable, Lift, 16.16
14	747-04962A	1	/P	Handle, Lift,
15	756-04331	1		Pulley, Roller, Cable
16	783-05546A-0637	1	/P	Link, Lift
17	731-06584	1		Door, Cover, Fender
18	710-04484	1		Screw, Self-tapping, 5/16-18, .750,
19	712-3004A	1	/P	Nut, Flange Lock, 5/16-18, Gr5, Sd Lk
20	732-04563	1		Spring, Compr', .68 x 1.065 x .055
21	725-0157	1	/P	Cable, Tie, 3/16 x .05 x 7.4
22	732-04561	1		Spring, Compr, 1.71 x 3.735 x .238
23	938-0296	1	/P	Screw, Shoulder, .437 x .268, 5/16-18
24	783-06049-4021	1		Bracket, Mounting, Seat
25	783-06088-4021	1		Bracket, Pivot, Seat
26	783-06050	1		Lever, Seat Adjustment
27	783-06448	1		Clip, Retaining, Switch
28	710-1260A	1	/P	Hex Screw, 5/16-18, .75, Gr5, Std
29	710-0599	1	/P	Screw, Self-tapping, 1/4-20, 0.500,
30	710-0895	1		Screw, HL, 1/4-15, 0.750,
31	731-06700	1		Cover, Fender, RH
32	731-06676	1		Cover, Fender, LH
33	747-05039	1		Pin, Door
34	736-3078	1	/P	Washer, Flat .344 x 1.00 x .063
35	710-04482	1		Hex Flange Screw, 3/8/16, .875, Gr5
36	783-06118-4021	1		Fender, Cub Hydro
37	726-3046	1	/P	Clip, Ratchet, .250 Dia
38	735-04137	1		Pad, Foot, LH
39	735-04139	1		Pad, Foot, RH
40	757-04131	1		Seat, High Back Cloth, Cub
41	925-05013	1	/P	Switch, Seat
42	783-06181-0637	1		Bracket, Lift
43	732-0934	1		Spring, Extension, 1.15 OD x 5.99

LTX1046VT Tractor (2010 & After)

Steering

 
Page 55 of 62

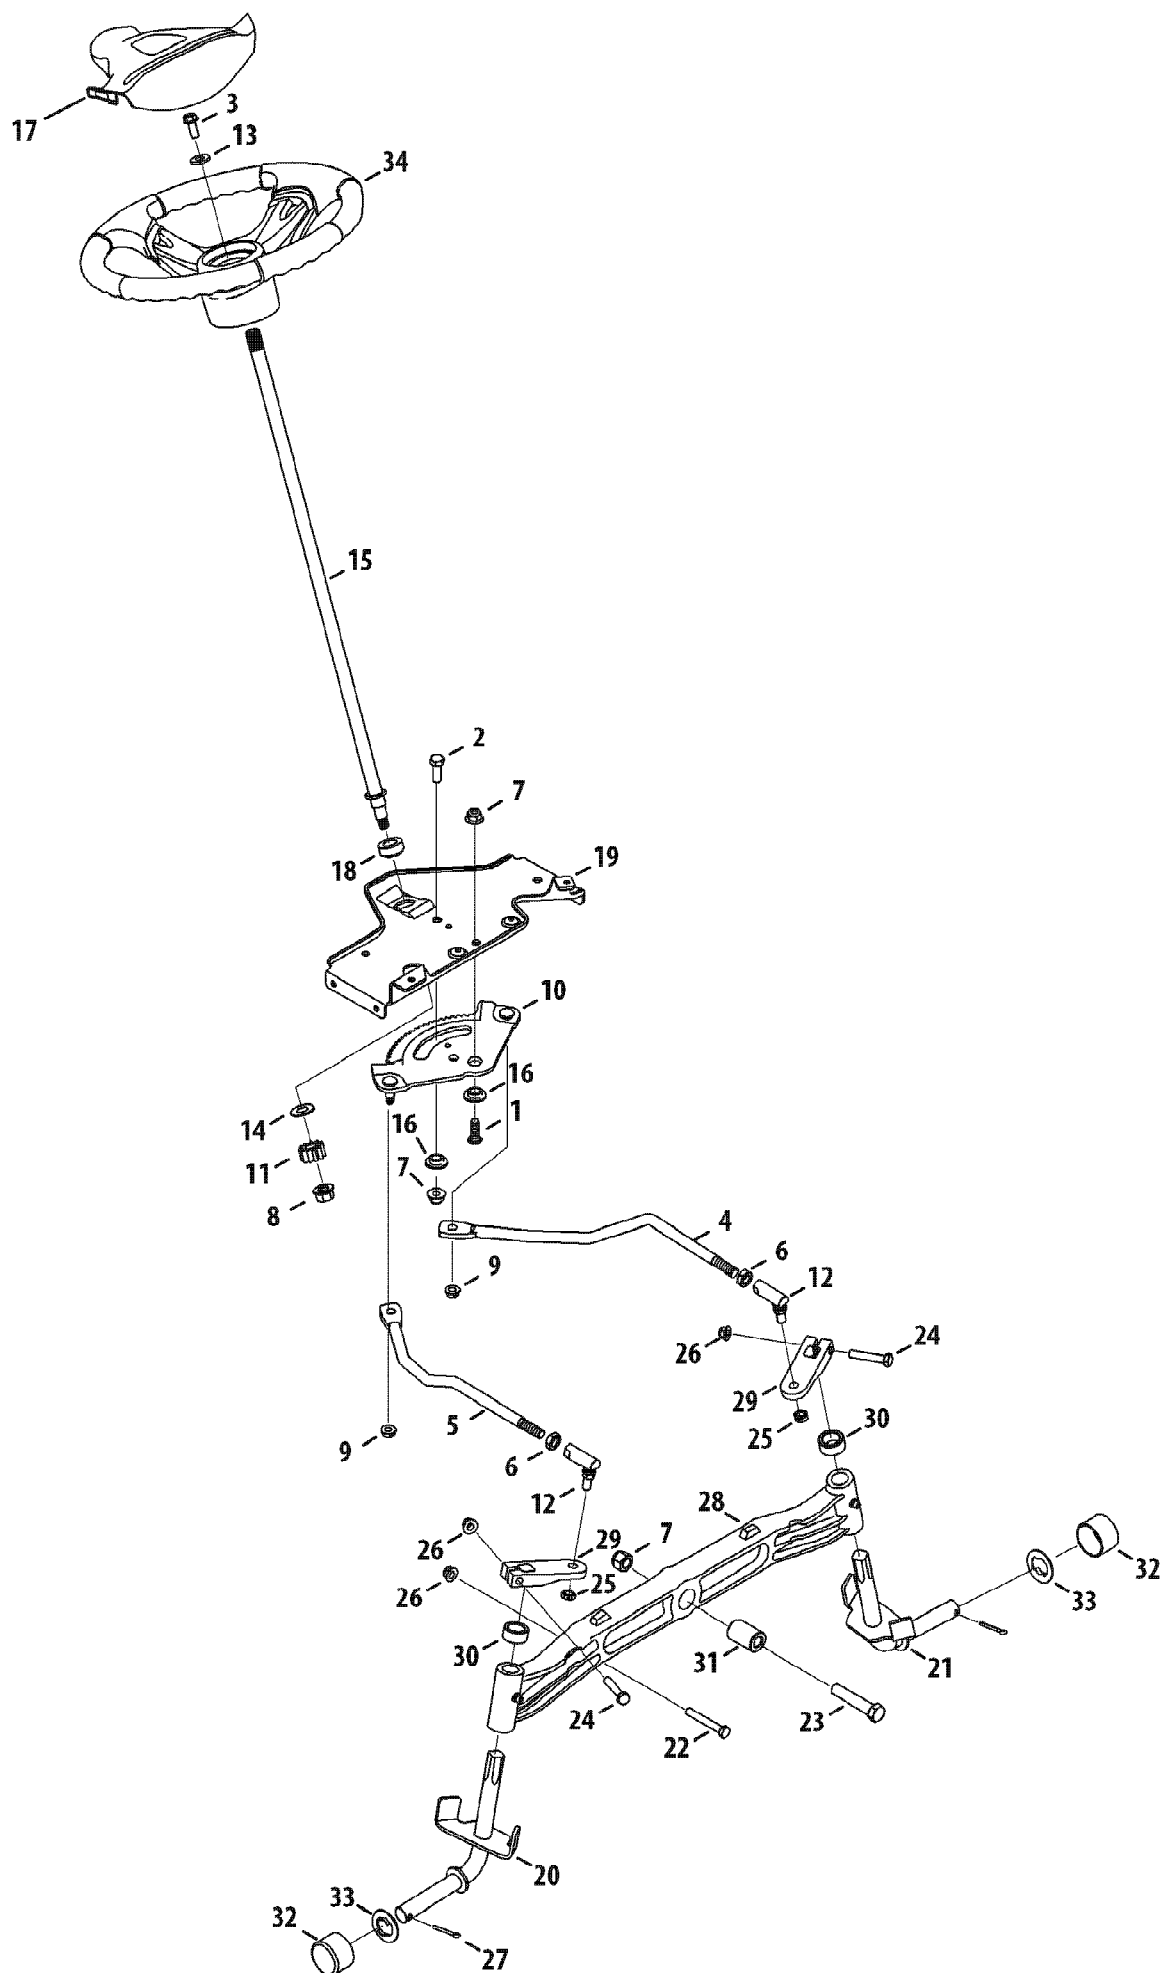

LTX1046VT Tractor (2010 & After)
Steering

Page 56 of 62

Ref #	Part Number	Qty	S/P/F	Description
1	710-04095	1		Hex Screw, 3/8-16, 1.00, Gr5, Spec
2	710-0514	1	/P	Hex Screw, 3/8-16, 1.00, Gr5, Std
3	710-0650	1	/P	Hex Screw, 5/16-18, .875, Gr5, Lock
4	711-04998	1		Link, Drag LH
5	711-04999	1		Link, Drag RH
6	912-0240	1	/P	Nut, Jam, 7/16-20, Gr2
7	712-04065	1	/P	Nut, Flange Lock, 3/8-16, Grf,
8	712-0459	1	/P	Nut, Flange Lock, 7/16-20, Grb, Lock
9	712-3004A	1	/P	Nut, Flange Lock, 5/16-18, Gr5, Sd Lk
10	717-1550F	1	/P	Gear, Steering, 11/90 Ratio
11	717-1554	1		Gear, Pinion, Steering
12	923-0448A	1	/P	Ball Joint, 7/16-20, Lock
13	936-3004	1	/P	Washer, Flat, .406 x .875 x .105
14	736-3084	1	/P	Washer, Flat, .51 x 1.12 x .06
15	738-04262	1		Shaft, Steering, .625 OD x 25, Cub
16	738-04363	1		Spacer, Shoulder, .385x 1.25 x .3025
17	731-04532B	1		Cover, Steering Wheel, Cub Cadet
18	741-04237B	1	/P	Bearing, Flange, Hex 5/8 Pm
19	783-06043-0637	1		Bracket, Support, Steering
20	638-04022-0637	1		Axle Ass'y, RH .750 Dia. (46" Deck)
21	638-04028-0637	1		Axle Ass'y, LH .750 Dia. (46" Deck)
22	710-0395	1	/P	Hex Screw, 5/16-18, 2.25, Gr5, Std
23	710-0859	1	/P	Hex Screw, 3/8-16, 2.50, Gr5, Std
24	710-3180	1	/P	Hex Screw, 5/16-18, 1.75, Gr5, Std
25	912-0214	1	/P	Nut, Hex Lock, 3/8-24, Grb
26	712-04063	1	/P	Nut, Flange Lock, 5/16-18, Grf
27	714-0162	1	/P	Pin, Cotter, 5/32, 1.25
28	719-04413A	1		Axle, Pivot Bar, Cast
29	748-04065-0637	1	/P	Steering, Block
30	748-04068	1		Spacer, .71 ID x .125 OD x .56
31	750-05280	1		Spacer, .385 x 1.00 x 1.5075
32	731-05674	1	/P	Cap, Bumper
33	736-04228A	1		Washer, Flat, .350 x 1.559 x .062
34	631-04008A	1	/P	Wheel, Steering, 3 Spoke, Softgrip

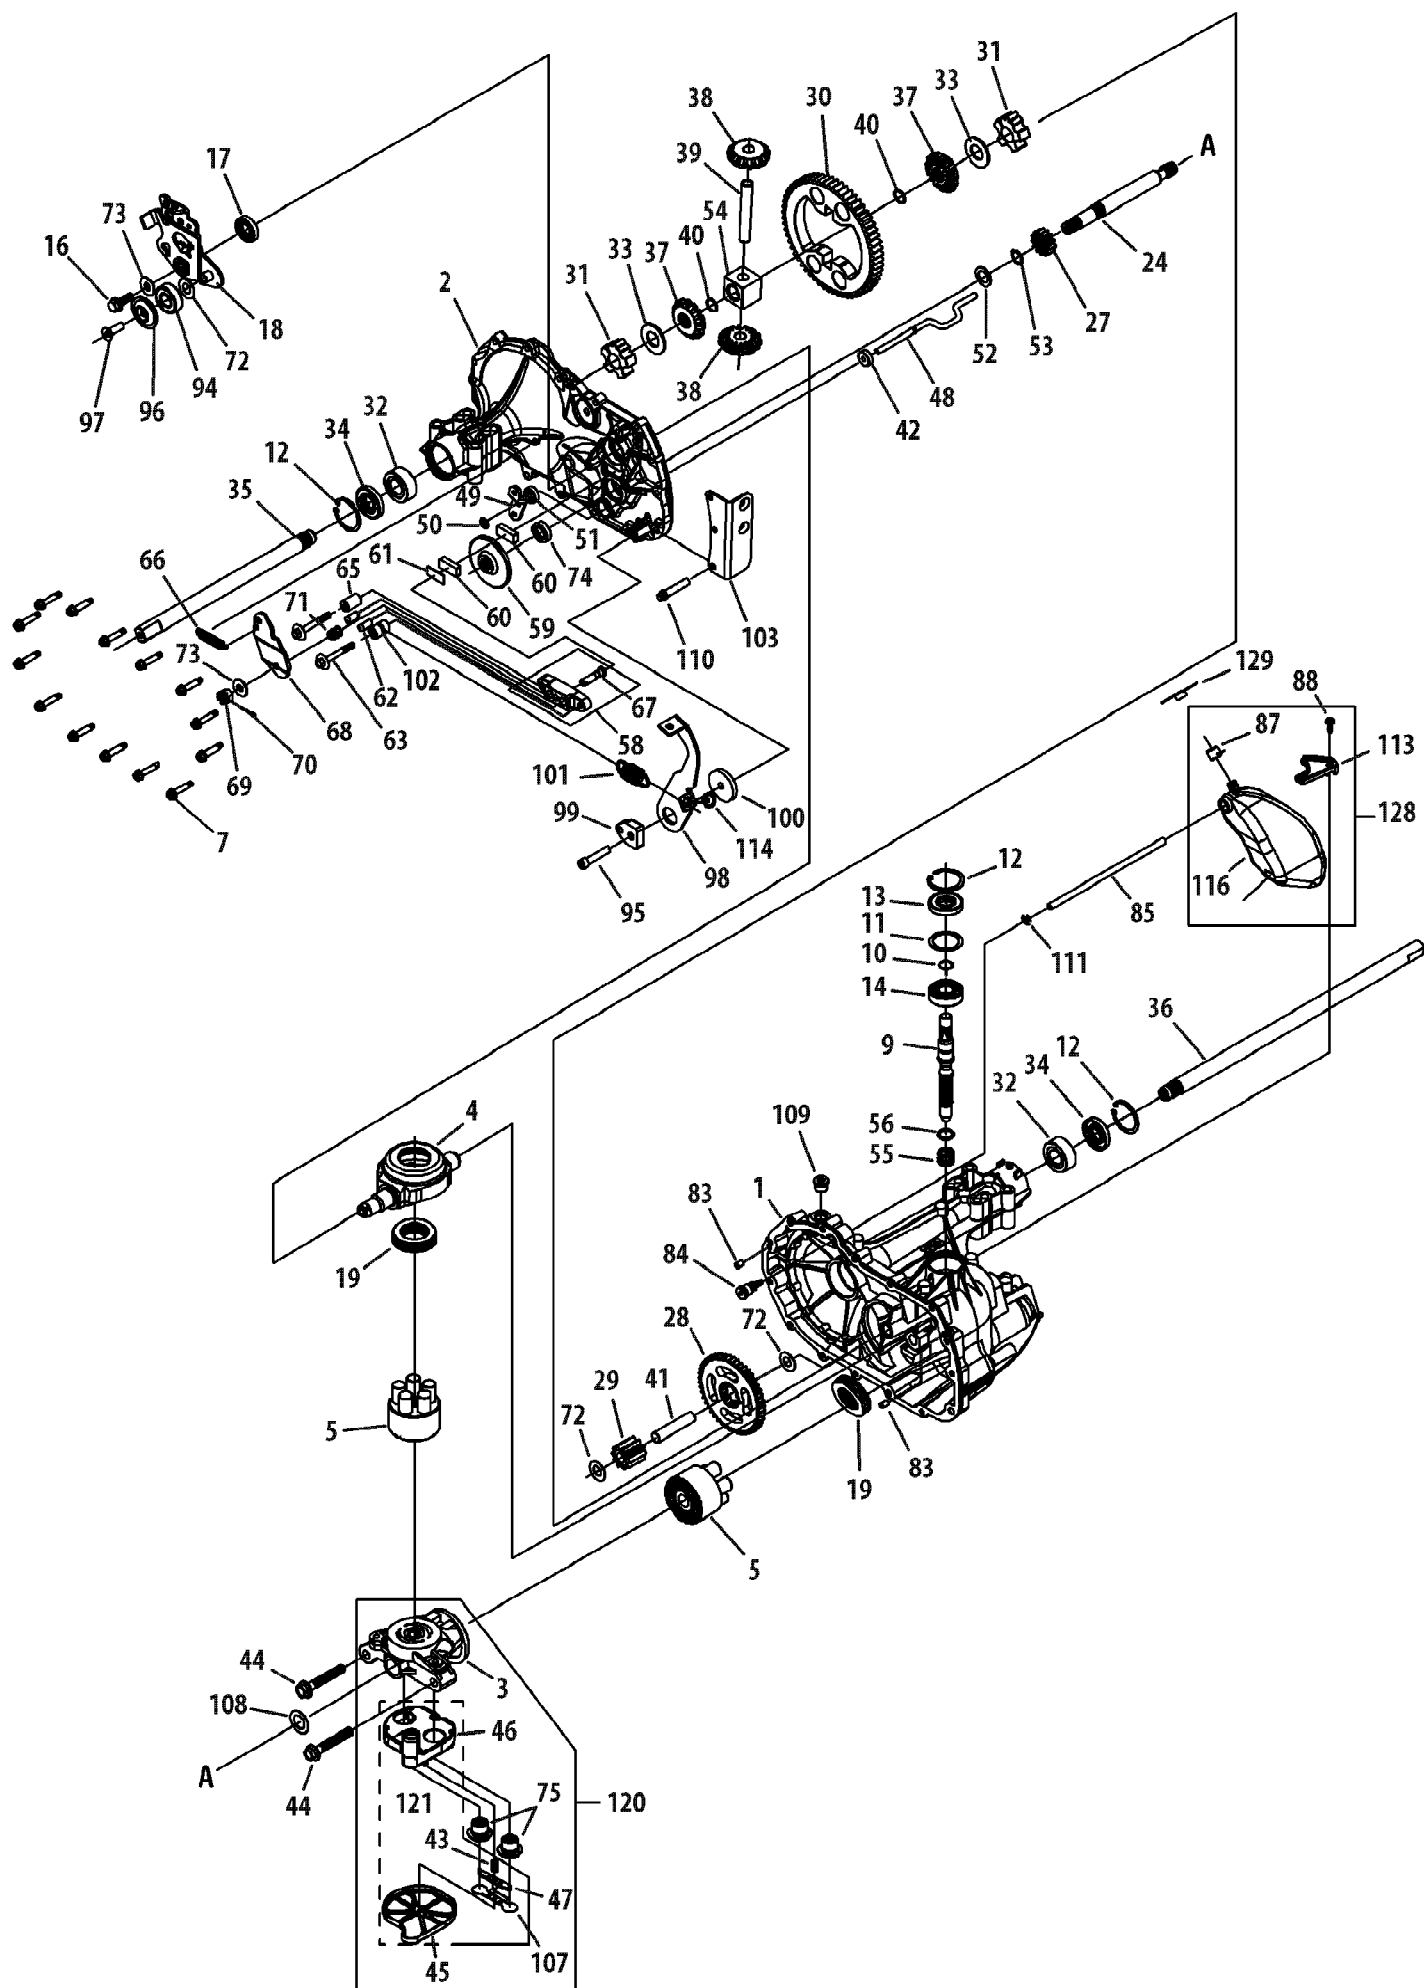 

LTX1046VT Tractor (2010 & After)
Transmission, Hydrostatic

Page 58 of 62

Ref #	Part Number	Qty	S/P/F	Description
1	HG-70467	1		Main Housing Assembly
1	N/A	1		Main Housing, Machined
1	N/A	1		Bushing ,865 x 985 x .790
2	HG-70483	1	/P	Main Housing Assembly
2	N/A	1		Main Housing, Machined
2	N/A	1		Bushing ,865 x 985 x .790
2	N/A	1		Bushing 624 x 719 x .562
3	HG-70477	1		Center Section Assembly
3	N/A	1		Center Section Machined
3	N/A	1		Bushing. 707 x .788 x .591
4	HG-51048	1	/P	Swashplate, Trunnion Machined
5	HG-70331	1	/P	Block - Assembly
5	N/A	1		Block - Cylinder
5	N/A	1		Piston
5	N/A	1		Spring, Compression
5	N/A	1		Washer - Thrust
7	HG-51190	1	/P	Hex Flange Screw 1/4-20 x-1,25
9	HG-51062	1	/P	Shaft, Input
10	HG-2000022	1	/P	Ring - Retaining
11	HG-50951	1	/P	Spacer
12	HG-50329	1	/P	Ring - Retaining
13	HG-51161	1	/P	Seal Lip .67 x 1.58 x .276
14	HG-50315	1		Ball Bearing 17mm Id x 40mm Od
16	HG-51064	1		Bolt. Flange 5/16-24 x .94 (Patch)
17	HG-51140	1	/P	Lip Seal 18 x 32 x 7
18	HG-51119	1	/P	Arm Control
19	HG-50551	1	S	Bearing 30x52 x 13 Thrust
24	HG-50966	1		Shaft Motor
27	HG-51130	1		Gear - Pinnion 13t
28	HG-51129	1		10t/48t Gear
29	HG-51043	1	/P	Gear Jot Jackshaft
30	HG-51044	1		60t Bull Gear
31	HG-51088	1	/P	Sleeve Bearing .75 x 1.750 x .625
32	HG-51089	1	/P	Sleeve Bearing .75 x 1.575 x .625
33	HG-44875	1	/P	Washer 3/4 Id x 1-1/2 Od x .13 Thk
34	HG-51066	1	/P	Lip Seal Axle Seal
35	HG-51079	1	/P	Shaft Axle .75 x 11.39 (Dd R. H.)
36	HG-51078	1	/P	Shaft Axle .75 x 17.99 (Dd, L, H.)
37	HG-44096	1	S	Miter Gear (Splined)
38	HG-44097	1		Miter Gear 15t (0.5 Id)
39	HG-50146	1		Shaft
40	HG-44871	1	/P	Ring, Spiral Retaining
41	HG-51083	1		Pin, Jackshaft
42	HG-51100	1		Magnet, Ring
43	HG-51136	1		Spring, Bypass
44	HG-50016	1		Hydro Mtg Screw 3/8-24 x 2.5
45	HG-51581	1		Bottom, Filter
46	HG-51580	1		Base Filter W/ Poppet
47	HG-51091	1		Actuator Bypass
48	HG-51098	1		Rod Bypass Actuator
49	HG-51135	1		Arm, Bypass
50	HG-51116	1	/P	Retaining Ring 0.250 External
51	HG-51081	1	/P	Seal Lip .741 x .250 x .250 Tc

LTX1046VT Tractor (2010 & After)
Transmission, Hydrostatic

Page 59 of 62

Ref #	Part Number	Qty	S/P/F	Description
52	HG-44371	1	/P	Flat Washer 5/8 Id x 1.0 Od x .05
53	HG-44145	1		Retaining Ring
54	HG-51071	1		Bearing, Center Block
55	HG-2003014	1	/P	Spring - Helical Compression
56	HG-2003017	1	/P	Washer
58	HG-62589	1	/P	Kit, Brake Yoke
58	N/A	1		Brake Yoke
58	N/A	1		Sq. Hd, Bolt 5/16-24 Ribbed
59	HG-51072	1	/P	Rotor, Brake
60	917-0678	1	/P	Brake Puck
61	917-0682	1	/P	Puck Plate
62	941-0343	1	/P	Brake Actuating Pin
63	HG-51146	1		Hex Screw 1/4-20 x 2 w/ Patch
65	HG-23711	1		Spacer
66	HG-70896	1		Kit, Spring
67	HG-44138	1		So. Hd, Bolt 5/16-24- Ribbed
68	HG-44094	1	/P	Arm, Brake
69	912-0273	1	/P	Slotted Hex Nut 5/16-24
70	914-0507	1	/P	Cotter Pin 3/32 x 3/4
71	HG-50919	1	/P	Comp. Spring Brake Anti-Drag
72	HG-50132	1	/P	Washer, Ht .5 I. D. x 1 OD, x .032
73	736-0371	1	/P	Flat Washer, 11/32 ID x 7/8 OD
74	HG-70719	1	/P	Kit, Seal
74	N/A	1		Oil, Seal 625 x Lo x .25
74	N/A	1		Ring, Ret-Star Washer
74	N/A	1		Bulletin, Shaft Seal
75	HG-51084	1	/P	Check Plug Assem, .027 Washer
83	HG-9004800-2506	1	/P	Pin, Standard Headless
84	HG-51143	1	/P	Fitting, 5/16 Sae 5/32 Tube
85	HG-51147	1		Hose, Expansion Tank
87	HG-51251	1		Cap,. Vent
88	HG-50653	1	/P	Bolt, Self Tapping 10-32 x 112
94	HG-44147	1		Ball Bearing .62 Id x 1.38 x 44
95	HG-50837	1		Cap Screw, 5/16-24 x 1-112
96	HG-51200	1		Spacer, Locating
97	HG-50870	1		Screw, Sfhcs
98	HG-51120	1		Arm, Return
99	HG-51097	1		Puck, Adjusting
100	HG-51122	1		Washer, .325 OD x 1.6 ID x .150
101	HG-51131	1	/P	Spring, Extension
102	HG-51123	1		Spacer, .56 x .26 x .87
103	HG-51223	1		Bracket, Torque
107	HG-51134	1		Deflector
108	HG-51069	1		Washer, Motor Shaft .71 Id 1.15 Od
109	HG-9005110-5600	1	/P	Plug, SAE #6
110	HG-50868	1		Torx Head Screw, 5/16-18
111	HG-51144	1		O-Ring, .07 x .301 ID
113	HG-51179	1		Bracket, Support Expansion Tank
114	HG-51184	1	/P	Spring Guide
116	HG-51196	1		Silicon Sponge
120	HG-70759	1		Center Section - Bypass Assm
120	N/A	1		Center Section Machined
120	N/A	1		Base Filter w/ Poppet


LTX1046VT Tractor (2010 & After)
Transmission, Hydrostatic

Page 60 of 62

Ref #	Part Number	Qty	S/P/F	Description
120	N/A	1		Check Plug Assembly
120	N/A	1		Spring Bypass
120	N/A	1		Actuator Bypass
120	N/A	1		Deflector
120	N/A	1		Bottom, Filter
120	N/A	1		Bushing, .707 x .788 x .591
121	HG-70756	1	/P	Filter Assembly
121	N/A	1		Bottom Filter
121	N/A	1		Base Filter w/ Poppet
121	N/A	1		Spring Bypass
121	N/A	1		Actuator Bypass
121	N/A	1		Deflector
128	HG-70503	1	/P	Kit, Expansion Tank
128	N/A	1		Tank, Expansion
128	N/A	1		Cap, Vent
128	N/A	1		Bolt, Self Tapping 10-32 x 1/2
128	N/A	1		Bracket, Support Expansion Tank
128	N/A	1		Silicon-Sponge 112 x 1/2 x 3/16
129	HG-51252	1		Cap, Expansion Tank Shipping
	HG-50928	1	/P	Sealant Not Shown
	HG-70463	1	/P	Seal, O-Ring Kit Not Shown
		1		20w-50 Oil (78.8 oz) Not Shown

LTX1046VT Tractor (2010 & After)
Wheels, Front & Rear

 Page 61 of 62

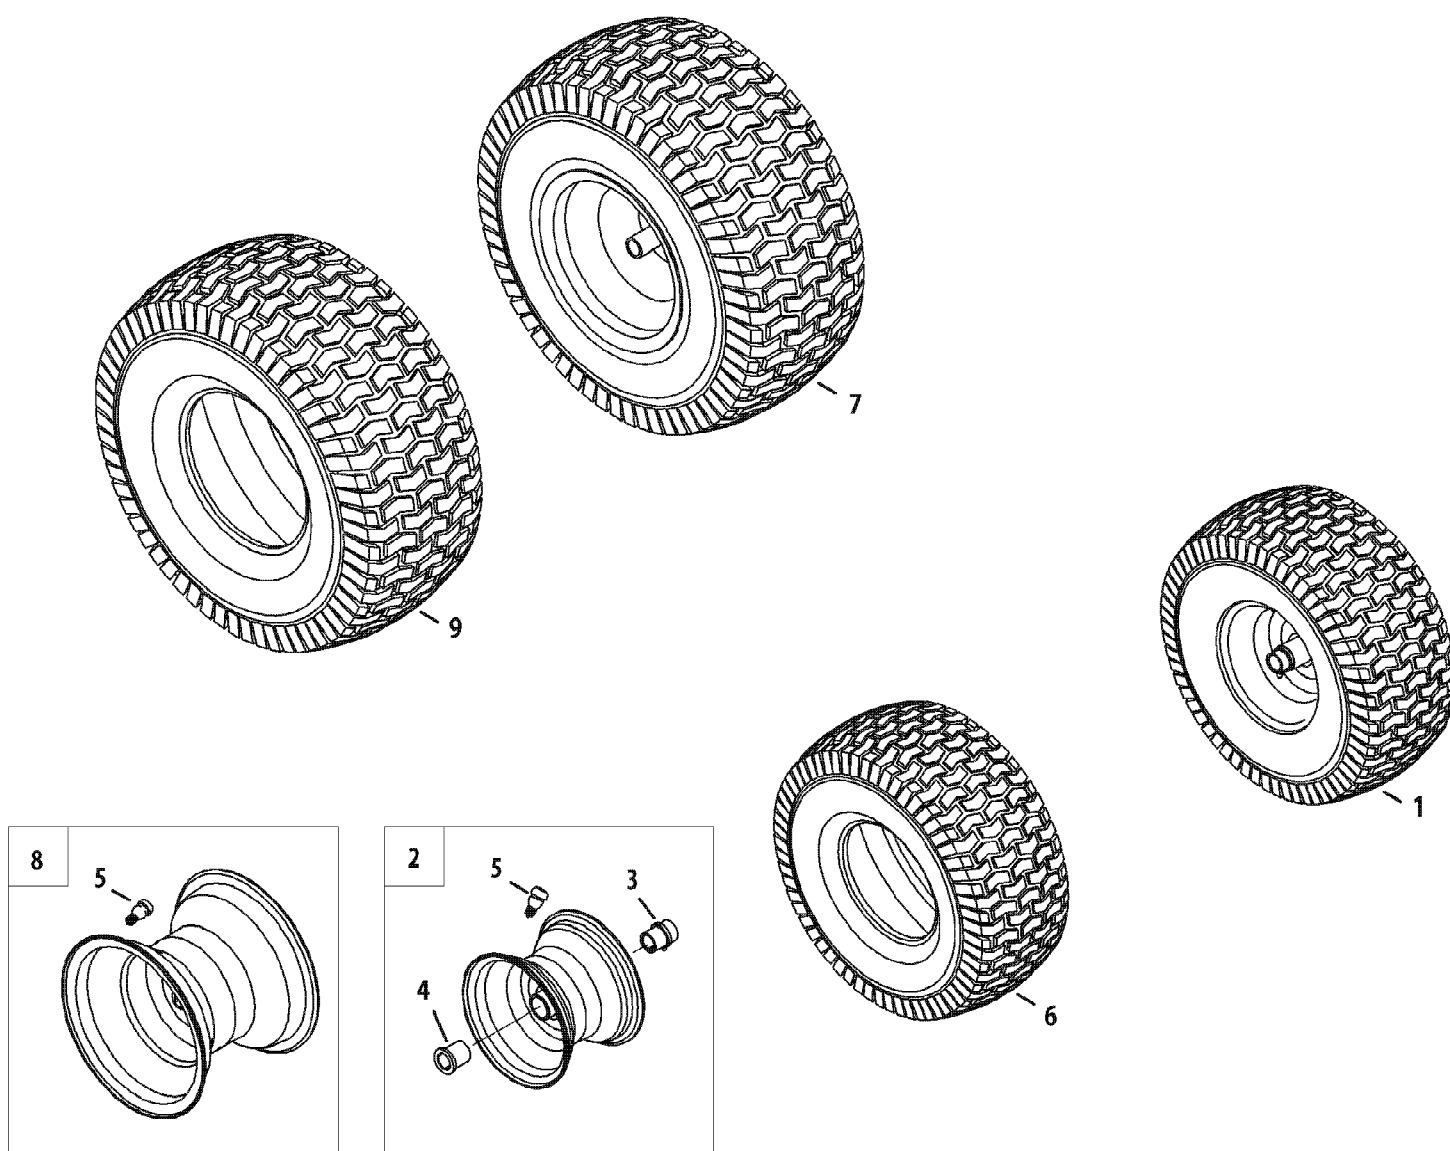

LTX1046VT Tractor (2010 & After)
Wheels, Front & Rear

Page 62 of 62

Ref #	Part Number	Qty	S/P/F	Description
1	N/A	1		Wheel Ass'y, Complete, 15 x 6 x 6
2	634-04405-0499	1		Rim Ass'y, 6.0 x 4.5, Plastic Bearings
3	741-0990B	1	/P	Bearing, Flange, .760 ID w/ Fitting
4	741-0516B	1	/P	Bearing, Flange, .760 x 1.00 x 1.20
5	934-0255	1	/P	Valve, Tubeless Air
6	734-1731-0901	1	/P	Tire, 15 x 6 x 6 Sq Shoulder
7	634-0177-0931	1		Wheel, Complete, 20 x 10 x 8
8	634-04369-0499	1		Rim Ass'y, 8.0 x 7.0 x .750 ID
9	734-1730-0901	1	/P	Tire, 20 x 8 x 8 Sq Shoulder