 
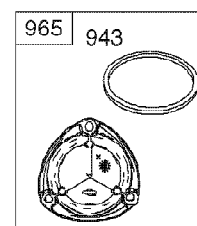 
 
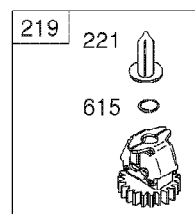 
 
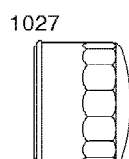 
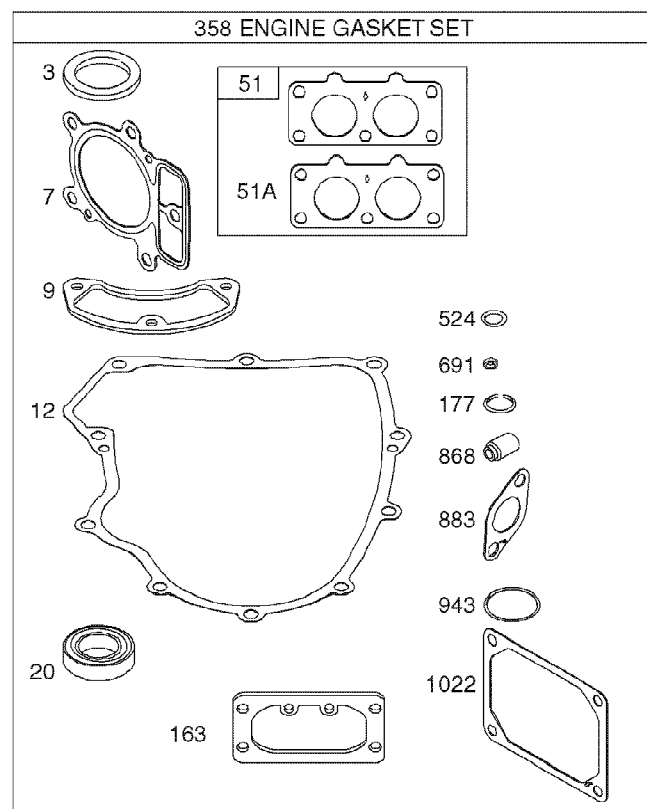 
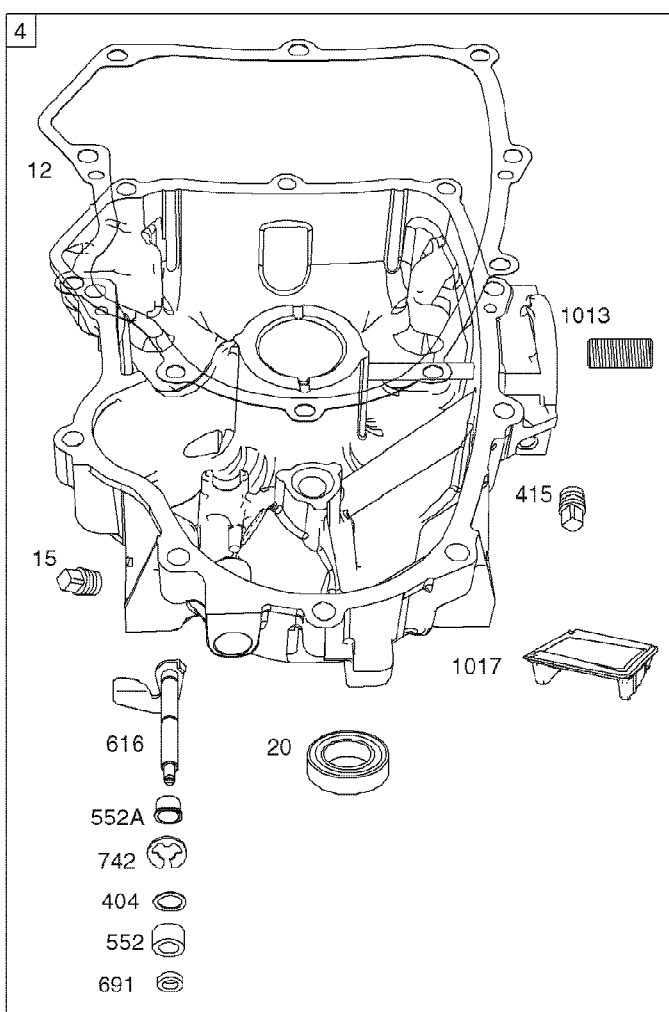 
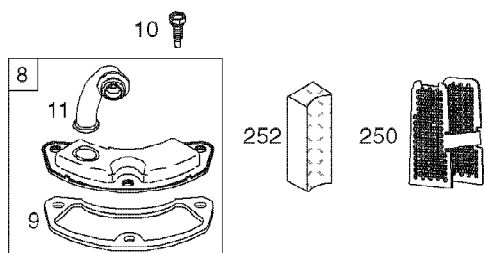 


LTX1050VT Tractor (2009 & Before)
B&S Engine 44M777-0720 1

Page 1 of 58

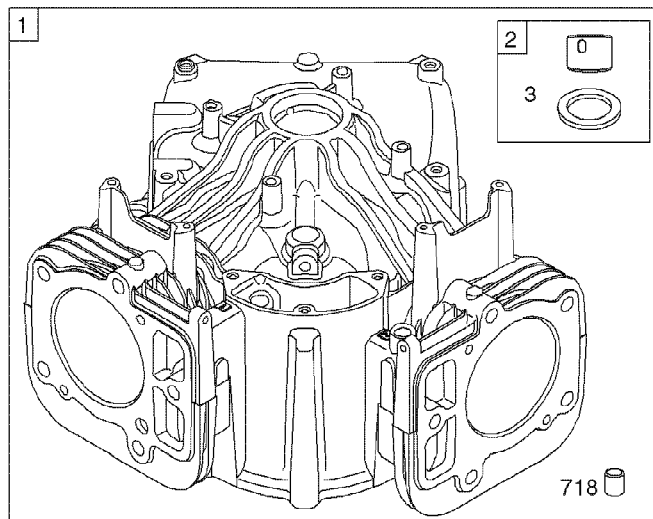

LTX1050VT Tractor (2009 & Before)
B&S Engine 44M777-0720 1

Page 2 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	BS-793564	1		Cylinder Assembly
2	BS-499585	1		Kit-Bushing/Seal (Magneto Side)
3	BS-391086S	1	/P	Oil Seal (Magneto Side) Incl. in Ref No. 358
4	BS-796230	1	S	EngineSump
5	BS-796231	1	/P	Cylinder Head (Cylinder #1)
5A	BS-796232	1	/P	Cylinder Head (Cylinder #2)
7	BS-693997	1	/P	Cylinder Head Gasket Incl. in Ref No. 358 & 1095
8	BS-792185	1	/P	Breather Assembly
9	BS-690937	1		Breather Gasket Incl. in Ref No. 358
10	BS-697551	1		Screw (Breather Assembly)
11	BS-792184	1	/P	Breather Tube
12	BS-697227	1	/P	Crankcase Gasket Incl. in Ref No. 358
13	BS-793988	1		Screw (Cylinder Head)
15	BS-690946	1	/P	Oil Drain Plug
16	BS-796540	1		Crankshaft
20	BS-795387	1	/P	Oil Seal (PTO Side) Incl. in Ref No. 358
22	BS-694966	1	/P	Screw (Crankcase Cover/Sump)
23	BS-691053	1		Flywheel
24	BS-222698S	1	/P	Flywheel Key
25	BS-792023	1	/P	Piston Assembly (Standard)
25	BS-792072	1		Piston Assembly (.020" Oversize)
26	BS-793561	1		Ring Set (Standard)
26	BS-792073	1		Ring Set (.020" Oversize)
27	BS-690975	1		Piston Pin Lock
28	BS-696581	1		Piston Pin
29	BS-699699	1	S	Connecting Rod
32	BS-690976	1		Screw (Connecting Rod)
33	BS-697576	1		Exhaust Valve
34	BS-792200	1	/P	Intake Valve
35	BS-694865	1		Valve Spring (Intake)
36	BS-694865	1		Valve Spring (Exhaust)
40	BS-690964	1	S	Valve Retainer
42	BS-499586	1	/P	Valve Keeper
45	BS-690977	1	/P	Valve Tappet
46	BS-792555	1		Cam Gear
48	BS-698172	1	/P	Short Block
50	BS-695241	1	/P	Intake Manifold
51	BS-795123	1		Intake Gasket Incl. in Ref No. 358
51A	BS-690950	1		Intake Gasket
53	BS-690951	1		Stud (Carburetor)
54	BS-699816	1		Screw (Intake Manifold)
73	BS-494439	1	/P	Rotating Screen
74	BS-698425	1		Screw (Rotating Screen)
75	BS-691056	1		Washer (Flywheel)
95	BS-690718	1		Screw (Throttle Valve)
98	BS-699721	1		Idle Speed Kit
104	BS-694918	1		Float Hinge Pin Incl. in Ref No. 121
105	BS-698537	1		Float Needle Valve
108	BS-699723	1		Choke Valve
117	BS-792296	1		Main Jet (Standard) (Left Jet)
117A	BS-842627	1		Main Jet (Standard) (Right Jet)

LTX1050VT Tractor (2009 & Before)
B&S Engine 44M777-0720 1

Page 3 of 58

Ref #	Part Number	Qty	S/P/F	Description
118	BS-699457	1		Main Jet (High Altitude) (Left Jet)
118A	BS-699733	1		Main Jet (High Altitude) (Right Jet)
121	BS-792455	1	S	Carburetor Overhaul Kit Incl. Ref No. 104, 137, 163, 276, 633,
125	BS-796227	1		Carburetor
130	BS-690993	1		Throttle Valve
131	BS-499805	1		Throttle Shaft Kit
133	BS-699724	1		Carburetor Float
135	BS-699729	1		Fuel Transfer Tube
137	BS-690994	1		Float Bowl Gasket Incl. in Ref No. 121
141	BS-796228	1		Choke Shaft Kit
142	BS-699726	1		Carburetor Nozzle
146	BS-690979	1	/P	Timing Key
150	BS-690995	1		Nozzle Gasket
163	BS-691001	1		Air Cleaner Gasket Incl. in Ref No. 358 & 121
165	BS-693148	1		Nut (Ring Gear)
177	BS-691031	1	/P	O-Ring Seal (Dipstick)
187	BS-791766	1	S	Fuel Line (Cut to Required Length)
188	BS-697551	1		Screw (Control Bracket)
192	BS-690083	1		Rocker Arm Adjuster
197	BS-697820	1		Screw (Back Plate)
209	BS-796224	1		Governor Spring (Yellow/Black)
211	BS-796225	1		Governed Idle Spring (Orange)
212	BS-695238	1		Throttle Link
216	BS-796229	1		Choke Link
217	BS-695409	1		Choke Return Spring
219	BS-793338	1	/P	Governor Gear
220	BS-690412	1	/P	Washer (Governor Gear)
221	BS-841026	1		Governor Cup
222	BS-796226	1		Control Bracket
227	BS-796223	1		Governor Control Lever
231	BS-690718	1		Screw (Choke Valve)
239	BS-792028	1		Oil Pressure Switch
240	BS-695666	1	S	Fuel Filter
250	BS-690957	1		Breather Retainer
252	BS-794389	1		Oil Collector
265	BS-691024	1	/P	Casing Clamp
267	BS-695134	1		Screw (Casing Clamp)
276	BS-695410	1		Sealing Washer (Fuel Solenoid) Incl. in Ref No. 121
278	BS-792651	1		Washer (Governor Control Lever)
287	BS-697551	1		Screw (Dipstick Tube)
304	BS-796678	1	S	Blower Housing
305	BS-691005	1		Screw (Blower Housing)
305A	BS-790690	1		Screw (Blower Housing to Intake Elbow)
306	BS-796541	1		Cylinder Shield (Cylinder #2)
307	BS-697551	1		Screw (Cylinder Shield) (1.4-20 x 2.3)
309	BS-497595	1	/P	Starter Motor
310	BS-690323	1		Screw (Starter Motor)
332	BS-691059	1		Nut (Flywheel)
333	BS-691060	1	/P	Magneto Armature
334	BS-691061	1		Screw (Magneto Armature)

LTX1050VT Tractor (2009 & Before)
B&S Engine 44M777-0720 1

Page 4 of 58

Ref #	Part Number	Qty	S/P/F	Description
337	759-3336	1	/P	Spark Plug
358	BS-694012	1	/P	Engine Gasket Set
385	BS-697551	1		Screw (Fuel Pump)
387	BS-808656	1	/P	Fuel Pump
404	BS-690442	1		Washer (Governor Crank)
415	BS-794903	1		Plug (Oil Pressure Switch)
418	BS-795912	1		Carburetor Plate
431	BS-792297	1		Intake Elbow
445	BS-792105	1	/P	Air Cleaner Cartridge Filter
447	BS-691003	1	/P	Screw (Air Guide Cover) 10-24 x 7.16)
447A	BS-697551	1		Screw (Air Guide Cover)
467	BS-790697	1		Air Cleaner Knob
474	BS-696457	1	/P	Alternator
501	BS-691188	1	S	Regulator
503	BS-691532	1	/P	Starter Strap
505	BS-691029	1		Nut (Governor Control Lever)
510	BS-696541	1	/P	Starter Drive
513	BS-692024	1	/P	Drive Clutch
523	BS-691036	1		Dipstick
524	BS-691032	1		Dipstick Tube Seal Incl. in Ref No. 358
525	BS-691037	1		Dipstick Tube
526	BS-691129	1	/P	Screw (Regulator)
544	N/A	1		Starter Armature (Service with Starter Motor BS-497595, Reference 309)
552	BS-690552	1		Governor Crank Bushing
552A	BS-690553	1		Governor Crank Bushing
562	BS-690311	1		Screw (Governor Control Lever)
573	BS-790444	1		Back Plate
579	BS-691029	1		Nut (Starter Cable)
601	BS-691038	1		Hose Clamp (Black)
601A	BS-791850	1	/P	Hose Clamp (Green)
615	BS-698290	1	/P	Governor Shaft Retainer
616	BS-691045	1		Governor Crank
617	BS-697891	1		O-Ring Seal (Intake Manifold) (Red)
628	BS-697551	1		Screw (Fuel Pump Bracket)
633	BS-699813	1		Choke Seal/Throttle Shaft Incl. in Ref No. 121
635	BS-66538S	1	/P	Spark Plug Boot
654	BS-690958	1	/P	Nut (Carburetor)
668	BS-691215	1		Spacer (Rotating Screen) Incl. in Ref No. 358
668A	BS-691500	1	/P	Spacer (Rotating Screen)
672	BS-690234	1		Carburetor Plate Gasket
691	BS-790574	1		Governor Shaft Seal Incl. in Ref No. 358
695	BS-693149	1		Screw (Ring Gear)
697	BS-690372	1	S	Screw (Drive Cap)
703	BS-691010	1		Clip
718	BS-690959	1	/P	Locating Pin
726	BS-499612	1		Ring Gear
729	BS-694123	1		Wire Clip
741	BS-690980	1		Timing Gear
742	BS-690328	1	/P	E-Ring Retainer (Governor Crank)
750	BS-696999	1		Screw (Oil Pump Cover)
783	BS-695708	1	/P	Pinion Gear

LTX1050VT Tractor (2009 & Before)
B&S Engine 44M777-0720 1

Page 5 of 58

Ref #	Part Number	Qty	S/P/F	Description
788	BS-793145	1		Fuel Pump Bracket
789	BS-698330	1		Wiring Harness
798	BS-697890	1		Screw (Rocker Arm)
801	BS-691283	1		Drive Cap
802	BS-691286	1	/P	End Cap
803	N/A	1		Starter Housing (Service with Starter Motor BS-497595, Reference 309)
847	BS-499602	1		Dipstick/Tube Assembly
851	BS-493880	1	S	Spark Plug Terminal
865	BS-691012	1		Air Guide Cover (Cylinder #1)
865A	BS-792286	1		Air Guide Cover (Valley)
868	BS-690968	1	/P	Valve Seat
877	BS-399916	1		Alternator Wire/Connector
877A	BS-790544	1		Alternator Wire/Connector
883	BS-690970	1	/P	Exhaust Gasket
914	BS-691127	1	/P	Screw (Rocker Cover)
918	BS-793147	1		Vacuum Hose
943	BS-796222	1		O-Ring Seal (Oil Pump Cover)
947	BS-841546	1		Fuel Solenoid
965	BS-796221	1		Oil Pump Cover
967	BS-792303	1	/P	Pre-Cleaner Filter
968	BS-795120	1	/P	Air Cleaner Cover
975	BS-793592	1		Float Bowl
987	BS-691000	1		Throttle Shaft Seal
1005	BS-791236	1		Flywheel Fan
1013	BS-690954	1	/P	Oil Filter Nipple
1017	BS-796214	1		Oil Pump Screen
1022	BS-690971	1	/P	Rocker Cover Gasket
1023	BS-793146	1		Rocker Cover (Cylinder #1)
1023A	BS-499600	1		Rocker Cover (Cylinder #2)
1024	BS-796220	1		Oil Pump
1026	BS-690981	1	/P	Push Rod (Exhaust)
1026A	BS-690982	1	/P	Push Rod (Intake)
1027	BS-795890	1	S	Oil Filter
1029	BS-690972	1		Rocker Arm
1036	N/A	1		Emissions Label
1040	BS-791237	1		Trim Plate
1051	BS-691265	1	/P	Retaining Ring (Starter Drive)
1054	BS-280275	1		Cable Tie
1058	BS-277103	1		Operator's Manual
1059	BS-698516	1		Screw/Washer Kit (Alternator)
1070	BS-791680	1	/P	Screw (Flywheel Fan)
1090	BS-691293	1	/P	Brush Retainer
1095	BS-694013	1	/P	Valve Gasket Set
1100	BS-791959	1		Rocker Arm Pivot
1119	BS-691183	1	S	Screw (Alternator)
1124	BS-841653	1		O-Ring Seal (Fuel Transfer Tube)
1124A	BS-690988	1		O-Ring Seal (Fuel Transfer Tube)
1126	BS-690991	1		Screw (Fuel Transfer Tube)
1127	BS-695407	1		Screw (Fuel Bowl)
1128	BS-690990	1		Screw (Carburetor Nozzle)
1169	BS-690990	1		Screw (Carburetor Plate)






LTX1050VT Tractor (2009 & Before)
B&S Engine 44M777-0720 1

Page 6 of 58


Ref #	Part Number	Qty	S/P/F	Description
1329	BS-44Q777-0037	1	S	Replacement Engine (Replacement engine listed is not available in the State of California. Repair with individual parts).

LTX1050VT Tractor (2009 & Before)
B&S Engine 44M777-0720 2

     Page 7 of 58

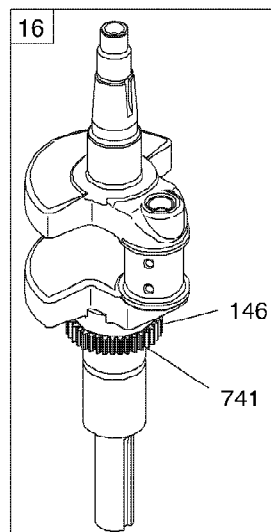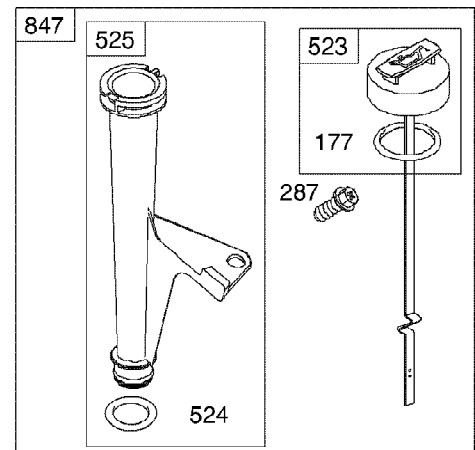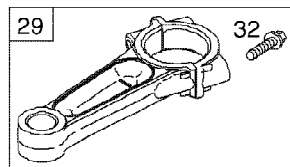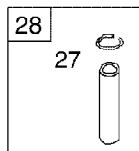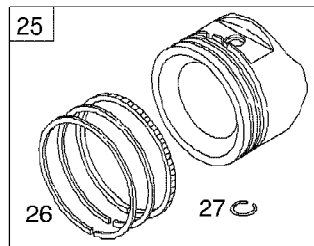

24

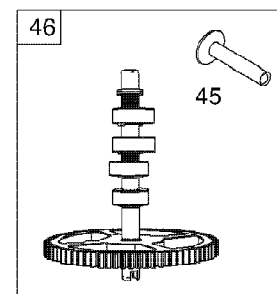 

LTX1050VT Tractor (2009 & Before)
B&S Engine 44M777-0720 2

Page 8 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	BS-793564	1		Cylinder Assembly
2	BS-499585	1		Kit-Bushing/Seal (Magneto Side)
3	BS-391086S	1	/P	Oil Seal (Magneto Side) Incl. in Ref No. 358
4	BS-796230	1	S	Engine Sump
5	BS-796231	1	/P	Cylinder Head (Cylinder #1)
5A	BS-796232	1	/P	Cylinder Head (Cylinder #2)
7	BS-693997	1	/P	Cylinder Head Gasket Incl. in Ref No. 358 & 1095
8	BS-792185	1	/P	Breather Assembly
9	BS-690937	1		Breather Gasket Incl. in Ref No. 358
10	BS-697551	1		Screw (Breather Assembly)
11	BS-792184	1	/P	Breather Tube
12	BS-697227	1	/P	Crankcase Gasket Incl. in Ref No. 358
13	BS-793988	1		Screw (Cylinder Head)
15	BS-690946	1	/P	Oil Drain Plug
16	BS-796540	1		Crankshaft
20	BS-795387	1	/P	Oil Seal (PTO Side) Incl. in Ref No. 358
22	BS-694966	1	/P	Screw (Crankcase Cover/Sump)
23	BS-691053	1		Flywheel
24	BS-222698S	1	/P	Flywheel Key
25	BS-792023	1	/P	Piston Assembly (Standard)
25	BS-792072	1		Piston Assembly (.020" Oversize)
26	BS-793561	1		Ring Set (Standard)
26	BS-792073	1		Ring Set (.020" Oversize)
27	BS-690975	1		Piston Pin Lock
28	BS-696581	1		Piston Pin
29	BS-699699	1	S	Connecting Rod
32	BS-690976	1		Screw (Connecting Rod)
33	BS-697576	1		Exhaust Valve
34	BS-792200	1	/P	Intake Valve
35	BS-694865	1		Valve Spring (Intake)
36	BS-694865	1		Valve Spring (Exhaust)
40	BS-690964	1	S	Valve Retainer
42	BS-499586	1	/P	Valve Keeper
45	BS-690977	1	/P	Valve Tappet
46	BS-792555	1		Cam Gear
48	BS-698172	1	/P	Short Block
50	BS-695241	1	/P	Intake Manifold
51	BS-795123	1		Intake Gasket Incl. in Ref No. 358
51A	BS-690950	1		Intake Gasket
53	BS-690951	1		Stud (Carburetor)
54	BS-699816	1		Screw (Intake Manifold)
73	BS-494439	1	/P	Rotating Screen
74	BS-698425	1		Screw (Rotating Screen)
75	BS-691056	1		Washer (Flywheel)
95	BS-690718	1		Screw (Throttle Valve)
98	BS-699721	1		Idle Speed Kit
104	BS-694918	1		Float Hinge Pin Incl. in Ref No. 121
105	BS-698537	1		Float Needle Valve
108	BS-699723	1		Choke Valve
117	BS-792296	1		Main Jet (Standard) (Left Jet)
117A	BS-842627	1		Main Jet (Standard) (Right Jet)

LTX1050VT Tractor (2009 & Before)
B&S Engine 44M777-0720 2

Page 9 of 58

Ref #	Part Number	Qty	S/P/F	Description
118	BS-699457	1		Main Jet (High Altitude) (Left Jet)
118A	BS-699733	1		Main Jet (High Altitude) (Right Jet)
121	BS-792455	1	S	Carburetor Overhaul Kit Incl. Ref No. 104, 137, 163, 276, 633,
125	BS-796227	1		Carburetor
130	BS-690993	1		Throttle Valve
131	BS-499805	1		Throttle Shaft Kit
133	BS-699724	1		Carburetor Float
135	BS-699729	1		Fuel Transfer Tube
137	BS-690994	1		Float Bowl Gasket Incl. in Ref No. 121
141	BS-796228	1		Choke Shaft Kit
142	BS-699726	1		Carburetor Nozzle
146	BS-690979	1	/P	Timing Key
150	BS-690995	1		Nozzle Gasket
163	BS-691001	1		Air Cleaner Gasket Incl. in Ref No. 358 & 121
165	BS-693148	1		Nut (Ring Gear)
177	BS-691031	1	/P	O-Ring Seal (Dipstick)
187	BS-791766	1	S	Fuel Line (Cut to Required Length)
188	BS-697551	1		Screw (Control Bracket)
192	BS-690083	1		Rocker Arm Adjuster
197	BS-697820	1		Screw (Back Plate)
209	BS-796224	1		Governor Spring (Yellow/Black)
211	BS-796225	1		Governed Idle Spring (Orange)
212	BS-695238	1		Throttle Link
216	BS-796229	1		Choke Link
217	BS-695409	1		Choke Return Spring
219	BS-793338	1	/P	Governor Gear
220	BS-690412	1	/P	Washer (Governor Gear)
221	BS-841026	1		Governor Cup
222	BS-796226	1		Control Bracket
227	BS-796223	1		Governor Control Lever
231	BS-690718	1		Screw (Choke Valve)
239	BS-792028	1		Oil Pressure Switch
240	BS-695666	1	S	Fuel Filter
250	BS-690957	1		Breather Retainer
252	BS-794389	1		Oil Collector
265	BS-691024	1	/P	Casing Clamp
267	BS-695134	1		Screw (Casing Clamp)
276	BS-695410	1		Sealing Washer (Fuel Solenoid) Incl. in Ref No. 121
278	BS-792651	1		Washer (Governor Control Lever)
287	BS-697551	1		Screw (Dipstick Tube)
304	BS-796678	1	S	Blower Housing
305	BS-691005	1		Screw (Blower Housing)
305A	BS-790690	1		Screw (Blower Housing to Intake Elbow)
306	BS-796541	1		Cylinder Shield (Cylinder #2)
307	BS-697551	1		Screw (Cylinder Shield) (1.4-20 x 2.3)
309	BS-497595	1	/P	Starter Motor
310	BS-690323	1		Screw (Starter Motor)
332	BS-691059	1		Nut (Flywheel)
333	BS-691060	1	/P	Magneto Armature
334	BS-691061	1		Screw (Magneto Armature)

LTX1050VT Tractor (2009 & Before)
B&S Engine 44M777-0720 2

Page 10 of 58

Ref #	Part Number	Qty	S/P/F	Description
337	759-3336	1	/P	Spark Plug
358	BS-694012	1	/P	Engine Gasket Set
385	BS-697551	1		Screw (Fuel Pump)
387	BS-808656	1	/P	Fuel Pump
404	BS-690442	1		Washer (Governor Crank)
415	BS-794903	1		Plug (Oil Pressure Switch)
418	BS-795912	1		Carburetor Plate
431	BS-792297	1		Intake Elbow
445	BS-792105	1	/P	Air Cleaner Cartridge Filter
447	BS-691003	1	/P	Screw (Air Guide Cover) 10-24 x 7.16)
447A	BS-697551	1		Screw (Air Guide Cover)
467	BS-790697	1		Air Cleaner Knob
474	BS-696457	1	/P	Alternator
501	BS-691188	1	S	Regulator
503	BS-691532	1	/P	Starter Strap
505	BS-691029	1		Nut (Governor Control Lever)
510	BS-696541	1	/P	Starter Drive
513	BS-692024	1	/P	Drive Clutch
523	BS-691036	1		Dipstick
524	BS-691032	1		Dipstick Tube Seal Incl. in Ref No. 358
525	BS-691037	1		Dipstick Tube
526	BS-691129	1	/P	Screw (Regulator)
544	N/A	1		Starter Armature (Service with Starter Motor BS-497595, Reference 309)
552	BS-690552	1		Governor Crank Bushing
552A	BS-690553	1		Governor Crank Bushing
562	BS-690311	1		Screw (Governor Control Lever)
573	BS-790444	1		Back Plate
579	BS-691029	1		Nut (Starter Cable)
601	BS-691038	1		Hose Clamp (Black)
601A	BS-791850	1	/P	Hose Clamp (Green)
615	BS-698290	1	/P	Governor Shaft Retainer
616	BS-691045	1		Governor Crank
617	BS-697891	1		O-Ring Seal (Intake Manifold) (Red)
628	BS-697551	1		Screw (Fuel Pump Bracket)
633	BS-699813	1		Choke Seal/Throttle Shaft Incl. in Ref No. 121
635	BS-66538S	1	/P	Spark Plug Boot
654	BS-690958	1	/P	Nut (Carburetor)
668	BS-691215	1		Spacer (Rotating Screen) Incl. in Ref No. 358
668A	BS-691500	1	/P	Spacer (Rotating Screen)
672	BS-690234	1		Carburetor Plate Gasket
691	BS-790574	1		Governor Shaft Seal Incl. in Ref No. 358
695	BS-693149	1		Screw (Ring Gear)
697	BS-690372	1	S	Screw (Drive Cap)
703	BS-691010	1		Clip
718	BS-690959	1	/P	Locating Pin
726	BS-499612	1		Ring Gear
729	BS-694123	1		Wire Clip
741	BS-690980	1		Timing Gear
742	BS-690328	1	/P	E-Ring Retainer (Governor Crank)
750	BS-696999	1		Screw (Oil Pump Cover)
783	BS-695708	1	/P	Pinion Gear

LTX1050VT Tractor (2009 & Before)
B&S Engine 44M777-0720 2

Page 11 of 58

Ref #	Part Number	Qty	S/P/F	Description
788	BS-793145	1		Fuel Pump Bracket
789	BS-698330	1		Wiring Harness
798	BS-697890	1		Screw (Rocker Arm)
801	BS-691283	1		Drive Cap
802	BS-691286	1	/P	End Cap
803	N/A	1		Starter Housing (Service with Starter Motor BS-497595, Reference 309)
847	BS-499602	1		Dipstick/Tube Assembly
851	BS-493880	1	S	Spark Plug Terminal
865	BS-691012	1		Air Guide Cover (Cylinder #1)
865A	BS-792286	1		Air Guide Cover (Valley)
868	BS-690968	1	/P	Valve Seat
877	BS-399916	1		Alternator Wire/Connector
877A	BS-790544	1		Alternator Wire/Connector
883	BS-690970	1	/P	Exhaust Gasket
914	BS-691127	1	/P	Screw (Rocker Cover)
918	BS-793147	1		Vacuum Hose
943	BS-796222	1		O-Ring Seal (Oil Pump Cover)
947	BS-841546	1		Fuel Solenoid
965	BS-796221	1		Oil Pump Cover
967	BS-792303	1	/P	Pre-Cleaner Filter
968	BS-795120	1	/P	Air Cleaner Cover
975	BS-793592	1		Float Bowl
987	BS-691000	1		Throttle Shaft Seal
1005	BS-791236	1		Flywheel Fan
1013	BS-690954	1	/P	Oil Filter Nipple
1017	BS-796214	1		Oil Pump Screen
1022	BS-690971	1	/P	Rocker Cover Gasket
1023	BS-793146	1		Rocker Cover (Cylinder #1)
1023A	BS-499600	1		Rocker Cover (Cylinder #2)
1024	BS-796220	1		Oil Pump
1026	BS-690981	1	/P	Push Rod (Exhaust)
1026A	BS-690982	1	/P	Push Rod (Intake)
1027	BS-795890	1	S	Oil Filter
1029	BS-690972	1		Rocker Arm
1036	N/A	1		Emissions Label
1040	BS-791237	1		Trim Plate
1051	BS-691265	1	/P	Retaining Ring (Starter Drive)
1054	BS-280275	1		Cable Tie
1058	BS-277103	1		Operator's Manual
1059	BS-698516	1		Screw/Washer Kit (Alternator)
1070	BS-791680	1	/P	Screw (Flywheel Fan)
1090	BS-691293	1	/P	Brush Retainer
1095	BS-694013	1	/P	Valve Gasket Set
1100	BS-791959	1		Rocker Arm Pivot
1119	BS-691183	1	S	Screw (Alternator)
1124	BS-841653	1		O-Ring Seal (Fuel Transfer Tube)
1124A	BS-690988	1		O-Ring Seal (Fuel Transfer Tube)
1126	BS-690991	1		Screw (Fuel Transfer Tube)
1127	BS-695407	1		Screw (Fuel Bowl)
1128	BS-690990	1		Screw (Carburetor Nozzle)
1169	BS-690990	1		Screw (Carburetor Plate)


LTX1050VT Tractor (2009 & Before)
B&S Engine 44M777-0720 2

Page 12 of 58

Ref #	Part Number	Qty	S/P/F	Description
1329	BS-44Q777-0037	1	S	Replacement Engine (Replacement engine listed is not available in the State of California. Repair with individual parts).

LTX1050VT Tractor (2009 & Before)
B&S Engine 44M777-0720 3

 Page 13 of 58

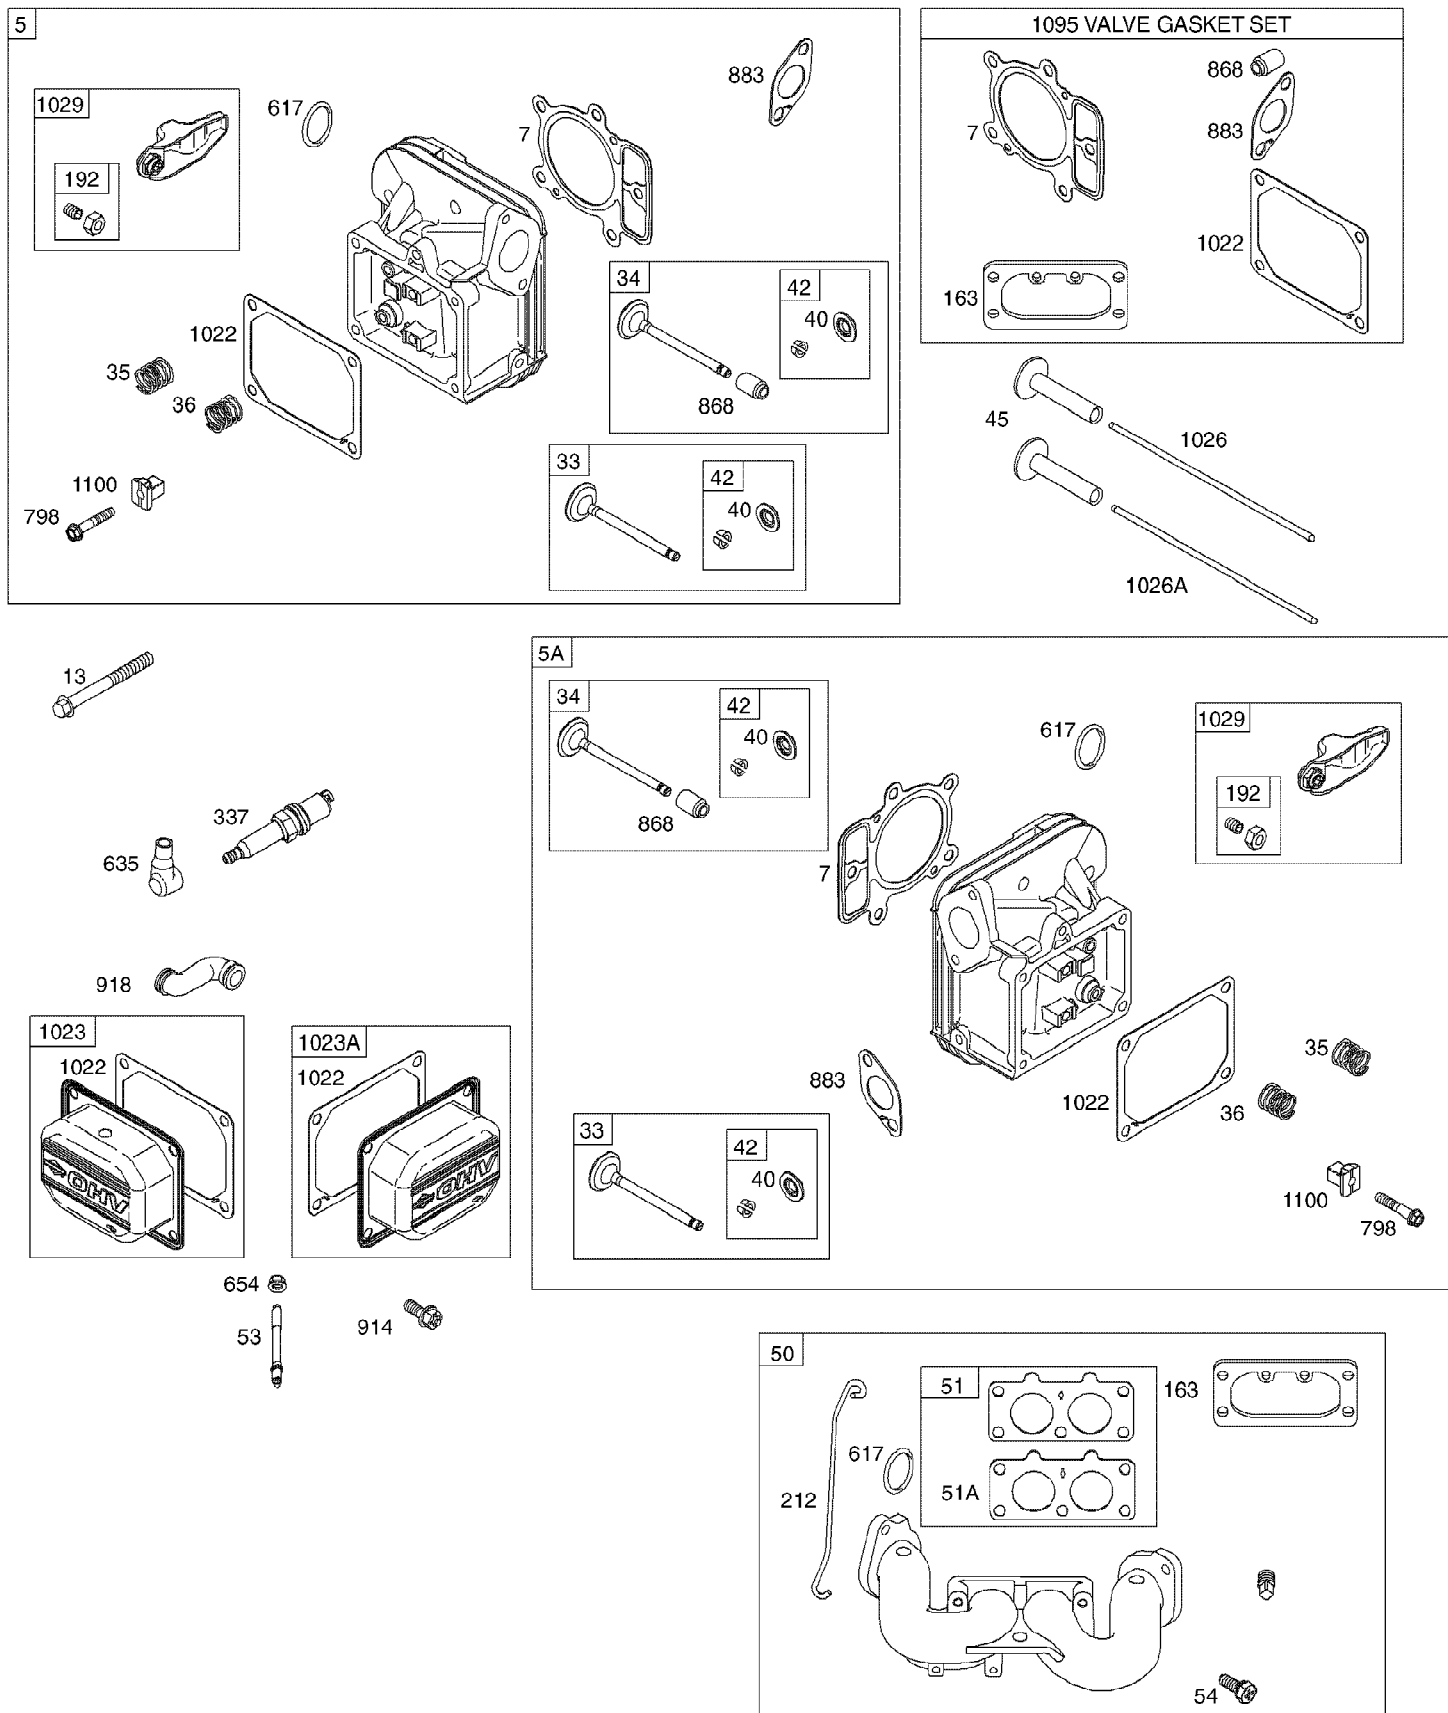

LTX1050VT Tractor (2009 & Before)
B&S Engine 44M777-0720 3

Page 14 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	BS-793564	1		Cylinder Assembly
2	BS-499585	1		Kit-Bushing/Seal (Magneto Side)
3	BS-391086S	1	/P	Oil Seal (Magneto Side) Incl. in Ref No. 358
4	BS-796230	1	S	Engine Sump
5	BS-796231	1	/P	Cylinder Head (Cylinder #1)
5A	BS-796232	1	/P	Cylinder Head (Cylinder #2)
7	BS-693997	1	/P	Cylinder Head Gasket Incl. in Ref No. 358 & 1095
8	BS-792185	1	/P	Breather Assembly
9	BS-690937	1		Breather Gasket Incl. in Ref No. 358
10	BS-697551	1		Screw (Breather Assembly)
11	BS-792184	1	/P	Breather Tube
12	BS-697227	1	/P	Crankcase Gasket Incl. in Ref No. 358
13	BS-793988	1		Screw (Cylinder Head)
15	BS-690946	1	/P	Oil Drain Plug
16	BS-796540	1		Crankshaft
20	BS-795387	1	/P	Oil Seal (PTO Side) Incl. in Ref No. 358
22	BS-694966	1	/P	Screw (Crankcase Cover/Sump)
23	BS-691053	1		Flywheel
24	BS-222698S	1	/P	Flywheel Key
25	BS-792023	1	/P	Piston Assembly (Standard)
25	BS-792072	1		Piston Assembly (.020" Oversize)
26	BS-793561	1		Ring Set (Standard)
26	BS-792073	1		Ring Set (.020" Oversize)
27	BS-690975	1		Piston Pin Lock
28	BS-696581	1		Piston Pin
29	BS-699699	1	S	Connecting Rod
32	BS-690976	1		Screw (Connecting Rod)
33	BS-697576	1		Exhaust Valve
34	BS-792200	1	/P	Intake Valve
35	BS-694865	1		Valve Spring (Intake)
36	BS-694865	1		Valve Spring (Exhaust)
40	BS-690964	1	S	Valve Retainer
42	BS-499586	1	/P	Valve Keeper
45	BS-690977	1	/P	Valve Tappet
46	BS-792555	1		Cam Gear
48	BS-698172	1	/P	Short Block
50	BS-695241	1	/P	Intake Manifold
51	BS-795123	1		Intake Gasket Incl. in Ref No. 358
51A	BS-690950	1		Intake Gasket
53	BS-690951	1		Stud (Carburetor)
54	BS-699816	1		Screw (Intake Manifold)
73	BS-494439	1	/P	Rotating Screen
74	BS-698425	1		Screw (Rotating Screen)
75	BS-691056	1		Washer (Flywheel)
95	BS-690718	1		Screw (Throttle Valve)
98	BS-699721	1		Idle Speed Kit
104	BS-694918	1		Float Hinge Pin Incl. in Ref No. 121
105	BS-698537	1		Float Needle Valve
108	BS-699723	1		Choke Valve
117	BS-792296	1		Main Jet (Standard) (Left Jet)
117A	BS-842627	1		Main Jet (Standard) (Right Jet)

LTX1050VT Tractor (2009 & Before)
B&S Engine 44M777-0720 3

Page 15 of 58

Ref #	Part Number	Qty	S/P/F	Description
118	BS-699457	1		Main Jet (High Altitude) (Left Jet)
118A	BS-699733	1		Main Jet (High Altitude) (Right Jet)
121	BS-792455	1	S	Carburetor Overhaul Kit Incl. Ref No. 104, 137, 163, 276, 633,
125	BS-796227	1		Carburetor
130	BS-690993	1		Throttle Valve
131	BS-499805	1		Throttle Shaft Kit
133	BS-699724	1		Carburetor Float
135	BS-699729	1		Fuel Transfer Tube
137	BS-690994	1		Float Bowl Gasket Incl. in Ref No. 121
141	BS-796228	1		Choke Shaft Kit
142	BS-699726	1		Carburetor Nozzle
146	BS-690979	1	/P	Timing Key
150	BS-690995	1		Nozzle Gasket
163	BS-691001	1		Air Cleaner Gasket Incl. in Ref No. 358 & 121
165	BS-693148	1		Nut (Ring Gear)
177	BS-691031	1	/P	O-Ring Seal (Dipstick)
187	BS-791766	1	S	Fuel Line (Cut to Required Length)
188	BS-697551	1		Screw (Control Bracket)
192	BS-690083	1		Rocker Arm Adjuster
197	BS-697820	1		Screw (Back Plate)
209	BS-796224	1		Governor Spring (Yellow/Black)
211	BS-796225	1		Governed Idle Spring (Orange)
212	BS-695238	1		Throttle Link
216	BS-796229	1		Choke Link
217	BS-695409	1		Choke Return Spring
219	BS-793338	1	/P	Governor Gear
220	BS-690412	1	/P	Washer (Governor Gear)
221	BS-841026	1		Governor Cup
222	BS-796226	1		Control Bracket
227	BS-796223	1		Governor Control Lever
231	BS-690718	1		Screw (Choke Valve)
239	BS-792028	1		Oil Pressure Switch
240	BS-695666	1	S	Fuel Filter
250	BS-690957	1		Breather Retainer
252	BS-794389	1		Oil Collector
265	BS-691024	1	/P	Casing Clamp
267	BS-695134	1		Screw (Casing Clamp)
276	BS-695410	1		Sealing Washer (Fuel Solenoid) Incl. in Ref No. 121
278	BS-792651	1		Washer (Governor Control Lever)
287	BS-697551	1		Screw (Dipstick Tube)
304	BS-796678	1	S	Blower Housing
305	BS-691005	1		Screw (Blower Housing)
305A	BS-790690	1		Screw (Blower Housing to Intake Elbow)
306	BS-796541	1		Cylinder Shield (Cylinder #2)
307	BS-697551	1		Screw (Cylinder Shield) (1.4-20 x 2.3)
309	BS-497595	1	/P	Starter Motor
310	BS-690323	1		Screw (Starter Motor)
332	BS-691059	1		Nut (Flywheel)
333	BS-691060	1	/P	Magneto Armature
334	BS-691061	1		Screw (Magneto Armature)

LTX1050VT Tractor (2009 & Before)
B&S Engine 44M777-0720 3

Page 16 of 58

Ref #	Part Number	Qty	S/P/F	Description
337	759-3336	1	/P	Spark Plug
358	BS-694012	1	/P	Engine Gasket Set
385	BS-697551	1		Screw (Fuel Pump)
387	BS-808656	1	/P	Fuel Pump
404	BS-690442	1		Washer (Governor Crank)
415	BS-794903	1		Plug (Oil Pressure Switch)
418	BS-795912	1		Carburetor Plate
431	BS-792297	1		Intake Elbow
445	BS-792105	1	/P	Air Cleaner Cartridge Filter
447	BS-691003	1	/P	Screw (Air Guide Cover) 10-24 x 7.16)
447A	BS-697551	1		Screw (Air Guide Cover)
467	BS-790697	1		Air Cleaner Knob
474	BS-696457	1	/P	Alternator
501	BS-691188	1	S	Regulator
503	BS-691532	1	/P	Starter Strap
505	BS-691029	1		Nut (Governor Control Lever)
510	BS-696541	1	/P	Starter Drive
513	BS-692024	1	/P	Drive Clutch
523	BS-691036	1		Dipstick
524	BS-691032	1		Dipstick Tube Seal Incl. in Ref No. 358
525	BS-691037	1		Dipstick Tube
526	BS-691129	1	/P	Screw (Regulator)
544	N/A	1		Starter Armature (Service with Starter Motor BS-497595, Reference 309)
552	BS-690552	1		Governor Crank Bushing
552A	BS-690553	1		Governor Crank Bushing
562	BS-690311	1		Screw (Governor Control Lever)
573	BS-790444	1		Back Plate
579	BS-691029	1		Nut (Starter Cable)
601	BS-691038	1		Hose Clamp (Black)
601A	BS-791850	1	/P	Hose Clamp (Green)
615	BS-698290	1	/P	Governor Shaft Retainer
616	BS-691045	1		Governor Crank
617	BS-697891	1		O-Ring Seal (Intake Manifold) (Red)
628	BS-697551	1		Screw (Fuel Pump Bracket)
633	BS-699813	1		Choke Seal/Throttle Shaft Incl. in Ref No. 121
635	BS-66538S	1	/P	Spark Plug Boot
654	BS-690958	1	/P	Nut (Carburetor)
668	BS-691215	1		Spacer (Rotating Screen) Incl. in Ref No. 358
668A	BS-691500	1	/P	Spacer (Rotating Screen)
672	BS-690234	1		Carburetor Plate Gasket
691	BS-790574	1		Governor Shaft Seal Incl. in Ref No. 358
695	BS-693149	1		Screw (Ring Gear)
697	BS-690372	1	S	Screw (Drive Cap)
703	BS-691010	1		Clip
718	BS-690959	1	/P	Locating Pin
726	BS-499612	1		Ring Gear
729	BS-694123	1		Wire Clip
741	BS-690980	1		Timing Gear
742	BS-690328	1	/P	E-Ring Retainer (Governor Crank)
750	BS-696999	1		Screw (Oil Pump Cover)
783	BS-695708	1	/P	Pinion Gear

LTX1050VT Tractor (2009 & Before)
B&S Engine 44M777-0720 3

Page 17 of 58

Ref #	Part Number	Qty	S/P/F	Description
788	BS-793145	1		Fuel Pump Bracket
789	BS-698330	1		Wiring Harness
798	BS-697890	1		Screw (Rocker Arm)
801	BS-691283	1		Drive Cap
802	BS-691286	1	/P	End Cap
803	N/A	1		Starter Housing (Service with Starter Motor BS-497595, Reference 309)
847	BS-499602	1		Dipstick/Tube Assembly
851	BS-493880	1	S	Spark Plug Terminal
865	BS-691012	1		Air Guide Cover (Cylinder #1)
865A	BS-792286	1		Air Guide Cover (Valley)
868	BS-690968	1	/P	Valve Seat
877	BS-399916	1		Alternator Wire/Connector
877A	BS-790544	1		Alternator Wire/Connector
883	BS-690970	1	/P	Exhaust Gasket
914	BS-691127	1	/P	Screw (Rocker Cover)
918	BS-793147	1		Vacuum Hose
943	BS-796222	1		O-Ring Seal (Oil Pump Cover)
947	BS-841546	1		Fuel Solenoid
965	BS-796221	1		Oil Pump Cover
967	BS-792303	1	/P	Pre-Cleaner Filter
968	BS-795120	1	/P	Air Cleaner Cover
975	BS-793592	1		Float Bowl
987	BS-691000	1		Throttle Shaft Seal
1005	BS-791236	1		Flywheel Fan
1013	BS-690954	1	/P	Oil Filter Nipple
1017	BS-796214	1		Oil Pump Screen
1022	BS-690971	1	/P	Rocker Cover Gasket
1023	BS-793146	1		Rocker Cover (Cylinder #1)
1023A	BS-499600	1		Rocker Cover (Cylinder #2)
1024	BS-796220	1		Oil Pump
1026	BS-690981	1	/P	Push Rod (Exhaust)
1026A	BS-690982	1	/P	Push Rod (Intake)
1027	BS-795890	1	S	Oil Filter
1029	BS-690972	1		Rocker Arm
1036	N/A	1		Emissions Label
1040	BS-791237	1		Trim Plate
1051	BS-691265	1	/P	Retaining Ring (Starter Drive)
1054	BS-280275	1		Cable Tie
1058	BS-277103	1		Operator's Manual
1059	BS-698516	1		Screw/Washer Kit (Alternator)
1070	BS-791680	1	/P	Screw (Flywheel Fan)
1090	BS-691293	1	/P	Brush Retainer
1095	BS-694013	1	/P	Valve Gasket Set
1100	BS-791959	1		Rocker Arm Pivot
1119	BS-691183	1	S	Screw (Alternator)
1124	BS-841653	1		O-Ring Seal (Fuel Transfer Tube)
1124A	BS-690988	1		O-Ring Seal (Fuel Transfer Tube)
1126	BS-690991	1		Screw (Fuel Transfer Tube)
1127	BS-695407	1		Screw (Fuel Bowl)
1128	BS-690990	1		Screw (Carburetor Nozzle)
1169	BS-690990	1		Screw (Carburetor Plate)





LTX1050VT Tractor (2009 & Before)
B&S Engine 44M777-0720 3

Page 18 of 58

Ref #	Part Number	Qty	S/P/F	Description
1329	BS-44Q777-0037	1	S	Replacement Engine (Replacement engine listed is not available in the State of California. Repair with individual parts).

LTX1050VT Tractor (2009 & Before)
B&S Engine 44M777-0720 4

    Page 19 of 58

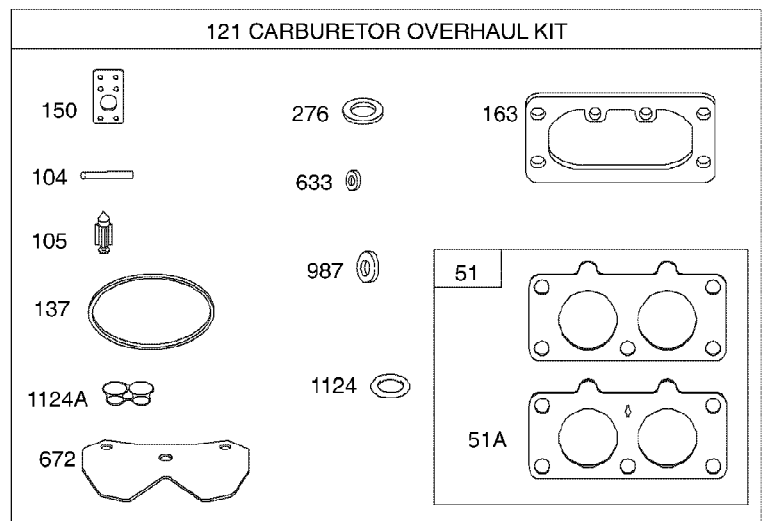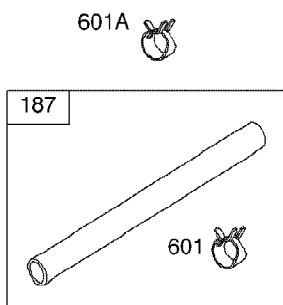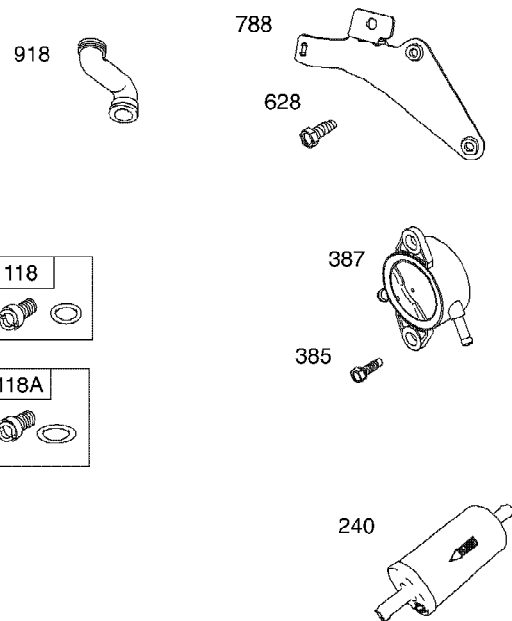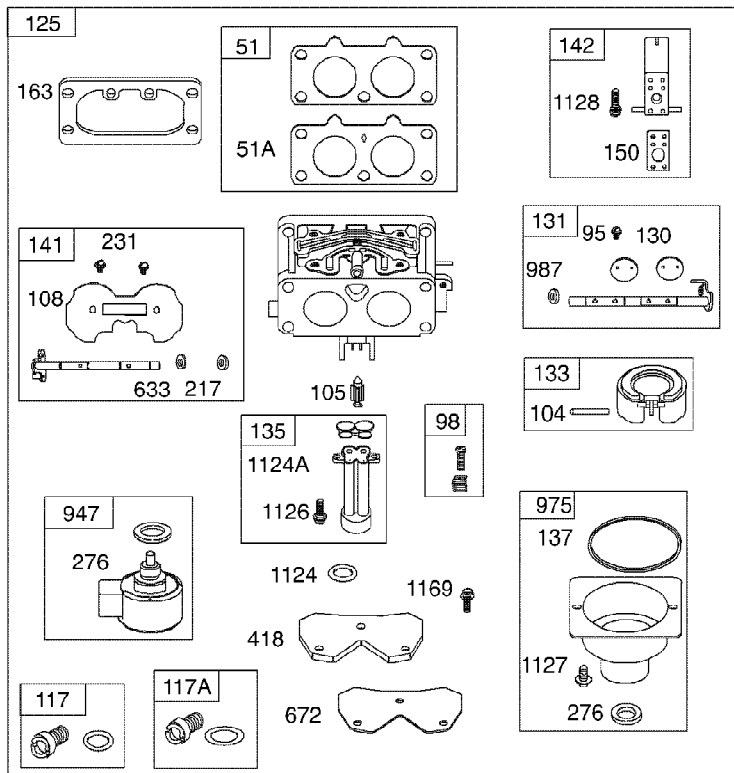

LTX1050VT Tractor (2009 & Before)
B&S Engine 44M777-0720 4

Page 20 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	BS-793564	1		Cylinder Assembly
2	BS-499585	1		Kit-Bushing/Seal (Magneto Side)
3	BS-391086S	1	/P	Oil Seal (Magneto Side) Incl. in Ref No. 358
4	BS-796230	1	S	Engine Sump
5	BS-796231	1	/P	Cylinder Head (Cylinder #1)
5A	BS-796232	1	/P	Cylinder Head (Cylinder #2)
7	BS-693997	1	/P	Cylinder Head Gasket Incl. in Ref No. 358 & 1095
8	BS-792185	1	/P	Breather Assembly
9	BS-690937	1		Breather Gasket Incl. in Ref No. 358
10	BS-697551	1		Screw (Breather Assembly)
11	BS-792184	1	/P	Breather Tube
12	BS-697227	1	/P	Crankcase Gasket Incl. in Ref No. 358
13	BS-793988	1		Screw (Cylinder Head)
15	BS-690946	1	/P	Oil Drain Plug
16	BS-796540	1		Crankshaft
20	BS-795387	1	/P	Oil Seal (PTO Side) Incl. in Ref No. 358
22	BS-694966	1	/P	Screw (Crankcase Cover/Sump)
23	BS-691053	1		Flywheel
24	BS-222698S	1	/P	Flywheel Key
25	BS-792023	1	/P	Piston Assembly (Standard)
25	BS-792072	1		Piston Assembly (.020" Oversize)
26	BS-793561	1		Ring Set (Standard)
26	BS-792073	1		Ring Set (.020" Oversize)
27	BS-690975	1		Piston Pin Lock
28	BS-696581	1		Piston Pin
29	BS-699699	1	S	Connecting Rod
32	BS-690976	1		Screw (Connecting Rod)
33	BS-697576	1		Exhaust Valve
34	BS-792200	1	/P	Intake Valve
35	BS-694865	1		Valve Spring (Intake)
36	BS-694865	1		Valve Spring (Exhaust)
40	BS-690964	1	S	Valve Retainer
42	BS-499586	1	/P	Valve Keeper
45	BS-690977	1	/P	Valve Tappet
46	BS-792555	1		Cam Gear
48	BS-698172	1	/P	Short Block
50	BS-695241	1	/P	Intake Manifold
51	BS-795123	1		Intake Gasket Incl. in Ref No. 358
51A	BS-690950	1		Intake Gasket
53	BS-690951	1		Stud (Carburetor)
54	BS-699816	1		Screw (Intake Manifold)
73	BS-494439	1	/P	Rotating Screen
74	BS-698425	1		Screw (Rotating Screen)
75	BS-691056	1		Washer (Flywheel)
95	BS-690718	1		Screw (Throttle Valve)
98	BS-699721	1		Idle Speed Kit
104	BS-694918	1		Float Hinge Pin Incl. in Ref No. 121
105	BS-698537	1		Float Needle Valve
108	BS-699723	1		Choke Valve
117	BS-792296	1		Main Jet (Standard) (Left Jet)
117A	BS-842627	1		Main Jet (Standard) (Right Jet)

LTX1050VT Tractor (2009 & Before)
B&S Engine 44M777-0720 4

Page 21 of 58

Ref #	Part Number	Qty	S/P/F	Description
118	BS-699457	1		Main Jet (High Altitude) (Left Jet)
118A	BS-699733	1		Main Jet (High Altitude) (Right Jet)
121	BS-792455	1	S	Carburetor Overhaul Kit Incl. Ref No. 104, 137, 163, 276, 633,
125	BS-796227	1		Carburetor
130	BS-690993	1		Throttle Valve
131	BS-499805	1		Throttle Shaft Kit
133	BS-699724	1		Carburetor Float
135	BS-699729	1		Fuel Transfer Tube
137	BS-690994	1		Float Bowl Gasket Incl. in Ref No. 121
141	BS-796228	1		Choke Shaft Kit
142	BS-699726	1		Carburetor Nozzle
146	BS-690979	1	/P	Timing Key
150	BS-690995	1		Nozzle Gasket
163	BS-691001	1		Air Cleaner Gasket Incl. in Ref No. 358 & 121
165	BS-693148	1		Nut (Ring Gear)
177	BS-691031	1	/P	O-Ring Seal (Dipstick)
187	BS-791766	1	S	Fuel Line (Cut to Required Length)
188	BS-697551	1		Screw (Control Bracket)
192	BS-690083	1		Rocker Arm Adjuster
197	BS-697820	1		Screw (Back Plate)
209	BS-796224	1		Governor Spring (Yellow/Black)
211	BS-796225	1		Governed Idle Spring (Orange)
212	BS-695238	1		Throttle Link
216	BS-796229	1		Choke Link
217	BS-695409	1		Choke Return Spring
219	BS-793338	1	/P	Governor Gear
220	BS-690412	1	/P	Washer (Governor Gear)
221	BS-841026	1		Governor Cup
222	BS-796226	1		Control Bracket
227	BS-796223	1		Governor Control Lever
231	BS-690718	1		Screw (Choke Valve)
239	BS-792028	1		Oil Pressure Switch
240	BS-695666	1	S	Fuel Filter
250	BS-690957	1		Breather Retainer
252	BS-794389	1		Oil Collector
265	BS-691024	1	/P	Casing Clamp
267	BS-695134	1		Screw (Casing Clamp)
276	BS-695410	1		Sealing Washer (Fuel Solenoid) Incl. in Ref No. 121
278	BS-792651	1		Washer (Governor Control Lever)
287	BS-697551	1		Screw (Dipstick Tube)
304	BS-796678	1	S	Blower Housing
305	BS-691005	1		Screw (Blower Housing)
305A	BS-790690	1		Screw (Blower Housing to Intake Elbow)
306	BS-796541	1		Cylinder Shield (Cylinder #2)
307	BS-697551	1		Screw (Cylinder Shield) (1.4-20 x 2.3)
309	BS-497595	1	/P	Starter Motor
310	BS-690323	1		Screw (Starter Motor)
332	BS-691059	1		Nut (Flywheel)
333	BS-691060	1	/P	Magneto Armature
334	BS-691061	1		Screw (Magneto Armature)

LTX1050VT Tractor (2009 & Before)
B&S Engine 44M777-0720 4

Page 22 of 58

Ref #	Part Number	Qty	S/P/F	Description
337	759-3336	1	/P	Spark Plug
358	BS-694012	1	/P	Engine Gasket Set
385	BS-697551	1		Screw (Fuel Pump)
387	BS-808656	1	/P	Fuel Pump
404	BS-690442	1		Washer (Governor Crank)
415	BS-794903	1		Plug (Oil Pressure Switch)
418	BS-795912	1		Carburetor Plate
431	BS-792297	1		Intake Elbow
445	BS-792105	1	/P	Air Cleaner Cartridge Filter
447	BS-691003	1	/P	Screw (Air Guide Cover) 10-24 x 7.16)
447A	BS-697551	1		Screw (Air Guide Cover)
467	BS-790697	1		Air Cleaner Knob
474	BS-696457	1	/P	Alternator
501	BS-691188	1	S	Regulator
503	BS-691532	1	/P	Starter Strap
505	BS-691029	1		Nut (Governor Control Lever)
510	BS-696541	1	/P	Starter Drive
513	BS-692024	1	/P	Drive Clutch
523	BS-691036	1		Dipstick
524	BS-691032	1		Dipstick Tube Seal Incl. in Ref No. 358
525	BS-691037	1		Dipstick Tube
526	BS-691129	1	/P	Screw (Regulator)
544	N/A	1		Starter Armature (Service with Starter Motor BS-497595, Reference 309)
552	BS-690552	1		Governor Crank Bushing
552A	BS-690553	1		Governor Crank Bushing
562	BS-690311	1		Screw (Governor Control Lever)
573	BS-790444	1		Back Plate
579	BS-691029	1		Nut (Starter Cable)
601	BS-691038	1		Hose Clamp (Black)
601A	BS-791850	1	/P	Hose Clamp (Green)
615	BS-698290	1	/P	Governor Shaft Retainer
616	BS-691045	1		Governor Crank
617	BS-697891	1		O-Ring Seal (Intake Manifold) (Red)
628	BS-697551	1		Screw (Fuel Pump Bracket)
633	BS-699813	1		Choke Seal/Throttle Shaft Incl. in Ref No. 121
635	BS-66538S	1	/P	Spark Plug Boot
654	BS-690958	1	/P	Nut (Carburetor)
668	BS-691215	1		Spacer (Rotating Screen) Incl. in Ref No. 358
668A	BS-691500	1	/P	Spacer (Rotating Screen)
672	BS-690234	1		Carburetor Plate Gasket
691	BS-790574	1		Governor Shaft Seal Incl. in Ref No. 358
695	BS-693149	1		Screw (Ring Gear)
697	BS-690372	1	S	Screw (Drive Cap)
703	BS-691010	1		Clip
718	BS-690959	1	/P	Locating Pin
726	BS-499612	1		Ring Gear
729	BS-694123	1		Wire Clip
741	BS-690980	1		Timing Gear
742	BS-690328	1	/P	E-Ring Retainer (Governor Crank)
750	BS-696999	1		Screw (Oil Pump Cover)
783	BS-695708	1	/P	Pinion Gear

LTX1050VT Tractor (2009 & Before)
B&S Engine 44M777-0720 4

Page 23 of 58

Ref #	Part Number	Qty	S/P/F	Description
788	BS-793145	1		Fuel Pump Bracket
789	BS-698330	1		Wiring Harness
798	BS-697890	1		Screw (Rocker Arm)
801	BS-691283	1		Drive Cap
802	BS-691286	1	/P	End Cap
803	N/A	1		Starter Housing (Service with Starter Motor BS-497595, Reference 309)
847	BS-499602	1		Dipstick/Tube Assembly
851	BS-493880	1	S	Spark Plug Terminal
865	BS-691012	1		Air Guide Cover (Cylinder #1)
865A	BS-792286	1		Air Guide Cover (Valley)
868	BS-690968	1	/P	Valve Seat
877	BS-399916	1		Alternator Wire/Connector
877A	BS-790544	1		Alternator Wire/Connector
883	BS-690970	1	/P	Exhaust Gasket
914	BS-691127	1	/P	Screw (Rocker Cover)
918	BS-793147	1		Vacuum Hose
943	BS-796222	1		O-Ring Seal (Oil Pump Cover)
947	BS-841546	1		Fuel Solenoid
965	BS-796221	1		Oil Pump Cover
967	BS-792303	1	/P	Pre-Cleaner Filter
968	BS-795120	1	/P	Air Cleaner Cover
975	BS-793592	1		Float Bowl
987	BS-691000	1		Throttle Shaft Seal
1005	BS-791236	1		Flywheel Fan
1013	BS-690954	1	/P	Oil Filter Nipple
1017	BS-796214	1		Oil Pump Screen
1022	BS-690971	1	/P	Rocker Cover Gasket
1023	BS-793146	1		Rocker Cover (Cylinder #1)
1023A	BS-499600	1		Rocker Cover (Cylinder #2)
1024	BS-796220	1		Oil Pump
1026	BS-690981	1	/P	Push Rod (Exhaust)
1026A	BS-690982	1	/P	Push Rod (Intake)
1027	BS-795890	1	S	Oil Filter
1029	BS-690972	1		Rocker Arm
1036	N/A	1		Emissions Label
1040	BS-791237	1		Trim Plate
1051	BS-691265	1	/P	Retaining Ring (Starter Drive)
1054	BS-280275	1		Cable Tie
1058	BS-277103	1		Operator's Manual
1059	BS-698516	1		Screw/Washer Kit (Alternator)
1070	BS-791680	1	/P	Screw (Flywheel Fan)
1090	BS-691293	1	/P	Brush Retainer
1095	BS-694013	1	/P	Valve Gasket Set
1100	BS-791959	1		Rocker Arm Pivot
1119	BS-691183	1	S	Screw (Alternator)
1124	BS-841653	1		O-Ring Seal (Fuel Transfer Tube)
1124A	BS-690988	1		O-Ring Seal (Fuel Transfer Tube)
1126	BS-690991	1		Screw (Fuel Transfer Tube)
1127	BS-695407	1		Screw (Fuel Bowl)
1128	BS-690990	1		Screw (Carburetor Nozzle)
1169	BS-690990	1		Screw (Carburetor Plate)

LTX1050VT Tractor (2009 & Before)
B&S Engine 44M777-0720 4










Page 24 of 58

Ref #	Part Number	Qty	S/P/F	Description
1329	BS-44Q777-0037	1	S	Replacement Engine (Replacement engine listed is not available in the State of California. Repair with individual parts).

LTX1050VT Tractor (2009 & Before)
B&S Engine 44M777-0720 5

Page 25 of 58

         1036 EMISSIONS LABEL

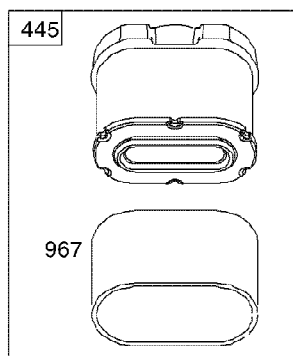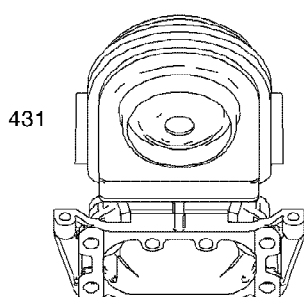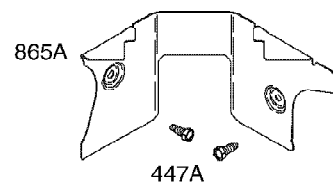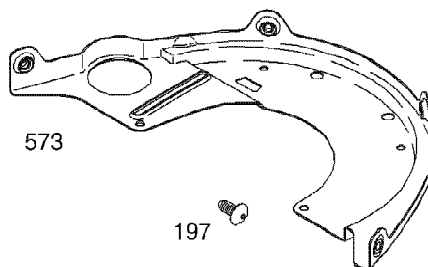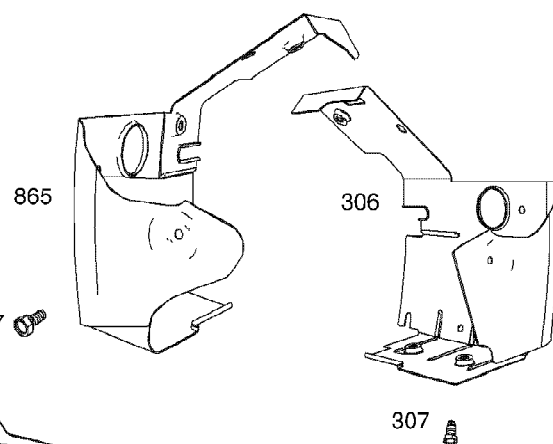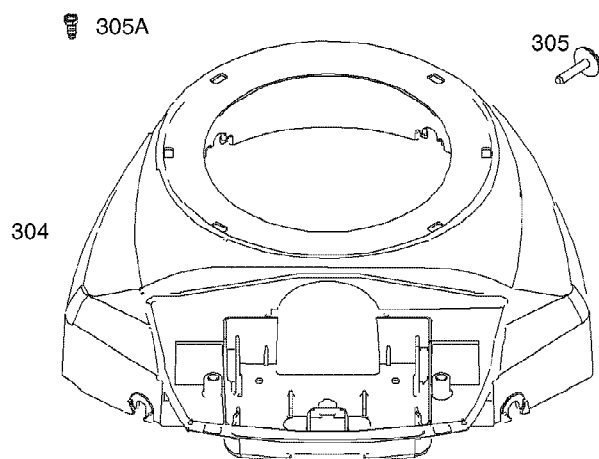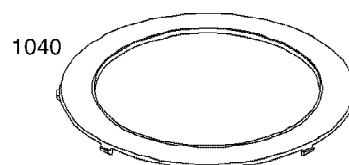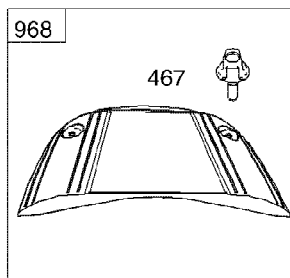

LTX1050VT Tractor (2009 & Before)
B&S Engine 44M777-0720 5

Page 26 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	BS-793564	1		Cylinder Assembly
2	BS-499585	1		Kit-Bushing/Seal (Magneto Side)
3	BS-391086S	1	/P	Oil Seal (Magneto Side) Incl. in Ref No. 358
4	BS-796230	1	S	Engine Sump
5	BS-796231	1	/P	Cylinder Head (Cylinder #1)
5A	BS-796232	1	/P	Cylinder Head (Cylinder #2)
7	BS-693997	1	/P	Cylinder Head Gasket Incl. in Ref No. 358 & 1095
8	BS-792185	1	/P	Breather Assembly
9	BS-690937	1		Breather Gasket Incl. in Ref No. 358
10	BS-697551	1		Screw (Breather Assembly)
11	BS-792184	1	/P	Breather Tube
12	BS-697227	1	/P	Crankcase Gasket Incl. in Ref No. 358
13	BS-793988	1		Screw (Cylinder Head)
15	BS-690946	1	/P	Oil Drain Plug
16	BS-796540	1		Crankshaft
20	BS-795387	1	/P	Oil Seal (PTO Side) Incl. in Ref No. 358
22	BS-694966	1	/P	Screw (Crankcase Cover/Sump)
23	BS-691053	1		Flywheel
24	BS-222698S	1	/P	Flywheel Key
25	BS-792023	1	/P	Piston Assembly (Standard)
25	BS-792072	1		Piston Assembly (.020" Oversize)
26	BS-793561	1		Ring Set (Standard)
26	BS-792073	1		Ring Set (.020" Oversize)
27	BS-690975	1		Piston Pin Lock
28	BS-696581	1		Piston Pin
29	BS-699699	1	S	Connecting Rod
32	BS-690976	1		Screw (Connecting Rod)
33	BS-697576	1		Exhaust Valve
34	BS-792200	1	/P	Intake Valve
35	BS-694865	1		Valve Spring (Intake)
36	BS-694865	1		Valve Spring (Exhaust)
40	BS-690964	1	S	Valve Retainer
42	BS-499586	1	/P	Valve Keeper
45	BS-690977	1	/P	Valve Tappet
46	BS-792555	1		Cam Gear
48	BS-698172	1	/P	Short Block
50	BS-695241	1	/P	Intake Manifold
51	BS-795123	1		Intake Gasket Incl. in Ref No. 358
51A	BS-690950	1		Intake Gasket
53	BS-690951	1		Stud (Carburetor)
54	BS-699816	1		Screw (Intake Manifold)
73	BS-494439	1	/P	Rotating Screen
74	BS-698425	1		Screw (Rotating Screen)
75	BS-691056	1		Washer (Flywheel)
95	BS-690718	1		Screw (Throttle Valve)
98	BS-699721	1		Idle Speed Kit
104	BS-694918	1		Float Hinge Pin Incl. in Ref No. 121
105	BS-698537	1		Float Needle Valve
108	BS-699723	1		Choke Valve
117	BS-792296	1		Main Jet (Standard) (Left Jet)
117A	BS-842627	1		Main Jet (Standard) (Right Jet)

LTX1050VT Tractor (2009 & Before)
B&S Engine 44M777-0720 5

Page 27 of 58

Ref #	Part Number	Qty	S/P/F	Description
118	BS-699457	1		Main Jet (High Altitude) (Left Jet)
118A	BS-699733	1		Main Jet (High Altitude) (Right Jet)
121	BS-792455	1	S	Carburetor Overhaul Kit Incl. Ref No. 104, 137, 163, 276, 633,
125	BS-796227	1		Carburetor
130	BS-690993	1		Throttle Valve
131	BS-499805	1		Throttle Shaft Kit
133	BS-699724	1		Carburetor Float
135	BS-699729	1		Fuel Transfer Tube
137	BS-690994	1		Float Bowl Gasket Incl. in Ref No. 121
141	BS-796228	1		Choke Shaft Kit
142	BS-699726	1		Carburetor Nozzle
146	BS-690979	1	/P	Timing Key
150	BS-690995	1		Nozzle Gasket
163	BS-691001	1		Air Cleaner Gasket Incl. in Ref No. 358 & 121
165	BS-693148	1		Nut (Ring Gear)
177	BS-691031	1	/P	O-Ring Seal (Dipstick)
187	BS-791766	1	S	Fuel Line (Cut to Required Length)
188	BS-697551	1		Screw (Control Bracket)
192	BS-690083	1		Rocker Arm Adjuster
197	BS-697820	1		Screw (Back Plate)
209	BS-796224	1		Governor Spring (Yellow/Black)
211	BS-796225	1		Governed Idle Spring (Orange)
212	BS-695238	1		Throttle Link
216	BS-796229	1		Choke Link
217	BS-695409	1		Choke Return Spring
219	BS-793338	1	/P	Governor Gear
220	BS-690412	1	/P	Washer (Governor Gear)
221	BS-841026	1		Governor Cup
222	BS-796226	1		Control Bracket
227	BS-796223	1		Governor Control Lever
231	BS-690718	1		Screw (Choke Valve)
239	BS-792028	1		Oil Pressure Switch
240	BS-695666	1	S	Fuel Filter
250	BS-690957	1		Breather Retainer
252	BS-794389	1		Oil Collector
265	BS-691024	1	/P	Casing Clamp
267	BS-695134	1		Screw (Casing Clamp)
276	BS-695410	1		Sealing Washer (Fuel Solenoid) Incl. in Ref No. 121
278	BS-792651	1		Washer (Governor Control Lever)
287	BS-697551	1		Screw (Dipstick Tube)
304	BS-796678	1	S	Blower Housing
305	BS-691005	1		Screw (Blower Housing)
305A	BS-790690	1		Screw (Blower Housing to Intake Elbow)
306	BS-796541	1		Cylinder Shield (Cylinder #2)
307	BS-697551	1		Screw (Cylinder Shield) (1.4-20 x 2.3)
309	BS-497595	1	/P	Starter Motor
310	BS-690323	1		Screw (Starter Motor)
332	BS-691059	1		Nut (Flywheel)
333	BS-691060	1	/P	Magneto Armature
334	BS-691061	1		Screw (Magneto Armature)

LTX1050VT Tractor (2009 & Before)
B&S Engine 44M777-0720 5

Page 28 of 58

Ref #	Part Number	Qty	S/P/F	Description
337	759-3336	1	/P	Spark Plug
358	BS-694012	1	/P	Engine Gasket Set
385	BS-697551	1		Screw (Fuel Pump)
387	BS-808656	1	/P	Fuel Pump
404	BS-690442	1		Washer (Governor Crank)
415	BS-794903	1		Plug (Oil Pressure Switch)
418	BS-795912	1		Carburetor Plate
431	BS-792297	1		Intake Elbow
445	BS-792105	1	/P	Air Cleaner Cartridge Filter
447	BS-691003	1	/P	Screw (Air Guide Cover) 10-24 x 7.16)
447A	BS-697551	1		Screw (Air Guide Cover)
467	BS-790697	1		Air Cleaner Knob
474	BS-696457	1	/P	Alternator
501	BS-691188	1	S	Regulator
503	BS-691532	1	/P	Starter Strap
505	BS-691029	1		Nut (Governor Control Lever)
510	BS-696541	1	/P	Starter Drive
513	BS-692024	1	/P	Drive Clutch
523	BS-691036	1		Dipstick
524	BS-691032	1		Dipstick Tube Seal Incl. in Ref No. 358
525	BS-691037	1		Dipstick Tube
526	BS-691129	1	/P	Screw (Regulator)
544	N/A	1		Starter Armature (Service with Starter Motor BS-497595, Reference 309)
552	BS-690552	1		Governor Crank Bushing
552A	BS-690553	1		Governor Crank Bushing
562	BS-690311	1		Screw (Governor Control Lever)
573	BS-790444	1		Back Plate
579	BS-691029	1		Nut (Starter Cable)
601	BS-691038	1		Hose Clamp (Black)
601A	BS-791850	1	/P	Hose Clamp (Green)
615	BS-698290	1	/P	Governor Shaft Retainer
616	BS-691045	1		Governor Crank
617	BS-697891	1		O-Ring Seal (Intake Manifold) (Red)
628	BS-697551	1		Screw (Fuel Pump Bracket)
633	BS-699813	1		Choke Seal/Throttle Shaft Incl. in Ref No. 121
635	BS-66538S	1	/P	Spark Plug Boot
654	BS-690958	1	/P	Nut (Carburetor)
668	BS-691215	1		Spacer (Rotating Screen) Incl. in Ref No. 358
668A	BS-691500	1	/P	Spacer (Rotating Screen)
672	BS-690234	1		Carburetor Plate Gasket
691	BS-790574	1		Governor Shaft Seal Incl. in Ref No. 358
695	BS-693149	1		Screw (Ring Gear)
697	BS-690372	1	S	Screw (Drive Cap)
703	BS-691010	1		Clip
718	BS-690959	1	/P	Locating Pin
726	BS-499612	1		Ring Gear
729	BS-694123	1		Wire Clip
741	BS-690980	1		Timing Gear
742	BS-690328	1	/P	E-Ring Retainer (Governor Crank)
750	BS-696999	1		Screw (Oil Pump Cover)
783	BS-695708	1	/P	Pinion Gear

LTX1050VT Tractor (2009 & Before)
B&S Engine 44M777-0720 5

Page 29 of 58

Ref #	Part Number	Qty	S/P/F	Description
788	BS-793145	1		Fuel Pump Bracket
789	BS-698330	1		Wiring Harness
798	BS-697890	1		Screw (Rocker Arm)
801	BS-691283	1		Drive Cap
802	BS-691286	1	/P	End Cap
803	N/A	1		Starter Housing (Service with Starter Motor BS-497595, Reference 309)
847	BS-499602	1		Dipstick/Tube Assembly
851	BS-493880	1	S	Spark Plug Terminal
865	BS-691012	1		Air Guide Cover (Cylinder #1)
865A	BS-792286	1		Air Guide Cover (Valley)
868	BS-690968	1	/P	Valve Seat
877	BS-399916	1		Alternator Wire/Connector
877A	BS-790544	1		Alternator Wire/Connector
883	BS-690970	1	/P	Exhaust Gasket
914	BS-691127	1	/P	Screw (Rocker Cover)
918	BS-793147	1		Vacuum Hose
943	BS-796222	1		O-Ring Seal (Oil Pump Cover)
947	BS-841546	1		Fuel Solenoid
965	BS-796221	1		Oil Pump Cover
967	BS-792303	1	/P	Pre-Cleaner Filter
968	BS-795120	1	/P	Air Cleaner Cover
975	BS-793592	1		Float Bowl
987	BS-691000	1		Throttle Shaft Seal
1005	BS-791236	1		Flywheel Fan
1013	BS-690954	1	/P	Oil Filter Nipple
1017	BS-796214	1		Oil Pump Screen
1022	BS-690971	1	/P	Rocker Cover Gasket
1023	BS-793146	1		Rocker Cover (Cylinder #1)
1023A	BS-499600	1		Rocker Cover (Cylinder #2)
1024	BS-796220	1		Oil Pump
1026	BS-690981	1	/P	Push Rod (Exhaust)
1026A	BS-690982	1	/P	Push Rod (Intake)
1027	BS-795890	1	S	Oil Filter
1029	BS-690972	1		Rocker Arm
1036	N/A	1		Emissions Label
1040	BS-791237	1		Trim Plate
1051	BS-691265	1	/P	Retaining Ring (Starter Drive)
1054	BS-280275	1		Cable Tie
1058	BS-277103	1		Operator's Manual
1059	BS-698516	1		Screw/Washer Kit (Alternator)
1070	BS-791680	1	/P	Screw (Flywheel Fan)
1090	BS-691293	1	/P	Brush Retainer
1095	BS-694013	1	/P	Valve Gasket Set
1100	BS-791959	1		Rocker Arm Pivot
1119	BS-691183	1	S	Screw (Alternator)
1124	BS-841653	1		O-Ring Seal (Fuel Transfer Tube)
1124A	BS-690988	1		O-Ring Seal (Fuel Transfer Tube)
1126	BS-690991	1		Screw (Fuel Transfer Tube)
1127	BS-695407	1		Screw (Fuel Bowl)
1128	BS-690990	1		Screw (Carburetor Nozzle)
1169	BS-690990	1		Screw (Carburetor Plate)


LTX1050VT Tractor (2009 & Before)
B&S Engine 44M777-0720 5

Page 30 of 58

Ref #	Part Number	Qty	S/P/F	Description
1329	BS-44Q777-0037	1	S	Replacement Engine (Replacement engine listed is not available in the State of California. Repair with individual parts).

LTX1050VT Tractor (2009 & Before)
B&S Engine 44M777-0720 6

 Page 31 of 58

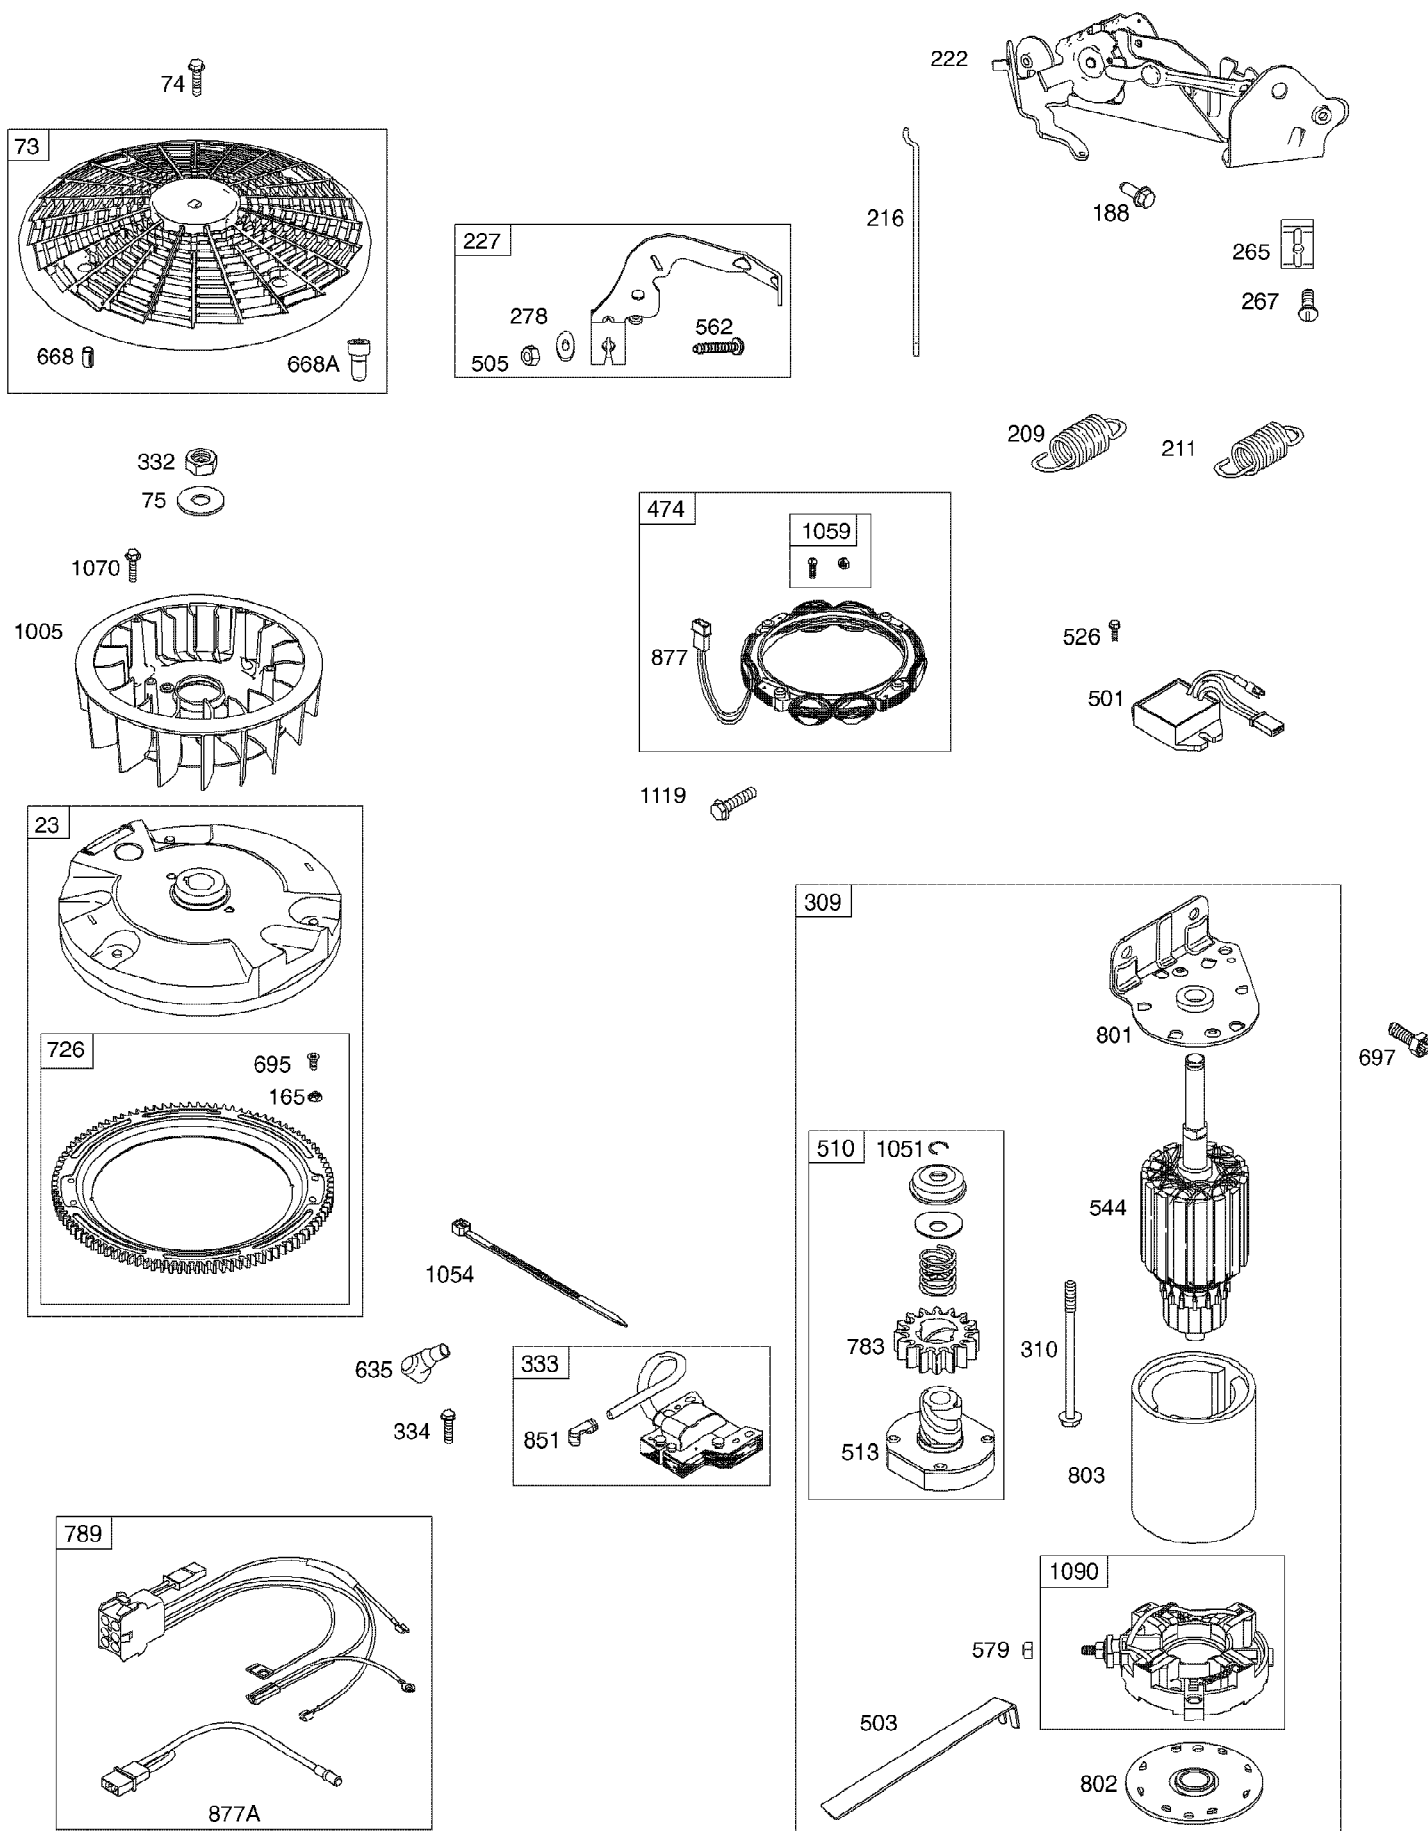

LTX1050VT Tractor (2009 & Before)
B&S Engine 44M777-0720 6

Page 32 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	BS-793564	1		Cylinder Assembly
2	BS-499585	1		Kit-Bushing/Seal (Magneto Side)
3	BS-391086S	1	/P	Oil Seal (Magneto Side) Incl. in Ref No. 358
4	BS-796230	1	S	EngineSump
5	BS-796231	1	/P	Cylinder Head (Cylinder #1)
5A	BS-796232	1	/P	Cylinder Head (Cylinder #2)
7	BS-693997	1	/P	Cylinder Head Gasket Incl. in Ref No. 358 & 1095
8	BS-792185	1	/P	Breather Assembly
9	BS-690937	1		Breather Gasket Incl. in Ref No. 358
10	BS-697551	1		Screw (Breather Assembly)
11	BS-792184	1	/P	Breather Tube
12	BS-697227	1	/P	Crankcase Gasket Incl. in Ref No. 358
13	BS-793988	1		Screw (Cylinder Head)
15	BS-690946	1	/P	Oil Drain Plug
16	BS-796540	1		Crankshaft
20	BS-795387	1	/P	Oil Seal (PTO Side) Incl. in Ref No. 358
22	BS-694966	1	/P	Screw (Crankcase Cover/Sump)
23	BS-691053	1		Flywheel
24	BS-222698S	1	/P	Flywheel Key
25	BS-792023	1	/P	Piston Assembly (Standard)
25	BS-792072	1		Piston Assembly (.020" Oversize)
26	BS-793561	1		Ring Set (Standard)
26	BS-792073	1		Ring Set (.020" Oversize)
27	BS-690975	1		Piston Pin Lock
28	BS-696581	1		Piston Pin
29	BS-699699	1	S	Connecting Rod
32	BS-690976	1		Screw (Connecting Rod)
33	BS-697576	1		Exhaust Valve
34	BS-792200	1	/P	Intake Valve
35	BS-694865	1		Valve Spring (Intake)
36	BS-694865	1		Valve Spring (Exhaust)
40	BS-690964	1	S	Valve Retainer
42	BS-499586	1	/P	Valve Keeper
45	BS-690977	1	/P	Valve Tappet
46	BS-792555	1		Cam Gear
48	BS-698172	1	/P	Short Block
50	BS-695241	1	/P	Intake Manifold
51	BS-795123	1		Intake Gasket Incl. in Ref No. 358
51A	BS-690950	1		Intake Gasket
53	BS-690951	1		Stud (Carburetor)
54	BS-699816	1		Screw (Intake Manifold)
73	BS-494439	1	/P	Rotating Screen
74	BS-698425	1		Screw (Rotating Screen)
75	BS-691056	1		Washer (Flywheel)
95	BS-690718	1		Screw (Throttle Valve)
98	BS-699721	1		Idle Speed Kit
104	BS-694918	1		Float Hinge Pin Incl. in Ref No. 121
105	BS-698537	1		Float Needle Valve
108	BS-699723	1		Choke Valve
117	BS-792296	1		Main Jet (Standard) (Left Jet)
117A	BS-842627	1		Main Jet (Standard) (Right Jet)

LTX1050VT Tractor (2009 & Before)
B&S Engine 44M777-0720 6

Page 33 of 58

Ref #	Part Number	Qty	S/P/F	Description
118	BS-699457	1		Main Jet (High Altitude) (Left Jet)
118A	BS-699733	1		Main Jet (High Altitude) (Right Jet)
121	BS-792455	1	S	Carburetor Overhaul Kit Incl. Ref No. 104, 137, 163, 276, 633,
125	BS-796227	1		Carburetor
130	BS-690993	1		Throttle Valve
131	BS-499805	1		Throttle Shaft Kit
133	BS-699724	1		Carburetor Float
135	BS-699729	1		Fuel Transfer Tube
137	BS-690994	1		Float Bowl Gasket Incl. in Ref No. 121
141	BS-796228	1		Choke Shaft Kit
142	BS-699726	1		Carburetor Nozzle
146	BS-690979	1	/P	Timing Key
150	BS-690995	1		Nozzle Gasket
163	BS-691001	1		Air Cleaner Gasket Incl. in Ref No. 358 & 121
165	BS-693148	1		Nut (Ring Gear)
177	BS-691031	1	/P	O-Ring Seal (Dipstick)
187	BS-791766	1	S	Fuel Line (Cut to Required Length)
188	BS-697551	1		Screw (Control Bracket)
192	BS-690083	1		Rocker Arm Adjuster
197	BS-697820	1		Screw (Back Plate)
209	BS-796224	1		Governor Spring (Yellow/Black)
211	BS-796225	1		Governed Idle Spring (Orange)
212	BS-695238	1		Throttle Link
216	BS-796229	1		Choke Link
217	BS-695409	1		Choke Return Spring
219	BS-793338	1	/P	Governor Gear
220	BS-690412	1	/P	Washer (Governor Gear)
221	BS-841026	1		Governor Cup
222	BS-796226	1		Control Bracket
227	BS-796223	1		Governor Control Lever
231	BS-690718	1		Screw (Choke Valve)
239	BS-792028	1		Oil Pressure Switch
240	BS-695666	1	S	Fuel Filter
250	BS-690957	1		Breather Retainer
252	BS-794389	1		Oil Collector
265	BS-691024	1	/P	Casing Clamp
267	BS-695134	1		Screw (Casing Clamp)
276	BS-695410	1		Sealing Washer (Fuel Solenoid) Incl. in Ref No. 121
278	BS-792651	1		Washer (Governor Control Lever)
287	BS-697551	1		Screw (Dipstick Tube)
304	BS-796678	1	S	Blower Housing
305	BS-691005	1		Screw (Blower Housing)
305A	BS-790690	1		Screw (Blower Housing to Intake Elbow)
306	BS-796541	1		Cylinder Shield (Cylinder #2)
307	BS-697551	1		Screw (Cylinder Shield) (1.4-20 x 2.3)
309	BS-497595	1	/P	Starter Motor
310	BS-690323	1		Screw (Starter Motor)
332	BS-691059	1		Nut (Flywheel)
333	BS-691060	1	/P	Magneto Armature
334	BS-691061	1		Screw (Magneto Armature)

LTX1050VT Tractor (2009 & Before)
B&S Engine 44M777-0720 6

Page 34 of 58

Ref #	Part Number	Qty	S/P/F	Description
337	759-3336	1	/P	Spark Plug
358	BS-694012	1	/P	Engine Gasket Set
385	BS-697551	1		Screw (Fuel Pump)
387	BS-808656	1	/P	Fuel Pump
404	BS-690442	1		Washer (Governor Crank)
415	BS-794903	1		Plug (Oil Pressure Switch)
418	BS-795912	1		Carburetor Plate
431	BS-792297	1		Intake Elbow
445	BS-792105	1	/P	Air Cleaner Cartridge Filter
447	BS-691003	1	/P	Screw (Air Guide Cover) 10-24 x 7.16)
447A	BS-697551	1		Screw (Air Guide Cover)
467	BS-790697	1		Air Cleaner Knob
474	BS-696457	1	/P	Alternator
501	BS-691188	1	S	Regulator
503	BS-691532	1	/P	Starter Strap
505	BS-691029	1		Nut (Governor Control Lever)
510	BS-696541	1	/P	Starter Drive
513	BS-692024	1	/P	Drive Clutch
523	BS-691036	1		Dipstick
524	BS-691032	1		Dipstick Tube Seal Incl. in Ref No. 358
525	BS-691037	1		Dipstick Tube
526	BS-691129	1	/P	Screw (Regulator)
544	N/A	1		Starter Armature (Service with Starter Motor BS-497595, Reference 309)
552	BS-690552	1		Governor Crank Bushing
552A	BS-690553	1		Governor Crank Bushing
562	BS-690311	1		Screw (Governor Control Lever)
573	BS-790444	1		Back Plate
579	BS-691029	1		Nut (Starter Cable)
601	BS-691038	1		Hose Clamp (Black)
601A	BS-791850	1	/P	Hose Clamp (Green)
615	BS-698290	1	/P	Governor Shaft Retainer
616	BS-691045	1		Governor Crank
617	BS-697891	1		O-Ring Seal (Intake Manifold) (Red)
628	BS-697551	1		Screw (Fuel Pump Bracket)
633	BS-699813	1		Choke Seal/Throttle Shaft Incl. in Ref No. 121
635	BS-66538S	1	/P	Spark Plug Boot
654	BS-690958	1	/P	Nut (Carburetor)
668	BS-691215	1		Spacer (Rotating Screen) Incl. in Ref No. 358
668A	BS-691500	1	/P	Spacer (Rotating Screen)
672	BS-690234	1		Carburetor Plate Gasket
691	BS-790574	1		Governor Shaft Seal Incl. in Ref No. 358
695	BS-693149	1		Screw (Ring Gear)
697	BS-690372	1	S	Screw (Drive Cap)
703	BS-691010	1		Clip
718	BS-690959	1	/P	Locating Pin
726	BS-499612	1		Ring Gear
729	BS-694123	1		Wire Clip
741	BS-690980	1		Timing Gear
742	BS-690328	1	/P	E-Ring Retainer (Governor Crank)
750	BS-696999	1		Screw (Oil Pump Cover)
783	BS-695708	1	/P	Pinion Gear

LTX1050VT Tractor (2009 & Before)
B&S Engine 44M777-0720 6


Page 35 of 58

Ref #	Part Number	Qty	S/P/F	Description
788	BS-793145	1		Fuel Pump Bracket
789	BS-698330	1		Wiring Harness
798	BS-697890	1		Screw (Rocker Arm)
801	BS-691283	1		Drive Cap
802	BS-691286	1	/P	End Cap
803	N/A	1		Starter Housing (Service with Starter Motor BS-497595, Reference 309)
847	BS-499602	1		Dipstick/Tube Assembly
851	BS-493880	1	S	Spark Plug Terminal
865	BS-691012	1		Air Guide Cover (Cylinder #1)
865A	BS-792286	1		Air Guide Cover (Valley)
868	BS-690968	1	/P	Valve Seat
877	BS-399916	1		Alternator Wire/Connector
877A	BS-790544	1		Alternator Wire/Connector
883	BS-690970	1	/P	Exhaust Gasket
914	BS-691127	1	/P	Screw (Rocker Cover)
918	BS-793147	1		Vacuum Hose
943	BS-796222	1		O-Ring Seal (Oil Pump Cover)
947	BS-841546	1		Fuel Solenoid
965	BS-796221	1		Oil Pump Cover
967	BS-792303	1	/P	Pre-Cleaner Filter
968	BS-795120	1	/P	Air Cleaner Cover
975	BS-793592	1		Float Bowl
987	BS-691000	1		Throttle Shaft Seal
1005	BS-791236	1		Flywheel Fan
1013	BS-690954	1	/P	Oil Filter Nipple
1017	BS-796214	1		Oil Pump Screen
1022	BS-690971	1	/P	Rocker Cover Gasket
1023	BS-793146	1		Rocker Cover (Cylinder #1)
1023A	BS-499600	1		Rocker Cover (Cylinder #2)
1024	BS-796220	1		Oil Pump
1026	BS-690981	1	/P	Push Rod (Exhaust)
1026A	BS-690982	1	/P	Push Rod (Intake)
1027	BS-795890	1	S	Oil Filter
1029	BS-690972	1		Rocker Arm
1036	N/A	1		Emissions Label
1040	BS-791237	1		Trim Plate
1051	BS-691265	1	/P	Retaining Ring (Starter Drive)
1054	BS-280275	1		Cable Tie
1058	BS-277103	1		Operator's Manual
1059	BS-698516	1		Screw/Washer Kit (Alternator)
1070	BS-791680	1	/P	Screw (Flywheel Fan)
1090	BS-691293	1	/P	Brush Retainer
1095	BS-694013	1	/P	Valve Gasket Set
1100	BS-791959	1		Rocker Arm Pivot
1119	BS-691183	1	S	Screw (Alternator)
1124	BS-841653	1		O-Ring Seal (Fuel Transfer Tube)
1124A	BS-690988	1		O-Ring Seal (Fuel Transfer Tube)
1126	BS-690991	1		Screw (Fuel Transfer Tube)
1127	BS-695407	1		Screw (Fuel Bowl)
1128	BS-690990	1		Screw (Carburetor Nozzle)
1169	BS-690990	1		Screw (Carburetor Plate)

LTX1050VT Tractor (2009 & Before)
B&S Engine 44M777-0720 6

Page 36 of 58

Ref #	Part Number	Qty	S/P/F	Description
1329	BS-44Q777-0037	1	S	Replacement Engine (Replacement engine listed is not available in the State of California. Repair with individual parts).

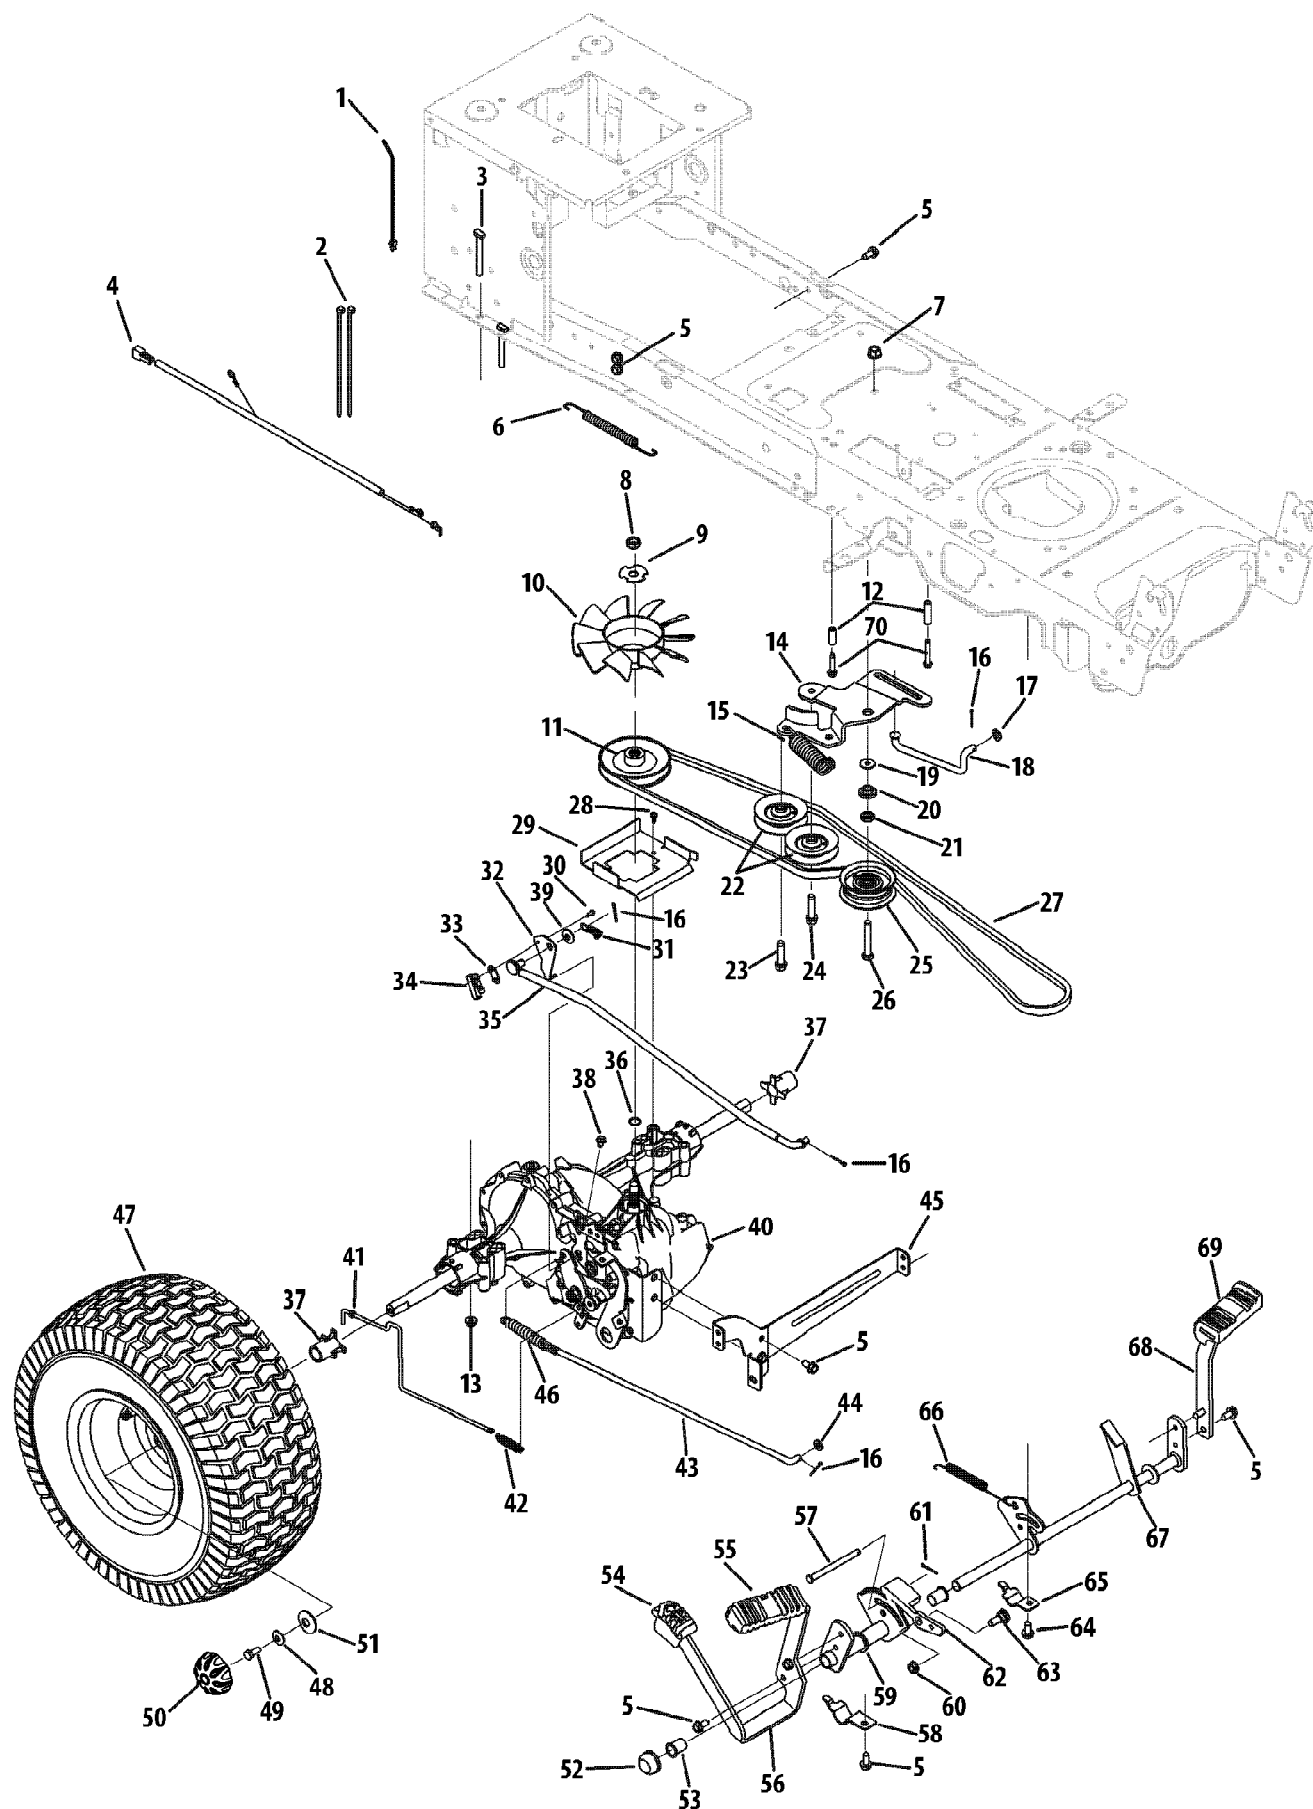 

LTX1050VT Tractor (2009 & Before)
Drive System


Page 38 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	926-0154	1	/P	Cable Tie, 7.5
2	725-0157	1	/P	Cable Tie, 3.16 x .05 x 7.4
3	710-04823	1		Bolt, 5.16-18 x 2.75
4	725-04791	1		Jumper Harness
5	710-04484	1		Hex Washer Screw, 5.16-18 x .750
6	732-04606	1		Extension Spring, .500 x 12.6
7	912-0431	1	/P	Flange Lock Nut, 3.8-16
8	912-0346	1	/P	Jam Lock Nut, 1.2-20
9	736-04263	1		Lock Washer
10	731-06098	1		Hydro Fan
11	756-04308	1		Input Pulley
12	750-04456	1		Spacer, .260 x .372 x 1.420
13	712-04063	1	/P	Flange Lock Nut, 5.16-18
14	783-06027	1		Idler Bracket
15	732-04624	1		Extension Spring, 1.00 x 4.75
16	914-0111	1	/P	Cotter Pin, 3.32 x 1.00
17	936-0264	1	/P	Flat Washer, .330 x .630 x .0635
18	747-04957A	1		Pedal Transmission Bypass Rod
19	736-04337	1		Shim Washer, 1.00 x .632 x .010
20	738-0372B	1	/P	Shoulder Spacer, 1.00 x .38 x .38
21	912-0240	1	/P	Jam Nut, 7.16-20
22	756-04325	1	/P	Idler Pulley
23	710-1008	1		Hex Washer Screw, 3.8-16 x 1.875
24	710-1007	1	/P	Hex Washer Screw, 3.8-16 x 1.500
25	756-04224	1	/P	Idler Pulley
26	710-3011	1	/P	Hex Screw, 3.8-16 x 2.25
27	954-04207	1	/P	V-Belt
28	710-0351	1	/P	Screw, #10-16 x .500
29	783-06260-0637	1		Belt Disengage Support Bracket
30	710-0227	1	/P	Hex Washer Screw, #8-18 x .500
31	732-3118	1		Extension Spring, .375 x 1.44
32	783-1019B	1	/P	Switch Actuator Bracket
33	926-0320	1	/P	Nut Insulator Plate
34	725-1644	1		Spring Safety Switch
35	747-04979	1		Hydro Control Rod
36	12087	1	/P	Wire Ring
37	731-05299	1		Sleeve, .765 x 1.500
38	710-0653	1	/P	Hex Washer Screw, 1.4-20 x .375
39	736-3010	1	/P	Flat Washer, .407 x .812 x .135
40	918-0319	1	/P	Hydro Transmission
41	747-04991	1		Hydro Bypass Rod
42	932-0209	1	/P	Extension Spring, .48 x 2.03
43	747-04139	1		Hydro Brake Rod
44	936-3008	1	/P	Flat Washer, .344 x .750 x .120
45	783-06133-0637	1		Hydro Mount Bracket
46	732-0716D	1	/P	Extension Spring, .59 x 4.00
47	N/A	1		Wheel Assy (LTX1046)
47	634-04369	1		Rim 8.0 x 7.0 Not shown
47	934-0255	1	/P	Valve, Tubeless air Not shown
47	734-1730-0901	1	/P	Tire 20 x 8 x 8 Not shown
47	N/A	1		Wheel Assy (LTX1050)
47	634-04369	1		Rim 8.0 x 7.0 Not shown
47	734-0255	1	S	Valve, Tubeless air Not shown

LTX1050VT Tractor (2009 & Before)
Drive System

Page 39 of 58


Ref #	Part Number	Qty	S/P/F	Description
47	734-1873-0901	1	/P	Tire 20 x 10 x 8 Not shown
48	736-0242	1	/P	Bell Washer, .340 x .872 x .060
49	710-0627	1	/P	Cap Lock Screw, 5.16-24 x .750
50	731-2290A	1	/P	Hub Cap
51	736-0430	1	/P	Flat Washer, .350 x 1.59 x .062
52	726-0214	1	/P	Push Cap
53	741-0495	1	/P	Flange Bearing, .630 x .695 x .60
54	735-04135	1		Reverse Pedal Pad
55	735-04118A	1	/P	Forward Pedal Pad
56	783-06059-0637	1		Forward/Reverse Hydro Pedal Bracket
57	711-05068	1		Clevis Pin, 5.16 x 3.985
58	783-05914	1		Transmission Rod Support Strap
59	683-04488	1		Hydro Drive Shaft Assembly
60	712-04065	1	/P	Flange Lock Nut, 3.8-16
61	714-04040	1	/P	Bow-Tie Cotter Pin
62	748-04203	1		Cruise Latch
63	938-0380	1	/P	Shoulder Bolt, 3.8-16 x .500 x .270
64	710-0604A	1	/P	Hex Washer Screw, 5.16-18 x .625
65	783-05940	1		Brake Shaft Support Strap
66	732-04587	1		Extension Spring, .63 x 4.95
67	647-04152	1		Brake Control Assembly
68	783-06103A	1		Brake Pedal Bracket
69	735-04136	1		Brake Pedal Pad
70	710-1325	1	/P	Hex Washer Screw, 1/4-20 x 1.625

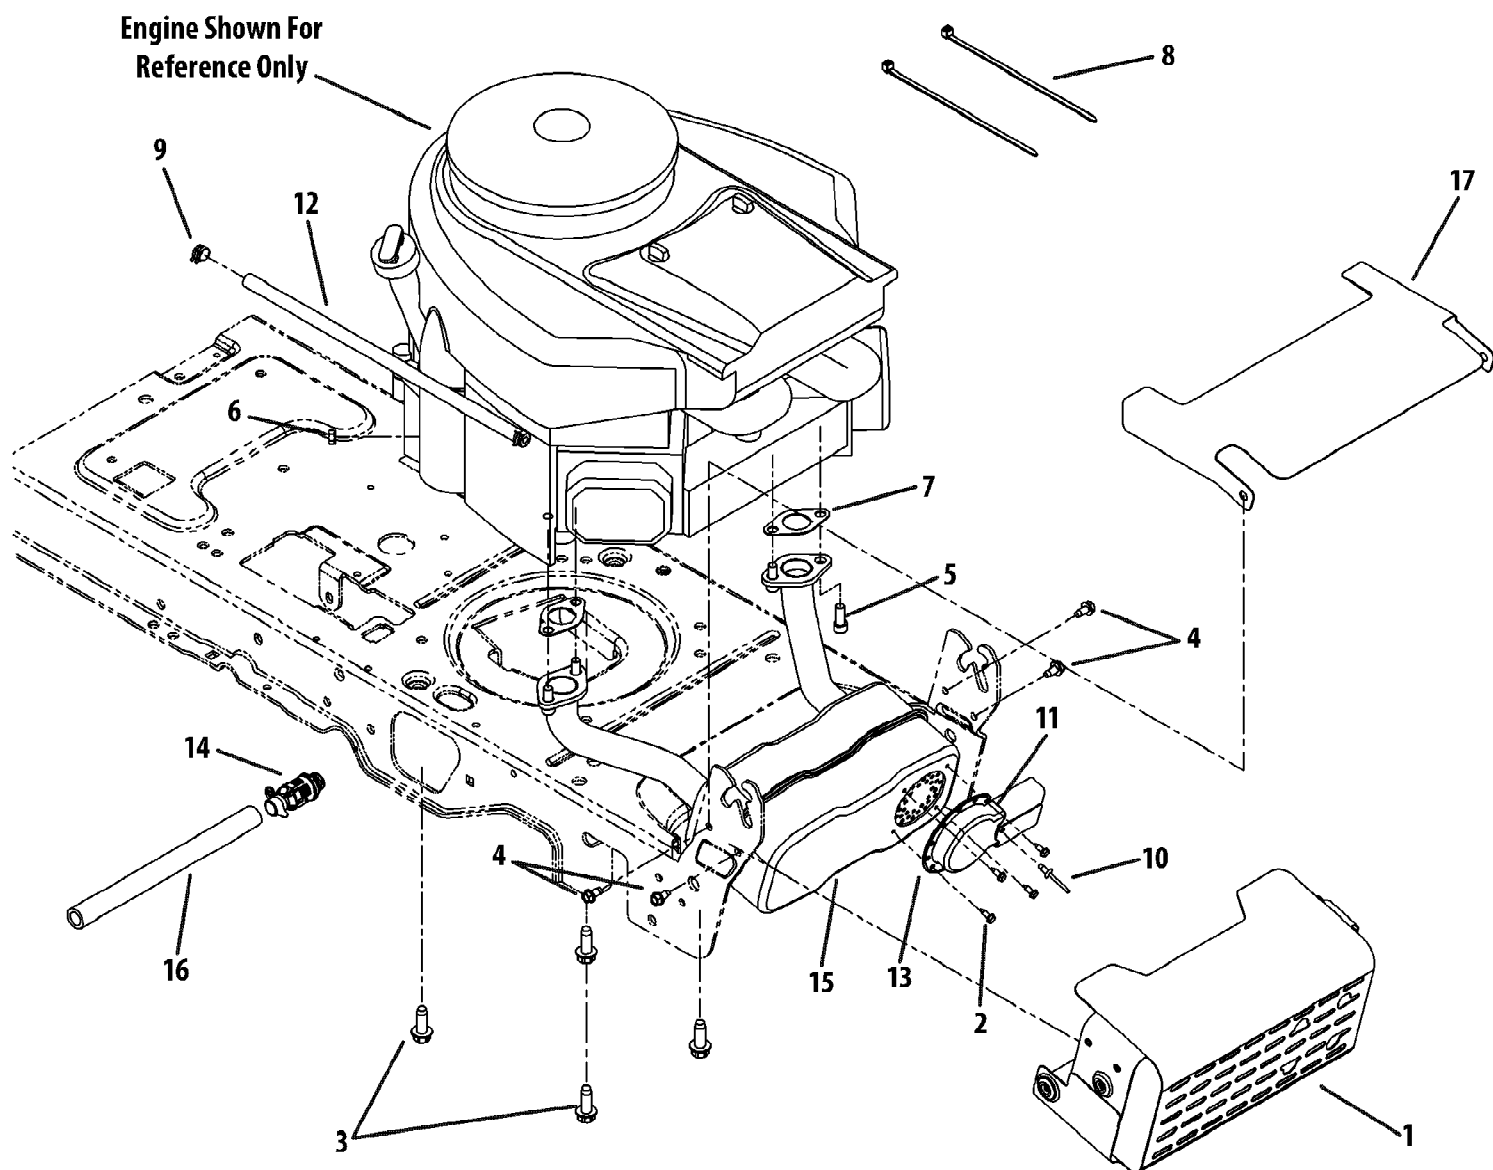 

LTX1050VT Tractor (2009 & Before)
Engine Accessories

Page 41 of 58


Ref #	Part Number	Qty	S/P/F	Description
1	683-04549-0637	1	/P	Muffler Shield Assembly
2	710-0227	1	/P	Hex Washer Screw, #8-18 x .500
3	710-04683	1		Hex Washer Screw, 3/8-16 x 1.000
4	710-0599	1	/P	Hex Washer Screw, 1/4-20 x .500
5	710-1314A	1	/P	Screw, 5/16-18 x .750
6	712-0271	1	/P	Sems Nut, 1/4-20
7	721-0460	1		Exhaust Gasket
8	725-0157	1	/P	Cable Tie, 3/16 x .05 x 7.4
9	726-0205	1	/P	Hose Clamp
10	728-04000	1		Rivet, .188 x .300
11	751-0564B	1	/P	Muffler Deflector
12	751-10349-28	1	/P	Fuel Hose
13	751-10353	1		Long Muffler Deflector
14	951-10517A	1	/P	Oil Drain
15	751-10542	1		Muffler
16	751-3141-14	1	/P	Oil Drain Extension Hose
17	783-06378	1		Heat Shield
	946-04542	1	/P	Throttle/Choke Control Cable Not Shown

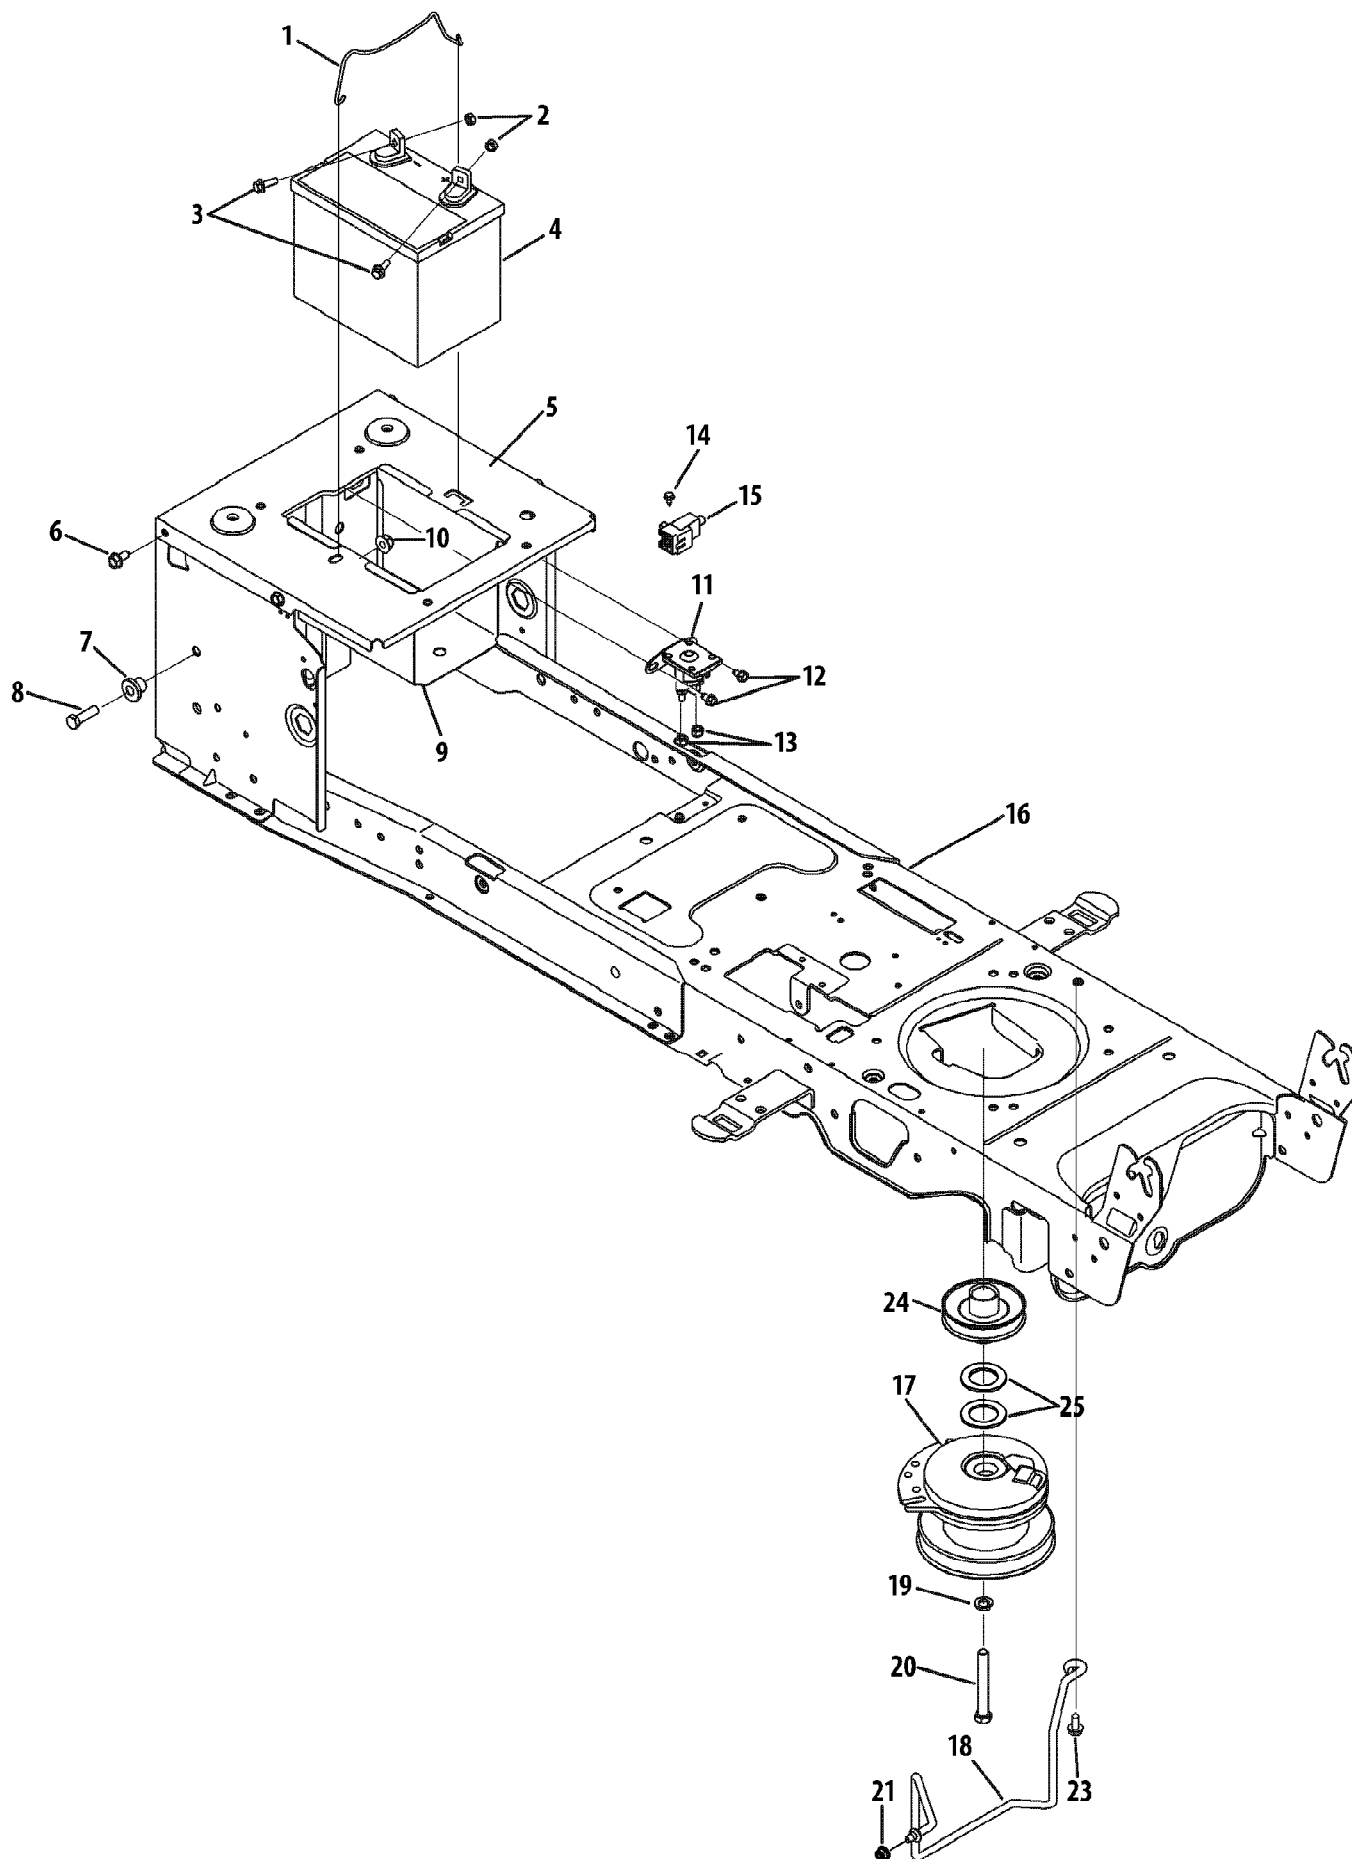 

LTX1050VT Tractor (2009 & Before)
Frame, Battery & PTO

Page 43 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	747-04121A	1		Battery Hold-Down Rod
2	712-0271	1	/P	Sems Nut, 1.4-20
3	710-04666	1		Hex Flange, 1.4-20 x .75
4	925-1707D	1	/P	Battery
5	783-06089-0637	1		Seat Frame Bracket
6	710-04484	1		Hex Washer Screw, 5.16-18 x .750
7	738-04058	1		Shoulder Spacer, .38 x 1.0 x .70
8	710-3005	1	/P	Hex Screw, 3.8-16 x 1.25
9	783-0349-0637	1		Battery Tray
10	712-04065	1	/P	Flange Lock Nut, 3.8-16
11	725-04439	1		Solenoid
12	710-0653	1	/P	Hex Washer Screw, 1.4-20 x .375
13	712-04064	1	/P	Flange Lock Nut, 1.4-20
14	738-04237A	1		Shoulder Screw, #10-32 x .500
15	725-04363	1		Interlock Switch
16	683-04469-0637	1		Lower Frame Assembly
17	917-04552	1	/P	Electric PTO Clutch (LTX1046VT)
17	917-04174A	1	/P	Electric PTO Clutch (LTX1050VT)
18	747-05073	1		Keeper Rod (LTX1050VT)
18	747-05065	1		Keeper Rod (LTX1046VT)
19	936-0171	1	/P	Lock Washer, 7.16
20	710-04379A	1		Hex Screw, 7.16-20 x 3.50
21	712-04063	1	/P	Flange Lock Nut, 5.16-18
23	710-04484	1		Hex Washer Screw, 5.16-18 x .750
24	756-0978B	1	/P	Engine Pulley
25	736-0277	1		Flat Washer, 1.031 x 1.620 x .095

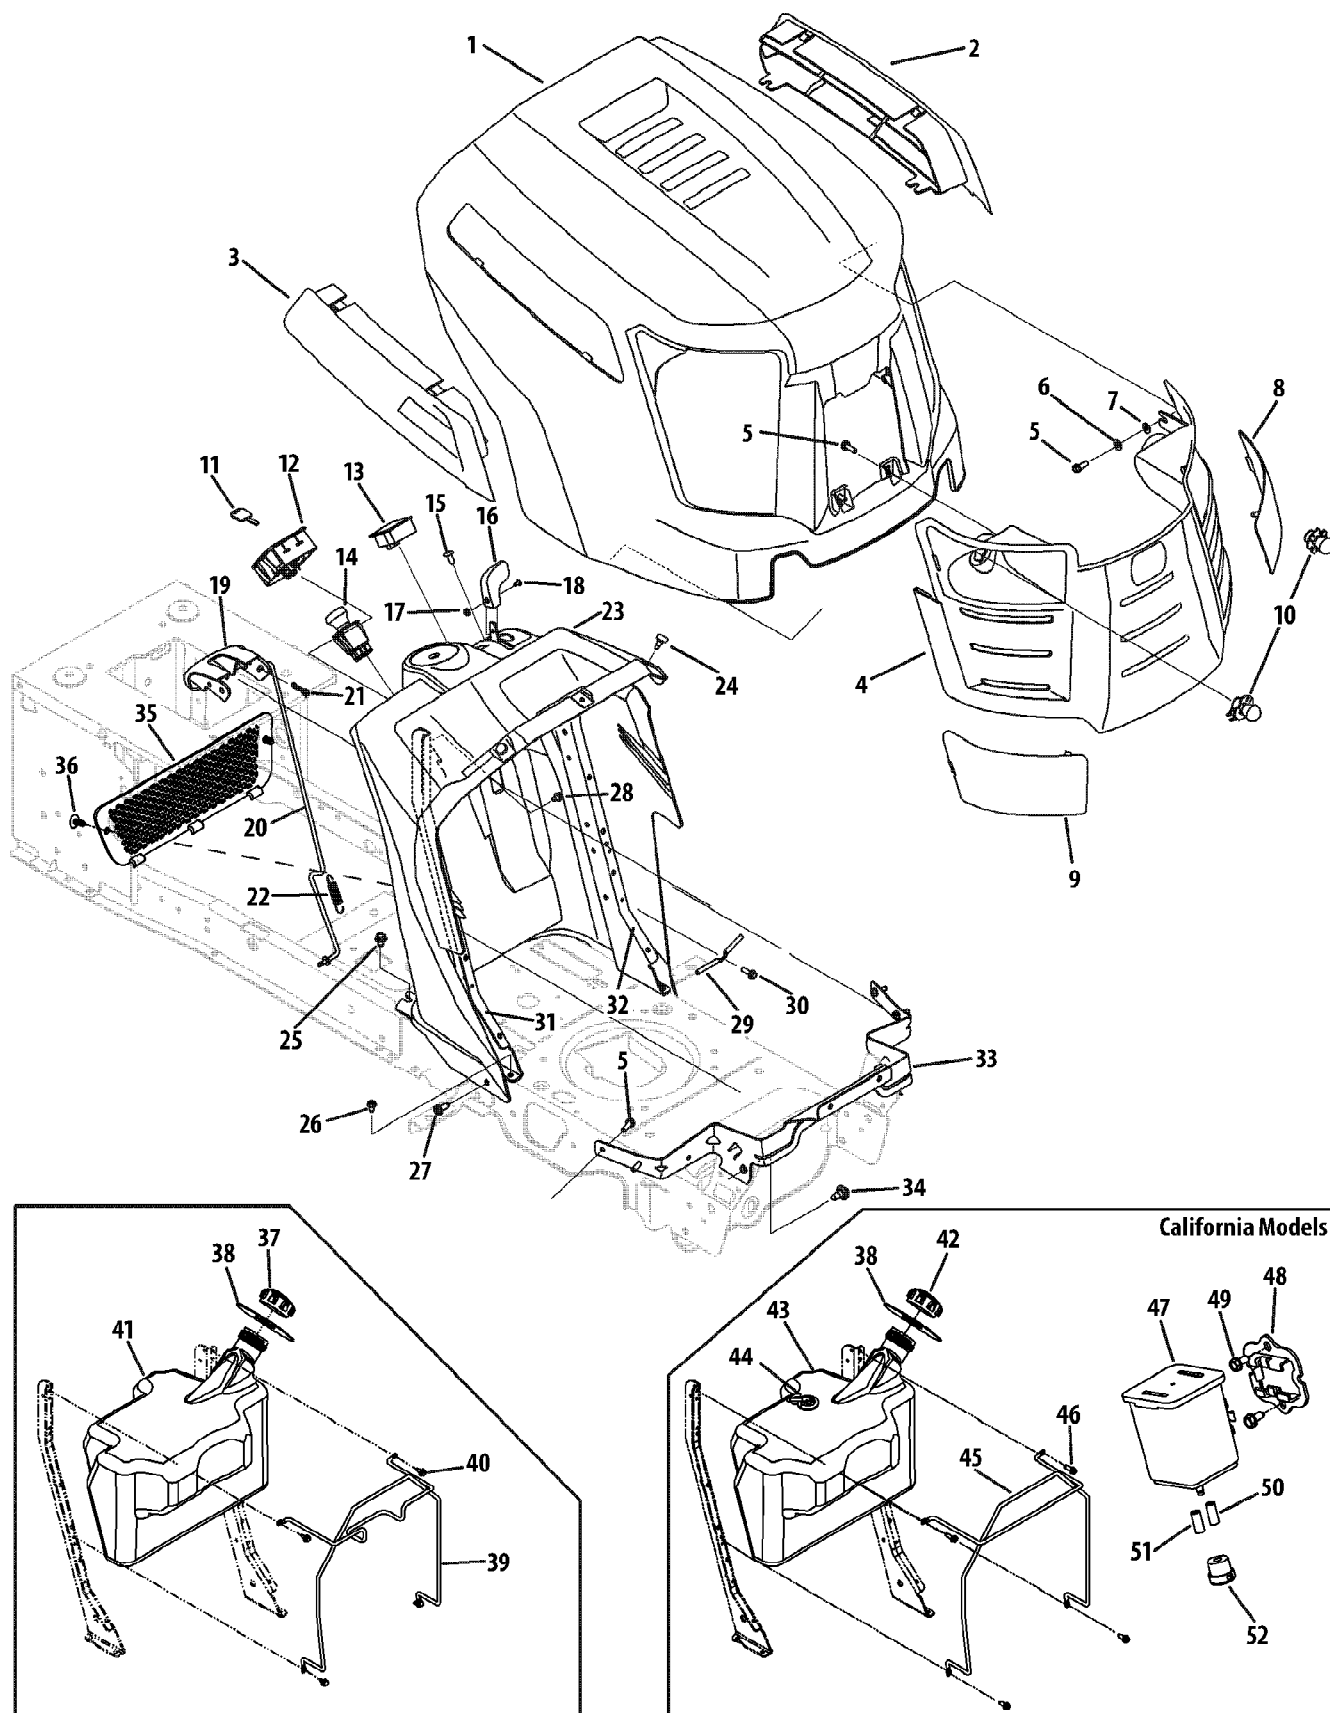 

LTX1050VT Tractor (2009 & Before)
Hood & Dash Assembly

Page 45 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	931-06634	1	/P	Hood When replacing hood, use 8 new 710-05108 screws.
2	731-06543	1	S	LH Hood Scoop
3	731-06542	1	S	RH Hood Scoop
4	931-04322	1	/P	Grille Asm Includes 8 & 9
4	777X43335	1		Reflective Label, LH Not shown
4	777X43334	1		Reflective Label, RH Not shown
5	710-05108	8		Hex Washer BosScrew™, 1/4 Dia. x .750 Replaces 710-0895 in this application
6	936-3020	1	/P	Flat Washer, .271 x .630 x .065
7	936-0222	1	/P	Lock Washer, 1/4
8	931-06559	1	/P	Lens, LH
9	931-06558	1	/P	Lens, RH
10	925-0963	1	/P	Bulb
10	925-1649	1	/P	Socket, Headlight
11	925-2054A	1	/P	Key
12	925-04227B	1	/P	Key Switch
13	925-04022B	1	/P	Indicator Meter
14	725-04258	1	/P	Electric PTO (If Equipped)
15	710-1017	1	/P	Screw, 1/4-14 x .625
16	731-06593	1		Throttle Knob
17	712-0142	1	/P	Hex Nut, #8-32
18	710-3217	1	/P	Screw, #8-32 x .375
19	731-05447A	1		Parking Brake/Cruise Control Lever
20	747-05009	1		Control Rod
21	714-04040	1	/P	Bow-Tie Cotter Pin
22	732-04580	1		Extension Spring, .500 x 2.733
23	931-06554	1	/P	Dash Panel
24	735-0271A	1	/P	Bumper
25	710-04484	1		Hex Washer Screw, 5/16-18 x .750
26	710-0599	1	/P	Hex Washer Screw, 1/4-20 x .500
27	710-1611B	1	/P	Screw, 5/16-18 x .750
28	710-1652	1	/P	Hex Washer Screw, 1/4-20 x .625
29	747-1196	1		Bent Lever Rod
30	710-0895	1		Hex Washer Screw, 1/4-15 x .750
31	783-06099-0637	1		Dash Support, RH
32	783-06098-0637	1		Dash Support, LH
33	783-06114-0637	1		Hood Pivot Bracket
34	738-04091A	1	/P	Shoulder Screw, 5/16-18 x .43 x .29
35	735-04076	1		Net
36	726-3046	1	/P	Ratchet Clip
37	751-0603A	1	/P	Fuel Cap 49 states
38	735-04170	1		Fuel Tank Gasket
39	747-05040A	1	/P	Fuel Tank Support Rod
40	710-1652	1	/P	Hex Washer Screw, 1/4-20 x .625
41	751-10879	1		Fuel Tank 49 states
42	951-10947	1	/P	Fuel Cap California models only
43	751-10906	1		Fuel Tank California models only
44	751-10441	1		Rollover Valve California models only
44	735-04081	1		Rubber Grommet Not Shown, California models only
45	747-05040A	1	/P	Fuel Tank Support Rod California models only




LTX1050VT Tractor (2009 & Before)
Hood & Dash Assembly

Page 46 of 58

Ref #	Part Number	Qty	S/P/F	Description
46	710-0642	1	/P	Hex Washer Screw, 1/4-20 x .750 California models only
47	951-10589	1	/P	Carbon Canister California models only
48	951-10610	1	/P	Canister Adapter Bracket California models only
49	710-04484	1		Hex Washer Screw, 5/16-18 x .750 California models only
50	751-10749	1		Fuel Hose, 3/16 White California models only
51	751-10750-28	1		Fuel Hose, 7/32 Yellow California models only
52	951-10590	1	/P	Canister Vent Filter California models only
	731-06936	1		Plenum (Under Hood) Not Shown
	710-0895	1		Hex Washer Screw, 1/4-15 x .750 Not Shown
	925-04734	1	/P	Wire Harness Not Shown
	725-1381	1	S	Fuse, 20 Amp Not Shown

LTX1050VT Tractor (2009 & Before)
Label Map

   Page 47 of 58

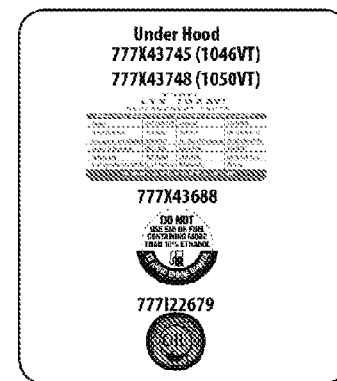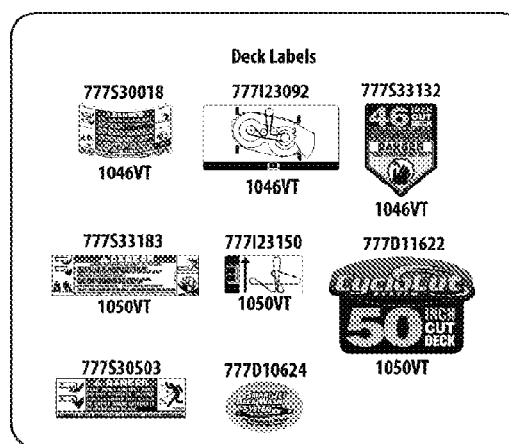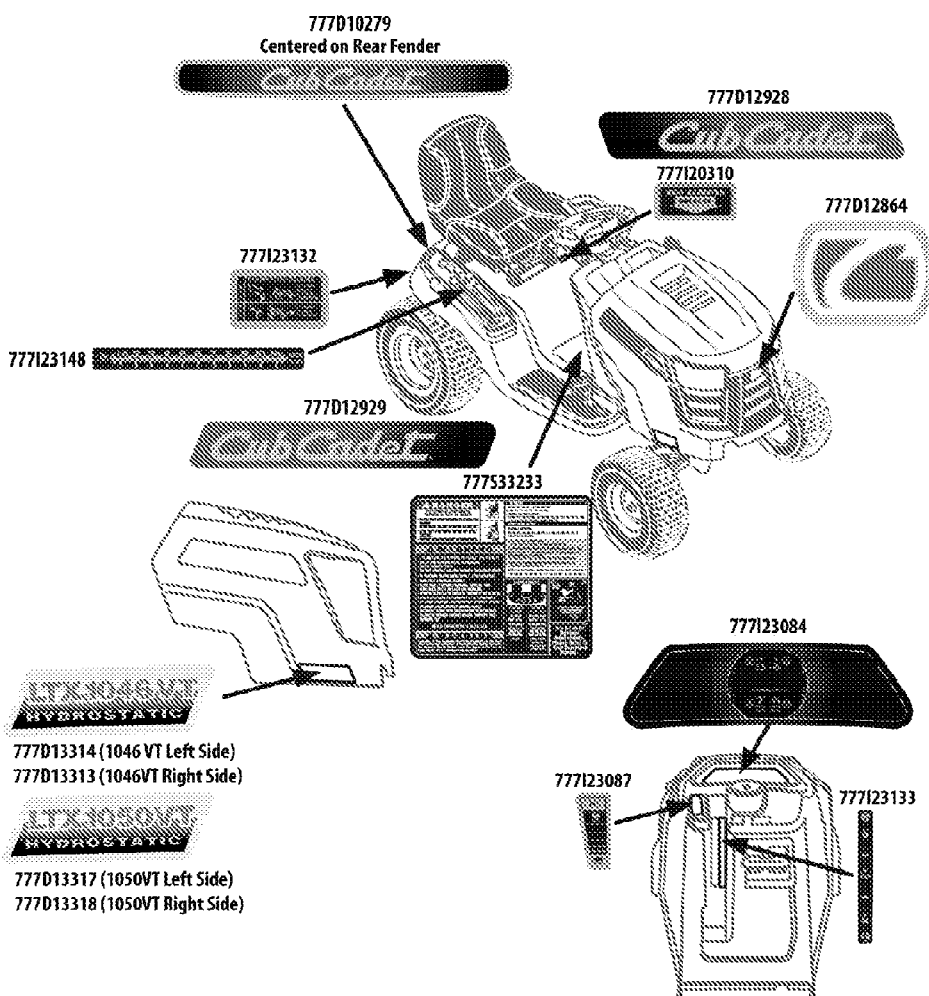


LTX1050VT Tractor (2009 & Before)
Label Map

Page 48 of 58

Ref #	Part Number	Qty	S/P/F	Description
777D10279	777D10279	1		LABEL-REAR FENDER
777I23132	777I23132	1		LABEL-HYDRO RELEASE
777I23148	777I23148	1		LABEL-DECK HEIGHT
777D12929	777D12929	1		LABEL-RGT SIDE HOOD SCOOP
777S33233	777S33233	1		LBL-FLOORBRD SAFETY HYDRO
777D13314	777D13314	1		LBL-MODEL LTX 1046VT HYDRO LH NX-9
777D13313	777D13313	1		LBL-MODEL LTX 1046VT HYDRO RH NX-9
777D13317	777D13317	1		LBL-MODEL LTX 1050VT HYDRO LH NX-9
777D13318	777D13318	1		LBL-MODEL LTX 1050VT HYDRO RH NX-9
777I23087	777I23087	1		LABEL-THROTT/CHOKE
777I23133	777I23133	1		LABEL-FUEL LEVEL
777I23084	777I23084	1		LABEL-DASH PANEL
777D12864	777D12864	1		LABEL-C LOGO GRILLE C CADET
777I20310	777I20310	1		LABEL-SEAT ADJUSTE
777D12928	777D12928	1		LABEL-LFT SIDE HOOD SCOOP
777S30018	777S30018	1	/P	LABEL-DECK SAFETY
777I23092	777I23092	1		LABEL-BELT ROUTING 46 OFFSET
777S33132	N/A	1		LABEL-DECK SAFETY Mold In Graphic
777S33183	777S33183	1		LABEL-DECK SAFETY
777I23150	777I23150	1		LABEL-BELT ROUTING 50"/54"
777D11622	777D11622	1		LABEL-CYCLO CUT 50" BLUE
777S30503	777S30503	1	/P	LABEL-DANGER CHUTE
777D10624	777D10624	1		LABEL-RIDER:DECK WASH CUB
777X43745	777X43745	1		LABEL-PARTS LIST LTX 1046VT
777X43748	777X43748	1		LABEL-PARTS LIST LTX 1050VT
777X43688	777X43688	1		LABEL-ETHANOL
777I22679	777I22679	1		LABEL-CHECK ENG OIL

LTX1050VT Tractor (2009 & Before)
Mowing Deck 50 Inch

 Page 49 of 58

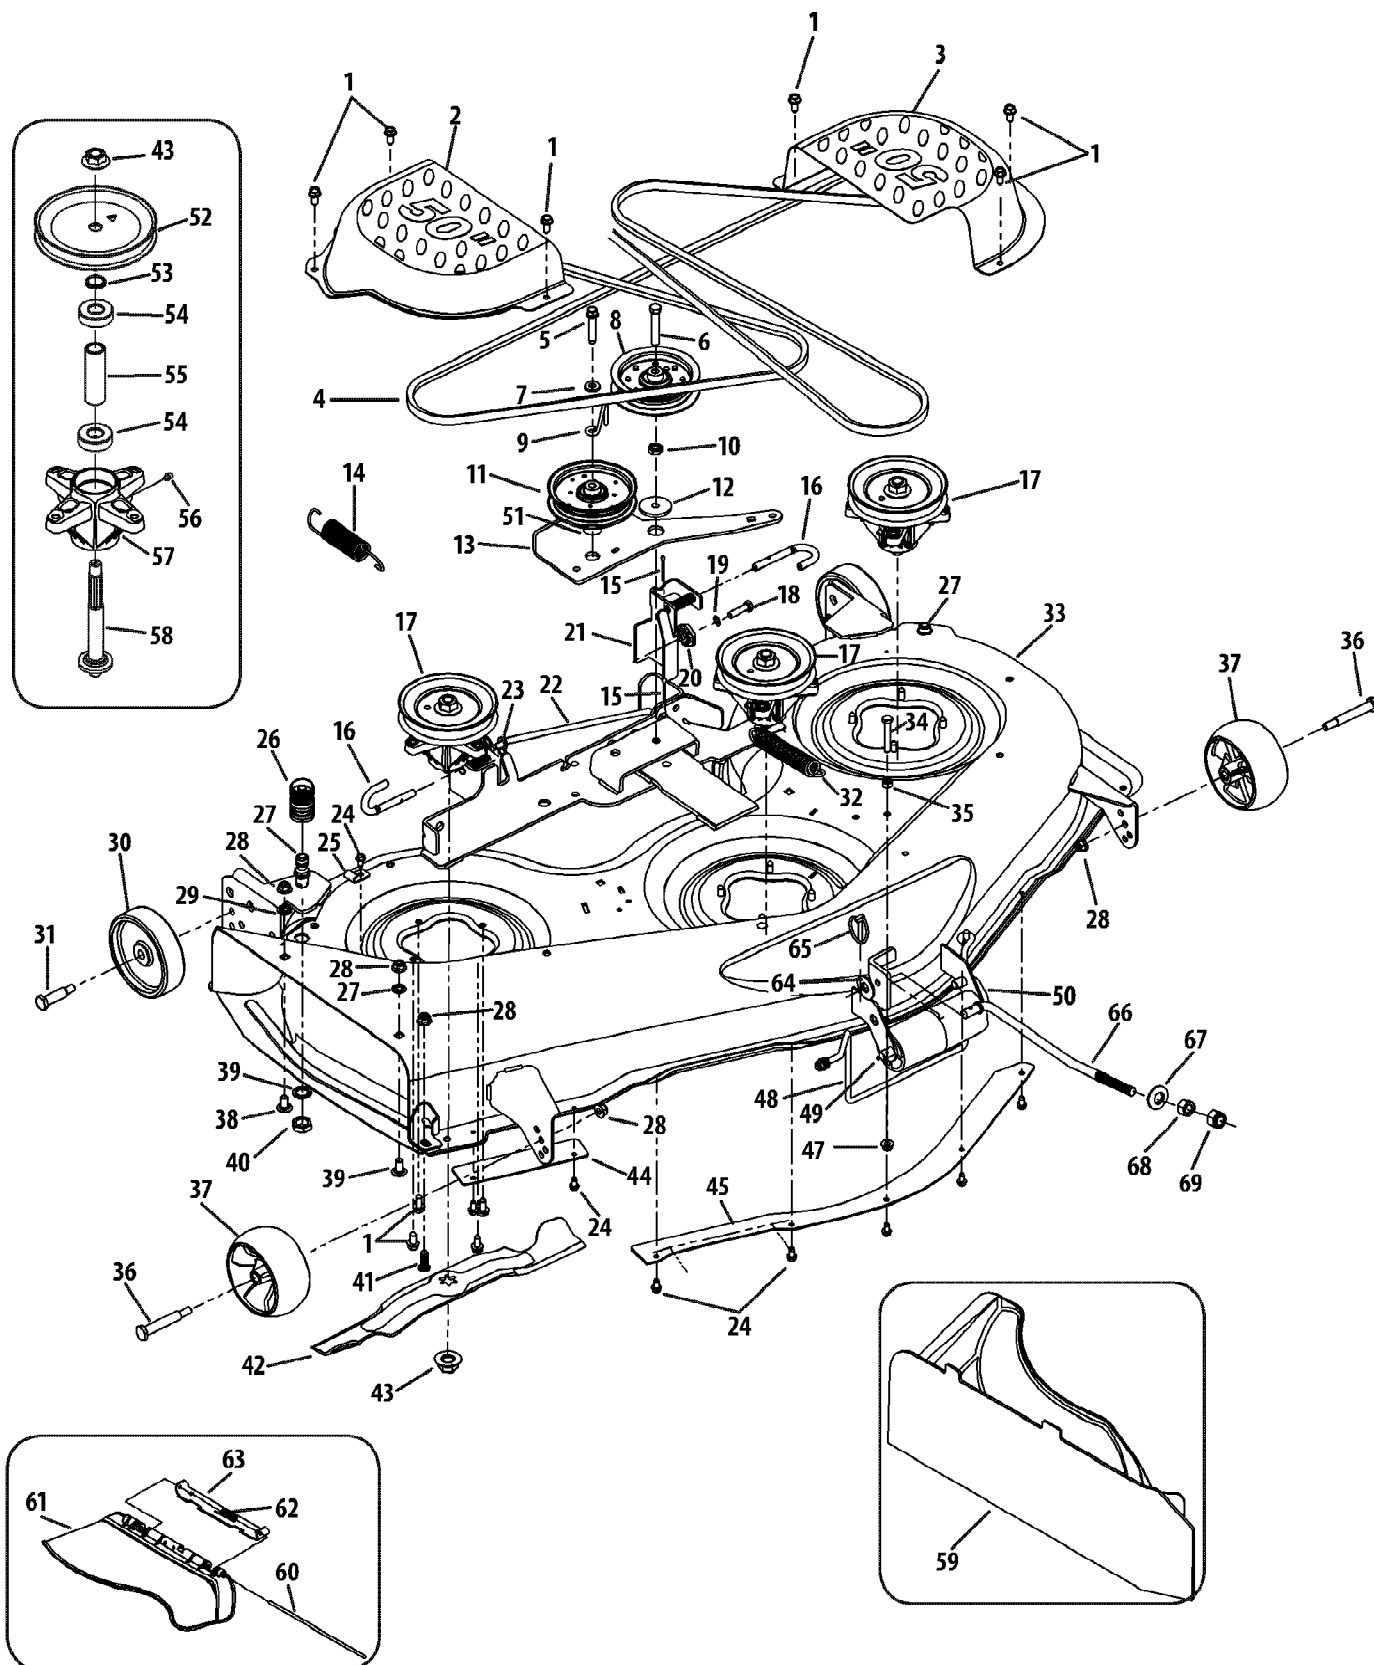

LTX1050VT Tractor (2009 & Before)
Mowing Deck 50 Inch

Page 50 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	710-04484	1		Hex Washer Screw, 5.16-18 x .750
2	783-04400-4021	1		Belt Cover, RH
3	783-04399-4021	1		Belt Cover, LH
4	954-04240	1	/P	V-Belt
5	710-1008	1		Hex Washer Screw, 3.8-16 x 1.875
6	710-3011	1	/P	Hex Screw, 3.8-16 x 2.25
7	736-3010	1	/P	Flat Washer, .407 x .812 x .135
8	756-04400	1		Idler Pulley
9	747-04530	1		Belt Keeper Rod
10	912-0240	1	/P	Jam Nut, 7.16-20
11	756-04129B	1	/P	Idler Pulley
12	738-04162A	1	/P	Shoulder Spacer, .8840 x .190
13	783-06361-0637	1	S	Idler Arm Bracket
14	732-0934	1		Extension Spring, 1.15 x 5.99
15	914-0470	1	/P	Cotter Pin, 1.8 x 1.25
16	747-1116	1	/P	Deck Handle Rod
17	918-04825	1	S	Spindle Assembly
18	710-0528	1	/P	Hex Screw, 5.16-18 x 1.25
19	936-0119	1	/P	Lock Washer, 5.16
20	917-04074	1	/P	Deck Adjustment Gear
21	683-0254B-4021	1		Deck Hanger Bracket Assembly
22	711-05078	1		Deck Support Rod
23	936-0314	1	/P	Washer, .375 x .70 x .030
24	710-0599	1	/P	Hex Washer Screw, 1.4-20 x .500
25	96606	1	/P	Hook Retainer Bracket
26	921-04041	1	/P	Water Nozzle Adapter
27	737-04003D	1	/P	Deck Water Nozzle
28	712-04065	1	/P	Flange Lock Nut, 3.8-16
29	712-0229	1		Push Nut, 3.8
30	734-0973	1	/P	Deck Wheel
31	938-0373	1	/P	Shoulder Bolt, 3.8-16 x .496 x 1.525
32	732-04649	1		Extension Spring, 1.0 X 6.10
33	683-04561-4021	1	S	Deck Assembly
34	710-3103	1	/P	Hex Screw, 5.16-18 x 2.00
35	912-3010	1	/P	Hex Nut, 5.16-18
36	938-3056	1	/P	Shoulder Bolt, 3.8-16 x .496 x 2.50
37	734-04155	1		Deck Wheel
38	710-3178	1	/P	Carriage Bolt, 3.8-16 x .75
39	736-0225	1	/P	Lock Washer, 5.8
40	912-0641	1	/P	Hex Nut, M16-1.5
41	710-04095	1		Hex Screw, 3.8-16 x 1.00
42	942-04053C	1	/P	2-in-1 Blade
43	712-0417A	1	/P	Flange Nut, 5.8-18
44	783-04415-4021	1		RH Skirt
45	783-04414A-4021	1		Center Skirt
46	714-04043	1		Bow-Tie Cotter Pin
47	712-04063	1	/P	Flange Lock Nut, 5.16-18
48	747-05073	1		Torque Rod
49	914-0111	1	/P	Cotter Pin, 3.32 x 1.00
50	911-3314	1	/P	Roller Pin
51	750-3119	1	/P	Spacer, .406 x 1.00 x .38
52	756-04216	1		Deck Pulley
53	748-0434	1		Spacer, .750 x 1.150 x .230

LTX1050VT Tractor (2009 & Before)
Mowing Deck 50 Inch

Page 51 of 58


Ref #	Part Number	Qty	S/P/F	Description
54	941-0919	1	/P	Ball Bearing, .787 x 1.85
55	750-1096	1		Spacer, .800 x 1.100 x 1.5300
56	937-3000	1	/P	Lube Fitting
57	618-0411	1	S	Spindle Housing
58	738-0976	1		Spindle Shaft
59	731-04651	1		Mulch Kit
60	711-04565	1		Hinge Pin, .3175 x 14.06
61	631-04070A	1	/P	Chute (Incl. 60-63)
62	732-04372	1		Torsion Spring, .44 x 2.0
63	783-05030	1		Chute Bracket
64	936-0179	1	/P	Flat Washer, 1.2 x 1.25 x .10
65	753-04070	1	/P	Lynch Pin, .1875
66	747-05067A	1	/P	Deck Lift Rod
67	736-0317	1	/P	Bell Washer, .63 x 1.25 x .18
68	912-0206	1	/P	Hex Nut, 1.2-13
69	712-3083	1	/P	Hex Lock Nut, 1.2-13



LTX1050VT Tractor (2009 & Before)
Quick Reference LTX1050VT

Page 53 of 58

Ref #	Part Number	Qty	S/P/F	Description
	759-3336	1	/P	Spark Plug
	BS-792105	1	/P	Air Filter
	BS-792303	1	/P	Pre-Cleaner
	BS-795890	1	S	Oil Filter
	BS-695666	1	S	Fuel Filter
	BS-691060	1	/P	Ignition Module
	BS-691188	1	S	Voltage Regulator
	BS-808656	1	/P	Fuel Pump
	BS-796227	1		Carburetor
	BS-792455	1	S	Carb Repair Kit
	BS-841546	1		Carburetor Solenoid
	746-04621	1	S	Cable, Throttle/Choke
	954-04207	1	/P	Drive Belt (Trans)
	954-04240	1	/P	Deck Belt & PTO
	942-04053C	1	/P	Blades (Qty 3)
	712-0417A	1	/P	Blade Nut
	918-04825	1	S	Spindle Assy. w/Pulley
	734-04155	1		Deck Wheels (Front)
	734-0973	1	/P	Deck Wheels (Back)
	737-04003D	1	/P	Water Nozzle Adapter
	923-0448A	1	/P	Ball Joints
	725-04363	1		Brake Switch
	751-0603A	1	/P	Fuel Cap
	725-04439	1		Solenoid
	925-2054A	1	/P	Ignition Keys
	925-04227B	1	/P	Ignition Switch Module
	725-04258	1	/P	P.T.O. Switch
	917-04174A	1	/P	P.T.O. Clutch
	925-0963	1	/P	Bulb, 12V
	19A40002100	1	/P	Bagger Attachment
	19A30005100	1		Mulch Attachment
	190-679-101	1		Bumper Attachment
	490-900-0041	1		Deck Leveling Gauge Accessory

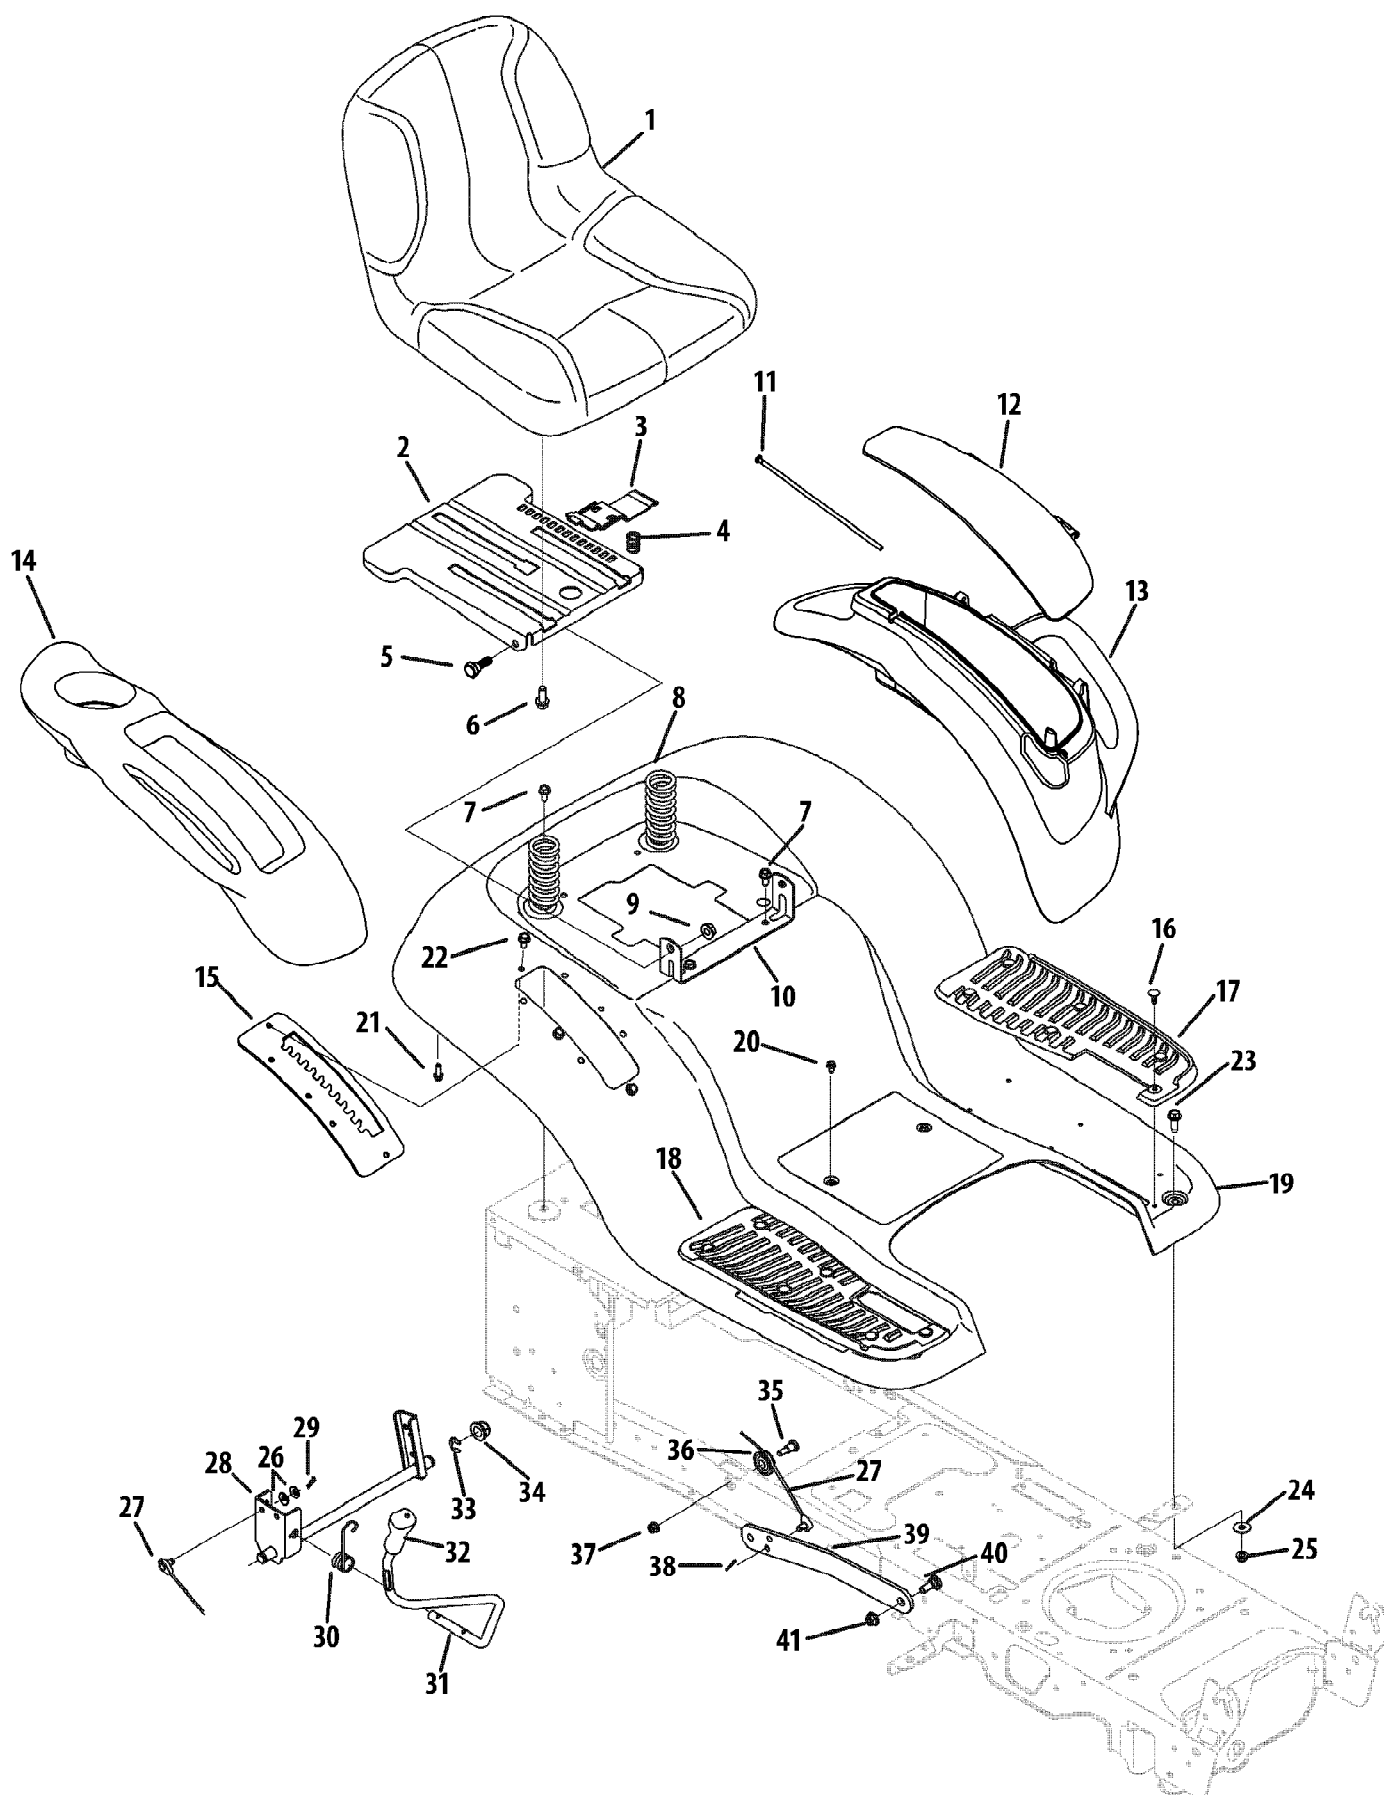 


LTX1050VT Tractor (2009 & Before)
Seat, Fender & Deck Lift

Page 55 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	757-04091	1		High-Back Chair
1	925-04040	1	/P	Switch, Seat Not Shown
1	783-06448	1		Clip, Retaining Not Shown
2	783-06049-4021	1		Seat Mounting Bracket
3	783-06050	1		Seat Adjustment Lever
4	732-04563	1		Compression Spring, .68 x 1.065 x .055
5	938-0296	1	/P	Shoulder Screw, 5.16-18 x .437 x .268
6	710-04482	1		Hex Flange Bolt, 3.8-16 x .875 Note: Stop bolt, one used on right side of base
7	710-04484	1		Hex Washer Screw, 5.16-18 x .750
8	732-04561	1		Compression Spring, 1.71 x 3.735 x .238
9	712-3004A	1	/P	Flange Lock Nut, 5.16-18
10	783-06088-4021	1		Seat Pivot Bracket
11	747-05039	1		Door Pin LH Pod
12	731-06584	1		Fender Cover Door
13	731-06676	1		Fender Cover, LH
14	731-06700	1		Fender Cover, RH
15	783-06181-0637	1		Lift Adjustment Bracket
16	726-3046	1	/P	Ratchet Clip
17	735-04137	1		Foot Pad, LH
18	735-04139	1		Foot Pad, RH
19	783-06118-4021	1		Fender
20	710-0599	1	/P	Hex Washer Screw, 1.4-20 x .500
21	710-0895	1		Hex Washer Screw, 1.4-15 x .750
22	710-04484	1		Hex Washer Screw, 5.16-18 x .750
23	710-1260A	1	/P	Hex Washer Screw, 5.16-18 x .750
24	736-3078	1	/P	Flat Washer, .344 x 1.0 x .063
25	712-04063	1	/P	Flange Lock Nut, 5.16-18
26	736-0105	1	/P	Washer, .401 x .870 x .063
27	746-0968	1		Lift Cable
28	683-04223-0637	1	/P	Lift Shift Assembly
29	914-0104	1	/P	Cotter Pin, .072 x 1.13
30	732-0874	1	/P	Torsion Spring
31	747-04962A	1	/P	Lift Handle
32	720-0311	1		Handle Grip
33	716-0106A	1		E-Type Ring
34	941-0225	1	/P	Hex Flange Bearing
35	738-0138A	1	/P	Shoulder Screw, 5.16-18 x .437 x .470
36	756-04331	1		Cable Roller Pulley
37	712-04063	1	/P	Flange Lock Nut, 5.16-18
38	714-04040	1	/P	Bow-Tie Cotter Pin
39	783-05546-0637	1	S	Lift Arm
40	938-0380	1	/P	Shoulder Bolt, 3.8-16 x .500 x .270
41	712-04065	1	/P	Flange Lock Nut, 3.8-16

LTX1050VT Tractor (2009 & Before)
Steering & Front Axle Assembly

 Page 56 of 58

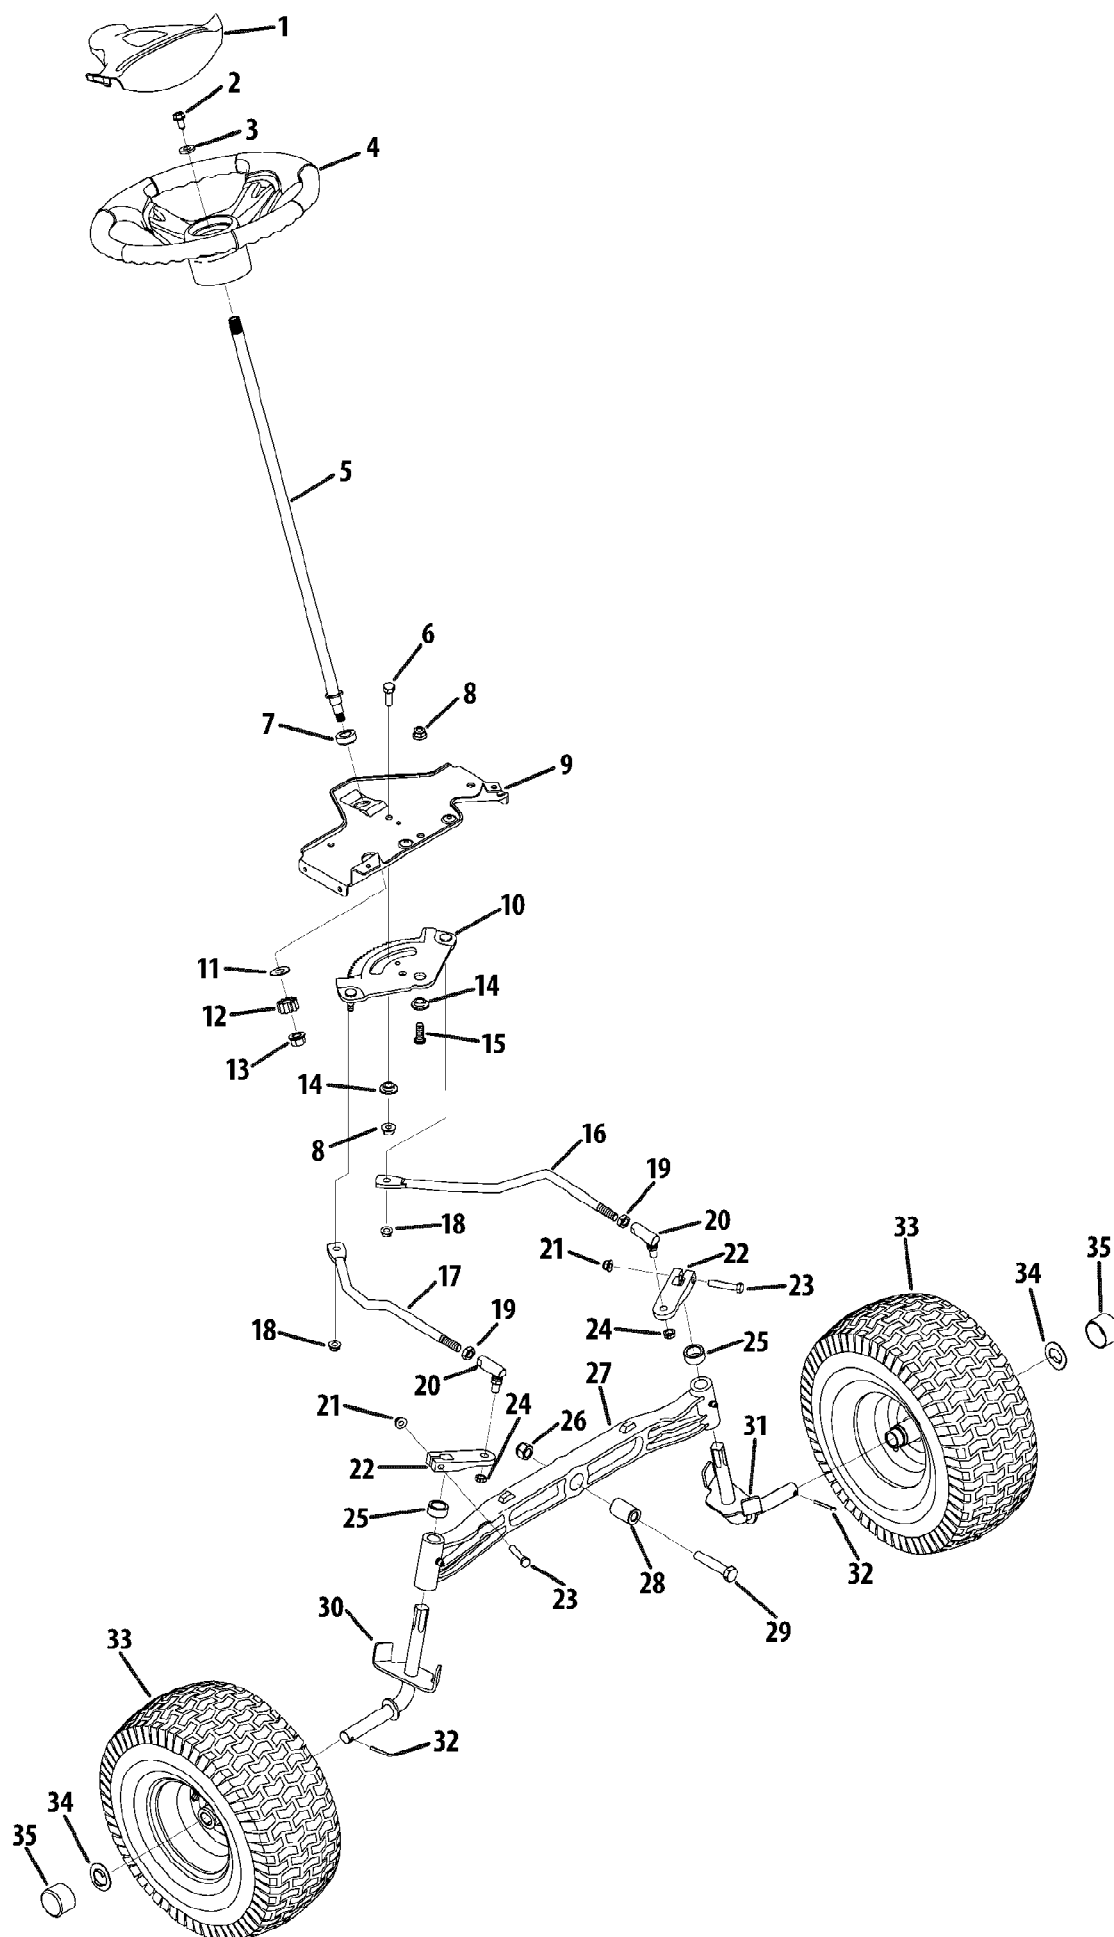


LTX1050VT Tractor (2009 & Before)
Steering & Front Axle Assembly

Page 57 of 58

Ref #	Part Number	Qty	S/P/F	Description
1	731-04532B	1		Steering Wheel Cover
2	710-0650	1	/P	Hex Washer Screw, 5.16-18 x .875 4-15-09 & After
2	710-04484	1		Hex Washer Screw, 5.16-18 x .750 4-15-09 & Before
3	936-3004	1	/P	Flat Washer, .406 x .875 x .105 use with 710-0650
4	631-04008A	1	/P	Steering Wheel
5	738-04262	1		Steering Wheel Shaft
6	710-0514	1	/P	Hex Screw, 3.8-16 x 1.00 .
7	741-04237A	1	S	Hex Flange Bearing
8	712-04065	1	/P	Flange Lock Nut, 3.8-16
9	783-06043-0637	1		Steering Support Bracket
10	717-1550F	1	/P	Steering Gear
11	736-3084	1	/P	Flat Washer, .51 x 1.12 x .06
12	717-1554	1		Steering Gear
13	712-0459	1	/P	Flange Lock Nut, 7.16-20
14	738-04363	1		Shoulder Spacer, .385 x 1.25 x .3025
15	710-04095	1		Hex Screw, 3.8-16 x 1.00
16	711-04998	1		LH Drag Link
17	711-04999	1		RH Drag Link
18	712-3004A	1	/P	Flange Lock Nut, 5.16-18
19	912-0240	1	/P	Jam Nut, 7.16-20
20	923-0448A	1	/P	Lock Joint
21	712-04063	1	/P	Flange Lock Nut, 5.16-18
22	748-04065-0637	1	/P	Steering Block
23	710-3180	1	/P	Hex Screw, 5.16-18 x 1.75
24	912-0214	1	/P	Hex Lock Nut, 3.8-24
25	748-04068	1		Spacer, .71 x .125 x .56
26	712-3083	1	/P	Hex Lock Nut, 1.2-13
27	719-04413	1		Axle Pivot Bar
28	750-05041	1		Spacer, .510 x 1.00 x 1.5075
29	710-04824	1		Hex Screw, 1.2-13 x 2.5
30	638-04022-0637	1		RH Axle Assembly
31	638-04028-0637	1		LH Axle Assembly
32	714-0162	1	/P	Cotter Pin, 5.32 x 1.25
33	N/A	1		Wheel Assembly furnish components
33	734-1731-0901	1	/P	Tire 15 x 6 Not shown
33	634-04405-0499	1		Rim 6.0 x 4.5 Not shown
33	741-0990B	1	/P	Bearing w/fitting Not shown
33	741-0516B	1	/P	Bearing Not shown
34	736-04228A	1		Flat Washer, .781 x 1.590
35	731-05674	1	/P	Bumper Cap

LTX1050VT Tractor (2009 & Before)
Wiring Schematic

 Page 58 of 58

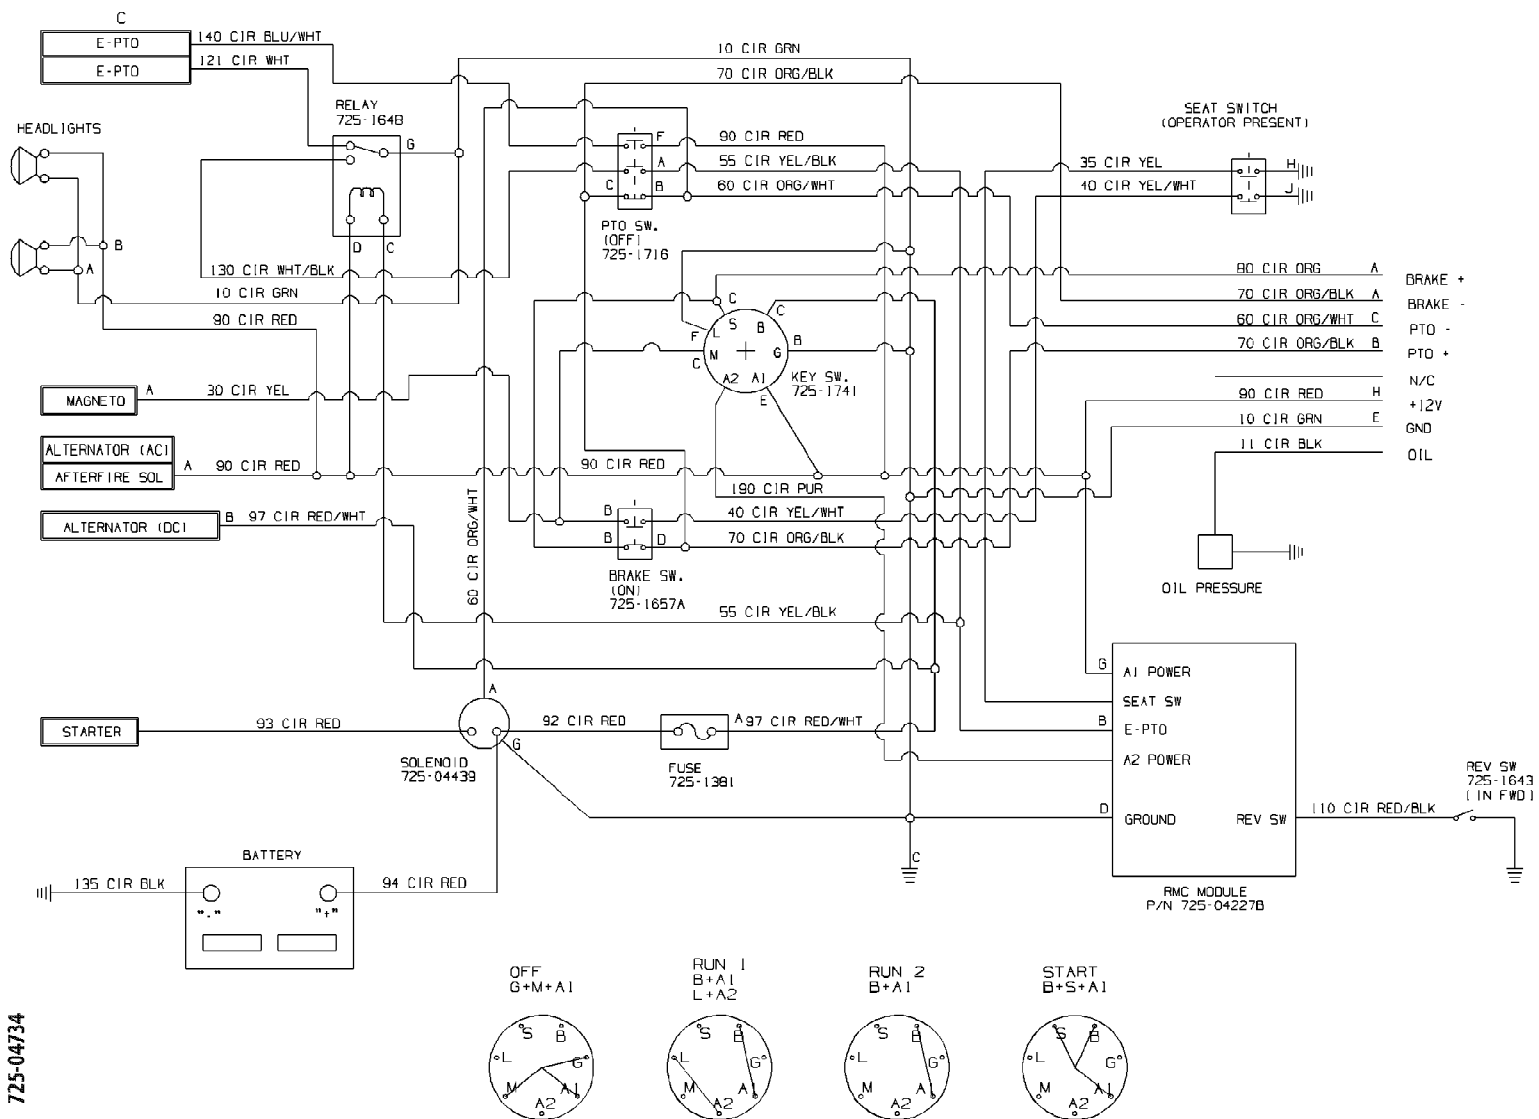

725-04734