 


GT3100 Tractor
Air Intake

Page 1 of 67

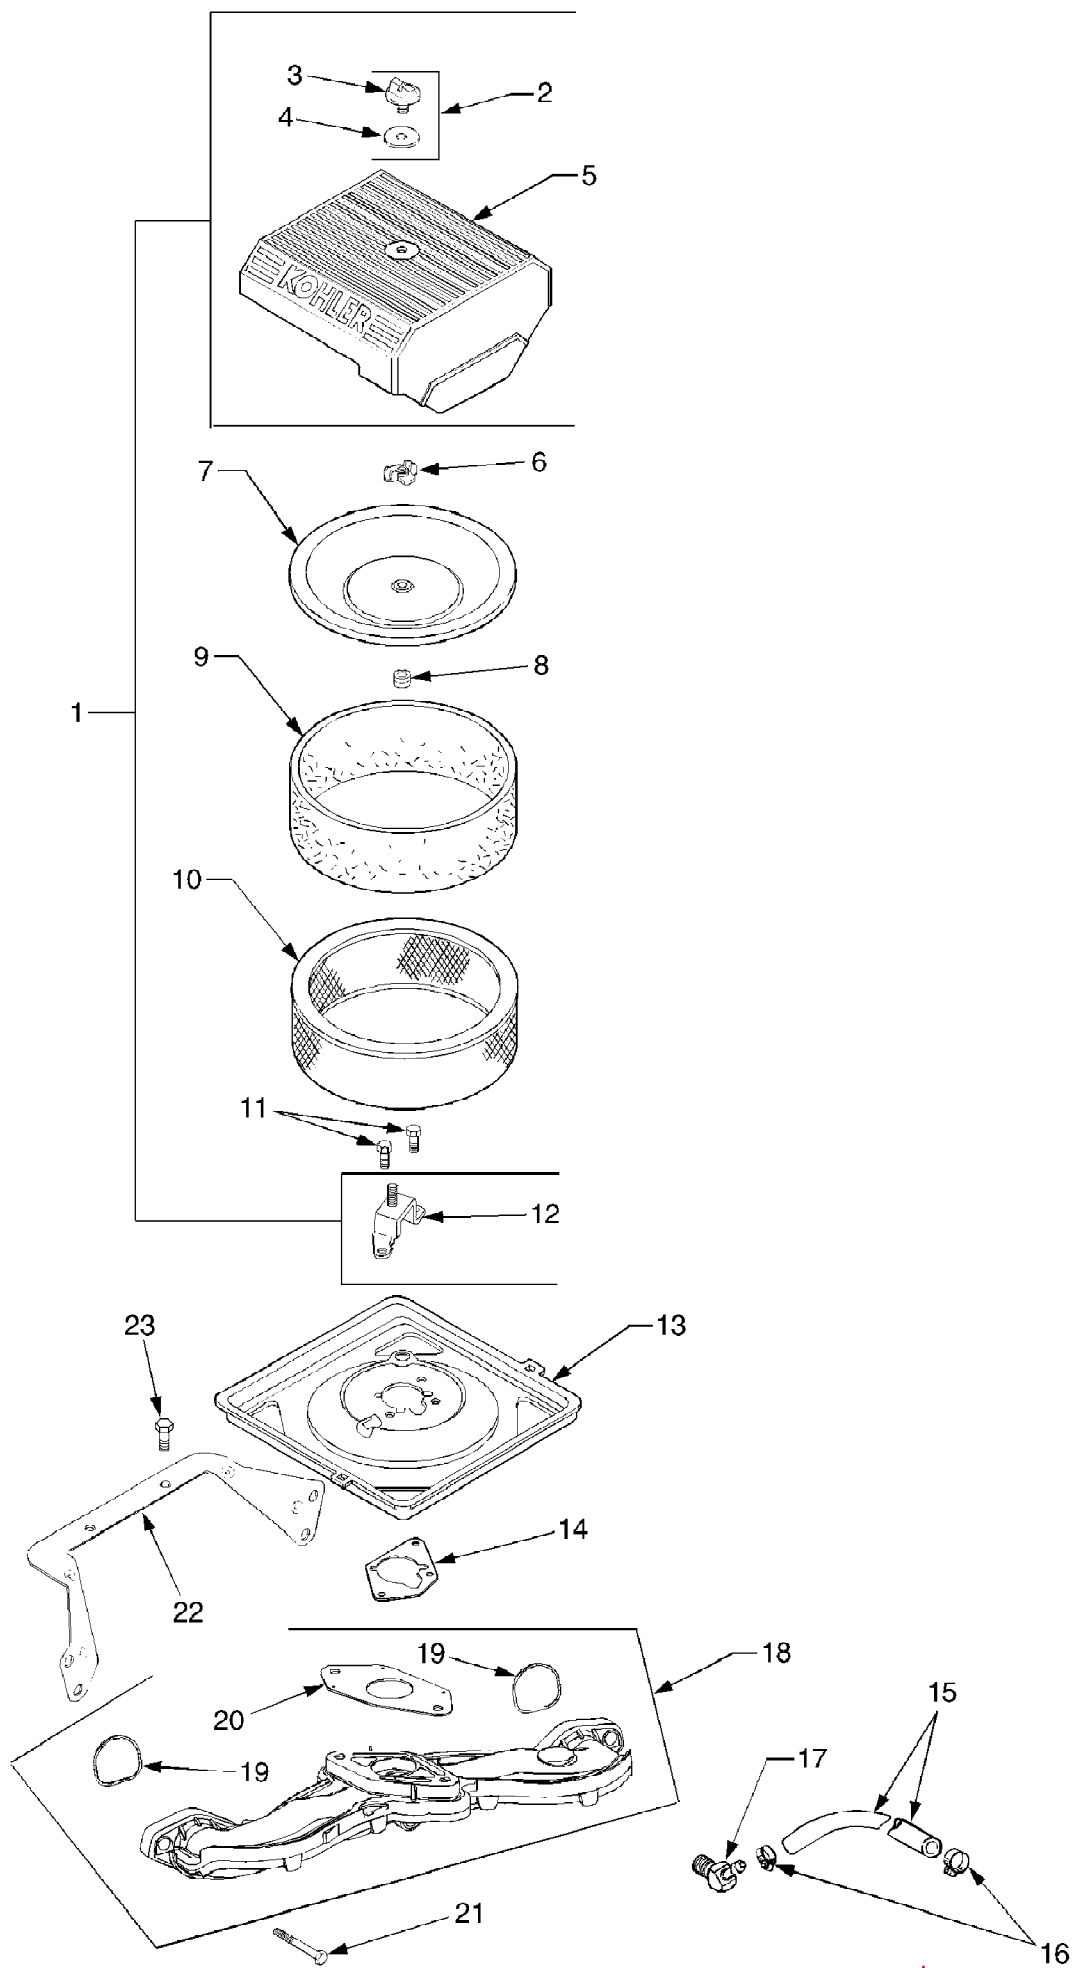


GT3100 Tractor
Air Intake

Page 2 of 67

Ref #	Part Number	Qty	S/P/F	Description
1	KH-24-743-08	1		Kit, Air Cleaner Cover (Incl 2-5, 12)
2	KH-54-755-01	1	S	Kit, Knob w/Seal (Incl. Ref #3,4)
3	KH-25-341-04-S	1	/P	Knob, Cover
4	KH-24-153-20-S	1		Seal, Air Cleaner Cover Knob
5	KH-24-096-69-S	1	/P	Cover, Air Cleaner
6	KH-12-100-01	1	/P	Wing Nut
7	KH-24-096-01	1	/P	Cover, Inner Air Cleaner
8	KH-24-032-03	1	/P	Seal, Inner Air Cleaner
9	KH-24-083-02	1	S	Precleaner, Element
10	KH-47-083-03	1	S	Element, Air Cleaner
11	KH-24-086-53-S	3		Screw, Hex Flange, M6 x 1.0 x 16
12	KH-24-126-21	1		Bracket, Air Cleaner Base
13	KH-24-094-24-S	1	S	Base, Air Cleaner
14	KH-24-041-06	1	/P	Gasket, Air Cleaner Base
15	KH-15-353-02	1	S	Line, Fuel 17"
16	KH-25-237-14-S	2	/P	Clamp, Hose
17	KH-25-155-02	1	/P	Connector, Hose 45°.
18	KH-24-164-55-S	1	S	Manifold, Intake (Includes 19,20)
19	KH-24-153-27-S	2	/P	O-Ring, Intake Manifold
20	KH-24-041-53-S	1		Gasket, Carburetor
21	KH-M-0651040-S	4		Screw, Hex Flange, M6 x 1.0 x 40
22	KH-24-126-130-S	1		Bracket, Air Cleaner Base
23	KH-M-0545010	2	/P	Screw, Hex Flng, M5 x 0.8 x 10

GT3100 Tractor
Blower Housing And Baffles

 Page 3 of 67

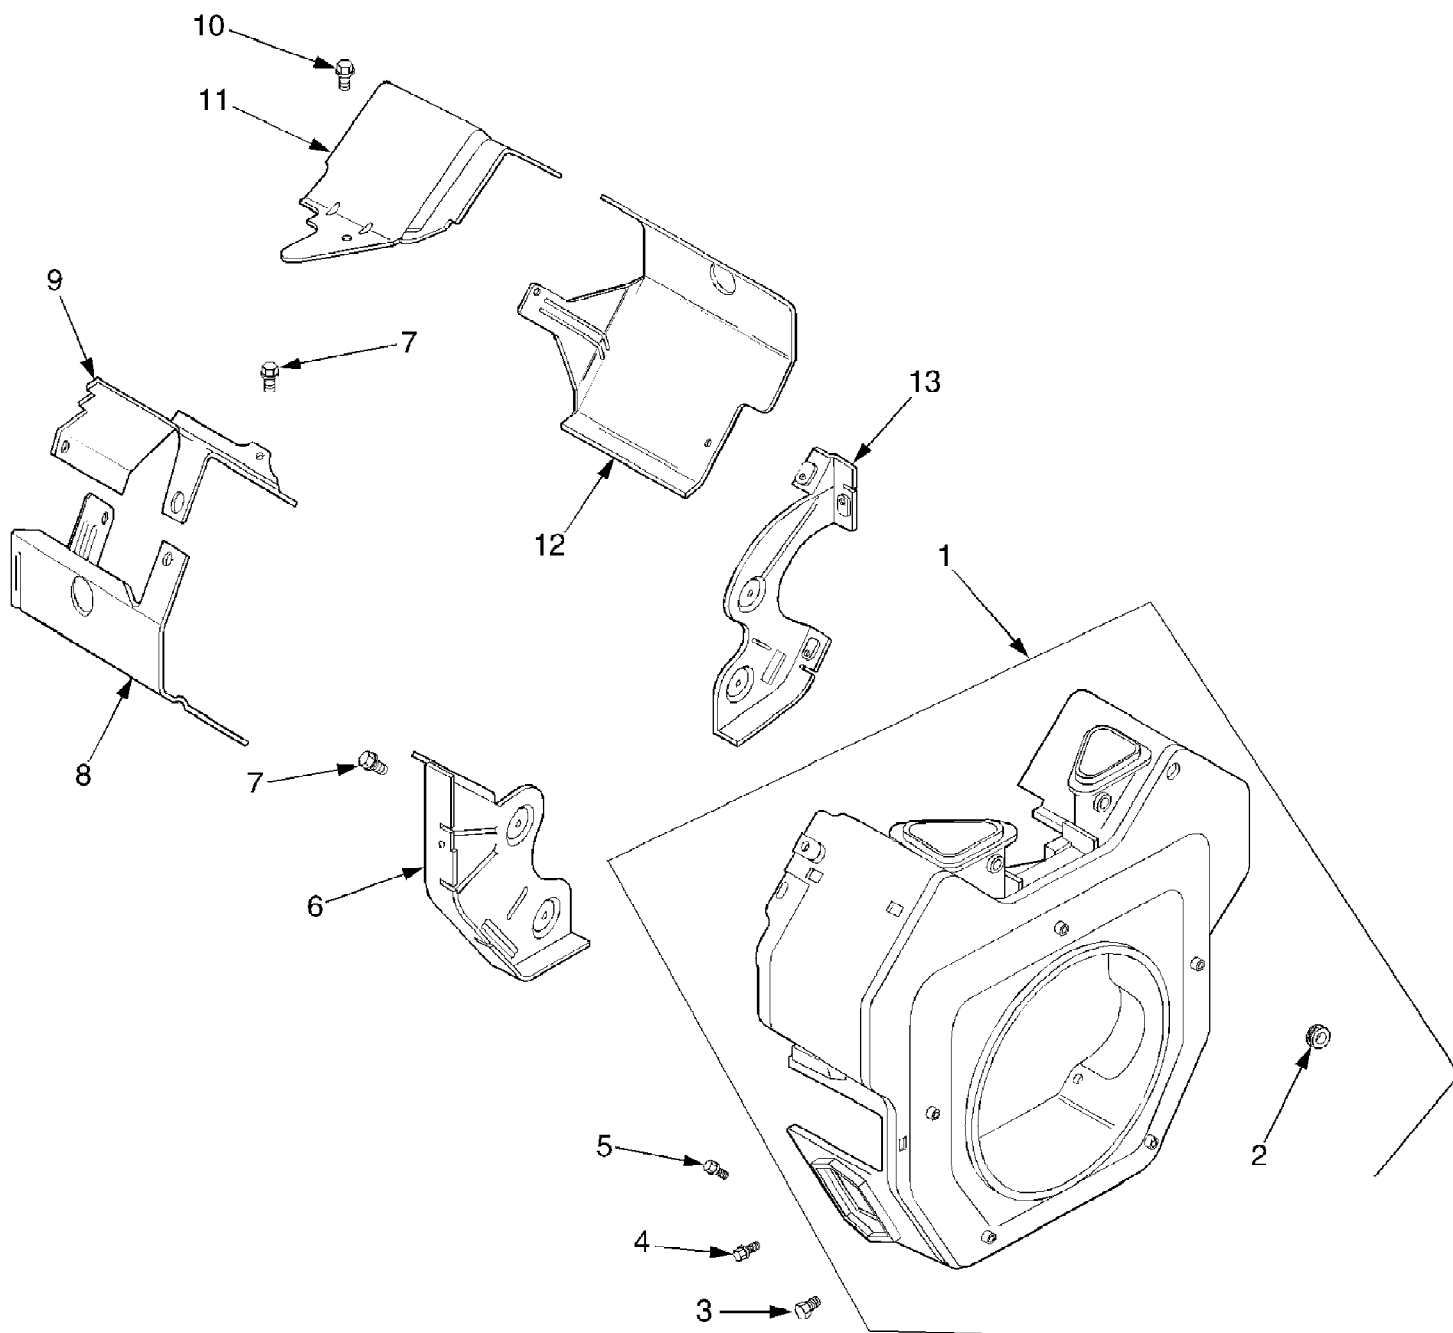


GT3100 Tractor
Blower Housing And Baffles

Page 4 of 67

Ref #	Part Number	Qty	S/P/F	Description
1	KH-24-027-163-S	1		Housing, Blower (Includes 2)
2	KH-25-313-06-S	1		Grommet
3	KH-M-0551016	1		Screw, Hex Flange M5 x 0.8 x 16
4	KH-M-0545016	3	S	Screw, Hex Flange M5 x 0.8 x 16
5	KH-M-0545020	4	/P	Screw, Hex Flange M5 x 0.8 x 20
6	KH-24-146-16	1	S	Plate, Backing #2 Side
7	KH-M-0645016	6	S	Screw, Hex Flange M6 x 1.0 x 16
8	KH-24-063-20	1	/P	Baffle, Cyl. Barrel #2 Side
9	KH-24-063-17	1	/P	Baffle, Valley #2 Side
10	KH-M-0545010	2	/P	Screw, Hex Flange M5 x 0.8 x 10
11	KH-24-063-59-S	1		Baffle, Valley #1 Side
12	KH-24-063-58-S	1	S	Baffle, Cyl. Barrel #1 Side
13	KH-24-146-20	1	S	Plate, Backing #1 Side

GT3100 Tractor
Brake And Control Pedals

 Page 5 of 67

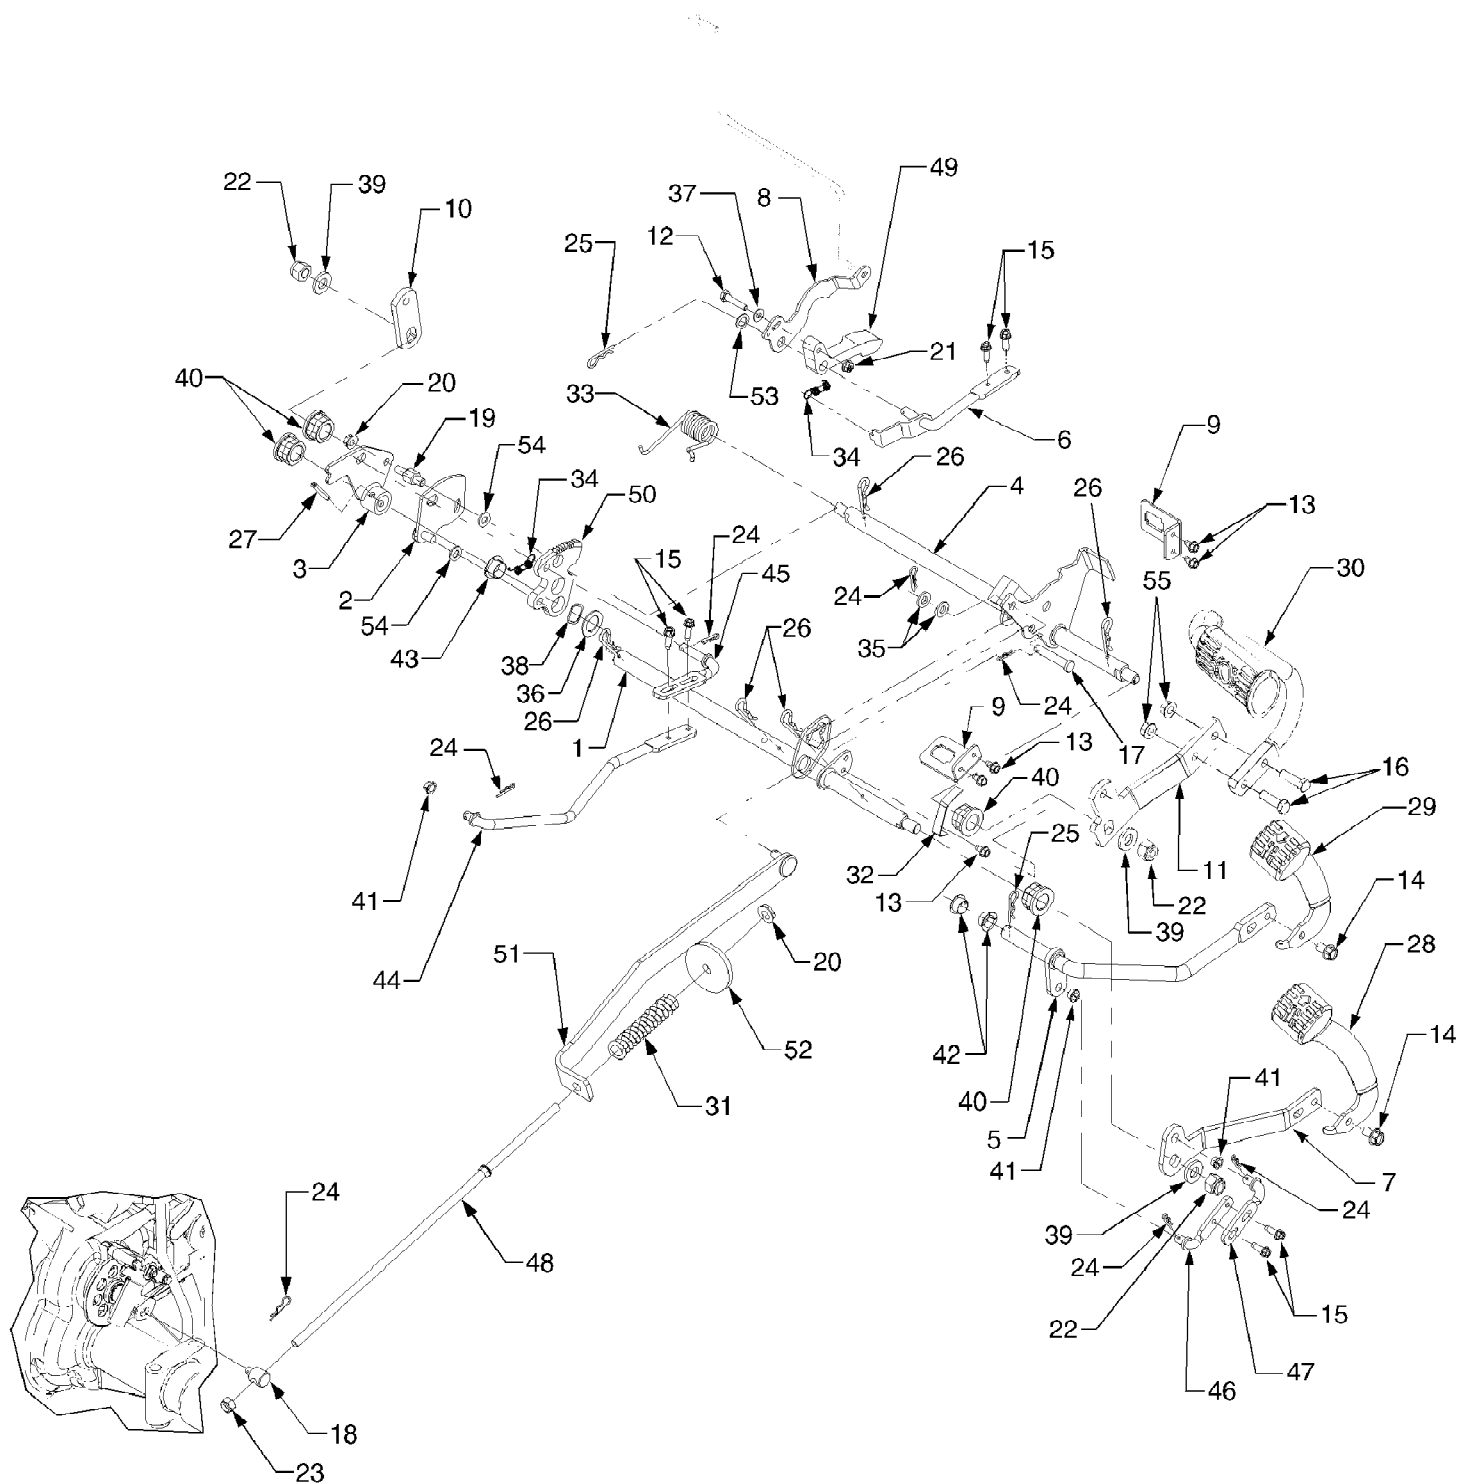

GT3100 Tractor
Brake And Control Pedals

Page 6 of 67

Ref #	Part Number	Qty	S/P/F	Description
1	603-0379	1		Shaft Assembly, Pedal
2	603-0421A	1	/P	Plate, Disengagement
3	603-0437-0637	1	/P	Cam, Clutch
4	603-0445A	1		Shaft Assembly, Brake
5	603-0449A	1	S	Shaft Assembly, Reverse
6	603-0634	1		Rod Assembly, Cruise
7	703-3012-0716	1		Link, Pedal Mounting
8	703-3020	1		Bracket, Rod Adjust
9	703-3152	2		Bracket, Switch
10	703-3155-0716	1		Lever, Brake
11	703-3156A-0716	1	/P	Link, Brake Pedal
12	710-0106	1	/P	Screw, Hex Cap, 1/4-20 x 1.25 GR5
13	710-0599	5	/P	Screw, Hex Wash. Hd. Tapp 1/4-20 x .5
14	710-0623	2	/P	Screw, Hex Wash. Hd. Tapp 3/8-16 x .75
15	710-0642	6	/P	Screw, Hex Wash. Hd. Tapp 1/4-20 x .75
16	710-3005	2	/P	Screw, Hex Wash. Hd. 3/8-16 x 1.25 GR5
17	711-0679A	1	/P	Pin, Clevis, 3/8 x 2.015
18	711-1530	1		Ferrule, Adjust.
19	711-04035	1		Stud, Actuator
20	712-3004A	2	/P	Nut, Hex Flange Lock, 5/16-18
21	712-3027	1	S	Nut, Hex Flange Lock, 1/4-20
22	712-3058	3	S	Nut, Hex Insert Lock, 1/2-20
23	712-0429	1	S	Nut, Hex Insert Lock, 5/16-18
24	714-0104	8	S	Pin, Internal Cotter
25	714-0145	2	S	Pin, Internal Cotter
26	714-0147	5	/P	Pin, Internal Cotter
27	715-0114	1	S	Pin, Spiral Spring, .25 x 1.5
28	731-3247	1		Pedal, Forward
29	731-3248	1		Pedal, Reverse
30	731-3249A	1	/P	Pedal, Brake
31	732-0324	1		Spring, Compression
32	732-0859A	1	/P	Spring, No Cut Reverse
33	732-0871	1		Spring, Torsion
34	732-3118	2		Spring, Extension, .380 OD x 1.44
35	736-0275	2	S	Washer, Flat, .344 x .688 x .065
36	736-0287	1	S	Washer, Flat, .79 x 1.24 x .060
37	736-0463	1	S	Washer, Flat, .25 x .62
38	736-0621	1		Washer, Wave, .785 x 1.0 x .012
39	736-3019	3		Washer, Flat, .531 x 1.06 x .134
40	741-0598	4	S	Bearing, Hex Flange
41	741-3073	3	S	Bearing, Flange
42	741-3074	2		Bearing, Flange
43	741-3084	1		Bearing, Flange
44	747-3319	1		Rod, Rear Control
45	747-3320	1		Rod, Front Control
46	747-3324	1		Rod, Rear Connecting
47	747-3353	1		Rod, Front Connecting
48	747-3422	1		Rod, Brake
49	748-04001	1		Cruise Latch
50	748-3080A	1	/P	Plate, Cruise
51	603-0738	1	S	Link Assembly, Brake
52	736-0418A	1	/P	Washer, Flat, .341 x 2.25 x .10
53	736-0160	1	S	Washer, Flat, .53 x .93 x .050


GT3100 Tractor
Brake And Control Pedals

Page 7 of 67

Ref #	Part Number	Qty	S/P/F	Description
54	736-0262	2	/P	Washer, Flat, .385 x .870 x .092
55	712-0431	2	S	Nut, Hex Flange Top Lock, 3/8-16 GRF

GT3100 Tractor
Center Hydraulic Lift Linkage

 Page 8 of 67

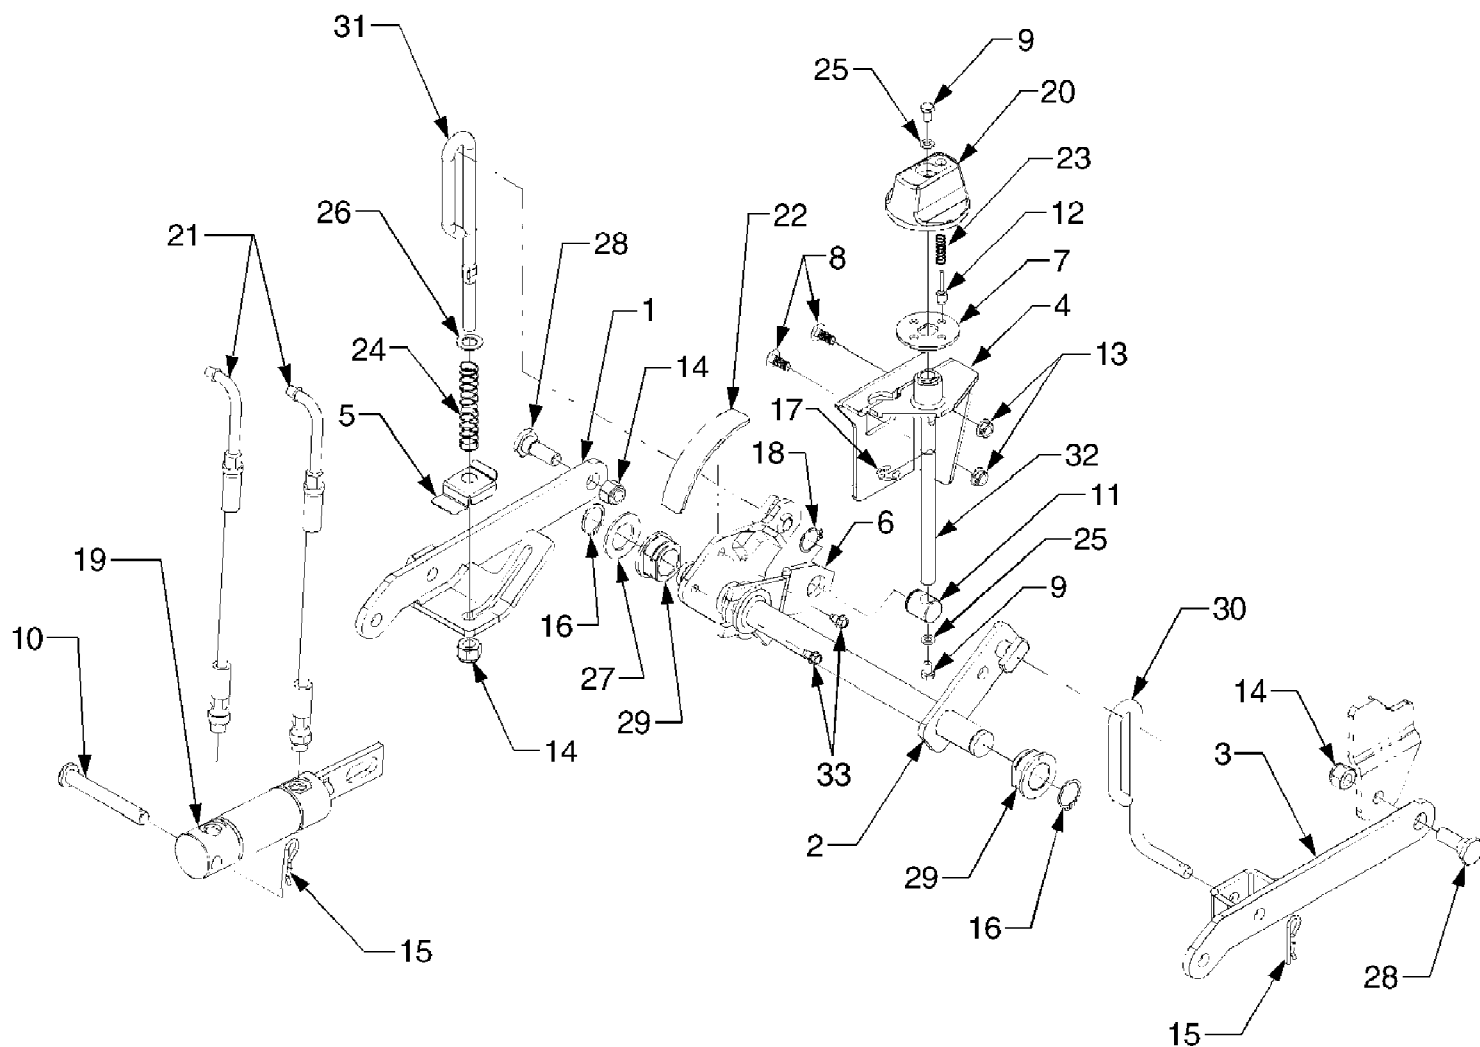


GT3100 Tractor
Center Hydraulic Lift Linkage

Page 9 of 67

Ref #	Part Number	Qty	S/P/F	Description
1	603-0434-0716	1	/P	Link, LH Lift
2	603-0435A	1	/P	Shaft Assembly, Lift
3	603-0456-0716	1		Link, RH Lift
4	603-0803	1		Bracket, Downstop
5	703-3426	1		Stop Bracket, Lift Rod
6	703-3797	1		Arm, Downstop
7	748-3103	1		Disk, Detent
8	710-3178	2	/P	Bolt , Carriage, 3/8-16 x .7 5
9	710-3013	2	/P	Screw, Hex Cap, 1/4-20 x .5 GR5
10	711-1206	1		Pin, Clevis, .5 x 3.75
11	711-1553	1		Ferrule, Adjustment
12	711-1561	1		Pin, Detent Plunger
13	712-0431	2	S	Nut, Flange Lock, 3/8-16G R5
14	712-3083	3	/P	Nut, Hex Lock, 1/2-13
15	714-0147	2	/P	Pin, Internal Cotter
16	716-0102	2	S	Snap Ring, 1.0 Dia. Shaft
17	716-0104	1	S	Ring, 'E' Retaining, .5 Dia.
18	716-0111	1	/P	Snap Ring, .875 Dia. Shaft
19	717-3518	1		Cylinder, Center Lift
20	720-0236	1	S	Knob
	777I20243	1		Graphic, Height Adjust
21	727-3135	2		Hose, Lift
	725-0157	1	/P	Tie, Cable
22	731-3215B	1	S	Indicator, Lift Position
23	732-0437	1		Spring, Compression
24	732-0870A	1	/P	Spring, Compression
25	736-0142	2	S	Washer, Flat, .281 x .5 x .063
26	736-0160	1	S	Washer, Flat, .536 x .93 x .0 50
27	736-0250	1	/P	Washer. Flat, 1.0x 1.7 x .10
28	738-0744A	2	S	Shoulder Screw
29	741-0170	2	S	Bearing, Flange w/Flats
30	747-3330	1		Rod, RH Lift
31	747-3331A	1		Rod, LH Lift
32	747-3437	1		Screw, Adjustment
33	710-0599	2	/P	Screw, Hex Wash. Hd. Tapp 1/4-20 x .5

GT3100 Tractor
Crankcase And Crankshaft

 
Page 10 of 67

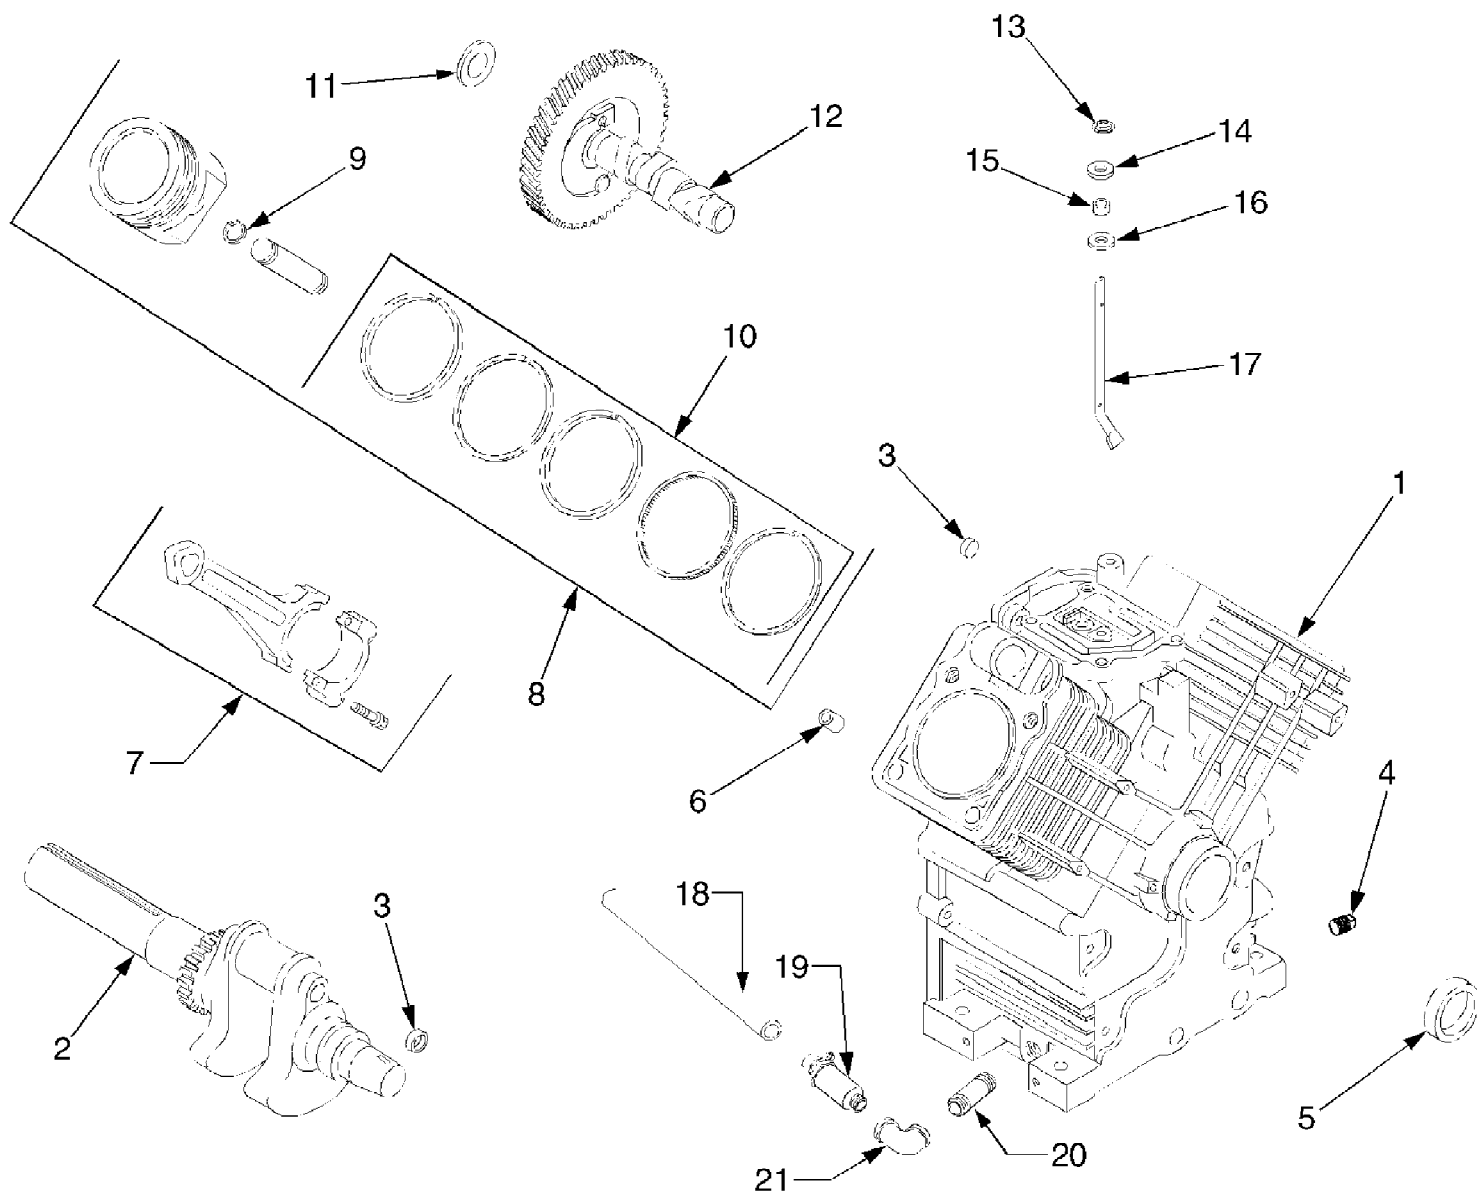

GT3100 Tractor
Crankcase And Crankshaft

Page 11 of 67

Ref #	Part Number	Qty	S/P/F	Description
1	KH-76524	1	S	Engine, Complete
	KH-24-522-249	1		Short Block
	KH-24-782-27	1		Miniblock
2	KH-24-014-06	1	S	Crankshaft (Includes 3)
3	KH-52-139-09	1	S	Plug, Cup
4	KH-25-139-57-S	2	/P	Plug, Hex Head, 3/8 NPTF
5	KH-24-032-01	1	S	Seal, Oil
6	KH-24-380-13-S	6	S	Pin, Locating
7	KH-24-067-13	2	S	Rod, Connecting, Std
	KH-24-067-14	2		Rod, Connecting, .010
8	KH-24-874-09	2	S	Piston w/Ring Set, Std
	KH-24-874-10	2	S	Piston w/Ring Set, .010
	KH-24-874-11	2		Piston w/Ring Set, .020
	KH-24-874-15	2		Piston w/Ring Set, .003
9	KH-24-018-01	4	S	Retainer, Piston Pin
10	KH-24-108-08-S	1		Ring Set, Std
	KH-24-108-09-S	1		Ring Set, .010
	KH-24-108-10-S	1		Ring Set, .020
11	KH-12-422-09	AR	S	Shim, Camshaft, .0320
	KH-12-422-13	AR	S	Shim, Camshaft, .0400
	KH-12-422-07	AR	S	Shim, Camshaft, .0280
	KH-12-422-08	AR	S	Shim, Camshaft, .0300
	KH-12-422-10	1	S	Shim, Camshaft, .0340
	KH-12-422-11	AR	S	Shim, Camshaft, .0360
	KH-12-422-12	AR	S	Shim, Camshaft, .0380
12	KH-24-012-10	1	S	Camshaft
13	KH-24-018-09-S	1		Ring, Retainer
14	KH-M-931010-S	1		Washer, Nylon
15	KH-28-032-09-S	1		Seal, Governor Cross Shaft
16	KH-24-468-15-S	1		Washer, Plain
17	KH-24-144-38-S	1	/P	Shaft, Governor Cross
18	751-3141-12	12 in.	S	Hose, Oil Drain
19	751-3140	1	S	Drain, Oil
	751-3142	1		Cap, Oil Drain
20	737-0199	1	S	Pipe, Straight
21	737-0272	1		Elbow, 90°.
	KH-24-755-108-S	1		Gasket Set

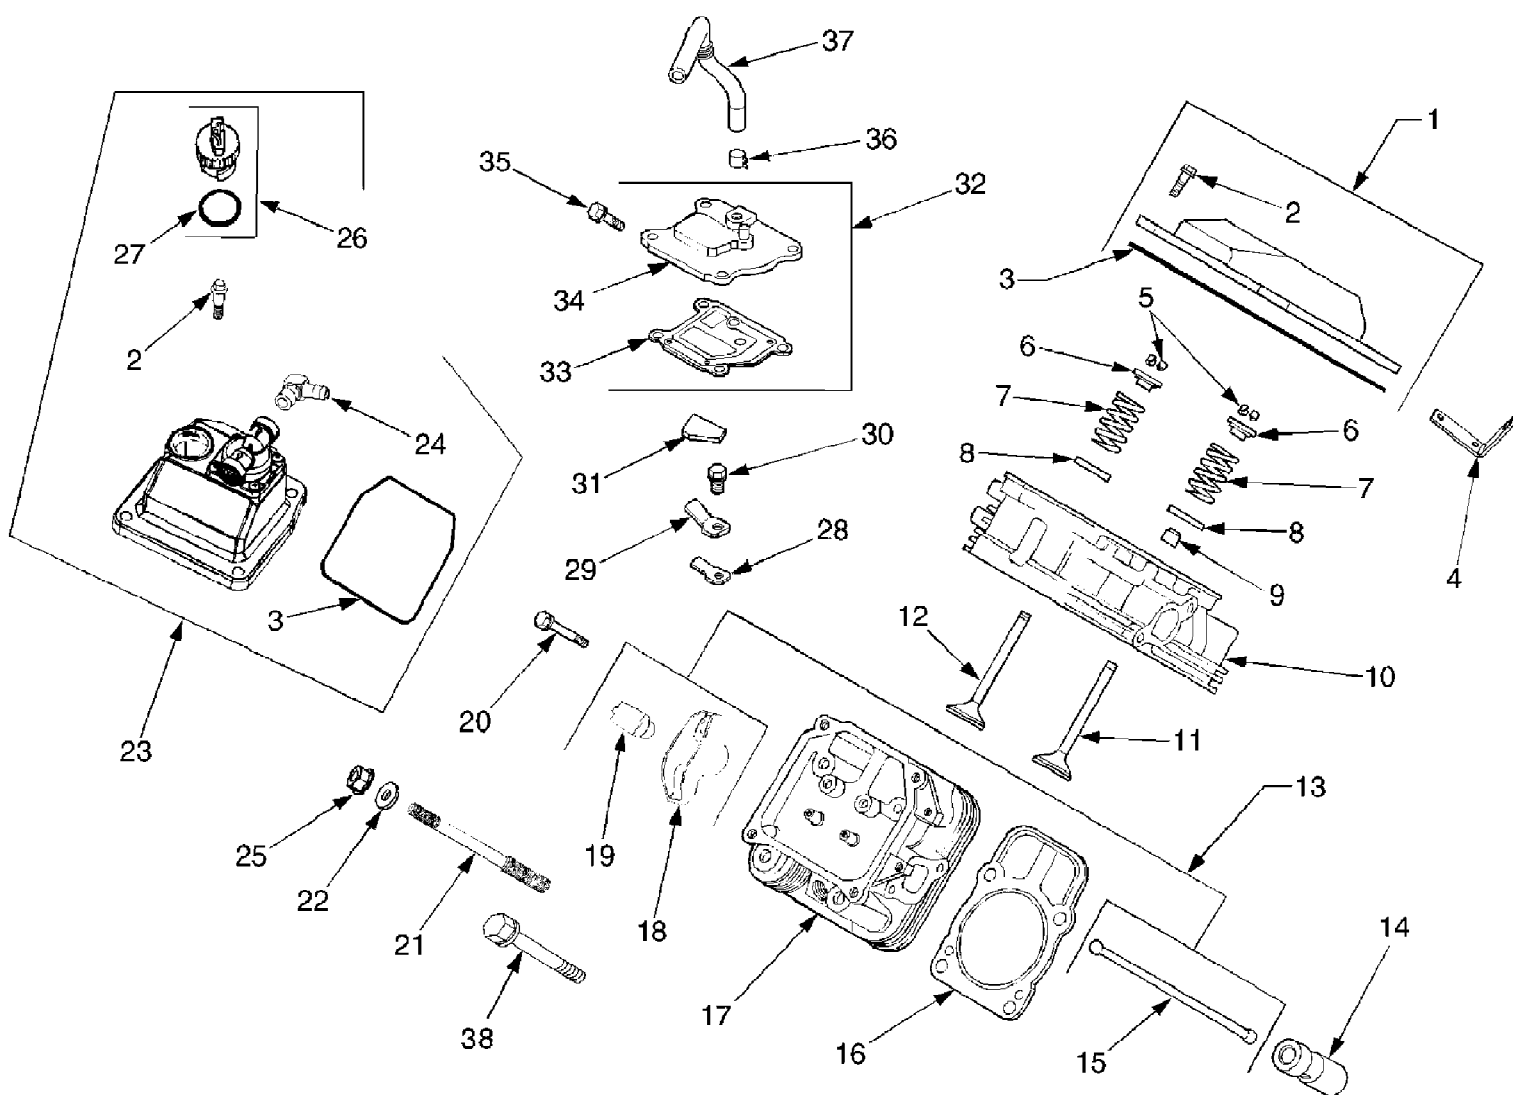 


GT3100 Tractor
Cylinder Head, Valves And Breather

Page 13 of 67

Ref #	Part Number	Qty	S/P/F	Description
1	KH-24-755-141-S	1	/P	Kit, Valve Cover (Includes 2-3)
2	KH-0651030	8		Screw, Hx. Flng, M6 x 1.0 x 30
3	KH-24-153-28-S	2	S	O-Ring, Valve Cover
4	KH-24-445-01	1	S	Strap, Lifting
5	KH-12-755-03	4	/P	Kit, Retainer
6	KH-12-173-01	4	/P	Cap, Valve Spring
7	KH-24-089-02	4	/P	Spring, Valve
8	KH-235011	4	S	Retainer, Spring
9	KH-66-032-05-S	2	/P	Seal, Valve Stem
10	KH-24-318-68-S	1	S	Kit, Cylinder Head #1
11	KH-24-017-01	2	/P	Valve, Intake Std
11	KH-24-017-02	2		Valve, Intake, .25mm
12	KH-24-016-01	2	/P	Valve, Exhaust Std
12	KH-24-016-02	2		Valve, Exhaust, .25mm
13	KH-24-755-66	1	/P	Kit, Valve Train (Incl. 15,18,19)
14	KH-25-351-01	4	S	Lifter, Valve
15	KH-24-411-05	4	/P	Rod, Push
16	KH-24-841-02-S	2	/P	Kit, Cylinder Head Gasket (Includes 22,25)
17	KH-24-318-10	1	S	Kit, Cylinder Head #2
18	KH-25-186-01	4	/P	Arm, Rocker
19	KH-24-599-01	4	S	Pivot, Rocker Arm
20	KH-66-086-07-S	4	S	Screw, Hex Flng, M6 x 1.0 x 34
21	KH-24-072-09-S	8		Stud, Cylinder Head (Used with 22 & 25)
22	KH-24-486-16-S	8		Washer, Flat (Used with 21)
23	KH-24-559-08-S	1	S	Cover Kit, Fuel Pump Valve (Includes 2,3,24,26)
24	KH-25-294-11-S	2		Connector, 90°.
25	KH-24-100-10-S	8		Nut, Hex Flange, M8 x 1.25 (Used with 21)
26	KH-24-227-02	1	S	Cap Assembly, Oil Fill (Incl.27)
27	KH-24-153-09	1	S	O-Ring
28	KH-24-402-03	1	/P	Reed, Breather
29	KH-66-018-04-S	1	/P	Retainer, Breather Reed
30	KH-M-0545010	1	/P	Screw, Hex Flng, M5 x 0.8 x 10
31	KH-24-050-01	1	S	Filter, Breather
32	KH-24-033-01	1	/P	Kit, Breather (Includes (33-35)
33	KH-24-041-51-S	1	S	Gasket, Breather
34	KH-24-096-86-S	1	S	Cover, Breather
35	KH-M-0645020	4	S	Screw, Hex Flng M6 x 1.0 x 20
36	KH-25-237-14-S	1	/P	Clamp, Breather
37	KH-24-326-26	1	S	Hose, Breather
38	KH-12-086-16	8	S	Screw, Hex Flange, M10 x 1.5 x 90 If Equipped, Takes place of 21,22 & 25)
	KH-24-755-147-S	1		Kit, Cylinder Head Hardware Not Shown

GT3100 Tractor
Dash Panel

 Page 14 of 67

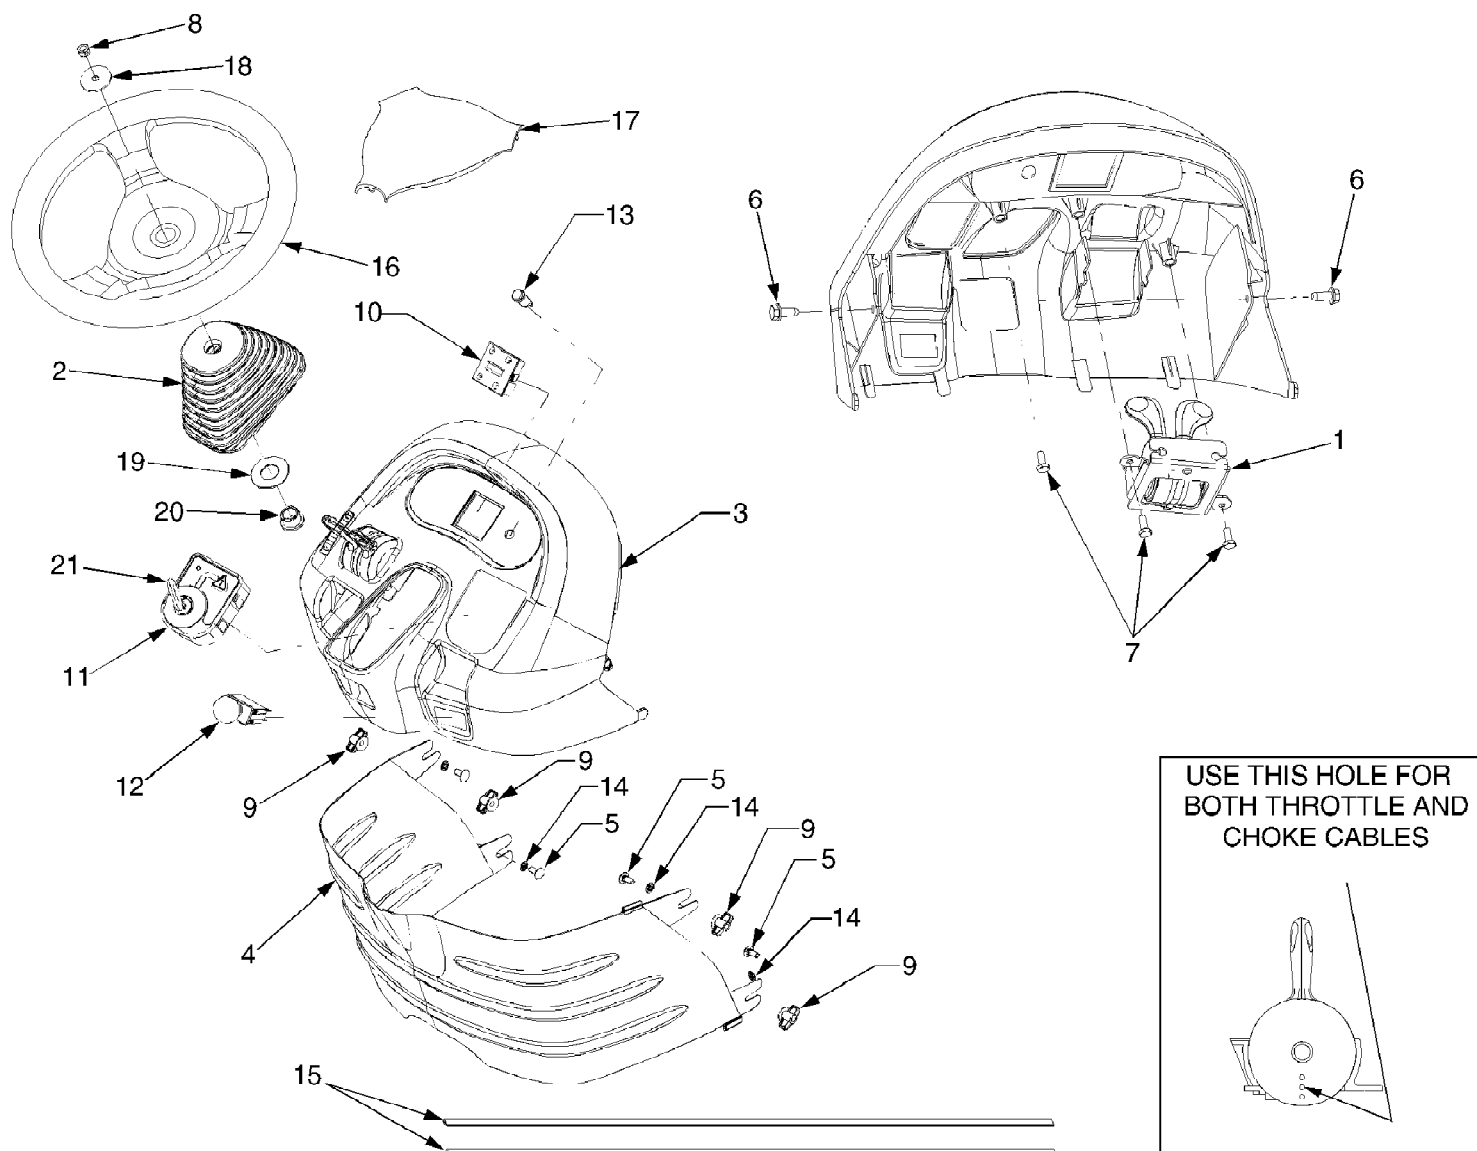


GT3100 Tractor
Dash Panel

Page 15 of 67

Ref #	Part Number	Qty	S/P/F	Description
1	603-0586	1		Control Ass'y, Throttle/Choke
2	631-0076	1		Boot, Tilt Steer
3	631-04144	1		Dash Panel
3	777I22466	1		Graphic, Monitor Light Cover
4	703-3072	1	/P	Screen, Dash
5	710-0134	4	/P	Carriage Bolt, 1/4-20 x .62
6	710-1260A	2	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .75
7	710-3013	3	/P	Screw, Hex Cap 1/4-20 x .50 GR5
8	712-0237	1	S	Nut, Hex Lock, 5/16-24
9	712-0397	4	S	Wing Nut, 1/4-20 w/Bell Washer
10	725-04036A	1	S	Meter, Indicator / Hour
11	725-04227B	1	S	Switch, Key/Module
12	725-04258	1	/P	Switch, PTO
13	725-04288	1	S	Lamp, Fuel
14	726-0233	4	/P	Nut, Push
15	731-0511-37	2	/P	Seal, Screen (Cut to fit screen)
16	731-3209	1		Steering Wheel
17	731-3210	1		Cover, Steering Wheel
18	736-04062	1	S	Washer, Flat, .34 x 1.5 x .10
19	736-0514	1	S	Washer, Flat, .885 x 1.85 x .06
20	736-0176	1	S	Bearing, Flange, .63ID x .62 Lg
21	725-2054A	2	S	Key, Ignition

GT3100 Tractor
Driveshaft And Engine Connections

 
Page 16 of 67

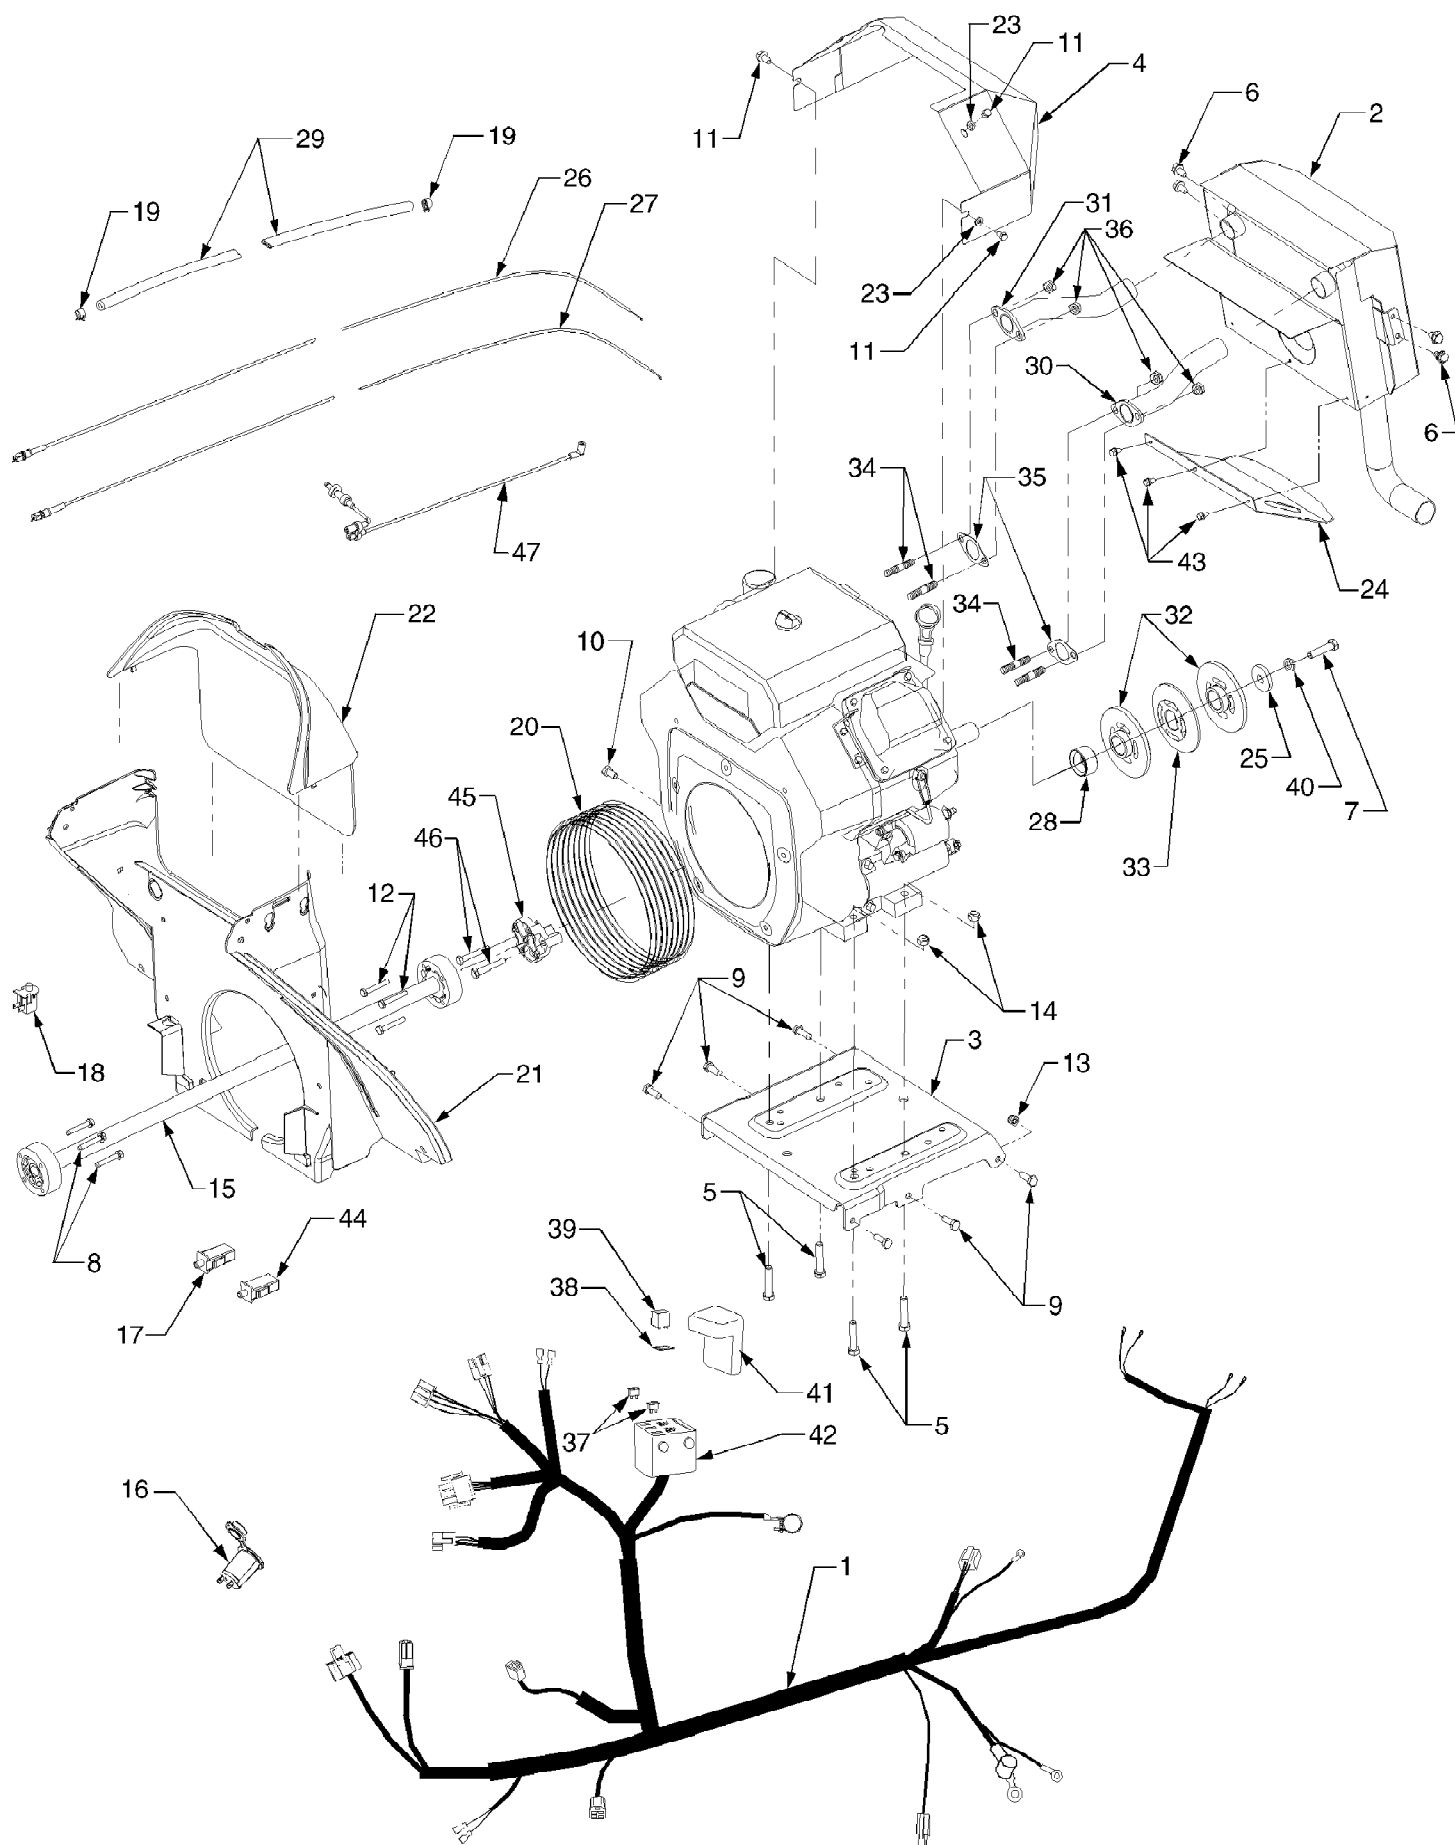

GT3100 Tractor
Driveshaft And Engine Connections

Page 17 of 67

Ref #	Part Number	Qty	S/P/F	Description
1	629-04107	1	S	Harness, Wire
1	726-0154	4	S	Tie, Pushmount Not shown
1	726-3055	2		Clip, Cable Not shown
2	651-3003	1		Muffler Assembly
3	703-2909-0716	1	/P	Plate, Engine Mounting
4	703-2999	1		Shield, Muffler Heat
5	710-0539	4	/P	Screw, Hex Cap, 3/8-24 x 1.75 GR5
6	710-0607	4	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .5
7	710-0757	1	/P	Screw, Hex Cap, 7/16-20 x 1.5 GR5
8	710-1062	4		Screw, Hex Cap Lock 1/4-20 x 1.25 GR5
9	710-3038	6	/P	Screw, Hex Cap, 5/16-18 x .875 GR5
10	710-0237	1	/P	Screw, Hex Cap, 5/16 - 24 x .625 GR5
11	710-3209	4		Screw, Hex Cap, M6 - 1.0 x 10MM
12	710-3288	4		Screw, Hex Cap, Lock 1/4-20 x 1.62 GR5
13	712-0429	6	S	Nut, Hex Insert Lock, 5/16-18
14	712-3054	4	/P	Nut, Hex Lock, 3/8-24
15	718-3093	1	S	Shaft, Drive, 27.125 Long
15	759-3764	2	/P	Drive Barrels Kit Not shown (2 used per tractor)
16	725-2003	1		Receptacle, 12V Power
17	725-3164A	1	S	Switch, Plunger (Reverse)
18	725-04040	1	S	Switch, Snap Mount (Seat)
19	726-0205	2	/P	Clamp, Hose
20	731-3166	1		Boot, Intake
21	731-3221A	1	/P	Baffle, Lower Air
22	731-3231A	1	/P	Baffle, Upper Air
23	736-0142	4	S	Washer, Flat, .281 x .50 x .06
24	703-3398	1		Shield, Lower Exhaust
25	736-3017	1	/P	Washer, Flat, .417 x 1.5 x .225
26	746-3075	1		Cable, Throttle Control
27	746-3077	1		Cable, Choke Control
28	750-3357	1		Spacer, Crankshaft
29	751-10349	1		Hose, Fuel Line 54 inches
30	751-3154	1		Pipe, Exhaust RH
31	751-3155	1		Pipe, Exhaust LH
32	756-3091A	2	/P	Pulley Half
33	756-3099	1		Pulley, Center
34	KH-25-072-04	4	/P	Stud, M8 - 1.25 x 33MM
35	KH-24-041-49-S	2	/P	Gasket, Exhaust
36	712-3086	4	/P	Nut, Hex, M8 x 1.25
37	725-3243	2		Fuse, 25 Amp
37	725-04008	1		Fuse, 5 Amp
38	721-0342	1	S	Gasket, Silicone
39	725-1648	1	S	Relay
40	736-0171	1	S	Washer, Lock, 7/16
41	759-3868	1	S	Cover, Fuse Box
42	759-3869	1	S	Box, Fuse
43	710-3007	3	/P	Screw, Hex Wash. Hd. Tapp, #12-24 x .38
44	725-3191A	1	S	Switch, Plunger (Brake)
45	719-3096	1	/P	Adapter, Drive Shaft
46	KH-24-086-16	2	S	Screw, Hex Flange, M10 x 1.5 x 90
47	751-3199	1		Hose, Vacuum

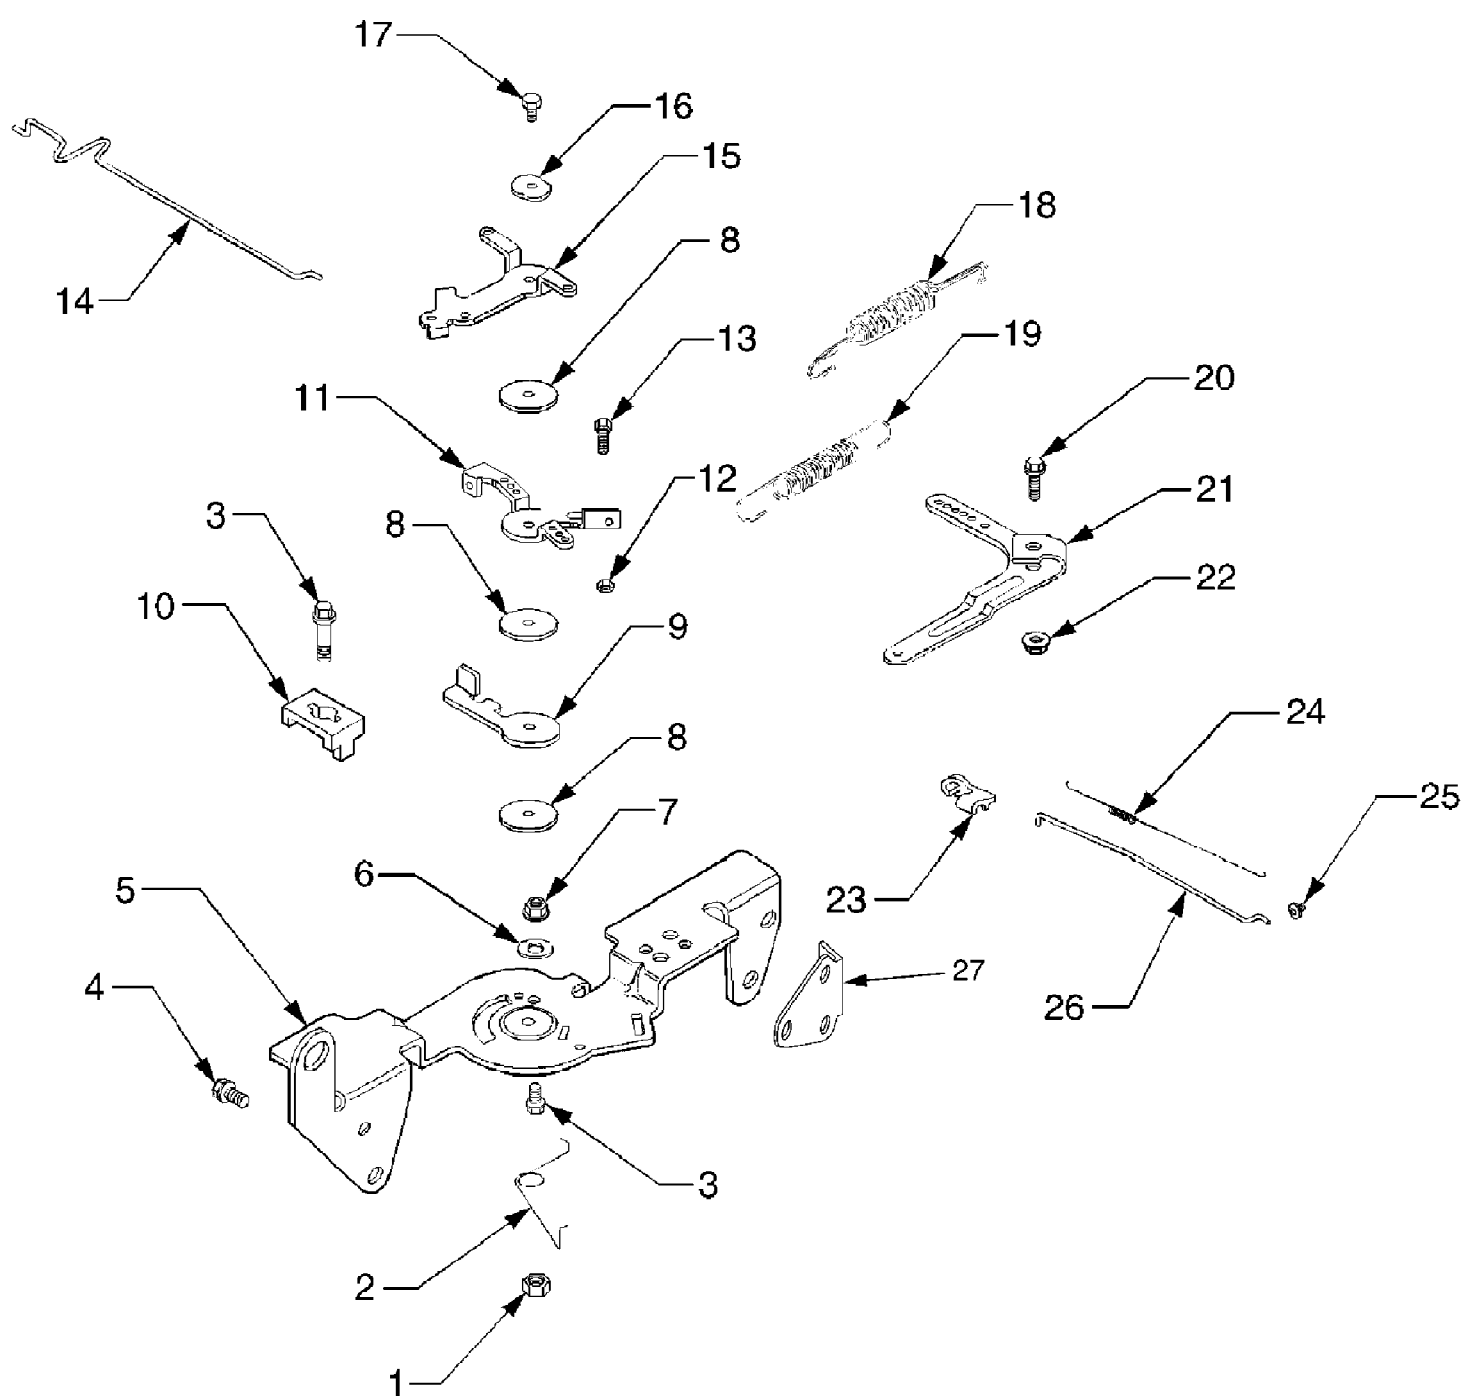 


GT3100 Tractor
Engine Controls

Page 19 of 67

Ref #	Part Number	Qty	S/P/F	Description
1	KH-M-0547050	1	/P	Nut, Hex Lock M5 x 0.8
2	KH-24-089-03	1		Spring, Choke Return
3	KH-M-545016-S	3	/P	Screw, Hex Flange M5 x 0.8 x 16
4	KH-M-645016-S	4	/P	Screw, Hex Flange M6 x 1.0 x 16
5	KH-24-126-56	1	S	Bracket, Control
6	KH-X-20-1	1		Washer, Lock
7	KH-M-541050-S	1		Nut, Hex Flange
8	KH-24-468-01	3		Washer, Plain 5.5mm
9	KH-24-090-07	1	/P	Lever, Throttle Actuator
10	KH-12-237-01	2		Clamp, Cable
11	KH-24-090-13	1		Lever, Throttle Control
12	KH-M-446030-S	1	/P	Nut, Hex M4 x 0.7
13	KH-M-401030	1	/P	Screw, Hex Cap M4 x 0.7 x30
14	KH-24-079-21-S	1	/P	Linkage, Choke
15	KH-24-090-05	1		Lever, Choke
16	KH-41-468-03	1		Washer, Spring 1/4"
17	KH-M-0545020	1	/P	Screw, Hex Flange M5 x 0.8 x 20
18	KH-24-089-51-S	1	/P	Spring, Throttle Limiter
19	KH-24-089-48-S	1		Spring, Governor
20	KH-24-211-03-S	1		Screw, Round Hd. Square Neck
21	KH-24-090-33-S	1	S	Lever, Governor
22	KH-M-0641060	1	S	Nut, Hex Flange M6 x 1.0
23	KH-25-158-08	1	/P	Bushing, Linkage Retaining
24	KH-24-089-01	1		Spring, Linkage
25	KH-25-158-11	1	/P	Bushing, Linkage Retaining
26	KH-24-079-01	1		Linkage, Throttle
27	KH-24-126-04	1	S	Bracket

GT3100 Tractor
Fender And Runner Board

 Page 20 of 67

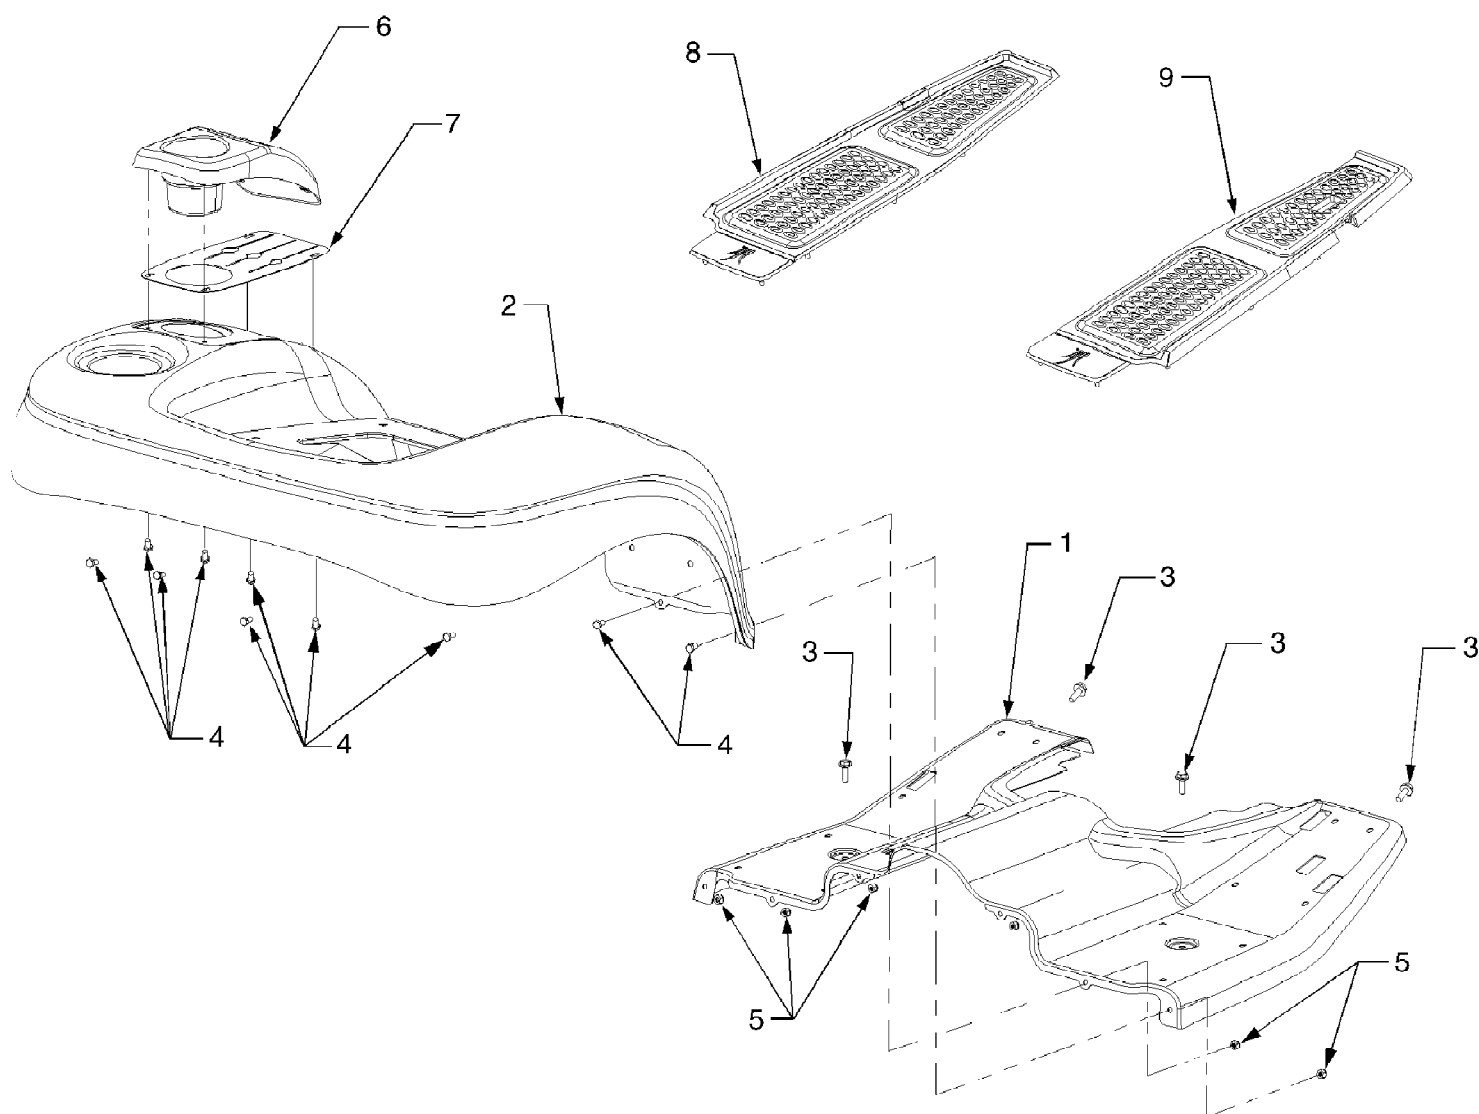


GT3100 Tractor
Fender And Runner Board

Page 21 of 67

Ref #	Part Number	Qty	S/P/F	Description
1	703-3622-0716	1		Running Board
	777S32517	1		Graphic, Danger Reverses Mow
	777I22483	1		Graphic, Starting Instructions
	777I20859	1		Graphic, Height Adjustment
2	703-05571-0716	1	S	Fender
	777D07684	1		Graphic, 3000 Series
	777D08642	1		Graphic, Reflector LH
	777D08643	1		Graphic, Reflector RH
3	710-0602	4	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x 1.0
4	710-3013	10	/P	Screw, Hex Cap, 1/4-20 x .5 GR5
5	712-0324	6	/P	Nut, Hex Lock, 1/4-20
6	731-3239	1		Cover, Lift Lever
7	731-3253	1		Flap, Lift Lever
8	735-0275	1		Pad. Floor LH
9	735-0276	1		Pad. Floor RH

GT3100 Tractor
Frame And Hitch Plate

 Page 22 of 67

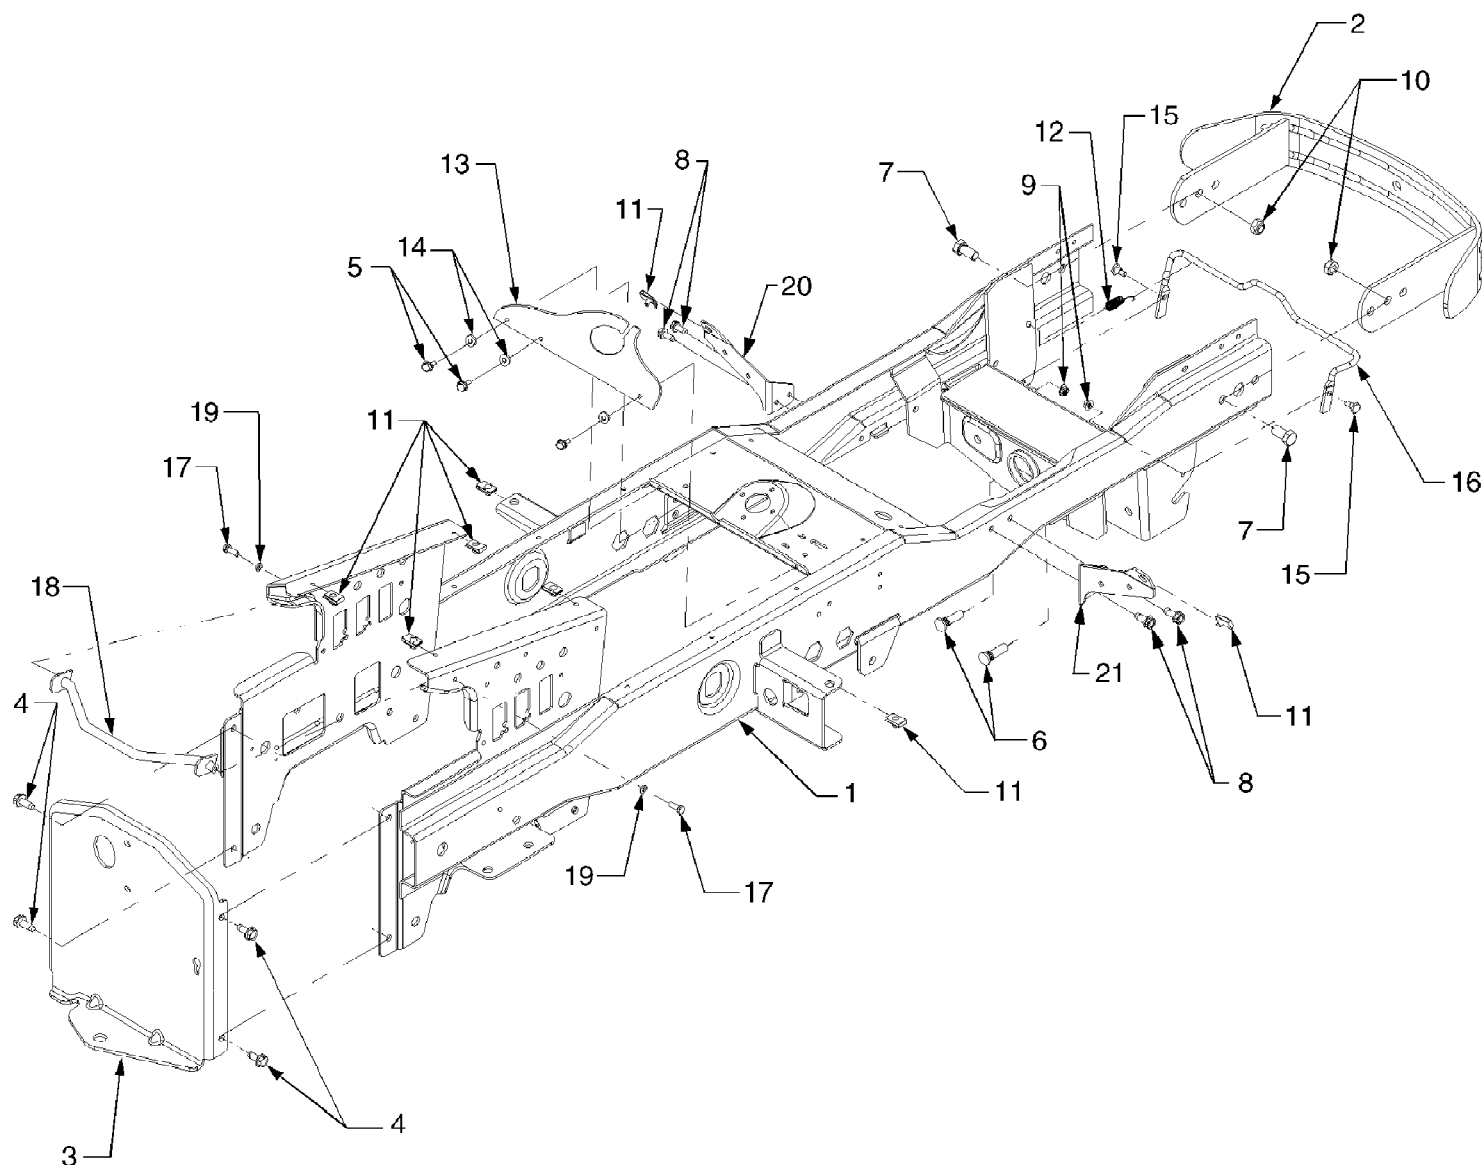



GT3100 Tractor
Frame And Hitch Plate

Page 23 of 67

Ref #	Part Number	Qty	S/P/F	Description
1	603-04253-0637	1		Frame Assembly
2	603-04252-0637	1	/P	Bumper, Front
	777D06086	1	/P	Graphic , Series 3000
3	703-3546-0716	1		Hitch Plate
	777I20773	1		Graphic, Trans. Release
	777S30265	1		Graphic, Trans. Oil
4	710-0623	4	/P	Screw, Hex Wash. Hd. Tapp 3/8-16 x .7 5
5	710-0599	3	/P	Screw, Hex Wash. Hd. Tapp 1/4-20 x .5
6	710-0617	2		Screw, Round Hd., 3/8-24
7	710-3131	2	/P	Screw, Hex Cap 1/2-13 x 1.0 GR5
8	710-1260A	4	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .75
9	712-3027	2	S	Nut, Hex Flange Lock, 1/4-20
10	712-3083	2	/P	Nut, Hex Lock, 1/2-13
11	726-0211	8	S	Speed Nut, U-Type, 5/16-18
12	732-3002	1	S	Spring, Extension
13	735-0653	1		Flap, Intk.
14	736-0342	3		Washer, Flat, .283 x .75 x .030
15	738-0704	2	S	Shoulder Screw, .312 x .18
16	747-3336	1		Rod, Front Latch
17	710-3015	2	/P	Screw, Hex Cap, 1/4-20 x .75 GR5
18	647-04010	1		Shaft, Tank Constraint
19	736-0329	2	S	Washer, Lock, 1/4
20	703-3417-0716	1		Bracket, Running Board LH
21	703-3418-0716	1		Bracket, Running Board RH

GT3100 Tractor
Front Axle

  
Page 24 of 67

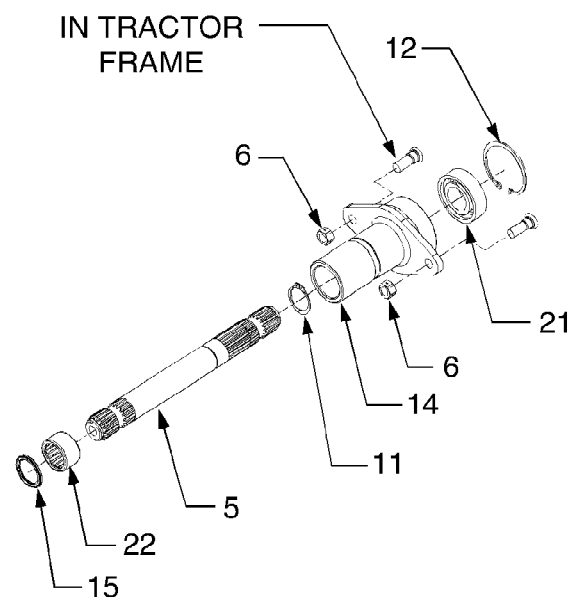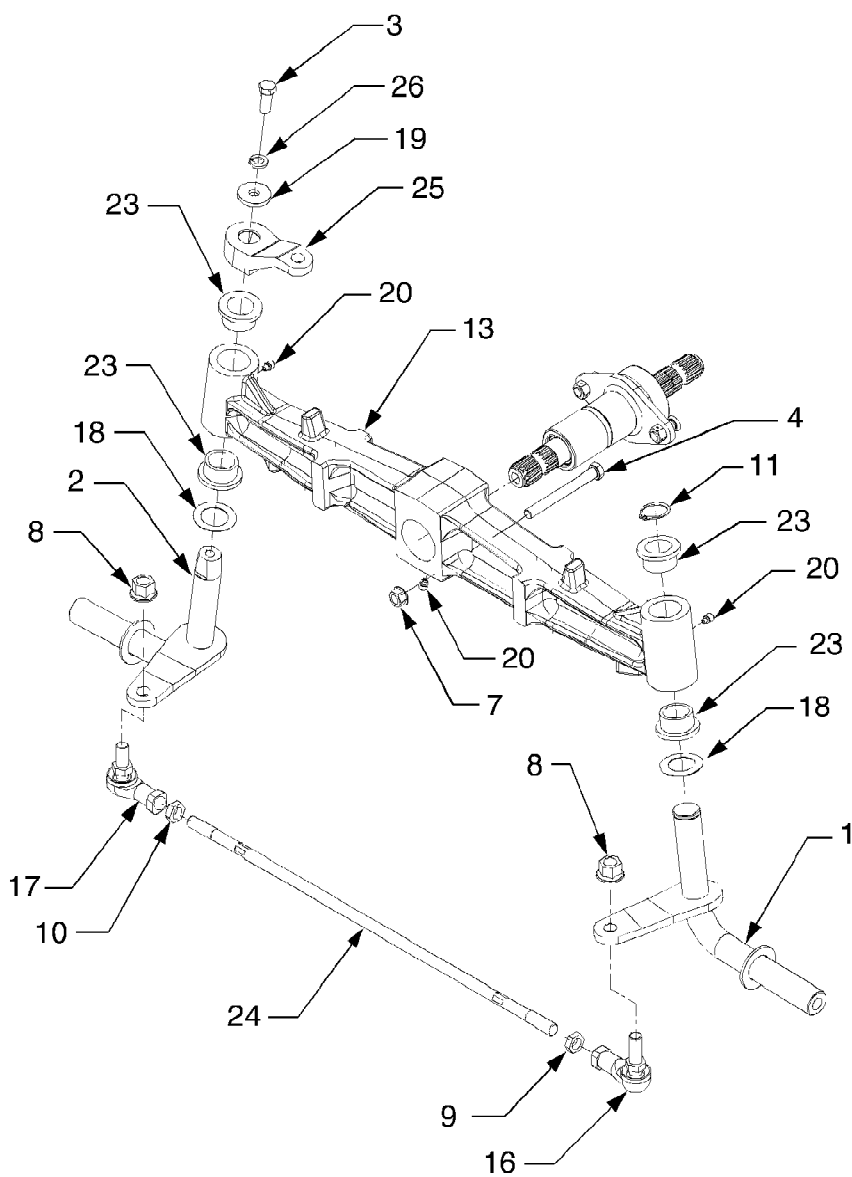

GT3100 Tractor
Front Axle

Page 25 of 67

Ref #	Part Number	Qty	S/P/F	Description
1	603-0426	1	/P	Axle, RH Steering
2	603-0427	1	/P	Axle, LH Steering
3	710-0591	1	/P	Screw, Hex Cap Lock 3/8-24 x 1.0 GR5 Replaces 710-1039 by also ordering 736-0169
4	710-3085	1	/P	Screw, Hex Cap 3/8-16 x 3.5 GR5
5	711-1141	1		Shaft, Splined
6	712-0355	2	S	Nut, Hex Center Lock, 3/8-24
7	712-0431	1	S	Nut, Hex Flange Lock, 3/8-16
8	712-3103	2		Nut, Hex Flange Lock, M12 x 1.75
9	712-3104	1		Nut, Hex - RH, M12 x 1.75
10	712-3105	1		Nut, Hex - LH, M12 x 1.75
11	716-0102	2	S	Snap Ring, 1.0 Dia. Shaft
12	716-0188	1	/P	Retaining Ring, Internal, 2.0
13	719-3119A	1	/P	Pivot Axle
14	719-3120	1		Axle Carrier
15	721-0462	1	/P	Seal, Grease, 1.31 x 1.0
16	723-0462	1		Ball Joint, 12MM x 1.75 RH
17	723-0463	1		Ball Joint, 12MM x 1.75 LH
18	736-0163	2	S	Washer, Flat, 1.03 x 1.62 x .030
19	736-0247	1	/P	Washer, Flat, .406 x 1.25
20	737-3000	3	S	Fitting, Lube, 3/16 Drive
21	741-0131	1	S	Bearing, Ball
22	741-0363	1	S	Bearing, Needle
23	741-0558	4	S	Bearing, Flange
24	747-3348A	1	/P	Tie Rod, M12 x1.75 RH & LH
25	748-3074	1		Steering Arm
26	736-0169	1	S	Washer, Lock, 3/8

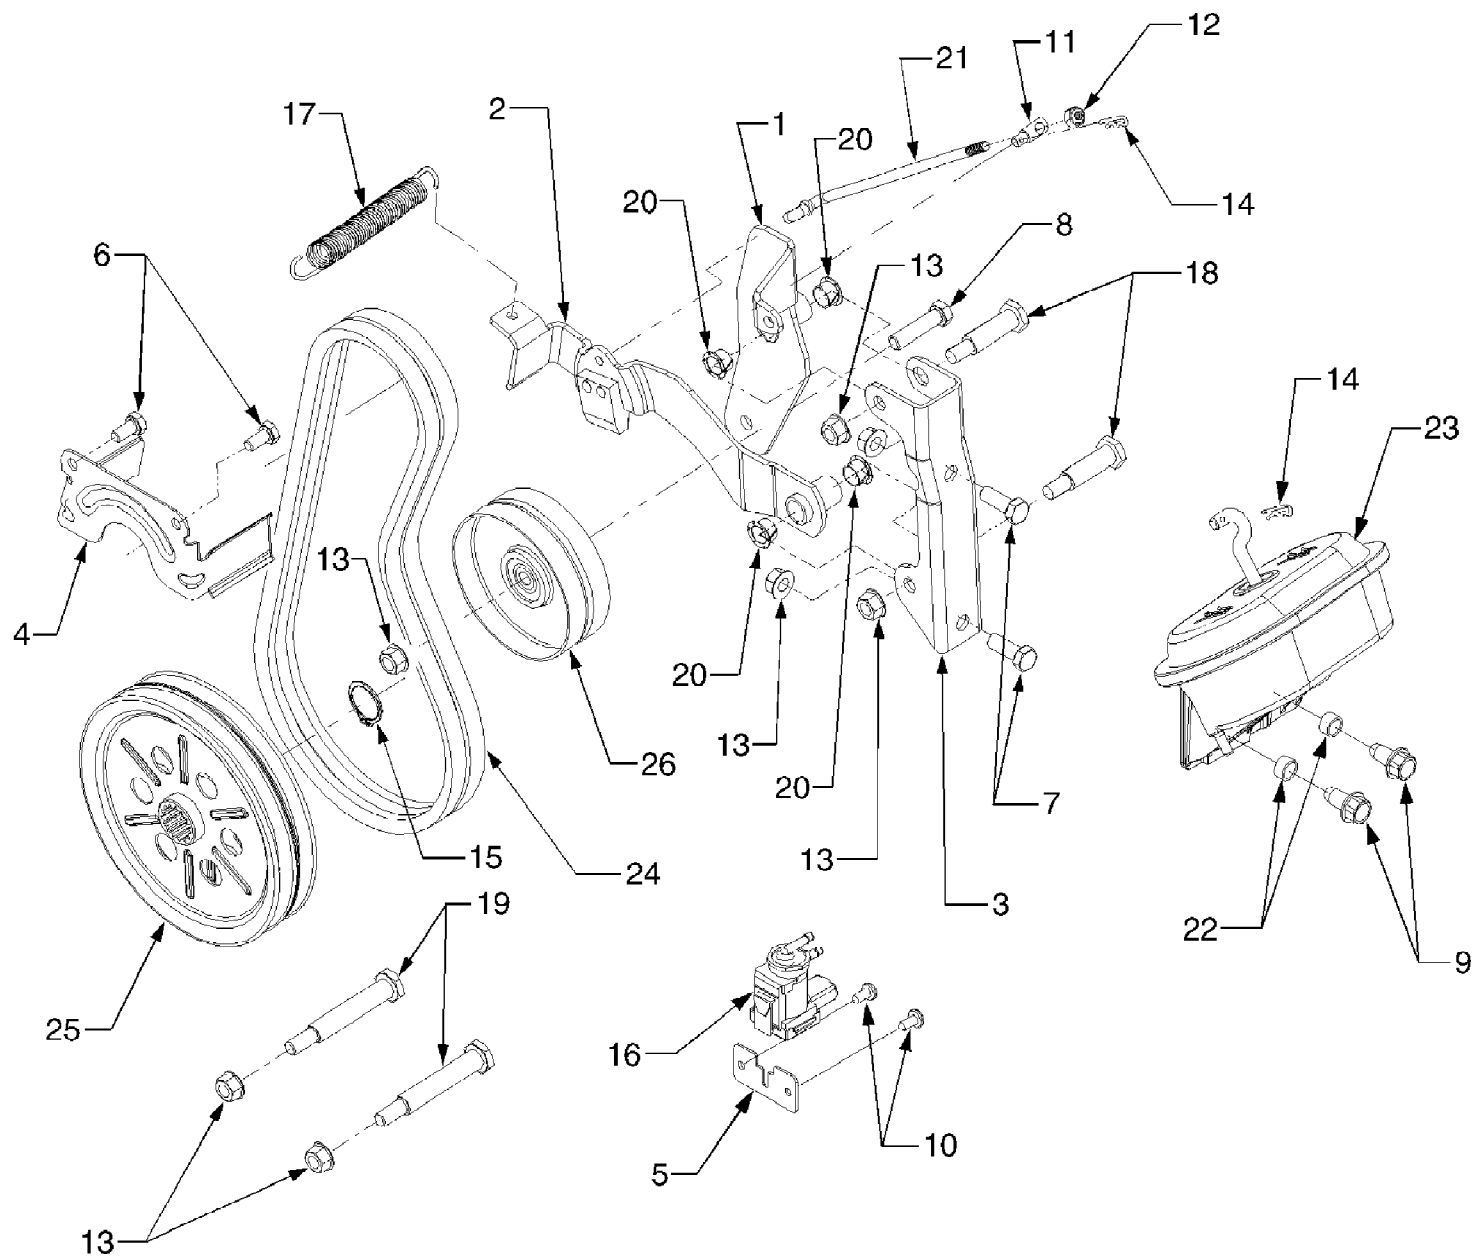 


GT3100 Tractor
Front PTO

Page 27 of 67

Ref #	Part Number	Qty	S/P/F	Description
1	603-0442-0637	1	/P	Bracket, Idler
2	759-3867	1	/P	Bracket Assembly, Brake
3	703-3009-0637	1	/P	Bracket, PTO Mounting
4	703-3165-0637	1	/P	Belt Guide
5	703-3812-0637	1	/P	Bracket, Solenoid Mounting
6	710-0237	2	/P	Screw, Hex Cap 5/16-24 x .625 GR5
7	710-0514	2	/P	Screw, Hex Cap 3/8-16 x 1.0 GR5
8	710-0520	1	/P	Screw, Hex Cap 3/8-16 x 1.5 GR5
9	710-0623	2	/P	Screw, Hex Wash. Hd. Tapp 3/8-16 x .75
10	710-0748	2	/P	Screw, Phil. Hd. Tapp #12-14 x .5
11	711-1196	1		Ferrule, Brake Adjustment
12	712-0324	1	/P	Nut, Hex Insert Lock, 1/4-20
13	712-0431	7	S	Nut, Flange Lock, 3/8-16
14	714-0104	2	S	Pin, Internal Cotter
15	716-0102	1	S	Snap Ring, 1.0 Dia Shaft
16	759-04258	1	/P	Solenoid, Kit Vacuum Actuator Replaces 725-3278
17	732-0470A	1	S	Spring, Extension, .530 x 4.74
18	738-0213	2	/P	Shoulder Screw, .498 x 1.45
19	738-3056	2	S	Shoulder Screw
20	741-0491	4		Bearing, Nylon Flange
21	747-3322	1		Rod, PTO Brake
22	750-0526	2		Spacer, .380 x .5 x .265
23	751-3173	1	S	Vacuum Actuator
24	754-3084	1	S	V-Belt, A-Section x 37.63 (Set of two belts)
25	756-3092	1		Pulley, PTO Drive. 6.75-Double
26	756-3094	1		Pulley, Flat Idler, 4.0

GT3100 Tractor
Front Wheels

 
Page 28 of 67

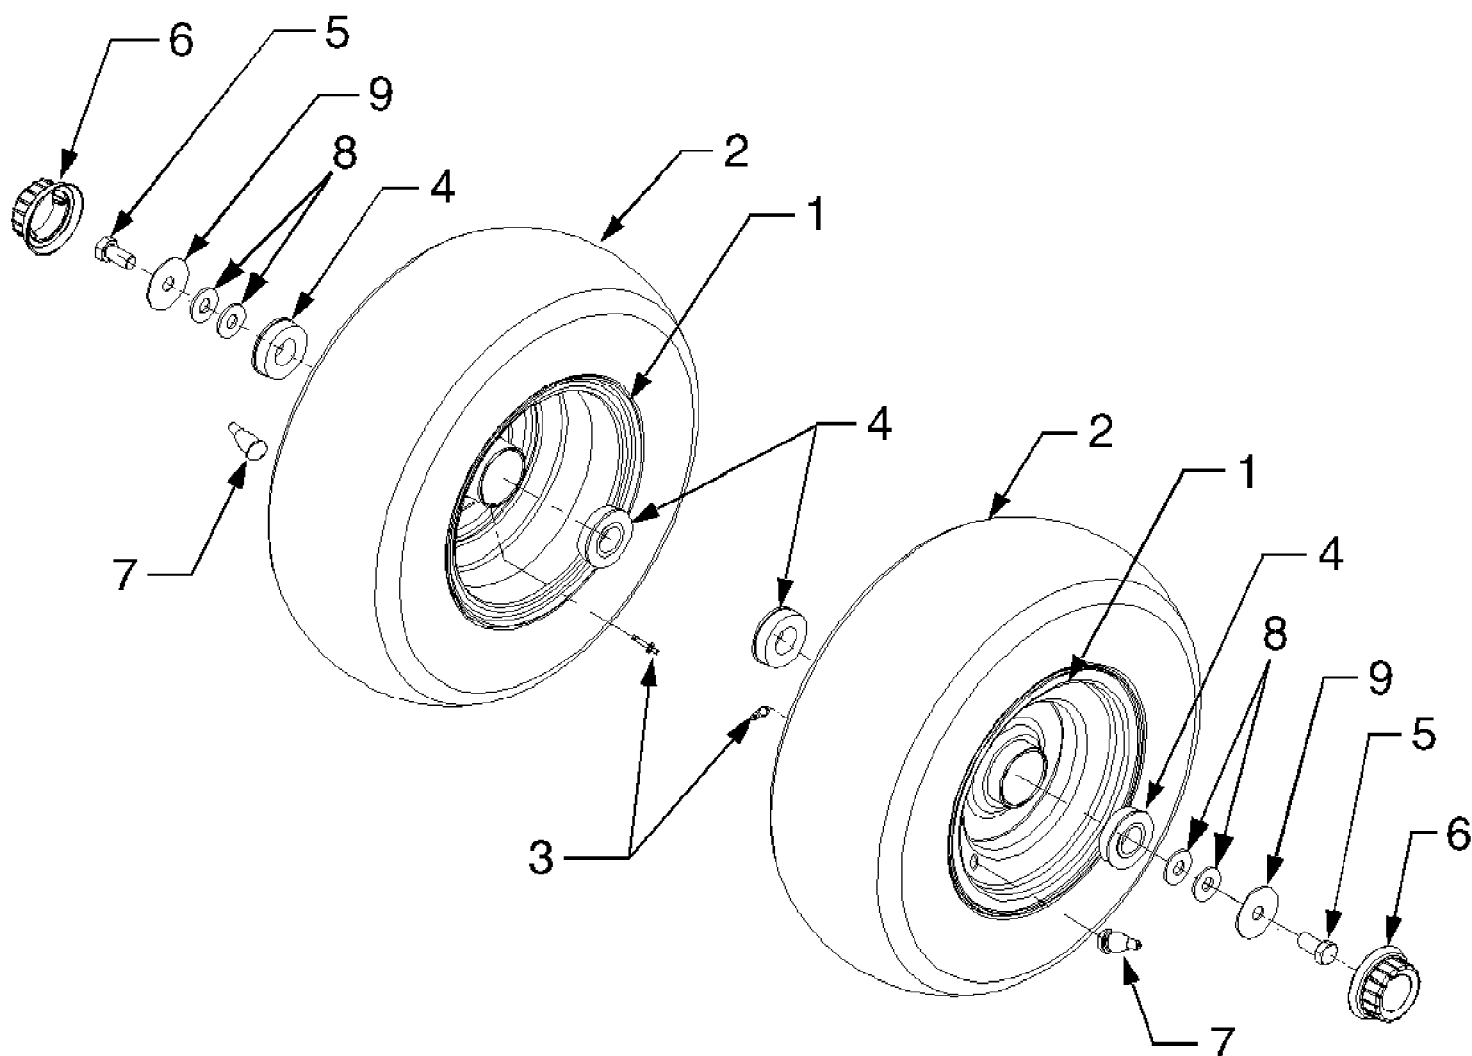

GT3100 Tractor
Front Wheels

Page 29 of 67


Ref #	Part Number	Qty	S/P/F	Description
1	734-3053-0499	2	S	Rim Assembly, Wheel
2	734-3187	2	S	Tire, Turf, 16 x 6.5 x 8.0
3	737-0224	2		Lube Fitting
4	741-3002	4	S	Bearing, Ball
5	710-3126	2	/P	Screw, Hex Cap, 1/2-13 x 1.0 GR5
6	731-3020	2	S	Hubcap
7	734-0255	2	S	Valve, Tubeless Air
8	736-0179	4	S	Washer, Flat, .531 x 1.25 x .1
9	736-3095	2	S	Washer, Flat, .535 x 1.92 x .060

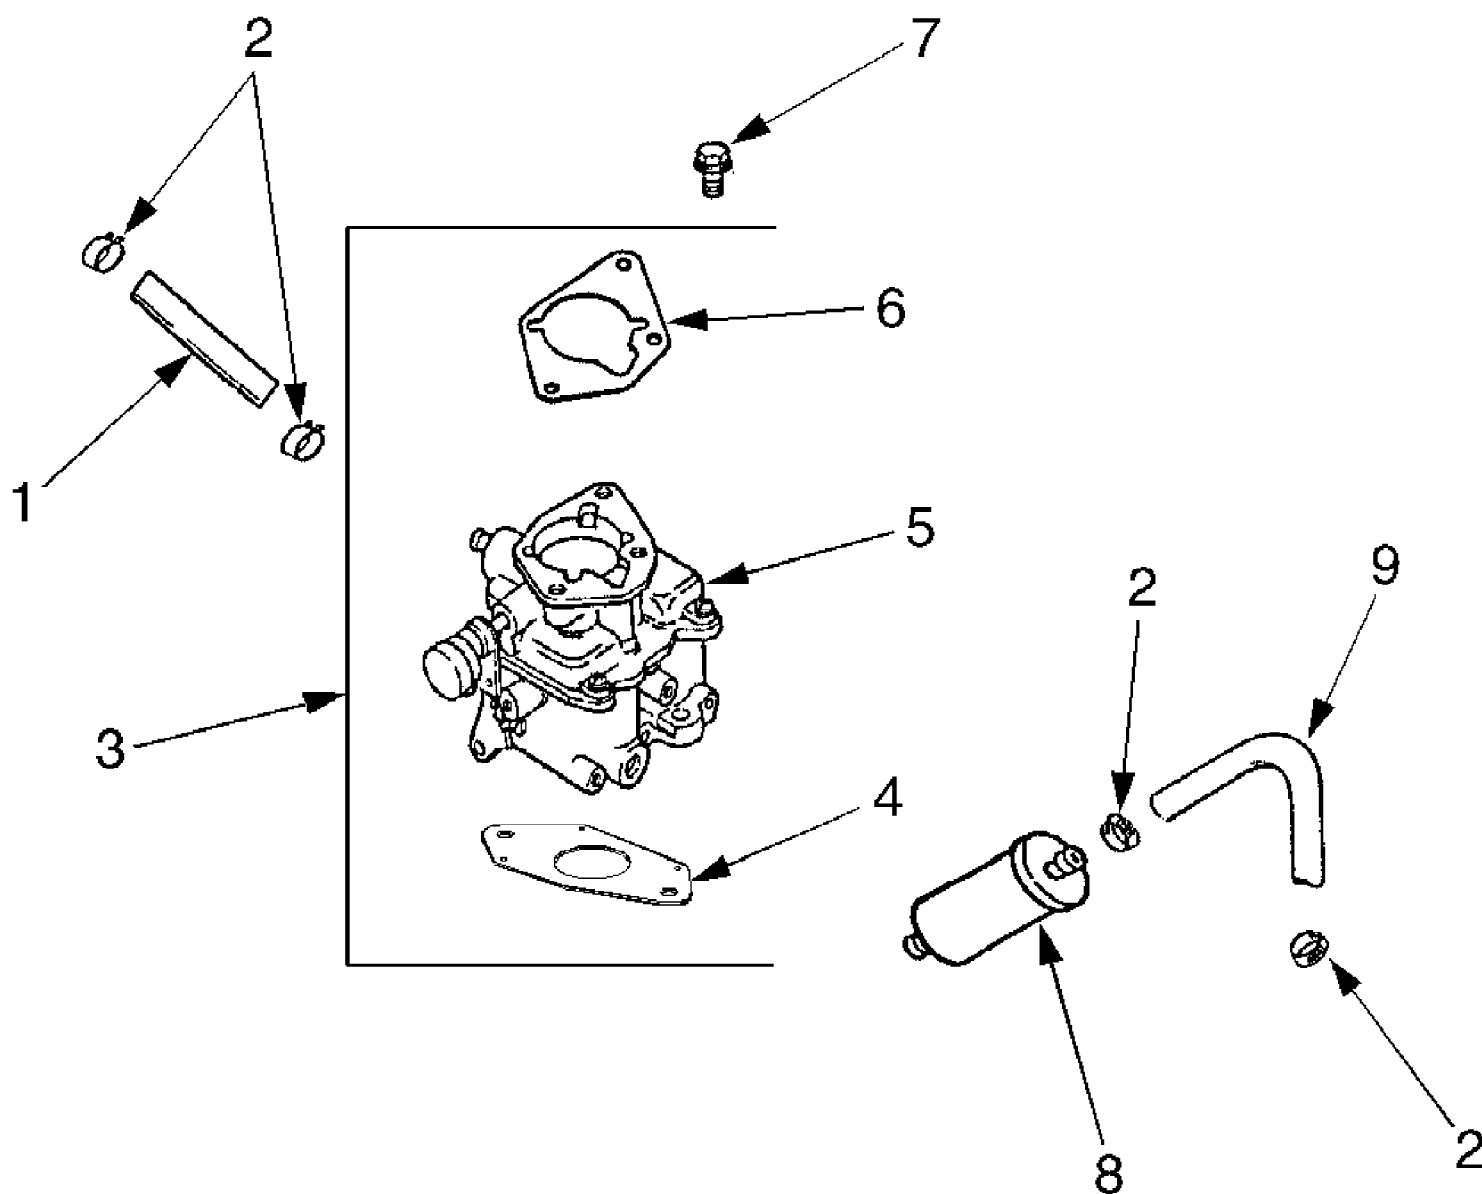 

GT3100 Tractor
Fuel System

Page 31 of 67


Ref #	Part Number	Qty	S/P/F	Description
1	KH-25-111-34-S	2		Line, Fuel 24" Replaces KH-52-353-20 in this model
2	KH-25-237-14-S	4	/P	Clamp, Hose
3	KH-24-853-59-S	1	/P	Kit, Carburetor w/Gasket
4	KH-24-041-53-S	1		Gasket, Carburetor
5		1		Carburetor Assembly Not Available Separately
6	KH-24-041-06	1	/P	Gasket, Air Cleaner Base
7	KH-25-086-124-S	2		Screw, Hex Flange Replaces KH-M-651025-S
8	KH-24-050-10-S	1	S	Filter, Fuel
9	KH-25-111-34-S	1		Line, Fuel 24" Replaces KH-24-353-12 in this model
	KH-24-518-24-S	1		Lead, Ground Not Illustrated
	KH-24-757-01	1	/P	Kit, Solenoid Not Illustrated
	KH-24-757-02	1	S	Kit, Float Repair Not Illustrated
	KH-24-757-03	1	S	Kit, Carburetor Repair Not Illustrated
	KH-24-757-07	1		Kit, Choke Repair Not Illustrated
	KH-24-755-125-S	1		Kit , High Altitude Not Illustrated

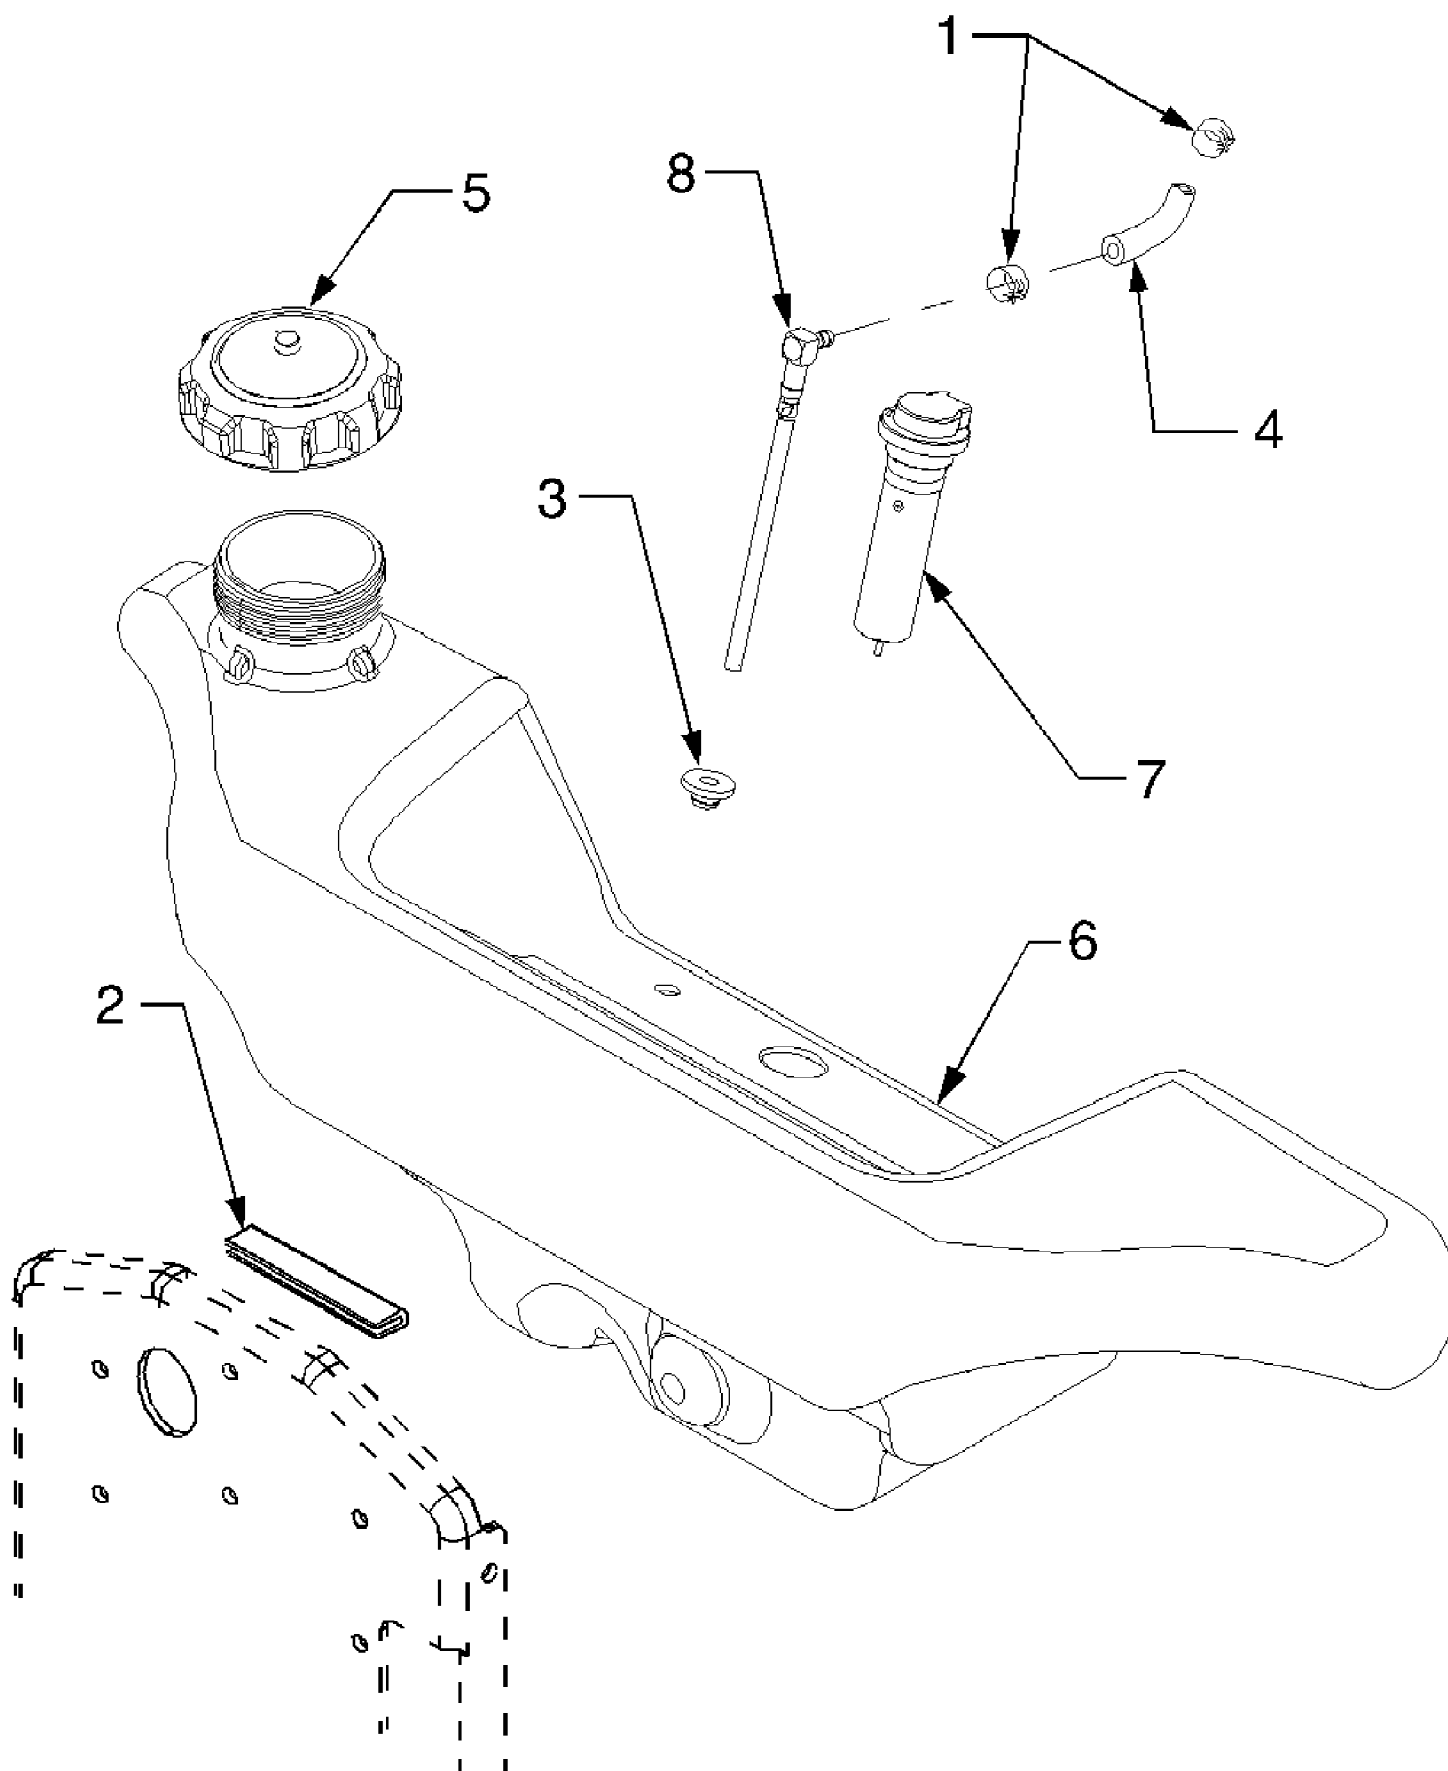 

GT3100 Tractor
Fuel Tank

Page 33 of 67


Ref #	Part Number	Qty	S/P/F	Description
1	726-0205	2	/P	Clamp, Hose
2	731-3268	1		Trim, Tank Protector 4in.
3	735-0149	1	S	Bushing, Rubber
4	751-10349-54	.	/P	Fuel Line 54in, Replaces 751-0535-60 in this model
5	751-3124B	1	S	Cap, Fuel
6	651-3002A	1	/P	Tank Assembly, Fuel Includes Ref. Nos. 3,5,7 and 8
7	751-3161	1		Sensor, Low Fuel
7	751-3146	1	S	Grommet
8	751-3162A	1	/P	Fitting, Fuel Pickup

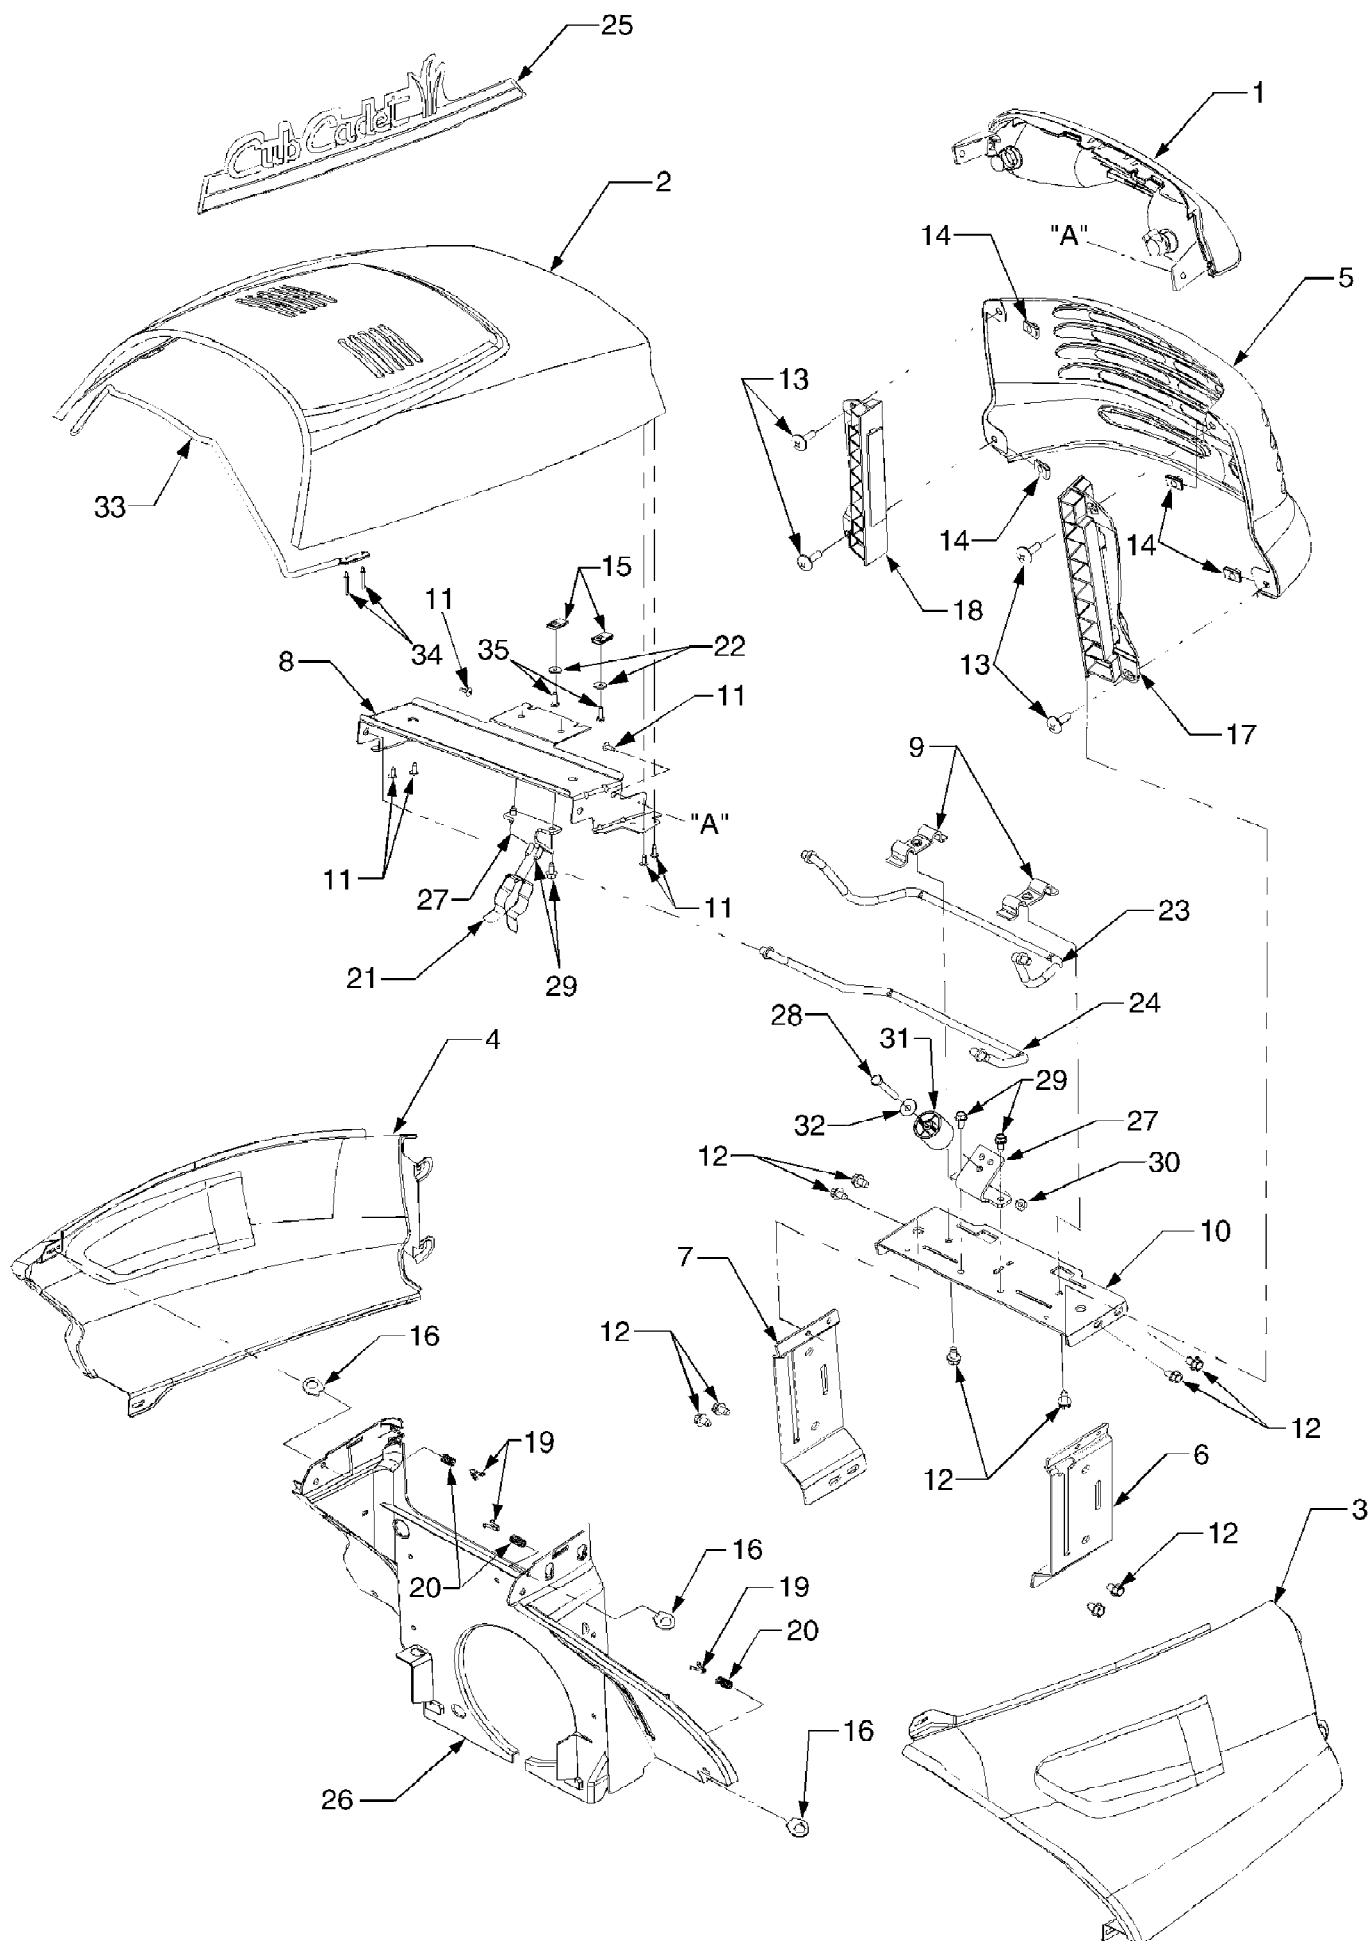 

GT3100 Tractor
Hood, Grille And Side Panels

Page 35 of 67

Ref #	Part Number	Qty	S/P/F	Description
1	625-04001A	1	S	Headlight Assembly
1	725-0963	2	S	Bulb, Headlight Not shown
1	725-1649	2	S	Socket Assembly, Headlight Not shown
2	703-05000A-0499	1	/P	Hood
3	703-2946-0499	1		Side Panel, RH
3	777D08868	1		Graphic, GT 3100 Not shown
3	777X41482	1		Graphic, Lift Hood Not shown
3	777X40079	1	/P	Strip, Protective Not shown
4	703-2947-0499	1		Side Panel, LH
4	777D08868	1		Graphic, GT 3100 Not shown
4	777X41482	1		Graphic, Lift Hood Not shown
4	777X40079	1	/P	Strip, Protective Not shown
5	703-2950-0499	1		Grille, Series 3000
5	777I20314	1	/P	Graphic, Warning Not shown
6	703-2984-0716	1		Support, Grille - RH - Cub Yellow
6	703-2984-0637	1		Support, Grille - RH - Black
7	703-2985-0716	1		Support, Grille - LH - Cub Yellow
7	703-2985-0637	1		Support, Grille - LH - Black
8	703-3070B-0499	1	/P	Bracket, Upper Hood
8	777S30538	1		Graphic, Hot Surface Not shown
9	703-3071	2		Bracket, Rod Retainer
10	703-3101B-0716	1	/P	Support, Hood - Cub Yellow
10	703-3101B-0637	1		Support, Hood - Black
11	710-0351	6	/P	Screw, Truss Hd, Tapp, #10-16 x .5
12	710-0607	10	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .5
13	710-0924	4	/P	Screw, Phil. Pan Hd. 1/4-20 x 75
14	726-3054	4		Nut, U Type Speed, 1/4-20
15	726-0139	2	/P	Nut, U-type Speed, #10
16	726-3056	4		Latch, 1/4 Turn
17	731-3227	1		Mount, Side Panel/Grille RH
18	731-3228	1		Mount, Side Panel/Grille LH
19	732-0936	4		Clip, Spring
20	732-0937	4		Spring, Compression
21	732-1178	1		Spring, Hood Latch
22	736-0400	2	S	Washer, Flat, .194 x .62 x .063
23	747-3478	1		Rod, Upper Hood
24	747-3338	1		Rod, Lower Hood
25	777D07681	1		Graphic, Hood - RH 2008 & Before
25	777D09725	1		Graphic, Hood - RH 2009 & After
25	777D07682	1		Graphic, Hood - LH 2008 & Before
25	777D09724	1		Graphic, Hood - LH 2009 & After
26	731-3221A	1	/P	Baffle, Lower Air
27	703-4088-0637	2	/P	Bracket, Hood Latch Support
28	710-0136	1	/P	Screw, Hex Cap, 1/4-20 x 1.75 GR5
29	710-1005	6	S	Screw, Hex Wash Hd Tapp, 1/4-14 x 5
30	712-3051	1	/P	Nut, Hex Top Lock, 1/4-20
31	731-3232	1		Roller, Hood Latch
32	736-0342	1		Washer, Flat, .283 x .75 x .030
33	747-04085	1		Rod, Hood Support
34	728-0117	4		Rivet, Pop, .125 OD
35	710-0436	2	S	Screw, Hex Tapp, #10-16 x .625

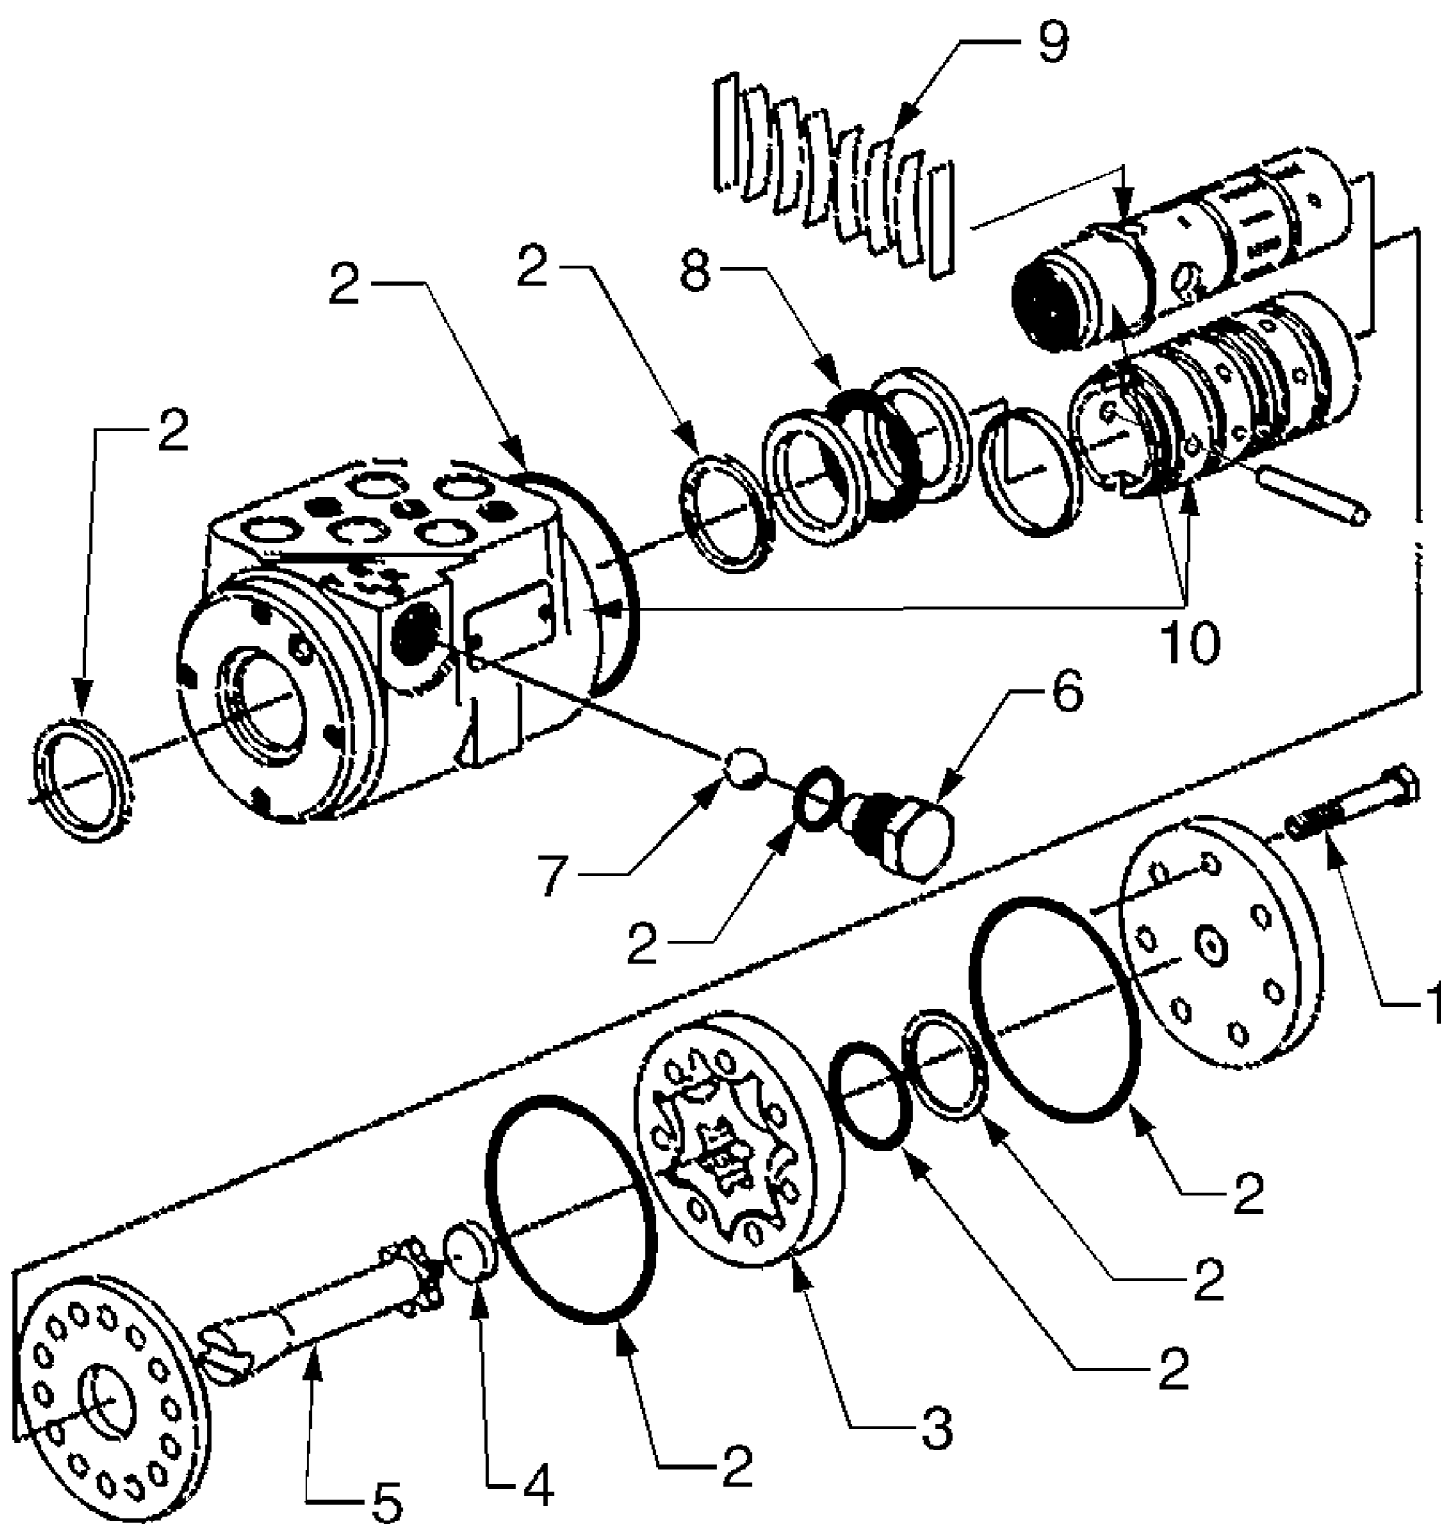 


GT3100 Tractor
Hydraulic Steering Pump

Page 37 of 67

Ref #	Part Number	Qty	S/P/F	Description
1	ET-14543-002	1		Screw, Hex Cap, 1.57" Lg.
2	ET-64455-000	1		Seal Kit (Includes All Parts Marked Ref. 2)
3	ET-22991-003	1	S	Gerotor Assembly
4	ET-22919-005	1		Spacer, .240 Lg.
5	ET-22918-000	1		Drive
6	ET-9199-000	1		Plug, Manual Check
7	ET-285020-140	1		Ball, Manual Check
8	ET-64457-000	1		Bearing Kit
9	ET-64456-000	1		Spring Kit, Centering
10	N/A	1		Spool, Sleeve and Housing Not Available as Replacement Parts. Order Complete Steering Pump

GT3100 Tractor
Hydraulic Valve And Lines

 
Page 38 of 67

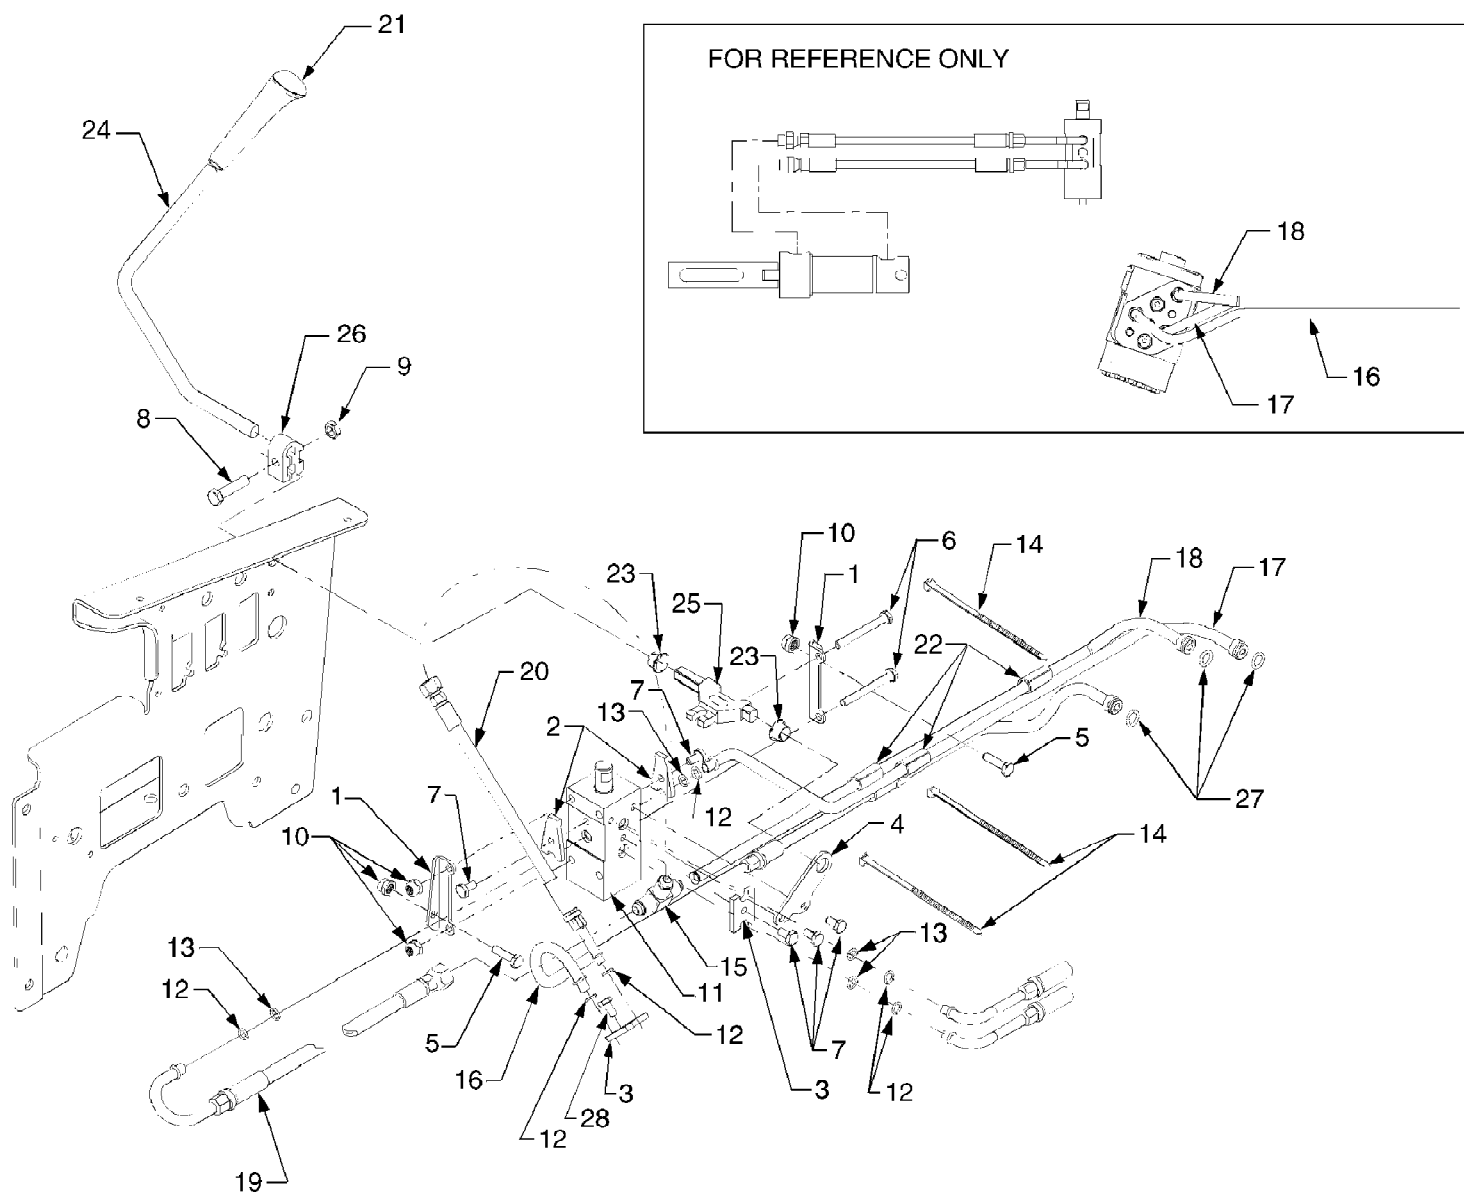

GT3100 Tractor
Hydraulic Valve And Lines

Page 39 of 67

Ref #	Part Number	Qty	S/P/F	Description
1	703-1801	2		Bracket, Valve Mounting
2	703-1802	2		Clamp, Side Valve
3	703-1803	2	S	Clamp, Double Valve
4	703-3154	1	S	Bracket, Lift Valve
5	710-0597	2	/P	Screw, Hex Cap 1/4-20 x 1.0 GR5
6	710-0641	2	/P	Screw, Hex Cap 1/4-20 x 2.25 GR5
7	710-3013	5	/P	Screw, Hex Cap 1/4-20 x .50 GR5
8	710-3083	1	/P	Screw, Hex Cap 5/16-18 x 1.375 GR5
9	712-0429	1	S	Nut, Hex Insert Lock, 5/16-18
10	712-3027	4	S	Nut, Hex Flange Lock, 1/4-20
11	717-3452	1		Valve, Hydraulic
12	721-0492	4		O-Ring, Backup
13	721-3021	6	S	O-Ring
14	726-0197	3		Cable Tie
15	727-3056	1		T-Fitting, 9/16-18 Thrd.
16	727-3130	1		Tube, Hydraulic (Pump to Strng)
17	727-3131	1		Tube, Hydraulic (Aux. from Strng)
18	727-3162	1		Tube, Hydraulic (Strng Return)
19	727-3160	1		Tube, Hydraulic (Aux Return)
20	727-3161	1	/P	Tube, Hydraulic (Return to Pump)
21	731-3259	1		Knob, Lift
22	735-3007	3	S	Rubber Spacer
23	741-0491	2		Bearing, Nylon Flange
24	747-3349A	1	/P	Handle, Center Lift Valve
25	748-3081A	1	/P	Link, Lift
26	748-3082	1		Clamp, Handle
27	721-0493	3		O-Ring, .426 x .566 x .070
28	710-0751	1	/P	Screw, Hex Cap 1/4-20 x .62 GR5

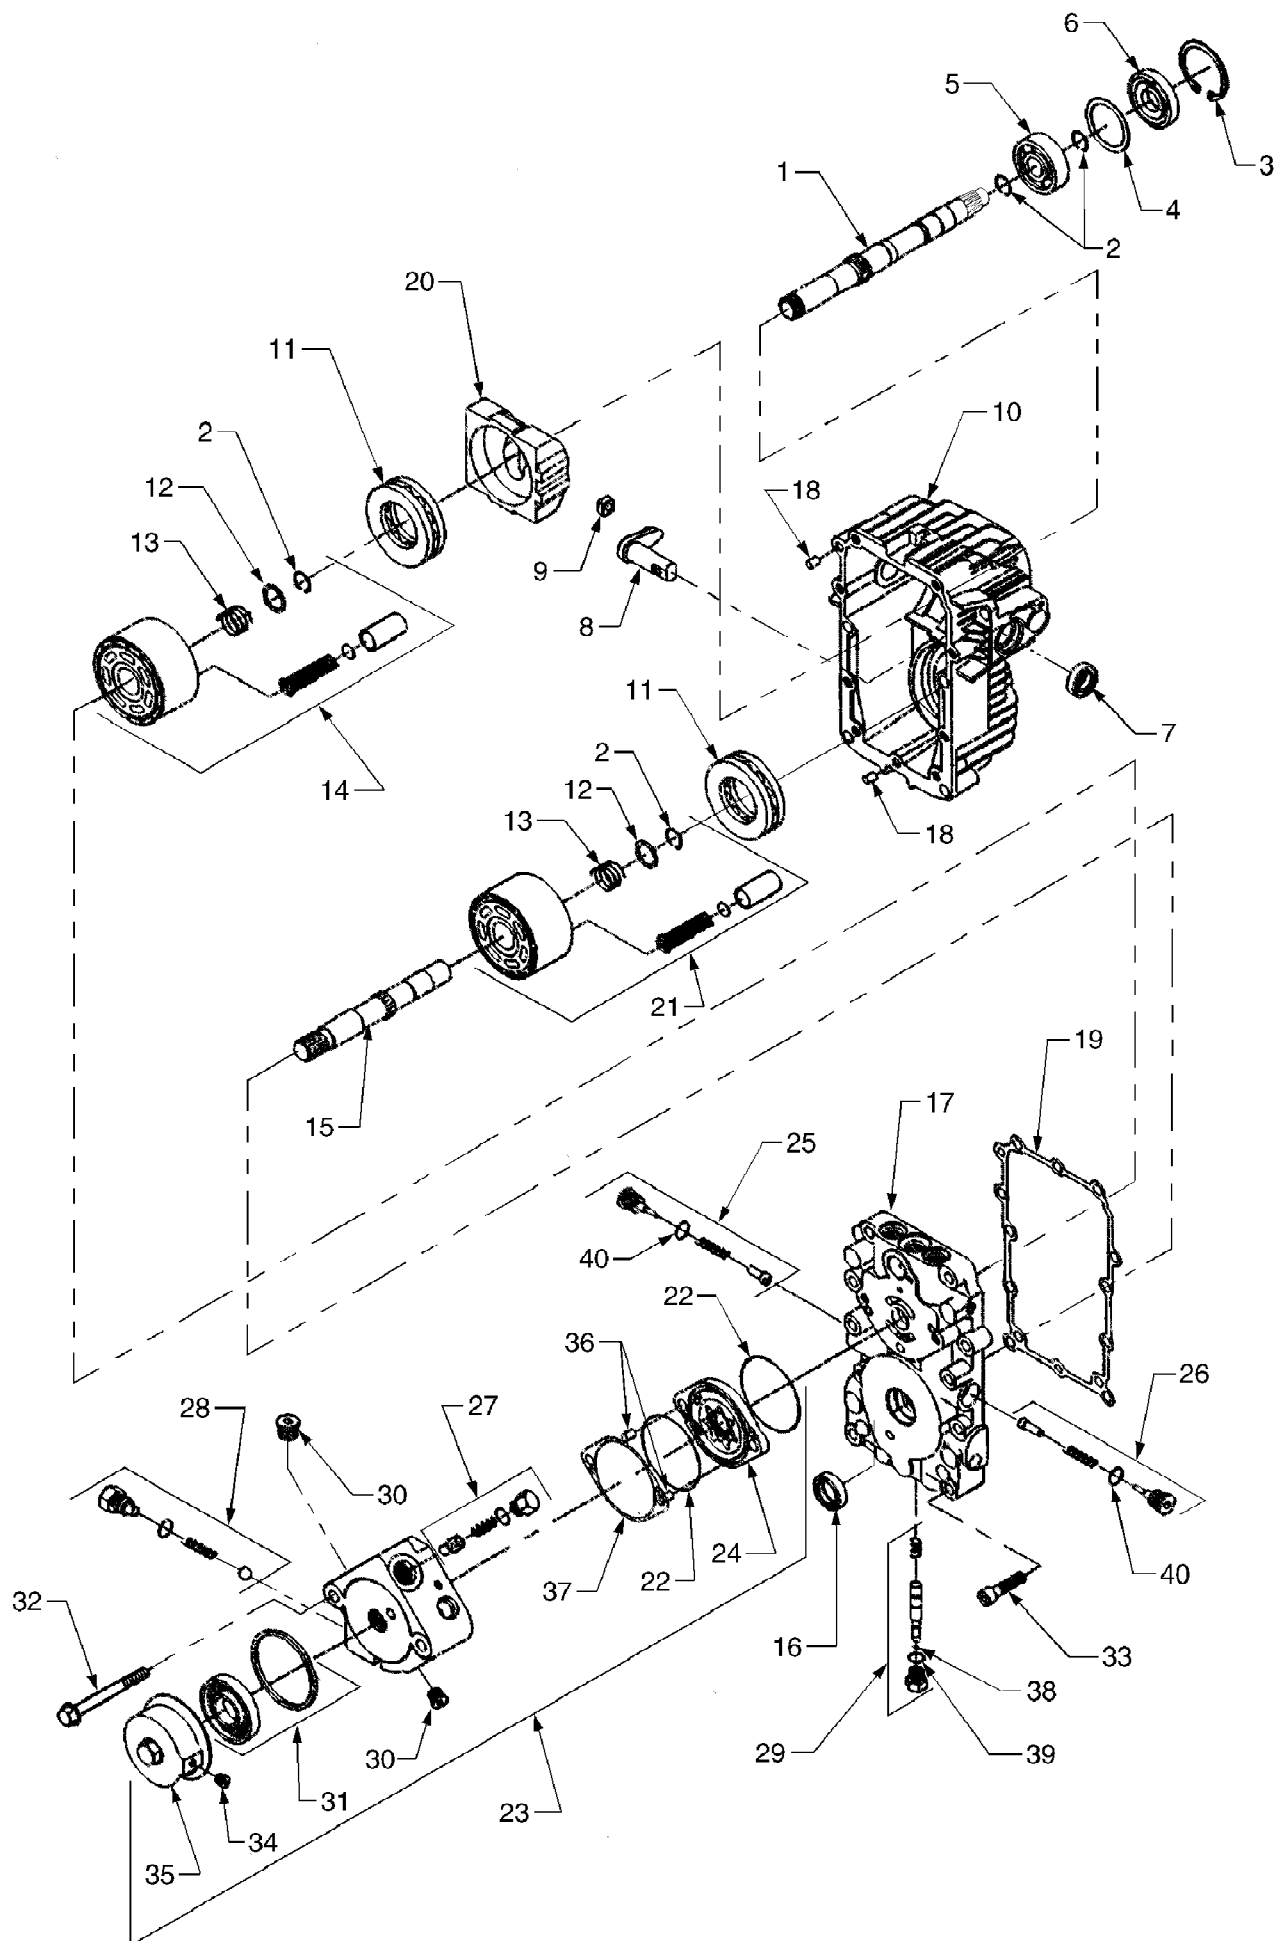 


GT3100 Tractor
Hydrostatic Transmission

Page 41 of 67

Ref #	Part Number	Qty	S/P/F	Description
1	HG-51206	1	/P	Shaft, Pump
2	HG-2000022	4	/P	Ring, Wire Retaining
3	HG-2000038	1	/P	Ring, Retaining
4	HG-2000023	1	/P	Spacer
5	HG-2000032	1	/P	Bearing, Ball
6	HG-2000036	1	S	Seal, Lip
7	HG-2000037	1	/P	Seal, Lip
8	HG-2000014	1	/P	Arm, Trunnion
9	HG-2000015	1	/P	Guide, Slot
10	HG-2510097	1		Housing Assembly
11	HG-50552	2	/P	Bearing Assembly, Thrust Ball
12	HG-2000024	2	/P	Washer, Block Thrust
13	HG-2000025	2	/P	Spring, Block
14	HG-2510014	1	/P	Kit, Pump Cylinder Block
15	HG-2000007	1	/P	Shaft, Motor
16	N/A	1		Not Used In This Application
17	HG-2510098	1	/P	Kit, Center Section
18	HG-50641	2		Pin
19	HG-2000061	1	/P	Gasket, Center Section
20	HG-50203	1		Swashplate, Variable
21	HG-2510013	1	/P	Kit, Motor Cylinder Block
22	HG-9004100-1430	2	/P	O-Ring
23	HG-2510083	1	S	Kit, Auxiliary Charge Pump
24	HG-50761	1	/P	Gerotor & Housing Assembly
25	HG-2510050	1	/P	Kit, Check Valve
26	HG-2510034	1	/P	Kit, Check Valve w/ .044 Orifice
27	HG-2510081	1		Kit, Check Relief
28	HG-2510082	1		Kit, Auxiliary Relief Valve
29	HG-2510012	1	/P	Kit, Bypass Valve
30	HG-9005110-4400	2		Plug, 7/16-20
31	HG-2510090	1	/P	Kit, Auxiliary Filter
32	HG-50969	2		Screw, Flange Head Cap, M8 x 60
33	HG-9007314-0808	8	/P	Screw, Socket Head Cap
34	HG-9005110-3100	1		Plug, 5/16-24
35	HG-50994	1	S	Cover, Filter
36	HG-50408	2	/P	Pin
37	HG-2000044	1	/P	Shim, Charge Pump
38	N/A	1		O-Ring-Order Seal Kit HG-2510010
39	N/A	1		O-Ring-Order Seal Kit HG-2510010
40	N/A	1		O-Ring-Order Seal Kit HG-2510010
	HG-2510010	1	/P	Kit, Overhaul Seal (Includes Ref. Nos. 2, 3, 4, 6, 7, 19, 22, 38, 39 & 40)

GT3100 Tractor
Ignition/Electrical

 Page 42 of 67

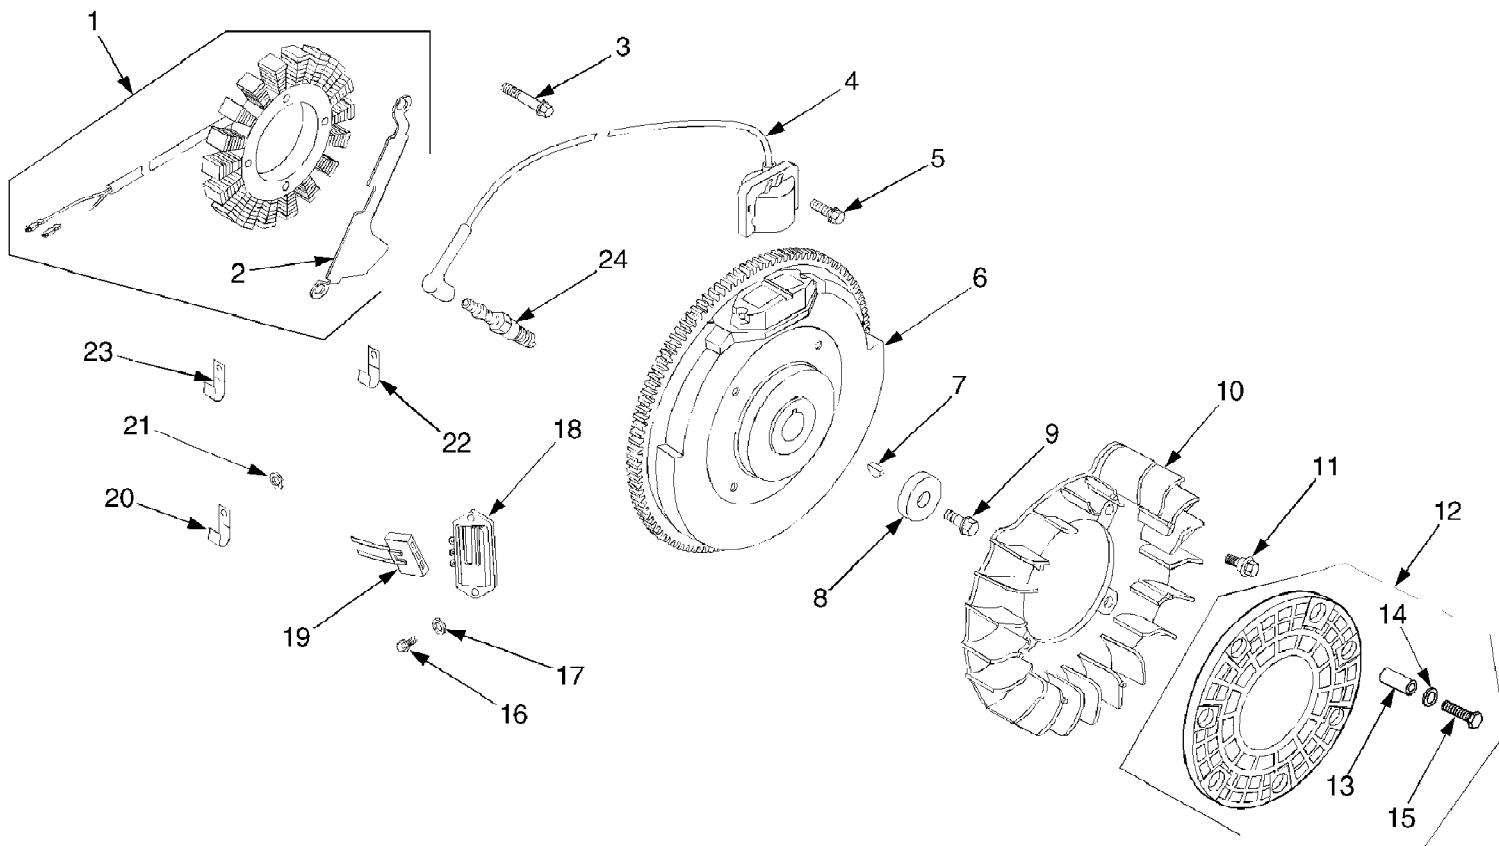


GT3100 Tractor
Ignition/Electrical

Page 43 of 67

Ref #	Part Number	Qty	S/P/F	Description
1	KH-54-755-09	1	S	Stator Kit, 15 Amp (Incl. Ref #2)
2	KH-24-126-139-S	1		Bracket, Stator Wire
3	KH-M-0548025	2		Screw, Stator Mtg. M5 x .8 x 25
4	KH-24-584-01	2	S	Module, Ignition
5	KH-M-545020-S	4		Screw, Module M5 x .8 x 20
6	KH-24-025-01	1	S	Flywheel Assembly
7	KH-X-42-15	1	/P	Key
8	KH-12-468-03	1	/P	Washer, Flywheel Mtg. Screw
9	KH-12-086-14	1		Screw, Flywheel Mtg, M10x1.5 x
10	KH-24-157-07-S	1	S	Fan
11	KH-25-086-47	4	/P	Bolt, Shoulder
12	KH-54-755-15	1	/P	Screen, Grass
13	KH-24-112-04	4		Spacer
14	KH-X-25-72	4		Washer, Plain
15	KH-M-403025	4		Screw, Hex Hd. M4 x 0.7 x 25
16	KH-24-086-18	2		Screw Phillips Hd., #11-16 x .875
17	KH-X-25-92	3		Washer, Plain
18	KH-41-403-09	1	S	Regulator - Rectifier
19	KH-236602	1	S	Connector, Regulator-Rectifier
20	KH-235173	1		Clip, Cable
21	KH-X-25-63	1	/P	Washer, Plain 1/4"
22	KH-48-154-02	1		Clip, Cable
23	KH-47-154-01	1	S	Clip, Cable
24	759-3336	2	/P	Spark Plug
	KH-25-086-91-S	2	/P	Screw, Set Not Shown
	KH-24-176-08	1	S	Harness, Wire Not Shown
	KH-25-454-03-S	2		Tie, Wire Not Shown
	KH-24-126-137-S	1		Bracket, Ground Strap Not Shown
	KH-25-468-07-S	1		Washer Not Shown

GT3100 Tractor
Label Map

 Page 44 of 67

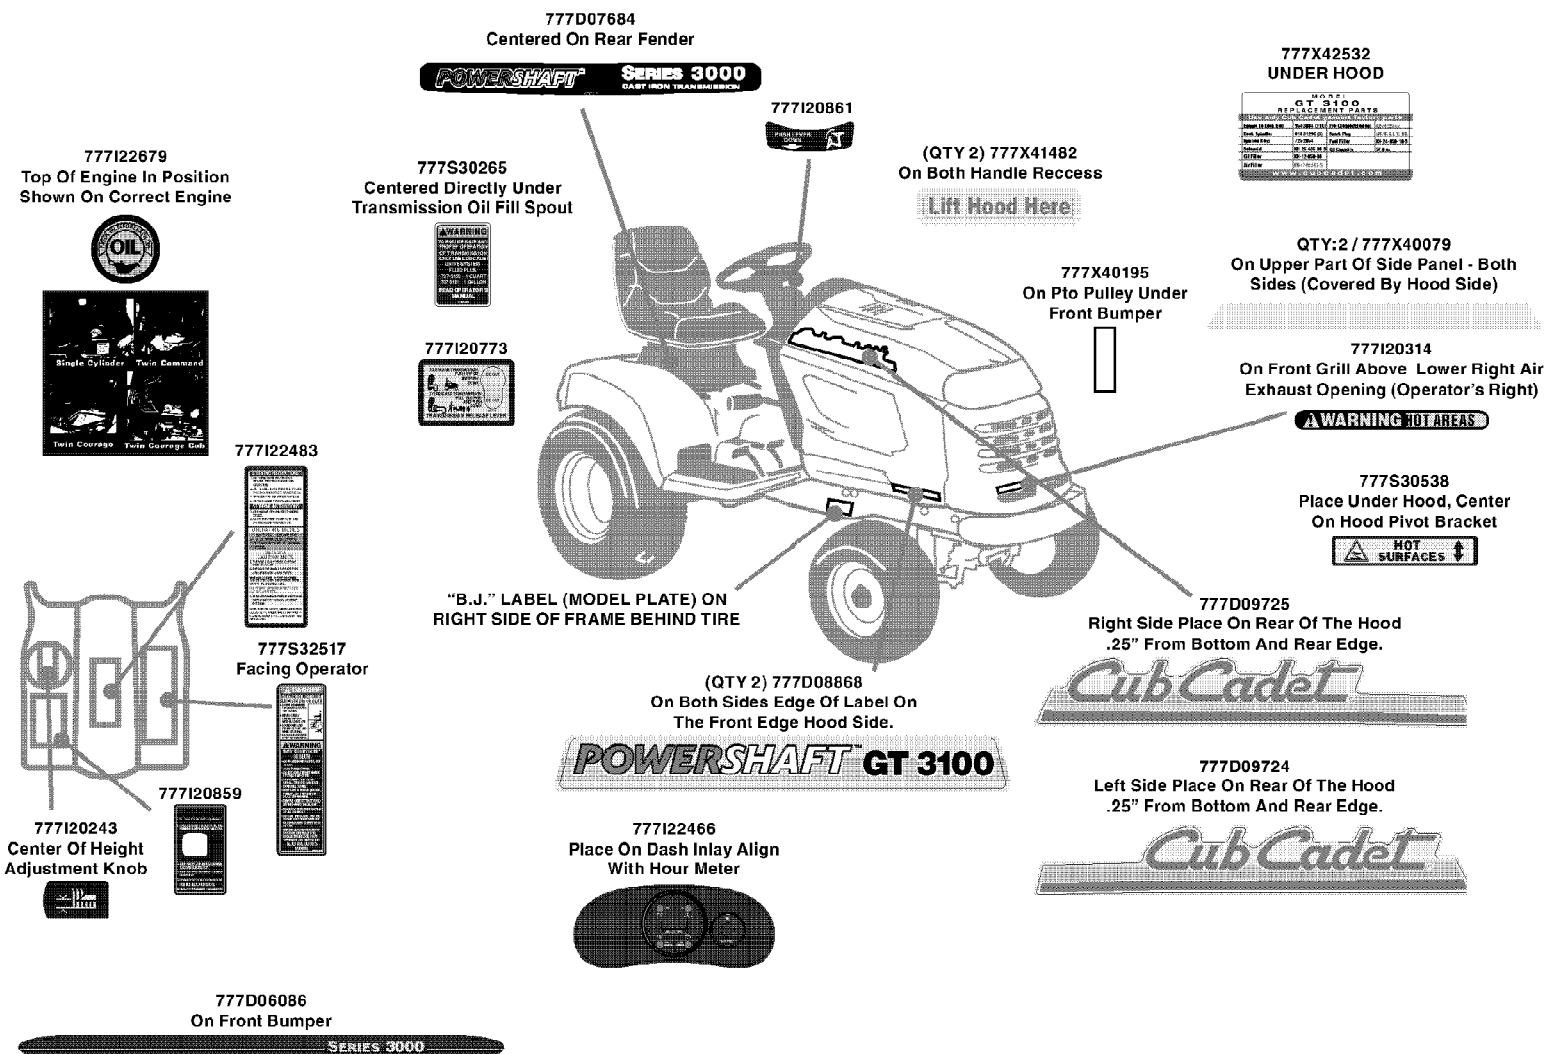


GT3100 Tractor
Label Map

Page 45 of 67

Ref #	Part Number	Qty	S/P/F	Description
777I22679	777I22679	1		LABEL-CHECK ENG OIL
777I22483	777I22483	1		LABEL-START INSTRU
777S32517	777S32517	1		LABEL-CUB WARNING
777I20859	777I20859	1		LABEL-HEIGHT ADJUST
777I20243	777I20243	1		LABEL-HEIGHT ADJUS
777D06086	777D06086	1	/P	LABEL-FRONT BUMPER
777I22466	777I22466	1		LABEL-DASH PANEL
777D08868	777D08868	1		LABEL-MODEL GT 310
777D09724	777D09724	1		LABEL-LFT SIDE HOOD
777D09725	777D09725	1		LABEL-RGT SIDE HOOD
777S30538	777S30538	1		LABEL-HOT SURFACE
777I20314	777I20314	1	/P	LBL.WARNING/HOT AREA
777X40079	777X40079	1	/P	STRIP-PROTECTIVE
777X42532	777X42532	1		LABEL-PARTS LIST GT3100
777X40079	777X40079	1	/P	STRIP-PROTECTIVE
777X40195	777X40195	1		LABEL-PTO PULLEY
777I20861	777I20861	1		LABEL-STEERING WHE
777X41482	777X41482	1		LABEL-LIFT HOOD
777I20773	777I20773	1		LABEL-HITCH PLATE
777S30265	777S30265	1		LABEL-CUB OIL ONLY
777D07684	777D07684	1		LABEL-3000 FENDER

GT3100 Tractor
Lower Power Steering

 
Page 46 of 67

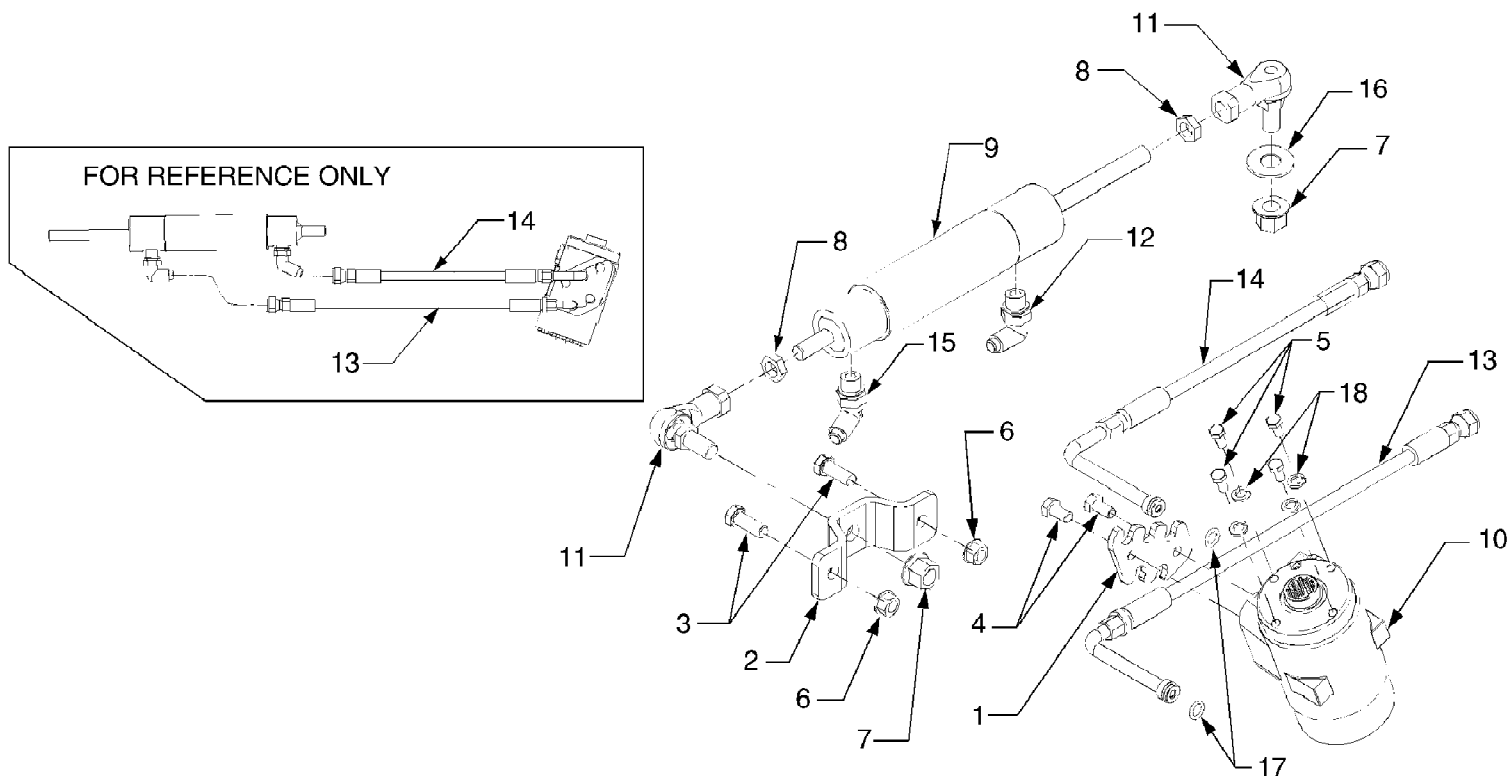

GT3100 Tractor
Lower Power Steering

Page 47 of 67

Ref #	Part Number	Qty	S/P/F	Description
1	703-3015-0716	1		Plate, Steering Pump Port
2	703-3189-0716	1	/P	Bracket, Cylinder Mounting
3	710-0514	2	/P	Screw, Hex Cap 3/8-16 x 1.0 GR5
4	710-3138	2	/P	Screw, Hex Cap M8-1.25 x 16MM GR5
5	710-3140	4		Screw, Hex Cap, M6 x 14MM
6	712-0431	2	S	Nut, Hex Flange Lock, 3/8-16
7	712-3103	2		Nut, Hex Flange Lock, M12 x 1.75
8	712-3104	2		Nut, Hex, M12 x 1.75 RH
9	717-3424	1		Cylinder, Steering
10	717-3442	1	S	Pump, Hydraulic Steering
11	723-0462	2		Ball Joint, 12MM x 1.75 RH
12	727-3012	1	/P	Fitting, 90 Degree Elbow
13	727-3126	1		Hose, Front Steering
14	727-3127	1		Hose, Rear Steering
15	727-3159	1		Fitting, 45 Degree
16	736-3084	1	/P	Washer, Flat, .51 x 1.12 x .060
17	721-0493	2		O-Ring, .426 x .566 x .070
18	736-0329	4	S	Washer, Lock, 1/4"

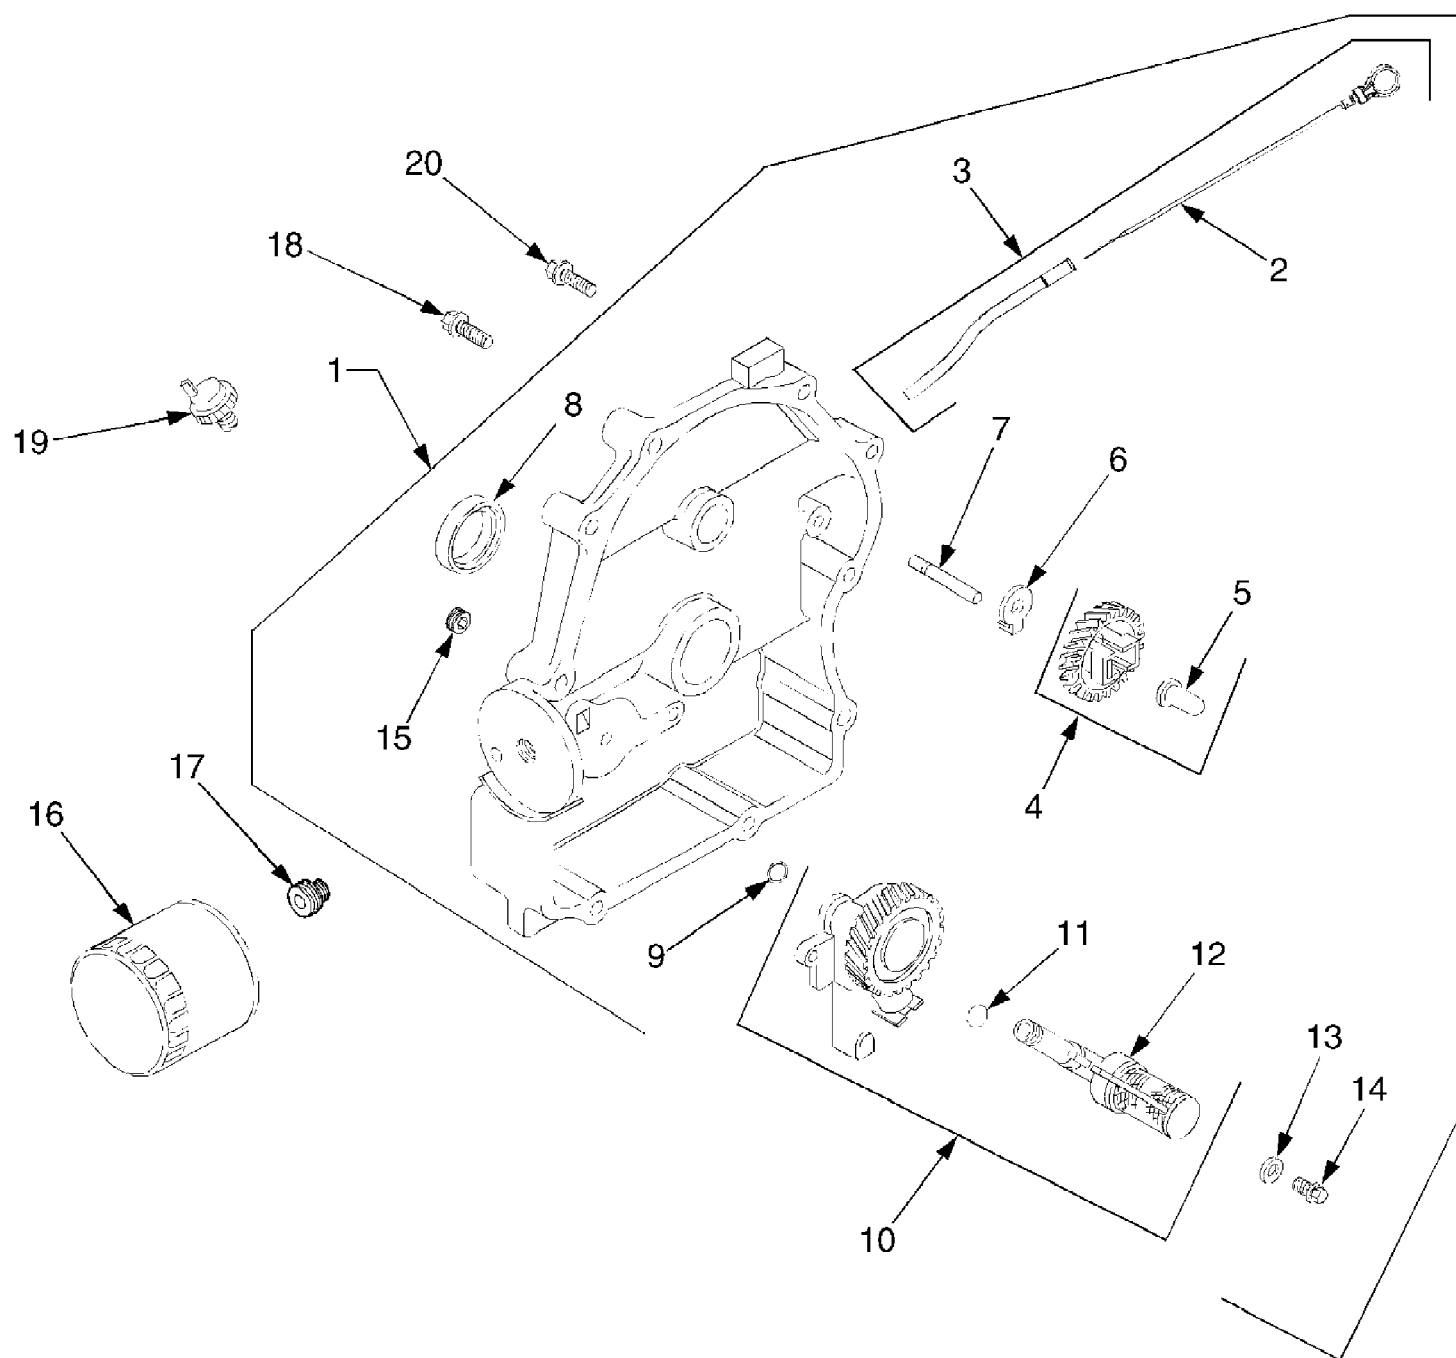 

GT3100 Tractor
Oil Pan/Lubrication

Page 49 of 67

Ref #	Part Number	Qty	S/P/F	Description
1	KH-54-009-07	1		Plate, Closure Assembly (Includes 2-15)
2	KH-24-038-10-S	1	/P	Dipstick
3	KH-24-755-121-S	1	/P	Tube, Dipstick (Includes 2)
4	KH-24-043-12	1	/P	Kit, Governor Gear (Includes 5)
5	KH-12-380-01	1	/P	Pin, Governor Regulating
6	KH-24-448-02-S	1		Tab, Locking
7	KH-12-144-02	1		Shaft, Governor Gear
8	KH-52-032-08	1	S	Seal, Oil (PTO End)
9	KH-24-153-08	1		O-Ring
10	KH-24-393-37-S	1	S	Oil Pump Assembly (Includes 11,12)
11	KH-24-153-01	1	/P	O-Ring, Oil Pick-Up
12	KH-24-381-04	1		Pick-Up, Oil
13	KH-M-0631005	2	S	Washer, Plain
14	KH-M-0645025	2	S	Screw, Hex Flange M6 x 1 x 25
15	KH-25-139-60-S	2	/P	Plug, Pipe 1/8"
16	KH-12-050-08	1	S	Filter, Oil
17	KH-24-136-01	1		Nipple, Oil Filter
18	KH-24-086-16	9	S	Screw, Hex Flange M8 x 1.25 x 45
19	KH-25-099-24	1	S	Switch, Pressure
20	KH-24-086-17	1	S	Screw, Hex Flange M8 x 1.25 x 45


GT3100 Tractor
Pedestal And Connections

Page 51 of 67

Ref #	Part Number	Qty	S/P/F	Description
1	603-04248-0637	1		Pedestal Assembly
2	710-1260A	6	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .75
3	710-0216	2	/P	Screw, Hex Cap 3/8-16 x .75 GR5
4	711-1423	1		Shaft, Lower Steering
5	712-0431	2	S	Nut, Hex Flange Lock, 3/8-16
6	714-0104	2	S	Pin, Internal Cotter
7	715-0120	2	S	Pin, Spirol, 3/16 x 1.0
8	716-0115	1	S	Ring, Retaining, .56 Dia Shaft
9	723-0467	1		Strap, Battery (Incl. Ref No. 15)
10	925-3255	1	/P	Battery
12	731-3225	1		Lever, Park Brake
13	731-3226	1		Lever, Cruise
14	731-3323	1		Cover, Fixed Steering
15	732-0696	2		Hook, Wire Rectangular
16	732-0870	1	S	Spring, Compression, .676 x 2.57
17	735-0269	1		Boot, Shaft Cover
18	736-0116	1	S	Washer, Flat, .635 x .93 x .06
19	736-0185	2	S	Washer, Flat, .375 x .738 x .063
20	736-0275	2	S	Washer, Flat, .344 x .688 x .065
21	738-3177	1		Shaft, Upper Steering
22	741-3111	1		Bearing, Steering Support
23	747-3327	1		Rod, Cruise Control
24	747-3328	1		Rod, Parking Brake
25	747-3354	1		Rod, Cruise/Brake Pivot
26	750-1229	1		Sleeve, Fixed Steering
27	725-0157	4	/P	Cable Tie, Harness
28	715-0129	1	/P	Pin, Spirol, 1/8 x .812




Ref #	Part Number	Qty	S/P/F	Description
	759-3336	1	/P	Spark Plug
	KH-47-883-03-S1	1	/P	Air Filter & Pre-Cleaner
	KH-12-050-01-S	1	/P	Oil Filter
	KH-24-050-10-S	1	S	Fuel Filter
	KH-24-584-45-S	1	/P	Ignition Module
	KH-41-403-09	1	S	Voltage Regulator
	KH-24-559-10-S	1	/P	Fuel Pump
	KH-24-757-03-S	1	/P	Carb Kit
	KH-24-757-01	1	/P	Carburetor Solenoid
	723-3014	1	S	Hydro Filter
	754-3084	1	S	P.T.O. Belt
	723-0462	1		Ball Joints RH
	723-0463	1		Ball Joints LH
	725-2054	1	S	Ignition Keys
	725-04227B	1	S	Ignition Switch Module
	725-04258	1	/P	P.T.O. Switch
	725-3191A	1	S	Brake Switch
	725-3164A	1	S	Reverse Switch
	725-04040	1	S	Seat Switch
	725-1648	1	S	Relay
	725-3243	1		Fuse 25 amp
	725-3278	1	S	Vacuum Solenoid
	KH-25-357-05-S	1	S	Engine Oil
	737-3121	1	/P	Transmission Fluid

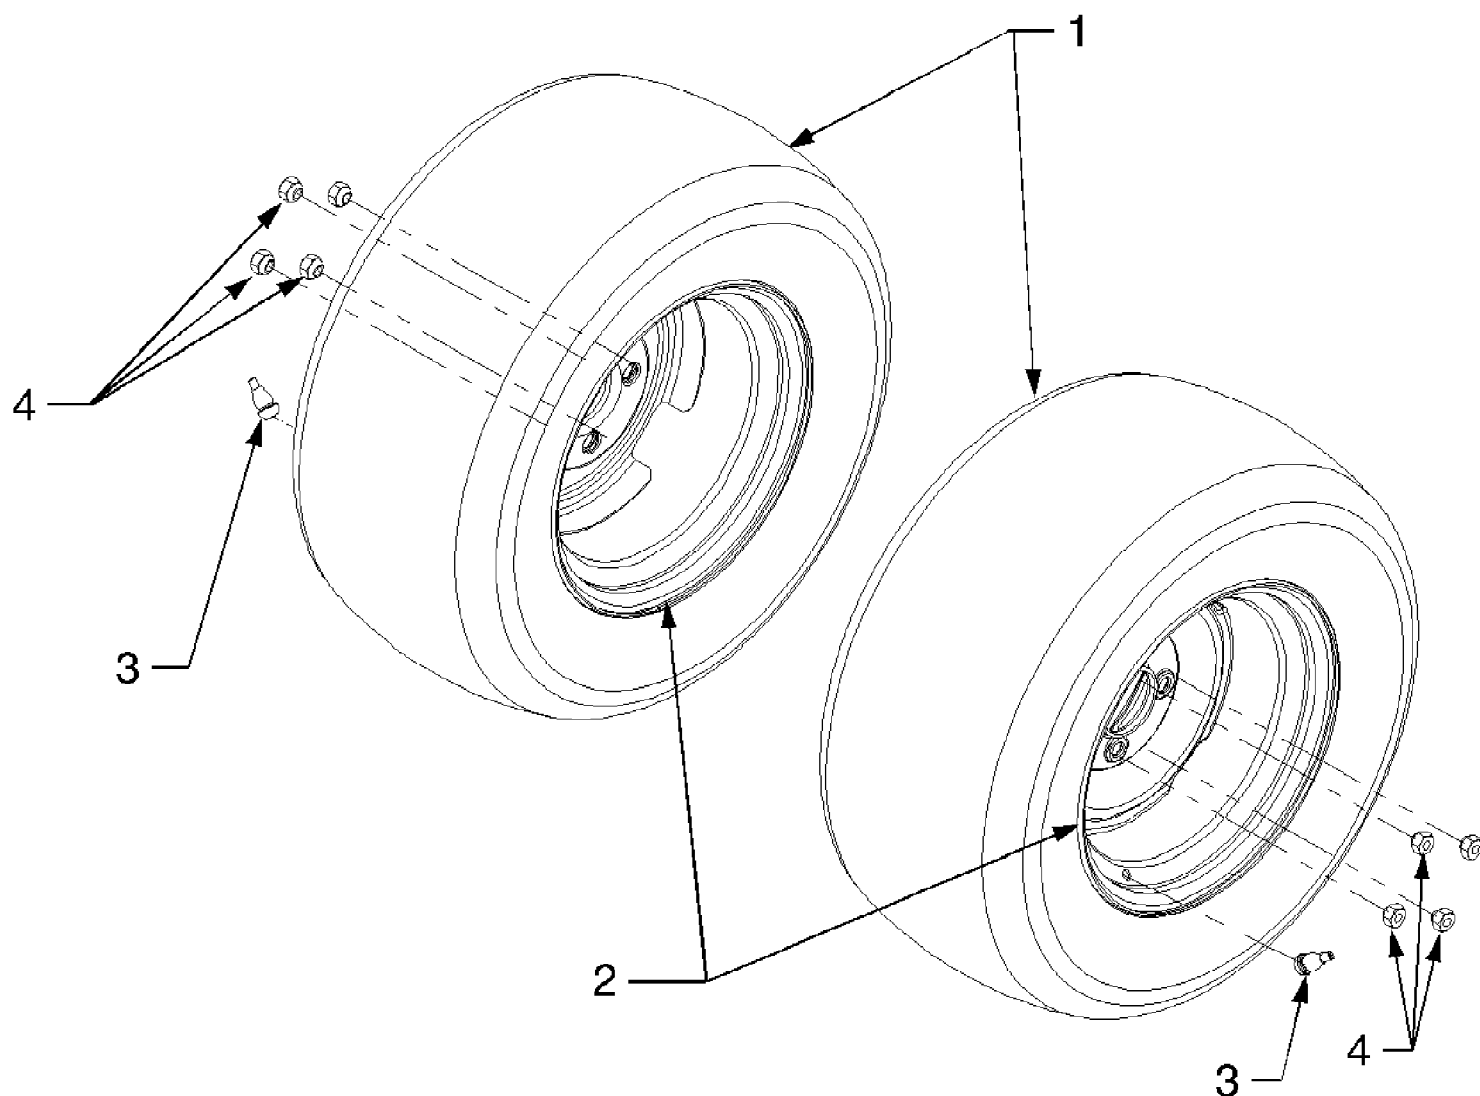 

GT3100 Tractor
Rear Wheels

Page 55 of 67


Ref #	Part Number	Qty	S/P/F	Description
1	734-3190	2	S	Tire, Turf, 23 x 9.5 - 12
2	634-3189-0499	2		Rim Assembly, Wheel
3	734-0255	2	S	Valve, Tubeless Air
4	712-3050	8	/P	Lug Nut, 7/16-14

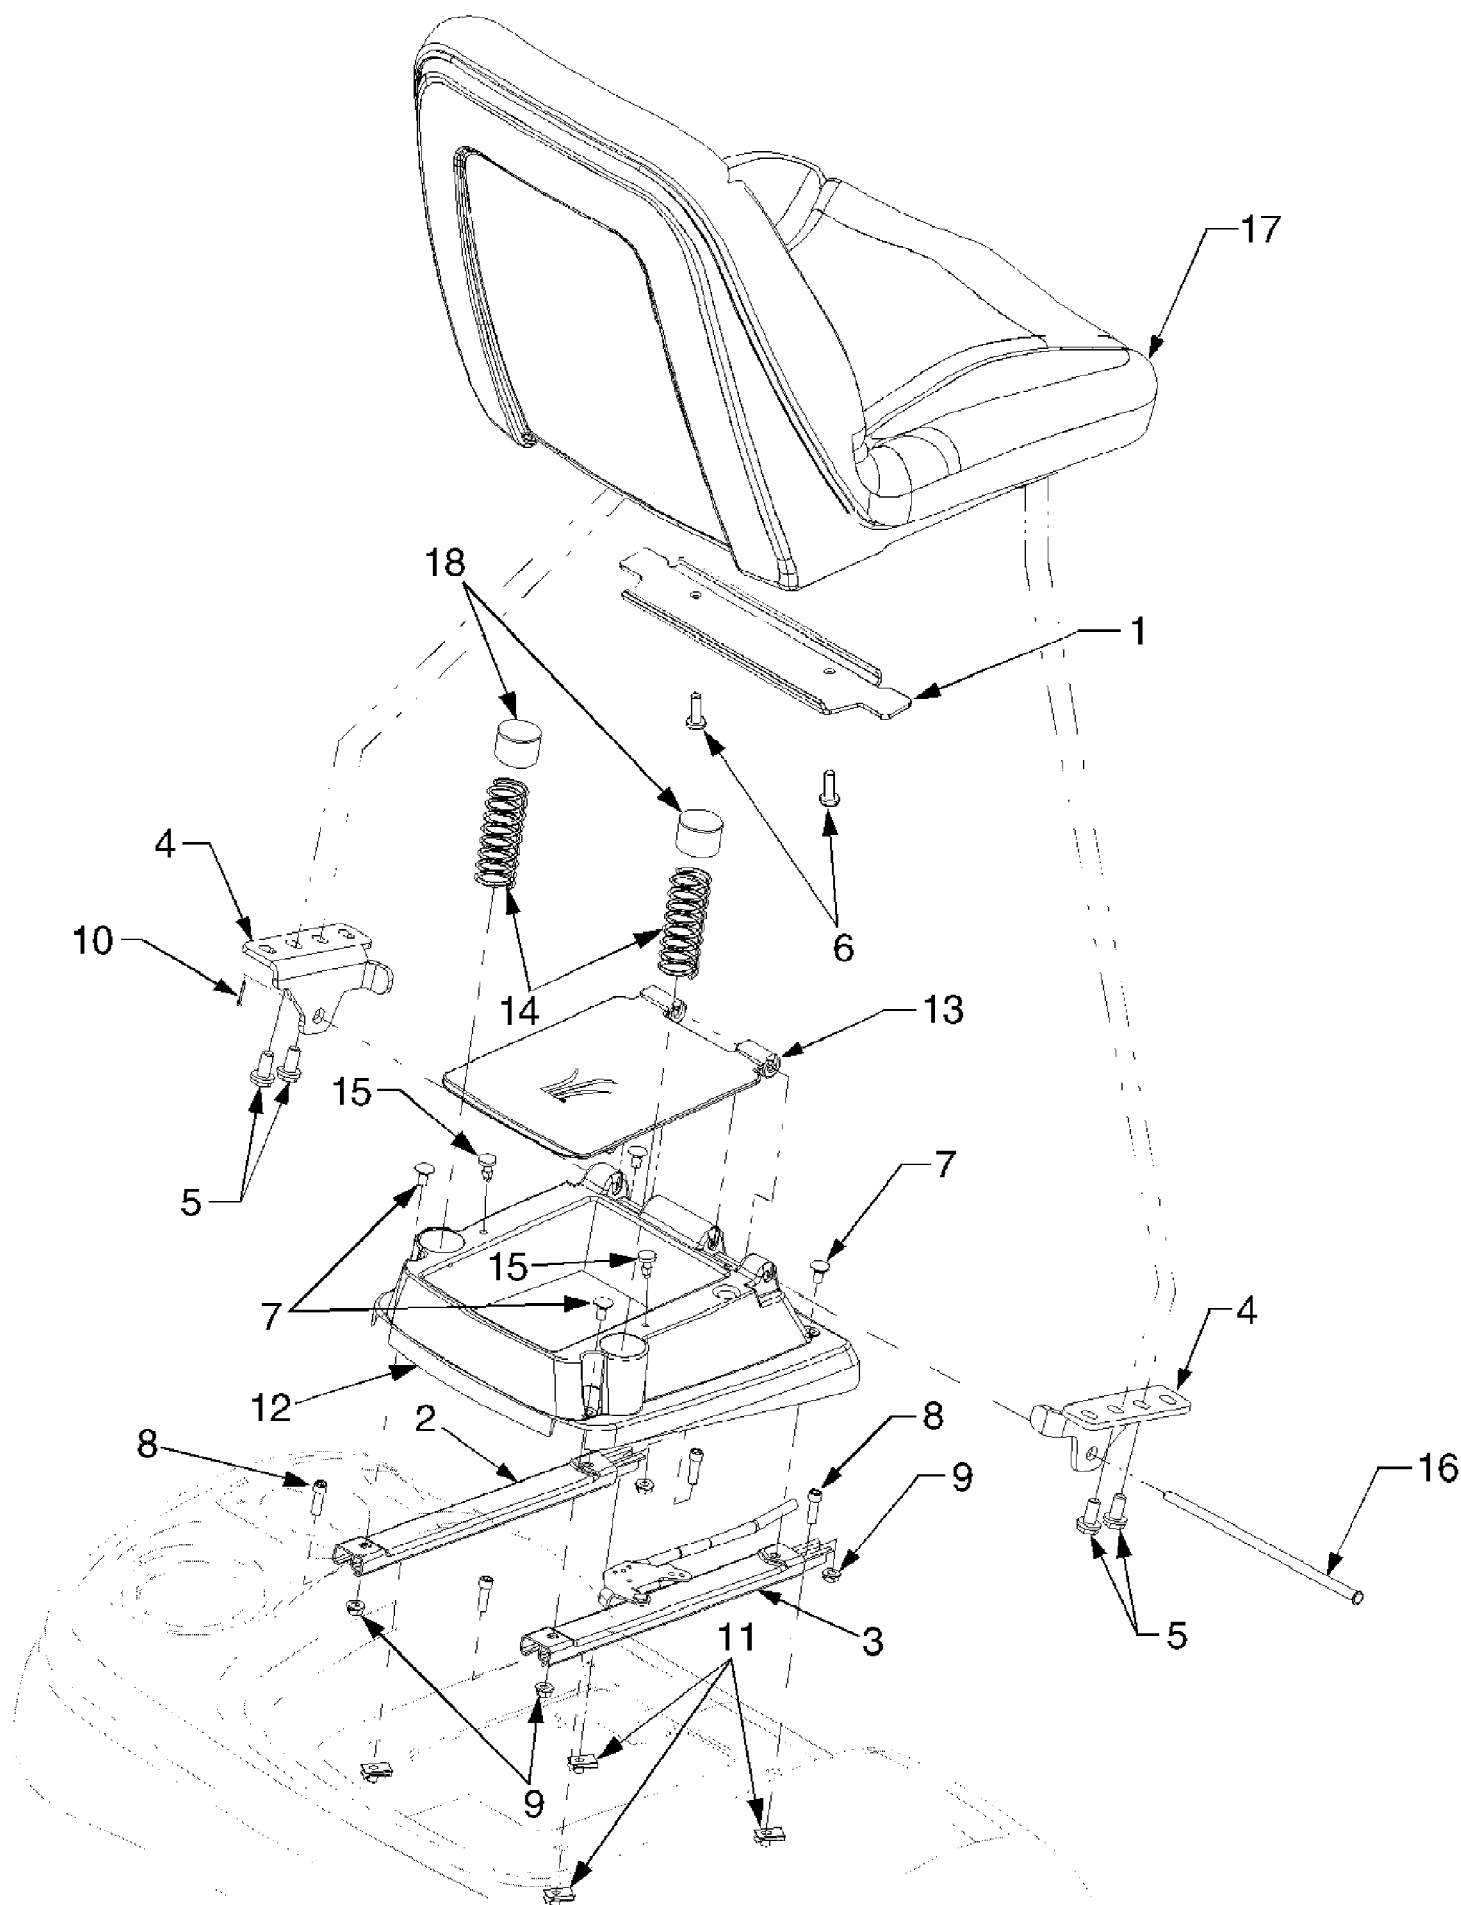 

GT3100 Tractor
Seat Assembly

Page 57 of 67


Ref #	Part Number	Qty	S/P/F	Description
1	703-05121A-0637	1		Bracket, Seat Spring Support
2	703-3208	1		Track, Seat, w/o Latch
3	703-3431	1	/P	Track, Seat, w/Latch
4	703-3888	2	S	Bracket, Seat
5	710-0759	4		Screw, Hex Wash. Hd. 5/16-18 x .625
6	710-0971	2		Screw, Phil Pan Hd. Mach 5/16-18 x 1.0
7	710-1636	4		Carriage Bolt, 5/16-1 8 x .6 2
8	710-1669	4		Screw, Pan Torx Hd. 5/16-18 x 1.0
9	712-3004A	4	/P	Nut, Hex Flange Lock, 5/16-18
10	714-0507	1	S	Pin, Cotter, 3/32 x .7 5
11	726-0211	4	S	Speed Nut, U-Type, 5/16-18
12	731-3240B	1	/P	Base, Seat
13	731-3244	1		Lid, Tlbox
14	732-1163	2		Spring, Compression
15	735-0271	2	S	Bumper
16	747-3357A	1	/P	Rod, Seat Pivot
17	757-04031	1		Seat, High Back
	777D06883	1	/P	Graphic, Reflector
	777D01782	1	/P	Graphic, USA
18	735-04028	2	S	Cap, Spring

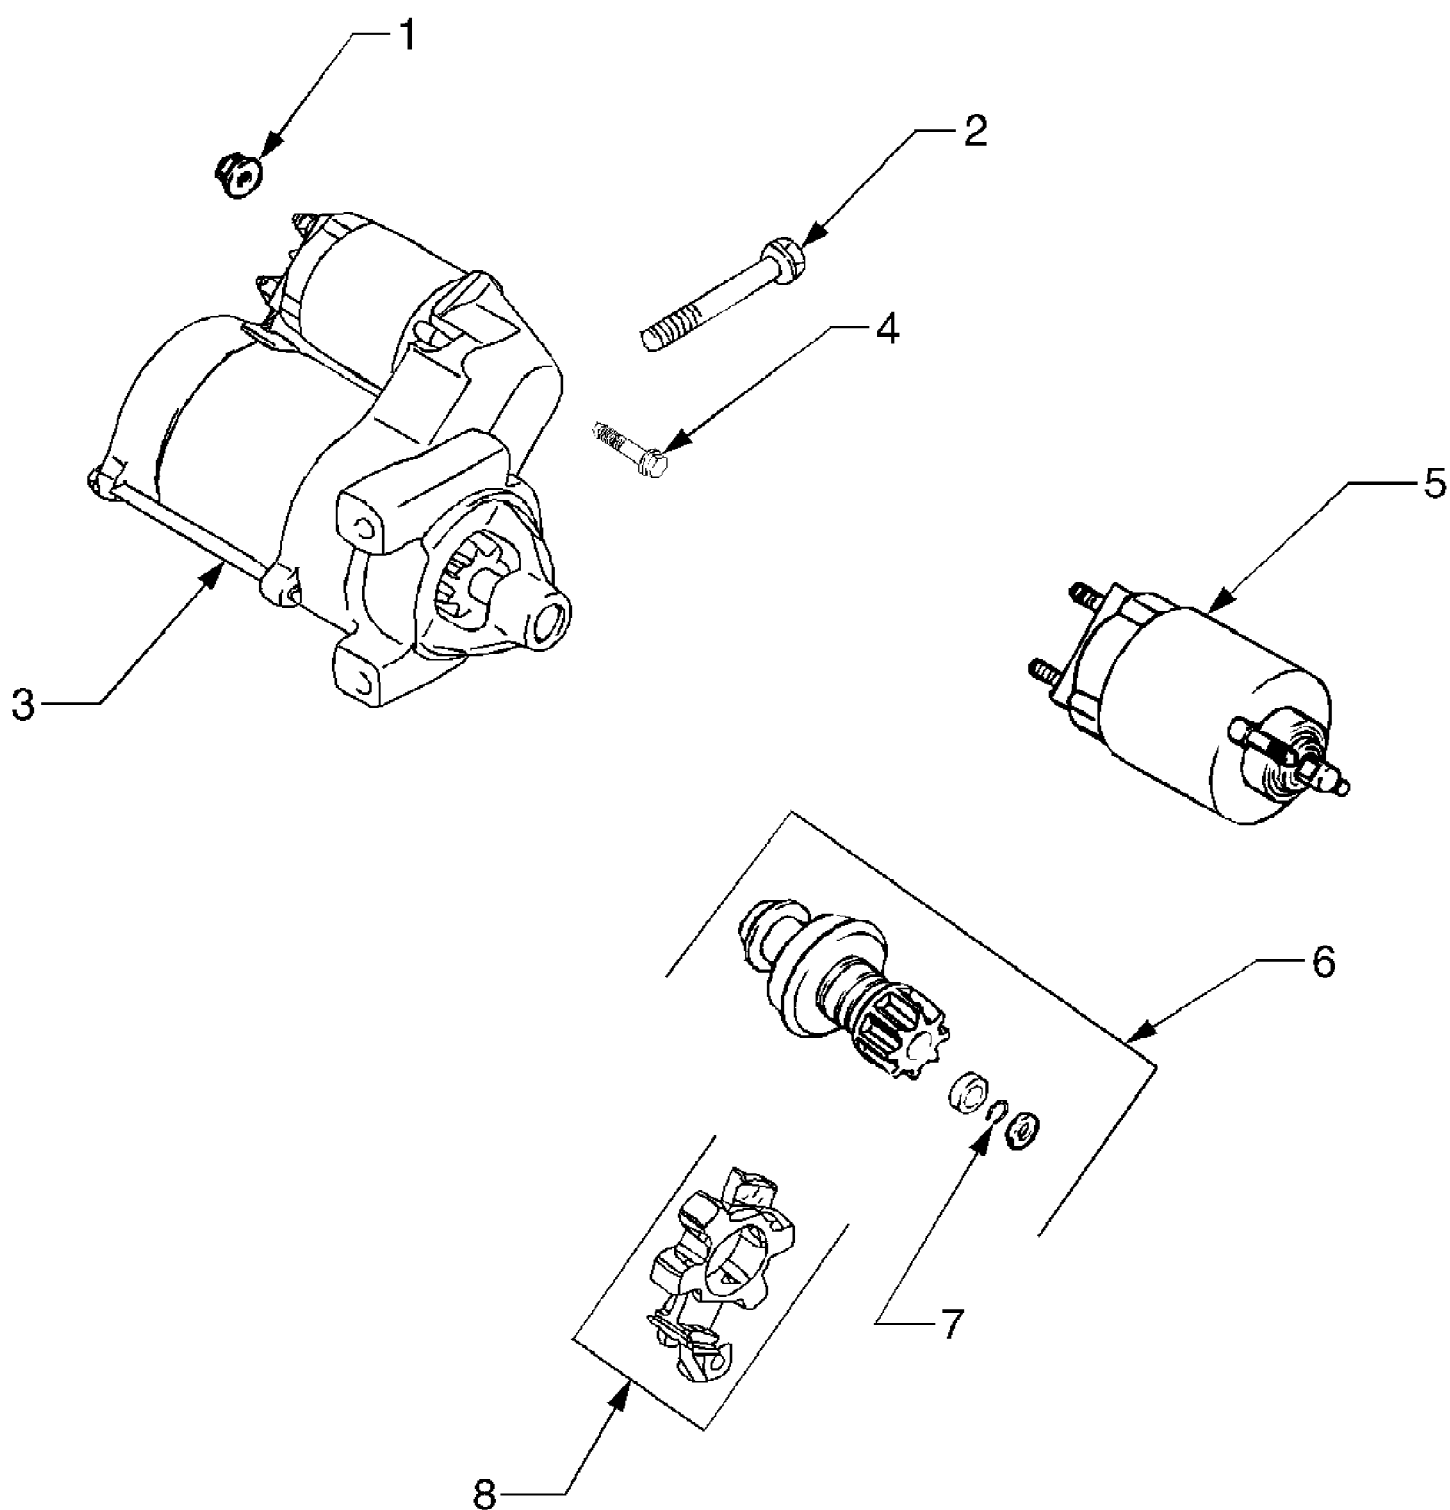 

GT3100 Tractor
Starting System

Page 59 of 67

Ref #	Part Number	Qty	S/P/F	Description
1	KH-M-0841080	1	S	Nut, Hex Flange M8 x 1.25"
2	KH-M-839080	2	S	Screw, Hex Flange M8 x 1.25 x 80
3	KH-25-098-09-S	1	S	Starter, Solenoid Shift Assembly (Includes 4-8)
4	KH-25-435-05-S	1	S	Kit, Solenoid
5	KH-25-755-33-S	1		Kit, Pinion Drive (Includes 7)
6	KH-25-221-01-S	1		Kit, Brush
7	KH-25-141-05-S	1		Ring, Retainer
8	KH-25-086-113-S	3		Screw, External Torx Hd.

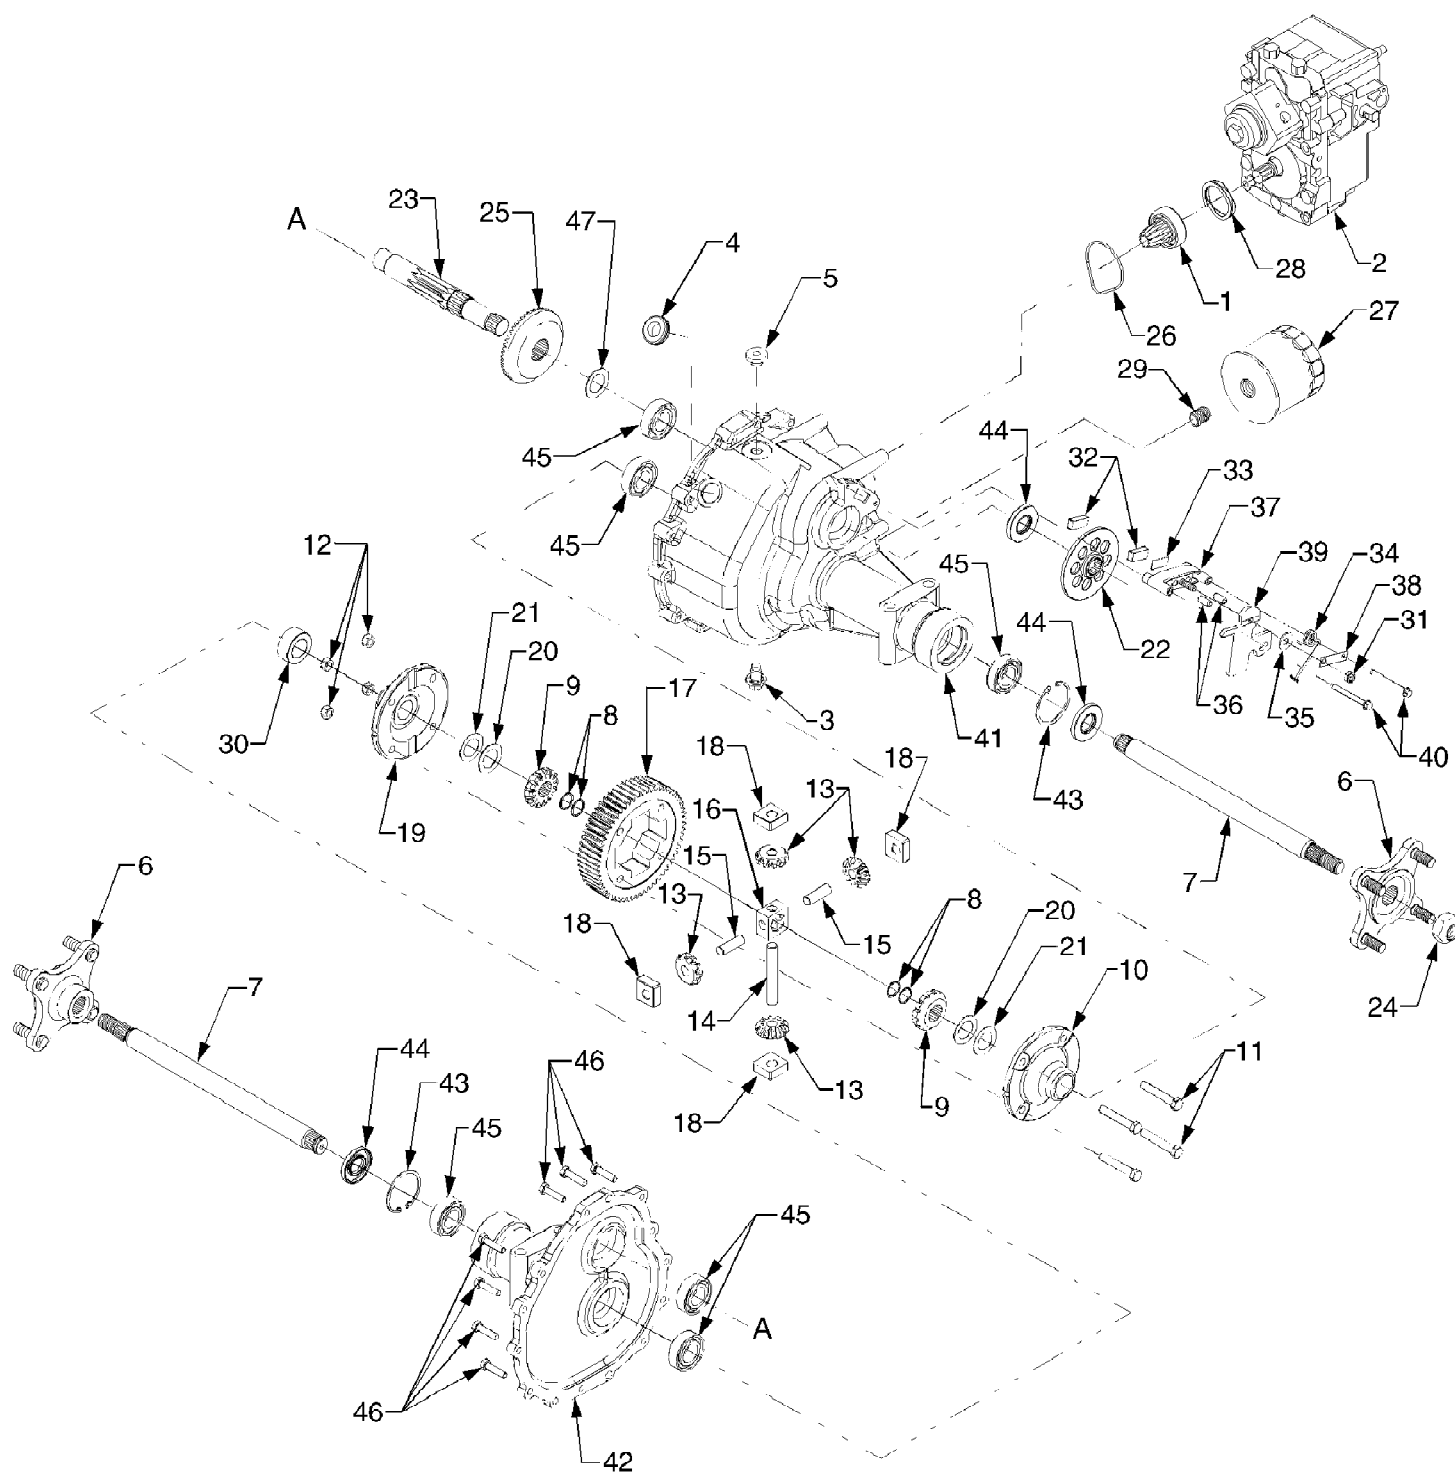 

GT3100 Tractor
Transmission - Differential 2008 & Before


Page 61 of 67

Ref #	Part Number	Qty	S/P/F	Description
	618-3236	1	S	Transmission Assembly Complete DOES NOT include Ref. Nos. 1, 2, 6, 24, 26, 27, 28 and 29.
1	617-3001	1		Gear Assembly, Pinion 13T
	741-3037	1	S	Bearing, Ball
2	618-3214	1	S	Hydrostatic Transmission Assy. NOTE: For components see separate parts breakdown.
3	710-1633	1		Plug, Drain, M14 x 1.5 x .827
4	735-0277A	1		Grommet, Rubber
5	735-0279	1		Grommet
6	618-0579A	2	/P	Hub Assembly, Wheel
7	711-1386	2		Axle Shaft,
8	716-0172	4	S	Retaining Ring
9	717-1119	2		Gear, Spur, 14T
10	719-3165	1		Housing, Diff. Cover RH
11	710-0331	4	/P	Hex Cap Screw, 3/8-24 x 2.25 GR5
12	712-3054	4	/P	Nut, Hex Lock, 3/8-24
13	717-1120	4		Gear, Differential 10T
14	717-1173	1		Shaft, Cross, .5 x 3.485
15	717-1178	2		Shaft, Cross, Special
16	717-1180	1		Differential Pinion Block
17	717-3466	1		Gear, Spur 60T
18	718-3101	4		Block, Thrust Miter
19	719-3164	1		Housing, Differential Cover LH
20	736-0420	2	S	Washer, Flat, 1.0 x 1.56 x .040
21	736-0424	2	S	Washer, Flat, 1.0 x 1.56 x .020
22	761-0215	1		Disc, Brake
23	711-1385A	1	/P	Shaft, Output 9T
24	712-1329	2	/P	Nut, Lock, 3/4-16
25	717-3449	1		Gear, Bevel 54T
26	721-0519	1		Seal, Gland O-Ring
27	723-3014	1	S	Filter, Oil
28	736-0619	1		Washer, Spring
29	737-3022	1	S	Fitting, Filter Nipple
30	750-3254	1		Spacer, Axle, 1.0 x 1.665 x .71
31	712-0273	1	S	Nut, Hex Insert Lock, 5/16-24
32	717-0678	2	S	Pad, Brake
33	717-0682	1	S	Plate, Puck
34	732-0925	1		Spring, Torsion
35	736-0371	1	/P	Washer, Flat, .343 x .88 x .062
36	741-0343	2	S	Pin, Brake Actuator
37	761-0207A	1	/P	Yoke, Brake
38	761-0208	1		Bracket, Brake Anti-Rotation
39	761-3074	1		Arm, Brake Actuator
40	710-1206	2	/P	Screw, Hex Wash. Hd. Tapp 1/4-20 x 2.375
41	619-3071A	1	S	Housing, RH
42	619-3072	1		Housing, LH
43	716-0204	2		Retaining, Ring
44	721-0523	3		Seal, Oil, 1.0 ID
45	741-3114	6		Bearing, Ball
46	710-0573	14		Screw, Hex Cap Locking 5/16-18 x 1.25 GR5
47	736-0615	1		Washer, Flat, 1.0 x 1.56 x .030

GT3100 Tractor
Transmission - Differential 2008 & Before

Page 62 of 67

Ref #	Part Number	Qty	S/P/F	Description
	759-3958	1		Sealant, Loctite Black, 5.3 oz. Tube
	737-3120	5.5	/P	Drive System Fluid Plus - Quart
	737-3121	AR	/P	Drive System Fluid Plus - Gallon

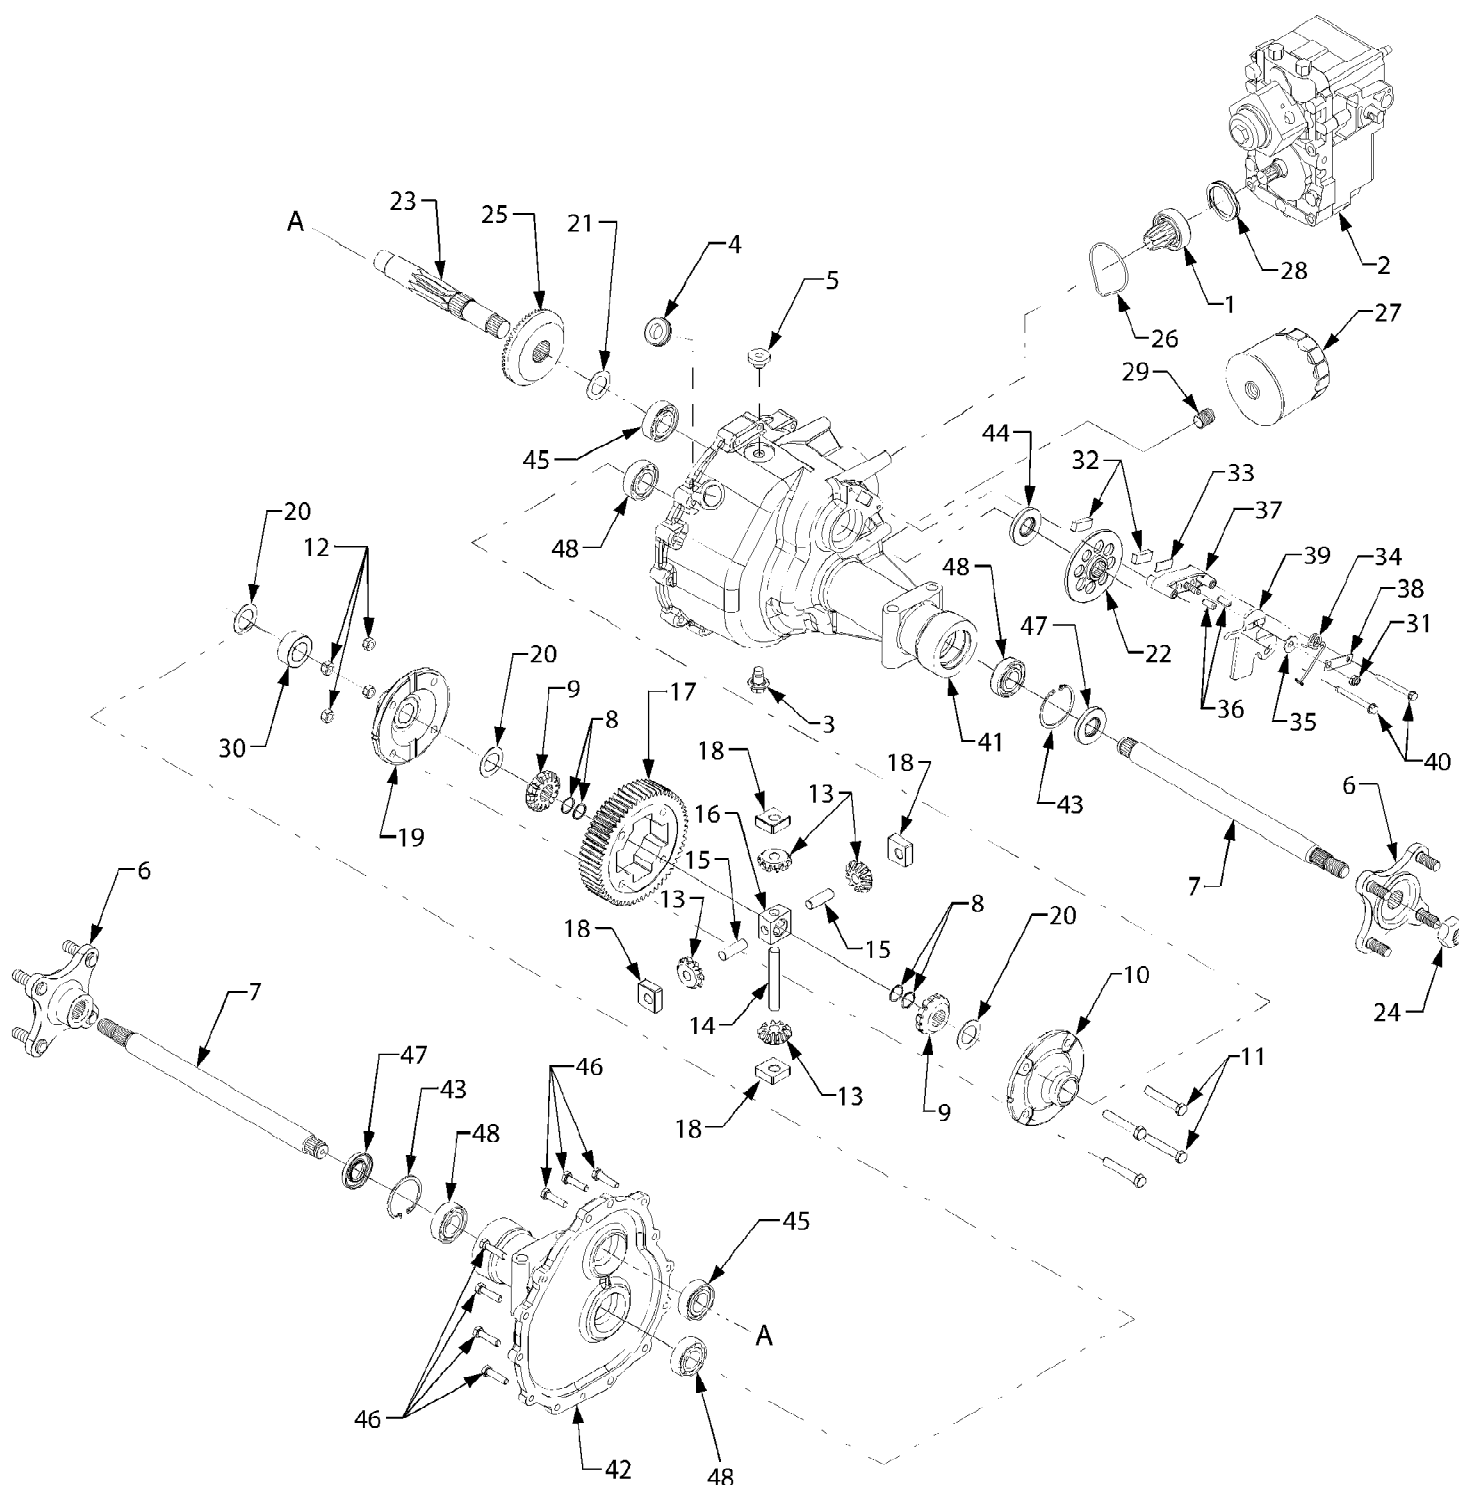 

GT3100 Tractor
Transmission - Differential 2009 & After

Page 64 of 67

Ref #	Part Number	Qty	S/P/F	Description
1	617-3001	1		Gear Assembly, Pinion 13T
1	941-3037	1	/P	Bearing, Ball
2	918-3214	1	/P	Hydrostatic Transmission Assy. NOTE: For components see separate parts breakdown.
3	710-1633	1		Plug, Drain, M14 x 1.5 x .827
4	735-0277A	1		Grommet, Rubber
5	735-0279	1		Grommet
6	618-3210A	2	/P	Hub Assembly, Wheel
7	911-1308	2	/P	Axle Shaft, 1.181 x 15.08
8	916-0172	4	/P	Retaining Ring
9	717-1119	2		Gear, Spur, 14T
10	619-3086	1		Housing, Diff. Cover RH
11	710-0331	4	/P	Hex Cap Screw, 3/8-24 x 2.25 GR5
12	712-3054	4	/P	Nut, Hex Lock, 3/8-24
13	717-1120	4		Gear, Differential 10T
14	717-1173	1		Shaft, Cross, .5 x 3.485
15	717-1178	2		Shaft, Cross, Special
16	717-1180	1		Differential Pinion Block
17	717-3466	1		Gear, Spur 60T
18	718-3101	4		Block, Thrust Miter
19	719-3142	1		Housing, Differential Cover LH
20	736-0558	2		Washer, Flat, 1.187 x 1.56 x .062
21	736-0615	1		Washer, Flat, 1.0 x 1.56 x .030
22	761-0215	1		Disc, Brake
23	711-1385A	1	/P	Shaft, Output 9T
24	712-0682	2		Nut, Lock, 7/8-14
25	717-3449	1		Gear, Bevel 54T
26	721-0519	1		Seal, Gland O-Ring
27	923-3014	1	/P	Filter, Oil
28	736-0619	1		Washer, Spring
29	937-3022	1	/P	Fitting, Filter Nipple
30	750-3238	1		Spacer, Axle, 1.188 x 1.665 x .67
31	912-0273	1	/P	Nut, Hex Insert Lock, 5/16-24
32	917-0678	2	/P	Pad, Brake
33	917-0682	1	/P	Plate, Puck
34	732-0925	1		Spring, Torsion
35	736-0371	1	/P	Washer, Flat, .343 x .88 x .062
36	941-0343	2	/P	Pin, Brake Actuator
37	761-0207A	1	/P	Yoke, Brake
38	761-0208	1		Bracket, Brake Anti-Rotation .
39	761-3074	1		Arm, Brake Actuator
40	710-1206	2	/P	Screw, Hex Wash. Hd. Tapp 1/4-20 x 2.375
41	919-3066A	1	/P	Housing, RH
42	619-3067	1		Housing, LH
43	716-0180	2		Retaining, Ring
44	721-0523	1		Seal, Oil, 1.0 ID
45	741-3114	2		Bearing, Ball
46	710-0573	14		Screw, Hex Cap Locking .5/16-18 x 1.25 GR5
47	921-3020A	2	/P	Seal, Oil, 1.18 ID
48	941-3033A	4	/P	Bearing, Ball
	759-3958	1		Sealant, Loctite Black, 5.3 oz. Tube Not shown


GT3100 Tractor
Transmission - Differential 2009 & After

Page 65 of 67

Ref #	Part Number	Qty	S/P/F	Description
	737-3120	1	/P	Drive System Fluid Plus - Quart Not shown
	737-3121	1	/P	Drive System Fluid Plus - Gallon Not shown
	918-04779	1	/P	Transmission Assembly Complete DOES NOT include Ref. Nos. 1, 2, 6, 24, 26-29
	921-04019	1	/P	Plug, Oil Not shown

GT3100 Tractor
Transmission Mounting And Neutral Linkage

 Page 66 of 67

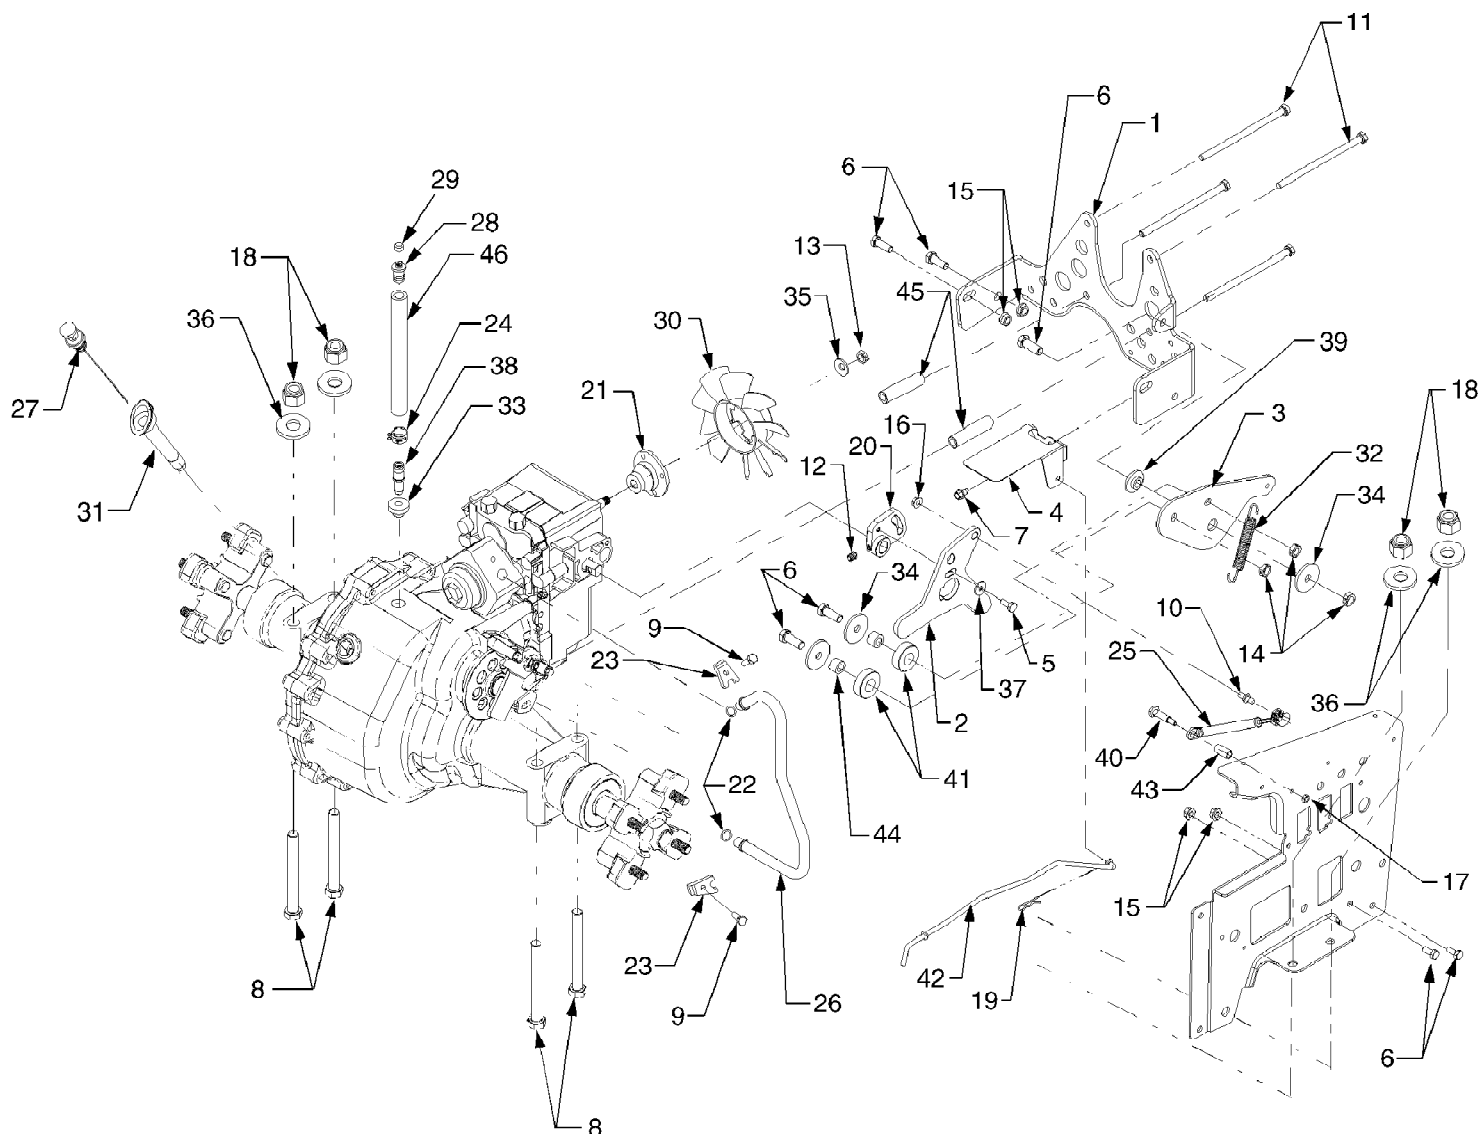

GT3100 Tractor
Transmission Mounting And Neutral Linkage

Page 67 of 67

Ref #	Part Number	Qty	S/P/F	Description
1	603-0698	1		Bracket, Torque
2	703-3478	1		Plate, Hydro Neutral Return
3	703-3477	1		Link, Neutral Return Bearing
4	703-3187A	1	S	Spring Plate, Hydro Bypass
5	710-0433	1	/P	Screw, Hex Cap, 1/4-20 x .625 GR5 Lock
6	710-0514	7	/P	Screw, Hex Cap, 3/8-16 x 1.0 GR5
7	710-0599	1	/P	Screw, Hex Wash. Hd. Tapp, 1/4-20 x .5
8	710-0465	4		Screw, Hex Cap, 1/2-20 x 4.5 GR5
9	710-3015	2	/P	Screw, Hex Cap, 1/4-20 x .75 GR5
10	710-3170	1		Ball Screw, 5/16-18 x .56
11	710-1506	4		Screw, Hex Wash. Hd. Tapp, 5/16-18 x 5.5 GR5
12	710-3242	1		Screw, Set, 5/16 x .5
13	712-3059	1	/P	Nut, Hex Top Lock Jam, 1/2-20
14	712-0266	3	S	Nut, Hex Ctr. Lock Jam, 3/8-16
15	712-0431	4	S	Nut, Hex Flange Lock, 3/8-16
16	712-3004A	1	/P	Nut, Hex Flange Lock, 5/16-18
17	712-3006	1	/P	Nut, Hex, 1/4-20
18	712-3058	4	S	Nut, Hex Insert Lock, 1/2-20
19	714-0104	1	S	Pin, Internal Cotter
20	718-3097	1		Arm, Hydro
21	748-3093	1		Adapter, Pump
22	721-0459	2		O-Ring, .426 ID x .566 OD x .070
23	726-0295	2		Clamp, Tube
24	726-0324	1	S	Clamp, Hose
25	727-3090	1	/P	Cylinder, Damper
26	727-3139	1		Tube, Hydro Pickup
27	727-3148	1		Dipstick, Transmission
28	731-1480	1	/P	Plastic Vent
29	731-1481	1		Vent Cap
30	731-3297	1		Fan, Pump
31	731-3245	1		Holder, Dipstick
32	732-0429A	1	S	Spring, Extension
33	735-0279	1		Grommet
34	736-0227	3	S	Washer, Flat, .390 x 1.5 x .1
35	736-0253	1	S	Washer, Bell, .5 x 1.0 x .05
36	736-3019	4		Washer, Flat, .531 x 1.062 x .134
37	736-3090	1	/P	Washer, Flat, .26 x .72 x .06
38	737-3092	1		Fitting, Tube
39	738-0347	1	S	Spacer, Shoulder
40	738-0572	1	S	Shoulder Bolt
41	741-0155	2	S	Bearing, Ball
42	747-3424	1		Rod, Pump Bypass
43	750-0434	1	/P	Spacer, .375 x .5 x 1.02
44	750-0497	2		Spacer, .375 x .624 x .445
45	750-3212	2		Spacer, Hydro, .3223 x .60 x 2.44
46	751-0588-8	8 in.		Fuel Line