


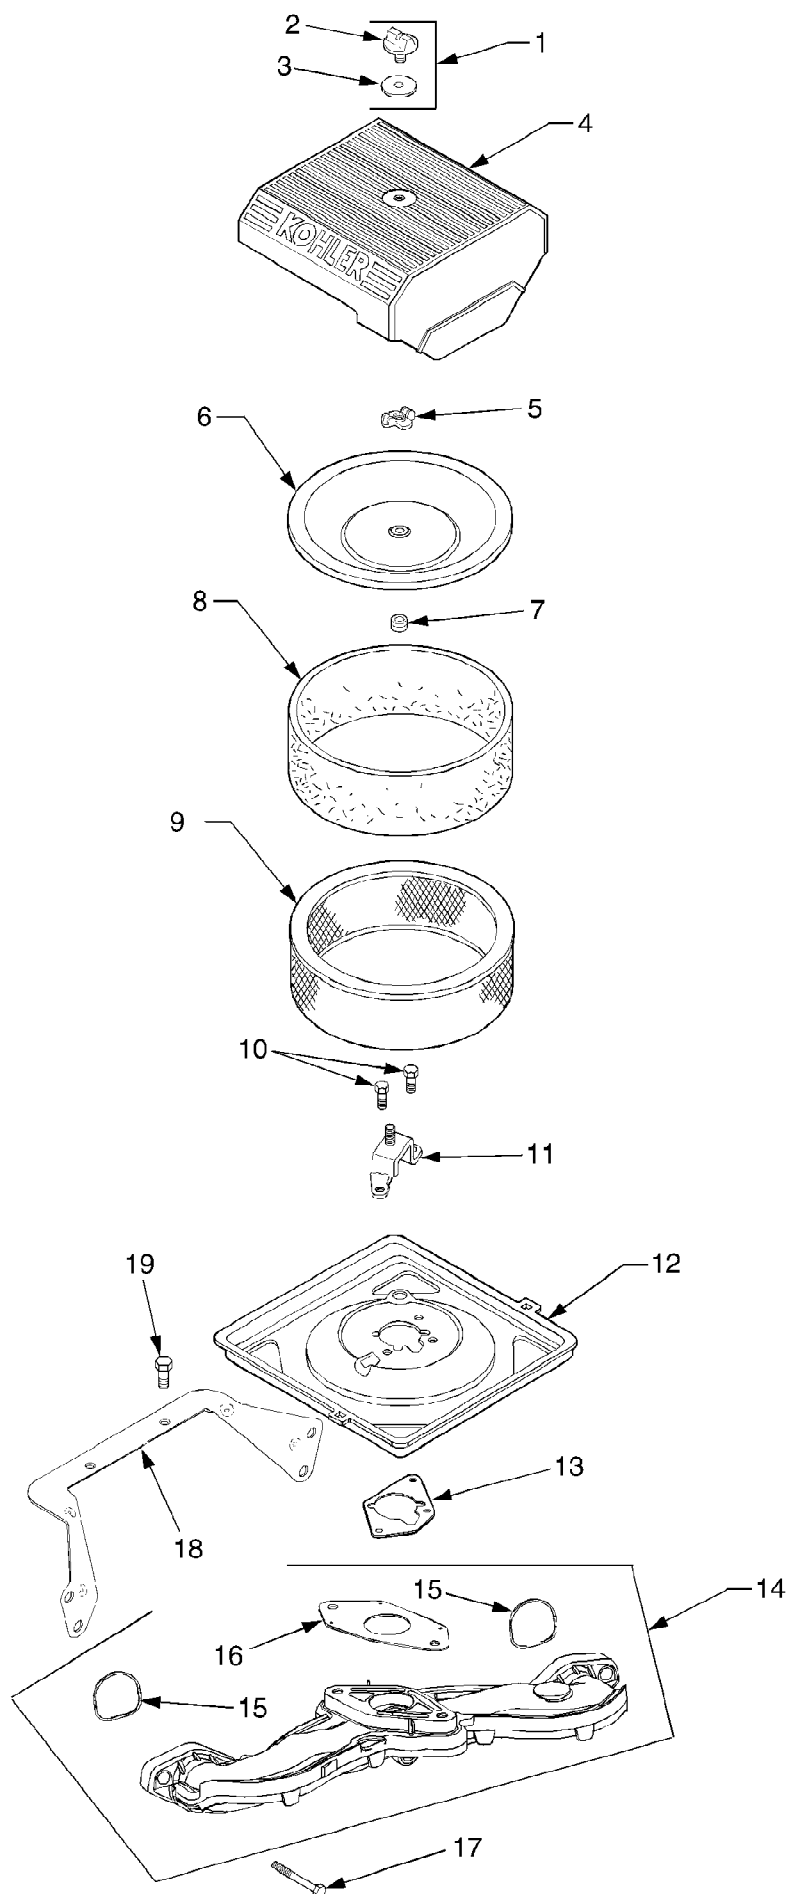


5252 Tractor
Air Intake

Page 2 of 70

Ref #	Part Number	Qty	S/P/F	Description
1	KH-54-755-01-S	1	/P	Kit, Knob w/Seal (Incl. Ref #2,3)
2	KH-25-341-04-S	1	/P	Knob, Cover
3	KH-24-153-20-S	1		Seal, Air Cleaner Cover Knob
4	KH-24-096-69-S	1	/P	Cover, Air Cleaner
5	KH-12-100-01	1	/P	Wing Nut
6	KH-24-096-01	1	/P	Cover, Inner Air Cleaner
7	KH-230046	1	/P	Seal, Inner Air Cleaner
8	KH-24-083-05-S	1	S	Precleaner, Element, 71mm deep
9	KH-24-083-03-S	1	S	Element, Air Cleaner, 74mm deep
10	KH-24-086-53-S	3		Screw, Hex Flange, M6 x 1.0 x16
11	KH-24-126-88-S	1	/P	Bracket, Air Cleaner Base
12	KH-24-094-37-S	1		Base, Air Cleaner
13	KH-24-041-06	1	/P	Gasket, Air Cleaner Base
14	KH-24-164-54-S	1	S	Manifold, Intake (Includes Ref. Nos. 15 and 16)
15	KH-24-153-27-S	2	/P	O-Ring, Intake Manifold
16	KH-24-041-53-S	1		Gasket, Carburetor
17	KH-M-651040-S	4		Screw, Hex Flange, M6 x 1.0 x 40
18	KH-24-126-130-S	1		Bracket, Air Cleaner Base
19	KH-M-0545010	2	/P	Screw, Hex Flng, M5 x 0.8 x 10

5252 Tractor
Battery and Electrical

Page 3 of 70

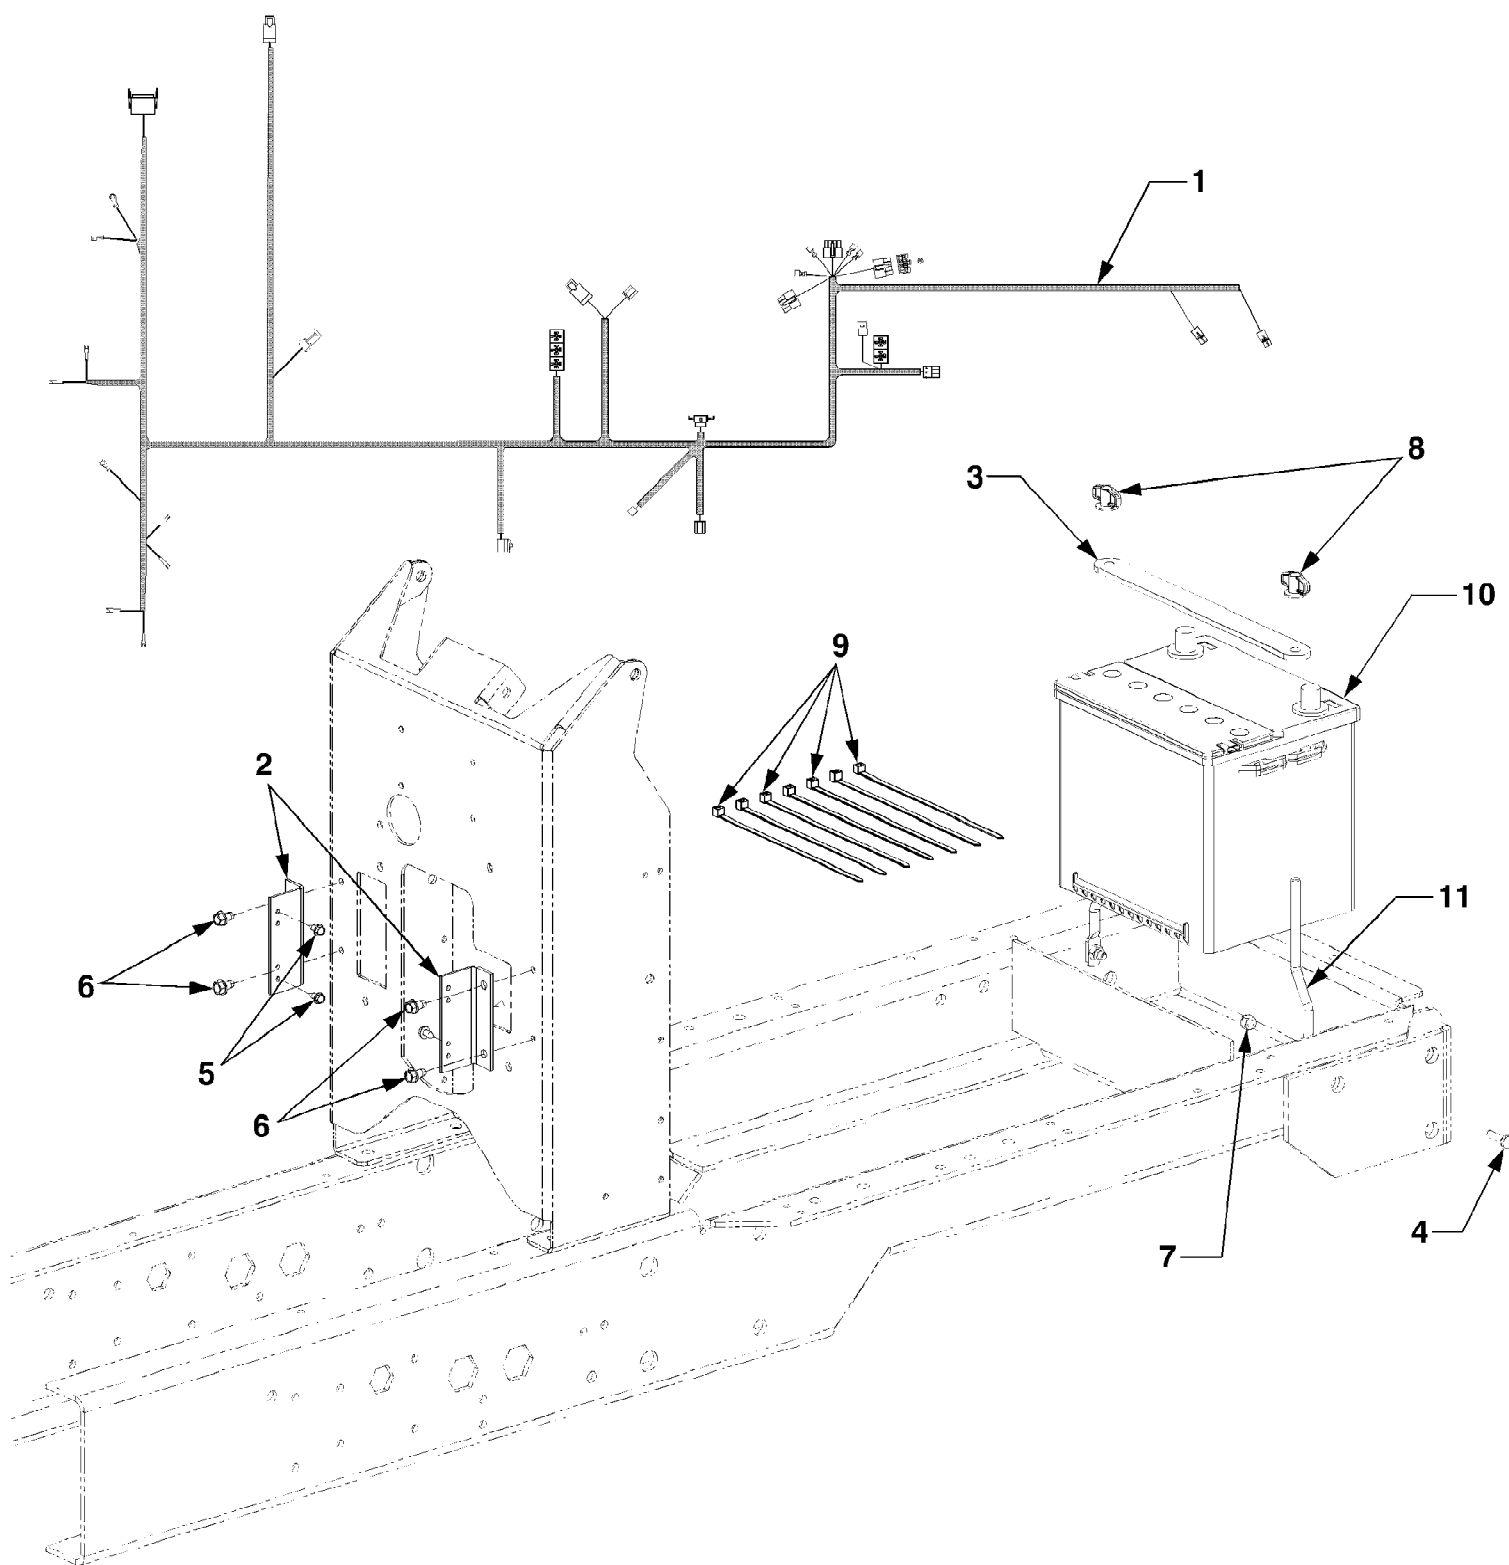


5252 Tractor
Battery and Electrical

Page 4 of 70

Ref #	Part Number	Qty	S/P/F	Description
1	629-04128	1		Harness, Main Wire
2	703-05695-0637	2		Bracket, Relay Mtg.
3	703-4104-0637	1	/P	Strap, Battery Holddown
4	710-0206	2	/P	Screw, Hex Cap, 1/4-10 x .875 GR5
5	710-0224	3	S	Screw, Hex Wash Hd. Tapp #10-16 x .5
6	710-0599	4	/P	Screw, Hex Wash Hd. Tapp 1/4-20 x .5
7	712-0324	2	/P	Nut, Hex Nylon Insert Lock, 1/4-20
8	712-0421	2		Nut, Wing w/Bell Washer, 5/16-18
9	725-0157	7	/P	Tie, Cable
10	725-3174	1	S	Battery, 500 cca Dry
11	747-3433	2		Rod, Battery Holddown

5252 Tractor
Blower Housing and Baffles

Page 5 of 70

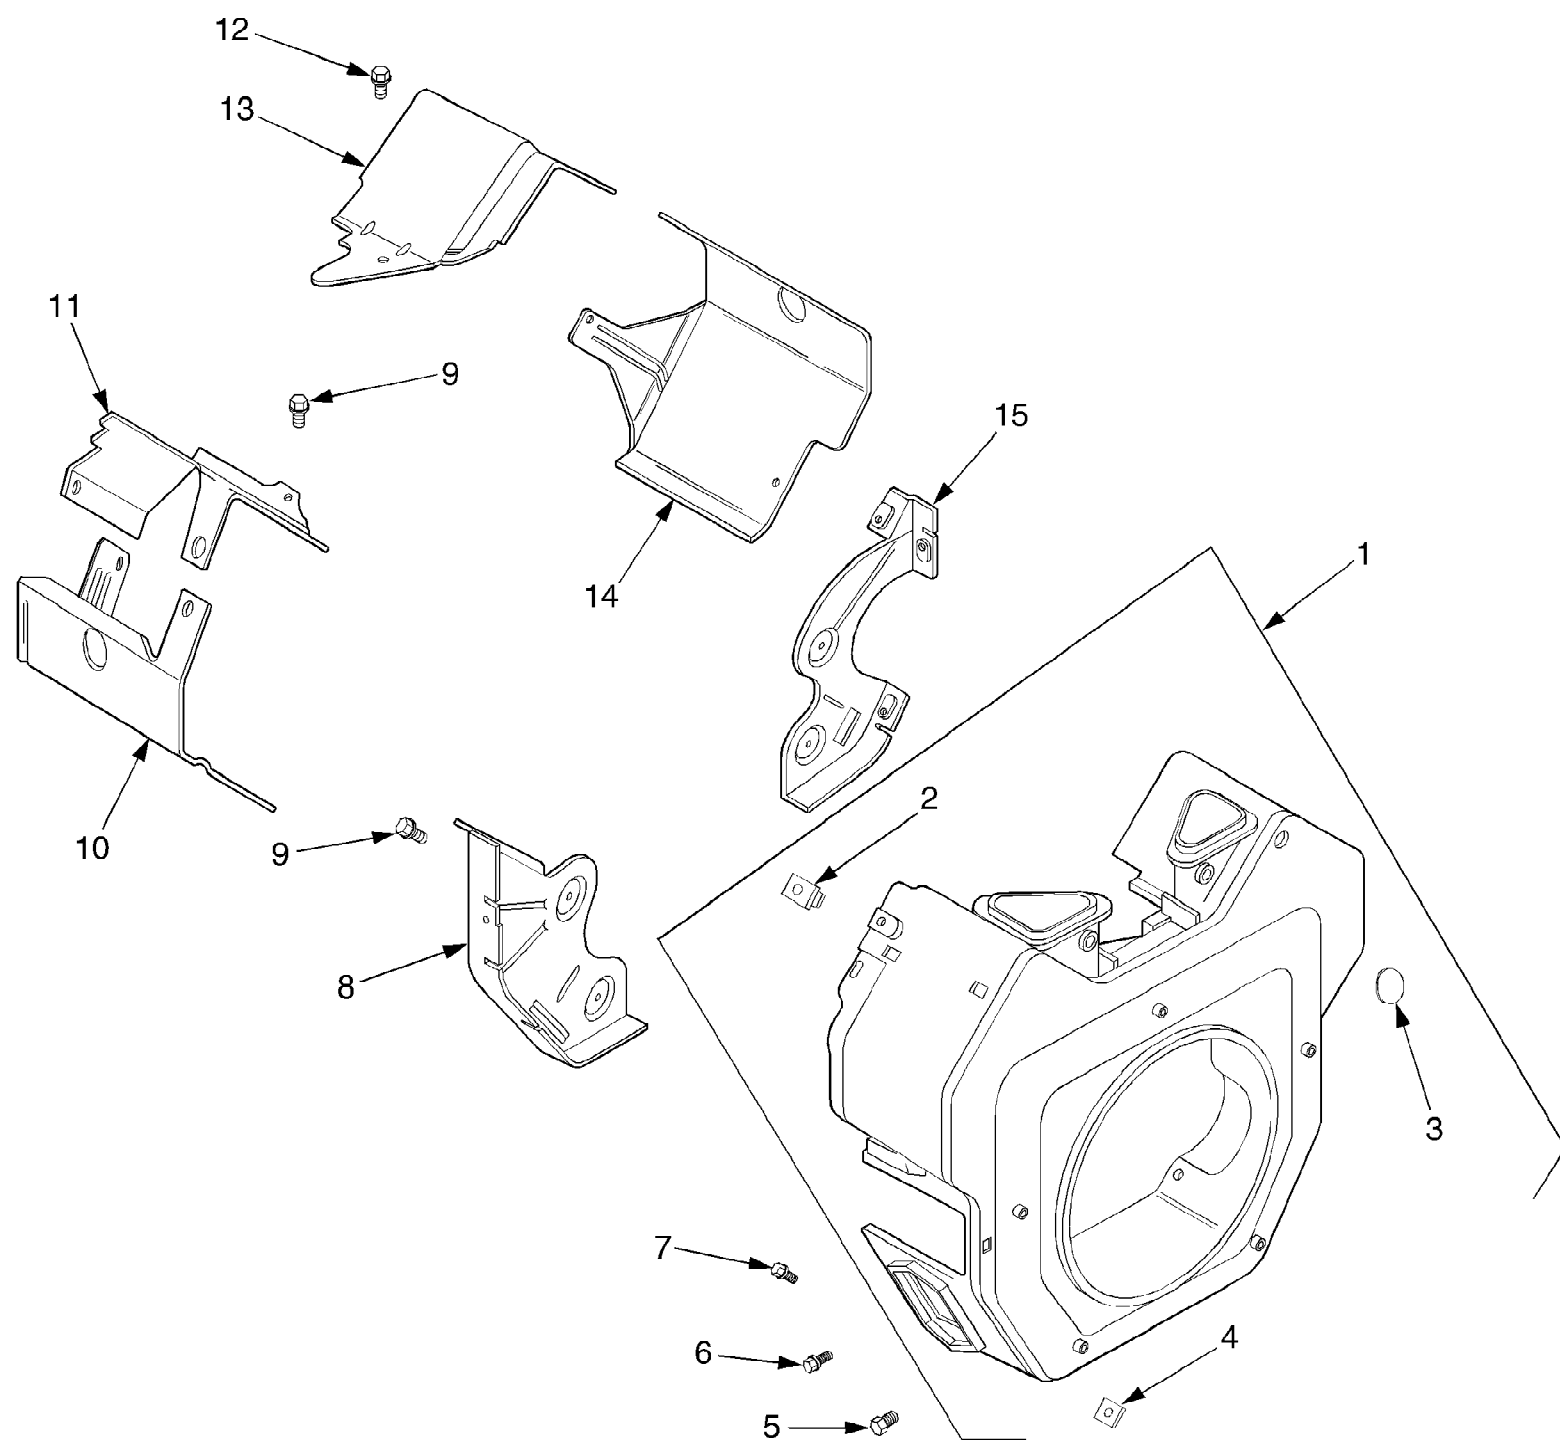


5252 Tractor
Blower Housing and Baffles

Page 6 of 70

Ref #	Part Number	Qty	S/P/F	Description
1	KH-24-027-175-S	1	/P	Housing, Blower (Incl. Ref #2-4)
2	KH-24-100-02	2		Nut, Plastic
3	KH-25-139-16	1		Plug, Button, 9/16
4	KH-24-100-01	3		Nut, Plastic
5	KH-M-551016-S	1		Screw, Hex Flange, M5 x 0.8 x 16
6	KH-M-545016-S	3	/P	Screw, Hex Flange, M5 x 0.8 x 16
7	KH-M-545020-S	4		Screw, Hex Flange, M5 x 0.8 x 20
8	KH-24-146-18-S	1		Plate, Backing - #2 Side
9	KH-M-645016-S	6	/P	Screw, Hex Flange, M6 x 1.0 x 16
10	KH-24-063-20	1	/P	Baffle, Cylinder Barrel - #2 Side
11	KH-24-063-70-S	1		Baffle, Valley - #2 Side
12	KH-M-0545010	2	/P	Screw, Hex Flange, M5 x 0.8 x 10
13	KH-24-063-59-S	1		Baffle, Valley - #1 Side
14	KH-24-063-58-S	1	S	Baffle, Cylinder Barrel - #1 Side
15	KH-24-146-20-S	1	/P	Plate, Backing - #1 Side

5252 Tractor Controls

Page 7 of 70

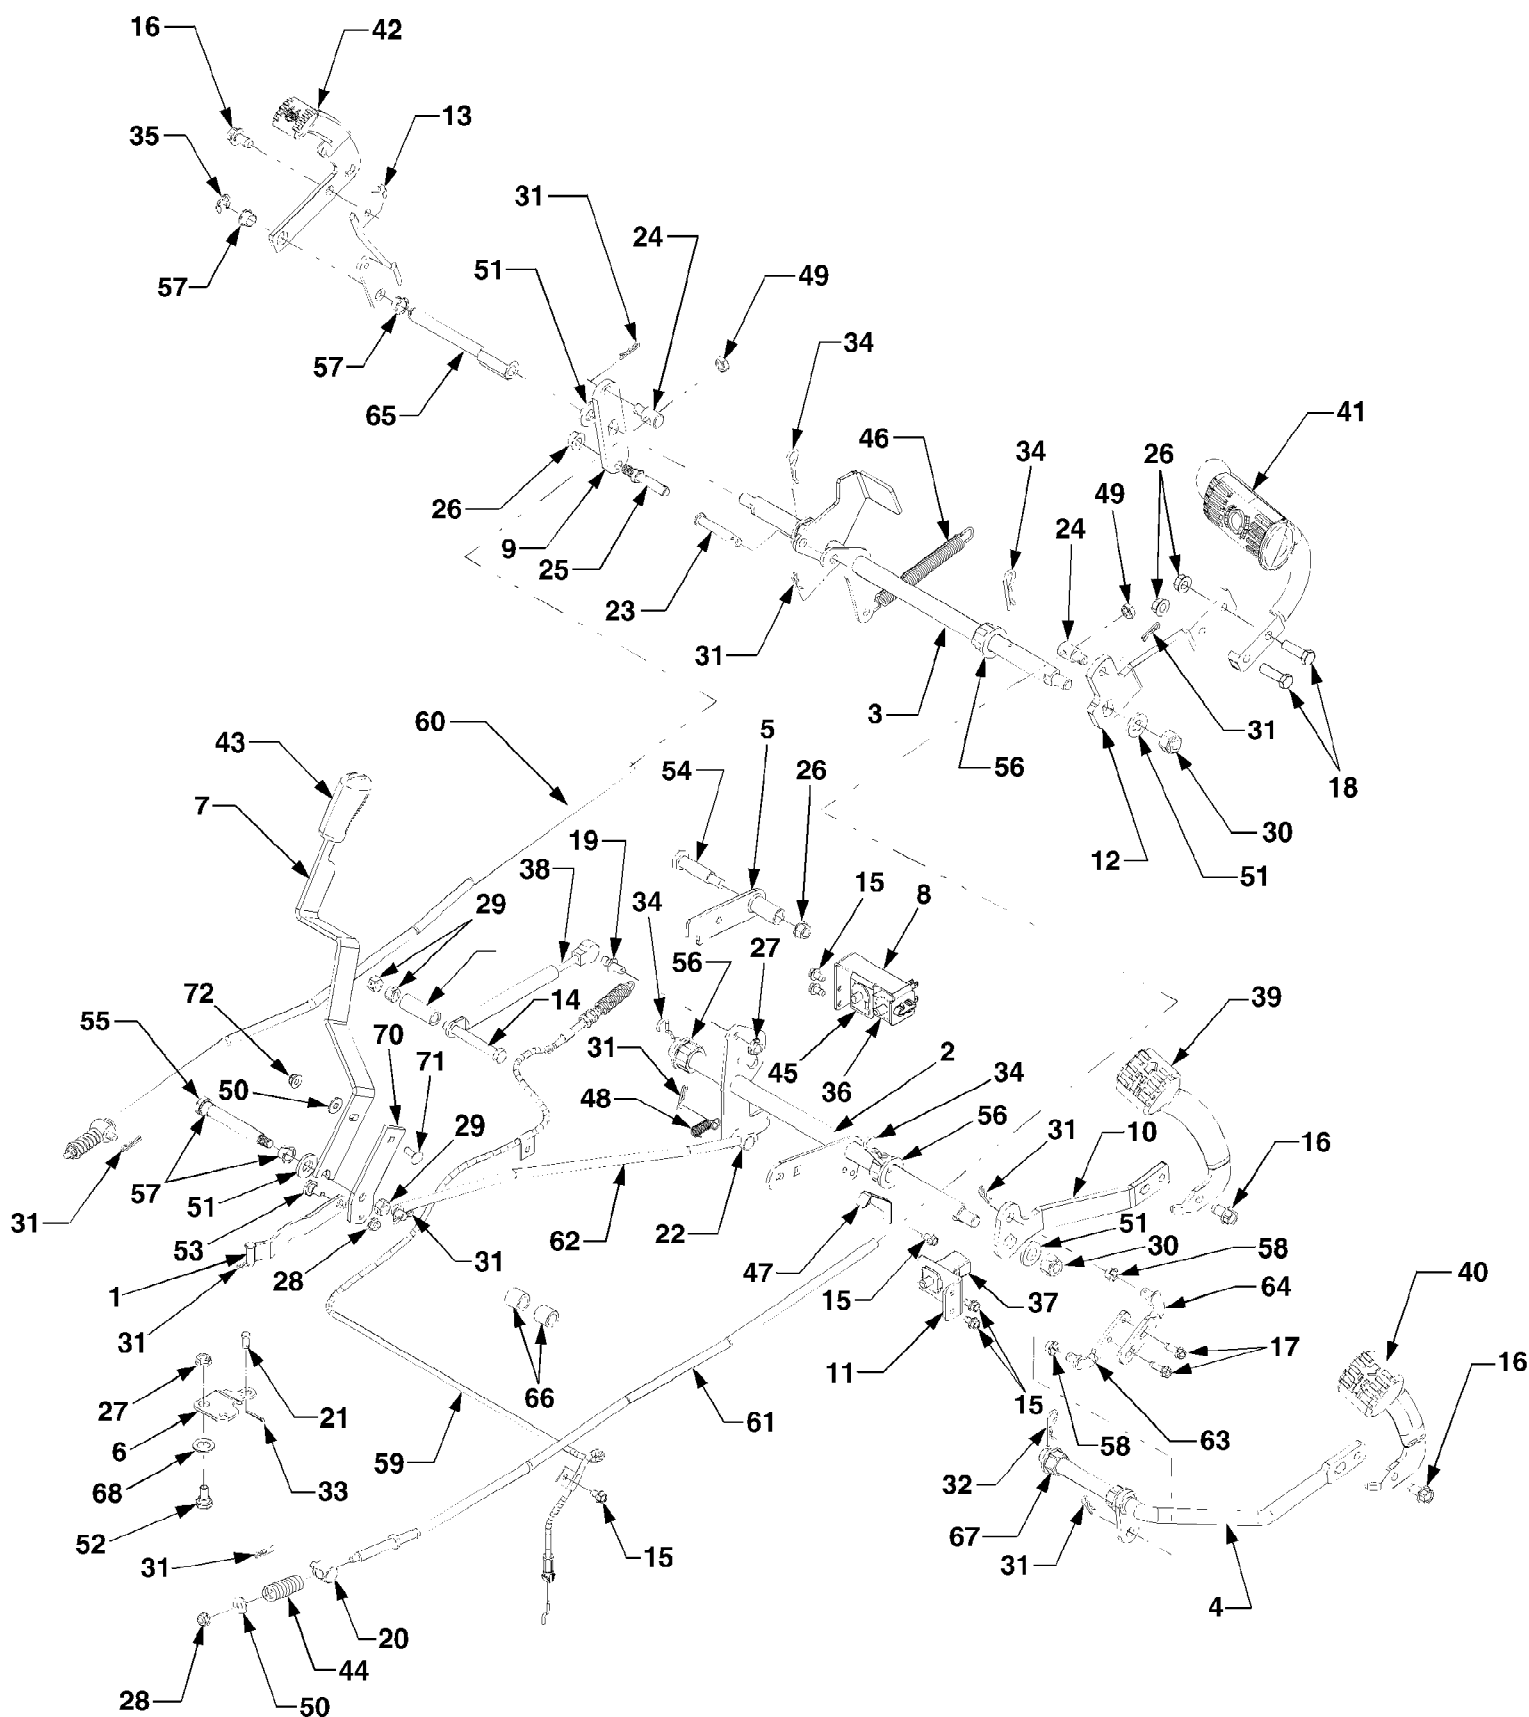

5252 Tractor
Controls

Page 8 of 70

Ref #	Part Number	Qty	S/P/F	Description
1	603-04018	1		Link, Hi-Lo
2	603-0945	1		Shaft Assembly, Pedal
3	603-04273	1		Shaft Assembly, Brake
4	603-0947	1		Shaft Assembly, Reverse
5	603-0948A	1		Link Assembly, Parking Brake ..
6	703-05039	1		Link, Hi-Lo Pivot
7	703-05666	1		Handle, Hi-Lo Shift
8	703-05674	1	S	Bracket, Switch
9	703-4105	1		Lever, Brake
10	703-3012	1		Link, Pedal Mounting
11	703-3152	1		Bracket, Reverse Switch
12	703-3156A	1		Link, Brake Pedal
13	703-3183	1		Bracket, Pedal Brace
14	710-0521	1	/P	Screw, Hex Cap 3/8-16 x 3.0 GR8
15	710-0599	6	/P	Screw, Hex Wash Hd Tapp 1/4-20 x .5
16	710-0623	3	/P	Screw, Hex Wash Hd Tapp 3/8-16 x .75
17	710-0642	2	/P	Screw, Hex Wash Hd Tapp 1/4-20 x .75
18	710-3005	2	/P	Screw, Hex Cap 3/8-16 x 1.25GR5
19	710-3170	1		Stud, Cylinder, 5/16-18
20	711-04038	2	S	Ferrule, Brake
21	711-0701	1	S	Pin, Clevis, .25 x .5
22	711-3397	1		Ferrule, 3/8-24 x .37
23	711-0679A	1	/P	Pin, Clevis, 3/8 x 2.015
24	711-0723A	2	S	Ferrule, 3/8 - 24 x .375
25	711-1363	1		Pin, 3/8-16: 3/8 x 2.43
26	712-0431	4	S	Nut, Hex Flange Lock, 3/8-16 ...
27	712-3004A	2	/P	Nut, Hex Flange Lock, 5/16-18
28	712-3027	3	S	Nut, Hex Flange Lock, 1/4-20 ...
29	712-0375	3	/P	Nut, Hex Lock, 3/8-16
30	712-3058	2	S	Nut, Hex Insert Lock, 1/2-20
31	714-0104	10	S	Pin, Internal Cotter
32	714-0145	1	S	Pin, Internal Cotter
33	714-0507	1	S	Pin, Cotter, 3/32 x .750
34	714-0147	4	/P	Pin, Internal Cotter
35	716-0104	1	S	E-Ring, .5 Dia
36	725-04232	1		Switch, Plunger (Brake)
37	725-3164A	1	S	Switch, Plunger (Reverse)
38	727-04004	1		Cylinder, Damper
39	731-3247	1		Pedal, Forward
40	731-3248	1		Pedal, Reverse
41	731-3249A	1	/P	Pedal, Brake
42	731-3250	1		Pedal, Diff. Lock
43	731-3321	1		Grip, Handle
44	732-04009	2	S	Spring, Compression
45	725-3167	1	S	Switch, Plunger (Brake)
46	732-0384	1	S	Spring, Extension, .62 x 6.12
47	732-0859A	1	/P	Spring, Rev/No Cut
48	732-3118	1		Spring, Extension, 3/8 x 1.44
49	712-0711	2	/P	Nut, Hex Jam, 3/8-24
50	736-0173	3	/P	Washer, Flat, .28 x .74 x .063 ...
51	736-3019	4		Washer, Flat, .53 x .1.06 x .134
52	738-0140	1	S	Screw, Shoulder, .435 x 1.78
53	738-0255	1	S	Screw, Shoulder, ..375 x .181 ...


5252 Tractor
Controls

Page 9 of 70

Ref #	Part Number	Qty	S/P/F	Description
54	738-0533	1	S	Screw, Shoulder, .498 x 1.635
55	738-0982	1		Screw, Shoulder .498 x 3.245: 3/8-16
56	741-0598	4	S	Bearing, Hex Flange, .752 ID
57	741-0491	4		Bearing, Nylon. .50 ID x .341
58	741-3073	2	S	Bearing, Flange, .375 x .58 x .25
59	746-04017	1		Cable, Diff Lock
60	747-04021	1		Rod, Brake, LH
61	747-04022	1		Rod, Brake, RH
62	747-3486	1		Rod, Hydro Control
63	747-3324	1		Rod, Rear Connecting
64	747-3353	1		Rod, Front Connecting
65	747-3366	1		Shaft, Diff. Lock
66	748-0190	2	/P	Spacer, .508 x .75 x .68
67	748-0227A	2	S	Bearing, Hex Flange, .629 ID
68	736-0160	1	S	Washer, Flat, .53 ID x .93 x .05..
69	750-0668	1		Spacer, .39 x .625 x 1.74
70	703-05665	1		Bracket, Hi-Lo Shifter
71	710-0703	1	/P	Screw.Carriage, 1/4-20 x .75 GR5
72	712-04064	1	/P	Nut, Hex Flange Nylon Lock 14-20 GRF

5252 Tractor
Crankcase and Crankshaft

Page 10 of 70

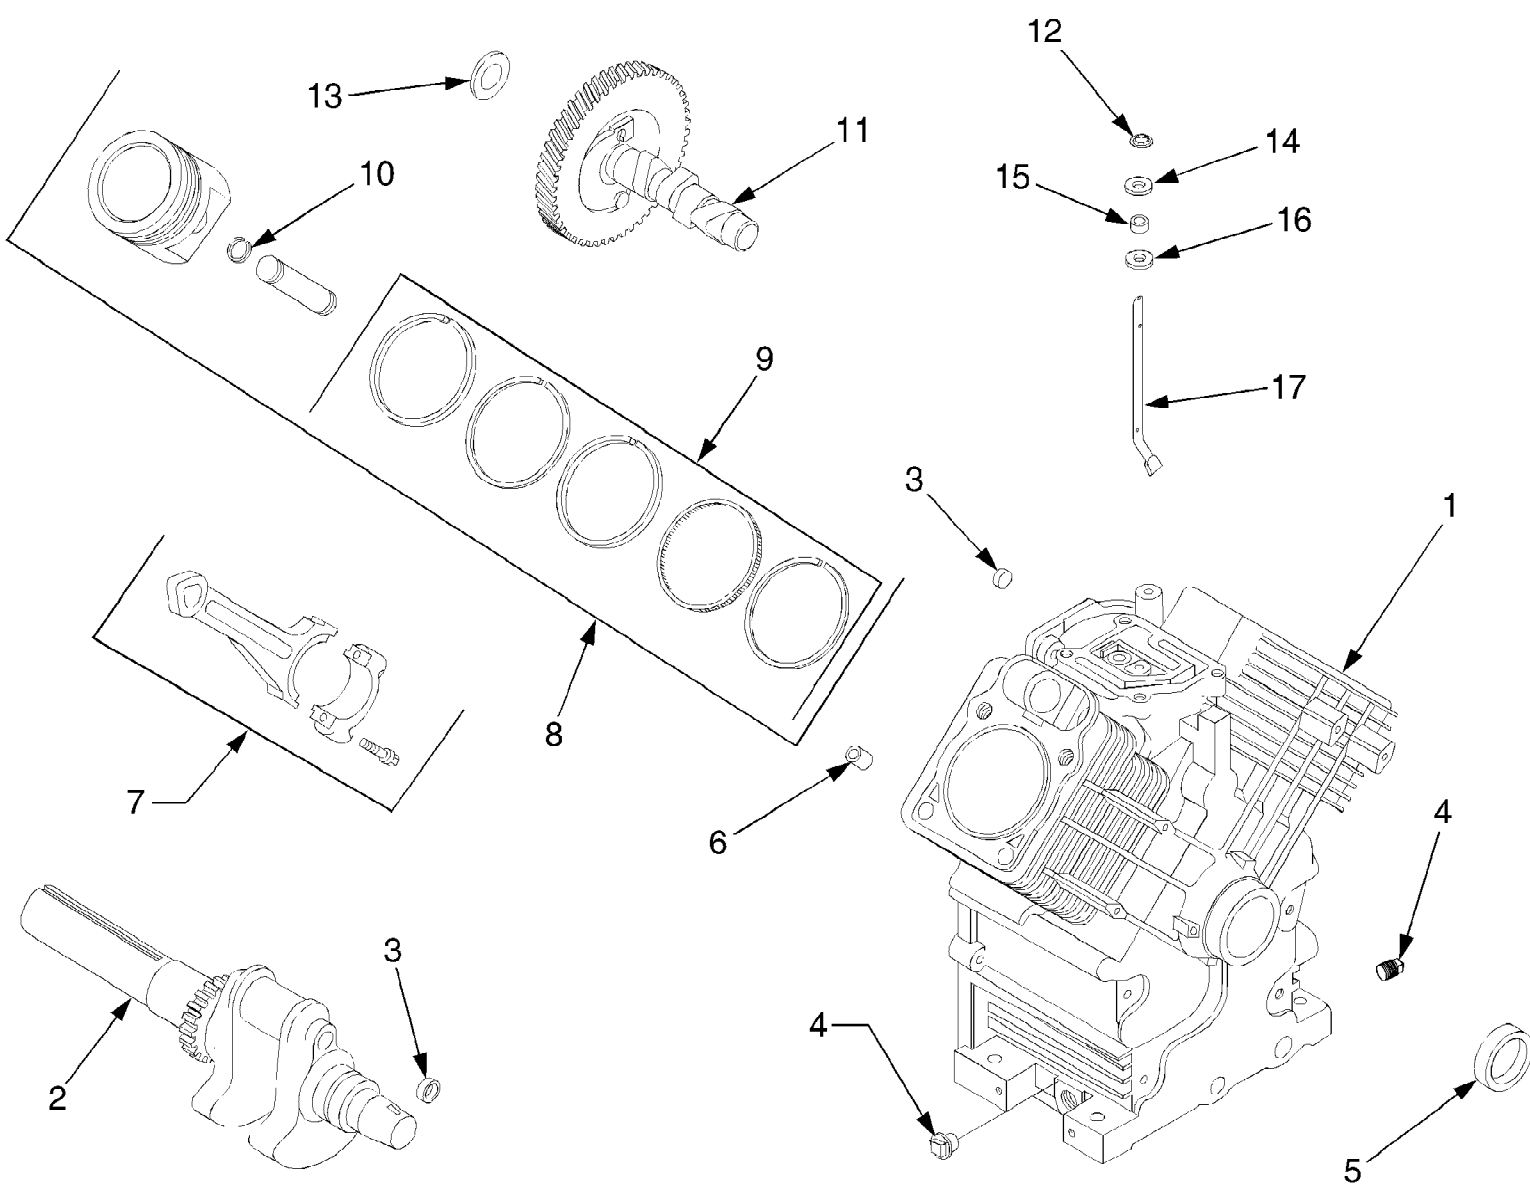


5252 Tractor
Crankcase and Crankshaft

Page 11 of 70

Ref #	Part Number	Qty	S/P/F	Description
1	KH-730115	1		Engine, Complete
1	KH-24-782-32	1		Miniblock
1	KH-24-522-339	1		Short Block
2	KH-24-014-02-S	1	S	Crankshaft (Includes 3)
3	KH-52-139-09	2	S	Plug, Cup
4	KH-25-139-57-S	2	/P	Plug, Hex Head, 3/8 NPTF
5	KH-24-032-01	1	S	Seal, Oil
6	KH-24-380-13-S	6	S	Pin, Dowel Locating
7	KH-24-067-13-S	2	S	Rod, Connecting, Std
7	KH-24-067-14	2		Rod, Connecting, .010
8	KH-24-874-08-S	2	S	Piston w/Ring Set, Std
8	KH-24-874-16-S	2	S	Piston w/Ring Set, .003
8	KH-24-874-20-S	2	S	Piston w/Ring Set, .010
8	KH-24-874-21-S	2		Piston w/Ring Set, .020
9	KH-24-108-05-S	2	/P	Ring Set, Std & .003
9	KH-24-108-06-S	2	S	Ring Set, Std & .010
9	KH-24-108-07-S	2		Ring Set, Std & .020
10	KH-24-018-01	4	S	Retainer, Piston Pin
11	KH-24-012-16-S	1		Camshaft
12	KH-24-018-09-S	1		Ring, Retainer
13	KH-12-422-09	AR	S	Shim, Camshaft, .0320 red
13	KH-12-422-13	AR	S	Shim, Camshaft, .0400 black
13	KH-12-422-07	AR	S	Shim, Camshaft, .0280 white
13	KH-12-422-08	AR	S	Shim, Camshaft, .0300 blue
13	KH-12-422-10	1	S	Shim, Camshaft, .0340 yellow ..
13	KH-12-422-11	AR	S	Shim, Camshaft, .0360 green ...
13	KH-12-422-12	AR	S	Shim, Camshaft, .0380 gray
14	KH-M-931010-S	1		Washer, Nylon
15	KH-28-032-09-S	1		Seal, Governor Cross Shaft
16	KH-24-468-15-S	1		Washer, Plain
17	KH-24-144-38-S	1	/P	Shaft, Governor Cross
	KH-24-755-113-S	1	S	Gasket Set

5252 Tractor
Cylinder Head, Valves and Breather

Page 12 of 70

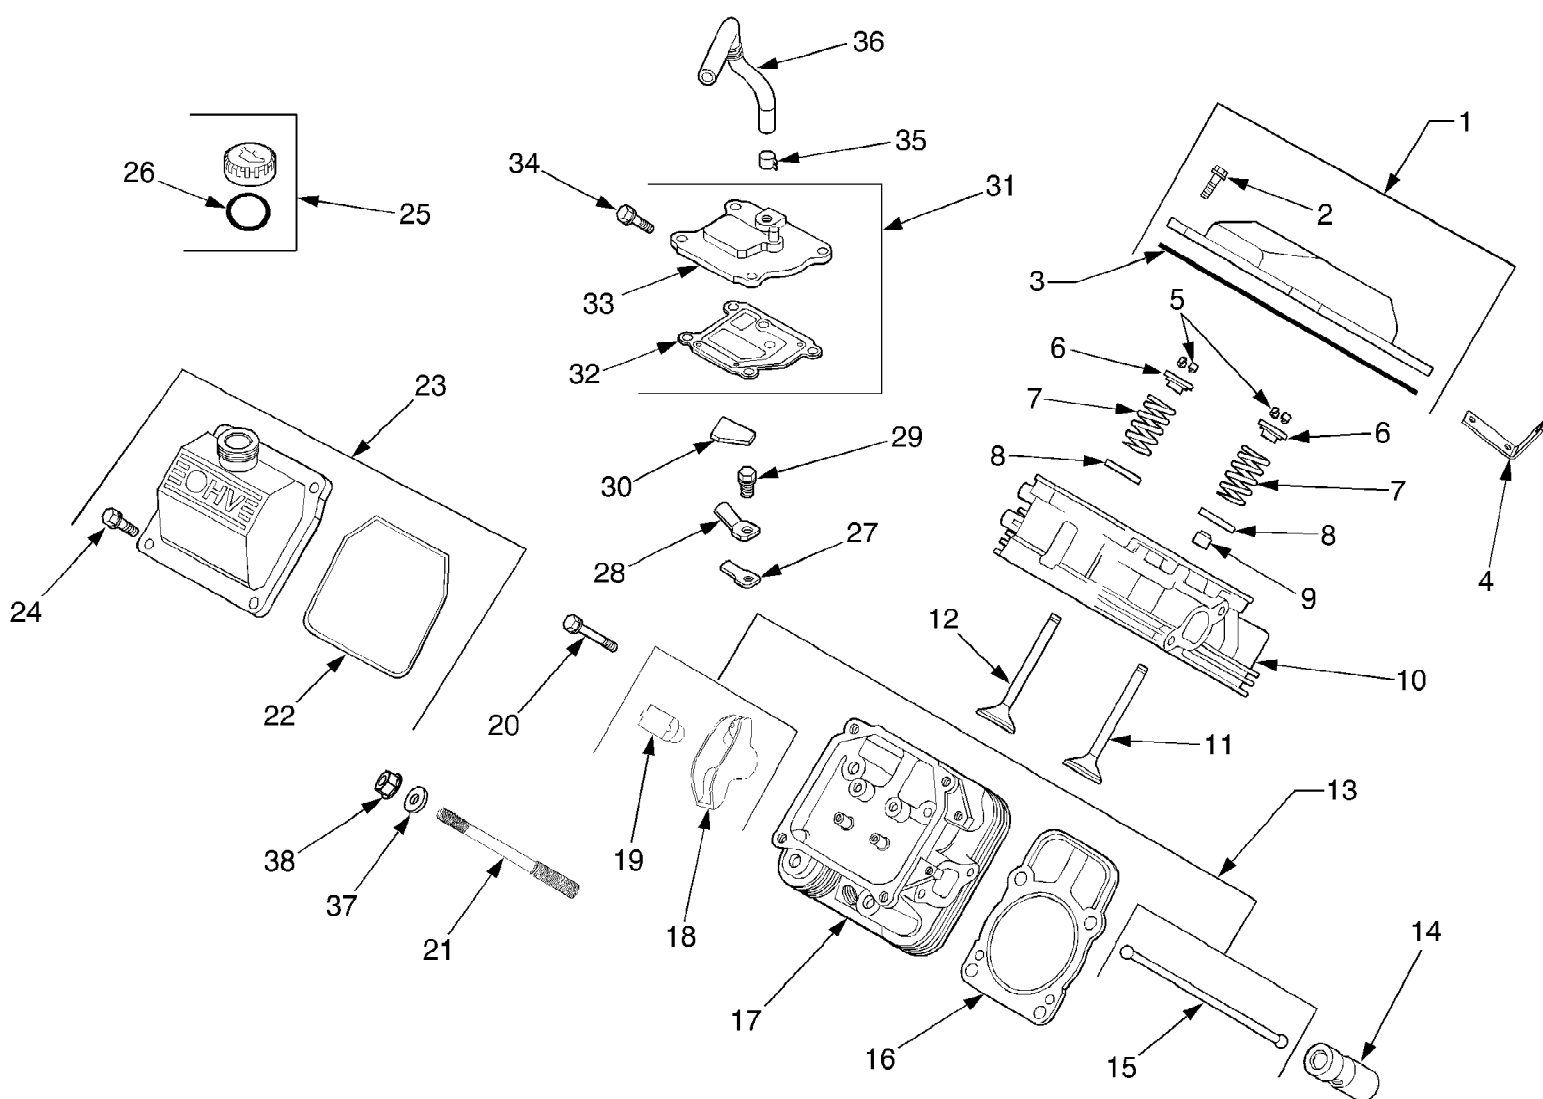


5252 Tractor
Cylinder Head, Valves and Breather

Page 13 of 70

Ref #	Part Number	Qty	S/P/F	Description
1	KH-24-755-74	1	S	Kit, Valve Cover (Includes 2-3) ...
2	KH-M-0651030	4	/P	Screw, Hx. Flng, M6 x 1.0 x 30 ...
3	KH-24-153-28-S	1	S	O-Ring, Valve Cover
4	KH-24-445-01	1	S	Strap, Lifting
5	KH-12-755-03	4	/P	Kit, Retainer
6	KH-12-173-01	4	/P	Cap, Valve Spring
7	KH-24-089-02	4	/P	Spring, Valve
8	KH-235011-S	4	/P	Retainer, Spring
9	KH-66-032-05-S	2	/P	Seal, Valve Stem
10	KH-24-318-65-S	1	S	Head Assembly, #1 Cylinder
11	KH-24-017-01	2	/P	Valve, Intake (Std.)
11	KH-24-017-02	2		Valve, Intake (.25mm)
12	KH-24-016-01	2	/P	Valve, Exhaust (Std.)
12	KH-24-016-02	2		Valve, Exhaust (.25mm)
13	KH-24-755-66	1	/P	Kit, Valve Train (Includes 15,18,19)
14	KH-25-351-01	4	S	Lifter, Valve
15	KH-24-411-05	4	/P	Rod, Push
16	KH-24-841-03-S	2	/P	Kit, Gasket, Cylinder Head
17	KH-24-318-66-S	1	S	Head Assembly, #2 Cylinder
18	KH-25-186-01	4	/P	Arm, Rocker
19	KH-24-599-01	4	S	Pivot, Rocker Arm
20	KH-66-086-07-S	4	S	Screw, Hex Flange M6 x 1 x 34 ..
21	KH-24-072-09-S	8		Stud, Cyl. Hd.
22	KH-24-153-28-S	1	S	O-Ring, Valve Cover
23	KH-24-755-140-S	1	/P	Cover, Valve - Oil Fill (Includes 22 and 24)
24	KH-M-0651030	4	/P	Screw, Hx. Flng, M6 x 1.0 x 30 ...
25	KH-24-755-46	1	/P	Cap Assembly, Oil Fill (Includes 26)
26	KH-25-153-02-S	1		O-Ring
27	KH-24-402-03	1	/P	Reed, Breather
28	KH-66-018-04-S	1	/P	Retainer, Breather Reed
29	KH-M-0545010	1	/P	Screw, Hex Flange M5 x 0.8 x 10
30	KH-24-050-01	1	S	Filter, Breather
31	KH-24-033-01	1	/P	Kit, Breather (Includes 32, 33)
32	KH-24-041-51-S	1	S	Gasket, Breather
33	KH-24-096-86-S	1	S	Cover, Breather
34	KH-M-645020-S	4	/P	Screw, Hex Flange M6 x 1.0 x 20
35	KH-25-237-14-S	1	/P	Clamp, Breather
36	KH-24-326-26-S	1	S	Hose, Breather
37	KH-24-468-16-S	8		Washer, Flat, 8mm
38	KH-24-100-10-S	8		Nut, Hex Flange, M8 x 1.25

5252 Tractor
Dash Panel and Steering Wheel


Page 14 of 70

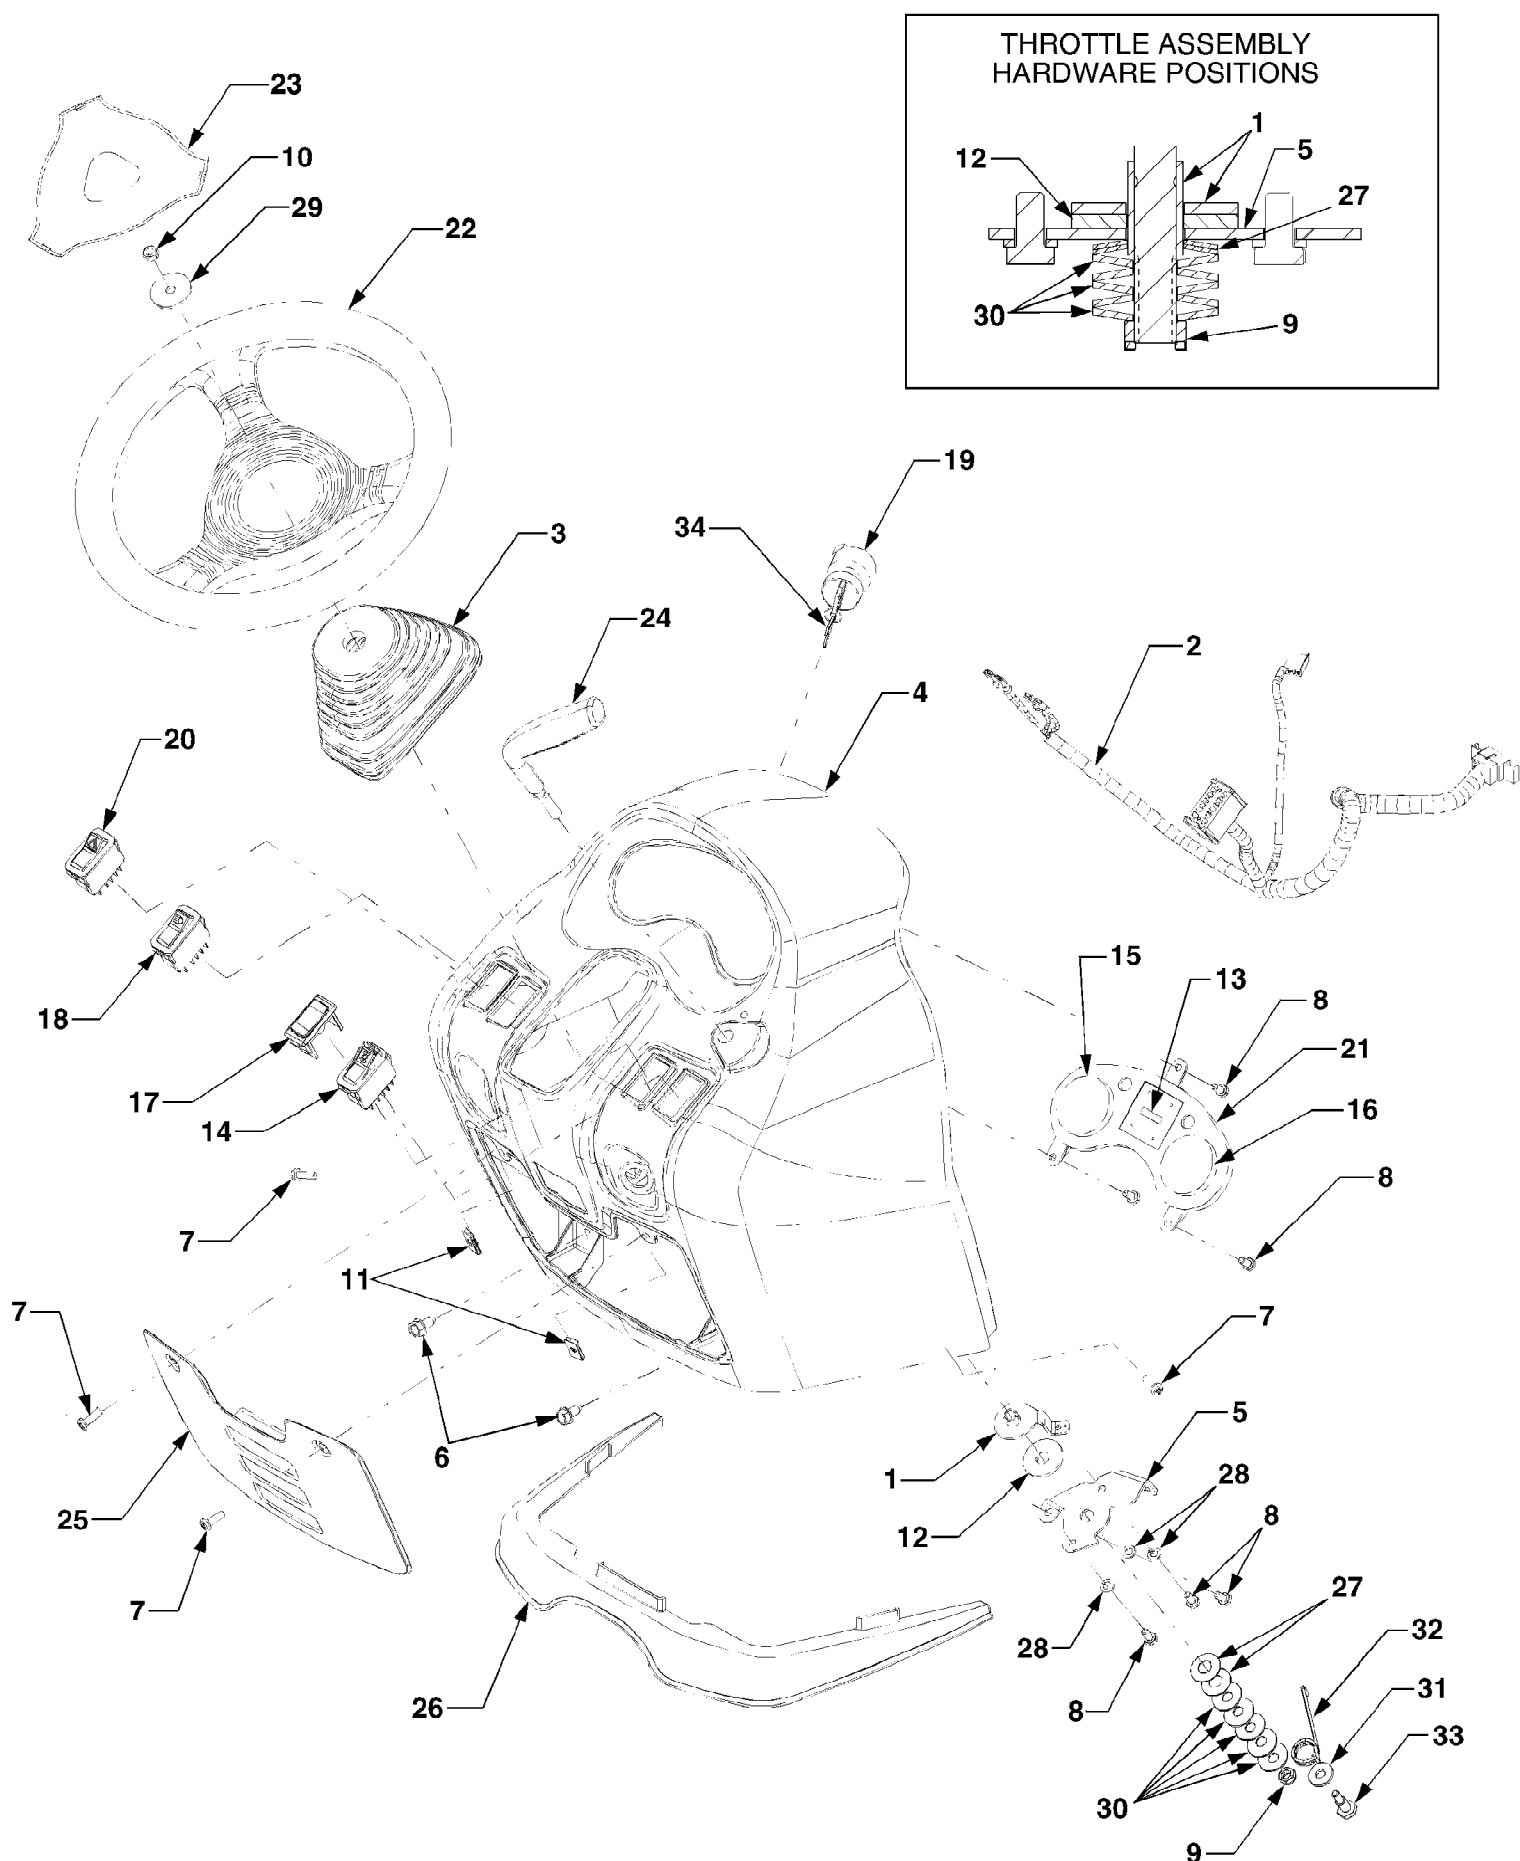

5252 Tractor
Dash Panel and Steering Wheel

Page 15 of 70


Ref #	Part Number	Qty	S/P/F	Description
1	603-04305	1	/P	Bracket, Throttle Cable
2	629-04112	1		Wire Harness, Dash
3	631-0076	1		Boot, Steering Shaft
4	631-04007B	1	S	Dash
5	703-05132A	1	/P	Bracket, Throttle Mtg.
6	710-0604A	2	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .625
7	710-0924	4	/P	Screw, Pan Hd., 1/4-20 x .75
8	710-3013	6	/P	Screw, Hex Cap, 1/4-20 x .5 GR5
9	712-0116	1	S	Nut, Hex Insert Jam Lock, 3/8-24 ..
10	712-0237	1	S	Nut, Hex Lock, 5/16-24
11	712-0292	2	/P	Nut, Speed, 1/4-20
12	723-3013	1	S	Washer, Friction, .515 x 1.5 x .12 ..
13	725-04022	1	S	Meter, Hour/Indicator
14	725-04076	1	S	Switch, PTO
15	725-04241	1		Gauge, Fuel
16	725-04259	1	S	Gauge, RPM
17	725-2017	1		Plug
18	725-3274	1		Switch, Headlight
19	725-3277	1	S	Switch, Ignition
20	725-3279B	1	/P	Switch, Hazard
21	731-05066	1		Panel, Meter
22	731-3209	1		Steering Wheel, Soft Grip
23	731-3210	1		Cover, Steering Wheel
24	731-3298	1		Handle, Throttle
25	731-3344	1		Panel, Dash Insert
26	731-3372	1	S	Extension, Dash
27	736-0255	2	S	Washer, Belleville, .51 x 1.14 x .04
28	736-0329	3	S	Washer, Lock, 1/4
29	736-04062	1	S	Washer, Flat, .344 x 1.5 x .1
30	736-0331	5	/P	Washer, Belleville, .39 x 1.13 x .062
31	736-3072	1	/P	Washer, Flat, .38 x .93 x .110 Hdn
32	732-04288	1		Spring, Torsion
33	738-04170	1		Screw, Shoulder, .374 x .56
34	759-3950	1	S	Key Set, Ingition

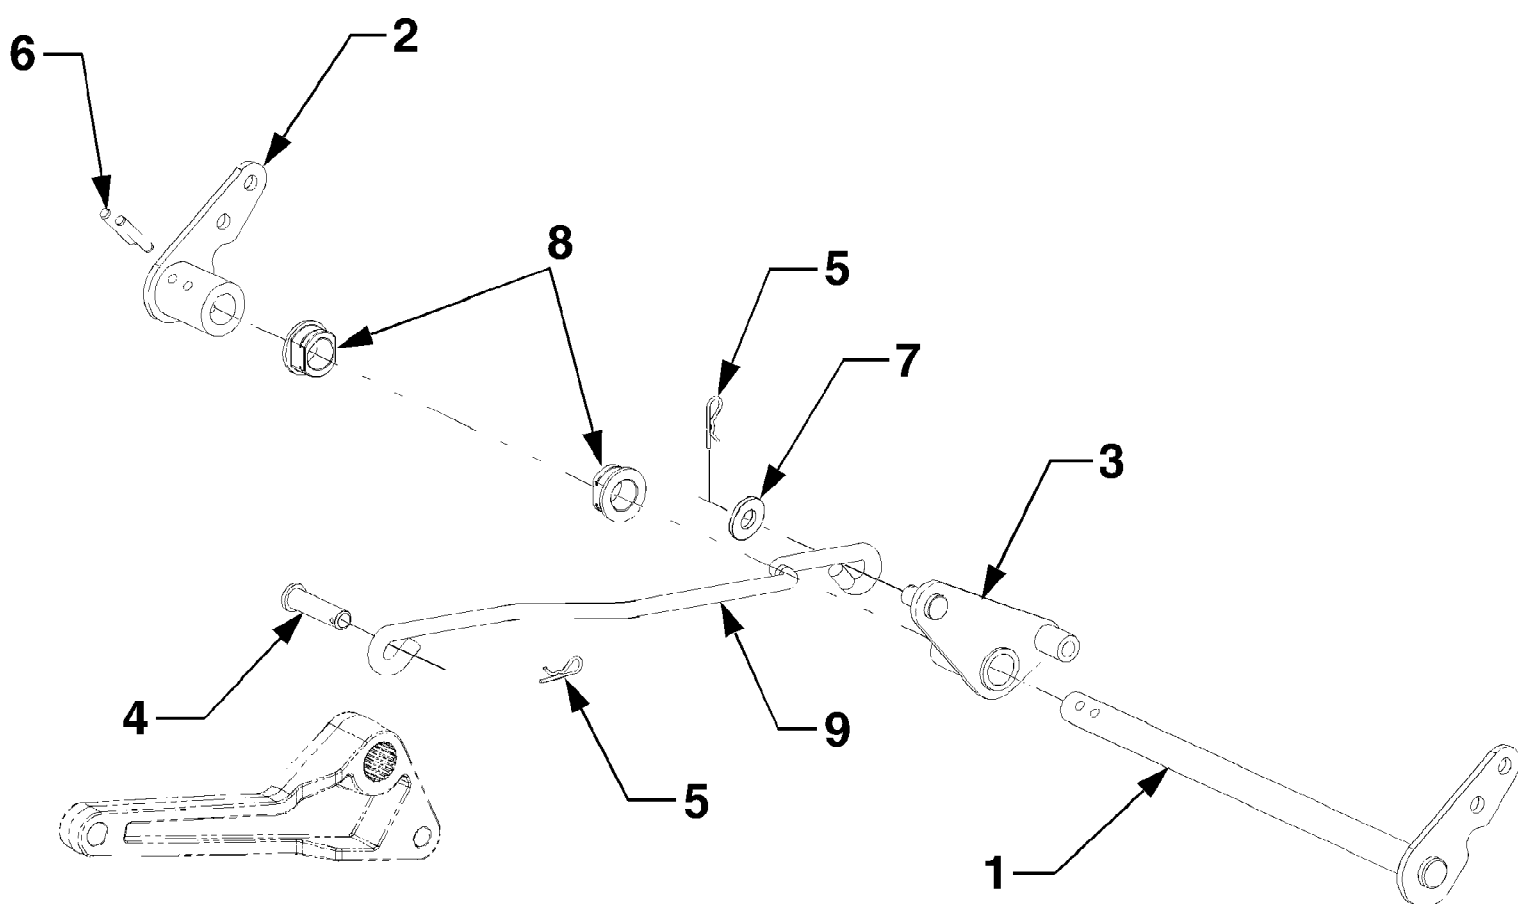

5252 Tractor
Deck Lift

Page 17 of 70


Ref #	Part Number	Qty	S/P/F	Description
1	603-0959	1	S	Shaft. Lift
2	603-0960-0637	1	/P	Arm, Lift
3	603-0979-0637	1		Plate, Lift Crank
4	711-04343	1		Pin, Clevis, .625 x 2.18
5	714-0145	2	S	Pin, Internal Cotter
6	715-0118	2	S	Pin, Spirol, 5/16 x 1.75
7	736-0531	1	S	Washer, Flat, .635 x 1.24 x .181
8	741-0170	2	S	Bearing, Flange w/Flats
9	747-3484A	1	/P	Rod, Crank Lift

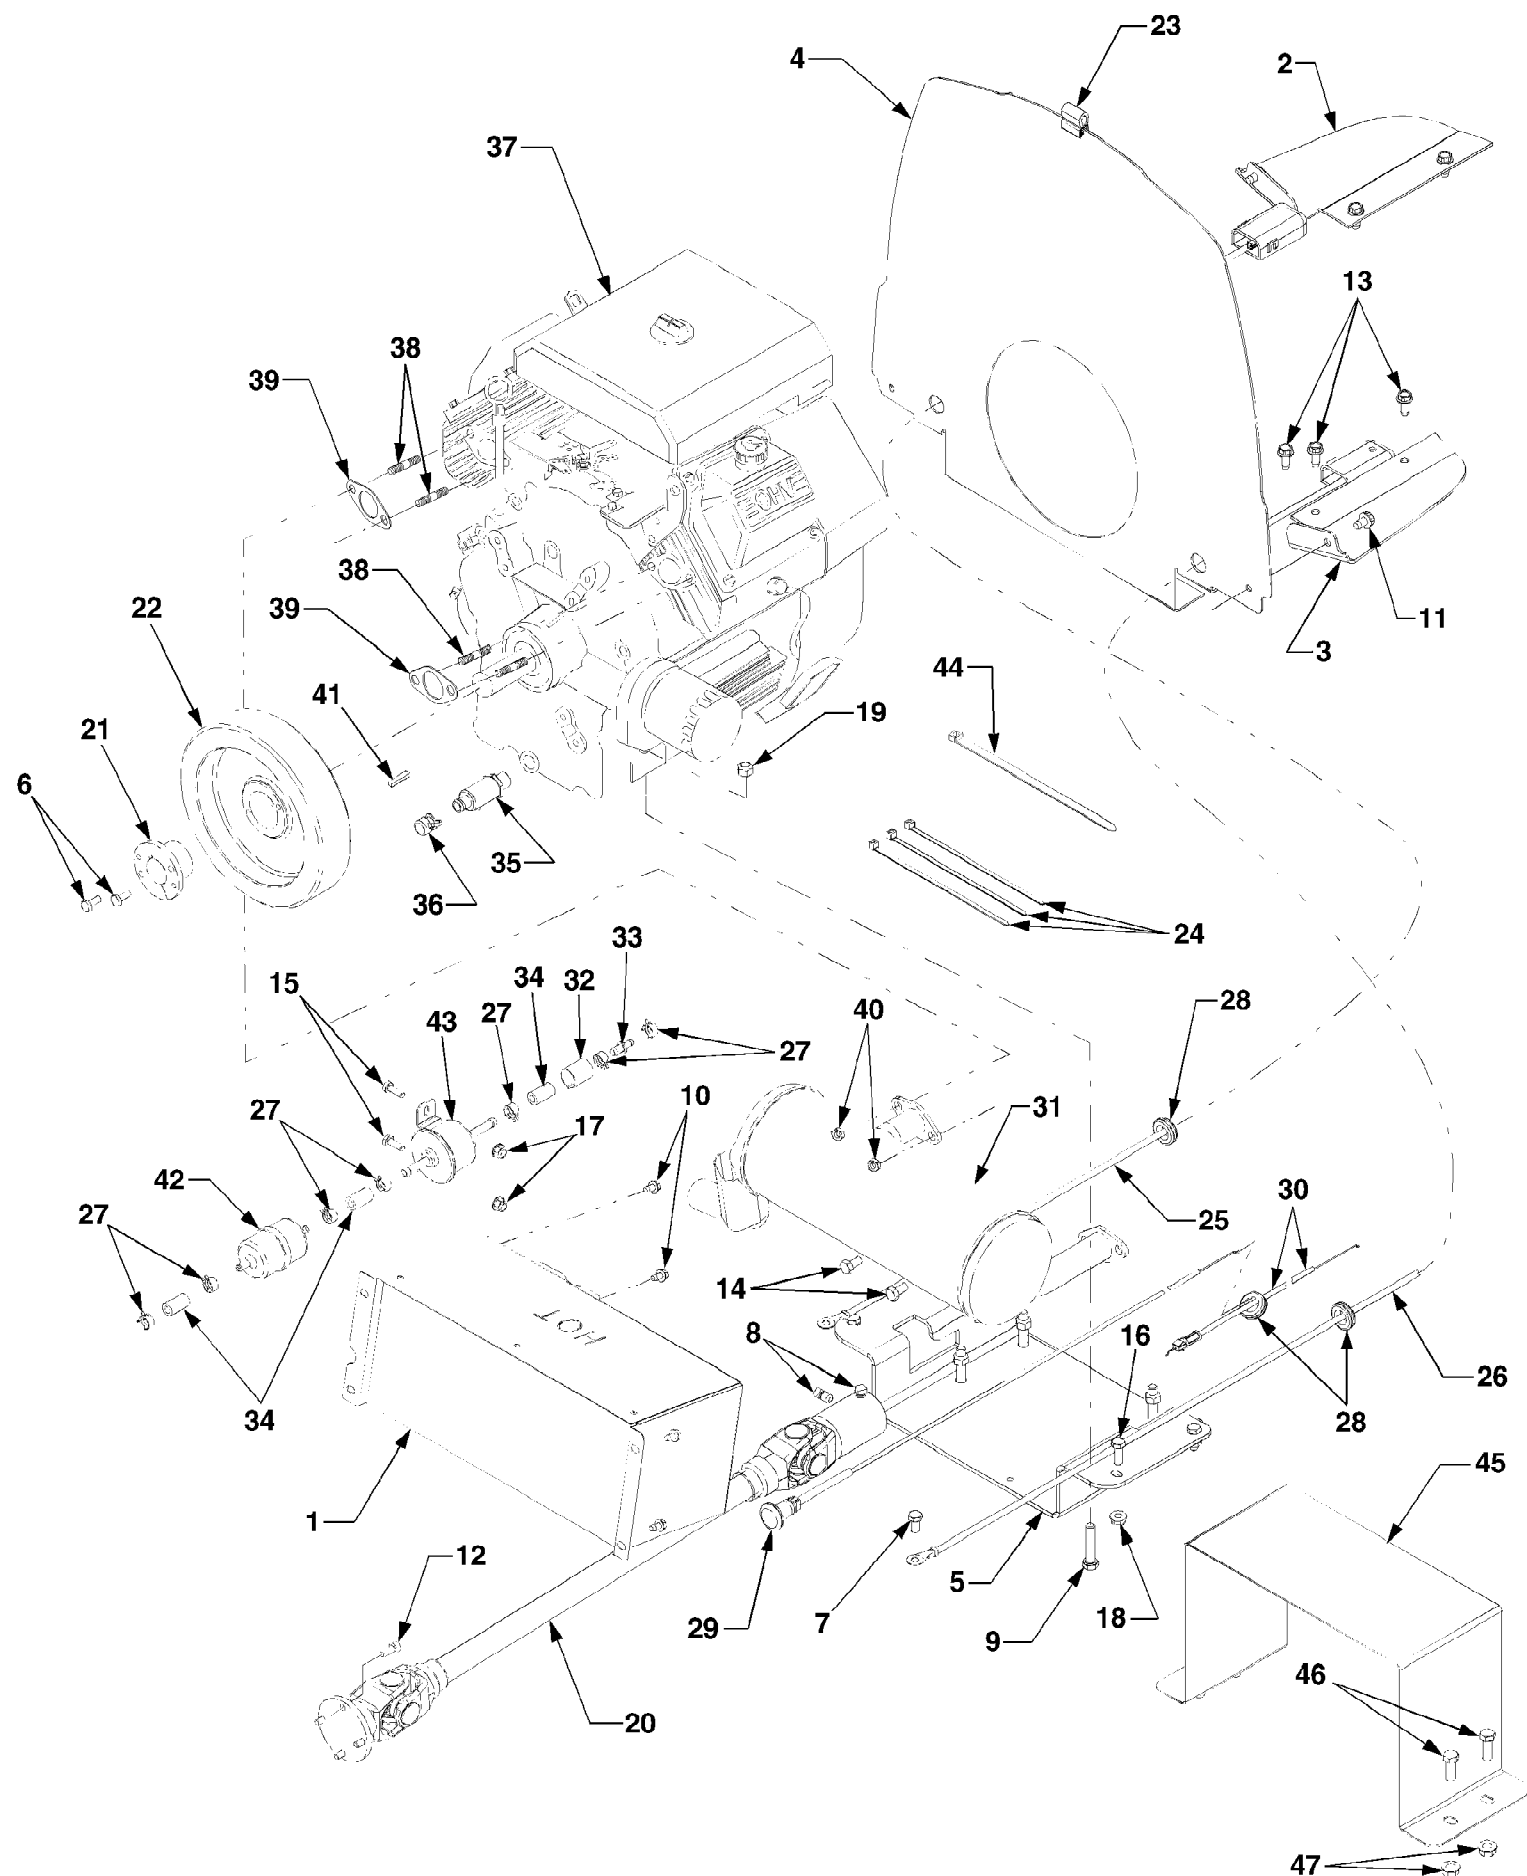

5252 Tractor
Engine and Drive Shaft

Page 19 of 70

Ref #	Part Number	Qty	S/P/F	Description
	629-04114	1		Harness, Engine (not shown)
1	603-04180	1	S	Shield, Heat
2	703-05123-0637	1	/P	Plate, Baffle LH
3	703-05124-0637	1	/P	Plate, Baffle, RH
4	703-05211-0637	1	/P	Plate, Air Baffle
4	777S30631	1		Graphic, Battery Warning
5	703-05215-0637	1	/P	Plate, Enging Mounting
6	710-0195	2	S	Screw, Hex Cap, 1/4-28 x .625 GR5
7	710-0237	1	/P	Screw, Hex Cap, 5/16-24 x .625 GR5
8	710-0357	2		Screw, Square Hd. Set, 3/8-16
9	710-0539	4	/P	Screw, Hex Cap, 3/8-24 x 1.75 GR5
10	710-0599	4	/P	Screw, Hex Wash Hd Tapp 1/4-20 x .5
11	710-0607	2	/P	Screw, Hex Wash Hd Tapp 5/16-18 x .5
12	710-3218	4		Screw, Socket Hd Cap, 1/4-20 x .62 GR8
13	710-1260A	6	/P	Screw, Hex Wash Hd Tapp 5/16-18 x .75
14	710-1376	2	/P	Screw, Hex Cap, M8-1.25 x 16 GR8
15	710-3015	2	/P	Screw, Hex Cap, 1/4-20 x .75
16	710-3038	4	/P	Screw, Hex Cap, 5/16-18 x .875 GR5
17	712-04064	2	/P	Nut, Hx. Insert Flange Lck, 1/4-20 GRF
18	712-04063	4	/P	Nut, Hx. Insert Flange Lck, 5/16-18 GRF
19	712-3054	4	/P	Nut, Hex Lock, 3/8-24 GRB
20	717-04112	1	S	Shaft, Drive
21	718-04068	1	S	Bushing, D Type
22	718-04069	1	S	Flywheel
23	723-3061	1		Seal, Heat Baffle, 90in.
24	725-0157	3	/P	Tie, Cable
25	725-3281	1		Wire, Battery Pos.
26	725-3282	1		Wire, Battery Neg.
27	726-0205	7	/P	Clamp, Hose
28	735-0226	3		Grommet
29	746-04015	1		Cable, Choke Control
30	746-04061	1		Cable, Throttle Control
31	751-10002A	1	/P	Muffler
32	751-10054	1	/P	Sleeve, Fuel Line
33	751-10055	1	S	Fitting, Reducer, 5/16 - 1/4
34	751-3130	1		Fuel Line 5/16 ID, 65in
35	751-3140	1	S	Drain, Engine Oil
36	751-3142	1		Cap, Drain
37	KH-730115	1		Engine
38	KH-25-072-04	4	/P	Stud, M8 - 1.25 x 33MM
39	KH-24-041-02	2	S	Gasket, Exhaust
40	712-3086	4	/P	Nut, Hex, M8 x 1.25
41	714-0118	1	/P	Key, Sqare, 1/4 x 1.5
42	KH-24-050-09-S	1	S	Filter, Fuel
43	KM-49040-2065	1		Pump, Fuel
44	726-0209	1	/P	Tie, Cable
45	703-05456	1	S	Cover, Flywheel
46	710-0514	4	/P	Screw, Hex Cap, 3/8-16 x 1.0 GR5
47	712-04065	4	/P	Nut, Hx. Insert Flange Lck, 3/8-16 GRF
	737-3030A	1	/P	Engine Oil (not shown) 2.1

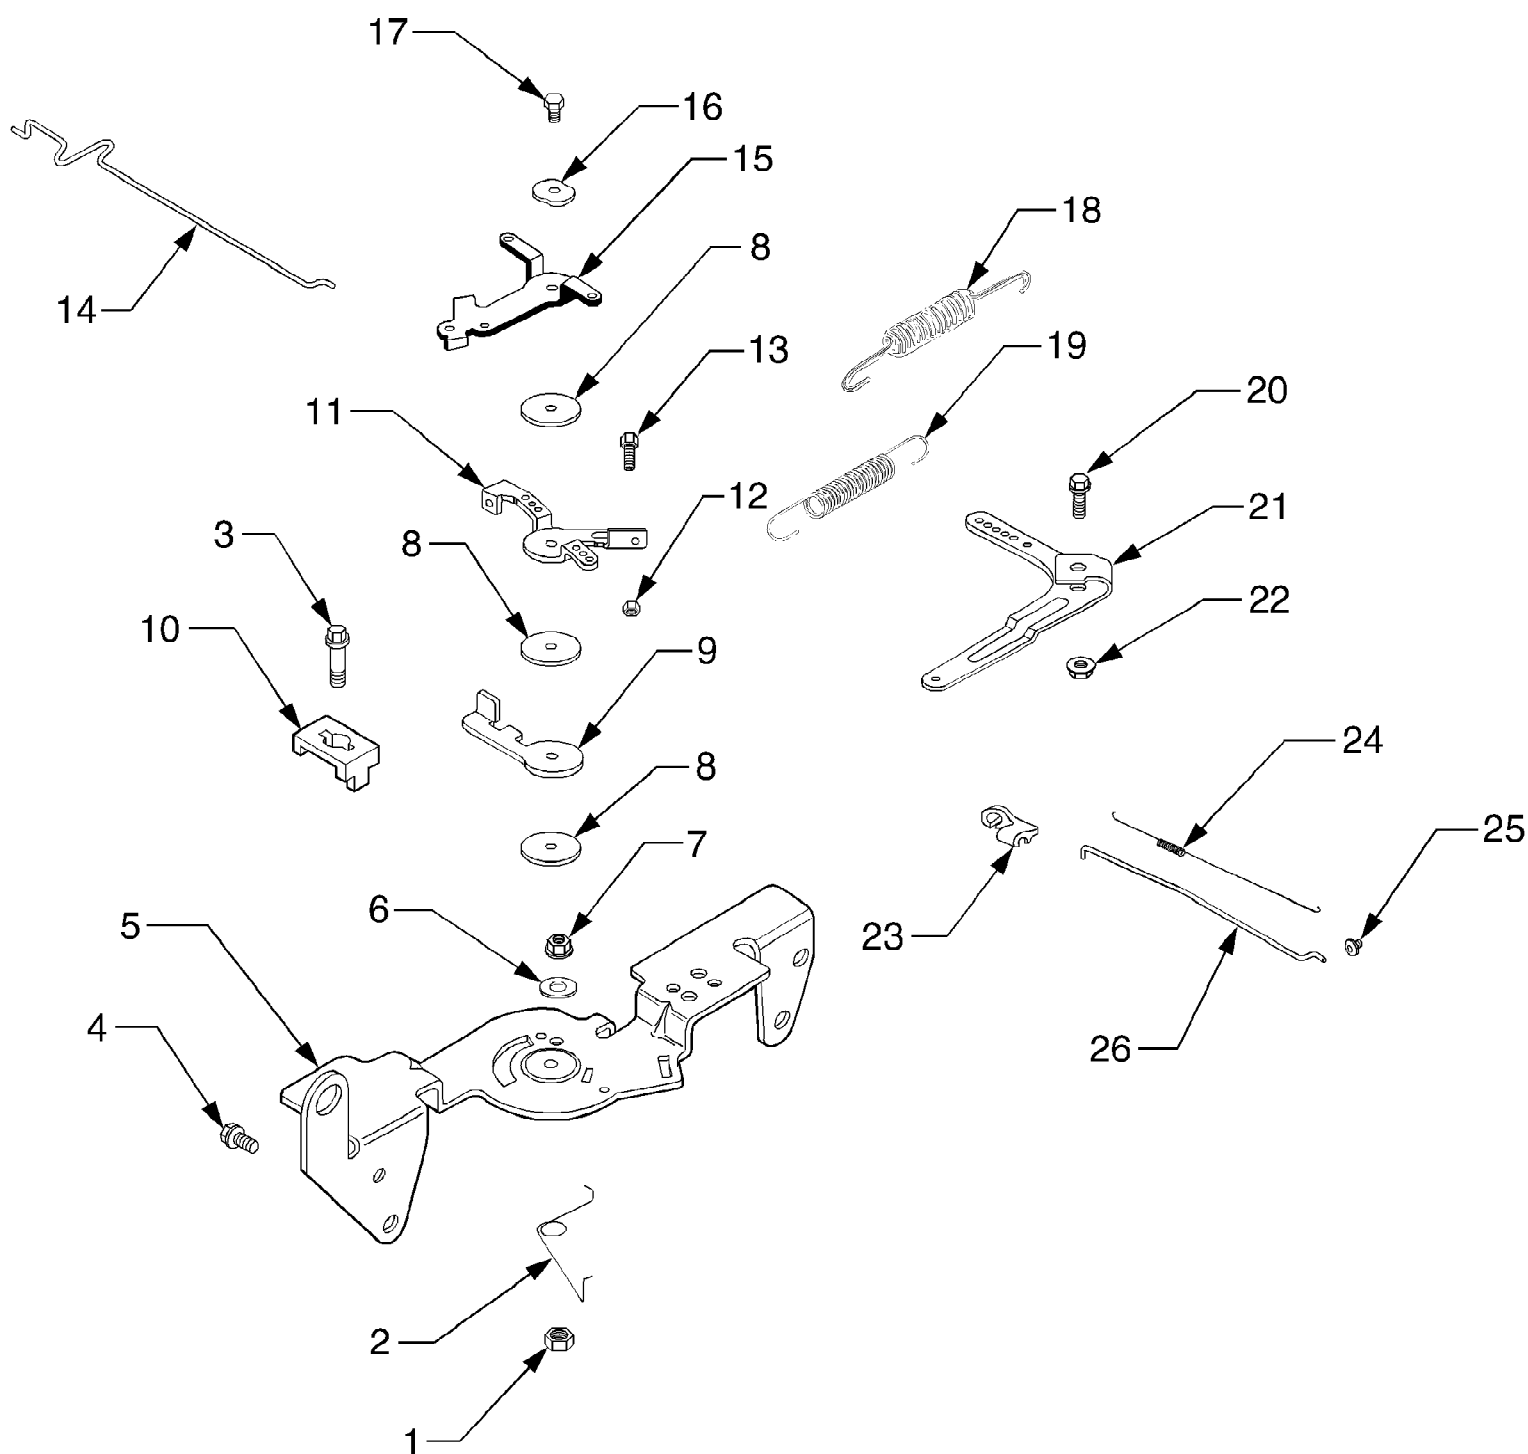


5252 Tractor
Engine Controls

Page 21 of 70

Ref #	Part Number	Qty	S/P/F	Description
1	KH-M-0547050	1	/P	Nut, Hex Lock M5 x 0.8
2	KH-24-089-03	1		Spring, Choke Return
3	KH-M-545016-S	3	/P	Screw, Hex Flange M5 x 0.8 x 16
4	KH-M-645016-S	4	/P	Screw, Hex Flange M6 x 1.0 x 16
5	KH-24-126-56	1	S	Bracket, Control
6	KH-X-20-1	1		Washer, Lock
7	KH-M-541050-S	1		Nut, Hex Flange
8	KH-24-468-01	3		Washer , Plain 5.5mm
9	KH-24-090-07	1	/P	Lever, Throttle Actuator
10	KH-12-237-01	2		Clamp, Cable
11	KH-24-090-13	1		Lever, Throttle Control
12	KH-M-446030-S	1	/P	Nut, Hex M4 x 0.7
13	KH-M-401030	1	/P	Screw, Hex Cap M4 x 0.7 x30
14	KH-24-079-21-S	1	/P	Linkage, Choke
15	KH-24-090-05	1		Lever, Choke
16	KH-41-468-03	1		Washer, Spring 1/4"
17	KH-M-0545020	1	/P	Screw, Hex Flange M5 x 0,.8 x 20
18	KH-24-089-51-S	1	/P	Spring, Throttle Limiter
19	KH-24-089-46-S	1		Spring, Governor
20	KH-24-211-03-S	1		Screw, Round Hd. Square Neck
21	KH-24-090-33-S	1	S	Lever, Governor
22	KH-M-0641060	1	S	Nut, Hex Flange M6 x 1.0
23	KH-25-158-08	1	/P	Bushing, Linkage Retaining
24	KH-24-089-01	1		Spring, Linkage
25	KH-25-158-11	1	/P	Bushing, Linkage Retaining
26	KH-24-079-01	1		Linkage, Throttle

5252 Tractor
Fender and Running Board



Page 22 of 70

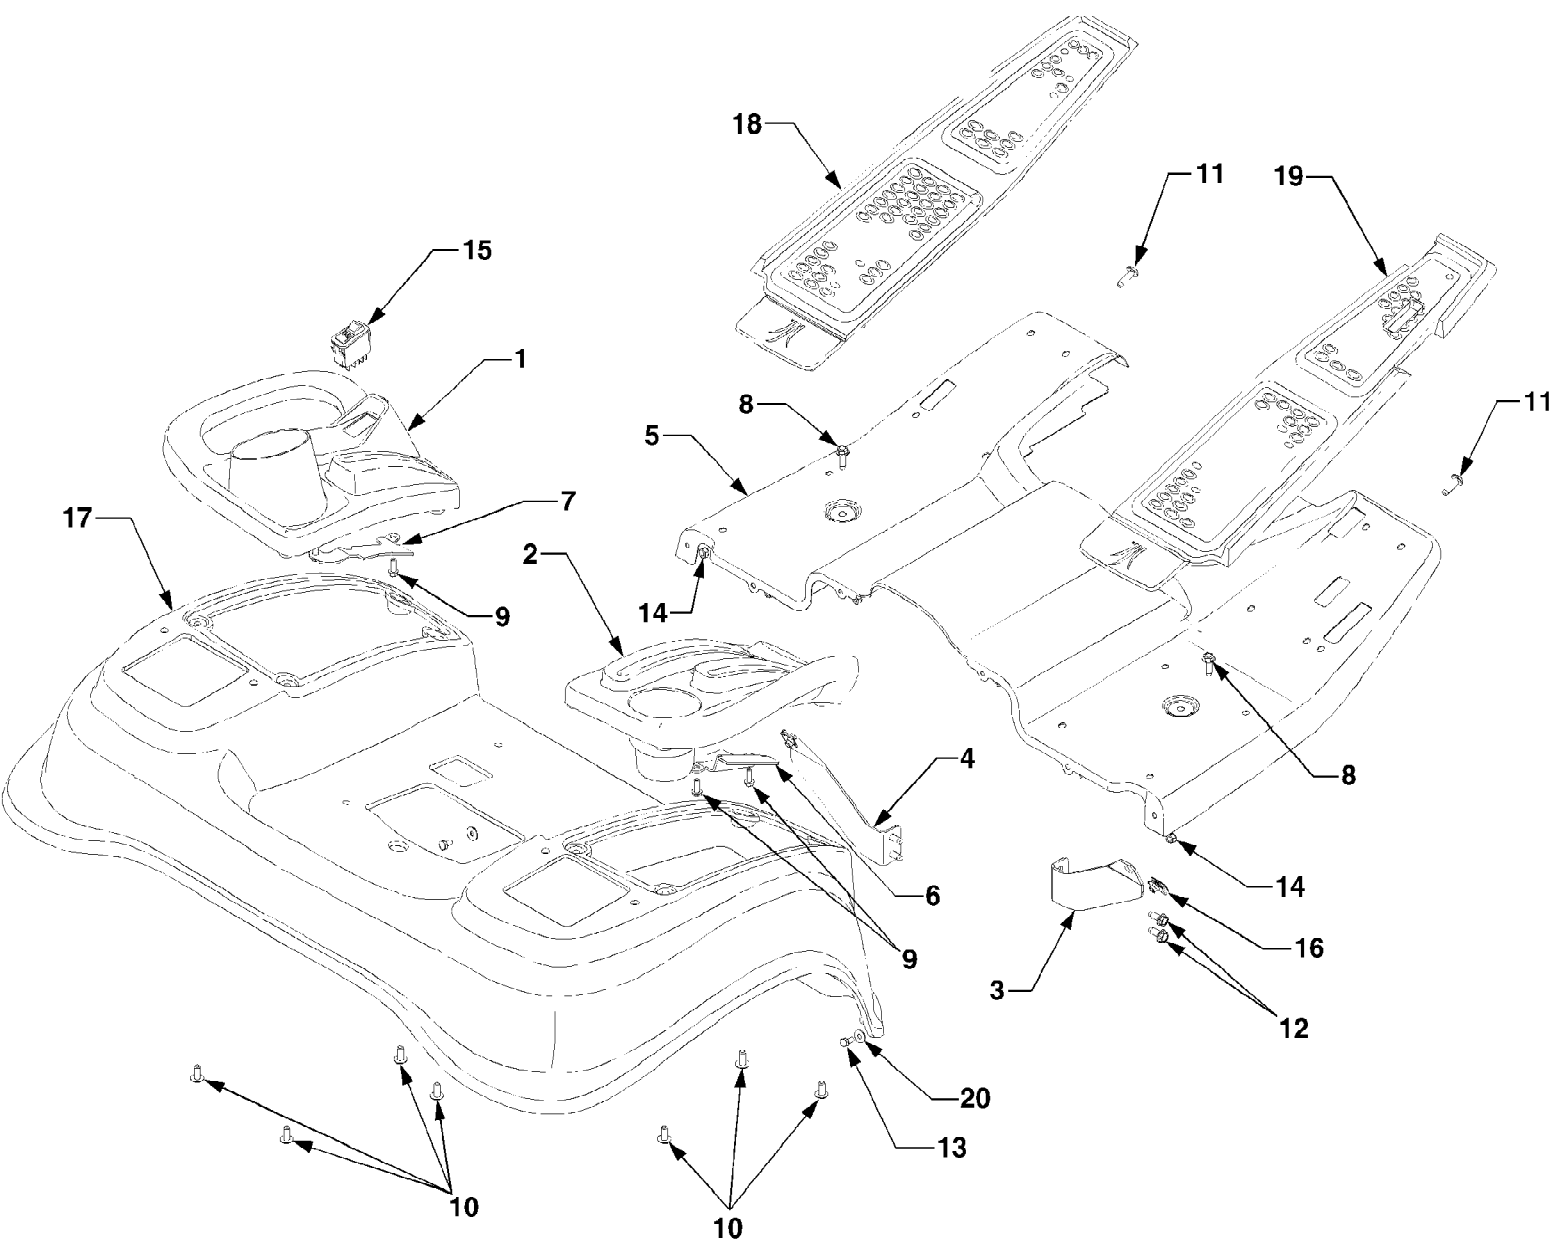

5252 Tractor
Fender and Running Board

Page 23 of 70


Ref #	Part Number	Qty	S/P/F	Description
1	631-04031	1	S	Cover, Fender, LH
2	631-04107	1		Cover, Fender, RH
3	703-05105-0637	1	/P	Bracket, Running Brd Mtg. RH
4	703-05113-0637	1	/P	Bracket, Running Brd Mtg. LH
5	703-05199-0716	1		Running Board
5	777S32332	1		Graphic, Instruction
5	777S32274	1		Graphic, Warning
6	703-05306A	1	S	Bracket, Lift Float Gate
7	703-05307A	1		Bracket, Shift Gate, Hi-Lo
8	710-0602	2	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x 1.0
9	710-0895	4		Screw, Hex Wash. Hd, Tapp 1/4-15 x .75
10	710-1242	8	/P	Screw, Truss Phillips Hd. 5/16-14 x .75
11	710-0971	2		Screw, Pan Hd. 5/16-18 x 1.0 ..
12	710-1260A	4	/P	Screw, Hex Wash. Hd. Tapp ..5/16-18 x .75
13	710-3013	6	/P	Screw, Hx. Cap, 1/4-20 x .5 GR5
14	712-0324	6	/P	Nut, Hx. Insert Lck, 1/4-20 GR8
15	725-3273	1		Switch, PTO Reverse
16	726-0211	2	S	Nut, Speed, 5/16-18
17	731-05089	1	S	Fender
17	777D08643	1		Graphic, Reflector RH
17	777D08642	1		Graphic, Reflector LH
17	777D07729	1	/P	Graphic, Power Shaft
17	777S32286	1		Graphic, Warning
18	735-0275	1		Pad, Floor - LH
19	735-0276	1		Pad, Floor - RH
20	736-3090	6	/P	Washer, Flat, .26 x .72 x .06 ...

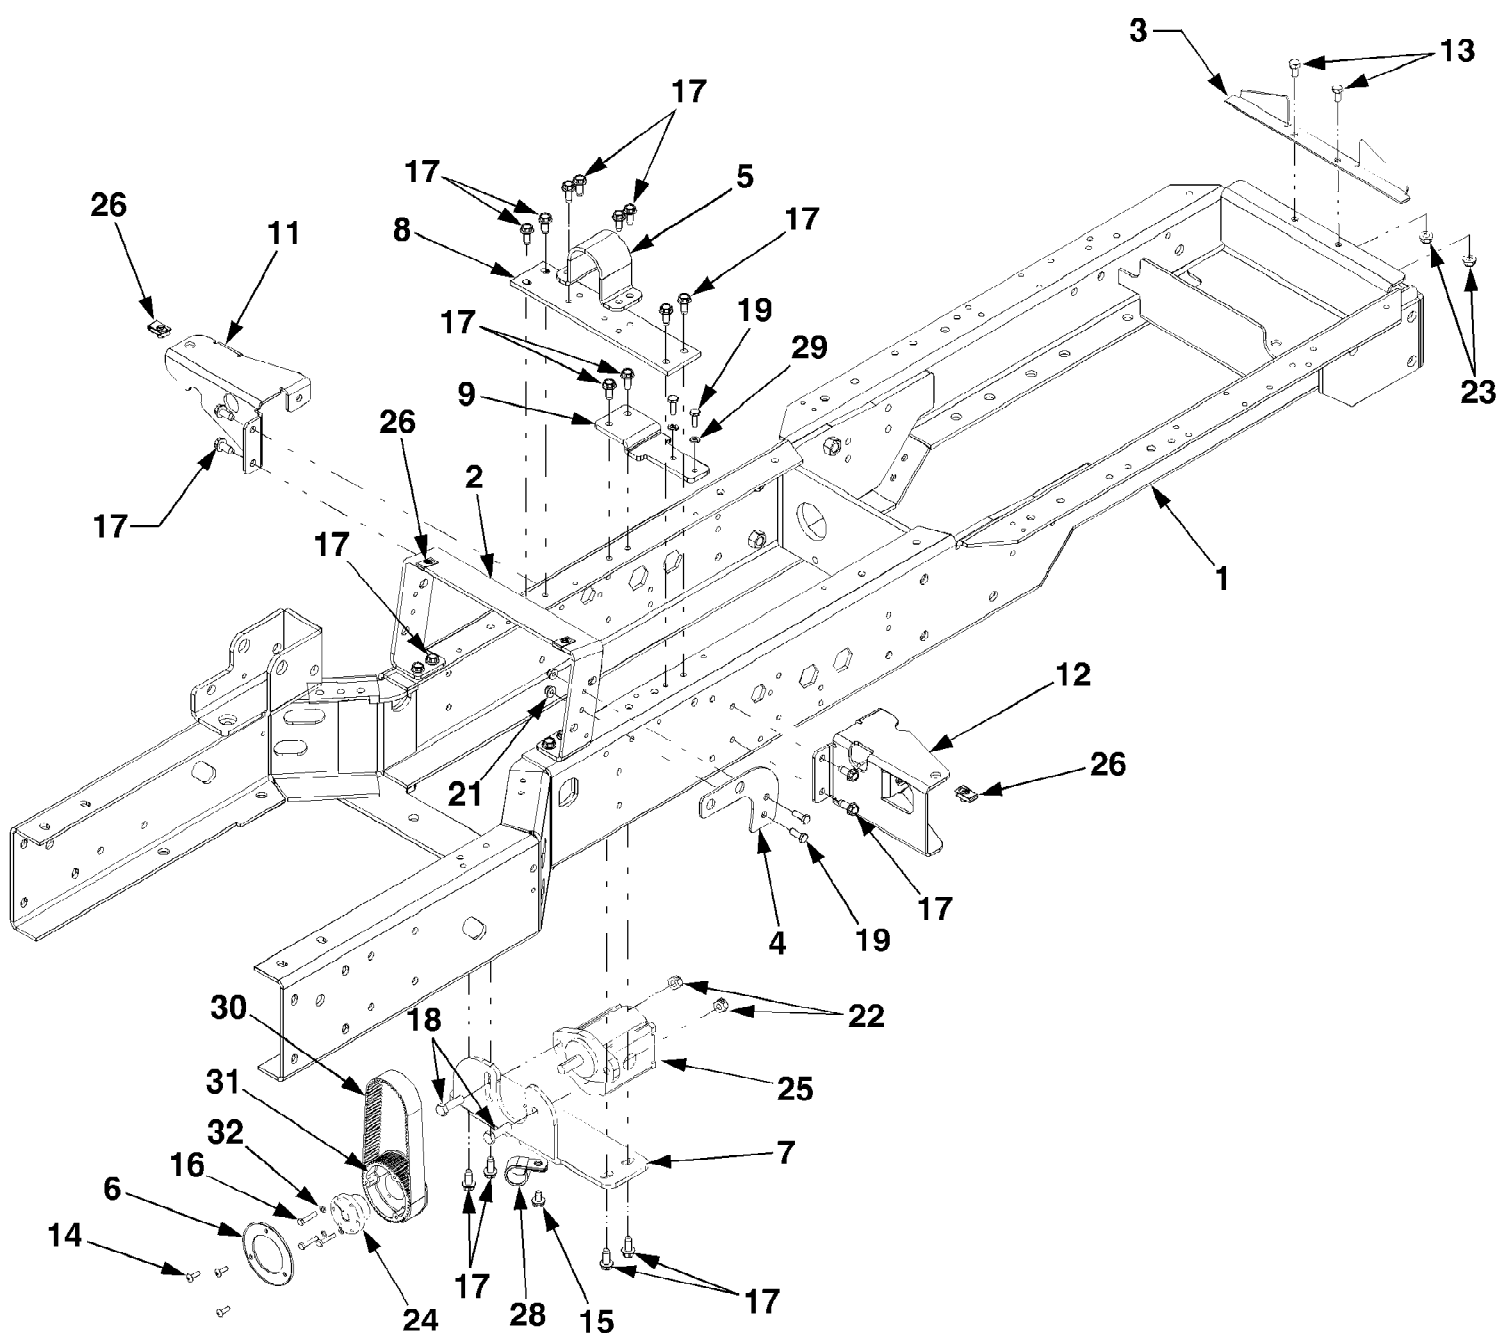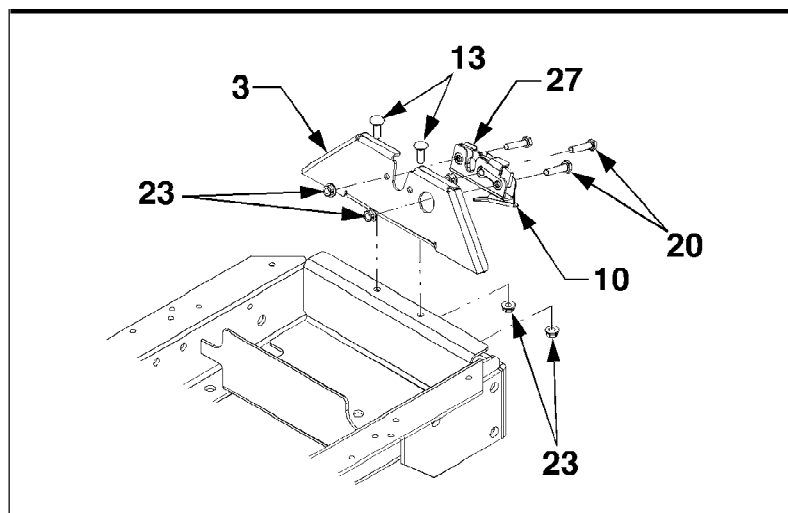

5252 Tractor
Frame

Page 25 of 70


Ref #	Part Number	Qty	S/P/F	Description
1	603-0961A-0637	1	/P	Frame
2	703-05031-0637	1	/P	Bracket, Front Seat Mount
3	703-05137A	1	S	Bracket, Hood Latch Mtg. — Mfg. Code 1C315G and before
	703-05782	1	/P	Bracket, Hood Latch — Mfg. Code 1D015G and After
4	703-05714- 0637	1		Bracket, Fitting Mtg.
5	703-05737-0637	1		Shield, Drive Shaft
6	703-05741	1		Keeper, Belt
7	703-05743-0637	1		Bracket, Aux. Pump Mtg.
8	703-05748-0637	1		Shield Lower Drive Shaft
9	703-05771A-0637	1	/P	Plate, Filter Mounting
10	703-3503A	1	/P	Lever, Hood Latch — Mfg. Code 1C315G and before
11	703-4124A-0637	1		Bracket, Running Board Mtg.
12	703-4125A-0637	1		Bracket, Running Board Mtg.
13	710-0276	2	/P	Screw, Carriage, 5/16-18 x 1.0 — Mfg. Code 1C315G and before
	710-3025	1	/P	Screw, Hex Cap, 5/16-18 x .625 GR5 — Mfg. Code 1D015G and After
14	710-0473	3	/P	Screw, Truss Hd. Mach. #10-24 x .5
15	710-0607	1	/P	Screw, Hex Wash. Hd Tapp 5/16-18 x .5
16	710-1194	3		Screw, Hex Mach. #10-24 x 1.0 GR5
17	710-1260A	25	/P	Screw, Hex Wash. Hd. Tapp, 5/16-18 x .75
18	710-3005	2	/P	Screw, Hex Cap, 3/8-16 x 1.25 GR5
19	710-3015	4	/P	Screw, Hex Cap, 1/4-20 x .75 GR5
20	710-3083	3	/P	Screw, Hex Cap, 5/16-18 x 1.375 GR5 — Mfg. Code 1C315G and before
21	712-04064	2	/P	Nut, Hex Nylon Flange Lock, 1/4-20 GRF
22	712-3000	2	S	Nut, Hex Lock, 3/8-16 GrB
23	712-04063	2	/P	Nut, Hex Flange Insert Lock, 5/16- 16 GrF (Replaces 712-3004A) (5)
24	718-04129	1	S	Bushing, Tapered
25	718-04130	1	S	Pump, Aux. Hydraulic
26	726-0211	4	S	Nut, U Speed, 5/16-18
27	726-0455	1		Latch, Hood — Mfg. Code 1C315G and before
28	726-0475	1		Clamp
29	736-0329	2	S	Washer,Lock, 1/4
30	754-04086	1	S	Belt, HTS, 5 x 25 x 500
31	756-04176	1	S	Pulley, 52T Cog
32	736-0722	3	S	Washer, Lock, #10

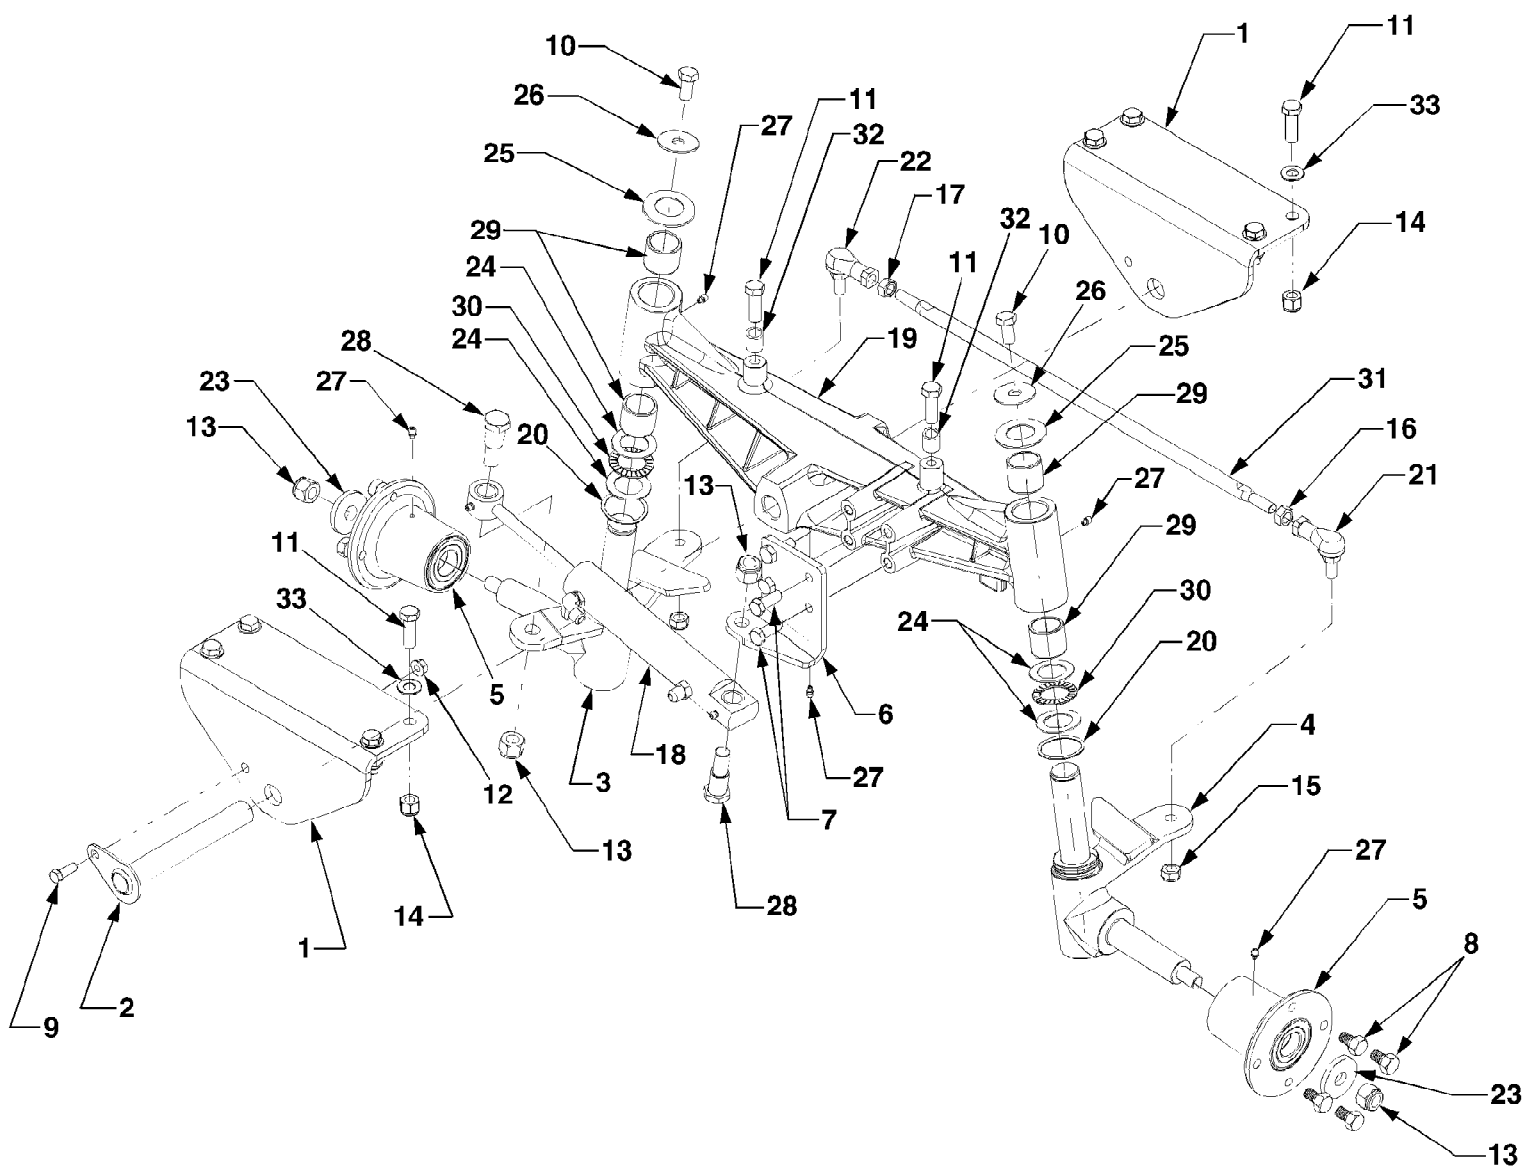

5252 Tractor
Front Axle

Page 27 of 70


Ref #	Part Number	Qty	S/P/F	Description
1	603-04088-0637	2	/P	Bracket, Axle Mounting
2	603-0721	1		Pin, Pivot Axle
3	603-0908B-0637	1	/P	Spindle Assembly, Steering LH
4	603-0909A-0637	1	/P	Spindle Assembly, Steering RH
5	619-3078A	2	S	Hub Assembly
5	741-3116	4		Bearing, Ball not shown
6	703-05188	1	S	Bracket, Cylinder Mounting
7	710-04208	4		Screw, Hex Cap, w/Patch M12-1.75 x 25 GR8
8	710-1808	8		Bolt, Lug, M12-1.75 x 14 GR8.8
9	710-3118	1	/P	Screw, Hex Cap Lock 3/8-16 x 1.0 GR5
10	710-3126	2	/P	Screw, Hex Cap Lock 1/2-13 x 1.0 GR5
11	710-3181	10	/P	Screw, Hex Cap 1/2-13 x 1.5 GR5
12	712-04065	1	/P	Nut, Hx Insert Flange Lk, 3/8-16 GrF (Replaces 712-3005)
13	712-3016	4	/P	Nut, Hex Insert Lock 5/8-11 GR5
14	712-3083	8	/P	Nut, Hex Insert Lock, 1/2-13 GR8
15	712-3103	2		Nut, Hex Flange Lock, M12 x1.75
16	712-3104	1		Nut, Hex, M12 x 1.75 RH Thrd
17	712-3105	1		Nut, Hex, M12 x 1.75 LH Thrd
18	717-3502	1	S	Cylinder, Steering
19	719-3163	1		Axle, Pivot
20	721-0526	2		O-Ring, 1.374 x .139
21	723-0462	1		Ball Joint, RH Thrd
22	723-0463	1		Ball Joint, LH Thrd
23	736-0746	2		Washer, Flat, .66 x 1.94 x .25 ...
24	736-0748	4		Washer, Flat, 1.25 x 1.94 x .063
25	736-0869	2		Washer, Flat, 1.25 x 2.25 x .040
26	736-3027	2		Washer, Flat, .531 x 1.75 x .09
27	737-3000	5	S	Fitting, Lube, 3/6 Drive
28	738-04049	2	S	Screw, Shoulder, .75 x 1.03
29	741-3110	4		Bearing, Sleeve, 1.25x1.5x1.25
30	741-3115	2		Bearing, Thrust, 1.25 x 1.94 x .78
31	747-3421	1		Rod, Tie
32	750-04375	2		Spacer, .501 x .75 x .775
33	736-0272	8	S	Washer, Flat, .51 x 1.0 x .06

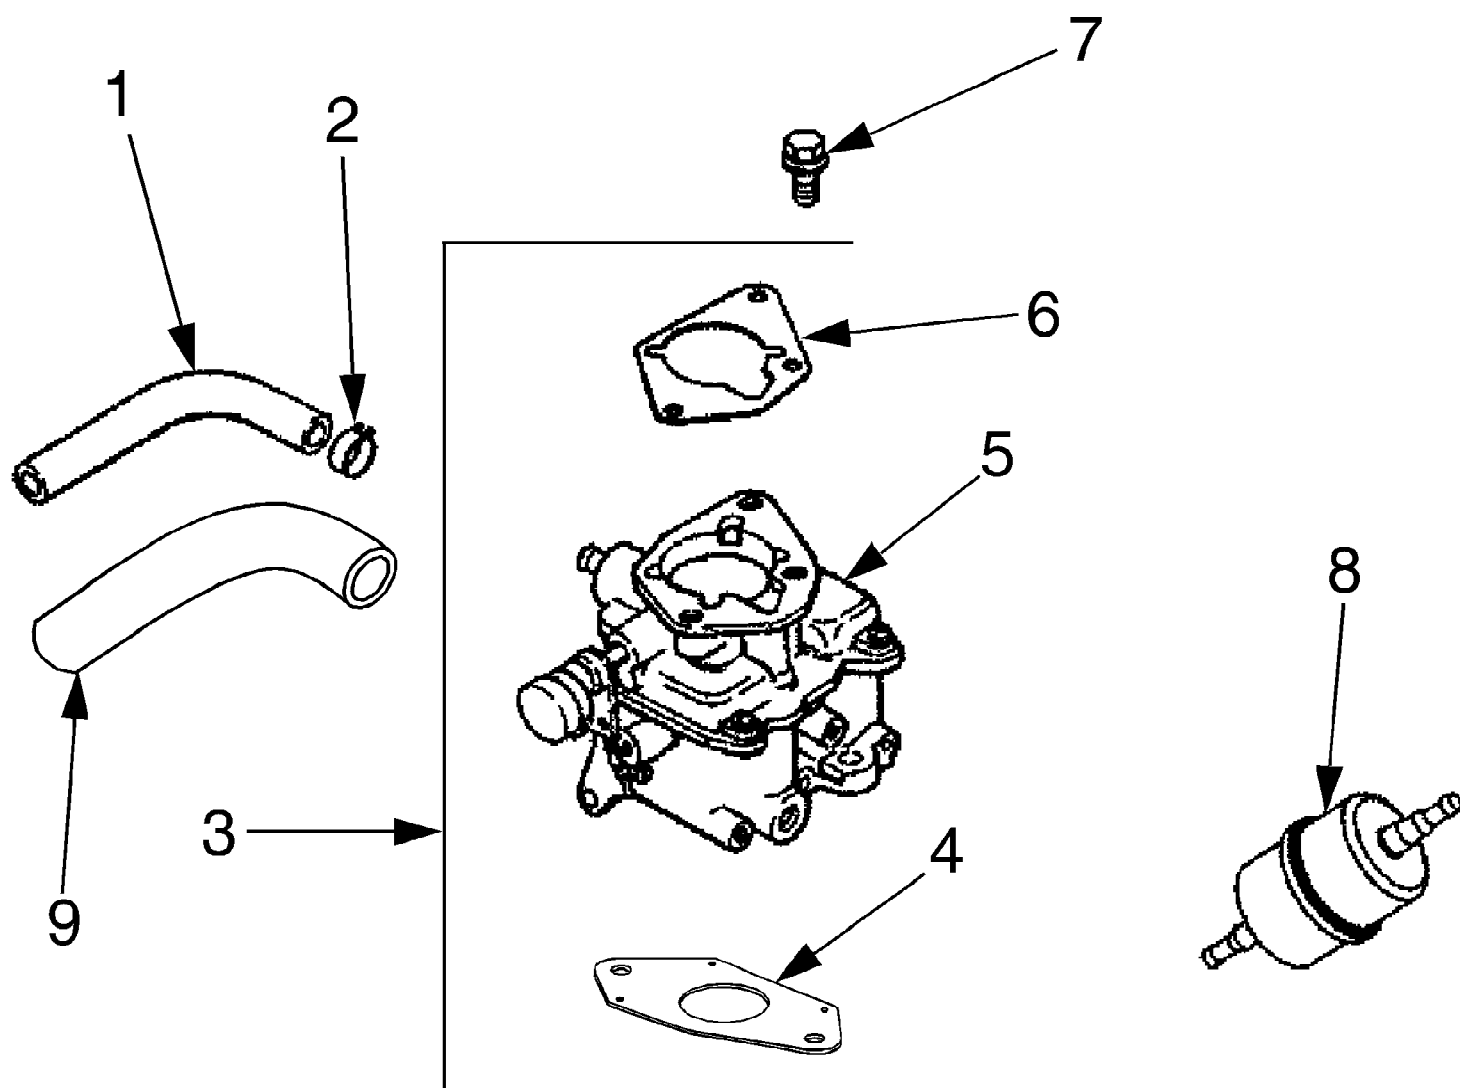

5252 Tractor
Fuel System

Page 29 of 70

Ref #	Part Number	Qty	S/P/F	Description
1	KH-41-353-14	1	S	Line, Fuel 15.5"
2	KH-25-237-14-S	2	/P	Clamp, Hose
3	KH-24-853-91-S	1		Kit, Carburetor w/Gasket (Includes 4-6)
4	KH-24-041-53-S	1		Gasket, Carburetor / Carburetor Assembly (not avail separately)
6	KH-24-041-06	1	/P	Gasket, Air Cleaner Base
7	KH-M-651025-S	2		Screw, Hex Flange, M6 x 1.0 x 25
8	KH-24-050-09-S	1	S	Filter, Fuel
9	KH-25-431-12-S	1		Sleeve, Insulator
	KH-24-518-24-S	1		Lead, Ground (not illustrated)
	KH-24-757-01	1	/P	Kit, Solenoid (not illustrated)
	KH-24-757-02-S	1	/P	Kit, Float Repair (not illustrated)
	KH-24-757-03-S	1	/P	Kit, Carburetor Repair (not illustrated)
	KH-24-757-07	1		Kit, Choke Repair (not illustrated)
	KH-24-755-130-S	1		Kit, High Altitude (not illustrated)
	KH-24-757-08-S	1		Kit, Repair - Accelerator pump diaphragm
	KH-24-757-09-S	1		Kit, Repair - Accel. pump seal & bushing

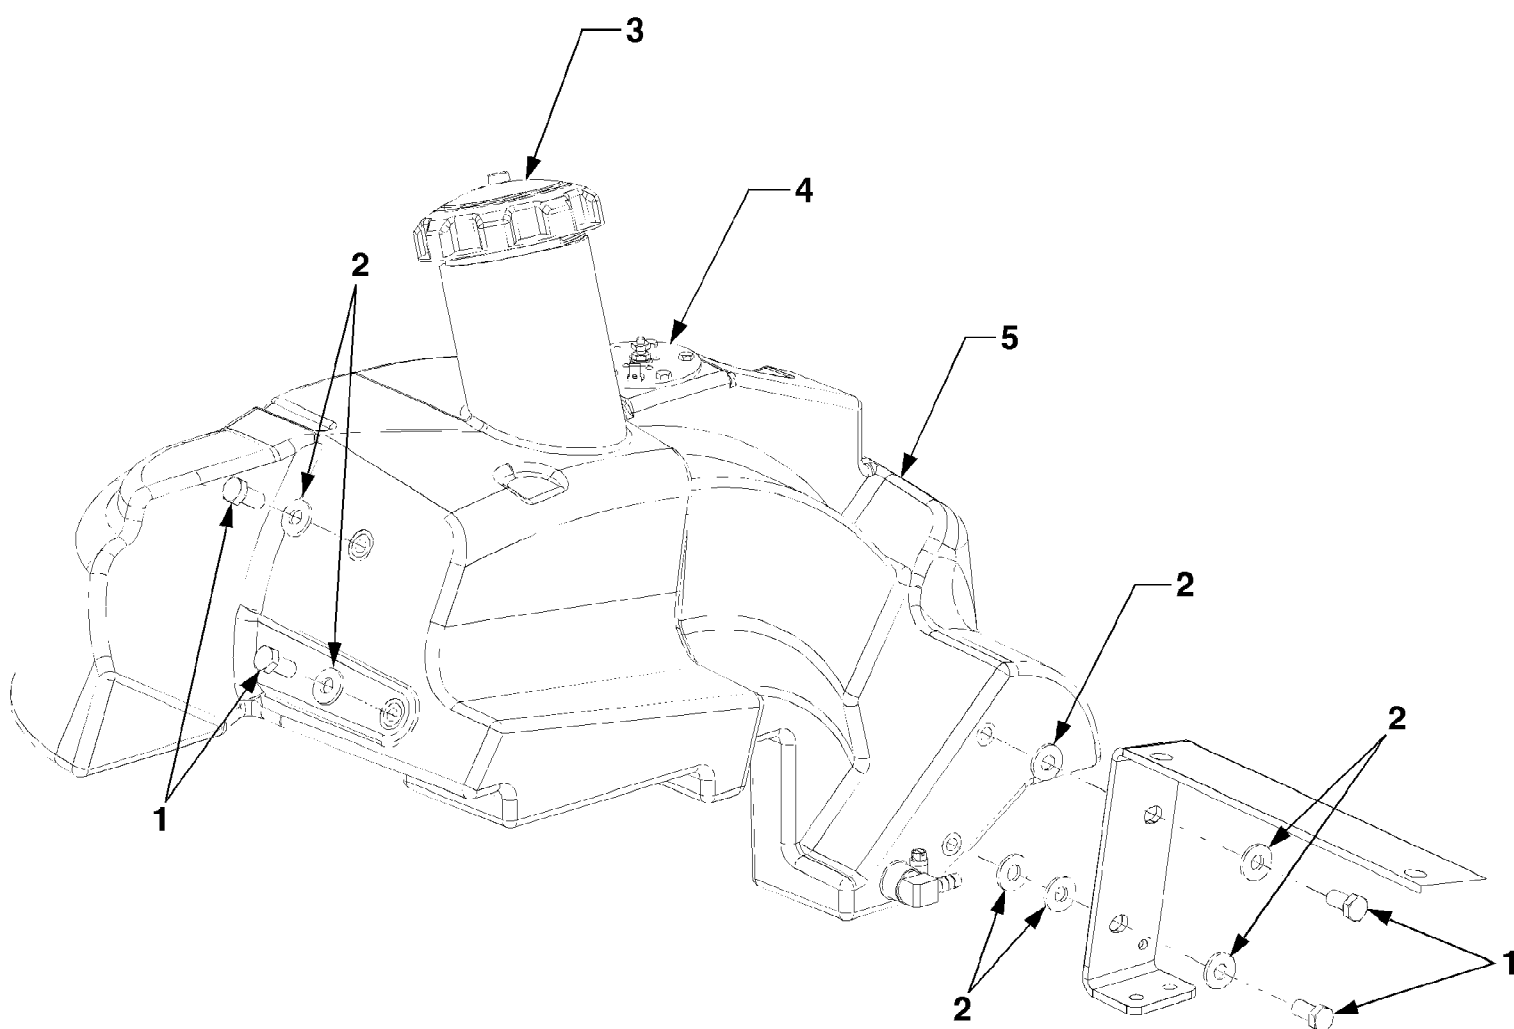


5252 Tractor
Fuel Tank

Page 31 of 70

Ref #	Part Number	Qty	S/P/F	Description
1	710-3119	4	/P	Screw, Hex Cap, Lock 3/8-16 x .75 GR5
2	736-0262	7	/P	Washer, Flat, .385 x .87 x .092
3	751-3124B	1	S	Cap, Fuel
4	751-10099	1	S	Sensor, Fuel Level
5	751-3212	1		Tank, Fuel

5252 Tractor
Hood, Grill and Side Panels (Mfg. code 1C315G and before)

Page 32 of 70

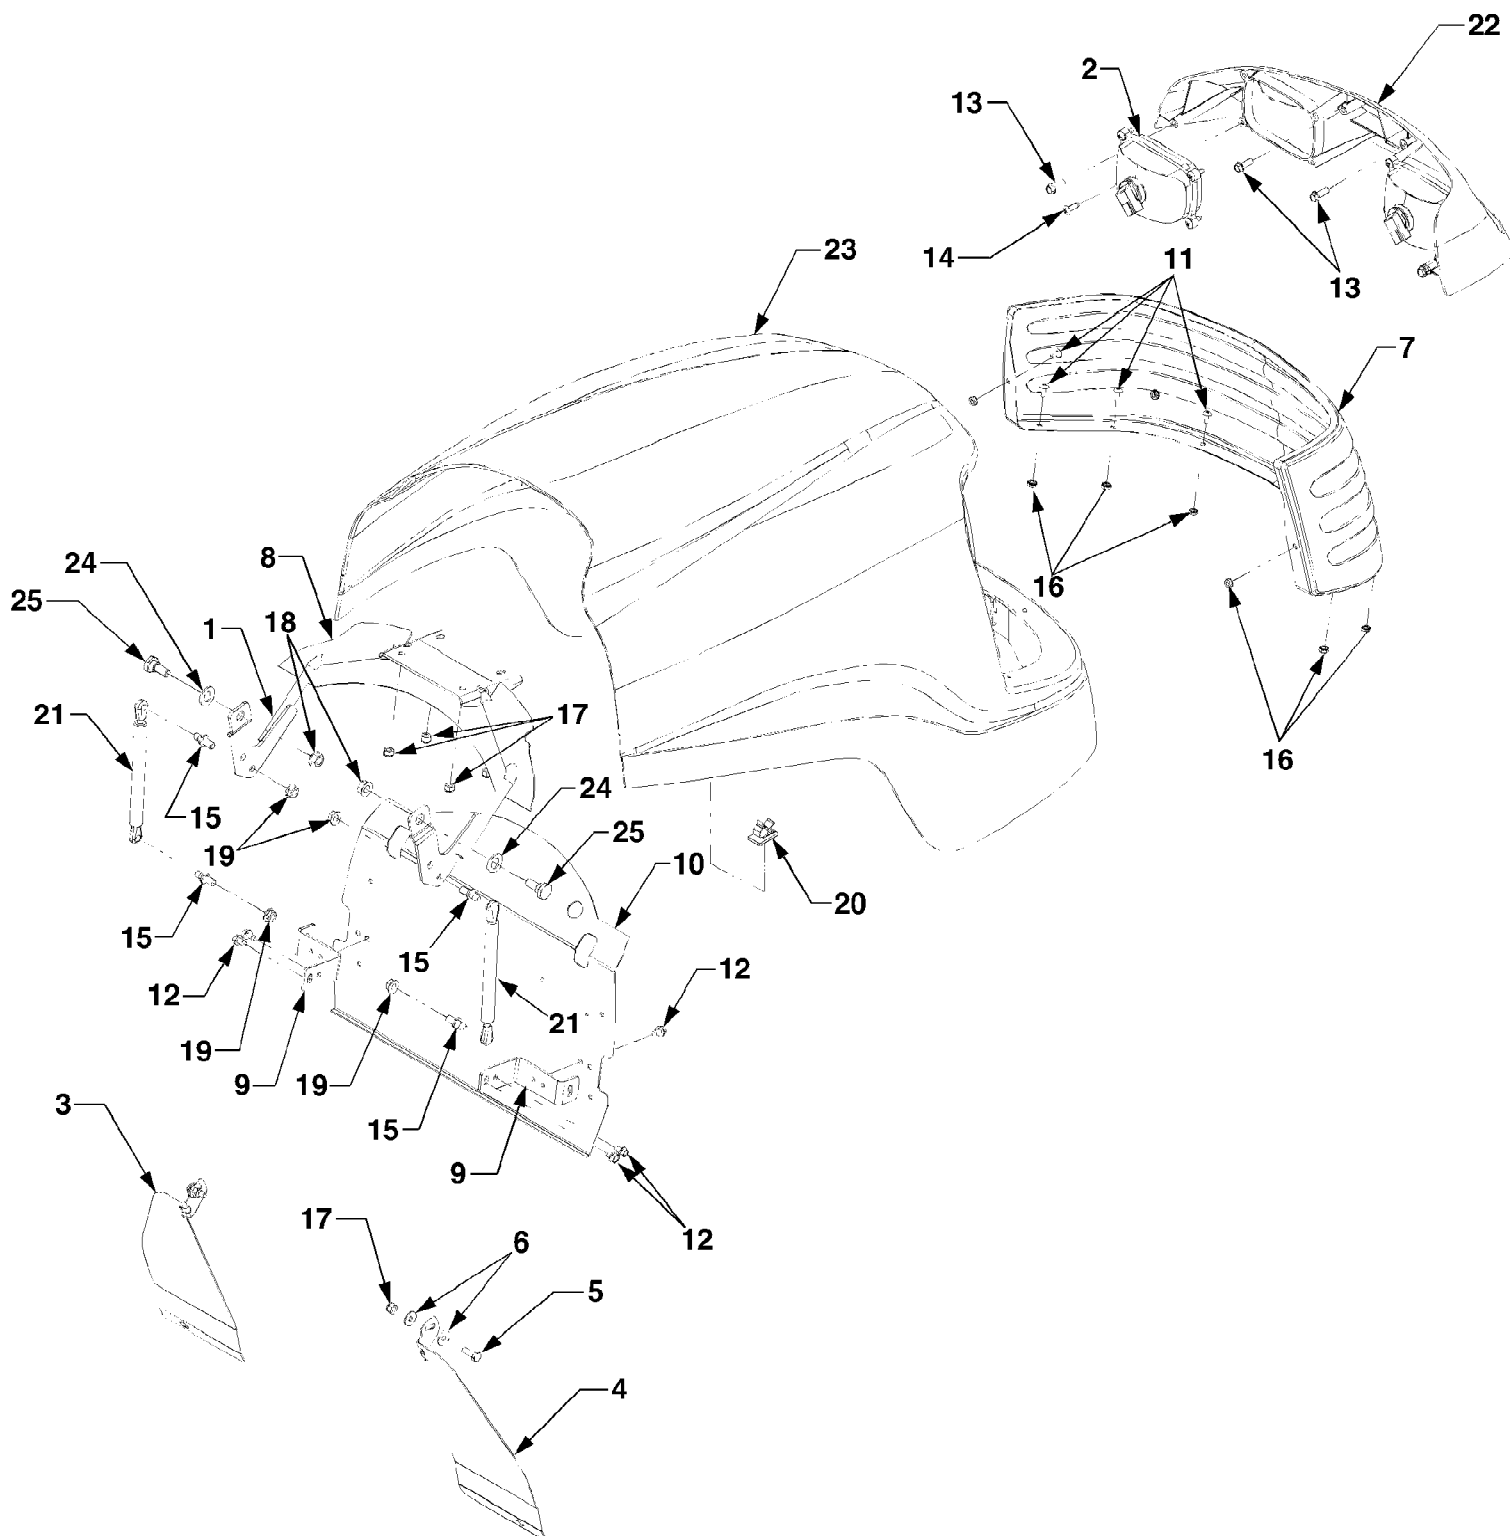

5252 Tractor


Page 33 of 70

Hood, Grill and Side Panels (Mfg. code 1C315G and before)

Ref #	Part Number	Qty	S/P/F	Description
1	603-0719A-0637	1	/P	Hinge Assembly, Hood
2	625-04004	1	S	Headlight Assembly
2	725-04084	2	S	Bulb Assembly, Headlight
3	703-05143-0637	1	/P	Shield, Running Board LH
4	703-05145-0637	1	/P	Shield, Running Board RH
5	710-3015	2	/P	Screw, Hex Cap, 1/4-20 x .75 GR5
6	736-3090	4	/P	Washer, Flat, .26 x .72 x .060
7	703-3394	1	S	Screen, Intake
8	703-3712A	1	S	Shield, Upper Heat
9	703-3764-0637	2		Bracket, Panel Mtg.
10	703-3765-0637	1		Shield, Lower Heat
11	710-0473	8	/P	Screw, Truss Hd, 10-24 x .5
12	710-0599	6	/P	Screw, Hex Wash Hd Tapp 1/4-20 x .5
13	710-0895	4		Screw, Hex Wash. Hd. 1/4-20 x .75
14	710-1220	8	/P	Screw, Truss Phil. Hd. 12-16 x .75
15	710-3170	4		Stud, Cylinder, 5/16-18 Thrd
16	712-0272	8	/P	Nut, Hex Sems, 10-24
17	712-0324	6	/P	Nut, Hex Nylon Insert Lock, 1/4-20
18	712-0431	2	S	Nut, Hex Flange Lock, 3/8-16
19	712-3004A	4	/P	Nut, Hex Flange Lock, 5/16-18
20	726-04010	1		Clip, Retaining
21	727-3194	2		Cylinder, Gas Spring
22	731-04211	1	S	Bezel, Headlight
23	759-04113A	1	/P	Hood, Service Kit Replaces 731-3277, Refer to diagram Hood 759-04113A
23	731-06889	1	S	Hood Replaces 731-3277
23	777D07558	1		Graphic, Hood RH
23	777D07559	1		Graphic, Hood LH
23	777D07727	1	/P	Graphic, Model 5252 LH
23	777D07728	1	/P	Graphic, Model 5252 RH
24	736-0192	2	S	Washer, Flat, .531 x .93 x .090
25	738-0380	2	S	Screw, Shoulder, .5 x .27 Lg 3/8-16

5252 Tractor
Hood, Grill and Side Panels (Mfg. Code 1D015G and after)

Page 34 of 70

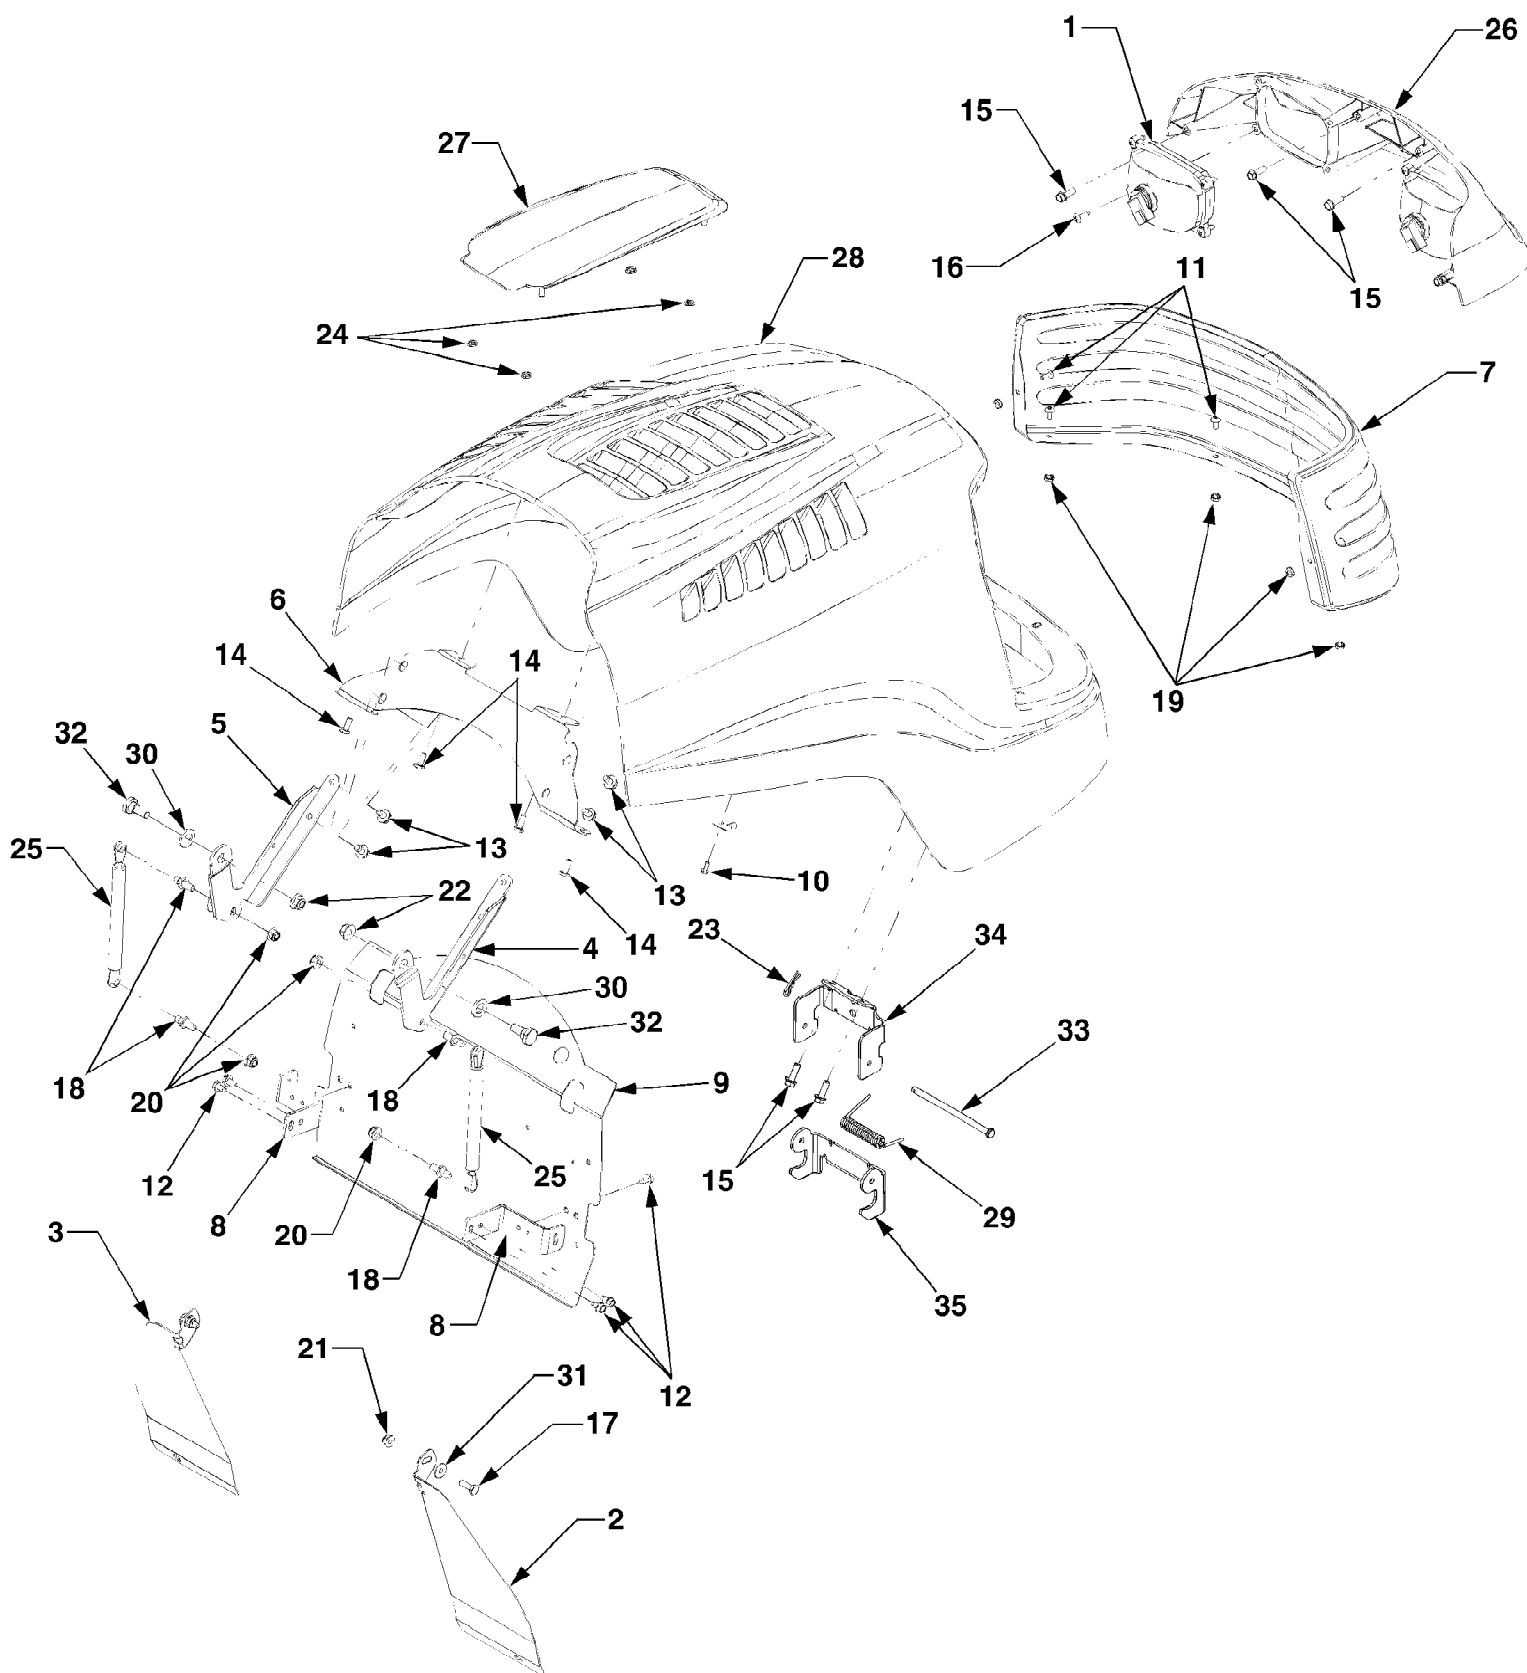

5252 Tractor


Page 35 of 70

Hood, Grill and Side Panels (Mfg. Code 1D015G and after)

Ref #	Part Number	Qty	S/P/F	Description
1	625-04004	1	S	Headlight Assembly
1	725-04084	2	S	Bulb Assembly, Headlight
2	703-05143-0637	1	/P	Shield, Running Board LH
3	703-05145-0637	1	/P	Shield, Running Board RH
4	703-05652-0637	1		Bracket, Hinge, RH
5	703-05653-0637	1		Bracket, Hinge, LH
6	703-05655-0637	1		Bracket, Hood Mounting
7	703-3394	1	S	Screen, Intake
8	703-3764-0637	2		Bracket, Panel Mtg.
9	703-3765-0637	1		Shield, Lower Heat
10	710-04164	1	/P	Screw, Hex Wash Hd, #8-18 x .375
11	710-0473	6	/P	Screw, Truss Hd, 10-24 x .5
12	710-0599	6	/P	Screw, Hex Wash Hd Tapp 1/4-20 x .5
13	710-0607	4	/P	Screw, Hex Wash Hd Tapp 5/16-18 x .
14	710-0751	4	/P	Screw, Hex Cap 1/4-20 x .62 GR5
15	710-0895	6		Screw, Hex Wash. Hd. 1/4-20 x .75
16	710-1220	8	/P	Screw, Truss Phil. Hd. 12-16 x .75
17	710-3015	2	/P	Screw, Hex Cap, 1/4-20 x .75 GR5
18	710-3170	4		Stud, Cylinder, 5/16-18 Thrd
19	712-0272	6	/P	Nut, Hex Sems, 10-24
20	712-04063	4	/P	Nut, Hex Insert Flange Lock, 5/16-18
21	712-04064	2	/P	Nut, Hex Insert Flange Lock, 1/4-20
22	712-04065	2	/P	Nut, Hex Insert Flange Lock, 3/8-16
23	714-0104	1	S	Pin, Internal Cotter
24	726-0233	4	/P	Nut, Push, .25 ID
25	727-3194	2		Cylinder, Gas Spring
26	731-04211	1	S	Bezel, Headlight
27	731-05161	1	S	Cover, Hood
28	759-04210	1	/P	Hood, Service Kit (contains 931-06889, 726-0233, 710-1242, 721-04162 and installation instructions)
28	931-06889	1		Hood Replaces 731-05301
28	726-0233	4	/P	Push Nut .25 x .50 not shown
28	710-1242	4	/P	Screw, Hi Low 5/16-14 x .75 not shown
28	721-04162	2		Foam Strip not shown
28	777D07558	1		Graphic, Hood RH not shown
28	777D07559	1		Graphic, Hood LH not shown
28	777D07727	1	/P	Graphic, Model 5252 LH not shown
28	777D07728	1	/P	Graphic, Model 5252 RH not shown
29	732-04281A	1	/P	Spring, Torsion
30	736-0272	2	S	Washer, Flat, .51 x 1.0 x .060
31	736-3090	2	/P	Washer, Flat, .26 x .72 x .060
32	738-0380	2	S	Screw, Shoulder, .5 x .27 Lg 3/8-16
33	747-1323A	1		Rod, .25 x 4.55
34	783-04714	1	S	Plate, Latch
35	783-4717A	1		Bracket, Latch Pivot

5252 Tractor
Hood, Service Kit 759-04113A (Mfg. code 1C315G and before)

Page 36 of 70

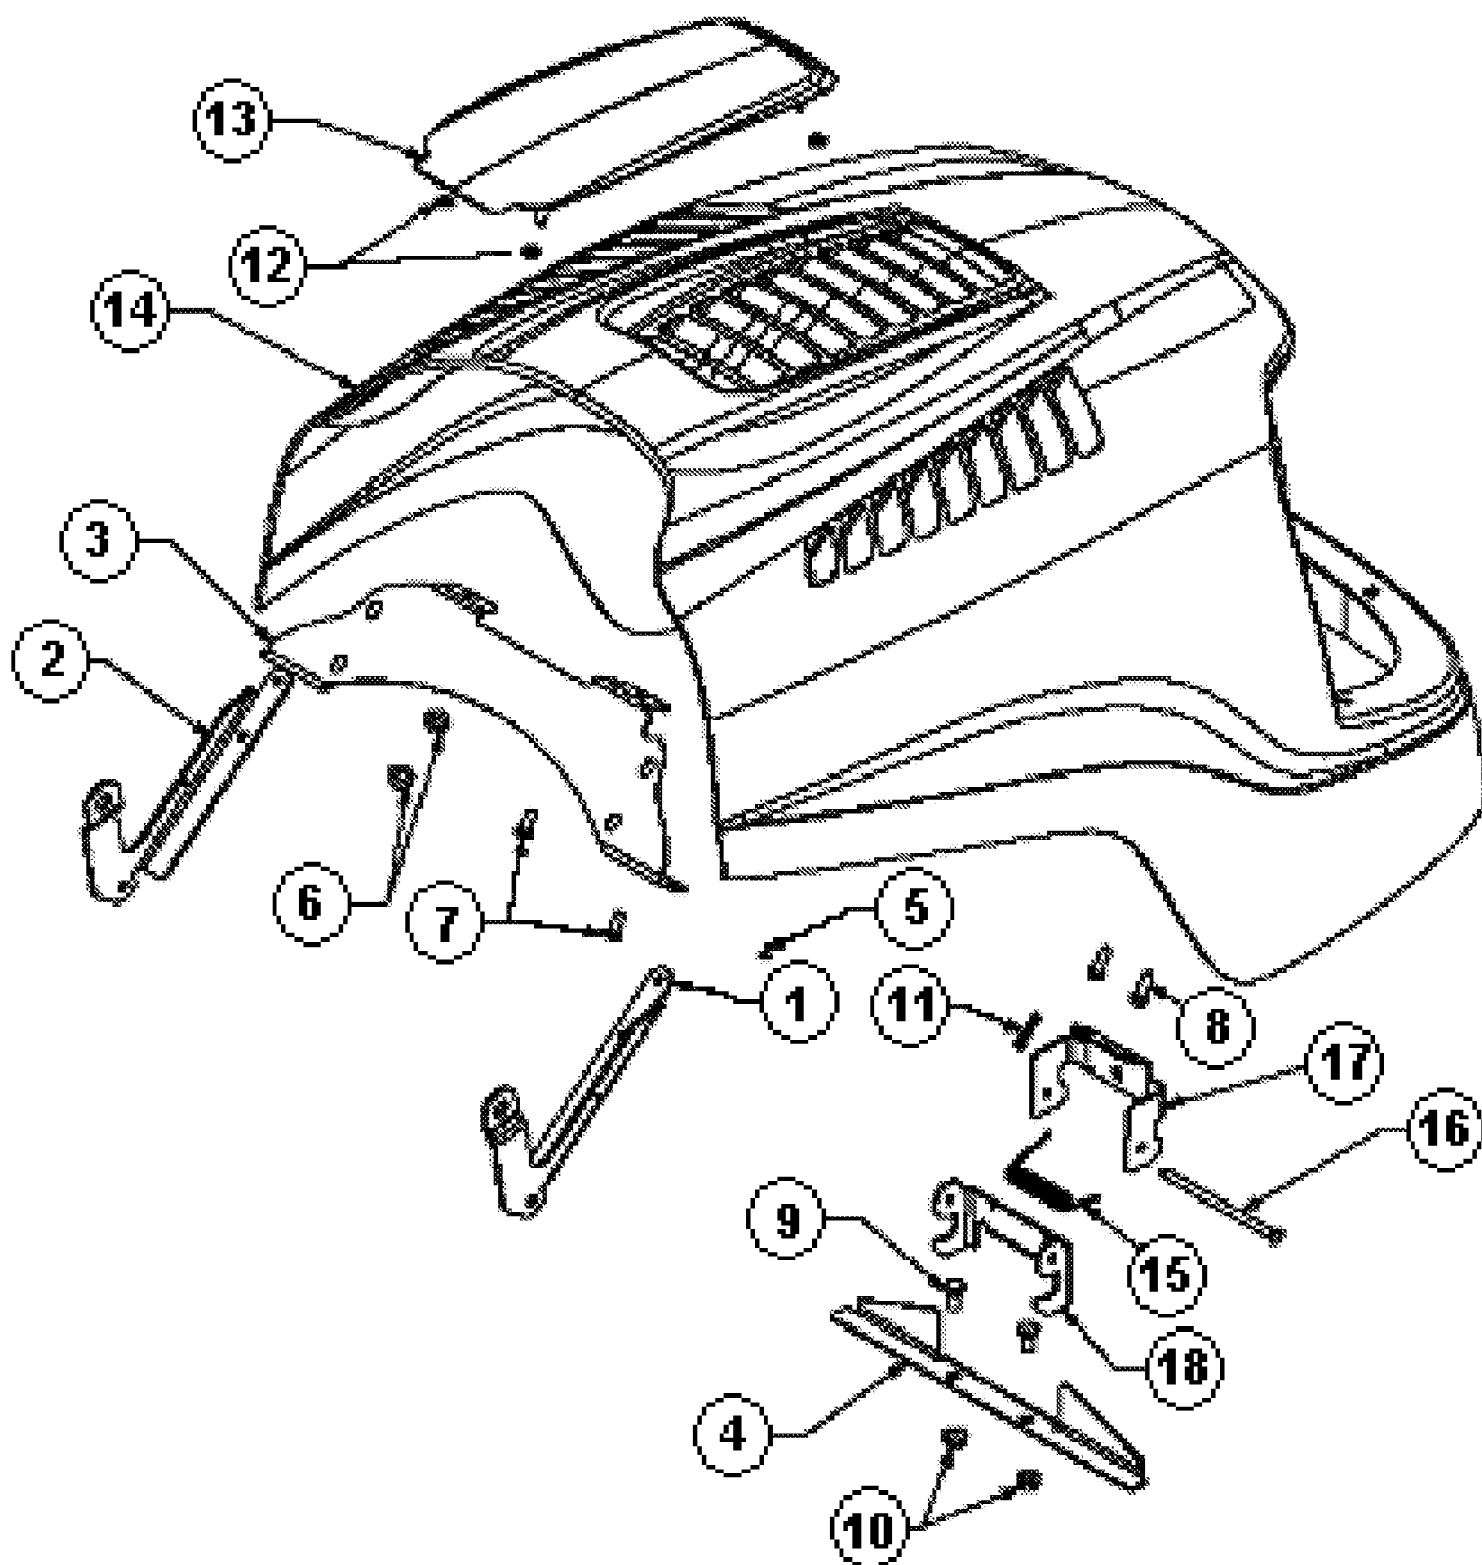


5252 Tractor

Page 37 of 70

Hood, Service Kit 759-04113A (Mfg. code 1C315G and before)

Ref #	Part Number	Qty	S/P/F	Description
1	703-05652	1		RH Hinge Bracket
2	703-05653	1		LH Hinge Bracket
3	703-05655A	1		Hood Mounting Bracket
4	703-05782	1	/P	Hood Latch Bracket
5	710-0224	1	S	#10-16 x .500 Hex Screw
6	710-0607	4	/P	5/16-18 x .50 Screw
7	710-1242	4	/P	5/16-14 x .75 HiLow Screw
8	710-0895	2		1/4-20 x .750 Screw
9	710-3025	2	/P	5/16-18 x .625 Bolt
10	712-04063	2	/P	5/16-18 Nylon Flange Lock Nut
11	714-0104	1	S	Cotter Pin
12	726-0233	4	/P	Push Nut
13	731-05161	1	S	Hood Cover
14	731-06889	1	S	Hood
15	732-04281A	1	/P	Latch Spring
16	747-1323A	1		Pivot Rod
17	783-04714	1	S	Latch Plate
18	783-04717A	1	/P	Pivot Latch Bracket
N/S	721-04162	2		Foam Strip
N/S	736-0400	2	S	Flat washer
N/S	726-0272	1	/P	Clamp
	759-04113A	1	/P	Service Kit Includes all parts shown on page

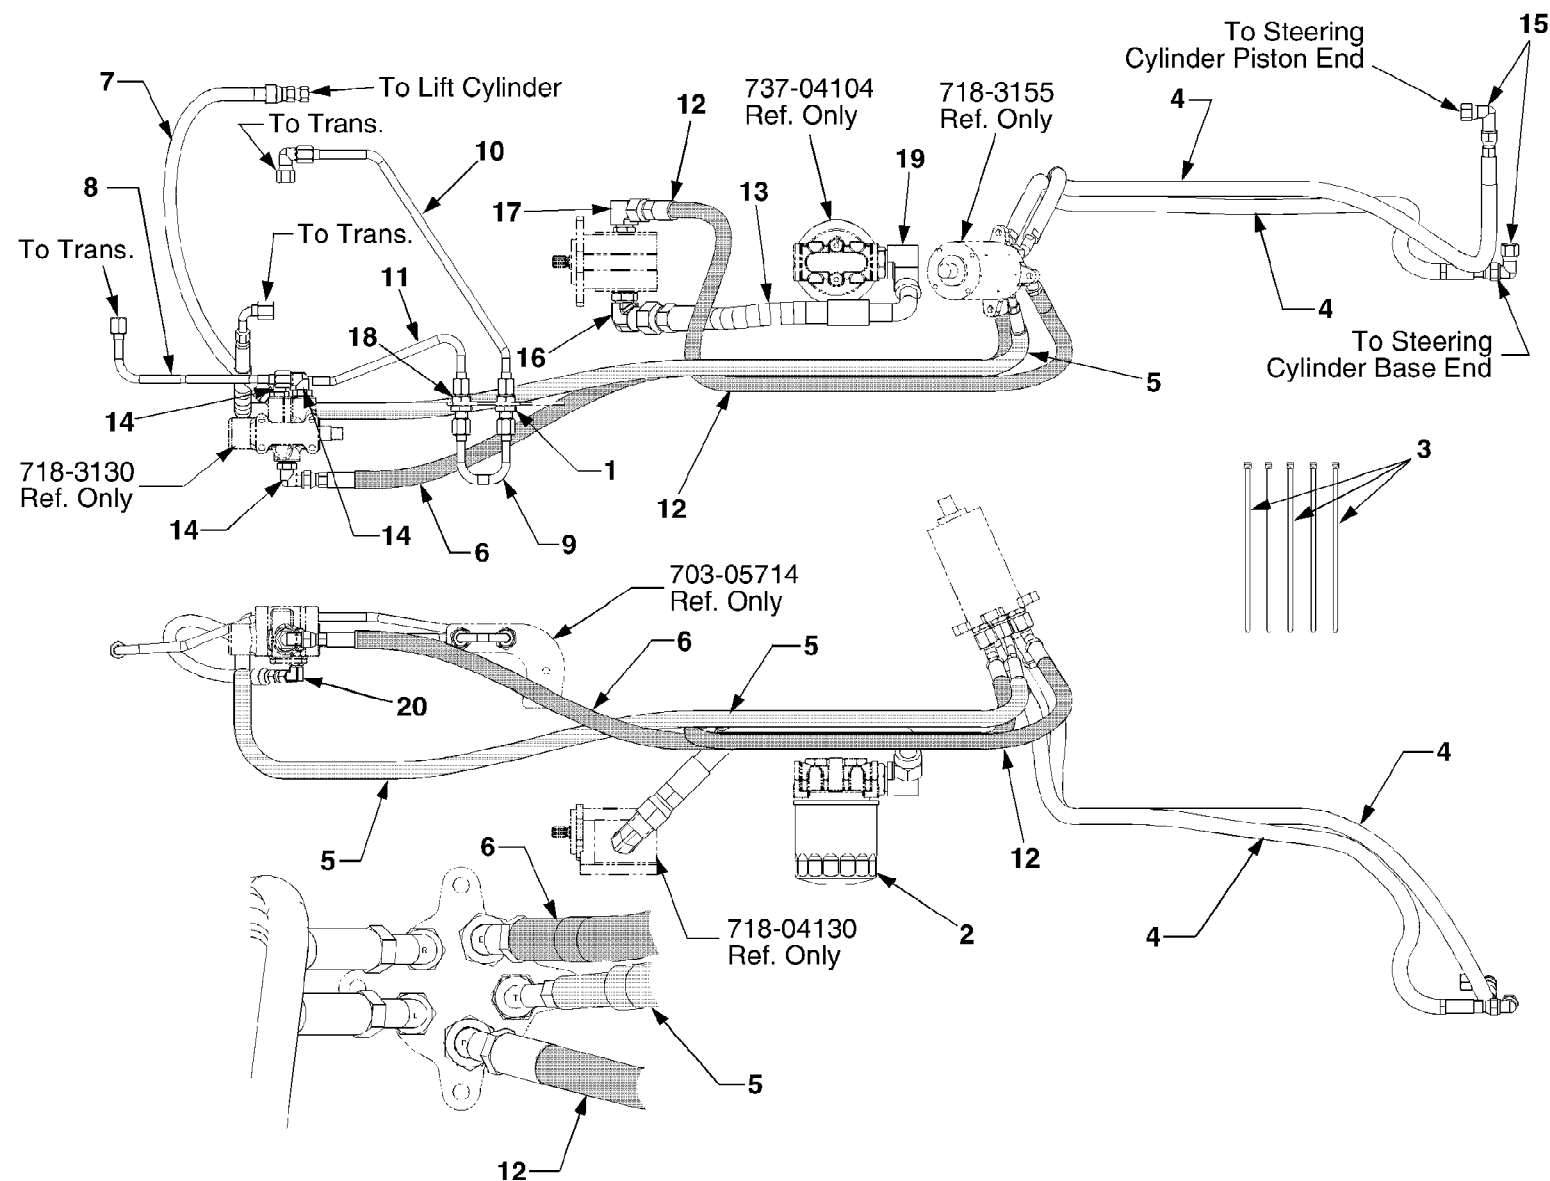


5252 Tractor
Hydraulics

Page 39 of 70

Ref #	Part Number	Qty	S/P/F	Description
1	712-3035	2	/P	Nut, Hex Jam, 9/16-18 GR5
2	723-3014	1	S	Filter, Oil
3	725-0157	7	/P	Tie, Cable
4	727-04000	2		Hose, Steering
5	727-04002	1		Hose, Steering - Tank
6	727-04003	1		Hose, Lift Inlet
7	727-04014	1		Hose, Lift Cylinder
8	727-04015	1		Tube, Cylinder Return
9	727-04079	1		Tube, U Return
10	727-04082	1		Tube, Return Tank
11	727-04083	1		Tube, Return
12	727-04096	1	S	Hose, Steering Pressure
13	727-04097	1	S	Hose, Aux. Pump-Filter
14	727-3012	3	/P	Fitting, 90 Degree
15	737-04033	3	S	Fitting, 90 Degree Swivel
16	737-04035	1	S	Fitting, Elbow
17	737-3111	1		Fitting, 90 Degree
18	737-04087	2		Fitting, Bulkhead
19	737-04101	1		Fitting, 90 Degree
20	737-3127	1		Fitting, 90 Degree

5252 Tractor
Hydrostatic Transmission


Page 40 of 70

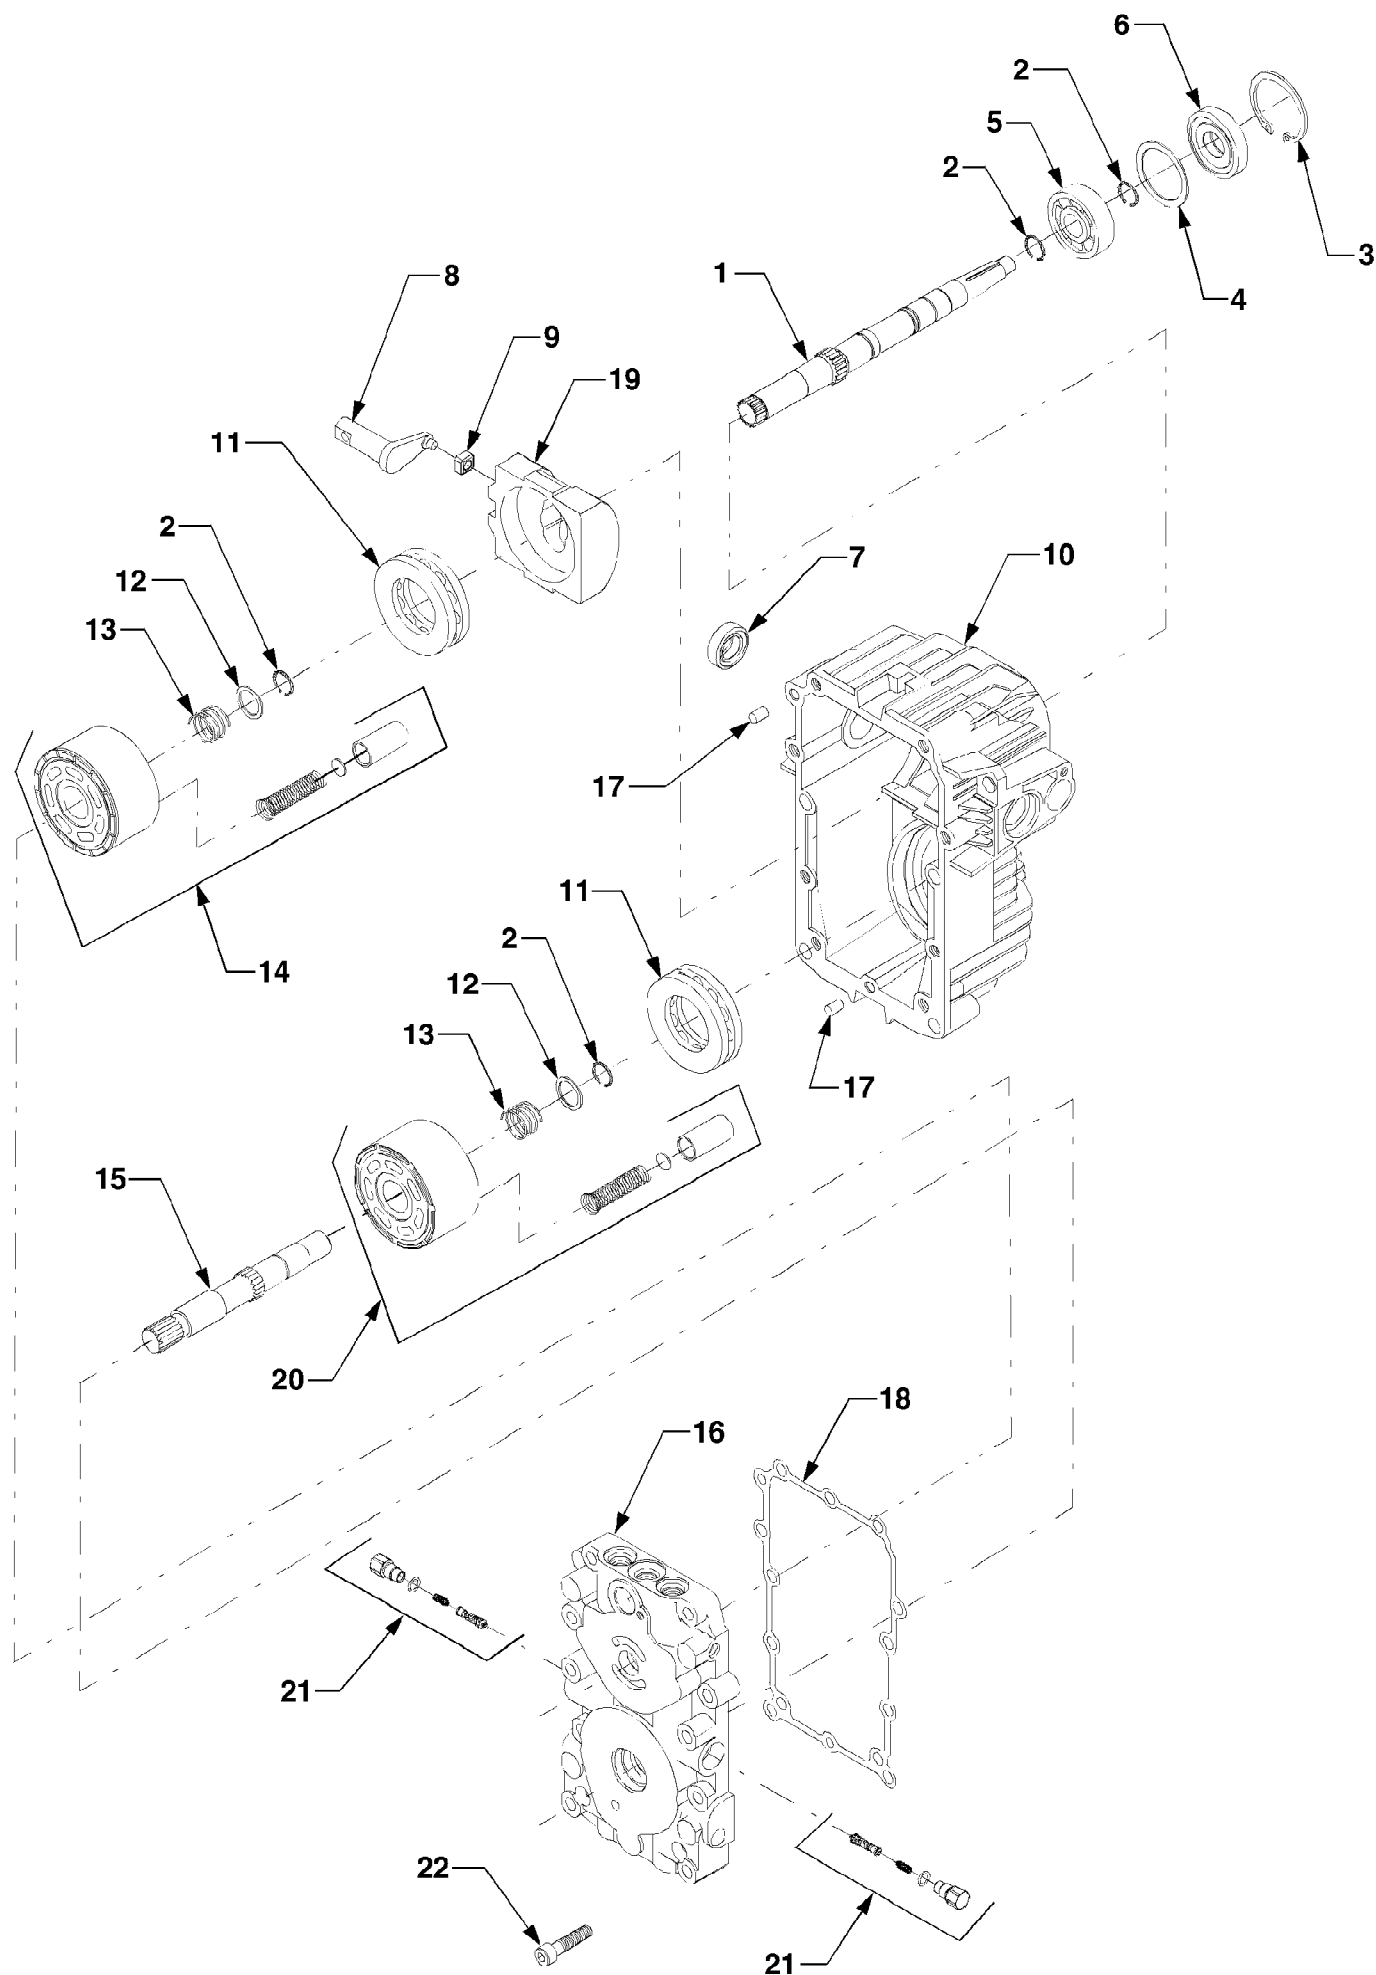

5252 Tractor
Hydrostatic Transmission

Page 41 of 70


Ref #	Part Number	Qty	S/P/F	Description
1	HG-52224	1	/P	Shaft, Pump Input
2	HG-2000022	4	/P	Ring, Wire Retaining
3	HG-2000038	1	/P	Ring, Retaining
4	HG-2000023	1	/P	Spacer
5	HG-2000032	1	/P	Bearing, Ball
6	HG-51092	1	/P	Seal, Lip
7	HG-2000037	1	/P	Seal, Lip
8	HG-2000014	1	/P	Arm, Trunnion
9	HG-2000015	1	/P	Guide, Slot
10	HG-2510096	1	/P	Housing Assembly
11	HG-50552	2	/P	Bearing Assembly, Thrust Ball
12	HG-2000024	2	/P	Washer, Block Thrust
13	HG-2000025	2	/P	Spring, Block
14	HG-2510014	1	/P	Kit, Pump Cylinder Block
15	HG-2000007	1	/P	Shaft, Motor
16	HG-70973	1		Kit, Center Section
17	HG-50641	2		Pin
18	HG-2000061	1	/P	Gasket, Center Section
19	HG-50203	1		Swashplate, Variable
20	HG-2510013	1	/P	Kit, Motor Cylinder Block
21	HG-70743	2	/P	Shock Valve
22	HG-9007314-0808	8	/P	Screw, Socket Head Cap
	HG-2510010	1	/P	Kit, Overhaul Seal

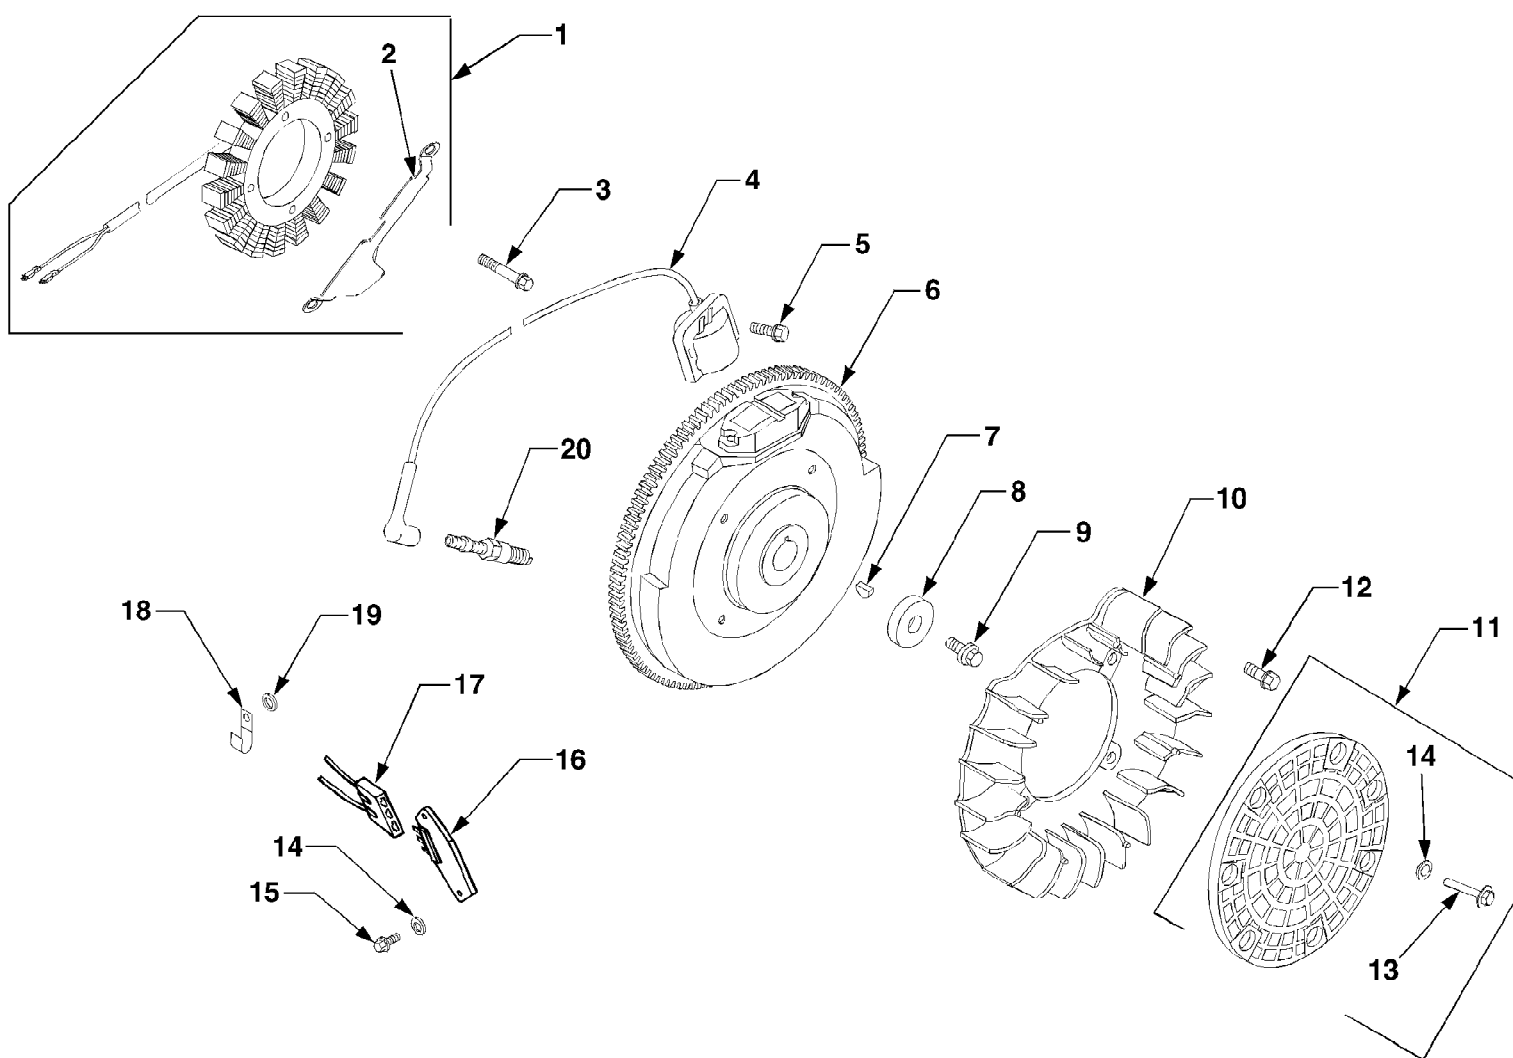

5252 Tractor
Ignition Electrical

Page 43 of 70


Ref #	Part Number	Qty	S/P/F	Description
1	KH-54-755-09-S	1	S	Kit, 15 Amp Stator (Includes Ref. 2)
2	KH-24-126-139-S	1		Bracket, Stator
3	KH-M-548025-S	2	/P	Screw, Hex Cap M5 x 0.8 x 25 .
4	KH-24-584-01	2	S	Module, Ignition
5	KH-M-545020-S	4		Screw, Hex Flange M5 x 0.8 x 20
6	KH-24-025-04	1	S	Flywheel
7	KH-X-42-15	1	/P	Key
8	KH-12-468-03	1	/P	Washer, Plain 3/8"
9	KH-12-086-14	1		Screw, Hex Flange M10 x 1.5 x 46
10	KH-24-157-07-S	1	S	Fan
11	KH-54-755-15	1	/P	Kit, Grass Screen (Includes Ref. Nos. 13-15)
12	KH-25-086-47	4	/P	Bolt, Shoulder, M6 x 1.0 x 16 ...
13	KH-25-086-117-S	4		Screw, Hex Cap M4 x 0.7 x 25 .
14	KH-X-25-92	3		Washer, Plain 3/16"
15	KH-24-086-18	2		Screw, Phillips Hd. 11-16 x 7/8"
16	KH-25-403-05-S	1	S	Rectifier-regulator 15 Amp
17	KH-236602-S	1	S	Connector (3 Contact)
18	KH-235173	1		Clip, Cable
19	KH-X-25-63	1	/P	Washer, Plain 1/4"
20	759-3336	2	/P	Spark Plug
	KH-24-176-08	1	S	Harness, Wire
	KH-24-126-137-S	1		Bracket, Ground Strap
	KH-25-086-91-S	2	/P	Screw, Tapping, #10-16 x .5
	KH-25-454-03-S	1		Tie, Wire

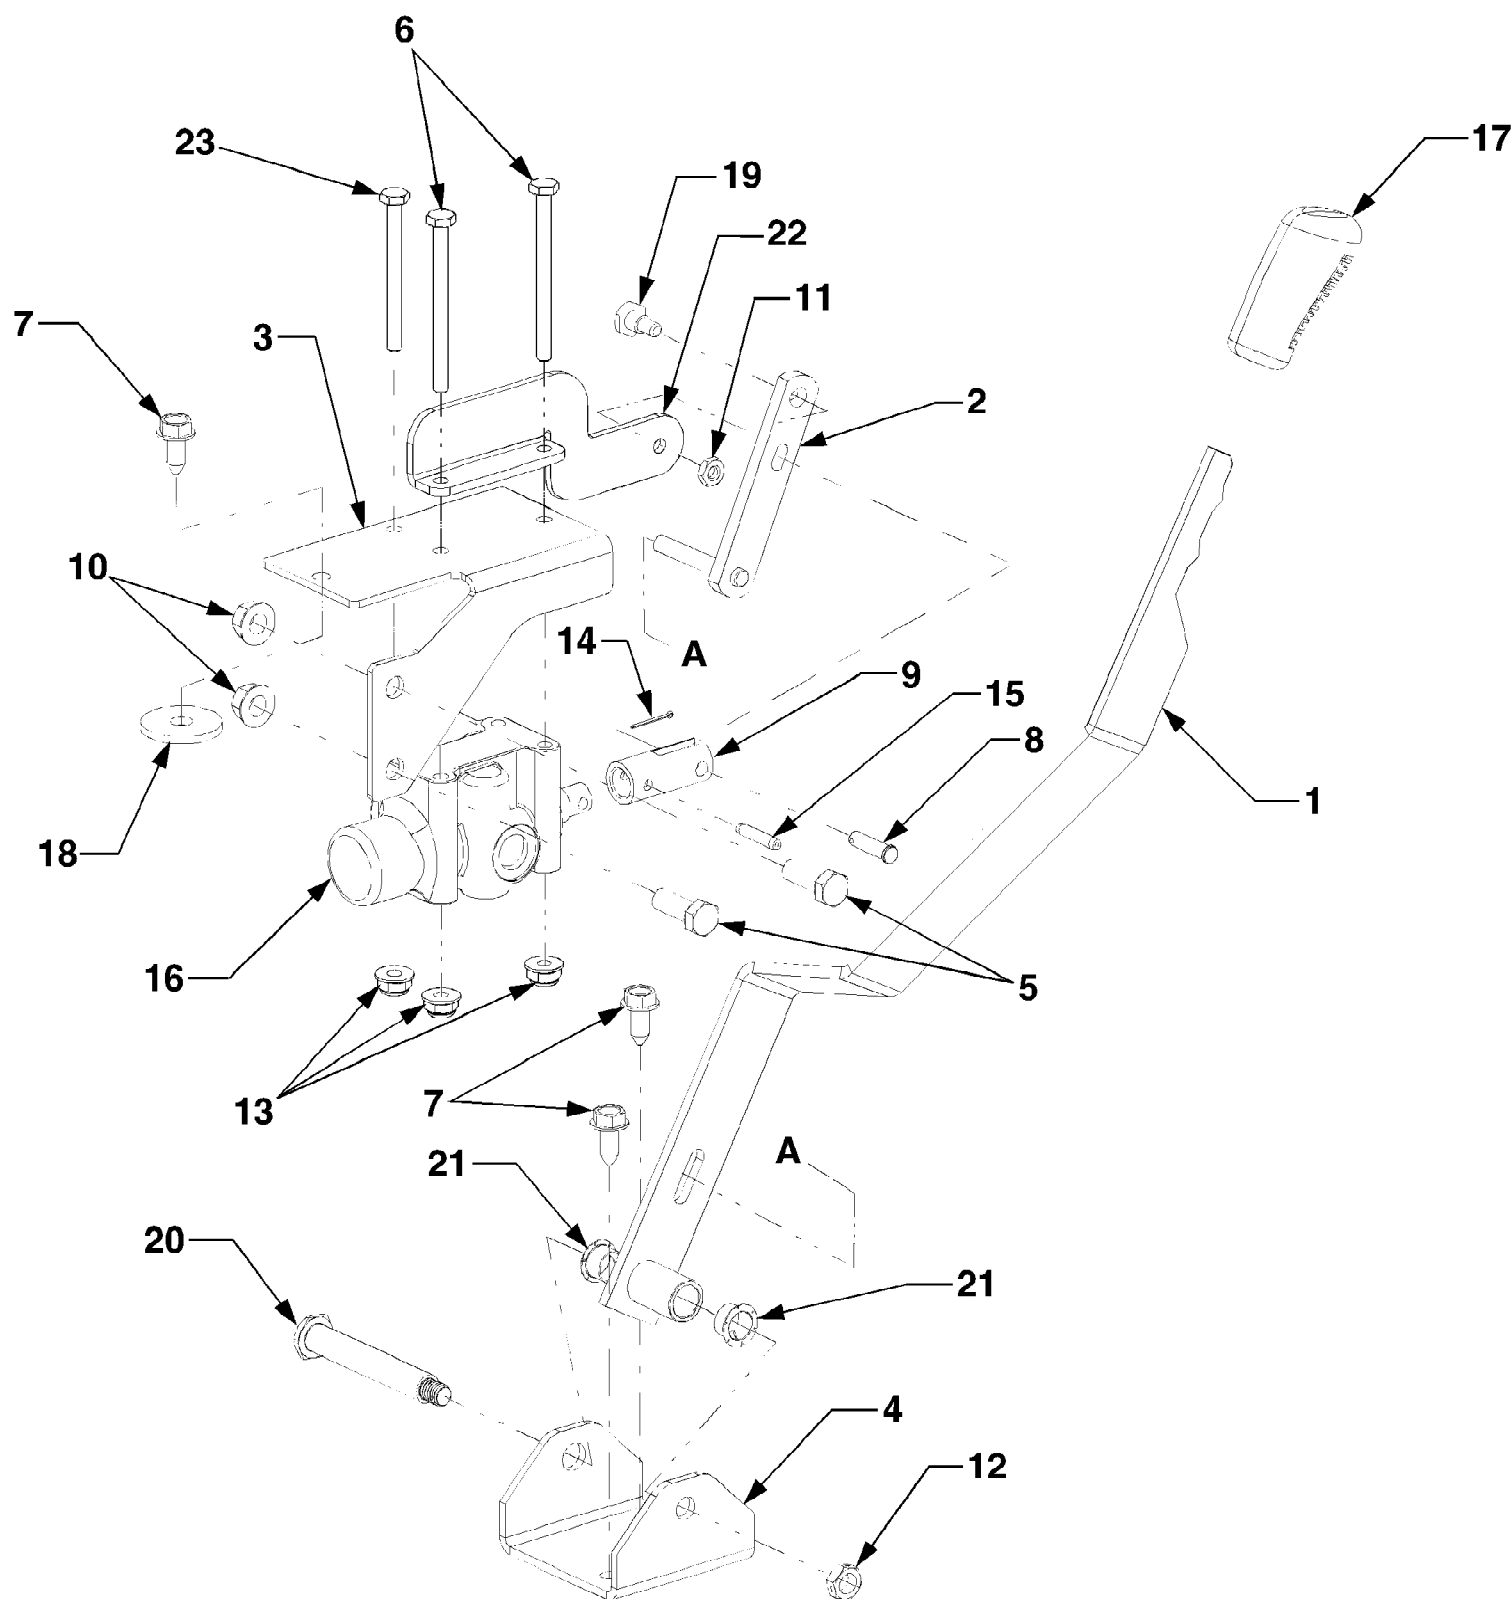

5252 Tractor
Lift Valve

Page 45 of 70


Ref #	Part Number	Qty	S/P/F	Description
1	603-04032	1	S	Handle, Lift
2	603-04033	1	S	Link, Valve
3	703-05090-0637	1		Bracket, Lift Valve Mounting
4	703-05038	1	S	Bracket, Handle Pivot
5	710-0514	2	/P	Screw, Hex Cap, 3/8-16 x 1.0 GR5
6	710-04370	2		Screw, Hex Cap 1/4-20 x 3.0 GR5
7	710-1260A	3	/P	Screw, Hex Wash, Hd Tapp 5/16-18 x .75
8	711-04214	1		Pin, Clevis, .25 x .9375
9	711-1614	1		Link, Valve
10	712-04065	2	/P	Nut, Hex Flange Nylon Lock, 3/8-16 GRF
11	712-0298	1	S	Nut, Hex Jam, 1/4-20
12	712-0266	1	S	Nut, Hex Ctr Lock Jam, 3/8-16 ..
13	712-04064	3	/P	Nut, Hex Flange Nylon Lock 14-20 GRF
14	714-0127	1	/P	Pin, Cotter, 1/16 x .75
15	715-0120	1	S	Pin, Spirol, 3/16 x 1.0
16	718-3130	1		Valve, Hydraulic Lift
17	731-3321	1		Grip, Handle
18	736-0258	1	/P	Washer, Flat, .385 x 1.0 x .135
19	738-0137A	1	S	Screw, Shoulder, .34 x .285
20	738-0215A	1	/P	Screw, Shoulder, .498 x 2.99
21	741-0491	2		Bearing, Nylon Flange .5 ID
22	703-05545-0637	1		Link, Lift Valve Mounting
23	710-0564	1	/P	Screw, Hex Cap, 1/4-20 x 2.75 GR5

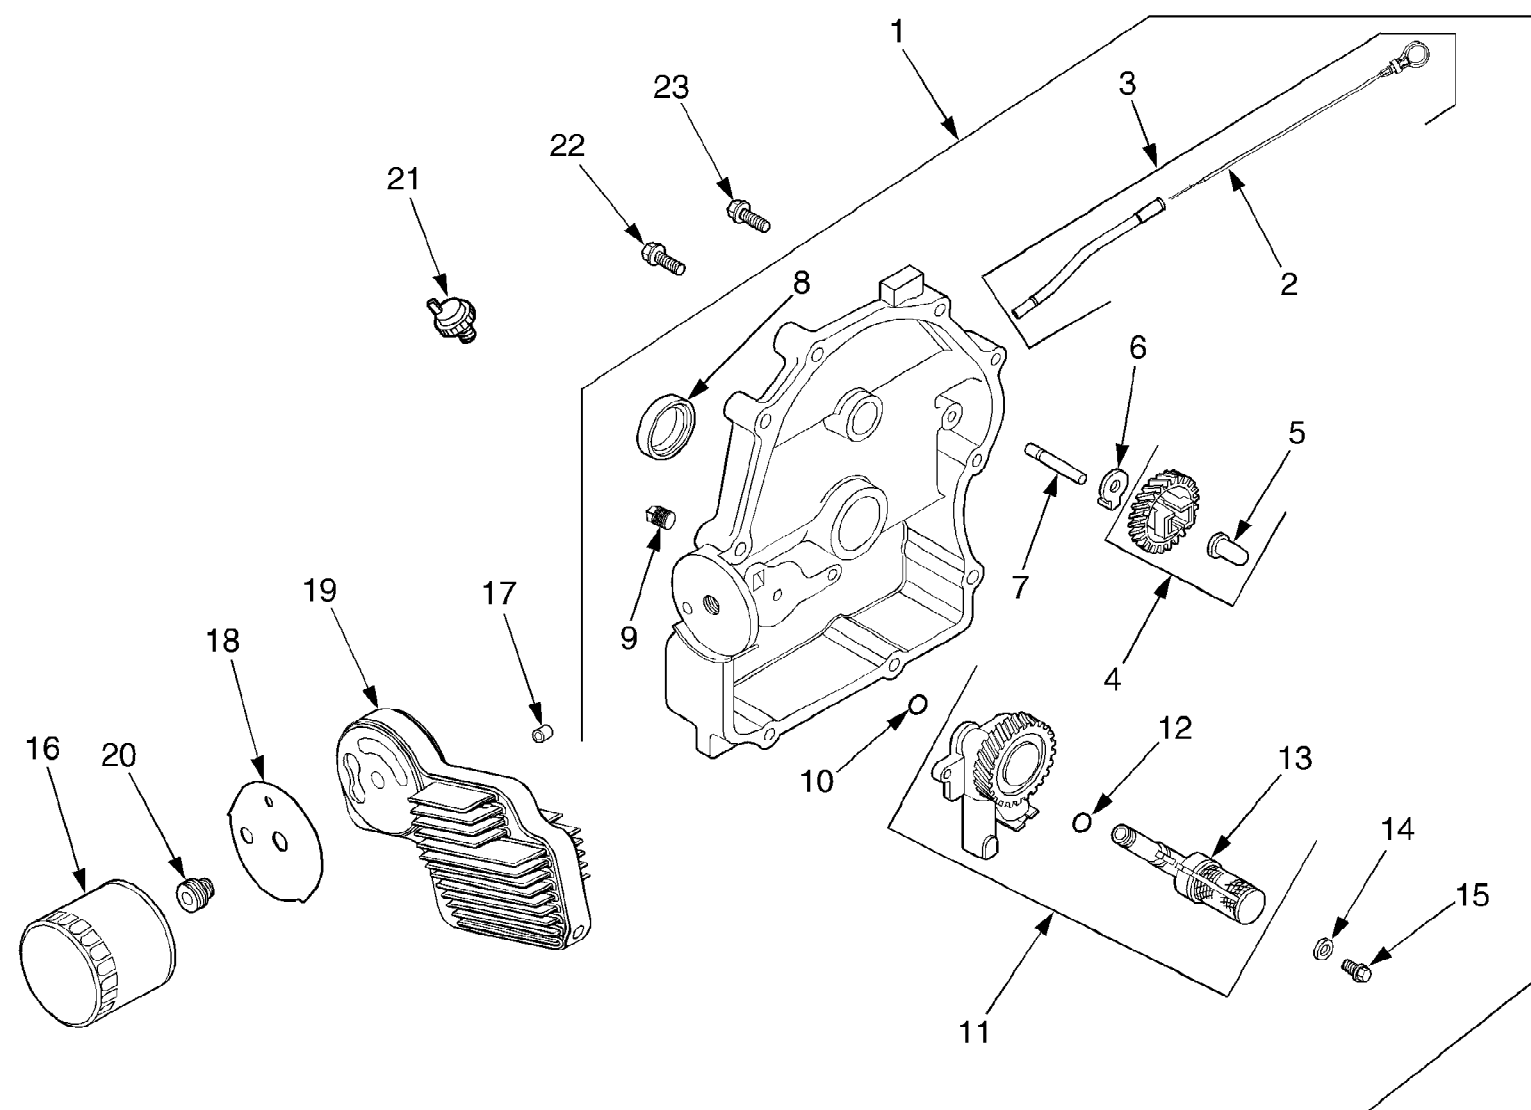

5252 Tractor
Oil Pan Lubrication

Page 47 of 70


Ref #	Part Number	Qty	S/P/F	Description
1	KH-24-009-153-S	1		Plate, Closure Assembly (Includes 2-15)
2	KH-24-038-10-S	1	/P	Dipstick
3	KH-24-755-121-S	1	/P	Tube, Dipstick (Includes 2)
4	KH-24-043-12	1	/P	Kit, Governor Gear (Includes 5) ..
5	KH-12-380-01	1	/P	Pin, Governor Regulating
6	KH-24-448-02-S	1		Tab, Locking
7	KH-12-144-02	1		Shaft, Governor Gear
8	KH-52-032-08	1	S	Seal, Oil (PTO End)
9	KH-25-139-60-S	2	/P	Plug, Pipe 1/8"
10	KH-24-153-08	1		O-Ring
11	KH-24-393-37-S	1	S	Oil Pump Assembly (Includes 12,13)
12	KH-24-153-01	1	/P	O-Ring, Oil Pick-Up
13	KH-24-381-04	1		Pick-Up, Oil
14	KH-M-0631005	2	S	Washer, Plain
15	KH-M-0645025	2	S	Screw, Hex Flange M6 x 1 x 25 ..
16	KH-12-050-08	1	S	Filter, Oil
17	KH-24-380-13-S	1	S	Pin, Locating
18	KH-24-041-29	1		Gasket, Adapter
19	KH-24-594-24-S	1		Cooler, Oil
20	KH-24-136-05-S	1		Nipple, Oil Filter
21	KH-25-099-24	1	S	Switch, Pressure
22	KH-24-086-16	9	S	Screw, Hex Flange M8 x 1.25 x 45
23	KH-24-100-10-S	1		Nut, Hex Flange, M8 x 1.25

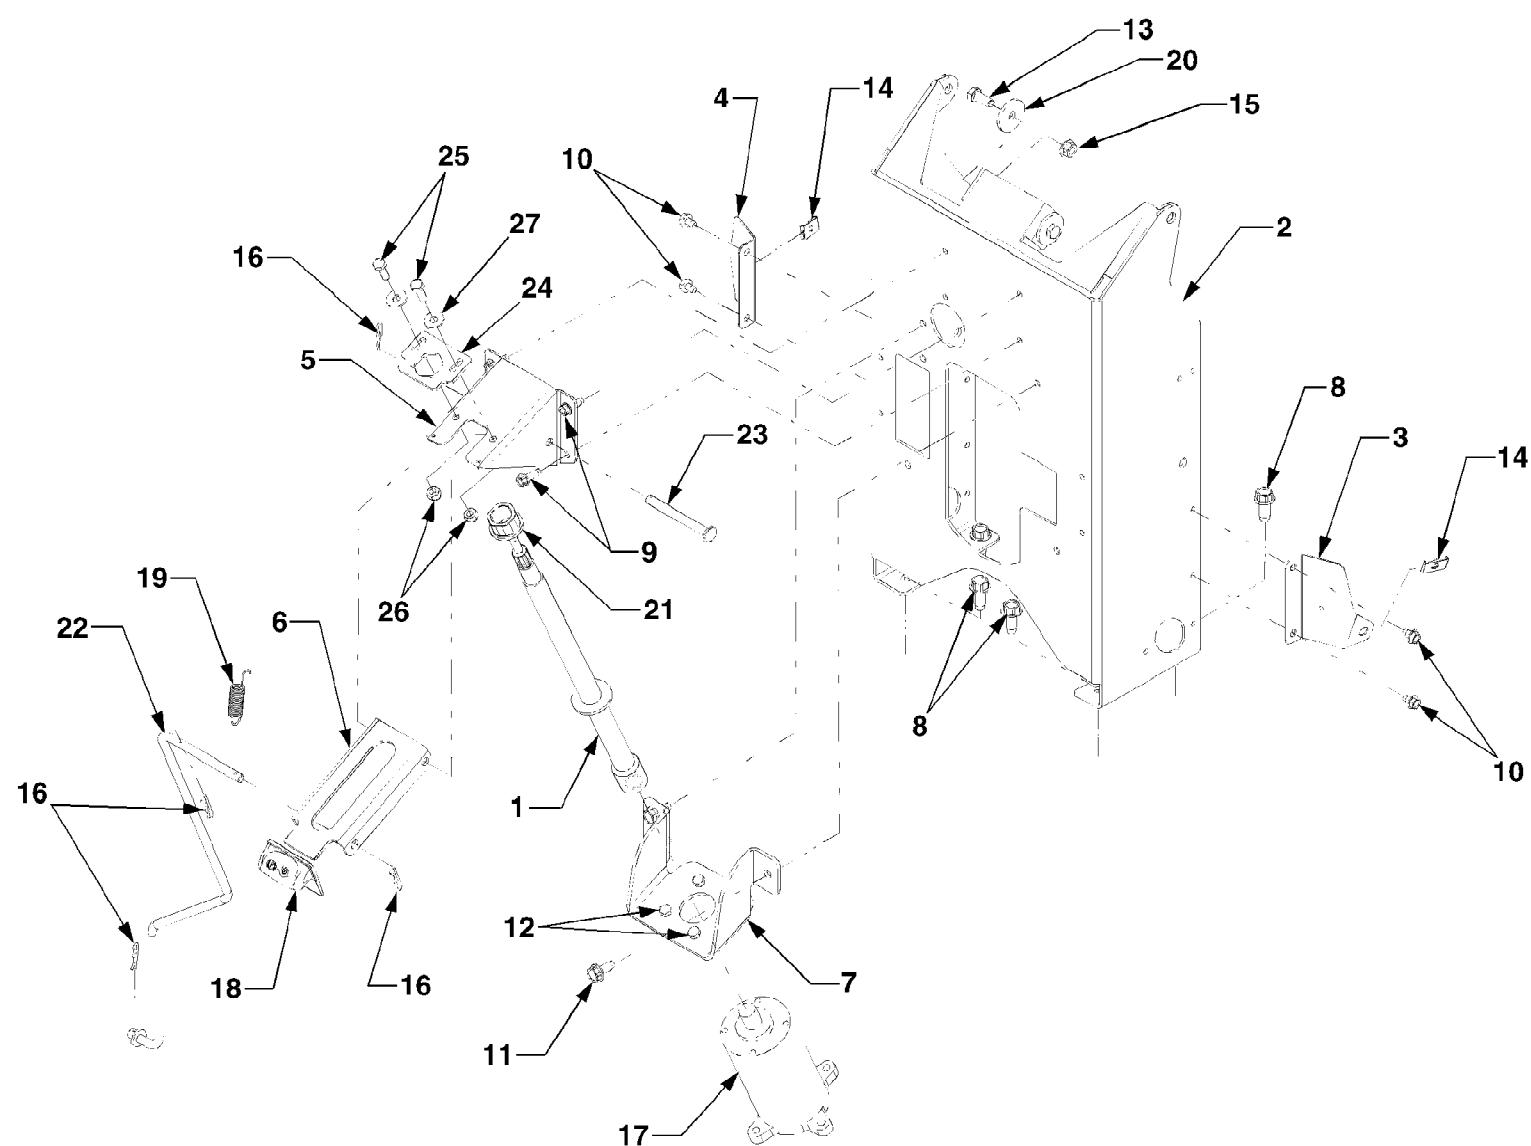

5252 Tractor
Pedestal

Page 49 of 70


Ref #	Part Number	Qty	S/P/F	Description
1	603-04001A	1	S	Shaft, Steering
2	703-3383D-0637	1	/P	Pedestal
3	703-3717	1		Bracket, Dash Mtg. RH
4	703-3721	1		Bracket, Dash Mtg. LH
5	703-05361-0637	1	/P	Bracket, Steering Column
6	703-3895	1		Bracket, Brake Lever
7	703-4154-0637	1	/P	Bracket, Pump Mtg.
8	710-0623	4	/P	Screw, Hex Wash, Hd Tapp 3/8-16 x .75
9	710-0642	4	/P	Screw, Hex Wash, Hd Tapp 1/4-20 x .75
10	710-0653	4	/P	Screw, Hex Wash, Hd Tapp 1/4-20 x .375
11	710-1260A	3	/P	Screw, Hex Wash, Hd Tapp 5/16-18 x .75
12	710-1690	4		Screw, Hex, M6-1 x 16 Hardened
13	710-3008	2	/P	Screw, Hex Cap 5/16-18 x .75 GR5
14	712-0292	2	/P	Nut, Speed, 1/4-20
15	712-3004A	2	/P	Nut, Hex Flange Lock, 5/16-18
16	714-0104	4	S	Pin, Internal Cotter
17	718-3155	1	S	Pump, Hydraulic Steering
18	731-3359	1		Lever, Parking Brake
19	732-3002	1	S	Spring, Extension
20	736-0343	2	/P	Washer, Flat, .33 x 1.25 x .12 ...
21	741-0245	1	S	Bearing, Hex Flange, .75 ID
22	747-04001	1		Rod, Parking Brake
23	747-3454	1		Pin, Parking Brake Pivot
24	703-05362	1	S	Plate, Bearing
25	710-3015	2	/P	Screw, Hex Cap, 1/4-20 x .75 GR5
26	712-0324	2	/P	Nut, Hex Insert Lock, 1/4-20
27	736-0173	2	/P	Washer, Flat, .28 x .74 x .063

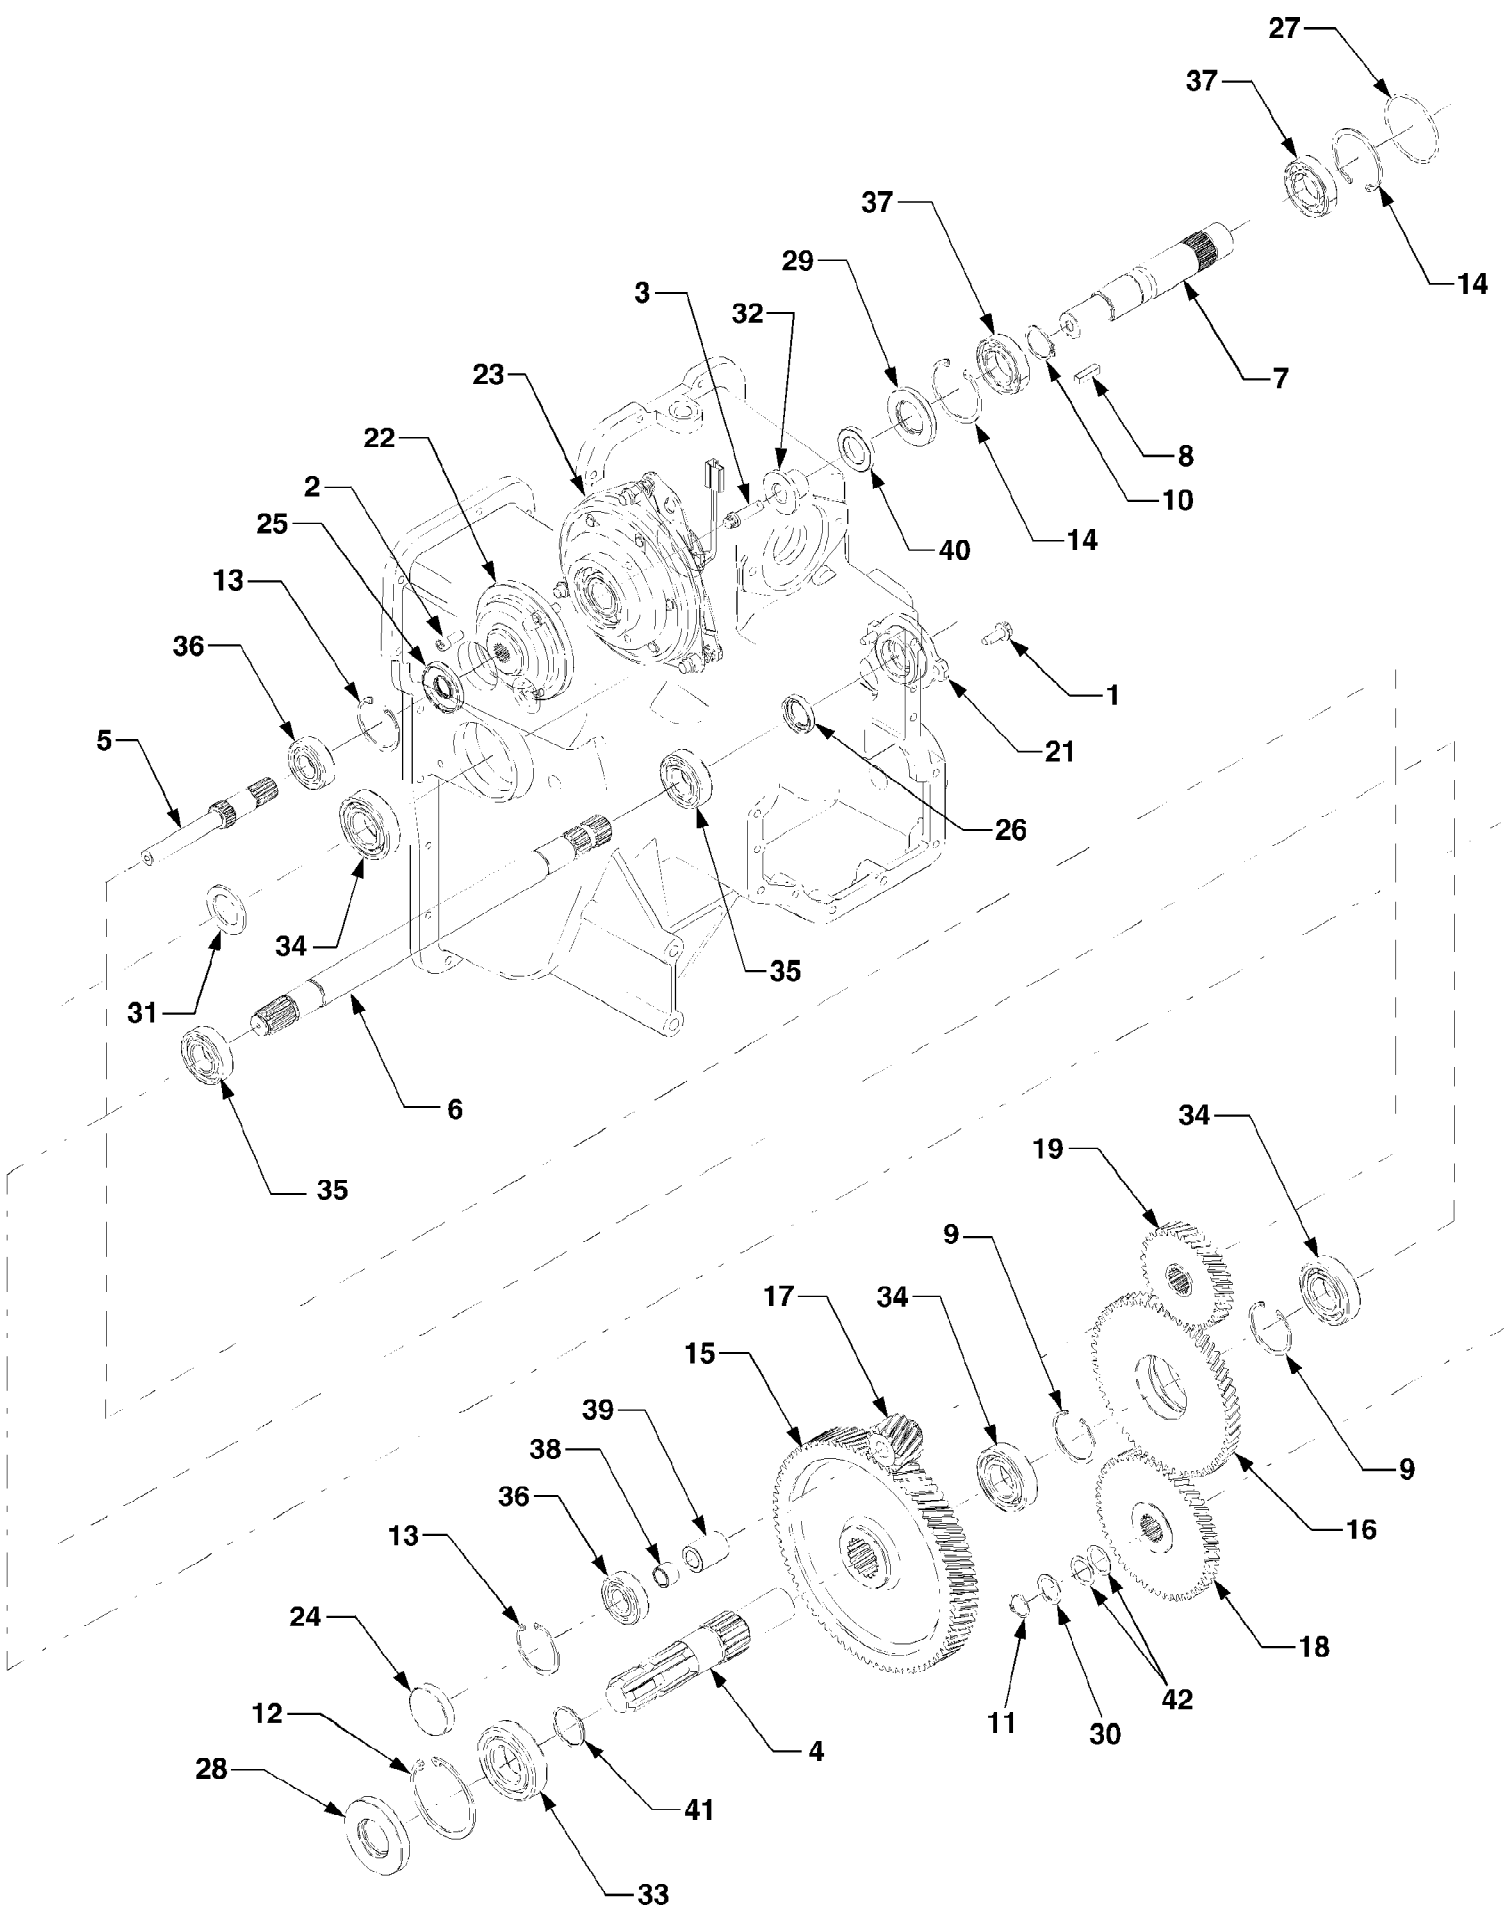

5252 Tractor
PTO Drive

Page 51 of 70

Ref #	Part Number	Qty	S/P/F	Description
1	710-0650	2	/P	Screw, Hex Wash. Hd. Tapp. 5/16-18 x .875
2	710-1177	3	/P	Screw, Socket Hd. 5/16-18 x .75
3	710-04116	1	/P	Screw, 12 Pt. Wash. Hd. w/Patch 3/8-16 x 1.25
4	711-1325A	1	S	Shaft, 540 PTO
5	711-1683A	1	S	Shaft, Clutch Back
6	711-1684	1	S	Shaft, 2000 PTO
7	711-1685	1	S	Shaft, Input PTO
8	714-0128	1	/P	Key, Square, 1/4 x 1. 0
9	716-0180	2		Ring, Retaining
10	716-0181	1	/P	Ring, Retaining
11	716-0384	1		Ring, Retaining
12	716-0387	1		Ring, Retaining
13	716-0393	2		Ring, Retaining
14	716-04000	2	S	Ring, Retaining
15	717-3469	1		Gear, 540 PTO, 81T
16	717-3487	1		Gear, 2000 PTO , 61T
17	717-3492	1		Gear, Pinion, 540 PTO:14T
18	717-3494C	1	/P	Gear, Pinion, 2000 PTO:54T
19	717-3551	1	S	Gear, Pinion, 2000 PTO:34T
21	718-0681	1		Cover, 2000 PTO
22	718-04000	1	S	Adapter, PTO Output
23	718-04009	1	S	Clutch Assy. PTO
24	721-0504	1		Plug, Oil, 1.875 x .375
25	721-04094	1		Seal, Oil
26	721-0509	1		Seal, Oil
27	721-04002	1	S	O-Ring, 2.425 ID x .103
28	721-04124	1	S	Seal, Oil
29	721-04005	1	S	Seal, Oil
30	736-0570	1	S	Washer, Flat, .865 x 1.145 x .030 ..
31	736-04001	1	S	Washer, Thrust
32	738-04003	1	S	Spacer, Shoulder
33	741-1100	1		Bearing, Ball
34	741-3033A	3	S	Bearing, Ball
35	741-3037	2	S	Bearing, Ball
36	741-3057	2	S	Bearing, Ball
37	741-04034	2	S	Bearing, Ball
38	750-3365	1	S	Spacer, 15mm x 20mm x 14mm
39	750-04013	1	S	Spacer, .6 x 1.0 x 1.345
40	750-04020	1	S	Spacer, 1.004 x 1.375 x .25
41	716-04049	1	S	Ring, Retaining
42	736-0454	2	S	Washer, Flat, .915 x 1.37 x .010

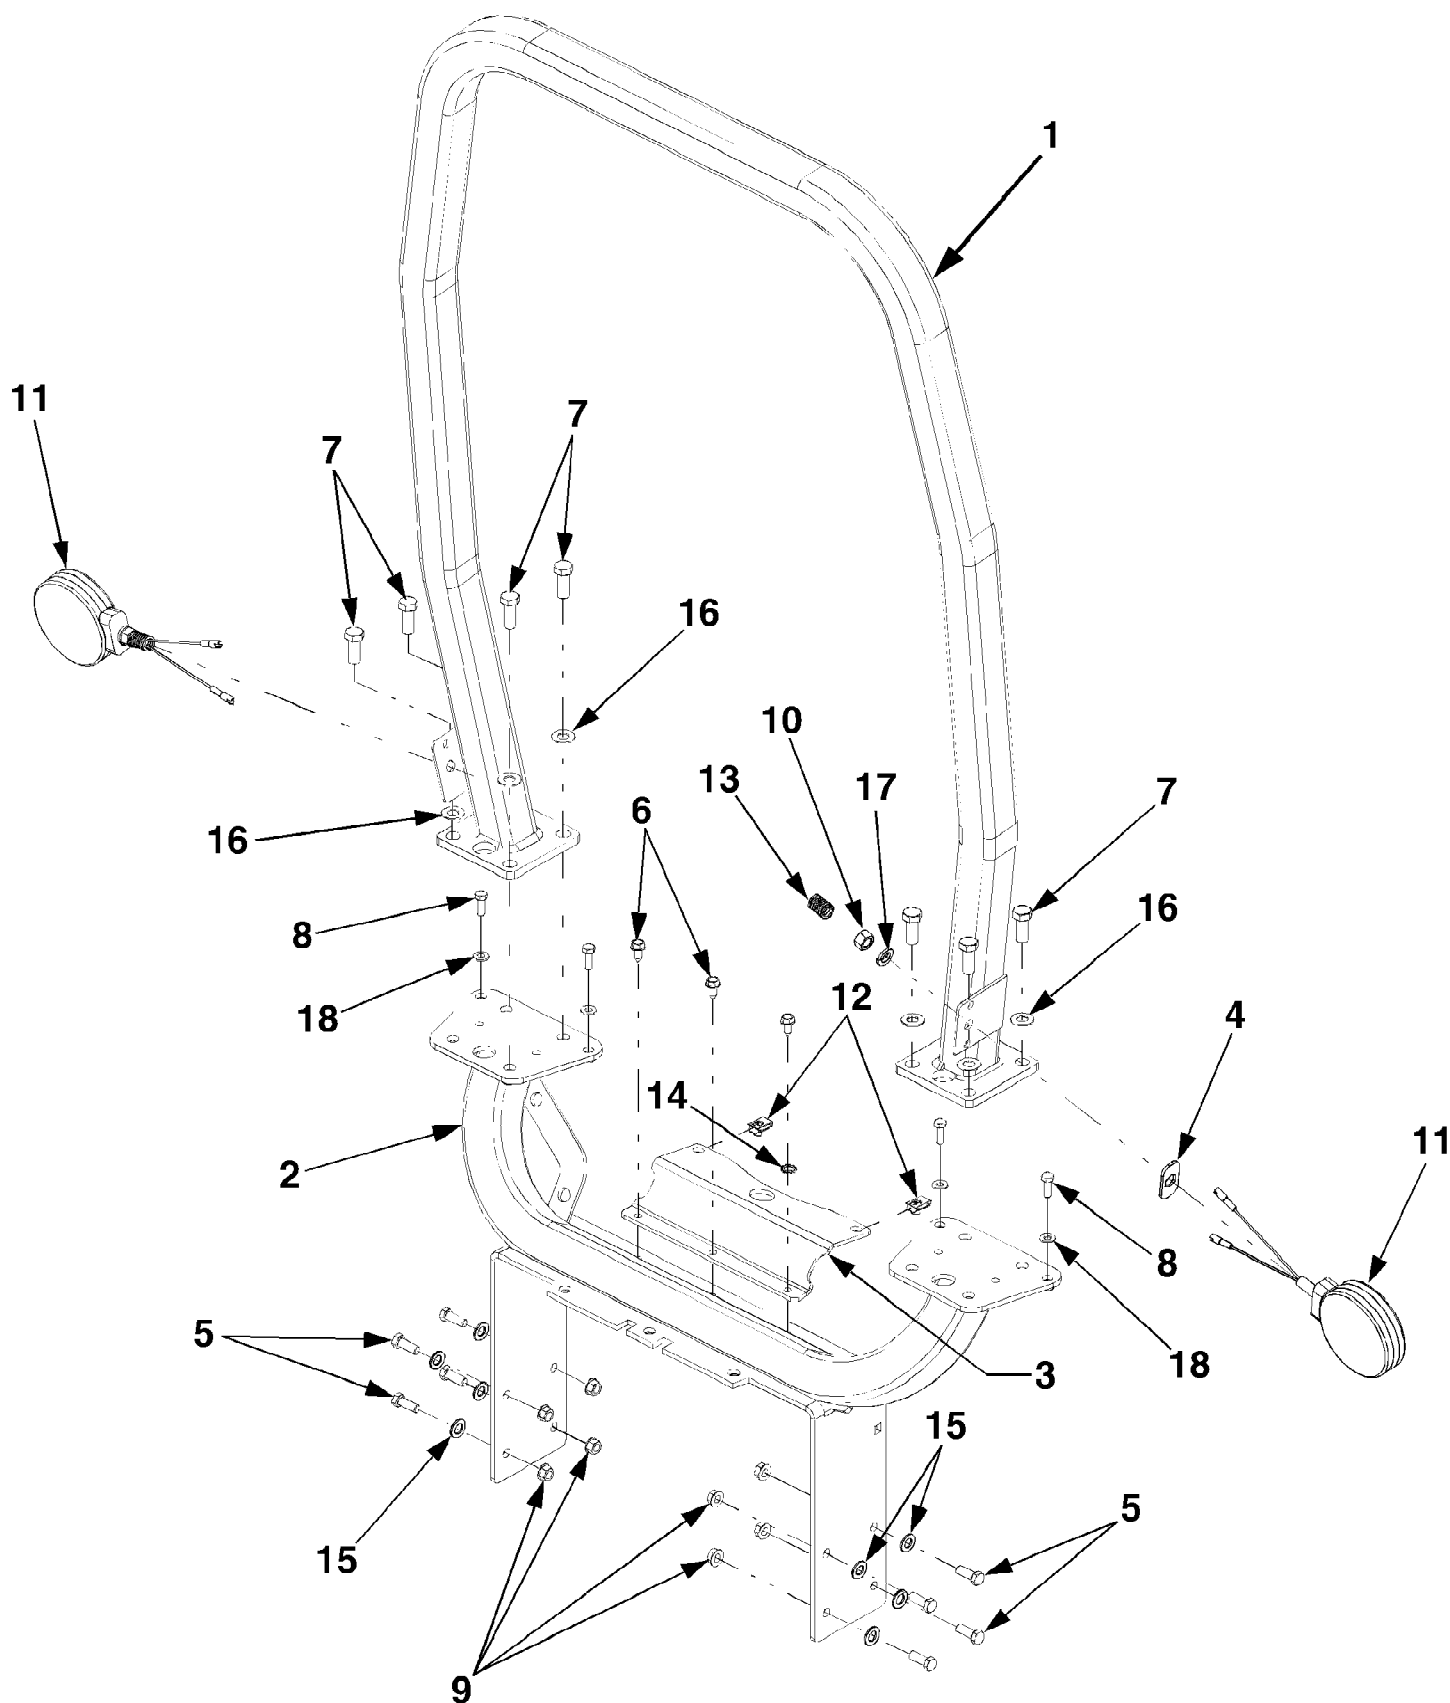


5252 Tractor
Rops

Page 53 of 70

Ref #	Part Number	Qty	S/P/F	Description
1	603-04011	1		Rops. Upper
2	603-04012	1		Rops, Lower
3	703-05032-0637	1	/P	Bracket, Rear Seat Mounting
4	703-05770-0637	2		Plate, Spacer
5	710-0514	8	/P	Screw, Hex Cap, 3/8-16 x 1.0 GR5 .
6	710-1260A	3	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .75
7	710-3032	8	/P	Screw, Hex Cap, 1/2-13 x 1.25 GR5
8	710-3038	4	/P	Screw, Hex Cap, 5/16-18 x .875 GR5
9	712-04065	8	/P	Nut, Hex Flange Lock, 3/8-16 GRF
10	712-3066	2	S	Nut, Hex, 1/2-20 GR5
11	725-04266	2	S	Light, Hazard
12	726-0211	2	S	Nut, Speed, 5/16-18
13	731-0757	1		Conduit, 12in
14	736-0148	1	/P	Washer, Ext. Tooth Lock, 3/8
15	736-0185	8	S	Washer, Flat, .375 x .74x.063
16	736-0272	8	S	Washer, Flat, .51 x 1.0 x .060
17	736-0921	2	S	Washer, Lock, 1/2
18	736-3089	4	/P	Washer, Flat, .345 x 1.0 x .10

5252 Tractor
Rops, foldable


Page 54 of 70

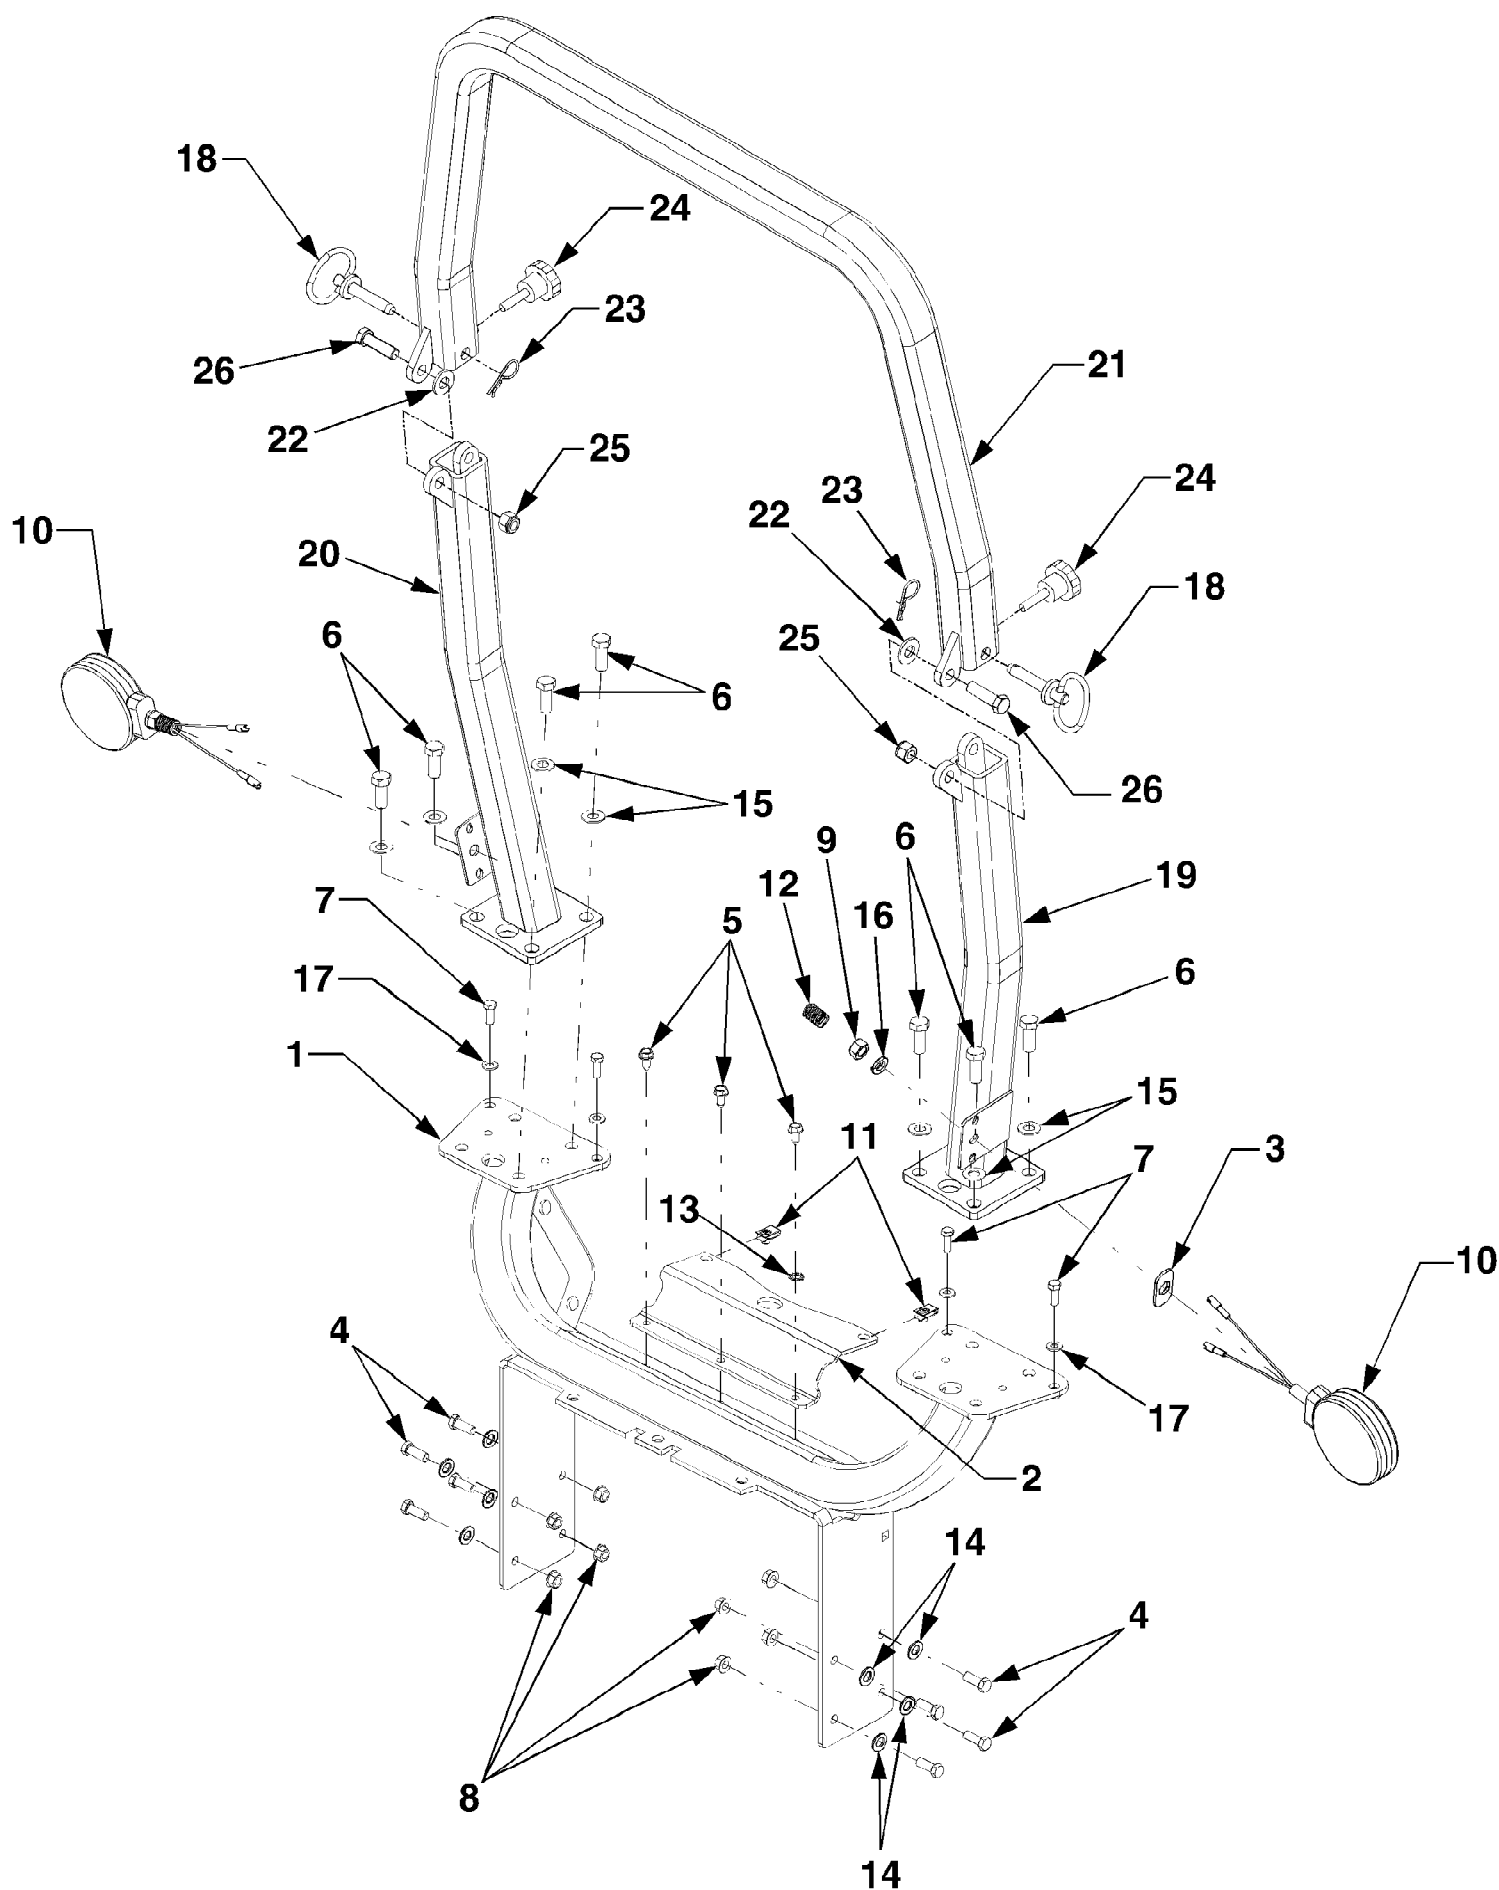

5252 Tractor
Rops, foldable

Page 55 of 70


Ref #	Part Number	Qty	S/P/F	Description
1	603-04012	1		Rops, Lower
2	703-05032	1	S	Bracket, Rear Seat Mounting
3	703-05770	2		Plate, Spacer
4	710-0514	8	/P	Screw, Hex Cap, 3/8-16 x 1.0 GR5
5	710-1260A	3	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .75
6	710-3032	8	/P	Screw, Hex Cap, 1/2-13 x 1.25 GR5
7	710-3038	4	/P	Screw, Hex Cap, 5/16-18 x .875 GR5
8	712-04065	8	/P	Nut, Hx. Insert Flange Lck, 3/8-16 GRF
9	712-3066	2	S	Nut, Hex, 1/2-20 GR5
10	725-04266	2	S	Light, Hazard
11	726-0211	2	S	Nut, Speed, 5/16-18
12	731-0757	1		Conduit 12in
13	736-0148	1	/P	Washer, Ext. Tooth Lock, 3/8
14	736-0185	8	S	Washer, Flat, .375 x .738 x .063
15	736-0272	8	S	Washer, Flat, .51 x 1.0 x .060
16	736-0921	2	S	Washer, Lock, 1/2
17	736-3089	4	/P	Washer, Flat, .345 x 1.0 x .10
18	711-04393	2		Pin, Pull
19	759-04038	1		Base
20		1		Order 759-04038
21		1		Order 759-04038
22	736-0600	2		Washer, flat
23	714-3003	2	S	Pin, Internal Cotter
24	731-05131	2		Knob Assembly
25	712-3083	2	/P	Nut, Hex Insert Lock, 1/2-13
26	710-3067	2	/P	Screw, Hex Cap, 1/2-13 x 1.75 GR5 ...

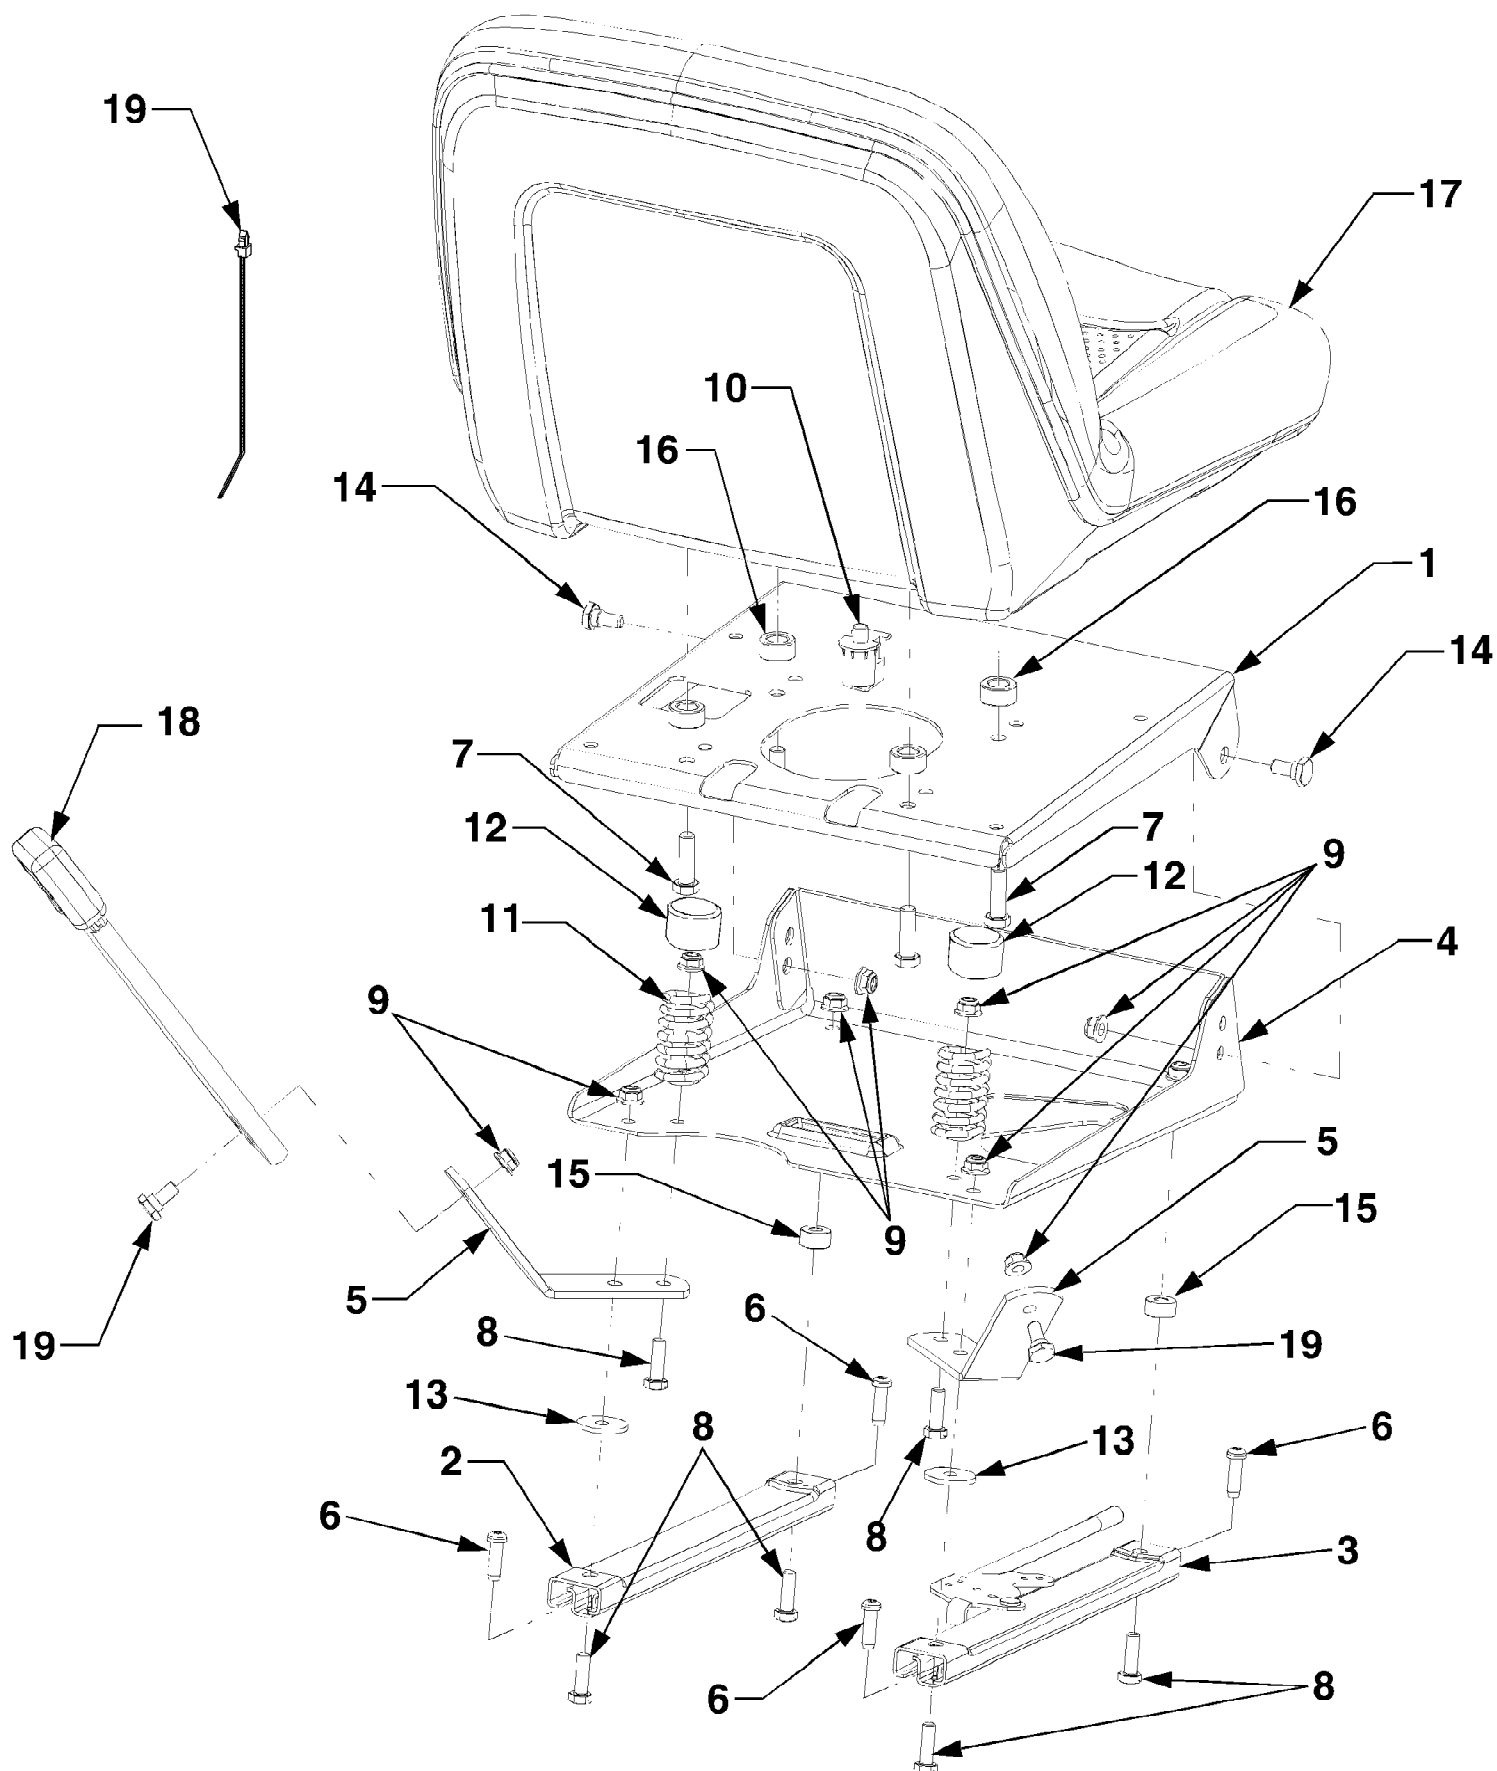

5252 Tractor
Seat

Page 57 of 70


Ref #	Part Number	Qty	S/P/F	Description
1	703-1812A-0716	1	/P	Bracket, Seat Pivot
2	703-3208	1		Track, Seat - w/o Latch
3	703-3431	1	/P	Track, Seat - w/Latch
4	703-4149-0716	1	/P	Bracket, Seat Support
5	703-4151-0637	2	/P	Bracket, Seat Belt
6	710-1669	4		Screw, Pan Hd. Mach. 5/16-18 x 1.0
7	710-3005	4	/P	Screw, Hex Cap, 3/8-16 x 1.25 GR5
8	710-0376	6	/P	Screw, Hex Cap, 5/16-18 x 1.0 GR5
9	712-04063	10	/P	Nut, Hex Insert Flange Lock 5/16-18 GR5
10	725-3167	1	S	Switch, Seat, N/O
11	732-0735	2	/P	Spring, Compression
12	735-04039	2		Cap, Spring
13	736-0343	2	/P	Washer, Flat, .33 x 1.25 x .12 .
14	738-0140	4	S	Screw, Shoulder, .435 x .178:5/16-18
15	750-0258	2	/P	Spacer, .315 x .75 x .375
16	750-04247	4		Spacer, .505 x .88 x .44
17	757-04005	1	S	Seat, High Back
	777D06883	1	/P	Graphic, CubCadet
	777D01782	1	/P	Graphic, USA
18	757-3013	1		Belt Assembly, Seat
19	725-0154	1		Tie, Push Mnt. Cable

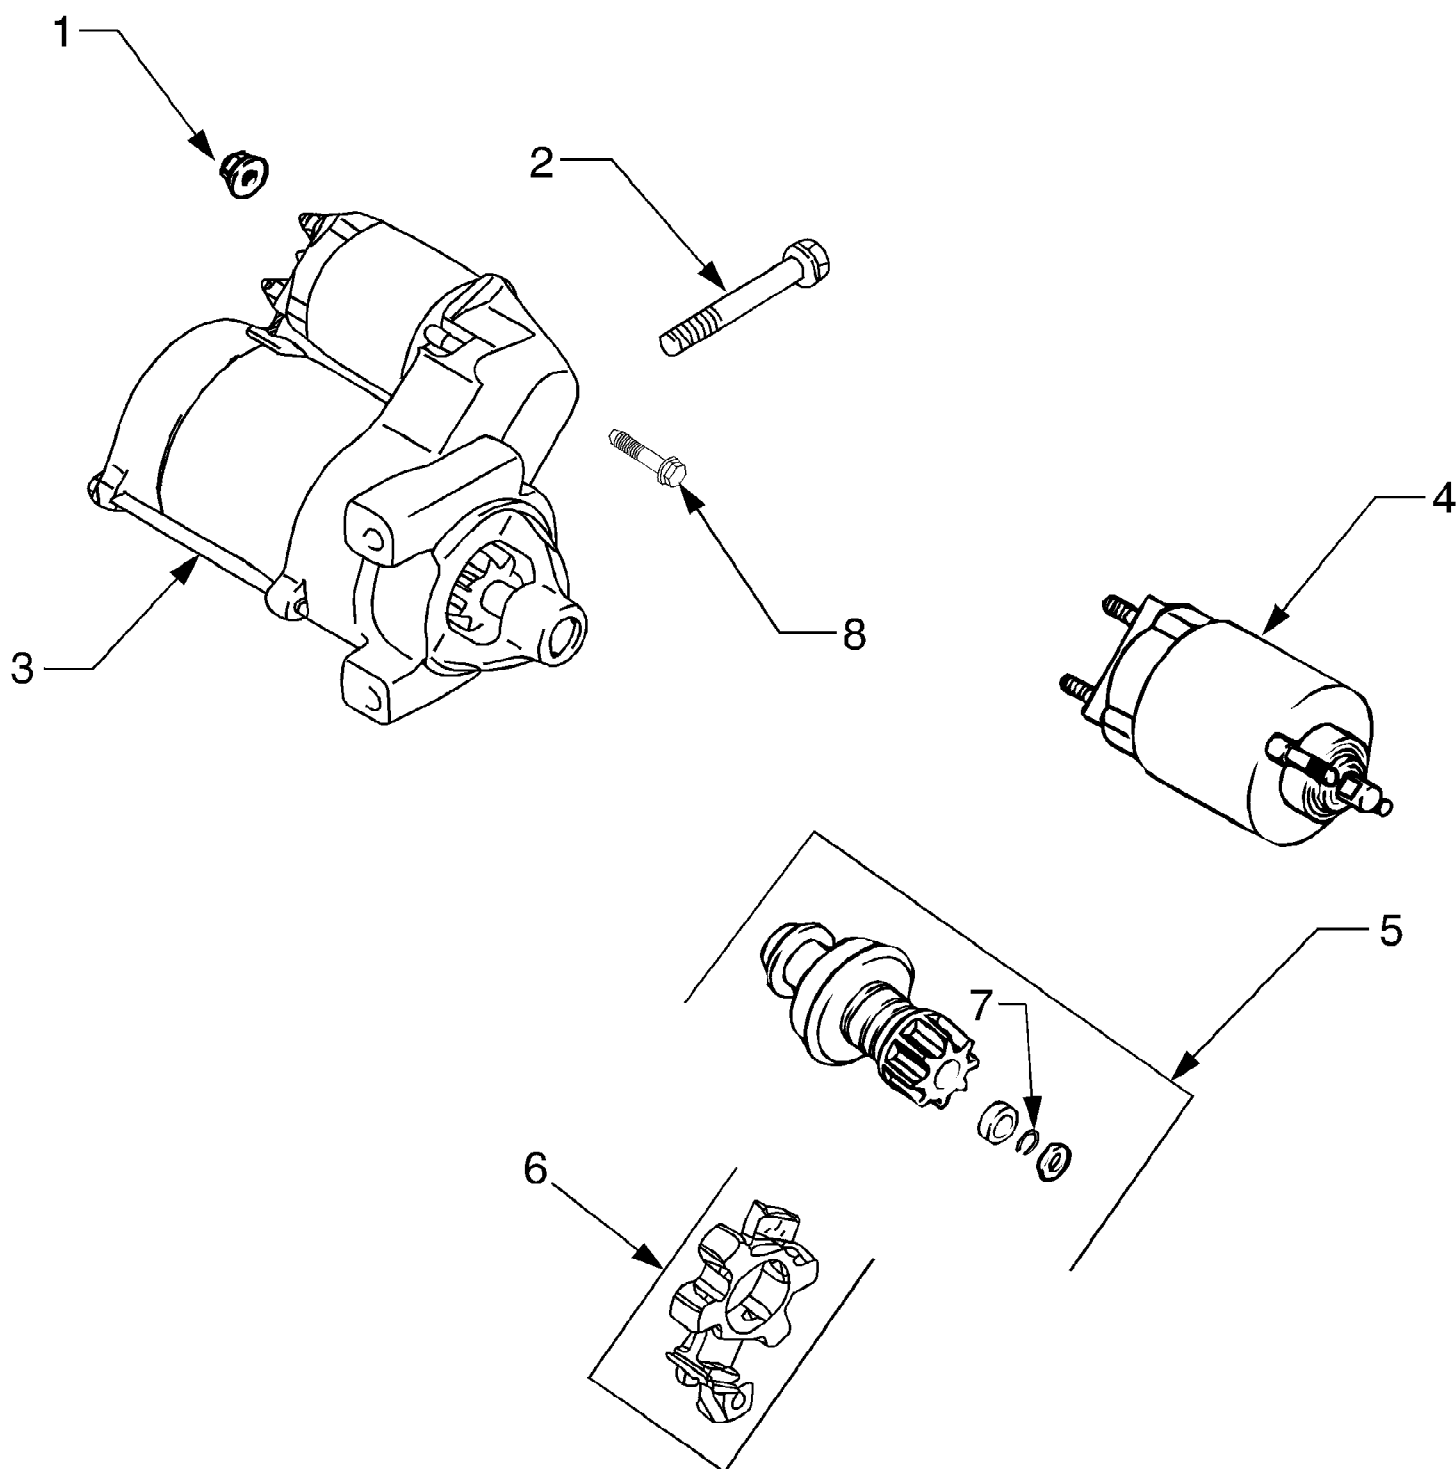

5252 Tractor
Starting System

Page 59 of 70


Ref #	Part Number	Qty	S/P/F	Description
1	KH-M-0841080	1	S	Nut, Hex Flange M8 x 1.25"
2	KH-M-839080	2	S	Screw, Hex Flange M8 x 1.25 x 80
3	KH-25-098-09-S	1	S	Starter, Solenoid Shift Assembly (Includes 4-8)
4	KH-25-435-05-S	1	S	Kit, Solenoid (Includes 8)
5	KH-25-755-33-S	1		Kit, Pinion Drive (Includes 7)
6	KH-25-221-01-S	1		Kit, Brush
7	KH-25-141-05-S	1		Ring, Retainer
8	KH-25-086-113-S	3		Screw, External Torx Hd.

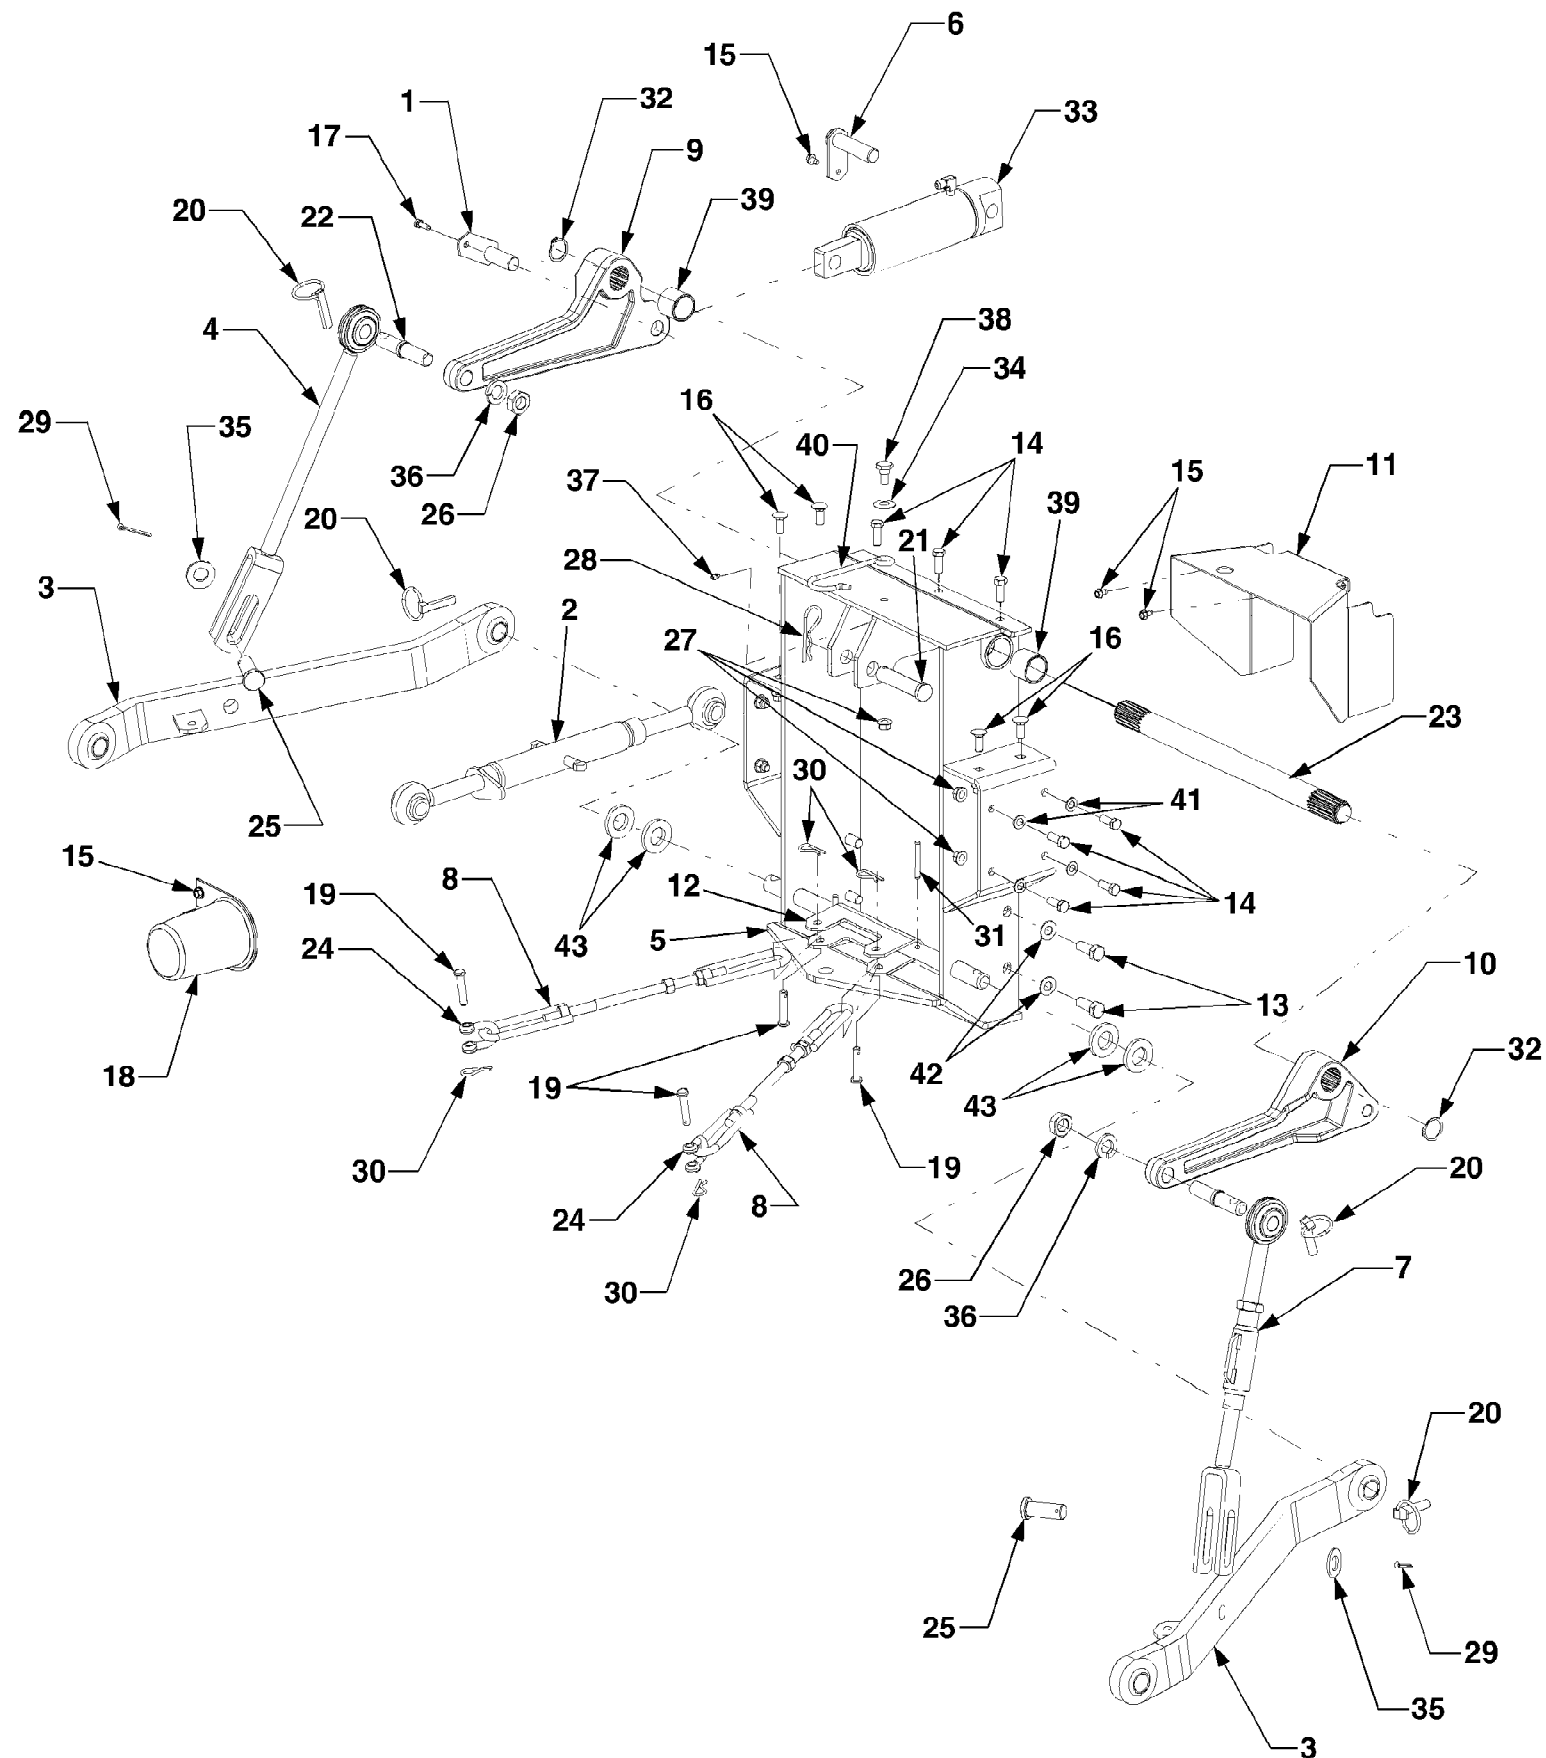

5252 Tractor
Three Point Hitch

Page 61 of 70

Ref #	Part Number	Qty	S/P/F	Description
1	603-04062-0637	1	/P	Plate, Cylinder Mounting
2	603-0964	1	S	Link Assembly, Upper
3	603-0965	2	S	Link, Lower
4	603-0970	1	S	Link, Fixed Lift
5	603-0971A-0637	1		Bracket Assembly, Rear Hitch
6	603-0972-0637	1	/P	Plate, Cylinder Mounting
7	603-0973	1	S	Link, Adjustable Lift
7	603-0968	1	S	Link Rod RH Thrd.
7	603-0969	1	S	Link Rod LH Thrd.
7	711-1744	1		Turnbuckle
7	712-04051	1		Jam Nut, M20 x 2.5 RH
8	603-0977	1		Chain Assembly, Check
8	603-0974	1	S	Chain Link RH Thrd.
8	603-0975	1	S	Chain Link Lh Thrd.
8	603-0976	1	S	Chain Rod, Adjust.
9	619-3095	1	S	Arm, Hitch Lift - LH
10	619-3096	1	S	Arm, Hitch Lift - RH
11	703-4137-0637	1	/P	Shield, PTO Shaft
11	777S30634	1		Graphic, Warning
12	703-4143-0637	1	/P	Bracket, Chain Mounting
13	710-04186	4	/P	Screw, Hex Cap Lock, 1/2-13 x 1.25 GR5
14	710-0514	11	/P	Screw, Hex Cap, 3/8-16 x 1.0 GR5
15	710-0599	5	/P	Screw, Hex Wash. Hd. Tapp 1/4-20 x .5
16	710-3168	4	/P	Screw, Carriage, 3/8-16 x 1.0
17	710-3296	1		Screw, Hex Cap, 1/4-20 x .75 GR5
18	731-04114	1		Cover, PTO Shaft
19	711-0599	4	S	Pin, Clevis, .372 x 1.79
20	711-1105	4	/P	Pin, Klik
21	711-1733	1		Pin, Clevis, 19mm x 84mm
22	711-1743	2	S	Pin, Hitch, .75 OD
23	711-1750	1	S	Shaft, Hitch Rock
24	711-1753	2	S	Clevis, Chain
25	711-1761	2	S	Pin, Clevis, .75 x 1.938
26	712-0301	2	/P	Nut, Hex Jam, 3/4-10 GR5
27	712-0431	13	S	Nut, Hex Flange Lock, 3/8-16 GRF
28	714-0117	1	/P	Pin, Internal Cotter
29	714-0142	2	/P	Pin, Cotter, 3/16 x 1.5
30	714-0149B	4	S	Pin, Internal Cotter
31	715-0121	2	/P	Pin, Spirol, 1/4 x 2.0
32	716-04004	2	S	Ring, Retaining
33	717-3532	1	S	Cylinder, Lift
34	736-0255	1	S	Washer, Belleville, .51 x 1.14 x .04
35	736-0315	2	/P	Washer, Flat, .76 x 1.5 x .12
36	736-0364	2	S	Washer, Lock, 3/4
37	737-3000	1	S	Fitting, Lube, 3/16 Drive
38	738-0143	1	/P	Screw, Shoulder, 3/8-16
39	741-04084	2	S	Bearing, Sleeve, 1.25 x 1.50 x 1.25
40	747-04122	1	S	Rod, Top Link Hanger
41	736-0185	8	S	Washer, Flat, .375 x .738 x .063
42	736-0272	4	S	Washer, Flat, .51 x 1.0 x .06

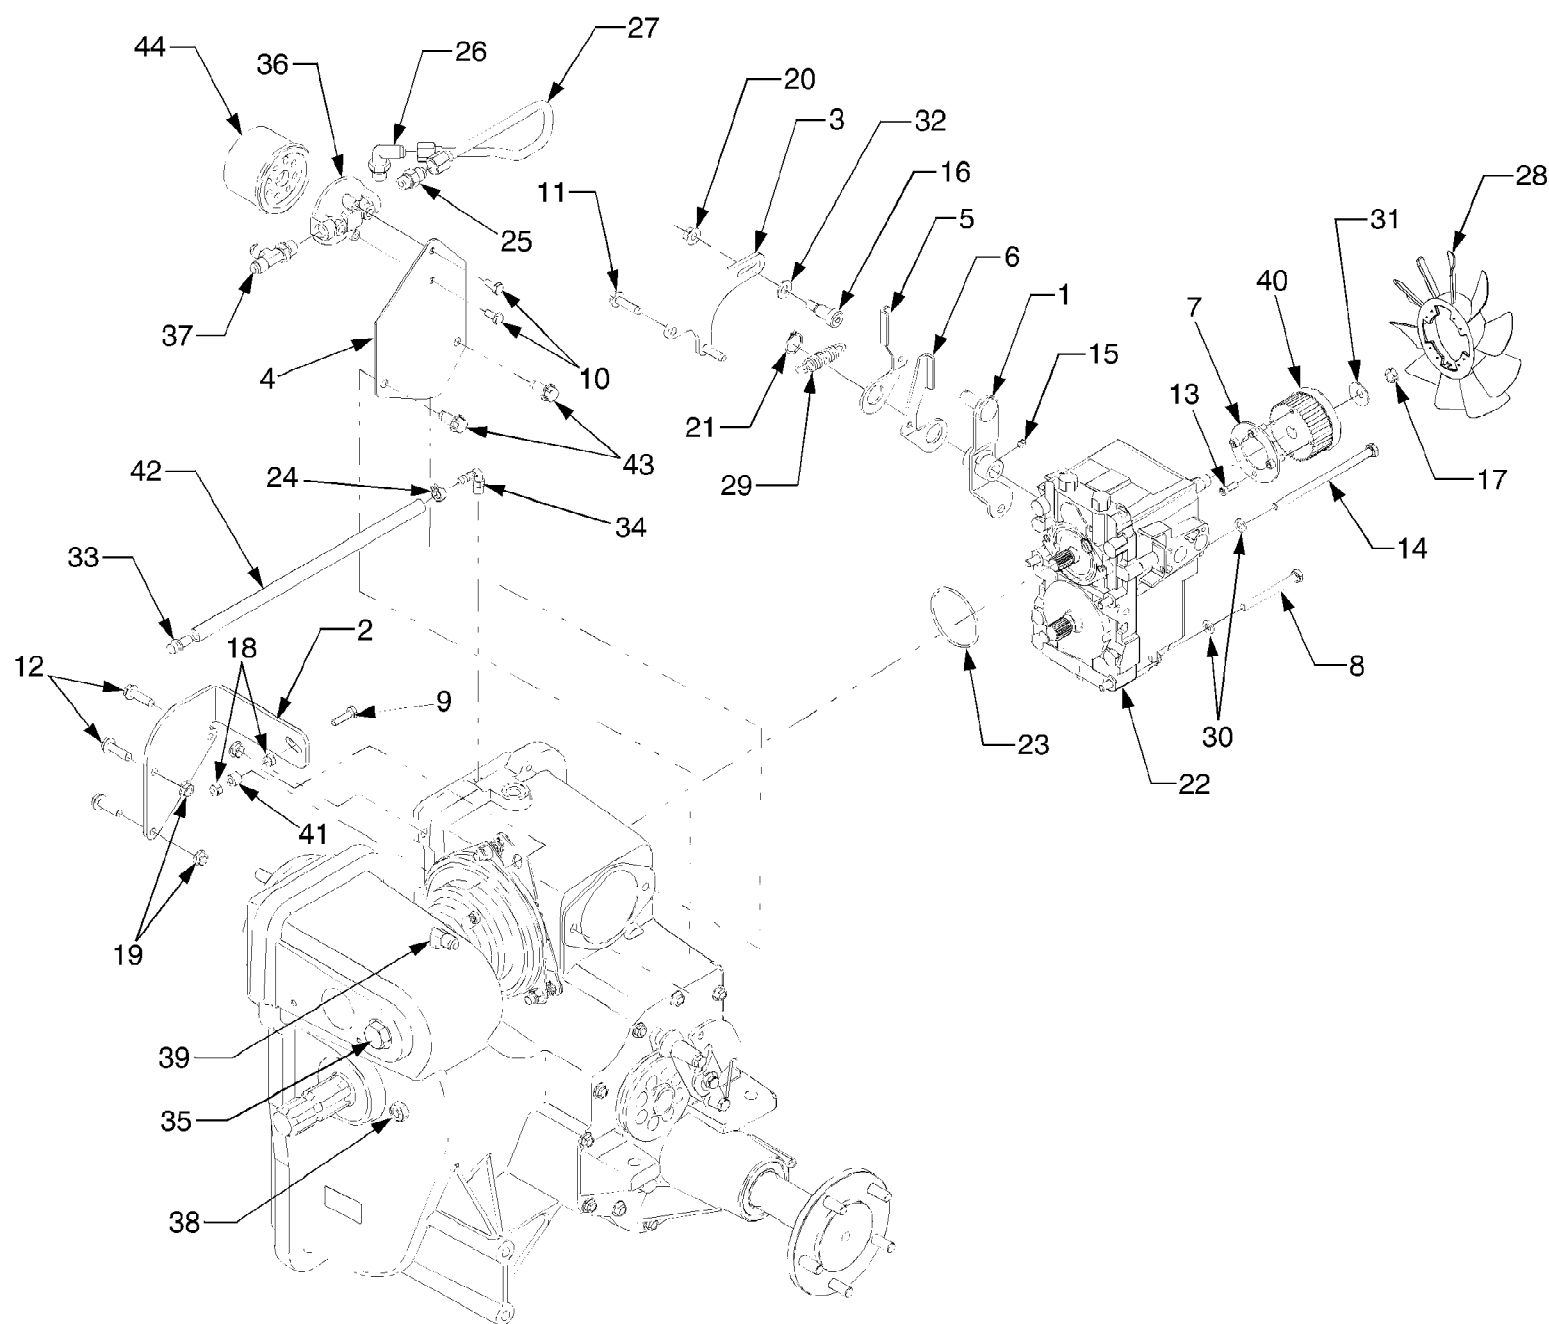


5252 Tractor
Transmission 2WD

Page 63 of 70

Ref #	Part Number	Qty	S/P/F	Description
	737-3120	1	/P	Transmission Oil, 1 Qt. 5 gal
	737-3121	1	/P	Transmission Oil, 1 Gal.
	759-3958	AR		Sealant, Loctite Black, 5.3 oz.
1	603-0980	1	S	Arm, Hydro
2	603-04192	1		Bracket, Clutch Torque
3	603-04195	1		Bracket, Return
4	603-04298	1		Bracket, Filter Mounting
5	703-05041	1		Arm, Neutral - RH
6	703-05042	1		Arm, Neutral - LH
7	703-05742	1		Keeper, Belt
8	710-0189	2	/P	Screw, Hex Cap, 5/16-18 x 3.0 GR5
9	710-0299	1		Screw, Hex Cap, 1/4-28 x 1.0 GR5
10	710-0751	2	/P	Screw, Hex Cap, 1/4-20 x .62 GR5
11	710-0817	2		Screw, Hex Wash. Hd. Tapp, ...5/16-18 x 1.25 GR5
12	710-1882	3		Screw, Hex Flange, 5/16-18 x 1.5 GR5
13	710-3218	4		Screw, Socket Hd. Cap 1/4-20 x .62 GR8
14	710-3226	2		Screw, Hex Cap Lock, 5/16-18 x 5.5 GR5
15	710-3242	1		Screw, Set - Lock 5/16 x .5 GR5
16	710-04040	1	/P	Screw, Shoulder, .497 x .750: 3/8-16
17	712-0262	1	/P	Nut, Hex Jam Lock, 3/8-24
18	712-0896	2		Nut, Hex Nylon Lock, 1/4-28
19	712-3004A	3	/P	Nut, Hex Flange Lock, 5/16-18 GR5
20	712-3005	1	S	Nut, Hex Flange Lock, 3/8-16
21	716-0111	1	/P	Ring, Retaining
22	718-04141	1	S	Pump, Hydrostatic Transmission
23	721-04002	1	S	O-Ring, 2.425 ID x .103
24	726-0205	1	/P	Clamp, Hose
25	727-3002	1	S	Fitting, Straight
26	727-3012	1	/P	Fitting, 90 Degree
27	727-04095	1	S	Tube, Hydro Inlet
28	731-05247	1	S	Fan, Transmission Cooling
29	732-3119	1	S	Spring, Extension, .50 x 1.975 x .072
30	736-0119	4	S	Washer, Lock, 5/16
31	736-0331	1	/P	Washer, Belleville
32	736-0864	1	S	Washer, Thrust, .375 x .812 x .06
33	737-0296	1	/P	Vent, 3/8 Dia
34	737-0299	1		Fitting, Elbow
35	737-0349	2		Fitting, Plug
36	737-04011	1	S	Adapter, Oil Filter
37	737-04026	1	S	Fitting, Run Tee
38	737-04032	1	S	Indicator, Oil Level Sight
39	737-04047	1	S	Fitting, Elbow
40	748-04086	1	S	Adapter. Cog Pump
41	751-0535	1		Hose, Fuel Line, .38 in
42	751-3130	1		Hose, Vent, .13 in
43	GW-90064	2		Screw, Hex Wash Hd Tapp 3/8-16 x .6
44	BS-492932S	1	/P	Filter, Hydro Pump

5252 Tractor
Transmission Drive

Page 64 of 70

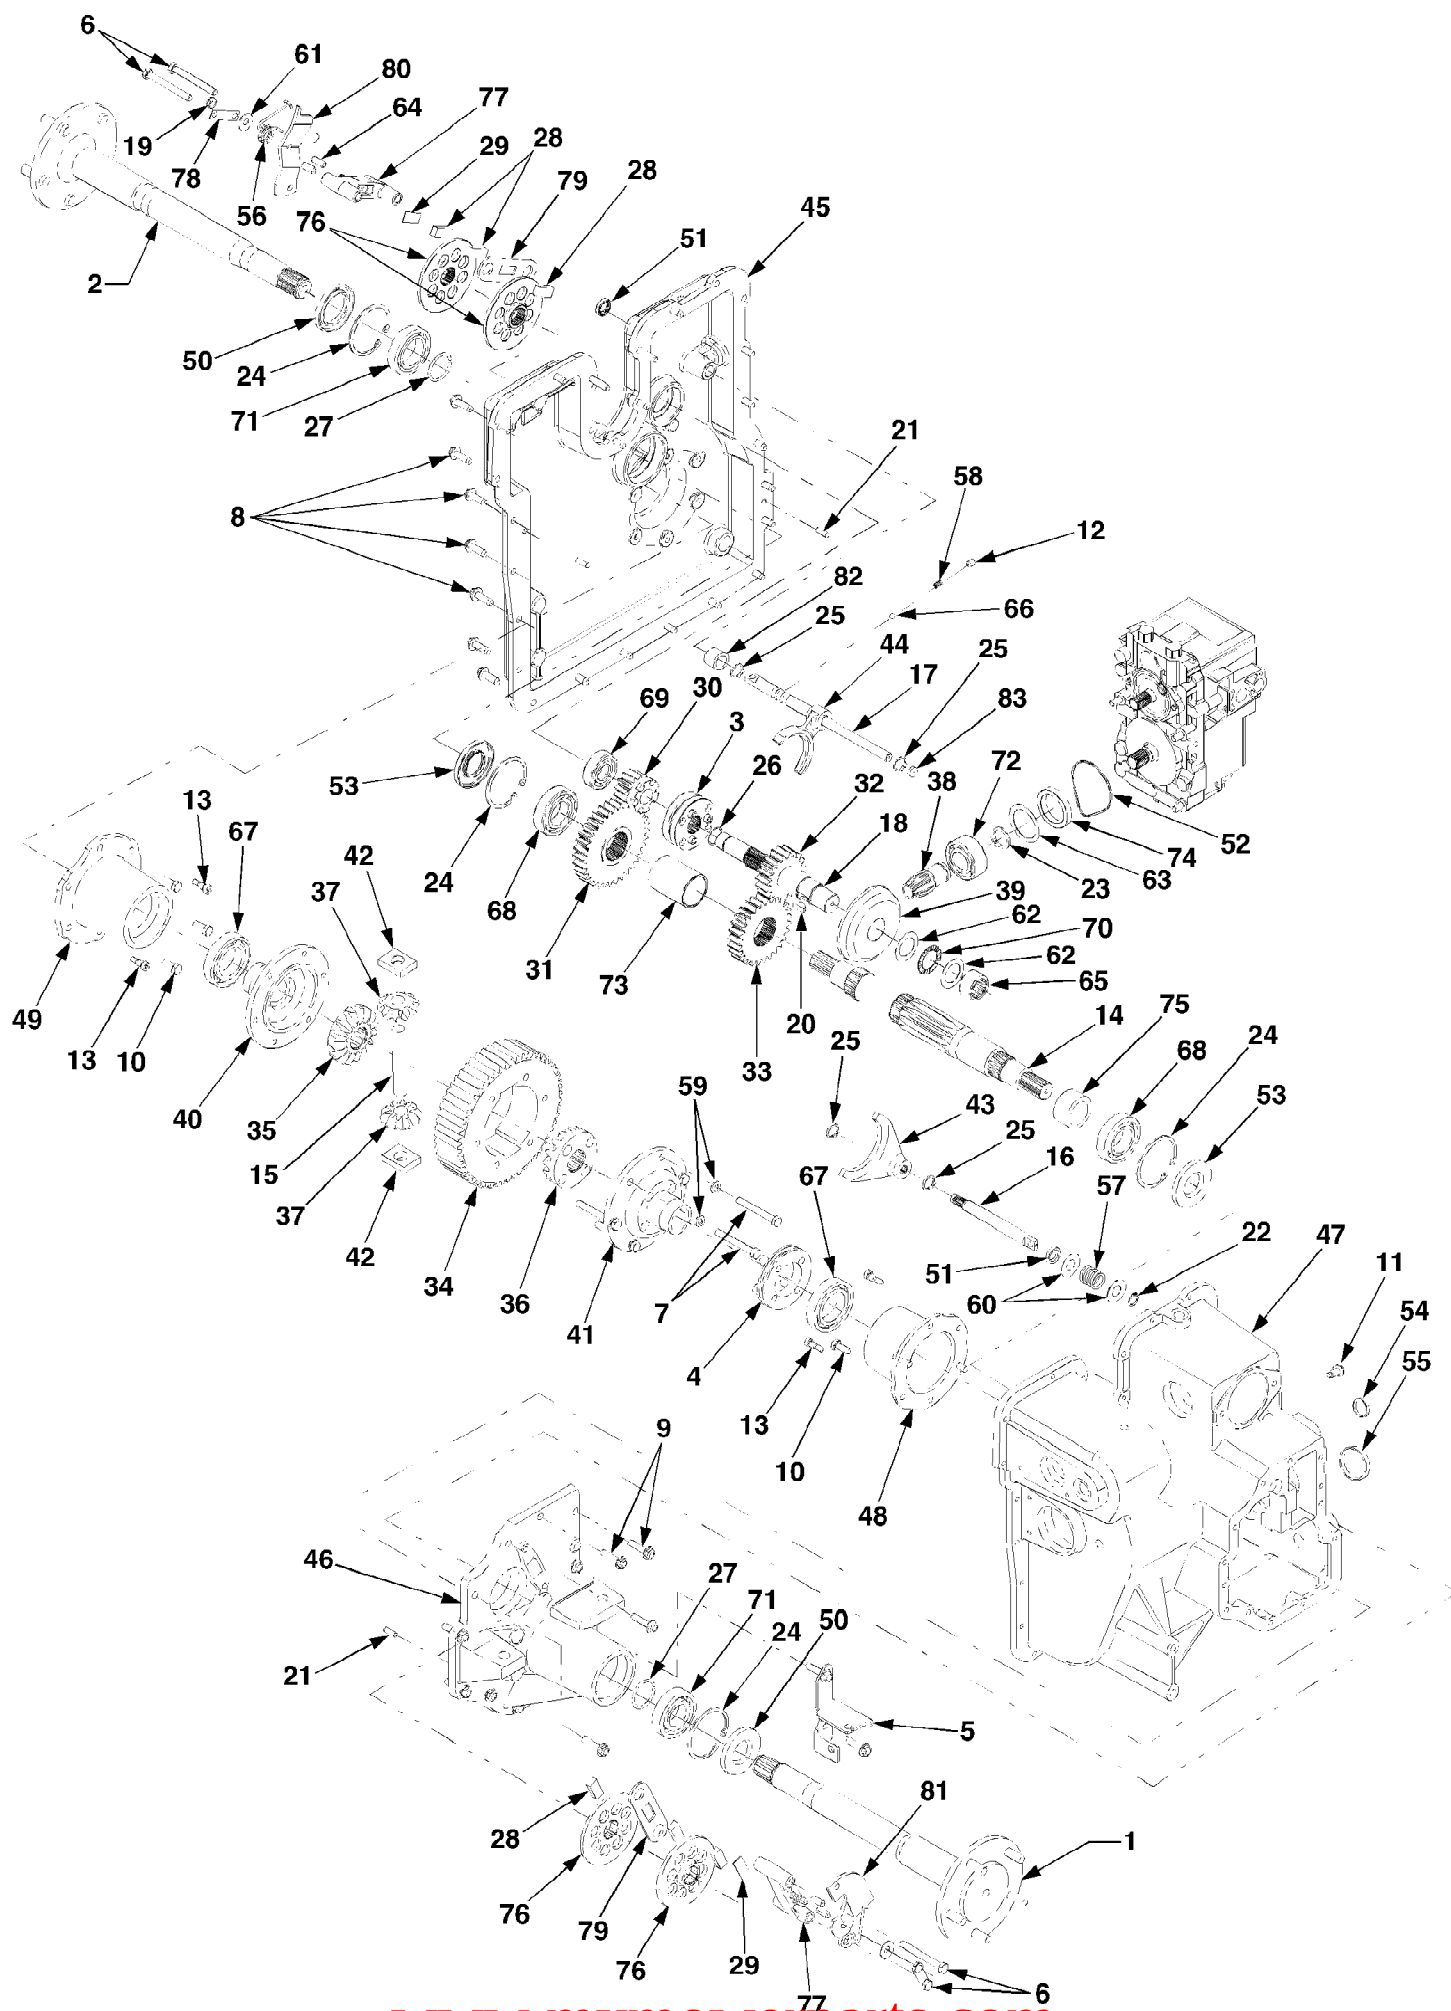

5252 Tractor
Transmission Drive

Page 65 of 70

Ref #	Part Number	Qty	S/P/F	Description
1	611-3033	1	S	Shaft, Axle RH
2	611-3034	1	S	Shaft, Axle LH
3	618-0226	1		Collar Assembly, Hi-Lo
4	618-3183	1	S	Collar Assembly, Diff Lock
5	703-05045	1	S	Bracket, Diff. Lock
6	710-0176	4	/P	Screw, Hex Cap, 5/16-18 x 2.75 GR5
7	710-0378	6	/P	Screw, Hex Cap, 5/16-18 x 2.5 GR5
8	710-0602	21	/P	Screw, Hex Wash. Hd. Tapp, 5/16-18 x 1.0
9	710-0817	12		Screw, Hex Wash. Hd. Tapp, 5/16-18 x 1.25
10	710-1880	8	/P	Screw, Hex Cap, w/Patch 5/16-18 x .75 GR5
11	710-1633	1		Screw, Plug, M14 x 1.5 x .827
12	710-3006	1	/P	Screw, Set, 5/16-18 x .375
13	710-04035	4	/P	Screw, Shoulder .309 x .375: 1/4-20
14	711-1675	1	S	Shaft, Output, 11T
15	711-1676	1	S	Shaft, Cross, .625 x 3.95
16	711-04302	1	S	Shaft, Diff. Lock Actuator
17	711-04300	1	S	Shaft, Hi-Lo Actuator
18	711-04137	1	S	Shaft, Drive
19	712-0273	2	S	Nut, Hex Insert Lock, 5/16-24
20	714-0135	1	S	Key, Woodruff, 1/4 x 3/4
21	715-3010	4	/P	Pin, Dowel, .25 x .75
22	716-0114	1	S	Ring, Retaining
23	716-0127	1	/P	Ring, Snap
24	716-0180	4		Ring, Retaining
25	716-0194	4	/P	Clip, Rotor
26	716-04005	1	S	Ring, Retaining
27	716-04030	2	S	Ring, Retaining
28	717-0678	6	S	Pad, Brake
29	717-0682	2	S	Plate, Brake Puck
30	717-3534	1	S	Gear, Spur, 12T
31	717-3535	1	S	Gear, Spur, 34T
32	717-3536	1	S	Gear, Spur, 19T
33	717-3537	1	S	Gear, Spur, 27T
34	717-3538	1	S	Gear, Spur, 56T
35	717-3541	1	S	Gear, Bevel, 16T
36	717-3542	1	S	Gear, Bevel, 16T Lock
37	717-3545	2	S	Gear, Bevel, 10T Diff.
38	717-04132	1	S	Gear, Spiral Bevel, 13T
39	717-04133	1	S	Gear, Spiral Bevel, 54T
40	718-3148A	1	S	Cover, Differential
41	718-3149A	1	S	Cover, Differential Lock
42	718-3150	2	S	Block, Thrust
43	718-04080	1	S	Yoke, Diff. Lock Actuator
44	718-04081	1	S	Yoke, Shift, Hi-Lo
45	719-04001	1	S	Cover, Trans. Large
46	719-04002	1	S	Cover, Trans. Small
47	719-04153	1		Housing, Trans.
48	719-04004	1	S	Housing, Axle Inner - RH
49	719-04005	1	S	Housing, Axle Inner - LH
50	721-0381	2	S	Seal, Oil
51	721-0496	2		Seal, Oil
52	721-0519	1		Seal, Gland
53	721-3020A	2	S	Seal, Oil


5252 Tractor
Transmission Drive

Page 66 of 70

Ref #	Part Number	Qty	S/P/F	Description
54	721-04019	1	S	Plug, Oil
55	721-04020	1	S	Plug, Oil
56	732-04003	2	S	Spring, Torsion
57	732-04010	1	S	Spring, Compression, .845 x 1.0
58	732-04101	1	S	Spring, Compression, .24 x .563
59	736-0119	6	S	Washer, Lock, 5/16
60	736-04126	2		Washer, Flat, .597 x 1.0 x .04 ..
61	736-0371	2	/P	Washer, Flat, .343 x .88 x .062
62	736-0615	2		Washer, Thrust
63	736-0266	AR	S	Washer, Flat, 1.52 x 2.0 x .030
63	736-04095	AR	S	Washer, Flat, 1.52 x 2.0 x .005
63	736-04096	AR	S	Washer, Flat, 1.52 x 2.0 x .015
64	741-0343	4	S	Pin, Brake Actuating
65	741-0363	1	S	Bearing, Needle
66	741-0862	1	/P	Ball, Detent
67	741-1104	2	/P	Bearing, Ball
68	741-3033A	2	S	Bearing, Ball
69	741-3057	1	S	Bearing, Ball
70	741-3083	1		Bearing, Needle Thrust
71	741-04014	2	S	Bearing, Ball
72	741-04066	1	S	Bearing, Ball
73	750-3364	1	S	Spacer, 1.51 x 1.75 x 2.41
74	750-04024	1	S	Spacer, 1.515 x 2.039 x .335 ...
75	750-04088	1	S	Spacer, 1.26 x 1.625 x .853
76	761-0215	4		Disc, Brake
77	761-04000	2	S	Yoke, Brake
78	761-04001	2	S	Bracket, Brake Anti Rotation
79	761-04002	2	S	Plate, Puck Retainer
80	761-04003	1	S	Arm, Brake Actuator - LH
81	761-04004A	1	S	Arm, Brake Actuator - RH
82	750-04413	1		Spacer, .573 x .938 x .832
83	750-04416	1		Plug, .437 x .16

5252 Tractor
Transmission Mounting

Page 67 of 70

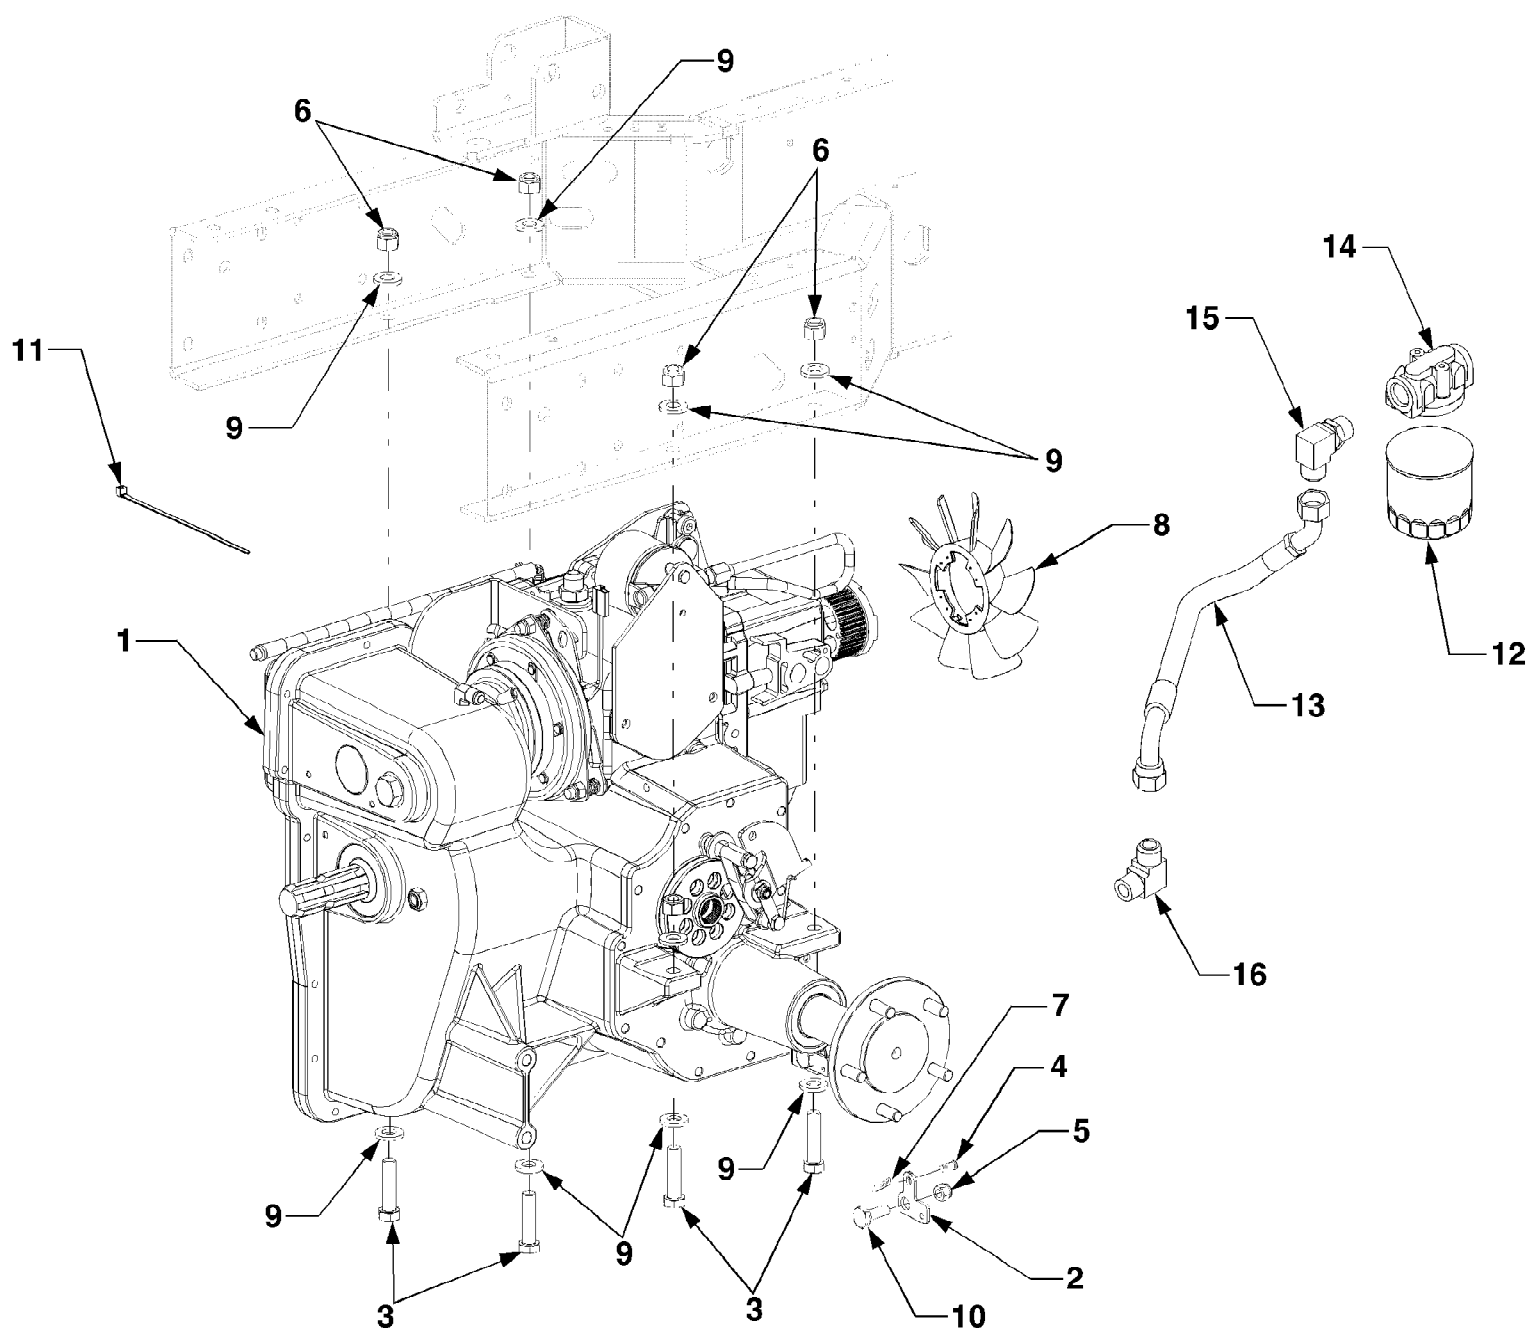


5252 Tractor
Transmission Mounting

Page 68 of 70

Ref #	Part Number	Qty	S/P/F	Description
1	N/A	1		Transmission Assembly
2	603-04193	1		Link, Diff Lock Actuator
3	710-3071	4		Screw, Hex Cap 1/2-13 x 2.0 GR8
4	711-0701	1	S	Pin, Clevis, .25 x .50
5	712-3061	1	S	Nut, Hex Insert Lock, 3/8-24
6	712-3083	4	/P	Nut, Hex Insert Lock, 1/2-13
7	714-0104	1	S	Pin, Internal Cotter
8	731-05247	1	S	Fan, Transmission Cooling
9	736-3019	8		Washer, Flat, .531 x .1062 x .134
10	738-0689	1	S	Screw, Shoulder, 1/2 Dia. x .180
11	725-0157	1	/P	Tie, Cable
12	723-3014	1	S	Filter, Oil
13	727-04098	1	S	Hose, Filter
14	727-04104	1	S	Adapter, Oil Filter
15	737-04101	1		Fitting, 90° Elbow
16	737-04102	1		Fitting, 90° Elbow

5252 Tractor
Wheels

Page 69 of 70

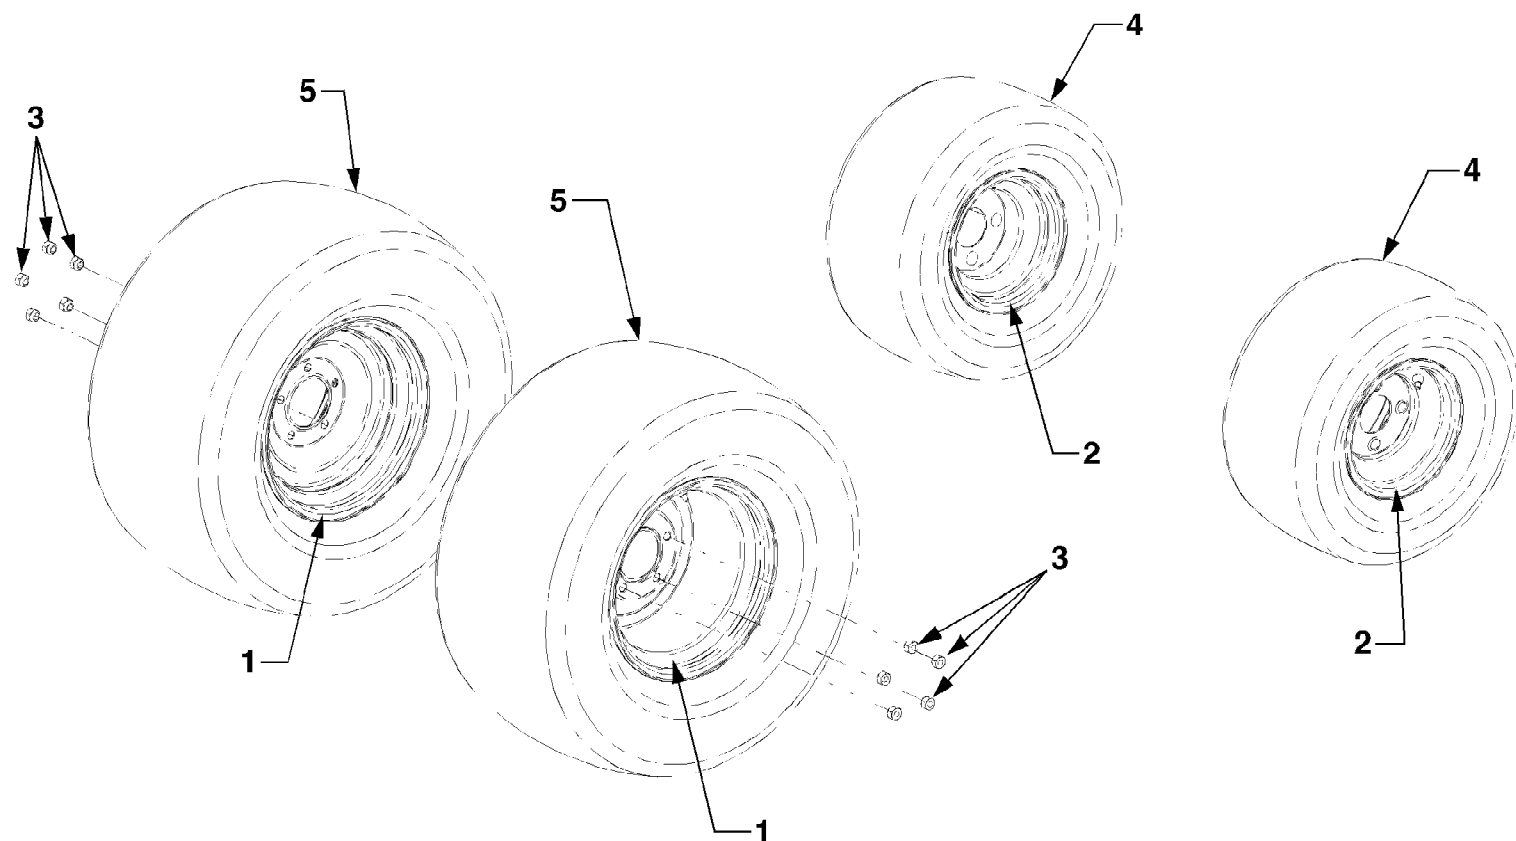

5252 Tractor
Wheels

Page 70 of 70

Ref #	Part Number	Qty	S/P/F	Description
1	634-04004	2		Rim Assembly
1	734-0255	2	S	Valve Stem
2	634-04093	2		Rim Assembly
2	734-0255	2	S	Valve Stem
3	712-3050	10	/P	Nut, Lug, 7/16-14
4	734-04002	2	S	Tire, Tuft, 18 x 8.5 x 8
5	734-04080	2		Tire, Turf, 26 x 12.0 x 12