


For Parts Call 606-678-9623 or 606-561-4983

**EXPAND-IT
PRUNER ATTACHMENT
MODEL NO. UT15520B
REPAIR SHEET**

EXPAND-IT PRUNER - MODEL NO. UT15520B

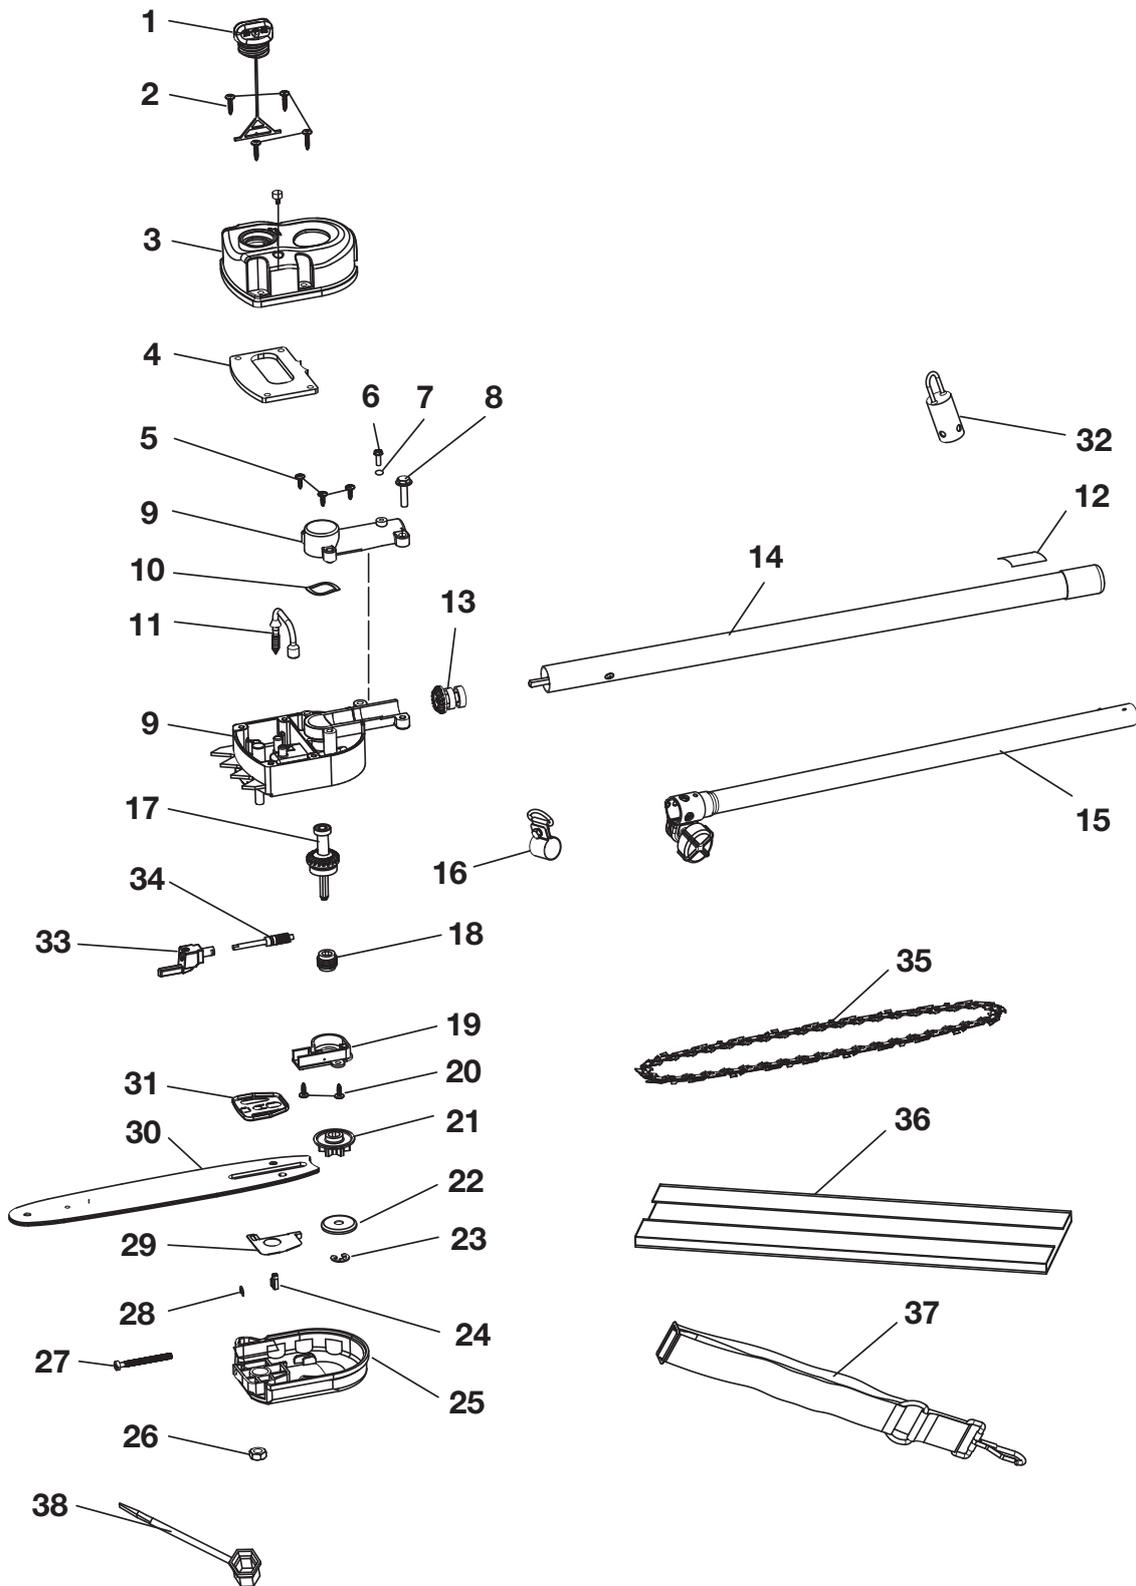

EXPAND-IT PRUNER - MODEL NO. UT15520B

PARTS LIST

KEY NO.	PART NUMBER	DESCRIPTION	QTY
1	090038001001	OIL CAP ASSEMBLY	1
2	090038001002	SCREW (M5 X 18 mm)	4
3	090038001003	OIL TANK COVER ASSEMBLY	1
4	090038001004	OIL COVER GASKET	1
5	090038001005	SCREW (M5 X 25 mm)	3
6	099078001030	SCREW (M5 X 12 mm)	1
7	099078001031	LOCK WASHER (5 mm)	1
8	090038001006	SCREW (M5 X 25 mm)	1
9	090038001042	GEAR CASE AND COVER ASSEMBLY	1
10	090038001008	WAVY WASHER	1
11	090038001009	OIL FILLER ASSEMBLY	1
12	090038001034	WARNING LABEL	1
13	090038001011	PINION AND BEARING ASSEMBLY	1
14	090038001012	LOWER DRIVE SHAFT ASSEMBLY	1
15	090038001013	INTERMEDIAL DRIVE SHAFT ASSEMBLY	1
16	099075001011	STRAP HANGER	1
17	090038001014	TAPER GEAR ASSEMBLY	1
18	090038001015	WORM	1
19	090038001016	OIL PUMP HOUSING W/ CAM PIN	1
20	090038001017	SCREW (M5 X 13 mm)	2
21	090038001018	SPROCKET	1
22	090038001019	CUPPED WASHER	1
23	090038001020	E - RING (Ø6 mm)	1
24	090038001021	GUIDE BAR ADJUST PIN	1
25	090038001022	BAR CLAMP ASSEMBLY	1
26	090038001023	HEX NUT (M8 mm)	1
27	090038001024	ADJUST SCREW (M5 X 50 mm)	1
28	090038001025	RETAINING RING (Ø4 mm)	1
29	090038001026	GUIDE BAR PLATE	1
30	090038001027	GUIDE BAR	1
31	090038001028	BAR PAD PLATE	1
32	099078001039	HANGER	1
33	090038001029	OIL PUMP SEAL ASSEMBLY	1
34	090038001030	WORM GEAR & PLUNGER ASSEMBLY	1
35	090038001031	CHAIN (10 in. OREGON)	1
36	090038001032	SCABBARD	1
37	099075001012	SHOULDER STRAP ASSEMBLY	1
38	090038001033	WRENCH	1
	983000573	OPERATOR'S MANUAL (090038001035)	
	983000573R	REPAIR SHEET (REV:01)	
	08-25-05		