



<p>SERVICE</p> 		<p style="text-align: right;">1</p> <hr/> <p>X 85.102-96</p>
--	--	---

MODEL } **40**
 MODÈLE }

CHAIN TENSION

The chain tension screw is, on this model, placed in the clutch cover.

Therefore, when fitting bar and chain, check so the chain tension screw peg (A) comes into the right hole (B) in the bar.

Torque the bar nuts finger tight.

Then tension the chain with the chain tension screw (C), so that the chain fits snugly against the underside of the bar. It should easily be pulled around the bar by hand.

When the chain is sufficiently tensioned, tighten the bar nuts with the combination wrench.

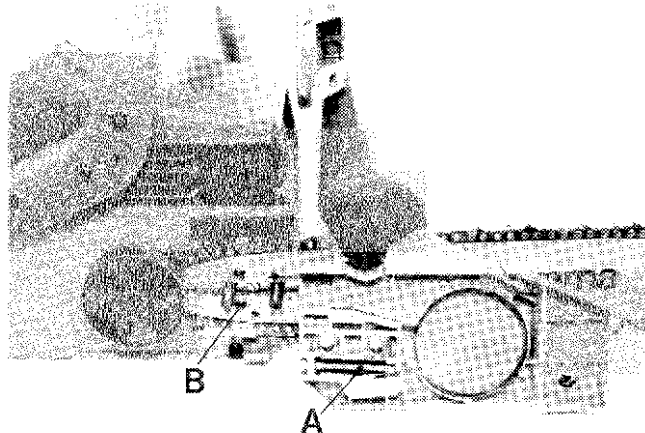


Fig. 1

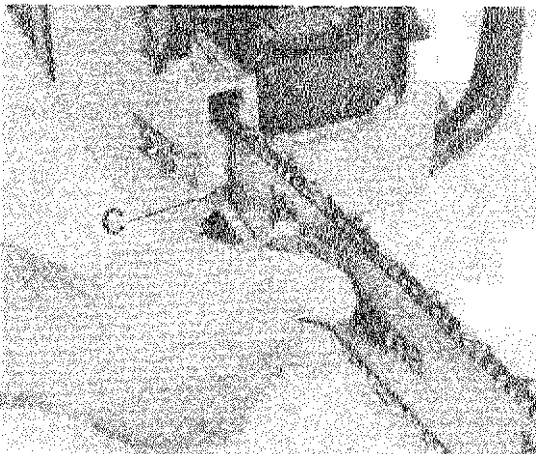


Fig. 2

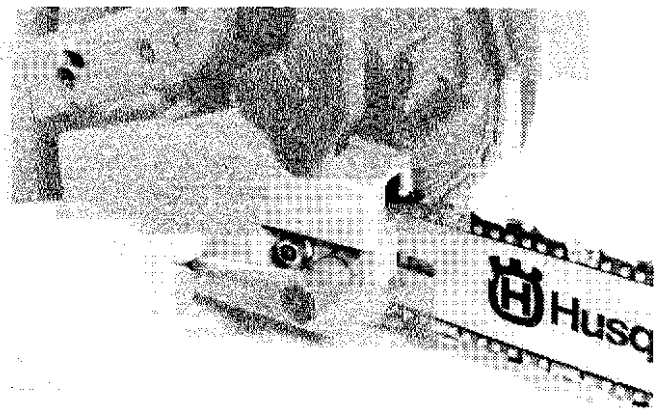


Fig. 3