

**CORRECTED!****Model 250 RX****Air filter and air filter housing**

Both the air filter housing and the air filter are changed in order to receive an improved function of the engine and better sealing at the air filter.

The air is carried directly into the airfilter housing and not via the crankcase. The airfilter consists of a prefilter and a foam air filter. The filters should be oiled in order to give a complete protection for the engine. Appropriate oil for this procedure is oil used for the cut-off saws, 268K/272K, filter oil, ref. no. 503 47 73-01. The old air filter in nylon, ref. no. 502 17 25-01, can also be mounted in the new air filter housing.

| New Ref. No. | Description        | Excl. Ref. No. |
|--------------|--------------------|----------------|
| 502 17 19-03 | Air filter cover   | 502 17 19-01   |
| 502 22 71-03 | Air filter housing | 502 22 71-02   |
| 502 27 45-01 | Prefilter          |                |
| 502 27 44-01 | Air filter         |                |

Introduced from serial number: 3180168

