



Model 225/232/235

Bearing holder, 502 19 51-01

When mounting bearing holder to ballbearing be observant to have the bearing all way down in the holder until you reach the shown measurement (12,9±0,2mm).

If not there will be axial force at the ball bearing which this type of bearing can not take.

