



SECTION 11: PARTS LIST FOR MODELS 977 & E977

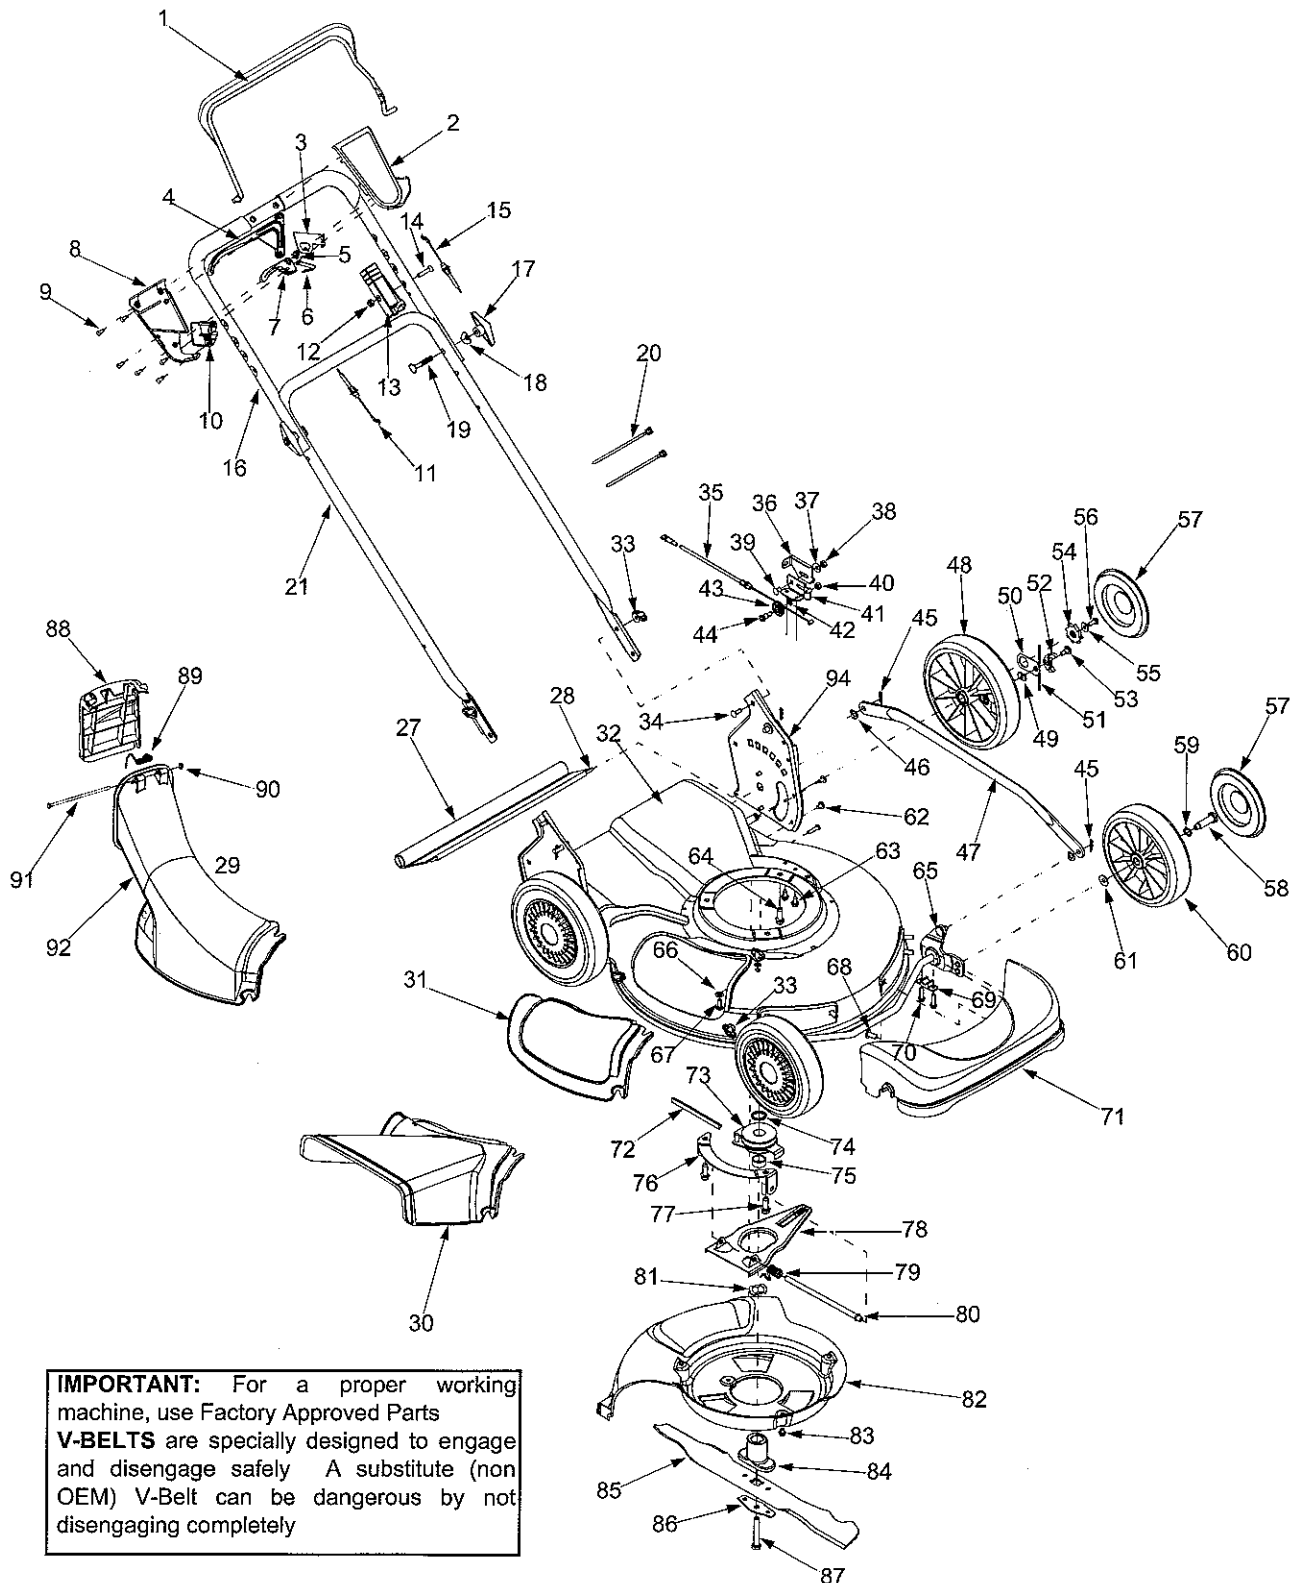

Models 977 & E977

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1.	647-04008	Control Handle	52.	748-0381	Pawl RH
2	731-0904A	Upper Control Handle		748-0188B	Pawl LH
3	16864	6 Spd Rack Cable Bracket	53	738-0137A	Shld Screw .340 ID x .285 OD
4	731-0620	Control Lever	54	748-0318	Wheel Ratchet
5.	713-0397	Gear Insert	55	736-0270	Bell Washer .265 ID x .75 OD
6.	732-0627	Shift Lever Spring	56.	710-0751	Hex Cap Screw 1/4-20 x .620
7.	731-0924	6 Speed Shift Lever	57.	731-0982A	Hubcap
8	731-0905A	Lower Control Housing	58.	738-0102	Shoulder Screw .498 x 1.445
9.	710-1667A	C Sunk Tap Screw #10 x .75 Lg	59.	736-0504	Wave Washer .510 ID x .750 OD
10.	731-0906	Cable Mounting Cap	60	734-2008A	Wheel 8 x 2.125
11	746-0711A	Drive Cable 51.0	61	736-0105	Spring Washer .401 ID x .870 OD
12.	712-0324	Top Lock Nut 1/4-20	62	710-1348	Screw 1/4-14 x .500
13.	746-0883	Control Housing	63.	710-0896	Screw 1/4-14 x .625
14.	710-1270	Oval C-Sunk Screw	64.	710-0654A	Hex Washer Screw 3/8-16 x 1.0
15.	746-04055	Control Cable	65	611-0064	Front Axle Assembly
16.	749-0439D	Upper Handle	66.	736-0204	Flat Washer .344 ID x .62 OD
17.	720-0284	Wing Nut	67	710-0703	Carriage Screw 1/4-20 x .75
18.	736-0451	Saddle Washer .320 ID x .830 OD	68.	710-1242	Torx Screw
19.	710-1174	Carriage Bolt 5/16-18 x 2.0	69.	741-0492A	Block Bushing
20	726-0240	Cable Tie	70.	710-1241	Hex Washer Screw
21.	749-0907B	Lower Handle	71.	731-1836	Front Axle Cover
27.	731-1901	Trail Shield	72	754-0460	Belt 3/8 x 39.24
28	732-0842	Trail Shield Wire	73.	656-0613	Pulley Assembly
29.	631-0066	Chute Assembly	74.	750-1071	Sleeve Spacer .88 ID x 1.13 OD
30	731-1832	Side Discharge Chute	75.	750-1070	Sleeve Spacer .88 ID x 1.00 OD
31.	731-1833	Mulch Cover	76	782-7597	Pivot Bracket
32.	782-0078B	Deck 21"	77.	710-0654A	Screw 3/8-18 x 1.0
33	712-0397	Wing Nut	78	782-7596	Control Arm
34	710-0703	Carriage Bolt 1/4-20 x .75	79.	732-0807	Torsion Spring
35.	746-0939	6 Speed Cable	80.	711-1114	Pivot Shaft
36.	782-7574A	Cable Adjustment Bracket	81	736-0526	Wave Washer 1.38 ID x .88 OD
37.	736-0270	Bell Washer .265 ID x .75 OD	82	731-1828	Baffle
38.	712-0287	Hex Nut 1/4-20	83.	710-0653	Screw 1/4-20 x 3.75
39	710-0167	Carriage Screw 1/4-20 x .50	84.	753-0609	Blade Adapter Kit
40.	712-0138	Hex Nut 1/4-28	85.	742-0741	21" Mulching Blade
41.	782-7575A	Cable Mounting Bracket	86.	736-0524A	Blade Bell Support
42	736-0329	Lock Washer 1/4	87.	710-1257	Hex Bolt 3/8-24 x 2.5
43.	756-0625	Roller Cable	88.	731-1874	Chute Door
44	738-0924	Shoulder Screw .375 ID x 1/4-14	89.	732-0819	Torsion Spring
45.	714-0104	Cotter Pin	90.	726-0111	Push Cap
46.	736-0286	Bowed Washer	91	747-0965	Pivot Rod
47.	782-0565	Single Lever Control Arm	92.	731-1713B	Discharge Chute
48	734-2010	Wheel 9 x 2.125	94.	682-3052	Handle Bracket Assembly - RH
49.	712-0414	Top Lock Tab Weld Nut 1/4-20		682-3053	Handle Bracket Assembly - LH
50.	16855	Ratchet Pawl Plate	95	682-7527	Cup Assembly (Part of #73)
51.	10622B	Plastic Spring Ratchet			


Models 977 & E977

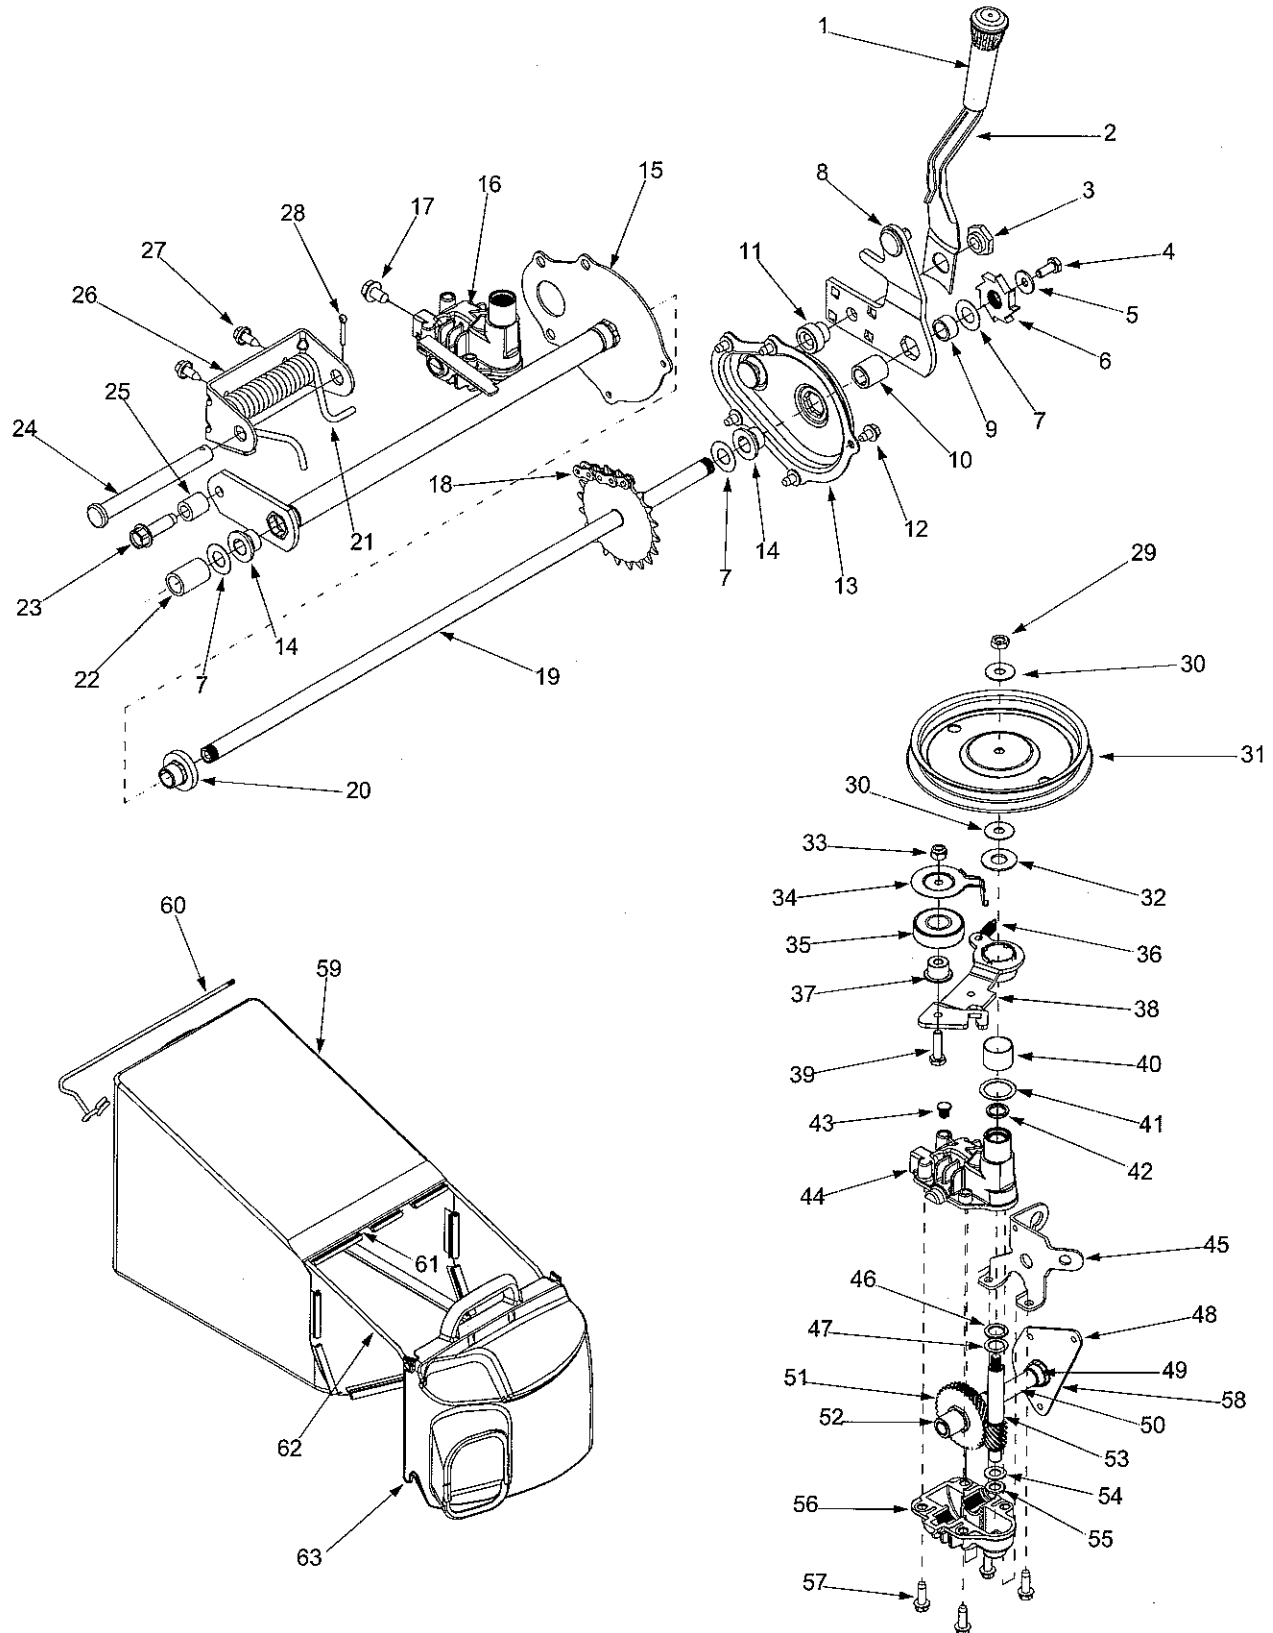

Models 977 & E977

Ref. No.	Part No.	Part Description	Ref. No.	Part No.	Part Description
1	720-0223	Grip	33	712-0896	Hex Jam Nut 1/4-28
2	732-0803A	Spring Lever	34	782-7598	Belt Keeper
3	738-0529	Shoulder Nut .825 x .165 Lg	35	741-0600	Bearing
4	710-0751	Cap Screw 1/4-20 x .620	36	732-0849A	Extension Spring
5	736-0270	Bell Washer .285 ID x .75 OD	37	750-1050	Flange Spacer
6	748-0318	Wheel Ratchet	38	682-0027A	Idler Bracket Assembly
7	736-0369	Flat Washer .508 ID x 1.0 OD	39	710-0299	Hex Cap Screw 1/4-28 x 1.0
8	682-0531	Pivot Arm Assembly	40	741-0682A	Bearing Sleeve
9	750-0515	Spacer .510 ID x .70 OD	41	736-0570	Flat Washer .885 ID x 1.45 OD
10	741-0978	Sleeve Bearing .504 ID x .830 OD	42	721-0329	Oil Seal
11	750-1056	Shoulder	43	721-0325	Plug
12	710-0653	Tap Screw 1/4-20 x .375	44	618-0253	Upper Housing Assembly
13	682-7528	Chain Cover Assembly	45	782-7601A	Cable Bracket
14	741-0324	Flange Bearing .506 ID x .590 Lg	46	741-0690	Bearing
15	682-7526	Transmission Axle Assembly	47	736-0616	Thrust Washer .504 ID x .70 OD
16	618-0263A	Transmission Assembly Complete	48	782-7595	Pivot Bracket
17	710-0604A	Hex Screw 5/16-18	49	741-0324	Flange Bearing
18	713-0453	Chain	50	711-1168	Output Shaft 6T
19	638-0012	Rear Axle Assembly	51	717-1469	Gear 34T
20	741-0522	Flange Bearing .506 ID x .715 Lg	52	741-0674	Bearing
21	732-0832	Torsion Spring	53	717-1487	Pinion Shaft 10T
22	750-0151	Spacer .550 ID x .750 OD	54	736-0314	Thrust Washer 3/8 x .70
23	710-1315	Screw 3/8-16 x .25	55	736-0569	Thrust Washer .388 x .625
24	711-0835	Clevis Pin .50 Dia x 4.82 Lg	56	618-0252	Lower Housing Assembly
25	750-0807	Spacer .385 ID x .624 OD	57	710-0642	Hex Screw 1/2-20 x .75
26	782-0568	Hgt Adjustment Spring Bracket	58	611-0066	Shaft Assembly
27	710-1652	Screw 1/4-14 x .825	59	664-0121	Grassbag
28	714-0474	Cotter Pin	60	747-0940A	Support Rod w/ Rope Guide
29	712-3025	Hex Jam Nut 5/16-24	61	747-0939	Pivot Rod
30	736-0425	Bell Washer .325 ID x .930 OD	62	747-0937	Grassbag Frame
31	756-0656	Pulley	63	631-0071	Grassbag Cover
32	736-3084	Flat Washer .510 ID x 1.120 OD			

Model E977

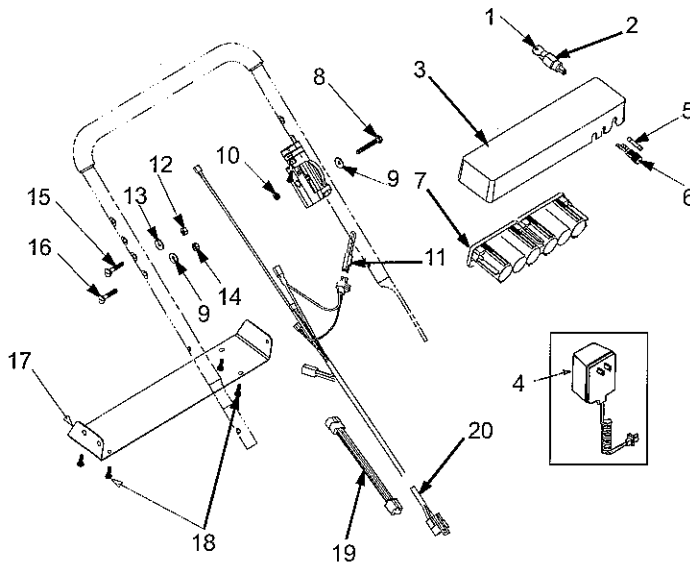

Ref. No.	Part No.	Description
1	725-0201	Ignition Key
2	725-0873	Key Switch
3	731-0891A	Battery Tray
4	725-0727	Battery Charger
5	725-0298	Fuse 7.5 Amp
6	725-1428	Fuse Holder
7	725-1276	Battery 12V
8	710-0501	Hex Screw: 1/4-20:2.0
9	736-0270	Bell Washer
10	712-0329	Special Hex Nut 5/16-18
11	725-1206	Plug
12	712-0267	Nut 5/16-18
13	736-0242	Bell Washer
14	712-0287	Hex Nut 1/4-20
15	710-1250	Carriage Bolt
16	710-0111	Carriage Screw
17	782-9012	Lower Battery Tray
18	710-0969	Tapp Screw
19	725-1538	Harness Extension
20	625-0022	Harness


Safety & Decorative Labels

Some of the labels found on your mower are represented here with the corresponding part numbers. Please use part numbers when ordering replacement labels.

777S30118



777I20291

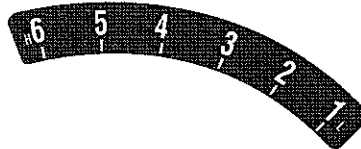

777S30128



777S30116



777S30145



777D06697

