



IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-BELTS** are specially designed to engage and disengage safely. A substitute (non OEM) V-Belt can be dangerous by not disengaging completely.

Ref #	Part Number	Qty	Description
1	747-1214		Lower Bail Handle
2	710-0599		TT Screw 1/4-20 x 0.5
3	736-0270		Bell Washer .265 x 0.75
4	17032A		Deflector Chute Adapter
5	732-1014		Torsion Spring
6	731-0981A		Hub Cap
7	747-1161A		Blade Control Handle
8	749-1092A		Upper Handle
9	731-04177		Chute Deflector
10	687-02055		Mulch Plug Complete
11	747-0710		Hinge Pin
12	732-0708		Bearing Retainer
13	720-0279		Handle Knob
14	720-0284		Handle Knob
15	710-1205		Eye Bolt
16	746-1113		Control Cable - 37.75"
	746-1132		Control Cable - 40.75"
17	710-1174		Carriage Bolt 5/16-18 x 2.0
18	687-02033		RH Handle Bracket
	687-02031		LH Handle Bracket
19	726-0240		Cable Tie
20	714-0104		Cotter Pin
21	710-1008		Self-Tapping Sems Screw
22	746-04112		Drive Cable - 50.50"
23	664-04007		Grassbag Assembly
24	710-1650		Shoulder Screw # 12 -24
25	631-0075B		Engine Spacer
26	741-0604A		Bearing Sleeve
27	748-0355		Bearing Support
28	787-01106		21" Deck
29	782-5003		LH Rear Baffle
30	710-1017		Screw AB: 1/4-14: .625
31	782-5004A		RH Rear Baffle
32	710-0216		Hex Screw 3/8-16 x .75
33	732-04090		Torsion Spring RH
34	712-0431		Flange Lock Nut 3/8-16
35	731-04584		Transmission Cover (Black)
36	782-5002A		Front Baffle
37	754-0637A		V-Belt
38	736-0447		Wave Washer
39	750-04178		Sleeve Spacer 9.04" Lg.
40	748-04015A		Blade Adapter w/ Pulley
41	742-0741		21" Mulching Blade
42	736-0524A		Blade Bell Support
43	687-02044		Pivot Plate Assembly
44	710-1257		Hex Screw 3/8-24 x 2.50
45	749-0928A		Lower Handle
47	720-0426		Adjustment Knob
48	732-04089		Torsion Spring LH
49	734-2042		Wheel 8 x 2.125
50	716-0865		Snap Ring
51	717-1762		Gear 14T RH FWD
	717-1761		Gear 14T LH FWD Not Shown
52	747-04080		Grass Bag Frame
53	736-0451		Saddle Washer

Ref #	Part Number	Qty	Description
54	712-3005		Hex Flange Lock Nut 3/8-16
55	710-1652		TT Scr. w/Washer 1/4-20 x.625
56	687-02056		RH Handle Bracket Assembly
	687-02057		LH Handle Bracket Assembly
57	715-0221		Dowel Pin
58	736-0474		Washer
59	687-02039		Pivot Arm Assembly - RH
	687-02040		Pivot Arm Assembly - LH
60	732-0866		Rear Spring Lever
61	720-0312		Foam Grip
62	738-0507B		Shoulder Scr.500 Dia. x.434
63	734-04093		Wheel, 12 x 2.125
64	782-0512B		Height Adjuster Plate - RH
	782-0511A		Height Adjuster Plate - LH Not Shown
65	732-0706		Front Lever - RH
	732-0707		Front Lever - LH Not Shown
66	732-0700		Wire
67	731-1236		Rear Trailing Shield
68	747-0996		Pivot Rod
69	716-0102		Snap Ring
70	731-04134		Rear Discharge Door
75	782-7551		Wheel Dust Cap
76	756-04017		Input Pulley
77	750-04162		Spacer.375 x.50 x 1.02" Lg.
78	715-04011		Roll Pin
79	710-0703		Carriage Bolt 1/4-20
80	712-0397		Wing Nut
81	618-0657		Transmission Assembly
82	732-1043		Belt Tension Spring
83	750-1166		Slev. Spacer 2.1" Lg.
88	682-0512A		Height Adjustment Assembly RH Not Shown
	682-0511A		Height Adjustment Assembly LH
89	731-2626		Deluxe Bail Cover