



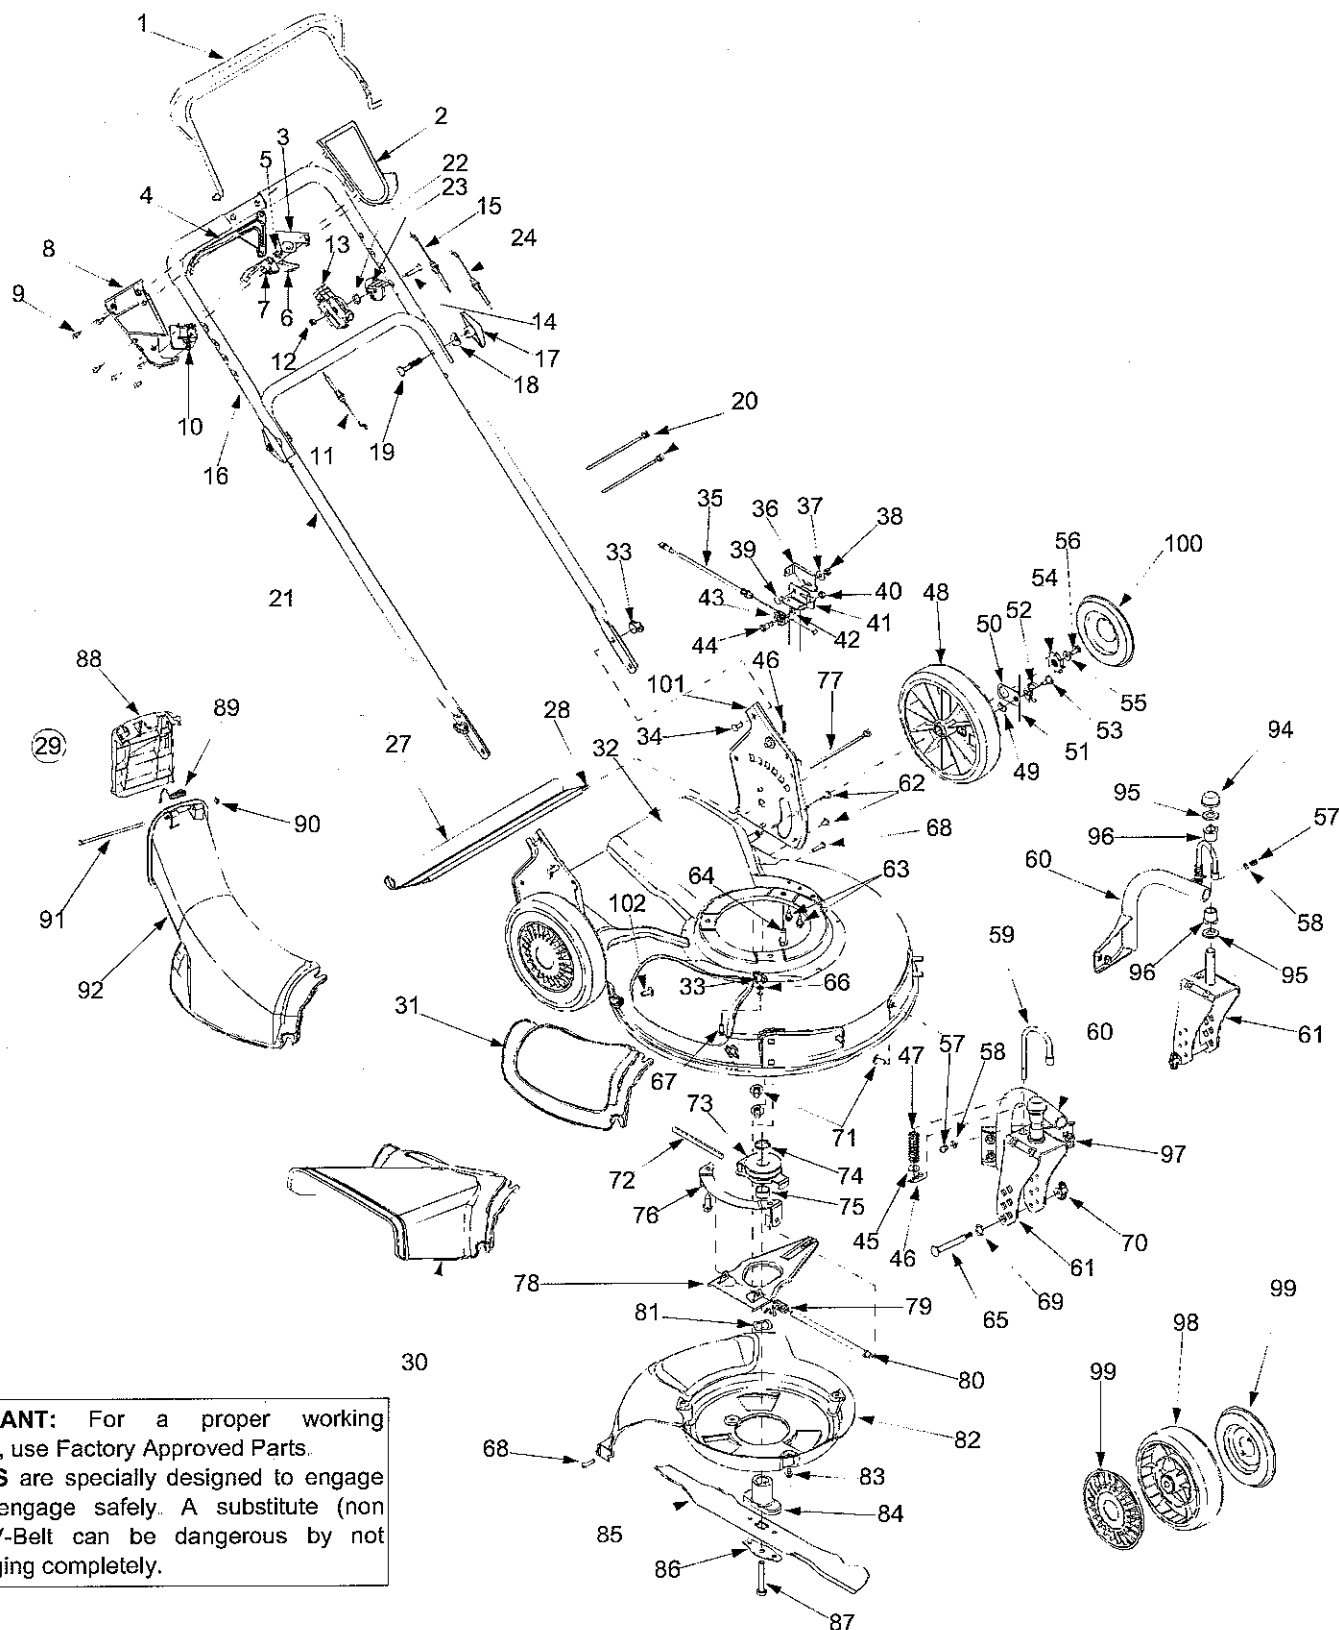

IMPORTANT: For a proper working machine, use Factory Approved Parts.
V-BELTS are specially designed to engage and disengage safely. A substitute (non OEM) V-Belt can be dangerous by not disengaging completely.

Ref #	Part Number	Qty	Description
1	647-0004		Control Handle
2	731-0904A		Upper Control Housing
3	16864		6 Spd. Rack Cable Bracket
4	731-0620		Control Lever
5	713-0397		Gear Insert
6	732-0627		Shift Lever Spring
7	731-0924		6 Speed Shift Lever
8	731-0905A		Lower Control Housing
9	710-1667A		C Sunk Tap Screw #10 x .75 Lg
10	731-0906		Cable Mounting Cap
11	746-0711B		Drive Cable 51.0
12	712-0324		Top Lock Nut 1/4-20
13	746-0875		Control Housing
14	710-0605		Mach. Screw
15	746-04109		Control Cable
16	749-0439D		Upper Handle
17	720-0284		Wing Nut
18	736-0451		Saddle Washer .320 ID x .830 OD
19	710-1174		Carriage Bolt 5/16-18 x 2.0
20	726-0240		Cable Tie
21	749-0907B		Lower Handle
22	736-0501		Spring Washer
23	746-0876		Choke Lever
24	746-04131		Choke Cable
27	731-1901A		Trail Shield
28	732-0842		Trail Shield Wire
29	631-0066		Chute Assembly
30	731-1832		Side-Discharge Chute
31	731-1833A		Mulch Cover
32	782-0078B		Deck 21"
33	712-0397		Wing Nut
34	710-0703		Carriage Bolt 1/4-20 x .75
35	746-0939A		6 Speed Cable
36	782-7574A		Cable Adjustment Bracket
37	736-0270		Bell Washer .265 ID x .75 OD
38	712-3006		Hex Nut 1/4-20
39	710-0167		Carriage Screw 1/4-20 x .50
40	712-0138		Hex Nut 1/4-28
41	782-7575A		Cable Mounting Bracket
42	736-0329		Lock Washer 1/4
43	756-0625		Cable Roller
44	738-0924		Shoulder Screw .375 ID x 1/4-14
45	736-0264		Flat Washer 330 ID x .630 OD
46	714-0104		Cotter Pin
47	732-0306		Compression Spring
48	734-1981A		Wheel 9 x 2
49	712-0414		Top Lock Tab Weld Nut 1/4-20
50	16855		Ratchet Pawl Plate
51	10622B		Plastic Spring Ratchet
52	748-0381		Pawl RH
	748-0188B		Pawl LH
53	738-0137A		Shld Screw 340 ID x .285 OD
54	748-0318		Wheel Ratchet
55	736-0270		Bell Washer .265 ID x .75 OD
56	710-0751		Hex Cap Screw 1/4-20 x .620

Ref #	Part Number	Qty	Description
57	737-3000		Grease Fitting
58	736-0931		Flat Washer.203 ID x.403 OD
59	747-0924		Wheel Pin Lock
60	682-9020A		Caster Assembly RH
	682-9021A		Caster Assembly LH
61	682-9024		Caster Bracket Assembly RH
	682-9026		Caster Bracket Assembly LH
62	710-1348		Screw 1/4-14 x 500
63	710-1652		Screw 1/4-20 x 625
64	710-0654A		Hex Washer Screw 3/8-16 x 1.0
65	711-1146		Caster Axle
66	726-0233		Push Nut 25ID x 50OD
67	710-0703		Carriage Screw 1/4-20 x 75
68	710-0969		Screw #12-16 x 1 00
69	736-0232		Wave Washer.531 ID x.781 OD
70	712-0397		Wing Nut
71	710-0260		Carriage Bolt 5/16-18 x 62
72	754-0460		Belt 3/8 x 39.24
73	656-0613		Pulley Assembly
74	750-1071		Sleeve Spacer.88 ID x 1.13 OD
75	750-1070		Sleeve Spacer.88 ID x 1.00 OD
76	782-7597		Pivot Bracket
77	725-0157		Cable Tie
78	782-7596		Control Arm
79	732-0807		Torsion Spring
80	711-1114		Pivot Shaft
81	736-0526		Wave Washer 1.38 ID x 88 OD
82	731-1828		Baffle
83	710-0653		Screw 1/4-20 x 3.75
84	748-0377C		Blade Adapter
85	742-0741		21" Mulching Blade
86	736-0524B		Blade Bell Support
87	710-1257		Hex Bolt 3/8-24 x 2.5
88	731-1874		Chute Door
89	732-0819		Torsion Spring
90	726-0111		Push Cap
91	747-0965		Pivot Rod
92	731-1713B		Discharge Chute
94	726-0214		Push Cap
95	736-0366		Flat Washer.640 ID x 1.12 OD
96	741-0685		Flange Bearing
97	712-3004A		Flange Lock Nut 5/16-18
98	734-1857		Wheel 7 x 2
99	731-1887		Hubcap - Spoke w/ Hole
100	731-0981A		Hubcap - Radial Spoke
101	682-3052		Handle Bracket Assembly - RH
	682-3053		Handle Bracket Assembly - LH
102	710-0134		Carriage Screw 1/4-20 x 62
103	750-1260		Engine Spacer (Not Shown)

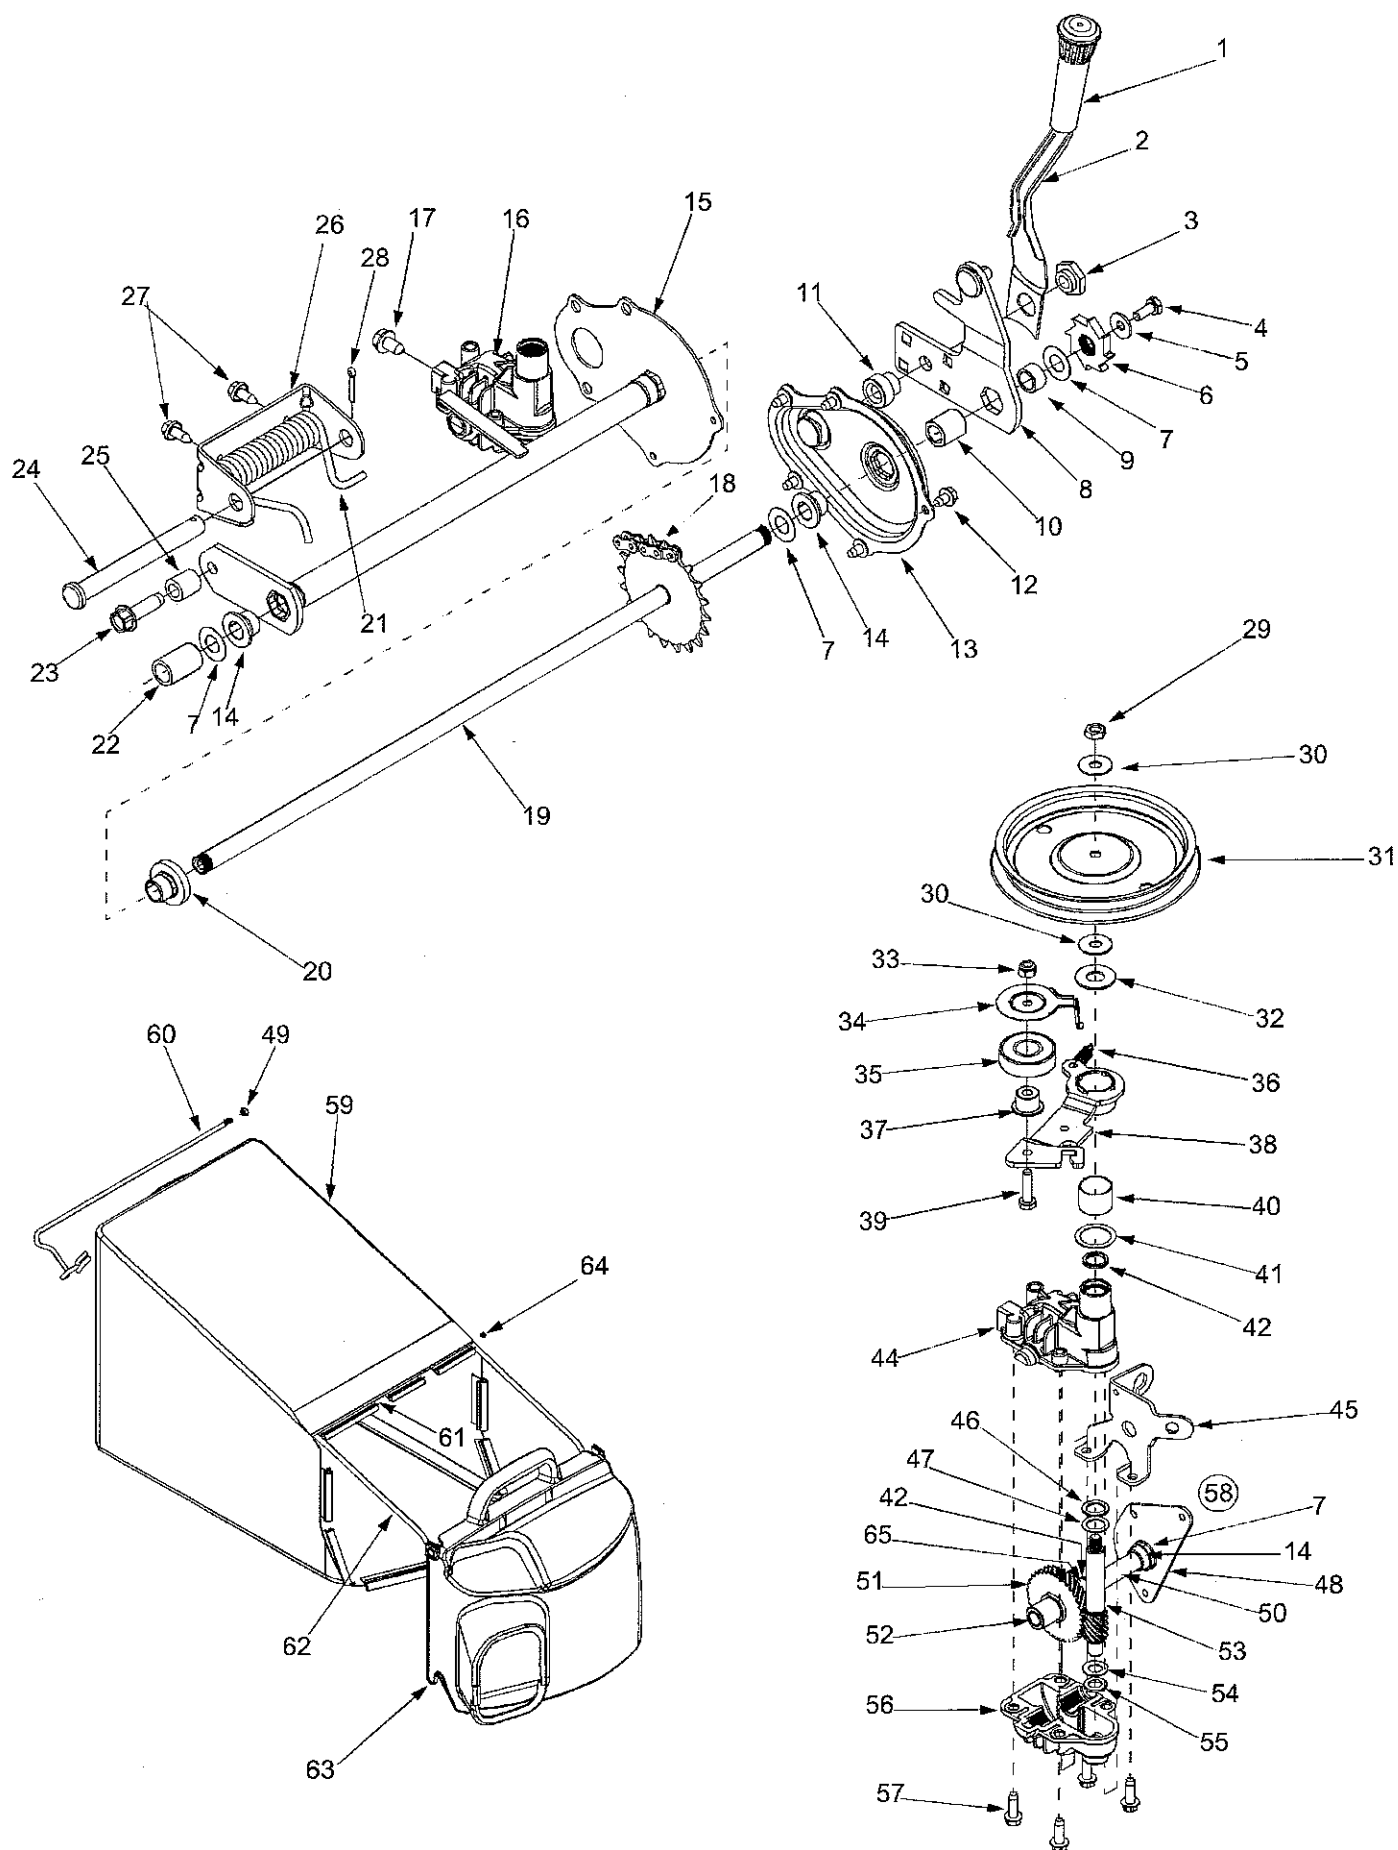

Ref #	Part Number	Qty	Description
1	720-0223		Grip
2	732-0803A		Spring Lever
3	738-0529		Shoulder Nut.825 x.165 Lg.
4	710-0751		Cap Screw 1/4-20 x.620
5	736-0270		Bell Washer.285 ID x.75 OD
6	748-0318		Wheel Ratchet
7	736-0369		Flat Washer.508 ID x 1.0 OD
8	682-0531		Pivot Arm Assembly
9	750-0515		Spacer.510 ID x.70 OD
10	741-0978		Sleeve Bearing.504 ID x.830 OD
11	750-1056		Shoulder
12	710-0653		Tap Screw 1/4-20 x.375
13	682-7528		Chain Cover Assembly
14	741-0324A		Flange Bearing.506 ID x.590 Lg
15	682-7526		Transmission Axle Assembly
16	618-0263A		Transmission Assembly
17	710-0604A		Hex Screw 5/16-18
18	713-0453		Chain
19	638-0012		Rear Axle Assembly
20	741-0522		Flange Bearing.506 ID x.715 Lg
21	732-0832		Torsion Spring
22	750-0151		Spacer.550 ID x.750 OD
23	710-1315		Screw 3/8-16 x 25
24	711-0835		Clevis Pin.50 Dia x 4.82 Lg
25	750-0807		Spacer.385 ID x.624 OD
26	782-0568		Height Adjustment Spring Bracket
27	710-1652		Screw 1/4-20 x.625
28	714-0474		Cotter Pin
29	712-3025		Hex Jam Nut 5/16-24
30	736-0425		Bell Washer.325 ID x.930 OD
31	756-0656		Pulley
32	736-3084		Flat Washer.510 ID x 1.120 OD
33	712-0896		Hex Jam Nut 1/4-28
34	782-7598		Belt Keeper
35	741-0124		Bearing
36	732-0849A		Extension Spring
37	750-1050		Flange Spacer
38	682-0027A		Idler Bracket Assembly
39	710-0299		Hex Cap Screw 1/4-28 x 1.0
40	741-0682A		Bearing Sleeve
41	736-0570		Flat Washer.885 ID x 1.45 OD
42	721-0329		Oil Seal
44	618-0253		Upper Housing Assembly
45	782-7601A		Cable Bracket
46	741-0690		Bearing
47	736-0616		Thrust Washer.504 ID x.70 OD
48	782-7595		Pivot Bracket
49	712-0429		Hex Nut 5/16-18
50	711-1168		Output Shaft 6T
51	717-1469		Gear 34T
52	741-0674		Bearing
53	717-1487		Pinion Shaft 10T
54	736-0314		Thrust Washer 3/8 x.70
55	736-0569		Thrust Washer.388 x.625
56	618-0252		Lower Housing Assembly

Ref #	Part Number	Qty	Description
57	710-0642		Hex Screw 1/2-20 x .75
58	611-0066		Shaft Assembly
59	664-0076		Grass Bag
60	747-0940A		Support Rod w/Rope Guide
61	747-0939		Pivot Rod
62	747-0937		Grass Bag Frame
63	631-0071		Grass Bag Cover
64	726-0106		Cap Nut
65	741-0673		Bearing