
## No Diagram Available


## Parts List Only

Ref#	Part Number	Qty Description
	21423333	10" Bar
	21423433	12" Bar
	21423533	14" Bar
	21423633	16" Bar
	21492333	10" Chain MPG370GLX38cl
	21492133	12" Chain MPG370GLX44cl
	21491933	14" Chain MPG370GLX49cl
	21492533	16" Chain MPG370GLX54cl
	30199233	File & Guide (5/32) Service Tool
	21421733	File (5/32) Service Tool

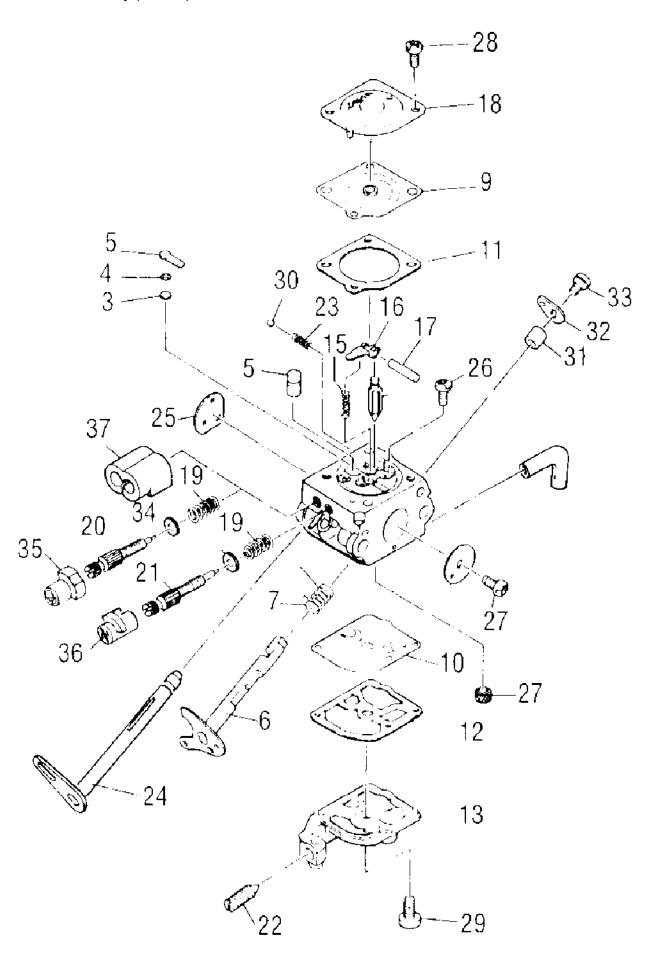


K&T Saw Shop 606-678-9623 or 606-561-4983

Ref#	Part Number	Qty Description
1 2 3 4 5	323653-03	Carburetor, Walbro WT 438  1 Strainer  1 Plug, Welch  1 Valve, Check (Not Included Individually)  1 Retainer, Check Valve (Not Included Individually)  1 Nozzle Assembly, Check Valve (Not Included Individually)
6 7 8 9		<ol> <li>Shaft Assembly, Throttle (Not Included Individually)</li> <li>Spring, Throttle Return (Not Included Individually)</li> <li>Valve, Throttle (Not Included Individually)</li> <li>Diaphragm Assembly, Metering (Not Included Individually)</li> </ol>
10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27		<ul> <li>Diaphragm, Pump (Not Included Individually)</li> <li>Gasket, Metering Chamber (Not Included Individually)</li> <li>Gasket, Pump (Not Included Individually)</li> <li>Cover, Pump (Not Included Individually)</li> <li>Valve, Inlet Needle (Not Included Individually)</li> <li>Spring, Metering Lever (Not Included Individually)</li> <li>Lever, Metering (Not Included Individually)</li> <li>Pin (Not Included Individually)</li> <li>Cover, Metering Chamber (Not Included Individually)</li> <li>Spring, Adjust Screw (Not Included Individually)</li> <li>Screw, Main Mixture (Not Included Individually)</li> <li>Screw, Idle Mixture (Not Included Individually)</li> <li>Screw, Throttle Adjust (Not Included Individually)</li> <li>Spring, Friction (Not Included Individually)</li> <li>Shaft Assembly, Choke (Not Included Individually)</li> <li>Valve, Choke (Not Included Individually)</li> <li>Screw, Pin (Not Included Individually)</li> <li>Screw, Pin (Not Included Individually)</li> <li>Screw, Throttle/Choke Valve (Not Included Individually)</li> </ul>
28 29 30 31 32 33 34 35 36 37	111216 111217 324013 324009	<ul> <li>2 Screw, Metering Chamber (Not Included Individually)</li> <li>1 Screw, Pump Cover (Not Included Individually)</li> <li>1 Ball, Steel (Not Included Individually)</li> <li>1 Collar (Not Included Individually)</li> <li>1 Lever, Throttle (Not Included Individually)</li> <li>1 Screw, Throttle Lever (Not Included Individually)</li> <li>2 Washer, Limiter (Not Included Individually)</li> <li>2 Cap, Limiter, Hi</li> <li>1 Cap, Limiter, Lo</li> <li>1 Retainer Limiter (Not Included Individually)</li> <li>Carburetor Kit Repair A1128WT</li> <li>Gasket/Diaphragm B1110WT</li> </ul>

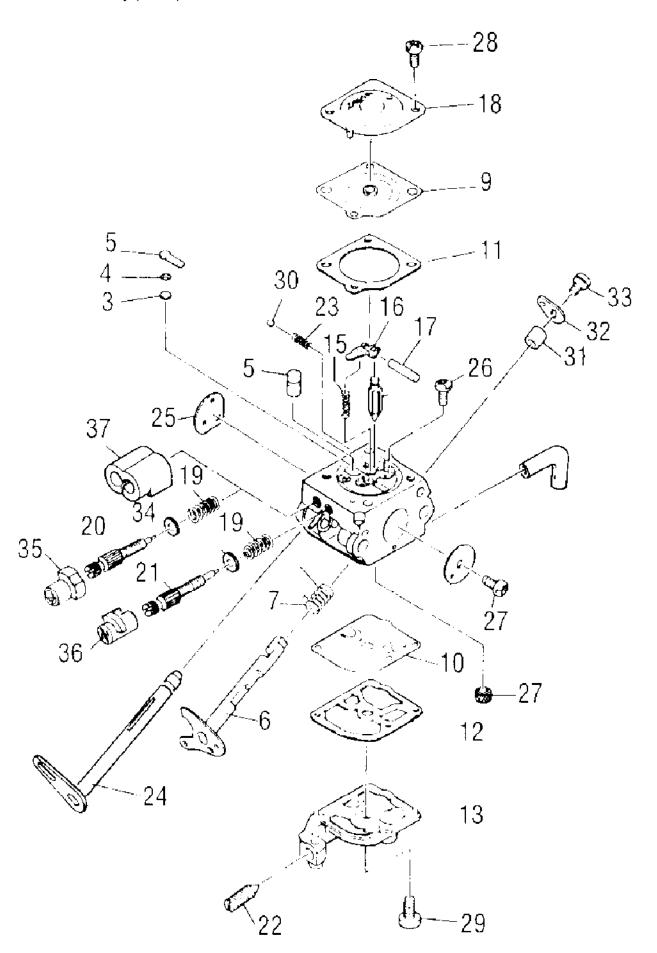


K&T Saw Shop 606-678-9623 or 606-561-4983

Ref #	Part Number	Qty Description
1 2 3 4 5	323653-03 324947-01	Carburetor, Zama CU1M28C Carburetor, Zama C1QM36  1 Strainer (Not Included Individually) 1 Plug, Welch (Not Included Individually) 1 Valve, Check (Not Included Individually) 1 Retainer, Check Valve (Not Included Individually) 1 Nozzle Assembly, Check Valve (Not Included Individually)
6 7 8 9		<ol> <li>Shaft Assembly, Throttle (Not Included Individually)</li> <li>Spring, Throttle Return (Not Included Individually)</li> <li>Valve, Throttle (Not Included Individually)</li> <li>Diaphragm Assembly, Metering (Not Included Individually)</li> </ol>
10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27		<ul> <li>Diaphragm, Pump (Not Included Individually)</li> <li>Gasket, Metering Chamber (Not Included Individually)</li> <li>Gasket, Pump (Not Included Individually)</li> <li>Cover, Pump (Not Included Individually)</li> <li>Valve, Inlet Needle (Not Included Individually)</li> <li>Spring, Metering Lever (Not Included Individually)</li> <li>Lever, Metering (Not Included Individually)</li> <li>Pin (Not Included Individually)</li> <li>Cover, Metering Chamber (Not Included Individually)</li> <li>Spring, Adjust Screw (Not Included Individually)</li> <li>Screw, Main Mixture (Not Included Individually)</li> <li>Screw, Idle Mixture (Not Included Individually)</li> <li>Screw, Throttle Adjust (Not Included Individually)</li> <li>Spring, Friction (Not Included Individually)</li> <li>Shaft Assembly, Choke (Not Included Individually)</li> <li>Valve, Choke (Not Included Individually)</li> <li>Screw, Pin (Not Included Individually)</li> <li>Screw, Throttle/Choke Valve (Not Included Individually)</li> </ul>
28 29 30 31 32 33 34 35 36 37	111216 111217 301041 301042	<ul> <li>Screw, Metering Chamber (Not Included Individually)</li> <li>Screw, Pump Cover (Not Included Individually)</li> <li>Ball, Steel (Not Included Individually)</li> <li>Collar (Not Included Individually)</li> <li>Lever, Throttle (Not Included Individually)</li> <li>Screw, Throttle Lever (Not Included Individually)</li> <li>Washer, Limiter (Not Included Individually)</li> <li>Cap, Limiter, Hi</li> <li>Cap, Limiter, Lo</li> <li>Retainer Limiter (Not Included Individually)</li> <li>Carburetor Kit Repair RB-39</li> <li>Gasket/Diaphragm GND-35</li> </ul>

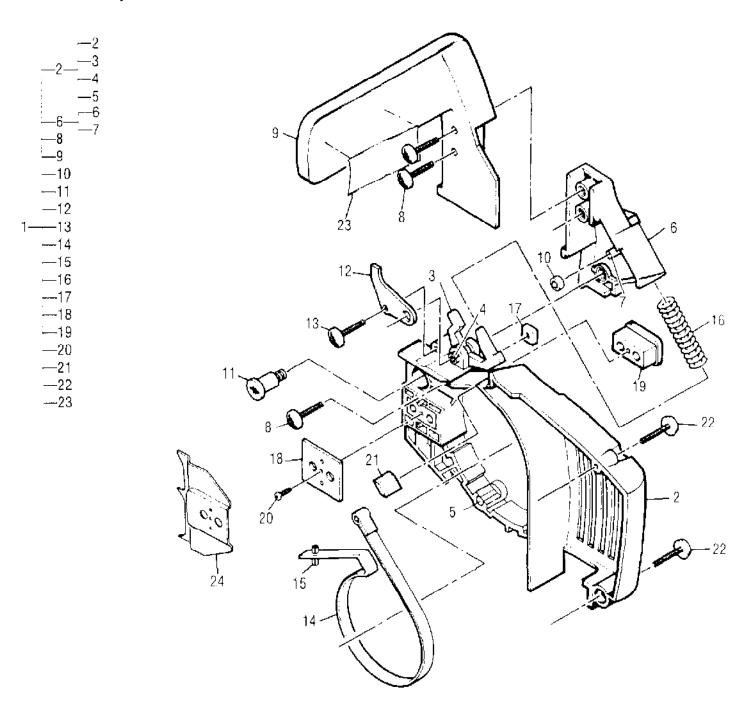

Ref #	Part Number	Qty Description
1	224700	Brake Kit Asy, Grey (Choose appropriate color)
1	301558	1 Brake Kit Asy, Yellow (Choose appropriate color)
1	301557	1 Brake Kit Asy, Black (Choose appropriate color)
2	301650	1 Housing Kit Asy, Grey (Choose appropriate color)
2	301559	1 Housing Kit Asy, Yellow (Choose appropriate color)
2	301560	1 Housing Kit Asy, Black (Choose appropriate color)
3	216755	1 Latch, Chain Brake
4		1 Dowel, Spring
5		2 Pin, Dowel
6	301038	2 Lever, Brake Asy
7		1 Pin, Dowel
8	111226	1 Screw, 10-24 x .62 Tr H
9	323082	3 Guard, Hand Torx 3
10	224849	1 Roller
11	224847	1 Screw, Shoulder
12	224848	1 Stop, Brake
13	300294	1 Screw, 8-16 x .75 Tr Hd Plastite
14	301037	1 Band. Brake
15		1 Pin Spring (.125 x .50)
16	322204	1 Spring. Compression
17	218005	1 Nut, Square 10-24
18	300275	1 Shield
19	300271	1 Spacer Bar Pad
20	111101	1 Screw. 4-40 x 5/16 Taptite
21	322194	1 Seal, Foam
22	300299	2 Screw 8-16 x 1.0 Tr Hd Plastite
23	46703-41	1 Label Safety
24	322181	1 Spike Bucking (Optional accessory)

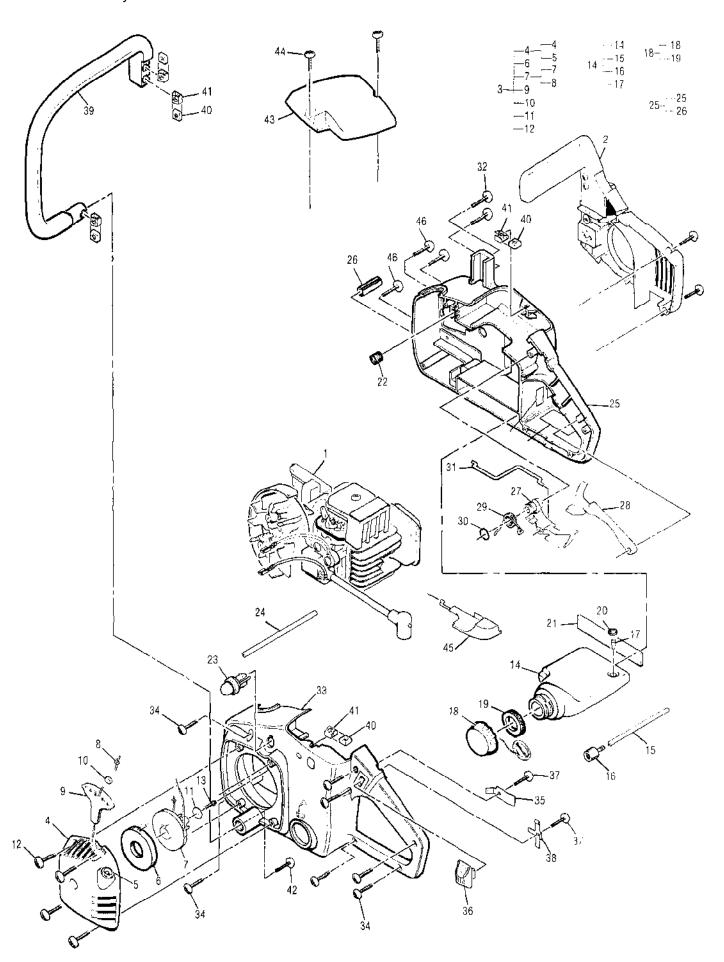

K&T Saw Shop 606-678-9623 or 606-561-4983

Ref #         Part Number         Qty         Description           1         Powerhead Asy (See 'Powerhead Assembly' illustration and parts list)           2         Chain Brake Asy (See 'Chain Brake Assembly' illustration and parts list)           3         300858         1 Starter Housing Asy, Grey (Choose appropriate color)           3         300264         1 Starter Housing Asy, Fellow (Choose appropriate color)           4         301078         1 Starter Housing Asy, Black (Choose appropriate color)           4         301651         1 Housing/Rope Guide Asy, Grey (Choose appropriate color)           4         301044         1 Housing/Rope Guide Asy, Grey (Choose appropriate color)           5         1 Housing/Rope Guide Asy, Black (Choose appropriate color)           6         30045         1 Housing/Rope Guide Asy, Black (Choose appropriate color)           7         301654         1 Housing/Rope Guide Asy, Black (Choose appropriate color)           8         300300         1 Rope Guide (Not available individually)           9         8 R7851         1 Spring, Starter Rewind           10         2 23944         1 Bushing, Starter           11         300297         1 Washer, 19 Iba x           12         300294         1 Screw, 3-16 x .75 Torx Hd Plastite           13         300289			
Secretary   Company   Co	Ref#	Part Number	
Illustration and parts list)	1		· · ·
Color   Color   Color	2		
Color   Starter Housing Asy, Black (Choose appropriate color)	3	300858	
Color   Color   Color	3	300264	· · · · · · · · · · · · · · · · · · ·
Color   Color   Color	3	301078	
4 301654 1 Housing/Rope Guide Asy, Black (Choose appropriate color)  5	4	301651	
Color   Colo	4	301044	
6 300475 1 Spring, Starter Rewind 7 301043 1 Rope/Drum Asy (32cc) 8 300300 1 Rope, Starter 9 87851 1 Handle, Starter 10 223944 1 Bushing, Starter 11 300297 1 Washer, 19 ID x. 68 OD 12 300294 1 Screw, 8-16 x. 75 Torx Hd Plast 13 300294 4 Screw, 8-16 x. 75 Torx Hd Plastite 14 300260 1 Oil Tank Asy 15 300289 1 Hose, Oil Pick-up 16 225062 1 Pickup, Oil 17 300256 1 Valve, Duckbill 18 300565 1 Oil Cap Asy w/Retainer 19 300269 1 Gasket, Oil Cap Asy w/Retainer 19 300259 1 Filter, Foam 21 322195 1 Spacer, Oil Tank 22 300259 1 Filter, Foam 23 224242-02 1 Primer, Remote 24 300298 1 Hose 25 301049 1 Hose 25 301049 1 Hose 26 111098 1 Pin. Roll 1/4 x 1.0 L 1 Tingger Throttle 12 24821 1 Tingger Throttle 12 24821 1 Spring, Torsional 1 Pin. Roll 1/4 x 1.0 L 1 Spring, Torsional 1 224827 1 Rod, Throttle 1 Screw 8-16 x .75 Tr Hd. Plastite 1 Screw 8-16 x .75 Tr Hd. Plastite 1 Button, Stop Switch 37 223357 2 Screw 8-16 Plastite 1 Button, Stop Switch 37 223357 2 Screw 8-16 Plastite	4	301654	
6 300475 1 Spring, Starter Rewind 7 301043 1 Rope/Drum Asy (32cc) 8 300300 1 Rope, Starter 9 87851 1 Handle, Starter 10 223944 1 Bushing, Starter 11 300297 1 Washer, 19 ID x. 68 OD 12 300294 1 Screw, 8-16 x. 75 Torx Hd Plast 13 300294 4 Screw, 8-16 x. 75 Torx Hd Plastite 14 300260 1 Oil Tank Asy 15 300289 1 Hose, Oil Pick-up 16 225062 1 Pickup, Oil 17 300256 1 Valve, Duckbill 18 300565 1 Oil Cap Asy w/Retainer 19 300269 1 Gasket, Oil Cap Asy w/Retainer 19 300259 1 Filter, Foam 21 322195 1 Spacer, Oil Tank 22 300259 1 Filter, Foam 23 224242-02 1 Primer, Remote 24 300298 1 Hose 25 301049 1 Hose 25 301049 1 Hose 26 111098 1 Pin. Roll 1/4 x 1.0 L 1 Tingger Throttle 12 24821 1 Tingger Throttle 12 24821 1 Spring, Torsional 1 Pin. Roll 1/4 x 1.0 L 1 Spring, Torsional 1 224827 1 Rod, Throttle 1 Screw 8-16 x .75 Tr Hd. Plastite 1 Screw 8-16 x .75 Tr Hd. Plastite 1 Button, Stop Switch 37 223357 2 Screw 8-16 Plastite 1 Button, Stop Switch 37 223357 2 Screw 8-16 Plastite	5		1 Rope Guide (Not available individually)
7       301043       1       Rope/Drum Asy (32cc)         8       300300       1       Rope, Starter         9       87851       1       Handle, Starter         10       223944       1       Bushing, Starter         11       300297       1       Washer, 19 ID x. 68 OD         12       300294       1       Screw, 8-16 x. 75 Torx Hd Plast         13       300294       4       Screw, 8-16 x. 75 Torx Hd Plastite         14       300260       1       Oil Tank Asy         15       300289       1       Hose, Oil Pick-up         16       225062       1       Pickup, Oil         17       300256       1       Valve, Duckbill         18       300565       1       Oil Cap Asy w/Retainer         19       300269       1       Gasket, Oil Cap         20       300259       1       Filter, Foam         21       322195       1       Spacer, Oil Tank         22       300259       1       Filter, Foam         23       224242-02       1       Primer, Remote         24       300298       1       Hose         27       224821       1       Tr		300475	
9 87851 1 Handle, Starter 10 223944 1 Bushing, Starter 11 300297 1 Washer, .19 ID x .68 OD 12 300294 1 Screw, 8-16 x .75 Torx Hd Plast 13 300294 4 Screw, 8-16 x .75 Torx Hd Plast 14 300260 1 Oil Tank Asy 15 300289 1 Hose, Oil Pick-up 16 225062 1 Pickup, Oil 17 300256 1 Valve, Duckbill 18 300565 1 Oil Cap Asy w/Retainer 19 300269 1 Gasket, Oil Cap 20 300259 1 Filter, Foam 21 322195 1 Spacer, Oil Tank 22 300259 1 Filter, Foam 23 224242-02 1 Primer, Remote 24 300298 1 Hose 25 301049 1 Hose 26 111098 1 Housing/Pin Asy, Right 27 224821 1 Trigger Throttle 28 224822 1 Latch Throttle 29 224823 1 Spring, Torsional 30 111128 1 "O" Ring 31 224827 1 Rod, Throttle 32 Screw 10-24 x .62 Tr Hd Torx Torque to 40-50 IN/LBS Loctite 262 required. 33 32394561 1 Engine Housing, Left, Blk 34 300294 7 Screw 8-16 x .75 Tr Hd. Plastite 35 224845 1 Contact, Ground 36 68846 1 Button, Stop Switch 37 223357 2 Screw 8-16 Rosp Switch		301043	
10       223944       1       Bushing, Starter         11       300297       1       Washer, .19 ID x .68 OD         12       300294       1       Screw, 8-16 x .75 Torx Hd Plast         13       300294       4       Screw, 8-16 x .75 Torx Hd Plastite         14       300260       1       Oil Tank Asy         15       300289       1       Hose, Oil Pick-up         16       225062       1       Pickup, Oil         17       300256       1       Valve, Duckbill         18       300565       1       Oil Cap Asy w/Retainer         19       300269       1       Gasket, Oil Cap         20       300259       1       Filter, Foam         21       322195       1       Spacer, Oil Tank         22       300259       1       Filter, Foam         23       224242-02       1       Primer, Remote         24       300298       1       Hose         25       301049       1       Housing/Pin Asy, Right         26       111098       1       Pin. Roll 1/4 x 1.0 L         27       224821       1       Trigger Throttle         29       224822       1 </td <td>8</td> <td>300300</td> <td>1 Rope, Starter</td>	8	300300	1 Rope, Starter
11       300297       1 Washer, .19 ID x .68 OD         12       300294       1 Screw, 8-16 x .75 Torx Hd Plast         13       300294       4 Screw, 8-16 x .75 Torx Hd Plastite         14       300260       1 Oil Tank Asy         15       300289       1 Hose, Oil Pick-up         16       225062       1 Pickup, Oil         17       300256       1 Valve, Duckbill         18       300565       1 Oil Cap Asy w/Retainer         19       300269       1 Gasket, Oil Cap         20       300259       1 Filter, Foam         21       322195       1 Spacer, Oil Tank         22       300259       1 Filter, Foam         23       224242-02       1 Primer, Remote         24       300298       1 Hose         25       301049       1 Housing/Pin Asy, Right         26       111098       1 Pin. Roll 1/4 x 1.0 L         27       224821       1 Trigger Throttle         28       224822       1 Latch Throttle         29       224823       1 Spring, Torsional         31       224827       1 Rod, Throttle         32       111226       2 Screw 10-24 x .62 Tr Hd Torx Torque to 40-50 IN/LBS Loctite 262 required.			
12       300294       1       Screw, 8-16 x .75 Torx Hd Plast         13       300294       4       Screw, 8-16 x .75 Torx Hd Plastite         14       300260       1       Oil Tank Asy         15       300289       1       Hose, Oil Pick-up         16       225062       1       Pickup, Oil         17       300256       1       Valve, Duckbill         18       300565       1       Oil Cap Asy w/Retainer         19       300269       1       Gasket, Oil Cap         20       300259       1       Filter, Foam         21       322195       1       Spacer, Oil Tank         22       300259       1       Filter, Foam         23       224242-02       1       Primer, Remote         24       300298       1       Hose         25       301049       1       Housing/Pin Asy, Right         26       111098       1       Pin. Roll 1/4 x 1.0 L         27       224821       1       Latch Throttle         29       224822       1       Latch Throttle         30       111128       1       "O" Ring         31       224827       1       Rod,			
13       300294       4       Screw, 8-16 x .75 Torx Hd Plastite         14       300260       1       Oil Tank Asy         15       300289       1       Hose, Oil Pick-up         16       225062       1       Pickup, Oil         17       300256       1       Valve, Duckbill         18       300565       1       Oil Cap Asy w/Retainer         19       300269       1       Gasket, Oil Cap         20       300259       1       Filter, Foam         21       322195       1       Spacer, Oil Tank         22       300259       1       Filter, Foam         23       224242-02       1       Primer, Remote         24       300298       1       Hose         25       301049       1       Housing/Pin Asy, Right         26       111098       1       Pin. Roll 1/4 x 1.0 L         27       224821       1       Trigger Throttle         28       224822       1       Latch Throttle         29       224823       1       Spring, Torsional         31       224827       1       Rod, Throttle         32       111226       2       Screw 8-16 x			·
14       300260       1 Oil Tank Asy         15       300289       1 Hose, Oil Pick-up         16       225062       1 Pickup, Oil         17       300256       1 Valve, Duckbill         18       300565       1 Oil Cap Asy w/Retainer         19       300269       1 Gasket, Oil Cap         20       300259       1 Filter, Foam         21       322195       1 Spacer, Oil Tank         22       300259       1 Filter, Foam         23       224242-02       1 Primer, Remote         24       300298       1 Hose         25       301049       1 Housing/Pin Asy, Right         26       111098       1 Pin. Roll 1/4 x 1.0 L         27       224821       1 Trigger Throttle         28       224822       1 Latch Throttle         29       224823       1 Spring, Torsional         30       111128       1 "O" Ring         31       224827       1 Rod, Throttle         32       111226       2 Screw 10-24 x .62 Tr Hd Torx Torque to 40-50 IN/LBS Loctite 262 required.         33       32394561       1 Engine Housing, Left, Blk         34       300294       7 Screw 8-16 x .75 Tr Hd. Plastite         35			
15       300289       1 Hose, Oil Píck-up         16       225062       1 Píckup, Oil         17       300256       1 Valve, Duckbill         18       300565       1 Oil Cap Asy w/Retainer         19       300269       1 Gasket, Oil Cap         20       300259       1 Filter, Foam         21       322195       1 Spacer, Oil Tank         22       300259       1 Filter, Foam         23       224242-02       1 Primer, Remote         24       300298       1 Hose         25       301049       1 Housing/Pin Asy, Right         26       111098       1 Pin. Roll 1/4 x 1.0 L         27       224821       1 Trigger Throttle         28       224822       1 Latch Throttle         29       224823       1 Spring, Torsional         30       111128       1 "O" Ring         31       224827       1 Rod, Throttle         32       111226       2 Screw 10-24 x .62 Tr Hd Torx Torque to 40-50 IN/LBS Loctite 262 required.         33       32394561       1 Engine Housing, Left, Blk         34       300294       7 Screw 8-16 x .75 Tr Hd. Plastite         35       224845       1 Contact, Ground <td< td=""><td></td><td></td><td>·</td></td<>			·
16       225062       1 Pickup, Oil         17       300256       1 Valve, Duckbill         18       300565       1 Oil Cap Asy w/Retainer         19       300269       1 Gasket, Oil Cap         20       300259       1 Filter, Foam         21       322195       1 Spacer, Oil Tank         22       300259       1 Filter, Foam         23       224242-02       1 Primer, Remote         24       300298       1 Hose         25       301049       1 Housing/Pin Asy, Right         26       111098       1 Pin. Roll 1/4 x 1.0 L         27       224821       1 Trigger Throttle         28       224822       1 Latch Throttle         29       224823       1 Spring, Torsional         30       111128       1 "O" Ring         31       224827       1 Rod, Throttle         32       111226       2 Screw 10-24 x .62 Tr Hd Torx Torque to 40-50 IN/LBS Loctite 262 required.         33       32394561       1 Engine Housing, Left, Blk         34       300294       7 Screw 8-16 x .75 Tr Hd. Plastite         35       224845       1 Contact, Ground         36       68846       1 Button, Stop Switch <t< td=""><td></td><td></td><td>•</td></t<>			•
17       300256       1 Valve, Duckbill         18       300565       1 Oil Cap Asy w/Retainer         19       300269       1 Gasket, Oil Cap         20       300259       1 Filter, Foam         21       322195       1 Spacer, Oil Tank         22       300259       1 Filter, Foam         23       224242-02       1 Primer, Remote         24       300298       1 Hose         25       301049       1 Housing/Pin Asy, Right         26       111098       1 Pin. Roll 1/4 x 1.0 L         27       224821       1 Trigger Throttle         28       224822       1 Latch Throttle         29       224823       1 Spring, Torsional         30       111128       1 "O" Ring         31       224827       1 Rod, Throttle         32       111226       2 Screw 10-24 x .62 Tr Hd Torx Torque to 40-50 IN/LBS Loctite 262 required.         33       32394561       1 Engine Housing, Left, Blk         34       300294       7 Screw 8-16 x .75 Tr Hd. Plastite         35       224845       1 Contact, Ground         36       68846       1 Button, Stop Switch         37       223357       2 Screw 8-16 Plastite <td></td> <td></td> <td></td>			
18       300565       1 Oil Cap Asy w/Retainer         19       300269       1 Gasket, Oil Cap         20       300259       1 Filter, Foam         21       322195       1 Spacer, Oil Tank         22       300259       1 Filter, Foam         23       224242-02       1 Primer, Remote         24       300298       1 Hose         25       301049       1 Housing/Pin Asy, Right         26       111098       1 Pin. Roll 1/4 x 1.0 L         27       224821       1 Trigger Throttle         28       224822       1 Latch Throttle         29       224823       1 Spring, Torsional         30       111128       1 "O" Ring         31       224827       1 Rod, Throttle         32       111226       2 Screw 10-24 x .62 Tr Hd Torx Torque to 40-50 IN/LBS Loctite 262 required.         33       32394561       1 Engine Housing, Left, Blk         34       300294       7 Screw 8-16 x .75 Tr Hd. Plastite         35       224845       1 Contact, Ground         36       68846       1 Button, Stop Switch         37       223357       2 Screw 8-16 Plastite			• •
19 300269 1 Gasket, Oil Cap 20 300259 1 Filter, Foam 21 322195 1 Spacer, Oil Tank 22 300259 1 Filter, Foam 23 224242-02 1 Primer, Remote 24 300298 1 Hose 25 301049 1 Housing/Pin Asy, Right 26 111098 1 Pin. Roll 1/4 x 1.0 L 27 224821 1 Trigger Throttle 28 224822 1 Latch Throttle 29 224823 1 Spring, Torsional 30 111128 1 "O" Ring 31 224827 1 Rod, Throttle 32 111226 2 Screw 10-24 x .62 Tr Hd Torx Torque to 40-50 IN/LBS Loctite 262 required. 33 32394561 1 Engine Housing, Left, Blk 34 300294 7 Screw 8-16 x .75 Tr Hd. Plastite 35 224845 1 Contact, Ground 36 68846 1 Button, Stop Switch 37 223357 2 Screw 8-16 Plastite			·
20       300259       1 Filter, Foam         21       322195       1 Spacer, Oil Tank         22       300259       1 Filter, Foam         23       224242-02       1 Primer, Remote         24       300298       1 Hose         25       301049       1 Housing/Pin Asy, Right         26       111098       1 Pin. Roll 1/4 x 1.0 L         27       224821       1 Trigger Throttle         28       224822       1 Latch Throttle         29       224823       1 Spring, Torsional         30       111128       1 "O" Ring         31       224827       1 Rod, Throttle         32       111226       2 Screw 10-24 x .62 Tr Hd Torx Torque to 40-50 IN/LBS Loctite 262 required.         33       32394561       1 Engine Housing, Left, Blk         34       300294       7 Screw 8-16 x .75 Tr Hd. Plastite         35       224845       1 Contact, Ground         36       68846       1 Button, Stop Switch         37       223357       2 Screw 8-16 Plastite			
21       322195       1       Spacer, Oil Tank         22       300259       1       Filter, Foam         23       224242-02       1       Primer, Remote         24       300298       1       Hose         25       301049       1       Housing/Pin Asy, Right         26       111098       1       Pin. Roll 1/4 x 1.0 L         27       224821       1       Trigger Throttle         28       224822       1       Latch Throttle         29       224823       1       Spring, Torsional         30       111128       1       "O" Ring         31       224827       1       Rod, Throttle         32       111226       2       Screw 10-24 x .62 Tr Hd Torx Torque to 40-50 IN/LBS Loctite 262 required.         33       32394561       1       Engine Housing, Left, Blk         34       300294       7       Screw 8-16 x .75 Tr Hd. Plastite         35       224845       1       Contact, Ground         36       68846       1       Button, Stop Switch         37       223357       2       Screw 8-16 Plastite			•
22       300259       1 Filter, Foam         23       224242-02       1 Primer, Remote         24       300298       1 Hose         25       301049       1 Housing/Pin Asy, Right         26       111098       1 Pin. Roll 1/4 x 1.0 L         27       224821       1 Trigger Throttle         28       224822       1 Latch Throttle         29       224823       1 Spring, Torsional         30       111128       1 "O" Ring         31       224827       1 Rod, Throttle         32       111226       2 Screw 10-24 x .62 Tr Hd Torx Torque to 40-50 IN/LBS Loctite 262 required.         33       32394561       1 Engine Housing, Left, Blk         34       300294       7 Screw 8-16 x .75 Tr Hd. Plastite         35       224845       1 Contact, Ground         36       68846       1 Button, Stop Switch         37       223357       2 Screw 8-16 Plastite			·
24       300298       1 Hose         25       301049       1 Housing/Pin Asy, Right         26       111098       1 Pin. Roll 1/4 x 1.0 L         27       224821       1 Trigger Throttle         28       224822       1 Latch Throttle         29       224823       1 Spring, Torsional         30       111128       1 "O" Ring         31       224827       1 Rod, Throttle         32       111226       2 Screw 10-24 x .62 Tr Hd Torx Torque to 40-50 IN/LBS Loctite 262 required.         33       32394561       1 Engine Housing, Left, Blk         34       300294       7 Screw 8-16 x .75 Tr Hd. Plastite         35       224845       1 Contact, Ground         36       68846       1 Button, Stop Switch         37       223357       2 Screw 8-16 Plastite	22	300259	
25       301049       1 Housing/Pin Asy, Right         26       111098       1 Pin. Roll 1/4 x 1.0 L         27       224821       1 Trigger Throttle         28       224822       1 Latch Throttle         29       224823       1 Spring, Torsional         30       111128       1 "O" Ring         31       224827       1 Rod, Throttle         32       111226       2 Screw 10-24 x .62 Tr Hd Torx Torque to 40-50 IN/LBS Loctite 262 required.         33       32394561       1 Engine Housing, Left, Blk         34       300294       7 Screw 8-16 x .75 Tr Hd. Plastite         35       224845       1 Contact, Ground         36       68846       1 Button, Stop Switch         37       223357       2 Screw 8-16 Plastite	23	224242-02	1 Primer, Remote
26       111098       1 Pin. Roll 1/4 x 1.0 L         27       224821       1 Trigger Throttle         28       224822       1 Latch Throttle         29       224823       1 Spring, Torsional         30       111128       1 "O" Ring         31       224827       1 Rod, Throttle         32       111226       2 Screw 10-24 x .62 Tr Hd Torx Torque to 40-50 IN/LBS Loctite 262 required.         33       32394561       1 Engine Housing, Left, Blk         34       300294       7 Screw 8-16 x .75 Tr Hd. Plastite         35       224845       1 Contact, Ground         36       68846       1 Button, Stop Switch         37       223357       2 Screw 8-16 Plastite		300298	
27       224821       1 Trigger Throttle         28       224822       1 Latch Throttle         29       224823       1 Spring, Torsional         30       111128       1 "O" Ring         31       224827       1 Rod, Throttle         32       111226       2 Screw 10-24 x .62 Tr Hd Torx Torque to 40-50 IN/LBS Loctite 262 required.         33       32394561       1 Engine Housing, Left, Blk         34       300294       7 Screw 8-16 x .75 Tr Hd. Plastite         35       224845       1 Contact, Ground         36       68846       1 Button, Stop Switch         37       223357       2 Screw 8-16 Plastite			
28       224822       1 Latch Throttle         29       224823       1 Spring, Torsional         30       111128       1 "O" Ring         31       224827       1 Rod, Throttle         32       111226       2 Screw 10-24 x .62 Tr Hd Torx Torque to 40-50 IN/LBS Loctite 262 required.         33       32394561       1 Engine Housing, Left, Blk         34       300294       7 Screw 8-16 x .75 Tr Hd. Plastite         35       224845       1 Contact, Ground         36       68846       1 Button, Stop Switch         37       223357       2 Screw 8-16 Plastite			
29       224823       1 Spring, Torsional         30       111128       1 "O" Ring         31       224827       1 Rod, Throttle         32       111226       2 Screw 10-24 x .62 Tr Hd Torx Torque to 40-50 IN/LBS Loctite 262 required.         33       32394561       1 Engine Housing, Left, Blk         34       300294       7 Screw 8-16 x .75 Tr Hd. Plastite         35       224845       1 Contact, Ground         36       68846       1 Button, Stop Switch         37       223357       2 Screw 8-16 Plastite			
30       111128       1 "O" Ring         31       224827       1 Rod, Throttle         32       111226       2 Screw 10-24 x .62 Tr Hd Torx Torque to 40-50 IN/LBS Loctite 262 required.         33       32394561       1 Engine Housing, Left, Blk         34       300294       7 Screw 8-16 x .75 Tr Hd. Plastite         35       224845       1 Contact, Ground         36       68846       1 Button, Stop Switch         37       223357       2 Screw 8-16 Plastite			
31       224827       1 Rod, Throttle         32       111226       2 Screw 10-24 x .62 Tr Hd Torx Torque to 40-50 IN/LBS Loctite 262 required.         33       32394561       1 Engine Housing, Left, Blk         34       300294       7 Screw 8-16 x .75 Tr Hd. Plastite         35       224845       1 Contact, Ground         36       68846       1 Button, Stop Switch         37       223357       2 Screw 8-16 Plastite			
32       111226       2 Screw 10-24 x .62 Tr Hd Torx Torque to 40-50 IN/LBS Loctite 262 required.         33       32394561       1 Engine Housing, Left, Blk         34       300294       7 Screw 8-16 x .75 Tr Hd. Plastite         35       224845       1 Contact, Ground         36       68846       1 Button, Stop Switch         37       223357       2 Screw 8-16 Plastite			<u> </u>
34       300294       7       Screw 8-16 x .75 Tr Hd. Plastite         35       224845       1       Contact, Ground         36       68846       1       Button, Stop Switch         37       223357       2       Screw 8-16 Plastite			2 Screw 10-24 x .62 Tr Hd Torx Torque to 40-50
34       300294       7       Screw 8-16 x .75 Tr Hd. Plastite         35       224845       1       Contact, Ground         36       68846       1       Button, Stop Switch         37       223357       2       Screw 8-16 Plastite	33	32394561	1 Engine Housina. Left. Blk
35       224845       1 Contact, Ground         36       68846       1 Button, Stop Switch         37       223357       2 Screw 8-16 Plastite			
36       68846       1       Button, Stop Switch         37       223357       2       Screw 8-16 Plastite			
		68846	
38 224844 1 Contact, Ignition			
	38	224844	1 Contact, Ignition


K&T Saw Shop 606-678-9623 or 606-561-4983

Ref #	Part Number	Qty Description
39	22483601	1 Handle, Front
40	218005	5 Nut, Square 10-24
41	300292	5 Retainer Nut
42	217936	1 Screw 10-24 x .75 Tr Torx
43	224830	<ol> <li>Cover, Air Filter (Choose appropriate color)</li> </ol>
43	322834	1 Cover, Air Filter, Grey (Choose appropriate color)
44	111099	2 Screw 10-24 x .625 Pn Hd Torx
45	22482601	1 Slide Choke
46	111226	4 Screw, 10-24 x .62 Tr Hd Torx

## No Diagram Available

## Parts List Only

Ref#	Part Number	Qty Description
	322235-02	LOCTITE KIT
	322236	RETAINING COMPOUND 620 (10 ml)
	322237	THREAD LOCKER 242 (10 ml)
	322238	GASKET ELIMINATOR 518 (50 ml)
	322239-01	BLACK MAX ADHESIVE 380 (1 oz)
	323749	THREAD LOCKER 262 (10 ml)
	323762	Anti-Seize Lubricant 767 (30 ml)

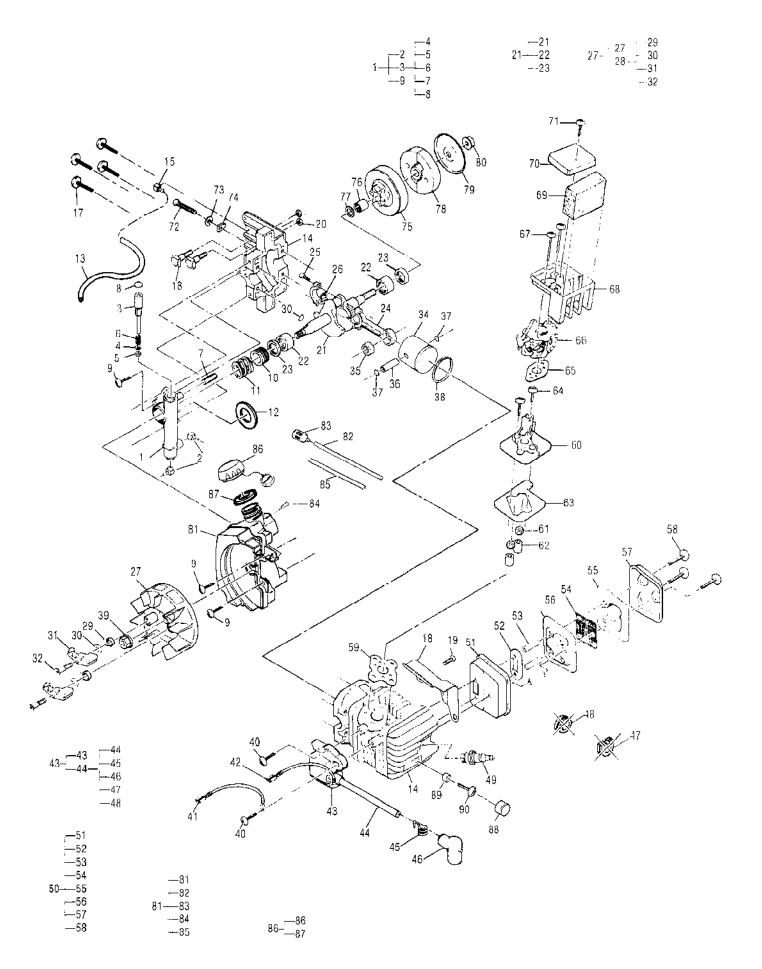


K&T Saw Shop 606-678-9623 or 606-561-4983

Ref#	Part Number	Qty Description
1	301304	1 Oil Pump Asy
2	322182	2 Fitting
3	301084	1 Kit, Gear/Plunger Asy
4	110582	1 Washer
5	110002	1 O-Ring (Not Available Individually)
6		1 Spring (Not Available Individually)
7		1 Pin, Dowel (Not Available Individually)
8	322187	<ol> <li>Plug, Oil Pump Distributer Stocked. Medium to slow</li> </ol>
		moving part.
9	111226	2 Screw, 10-24 x .62 Tr Hd Torx Torque to 30-40
		IN/LBS Loctite 262 required.
10	224814	1 Worm Gear
11	224840	1 Spring, Compression
12	300295	1 Seal, Foam, Oil Pump
13	300288	1 Connecting Hose
14	300200	1 Cyl/C'case/Bar Bolt Asy, 38cc (Not Available
14		Individually)
15	83856-01	2 Bolt, Bar
		·
16	300257	1 Fitting
17	111083	4 Screw, 12-24 x 1.0 Hx Wshr Hd
18	323923	1 Baffle, Air
19	111054	1 Screw, 10-24 x .625
20	110676	2 Nut, Hx 1/4-28 Flange
21	302140	1 Crankshaft/Bearing Asy
22	213282	2 Bearing, C'shaft
23	83859	2 Seal, C'shaft Oil
24		1 Connecting Rod/Bearing (Not Available Individually)
25	94654	2 Screw, Conn Rod
26	68095	1 Set, Roller Pins
27	302220	1 Flywheel/Pawl Asy
28	300763-01	2 Kit, Flywheel Pawls
29	216982	2 Spring, Starter Pawl
30	111131	2 Washer, Sp .469 OD x .222 ID
31	000704	2 Pawls (Not Available Individually)
32	322721	2 Pin, Starter Pawl
33	102164	<ol> <li>Key, Flywheel (Dealer stocked. Fast to medium</li> </ol>
		moving part.)
34		<ol> <li>Piston (Not Available Individually)</li> </ol>
35		<ol> <li>Bearing, Needle-Drawn Cup (Not Available</li> </ol>
		Individually)
36	323943	1 Pin, Piston
37	111026	2 Ring, Snap
38		1 Piston, Ring (Not Available Individually)
39	110961	1 Nut, Hx 5/16-24 Torque to 180 IN/LBS
40	217936	2 Screw, Tr 10-24 x .75 Torx
41	300555	1 Wire Asy, Ground
42	300556	1 Wire Asy, Stop Switch
43	302138	1 Ignition Asy
43 44		
	223884	1 Kit, Plug Wire
45	102556	1 Connector
46	95266	1 Boot
47	110995	1 Grommet
48	215533-01	1 Grommet

K&T Saw Shop 606-678-9623 or 606-561-4983

Ref #	Part Number	Qty Description
49	322208	1 Spark Plug RDJ7Y Torque to 150 IN/LBS
50	301045	1 Muffler Asy
51	300280	1 Body
52	300281	1 Plate, Reinforcing
53	300284	3 Spacer
54	300282	1 Baffle, Inner Muffler
55	300286	1 Screen, Spark Arrester
56	300283	1 Baffle, Outer
57	323637	1 Cover, Muffler
58	111093	3 Screw, 10-24 x 1.75 Tr Hd Torx Torque to 50 IN/LBS
59	300265	1 Gasket, Insulator
60	224820	1 Insulator, Carburetor
61	218315	2 Nut. Hx 10-24
62	322188	2 Spacer, Rubber
63	224850	1 Seal, Foam
64	217937	2 Screw Tr 10-24 x 1.00 Torx Torque to 30-40 IN/LBS
		Loctite 262 required.
65	300293	1 Gasket, Carburetor
66		1 Carburetor/Choke Asy (Not Available Individually),
		See "Carburetor Assembly" illustration and parts list.
67	218083	2 Screw Tr 10-24 x 2.0 Torx Torque to 30-40 IN/LBS Loctite 262 required.
68	224824	1 Box. Air Filter
69	224831	1 Filter, Air
70	224825	1 Shield Carburetor
71	111055	1 Screw 10-14 x .625 Plastite
72	223088	1 Screw, Adjusting
73	110907	1 Ring, Retaining
74	68656	1 Nut, Bar Adjusting
75	302768	1 Drum/Sprocket/Bearing Asy
76	91117	1 Bearing
77	215259	1 Washer Sprocket
78	301463	1 Kit, Clutch Asy
79	300276	1 Plate, Dust
80	111079	1 Nut, Clutch, 5/16-24 LH Torque to 180 IN/LBS
81	301834	1 Fuel Tank Asy
82	300289	1 Hose Fuel Pickup
83	216985	1 Filter Fuel
84	322199	1 Valve Duckbill
85	300290	1 Hose. Primer Retain
86	300564	<ol> <li>Cap. Fuel Asy. w/Retainer</li> </ol>
87	300267	1 Gasket. Fuel Cap
88	322200	1 Cover Cylinder
89	322201	1 Cover. Spacer
90	217936	1 Screw 10-24 x .75 Tr Torx
	301284	38cc Shortblock Asy.

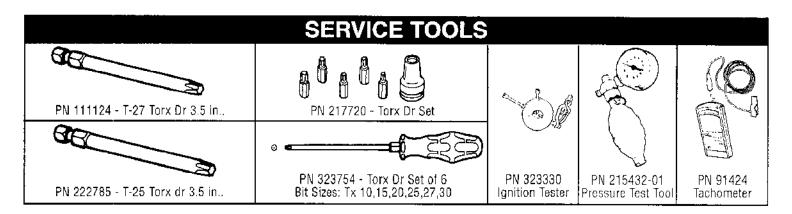

Ref #	Part Number	Qty Description
111124	111124	1 T-27 Torx Dr., 3.5 in.
222785	222785	1 T-25 Torx Dr., 3.5 in.
217720	217720	1 Torx Dr Set
323754	323754	11 Torx Dr Set of 6 (Bit Sizes: Tx 10, 15, 20, 25, 27, 30)
323330	323330	1 Ignition Tester
21543201	215432-01	1 Pressure Test Tool
91424	91424	1 Tachometer