

No
Diagram
Available

 
Parts List
Only

Ref #	Part Number	Qty	Description
	214207		Spike
	94972		Scrench
	93797		Wrench - Screwdriver
	214194		Lubri-Gun
	91226		Holder - Flywheel
	93095		Bracket - AUTO-SHARP
	95168		Grinder Assembly - AUTO-SHARP
	94366		Kit - Carrying Case, 22" Used on models (PM 310, 320)
	214201		Scabbard, 12"
	94365		Kit - Carrying Case, 14" Used on models (PN 310, 320)
	92977		Scabbard, 14"
	94364		Kit - Carrying Case, 16" Used on models (PM 310, 320)
	214202		Scabbard, 16"
	85702		Lubricant - Custom, 6 oz. can
	85703		Lubricant - Custom, 6 oz. cans, 1 - 6 pack
	214212		Kit - Tool
	95169		Kit - Spark arrester screen
	94416		Adapter - Intake (Cyl.)
	94415		Adapter - Intake (Air Box)
	68917		Adapter - Exhaust
	85229		Kit - Fuel tank plug
	90533		Tool - Pressure test
	63094		Driver - Wrist pin
	68911		Block - Piston holding
	501334		Tester - Ignition
	67537		Loctite
	69794		Locquic
	110083		R.T.V. Sealant
	110706		Tool - Handle/throttle trigger screw


No
Diagram
Available

Parts List
Only


Ref #	Part Number	Qty	Description
	214919N		Chain - MP 370GL
	214235		Bar - 14" Mini Pro
	214656N		Chain - AS 370G
	214230N		Chain - AS 370G
	214236		Bar - 16" Mini Pro
	214925N		Chain - MP 370GL

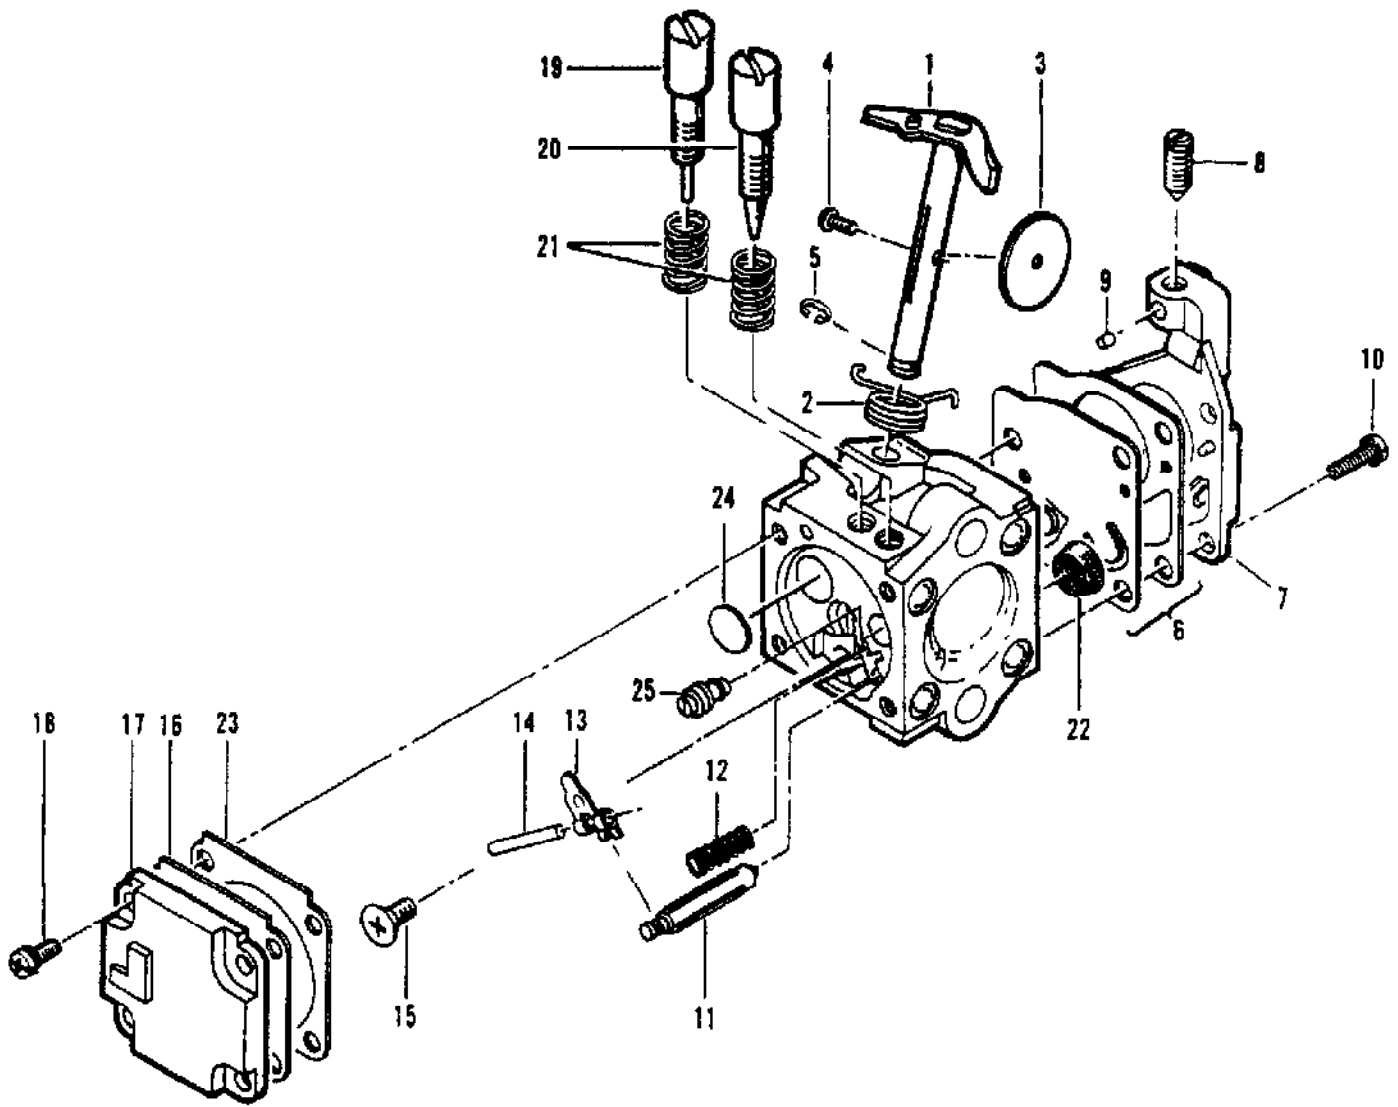

Ref #	Part Number	Qty	Description
	94496	1	Carburetor Asy (Zama)
1	94205	1	Shaft Asy - Throttle
2	91802	1	Spring - Throttle return
3	91803	1	Plate - Throttle
4	91804	1	Screw - Plate (M3)
5	91805	1	"E" Ring
6	91824	1	Kit - Diaphragm & Gaskets
7	94206	1	Cover Asy - Pump
8		1	Screw - Idle speed
9		1	Insert - Friction
10	91809	4	Screw - Pump cover (M4)
11	91810	1	Needle - Inlet
12	91811	1	Spring - Lever
13	91812	1	Lever - Inlet needle
14	91813	1	Pin - Lever
15	91814	1	Screw - Lever pin (M3)
16	91815	1	Diaphragm Asy - Metering
17	91816	1	Cover - Diaphragm
18	91817	4	Screw - Diaphragm cover (M3)
19	94209	1	Screw - Idle adjust
20	94208	1	Screw - Main adjust
21	91819	2	Spring - Needle
22	91820	1	Screen - Filter
23	91821	1	Gasket - Metering diaphragm
24	92097	1	Welsh Plug
25	93950	1	Orifice - Main fuel

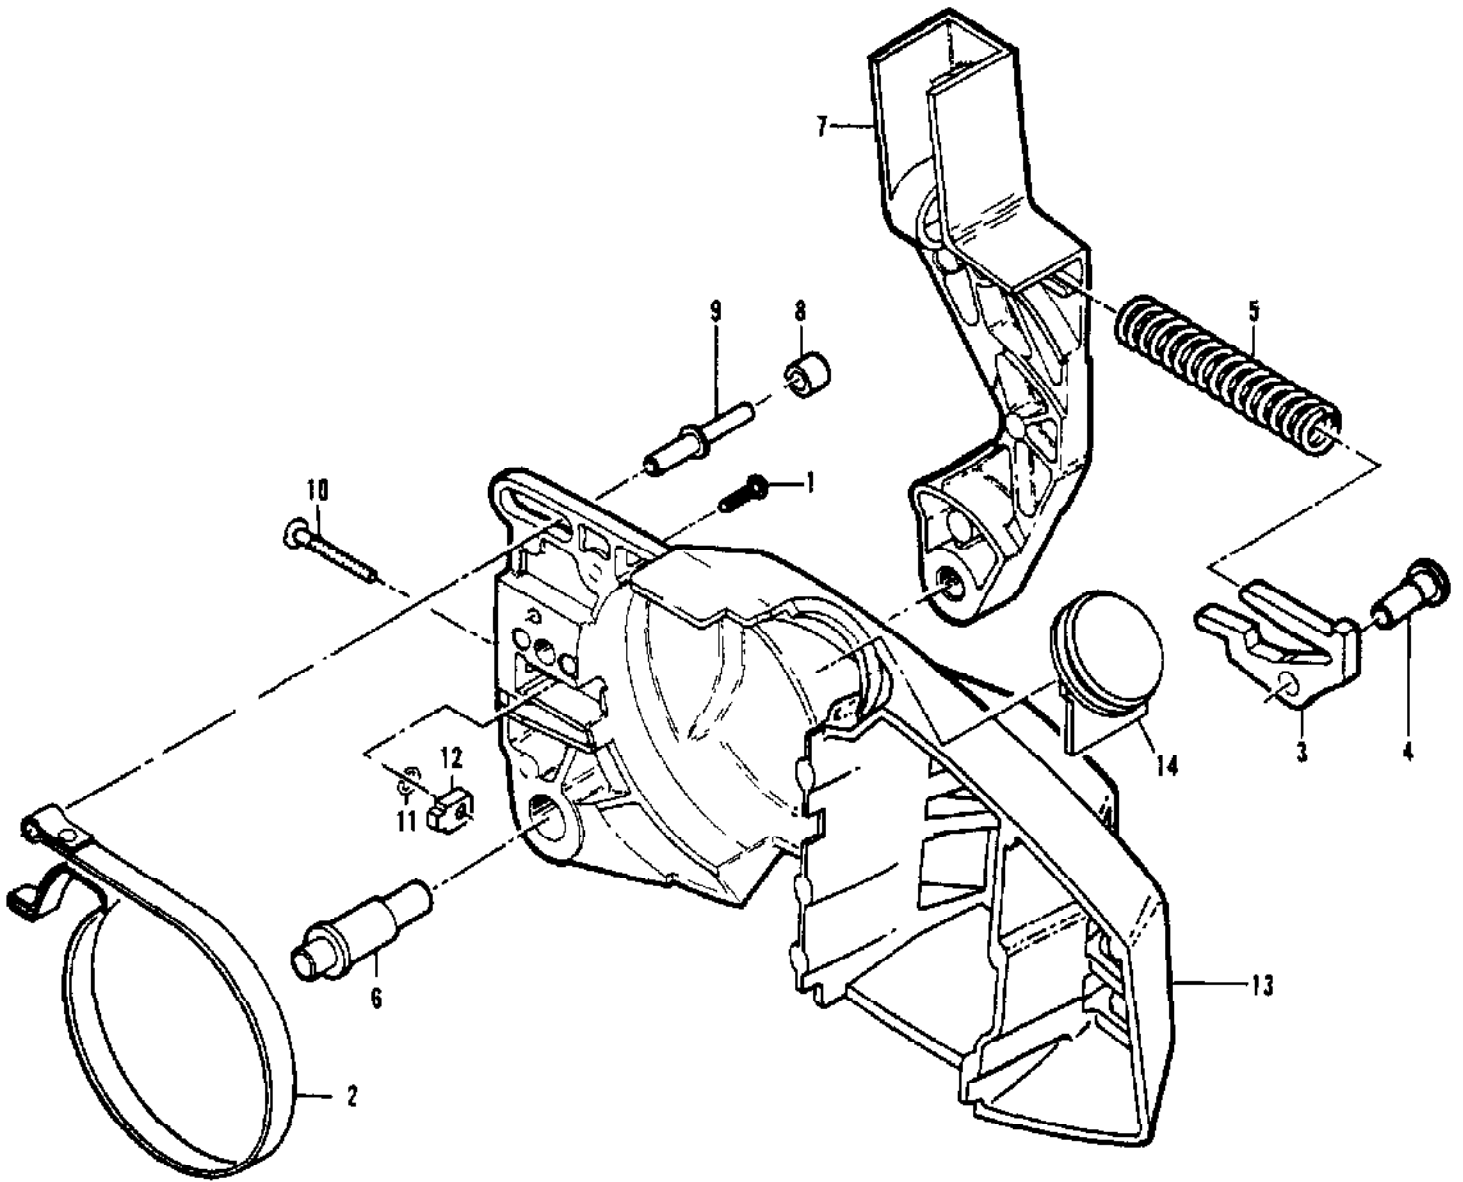 

Ref #	Part Number	Qty	Description
	215474	1	CHAIN BRAKE Assembly
1	111047	1	Screw - Pan hd 8-32 x 5/8
2	94709	1	Band - Brake
3	94006	1	Latch
4	93602	1	Pivot - Latch
5	94007	1	Spring - Compression
6	92482	1	Pivot - Lever
7	93159	1	Lever - Actuating
8	214368	1	Bearing - Roller
9	213907	1	Pin - Roller
10	90658	1	Screw - Adjusting
11	110907	1	Ring - Retaining
12	84929	1	Nut - Bar adjusting
13	215778	1	Housing - Brake
14	93528A	1	Cover - AUTO SHARP

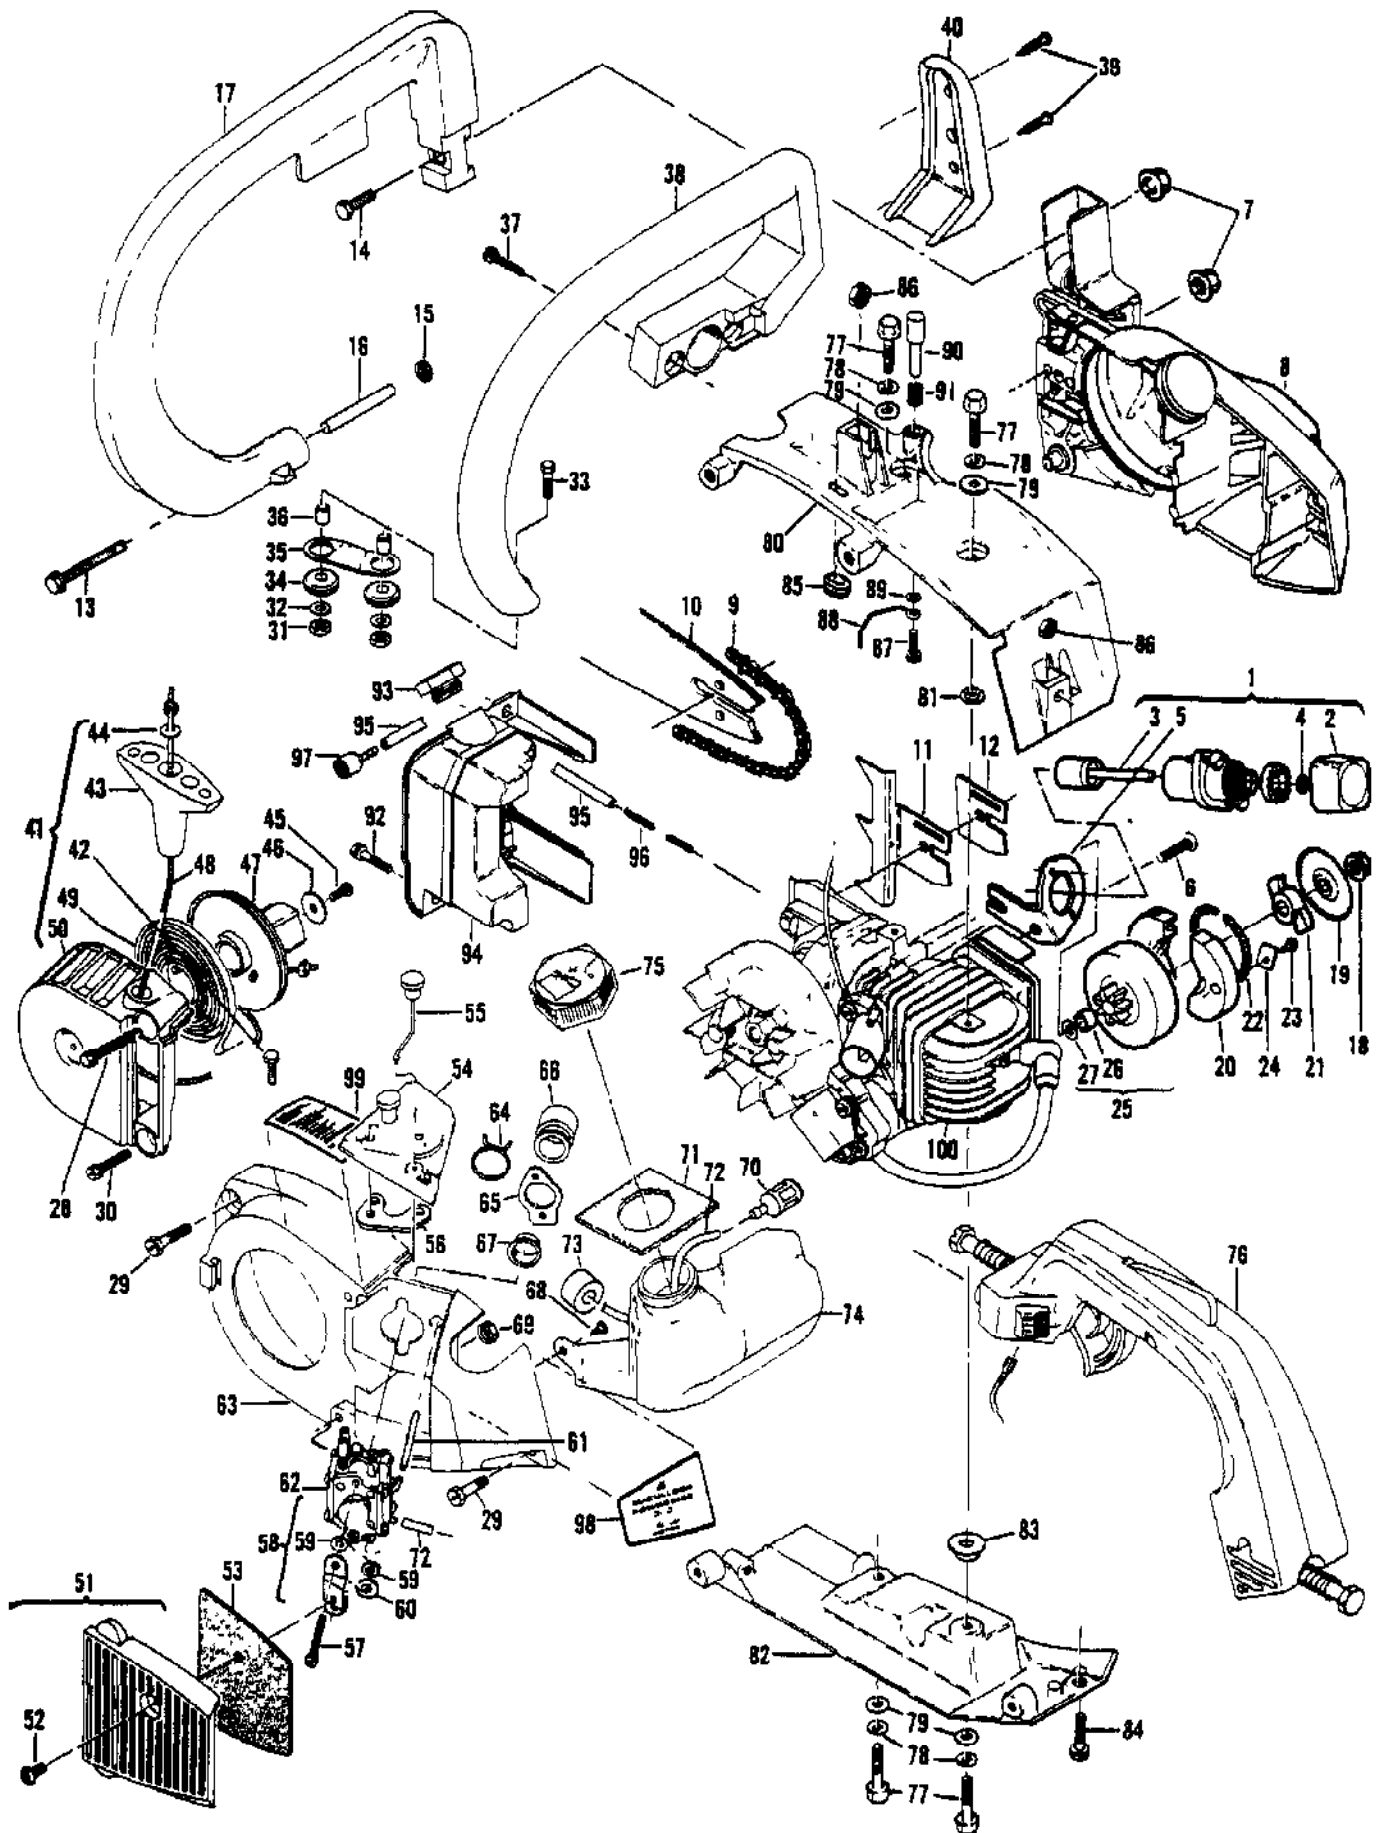 


General


Ref #	Part Number	Qty	Description
1	215664	1	Grinder Assembly - AUTO-SHARP
2	215447	1	Knob
3	92587	1	Wheel Assembly - Grinding
4	213135	1	Ring - Retaining
5	215208	1	Bracket - AUTO-SHARP
6	120025	2	Screw - Pan hd M5 x 10
7	120029	2	Nut - Hx Flg M6 x 1.0
8			CHAIN BRAKE Assembly See "Chain Brake Assembly"
9		1	Chain See "Bar & Chain Combinations" illustration and parts list.
10		1	Bar See "Bar & Chain Combinations" illustration and parts list.
11	214207	1	Spike
12	93148	1	Spacer - Bar pad
13	213103	1	Screw - Hx M5 x 50 ST (SEMS)
14	120028	1	Screw - Hx M6 x 20
15	120045	1	Washer - M5
16	93153	1	Spacer - Wraparound
17	93021A	1	Lever - Wraparound
18	94144	1	Nut - Clutch
19	94243	1	Plate - Dust
20	213278	1	Clutch Assembly
21	94242	1	Rotor
22	93608	1	Spring Assembly - Clutch
23	110957	2	Rivet - Fl 1/8 x .547
24	85064	2	Plate - Clutch shoe
25	214390	1	Drum/Sprocket/Bearing Asy
26	91222	1	Bearing
27	215259	1	Washer - Sprocket
28	120096	1	Screw - WH M5 x 55 ST
29	120095	2	Screw - WH M5 x 20 ST
30	120098	1	Screw - WH M5 x 18
31	120044	2	Nut - Hx M5 Lock
32	120045	Z	Washer - M5
33	120041	1	Screw - Hx M5 x 22
34	110989	2	Grommet
35	93152	1	Link
36	93057	2	Spacer - Mount
37	120036	2	Screw - Pan M4 x 25 (SEMS)
38	92983A	1	Frame
38	95137	1	Frame Assembly
39	111011	2	Screw - PM 10-16 x 7/8
40	95141	1	Weight - Frame
41	94325	1	Kit - Starter
42	120041	1	Screw - Hx M5 x 22
43	91255	1	Kit - Starter handle
44	105490	1	Washer - Starter handle
45	110041	1	Screw - Pan 8-32 x .5
46	68497	1	Washer
47	213261	1	Drum/Rope Assembly
48	83203	1	Rope - Starter
49	83078	1	Spring - Starter rewind
50	93790A	1	Housing Assembly - Starter

Ref #	Part Number	Qty	Description
51	93527	1	Cover Assembly - Air filter
52	93626	1	Screw - Pan M5 x 10
53	94970	1	Filter - Air
54	94608	1	Cover Assembly - Air box
55	214316	1	Rod Assembly - Choke
56	94721	1	Seal - Air
57	120049	2	Screw - Pan hd M5 x 40
58	94905	1	Kit - Choke plate & bracket
59		2	Washer - Flat
60		1	Washer - Wavy
61	93151	1	Hose - Pulse
62			Carburetor See "Carburetor Assembly" illustration and parts list.
63	93101A	1	Housing - Fan
64	94302	1	Clip - Spring
65	92747	1	Flange - Carburetor Mounting
66	213211	1	Kit - Carburetor boot
67	95656	1	Eyelet
68	111002	1	Screw - Pan hd 10-16 x .5
69	94501	1	Nut - Hx M5 x 0.8 Thin
70	93720	1	Pickup - Fuel
71	94491	1	Seal - Fuel vent
72	93997	1	Hose - Fuel
73	90869	1	Filter - Vent
74	95301	1	Kit - Fuel tank
75	95300	1	Cap Assembly - Fuel
76			Handle Assemblies See "Handle Assemblies" illustration and parts list.
77	213166	4	Screw - Hx Wsh M6 x 16
78	102523	4	Washer - Lock
79	105043	4	Washer - 1/4 plain
80	214152	1	Kit - Top shroud
81	214350	1	Insulator
82	214154	1	Kit - Bottom shroud
83	214350	1	Insulator
84	120095	1	Screw - WH M5 x 20 ST
85	94192	1	Grommet
86	120034	2	Nut - Hx M6 x 1.0
87	110999	1	Screw - Hx hd 6-20 x 5/8 WH
88	94540	1	Rod - Oiler
89	100001	1	Washer - Plain
90	93304A	1	Knob - Oiler
91	93634A	1	Spring - Compression
92	120095	2	Screw - WH M5 x 20 ST
93	93274	1	Cap - Oil
94	93506A	1	Tank Assembly - Oil
95	94405	1	Hose - Oil pickup
96	93998	1	Spring - Oil hose
97	92465	1	Pickup - Oil
98	93856	1	Plate - Name Used on model (PM 310)
98	93854	1	Plate - Name Used on model (PM 320)
98	93858	1	Plate - Name Used on model (PM 330)
98	93859		Plate - Name Used on model (PM 340)
99	95206	1	Plate - Instruction

Ref #	Part Number	Qty	Description
100		1	Powerhead Assembly See "Powerhead Assemblies" illustration and parts list.

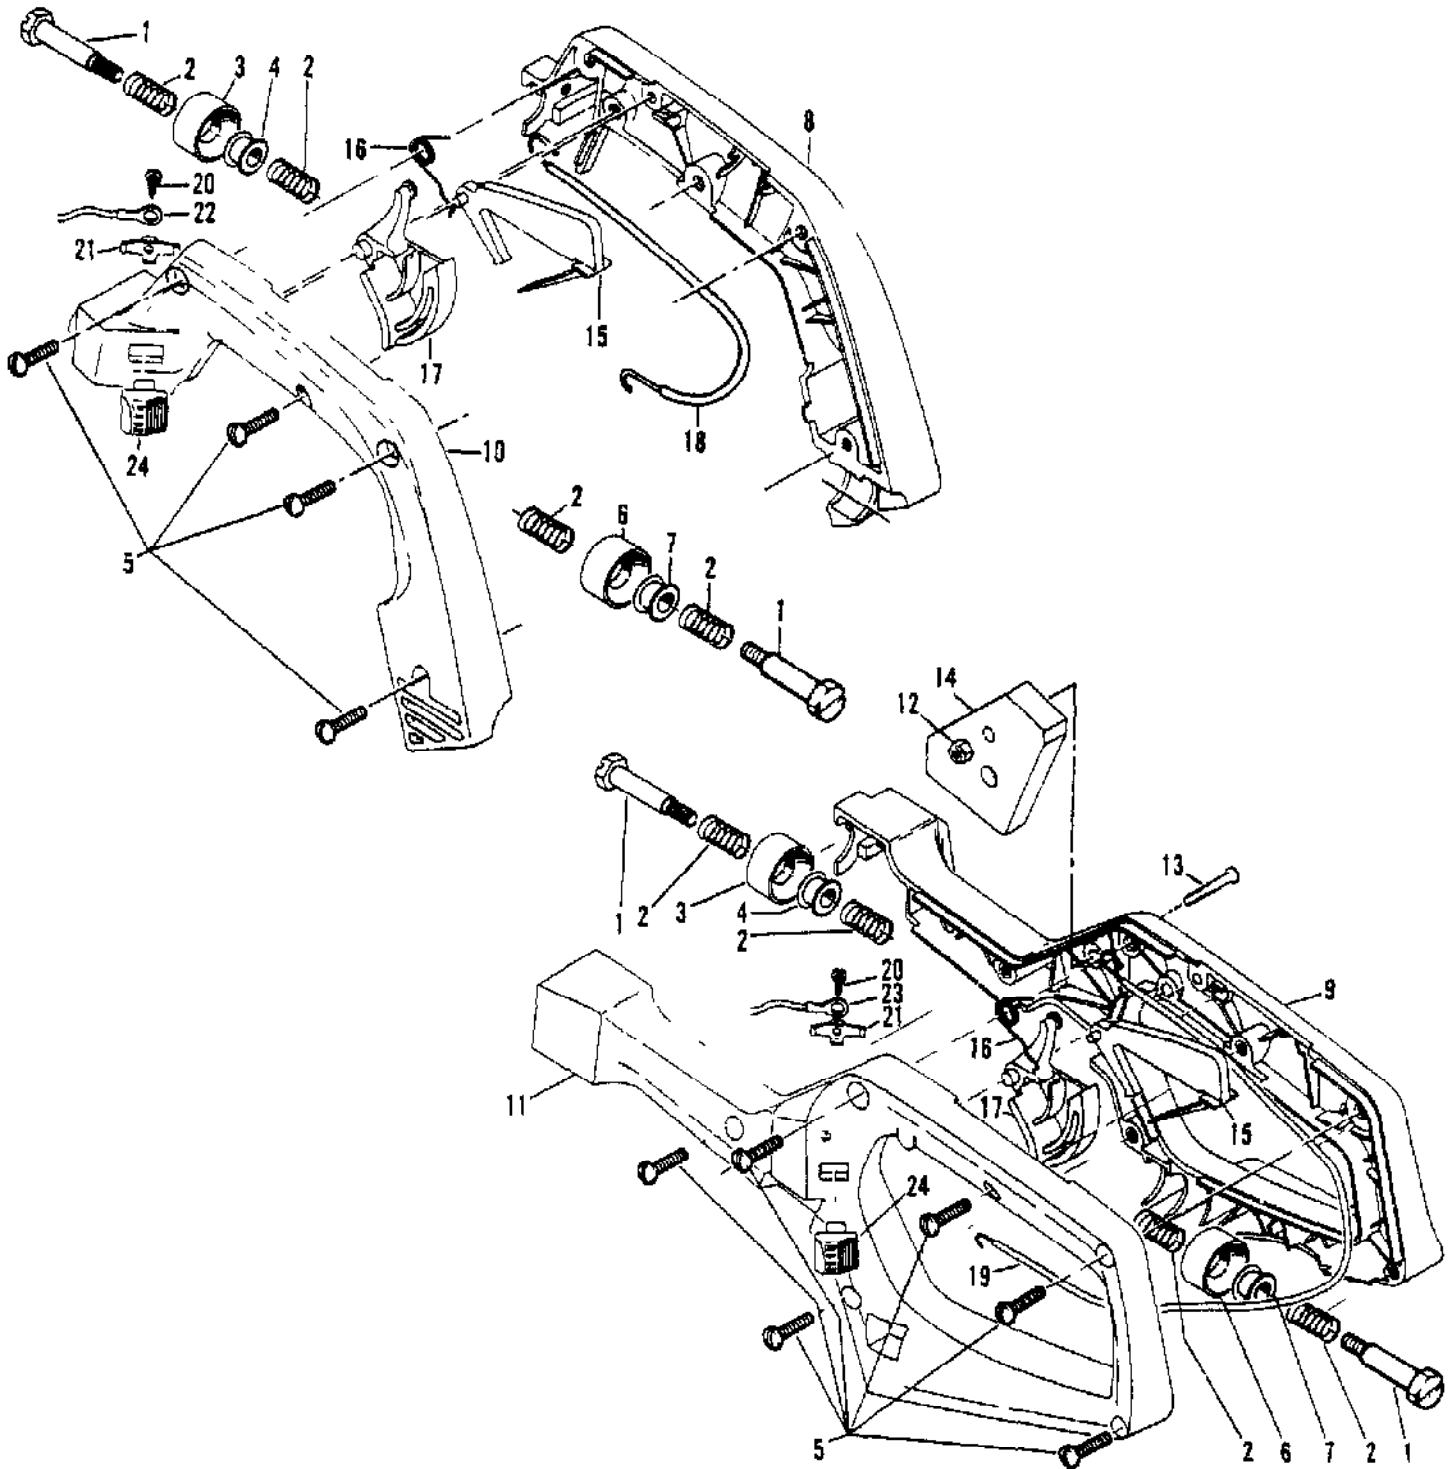 

Ref #	Part Number	Qty	Description
1	93529	2	Bolt - Shoulder
2	93530A	4	Spring - Mount
3	92704	1	Mount
4	94038	1	Hub - Mount
	213230		Handle Assembly
	213231		Handle Assembly
	213235		Handle Assembly
5	111032	A/R	Screw - Pan hd 10-16 x 5/8
6	92704	1	Mount
7	94038	1	Hub - Mount
8	213229	1	Handle - Right half
9	213224	1	Handle - Long right
10	213228	1	Handle - Left half
11	213226	1	Handle - Long left
12	101326	1	Nut - Hx lock 10-24
13	104400	1	Screw - Pan hd 10-24 x 1-1/4
14	95042	1	Weight - Handle
15	93310	1	Trigger - Safety
16	93515	1	Spring - Trigger
17	213232	1	Trigger - Throttle
18	213234	1	Wire Assembly - Throttle
19	213233	1	Wire Assembly - Throttle
20	110706	1	Screw - Pan hd 8-18 x 1/2
21	62451	1	Contact - Ignition switch
22	93505A	1	Wire - Stop switch (PM 310/320)
23	94039	1	Wire - Stop switch (PM 330/340)
24	68846	1	Button - Stop switch

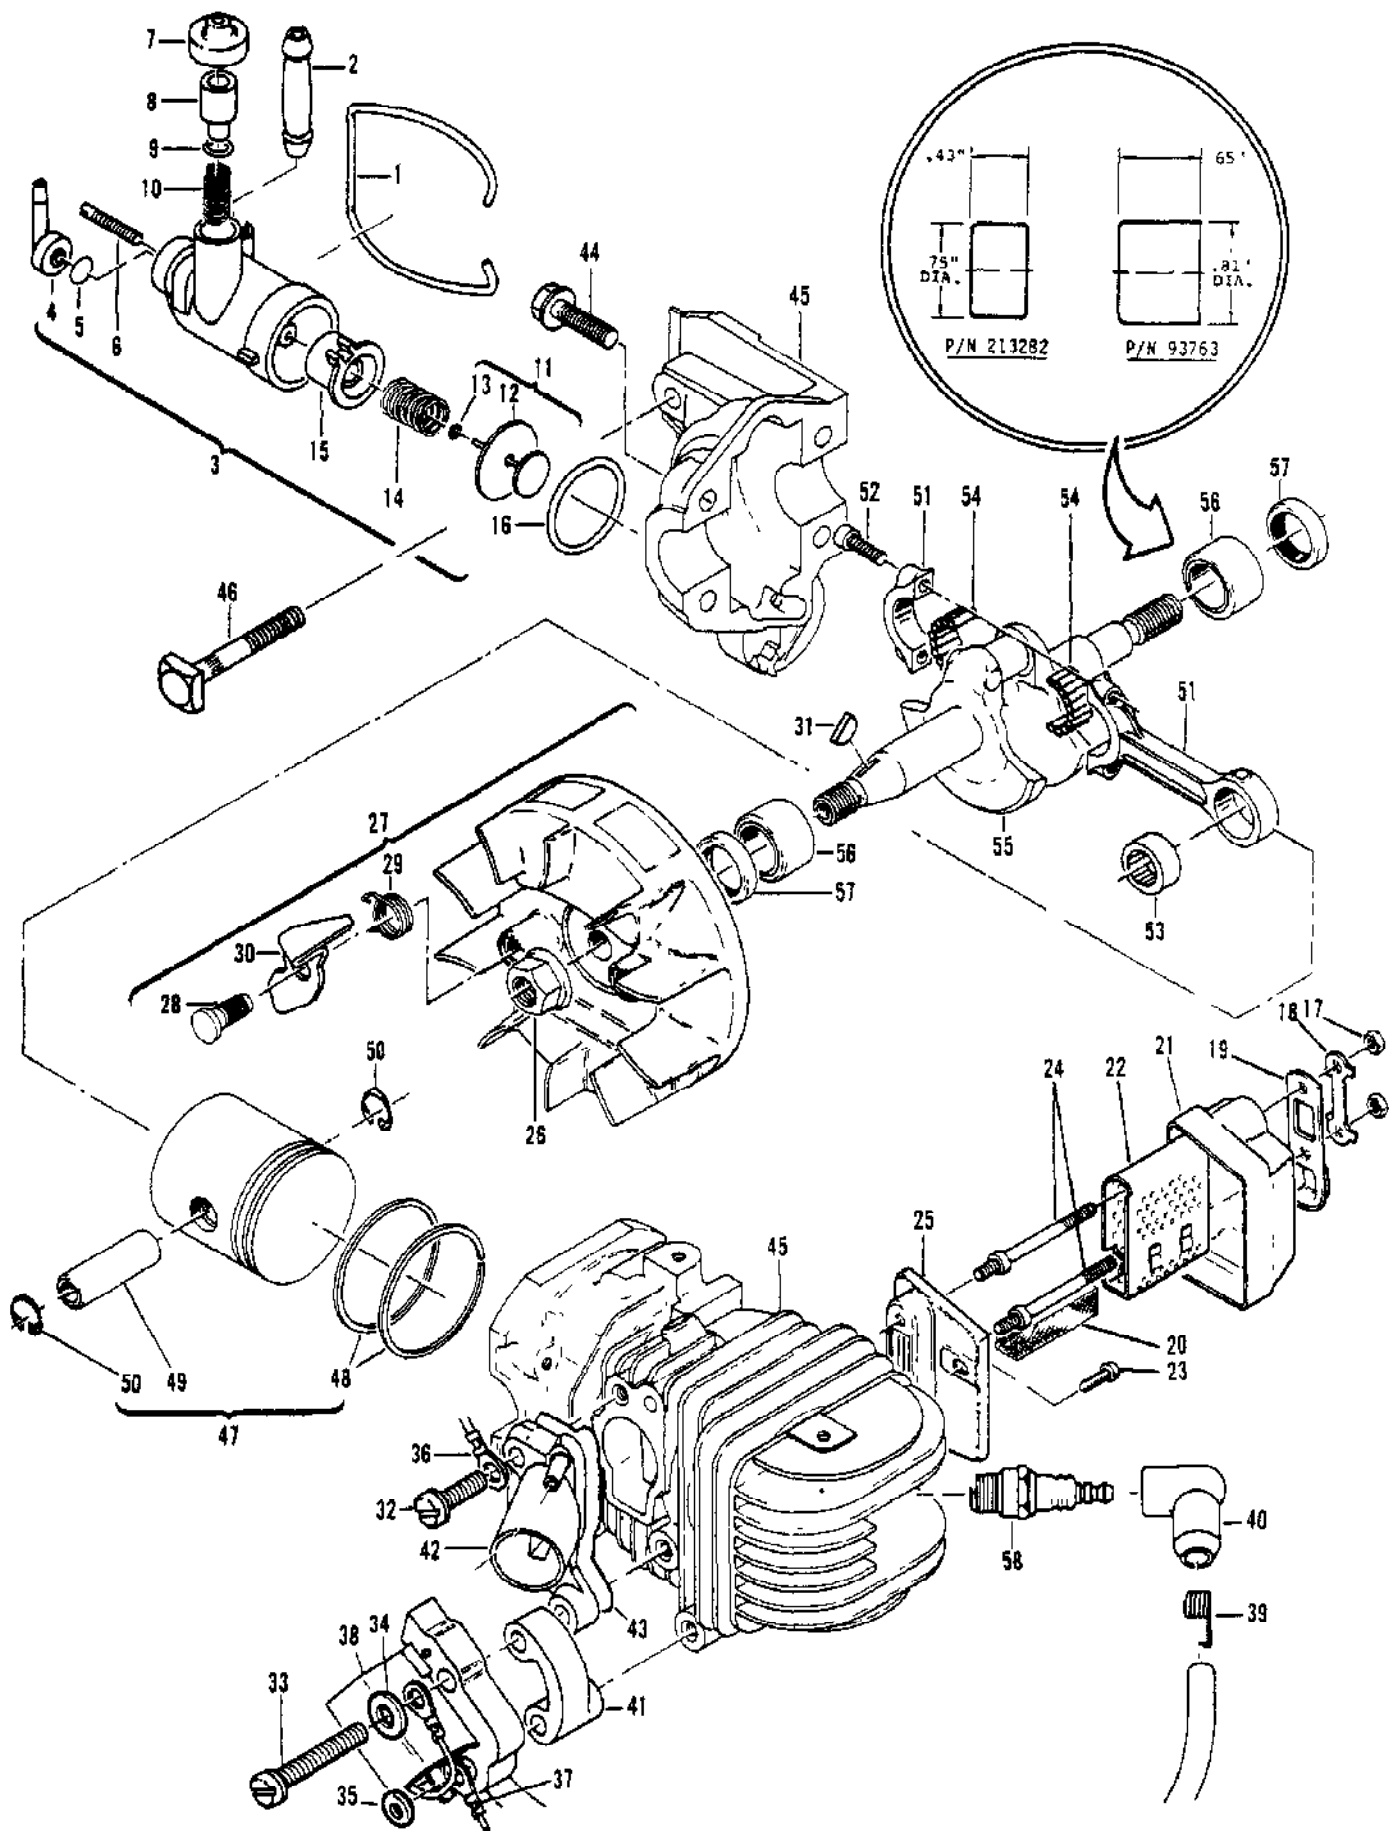 

Ref #	Part Number	Qty	Description
1	93150	1	Bail
2	83898	1	Connector - Outlet
3	215194	1	Pump Assembly - Chain oiler
4	215196	1	Connector - Hose
5	94115	1	Valve - Oiler
6	93639	1	Screw - 6-40 x .800
7	215151	1	Cap - Oil pump
8	93301	1	Plunger - Oil pump
9	105614	1	"O" Ring - .239 x .070
10	93632	1	Spring
11	92204	1	Piston Assembly - Oiler
12	85769	1	Ring - Oil pump piston
13	105603	1	"O" Ring - .114 x .070
14	83891	1	Spring - Return
15	83890	1	Sleeve - Oil pump
16	110653	1	"O" Ring
17	215871	2	Nut - Muffler
18	215471	1	Plate - Lock
19	215472	1	Deflector - Exhaust
20	215872	1	Screen - Spark arrester
21	215774	1	Cover
22	215776	1	Baffle
23	213369	1	Screw
24	215757	2	Bolt - Shoulder
25	215773	1	Base
26	120043	1	Nut - Hx Flg M8 x 1.25
27	94513	1	Flywheel/Pawl Assembly
28	68796	2	Pin - Starter pawl
29	67814	2	Spring - Pawl
30	94493	2	Pawl - Starter
31	102164	1	Key - Woodruff
32	120027	1	Screw - Pan hd M5 x 18 (SEMS)
33	120112	2	Screw - Skt hd M5 x 40
34	24236	1	Washer - Special
35	214279	1	Washer - Tab
36	93514A	1	Wire Assembly - Ground
37	93795	1	Wire Assembly - Ground
38	95590	1	Electronic Ignition Assembly
39	102556	1	Connector - Spark plug
40	95266	1	Boot - Spark plug
41	214356	1	Spacer - Coil
42	215601	1	Manifold - Carburetor
43	92778	1	Gasket - Insulator
44	120097	4	Screw - Hx hd W/H M5 x 25
45	215943	1	Cylinder/Crankcase Assembly
46	92777	1	Bolt - Bar mounting
47	94660	1	Piston Assembly
48	94136	1	Ring Set
49	92836	1	Pin - Piston
50	111026	2	Ring - Snap
51	94135	1	Connecting Rod Assembly
52	94654	2	Screw - Connecting rod
53	110984	1	Bearing - Needle
54	68095	1	Roller - Needle (Set of 20)
55	92750	1	Crankshaft

Ref #	Part Number	Qty	Description
56	213282	2	Bearing - Crankshaft
57	83859	2	Seal - Crankshaft oil
56	93763	2	Sleeve Assembly - Bearing
57	83859	1	Seal - Crankshaft oil
58	93018	1	Spark Plug (E)
58	214223	1	Spark Plug (A,C,J,P)